Form No. 3442-911 Rev E

TORO®

Count on it.

Parts Catalog

52in Z Master® Professional 2000 Series

Riding Mower

Model No. 74491—Serial No. 407745783 and Up

Register at www.Toro.com.
Original Instructions (EN)

3442-911 E

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame and Roll-Over Protection System Assembly 4
Roll-Over Protection System Assembly No. 126-9526 6
Hydraulic Assembly 8
LH Transaxle Assembly No. 126-2883 10
RH Transaxle Assembly No. 126-2884 12
Control Console and Guard Assembly 14
Fuel Tank and Vent Hose System Assembly 16
Fuel Tank Assembly No. 126-4724 18
Seat Mount Assembly 20
Seat Latch Assembly 22
Seat Assembly No. 139-3626 24
Motion Control Assembly 26
LH and RH Motion Control Assembly 28
Caster Tire Assembly 30
Fork and Caster Wheel Assembly 32
Rear Wheel Assembly 34
Electrical Assembly 36
Harness Assembly No. 126-5803 38
Deck Lift Assembly 40
Deck Strut Assembly No. 126-8365 42
Engine, Clutch and Muffler Assembly 44
Air Cleaner Assembly No. 93-2190 46
Deck Assembly 48
Deflector Assembly No. 120-2451 50
Deck Decal Assembly No. 126-8957 52
Fuel System Assembly 54
Carburetor Assembly 56
Air Intake and Filtration Assembly 58
Ignition and Cooling Fan Assembly 60
Crankcase and Crankshaft Assembly 62
Governor Control Assembly 64
Piston and Cylinder Head Assembly 66
Blower Housing Assembly 68
Gasket and Seal Kit 70
Attachments and Accessories 72

© 2023—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame and Roll-Over Protection System Assembly

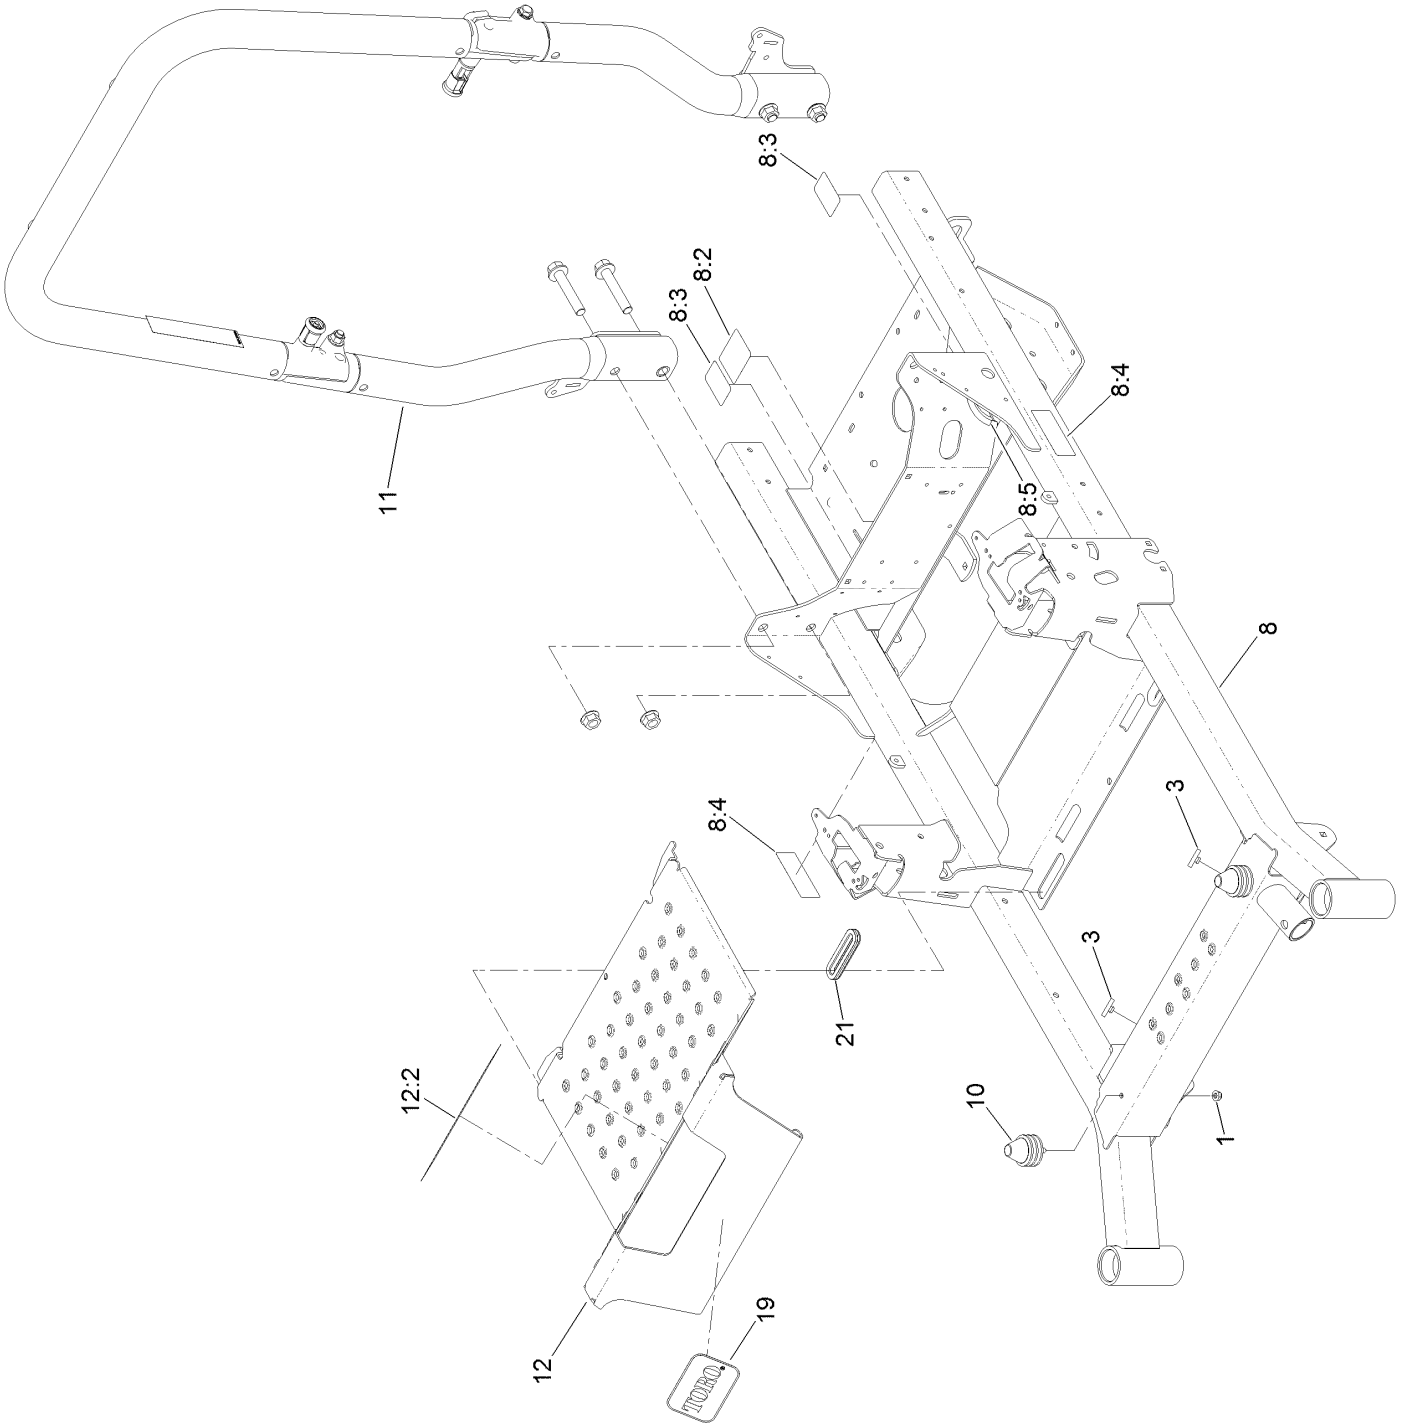

Frame and Roll-Over Protection System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8300	2	Nut-HF, NI
3	109-9233	2	Bumper-Push-In, Rubber
8	126-4699	1	Frame ASM
8:2	109-6014	1	Decal-Routing, Belt
8:3	116-8588	2	Decal-Release, Drive
8:4	126-4363	2	Decal-Warning
8:5	127-6618	1	Strip-Seal
10	126-5491	2	Isolator
11	126-9526	1	ROPS ASM
12	126-5872	1	Pan-Floor
12:2	126-8383	1	Decal-Danger
19	67-1300	1	Decal
21	126-7065	2	Grommet-Rubber

Roll-Over Protection System
Assembly No. 126-9526

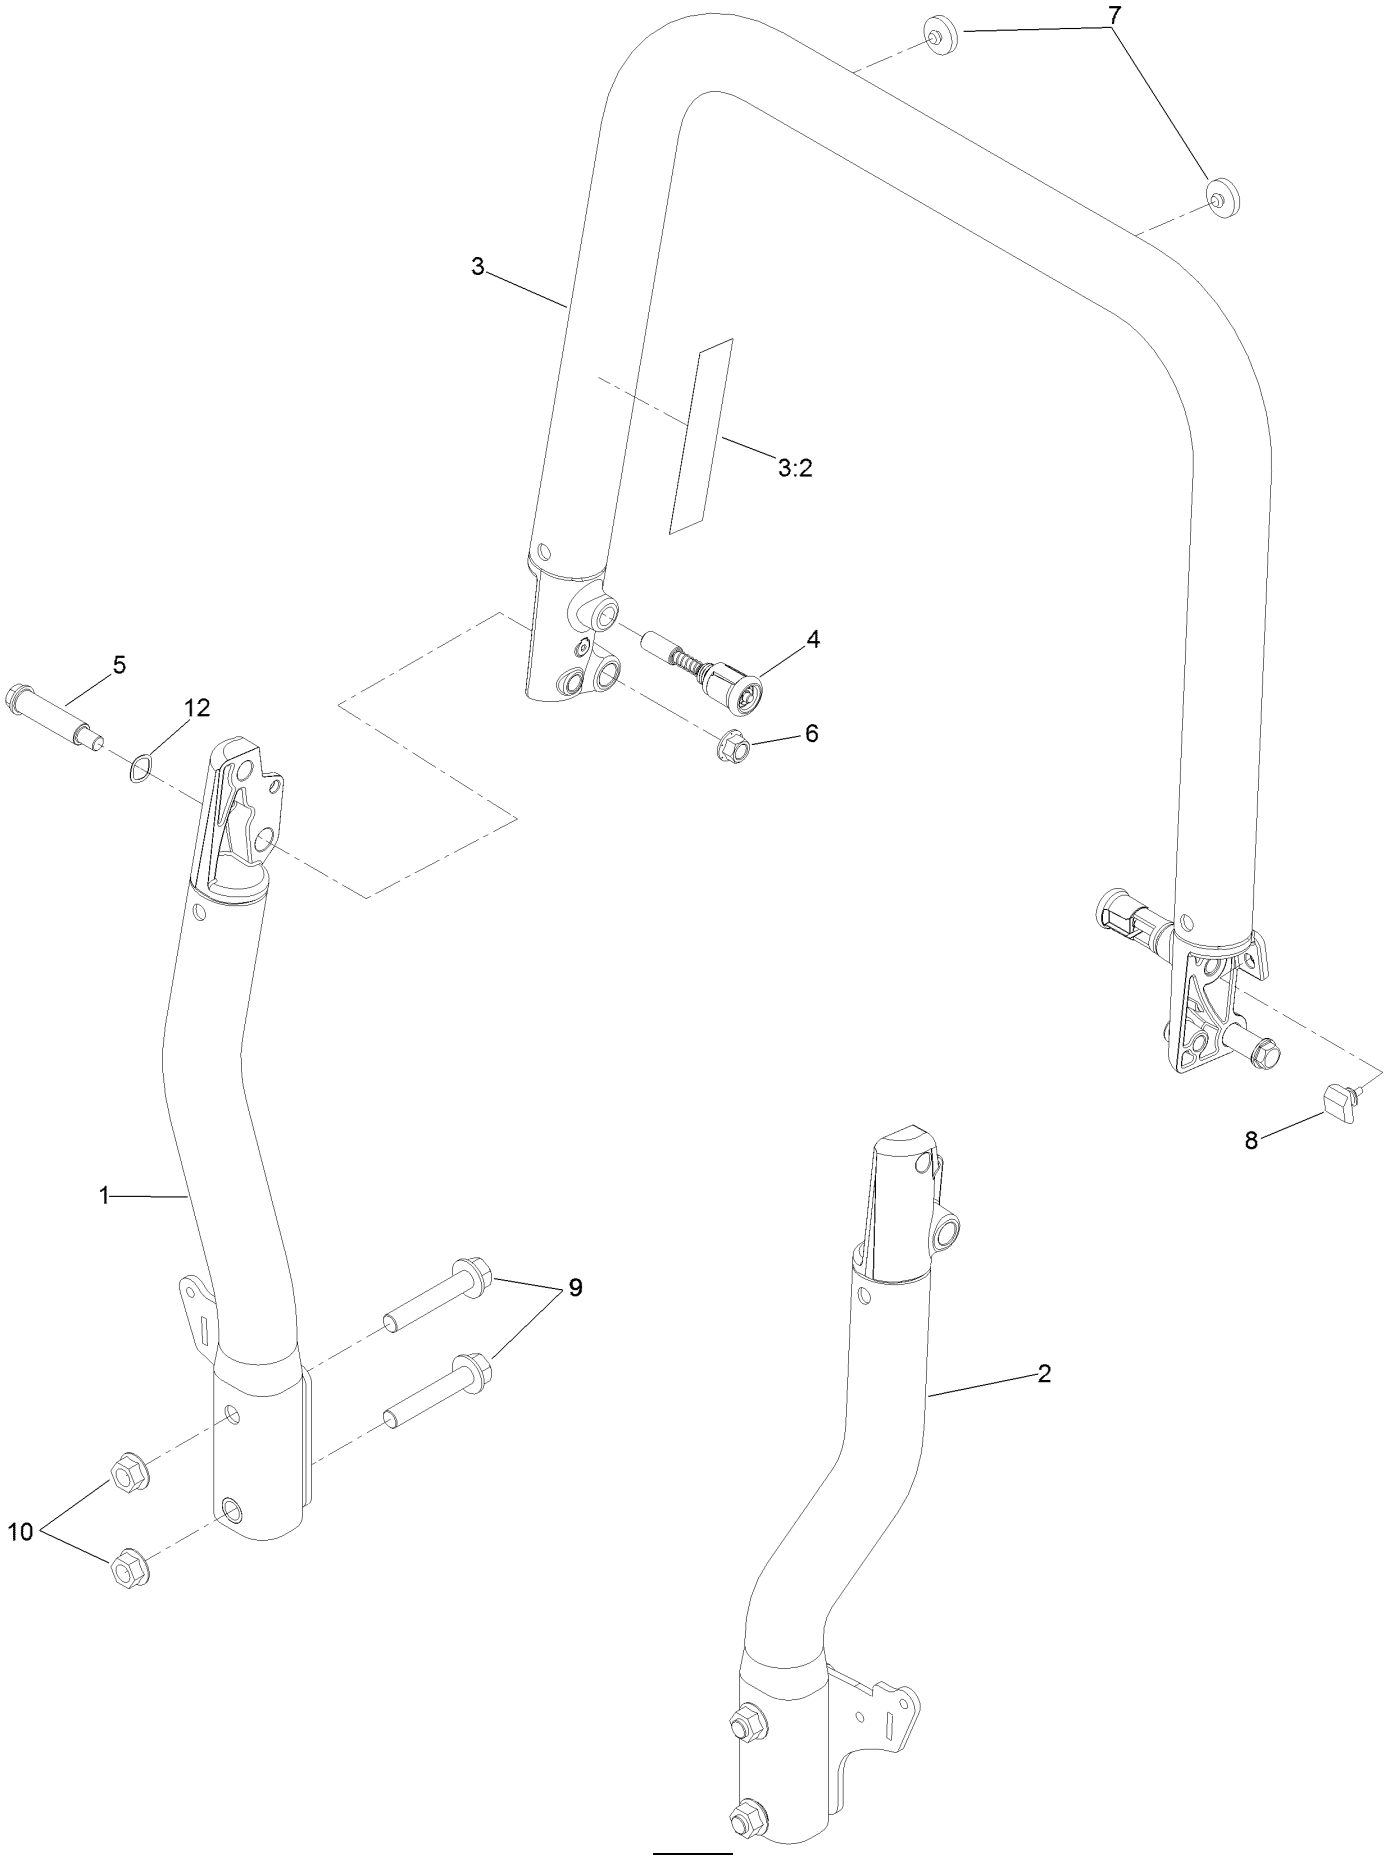


Roll-Over Protection System
Assembly No. 126-9526 (continued)

Ref.	Part Number	Qty.	Description
1		1	Tube-Upright, RH ●
2		1	Tube-Upright, LH ●
3		1	Top Tube ASM ●
3:2	107-3069	1	Decal-Warning
4	116-0104	2	Pin-Spring
5	126-9209	2	Bolt-Shoulder
6	99-5107	2	Nut-Lock
7	135-0504	2	Bumper-ROPS
8	126-9966	2	Bumper-ROPS
9	126-9488	4	Screw-HHF
10	32128-50	4	Nut-Flange
12	119-4164	2	Washer-Wave

● Not serviced separately

Hydraulic Assembly

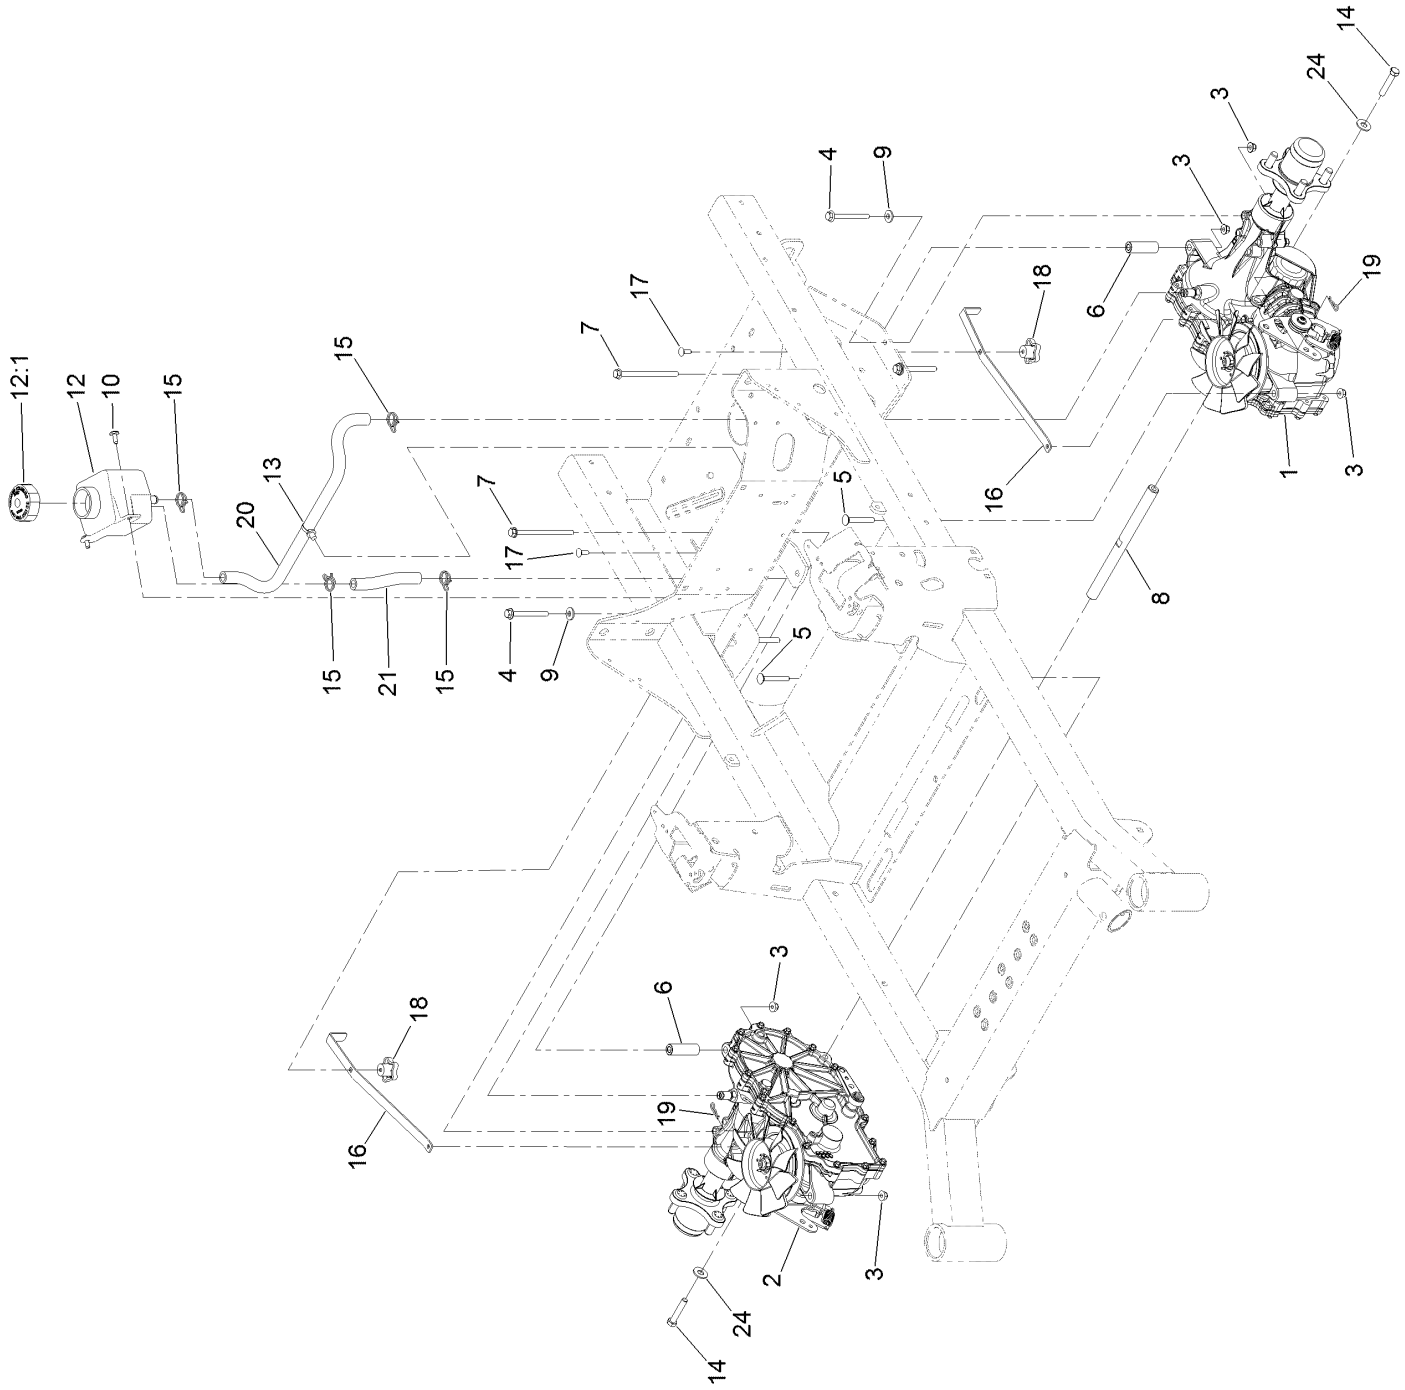


Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2883	1	LH Transaxle ASM
2	126-2884	1	RH Transaxle ASM
3	104-8300	8	Nut-HF, NI
4	126-4687	4	Screw-HHF
5	3230-7	2	Bolt-CARR
6	116-5809	2	Spacer-Hydro
7	126-5896	2	Screw HHF
8	116-6833	1	Shaft-Spacer
9	1-303334	4	Washer-Spring
10	126-6266	2	Screw-Tph
12	109-2250	1	Tank-HYD
12:1	109-3320	1	Cap-Reservoir, HYD
13	32180-118	1	Clip-Tie
14	94-7972	2	Screw-HH W/Loctite ●
15	126-0327	4	Clamp-Hose
16	109-5395	2	Arm-Bypass, Hydro
17	3229-1	2	Screw-CARR
18	108-6402	2	Knob-Handle
19	1-806003	2	Pin-Cotter
20	126-5668	1	Hose-Hydraulic
21	126-5669	1	Hose-Hydraulic
24	3256-4	2	Washer-Flat

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

LH Transaxle Assembly No. 126-2883

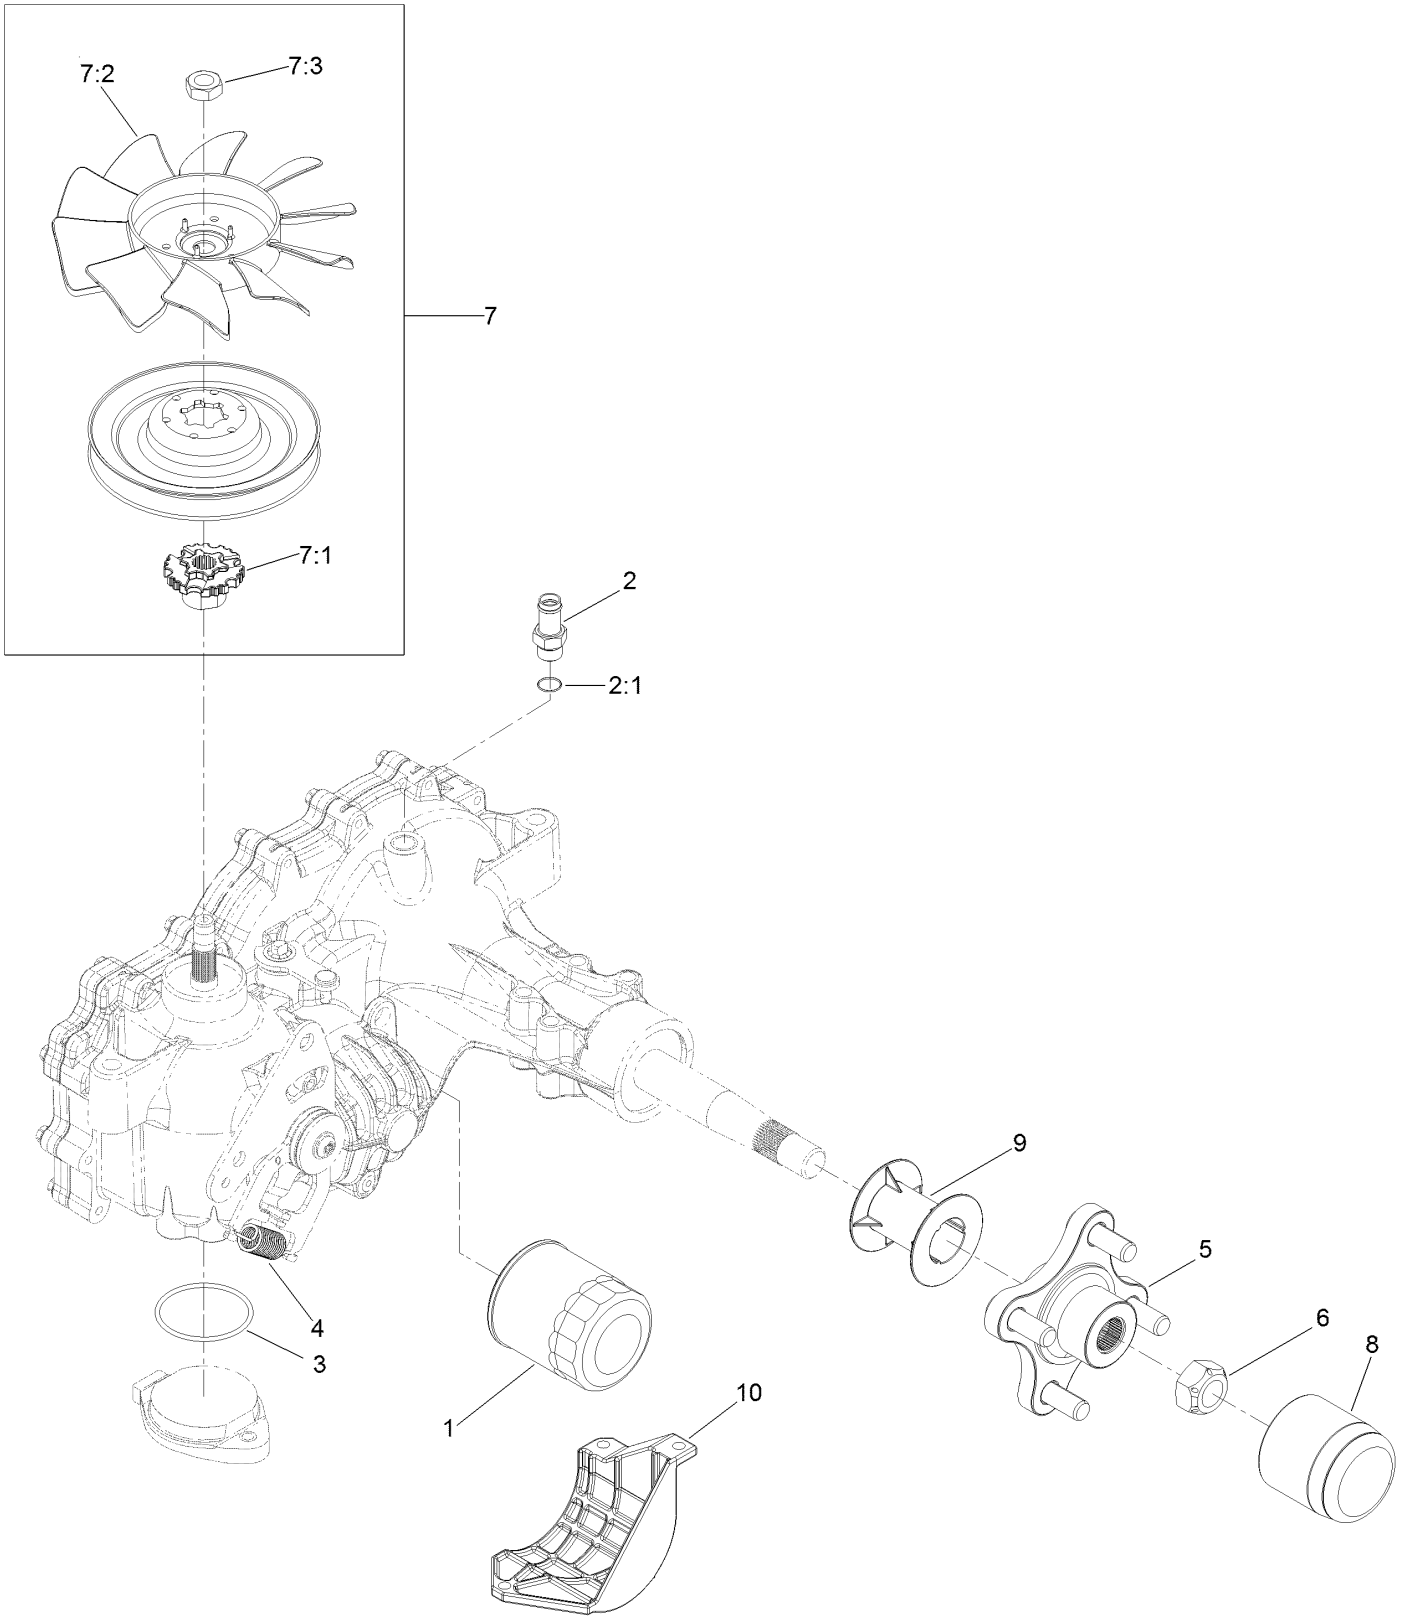


LH Transaxle Assembly No. 126-2883 (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O Ring-Seal
4	109-5592	1	Spring-Extension
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	126-8904	1	Fan And Pulley Kit
7:1	126-8905	1	Hub-Fan
7:2	126-0226	1	Fan
7:3	116-9714	1	Nut-HJ
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7979	1	Guard-Filter, LH
99	135-3604	1	Brake Shaft Seal Kit ●
99	121-3243	1	Seal Kit ●

● Not illustrated

RH Transaxle Assembly No. 126-2884

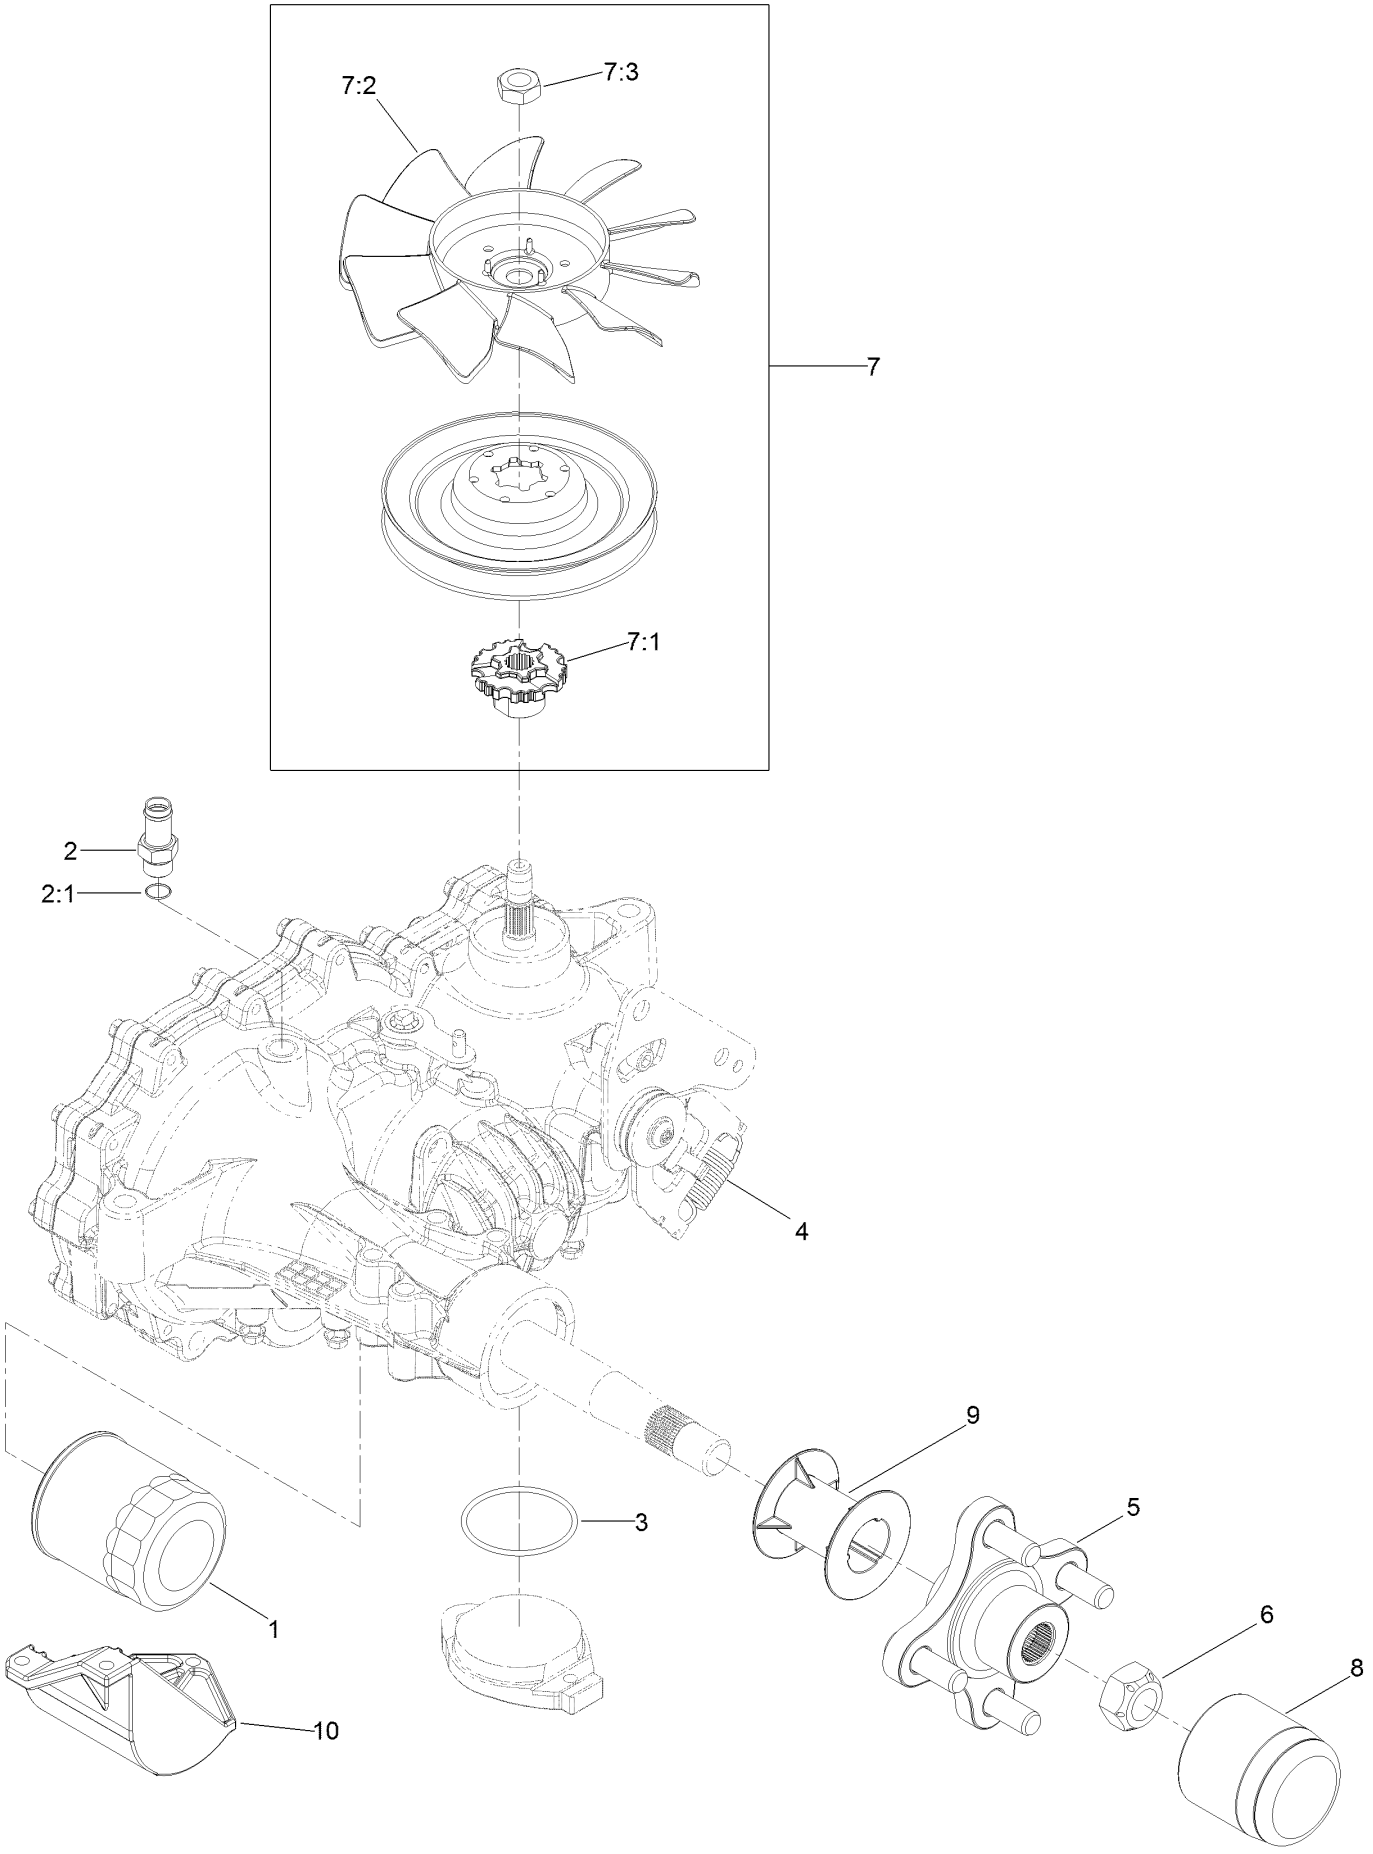


RH Transaxle Assembly No. 126-2884 (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
2	109-3278	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	109-3540	1	O Ring-Seal
4	109-5592	1	Spring-Extension
5	116-3872	1	Hub-Offset
6	109-3536	1	Nut-Hub
7	126-8904	1	Fan And Pulley Kit
7:1	126-8905	1	Hub-Fan
7:2	126-0226	1	Fan
7:3	116-9714	1	Nut-HJ
8	116-6214	1	Cap-Axle, Long
9	116-6213	1	Tube-Axle
10	120-7981	1	Guard-Filter, RH
11	121-3243	1	Seal Kit ●
99	135-3604	1	Brake Shaft Seal Kit ●

● Not illustrated


Control Console and Guard Assembly

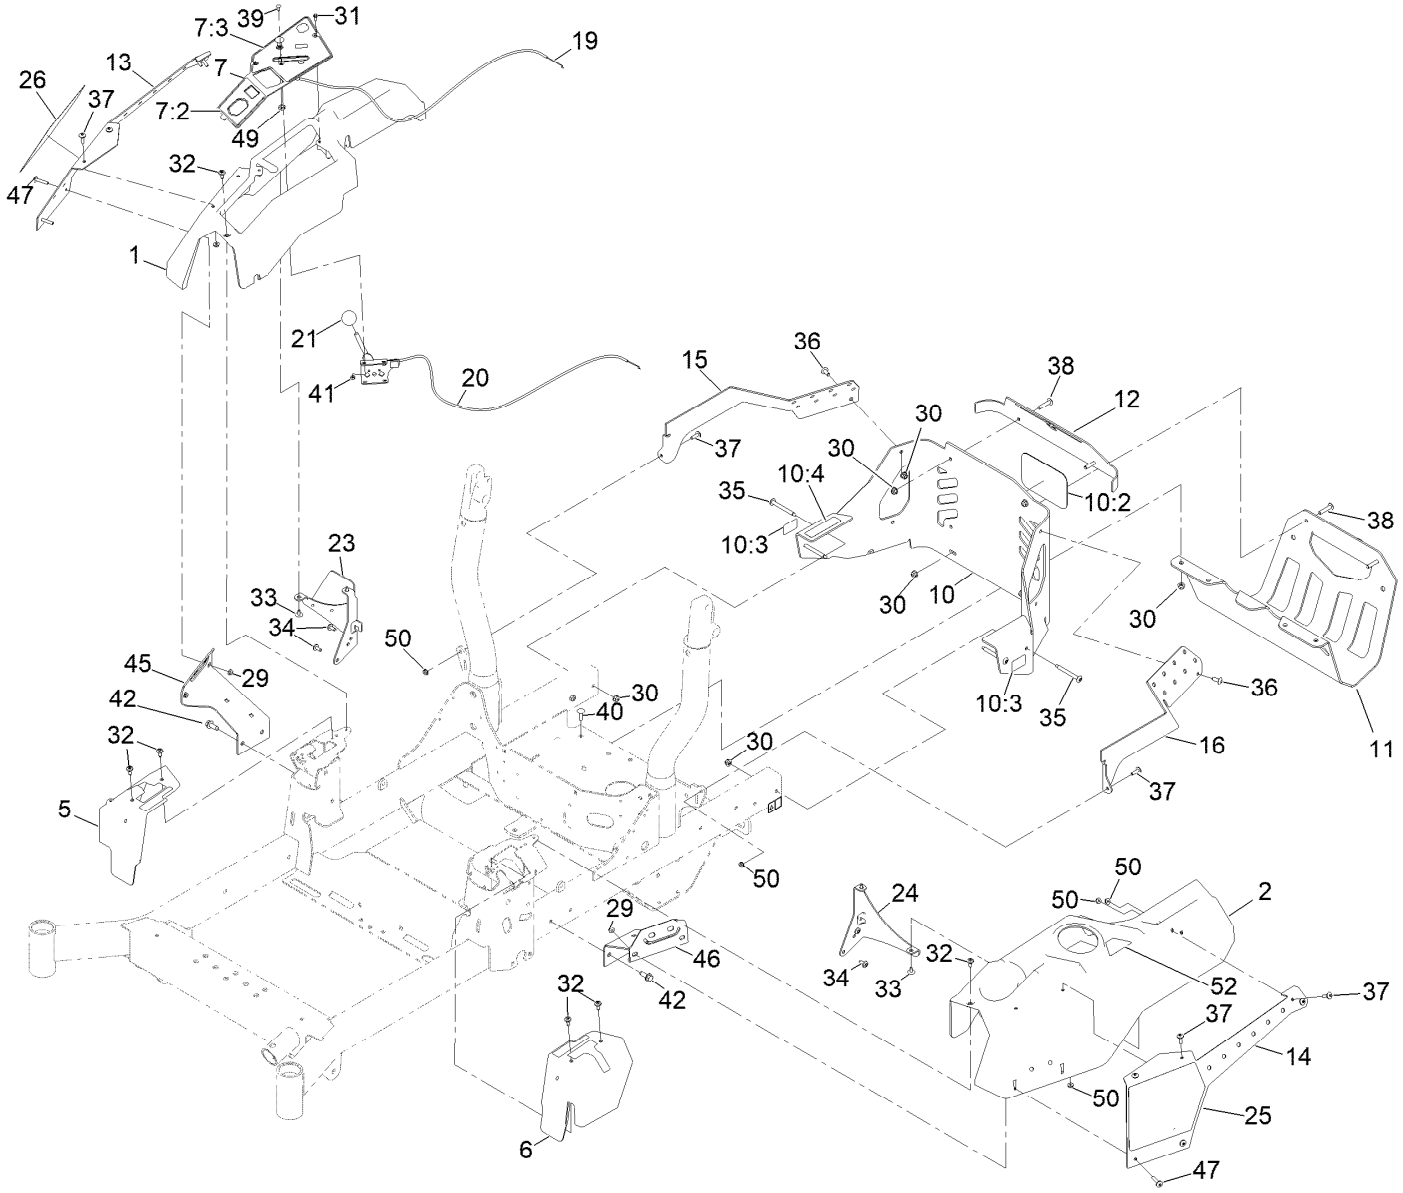

Control Console and Guard Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4983	1	Console-RH
2	126-4984	1	Console-LH
5	126-7371	1	Cover-Control, Motion (RH)
6	126-7372	1	Cover-Control, Motion (LH)
7	136-1673	1	Control Panel ASM
7:2	126-9115	1	Decal-Panel, Control
7:3	137-9240	1	Decal-Panel, Control
10	139-3643	1	Rear Guard ASM
10:2	99-4693	1	Decal
10:3	106-5517	2	Decal-Warning
10:4	133-8062	1	Decal-Arrestor, Spark
11	126-7664-03	1	Guard-Muffler
12	139-3644-01	1	Trim-Upper Rear
13	136-1745-03	1	Cover, Pod RH
14	136-1746-03	1	Cover-LH
15	126-9023-01	1	Bracket-Guard, RH
16	126-9022-01	1	Bracket-Guard, LH
19	126-7009	1	Cable-Control, Choke
20	126-7008	1	Cable-Control, Throttle
21	1-603175	1	Knob-Ball
23	126-9945	1	Support-Console, RH
24	126-5532-03	1	Bracket-Console, LH
25	140-4353	1	Decal-2000, LH
26	140-4351	1	Decal-2000, RH
29	104-7201	4	Nut-HF, NI
30	104-8300	12	Nut-HF, NI
31	117-5036	2	Screw-Plastic, HWH
32	120-7950	6	Screw-Torx
33	126-5544	4	Screw-Torx
34	126-6266	4	Screw-Tph
35	126-6267	4	Screw-TTH
36	126-6268	2	Screw-TTH
37	126-6269	10	Screw-Truss
38	126-7439	4	Screw-Torx
39	1-807513	2	Bolt-CARR
40	3230-22	2	Screw-CARR
41	3296-2	2	Nut-Lock, NI
42	126-1696	4	Screw-HWHTF
45	136-9030-01	1	Bracket-Support, Pod (RH)
46	136-9029-01	1	Bracket-Support, Pod (LH)
47	126-8232	4	Screw-Truss Hex Skt
49	3220-3	1	Nut-HJ
50	32149-2	10	Nut-Keps
52	126-9939	1	Decal-Fill, Fuel


Fuel Tank and Vent Hose System Assembly

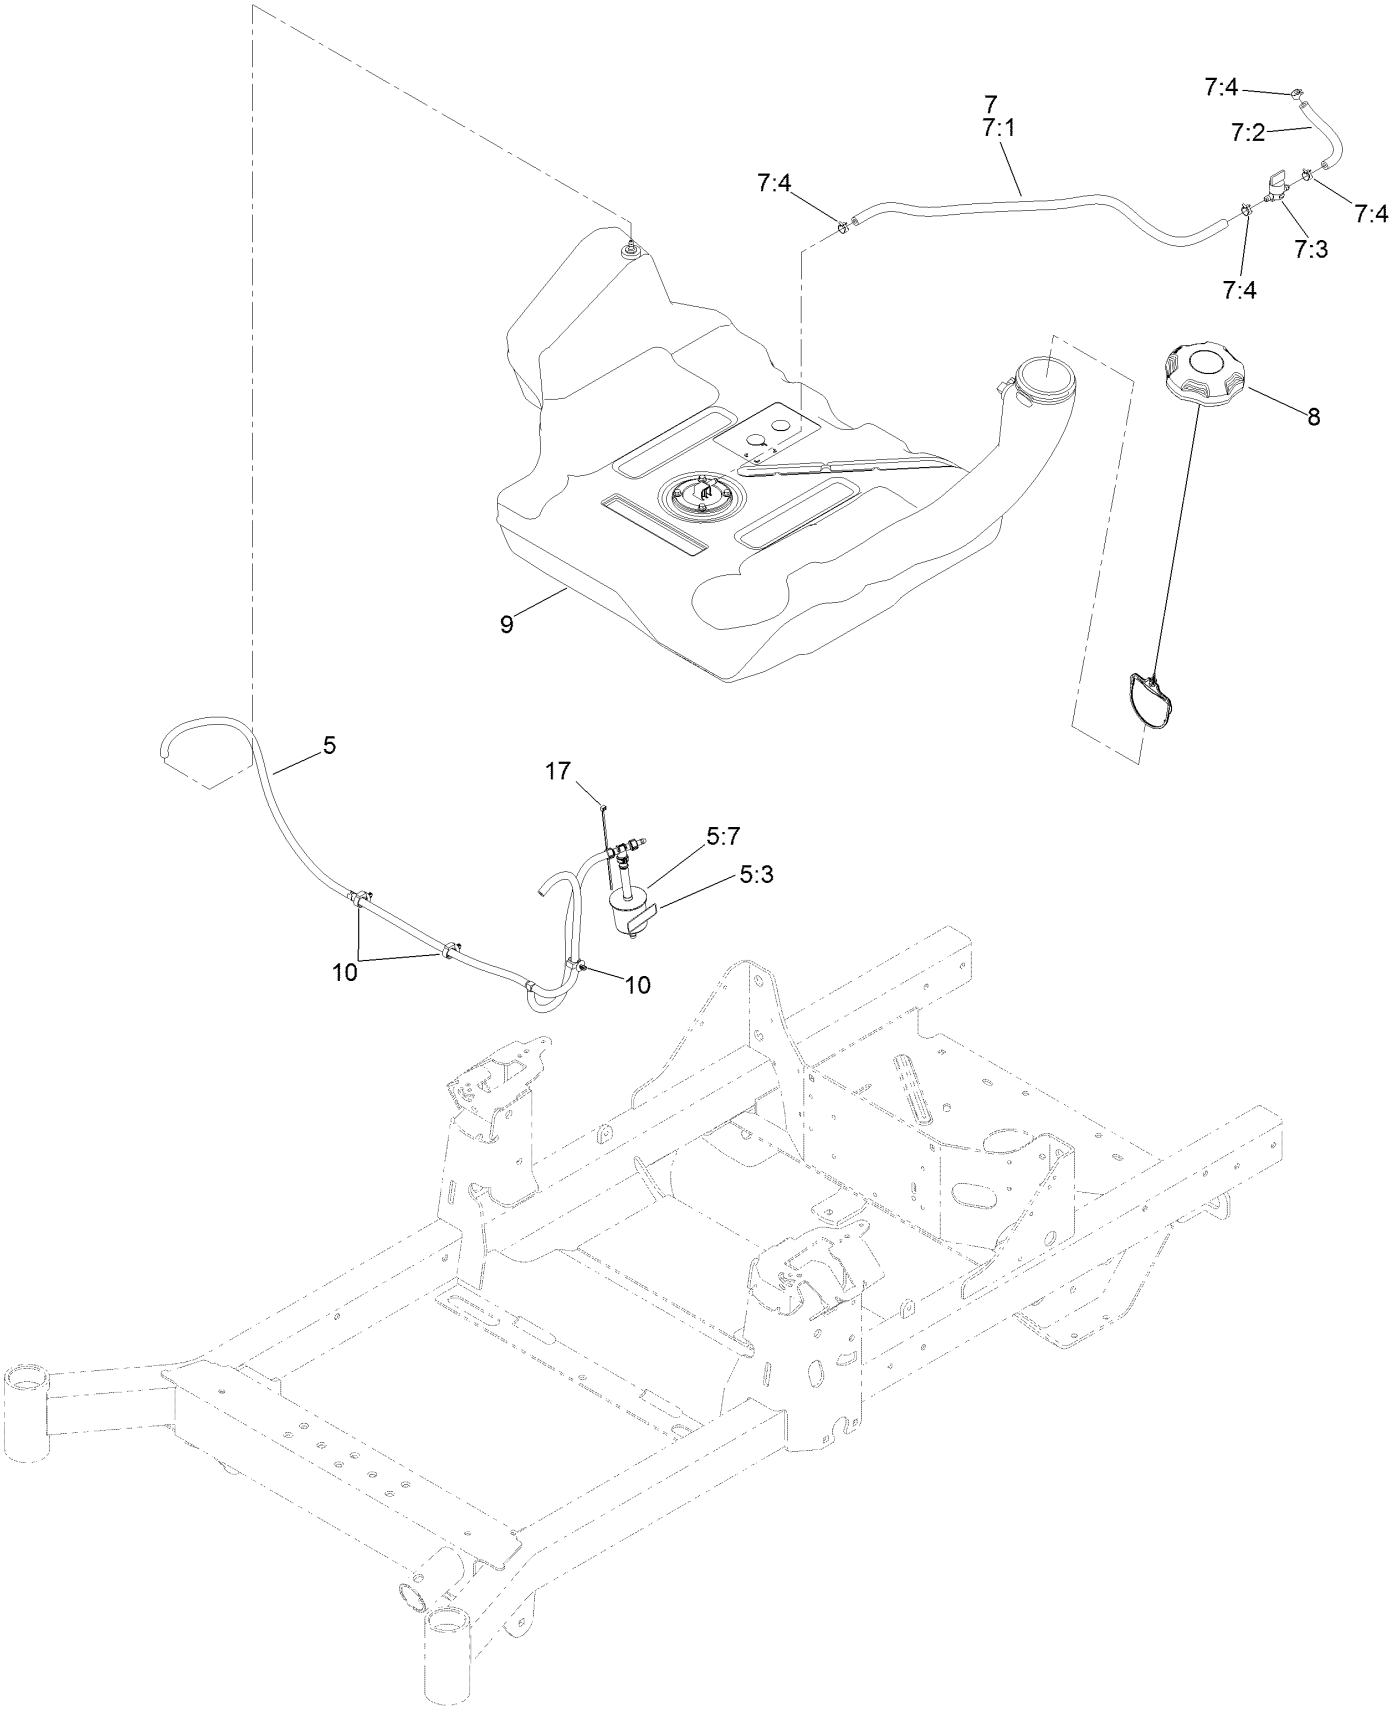

Fuel Tank and Vent Hose System Assembly (continued)

Ref.	Part Number	Qty.	Description
5	126-8738	1	Vent Hose ASM
5:3	116-4769	1	Decal-Filter, Emissions
5:7	120-2235	1	Filter-Fuel
7	126-8740	1	Fuel Hose ASM
7:1	109-0302	1	Hose-Fuel
7:2	109-0678	1	Hose-Fuel
7:3	1-603770	1	Valve-Fuel
7:4	2412-98	4	Clamp-Hose
8	135-4801	1	Cap-Fuel, Ratcheting
9	126-4724	1	Tank-Fuel
10	126-5523	3	Clip
17	1-303287	1	Tie-Cable


Fuel Tank Assembly No. 126-4724

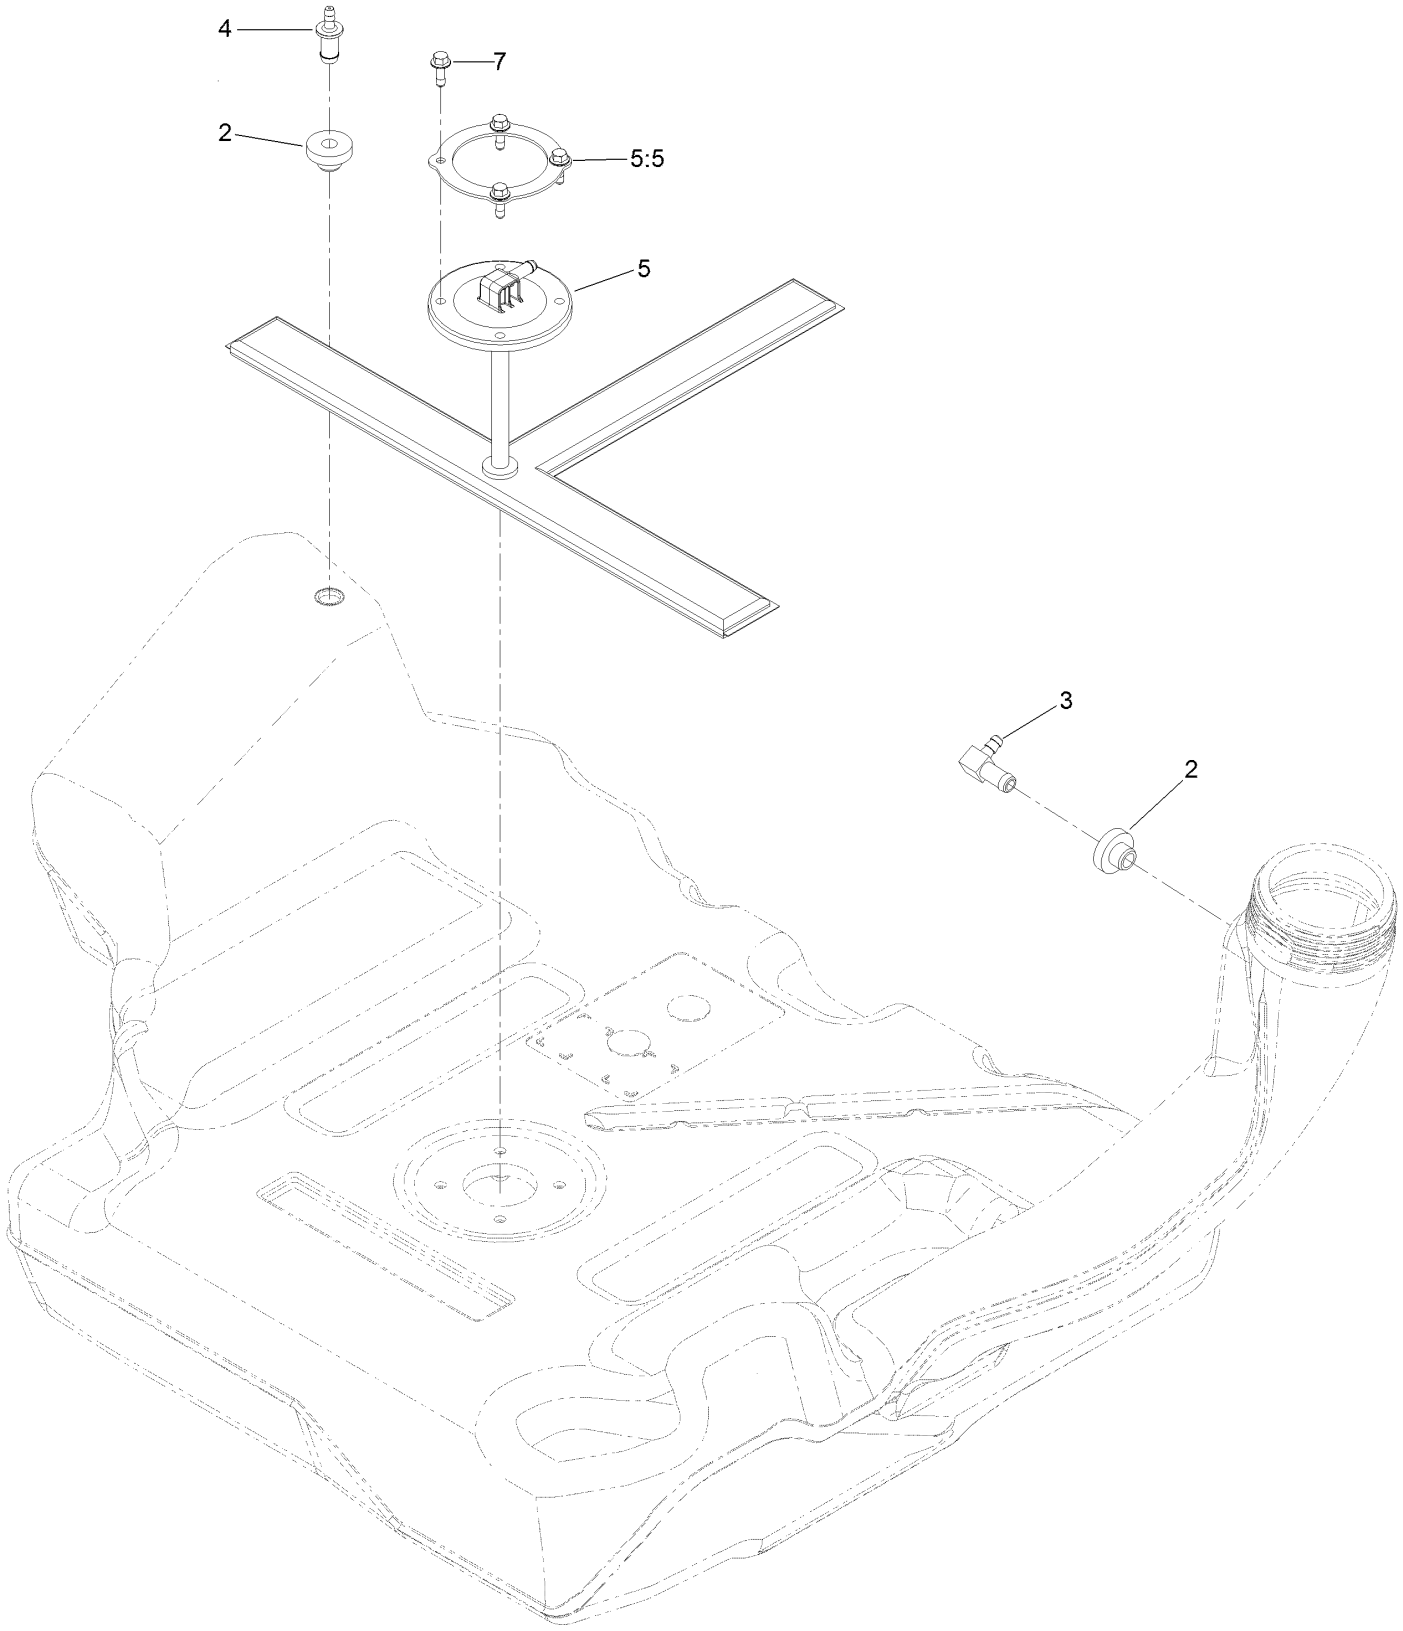

Fuel Tank Assembly No. 126-4724 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	2	Bushing
3	126-9057	1	Fitting-90 DEG
4	116-4630	1	Fitting-Orifice, Straight
5	126-5528	1	Pickup-Fuel
5:5	126-5527	1	Ring-Retainer
7	126-5525	4	Bolt


Seat Mount Assembly

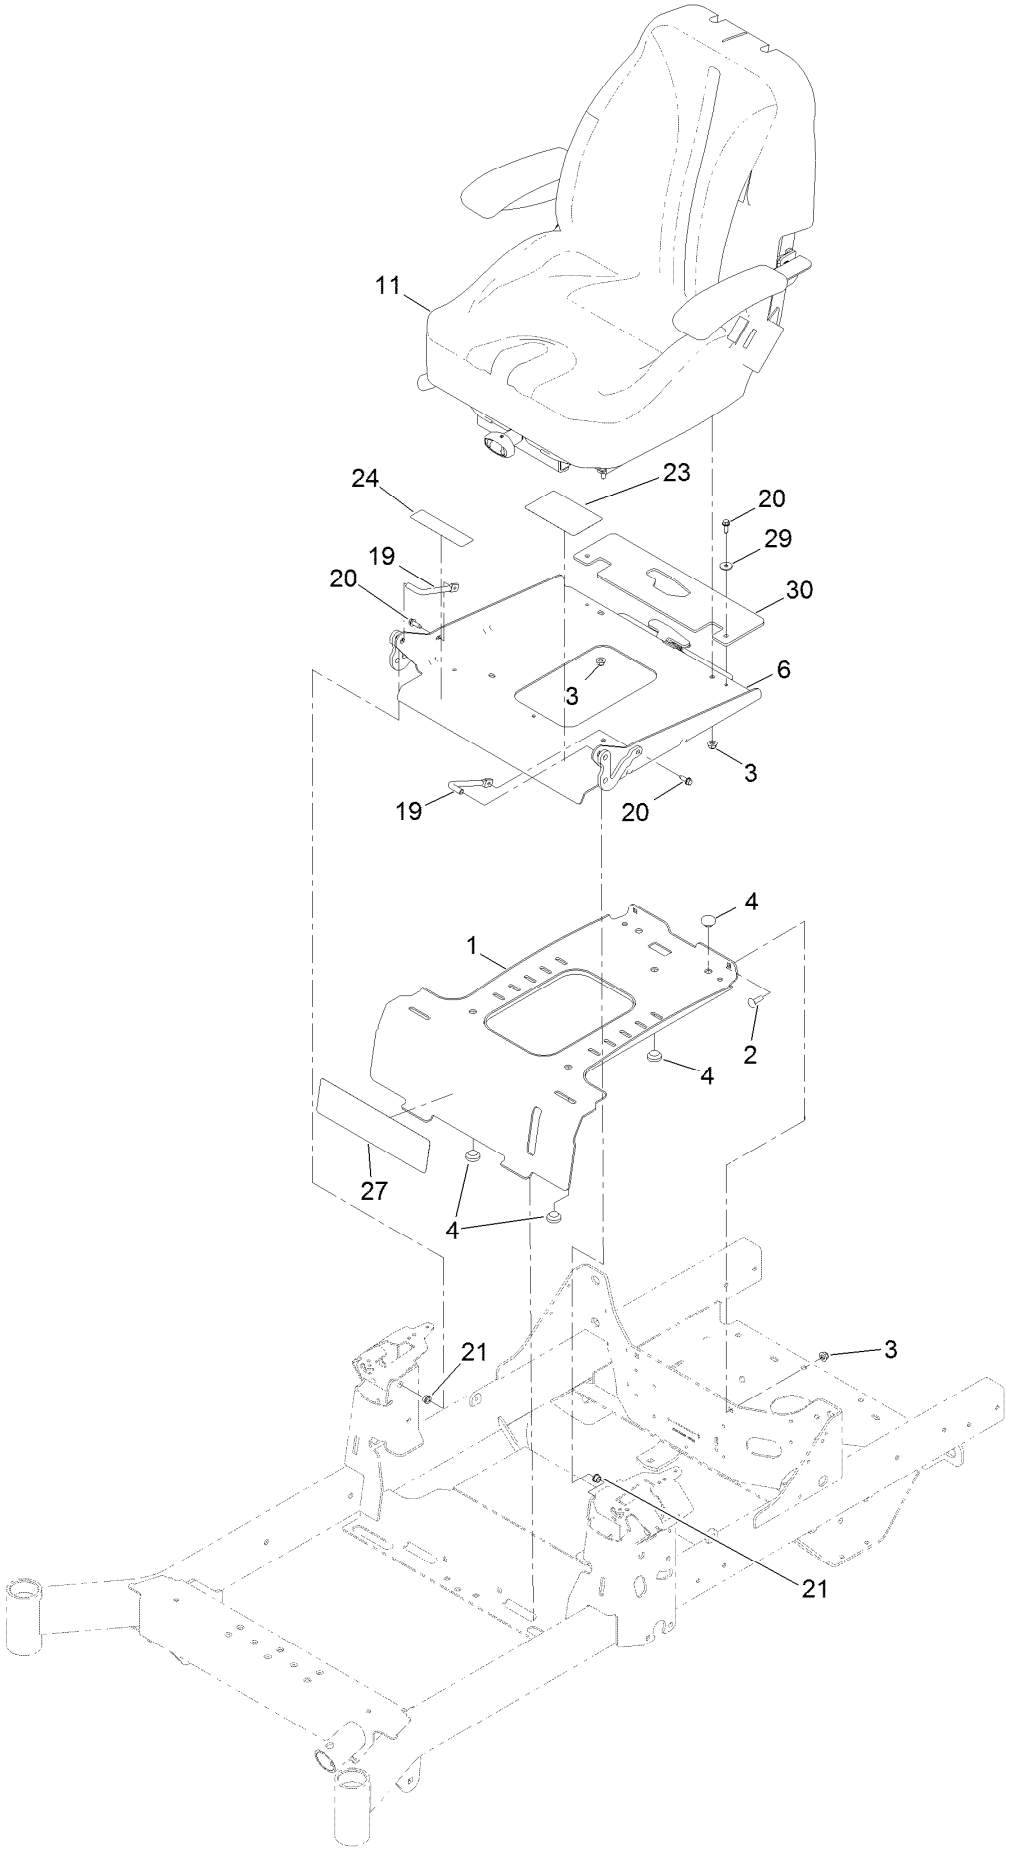

Seat Mount Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4082-03	1	Plate-Retainer, Tank
2	3230-22	2	Screw-CARR
3	104-8300	6	Nut-HF, NI
4	135-0505	5	Bumper-Seat
6	126-7309	1	Seat Pan And Latch ASM
11	139-3626	1	Suspension Seat
19	126-5914	2	Pin-Pivot, Seat
20	32144-44	4	Screw-HWH, Thread Roll
21	1-603735	2	Bushing-Flanged
23	126-8151	1	Decal-Aid, Service
24	126-8161	1	Decal-Latch, Seat
27	139-3645	1	Decal-Z Master
29	3256-67	2	Washer
30	135-0214	1	Guard-Seat, Rubber


Seat Latch Assembly

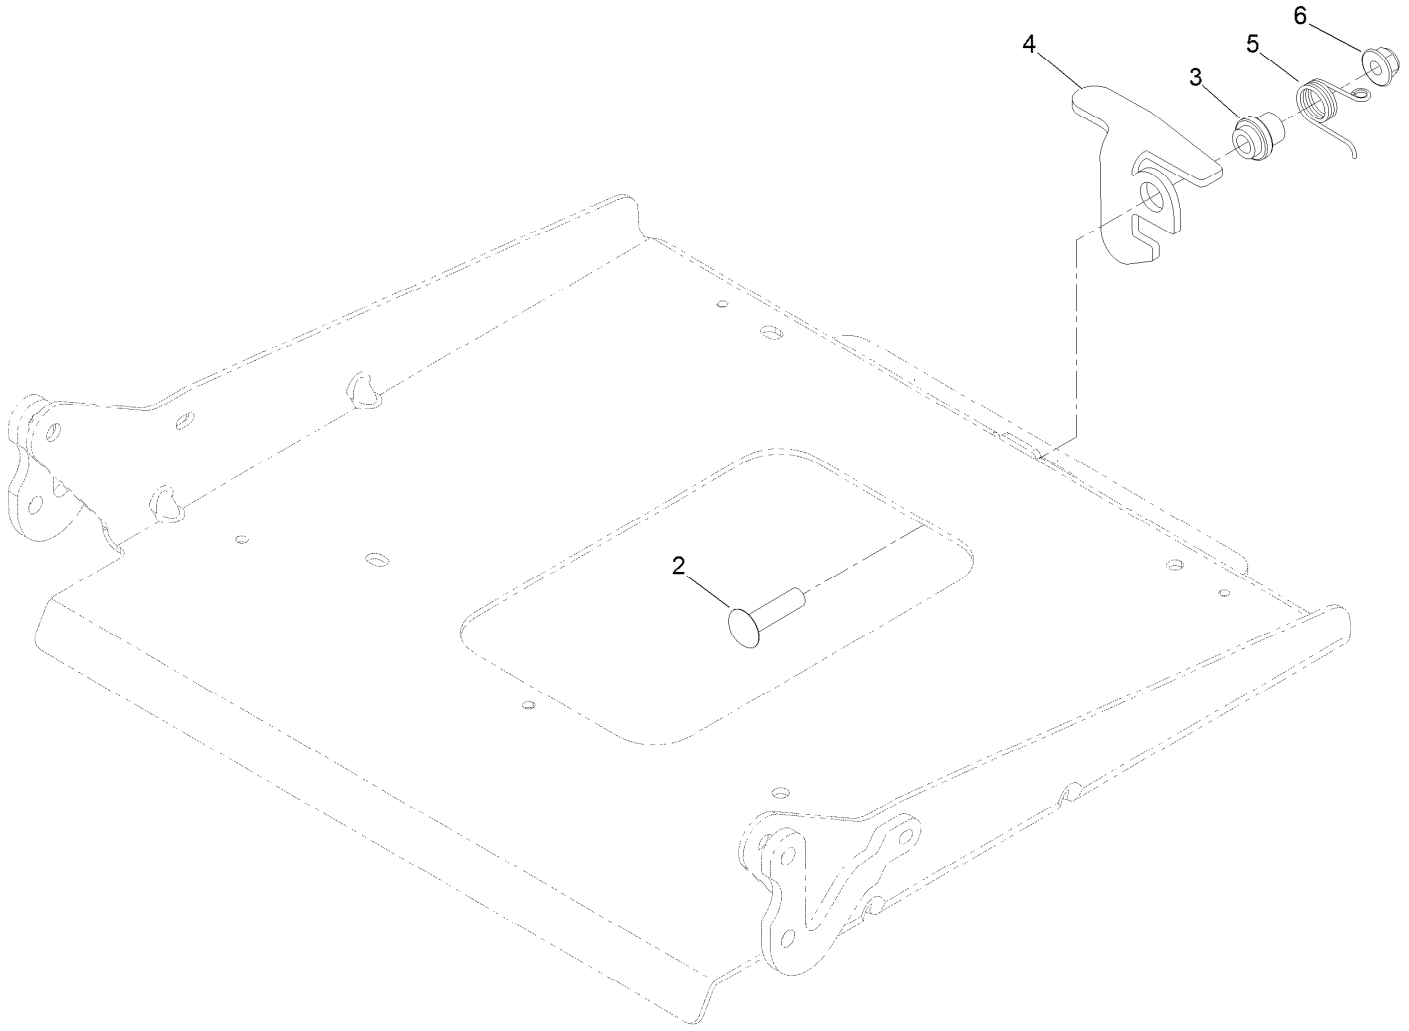

Seat Latch Assembly (continued)

Ref.	Part Number	Qty.	Description
2	3231-26	1	Screw-CARR
3	107-0075	1	Bushing-Latch, Seat
4	126-6739	1	Latch-Catch, Single
5	126-8923	1	Spring-Torsion, Latch
6	104-8301	1	Nut-HF, NI


Seat Assembly No. 139-3626

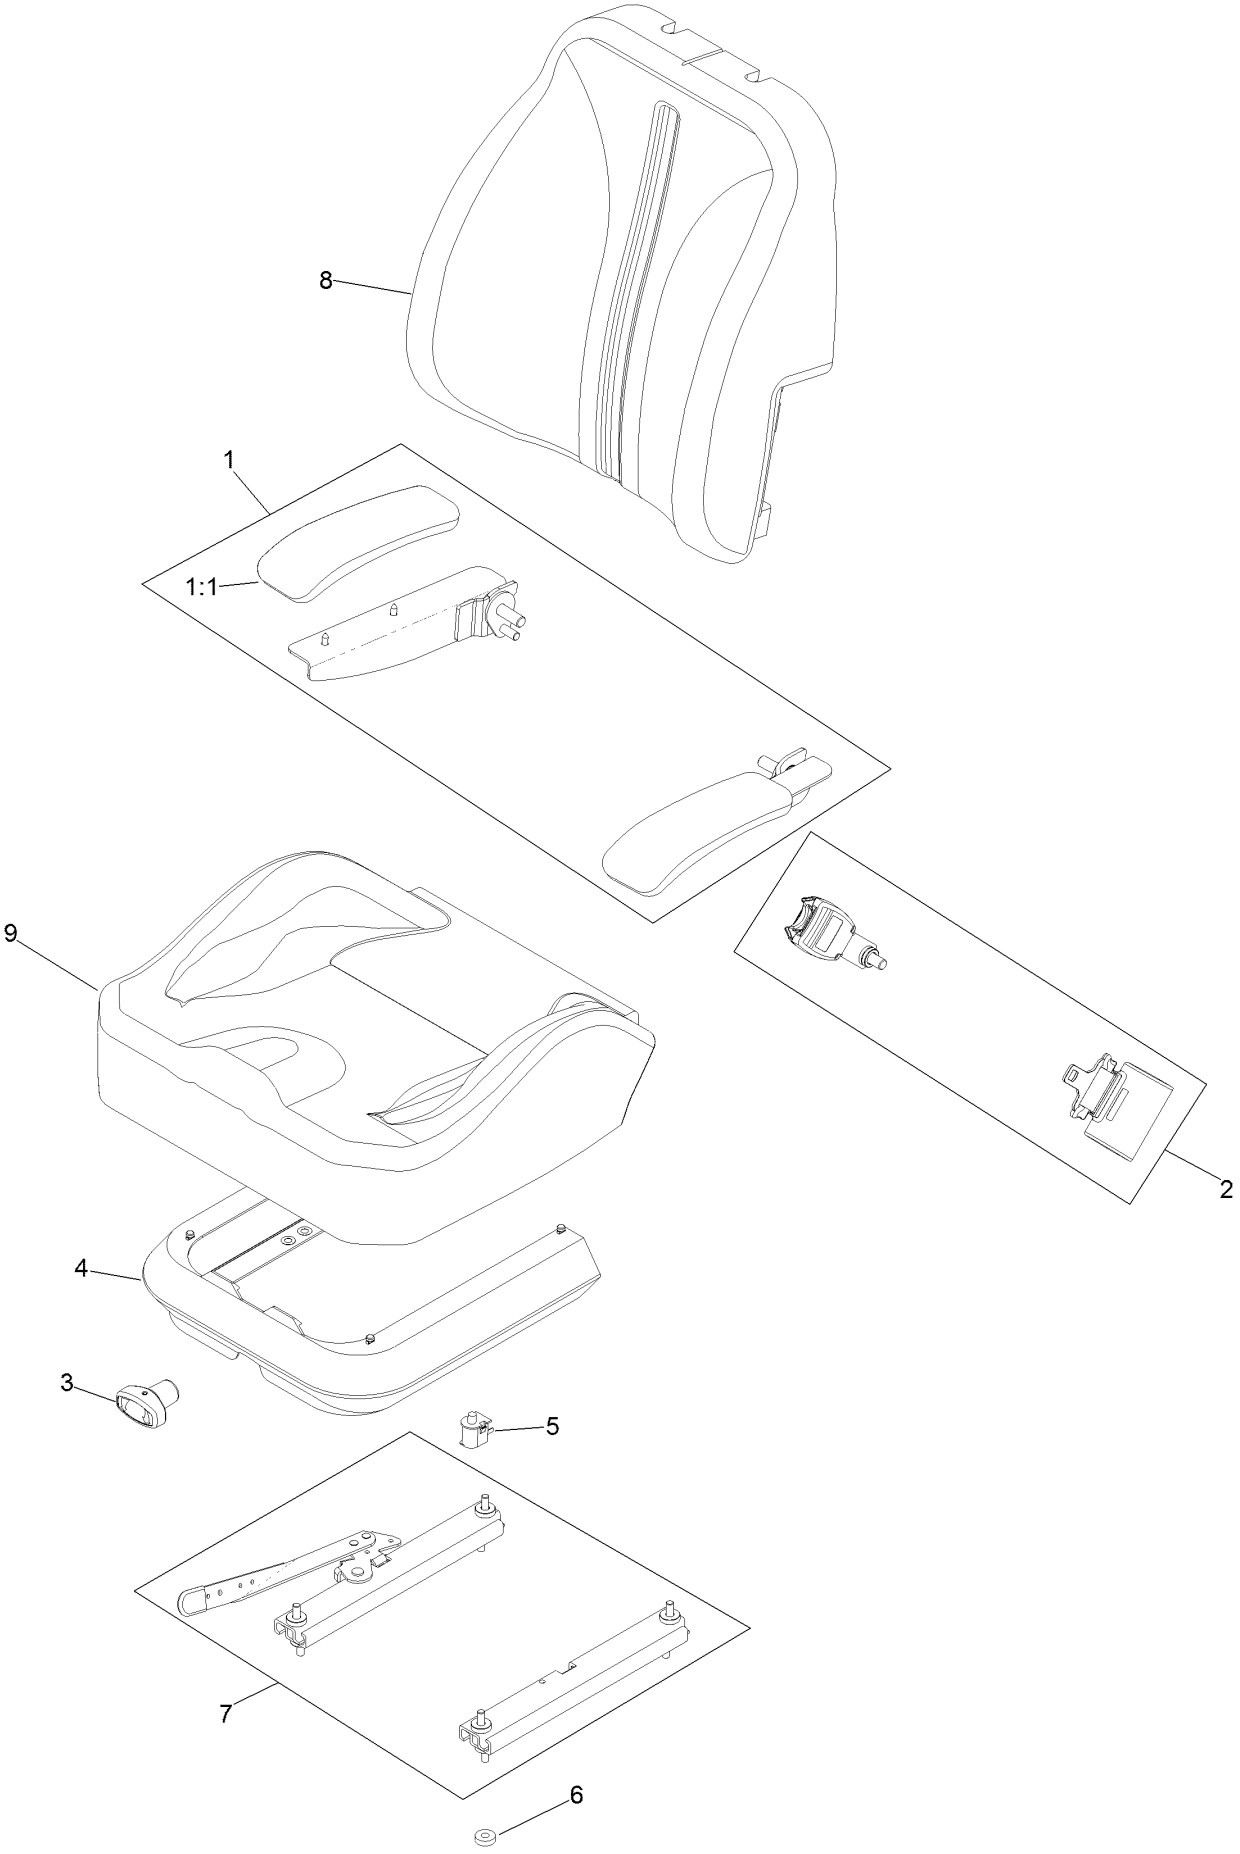

Seat Assembly No. 139-3626 (continued)

Ref.	Part Number	Qty.	Description
1	126-2058	1	Armrest Kit
1:1	110-4163	2	Cushion-Rest, Arm
2	139-3612	1	Seat Belt Kit
3	130-0846	1	Knob-Adjuster
4	139-3613	1	Cover-Skirt W/Fasteners
5	82-2190	1	Switch-Bail
6	26-4840	4	Spacer-Pin, Mounting
7	139-3614	1	Track ASM
8	139-3627	1	Cover-Back, Seat
9	136-9020	1	Cover-Bottom, Seat

Motion Control Assembly

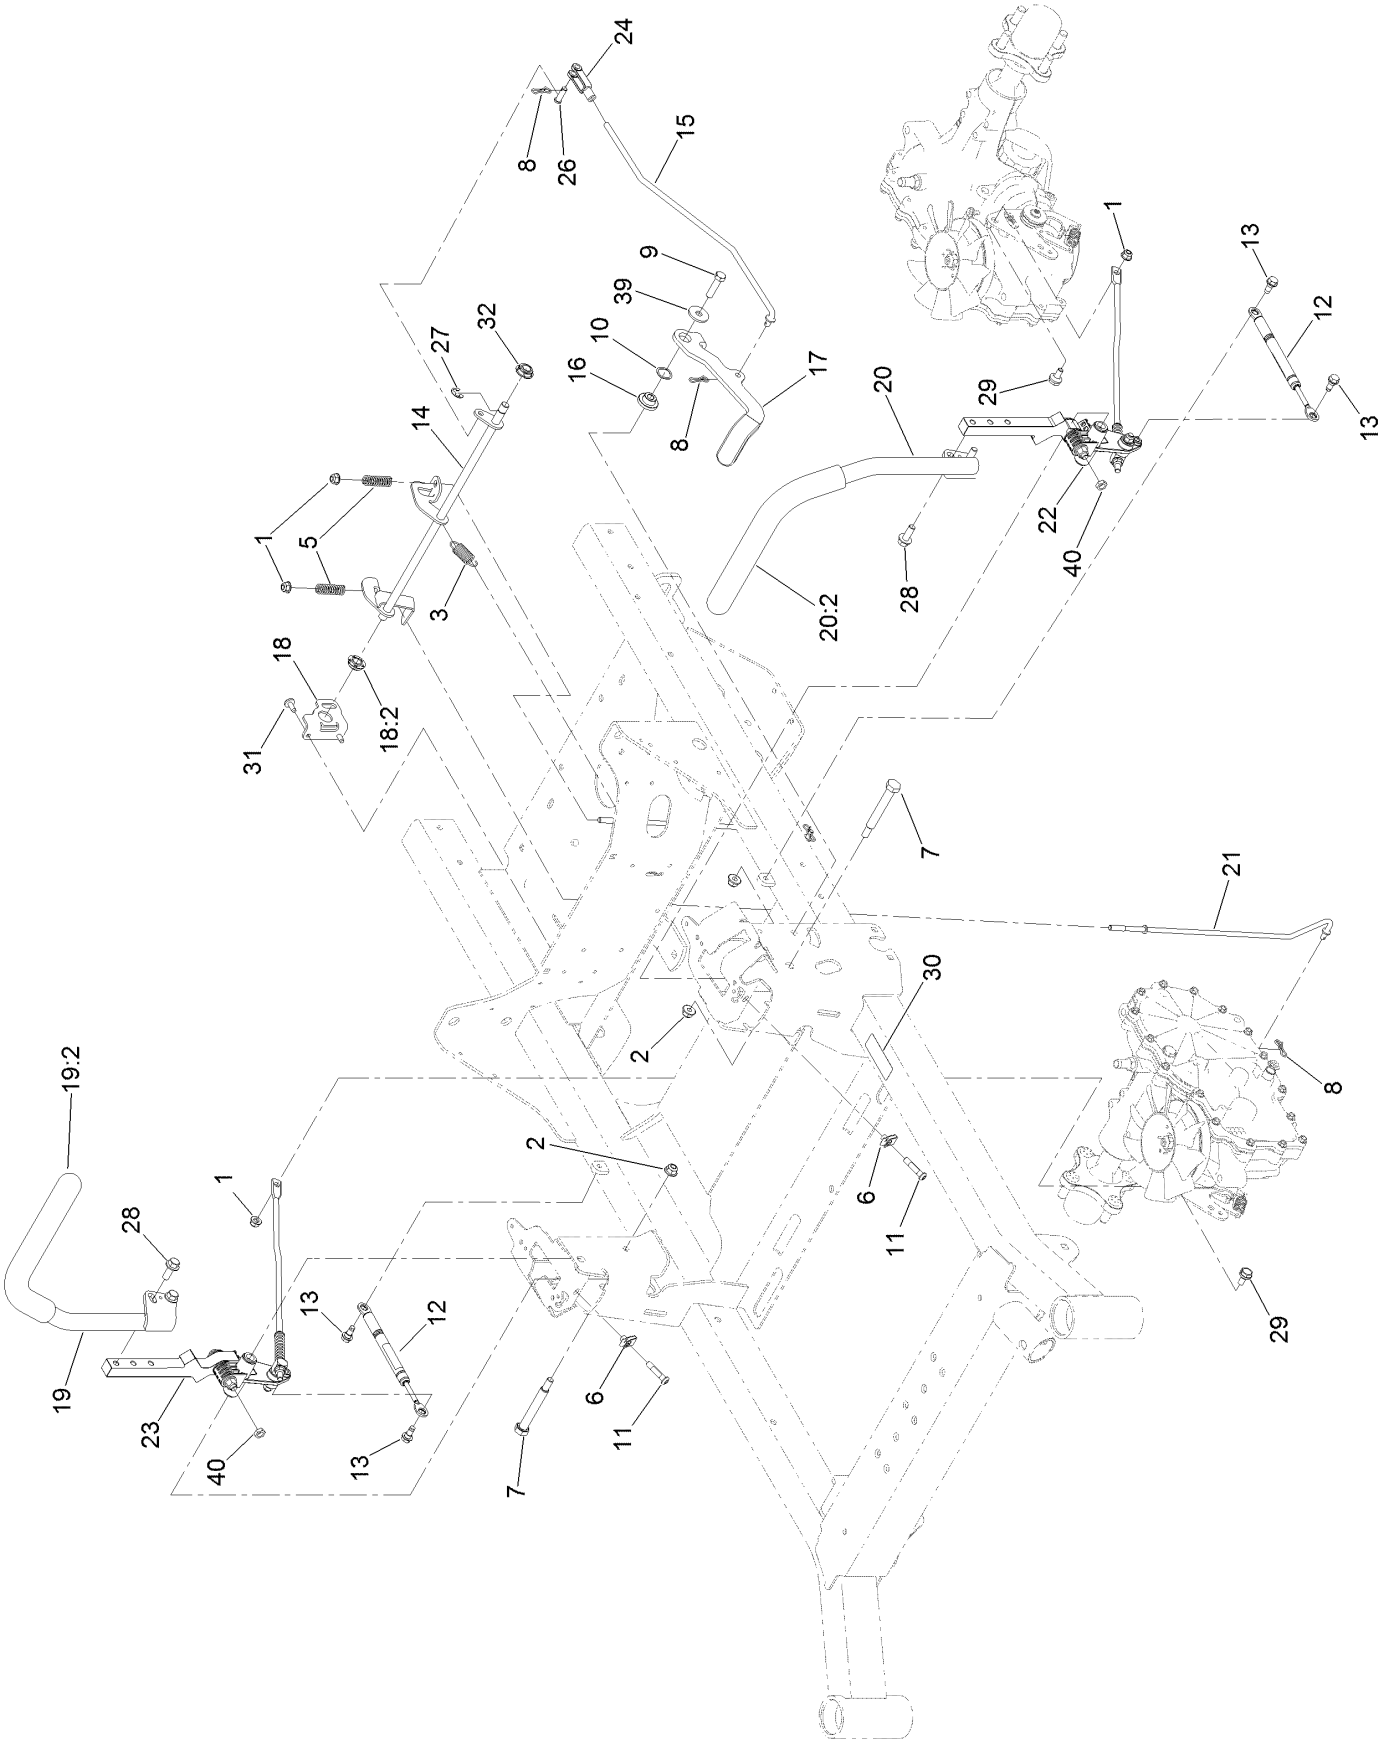


Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8300	4	Nut-HF, NI
2	104-8301	3	Nut-HF, NI
3	107-1045	1	Spring-Extension
5	109-7694	2	Spring-Compression
6	112-3306	2	Nut
7	115-5099	2	Bolt-Pivot
8	119-1415	4	Pin-Cotter, Locking
9	323-8	1	Screw-HH
10	119-4164	1	Washer-Wave
11	126-4299	2	Screw-HSBH
12	126-4322	2	Damper
13	126-4424	4	Screw-Shoulder
14	126-5813	1	Shaft-Brake
15	126-5819	1	Linkage-Brake, Upper
16	126-5989	1	Pivot-Flange
17	126-9490	1	Lever-Brake (With Grip)
18	126-6456	1	Bracket-Brake
18:2	126-5820	1	Bearing-Spherical
19	126-9191	1	RH Control Handle ASM
19:2	126-7359	1	Grip
20	126-9192	1	LH Control Handle ASM
20:2	126-7359	1	Grip
21	126-7217	2	Linkage-Brake, Lower
22		1	LH Motion Control ASM ●
23		1	RH Motion Control ASM ●
24	1-303105	1	Yoke-Adjustable
26	1-808280	1	Pin-Clevis
27	32120-47	1	Ring-Retaining, External
28	3234-42	4	Screw-HHF
29	37-8771	2	Bolt-Shoulder, HF
30	115-9625	1	Decal-Brake, Parking
31	126-6266	2	Screw-Tph
32	126-5820	1	Bearing-Spherical
39	2844	1	Washer
40	3218-3	2	Nut-Jam

● Not serviced separately


LH and RH Motion Control Assembly

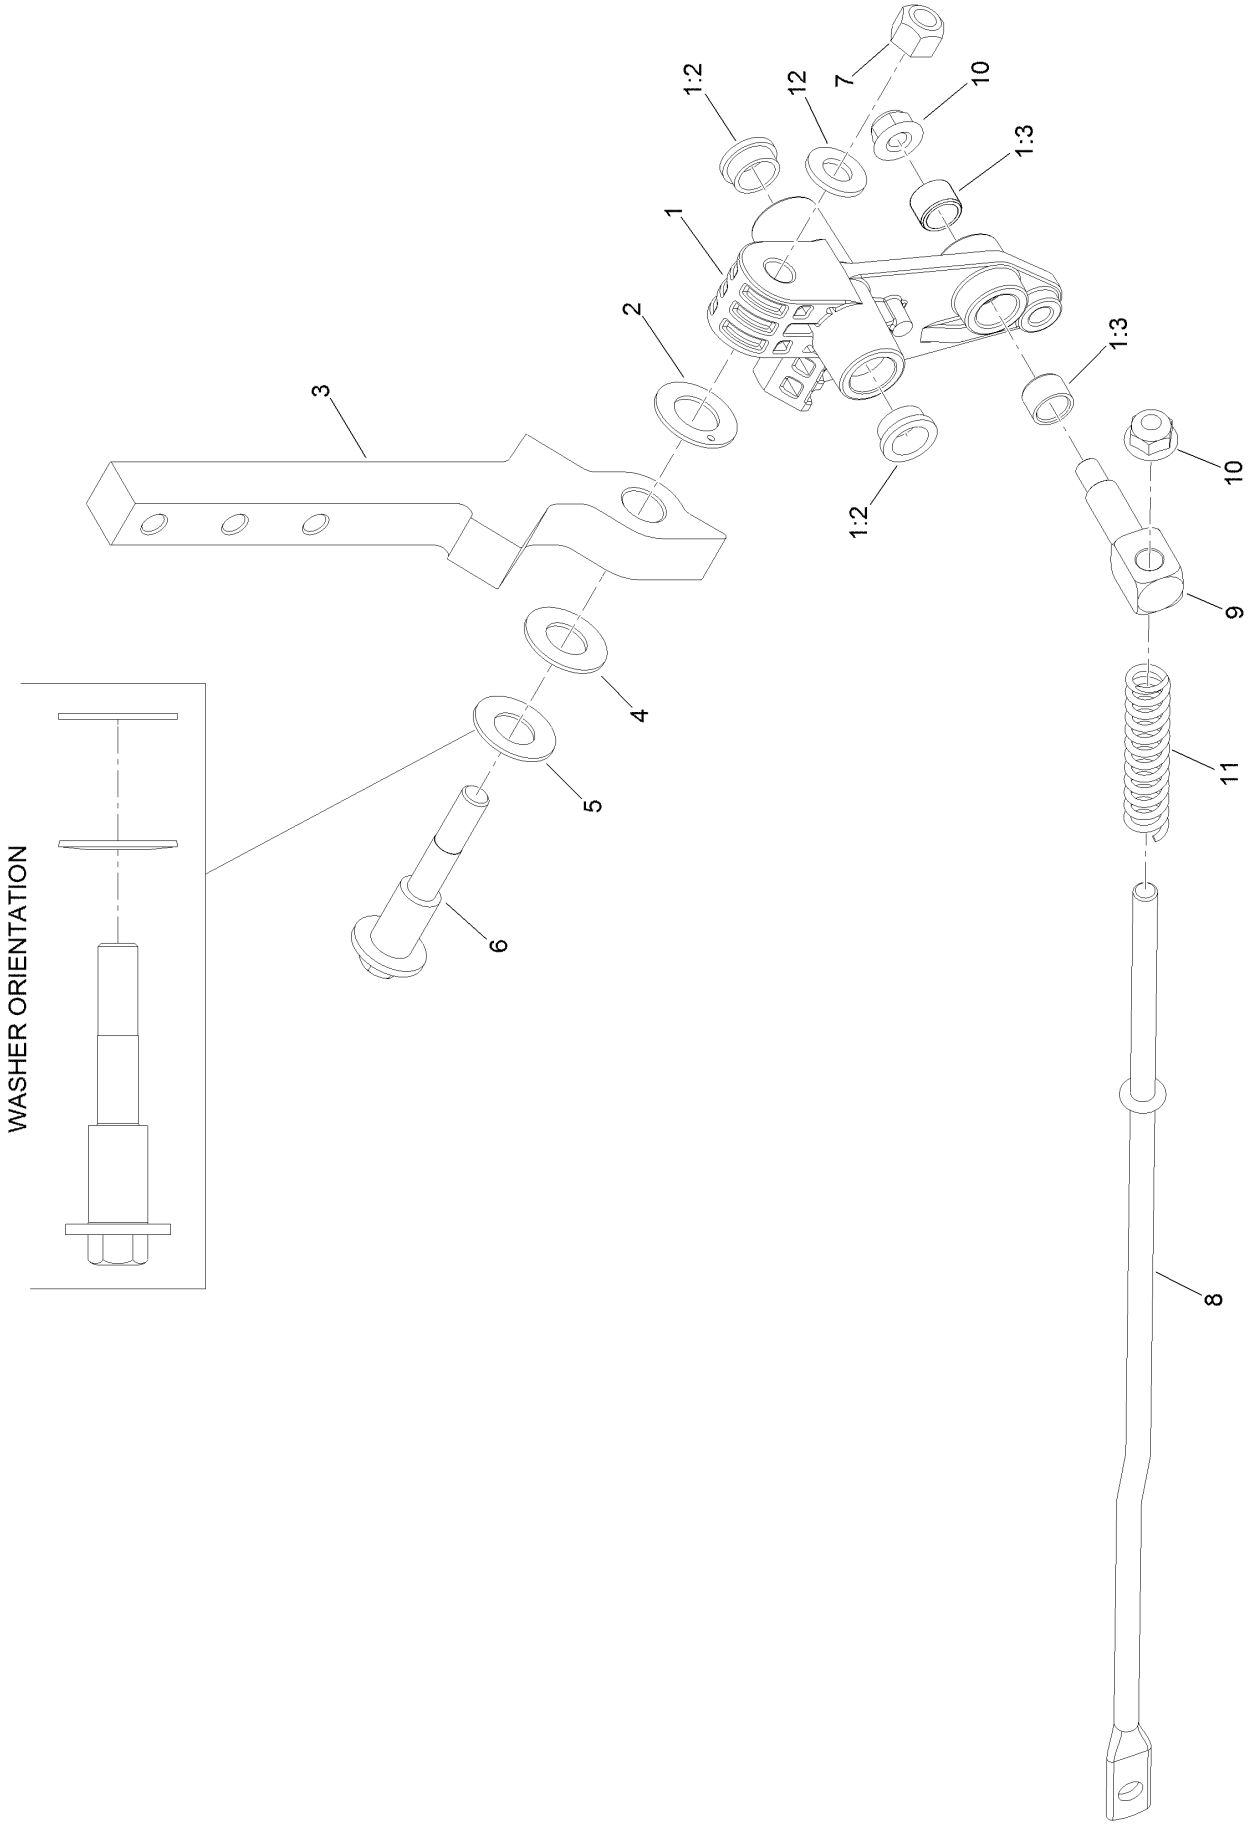

LH and RH Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3773	1	Control Arm ASM
1:2	126-8909	2	Bushing
1:3	1-413152	2	Bushing-Sleeve
2	126-7296	1	Washer-Friction
3	126-8182	1	Arm-Control
4	117-1240	1	Washer
5	119-8925	1	Washer-Belleville
6	117-1198	1	Bolt-Pivot
7	32152-2	1	Nut-Lock, Cone
8	126-5435	1	Link-Control
9	126-5434	1	Swivel
10	104-8300	2	Nut-HF, NI
11	126-8195	1	Spring-Return, Neutral
12	3256-24	1	Washer-Plain

Caster Tire Assembly

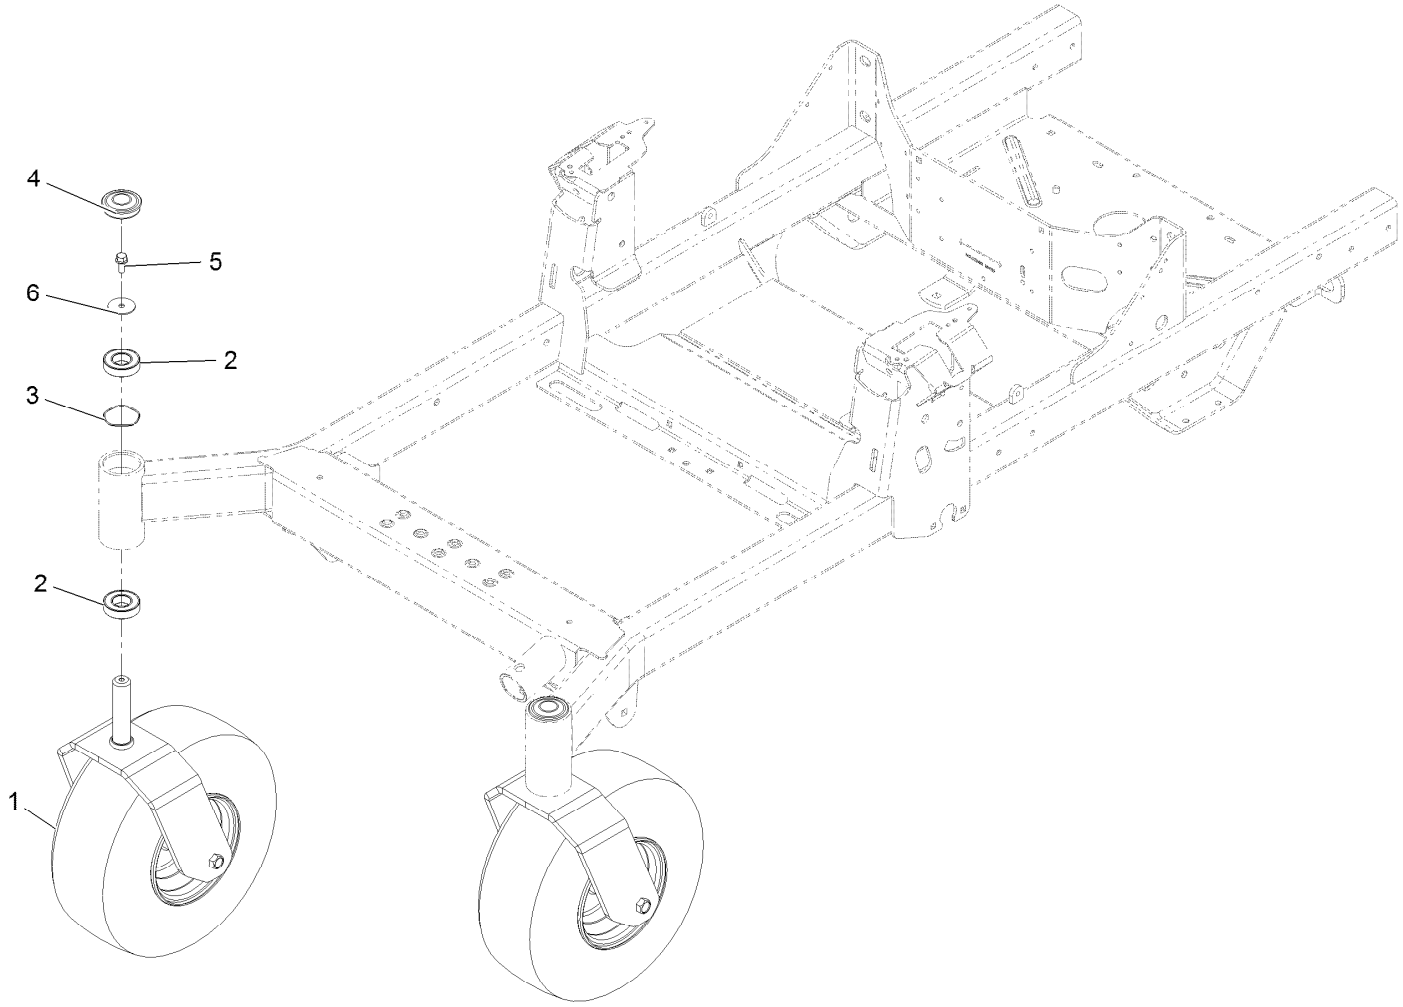


Caster Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1		2	ASM-Front Caster W/Fork ●
2	109-3678	4	Bearing-Ball
3	126-5897	2	Spring
4	116-4348	2	Cap-Grease
5	100-1668	2	Screw-HHF
6	3256-68	2	Washer-Flat

● Not serviced separately

Fork and Caster Wheel Assembly

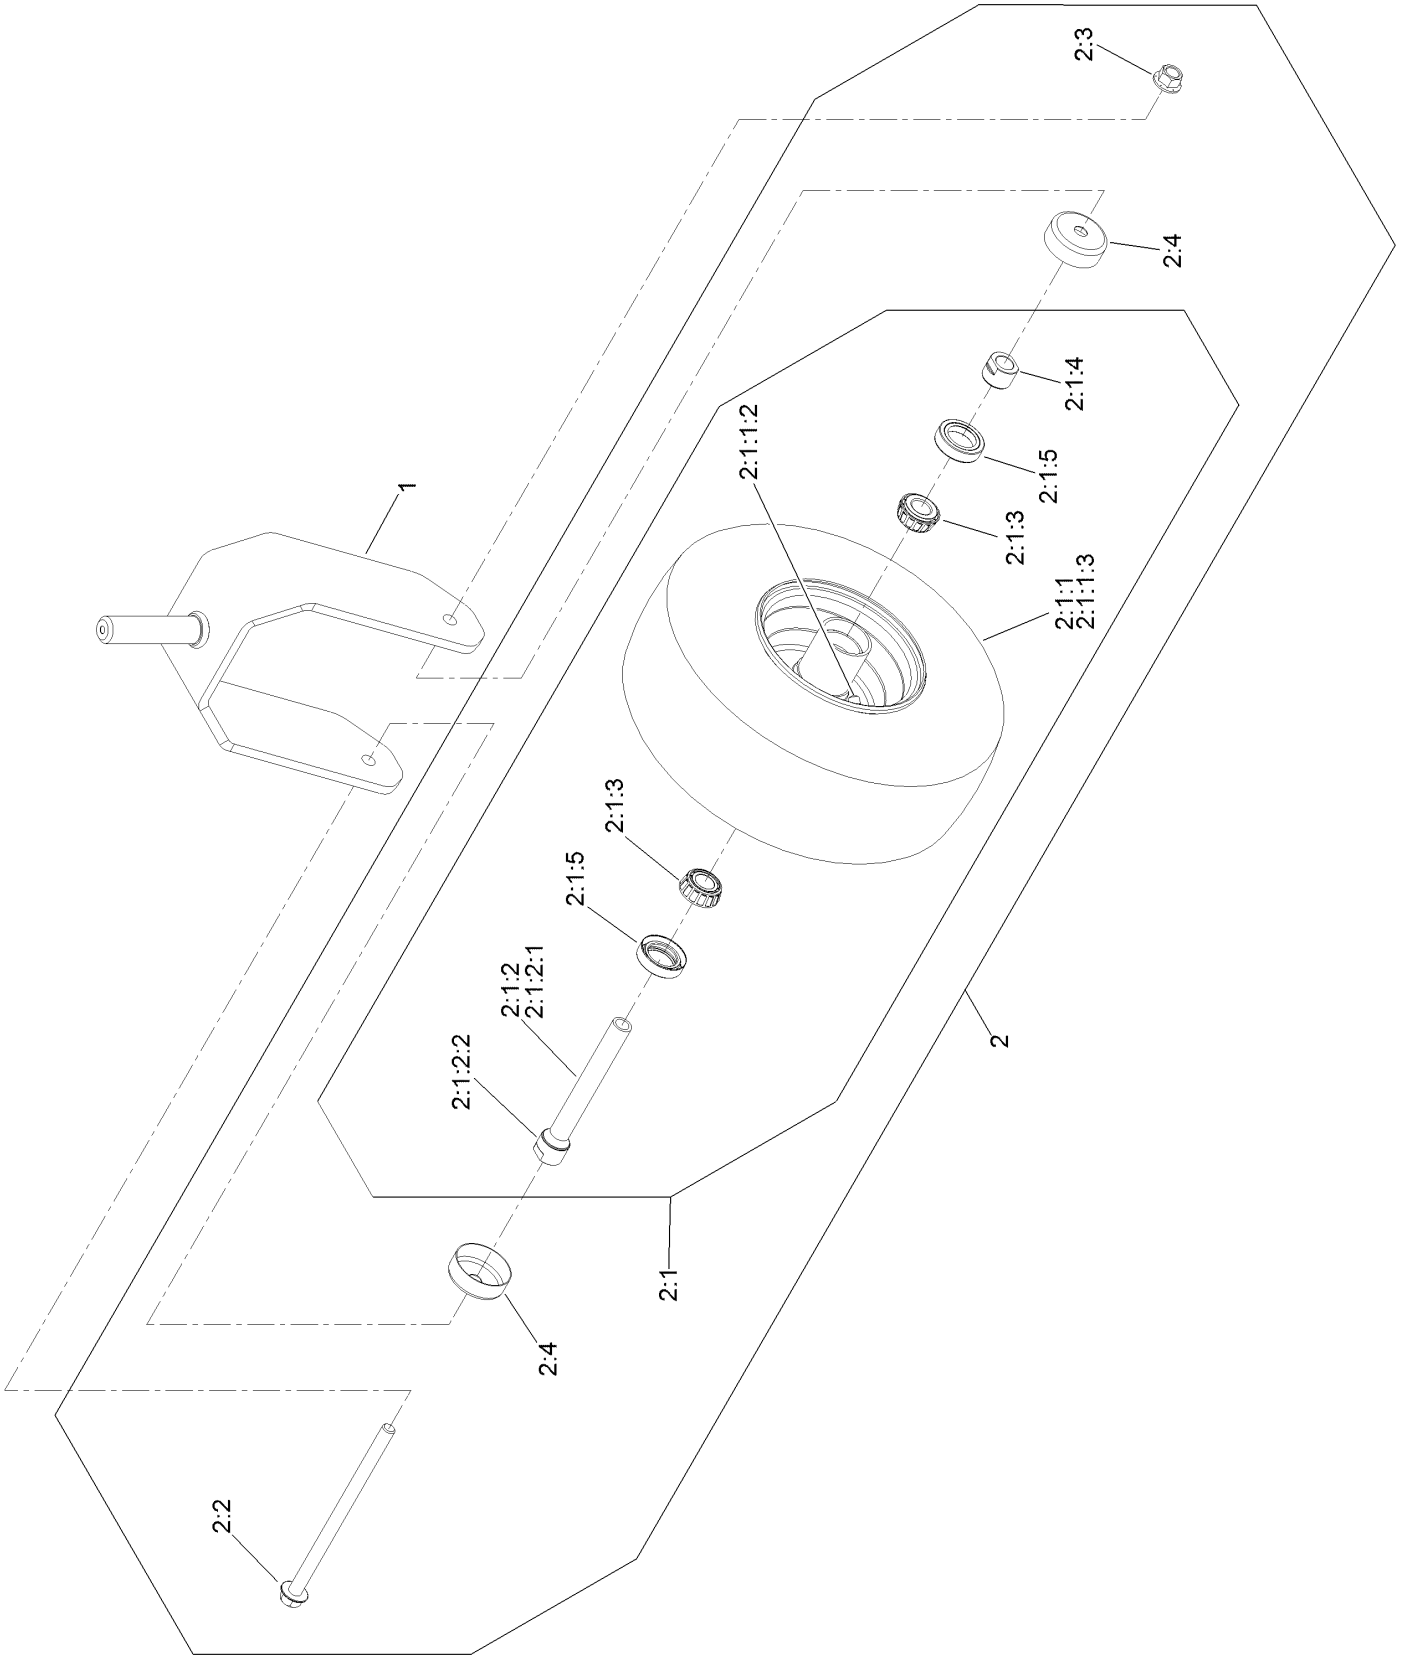


Fork and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4312-01	1	Fork-Caster
2	139-3639	1	ASM-Pneumatic 13X6.50-6
2:1		1	Wheel And Bearings ASM ●
2:1:1		1	Wheel And Tire ASM ●
2:1:1:2	5108	1	Valve
2:1:1:3	126-5959	1	Tire
2:1:2	126-7796	1	Caster Axle ASM
2:1:2:1	126-5220	1	Axle-Caster
2:1:2:2	103-3051	1	Spacer-Nut
2:1:3	1-633585	2	Bearing-Cone, Taper
2:1:4	103-3051	1	Spacer-Nut
2:1:5	103-0063	2	Seal-Caster
2:2	126-5389	1	Screw-HHF
2:3	99-5107	1	Nut-Lock
2:4	103-2768	2	Guard-Seal

● Not serviced separately


Rear Wheel Assembly

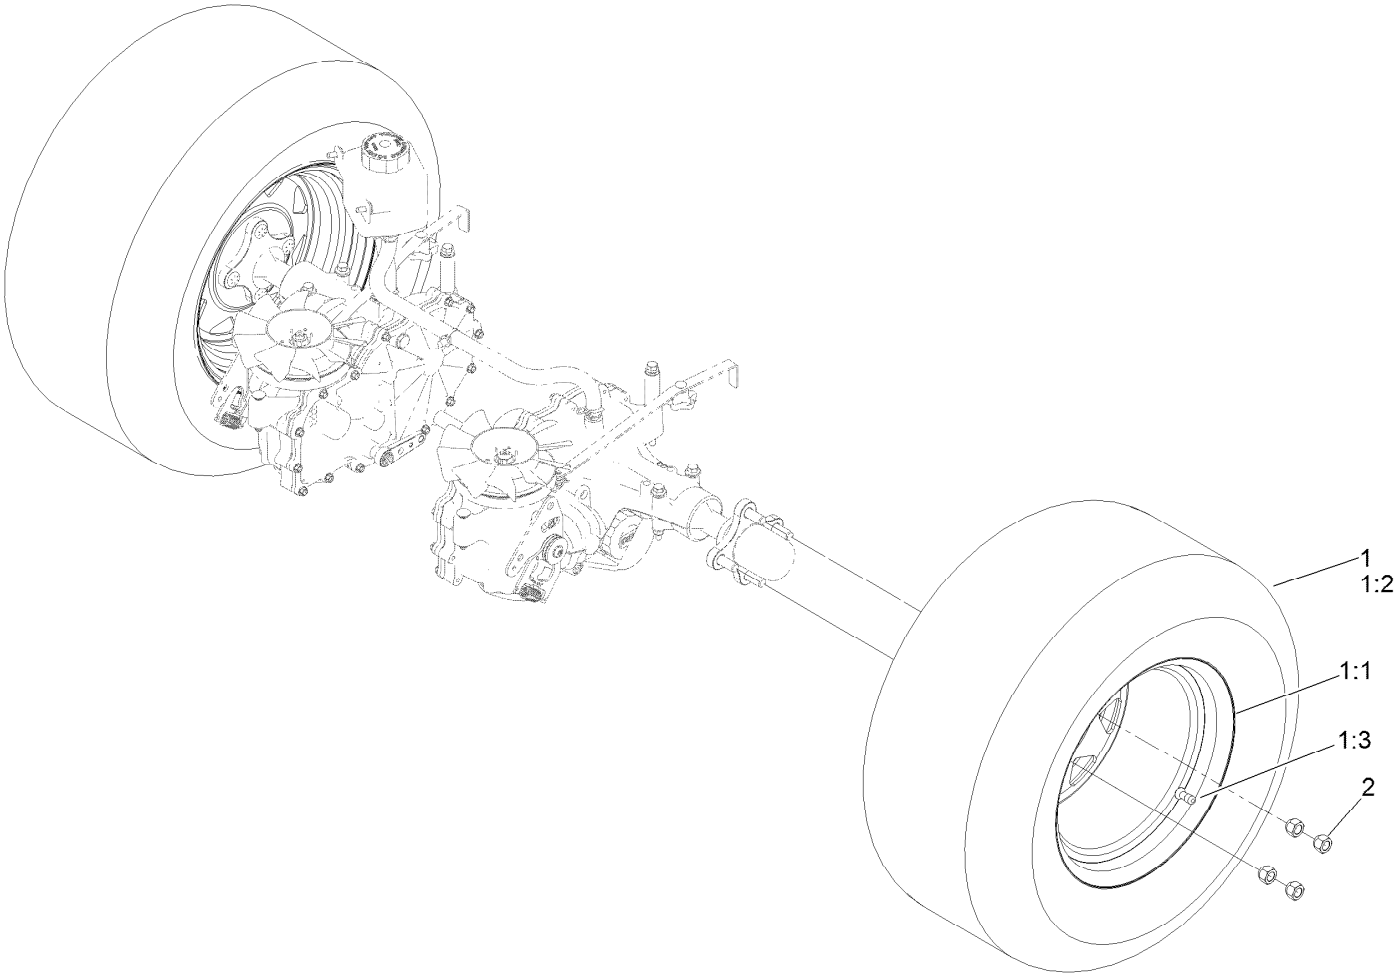

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-3633	2	Wheel And Tire ASM
1:1	139-3636	1	Wheel
1:2	126-4875	1	Tire
1:3	232-27	1	Stem-Valve
2	242-50	8	Nut-Lug

Electrical Assembly

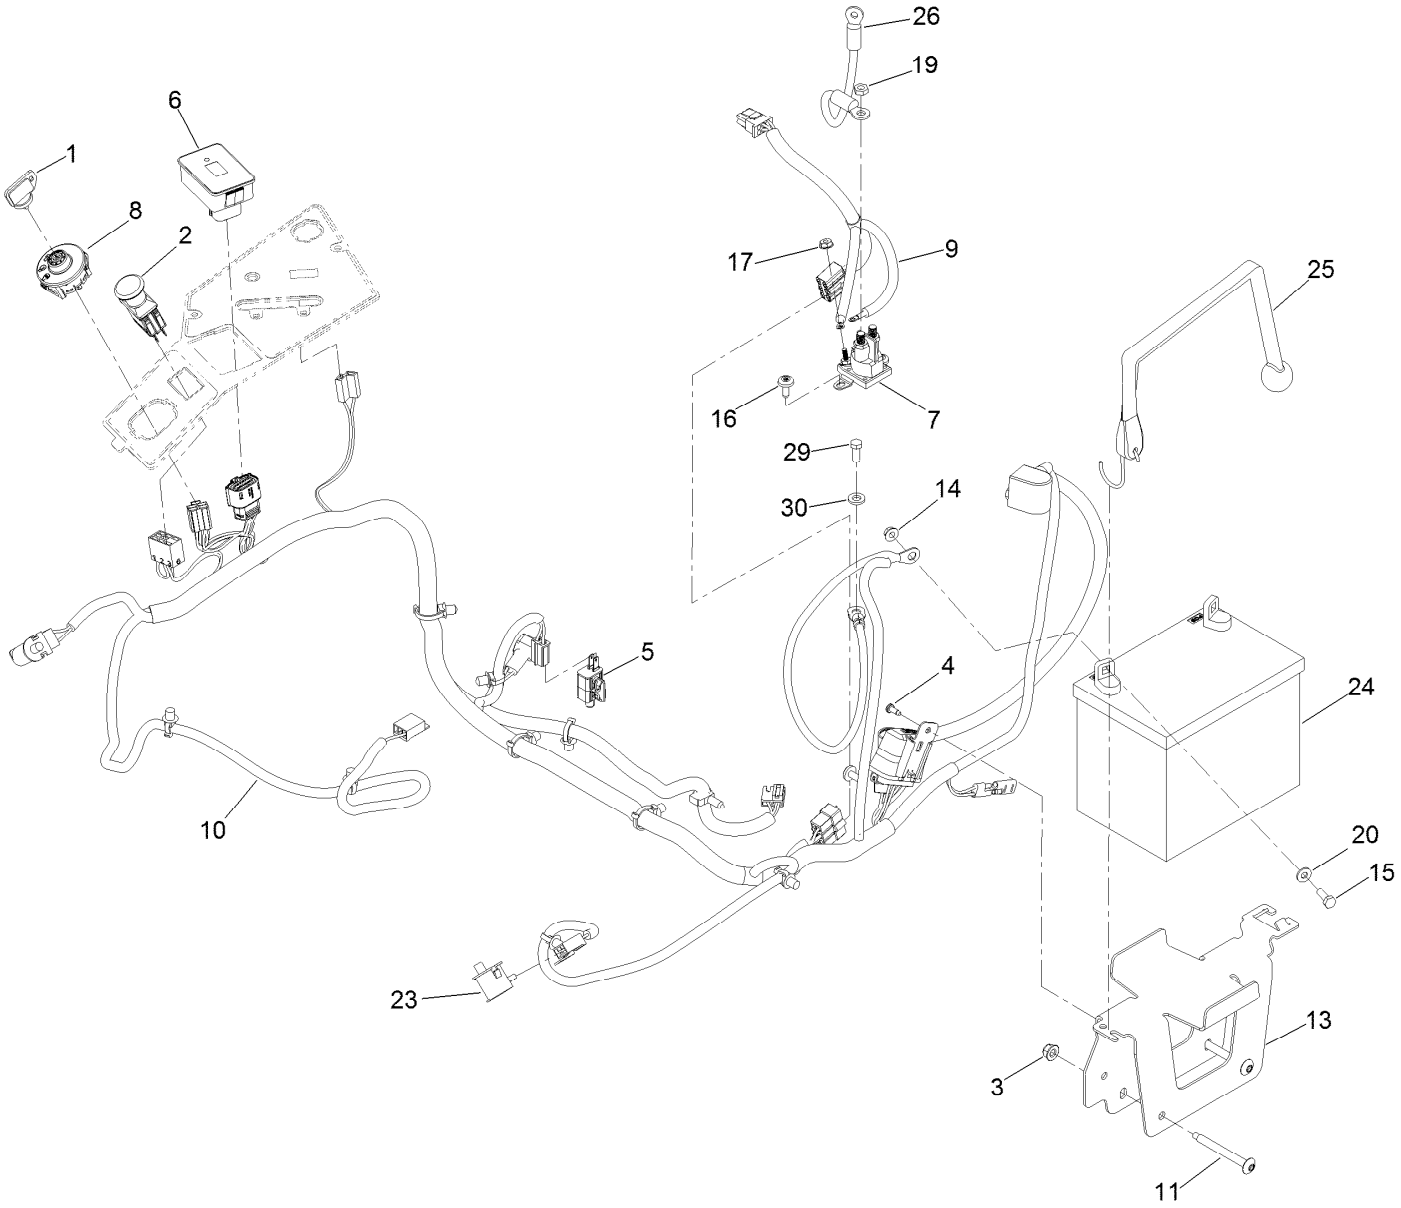


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	63-8360	1	Key-Ignition
2	103-5221	1	Switch-PTO
3	104-8300	2	Nut-HF, NI
4	105-6849	1	Screw-Forming, Thread
5	110-6765	1	Switch
6	116-5609	1	Module ASM
7	117-1197	1	Solenoid
8	137-4100	1	Switch-Ignition
9	126-5036	1	Adapter-Harness, Wire
10	126-5803	1	Harness-Wire ▲
11	126-6267	2	Screw-TTH
13	126-6725-03	1	Tray-Battery
14	32128-33	2	Nut-HF
15	321-4	2	Screw-HH
16	126-6266	2	Screw-Tph
17	32149-8	2	Nut-Keps
19	3220-2	1	Nut-Jam
20	3256-22	2	Washer-Flat
23	82-2190	2	Switch-Bail
24		1	Battery ● ■
25	126-7627	1	Strap-Bungee
26	100-3540	1	Cable-Battery, Positive
29	135-2868	1	Screw-HH
30	3256-23	1	Washer-Plain

● Obtain locally. ■ Not serviced separately

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


Harness Assembly No. 126-5803

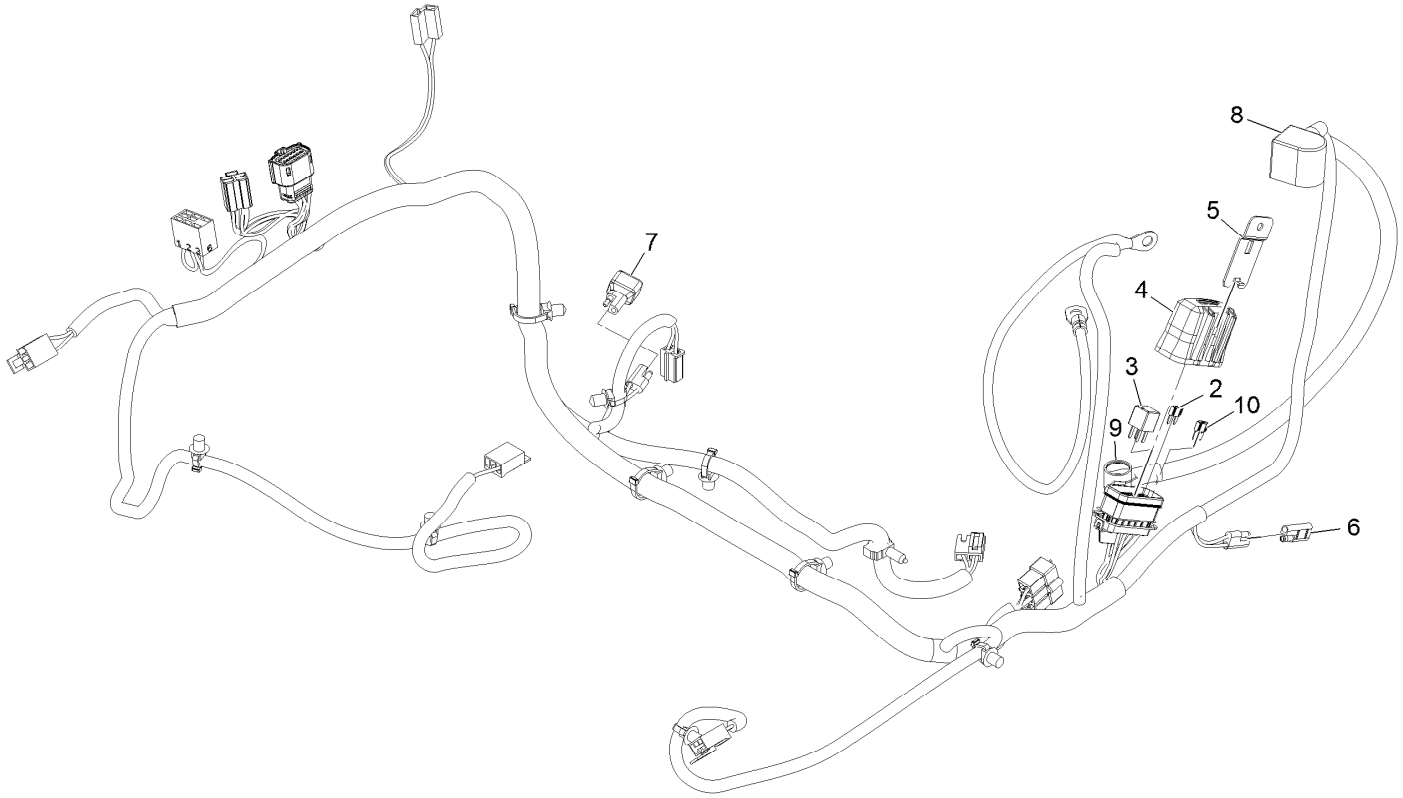

Harness Assembly No. 126-5803 (continued)

Ref.	Part Number	Qty.	Description
2	121-8868	1	Fuse-Mini Blade, 20 Amp
3	126-3991	1	Relay-Micro
4	32180-176	1	Cover-Block, Fuse
5	32180-177	1	Clip-Mounting
6	116-0053	1	Cap-Plug
7	103-3895	1	Diode
8	126-8876	1	Insulator-Battery
9	1-543393	1	Insulator-Solenoid
10	121-8867	1	Fuse-Mini Blade, 15 Amp


Deck Lift Assembly

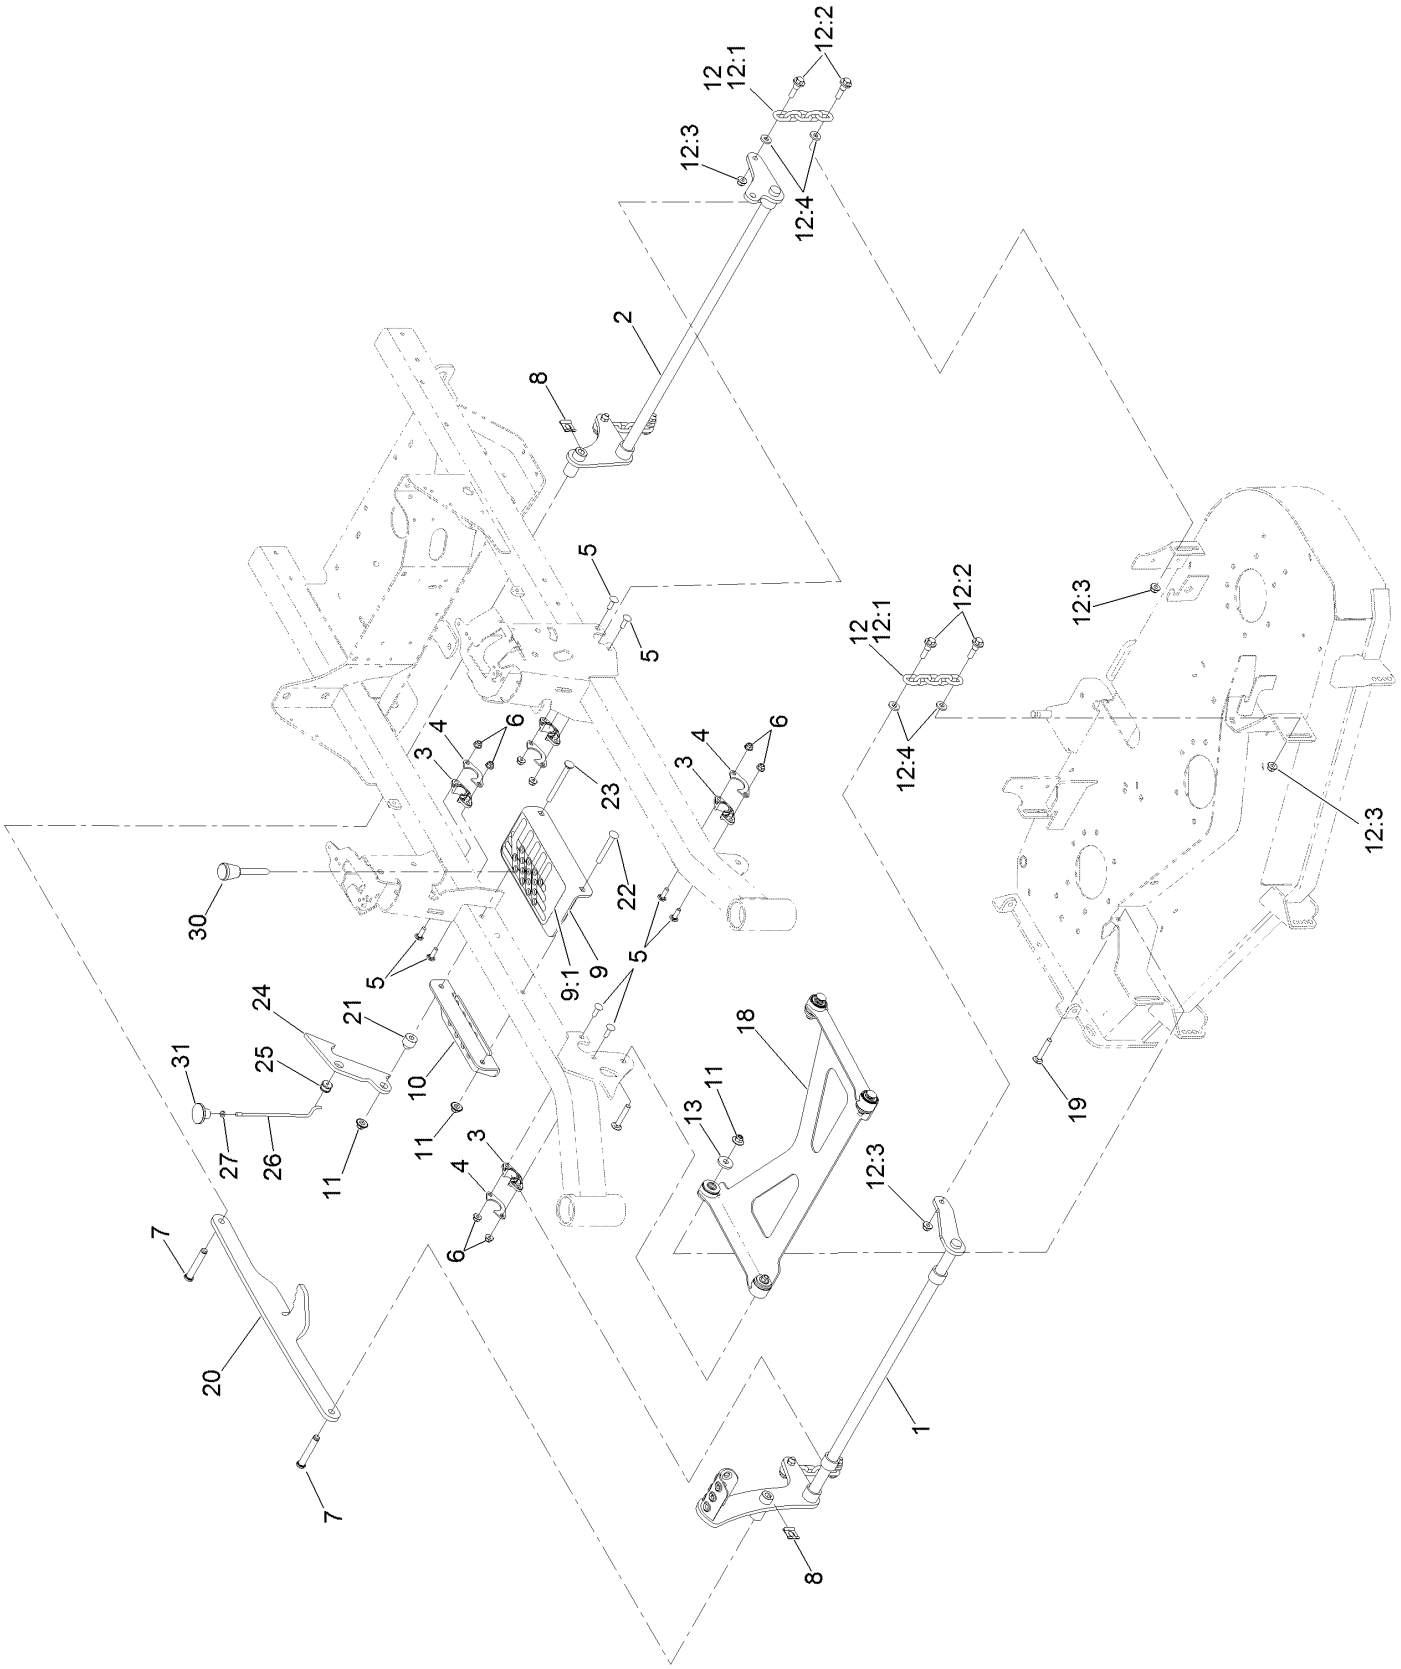

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-3342-03	1	Shaft-Lift, Deck
2	126-3343-03	1	Shaft-Lift, Deck (Rear)
3	115-5065	4	Bushing-Flange
4	116-2887	4	Gusset-Lift, Deck
5	3230-22	8	Screw-CARR
6	104-8300	8	Nut-HF, NI
7	126-9181	2	Pin-Clevis
8	138-8491	2	Clip-Pin
9	126-4535	1	Bracket ASM
9:1	126-4784	1	Decal-HOC
10	126-4640-03	1	Angle-HOC, Lower
11	109-6658	4	Nut-Flange, NI
12	126-8877	4	Deck Chain ASM
12:1	1-633447	1	Chain-Lift, Deck
12:2	130-0742	2	Bolt-Shoulder
12:3	104-8301	2	Nut-HF, NI
12:4	43-0940	2	Spacer
13	1-373034	2	Washer
18	126-8365	1	Deck Strut ASM
19	3231-7	2	Screw-CARR
20	126-4639-03	1	Link-HOC
21	126-5221	1	Spacer-Stepped
22	3231-42	1	Screw-CARR
23	135-0313	1	Screw-CARR
24	126-5222	1	Plate-Lock, Transport
25	126-5593	1	Grommet
26	126-5223	1	Rod-Lock, Transport
27	3218-1	1	Nut-Jam
30	126-5401	1	Pin-HOC
31	126-7019	1	Knob


Deck Strut Assembly No. 126-8365

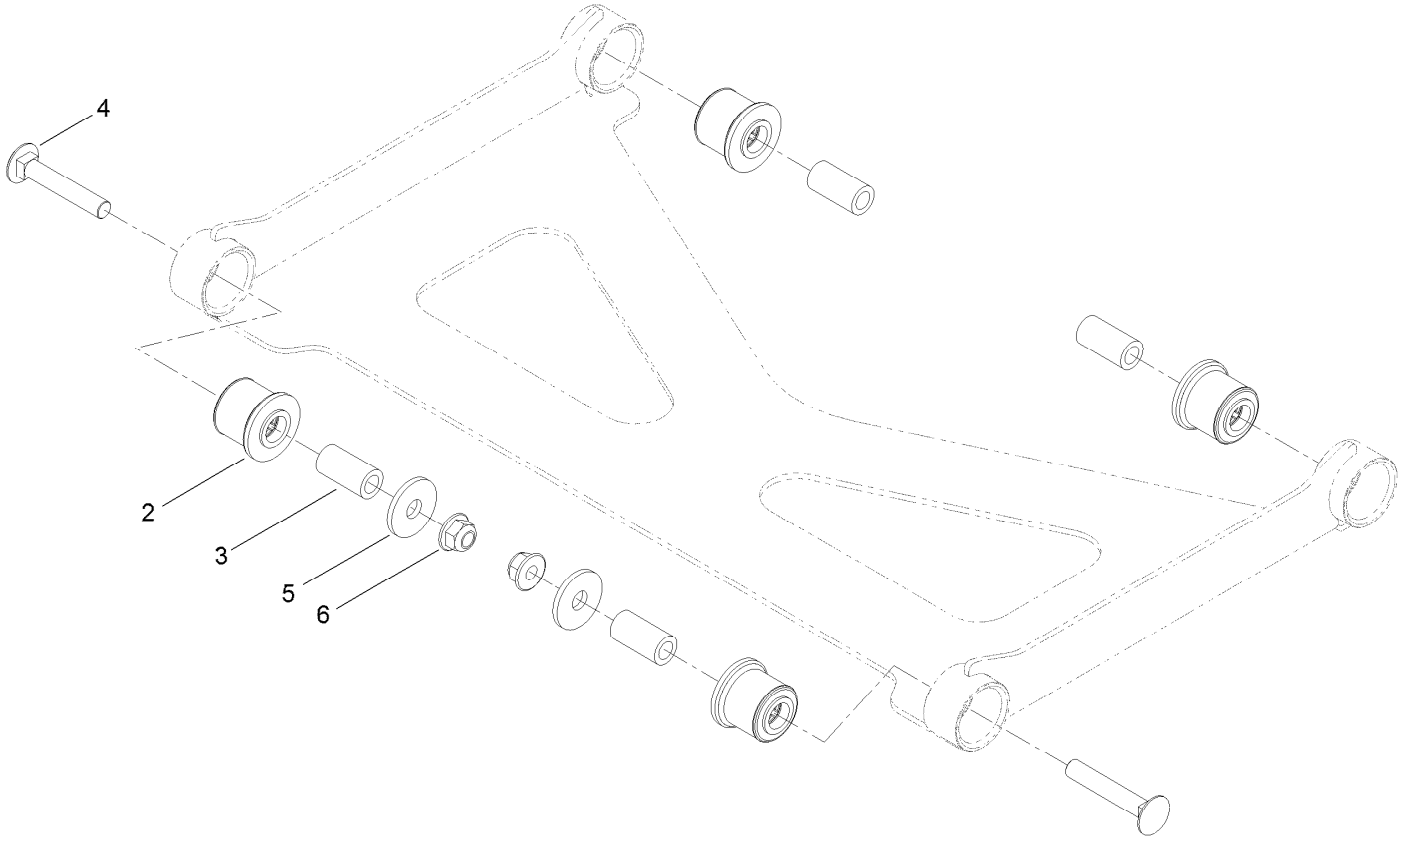

Deck Strut Assembly No. 126-8365 (continued)

Ref.	Part Number	Qty.	Description
2	126-8360	4	Bushing-Rubber, Suspension
3	108-6544	4	Spacer
4	3231-7	2	Screw-CARR
5	2844	2	Washer
6	104-8301	2	Nut-HF, NI

Engine, Clutch and Muffler Assembly

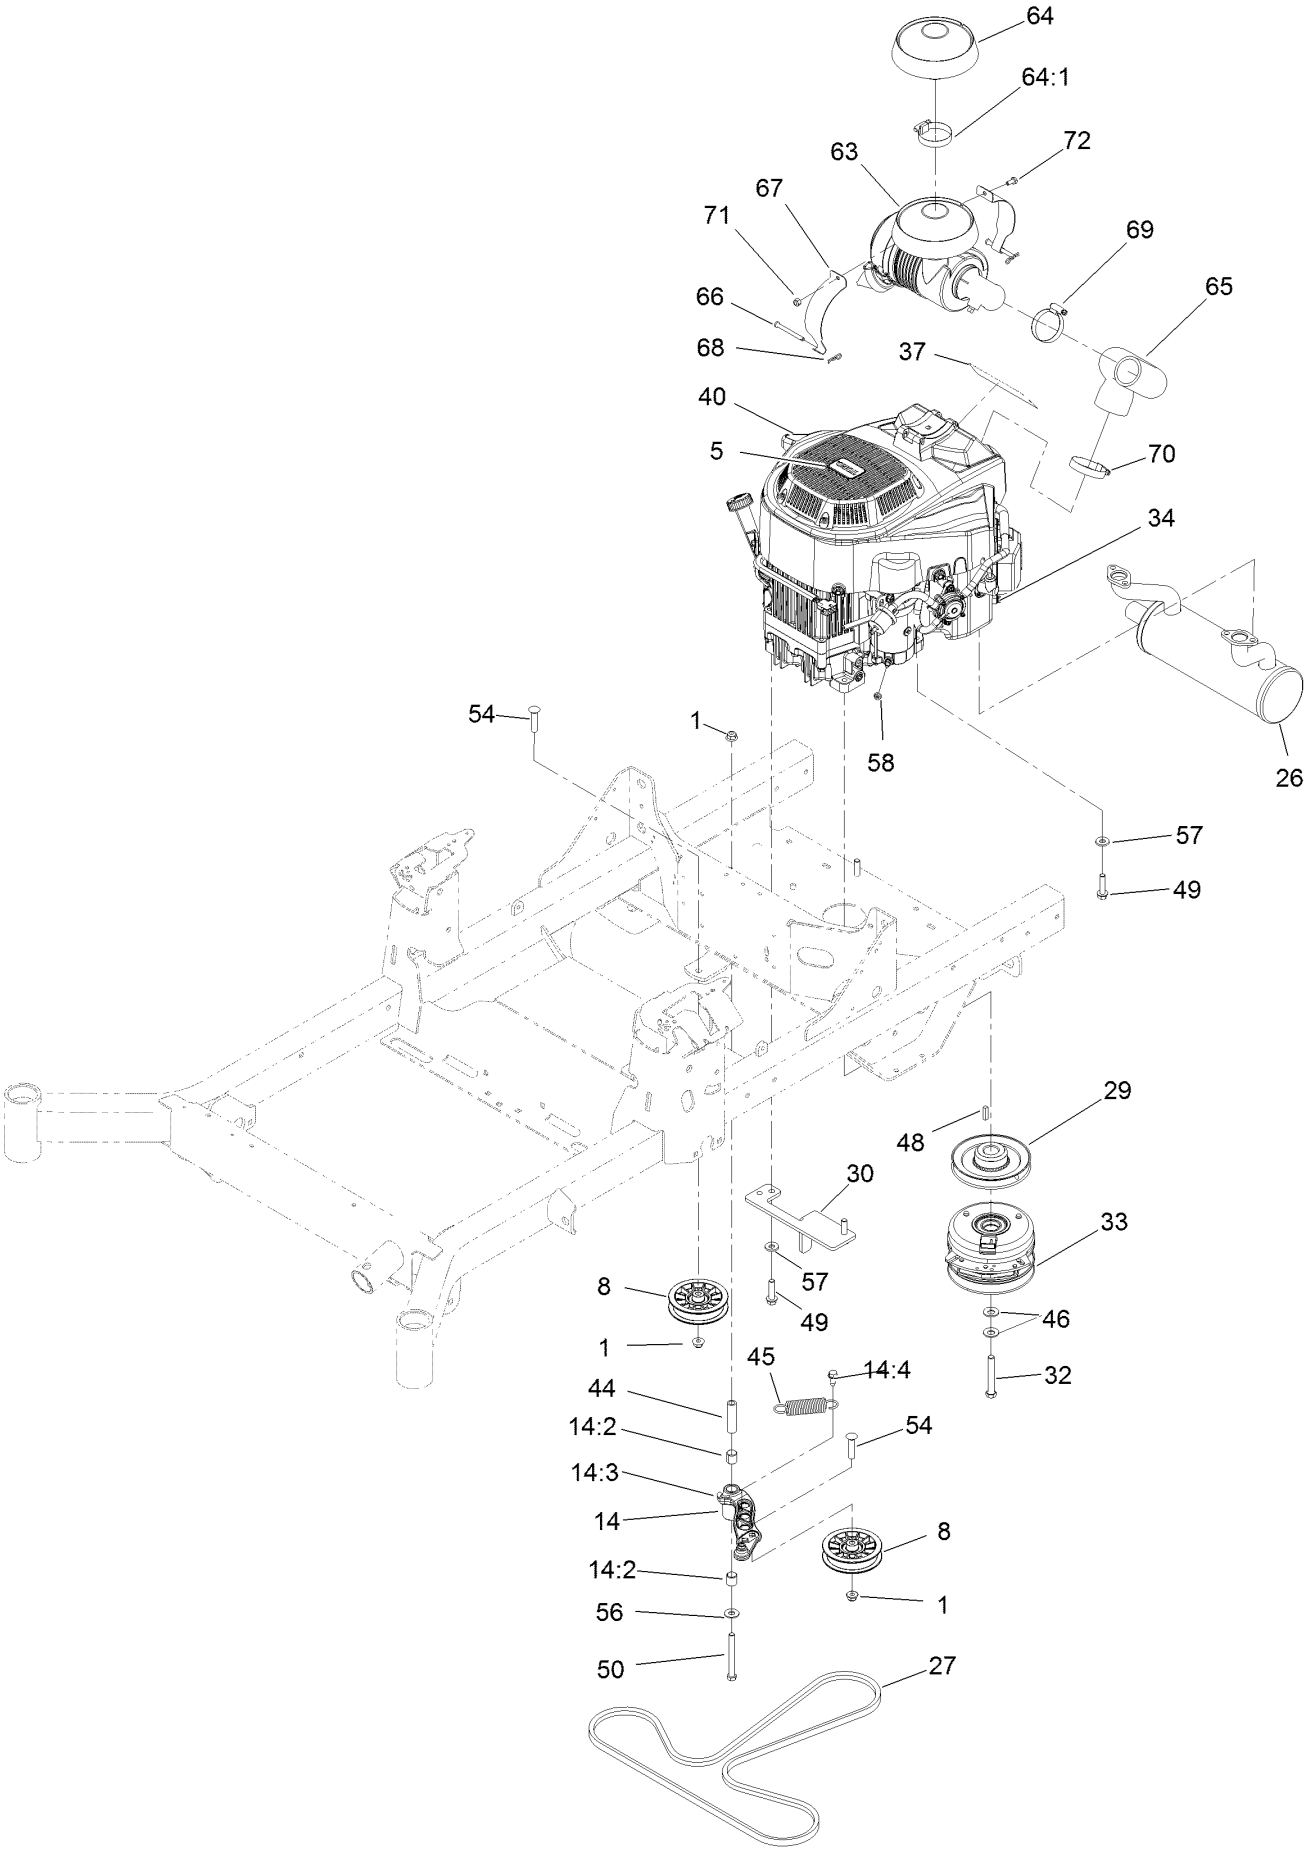


Engine, Clutch and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8301	3	Nut-HF, NI
5	110-1136	1	Decal
8	116-2456	2	Pulley-Flat Idler
14	126-0973	1	Idler Arm ASM
14:2	1-513034	2	Sleeve-Bearing
14:3	302-40	1	Fitting-Grease, 90 DEG
14:4	32144-11	1	Screw-HWH
26	126-5864	1	Muffler
27	126-5993	1	Belt-V
29	138-6007	1	Sheave-Engine
30	126-6687-03	1	Anchor-Clutch
32	126-7198	1	Screw-HH W/Loctite ●
33	127-3410	1	Clutch-PTO
34	136-7823	1	Engine-2P77F-HD
37	140-2715	1	Decal
40	131-1097	1	Decal-Drain, Oil
44	1-603384	1	Bushing-Pivot, Idler
45	1-603402	1	Spring-Extension
46	1-603610	2	Washer-Spring
48	1-807259	1	Key
49	32144-102	4	Screw-HWH
50	323-15	1	Screw-HH
54	3231-29	2	Screw-CARR
56	3256-4	1	Washer-Flat
57	98-5975	4	Washer-Belleville
58	33003-00	1	Nut-HF
63	93-2190	1	Air Cleaner ASM
64	136-7859	1	Rain Cap Kit
64:1	1-643009	1	Clamp-Hose
65	136-9242	1	Hose-Intake
66	137-2011	2	Pin-Clevis
67	136-9243	2	Strap-Canister, Air
68	1-806003	2	Pin-Cotter
69	1-643009	1	Clamp-Hose
70	2412-130	1	Clamp-Hose
71	137-3088	1	Nut-Hex
72	137-3041	1	Screw-HH

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


Air Cleaner Assembly No. 93-2190

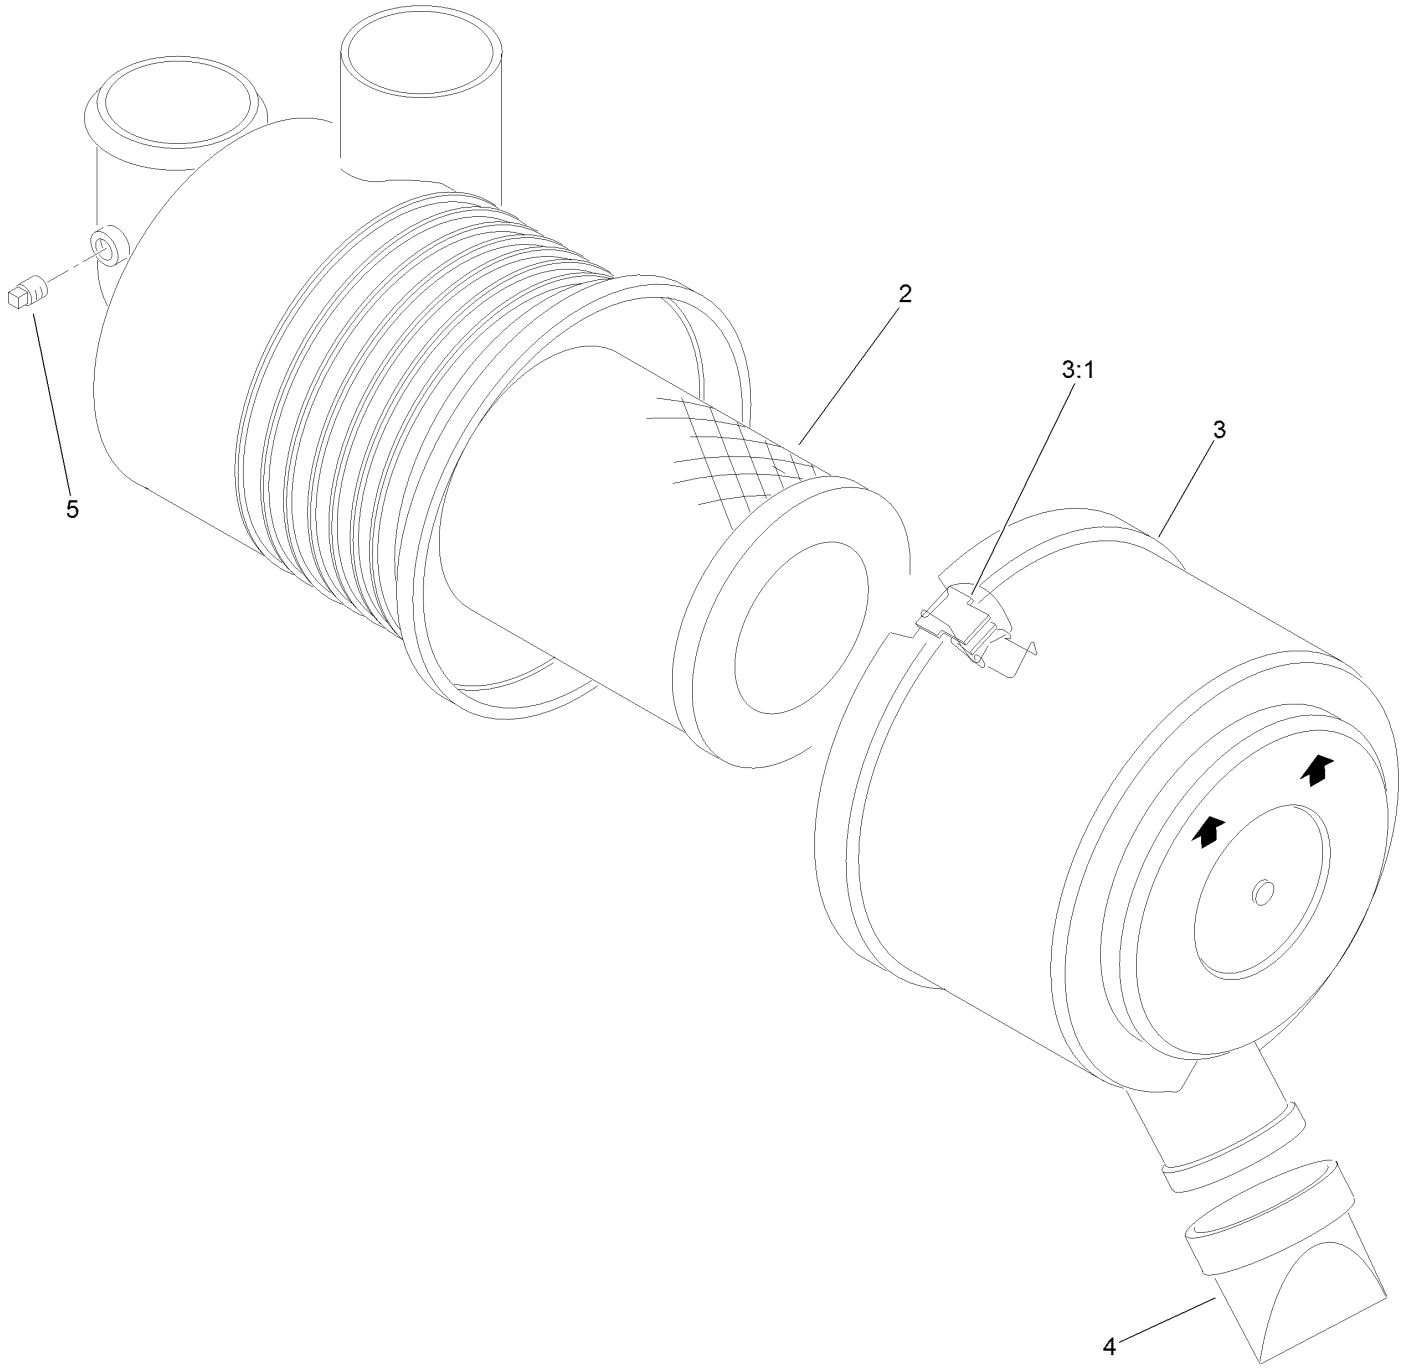

Air Cleaner Assembly No. 93-2190 (continued)

Ref.	Part Number	Qty.	Description
2	108-3811	1	Filter-Air
3	94-3652	1	Cover ASM
3:1	1-643283	2	Latch-Cleaner, Air
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe


Deck Assembly

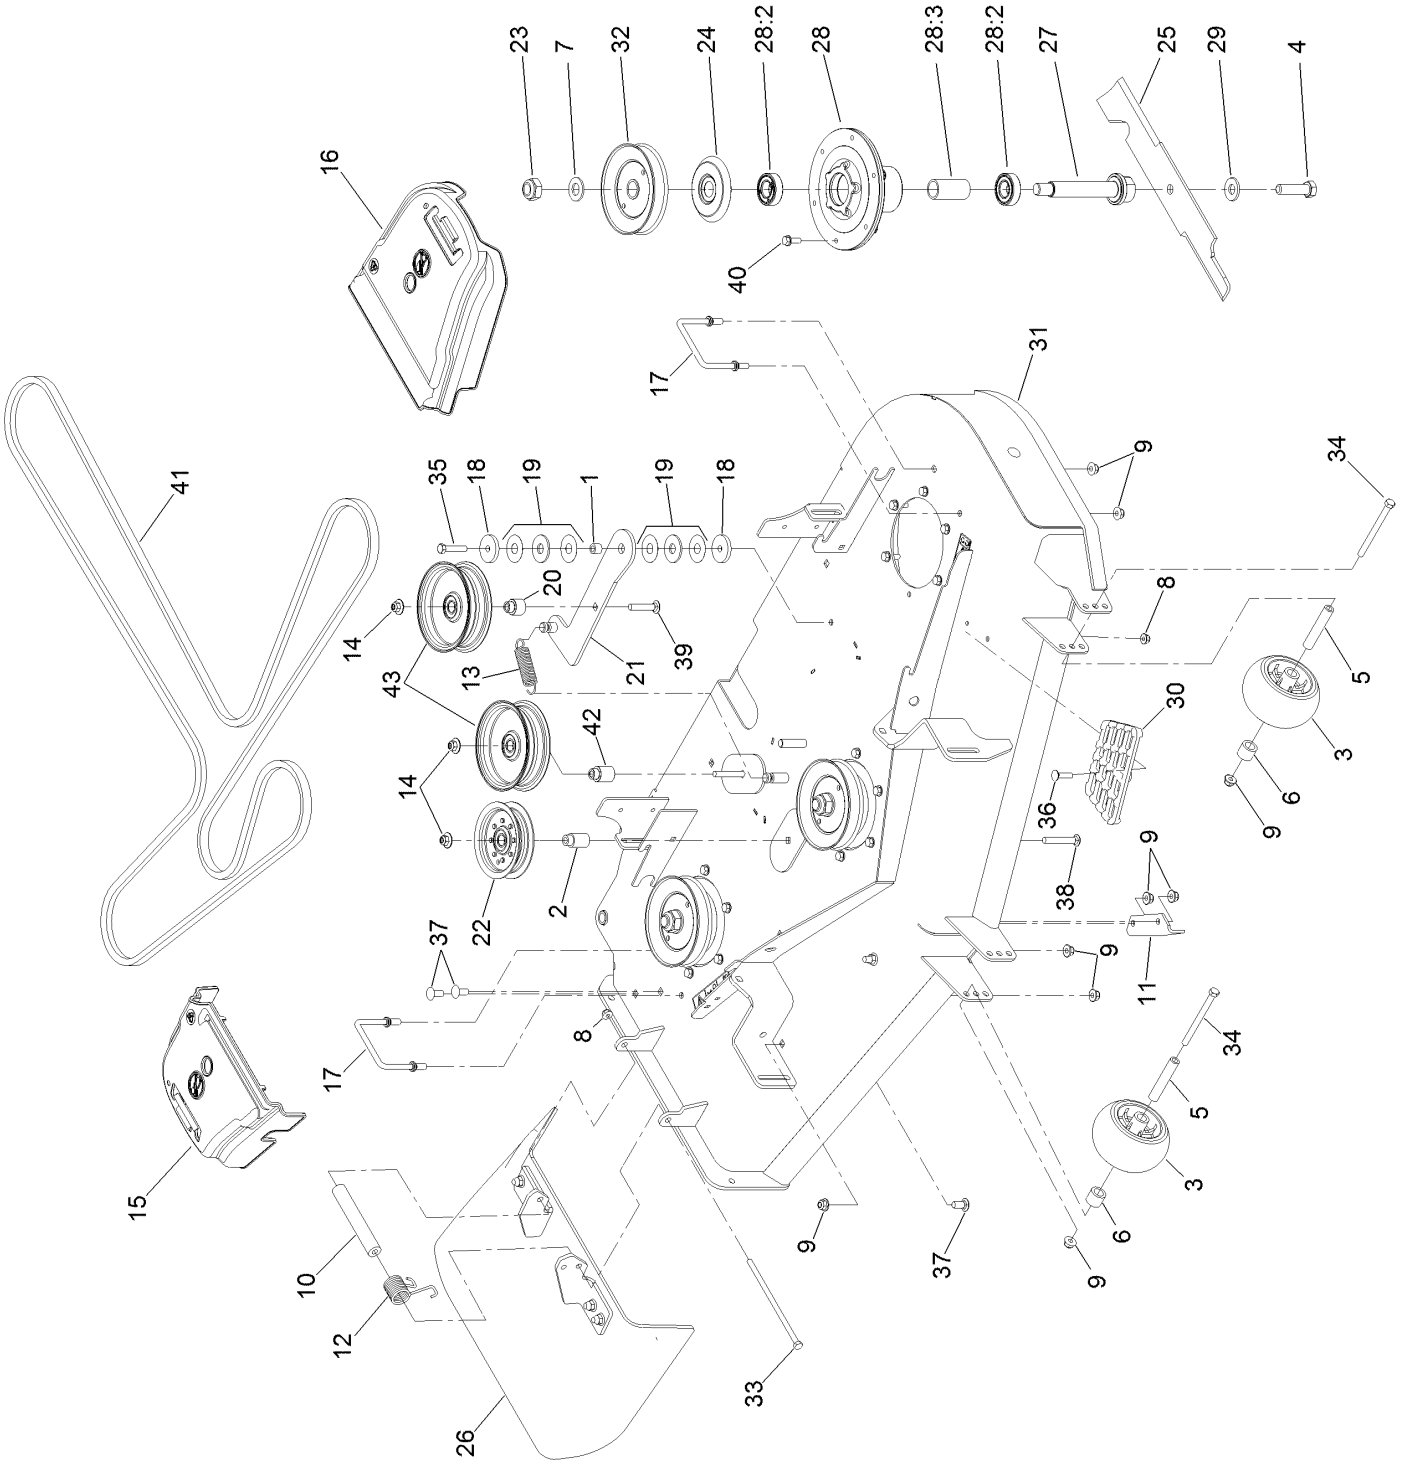

Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-413088	1	Bushing-Lever, Lift
2	1-413113	1	Bushing-Idler
3	1-603299	2	Roller-Scalp, Anti
4	51-4060	3	Screw-Blade
5	98-7912	2	Tube-Spanner
6	98-7913	2	Tube-Spacer
7	92-5836	3	Washer
8	104-8300	2	Nut-HF, NI
9	104-8301	12	Nut-HF, NI
10	105-4622	1	Spacer
11	107-8541-01	1	Baffle-Discharge
12	108-4052	1	Spring-Torsion
13	139-3616	1	Spring - Extension
14	109-6658	4	Nut-Flange, NI
15	109-6935	1	Cover-Belt, RH
16	109-6936	1	Cover-Belt, LH
17	109-6982	2	Wireform-Cover
18	110-9981	2	Washer-Plain
19	114-0463	2	Washer-Friction, Composite
20	126-7684	1	Bushing-Idler
21	115-5054	1	Arm-Idler
22	116-3626	1	Pulley-Idler
23	3296-67	3	Nut-Lock, NI
24	117-7210	3	Shield-Bearing
25	133-2134	3	Blade-Rotary, 18.0In (Hi Flow)
26	120-2451	1	Deflector ASM
27	126-7629	3	Shaft-Spindle
28	120-5477	3	Spindle ASM
28:2	116-0720	2	Bearing-Ball
28:3	115-2641	1	Spacer-Bearing
29	125-1736	3	Washer-Belleville
30	126-4781-03	1	Step-Deck
31	126-8957	1	Deck Decal ASM
32	126-6612	3	Pulley
33	322-50	1	Screw-HH
34	323-23	2	Screw-HH
35	323-9	1	Screw-HH
36	3230-3	1	Screw-CARR
37	3231-27	6	Screw-CARR
38	3231-31	2	Screw-CARR
39	3231-6	1	Screw-CARR
40	32144-41	18	Screw-Taptite
41	126-7732	1	Belt-Drive, Deck
42	126-7683	1	Bushing-Idler
43	116-4669	2	Idler-Pulley, Flat


Deflector Assembly No. 120-2451

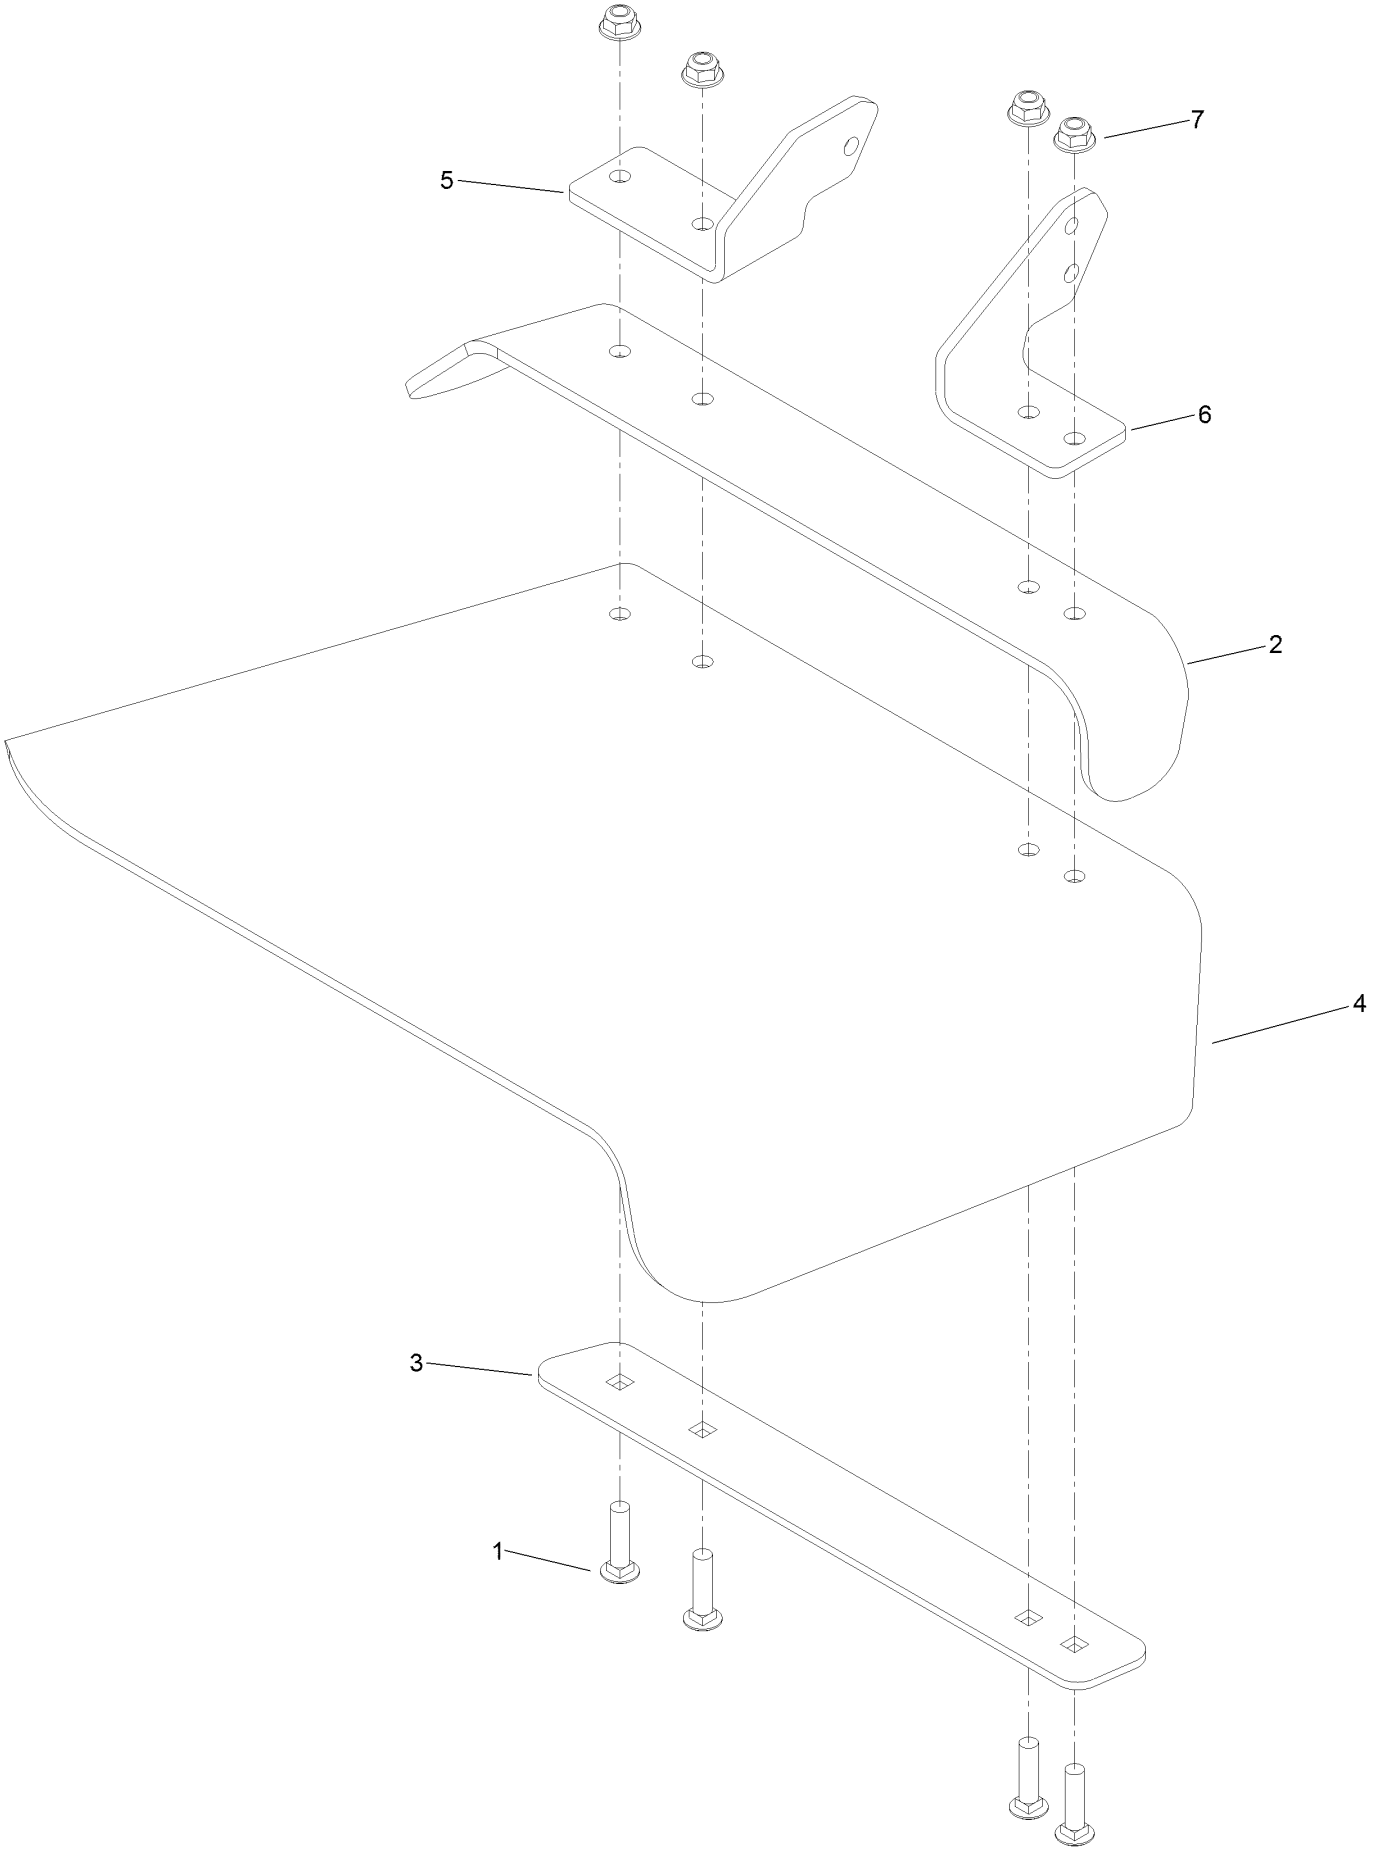

Deflector Assembly No. 120-2451 (continued)

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI

Deck Decal Assembly No. 126-8957

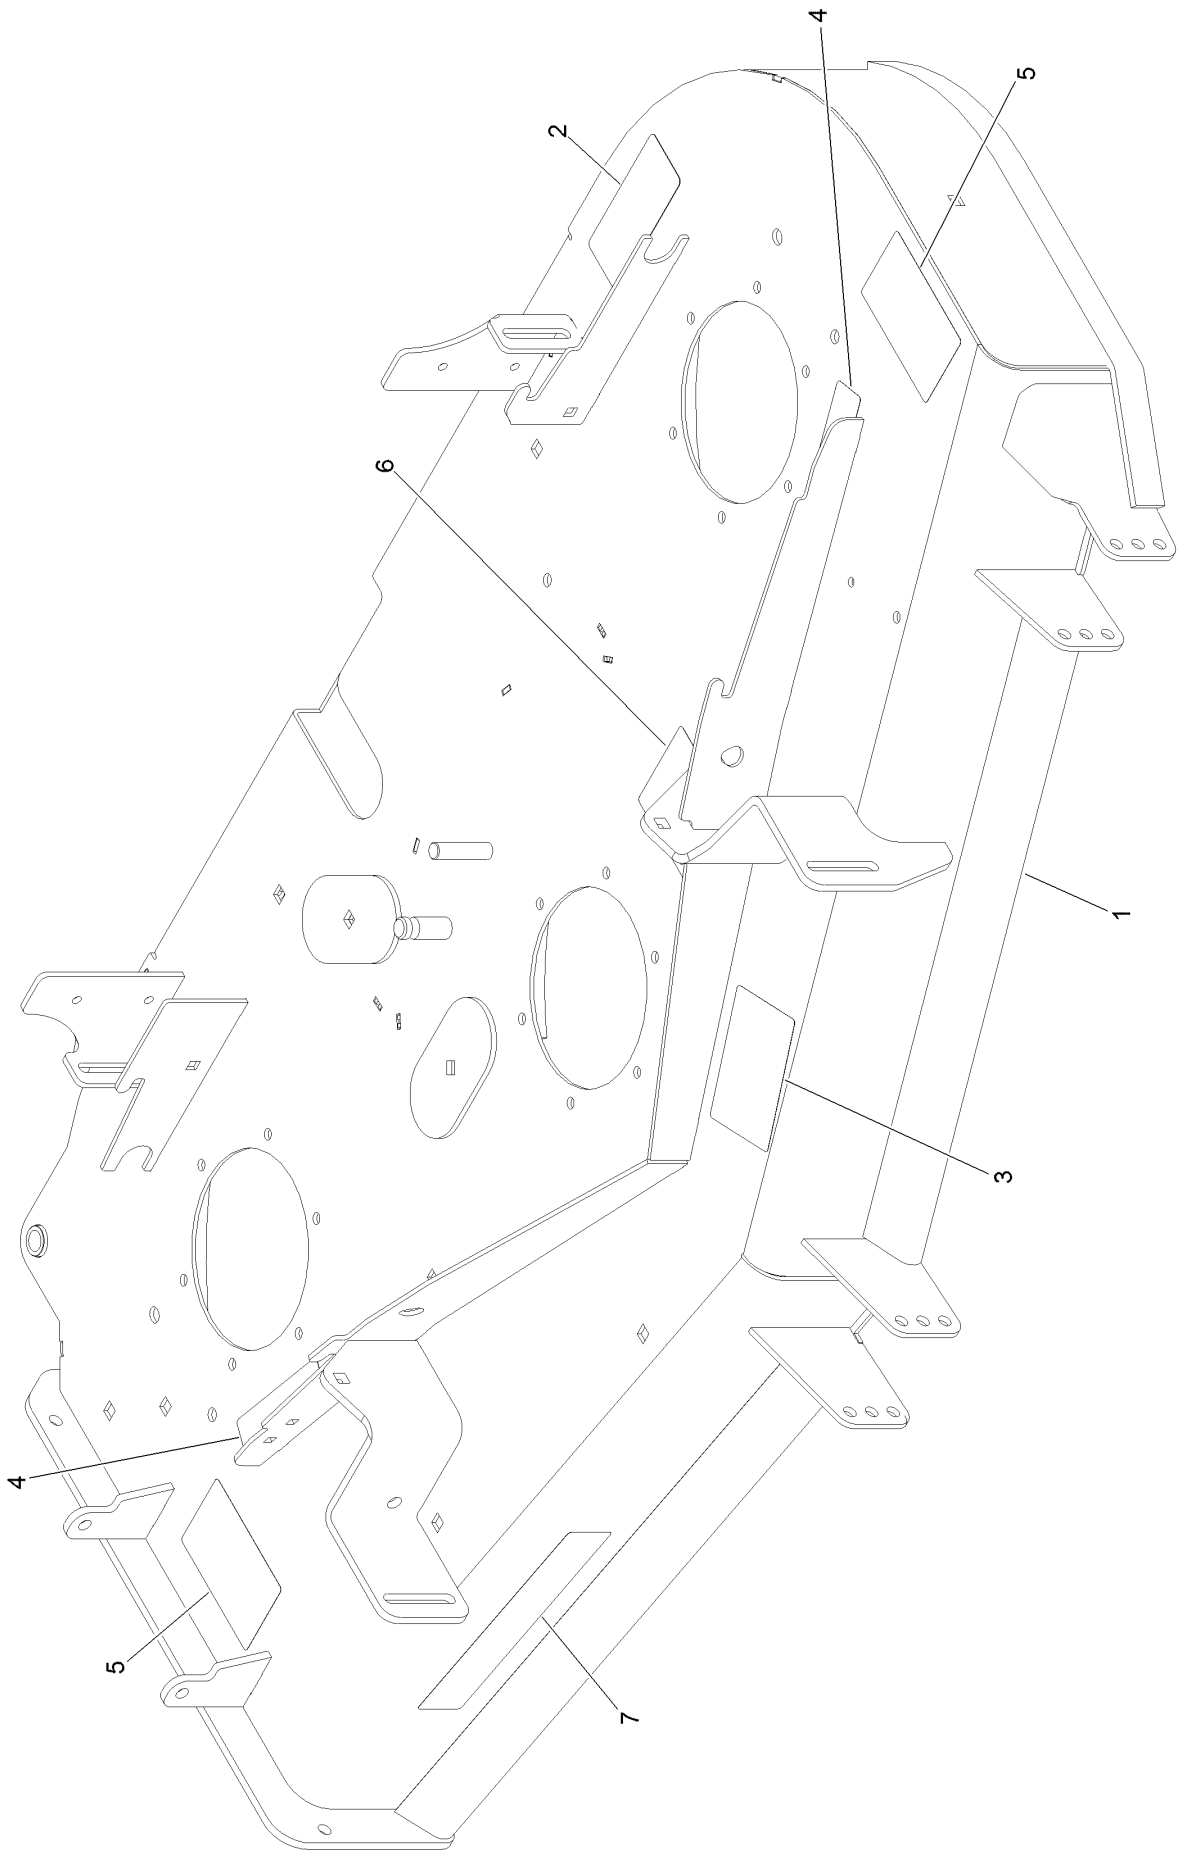



Deck Decal Assembly No. 126-8957 (continued)


Ref.	Part Number	Qty.	Description
1		1	Deck Decal ASM ●
2	93-7818	1	Decal-Torque, Blade Bolt
3	112-3858	1	Decal-Scalp, Anti
4	112-9028	2	Decal-Cover, Missing
5	117-3848	2	Decal-Danger
6	117-1194	1	Decal-Routing, Belt
7	121-3205	1	Decal


● Not serviced separately

Fuel System Assembly

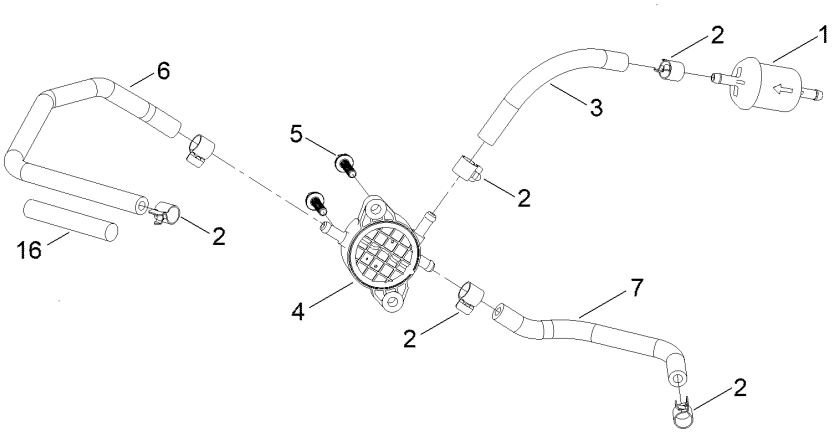

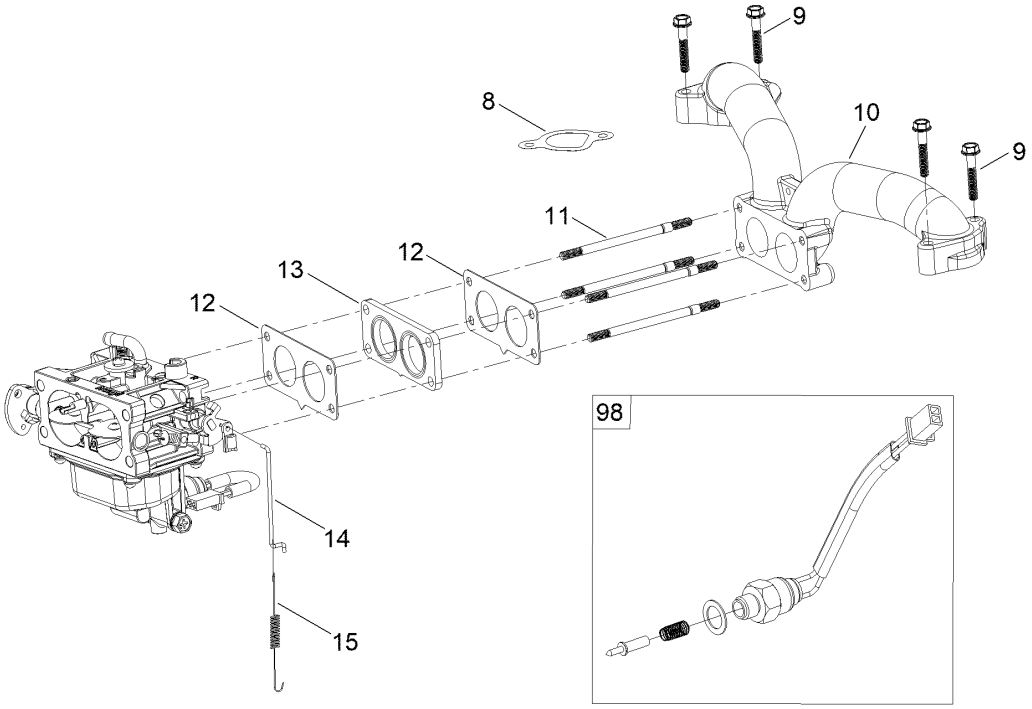

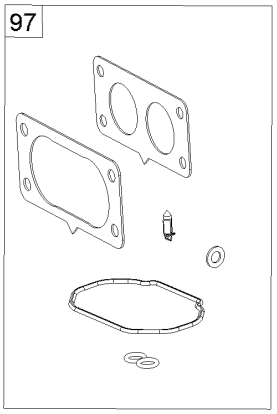

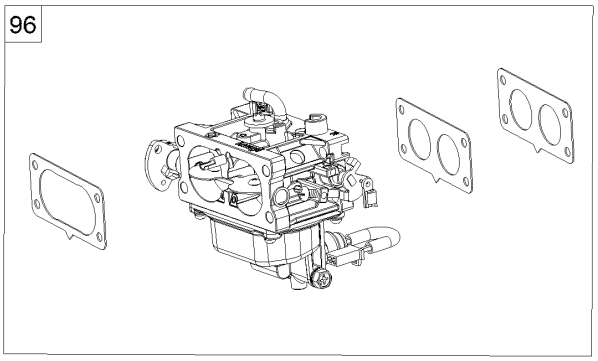


Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-0717	1	Filter-Fuel
2	139-0719	6	Clamp-Fuel Hose
3	120-4371	1	Hose-Fuel
4	139-0684	1	Pump-Fuel
5	120-4225	2	Screw-HHF
6	127-9205	1	Hose-Fuel
7	127-9207	1	Hose-Fuel
8	127-9230	2	Gasket-Intake
9	120-4284	4	Screw-HHF
10	127-9244	1	Manifold-Intake
11	127-9245	4	Stud
12	127-9246	2	Gasket-Carburetor
13	127-9247	1	Insulator-Carburetor
14	133-9963	1	Linkage-Throttle
15	133-9964	1	Spring-Return, Throttle
16	127-9355	1	Sleeve-Fuel Line Protector
96	136-7842	1	Carburetor Replacement Kit ASM
97	127-9290	1	Carburetor Repair Kit
98	127-9292	1	Solenoid Kit
99	136-7838	1	High Altitude Kit ●

● Not illustrated

Carburetor Assembly

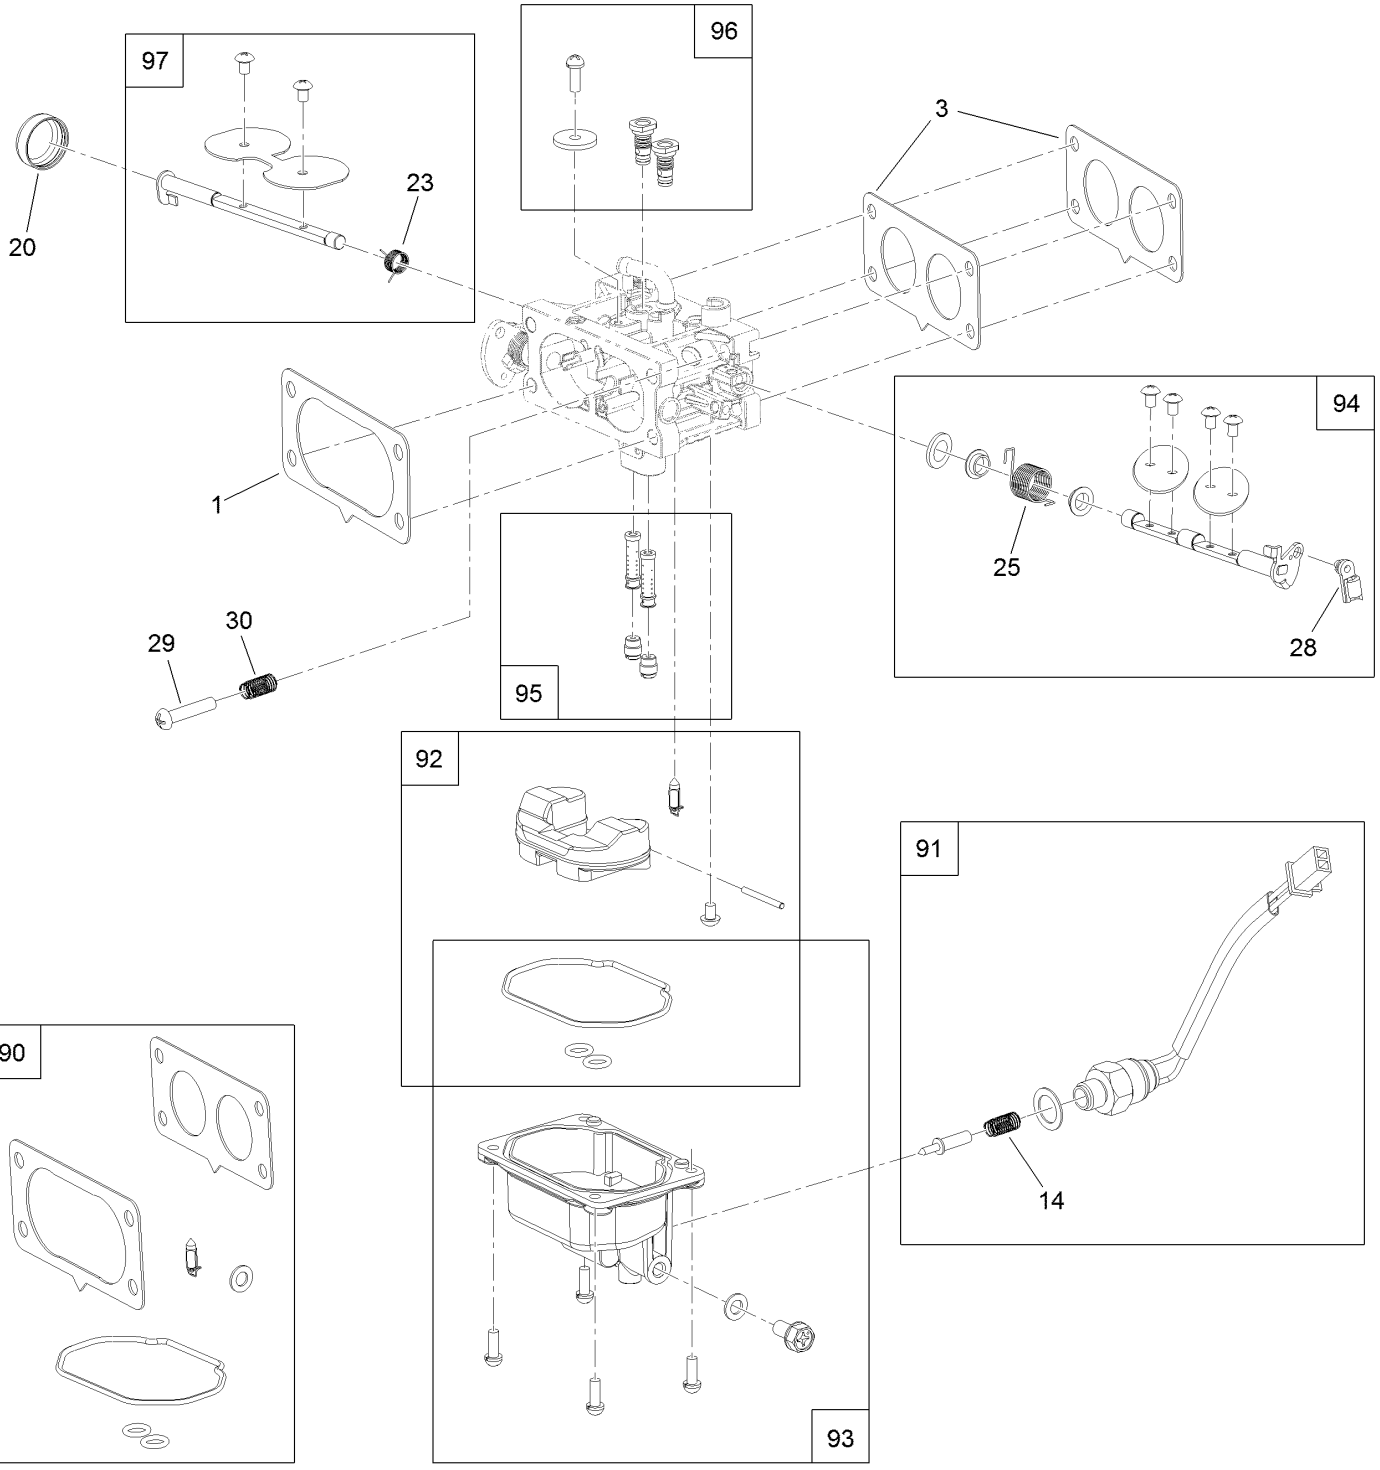


Carburetor Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9251	1	Gasket-Carburetor
3	127-9246	2	Gasket-Carburetor
14	127-9319	1	Spring
20	127-9325	1	Cover-Shaft, Choke
23	127-9328	1	Spring
25	127-9330	1	Spring
28	127-9333	1	Clamp-Lock
29	127-9334	1	Screw-PPH
30	127-9335	1	Spring

Ref.	Part Number	Qty.	Description
90	127-9290	1	Carburetor Repair Kit
91	127-9292	1	Solenoid Kit
92	127-9340	1	Float Kit
93	127-9341	1	Bowl Kit
94	133-9817	1	Throttle Shaft Kit
95	136-7846	1	Nozzle And Jet Kit
96	136-7899	1	Idle Jet Kit
97	127-9345	1	Choke Shaft Kit


Air Intake and Filtration Assembly

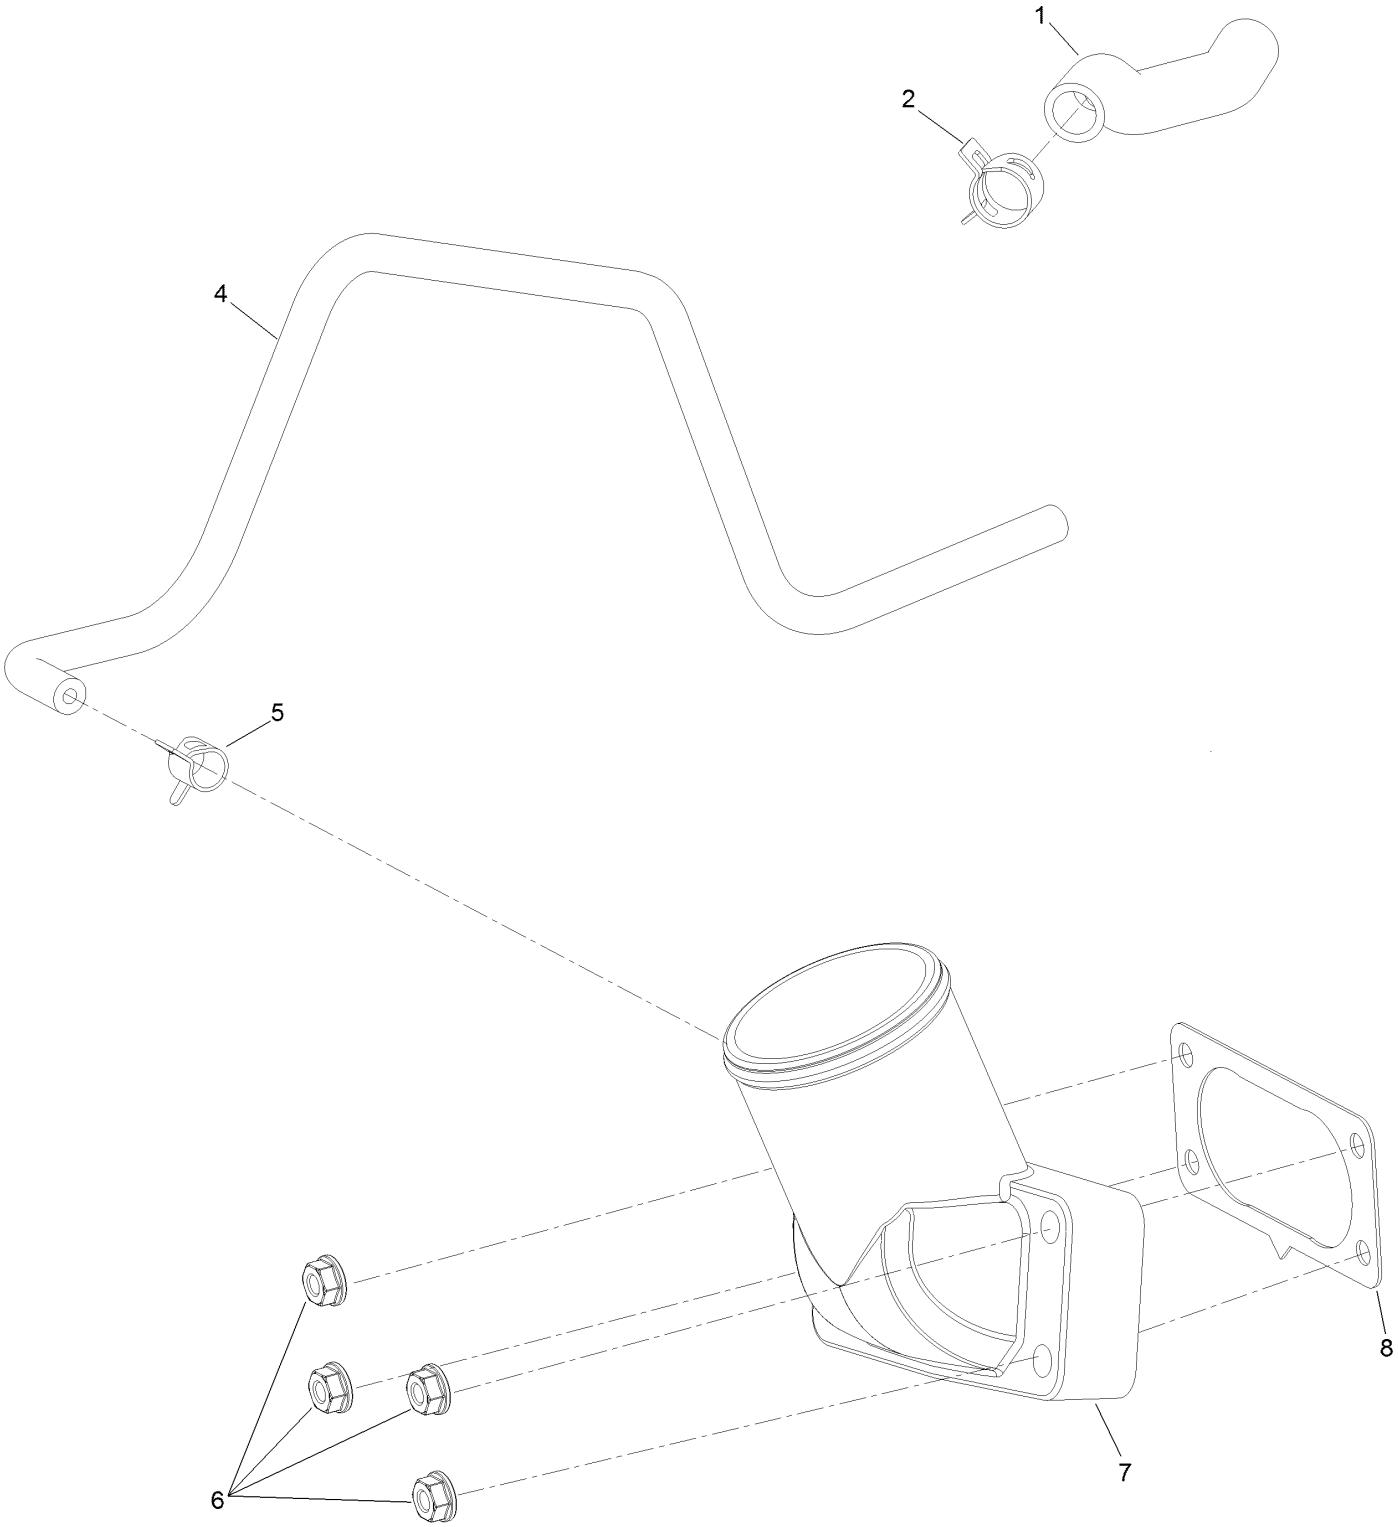

Air Intake and Filtration Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9235	1	Tube-Breather
2	127-9234	2	Clamp-Hose
4	127-9253	1	Hose-Fuel
5	127-9187	1	Clamp-Hose
6	120-4236	4	Nut-Flange
7	136-9241	1	Manifold-Intake
8	127-9251	1	Gasket-Carburetor


Ignition and Cooling Fan Assembly

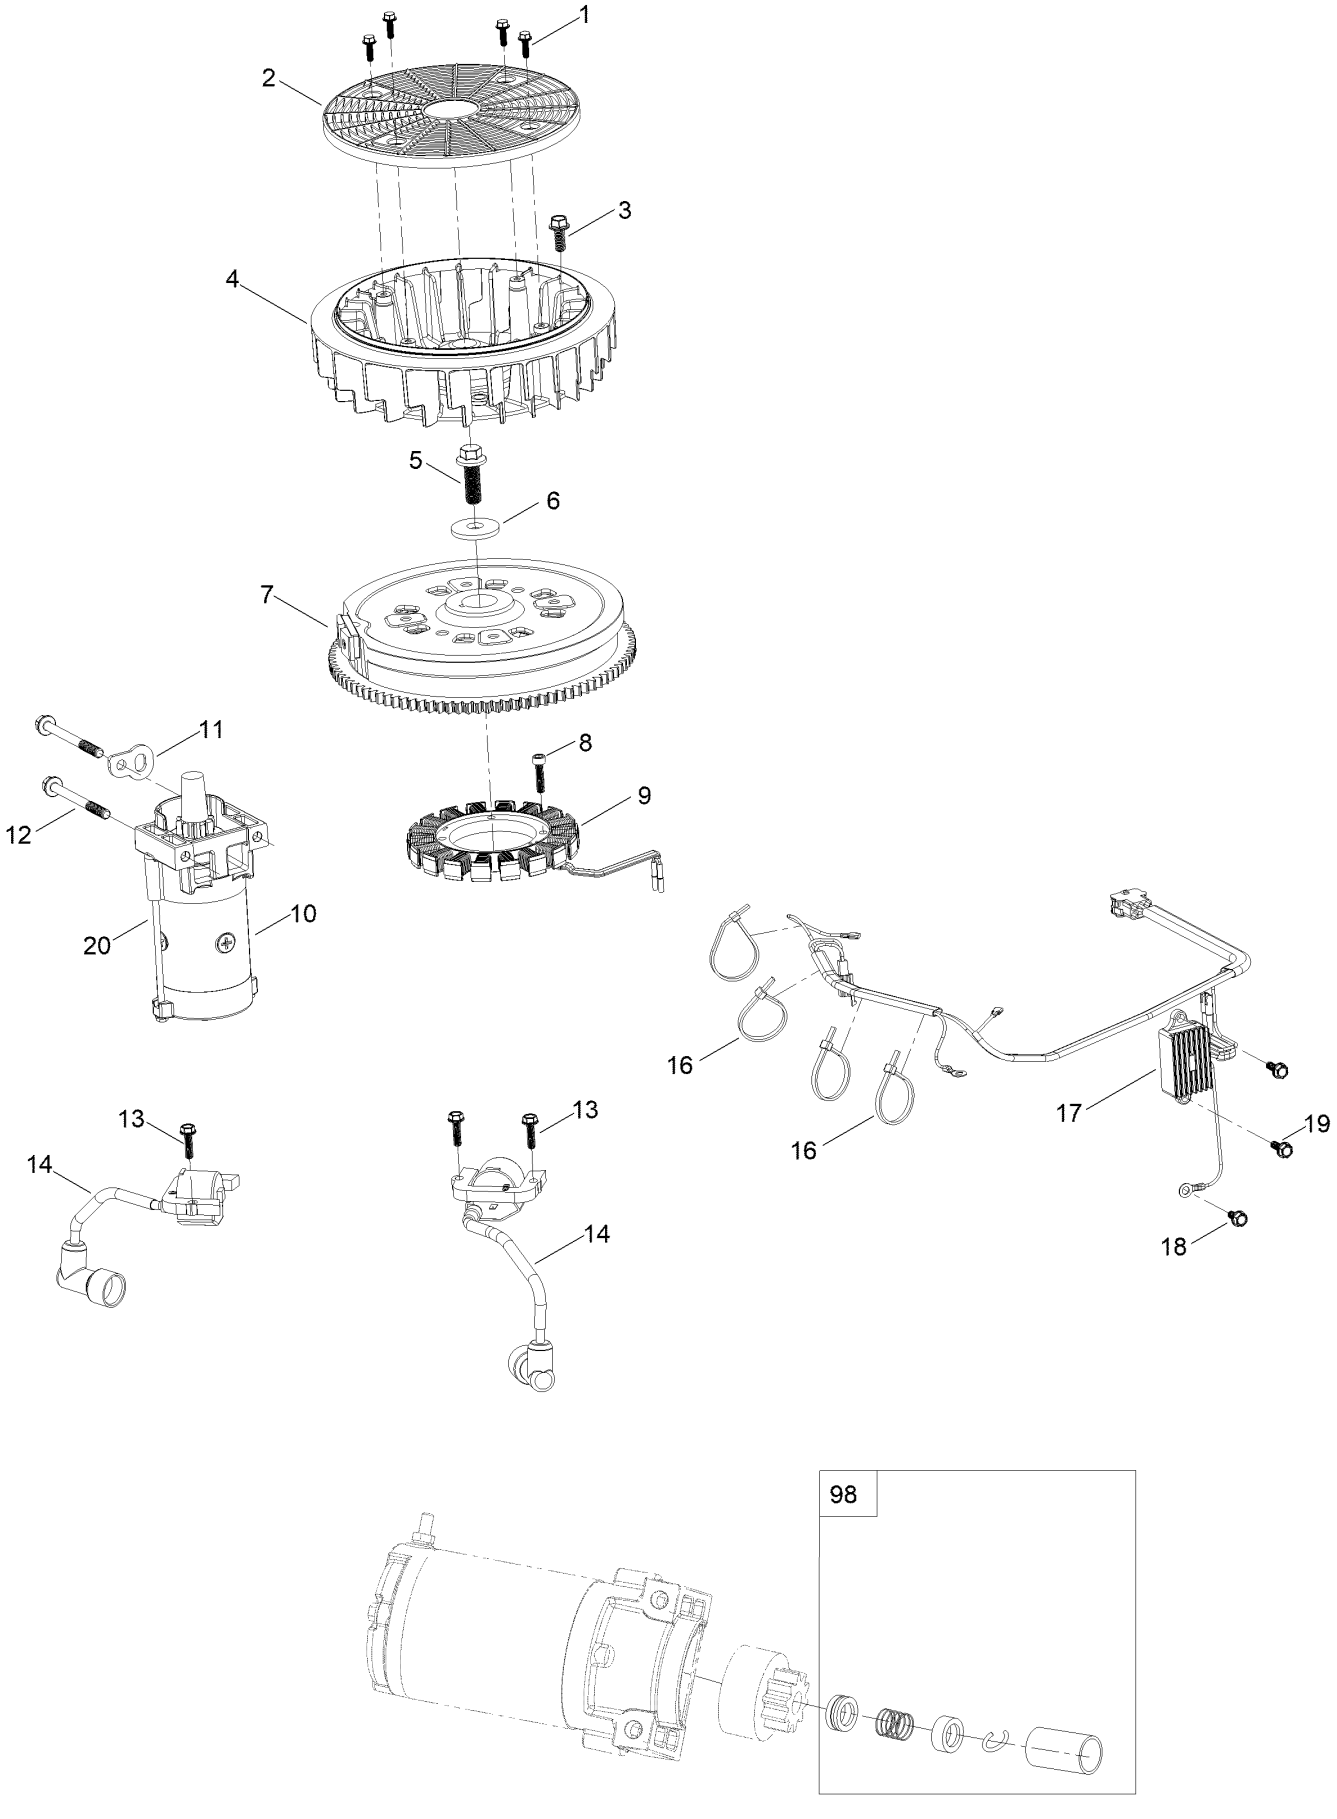

Ignition and Cooling Fan Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9197	4	Screw-HWH
2	127-9198	1	Screen-Rotating
3	127-9199	4	Screw-HWH
4	127-9200	1	Fan-Cooling
5	127-9201	1	Screw-HWH
6	127-9202	1	Washer-Spring
7	127-9306	1	Flywheel
8	127-9210	4	Screw-HSH
9	136-7876	1	Alternator
10	136-7880	1	Motor-Starter
11	127-9208	1	Bracket-Lift
12	120-4231	2	Screw-HHF
13	121-0007	4	Bolt-Flange
14	139-0720	2	Ignition Coil ASM
16	127-9220	4	Tie-Zip
17	136-7879	1	Regulator-Voltage, W/Harness
18	120-4216	1	Screw-HHF
19	120-4232	2	Screw-HHF
20	133-1562	1	Pinion-Starter
98	133-1566	1	Starter Repair Kit


Crankcase and Crankshaft Assembly

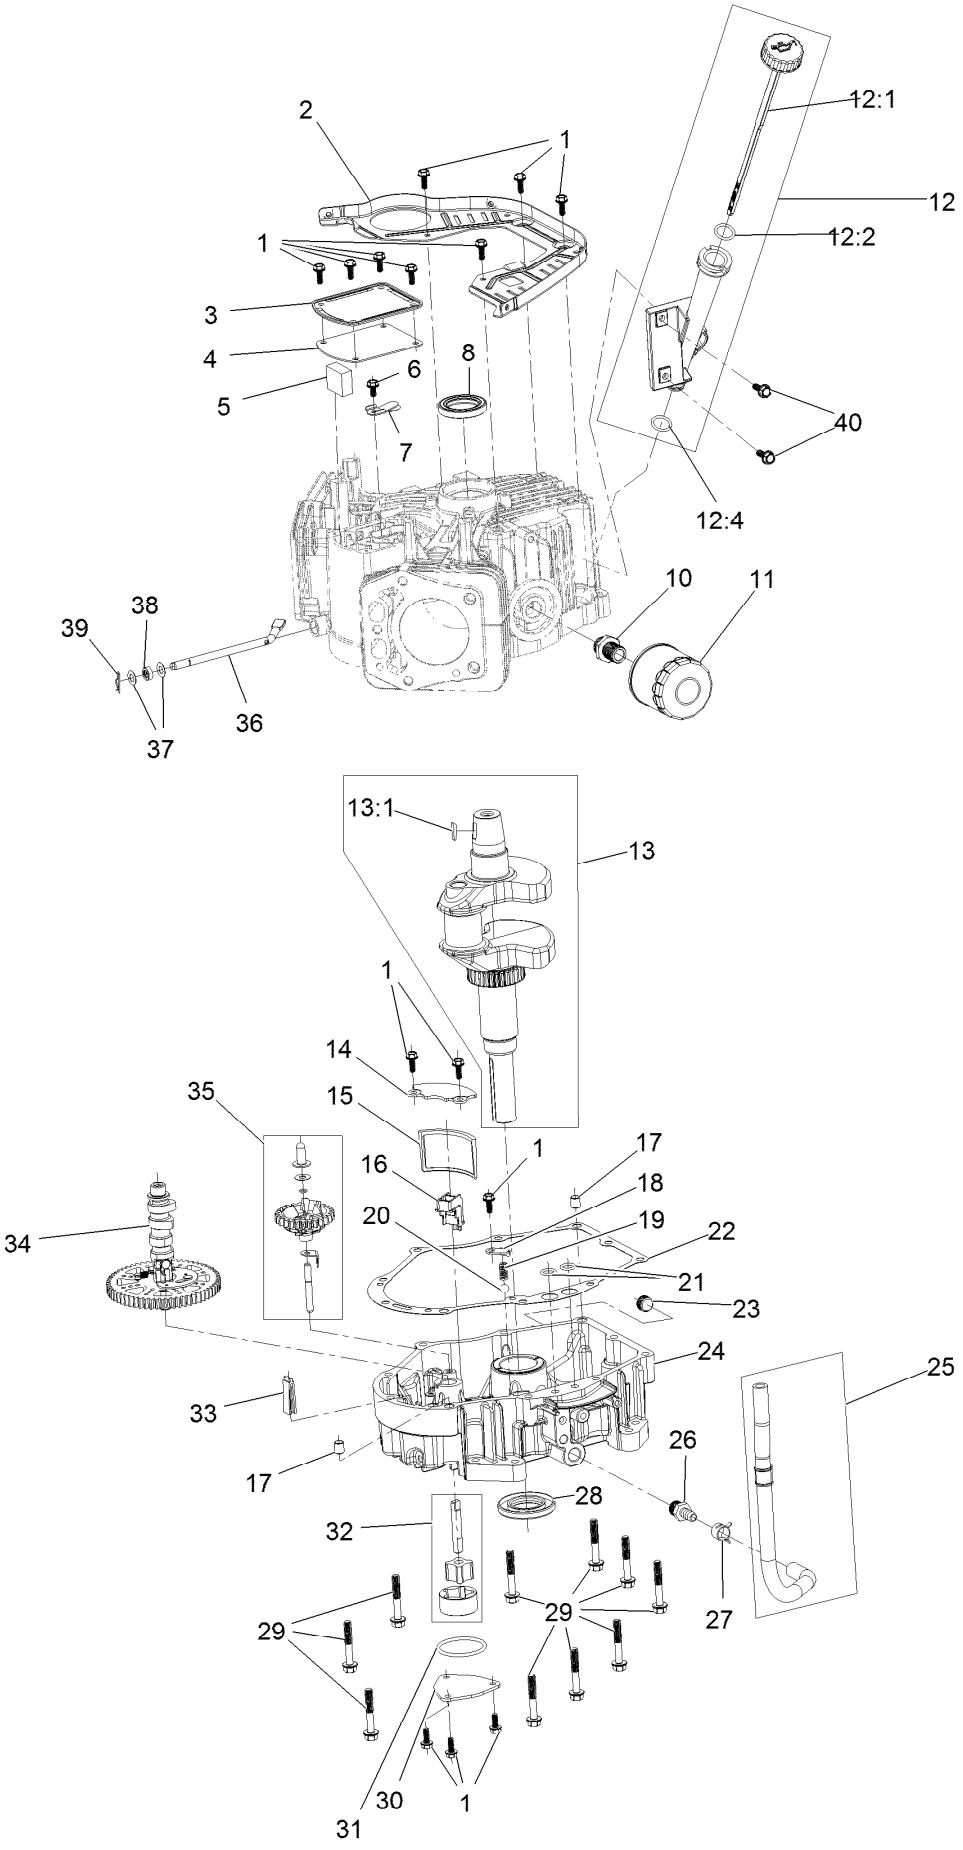

Crankcase and Crankshaft Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-4232	14	Screw-HHF
2	127-9212	1	Baffle
3	127-9213	1	Cover-Breather
4	127-9214	1	Gasket-Breather
5	127-9215	1	Filter-Breather
6	120-4216	1	Screw-HHF
7	127-9217	1	Valve-Breather
8	120-4267	1	Seal-Oil
10	136-7884	1	Adaptor-Filter, Oil
11	136-7848	1	Filter-Oil
12	127-9218	1	Oil Tube ASM
12:1	127-9283	1	Dipstick
12:2	127-9284	1	O-Ring
12:4	127-9286	1	O-Ring
13	127-9255	1	Crankshaft
13:1	120-4320	1	Key-Woodruff
14	127-9261	1	Cover-Screen, Oil
15	127-9262	1	Screen-Oil
16	127-9263	1	Retainer-Screen
17	120-4274	2	Pin-Dowel
18	127-9264	1	Plate-Retainer
19	127-9265	1	Spring
20	127-9266	1	Valve-Ball
21	120-4262	2	O-Ring
22	127-9267	1	Gasket-Cover, Crankcase
23	133-9805	1	Plug-Drain
24	133-9806	1	Cover-Crankcase
25	127-9293	1	Oil Drain Hose ASM
26	127-9275	1	Fitting-Hose
27	127-9276	1	Clamp-Hose
28	127-9271	1	Seal
29	121-0473	10	Screw-HHF
30	127-9274	1	Cover-Oil Pump
31	127-9273	1	O-Ring
32	127-9272	1	Oil Pump ASM
33	120-4275	1	Deflector-Oil, Rubber
34	133-1568	1	Camshaft
35	136-7882	1	Governor ASM
36	127-9238	1	Shaft-Governor
37	120-4258	2	Washer-Plain
38	120-4257	1	Seal-Oil
39	120-4256	1	Pin-Hair
40	120-4232	2	Screw-HHF


Governor Control Assembly

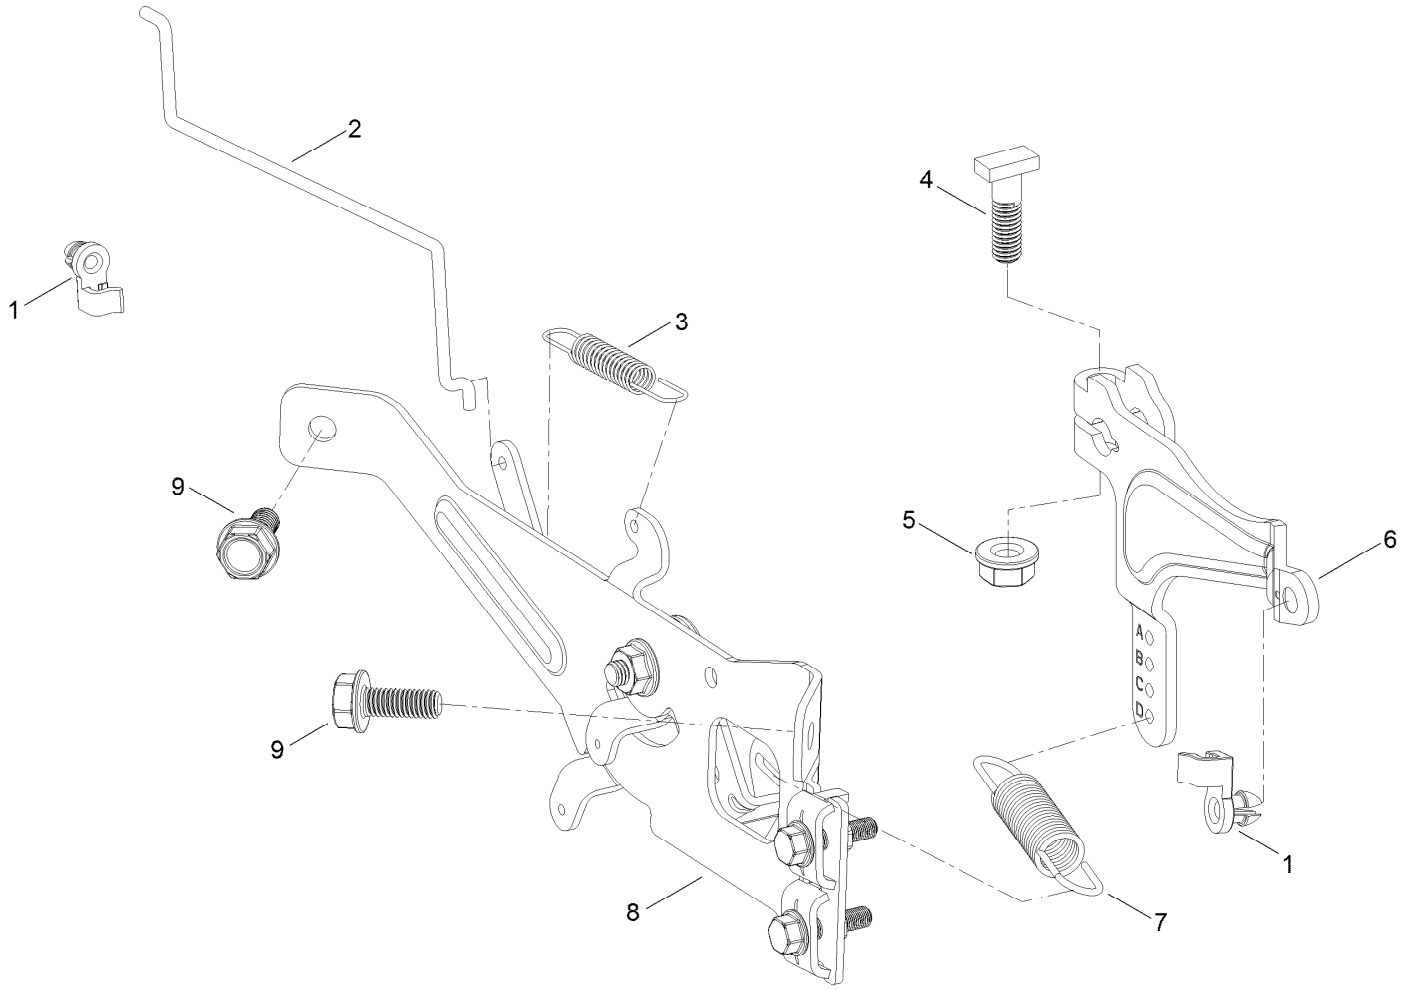

Governor Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9250	2	Clip-Linkage
2	127-9242	1	Linkage-Choke
3	127-9241	1	Spring-Governor
4	120-4238	1	Bolt-Arm, Governor
5	120-4236	1	Nut-Flange
6	133-9961	1	Arm-Governor
7	133-9962	1	Spring-Governor
8	133-1570	1	Control Plate ASM
9	120-4232	2	Screw-HHF


Piston and Cylinder Head Assembly

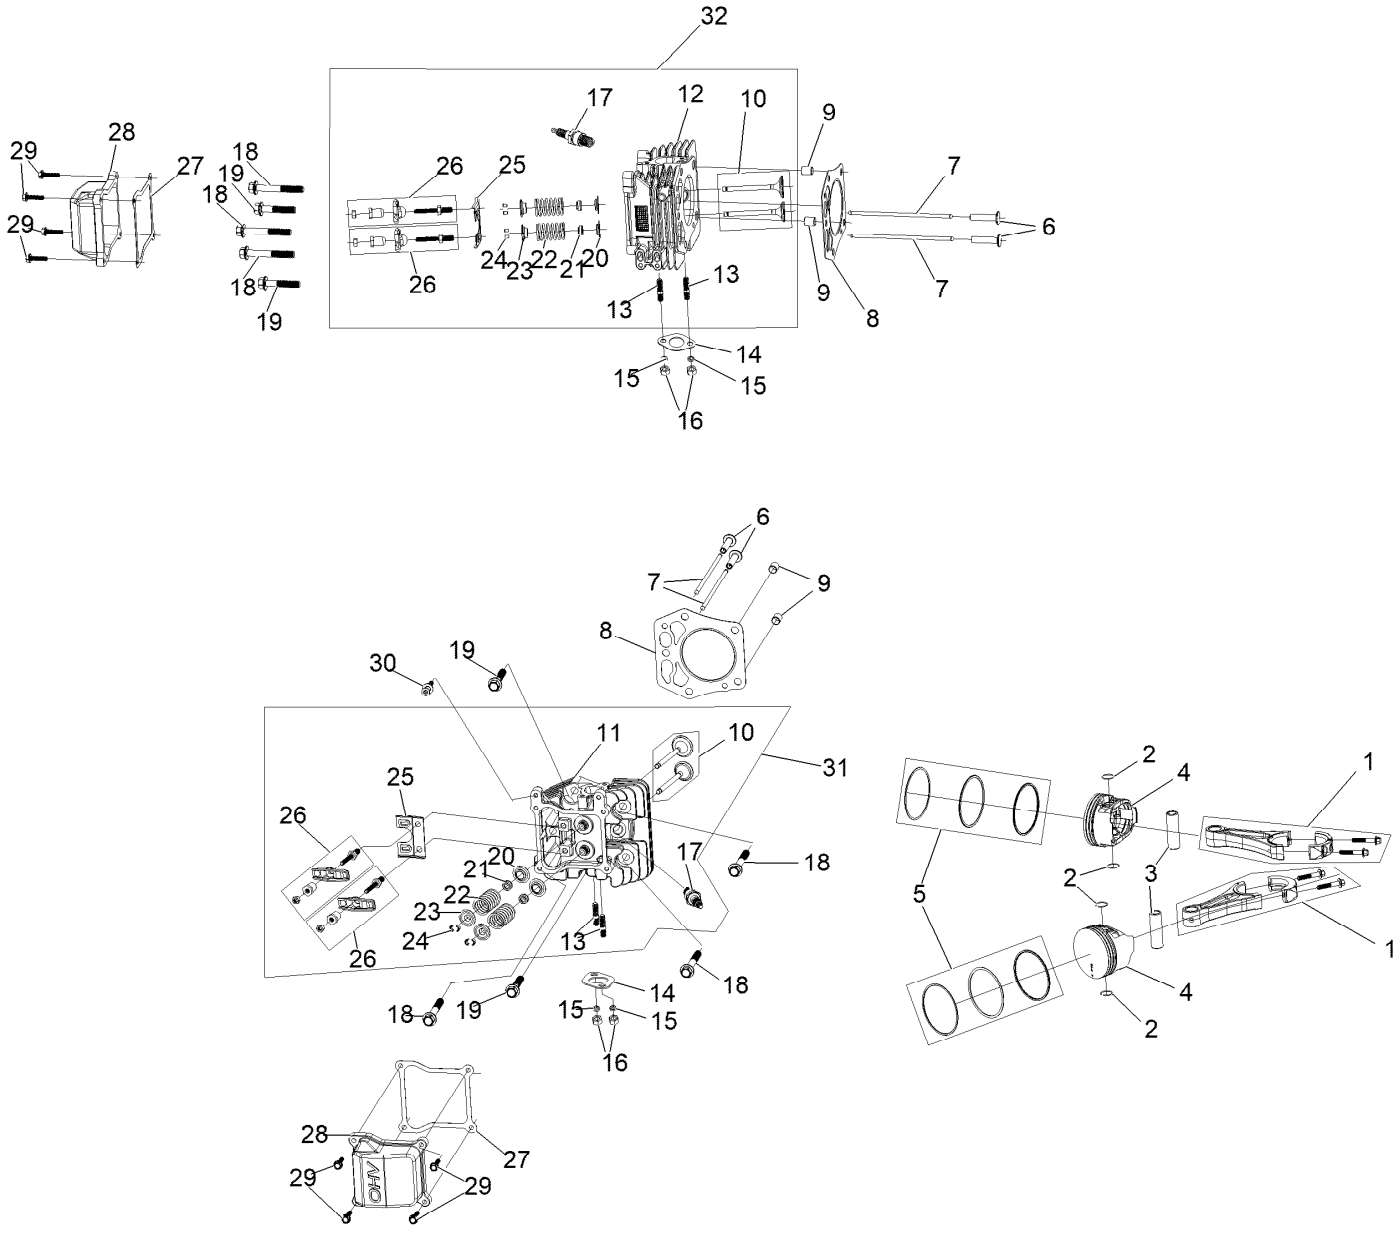

Piston and Cylinder Head Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9256	2	Connecting Rod ASM
2	127-9258	4	Clip-Pin, Piston
3	127-9257	2	Pin-Piston
4	127-9259	2	Piston
5	127-9260	2	Piston Ring Set
6	127-9224	4	Lifter-Valve
7	127-9225	4	Rod-Push
8	127-9226	2	Gasket-Head, Cylinder
9	127-9227	4	Pin-Dowel
10	127-9228	2	Valve Set
11	133-9802	1	Head-Cylinder, Right
12	133-9804	1	Head-Cylinder, Left
13	121-0464	4	Stud-Exhaust
14	120-4317	2	Gasket-Exhaust
15	127-9279	4	Washer-Lock, Split
16	121-0199	4	Nut-HH
17	81-3250	2	Spark Plug
18	127-9231	6	Screw-HWH
19	127-9232	4	Screw-HWH
20	120-4303	4	Seat-Spring, Valve
21	120-4304	4	Seal-Stem, Valve
22	120-4305	4	Spring-Valve
23	120-4306	4	Retainer-Spring, Valve
24	120-4307	8	Keeper-Valve
25	127-9233	2	Plate-Guide, Push Rod
26	136-7881	4	Rocker Arm ASM
27	127-9295	2	Gasket-Valve Cover
28	127-9050	2	Cover-Valve
29	120-4225	8	Screw-HHF
30	120-4214	1	Screw-Shoulder, HH
31	136-7891	1	Complete Right Head ASM
32	136-7892	1	Complete Left Head ASM


Blower Housing Assembly

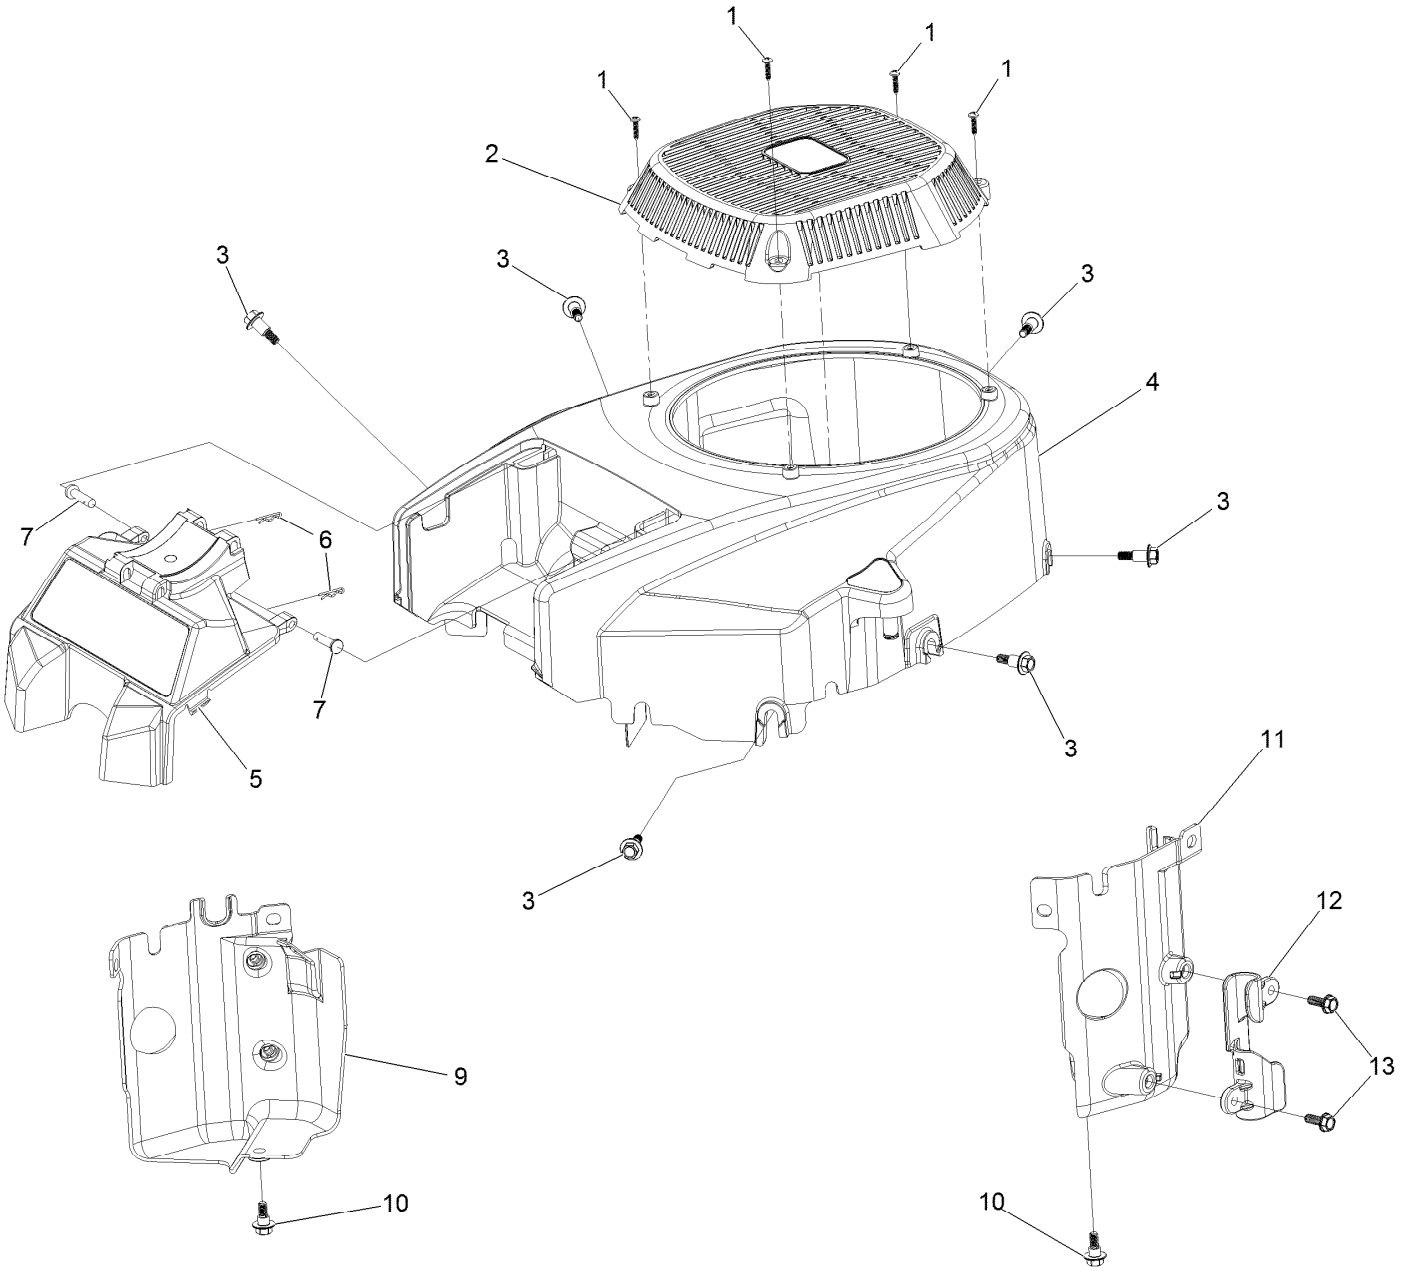

Blower Housing Assembly (continued)

Ref.	Part Number	Qty.	Description
1	133-1571	4	Screw-PPH, Plastic
2	127-9045	1	Cover-Fan
3	127-9196	6	Screw-Shoulder, HWH
4	133-1572	1	Shroud-Engine
5	136-5585	1	Support-Filter
6	127-9280	2	Pin-Hair
7	127-9282	2	Pin
9	136-7877	1	Baffle-Air, Left
10	120-4210	2	Screw-Shoulder, HHF
11	136-7878	1	Baffle-Air, Right
12	127-9287	1	Cleat-Hose
13	120-4232	2	Screw-HHF

Gasket and Seal Kit

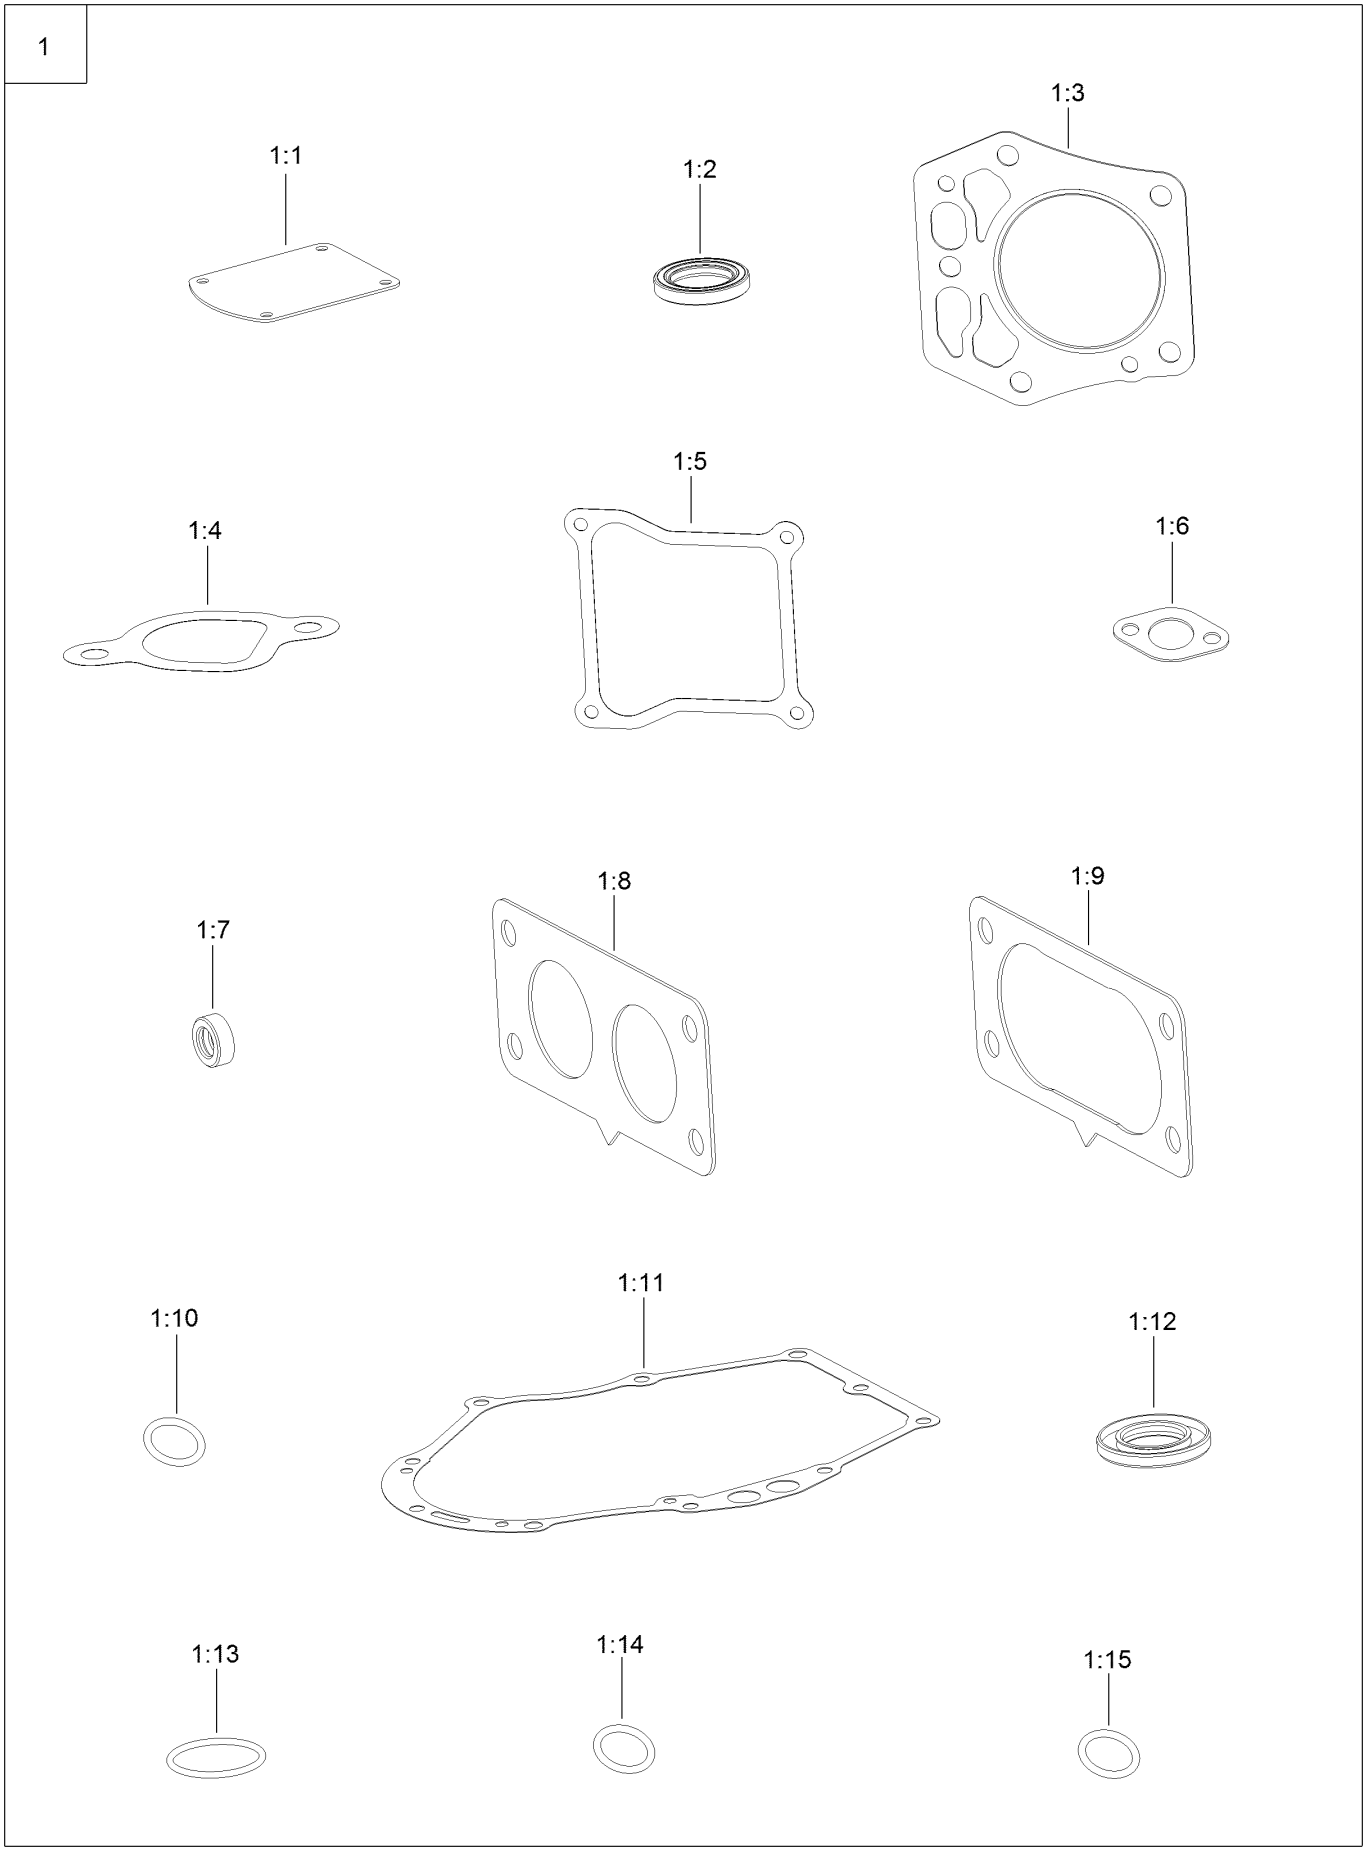

Gasket and Seal Kit (continued)

Ref.	Part Number	Qty.	Description
1	127-9296	1	Gasket And Seal Kit
1:1	127-9214	1	Gasket-Breather
1:2	120-4267	1	Seal-Oil
1:3	127-9226	2	Gasket-Head, Cylinder
1:4	127-9230	2	Gasket-Intake
1:5	127-9295	2	Gasket-Valve Cover
1:6	120-4317	2	Gasket-Exhaust
1:7	120-4257	1	Seal-Oil
1:8	127-9246	2	Gasket-Carburetor
1:9	127-9251	1	Gasket-Carburetor
1:10	120-4262	2	O-Ring
1:11	127-9267	1	Gasket-Cover, Crankcase
1:12	127-9271	1	Seal
1:13	127-9273	1	O-Ring
1:14	127-9284	1	O-Ring
1:15	127-9286	1	O-Ring

Attachments and Accessories

For 74491 52in Z Master Professional 2000 Series Riding Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Toro Hydro Kit	121-3783
LED Light Kit	126-5382
Front Bucket Bracket Kit	126-7011
Sunshade Kit	126-8077
Cover-Hitch	126-8299
Trash Container Kit	126-8379
Weight Caster Kit	126-8639
52in Recycler Kit	126-8702
Jack Kit	127-6666
MVP Belt and Blade Kit	127-6794
Hi-Back Seat Cover	133-1308
Blade-Rotary, 18.0in (Hi Flow)	133-2134
Blade-Rotary, Atomic 18.0	133-2159
Blade-Rotary, Recycling 18.0in	133-2162
Blade (6 Pack) 18in Hi Flow	133-2175
Blade (6 Pack) 18in Recycle	133-2178
Blade (6 Pack) 18in Atomic	133-2181
5 Gallon Bucket	133-2533
Trimmer Mount Kit	136-1682
ROPS Pin Kit	136-1683
High Altitude Kit	136-7838
Bucket Mount Kit	136-9045
Universal Mount Kit Mower	136-9046
Titan HD Triple Threat Attachment Kit	136-9047
Extended Control Levers Kit, Dedicated-Bagging Riding Mower	138-6020
Maintenance Kit Toro	139-0649
Hardtop Sun Canopy (articulating)	140-4367
Canopy Cam Lock Service Kit	140-9485
Toro Deluxe Rider Cover	490-7319
E-Z Vac Std Blower Kit 52in 5d	78402
Heavy Duty Bagger Kit	78431
52in Completion Kit (Heavy Duty Bagger)	78434
Standard EZ Vac Bagger	78481
52in Completion Kit (Standard Bagger)	78484

Notes:

Notes:

Notes:



Count on it.