Form No. 3455-853 Rev B

TORO®

Count on it.

Parts Catalog

Z Master® Professional 6000 Series Riding Mower

with 72in TURBO FORCE® Side Discharge Mower

Model No. 72968—Serial No. 412413921 and Up

Register at www.Toro.com.
Original Instructions (EN)

3455-853 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Seat Frame Suspension Assembly 4
Main Frame Assembly 6
Roll-Over Protection System Assembly No. 116-0231 8
Caster Fork and Wheel Assembly 10
Hydraulic Drive Assembly 12
Pump Idler Assembly No. 116-1255 14
LH Hydro Assembly No. 135-7907 16
RH Hydro Assembly No. 135-7908 18
Rear Wheel Assembly 20
Park Brake Assembly 22
Fuel System Assembly 24
Fuel Tank Assembly No. 135-0643 26
Seat Mounting Assembly 28
Seat Assembly No. 139-3641 30
Motion Controls Assembly 32
Console Assembly 34
RH Console Assembly No. 115-7400 36
LH Console Assembly No. 115-7401 38
Electrical Assembly 40
Deck Lift Assembly 42
Height-of-Cut Assembly No. 109-7438 44
Engine, Clutch and Muffler Assembly 46
Deck Assembly 48
Deck Decal Assembly No. 140-1170 50
Rubber Deflector Assembly No. 108-2792 52
Idler Arm Assembly 54
Frame Decal Assembly 56
Attachments and Accessories 58

© 2023—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Seat Frame Suspension Assembly

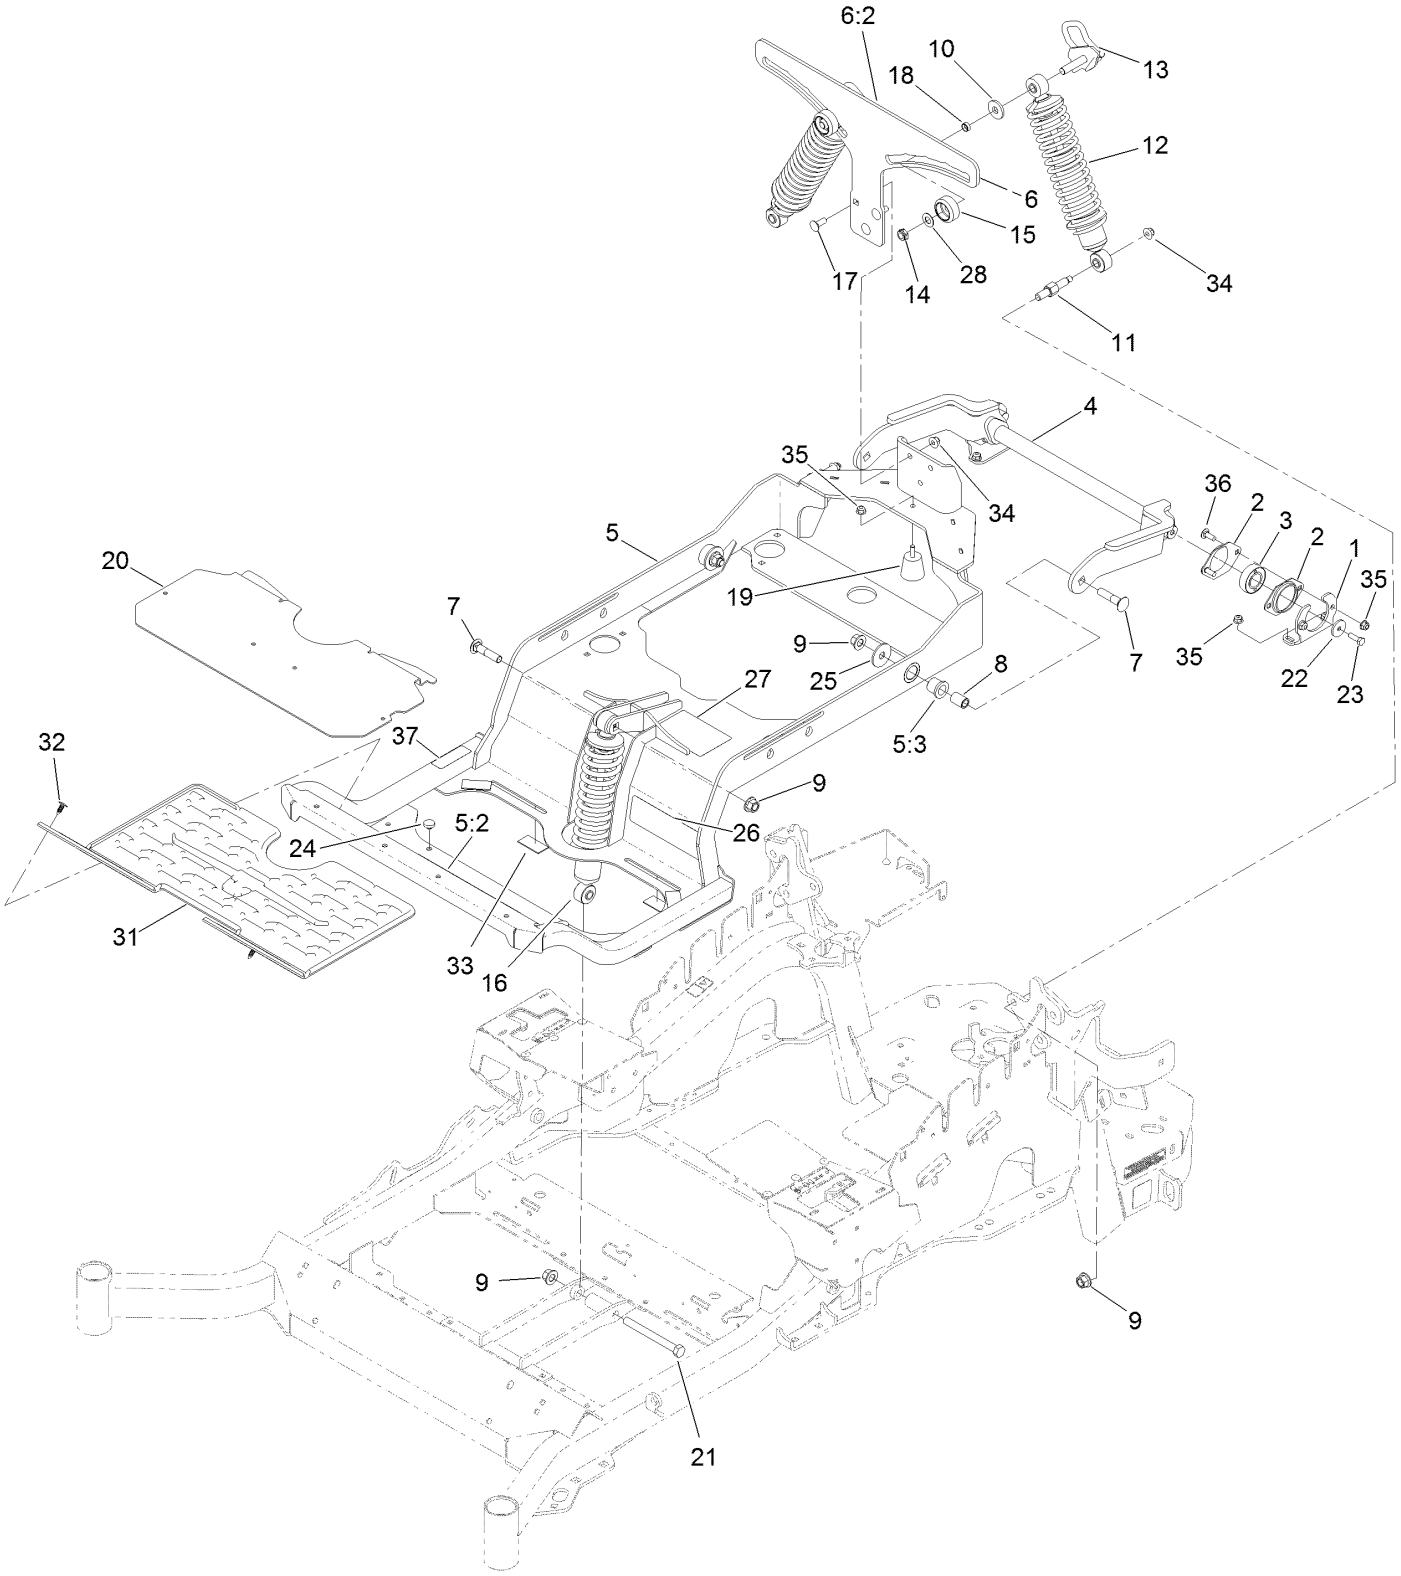

Seat Frame Suspension Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-6759-03	2	Bracket-Bearing
2	127-6743	4	Housing-Bearing, Flange
3	1-653346	2	Bearing
4	127-6754-03	1	Arm-Trailing
5	140-4868	1	Subframe ASM
5:2	132-0871	1	Decal-Danger
5:3	127-6745	2	Bushing-Flange
6	144-2602	1	Bracket-Mounting
6:2	132-5067	1	Decal-Adjustment, Ride
7	127-6768	3	Screw-CARR
8	127-6751	2	Spacer-Aluminum
9	99-5107	6	Nut-Lock
10	131-4699	2	Washer-Plastic
11	131-6348	2	Bolt-Shoulder
12	133-1815	2	Shock/Spring ASM
13	136-9017	2	Cam Lock ASM
14	3296-45	2	Nut-Hex
15	136-5636	2	Knob-Lock, Cam
16	136-1719	1	Shock ASM-Front
16	136-8993	1	Shock/Spring ASM
17	3231-22	3	Screw-CARR
18	133-5109	2	Bearing-Sleeve
19	132-5058	1	Bumper-Rubber
20	144-0381-01	1	Floorpan
21	325-19	1	Screw-HH
22	105-3048	2	Washer-Flat
23	116-0648	2	Screw-HH, Thread Locking
24	1-513658	2	Bumper
25	86-1990	2	Washer-Thrust
26	144-0437	1	Decal-Myride
27	125-9383	1	Decal-Service Aid
28	3-6803	2	Washer-Adjusting
31	144-0355	1	Floormat-Myride
32	117-2382	2	Plug-Plastic
33	130-0733	4	Pad-Rubber
34	104-8301	5	Nut-HF, NI
35	104-8300	9	Nut-HF, NI
36	3230-10	4	Bolt-CARR
37	115-9625	1	Decal-Brake, Parking


Main Frame Assembly

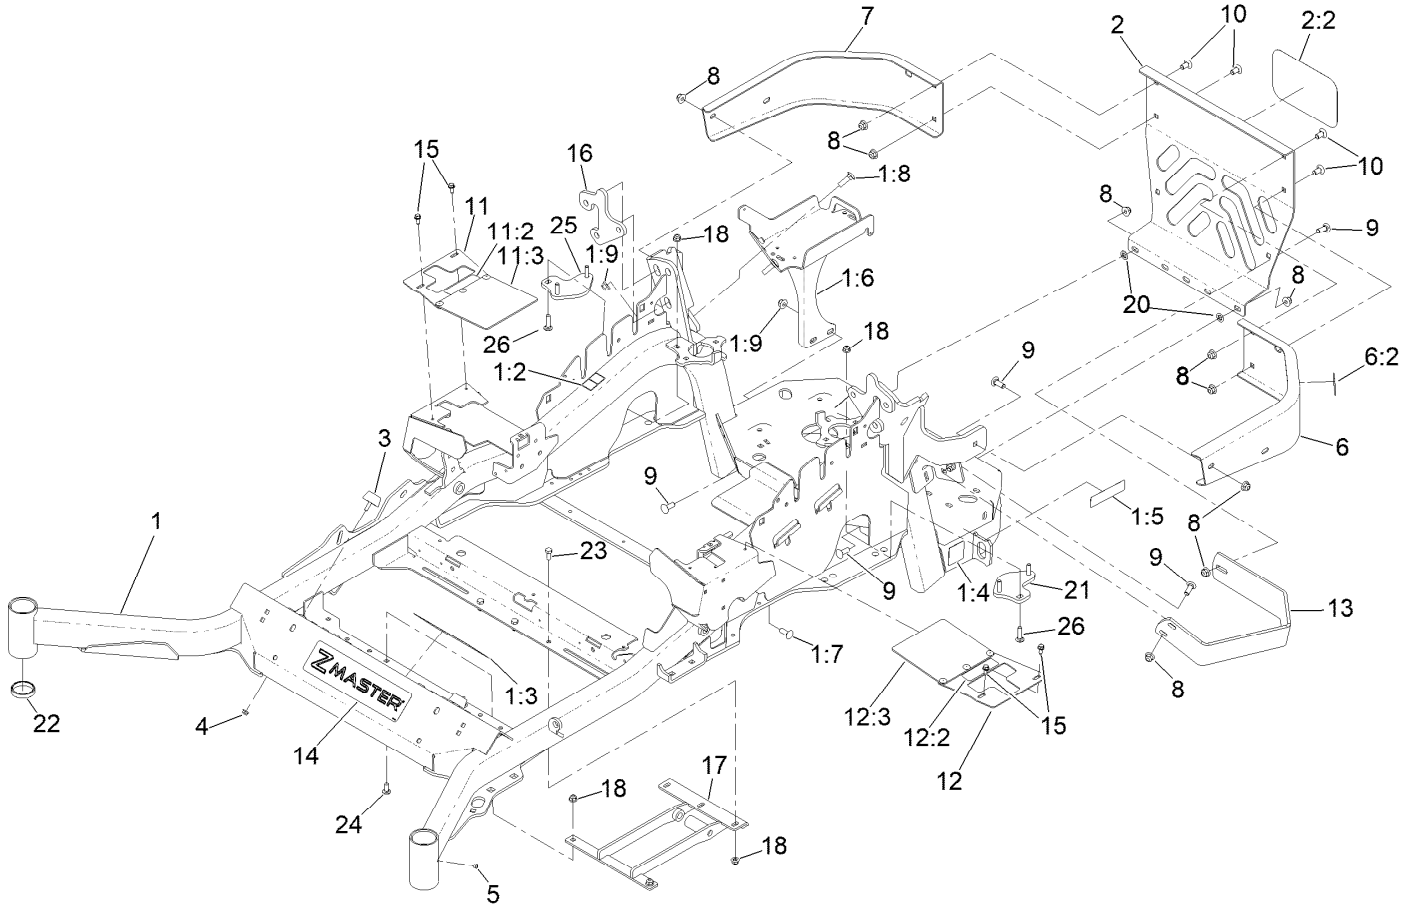

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	142-7266	1	Mainframe Service ASM - 72
1:2	106-5517	2	Decal-Warning
1:3	132-0871	1	Decal-Danger
1:4	106-2655	2	Decal-Hazard, Pinched Finger
1:5	133-8062	1	Decal-Arrestor, Spark
1:6	142-6404-01	1	Battery Mount ASM [red]
1:7	3231-22	2	Screw-CARR
1:8	3231-25	2	Bolt-CARR
1:9	104-8301	4	Nut-HF, NI
2	115-7410	1	Rear Guard ASM
2:2	67-7320	1	Decal
3	131-8834	2	Bumper
4	104-7201	4	Nut-HF, NI
5	1-811010	2	Plug
6	116-0180	1	LH Bumper ASM
6:2	106-5517	1	Decal-Warning
7	116-0057-03	1	Bumper-RH
8	104-8301	15	Nut-HF, NI
9	3231-22	9	Screw-CARR
10	3231-21	4	Screw-CARR
11	131-4615	1	RH Motion Control Cover ASM
11:2	99-8936	1	Decal-Control, Motion
11:3	136-8967	1	Flap-Rubber
12	131-4610	1	LH Motion Control Cover ASM
12:2	99-8936	1	Decal-Control, Motion
12:3	136-8967	1	Flap-Rubber
13	126-2067-03	1	Guard-Muffler
14	140-1215	1	Decal-Console
15	32144-10	4	Screw-HWH
16	136-1674-01	2	Plate-Mount, Shock
17	131-6327-01	1	Mount-Lower
18	104-8300	7	Nut-HF, NI
20	107-3154	2	Nut-Push
21	127-6766	1	LH Plate ASM (W/Studs)
22	1-543508	4	Cup-Bearing
23	322-3	3	Screw-HH
24	3230-23	2	Bolt-CARR
25	127-6765	1	RH Plate ASM (W/Studs)
26	3230-3	2	Screw-CARR

Roll-Over Protection System Assembly No. 116-0231

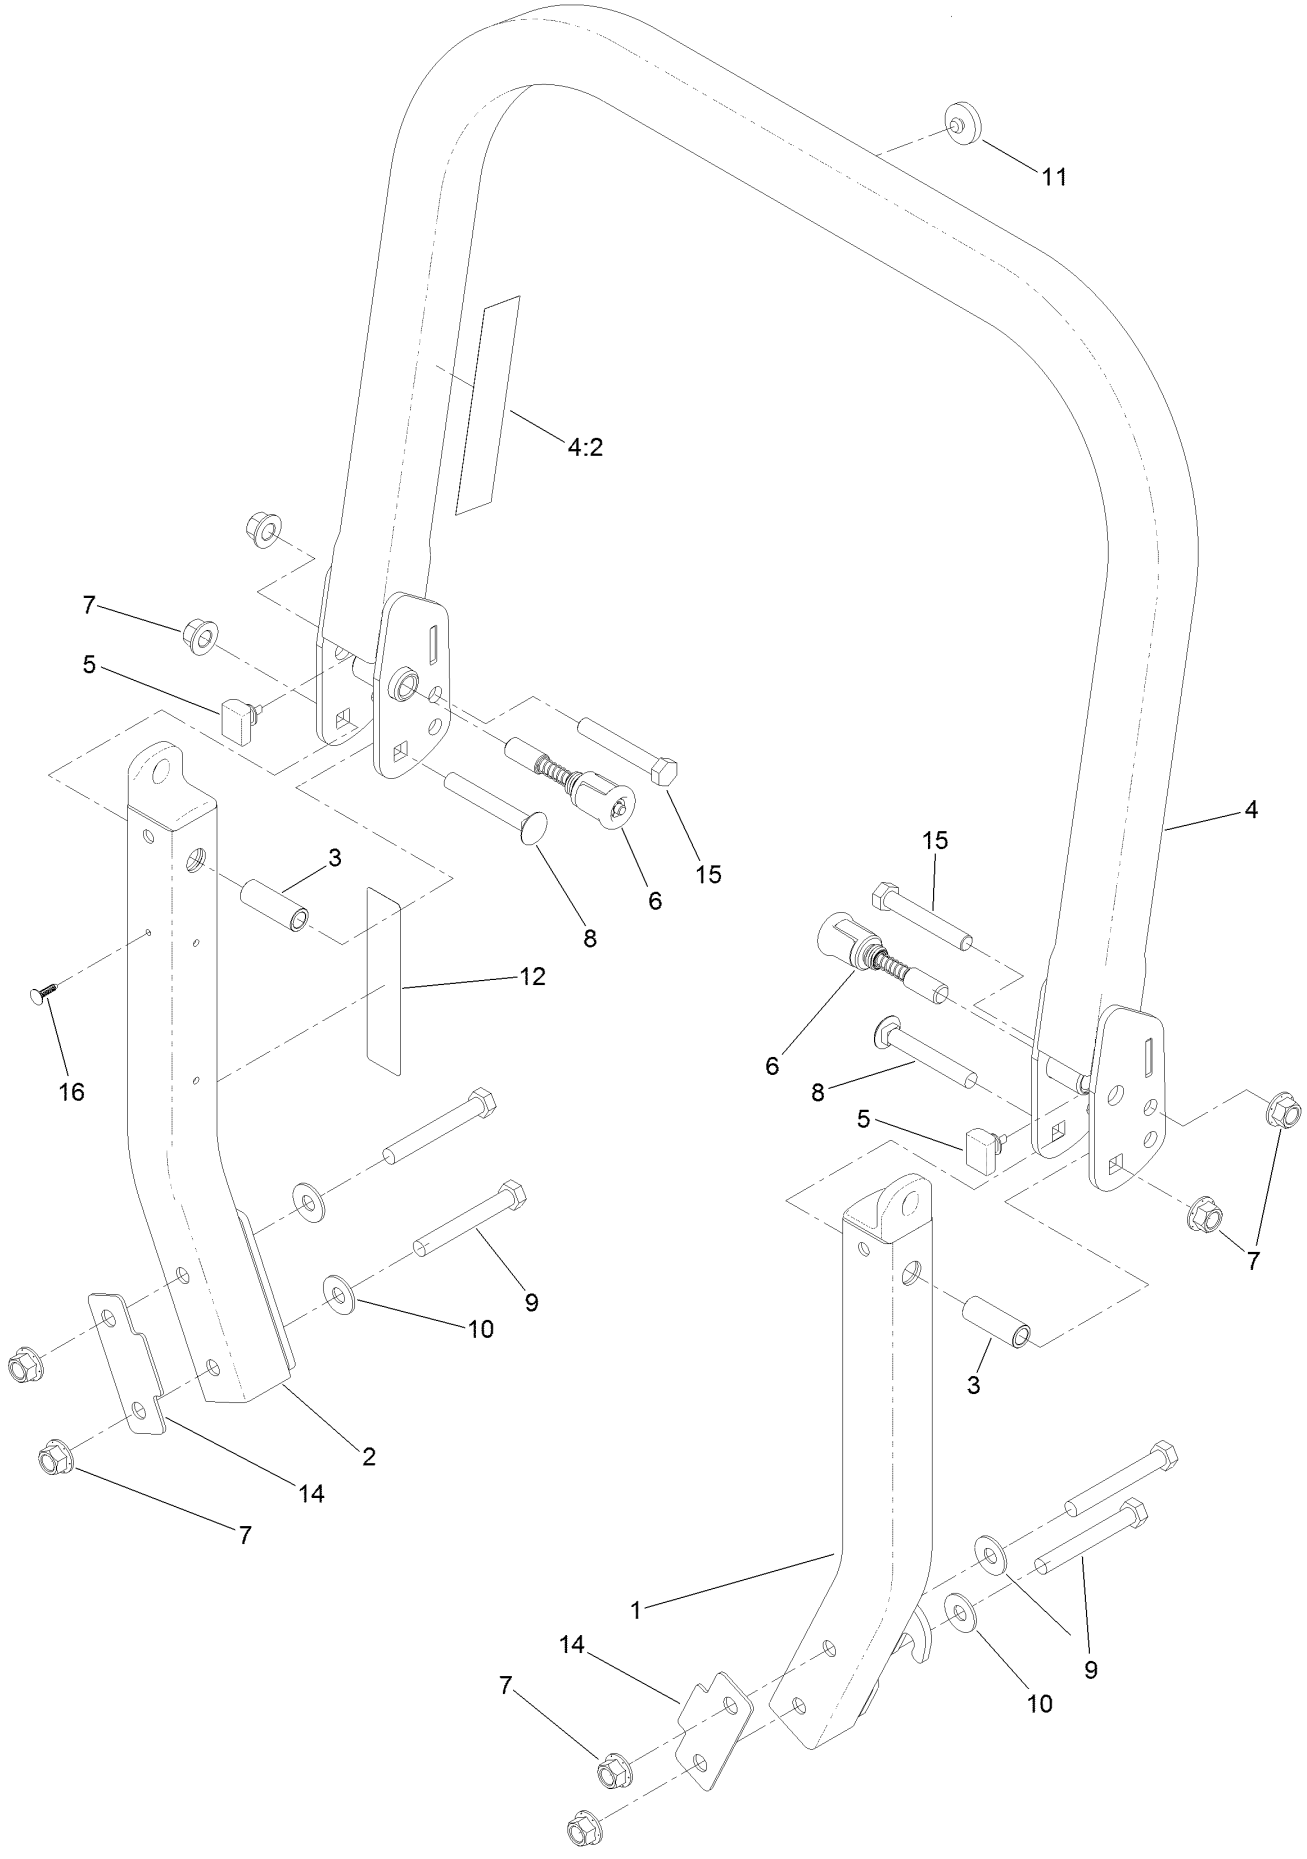


Roll-Over Protection System Assembly No. 116-0231 (continued)

Ref.	Part Number	Qty.	Description
1		1	Leg-ROPS, LH ●
2		1	Leg-ROPS, RH ●
3	109-6653	2	Spacer
4		1	Upper ROPS ASM ●
4:2	107-3069	1	Decal-Warning
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring
7	99-5107	8	Nut-Lock
8	3233-10	2	Screw-CARR
9	325-35	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	117-0346	1	Decal-Caution, Fuel Vent
14	116-0960	2	Spacer
15	325-13	2	Screw-HH
16	125-8067	1	Plug-Plastic

● Not serviced separately

Caster Fork and Wheel Assembly

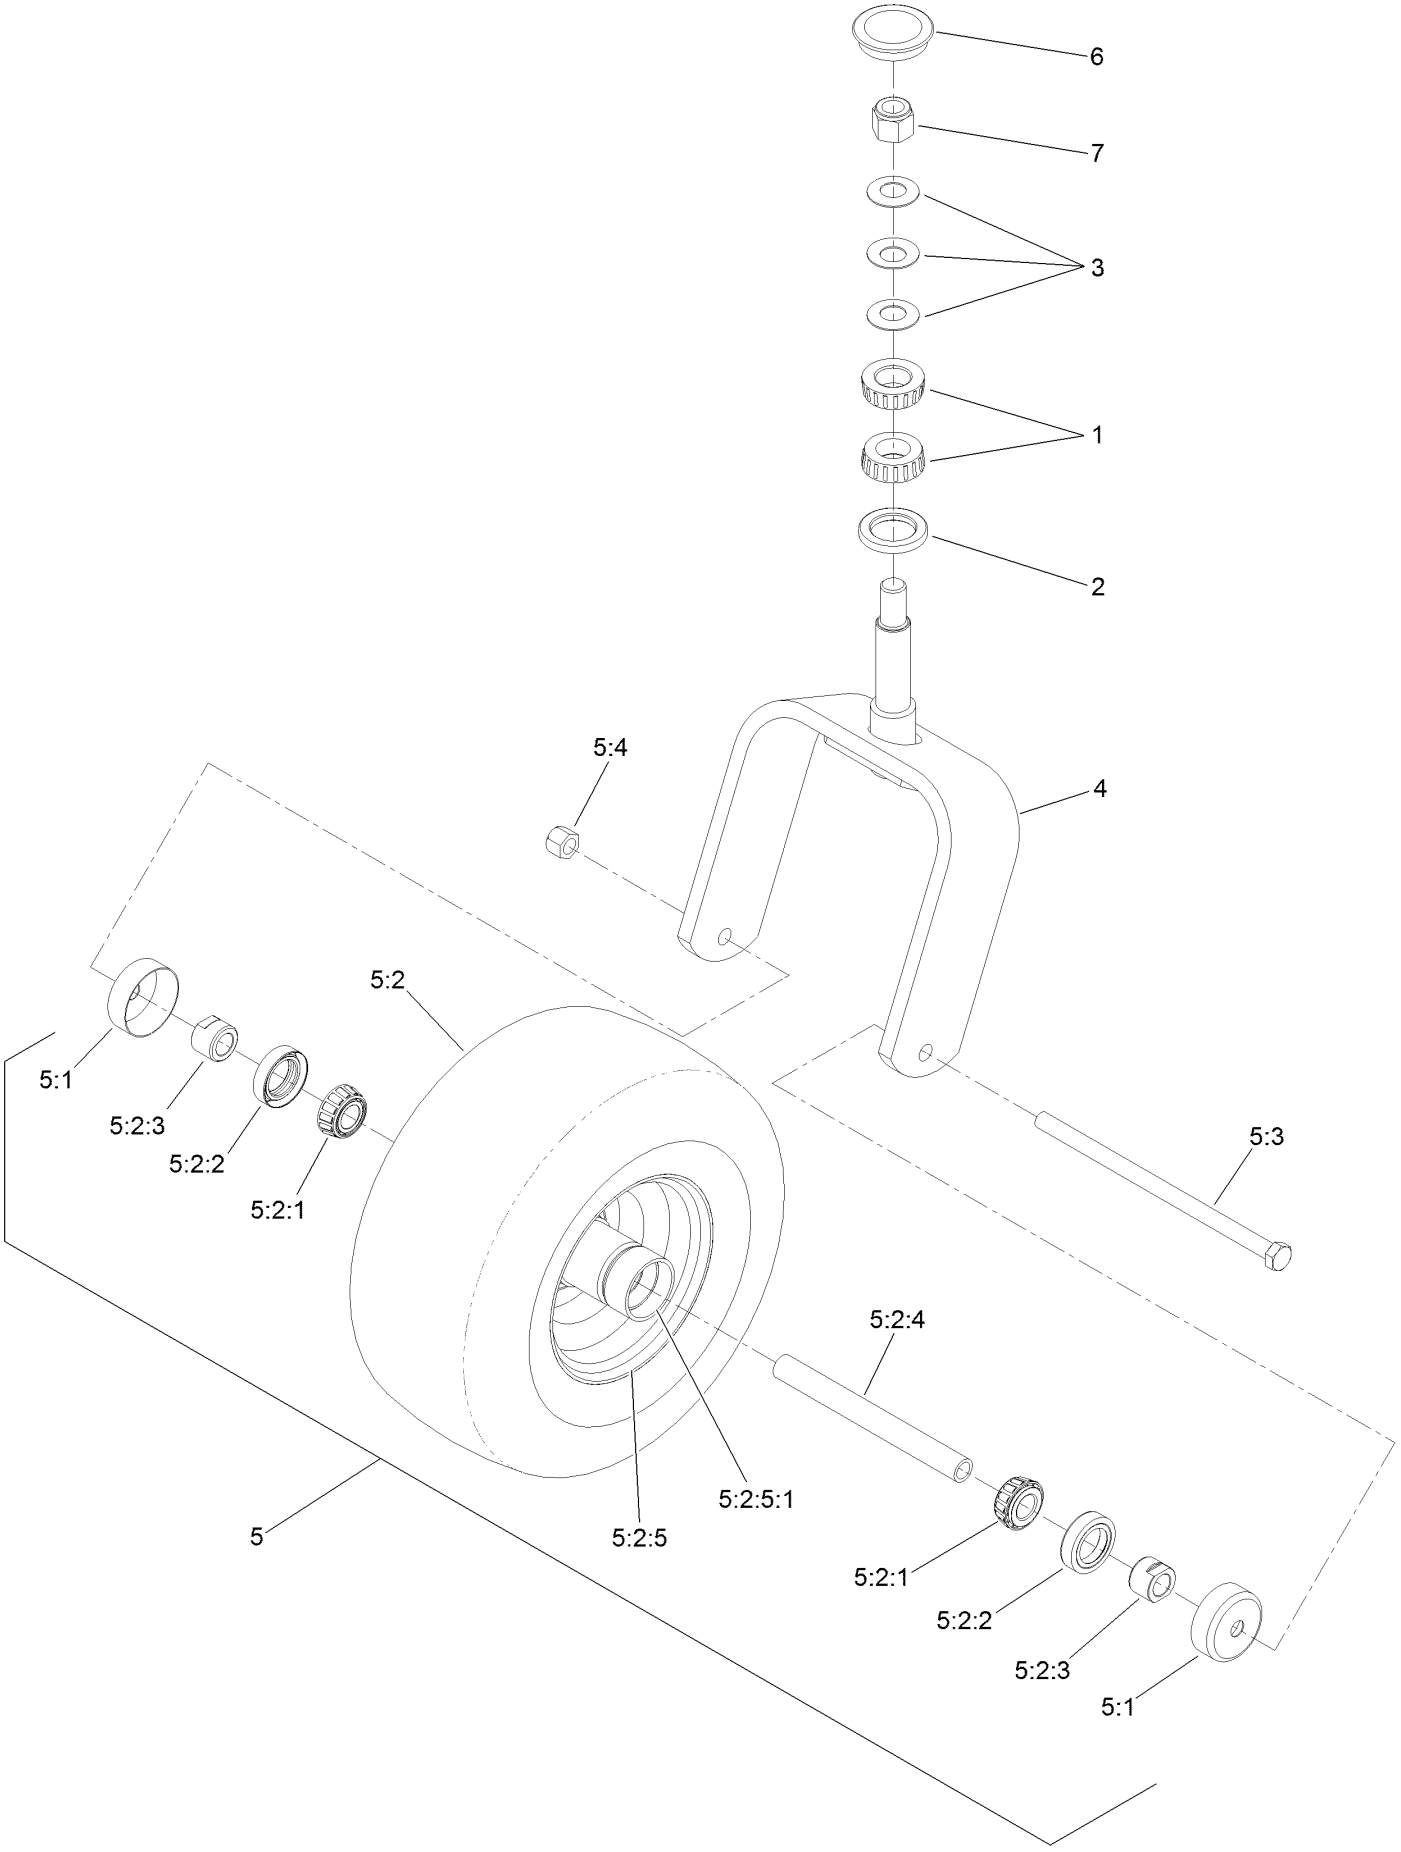


Caster Fork and Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-543509	2	Bearing-Roller, Tapered
2	116-5647	1	Seal-Grease
3	1-633508	3	Washer-Bellville
4	116-6707-01	1	Caster
5	127-9528	1	Wheel And Axle ASM
5:1	103-2768	2	Guard-Seal
5:2		1	Wheel And Bearing ASM ●
5:2:1	1-633585	2	Bearing-Cone, Taper
5:2:2	103-0063	2	Seal-Caster
5:2:3	103-3051	1	Spacer-Nut ■
5:2:4	126-5361	1	Axle Caster ASM
5:2:5		1	Wheel And Tire ASM ●
5:2:5:1	1-633584	2	Bearing-Cup
5:3	325-39	1	Screw-HH
5:4	3296-23	1	Nut-Lock, NI
6	103-4882	1	Cap-Grease
7	3296-51	1	Nut-Lock, NI

● Not serviced separately
■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

Hydraulic Drive Assembly

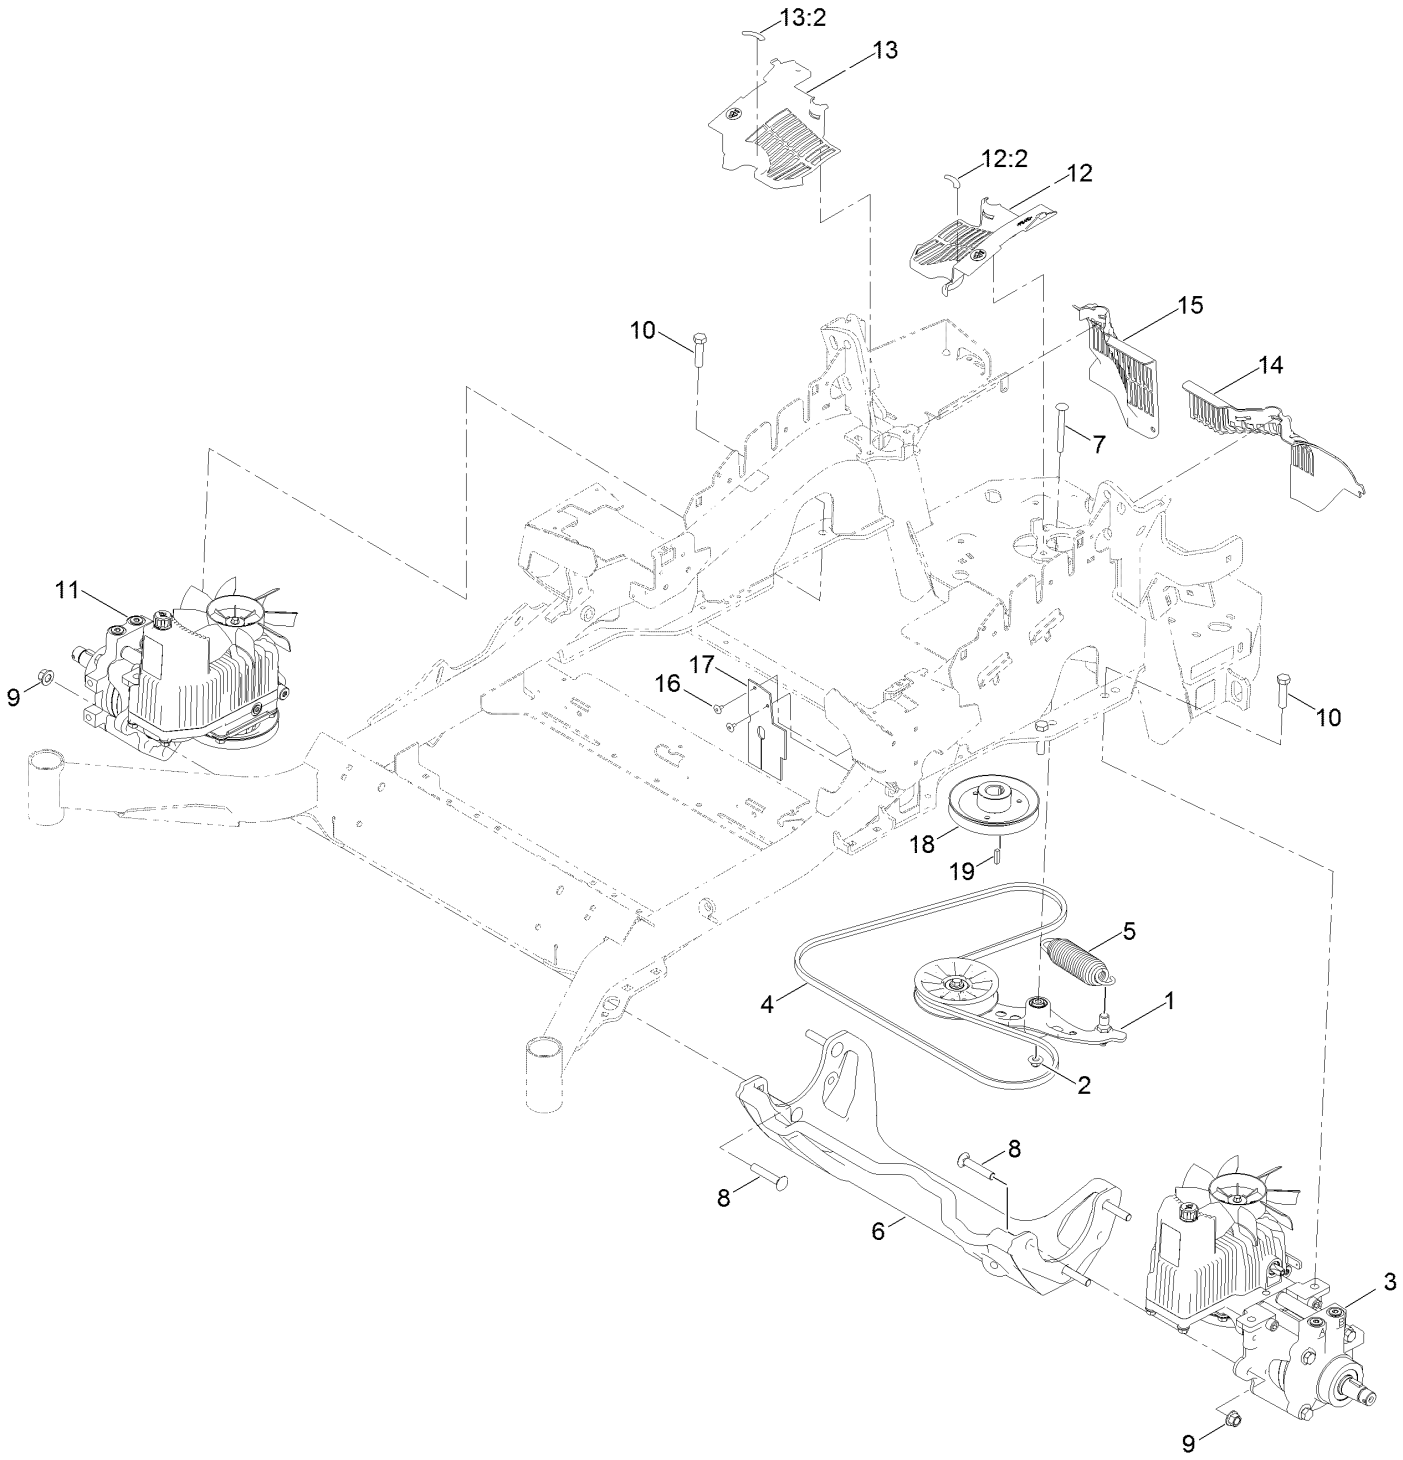


Hydraulic Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-1255	1	Pump Idler ASM
2	109-6658	1	Nut-Flange, NI
3	135-7907	1	Hydro-LH
4	126-9835	1	Belt-V
5	116-6317	1	Spring-Extension
6	116-7558	1	Cradle-Hydro
7	116-1502	1	Bolt-Shoulder, Carriage
8	126-0095	6	Screw-CARR
9	99-5107	6	Nut-Lock
10	325-8	4	Screw-HH
11	135-7908	1	Hydro-RH
12	116-0170	1	LH Hydro Guard ASM
12:2	116-8726	1	Decal-Oil, Hydro
13	116-0171	1	RH Hydro Guard ASM
13:2	116-8726	1	Decal-Oil, Hydro
14	109-9709	1	Guard-Hydro, Rear Trim (LH)
15	109-9058	1	Guard-Hydro, Rear (RH)
16	1-803035	2	Rivet-Pop
17	116-2362	1	Deflector-Air Flow
18	109-9905	1	Sheave
19	1-807259	1	Key
99	114-4713	1	Hypr-Oil 500 (Quart) ●
99	114-4714	1	Hypr-Oil 500 (Gallon) ●
99	114-4715	1	Hypr-Oil 500-5 (5 Gallon) ●
99	117-0390	1	Filter-Hydro ●

● Not illustrated


Pump Idler Assembly No. 116-1255

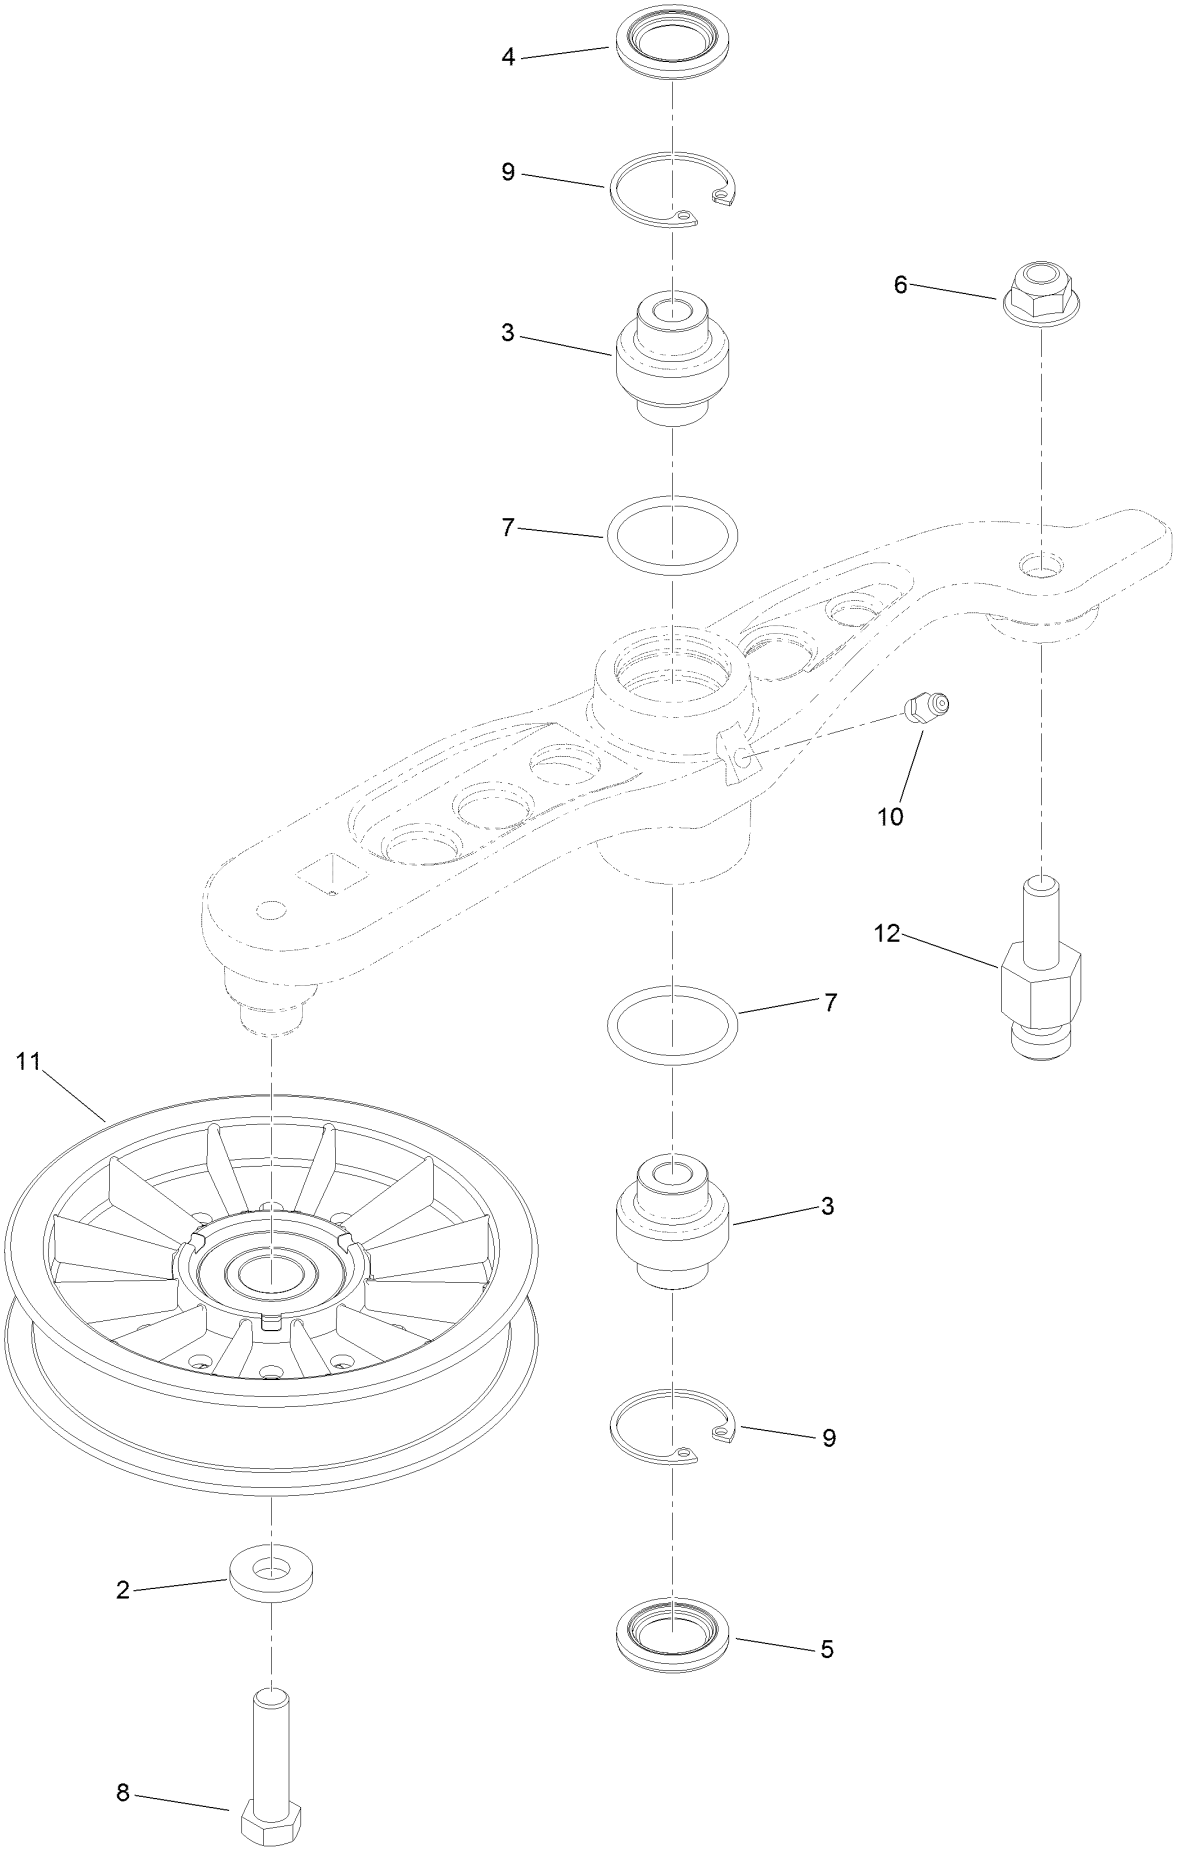

Pump Idler Assembly No. 116-1255 (continued)

Ref.	Part Number	Qty.	Description
2	43-0940	1	Spacer
3	103-3504	2	Bearing-Spherical
4	103-3505	1	Seal-Lip, Double
5	103-3506	1	Seal-Lip, Single
6	109-6658	1	Nut-Flange, NI
7	106-7159	2	O-Ring
8	323-8	1	Screw-HH
9	32120-10	2	Ring-Snap
10	302-19	1	Fitting-Grease
11	109-8076	1	Pulley-Idler
12	132-4724	1	Pin-Anchor, Spring

LH Hydro Assembly No. 135-7907

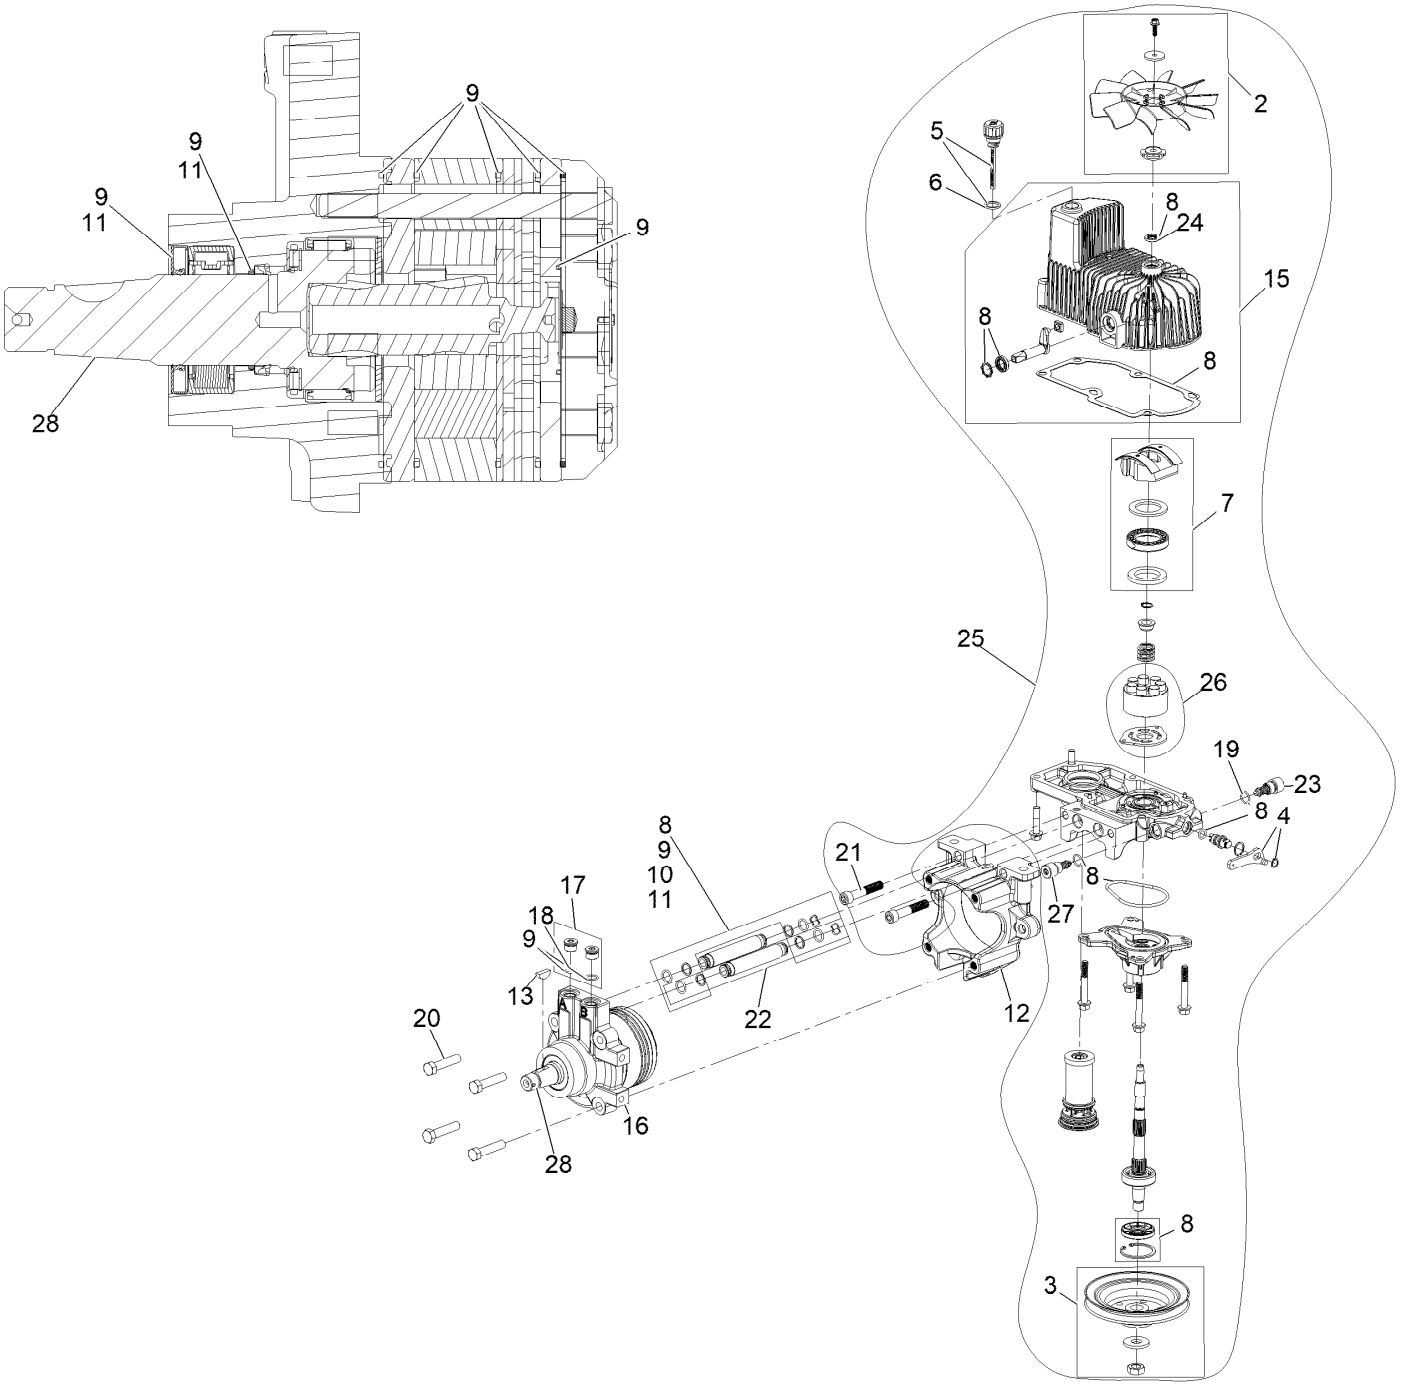


LH Hydro Assembly No. 135-7907 (continued)

Ref.	Part Number	Qty.	Description
2	142-3603	1	Kit, 7.8 In Fan
3	116-0234	1	Pulley Kit
4	116-0235	1	Handle
5	116-0236	1	Dipstick
6	116-0237	1	Gasket
7	116-1367	1	Swash Block Kit
8	142-3604	1	Kit, Pump Seal
9	116-1369	1	Motor Seal Kit
10	116-1370	1	Tube Seal Kit
11	116-1371	1	Output Shaft Seal Kit
12	116-5469	1	Cup-Nose
13	3257-42	1	Key-Woodruff 5/16 X 1
15	142-4460	1	Kit, Housing-Hydro LH
16	146-1948	1	HYD Motor,280Cc LH Sealed
17	116-7901	1	Magnetic Plugs Service Kit
18	76-1900	2	O-Ring
19	116-8662	2	O-Ring-Valve, Check
20	116-8974	4	Screw-HH 1/2-20 X 2 1/4
21	116-8975	2	Screw-HSH 1/2-20 X 2 3/4
22	116-9922	2	Hydraulic Tube Kit
23	126-7467	1	Shock Valve, 16Cc Hydro
24	126-7711	1	Seal-Drive, Fan
25	142-3607	1	Kit, Pump Section 16Cc LH
26	142-4501	1	Kit - 16Cc Port Plate,Rotate Grp
27	142-4458	1	Shock Valve Orificed 3300
28	146-3749	1	Output Shaft- Tl Uht Motor
99	116-1373	1	Flow Test Kit ●

● Not illustrated

RH Hydro Assembly No. 135-7908

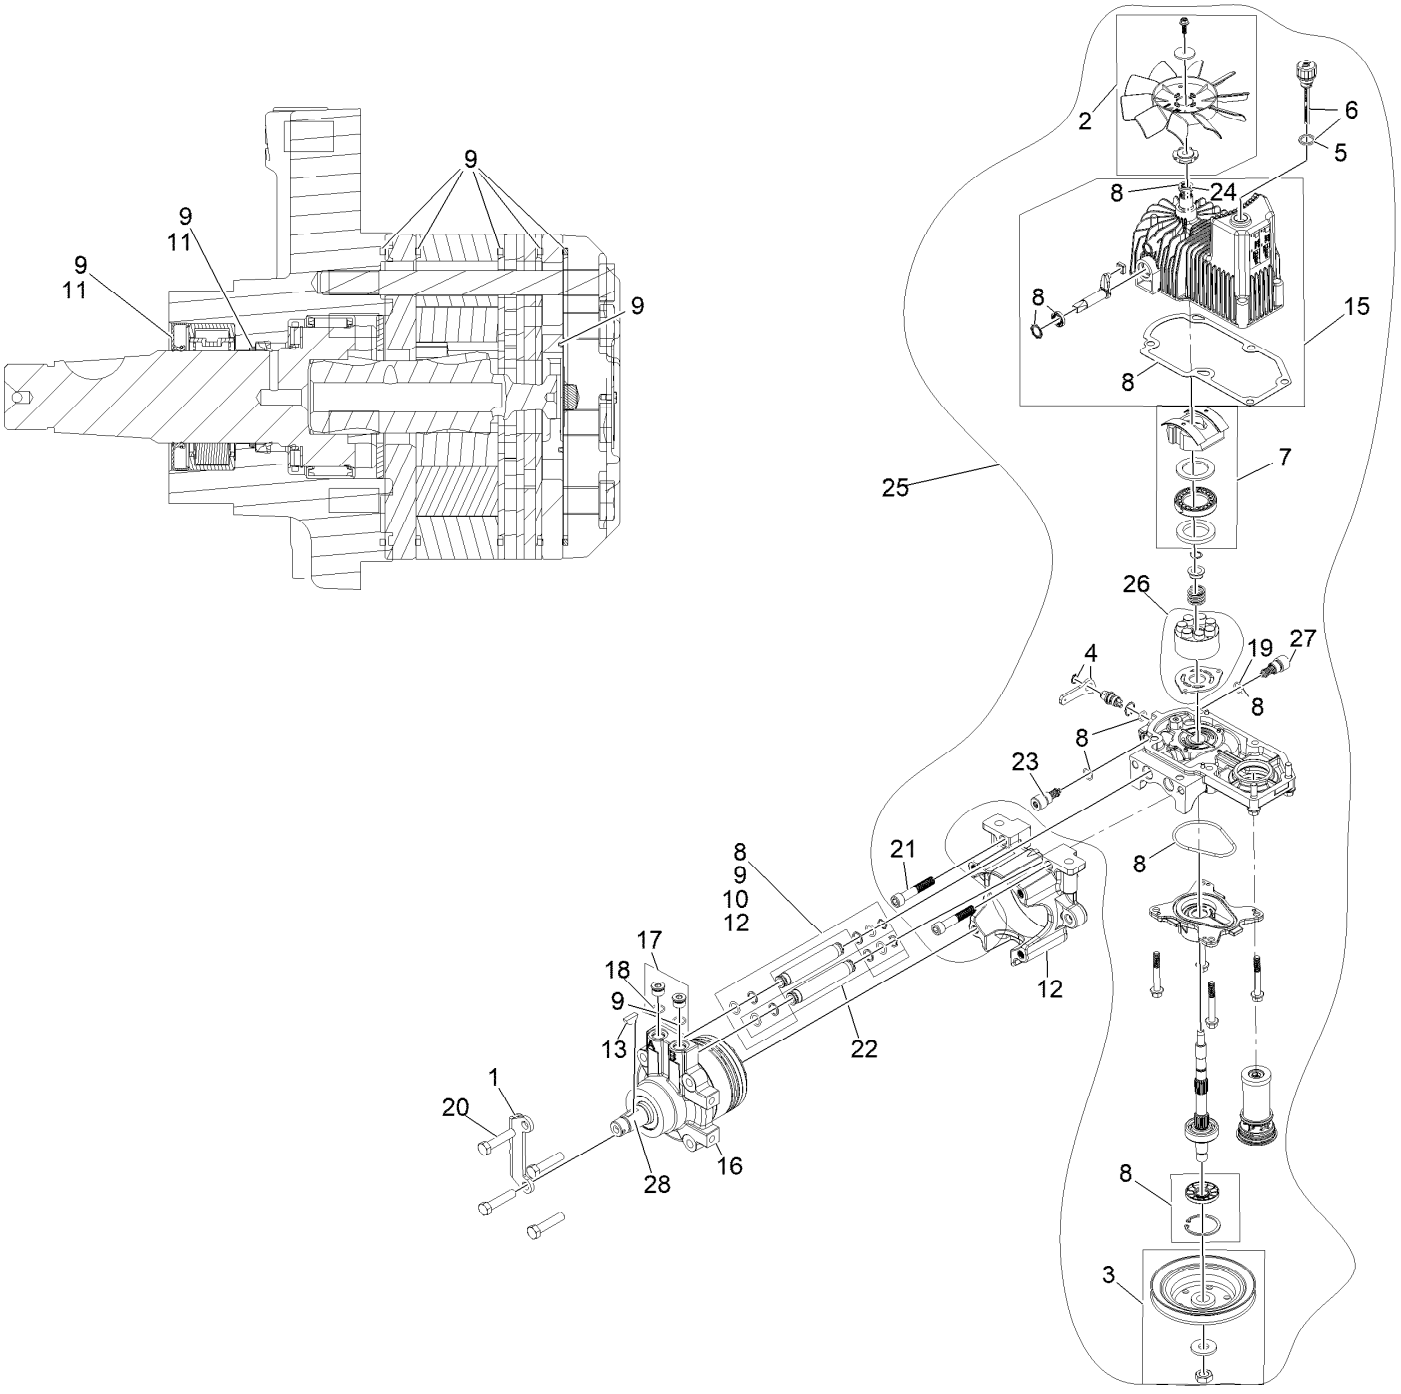


RH Hydro Assembly No. 135-7908 (continued)

Ref.	Part Number	Qty.	Description
1	135-7827	1	Plate, Horse Shoe Mount
2	142-3603	1	Kit, 7.8 In Fan
3	116-0234	1	Pulley Kit
4	116-0235	1	Handle
5	116-0237	1	Gasket
6	116-0236	1	Dipstick
7	116-1367	1	Swash Block Kit
8	142-3604	1	Kit, Pump Seal
9	116-1369	1	Motor Seal Kit
10	116-1370	1	Tube Seal Kit
11	116-1371	1	Output Shaft Seal Kit
12	116-5469	1	Cup-Nose
13	3257-42	1	Key-Woodruff 5/16 X 1
15	142-4461	1	Kit, Housing-Hydro RH
16	146-1947	1	HYD Motor,280Cc RH Sealed
17	116-7901	1	Magnetic Plugs Service Kit
18	76-1900	2	O-Ring
19	116-8662	2	O-Ring-Valve, Check
20	116-8974	4	Screw-HH 1/2-20 X 2 1/4
21	116-8975	2	Screw-HSH 1/2-20 X 2 3/4
22	116-9922	2	Hydraulic Tube Kit
23	126-7467	1	Shock Valve, 16Cc Hydro
24	126-7711	1	Seal-Drive, Fan
25	142-3606	1	Kit, Pump Section 16Cc RH
26	142-4501	1	Kit - 16Cc Port Plate,Rotate Grp
27	142-4458	1	Shock Valve Orificed 3300
28	146-3749	1	Output Shaft- Tl Uht Motor
99	116-1373	1	Flow Test Kit ●
99	116-4245	1	Puller-Pulley

● Not illustrated


Rear Wheel Assembly

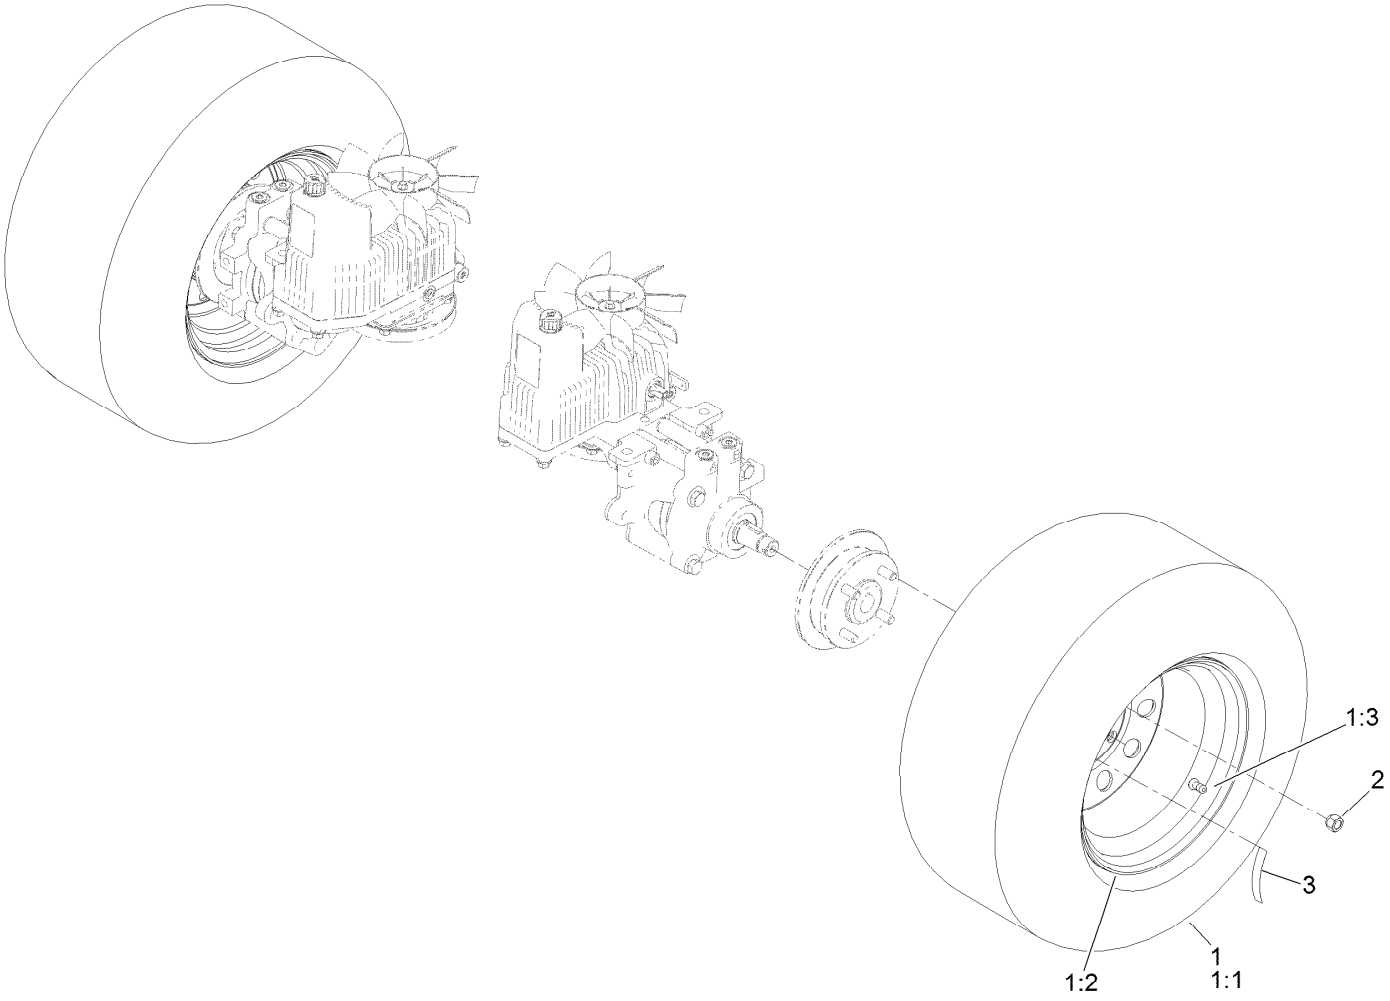

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9521	2	Wheel And Tire ASM
1:1	1-633993	1	Tire
1:2	127-9522	1	Wheel
1:3	232-27	1	Stem-Valve
2	242-50	8	Nut-Lug
3	126-2055	2	Decal-Torque, Wheel Hub Lug

Park Brake Assembly

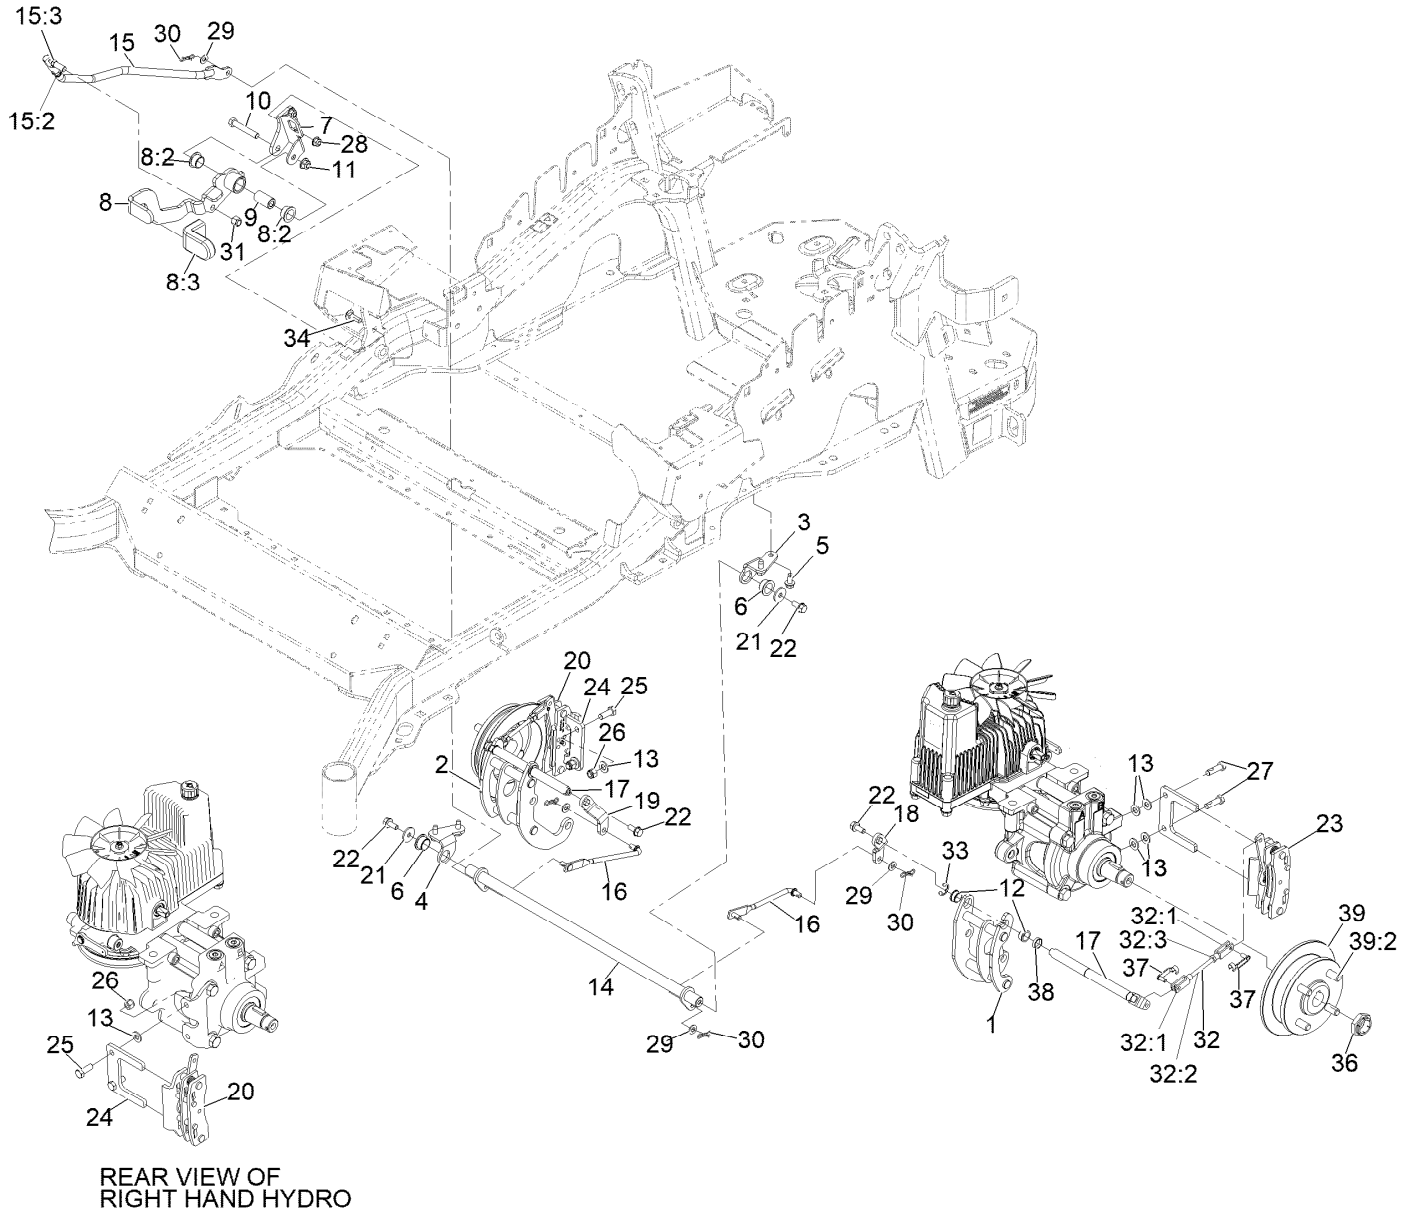


REAR VIEW OF
RIGHT HAND HYDRO

Park Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4248	1	Mount-Bellcrank, LH
2	126-4249	1	Mount-Bellcrank, RH
3	116-9681	1	Mount-Pivot, LH
4	116-9682	1	Mount-Pivot, RH
5	32144-70	4	Screw-HWH 5/16-18 X 3/4 Tf
6	109-8054	2	Bushing-Flanged
7	116-9096-01	1	Bracket-Mount
8	135-7982	1	Brake Lever ASM W/Grip M-R
8:2	109-8054	2	Bushing-Flanged
8:3	132-4749	1	Grip-Lever
9	116-9117	1	Pivot-Handle, Brake
10	323-11	1	Screw-HH 3/8-16 X 2 1/4
11	104-8301	1	Nut-Nyloc 3/8-16 Flg
12	126-6199	4	Bushing
13	3256-24	6	Washer-3/8 SAE
14	135-7800	1	Shaft-Cross
15	135-7805	1	ASM, Front Linkage
15:2	94-7572	1	End-Tie Rod, RH
15:3	3220-3	1	Nut-Jam 3/8-24
16	142-6328	2	Mid-Link, Short
17	126-4251	2	Bellcrank
18	126-3715	1	Arm-Inner, LH
19	126-3716	1	Arm-Inner, RH
20	135-7440	1	Caliper-Brake, RH
21	115-7109	2	Washer-Flat
22	98-9940	4	Screw-HHF
23	135-7441	1	Caliper-Brake, LH
24	135-7828	2	Plate-Mount, Brake
25	135-7915	2	Screw-HH,
26	112-0236	2	Nut-Lock
27	135-7890	2	Screw-HH, Patch,
28	104-8300	2	Nut-Nyloc 5/16-18 Flg
29	3256-23	4	Washer-5/16 SAE
30	119-1415	4	Pin-Cotter, Locking
31	3296-6	1	Nut-Nyloc 3/8-24
32	126-7587	2	Rear Linkage ASM
32:1	126-7588	2	Yoke
32:2	116-9069	1	Linkage, Rear
32:3	3220-1	1	Nut-Jam 1/4-28
33	32120-19	2	E-Ring
34	3230-2	2	Bolt-Carriage 5/16-18 X 1
36	116-1399	2	Locknut
37	126-6395	4	Pin-Clevis, Spring
38	126-6200	2	Spacer
39	142-2701	2	Wheel Hub ASM
39:2	116-1696	4	Stud-Wheel


Fuel System Assembly

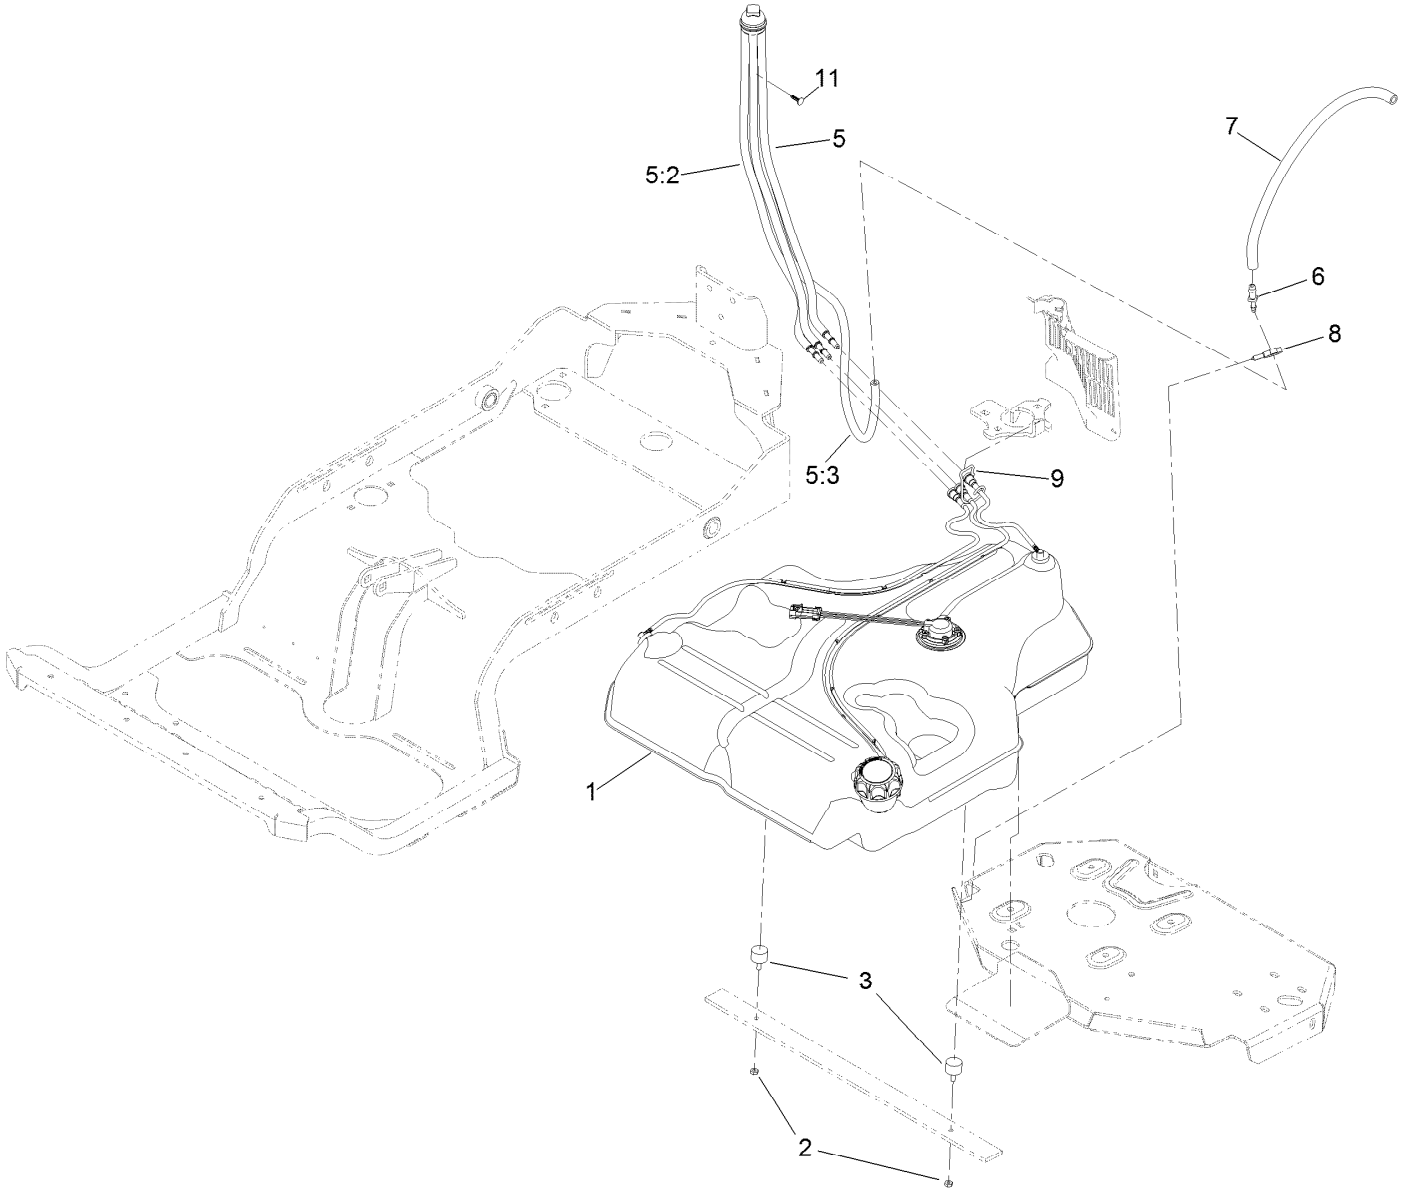

Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-0643	1	Fuel Tank ASM
2	3218-1	2	Nut-Jam
3	1-523420	2	Bumper
5	127-0583	1	Fuel Manifold Vent ASM
5:2	109-0302	3	Hose-Fuel
5:3	108-5376	1	Hose-Fuel
6	116-5072	1	Fitting-Straight
7	116-5087	1	Hose-Fuel
8	105-1853	1	Clamp-Hose
9	116-6005	1	Retainer-Line, Vapor
11	125-8067	1	Plug-Plastic


Fuel Tank Assembly No. 135-0643

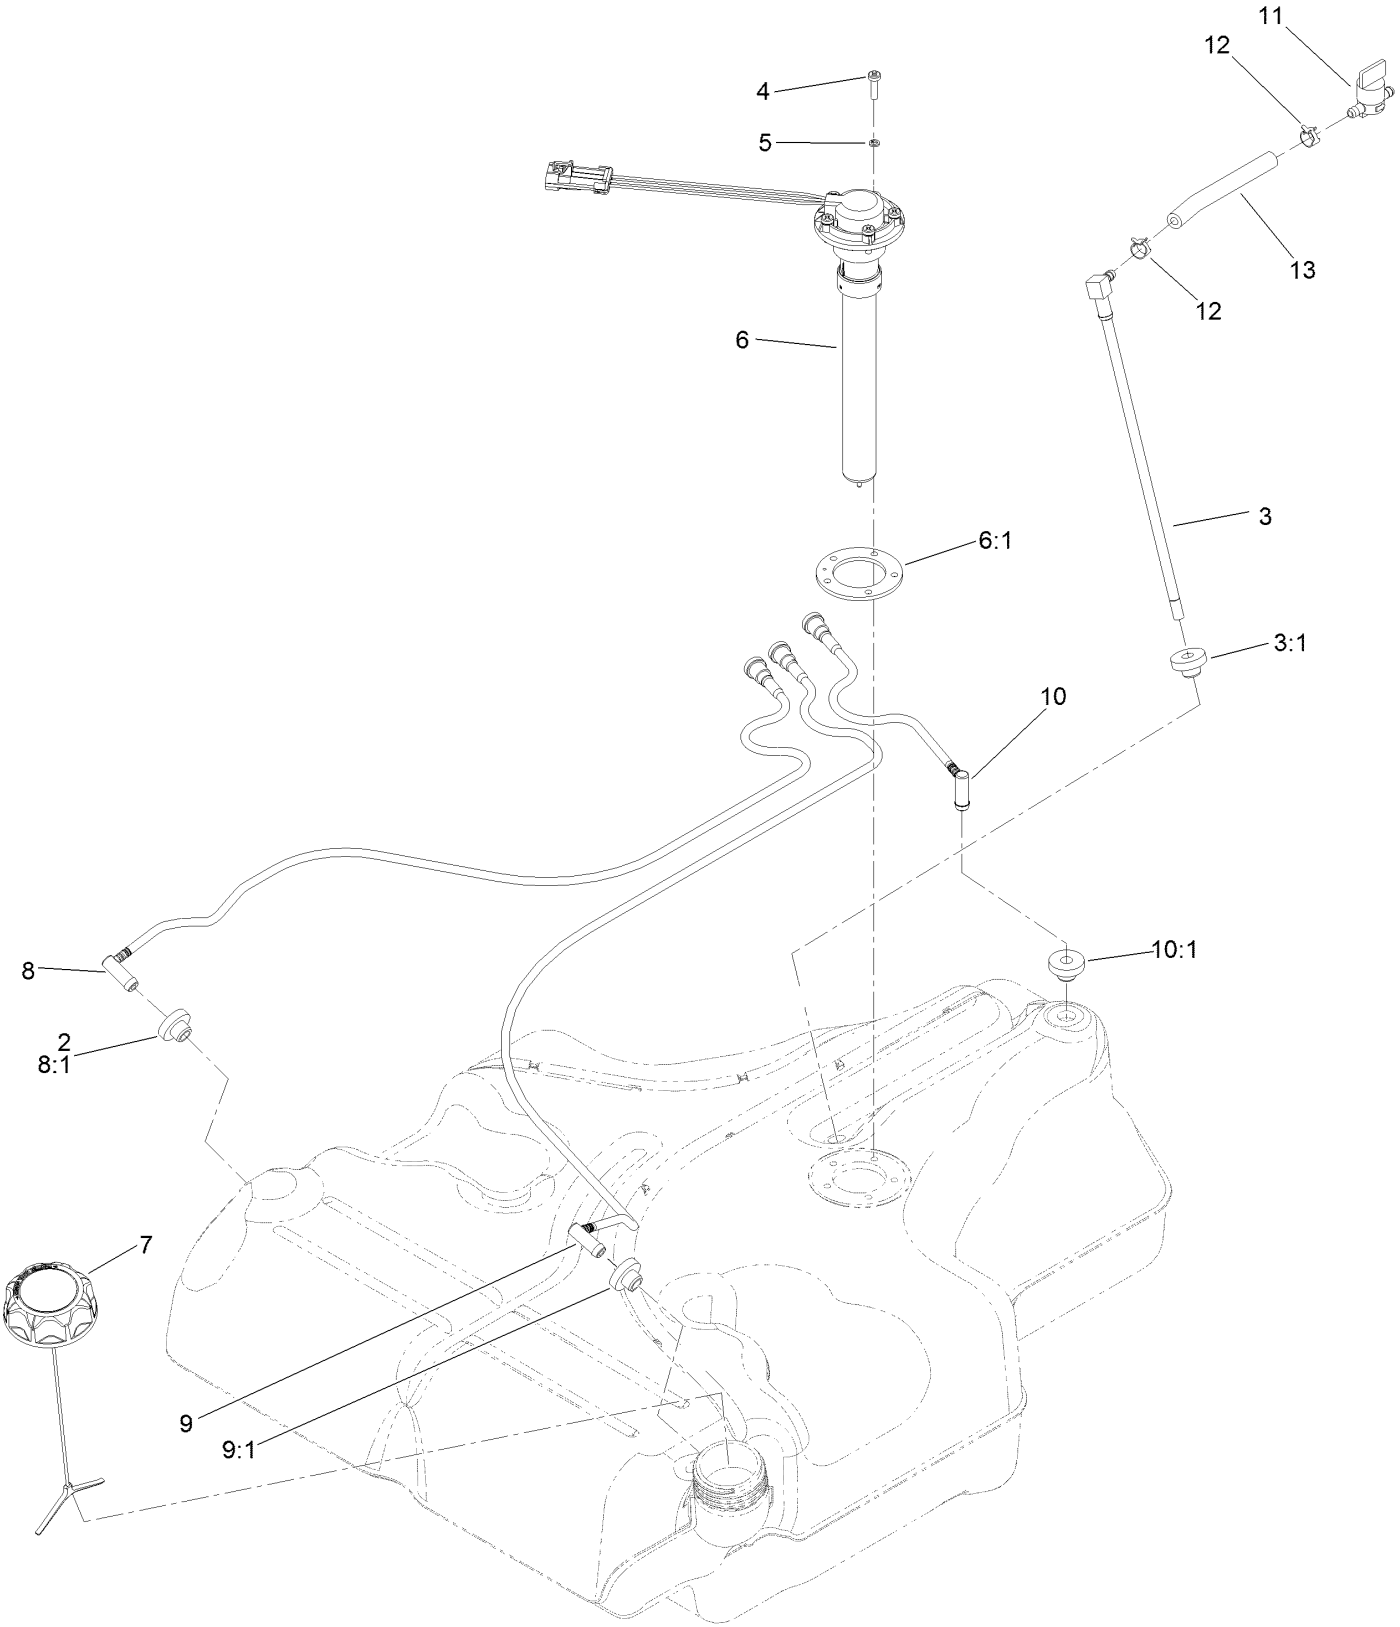

Fuel Tank Assembly No. 135-0643 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	4	Bushing
3	116-2459	1	Fuel Line Kit (With Grommet)
3:1	46-6560	1	Bushing
4	3290-500	5	Screw-PPH
5	3253-17	5	Washer-Lock
6	126-3913	1	Float-Sender, Fuel
6:1	126-3950	1	Gasket-Sender
7	126-1789	1	Cap-Fuel, Ratcheting
8	116-2460	1	RH Vent Line Kit (With Grommet)
8:1	46-6560	1	Bushing
9	116-2461	1	LH Vent Line Kit (With Grommet)
9:1	46-6560	1	Bushing
10	116-2462	1	Rear Vent Line Kit (With Grommet)
10:1	46-6560	1	Bushing
11	1-603770	1	Valve-Fuel
12	2412-98	2	Clamp-Hose
13	109-0650	1	Hose-Fuel


Seat Mounting Assembly

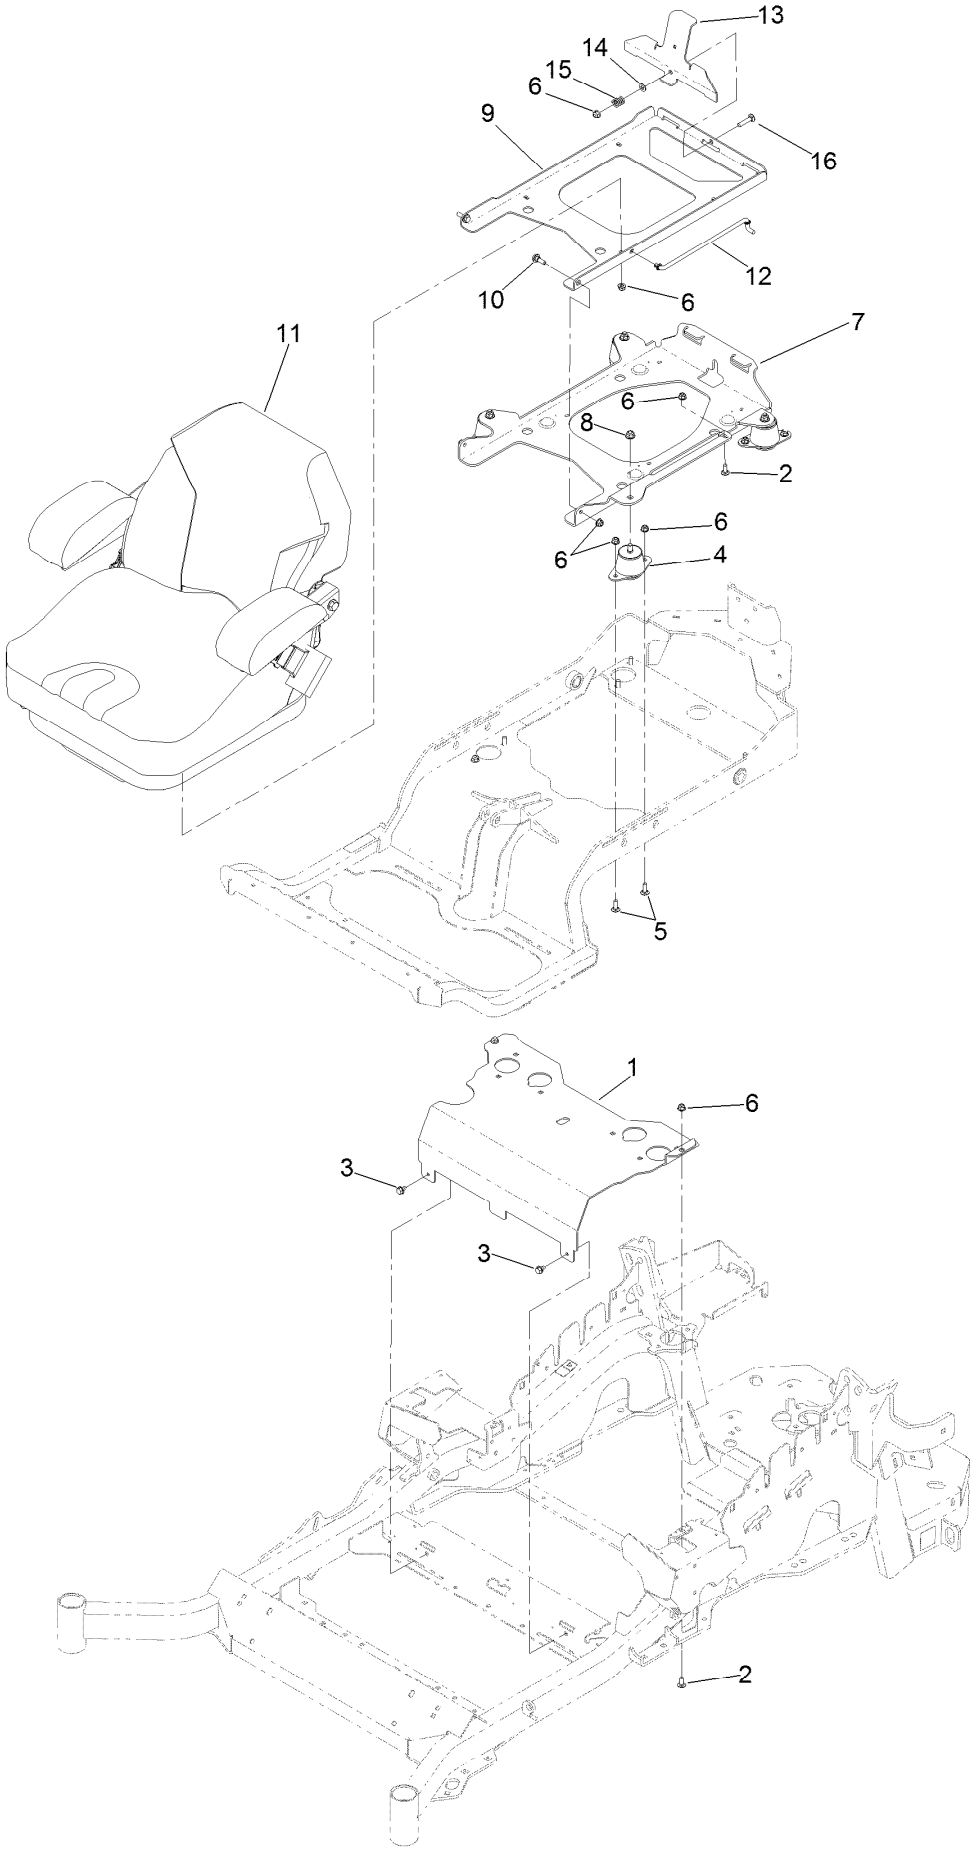

Seat Mounting Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-2130-03	1	Panel-Front, Seat Mount
2	3230-23	3	Bolt-CARR
3	9266934	2	Screw
4	109-9034	4	Isolator-Seat
5	3230-10	8	Bolt-CARR
6	104-8300	18	Nut-HF, NI
7	131-6324-03	1	Plate-Support, ISO Seat
8	104-8301	4	Nut-HF, NI
9	116-3859-03	1	Plate-Frame, Seat
10	116-1297	2	Screw-Shoulder
11	139-3641	1	Seat-Standard
12	116-0070	1	Rod-Prop
13	132-5088-03	1	Plate-Latch,Seat
14	3256-23	1	Washer-Plain
15	107-3017	1	Spring-Compression
16	3230-4	1	Bolt-CARR


Seat Assembly No. 139-3641

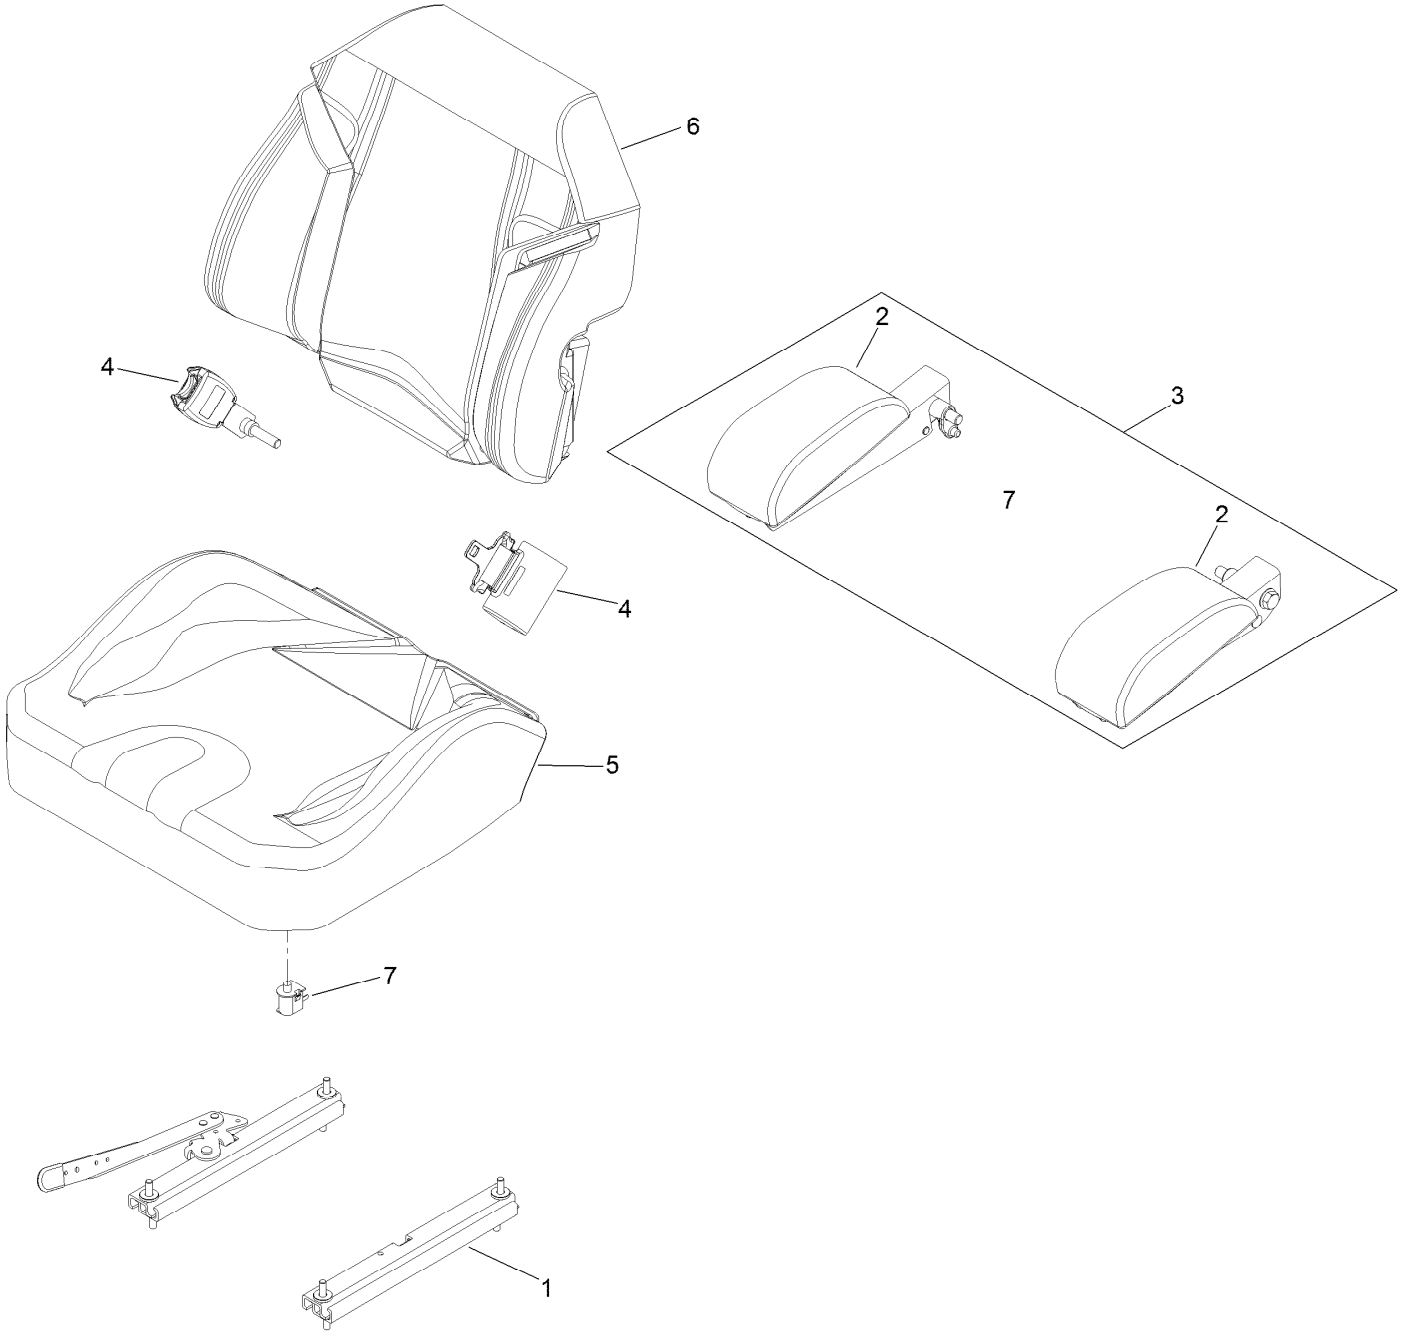

Seat Assembly No. 139-3641 (continued)

Ref.	Part Number	Qty.	Description
1	109-9801	1	Seat Track Set
2	109-9802	1	Arm Rest Pad Set
3	109-9803	1	Arm Rest Set
4	109-9805	1	Seat Belt Kit
5	140-8006	1	Cover-Cushion
6	140-8004	1	Cover-Back
7	82-2190	1	Switch-Bail

Motion Controls Assembly

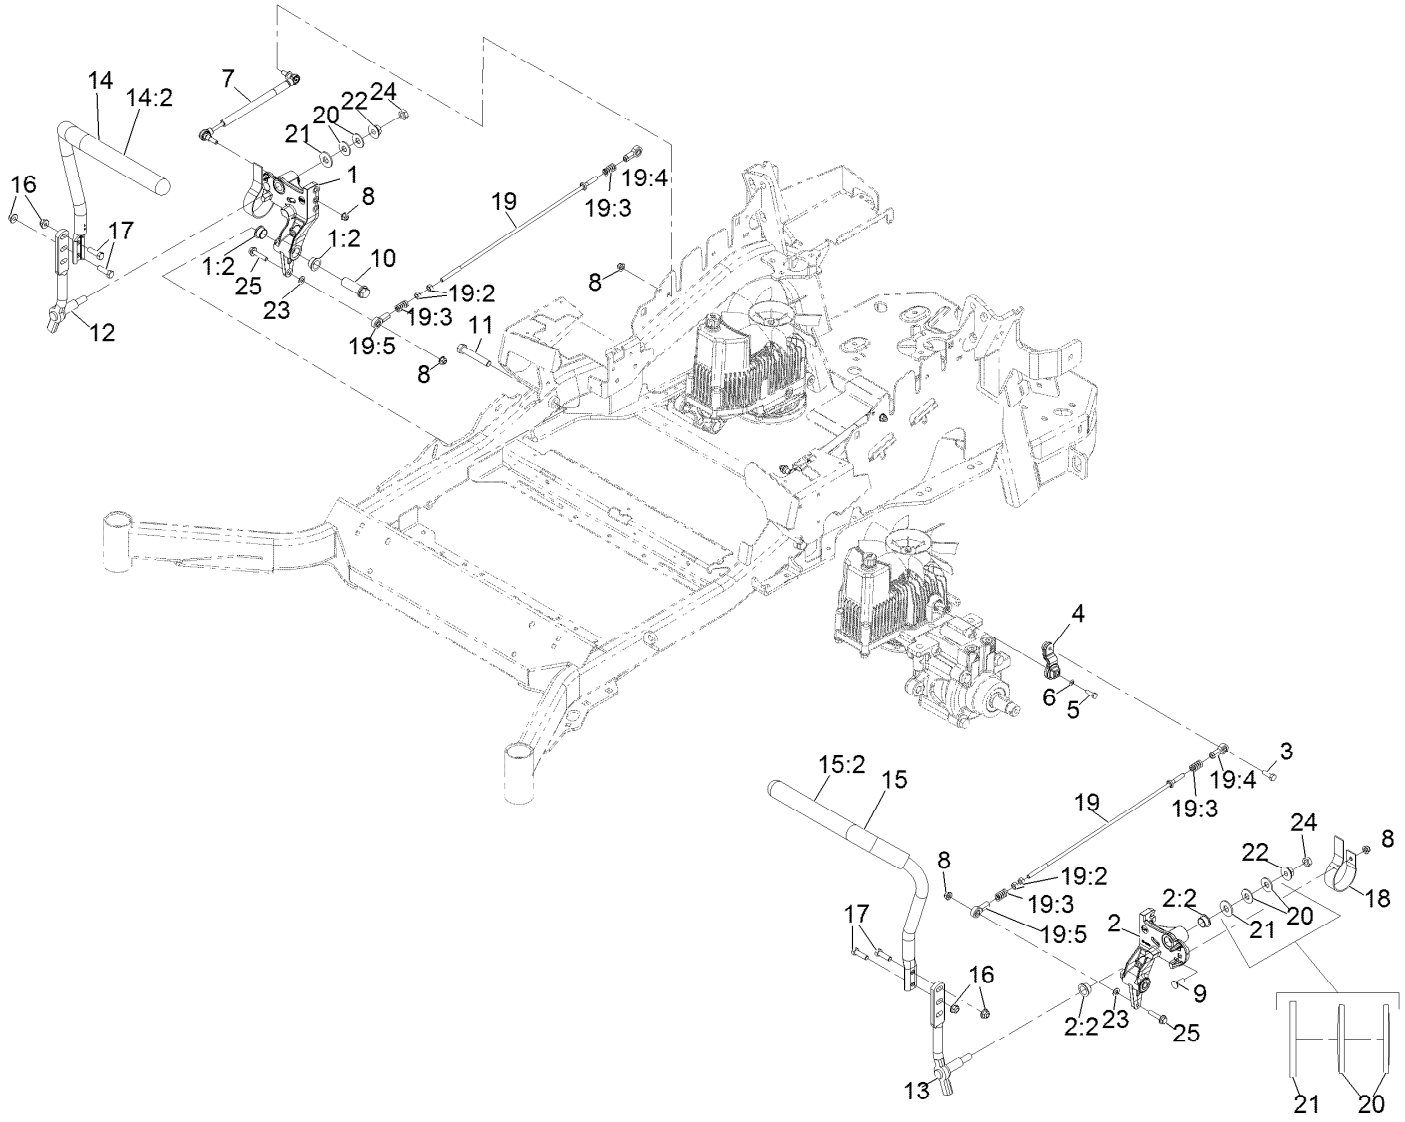


Motion Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flanged
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flanged
3	116-0648	2	Screw-HH 5/16-18 X 1 W/Patch ●
4	109-4581	2	Arm-Control, Pump
5	9080046	2	Screw-HH 1/4-20 X 7/8 ●
6	1-303435	2	Washer-Spring Disc 1/4
7	116-0027	2	Damper-Control, Motion
8	104-8300	8	Nut-Nyloc 5/16-18 Flg
9	3230-2	2	Bolt-Carriage 5/16-18 X 1
10	109-5891	2	Hub-Threaded
11	325-12	2	Screw-HH 1/2-13 X 3
12	116-0039	1	Lever-Control Motion, RH
13	116-0040	1	Lever-Control Motion, LH
14	135-4727	1	Handle- RH W/Grip
14:2	109-5668	1	Grip-Lever, Control
15	135-4476	1	ASM-Handle-LH
15:2	109-5668	1	Grip-Lever, Control
16	104-8301	4	Nut-Nyloc 3/8-16 Flg
17	323-7	4	Screw-HH 3/8-16 X 1 1/4
18	109-5575	2	Spring-Leaf
19	109-8106	2	Front Pump Linkage ASM
19:2	3219-2	2	Nut-Hex 5/16-24
19:3	1-323245	2	Spring-Compression
19:4	1-633152	1	Balljoint
19:5	1-543017	1	Balljoint
20	109-9505	4	Washer, Spring Disc 1/2
21	3256-6	2	Washer
22	32128-56	2	Nut-Hex 1/2-13 Flange
23	3256-23	2	Washer-5/16 SAE
24	3218-5	2	Nut-Jam 1/2-13
25	115-1794	2	Screw-Hex Flange 5/16-18 X 1 1/2

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


Console Assembly

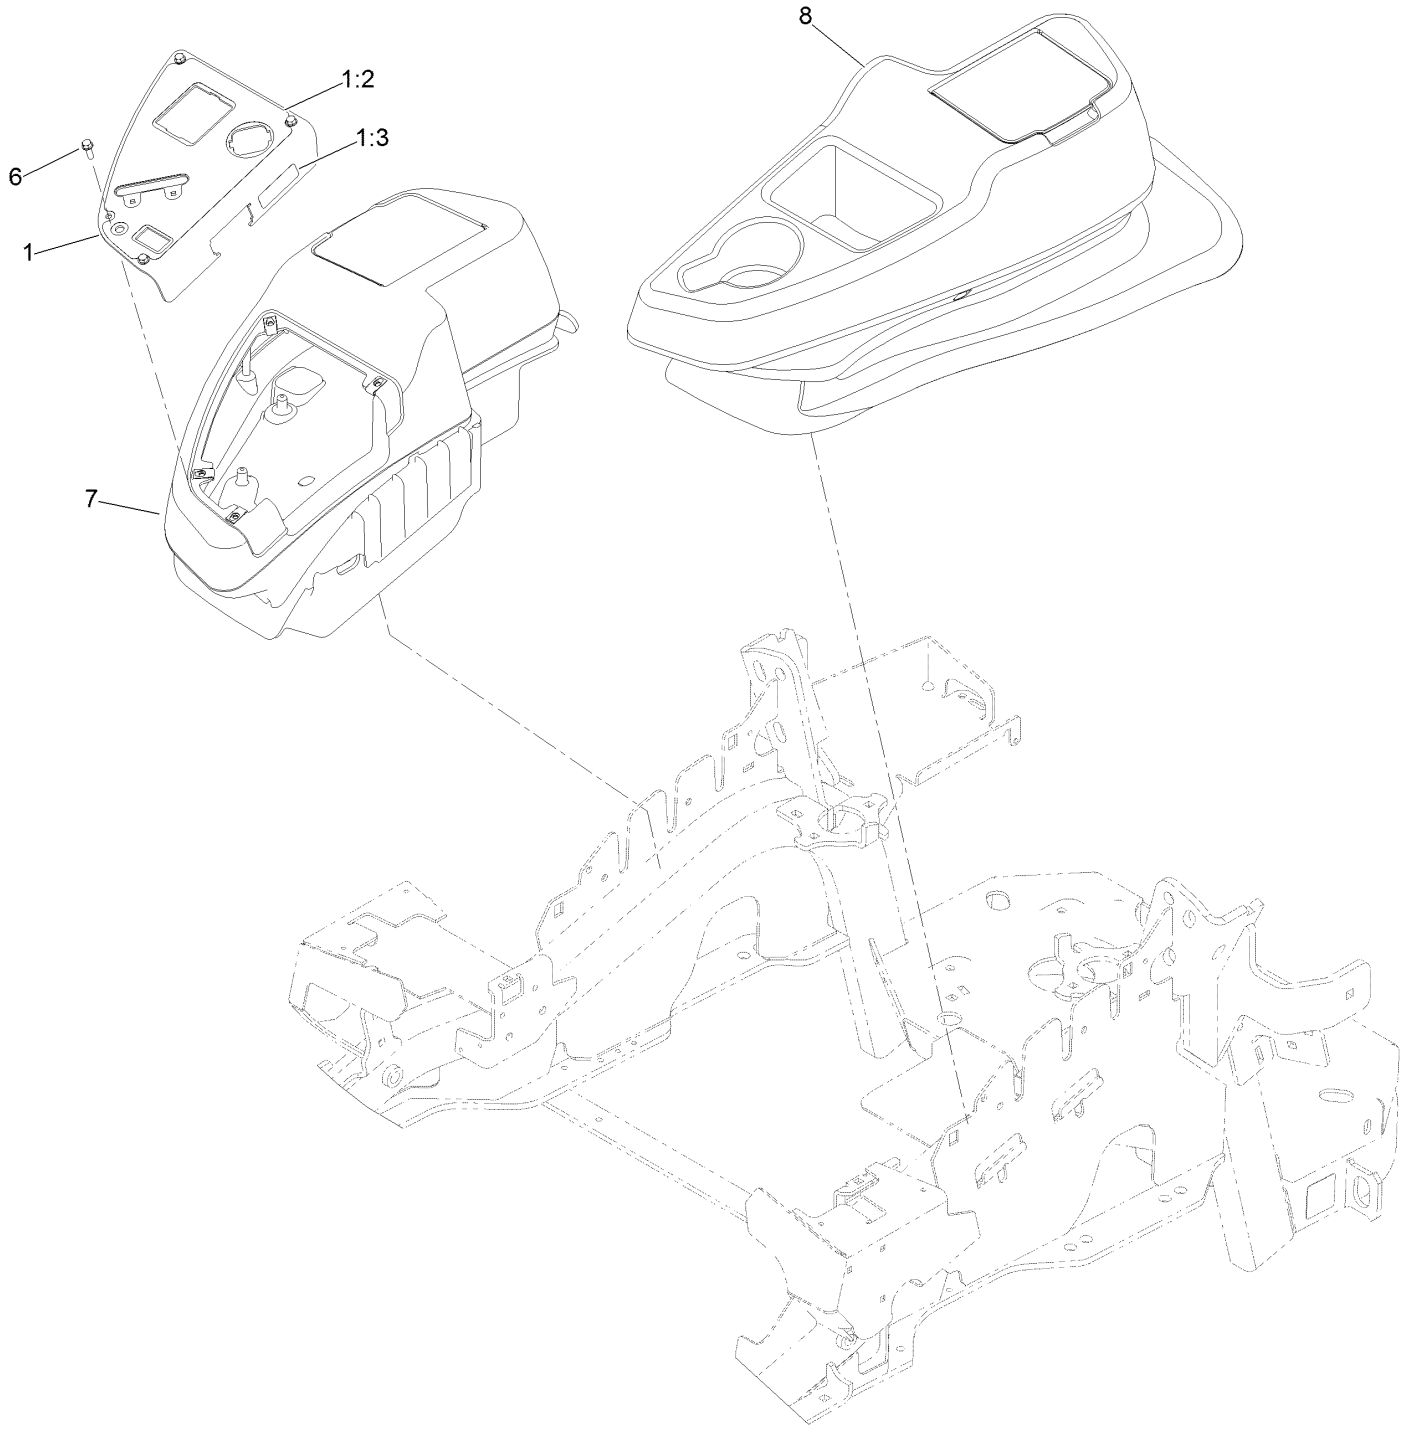

Console Assembly (continued)

Ref.	Part Number	Qty.	Description
1	114-9836	1	Control Panel ASM
1:2	120-5897	1	Decal-Panel, Control
1:3	114-4466	1	Decal-Fuses
6	32105-15	4	Screw-HWH
7	115-7400	1	RH Console ASM
8	115-7401	1	LH Console ASM


RH Console Assembly No. 115-7400

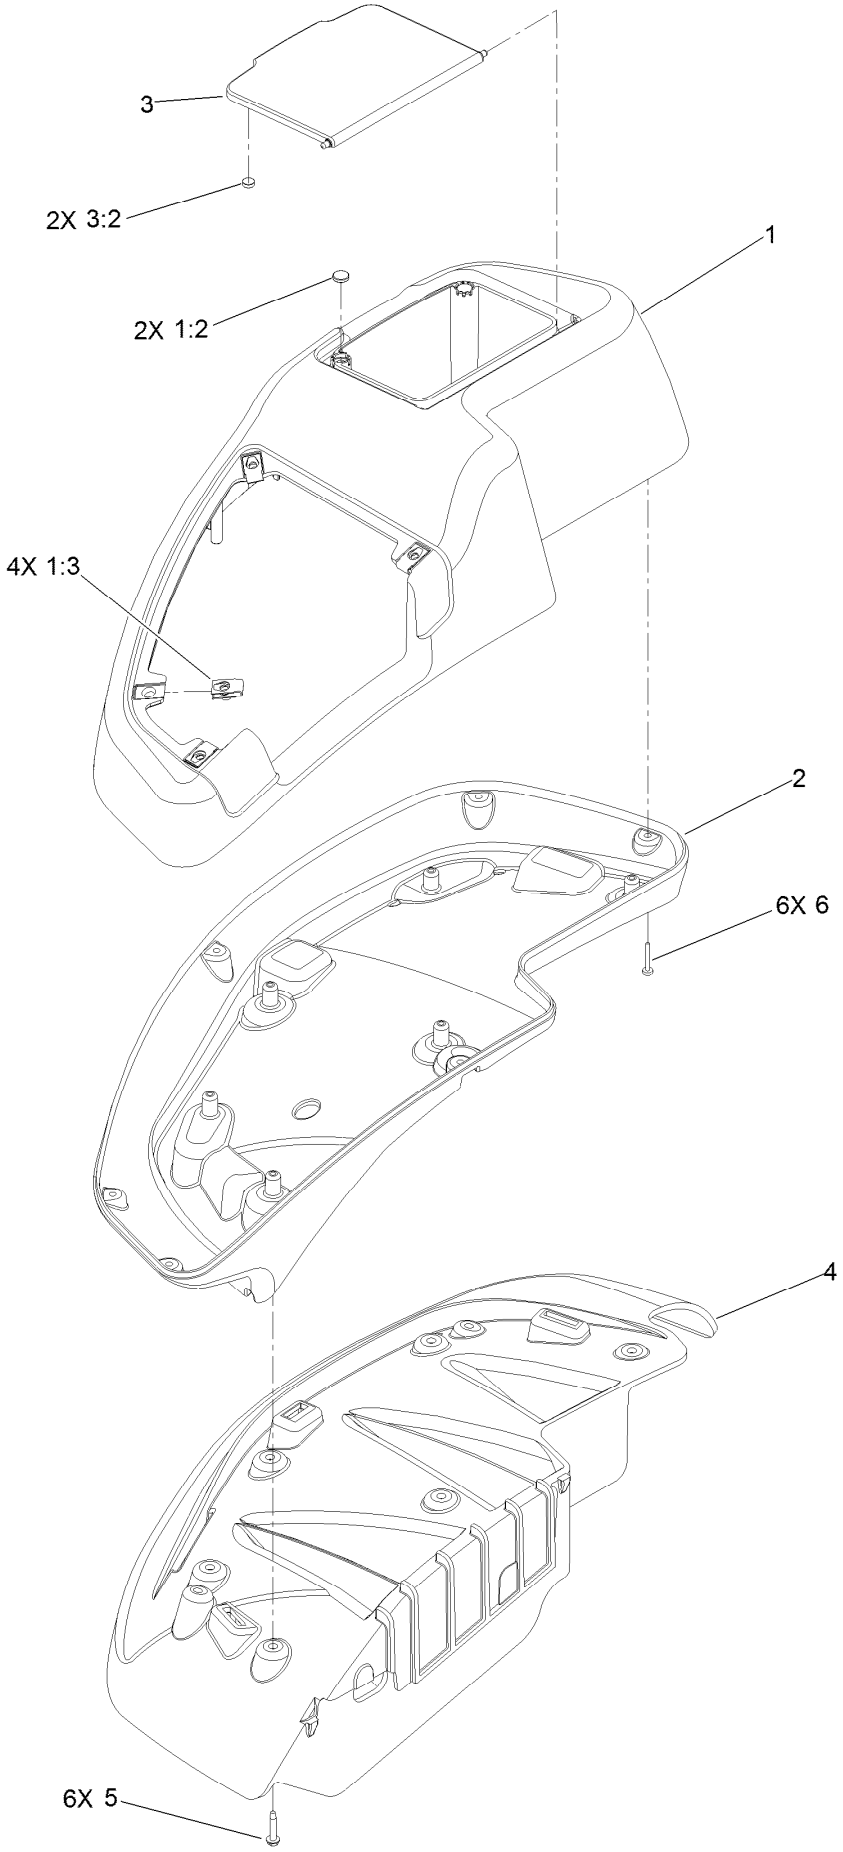

RH Console Assembly No. 115-7400 (continued)

Ref.	Part Number	Qty.	Description
1	114-1538	1	RH Wide Top Console ASM
1:2	117-0883	2	Puck
1:3	107069	4	Clip
2	115-3643	1	Console-Lower, RH Wide
3	114-1537	1	Wide Lid ASM
3:2	114-5896	2	Magnet
4	109-9083	1	Fender-Wide, RH
5	32144-89	6	Screw-Thread Forming
6	117-0347	6	Screw-PPH


LH Console Assembly No. 115-7401

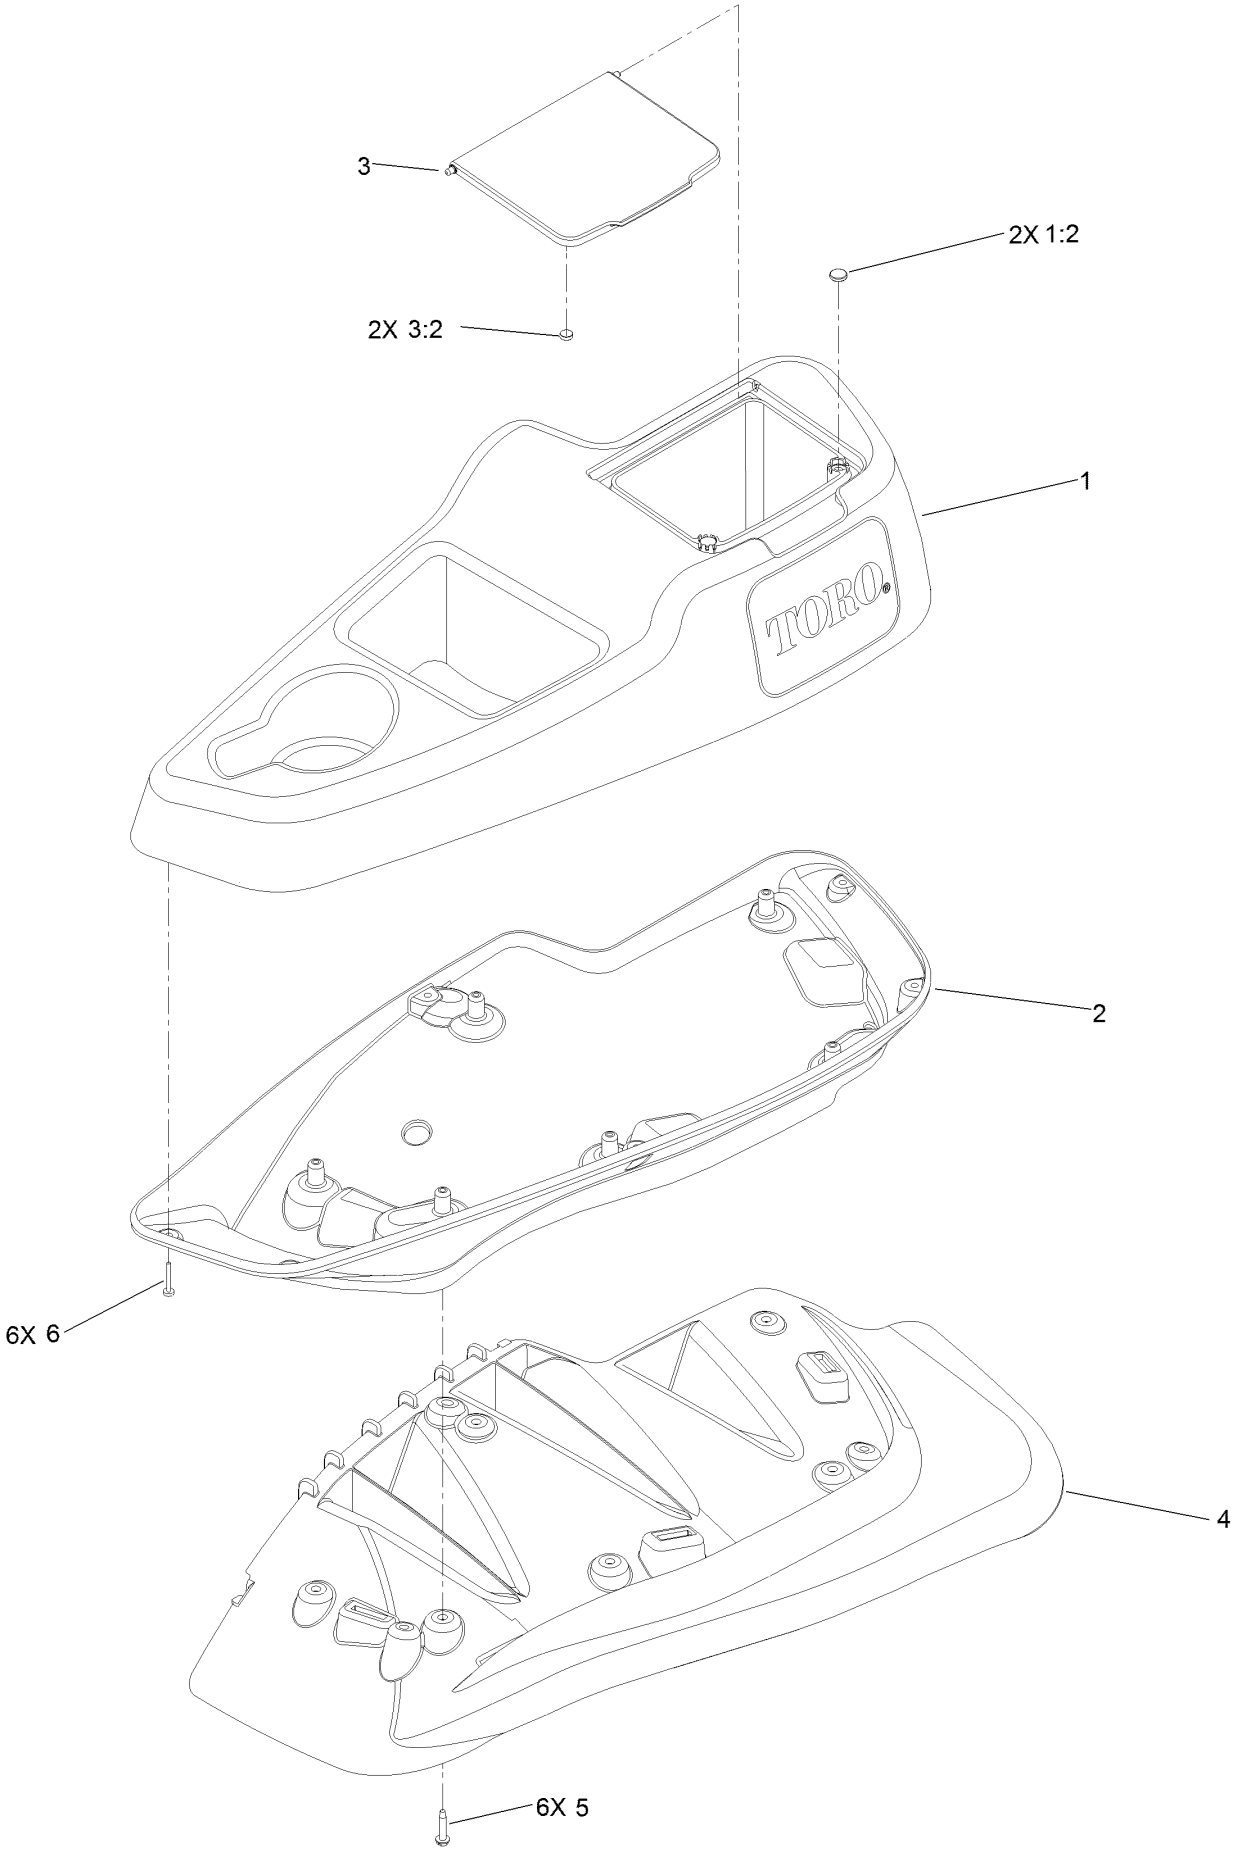

LH Console Assembly No. 115-7401 (continued)

Ref.	Part Number	Qty.	Description
1	114-1539	1	LH Wide Console Top ASM
1:2	117-0883	2	Puck
2	115-3641	1	Console-Lower, LH Wide
3	114-1537	1	Wide Lid ASM
3:2	114-5896	2	Magnet
4	109-9085	1	Fender-Wide, LH
5	32144-89	6	Screw-Thread Forming
6	117-0347	6	Screw-PPH

Electrical Assembly

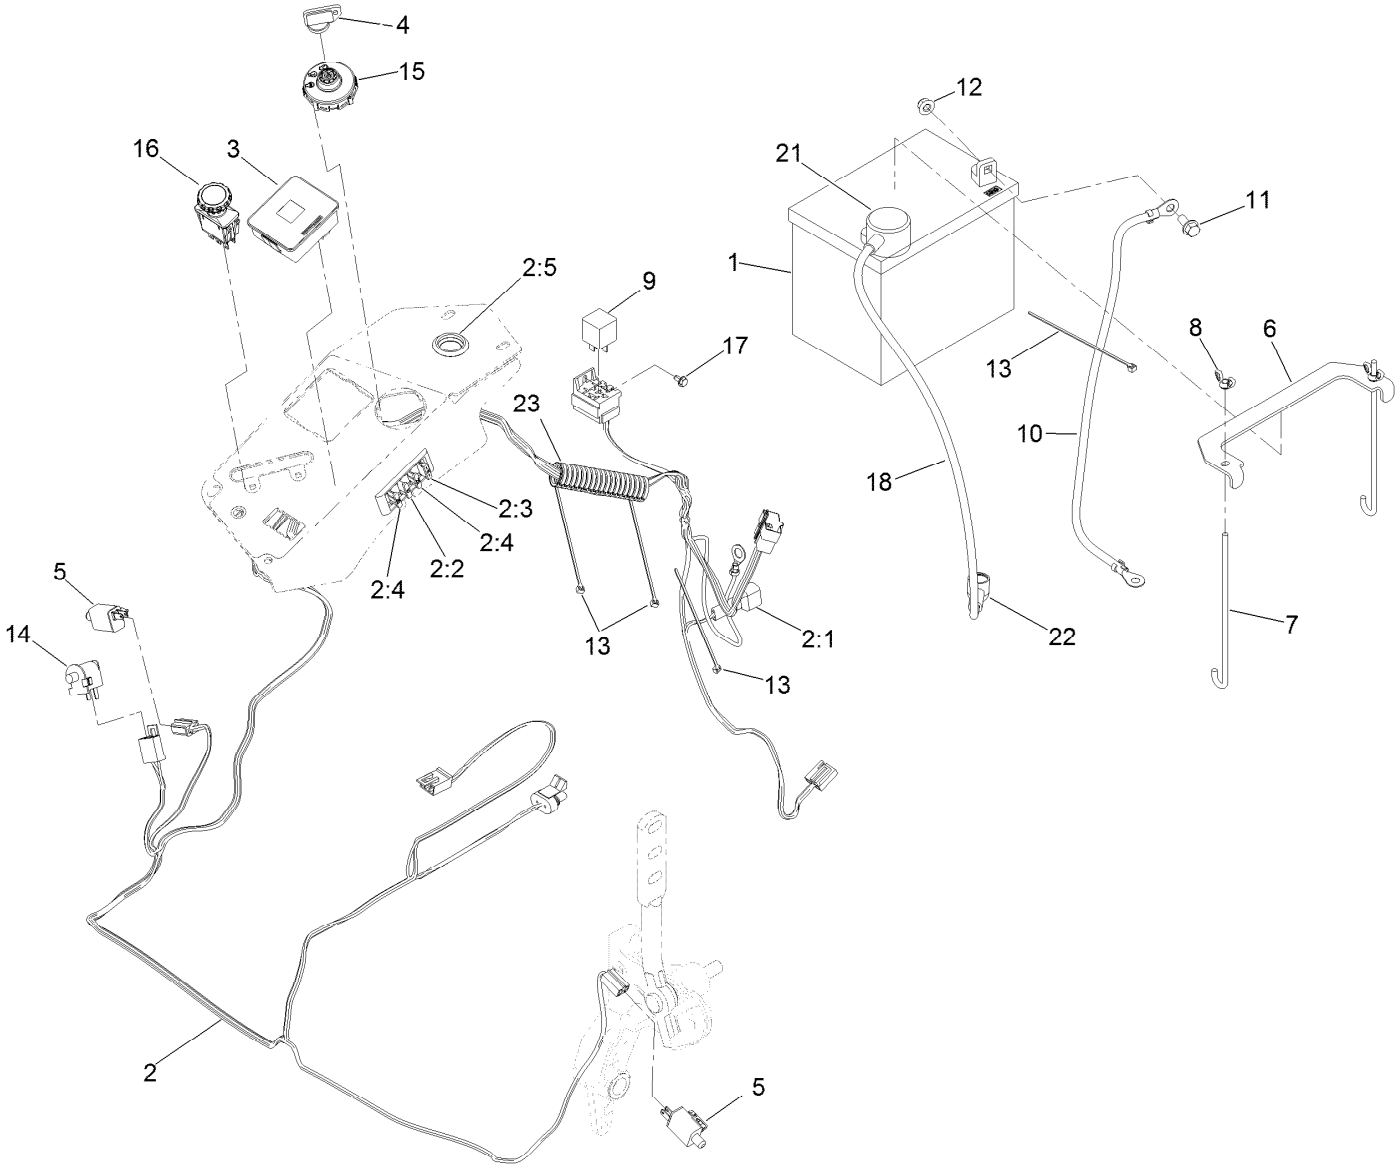


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery
2	116-6009	1	Harness-Wire, Main ●
2:1	103-3895	1	Diode
2:2	218-578	1	Fuse-Blade, 10 Amp
2:3	109355	1	Fuse-Blade, 15 Amp
2:4	109102	2	Fuse-Blade, 25 Amp
2:5	116-0053	1	Cap-Plug
3	117-3882	1	Fuel/Hour Meter ASM
4	1-603511	1	Keys-Ignition (Spare Pair)
4	63-8360	1	Key-Ignition
5	110-6765	2	Switch
6	116-0042-03	1	Strap-Tie Down, Battery
7	1-633651	2	Bolt-Holddown
8	1-543792	2	Wingnut
9	1-643275	1	Relay
10	114-1218	1	Cable-Battery, Negative
11	3234-5	2	Screw-HHF
12	104-8300	2	Nut-HF, NI
13	1-303287	4	Tie-Cable
14	82-2190	1	Switch-Bail
15	137-4100	1	Switch-Ignition
16	135-3653	1	Switch, PTO 10A
17	104-2065	1	Screw-HWH
18	115-3864	1	Cable-Battery, Positive
21	109-2407	1	Insulator-Battery
22	1-543393	1	Insulator-Solenoid
23	131-8846	1	Cover-Hose

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.


Deck Lift Assembly

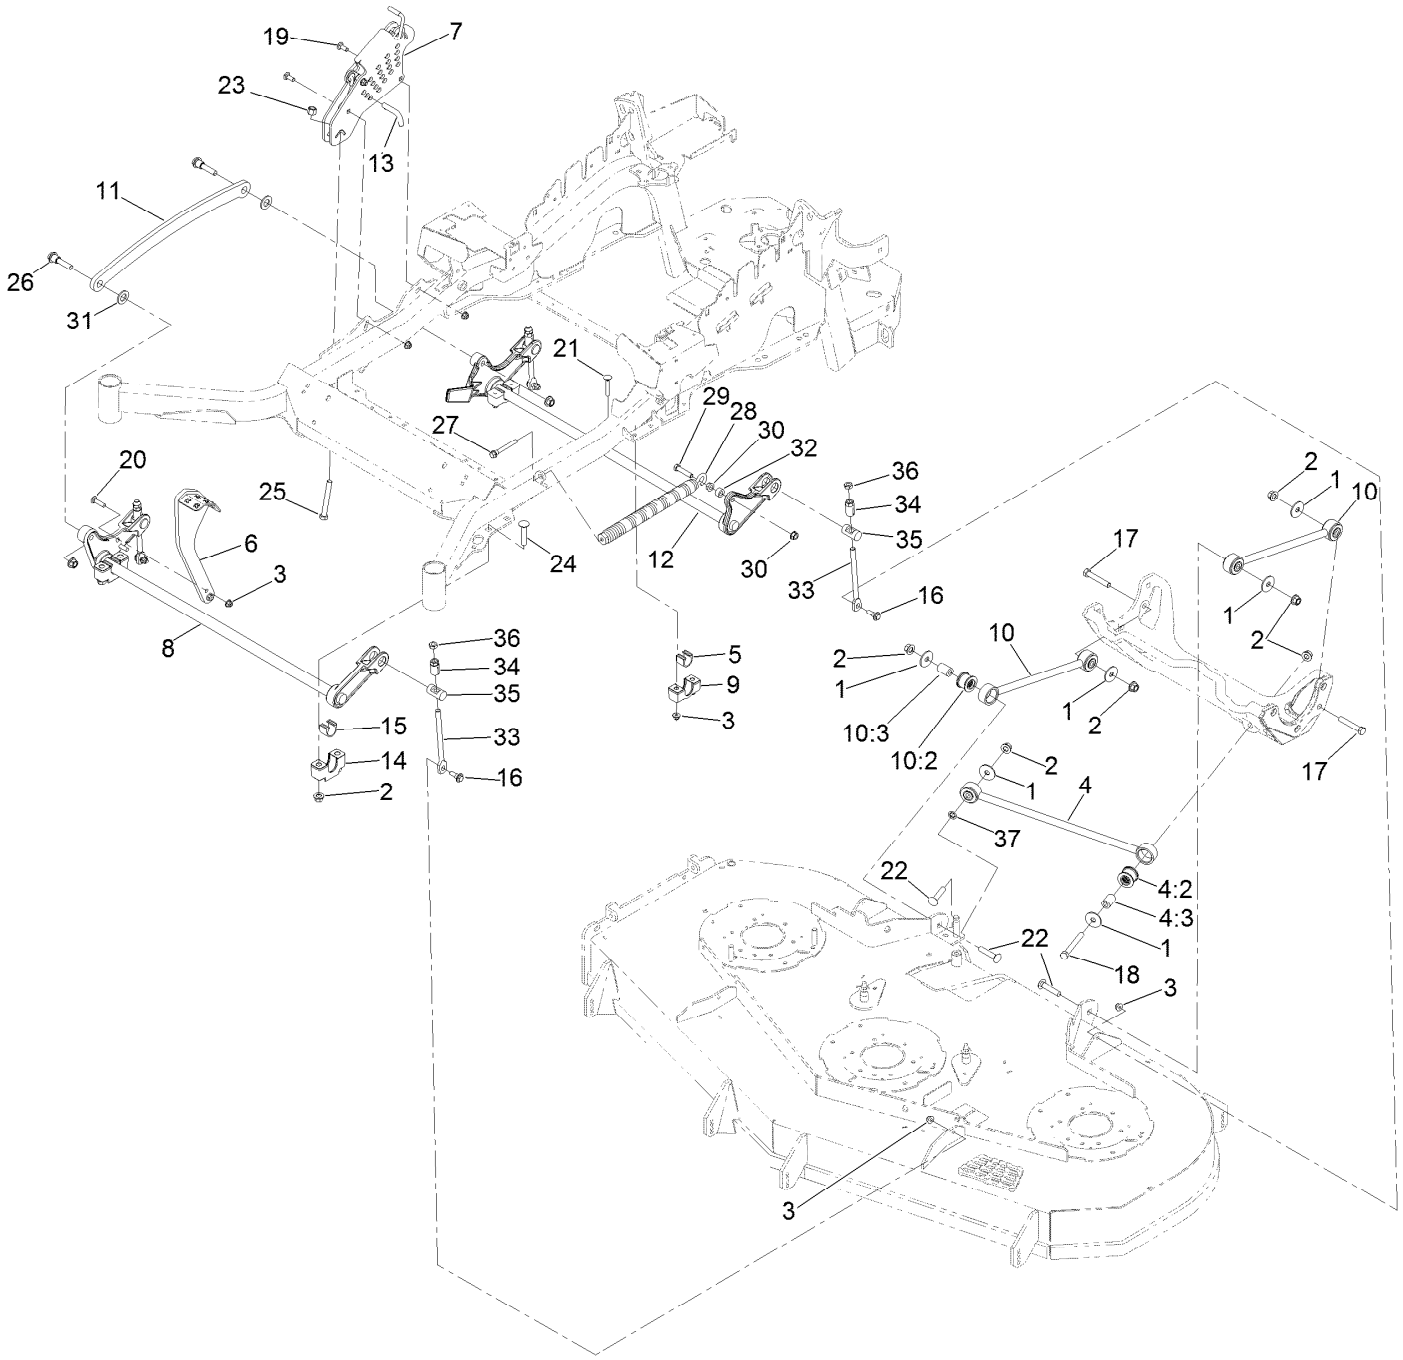

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	86-1990	6	Washer-Thrust
2	99-5107	12	Nut-Lock
3	104-8301	12	Nut-HF, NI
4	109-5013	1	Panhard Rod ASM
4:2	109-5009	2	Bushing-Suspension, Rubber
4:3	109-5010	2	Spacer
5	109-7173	2	Bearing-Cross Shaft, Rear
6	131-8812-01	1	Lever-Foot
7	109-7438	1	HOC ASM
8	126-2477-03	1	Decklift-Front
9	127-0553	2	Support-Bearing, Cross Shaft (Rear)
10	109-7952	2	Deck Strut ASM
10:2	109-5009	2	Bushing-Suspension, Rubber
10:3	109-5010	2	Spacer
11	116-0797-03	1	Link-Lift, Deck
12	116-2645-03	1	Lift-Deck, Rear
13	116-5584	1	Pin-HOC
14	109-9409	2	Support-Bearing, Cross Shaft (Front)
15	109-9410	2	Bearing-Cross Shaft, Front
16	109-9840	4	Screw-Shoulder, HHF
17	325-12	2	Screw-HH
18	325-17	1	Screw-HH
19	3231-2	2	Bolt-CARR
20	3231-4	2	Screw-CARR
21	3231-7	4	Screw-CARR
22	3233-34	3	Screw-CARR
23	3296-23	1	Nut-Lock, NI
24	116-1700	4	Bolt-CARR
25	116-0559	1	Bolt-TAP
26	116-2022	2	Screw-HHF, Shoulder
27	92-7674	1	Bolt-Shoulder
28	116-0000	1	Spring-Extension
29	109-9065	1	Screw-HH
30	32128-37	2	Nut-HF
31	3256-28	2	Washer-Flat
32	116-2695	1	Spacer
33	109-8007	4	Link-Adjuster, Deck Lift
34	109-7840	4	Adjuster-Lift, Deck
35	109-8353	4	Trunnion
36	3218-5	4	Nut-Jam
37	126-2916	1	Nut-Push


Height-of-Cut Assembly No. 109-7438

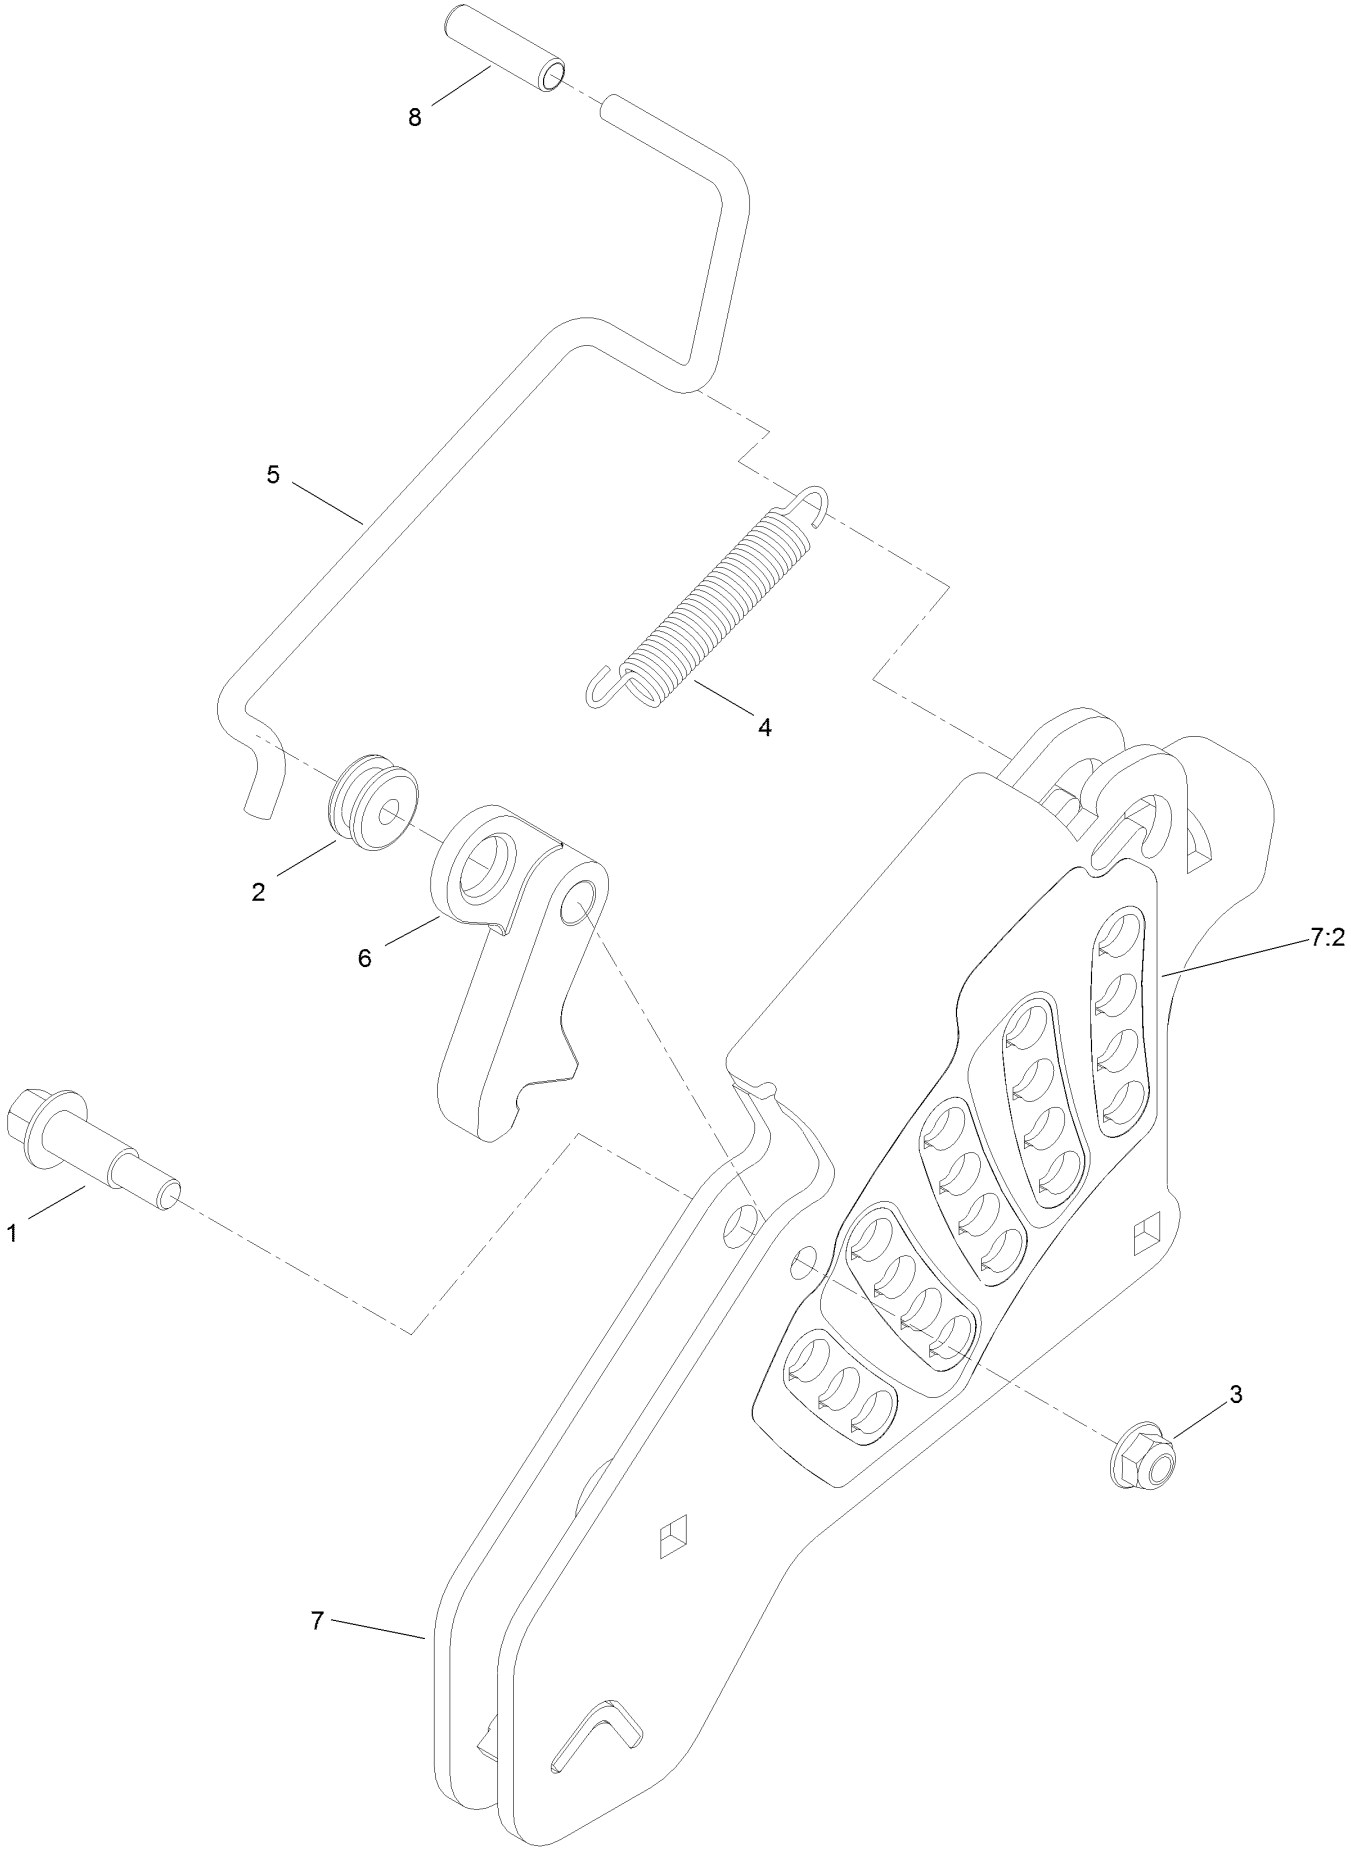

Height-of-Cut Assembly No. 109-7438 (continued)

Ref.	Part Number	Qty.	Description
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-HF, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	109-7335	1	HOC Plate ASM
7:2	126-4398	1	Decal-HOC
8	109-8250	1	Grip-Lever

Engine, Clutch and Muffler Assembly

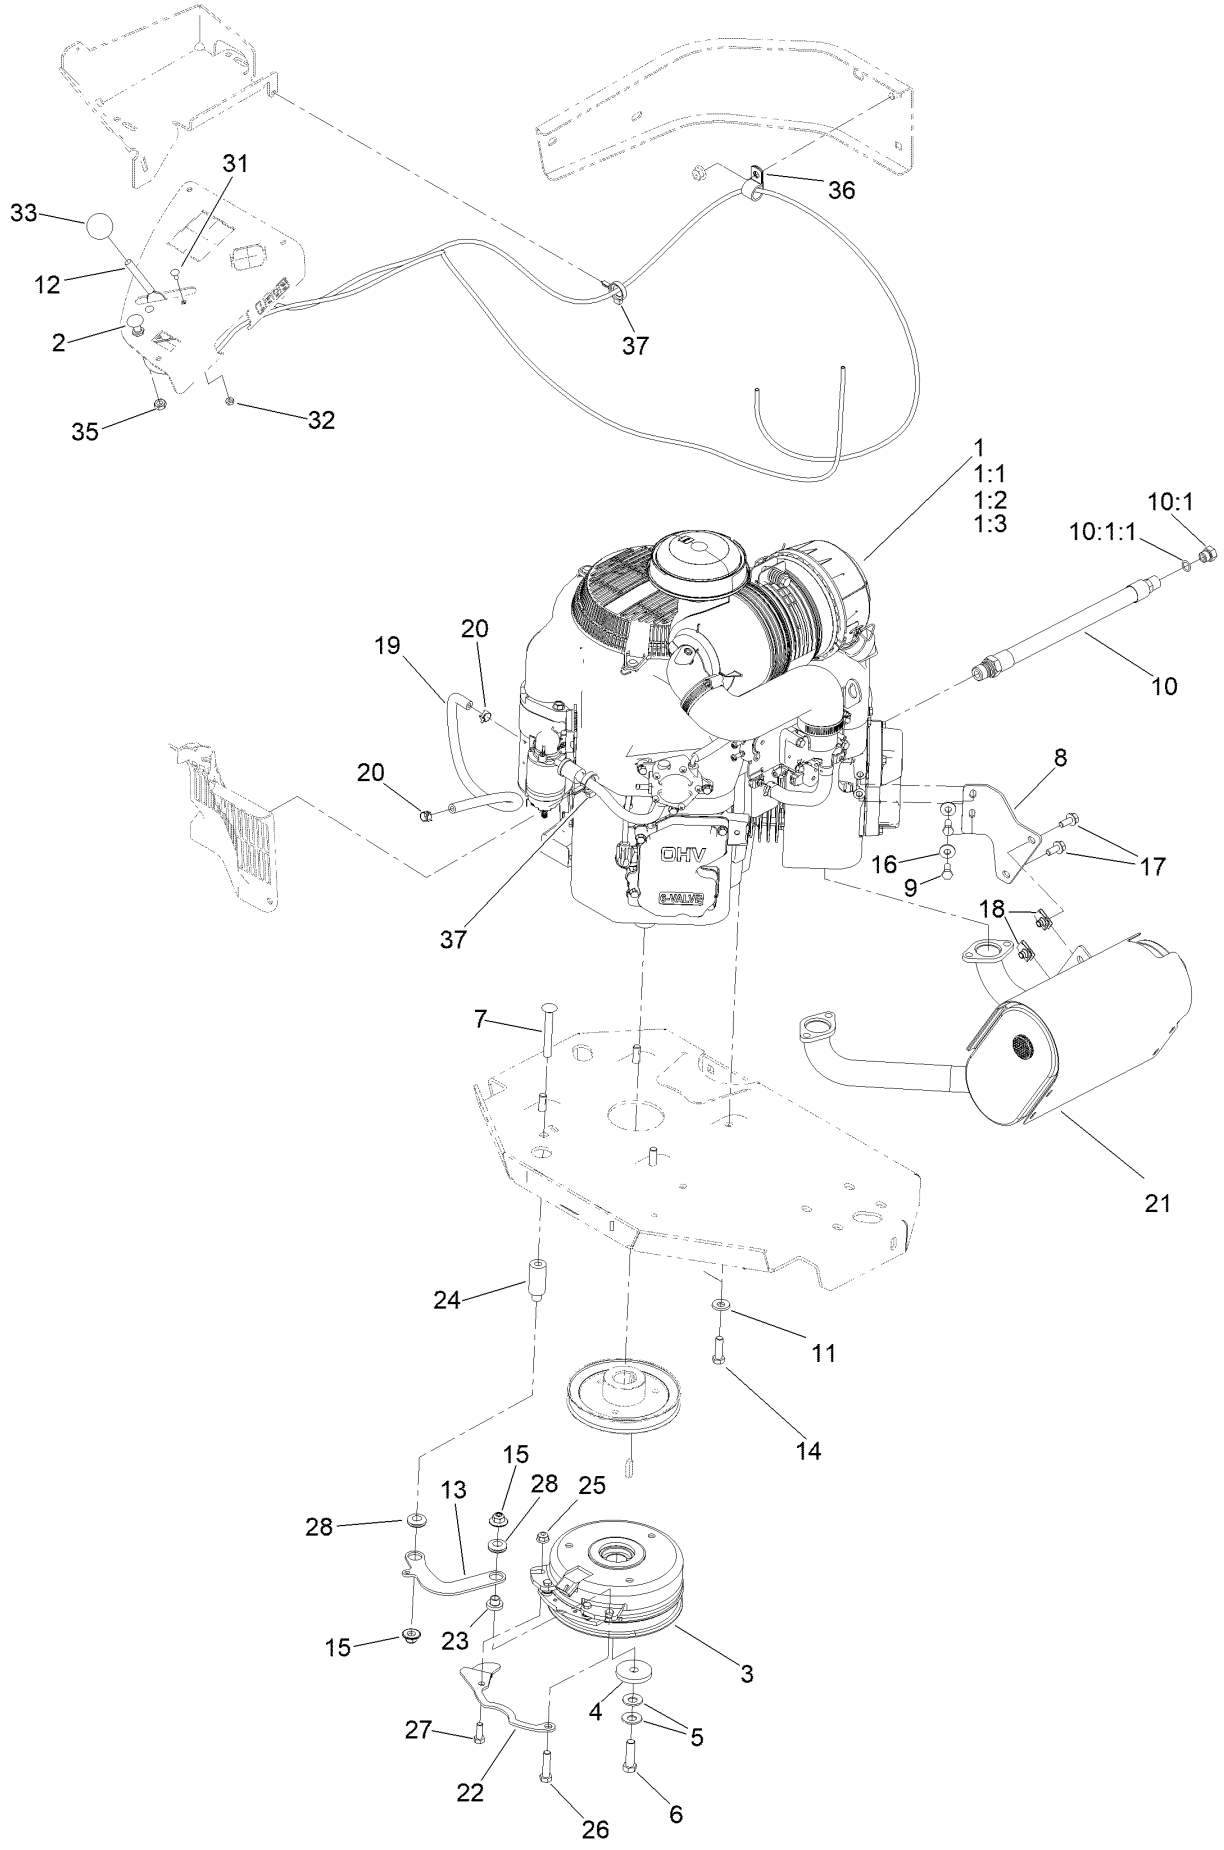


Engine, Clutch and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fx921V-S04-R ■▲
1:1		1	Kawasaki 49065-7007 Engine Oil Filter ■▲
1:2		1	Kawasaki 11013-7044 Engine Air Filter ■▲
1:3		1	Kawasaki 11013-7045 Safety Filter ■▲
2	133-1873	1	Cable-Choke
3	126-4185	1	Clutch Kit
4	109-6919	1	Washer-Plain
5	1-603610	2	Washer-Spring
6	109-9761	1	Screw-HH ❑
7	3231-42	1	Screw-CARR
8	116-1587	1	Bracket-Muffler
9	33114-020	2	Screw-HH
10	116-4924	1	Engine Oil Drain Hose ASM ◆
10:1	353-508	1	Plug-HH ●
10:1:1	237-42	1	O-Ring
11	98-5975	4	Washer-Belleville
12	133-1816	1	Throttle-Control
13	116-3317-01	1	Link-Anchor, Clutch
14	323-7	4	Screw-HH
15	109-6658	2	Nut-Flange, NI
16	1-303334	2	Washer-Spring
17	3234-5	2	Screw-HHF
18	94-2413	2	Nut-U
19	109-0298	1	Line-Fuel
20	2412-98	2	Clamp-Hose
21	116-1707	1	Muffler
22	116-3331-01	1	Belt-Guide
23	116-3318	1	Spacer
24	116-3319	1	Spacer
25	104-8300	1	Nut-HF, NI
26	323-8	1	Screw-HH
27	322-4	1	Screw-HH
28	93-5108	2	Grommet-Rubber
31	1-807513	2	Bolt-CARR
32	3296-2	2	Nut-Lock, NI
33	1-603175	1	Knob-Ball
35	3220-3	1	Nut-HJ
36	1-633396	1	Clip-Loom
37	105-1853	2	Clamp-Hose

● Torque to 24-26 ft-lb
▲ Obtain parts from www.kawpower.com
◆ Use a Teflon Pipe Sealant or equivalent on threads.
❑ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.
■ Not serviced separately

Deck Assembly

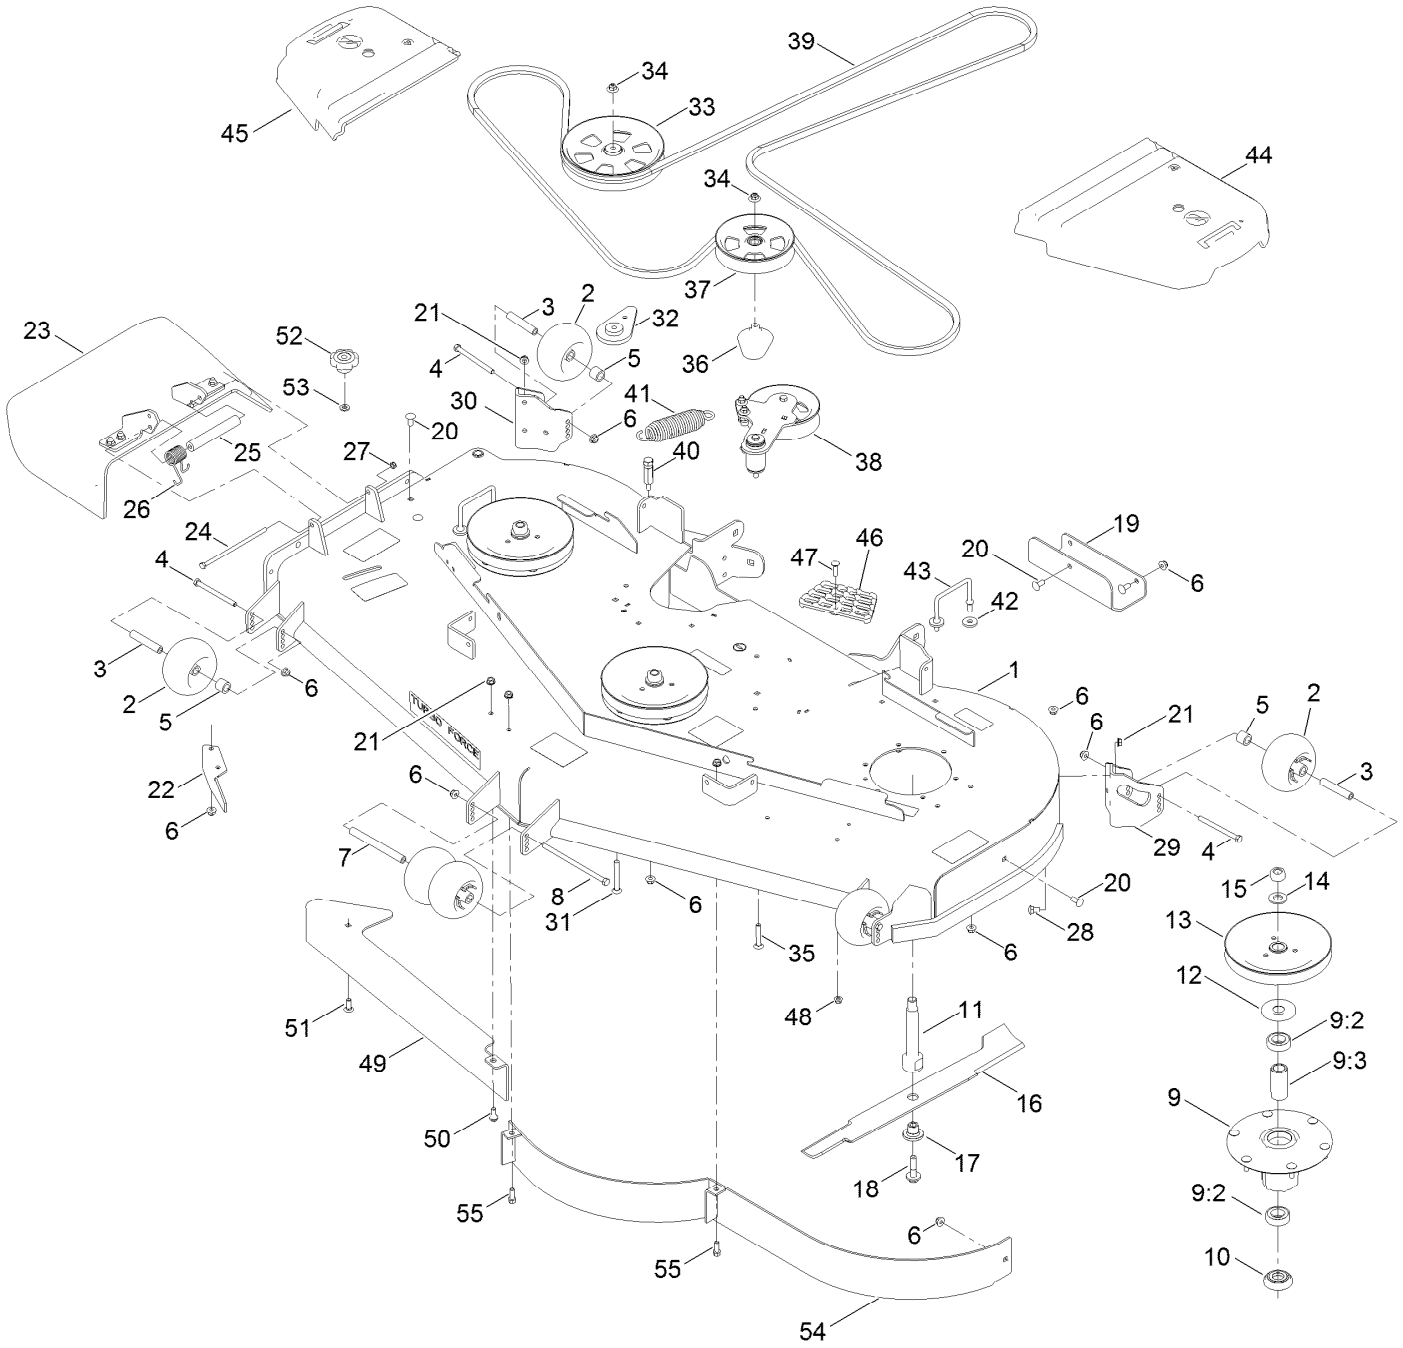


Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-1170	1	Deck Decal ASM
2	1-603299	6	Roller-Scalp, Anti
3	98-7912	4	Tube-Spanner
4	323-23	4	Screw-HH
5	98-7913	4	Tube-Spacer
6	104-8301	34	Nut-HF, NI
7	98-5967	1	Spacer-Wheel
8	108-5388	1	Screw-HH
9	137-9780	3	Spindle ASM
9:2	116-0720	2	Bearing-Ball
9:3	138-6042	1	Spacer-Bearing
10	137-9784	3	Guard-Bottom
11	138-6045	3	Shaft-Spindle
12	103-1330	3	Guard-Bearing, Top
13	138-6060	3	Sheave-Drive, Blade
14	103-2802	3	Washer
15	116-7306	3	Nut-Hex
16	140-1238	3	Blade
17	137-9787	3	Bushing-Hex
18	109-9220	3	Screw-Sems
19	121-7975-01	1	Plate-Skid
20	3231-27	6	Screw-CARR
21	3290-357	9	Nut-HSF
22	106-3216-01	1	Baffle-Discharge
23	108-2792	1	Rubber Deflector ASM
24	322-50	1	Screw-HH
25	105-4622	1	Spacer
26	108-4052	1	Spring-Torsion
27	3296-47	1	Nut-Lock,NI
28	3231-1	6	Screw-CARR
29	106-7354-01	1	Mount-Wheel, LH
30	106-7355-01	1	Mount-Wheel, RH
31	3231-42	1	Screw-CARR
32	109-9416	1	Spacer-Idler
33	132-4734	1	Pulley-Idler,Flat
34	109-6658	2	Nut-Flange, NI
35	3231-40	1	Bolt-CARR
36	109-2872	1	Spacer-Pulley
37	136-5404	1	Pulley-Idler, Flat
38		1	Idler Arm ASM ●
39	109-9023	1	Belt-V
40	114-5867	1	Anchor-Spring, Tall
41	116-6317	1	Spring-Extension
42	1-373034	4	Washer
43	109-6982	2	Wireform-Cover
44	109-6938	1	Cover-Belt, LH
45	116-0094	1	Cover-Belt, RH
46	126-4781-03	1	Step-Deck
47	3230-3	1	Screw-CARR
48	104-8300	1	Nut-HF, NI
49	138-6051-01	1	Plate-Baffle
50	94-7582	1	Bolt-Shoulder
51	3231-22	1	Screw-CARR
52	109-1092	1	Knob
53	100-4852	1	Washer-Hardened
54	114-5843-01	1	Baffle
55	92-1624	2	Screw-HWH Thd Form

● Not serviced separately

Deck Decal Assembly No. 140-1170

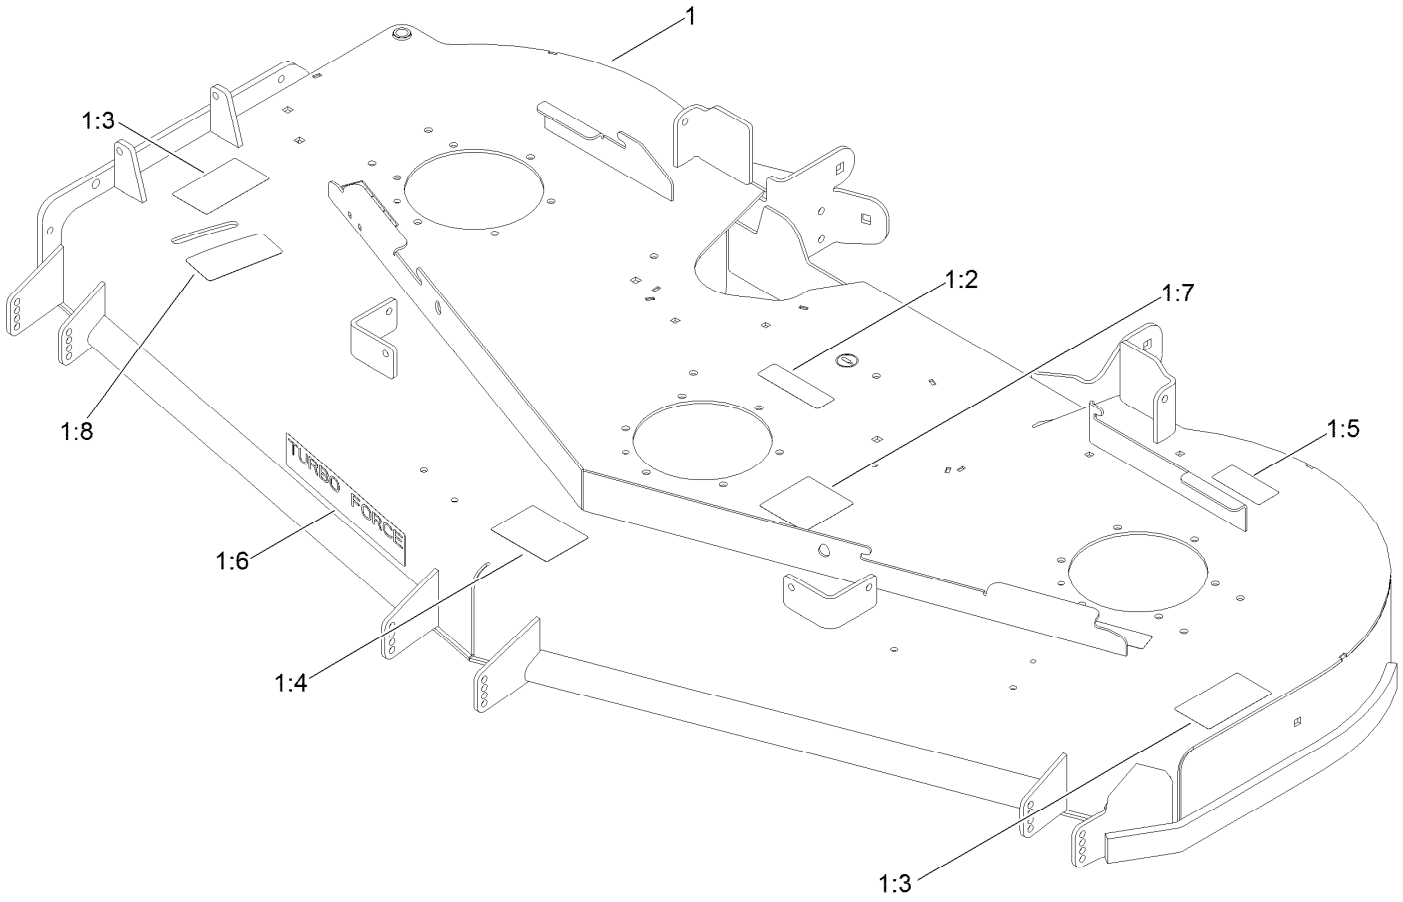


Deck Decal Assembly No. 140-1170 (continued)

Ref.	Part Number	Qty.	Description
1		1	Deck ASM ●
1:2	112-9028	3	Decal-Cover, Missing
1:3	117-3848	2	Decal-Danger
1:4	127-0326	1	Decal-Scalp, Anti
1:5	116-8283	1	Decal-Torque, Bolt
1:6	107-1620	1	Decal
1:7	136-5508	1	Decal-Routing, Deck Belt
1:8	131-1180	1	Decal-Adjustment, Baffle

● Not serviced separately


Rubber Deflector Assembly No. 108-2792

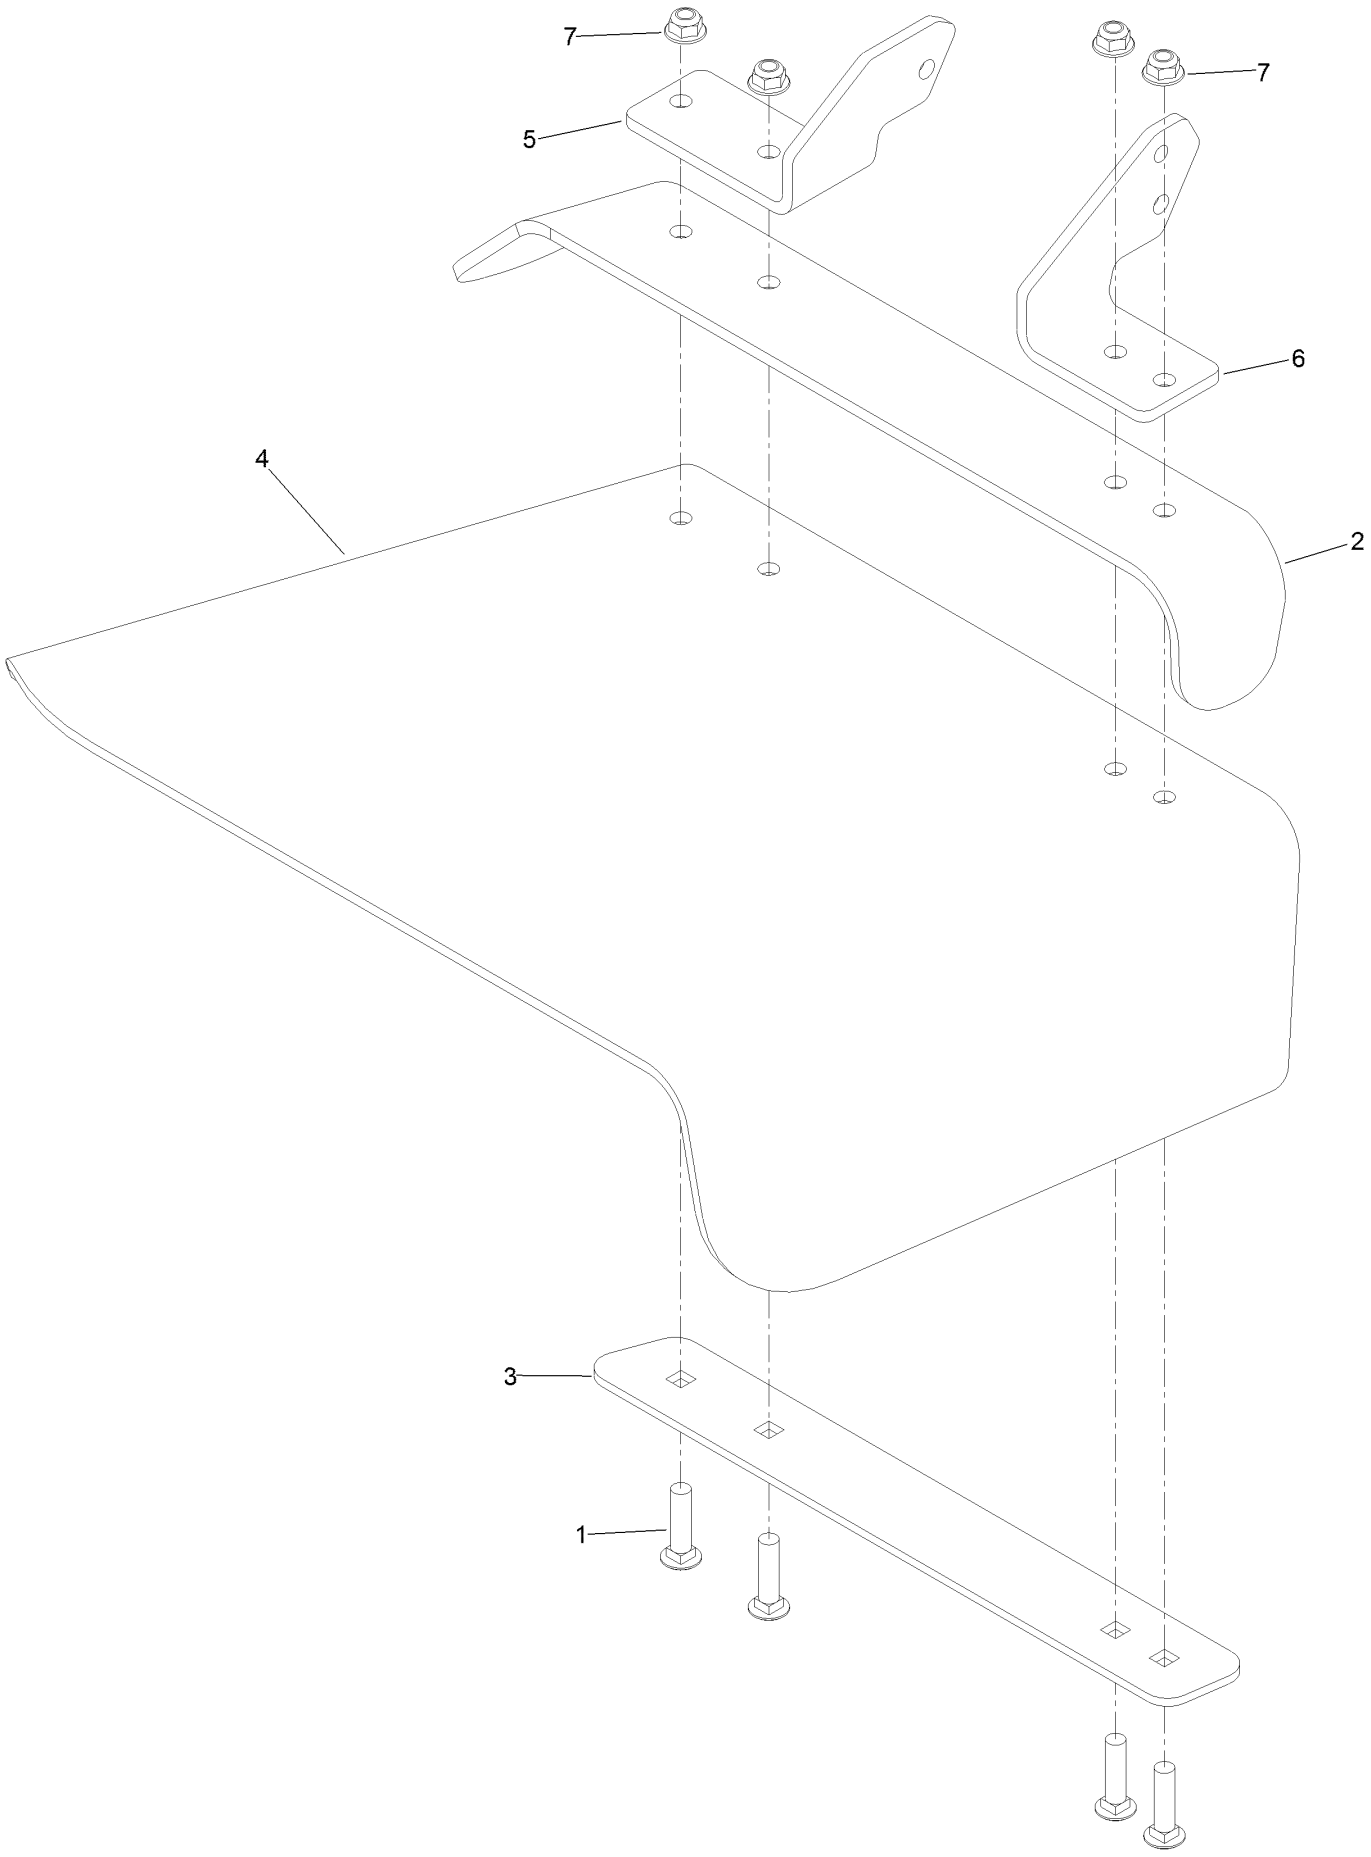

Rubber Deflector Assembly No. 108-2792 (continued)

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI


Idler Arm Assembly

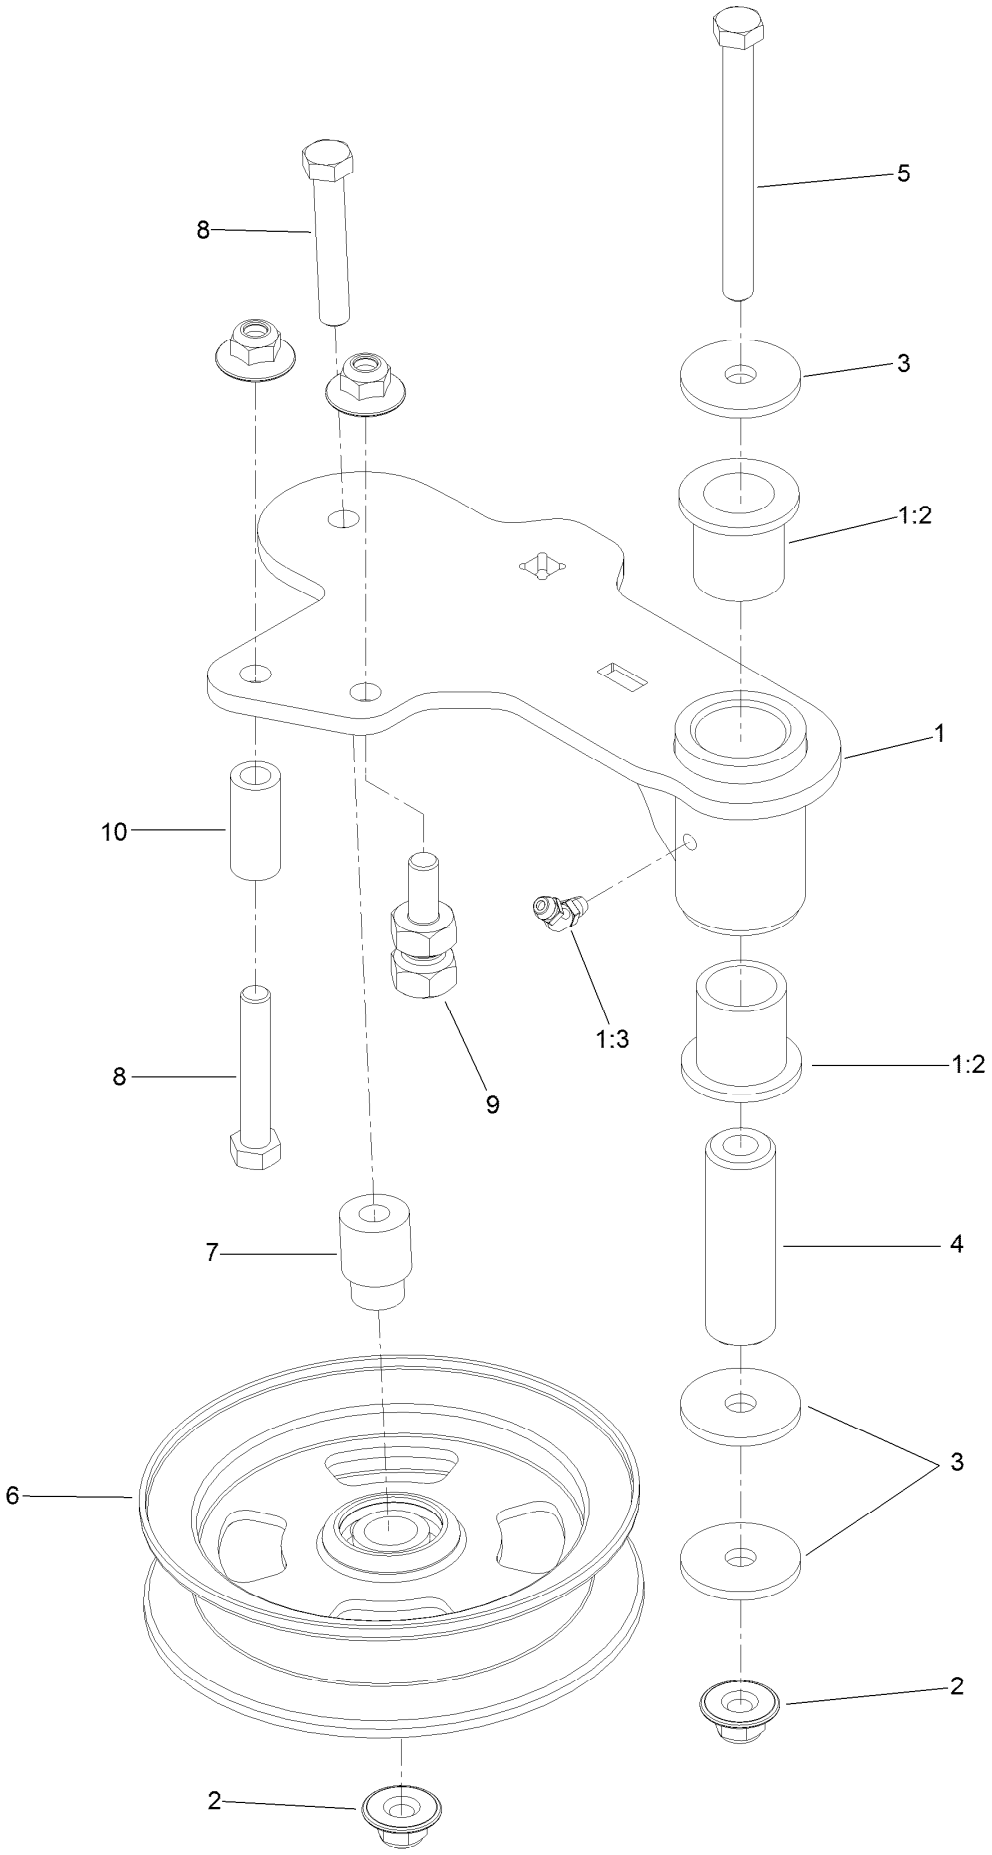

Idler Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	114-5870	1	Idler Arm ASM
1:2	1-303514	2	Bearing-Flanged
1:3	1481	1	Fitting-Grease
2	109-6658	4	Nut-Flange, NI
3	1-213069	3	Washer
4	114-5848	1	Spacer-Plain
5	98-5961	1	Screw-HH
6	132-9425	1	Pulley-Idler, Flat
7	112-4212	1	Mount-Pulley
8	323-11	2	Screw-HH
9	132-4729	1	Anchor-Spring, Short
10	104-0151	1	Spacer

Frame Decal Assembly

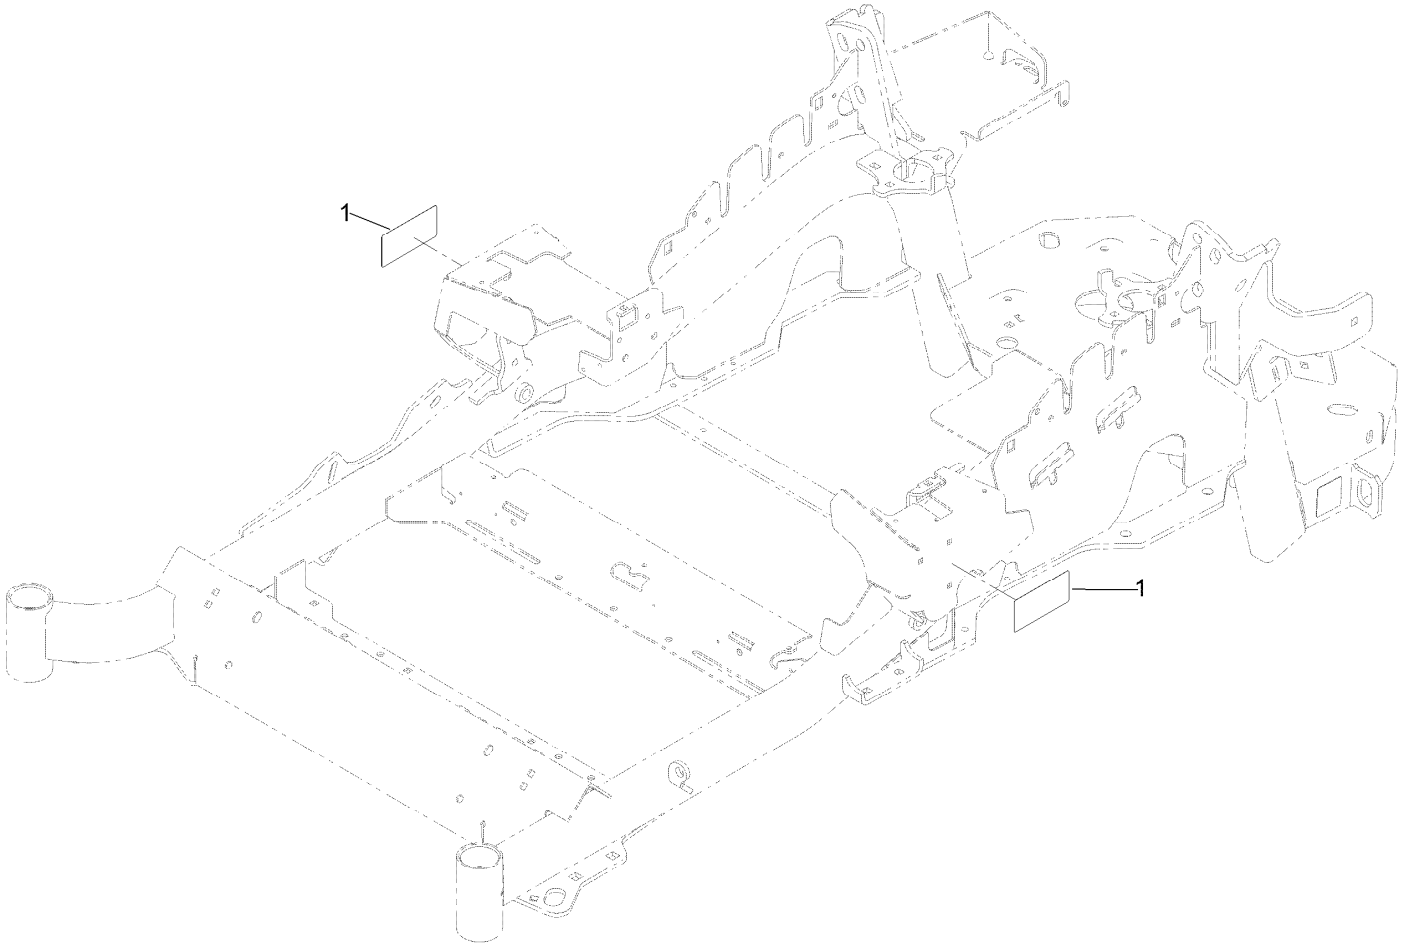

Frame Decal Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	120-5895	2	Decal

Attachments and Accessories

For 72968 Z Master Professional 6000 Series Riding Mower with 72in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Turbo Baffle Kit	107-1634
Hitch Kit	109-9487
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Roller Striper Kit	115-7480
Light Kit	116-1154
Seat Cover (W/arm rest)	117-0095
Operator Controlled Discharge Chute Kit	117-3600
Toro Rops Lock Kit	126-4064
Jack Mount Kit	127-6665
Jack Kit	127-6666
Worklight Kit	135-7320
Shock/Spring Asm	136-8993
Bucket Mount Kit	137-9216
Trimmer Mount	137-9769
Recycler Kit-G3/GM 3300 72in	139-6659
24x12n12 - Tweel Turf	139-7891
Blade-24.50 High Flow	140-1238
Blade-24.50 Atomic	140-1239
Blade-24.50 Medium Flow	140-4850
Blade-24.50 Low Flow	140-4851
Blade-24.50 Recycler	140-4852
6 Pack-Blade, 24.5 High Flow	140-4872
6 Pack-Blade, 24.5 Med Flow	140-4873
6 Pack-Blade, 24.5 Low Flow	140-4874
6 Pack-Blade, 24.5 Atomic	140-4875
6 Pack-Blade, 24.5 Recycler	140-4876
Weight Kit, Under Toe Board	140-4958
Toro Rider Over Seat Bag	490-7317
Toro Deluxe Rider Cover	490-7319
Toro Rider Arm Rest Bag	490-7320
Spark Arrestor Screen	75-6880
Blower and Drive Kit	78554
72in E-z Vac Triple Bagger	78555
72in E-z Vac Dfs Bagger	78556
Filter Minder Gauge	99-4664
Trash Holder Kit	TC26

Notes:



Count on it.