Form Number 3328-778

52in SFS Side Discharge Mower

Model No. 30151 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved


Contents

Description	Page
Deck and Spindle Assembly	3
Spindle Assembly No. 11-5769	4
Spindle Assembly 12-2549	5
Cover and Gage Wheel Assembly	6
Carrier Frame Assembly	7
Castor Wheel and Tire Assembly	8

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HS	hex
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	phillips pan head
PTH	phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head
WH	wing head

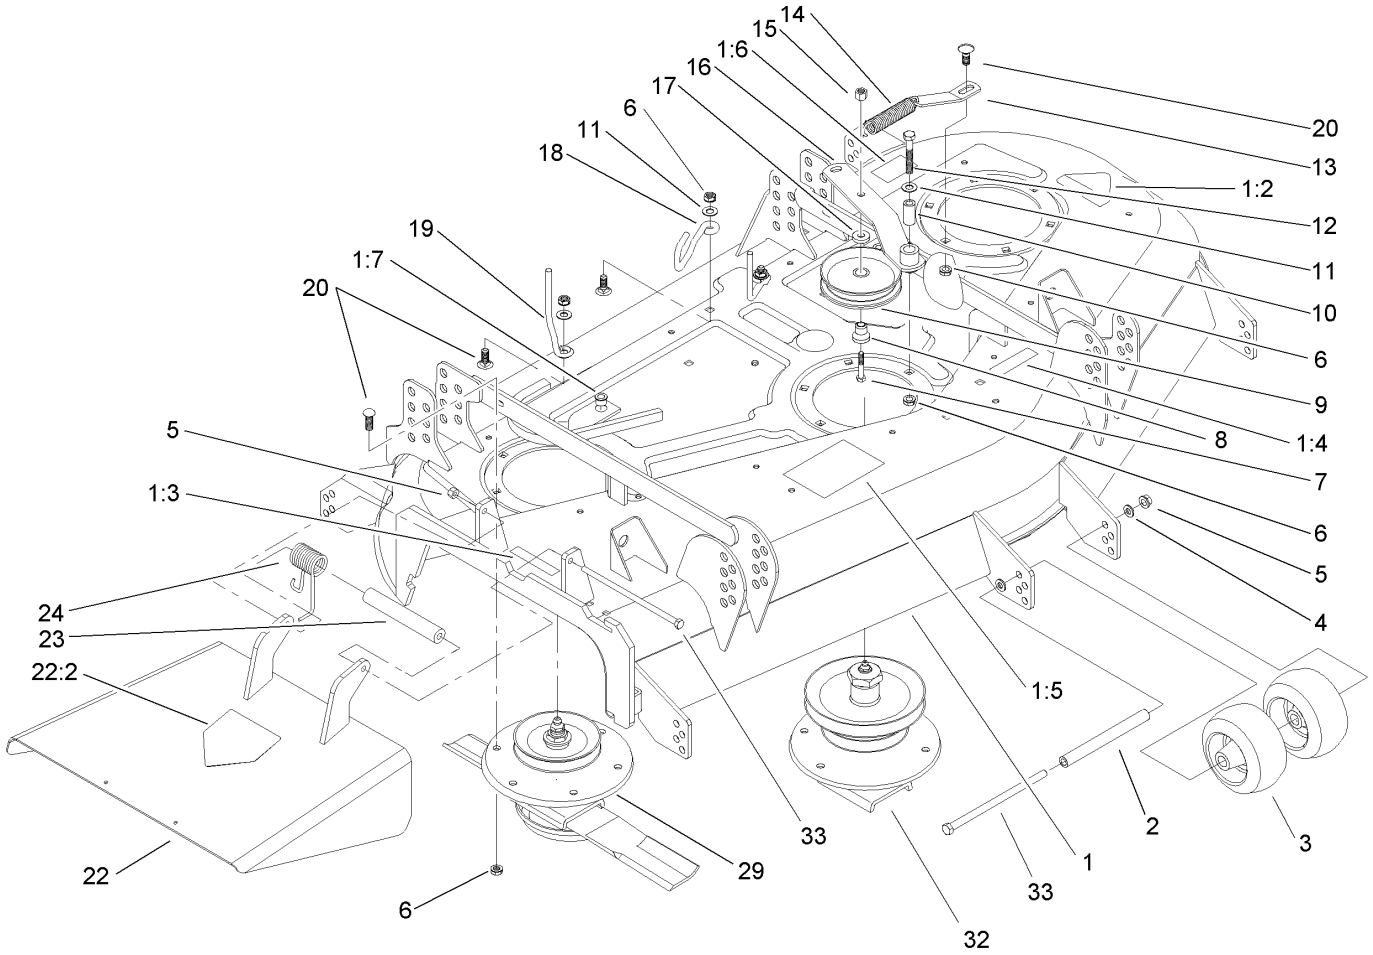

Deck and Spindle Assembly


Ref	Part No.	Qty.	Description
1	106-0749	1	52in Deck ASM
1:2	43-8480	1	Decal-Danger
1:3	66-6380	1	Decal-Danger
1:4	67-5360	1	Decal-Danger
1:5	66-1340	1	Decal-Danger
1:6	68-8340	1	Decal-Torque
1:7	32148-10	2	Insert-Threaded
2	98-5967	1	Spacer-Wheel
3	68-2730	2	Wheel-Gage
4	3256-23	2	Washer-Flat
5	3296-29	2	Nut-Lock, NI
6	32128-21	21	Nut-HF
7	3211-8	1	Screw-HH
8	65-5950	1	Bushing-Pulley
9	65-5940	1	Pulley-Idler
10	51-3640	1	Sleeve
11	3256-24	8	Washer-Flat
12	323-11	1	Screw-HH
13	55-7650	1	Plate-Spring
14	51-3650	1	Spring-Extension
15	3296-5	3	Nut-Lock
16	55-7640-03	1	Idler Arm ASM
17	7-0081	1	Washer-Flat
18	55-7620	1	Guide-Belt

Ref	Part No.	Qty.	Description
19	52-4780	2	Rod-Belt
20	3231-22	20	Screw-CARR
22	105-4623	1	Deflector ASM
22:2	93-1122	1	Decal-Danger
23	105-4622	1	Spacer
24	104-8554	1	Spring-Torsion
29	11-5769	1	Spindle And Blade ASM
32	12-2549	1	Center Spindle And Blade ASM
33	322-50	2	Screw-HH

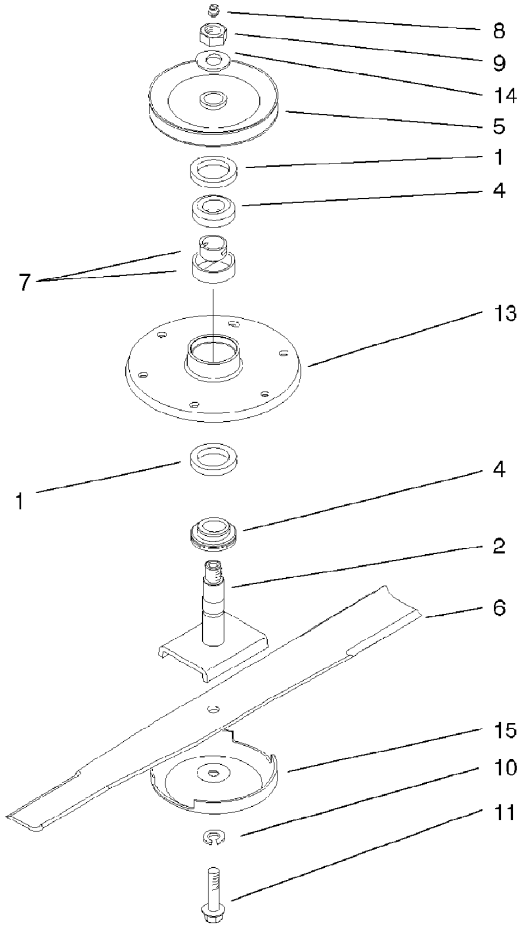


Spindle Assembly No. 11-5769

Ref	Part No.	Qty.	Description
1	253-139	2	Seal-Oil
2	27-0920	1	Shaft
4	46-8530	1	Bearing ASM
5	27-0970	1	Pulley And Hub ASM
6	27-0990	1	Blade
7	27-5970	1	Spacer-Set, Matched
8	302-2	1	Fitting-Grease
9	32146-20	1	Nut-Jam
10	3253-27	1	Washer-Lock/sp
11	44-2200	1	Screw-Blade
13	61-4160	1	Housing-Spindle
14	106-0776	1	Washer-Pinion
15	72-9361	1	Cup-Scalp, Anti

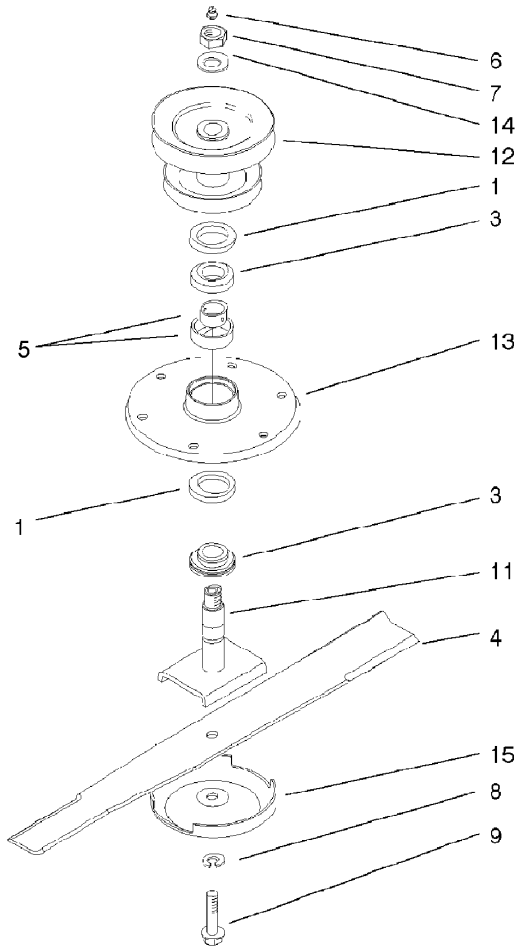


Spindle Assembly 12-2549

Ref	Part No.	Qty.	Description
1	253-139	2	Seal-Oil
3	46-8530	1	Bearing ASM
4	27-0990	1	Blade
5	27-5970	1	Spacer-Set, Matched
6	302-2	1	Fitting-Grease
7	32146-20	1	Nut-Jam
8	3253-27	1	Washer-Lock/sp
9	44-2200	1	Screw-Blade
11	51-3551	1	Shaft-Spindle
12	55-7610	1	Pulley And Hub ASM
13	61-4160	1	Housing-Spindle
14	106-0776	1	Washer-Pinion
15	72-9361	1	Cup-Scalp, Anti

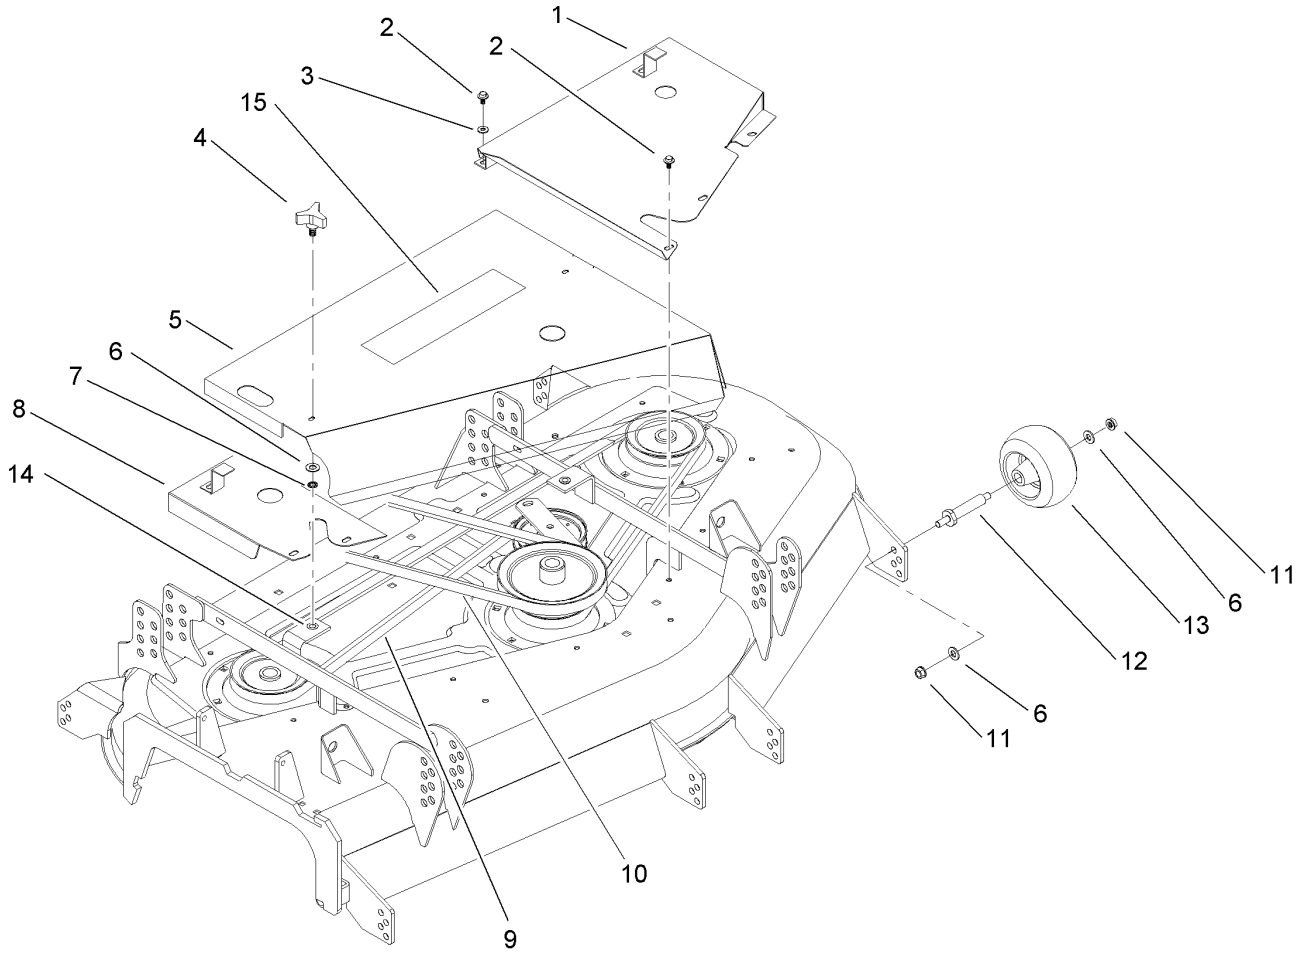


Cover and Gage Wheel Assembly

Ref	Part No.	Qty.	Description
1	51-3910-01	1	LH Cover ASM
2	9266714	7	Screw-HWH
3	3256-22	1	Washer-Flat
4	62-6520	2	Knob
5	82-5410-01	1	Cover-Center
6	3256-24	10	Washer-Flat
7	32151-72	2	Ring-Retaining
8	51-3890-01	1	RH Cover ASM
9	27-1160	1	V-Belt
10	99-2843	1	V-Belt-Deck Drive
11	3296-39	8	Nut-Lock, NI
12	99-2842	4	Spacer
13	68-2730	4	Wheel-Gage
14	32148-10	2	Insert-Threaded
15	106-0705	1	Decal

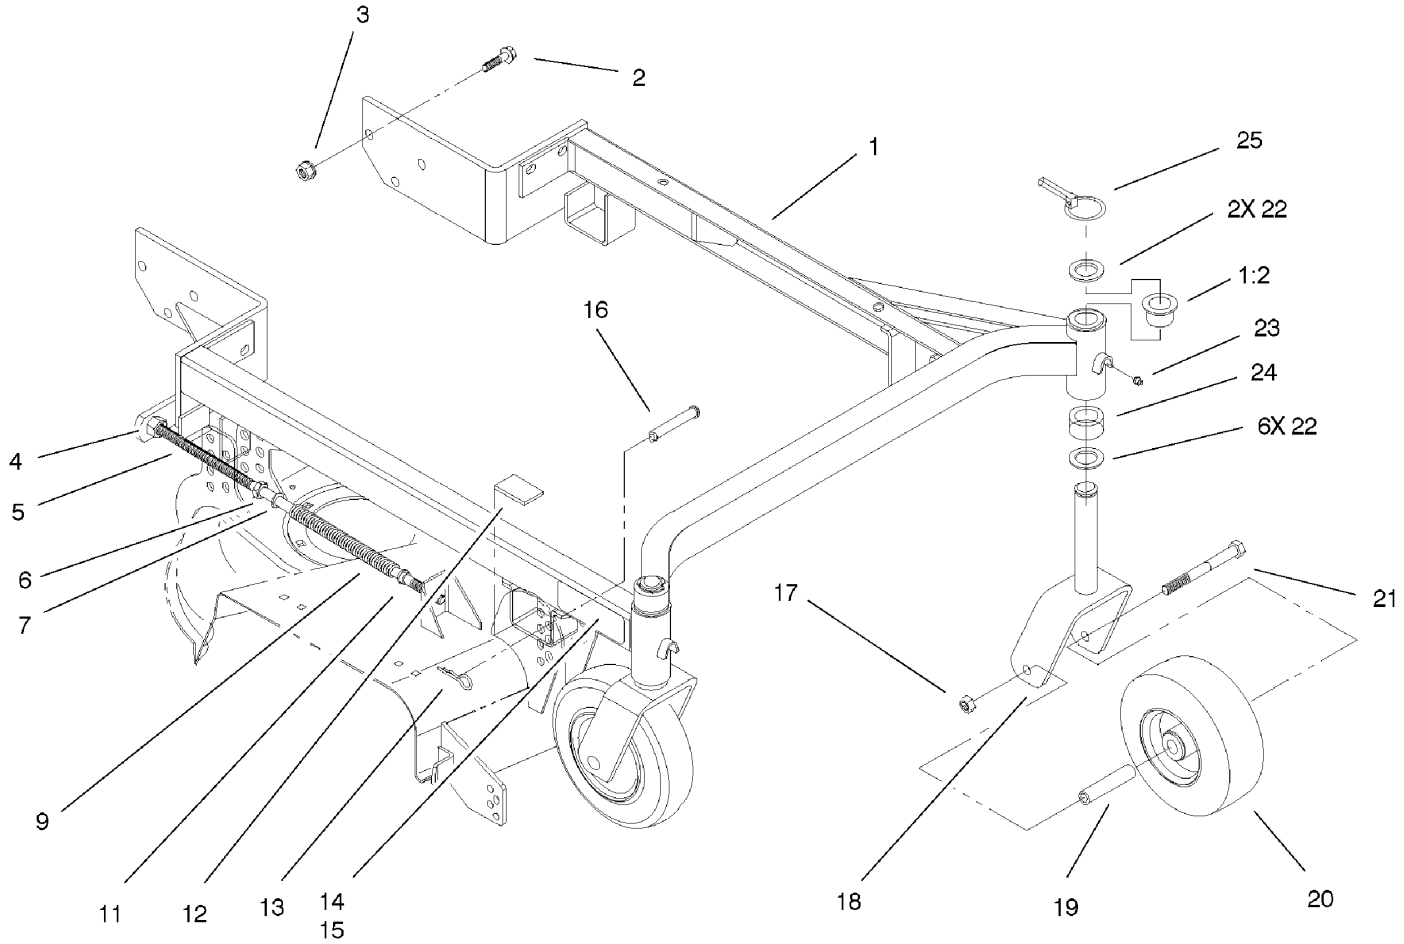

Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	99-2847	1	Carrier Frame ASM
1:2	94-1291	4	Bushing
2	3234-6	6	Screw-HHF
3	32128-23	6	Nut-HF
4	3296-45	2	Nut-Lock, NI
5	74-0310	2	Shaft-Adjusting
6	3218-5	4	Nut-Jam
7	41-8440	2	Washer
9	74-0290	2	Spring
11	256-156	2	Bushing-Flange
12	74-0350	4	Cushion-Rubber
13	3290-355	4	Pin-Hair
14	85-7450	1	Decal-Hoc, LH
15	85-7460	1	Decal-Hoc, RH
16	283-55	4	Pin-Clevis
17	32153-5	2	Nut-Lock, Side
18	100-6455-01	2	Castor Fork ASM
19	100-6453	2	Bushing-Spanner
20	100-6451	2	Castor Wheel ASM
21	325-19	2	Screw-HH
22	3-6781	8	Washer-Thrust
23	302-5	2	Fitting-Grease
24	93-1166	2	Spacer-Castor
25	1-809020	2	Pin

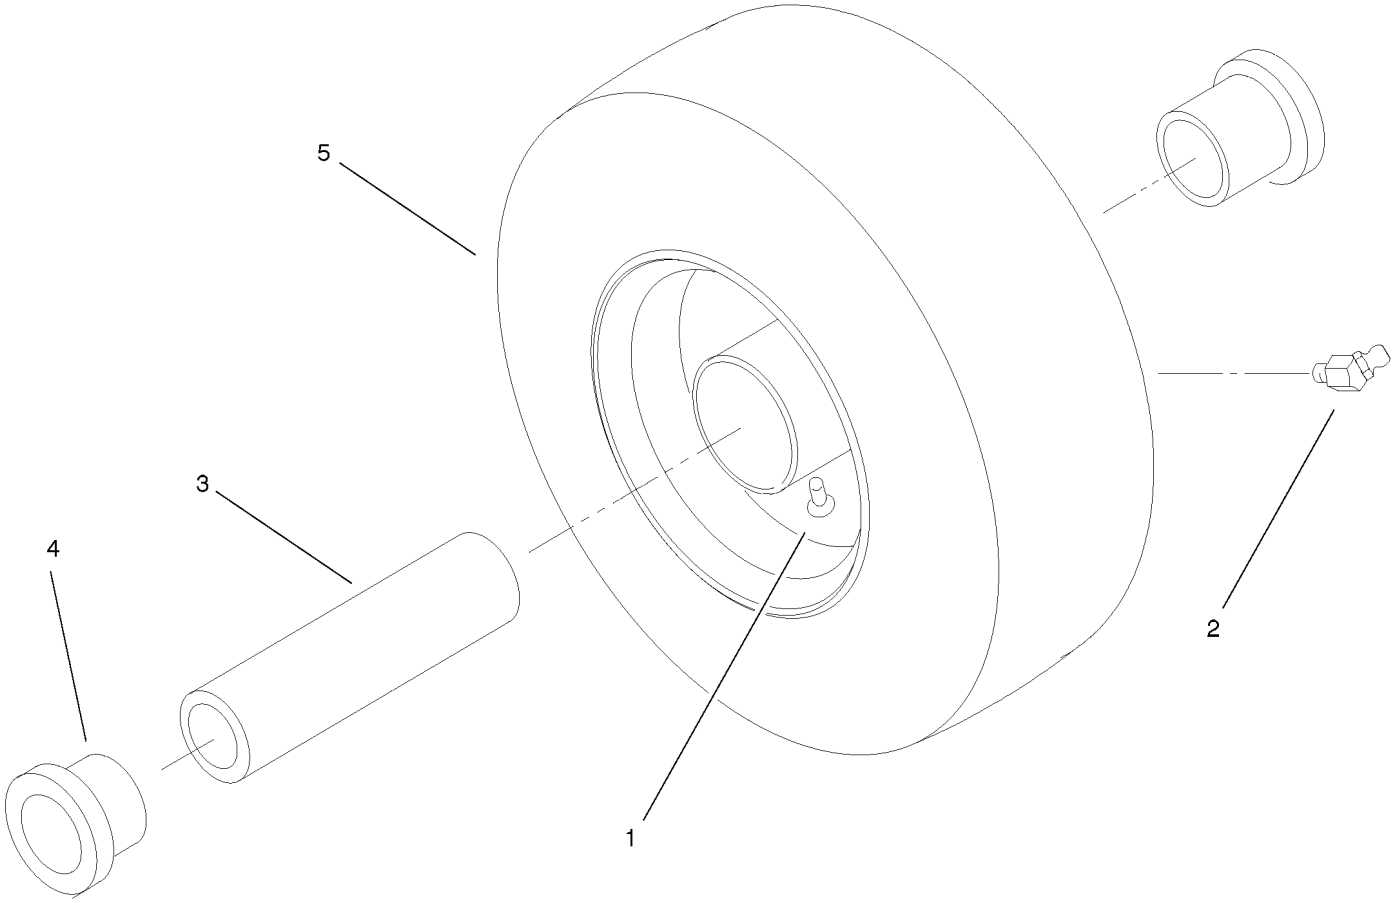

Castor Wheel and Tire Assembly

Ref	Part No.	Qty.	Description
1	232-27	1	Stem-Valve
2	302-11	1	Fitting-Lube, 45 DEG
3	83-4740	1	Bearing
4	62-5580	2	Bearing-Outside
5	100-6452	1	Tire-Tubeless

NOTES

NOTES

NOTES


TORO®