
FORM NO. 3319–761 REV. B

TORO®

MODEL NO. 38062–8900001 7 UP
MODEL NO. 38063–8900001 & UP

PARTS CATALOG

622 SNOWTHROWER

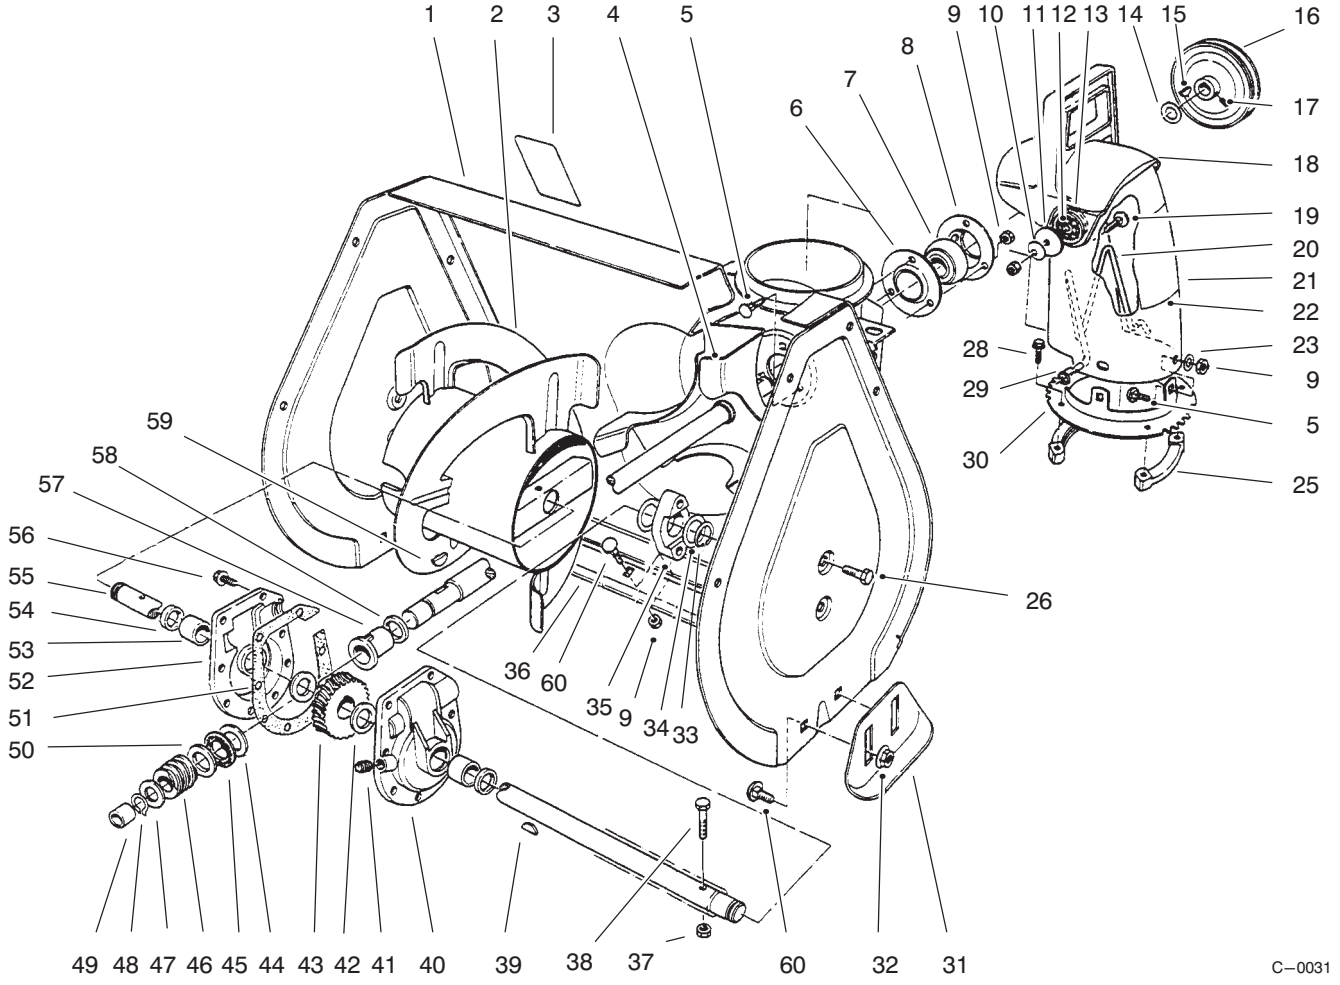

AUGER ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	94–9872	Housing–Auger (Incl. Ref. #3) (Model 38062 Only)	1
*	94–9873	Housing – Auger (Incl. Ref. #3) (Model 38063 Only)	1
2	39–1180	Auger – R.H.	1
*	39–1190	Auger – L.H.	1
3	53–7670	Decal – Auger Warning (Model 38062 Only)	1
*	94–2568	Decal – Auger Warning (Model 38063 Only)	1
4	37–6990	Shaft & Impeller	1
5	3230–18	Bolt – Carriage	6
6	26–6120	Flange – Bearing Front	1
7	63–3450	Bearing – Ball	1
8	26–6110	Flange – Bearing Rear	1

Ref. No.	Part No.	Description	No. Used
9	3296–29	Nut – Lock	13
10	3290–340	Washer – Belleville	2
11	3256–68	Washer – Flat	2
12	55–8950	Plate – Friction	2
13	20–4320	Washer – Rubber	2
14	3–0737	Washer	1
15	3257–23	Key	1
16	37–6890	Pulley	1
17	3242–4	Screw – Set	2
18	56–2680	Deflector	1
19	3230–22	Bolt – Carriage	2
20	56–2670	Chute – Wire	1
21	94–2793	Chute – Discharge (Incl. Ref.# 22) (Model 38062 Only)	1

*Not Illustrated

© The TORO Company – 1997
All Rights Reserved

TPS

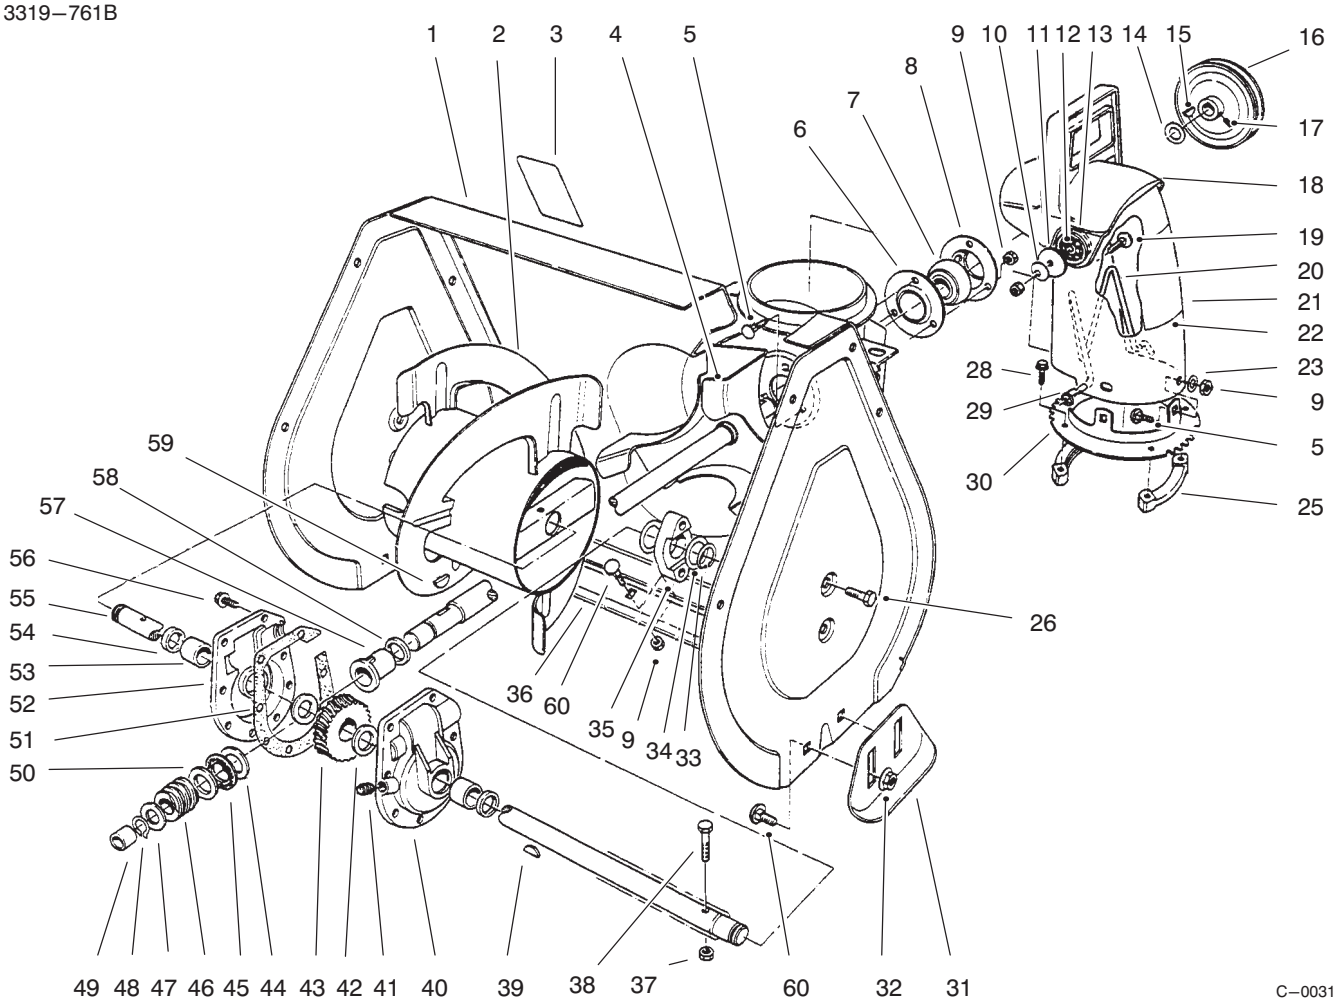


AUGER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
*	94–2792	Chute – Discharge (Incl. Ref.# 22) (Model 38063 Only)	1
22	94–8079	Decal – Discharge (Model 38062 Only)	1
*	94–2558	Decal – Discharge (Model 38063 Only)	1
23	3256–23	Washer	3
25	37–6490	Retainer – Chute Ring	3
26	32144–70	Screw – Self Tapping	4
28	27–0220	Screw – Self Tapping	6
29	3290–326	Pushnut	1
30	37–8941	Ring – Chute	1
31	40–8160–01	Skid	2
32	32128–20	Nut – Flange	4
33	32151–36	Ring – Retaining	2
34	5–1550	Washer – Thrust	4
35	37–6550	Bearing – Auger	2
36	94–8892–01	Blade – Scraper	1
37	3296–42	Nut – Lock	2
38	321–10	Screw	2
39	3257–33	Key – Woodruff	1
40	14–2459	Gear Case L.H. (Incl. Ref. #53 & 54)	1

Ref. No.	Part No.	Description	No. Used
41	281–1	Pipe – Plug	1
42	252–71	Bearing – Thrust	2
43	5–7180	Gear	1
44	257–3	Washer – Thrust	1
45	252–76	Bearing – Needle, Thrust	1
46	5–7170	Gear – Worm	1
47	3–8664	Washer	1
48	32120–72	Ring – Retaining	1
49	256–32	Bushing	1
50	252–80	Washer – Thrust	1
51	51–0460	Gasket	1
52	14–2449	Gear Case R.H. (Incl. Ref. #53 & 54)	1
53	256–237	Bushing	2
54	7–0045	Seal – Oil	2
55	37–6801	Shaft – Auger	1
56	32144–41	Screw – Self Tap.	8
57	37–6560	Bushing – Input	1
58	237–87	Seal	1
59	3257–23	Key – Woodruff	1
60	3230–1	Bolt – Carriage	9
*	37–6961	Gear Case Asm.	1
*	12–8789	Bearing Assembly (Incl. Ref. #6–8)	1

*Not Illustrated

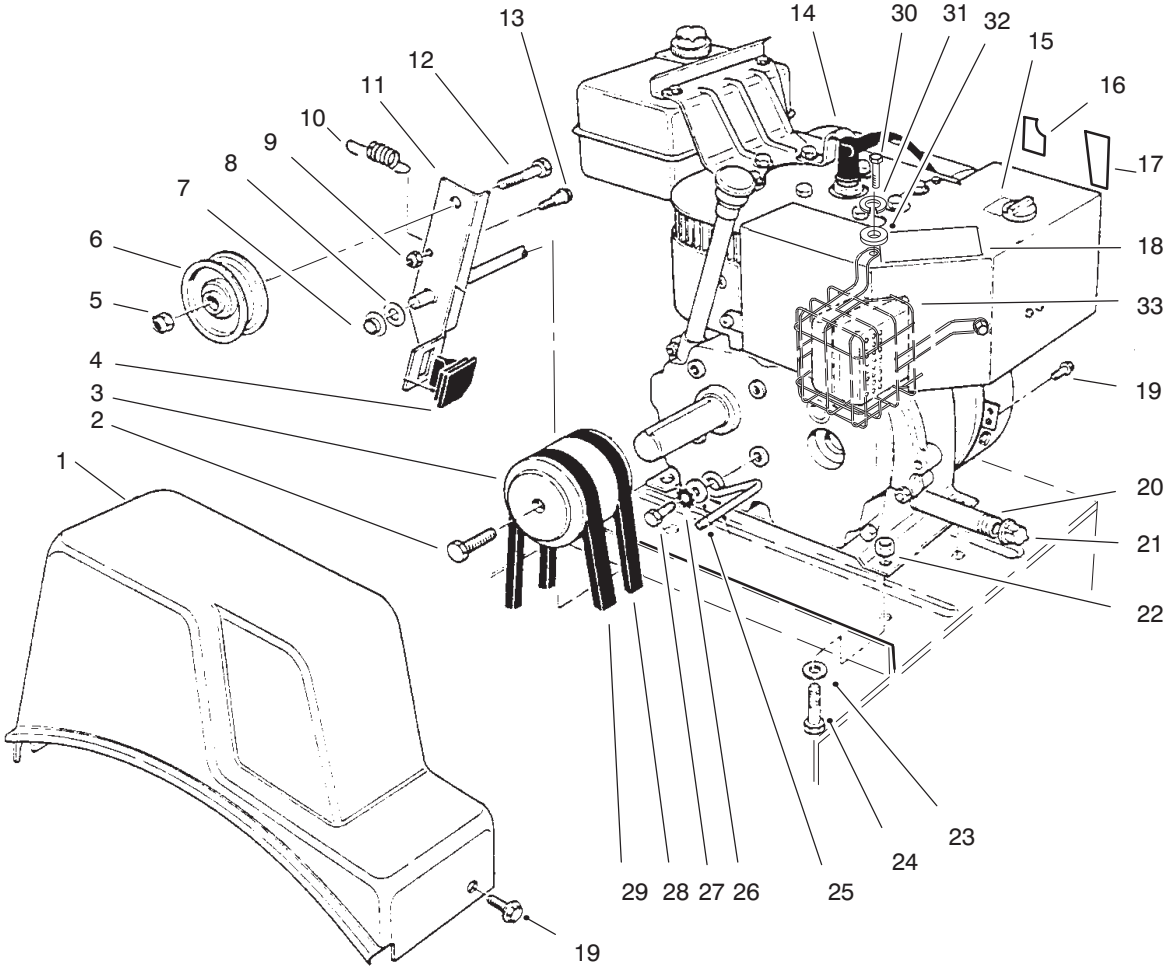

C–1278


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	37–6900	Cover – Belt	1
2	43–7290	Screw – Special	1
3	74–1370	Engine Pulley	1
4	66–8060	Molded Brake Asm.	1
5	3296–59	Nut – Lock	1
6	3–4244	Idler Pulley	1
7	3290–320	Nut – Push On	1
8	3256–24	Washer – Flat	1
9	3296–56	Nut – Lock	1
10	53–7570	Spring – Auger Disengage	1
11	14–7959	Auger Clutch (Incl. Ref. #4)	1
12	323–29	Screw	1
13	42–3560	Bolt – Shoulder	1
14		Engine	1
15	63–2430	Decal – Choke (Model 38063 Only)	1
16	94–2572	Decal – Primer	1
17	63–2450	Decal – Throttle	1
18	66–6840	Decal – Hot (Model 38062 Only)	1
*	94–2576	Decal – Hot (Model 38063 Only)	1

Ref. No.	Part No.	Description	No. Used
19	32144–4	Screw – Self Tap.	3
20	289–9	Pipe Nipple	1
21	288–2	Cap	1
22	3296–29	Nut – Lock	4
23	3256–23	Washer – Flat	5
24	322–4	Screw	4
25	37–8990	Retainer – Belt	1
26	3255–8	Washer –Lock Ext. Tooth	1
27	3210–3	Screw	1
28	37–9090	V–Belt – Traction	1
29	26–9672	V–Belt – Auger	1
†30	42–671	Screw (Model 38063 Only)	3
†31	36–180	Washer – Lock (Model 38063 Only)	3
†32	36–195–1	Washer – Flat (Model 38063 Only)	3
†33	127–19	Guard – Muffler (Model 38063 Only)	1

†Order From Tecumseh


3319–761B

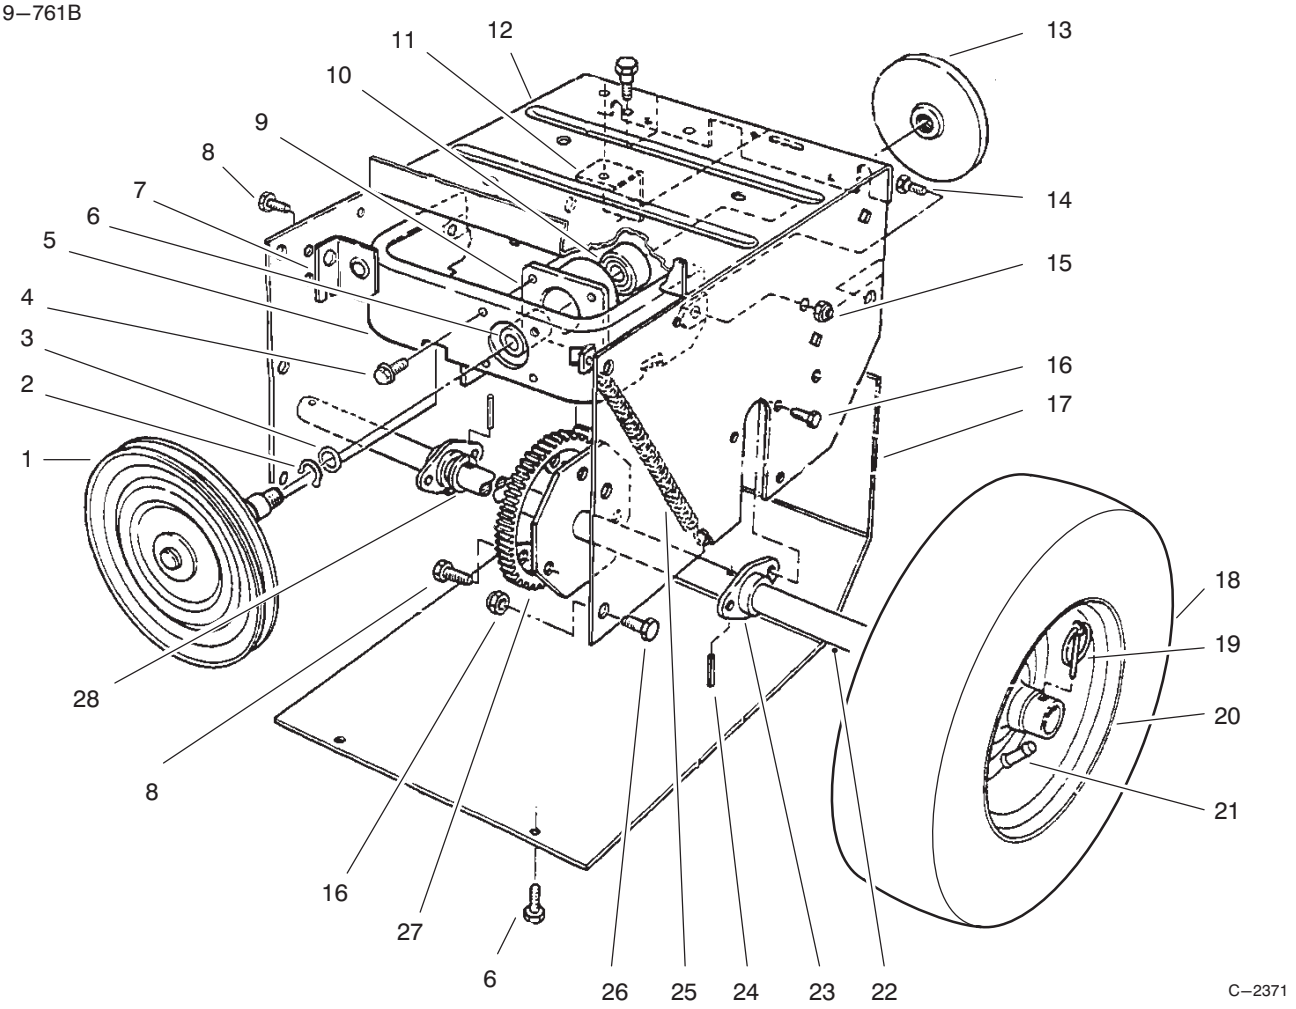

TRACTION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88–0850	Pulley & Shaft	1
2	32151–103	Ring – Snap	1
3	252–80	Washer – Thrust	1
4	12–3270	Screw – Tapping	8
5	88–0550	Frame – Friction Plate	1
6	256–322	Bushing	1
7	66–6790	Mount – Clutch Rod Front	1
8	32144–70	Screw – Self Tap. Hex. Hd.	5
9	88–0560	Hub – Frame	1
10	38–7820	Bearing	1
11	37–9070	Mount – Clutch Rod Rear	1
12	37–8900–01	Frame – Traction	1
13	38–0800	Plate – Friction	1
14	37–8770	Bolt – Shoulder	2

Ref. No.	Part No.	Description	No. Used
15	3296–29	Nut – Lock	6
16	32144–4	Screw – Self Tap. Hex. Hd.	6
17	37–6830–01	Cover – Bottom	1
18	231–120	Tire	2
19	3290–243	Pin – Klik	2
20	241–131	Rim	2
21	232–46	Tube	2
22	74–1350	Shaft – Axle	1
23	37–6850	Bearing – Axle	2
24	32121–31	Pin – Roll	2
25	37–8870	Spring – Friction Plate Frame	1
26	322–2	Screw – Hex. Hd.	6
27	37–6520	Gear – Axle	1
28	3–8664	Washer – Thrust	2

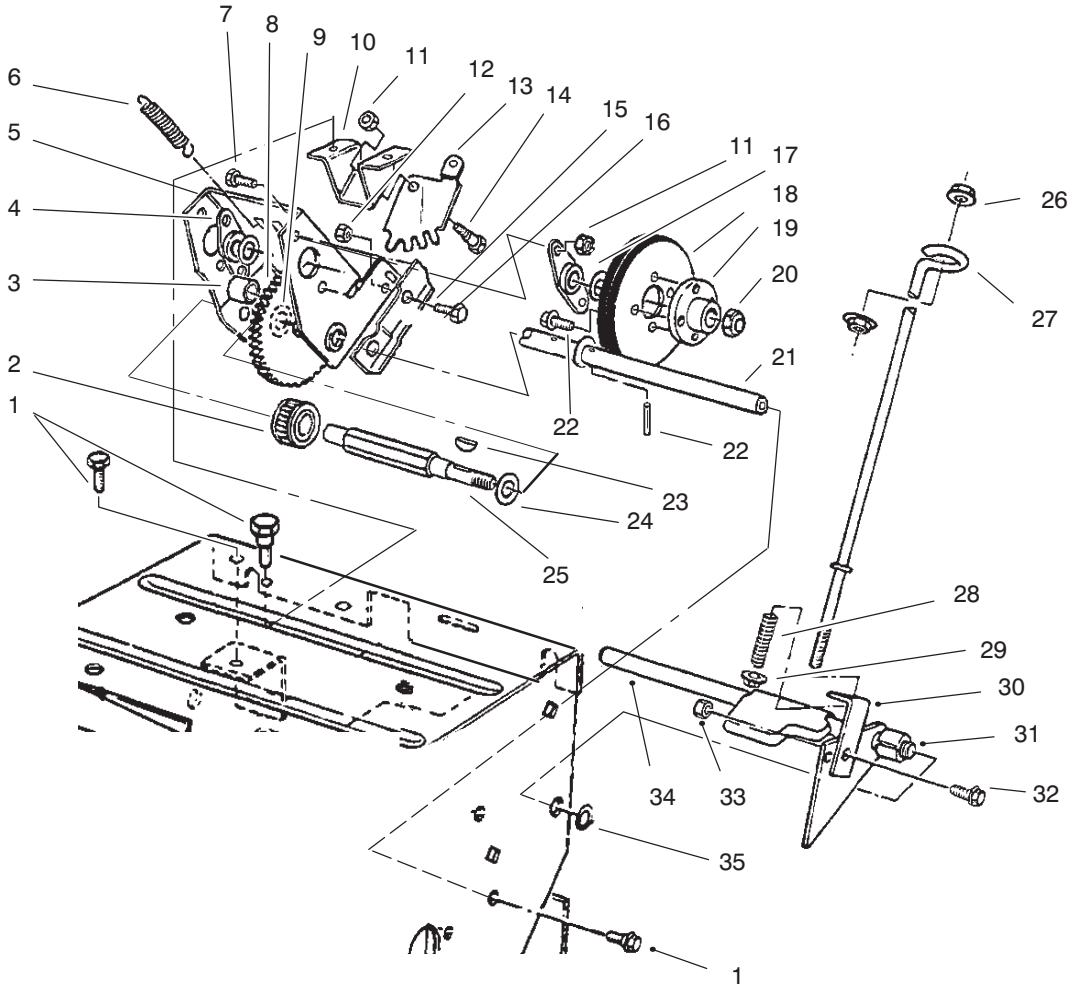


C–2372

TRACTION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	32144–70	Screw – Self Tap. Hex. Hd.	4
2	37–6500	Gear – Sliding	1
3	256–86	Bushing	1
4	20–1620	Bearing – Friction Wheel	2
5	39–1230	Bracket – Sliding	1
6	37–8880	Spring – Traction Engage	1
7	322–2	Screw – Hex. Hd.	4
8	37–9160	Intermediate Gear & Bushing (Incl. Ref. #4)	1
9	10–9280	Washer – Thrust	2
10	37–8790	Mount – Quadrant Gear	1
11	3296–29	Nut – Lock	1
12	3296–16	Nut – Lock	1
13	37–8801	Quadrant – Gear	1
14	37–8770	Bolt – Shoulder	1
15	39–1250	Cam – Receiver	1
16	321–4	Screw – Hex. Hd.	1
17	36–4790	Washer – Thrust	2

Ref. No.	Part No.	Description	No. Used
18	37–6570	Wheel – Friction	1
19	39–1520	Hub – Friction Wheel Mount	1
20	3296–48	Nut – Lock	1
21	37–6760	Shaft – Pivot	1
22	32121–45	Pin – Roll	2
23	3257–24	Key	1
24	5–7570	Washer – Thrust	2
25	37–6780	Shaft – Hex	1
26	32128–33	Nut – Flange	2
27	39–3060	Rod – Lower Traction	1
28	38–4520	Spring – Compression	1
29	32128–32	Nut – Flange	1
30	38–4490	Bracket – Traction	1
31	40–9680	Spacer	1
32	40–8350	Screw – Shoulder	1
33	3296–42	Nut – Lock	1
34	43–7310	Traction Engagement Asm.	1
35	32151–61	Ring – Retaining	1

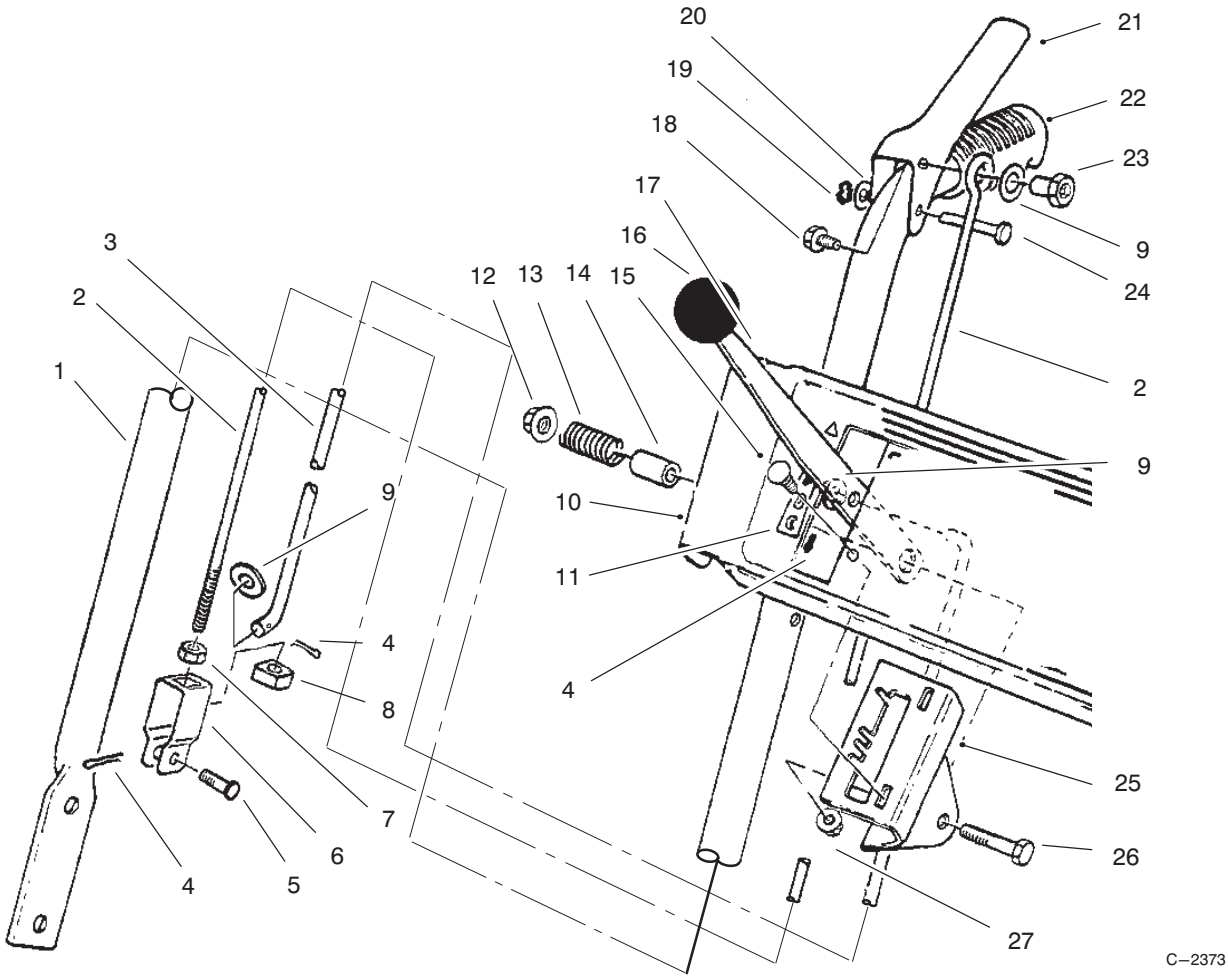


HANDLE ASSEMBLY RIGHT SIDE

Ref. No.	Part No.	Description	No. Used
1	52–5561	Handle – Right	1
2	52–5590	Link – Upper	1
3	74–1490	Rod – Speed Selector	1
4	3272–4	Pin – Cotter	3
5	283–3	Pin – Clevis	1
6	39–3080	Clevis	1
7	3218–1	Nut – Jam	1
8	32115–5	Retainer – Nut	1
9	3256–23	Washer	4
10	43–7360	Panel – Escutcheon	1
11	94–8097	Decal – Escutcheon	1
12	32128–13	Nut – Flange Lock	1
13	37–9150	Spring	1
14	40–8130	Spacer – Speed Selector	1

Ref. No.	Part No.	Description	No. Used
15	3229–11	Bolt – Carriage	2
16	233–21	Knob	1
17	37–8821	Selector – Speed	1
18	3234–13	Screw – Hex. Flange Hd.	1
19	32151–73	Ring – Clip	1
20	3256–24	Washer	1
21	63–3640	Handle – Control	1
22	74–1360	Grip – Handle	1
23	47–4990	Post – Linkage Mounting	1
24	52–5600	Pin – Control Lever	1
25	39–1280	Mount – Speed Selector	1
26	322–7	Screw	1
27	32128–33	Nut – Flange Lock	2
*	3290–378	Cable Tie	1

*Not Illustrated

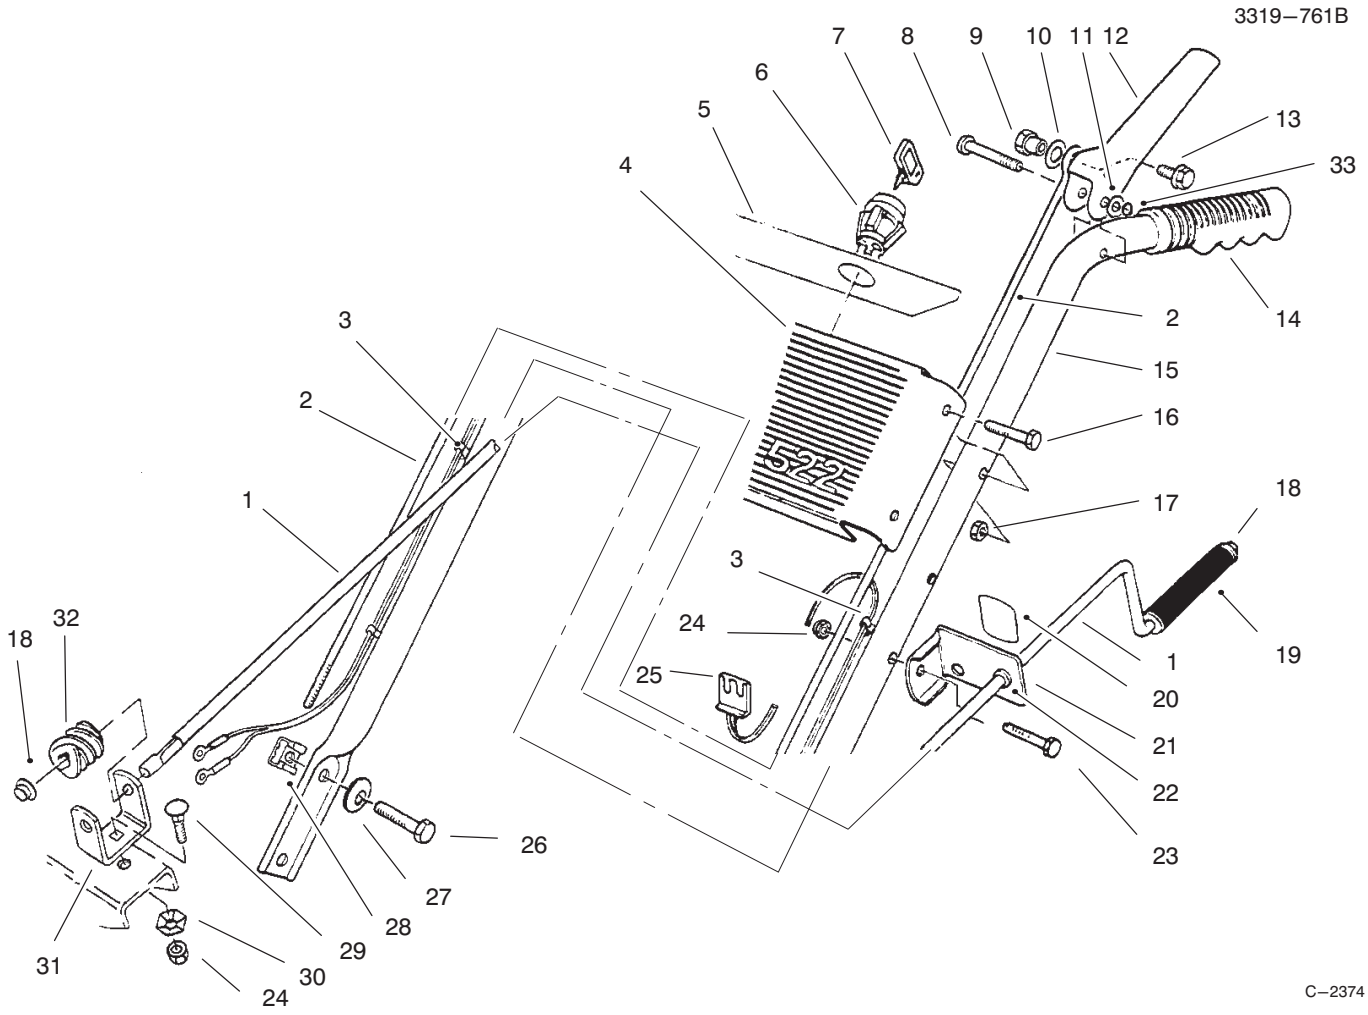


HANDLE ASSEMBLY LEFT SIDE

Ref. No.	Part No.	Description	No. Used
1	40–8270	Rod – Chute Control	1
2	52–5590	Link – Upper	1
3	17–9120	Mount – Wire	3
4	Reference	Panel – Escutcheon	
5	66–6830	Decal – Escutcheon Back (Model 38602 Only)	1
*	94–2563	Decal – Escutcheon Back (Model 38063 Only)	1
6	40–5940	Switch – On/Off	1
7	63–8360	Key – Ignition	1
8	52–5600	Pin – Control Lever	1
9	47–4990	Post – Linkage Mounting	1
10	3256–23	Washer	1
11	3256–24	Washer	1
12	63–3640	Handle – Control	1
13	3234–13	Screw – Hex. Flange Hd.	1
14	74–1360	Grip – Handle	1
15	52–5571	Handle – Left	1
16	321–9	Screw – Hex. Head	2
17	3296–42	Nut – Lock	2

Ref. No.	Part No.	Description	No. Used
18	3290–320	Nut – Push	2
19	40–8230	Grip – Rod	1
20	63–3510	Decal – Chute Direction	1
21	12–7739	Bracket – Chute Control (Incl. Ref.# 20 & 22)	1
22	256–249	Nyliner	1
23	322–7	Screw – Hex. Hd.	1
24	3296–29	Nut – Lock	2
25	43–7390	Wire Harness Asm. (Incl. Ref.# 3)	1
26	322–2	Screw – Hex. Hd.	4
27	3290–456	Washer – Belleville	4
28	3290–196	Retainer – Nut	4
29	3230–22	Bolt – Carriage	1
30	3290–238	Washer – Pyramidal	1
31	40–8280	Bracket – Chute Worm	1
32	40–8250	Gear – Worm	1
33	32151–73	Ring–Clip	1
*	3290–378	Cable Tie	1

*Not Illustrated

ENGINE TECUMSEH MODEL HSK60—76008C

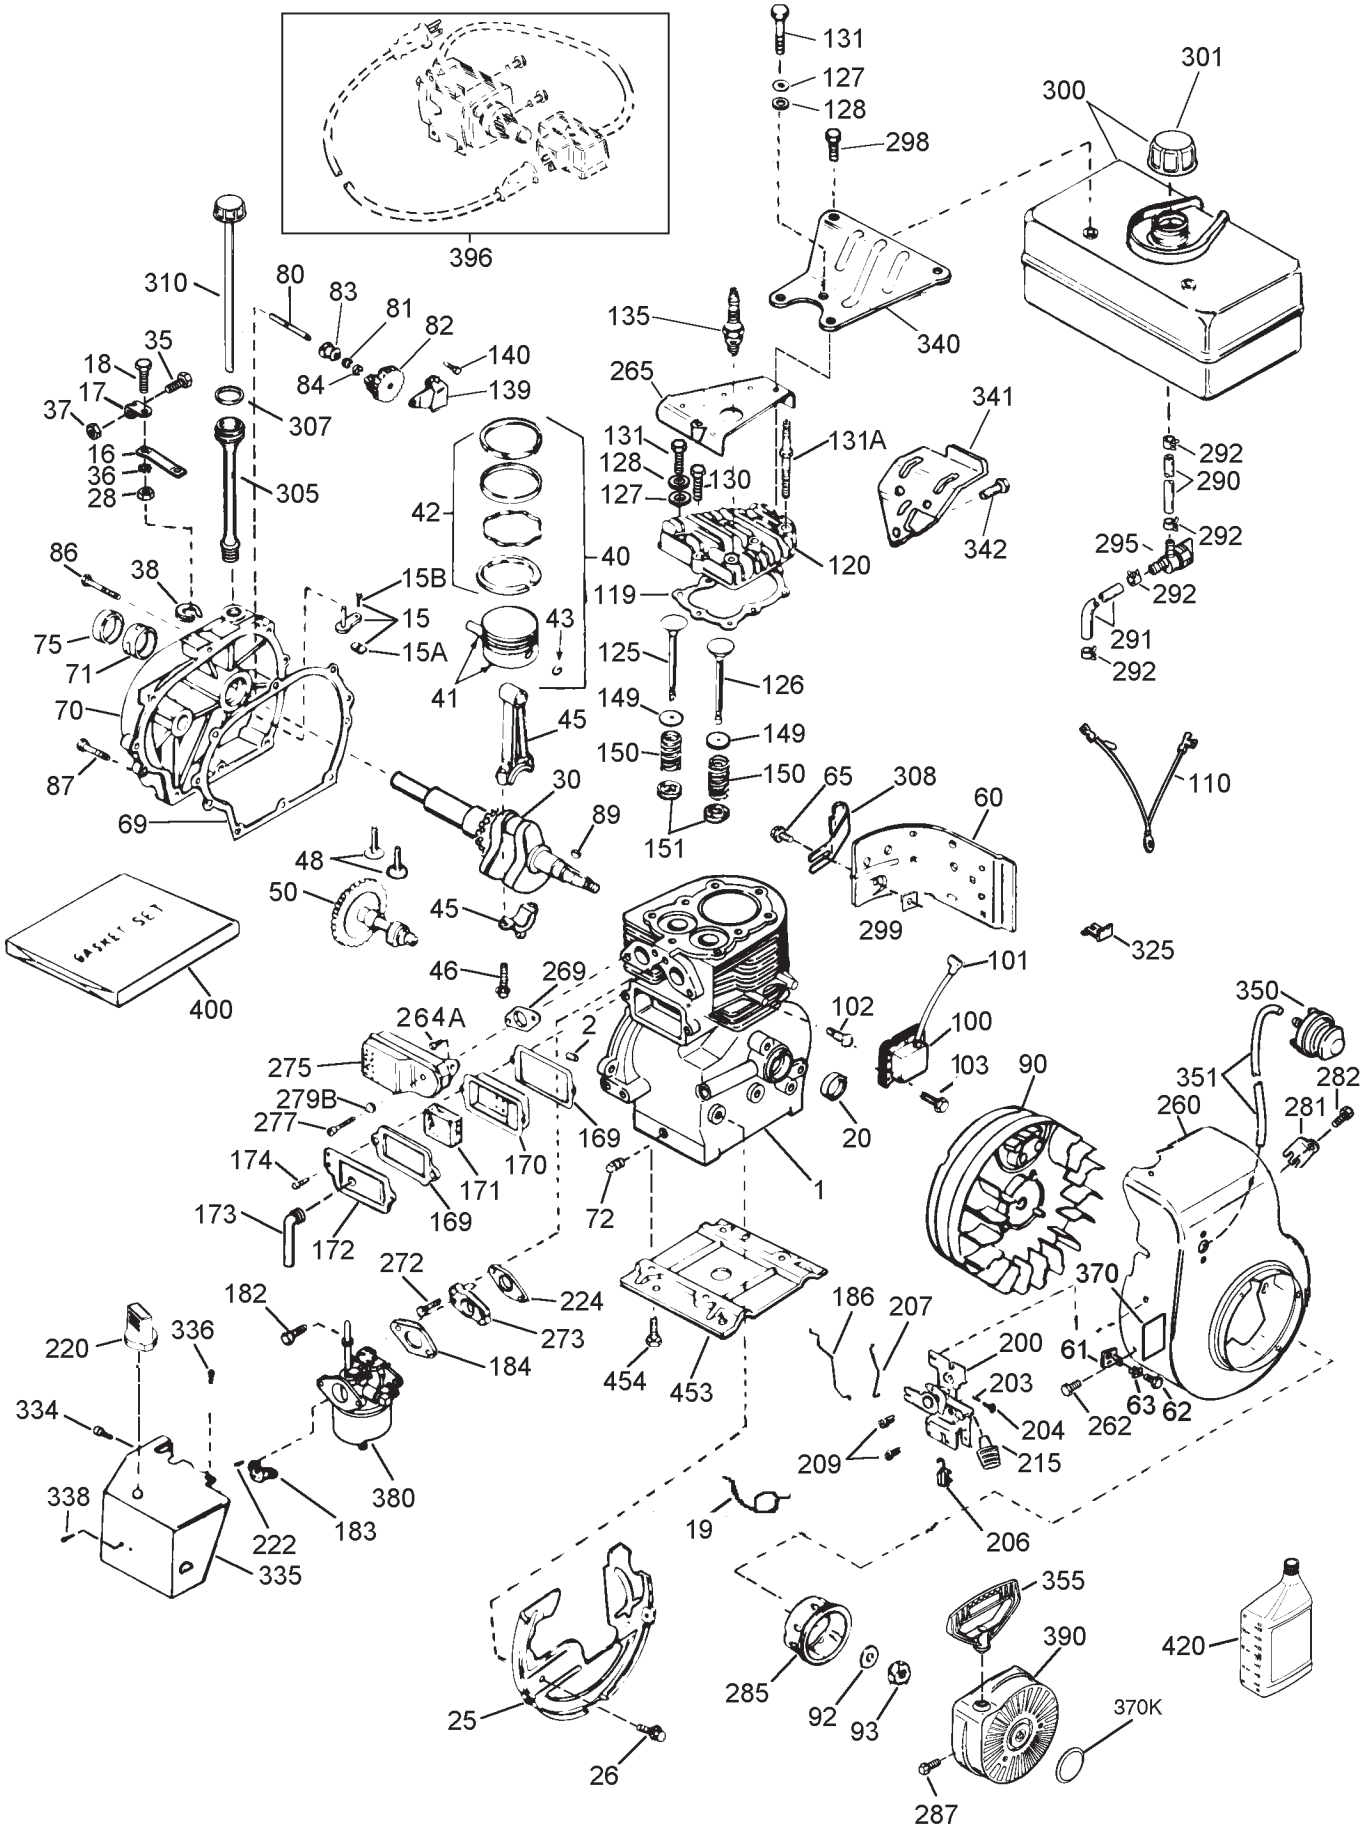


ENGINE TECUMSEH MODEL HSK60–76008C

Ref. No.	Part No.	Description	No. Used
1	34919B	Cylinder (Incl. Ref. #2,20 & 72)	1
2	27652	Dowel Pin	2
15	30699C	Governor Rod (Incl. Ref. #15A & 15B)	1
15A	30700	Governor Yoke	1
15B	650494	Screw	1
16	33454	Governor Lever	1
17	29916	Governor Lever Clamp	1
18	651028	Screw	1
19	34663	Speed Control Spring	1
20	32630	Oil Seal	1
25	36460	Blower Housing Baffle	1
26	650561	Screw	2
28	30322	Lock Nut	1
30	35193	Crankshaft	1
35	29826	Screw	1
36	29918	Lock Washer	1
37	29216	Lock Nut	1
38	29642	Retaining Ring	1
40	34531	Piston, Pin & Ring Set (.010” OS)	1
40	34532	Piston, Pin & Ring Set (.020” OS)	1
40	34533	Piston, Pin & Ring Set (Std.)	1
41	33312B	Piston & Pin Ass’y (.010” OS) (Incl. Ref. #43)	1
41	33313B	Piston & Pin Ass’y (.020” OS) (Incl. Ref. #43)	1
41	33314B	Piston & Pin Ass’y (Std.) (Incl. Ref. #43)	1
42	34854	Ring Set (Std.)	1
42	34855	Ring Set (.020” OS)	1
42	34856	Ring Set (.010” OS)	1
43	27888	Piston Pin Retaining Ring	2
45	31380C	Connecting Rod Ass’y (Incl. Ref. #46 & 49)	1
46	650662C	Connecting Rod Bolt	2
48	34034	Valve Lifter	2
50	32115	Camshaft (MCR)	1
60	30622A	Blower Housing Extension	1
61	34126	Grommet Mounting Bracket	1
62	650760	Screw	1
63	28545	Grommet	1
65	650128	Screw	1
69	30684	Cylinder Cover Gasket	1PK
*70	31303C	Cylinder Cover (Incl. Ref. #71, 75, & 80)	1
71	31546	Crankshaft Bushing	1
72	27642	Oil Drain Plug	2
75	28427	Oil Seal	1
80	31845	Governor Shaft	1
81	30590A	Washer	1
82	30591	Governor Gear Ass’y	1
83	30588A	Governor Spool	1
84	29193	Retaining Ring	1
86	650488	Screw	7
87	650493	Screw	1
89	32589	Flywheel Key	1
90	611085	Flywheel	1
92	650815	Belleville Washer	1
93	8116	Flywheel Nut	1
100	34443A	Solid State Ignition	1
101	610118	Spark Plug Cover	1
102	651024	Solid State Mounting Stud	2
103	651007	Screw, Torx T–15	2
110	35253	Ground Wire	1
*119	36445	Cylinder Head Gasket	1PK
120	36446	Cylinder Head (Incl. 3 of 131)	1
125	27878A	Exhaust Valve (Std.) (Incl. Ref. #151)	1
125	27880A	Exhaust Valve (1/32” OS) (Incl. Ref. #151)	1
126	32784	Intake Valve (1/32” OS) (Incl. Ref. #151)	1
126	32783	Intake Valve (Std.) (Incl. Ref. #151)	1
127	650691	Washer	3
128	650690	Belleville Washer	3
130	650697A	Screw	2
131	650697A	Screw	3
131A	650697A	Screw	3
135	35395	Resistor Spark Plug (RJ19LM)	1
139	31843A	Governor Gear Bracket	1
140	650965	Screw, Torx T–25	2
149	27882	Valve Spring Cap	2
150	27881	Valve Spring	2
151	32581	Valve Spring Keeper	2
*169	27896A	Valve Cover Gasket	2PK
170	28423	Breather Body	1
171	28424	Breather Element	1
172	28425	Valve Cover	1
173	35350	Breather Tube	1
174	650128	Screw	2
182	650517	Screw	2
183	32398	Choke Bracket	1
*184	31688A	Carburetor To Intake Pipe Gasket	1PK
186	34661	Governor Link	1
200	34677	Control Bracket (Incl. Ref. #203, 204, & 206)	1
203	31342	Compression Spring	1
204	651029	Screw	1
206	610973	Terminal	1
207	34662	Throttle Link	1
209	650821	Screw	2
215	35440	Control Knob	1
220	35439	Control Knob	1
222	28820	Screw	2
*224	27915A	Intake Pipe Gasket	1PK
260	36254	Blower Housing	1
262	29747B	Screw, Torx T–40	2
264A	30196	Screw	1
265	30939A	Cylinder Head Cover	1
269	35865	Exhaust Gasket	1PK
272	30196	Screw	2

Note: Order individual parts from your local Tecumseh dealer.
*Included in Gasket Set Ref. #400.


ENGINE TECUMSEH MODEL HSK60—76008C

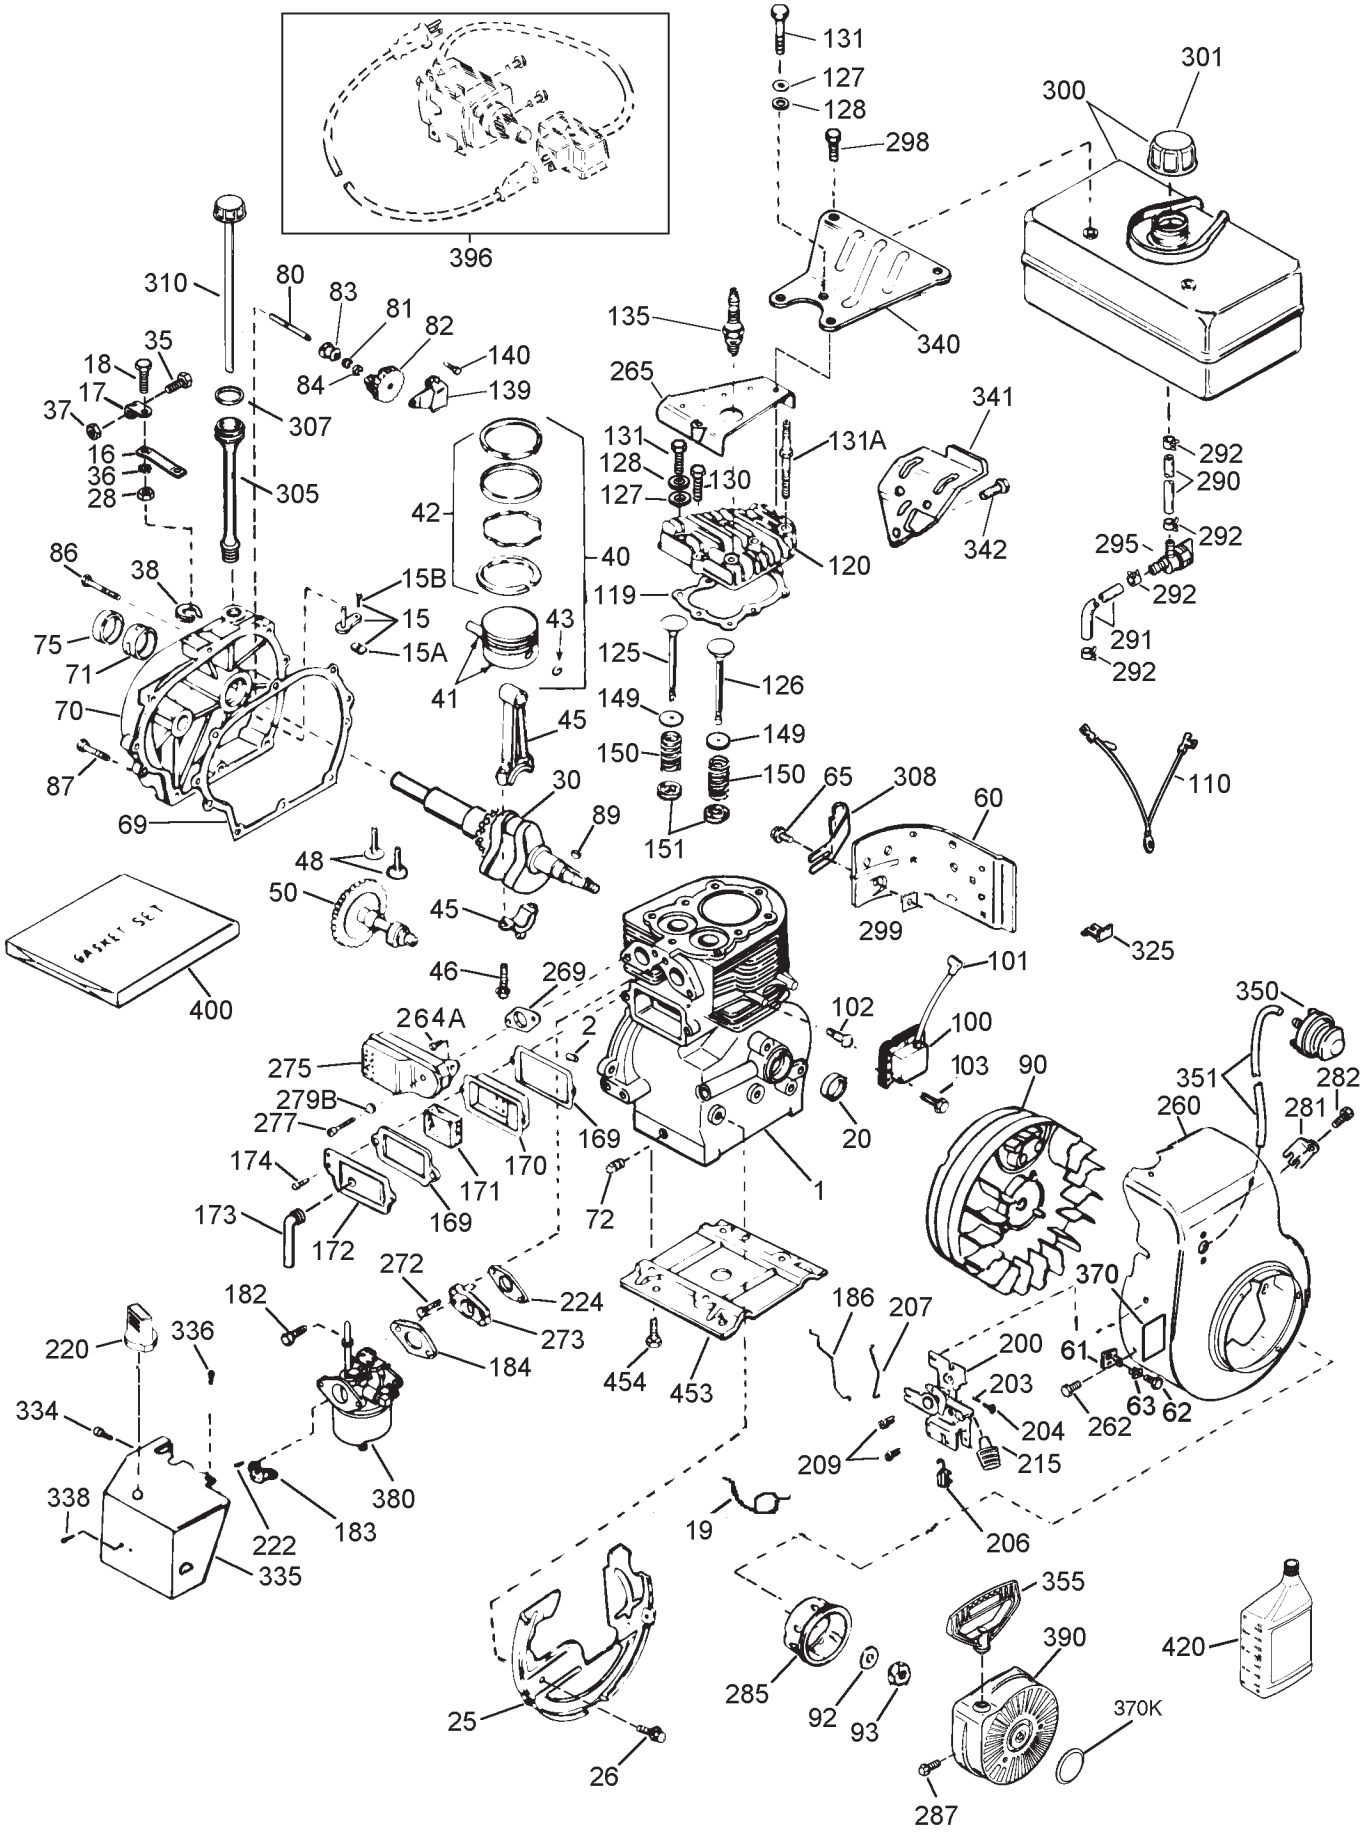

ENGINE TECUMSEH MODEL HSK60—76008C

Ref. No.	Part No.	Description	No. Used
273	34712	Carburetor Flange	1
275	32401	Muffler	1
277	650694A	Screw	1
279B	26073	Washer	1
281	33013	Starter Bubble Cover	1
282	650760	Screw	1
285	35287B	Starter Cup	1
287	650926	Screw	3
290	29774	Fuel Line	1
291	30962	Fule Line	1
292	26460	Fuel Line Clamp	4
295	35857	Fuel Shut—Off Valve	1
298	650665	Screw	2
299	650764	”U” Type Nut	1
300	34186A	Fuel Tank (Incl. Ref. #292 & 301)	1
301	36246	Fuel Cap	1
305	35554	Oil Fill Tube	1
307	35499	”O” Ring	1
308	35540	Fill Tube Clip	1
310	36205	Dipstick	1
325	29443	Wire Clip	1
334	650257	Screw	2
335	35060	Carburetor Cover	1
336	650765	Screw	1
338	650760	Screw	1
340	34159	Fuel Tank Bracket	1
341	34158	Fuel Tank Bracket	1
342	650561	Screw	1
350	570682	Primer Ass’y	1
351	32180C	Primer Line	1
355	590574	Starter Handle	1
370	36261	Instruction Decal	1
370K	36695	Starter Decal	1
380	640081	Carburetor (Incl. Ref. #184)	1
390	590742	Rewind Starter	1
396	33328D	Electric Starter Motor (Optional)	1
400	33235A	Gasket Set	1
420	730225	Sae 30 4—Cycle Engine Oil (Quart)	1
453	29538	Engine Mounting Base	1
454	650542	Screw	4

Note: Order individual parts from your local Tecumseh dealer.
*Included in Gasket Set Ref. #400.

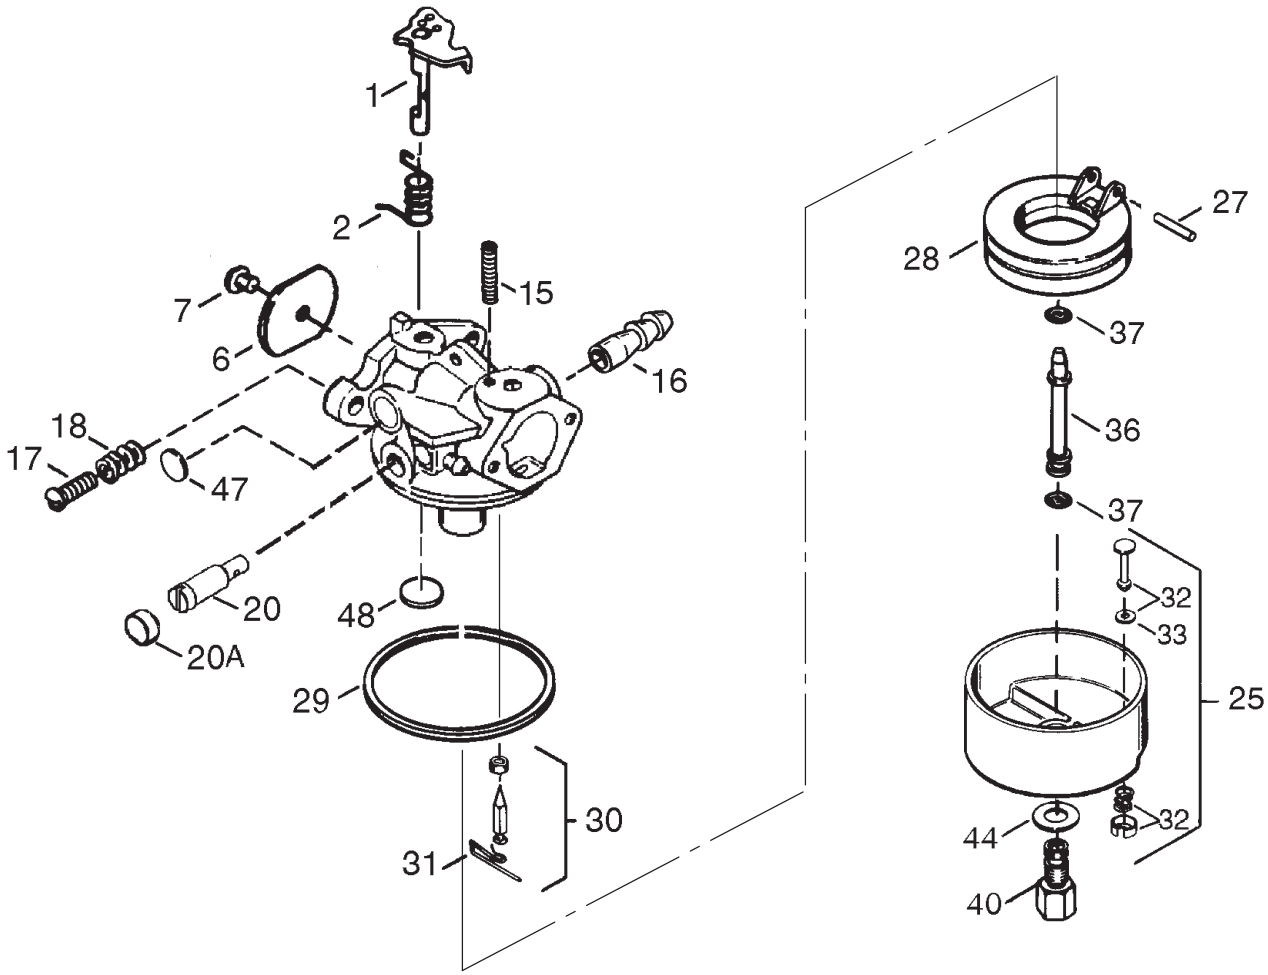


CARBURETOR NO. 640081

Ref. No.	Part No.	Description	No. Used
1	31834	Shaft & Lever Assembly	1
2	631767	Spring — Throttle Return	1
6	640070	Shutter — Throttle	1
7	650506	Screw	2
15	630735	Spring — Choke Stop	1
16	632164	Fitting — Fuel Inlet	1
17	651025	Screw — Idle	1
18	630766	Spring — Idle Screw	2
20	640027	Screw — Idle Restrictor	1
20A	640053	Screw — Idle Restrictor Cap	1
25	631951	Bowl — Assembly (Incl. Ref. #32 & 33)	1
27	631024	Shaft — Float	1
28	632019	Float — Carburetor	1

Ref. No.	Part No.	Description	No. Used
29	631028	Gasket — Bowl—to—Body	1
30	631021	Inlet Needle — Seat & Clip (Incl. Ref. #31)	1
31	631022	Clip — Inlet Needle	1
32	27136A	Drain Assembly — Bowl)	1
33	27554	Gasket — Bow Drain	1
36	632745	Tube — Main Nozzle	1
37	632547	O—Ring — Main Nozzle Tube	1
40	640074	Nut — High Speed Bowl	1
44	27110	Washer — Bowl Nut	1
47	630748	Welch Plug — Idle Mix Well	1
48	631027	Welch Plug — Atmospheric Vent	1
*	640082	Carburetor (Incl. Ref. #1—48)	1

Note: Order individual parts from your local Tecumseh dealer.
* Not Illustrated

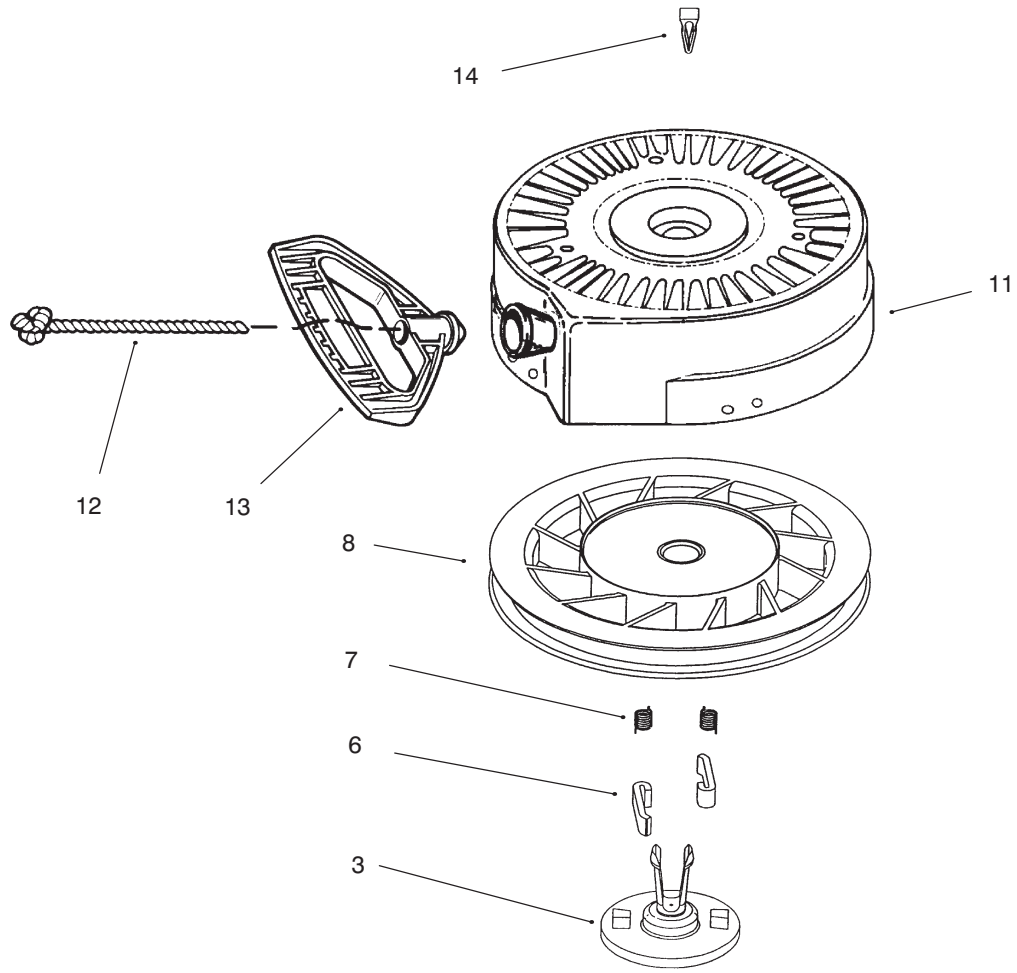


RECOIL STARTER NO. 590742

Ref. No.	Part No.	Description	No. Used
3	590740	Retainer	1
6	590616	Starter Dog	2
7	590617	Dog Spring	2
8	590645A	Pulley & Rewind Spring Asm.	1

Ref. No.	Part No.	Description	No. Used
11	590647	Starter Housing Asm.	1
12	590535	Starter Rope	1
13	590574	Mitten Grip Handle	1
14	590741	Locking Tab	1

Note: Order individual parts from your local Tecumseh dealer.

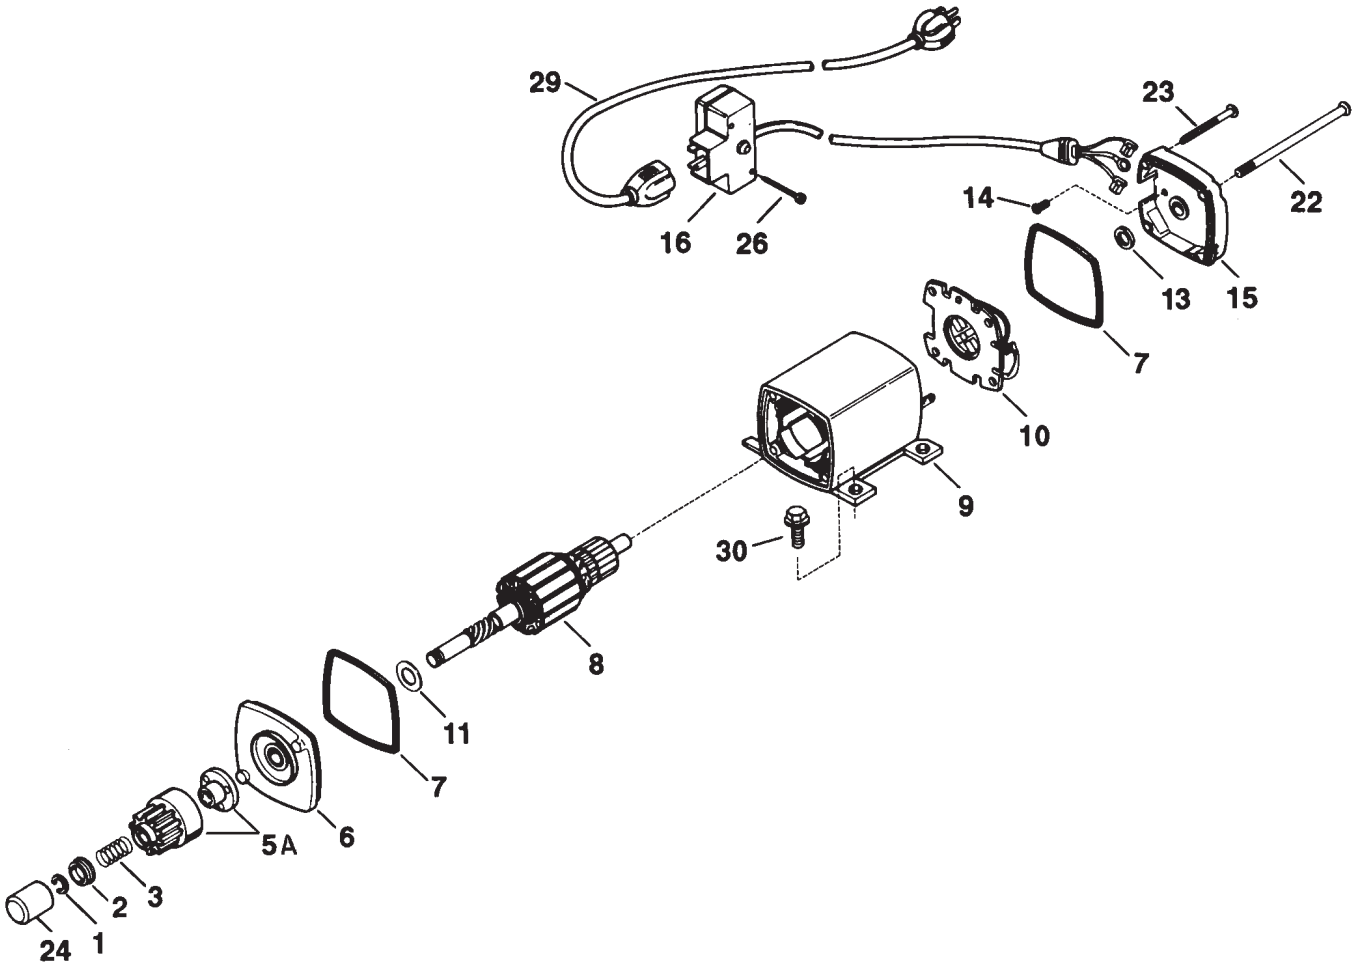

ELECTRIC STARTER KIT NO. 38—7590 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	33842	Ring — Retainer	1
2	33430	Retainer — Spring	1
3	33431	Spring — Anti—Drift	1
5A	35913	Gear & Nut (Incl. Ref. #1)	1
6	35449	Cap Assembly — Drive End (Incl. Ref. #7)	1
7	35450	”O” Ring	2
8	35914	Armature	1
9	35457A	Housing Assembly	1
10	35452A	Card Assembly — Brush	1
11	35911	Washer — Thrust	1
13	590500	Washer — Thrust	1

Ref. No.	Part No.	Description	No. Used
14	33441	Screw — Ground	1
15	35453	Cap Assy., Commutator End (Incl. Ref. #7)	1
16	35454	Box Assembly — Switch (Incl. Ref. #26)	1
22	35458	Bolt — Case	2
23	35456	Screw — Grounding	1
24	33451	Cover — Dust	1
26	650819	Screw — Hex. Hd.	2
29	32450B	Cord — Extension, 10’ 6’’	1
30	30063	Screw — Hex. Hd.	4
*	730623	Switch Repair Kit	1

Note: Order individual parts from your local Tecumseh dealer.

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.
3–0737	Washer	1	14	1
3–4244	Idler Pulley	3	6	1
3–8664	Washer	2	47	1
3–8664	Washer – Thrust	4	28	2
5–1550	Washer – Thrust	2	34	4
5–7170	Gear – Worm	2	46	1
5–7180	Gear	2	43	1
5–7570	Washer – Thrust	5	24	2
7–0045	Seal – Oil	2	54	2
10–9280	Washer – Thrust	5	9	2
12–3270	Screw – Tapping	4	4	8
12–7739	Bracket – Chute Control	7	21	1
12–8789	Bearing Assembly	2	*	1
14–2449	Gear Case R.H.	2	52	1
14–2459	Gear Case L.H.	2	40	1
14–7959	Auger Clutch	3	11	1
17–9120	Mount – Wire	7	3	3
Reference	Panel – Escutcheon	7	4	
20–1620	Bearing – Friction Wheel	5	4	2
20–4320	Washer – Rubber	1	13	2
26–6110	Flange – Bearing Rear	1	8	1
26–6120	Flange – Bearing Front	1	6	1
26–9672	V–Belt – Auger	3	29	1
27–0220	Screw – Self Tapping	2	28	6
36–180	Washer – Lock	3	31	3
36–195–1	Washer – Flat	3	32	3
36–4790	Washer – Thrust	5	17	2
37–6490	Retainer – Chute Ring	2	25	3
37–6500	Gear – Sliding	5	2	1
37–6520	Gear – Axle	4	27	1
37–6550	Bearing – Auger	2	35	2
37–6560	Bushing – Input	2	57	1
37–6570	Wheel – Friction	5	18	1
37–6760	Shaft – Pivot	5	21	1
37–6780	Shaft – Hex	5	25	1
37–6801	Shaft – Auger	2	55	1
37–6830–01	Cover – Bottom	4	17	1
37–6850	Bearing – Axle	4	23	2
37–6890	Pulley	1	16	1
37–6900	Cover – Belt	3	1	1
37–6961	Gear Case Asm.	2	*	1
37–6990	Shaft & Impeller	1	4	1
37–8770	Bolt – Shoulder	4	14	2
37–8770	Bolt – Shoulder	5	14	1
37–8790	Mount – Quadrant Gear	5	10	1
37–8801	Quadrant – Gear	5	13	1
37–8821	Selector – Speed	6	17	1
37–8870	Spring – Friction Plate Frame	4	25	1
37–8880	Spring – Traction Engage	5	6	1
37–8900–01	Frame – Traction	4	12	1
37–8941	Ring – Chute	2	30	1
37–9070	Mount – Clutch Rod Rear	4	11	1
37–9090	V–Belt – Traction	3	28	1
37–9150	Spring	6	13	1
37–9160	Intermediate Gear & Bushing	5	8	1
38–0800	Plate – Friction	4	13	1
38–4490	Bracket – Traction	5	30	1
38–4520	Spring – Compression	5	28	1
38–7820	Bearing	4	10	1
39–1180	Auger – R.H.	1	2	1
39–1190	Auger – L.H.	1	*	1
39–1230	Bracket – Sliding	5	5	1
39–1250	Cam – Receiver	5	15	1
39–1280	Mount – Speed Selector	6	25	1
39–1520	Hub – Friction Wheel Mount	5	19	1
39–3060	Rod – Lower Traction	5	27	1
39–3080	Clevis	6	6	1
40–5940	Switch – On/Off	7	6	1
40–8130	Spacer – Speed Selector	6	14	1
40–8160–01	Skid	2	31	2
40–8230	Grip – Rod	7	19	1
40–8250	Gear – Worm	7	32	1
40–8270	Rod – Chute Control	7	1	1
40–8280	Bracket – Chute Worm	7	31	1
40–8350	Screw – Shoulder	5	32	1
40–9680	Spacer	5	31	1
42–671	Screw	3	30	3
42–3560	Bolt – Shoulder	3	13	1
43–7290	Screw – Special	3	2	1
43–7310	Traction Engagement Asm.	5	34	1
43–7360	Panel – Escutcheon	6	10	1
43–7390	Wire Harness Asm.	7	25	1
47–4990	Post – Linkage Mounting	7	9	1
47–4990	Post – Linkage Mounting	6	23	1
51–0460	Gasket	2	51	1
52–5561	Handle – Right	6	1	1
52–5571	Handle – Left	7	15	1
52–5590	Link – Upper	6	2	1
52–5590	Link – Upper	7	2	1
52–5600	Pin – Control Lever	7	8	1
52–5600	Pin – Control Lever	6	24	1
53–7570	Spring – Auger Disengage	3	10	1
53–7670	Decal – Auger Warning	1	3	1
55–8950	Plate – Friction	1	12	2
56–2670	Chute – Wire	1	20	1
56–2680	Deflector	1	18	1
63–2430	Decal – Choke	3	15	1
63–2450	Decal – Throttle	3	17	1
63–3450	Bearing – Ball	1	7	1
63–3510	Decal – Chute Direction	7	20	1
63–3640	Handle – Control	7	12	1
63–3640	Handle – Control	6	21	1
63–8360	Key – Ignition	7	7	1
66–6790	Mount – Clutch Rod Front	4	7	1
66–6830	Decal – Escutcheon Back	7	5	1
66–6840	Decal – Hot	3	18	1
66–8060	Molded Brake Asm.	3	4	1
74–1350	Shaft – Axle	4	22	1
74–1360	Grip – Handle	7	14	1
74–1360	Grip – Handle	6	22	1
74–1370	Engine Pulley	3	3	1
74–1490	Rod – Speed Selector	6	3	1
88–0550	Frame – Friction Plate	4	5	1
88–0560	Hub – Frame	4	9	1
88–0850	Pulley & Shaft	4	1	1
94–2558	Decal – Discharge	2	*	1
94–2563	Decal – Escutcheon Back	7	*	1
94–2568	Decal – Auger Warning	1	*	1
94–2572	Decal – Primer	3	16	1
94–2576	Decal – Hot	3	*	1
94–2792	Chute – Discharge	2	*	1
94–2793	Chute – Discharge	2	21	1
94–8079	Decal – Discharge	2	22	1
94–8097	Decal – Escutcheon	6	11	1
94–8892–01	Blade – Scraper	2	36	1
94–9872	Housing–Auger	1	1	1
94–9873	Housing – Auger	1	*	1
127–19	Guard – Muffler	3	33	1
231–120	Tire	4	18	2
232–46	Tube	4	21	2
233–21	Knob	6	16	1
237–87	Seal	2	58	1
241–131	Rim	4	20	2
252–71	Bearing – Thrust	2	42	2
252–76	Bearing – Needle, Thrust	2	45	1
252–80	Washer – Thrust	4	3	1
252–80	Washer – Thrust	2	50	1
256–32	Bushing	2	49	1
256–86	Bushing	5	3	1
256–237	Bushing	2	53	2
256–249	Nyliner	7	22	1
256–322	Bushing	4	6	1
257–3	Washer – Thrust	2	44	1
281–1	Pipe – Plug	2	41	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.
283–3	Pin – Clevis	6	5	1
288–2	Cap	3	21	1
289–9	Pipe Nipple	3	20	1
321–4	Screw – Hex. Hd.	5	16	1
321–9	Screw – Hex. Head	7	16	2
321–10	Screw	2	38	2
322–2	Screw – Hex. Hd.	5	7	4
322–2	Screw – Hex. Hd.	4	26	6
322–2	Screw – Hex. Hd.	7	26	4
322–4	Screw	3	24	4
322–7	Screw	6	26	1
322–7	Screw – Hex. Hd.	7	23	1
323–29	Screw	3	12	1
3210–3	Screw	3	27	1
3218–1	Nut – Jam	6	7	1
3229–11	Bolt – Carriage	6	15	2
3230–1	Bolt – Carriage	2	60	9
3230–18	Bolt – Carriage	1	5	6
3230–22	Bolt – Carriage	1	19	2
3230–22	Bolt – Carriage	7	29	1
3234–13	Screw – Hex. Flange Hd.	7	13	1
3234–13	Screw – Hex. Flange Hd.	6	18	1
3242–4	Screw – Set	1	17	2
3255–8	Washer –Lock Ext. Tooth	3	26	1
3256–23	Washer	6	9	4
3256–23	Washer	7	10	1
3256–23	Washer	2	23	3
3256–23	Washer – Flat	3	23	5
3256–24	Washer	7	11	1
3256–24	Washer	6	20	1
3256–24	Washer – Flat	3	8	1
3256–68	Washer – Flat	1	11	2
3257–23	Key	1	15	1
3257–23	Key – Woodruff	2	59	1
3257–24	Key	5	23	1
3257–33	Key – Woodruff	2	39	1
3272–4	Pin – Cotter	6	4	3
3290–196	Retainer – Nut	4	7	28
3290–238	Washer – Pyramidal	7	30	1
3290–243	Pin – Klik	4	19	2
3290–320	Nut – Push	7	18	2
3290–320	Nut – Push On	3	7	1
3290–326	Pushnut	2	29	1
3290–340	Washer – Belleville	1	10	2
3290–378	Cable Tie	6	*	1
3290–378	Cable Tie	7	*	1
3290–456	Washer – Belleville	7	27	4
3296–16	Nut – Lock	5	12	1
3296–29	Nut – Lock	5	11	1
3296–29	Nut – Lock	4	15	6
3296–29	Nut – Lock	3	22	4
3296–29	Nut – Lock	7	24	2
3296–29	Nut – Lock	1	9	13
3296–42	Nut – Lock	7	17	2
3296–42	Nut – Lock	5	33	1
3296–42	Nut – Lock	2	37	2
3296–48	Nut – Lock	5	20	1
3296–56	Nut – Lock	3	9	1
3296–59	Nut – Lock	3	5	1
32115–5	Retainer – Nut	6	8	1
32120–72	Ring – Retaining	2	48	1
32121–31	Pin – Roll	4	24	2
32121–45	Pin – Roll	5	22	2
32128–13	Nut – Flange Lock	6	12	1
32128–20	Nut – Flange	2	32	4
32128–32	Nut – Flange	5	29	1
32128–33	Nut – Flange	5	26	2
32128–33	Nut – Flange Lock	6	27	2
32144–4	Screw – Self Tap.	3	19	3
32144–4	Screw – Self Tap. Hex. Hd.	4	16	6
32144–41	Screw – Self Tap.	2	56	8
32144–70	Screw – Self Tap. Hex. Hd.	5	1	4
32144–70	Screw – Self Tap. Hex. Hd.	4	8	5
32144–70	Screw – Self Tapping	2	26	4
32151–36	Ring – Retaining	2	33	2
32151–61	Ring – Retaining	5	35	1
32151–73	Ring – Clip	6	19	1
32151–103	Ring – Snap	4	2	1

OPTIONAL EQUIPMENT

110 Vac Electric Starter Kit	38037
Tire Chain Kit	56–2700
Drift Breaker Kit	37–7022
Snow Cab	88–0600

*Not Illustrated