Form No. 3462-732 Rev C

TORO®

Count on it.

Parts Catalog

SnowMaster® e24 60V Snowthrower

Model No. 39915T—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3462-732 C

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly 4
Rotor Assembly 6
Rotor Drive Assembly 8
Transmission, Drive and Tire Assembly 10
Powerhead Assembly 12
Powerhead Assembly No. 147-1799 14
Chute Assembly 16
Quickstick Assembly 18
Handles and Control Assembly 20
Attachments and Accessories 22

© 2024—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Main Frame Assembly

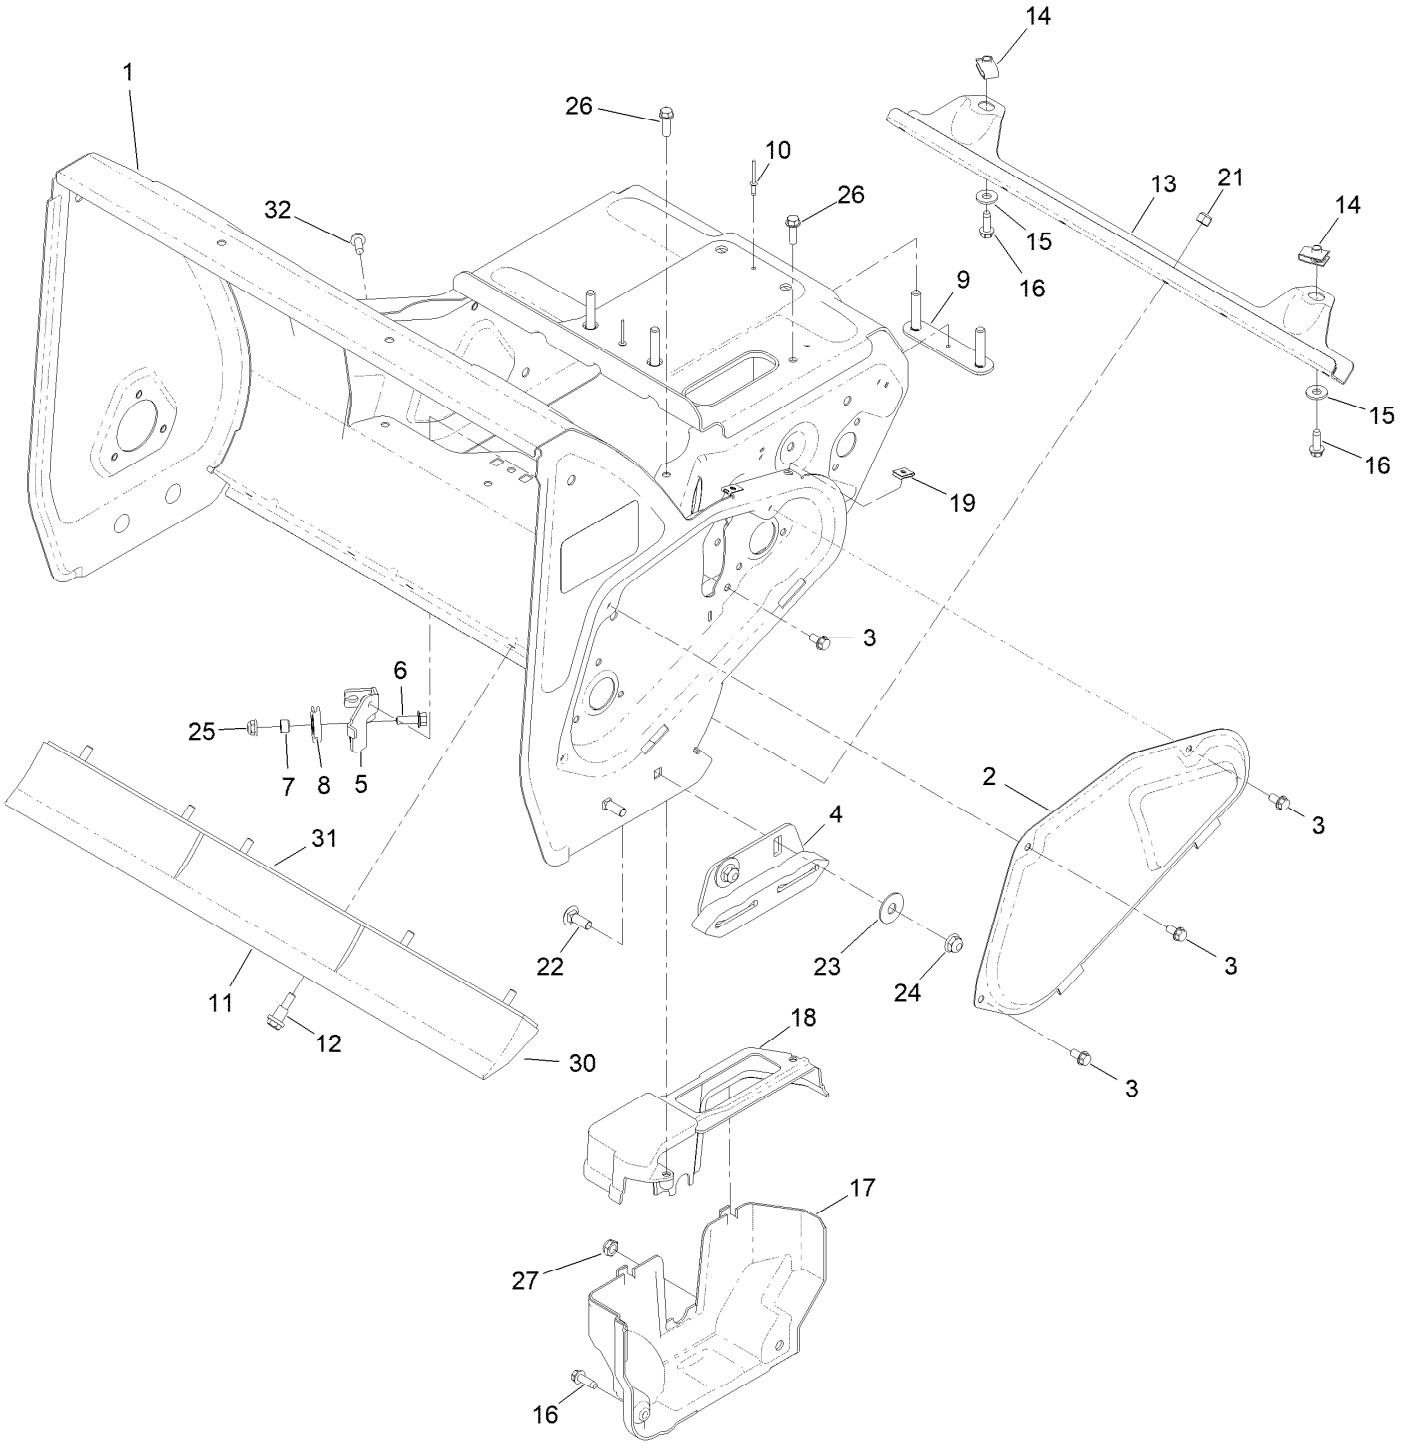

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-9466	1	Frame ASM
2	130-9581-01	1	Cover-Belt
3	32144-4	4	Screw-HWH
4	130-9619	2	Skid ASM
5	131-1793-03	1	Bracket-Cable
6	120-9678	1	Screw-HHF
7	55-9370	1	Spacer-Blade, Rotor
8	95-7949	1	Cable-Pulley
9	136-7177	2	Plate-Stud, Rear
10	923786	2	Rivet
11	130-9628	1	Scraper ASM
12	104-0858	6	Bolt-Shoulder
13	131-1797-01	1	Support-Frame, Lower
14	107069	2	Clip
15	120-9646	2	Washer-Flat
16	49-2040	3	Screw-HWHTF
17	131-1763	1	Cover-Belt, Lower
18	131-1764	1	Cover-Belt, Upper
19	107-1013	2	Nut-Speed
21	137-3088	6	Nut-Hex
22	137-3059	4	Bolt-CARR
23	119-4150	4	Washer-Flat
24	119-4041	4	Nut-HF
25	137-3005	1	Nut-HF
26	137-3099	2	Screw-Plastite, HWH
27	137-3089	1	Nut-Hex
30	130-9575	1	Blade-Scraper
31	130-9627	1	Foam-Scraper
32	32144-85	1	Screw-HWH Thd Form

Rotor Assembly

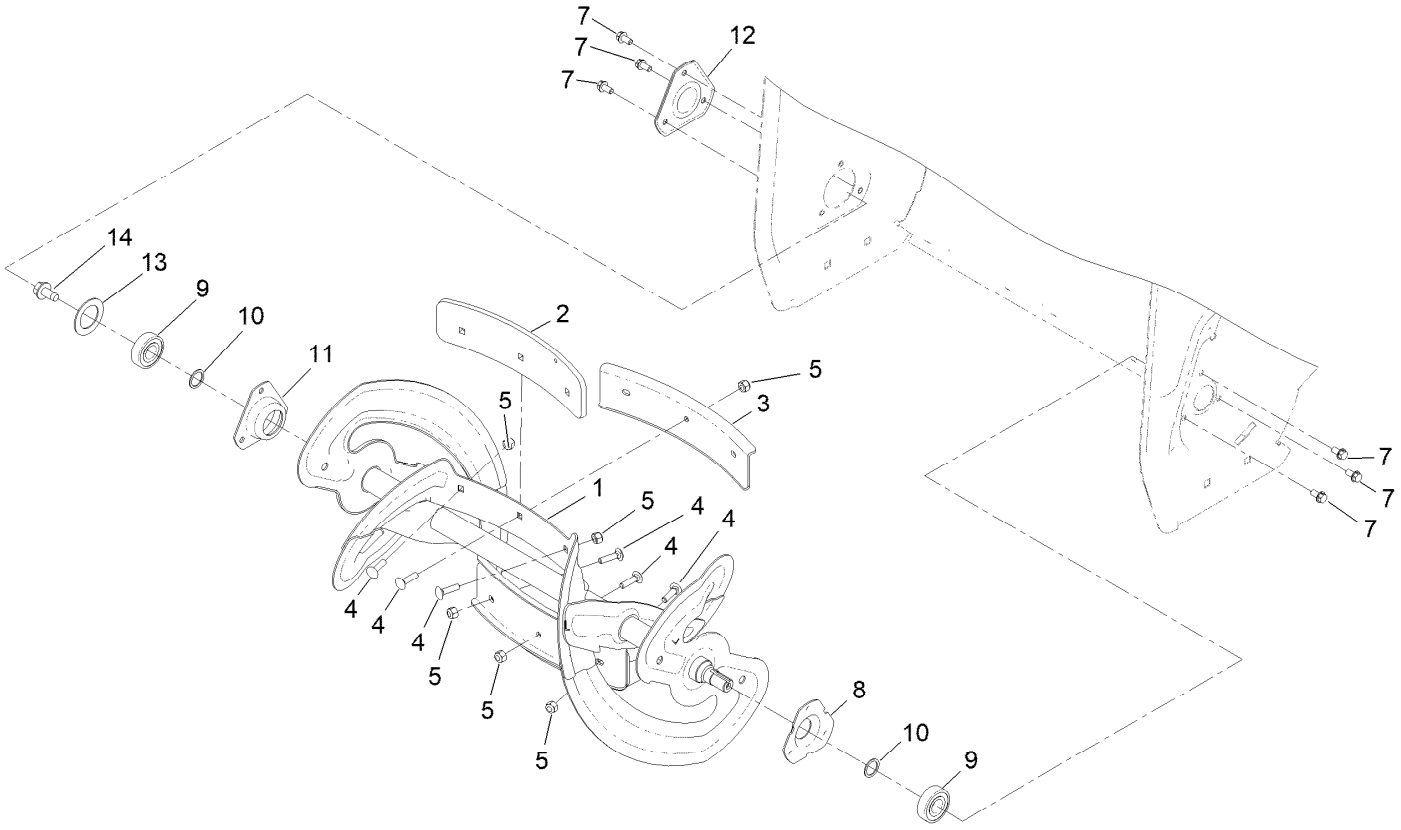

Rotor Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-9571-03	1	Rotor ASM
2	130-9569	2	Paddle-Center
3	130-9568-03	2	Support-Center, Rotor
4	137-3055	6	Bolt-CARR
5	137-3088	6	Nut-Hex
7	32144-4	6	Screw-HWH
8	136-7134	1	Flange-Bearing
9	38-7820	2	Bearing-Ball
10	52-7280	2	Washer-Thrust
11	136-7169	1	Flange-Bearing
12	130-9558-01	1	Cap-Bearing
13	131-5905	1	Washer-Rubber
14	110-9380	1	Screw-HWH

Rotor Drive Assembly

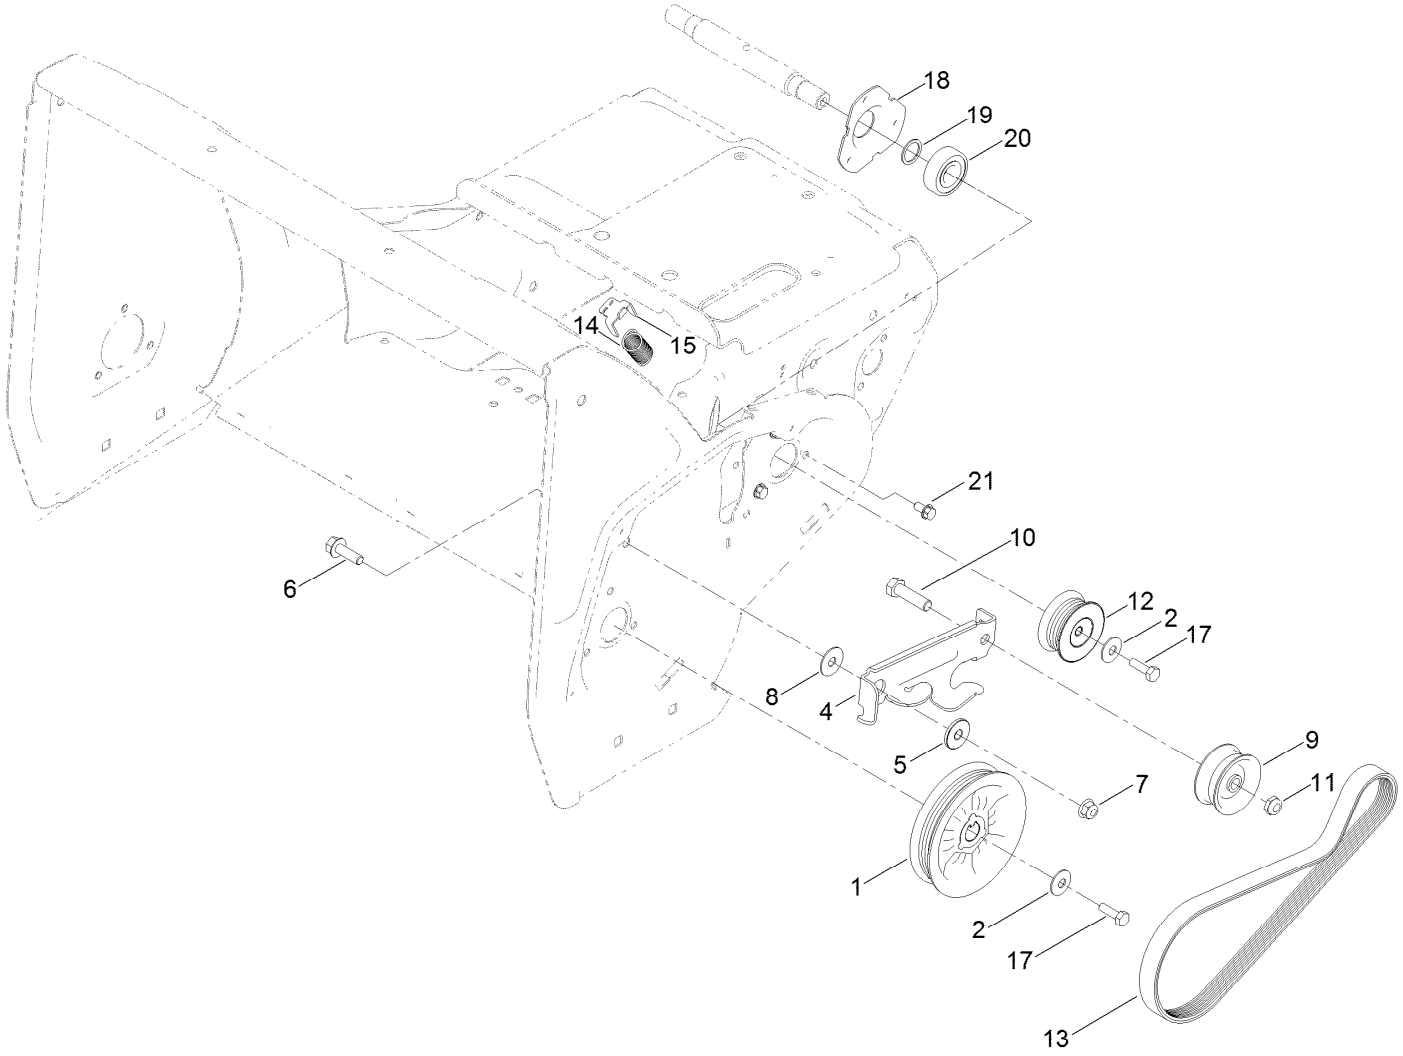

Rotor Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-9574	1	Pulley-Rotor
2	3290-456	2	Washer-Belleville
4	136-7179	1	Arm-Engagement, Rotor
5	117-7711	1	Bushing-Idler
6	137-3067	1	Screw-HHF
7	119-4041	1	Nut-HF
8	108-4925	1	Washer
9	131-5988	1	Pulley-Idler, Flat
10	137-3065	1	Screw-HH
11	121-4600	1	Nut-Hex
12	130-9577	1	Pulley-Jackshaft, Rotor
13	131-5967	1	Belt-Poly V
14	130-9572	1	Spring-Extension
15	136-7133	1	Clip-Spring
17	9080046	2	Screw-HH
18	136-7134	1	Flange-Bearing
19	52-7280	1	Washer-Thrust
20	38-7820	1	Bearing-Ball
21	32144-4	3	Screw-HWH

Transmission, Drive and Tire Assembly

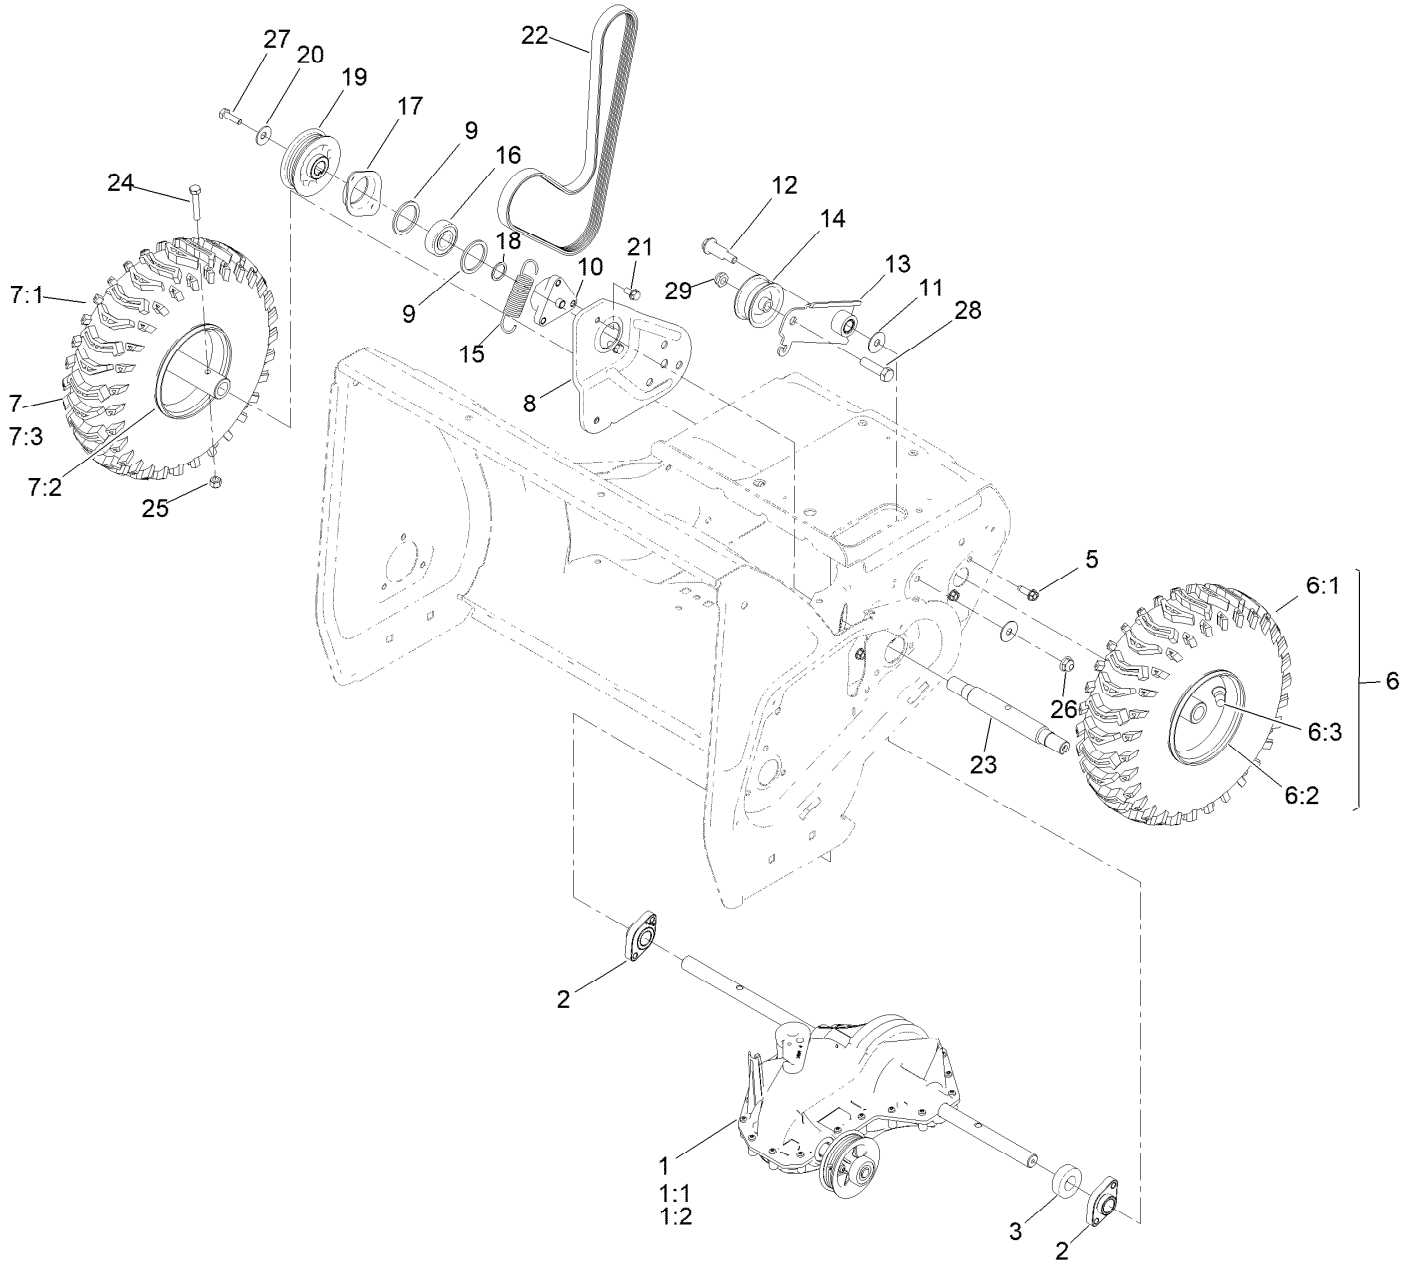

Transmission, Drive and Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-9642	1	Transmission
1:1	131-5973	1	Pulley Repair Kit
1:2	131-5984	1	Plug-Oil
2	130-9643	2	Bearing-Axle
3	131-5910	1	Spacer-Axle
5	49-2040	7	Screw-HWHTF
6		1	LH Wheel And Tire ASM ●
6:1	130-9559	1	Tire
6:2	130-9560	1	Wheel
6:3	232-27	1	Stem-Valve
7		1	RH Wheel And Tire ASM ●
7:1	130-9559	1	Tire
7:2	130-9560	1	Wheel
7:3	232-27	1	Stem-Valve
8	130-9586-03	1	Plate-Support, Jackshaft
9	131-5904	2	Washer-Rubber
10	131-1794	1	Support-Bearing
11	108-4925	2	Washer
12	136-7192	1	Bolt-Shoulder, HHF
13	131-1795	1	Idler-Traction
14	131-5988	1	Pulley-Idler, Flat
15	130-9645	1	Spring-Extension
16	38-7820	1	Bearing-Ball
17	136-7171	1	Retainer-Bearing
18	52-7280	1	Washer-Thrust
19	130-9583	1	Pulley-Jackshaft
20	3290-456	1	Washer-Belleville
21	32144-4	2	Screw-HWH
22	131-5968	1	Belt-Poly V
23	130-9585	1	Jackshaft
24	137-3050	2	Screw-HH
25	137-3088	2	Nut-Hex
26	119-4041	1	Nut-HF
27	137-3003	1	Screw-HH,Lock
28	137-3065	1	Screw-HH
29	121-4600	1	Nut-Hex

● Not serviced separately

Powerhead Assembly

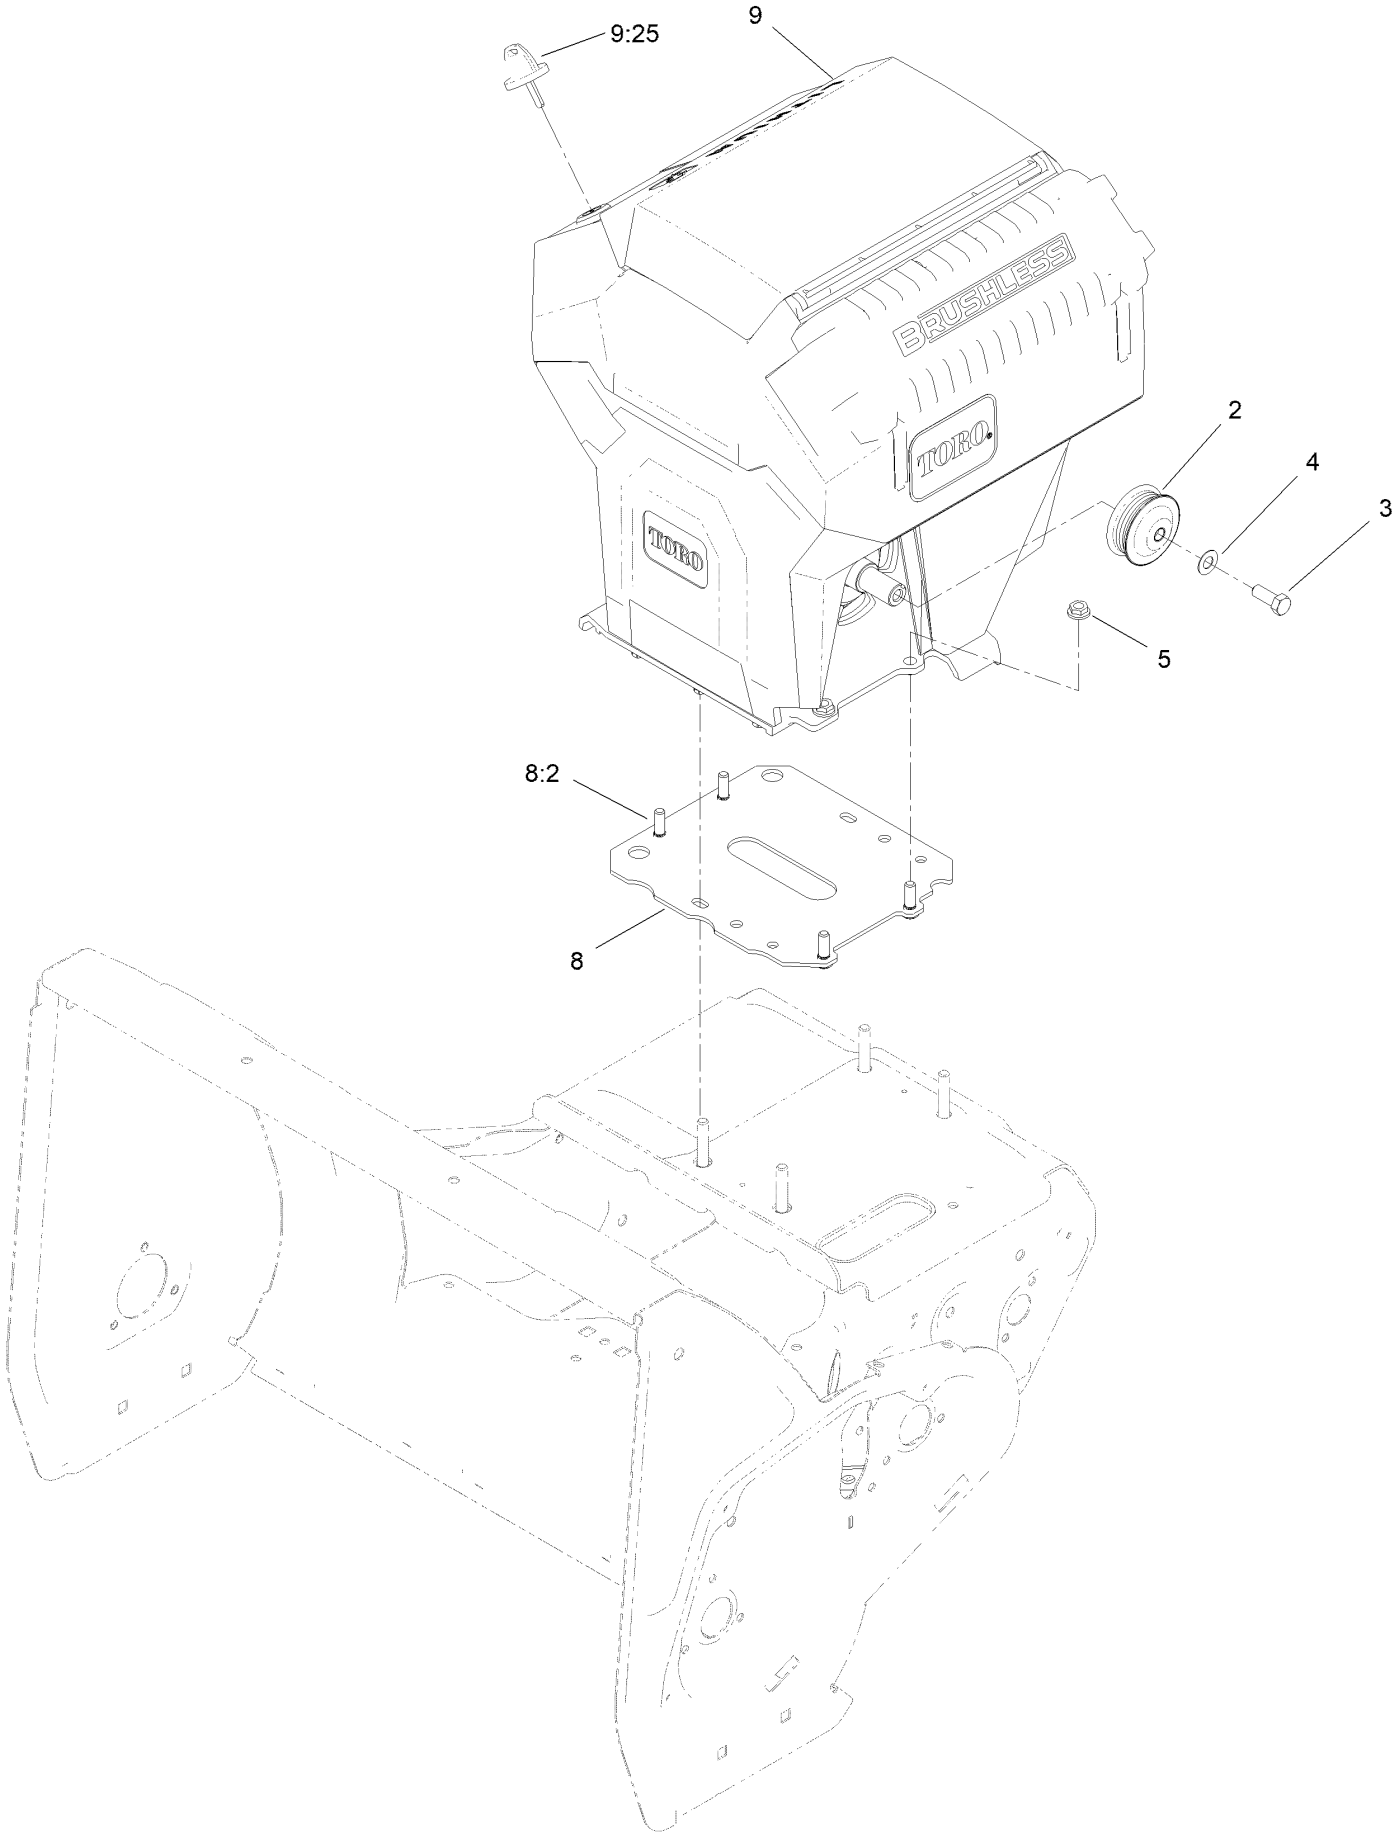

Powerhead Assembly (continued)

Ref.	Part Number	Qty.	Description
2	131-5908	1	Pulley-Engine
3	147-9409	1	Screw-HH
4	108-1438	1	Washer-Hardened
5	137-3039	8	Nut-HF
8	147-9408	1	Adapter ASM
8:2	147-9401	4	Stud-Press
9	147-1799	1	Powerhead- 60V Snowmaster
9:25	161-5981	1	Ignition ASM-Powerhead

Powerhead Assembly No. 147-1799

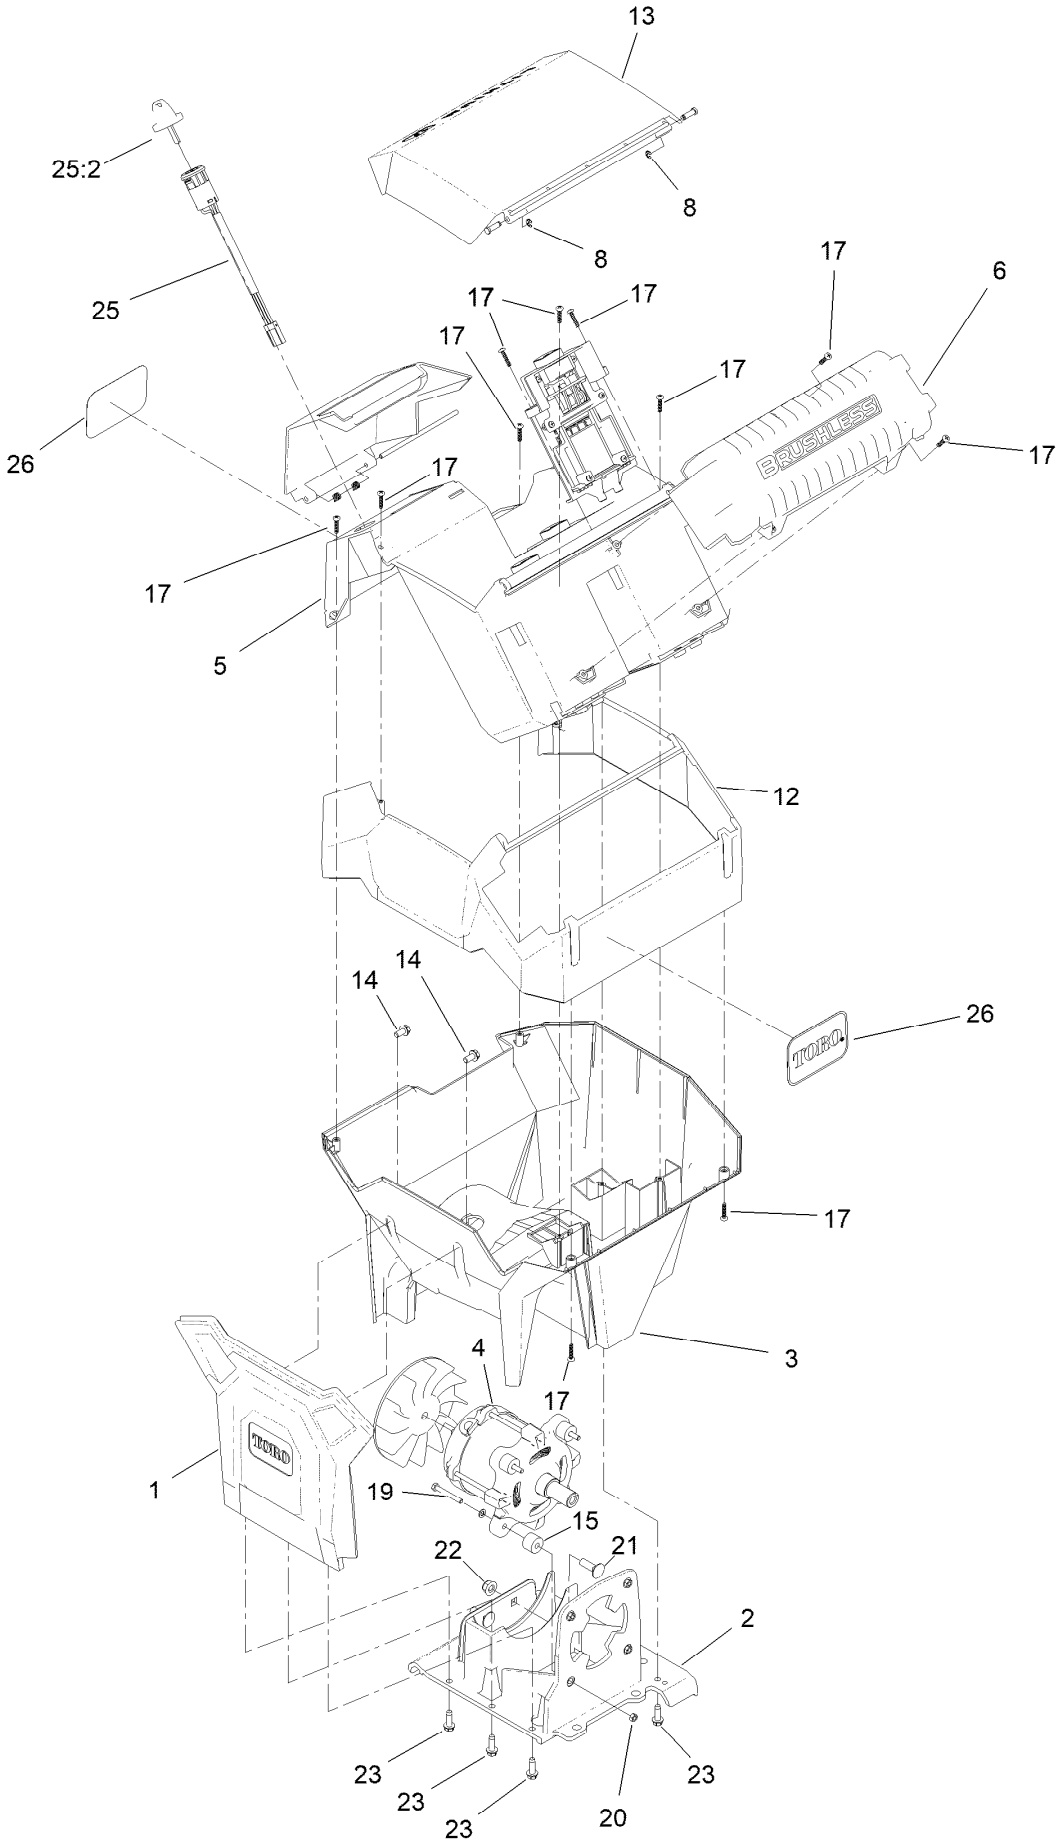

Powerhead Assembly No. 147-1799 (continued)

Ref.	Part Number	Qty.	Description
1	147-1792	1	Badge-Plate
2	147-1783	1	Mount-Powerhead
3	147-1793	1	Housing-Motor
4	147-4102	1	Motor-60V, Snowmaster
5	139-5319	1	Bucket-Battery
6	147-9461	1	Motor Controller ASM-Powerhead
8	110-1758	2	Ring-Retaining
12	139-5318	1	Cover-Controller
13	139-5320	1	Door-Top
14	32144-4	2	Screw-HWH
15	147-4103	4	Spacer-Motor
17	94-4496	12	Screw-PPH
19	135-4328	8	Bolt-M5X0.8Mm X 40 MM Long
20	48-7880	4	Nut-Hex
21	3230-2	2	Bolt-CARR
22	104-8300	2	Nut-HF, NI
23	49-2040	4	Screw-HWHTF
25	161-5981	1	Ignition ASM-Powerhead
25:2	147-1755	1	Key-60V 2 Stage Power Head
26	140-4183	2	Decal

Chute Assembly

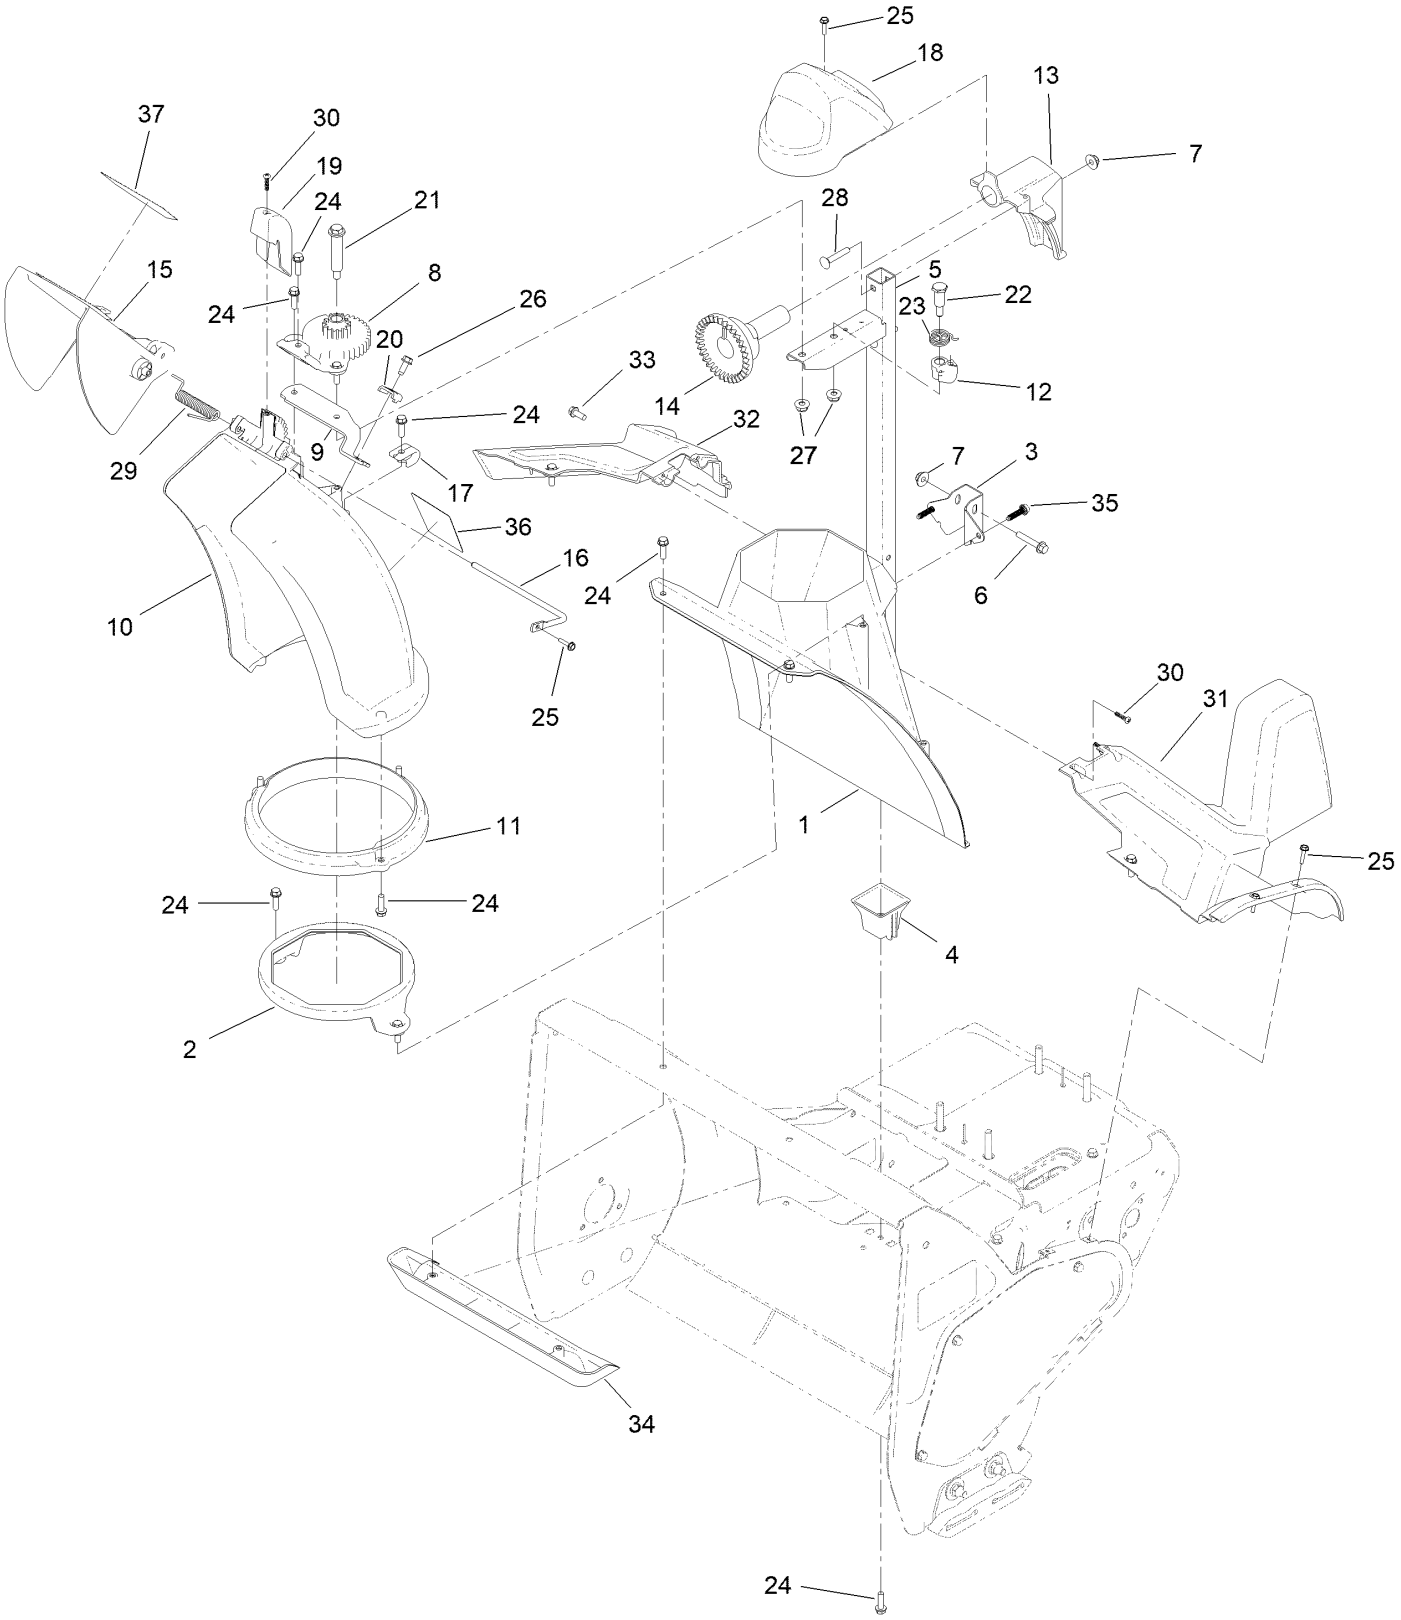

Chute Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-9587	1	Chute-Lower
1	147-9468	1	Chute-Discharge
2	130-9588	1	Guide-Chute
3	130-9589-03	1	Bracket-Post, Support (Chute)
4	130-9590	1	Retainer- Post, Chute
5	130-9603-03	1	Post-Chute
6	137-3027	1	Screw-HHF
7	137-3016	3	Nut-HF
8	130-9605	1	Gear-Chute
9	136-7170	1	Bracket-Cable
10	133-5591	1	Chute-Discharge
11	130-9596	1	Ring-Chute
12	130-9607	1	Latch-Chute
13	130-9608	1	Mount-Gear, Chute
14	106-4471	1	Gear-Face
15	147-9467	1	Deflector-Chute
16	136-7145	1	Rod-Deflector
17	130-9609	1	Guide-Cable
18	130-9611	1	Cover-Gear, Chute
19	120-9299	1	Chute-Cover
20	136-7191	1	Clamp-Cable
21	136-7199	1	Bolt-Shoulder
22	137-3103	1	Screw-Shoulder, HH
23	130-9616	1	Spring-Torsion, Latch (Chute)
24	137-3099	17	Screw-Plastite, HWH
25	137-3110	5	Screw-Plastite, HWH
26	137-3043	1	Screw-HWH
27	119-4041	2	Nut-HF
28	137-3011	2	Bolt-CARR
29	136-7143	1	Spring-Torsion
30	94-4496	3	Screw-PPH
31	131-1754	1	Shroud-Upper, LH
32	131-1765	1	Shroud-Lower, RH
33	32144-85	2	Screw-HWH Thd Form
34	131-1768	1	Kicker-Housing
35	130-6658	2	Screw-Flange, Plastic
36	147-9438	1	Decal - Danger
37	147-9420	1	Decal-Danger

Quickstick Assembly

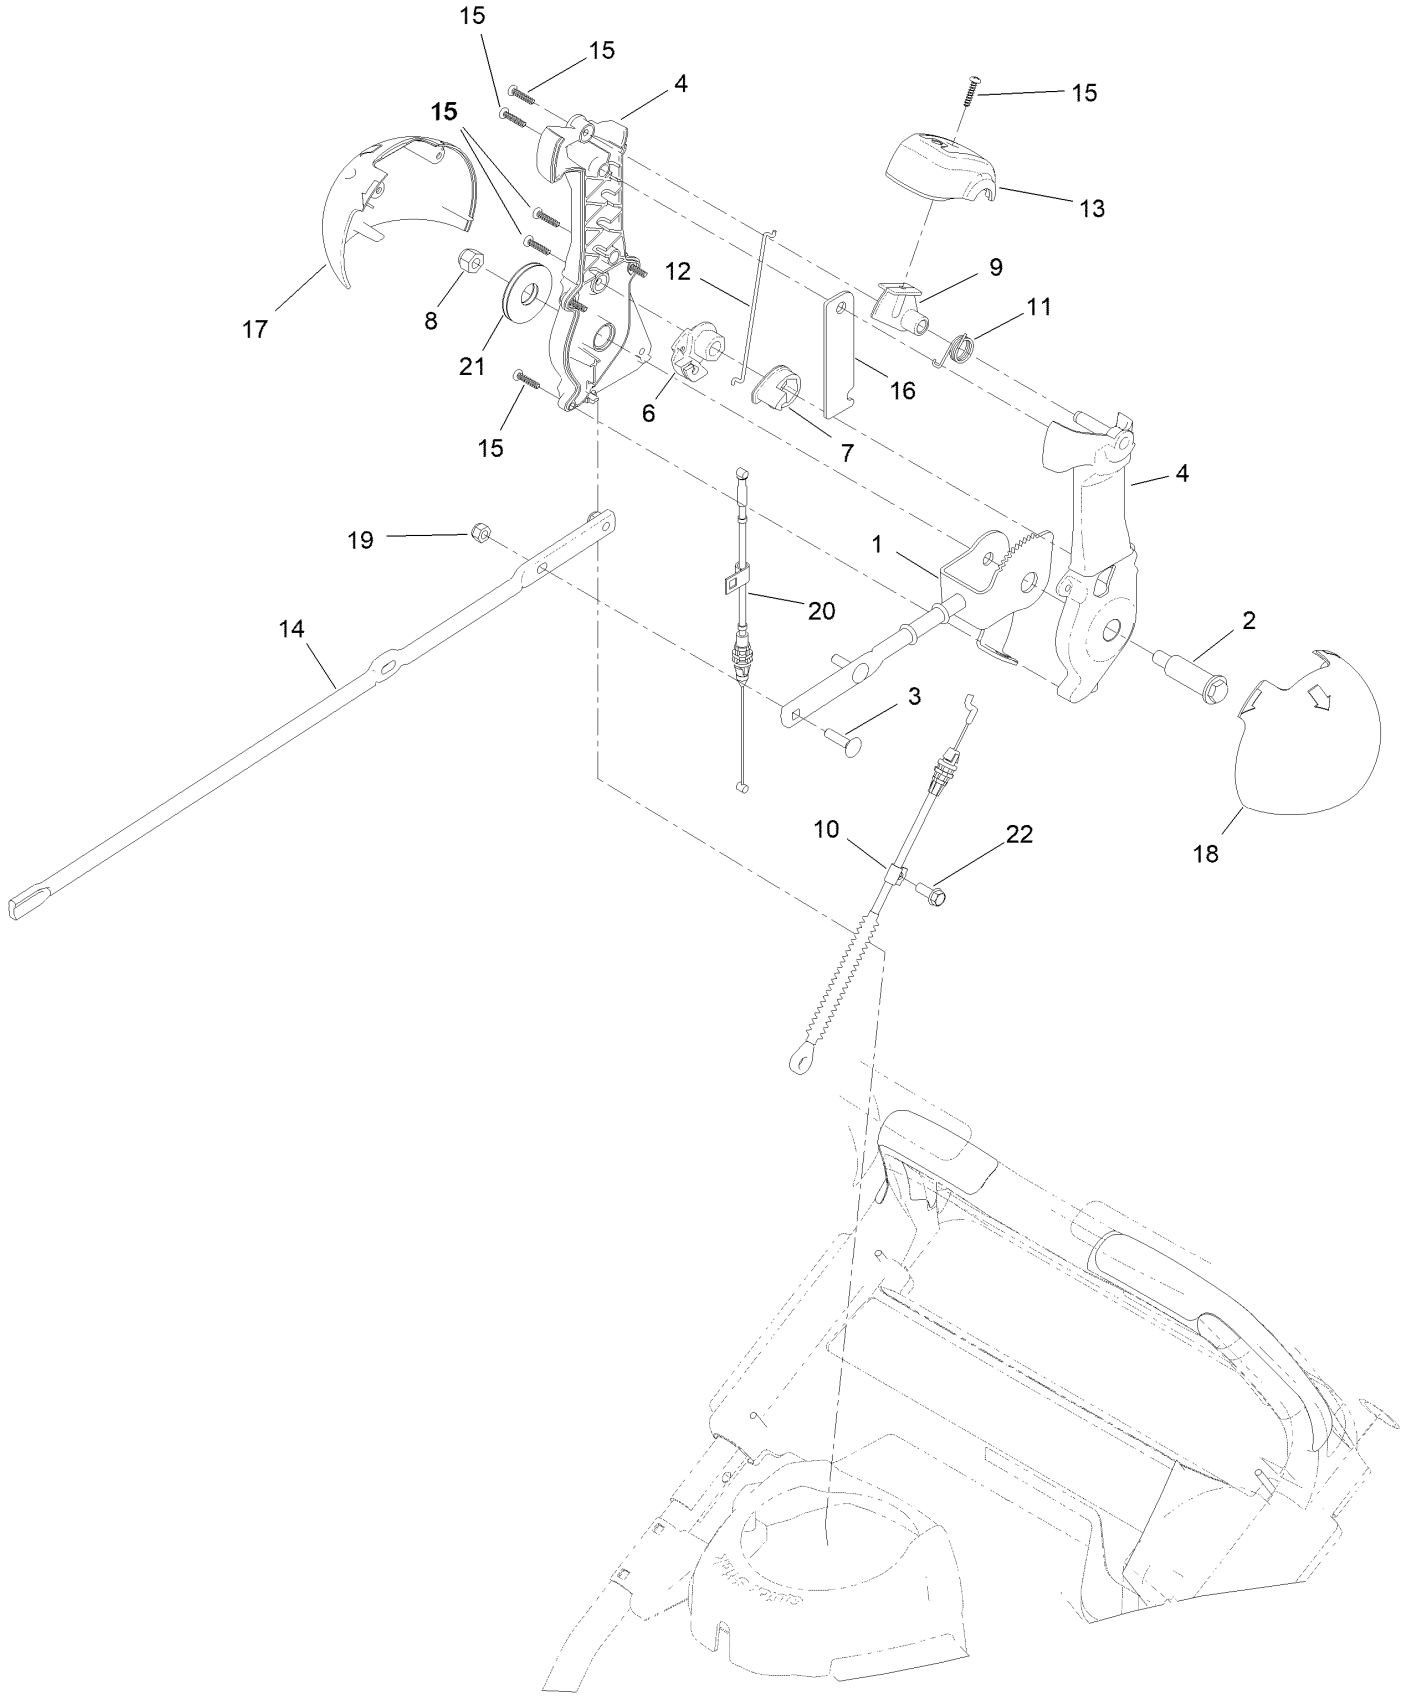

Quickstick Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-0662	1	Rod-Control, Chute
2	138-0659	1	Screw-Shoulder, HWH
3	137-3056	3	Bolt-CARR
4	139-1552	1	Chute Control Lever ASM
6	105-9988	1	Lever-Cable, Deflector
7	106-7310	1	Pawl-Latch
8	137-3087	1	Nut-Hex
9	137-6238	1	Trigger-Latch
10	130-9613	1	Cable-Control, Deflector
11	105-9982	1	Spring-Torsion
12	138-0688	1	Link-Latch
13	137-6239	1	Cap-Lever
14	144-1236	1	Rod-Chute
15	94-4496	8	Screw-PPH
16	136-6632	1	Plate-Stiffner
17	136-6677	1	Globe-Quickstick, RH
18	136-6678	1	Globe-Quickstick, LH
19	137-3094	3	Nut-Hex
20	130-9614	1	Cable-Release, Chute
21	138-0744	1	Washer-Friction, Composite
22	32144-85	1	Screw-HWH Thd Form

Handles and Control Assembly

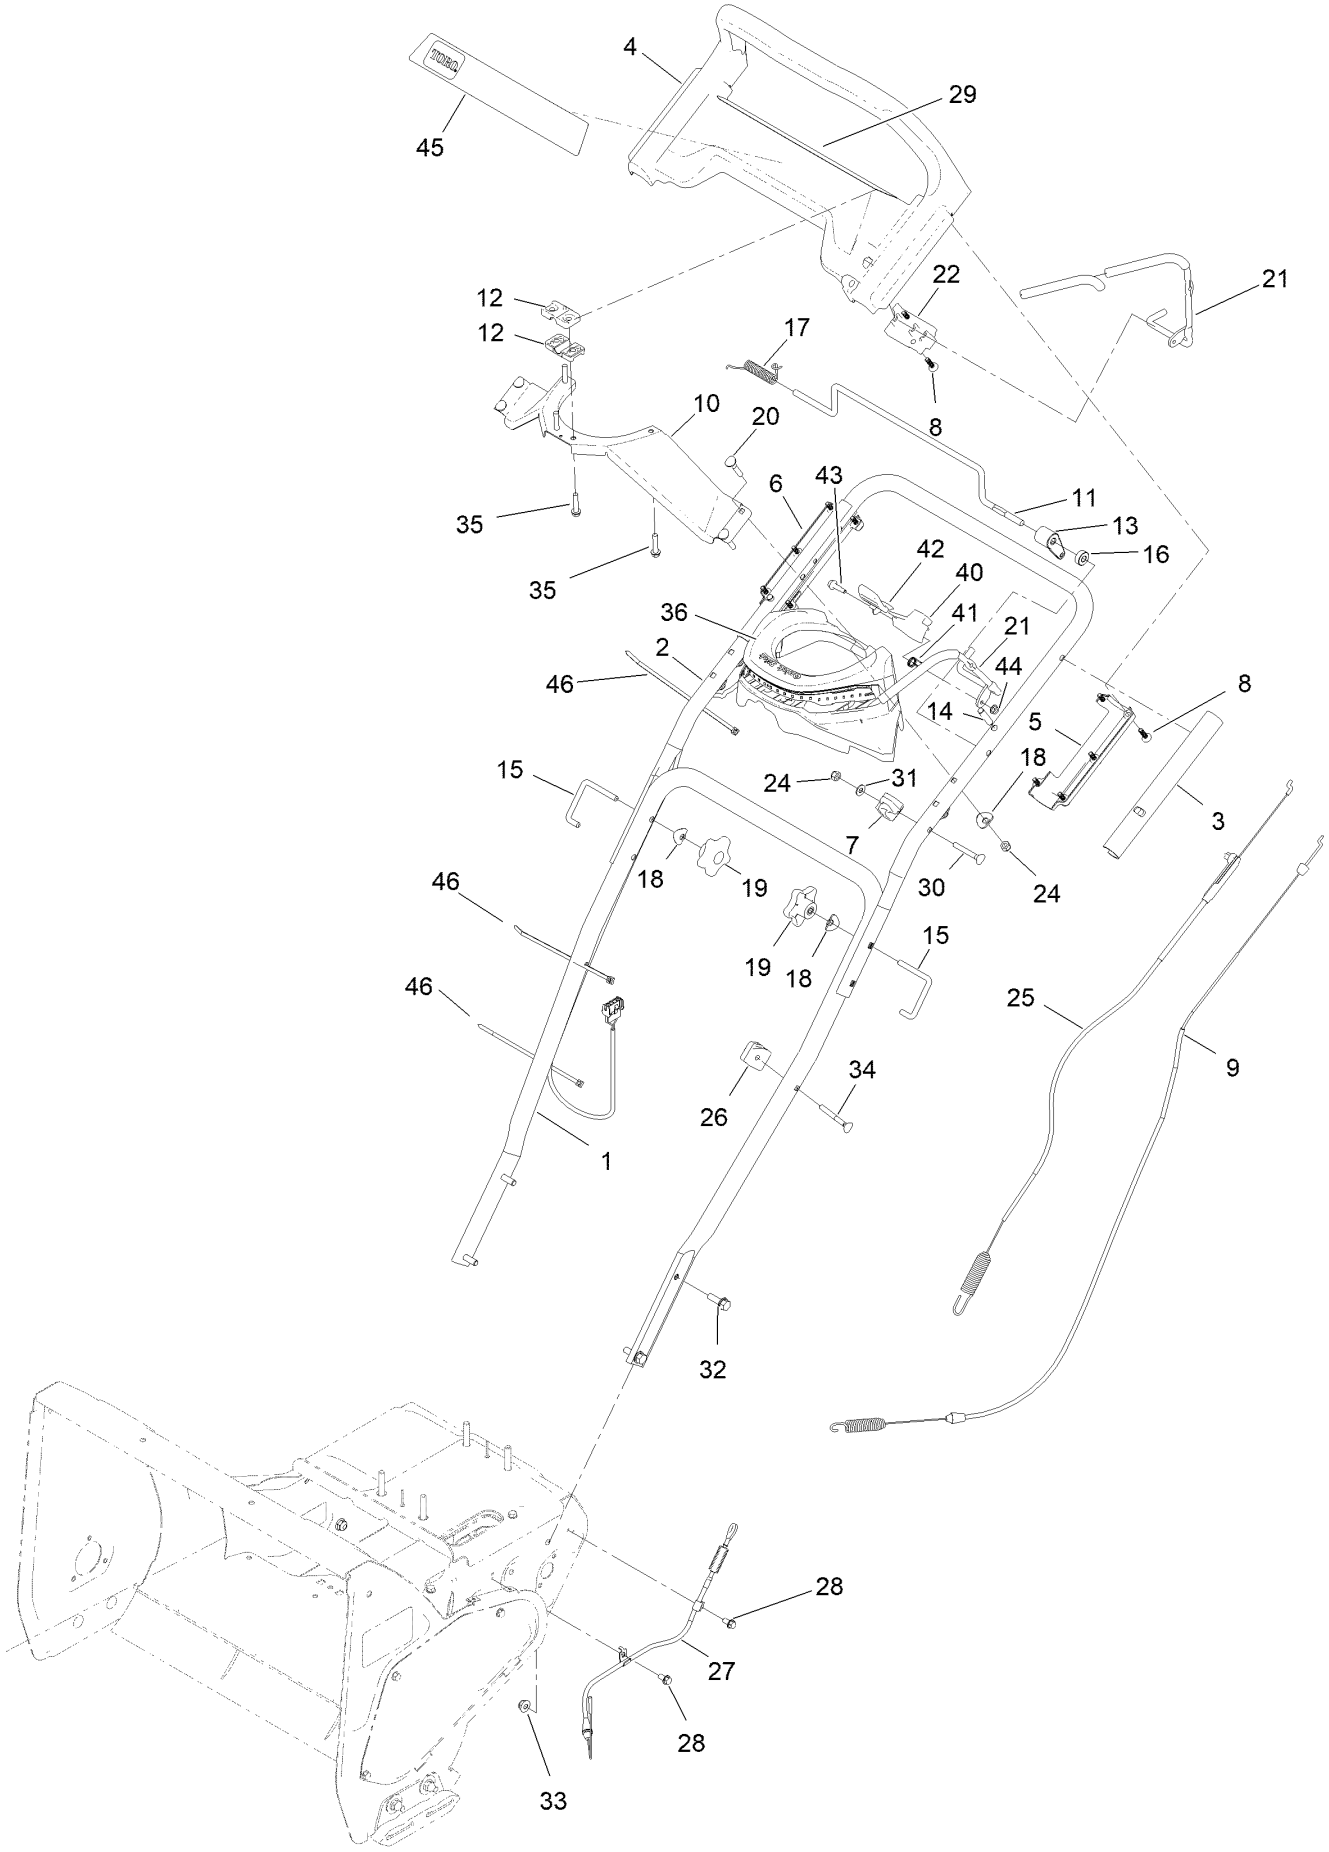

Handles and Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-2334-03	1	Handle-Lower
2	120-2333-03	1	Handle-Upper
3	120-2343	2	Sleeve Handle
4	147-9402	1	Handle Pp ASM W/ Decal
5	120-2336	1	Handle-Bottom, LH
6	131-1770	1	Handle-Bottom, RH
7	131-5903	1	Cable-Guide
8	120-2349	12	Screw
9	131-5924	1	Cable-Transmission
10	120-2342-03	1	Bracket-Chute, Control
11	136-7150	1	Bar-Control, Traction
12	105-9987	2	Support-Rod
13	131-5917	1	Lever-Traction
14	131-1771	2	Pin-Dowel
15	136-7130	2	Lock-Handle
16	130-2343	1	Spacer
17	136-7166	1	Spring-Torsion
18	137-3009	6	Washer-Cup
19	106-4161	2	Knob-Handle
20	117-7737	4	Screw-Handle
21	147-7523	1	ASM-Bail
22	131-5901	1	Bail-Mount
24	137-3094	4	Nut-Hex
25	120-2338	1	Cable-Rotor, Upper
26	92-7729	1	Anchor-Cable, Upper
27	131-1753	1	Cable-Rotor, Lower
28	32144-4	2	Screw-HWH
29	147-9404	1	Decal-Control, Panel
30	137-3109	1	Bolt-CARR
31	139-1699	2	Washer-Flat
32	137-3067	4	Screw-HHF
33	119-4041	4	Nut-HF
34	137-3108	1	Screw-Handle
35	137-3101	4	Screw-Plastic, HWH
36	147-9400	1	Headlight-Snowmaster
40	147-7530	1	Lever
41	147-7532	1	Spring-Torsion
42	112-8884	1	Knob
43	139-1709	1	Screw-Shoulder
44	139-1712	1	Nut-Hex Flange
45	147-9403	1	Decal-Display
46	614249	3	Tie-Cable

Attachments and Accessories

For 39915T SnowMaster e24 60V Snowthrower

Product Name	Model/Part
Center Paddle Replacement Kit	130-9569P
Skid Replacement Kit	130-9619P
Scraper Kit	130-9628P
Rotor Belt	131-5967P
Toro 2-Stage Cover	490-7466

Notes:

Count on it.