Form No. 3329-123

44in and 52in Twin Bagger

Z100 Z Master

Model No. 78455 – 220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved


Contents

Description	Page
Blower Housing Assembly	3
Blower and Mounting Assembly	4
Bagger Mount Assembly	5
Bag Support and Hood Assembly	6
Bag Assembly	7

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

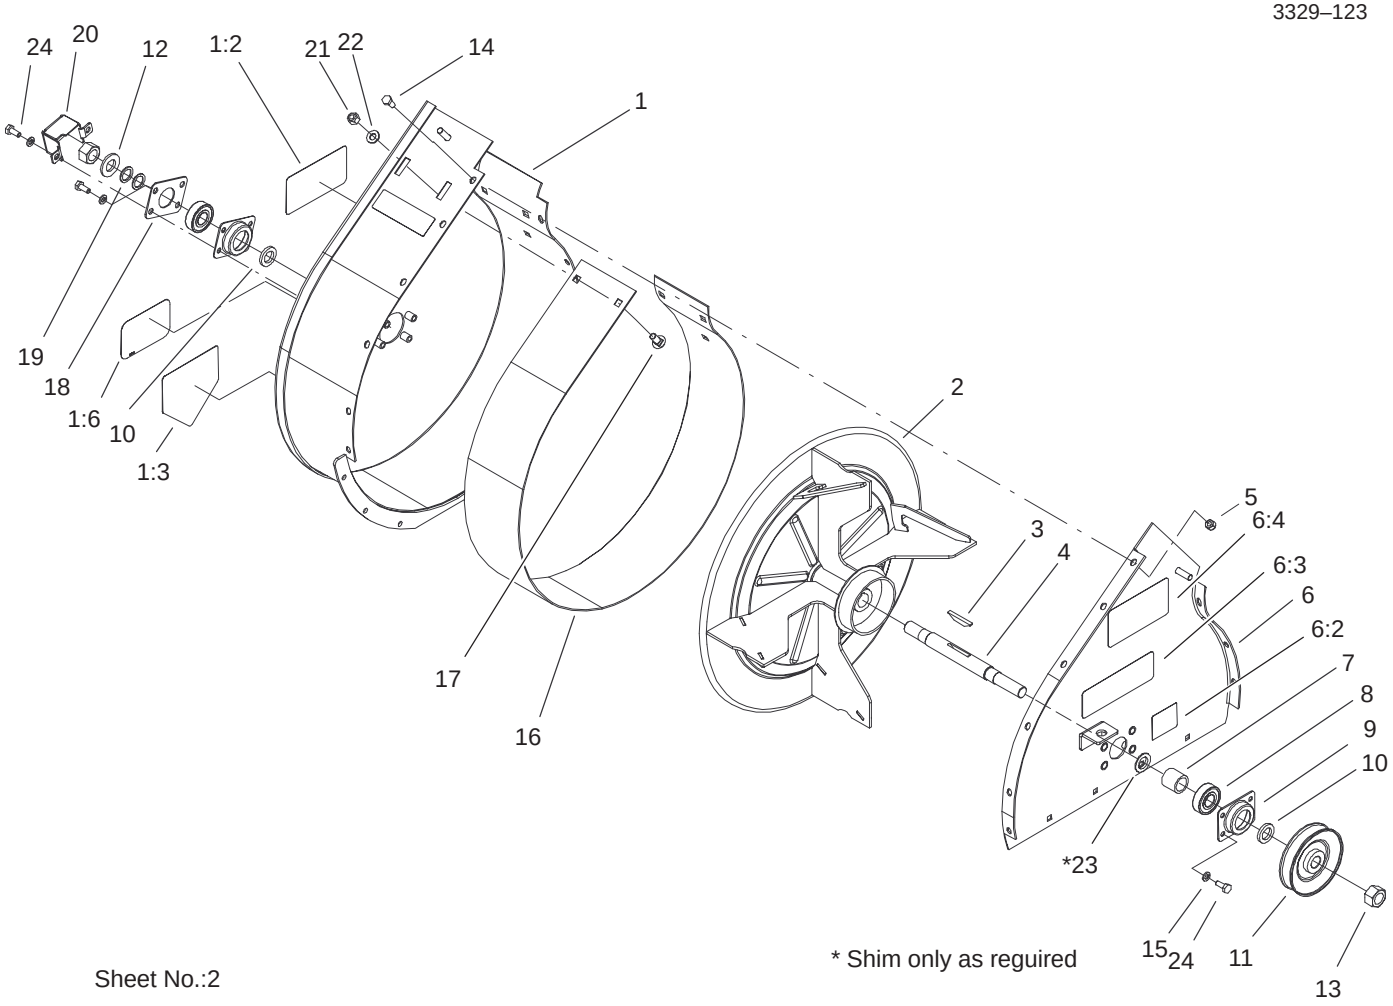


Sheet No.:2

* Shim only as reguired

Blower Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	105–6191	1	Blower Housing ASM W/ Decals
1:2	79–0360	1	Decal–Danger
1:3	93–1122	1	Decal–Danger
1:6	99–2385	1	Decal–Toro
2	106–3054–03	1	Impeller ASM
3	3257–40	1	Key–Hi Pro
4	105–5893	1	Shaft–Blower
5	3296–42	9	Nut–Lock, NI
6	105–6189	1	Cover Plate ASM W/ Decal
6:2	88–8950	1	Decal–Warning
6:3	79–0350	1	Decal–Danger
6:4	79–0360	1	Decal–Danger
7	106–2097	1	Spacer
8	38–7820	2	Bearing–Ball
9	37–6730	2	Cup–Bearing
10	63–9710	2	Spacer–Bearing
11	105–5992	1	Pulley ASM
12	9202604	1	Washer
13	3217–11	2	Nut–Hex
14	321–3	9	Screw–HH
15	3253–3	8	Washer–Lock
16	79–1880	1	Strip–Wear
17	3230–1	5	Bolt–CARR
18	63–9700–03	2	Plate–Cover

Ref. No.	Part No.	Qty.	Description
19	9202154	2	Washer
20	106–3076–03	1	Cover–Shaft
21	3296–29	5	Nut–Lock, NI
22	3256–23	5	Washer–Flat
23	1535	1	Washer–Thrust
24	321–4	8	Screw–HH

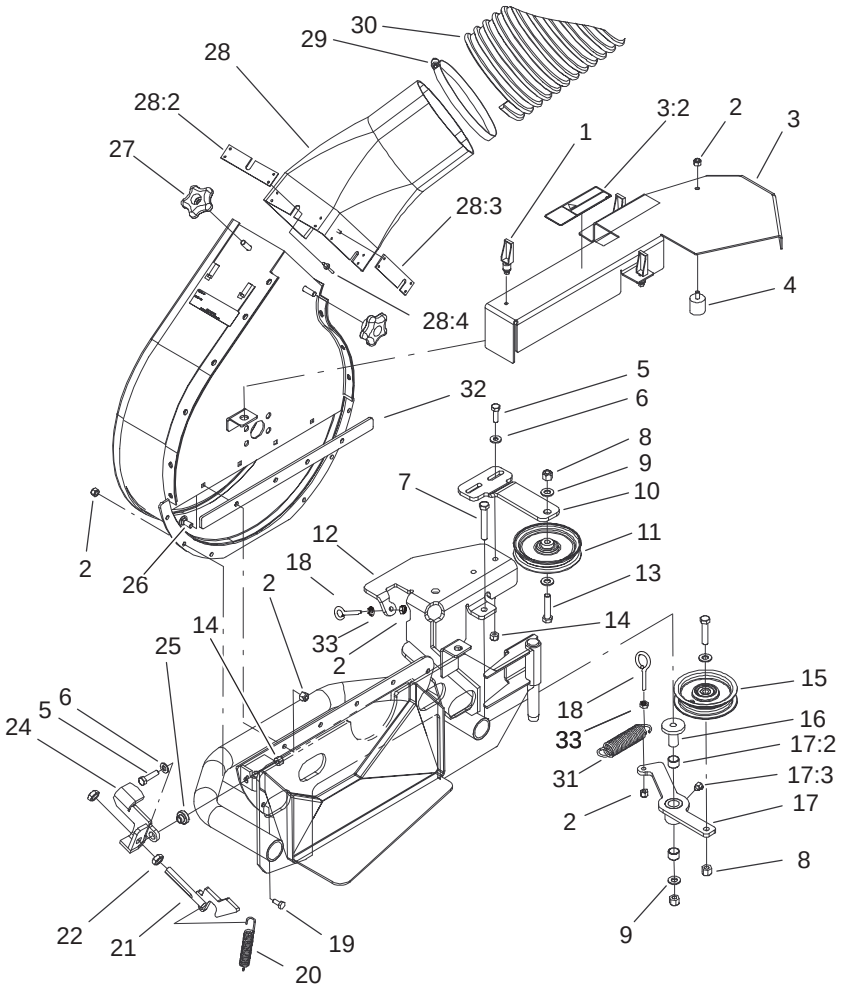


Sheet No.:3

Blower and Mounting Assembly

Ref. No.	Part No.	Qty.	Description
1	74–5950	3	Latch–Swell
2	3296–42	13	Nut–Lock, NI
3	105–5990	1	Belt Cover ASM W/ Decal
3:2	80–8040	1	Decal–Warning
4	106–5891	1	Bumper
5	322–6	3	Screw–HH
6	3256–23	3	Washer–Flat
7	323–12	1	Screw–HH
8	3296–39	3	Nut–Lock, NI
9	3256–24	4	Washer–Flat
10	105–5986–03	1	Bracket–Idler
11	92–7099	1	Pulley–Idler
12	106–3100–03	1	Transition ASM
13	323–9	2	Screw–HH
14	3296–29	3	Nut–Lock, NI
15	92–7084	1	Pulley–Flat Idler
16	106–2057	1	Spacer
17	106–2056	1	Idler Arm ASM
17:2	1–653600	2	Bearing
17:3	302–11	1	Fitting–Lube, 45°
18	71–2870	2	Bolt–Eye
19	321–3	6	Screw–HH
20	37–8880	1	Spring–Traction
21	106–3123	1	Latch ASM
22	3218–4	2	Nut–Jam

Ref. No.	Part No.	Qty.	Description
24	106–3124–01	1	Pedal ASM
25	105–5996	1	Spacer
26	3229–1	4	Screw–CARR
27	106–4161	2	Knob–Handle
28	106–2092	1	Blower Outlet Adapter ASM
28:2	105–9102	1	Plate–Adapter, Top
28:3	105–9103	1	Plate–Adapter, Side
28:4	106–8000	8	Rivet–Oval Head
28:5	3256–53	8	Washer–Flat
29	102528	1	Clamp
30	105–5875	1	Hose–Flexible
31	707451	1	Spring–Extension
32	106–3127–03	1	Plate–Spacer
33	3218–1	1	Nut–Jam

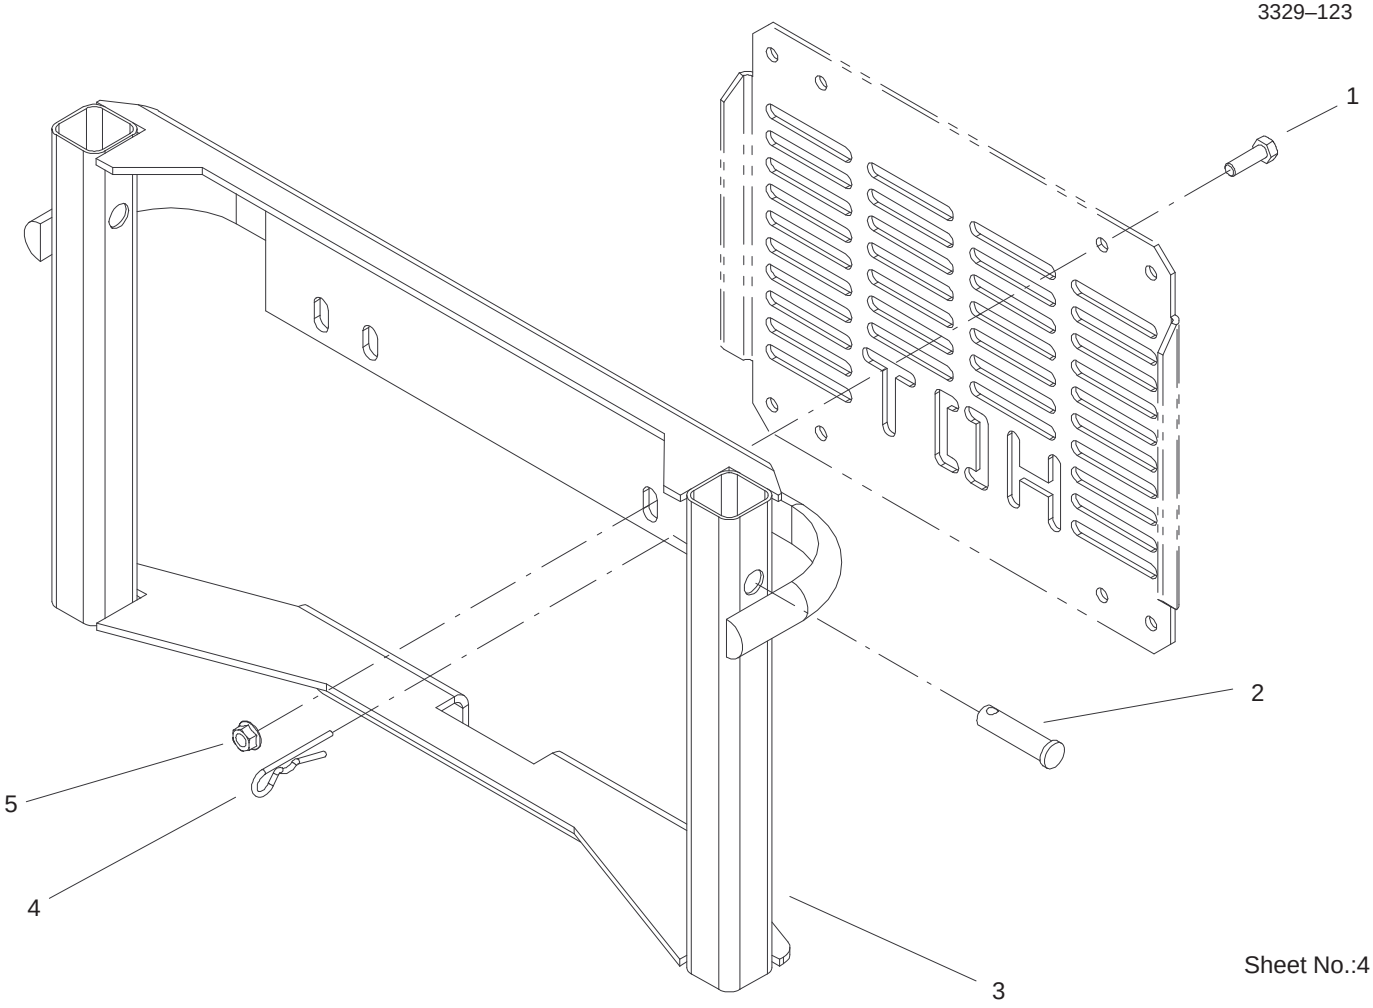


Sheet No.:4

Bagger Mount Assembly

Ref. No.	Part No.	Qty.	Description
1	322–5	8	Screw–HH
2	1–808289	2	Pin–Clevis
3	1–652308–03	1	Bagger Mount ASM
4	1–806005	2	Pin–Hair
5	32128–20	8	Nut–HF

Ref. No.	Part No.	Qty.	Description

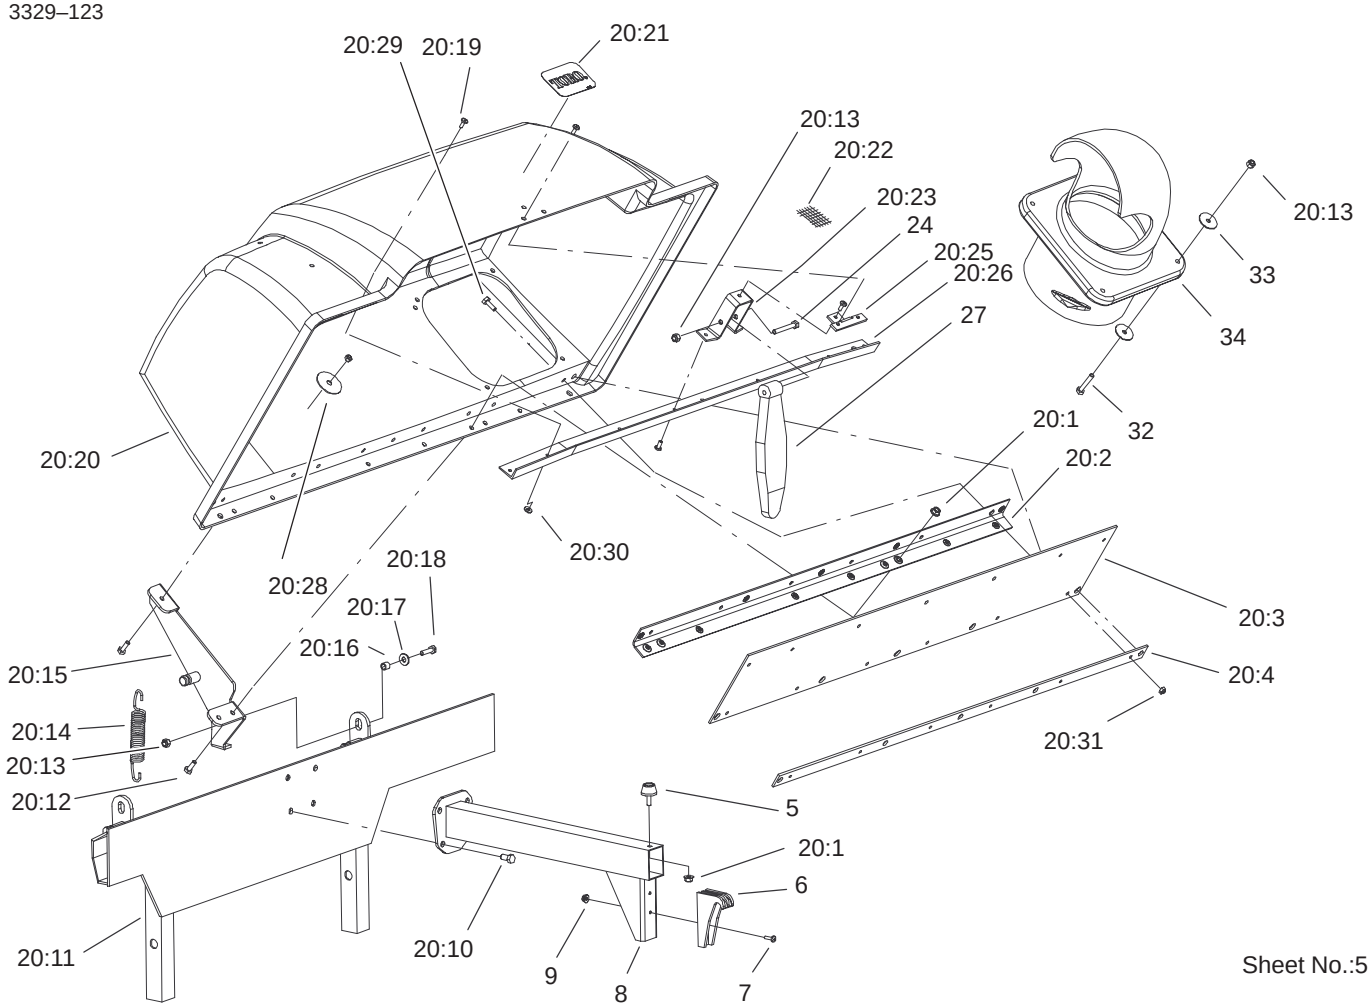


Sheet No.:5

Bag Support and Hood Assembly

Ref. No.	Part No.	Qty.	Description
5	1–523420	1	Bumper
6	1–653404	1	Catch
7	3290–500	2	Screw–PPH
8	1–652414–03	1	Bag Support ASM
9	1–809112	2	Nut
20	105–6188	1	Hood ASM
20:1	32128–33	6	Nut–HF
20:2	1–653397–03	1	Stiffener–Bagger, Top
20:3	1–653425	1	Seal
20:4	1–653528–03	1	Plate–Backing
20:10	322–2	4	Screw–HH
20:11	1–652305–03	1	Bagger Upright ASM
20:12	321–4	6	Screw–HH
20:13	3296–42	2	Nut–Lock, NI
20:14	1–653544	2	Spring–Extension
20:15	1–652395–03	2	Hinge ASM
20:16	1–633545	2	Spacer–Grommet
20:17	3256–2	2	Washer–Flat
20:18	321–6	2	Screw–HH
20:19	114439	38	Rivet–Pop
20:20	105–9100	1	Top–Bagger
20:21	99–2385	1	Decal–Toro
20:22	114967	1	Screen–Bagger
20:23	1–653519	1	Anchor–Latch
20:25	1–653535	1	Reinforcement–Latch
20:26	1–653400–03	1	Support–Screen

Ref. No.	Part No.	Qty.	Description
20:28	1–653036	2	Washer
20:29	1–803075	6	Screw–Truss Head
20:30	3256–14	14	Washer–Flat
20:31	3296–2	6	Nut–Lock
24	321–11	1	Screw–HH
27	1–653403	1	Latch
32	321–9	4	Screw–HH
33	3256–58	8	Washer–Flat
34	105–5873	1	Tube–Bagger, Upper

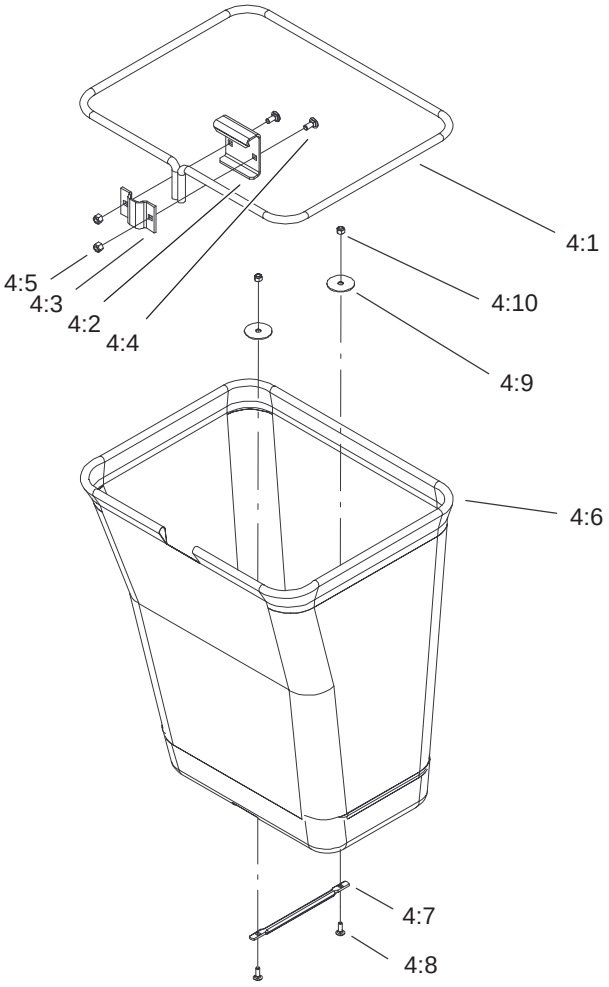

Sheet No.:6

Bag Assembly

Ref. No.	Part No.	Qty.	Description
4	1–654390	2	Bag ASM
4:1	1–653529–03	1	Frame–Bag
4:2	114973–03	1	Hanger–Bag
4:3	114974–03	1	Clamp
4:4	3230–1	2	Bolt–CARR
4:5	3296–29	2	Nut–Lock, NI
4:6	1–654389	1	Bag–Cloth
4:7	1–653566	1	Bag–Handle
4:8	3229–1	2	Screw–CARR
4:9	1–653036	2	Washer
4:10	3296–42	2	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description


TORO®