Form No. 3329-289

Track Tensioner Kit

Dingo® TX425

Model No. 106–7610
Model No. 106–7611
Model No. 106–7612

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002
All Rights Reserved

Ref. No. 1 for serial number 220000401 and higher.
Ref. No. 2 and 3 for serial number 220000400 and lower.

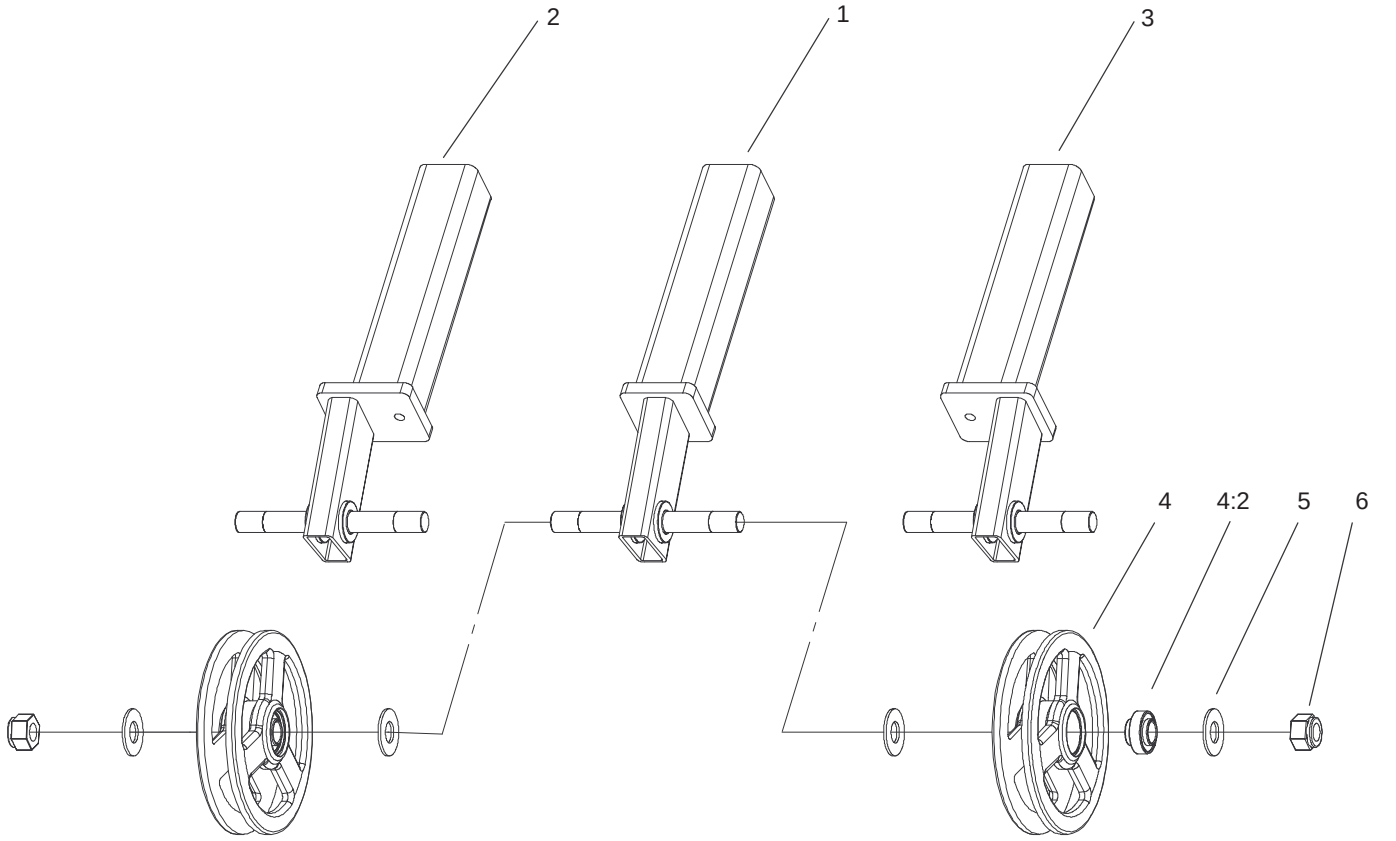

Sheet No.:0

Track Tensioner Assembly

Ref. No.	Part No.	Qty.	Description
1	104–6127–03	1	Tensioner Arm ASM (only on: 106–7610)
2	104–6124–03	1	RH Tensioner Arm ASM (only on: 106–7611)
3	104–6125–03	1	LH Tensioner Arm ASM (only on: 106–7612)
4	104–6123	2	Tensioner Wheel ASM
4:2	104–6129	2	Bearing–Ball
5	104–6126	4	Washer–Flat
6	104–2024	2	Nut–Lock

Ref. No.	Part No.	Qty.	Description