Form No. 3329–503

42in/48in/ Side Discharge Mower Conversion Kit

XT Series Garden Tractor

Part No. 106–8253

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2003
All Rights Reserved

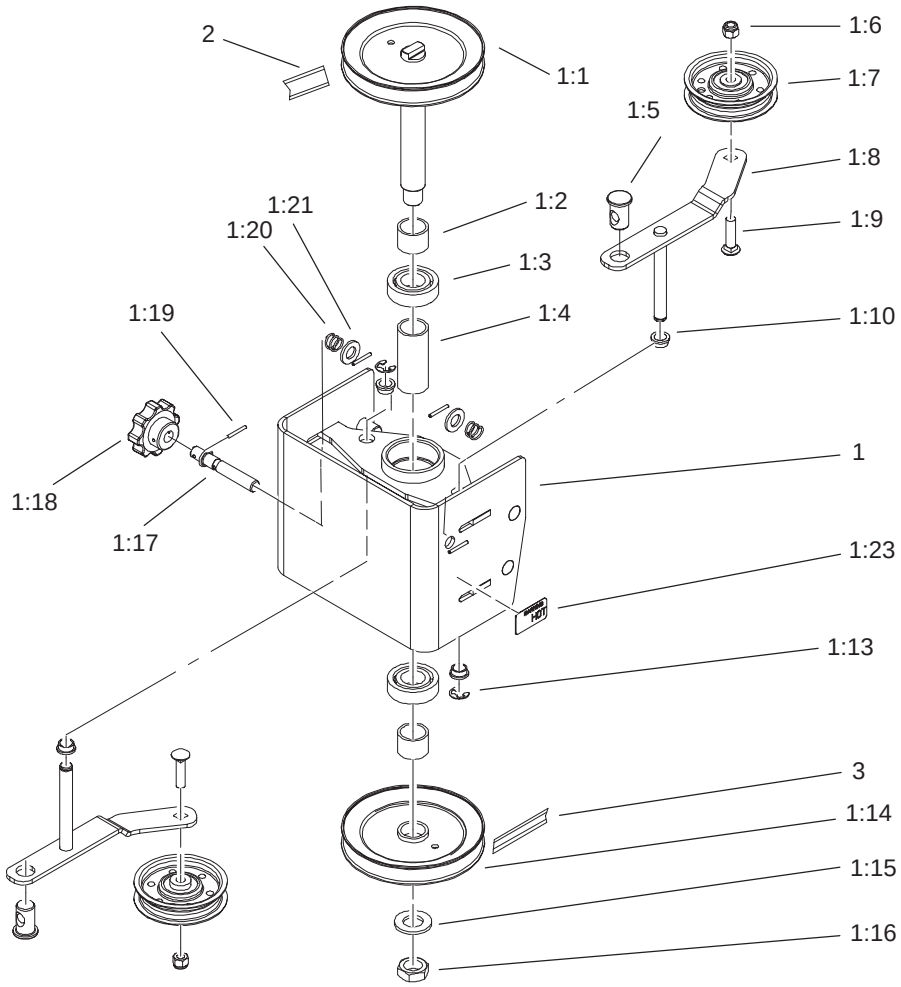


Sheet No.:2

Pulley Box Assembly

Ref. No.	Part No.	Qty.	Description
1	106–5562	1	Pulley Box ASM
1:1	106–5625	1	Upper Pulley ASM
1:2	106–5634	2	Spacer–Pulley
1:3	251–82	2	Bearing–Ball
1:4	106–5633	1	Spacer–Bearing
1:5	105–1397	2	Ferrule–Adjuster
1:6	3296–22	2	Nut–Lock NI
1:7	92–7101	2	Pulley–Flat Idler
1:8	106–5636	2	Idler Arm ASM
1:9	3231–4	2	Screw–CARR
1:10	256–156	4	Bushing–Flange
1:13	32120–47	2	Ring–Retaining, External
1:14	106–5627	1	Lower Pulley ASM
1:15	3256–28	1	Washer–Flat
1:16	3220–7	1	Nut–Jam
1:17	106–4024	2	Rod–Tension
1:18	105–1492	2	Knob–Adjusting
1:19	933156	4	Pin–Spirol, Roll
1:20	106–9892	2	Spring–Compression
1:21	106–9888	2	Washer–Flat
1:23	65–2690	2	Decal–Surface, Hot
2	106–5631	1	Belt–PTO,Xt
3	106–9883	1	Belt–Drive

Ref. No.	Part No.	Qty.	Description

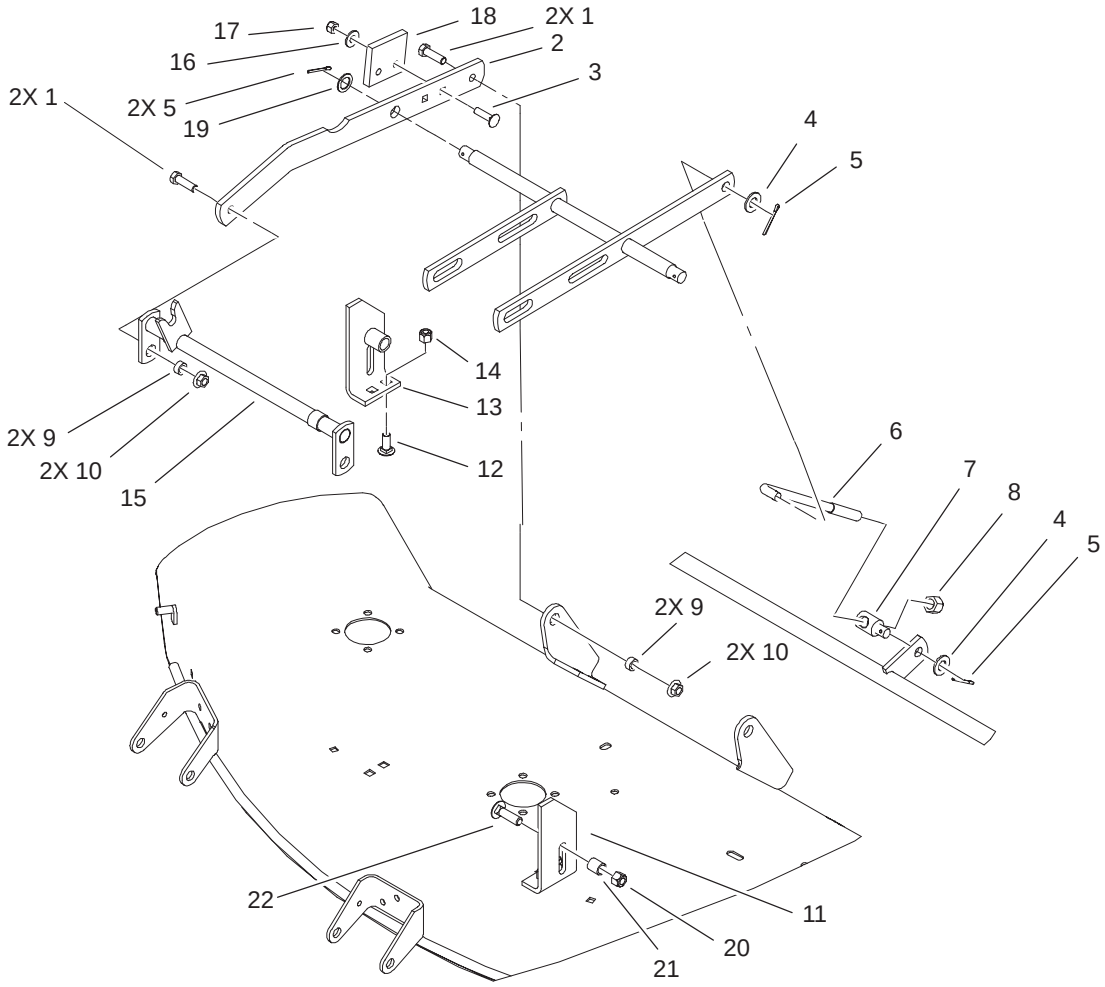

Sheet No.:3

Deck Mounting Assembly

Ref. No.	Part No.	Qty.	Description
1	323–7	4	Screw–HH
2	106–5641–03	2	Bar–Draft
3	3230–3	4	Screw–CARR
4	3256–26	2	Washer–Flat
5	3272–12	4	Pin–Cotter
6	106–9880	1	Rod–Adjusting
7	94–7802	1	Trunnion
8	3296–23	1	Nut–Lock, NI
9	114127	4	Spacer
10	32128–19	4	Nut–HF
11	106–9886–03	1	Front Deck Bracket,LH
12	3231–2	4	Screw–CARR
13	106–9887–03	1	Front Deck Bracket,RH
14	3296–39	4	Nut–Lock, NI
15	106–5644–03	1	Hitch ASM
16	3256–3	4	Washer–Flat
17	3296–29	4	Nut–Lock, NI
18	102322	2	Bumper
19	3256–69	2	Washer–Flat
20	3296–48	2	Nut–Lock, NI
21	9793604	2	Spacer
22	3232–3	2	Screw–CARR

Ref. No.	Part No.	Qty.	Description


TORO®