Form No. 3323–558 REV A

LAWN-BOY®

Side–Discharge Lawnmower

Model No. 22261—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© **Lawn-Boy, Inc. — 2003**
All Rights Reserved

Contents

Description	Page
Housing Assembly	3
Axle Assembly No. 92–7869	4
Rear Axle Assembly	5
Engine and Blade Assembly	6
Handle Assembly	7
Engine Assembly	8
Short Block Assembly	10
Carburetor Assembly	11


Accessories

Description	Model / Part No.
Side Bagging Kit	#89814 (683789)
Leaf Bag	#89804 (681001)
Leaf Shredder Kit	#89860 (681684)
Rear Bagging Kit	#89906 (100–6363)
Mulching Plate	#89864 (681906)
Leaf Bag w/Chute	#89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

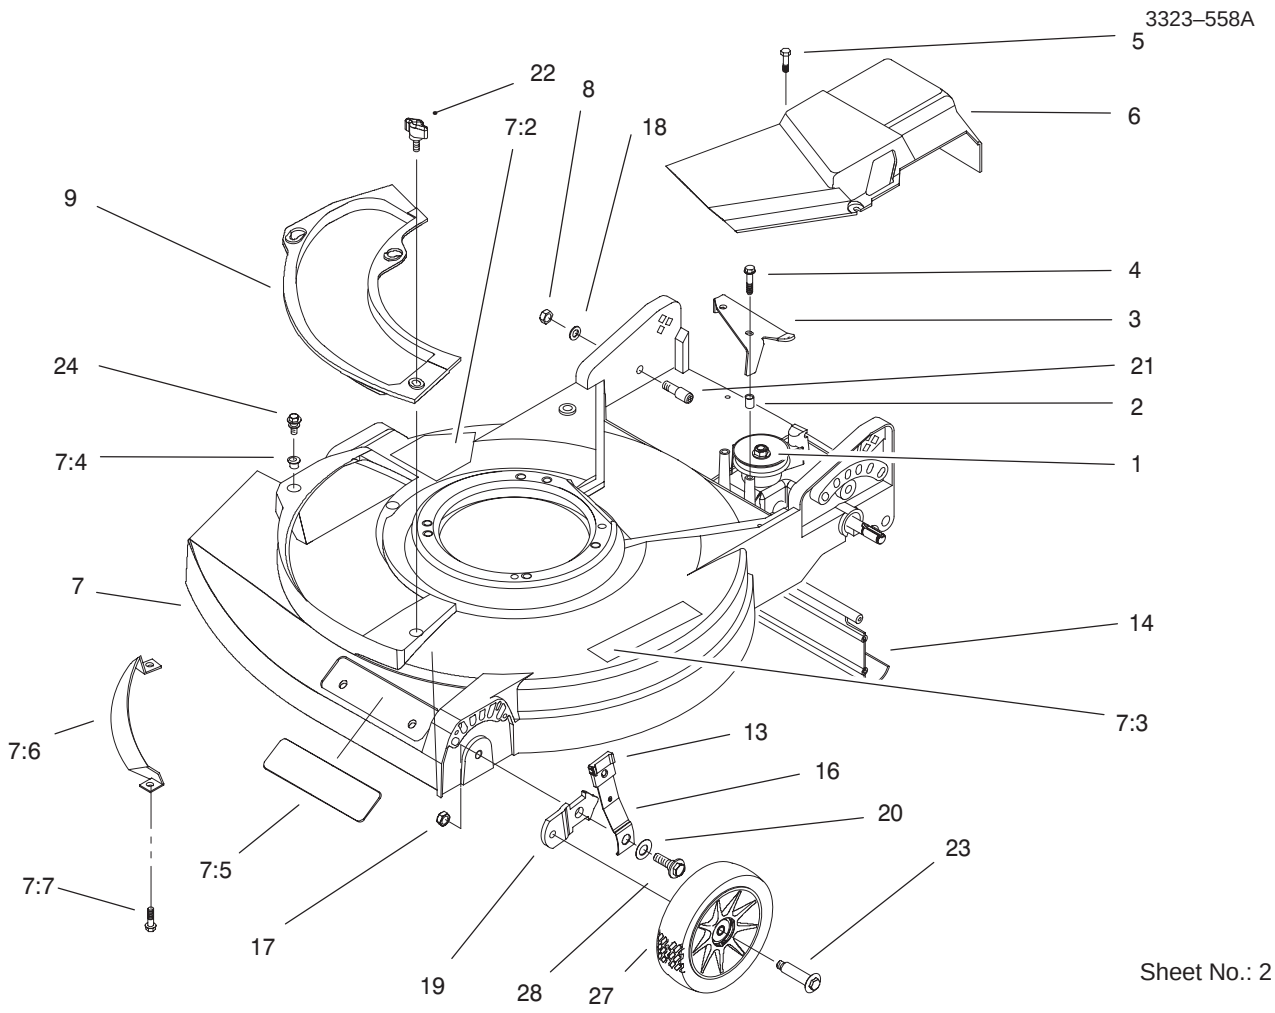


Sheet No.: 2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	92–7869	1	Gear Case ASM
2	46–5551	2	Spacer
3	92–7699–03	1	Bracket–Actuator
4	32144–110	2	Screw–HWH
5	12–5450	2	Screw
6	98–4493	1	Cover – Drive
7	99–5202	1	Housing–ASM
7:2	39–5770	1	Decal–Danger
7:3	93–7250	1	Decal–Warning
7:4	94–1610	3	Grommet–Plastic
7:5	94–6303	1	Decal–Deck
7:6	608175	1	Bar–Toe
7:7	46–6811	2	Screw–HWH
8	603773	2	Nut
9	95–7052	1	Plate–Opening, Chute
13	92–1008	4	Knob–Lever, Height Adjustment
14	92–7736	1	Shield – Trailing
16	92–1006	2	Front Spring Arm ASM
17	3296–39	2	Nut–Lock, NI
18	40–1940	4	Washer
19	95–7403–03	2	Bracket–Height Adjustment, Wheel
20	3290–413	2	Washer–Belleville
21	92–9673	2	Screw–Torx
22	98–8332	1	Knob

Ref. No.	Part No.	Qty.	Description
23	603567	2	Bolt
24	614677	2	Screw–Sems
27	684159	2	Wheel/Tire ASM
28	92–4856	2	Bolt–Shoulder

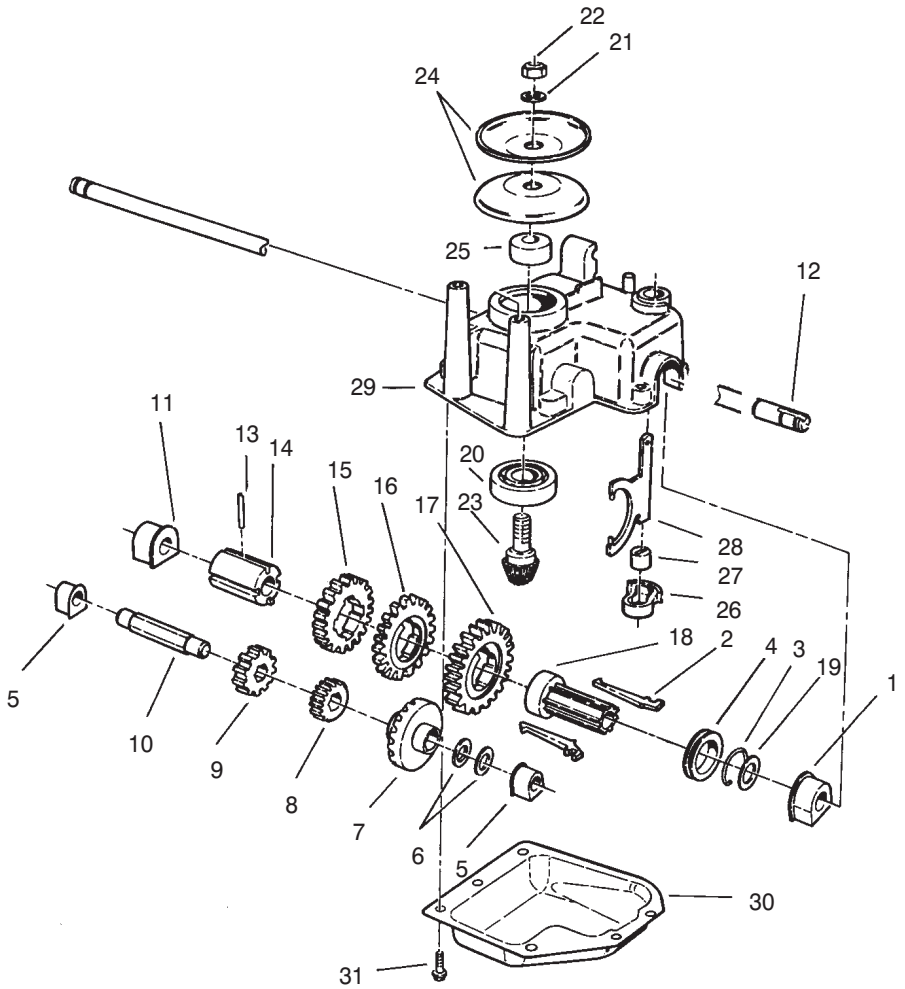


Sheet No.: A1

Axle Assembly No. 92–7869

Ref. No.	Part No.	Qty.	Description
1	60–8770	1	Bushing–Output
2	76–0760	2	Key–Shift
3	65–5250	1	Clip–Spring
4	76–0770	1	Collar–Shift
5	60–8750	2	Bushing
6	36–4791	2	Washer–Thrust
7	104–7668	1	Gear–15t Spur, 37t Bevel
8	55–3780	1	Pinion–20 T
9	55–3800	1	Pinion–25 T
10	60–8800	1	Shaft–Intermediate
11	60–8850	1	Bushing
12	65–4770	1	Shaft–Output
13	3285–19	1	Pin–Groove
14	60–8790	1	Sleeve–Gear
15	55–3810	1	Gear–39 T
16	55–3790	1	Gear–44 T
17	55–3770	1	Gear–49 T
18	76–0780	1	Sleeve–Key, Shift
19	36–4780	1	Washer
20	100–1048	1	Bearing–Ball
21	3256–24	1	Washer–Flat
22	3296–5	1	Nut–Lock, NI
23	92–5790	1	Pinion
24	100–1176	2	Pulley–Half
25	92–5791	1	Spacer


Ref. No.	Part No.	Qty.	Description
26	60–8810	1	Retainer–Fork, Shift
27	29–9570	1	Bushing–Yoke
28	60–8870	1	Yoke–Shift
29	60–8710	1	Case–Gear, Upper
30	60–8730–03	1	Cover–Case, Gear
31	49–2040	6	Screw–Tapping

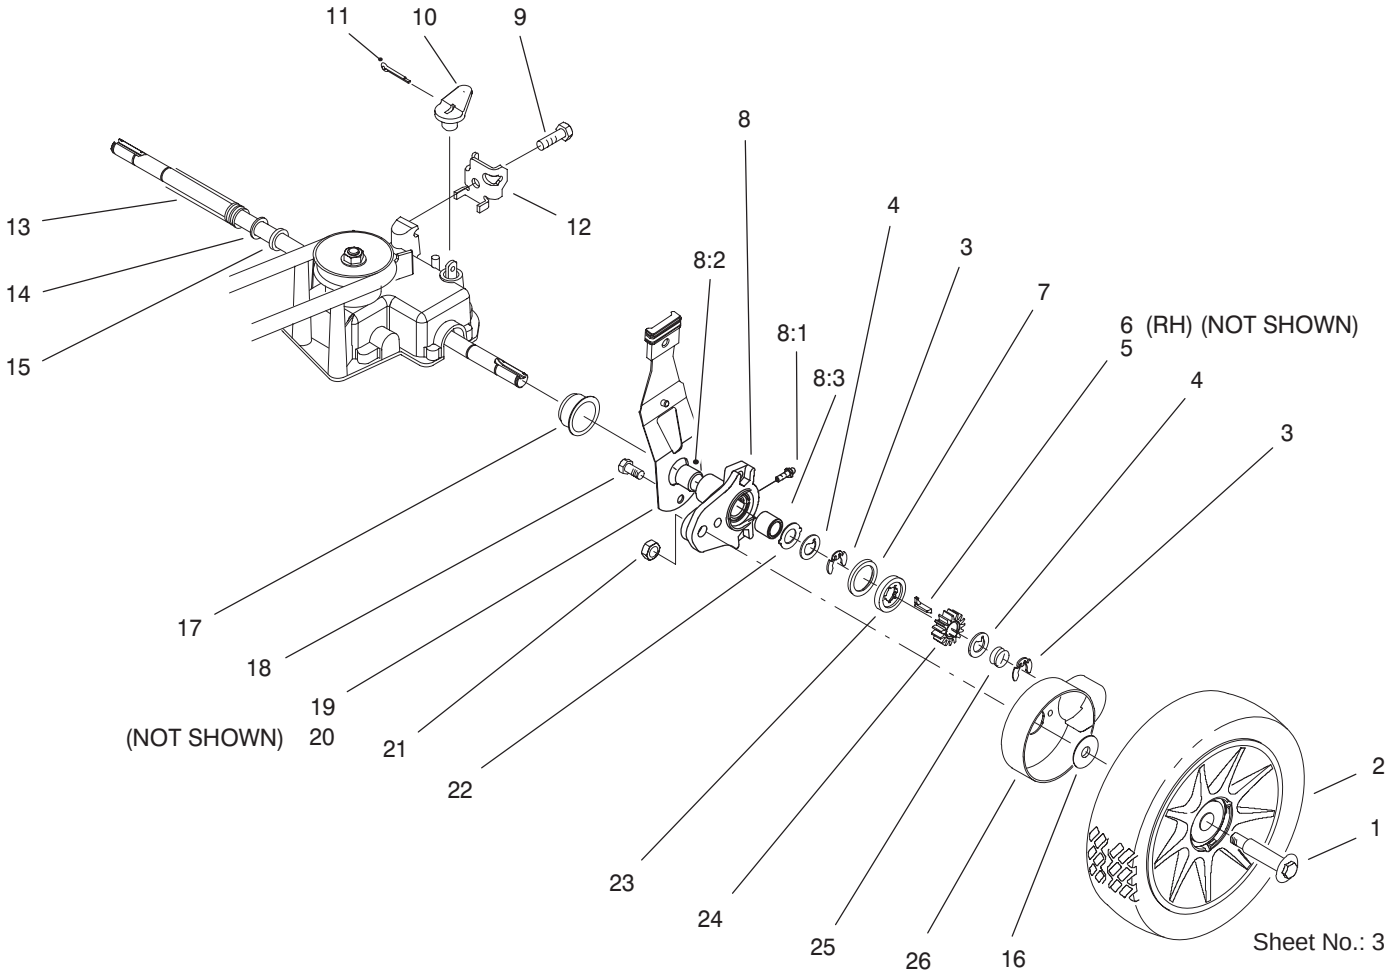

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92–1057	2	Bolt–Shoulder
2	95–1714	2	Wheel ASM W/Gear
2:3		1	8” Wheel Assembly
2:3:1	27–6250	2	Bushing
3	65–2720	4	Klipring–Locking
4	65–4740	4	Washer–Thrust, Keyed
5	66–6050	1	Key–Rocking, LH
6	66–6040	1	Key–Rocking, RH
7	65–4710	2	Ring–Friction
8	92–7746	2	Rear Height Adjustment Arm ASM
8:2	70–9760	1	Bushing
8:3	47–2900	1	Bushing
8:4	302–56	1	Fitting–Grease
9	32144–70	1	Screw–HH
10	60–8821	1	Lever–Shift
11	3272–10	1	Pin–Cotter
12	82–8780	1	Clamp–Cable
13	24–7920	1	Cover–Shaft, Drive
14	303259	1	Washer
15	605255	1	Washer
16	614426	2	Washer–Stepped
17	92–6535	2	Ring – Isolator
18	32144–85	2	Screw–HWH

Ref. No.	Part No.	Qty.	Description
19	92–6540	1	LH Rear Spring Arm ASM
20	92–6539	1	RH Rear Spring Arm ASM
21	603773	2	Nut
22	65–4730	2	Washer–Arm, Pivot
23	65–4760	2	Washer–Clutch
24	65–4750	2	Gear–Pinion
25	65–4720	2	Spring–Compression
26	94–1609	2	Cover–Wheel

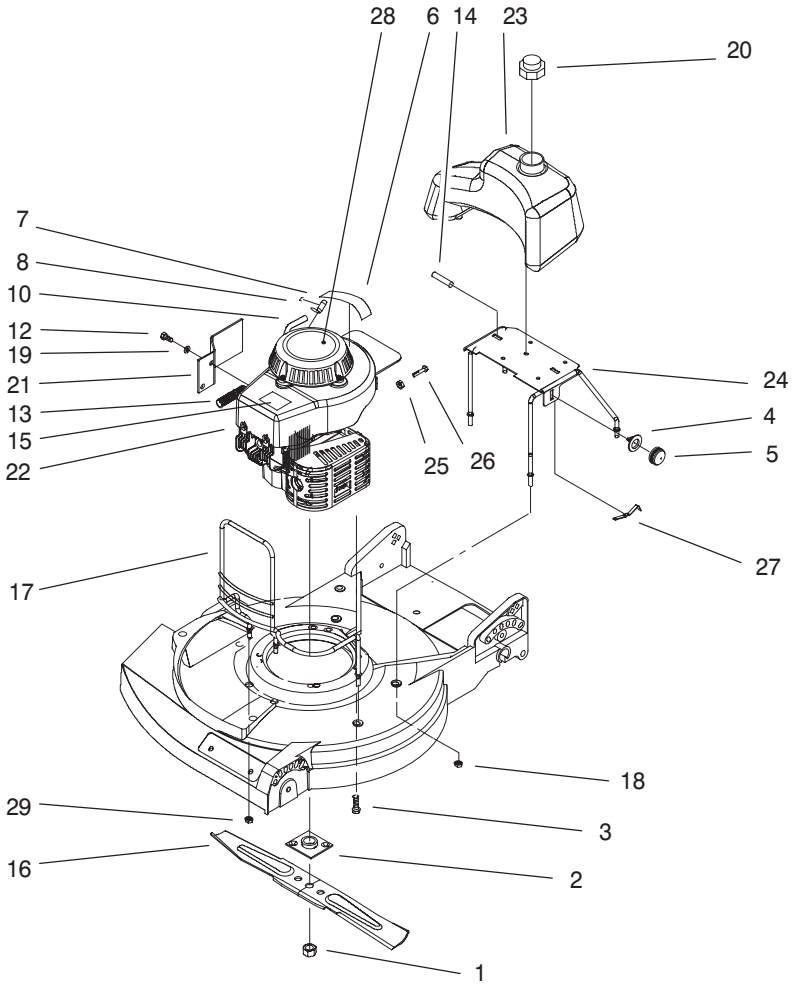


Sheet No.: 4

Engine and Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	603164	1	Nut–Blade
2	677525	1	Plate & Collar ASM
3	98–4480	3	Screw–Sems S
4	44–2750	1	Body–Primer
5	66–7460	1	Bulb–Primer
6	99–1518	1	Decal–Fuel Mix
7	47–2480	1	Stop–Rope
8	3290–443	1	Staple
10	612782	1	Line–Fuel
12	322–3	2	Screw–HH
13	93–4306	1	Spring–Compression
14	2410–76	1	Plug–Cap
15	99–1517	1	Decal–Lawn Boy
16	612543	1	Blade
17	98–1598	1	Guard–Muffler
18	3296–29	4	Nut–Lock, NI
19	3253–4	2	Washer–Lock
20	98–8344	1	Fuel & Oil Cap ASM
21	99–1515–03	1	Guard–Brake S
22	99–2910	1	Engine ASM
23	98–4497	1	Tank – Fuel
24	98–4459–03	1	Tank Bracket ASM
25	306531	1	Nut–Hex
26	314576	1	Screw
27	609830	2	Spring

Ref. No.	Part No.	Qty.	Description
28	98–8343	1	Decal – Recoil
29	3296–39	2	Nut–Lock, NI

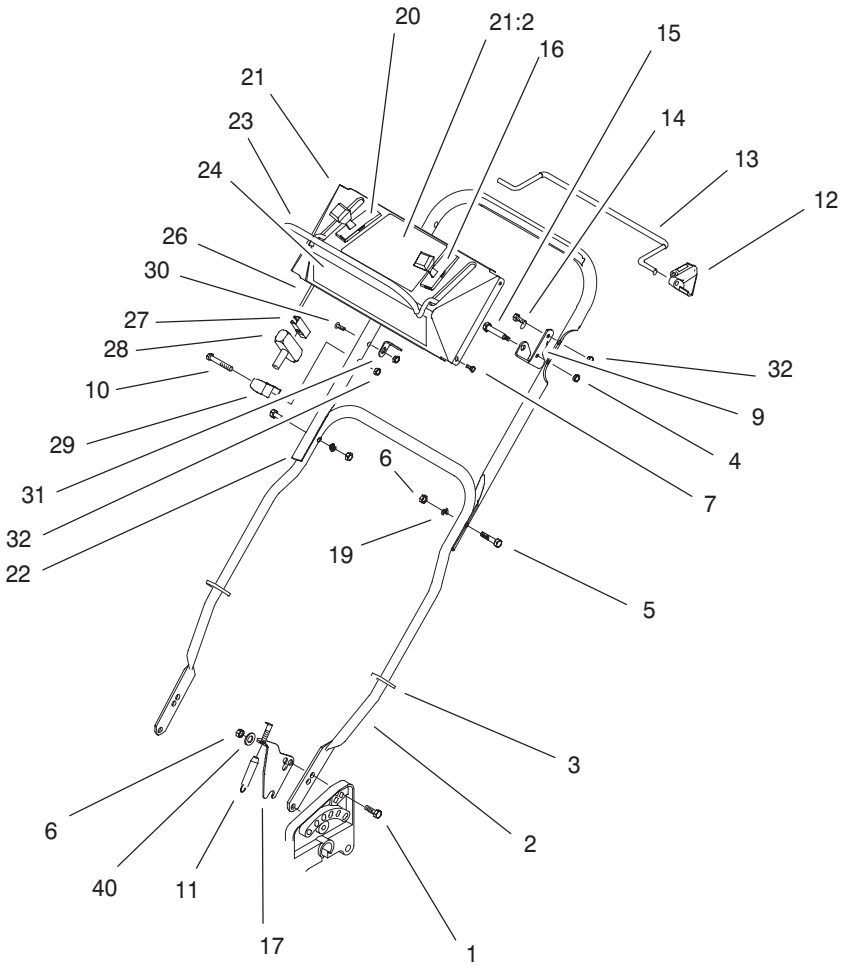


Sheet No.: 5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	3230–29	2	Screw–CARR
2	100–2890–05	1	Handle–Lower
3	614249	2	Strap–Tie
4	3296–56	1	Nut–Lock, NI
5	322–9	2	Screw–HH
6	3296–29	4	Nut–Lock, NI
7	92–9665	4	Screw
9	92–1094	1	Bracket–Stop, Bail
10	321–51	1	Screw–HH
11	100–5981	1	Cable–Traction
12	92–5412	1	Stop–Pivot
13	92–1001–03	1	Bail–Control
14	321–4	1	Screw–HH
15	613050	1	Bolt
16	100–5985	1	Control ASM–Throttle
17	92–7899–03	1	Bracket–Traction Cable
19	609739	2	Washer – Curved
20	100–5984	1	Control ASM–Ground Speed
21	100–8799	1	Control Panel ASM
21:2	98–4469	1	Decal – Control Panel
22	100–2892–05	1	Handle–Upper
23	92–1093	1	Bail–Engine Control
24	93–0297	1	Decal – Console
26	100–5986	1	Brake Cable ASM

Ref. No.	Part No.	Qty.	Description
27	612824	1	Clip–Starter
28	612825	1	Handle–Start
29	93–7383	1	Guide–Rope
30	92–2268	1	Screw–Handle
31	92–2928	1	Bracket–Anchor, Cable
32	3296–73	3	Nut–Lock, NI
40	3256–23	2	Washer–Flat

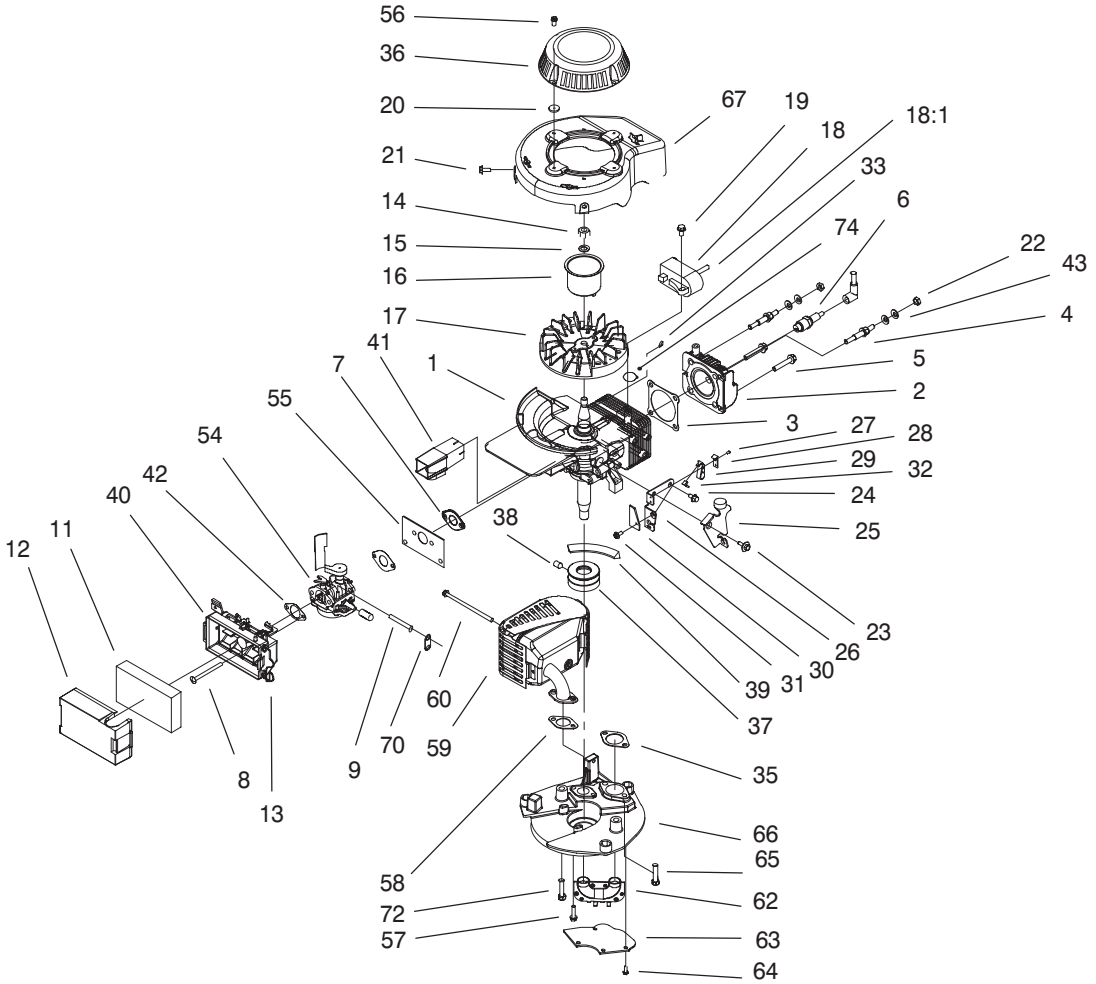


Sheet No.: 2

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	95–7636	1	Short Block ASM
2	94–5776	1	Head–Cylinder
3	94–5778	1	Gasket–Head
4	94–5779	2	Stud
5	94–5780	2	Bolt – Head
6	50–1170	1	Plug–Spark
7	94–5795	2	Gasket–Intake
8	612507	2	Screw
9	44–3170	1	Hose–Primer
11	95–5574	1	Filter–Air
12	95–5577	1	Cover–Air Filter
13	610383	1	Retainer–Filter Cover
14	130743	1	Nut
15	316959	1	Washer–Lock
16	612949	1	Hub–Starter
17	95–1866	1	Flywheel
18	99–2911	1	Module–Ignition
18:1	99–6721	1	Clip–High Tension Lead
*18:2	99–6719	1	Lead–High Tension
19	613208	2	Screw
20	98–4478	4	Spacer
21	700094	2	Screw–HH
22	146501	2	Nut
23	95–1870	1	Screw–Shoulder
24	95–1871	1	Screw–HWH

Ref. No.	Part No.	Qty.	Description
25	93–4312	1	Brake Plate ASM
26	84–7820	1	Plate–Brake
27	3290–459	2	Rivet–Plastic
28	92–2925	1	Strap–Insulation
29	60–9010	1	Strap–Ground
30	100–2929	1	Stop–Ground Strap
31	12–5450	1	Screw
32	98–7037	1	Lead Wire–Brake Switch
33	607199	1	Key
35	95–1778	1	Gasket–Exhaust
36	684566	1	Starter ASM
*36:1	612950	1	Pulley
*36:2	613773	1	Rope
*36:3	683897	1	Spring–Recoil
*36:4	684567	1	Starter Housing & Shaft
*36:5	683899	1	Dog Kit
37	95–1878	1	Pulley
38	104–0214	1	Screw–Set,Cone Point
39	92–1043	1	V Belt
40	95–5588	1	Air Base ASM
41	95–5578	1	Tunnel–Inlet
42	95–7613	1	Gasket–Filter
43	3290–456	4	Washer–Belleville

* Not illustrated

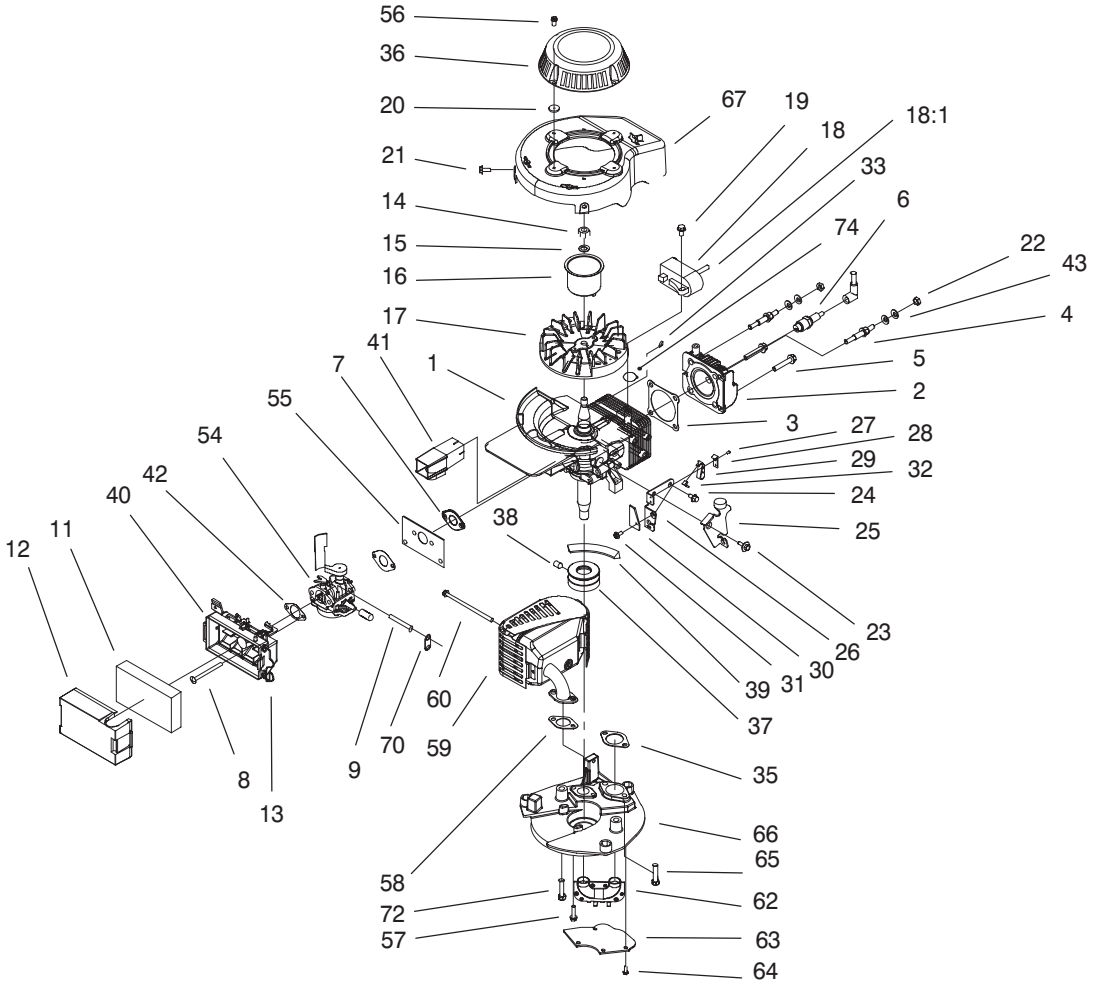


Sheet No.: 2

Engine Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
54	98–7042	1	Carburetor ASM With Gaskets
55	98–1388	1	Shield–Carburetor
56	98–4484	4	Screw
57	613208	2	Screw
58	98–1392	1	Gasket
59	100–9514	1	Muffler And Guard ASM
60	611228	1	Bolt–Console
62	98–1557	1	Pipe–Transfer
63	98–1591	1	Cover–Muffler
64	700822	4	Screw–HH
65	322–17	2	Screw–HH
66	98–1383	1	Plate–Mounting
67	98–4467	1	Assembly – Shroud
70	95–7615	1	Hose–Retainer
72	613233	2	Screw
74	317893	1	Strap–Tie

Ref. No.	Part No.	Qty.	Description

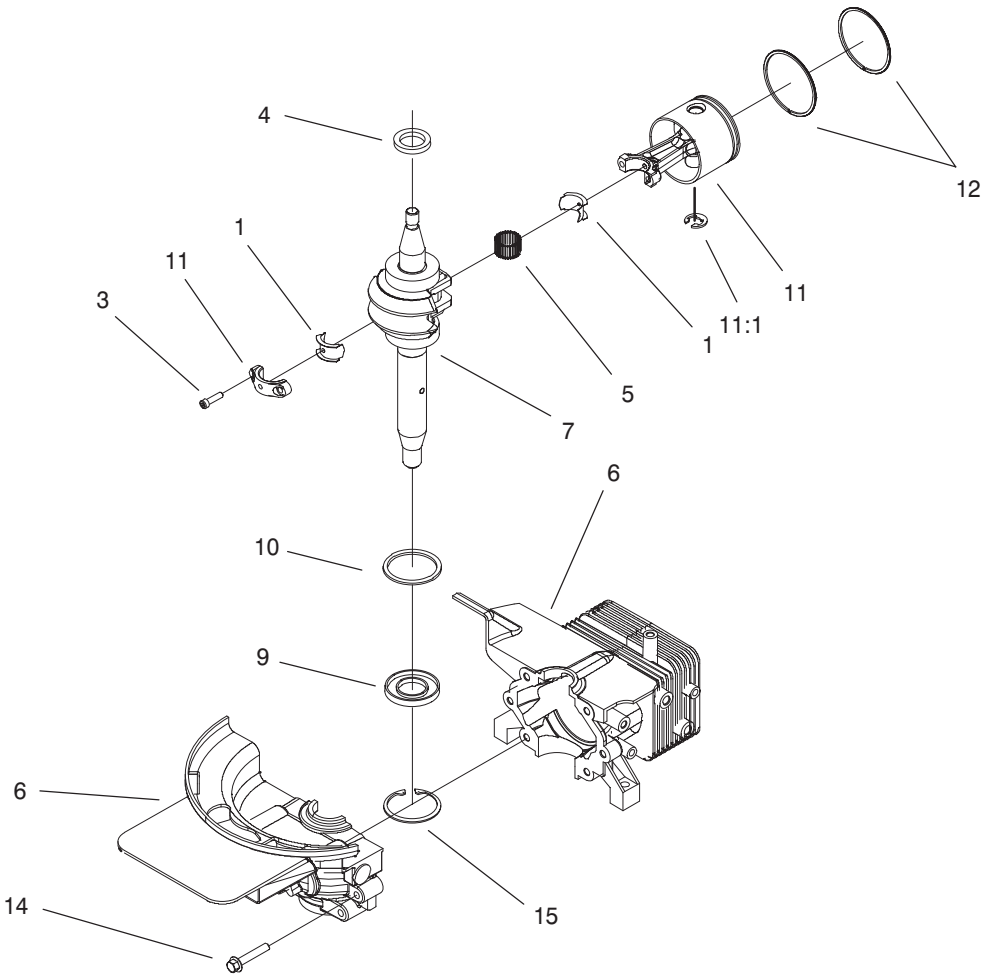


Sheet No.: A1
T–xxxx

Short Block Assembly

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
*2	610372	1	Sealer–Loctite 6cc
*2	609790	1	Sealer–Loctite 50cc
3	611393	2	Screw–HSH Cap
4	611396	1	Seal–Oil
5	683911	1	Bearing–Needle
6	95–7631	1	Cylinder And Crankcase ASM
6		1	Cylinder And Crankcase ASM
*6:1	602587	1	Plate–Backup, Reed
*6:2	602588	1	Reed–Carburetor
*6:3	612872	2	Screw–HH
7	99–2920	1	Crankshaft And Bearing ASM
9	94–5764	1	Seal–Oil
10	94–5765	1	Ring–Retaining
11	100–2915	1	Piston And Connecting Rod ASM
11:1	303712	2	Ring– Retaining Vex
*11:5	100–2916	1	Piston And Rings ASM
12	100–2917	1	Ring Set
14	94–5781	6	Screw
15	98–7046	1	Ring – Retaining

Ref. No.	Part No.	Qty.	Description

* Not illustrated

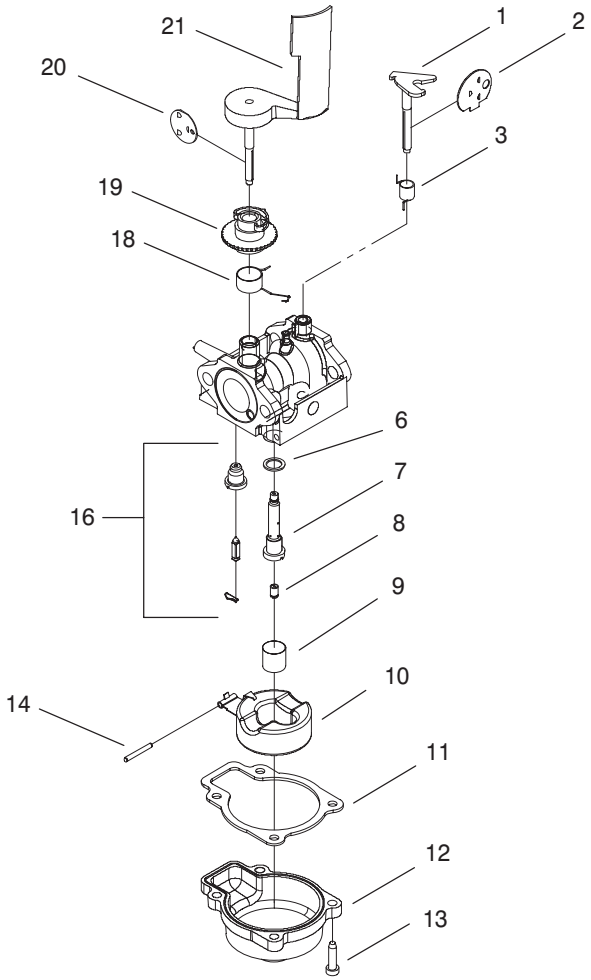

Sheet No.: A2
T–xxxx

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	95–5581	1	Shaft–Choke
2	94–5788	1	Disc–Choke
3	95–5583	1	Spring–Choke
6	612383	1	Washer
7	98–7001	1	Nozzle
8	98–1357	1	Jet–Main
9	94–5787	1	Filter–Fuel
10	95–1899	1	Float & Arm ASM
11	98–1362	1	Gasket
12	92–9691	1	Chamber–Float
13	608850	4	Screw–HH
14	92–6389	1	Pin–Straight
16	92–9697	1	Val/Seat–Float
18	98–7011	1	Spring–Throttle
19	610834	1	Collar–Adjust, Airvane
20	98–7047	1	Disc–Throttle
21	92–6376	1	Air Vane & Shaft

Ref. No.	Part No.	Qty.	Description

LAWN-BOY®