Form No. 3329–607

Basket Tipper Kit

for Reelmaster® 5500D

Part No. 100–9945

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2003
All Rights Reserved

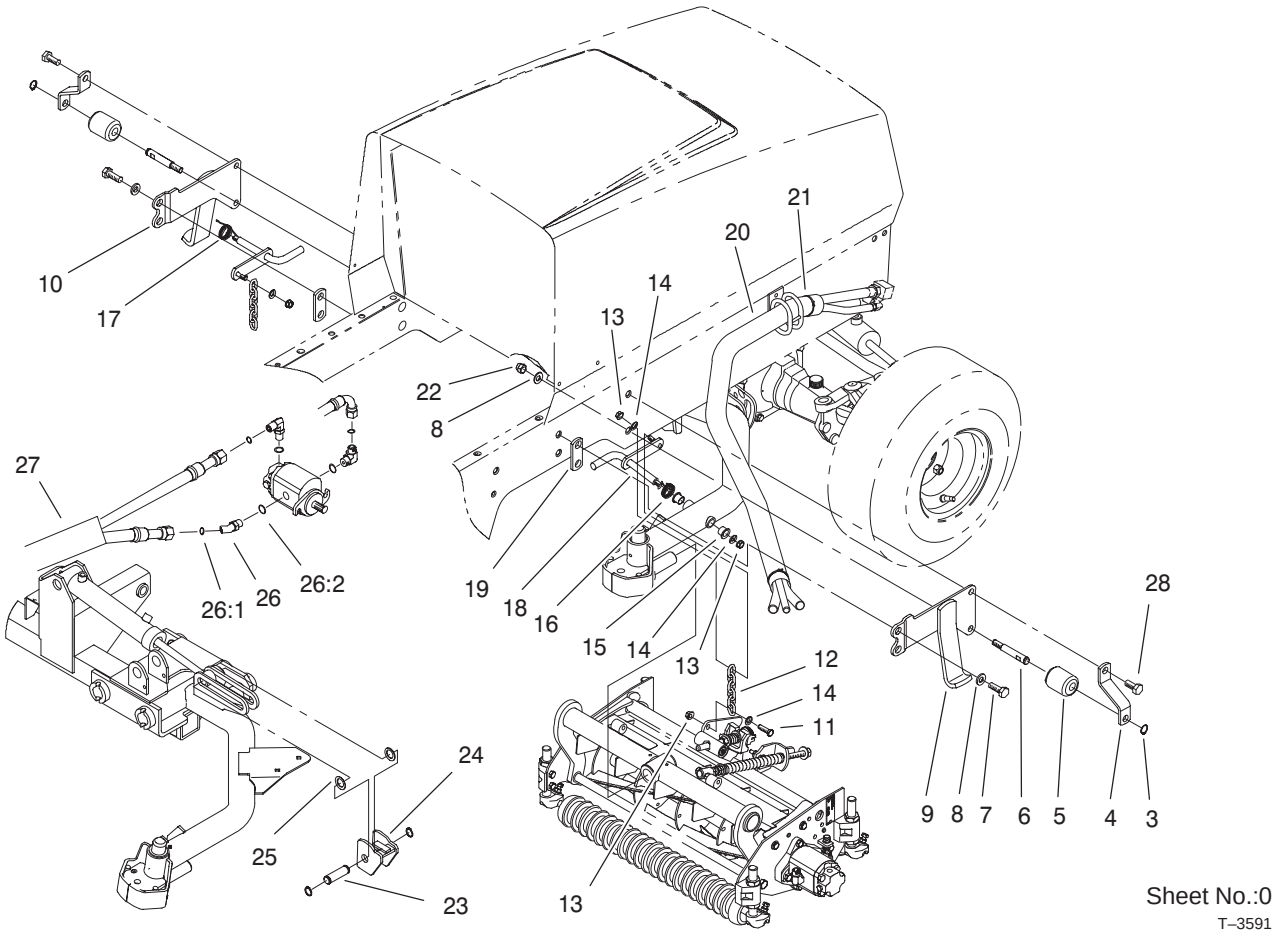

Sheet No.:0
T–3591

Basket Tipper Assembly

Ref. No.	Part No.	Qty.	Description
3	32151–62	2	Ring–Retaining
4	100–9930–03	2	Bracket–Roller
5	100–9947	2	Roller–Reel
6	98–3934	2	Pin–Roller
7	325–6	4	Screw–HH
8	3256–26	6	Washer–Flat
9	100–9929–03	1	LH Tipper ASM
10	100–9928–03	1	RH Tipper ASM
11	323–7	2	Screw–HH
12	5–1096	2	Chain–Lift
13	3296–39	6	Nut–Lock, NI
14	3256–24	6	Washer–Flat
15	256–287	4	Bushing
16	104–1805	1	Spring–Torsion, LH
17	98–3929	1	Spring–Torsion
18	104–1800–03	2	Pivot Rod ASM
19	100–9936	2	Plate–Frame
20	99–5648	2	Sleeve–Protective
21	3290–379	6	Tie–Cable
22	3296–23	2	Nut–Lock, NI
23	100–9938	2	Pin–Cylinder
24	104–1803–03	2	Cylinder Stop ASM
25	3–6498	4	Washer–Thrust
26	340–101	1	Fitting–HYD, 90°
26:1	237–30	1	O–Ring
26:2	237–79	1	O–Ring

Ref. No.	Part No.	Qty.	Description
27	104–1817	1	Sleeve–Protective
28	3213–3	2	Screw–HH