Form No. 3408-280 Rev C

TORO®

Count on it.

Parts Catalog

Cab Kit

Serial Number 315000001 and After Groundsmaster® 4500/4700-D or Reelmaster® 7000-D Traction Unit

Model No. 30901—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3408-280 C

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame, Seal and Mirror Assembly 4
Frame Mount Assembly 6
Windshield Wiper and Condenser Core Assembly 8
Air Conditioning Duct Assembly No. 132-3468 10
Wire Harness Assembly 12
Door and Window Assembly. 14
RH Door Assembly. 16
LH Door Assembly 18
Rear Window Assembly 20
Washer Bottle, Air-Conditioner Hose and Heater Hose Assembly 22
Pre-Filter Screen Assembly 24
Mixing Box and Vent Hose Assembly 26
Headliner Wire Harness and Control Assembly. 28
Mixing Box Mounting Bracket and Water Tray Assembly 30
Blower Fan and Evaporator Core Assembly 32
Heat / Air Conditioner Housing Assembly. 34
Air Diverter and Expansion Valve Assembly 36
Air Diverter Assembly No. 121-8369. 38
Attachments and Accessories 40

© 2024—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Frame, Seal and Mirror Assembly

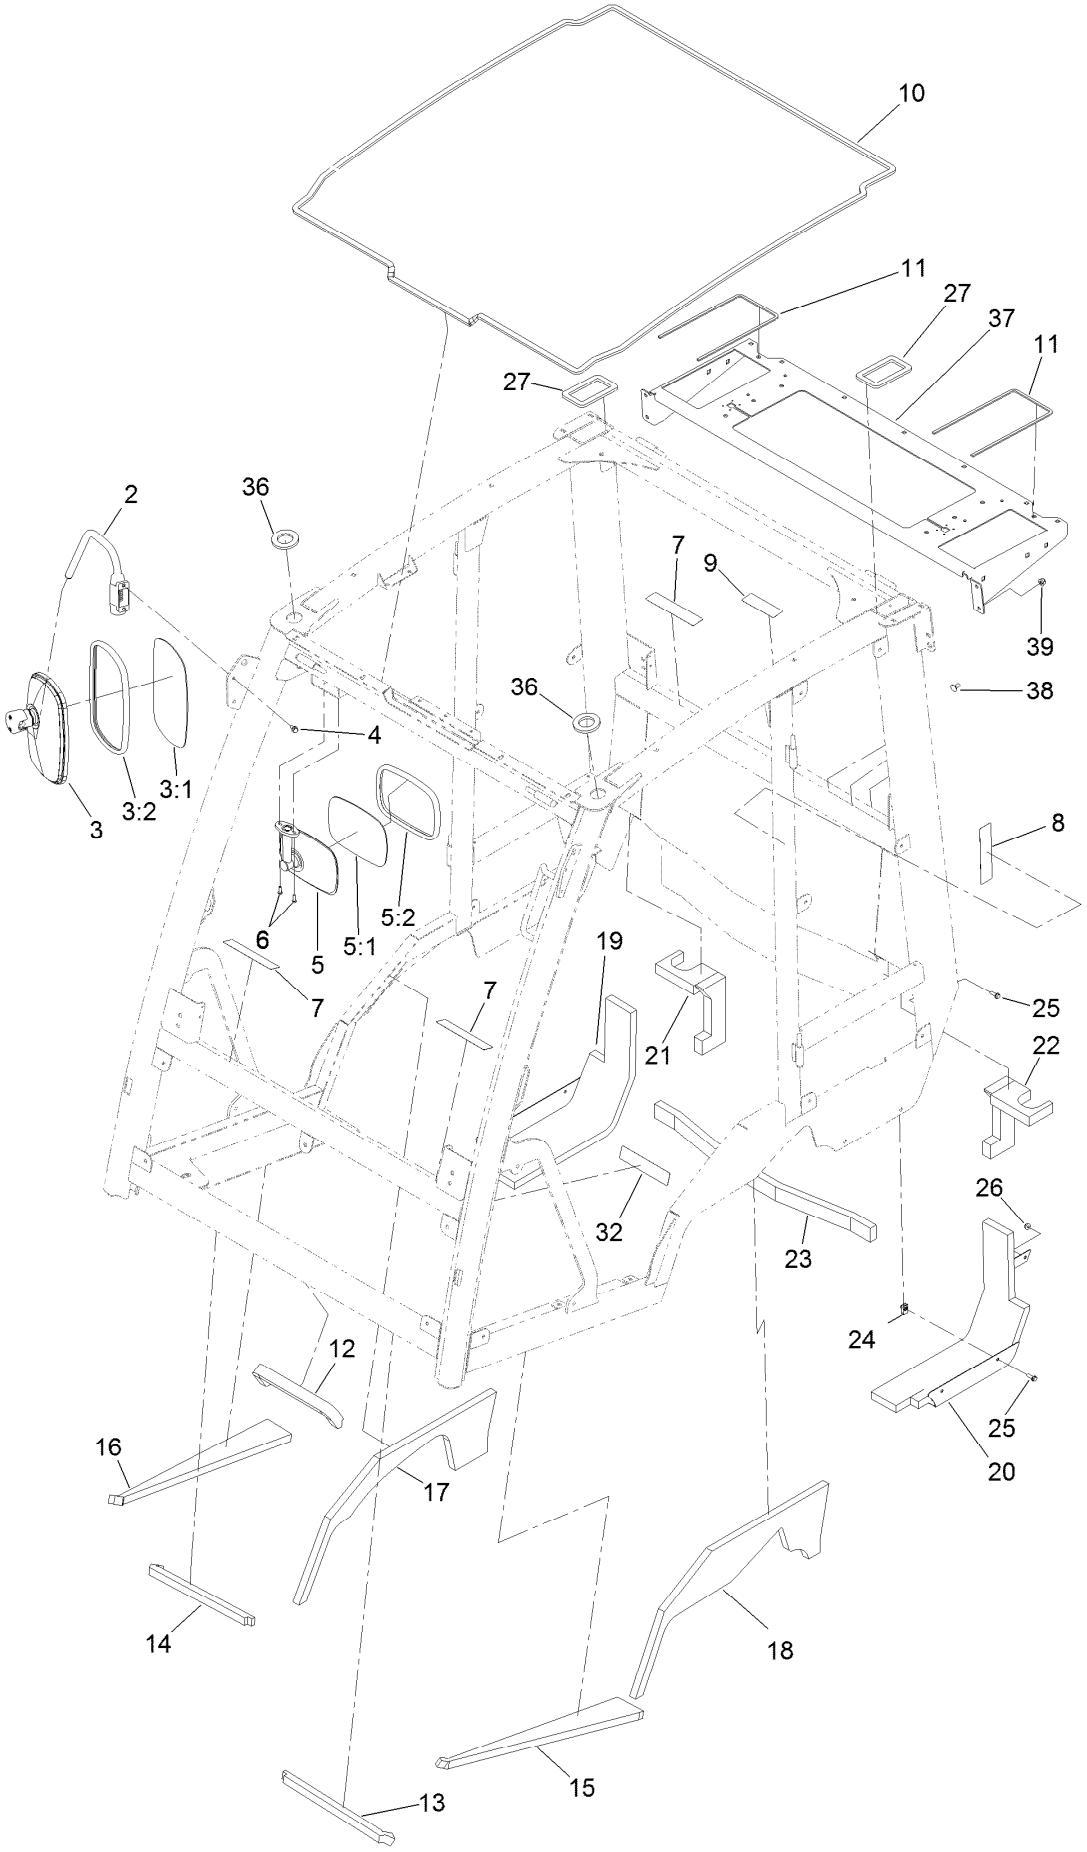


Frame, Seal and Mirror Assembly (continued)

Ref.	Part Number	Qty.	Description
2	121-8275	2	Arm-Mirror, Side
3	121-8341	2	Side Mirror ASM
3:1		1	Mirror-Glass ●
3:2		1	Gasket ●
4	33103-016	4	Screw-HHF
5	121-8343	1	Interior Mirror ASM
5:1		1	Mirror ●
5:2		1	Gasket ●
6	32144-32	2	Screw-PPH
7	130-0611	3	Decal-Window, Pin
8	130-0594	1	Decal-Warning
9	130-5355	1	Decal-Window, Hood
10	130-0586	1	Seal-Foam, Frame Roof
11	130-0587	2	Seal-Foam, Roof Air Filter
12	130-0390	1	Seal-Foam, Front Center
13	130-0394	1	Seal-Foam, Front Left
14	130-0395	1	Seal-Foam, Front Right
15	130-0396	1	Seal-Foam, Left
16	130-0397	1	Seal-Foam, Right
17	130-0398	1	Foam-Tank, RH
18	130-0391	1	Foam-Tank, LH
19	130-0542	1	Panel-Sealing, RH
20	130-0543	1	Panel-Sealing, LH
21	130-0353	1	Foam-Mount, RH
22	130-0354	1	Foam-Mount, LH
23	130-0546	1	Foam-Rear
24	107069	4	Clip
25	32105-15	6	Screw-HWH
26	104-7201	2	Nut-HF, NI
27	130-5855	2	Seal-Tube, Rear
32	132-3253	1	Decal-Service, Seat
36	133-0982	2	Tube-Seal, Front
37	136-1768-03	1	Shelf-Mount, Fan
38	3230-18	4	Screw-CARR
39	104-8300	4	Nut-HF, NI

● Not serviced separately


Frame Mount Assembly

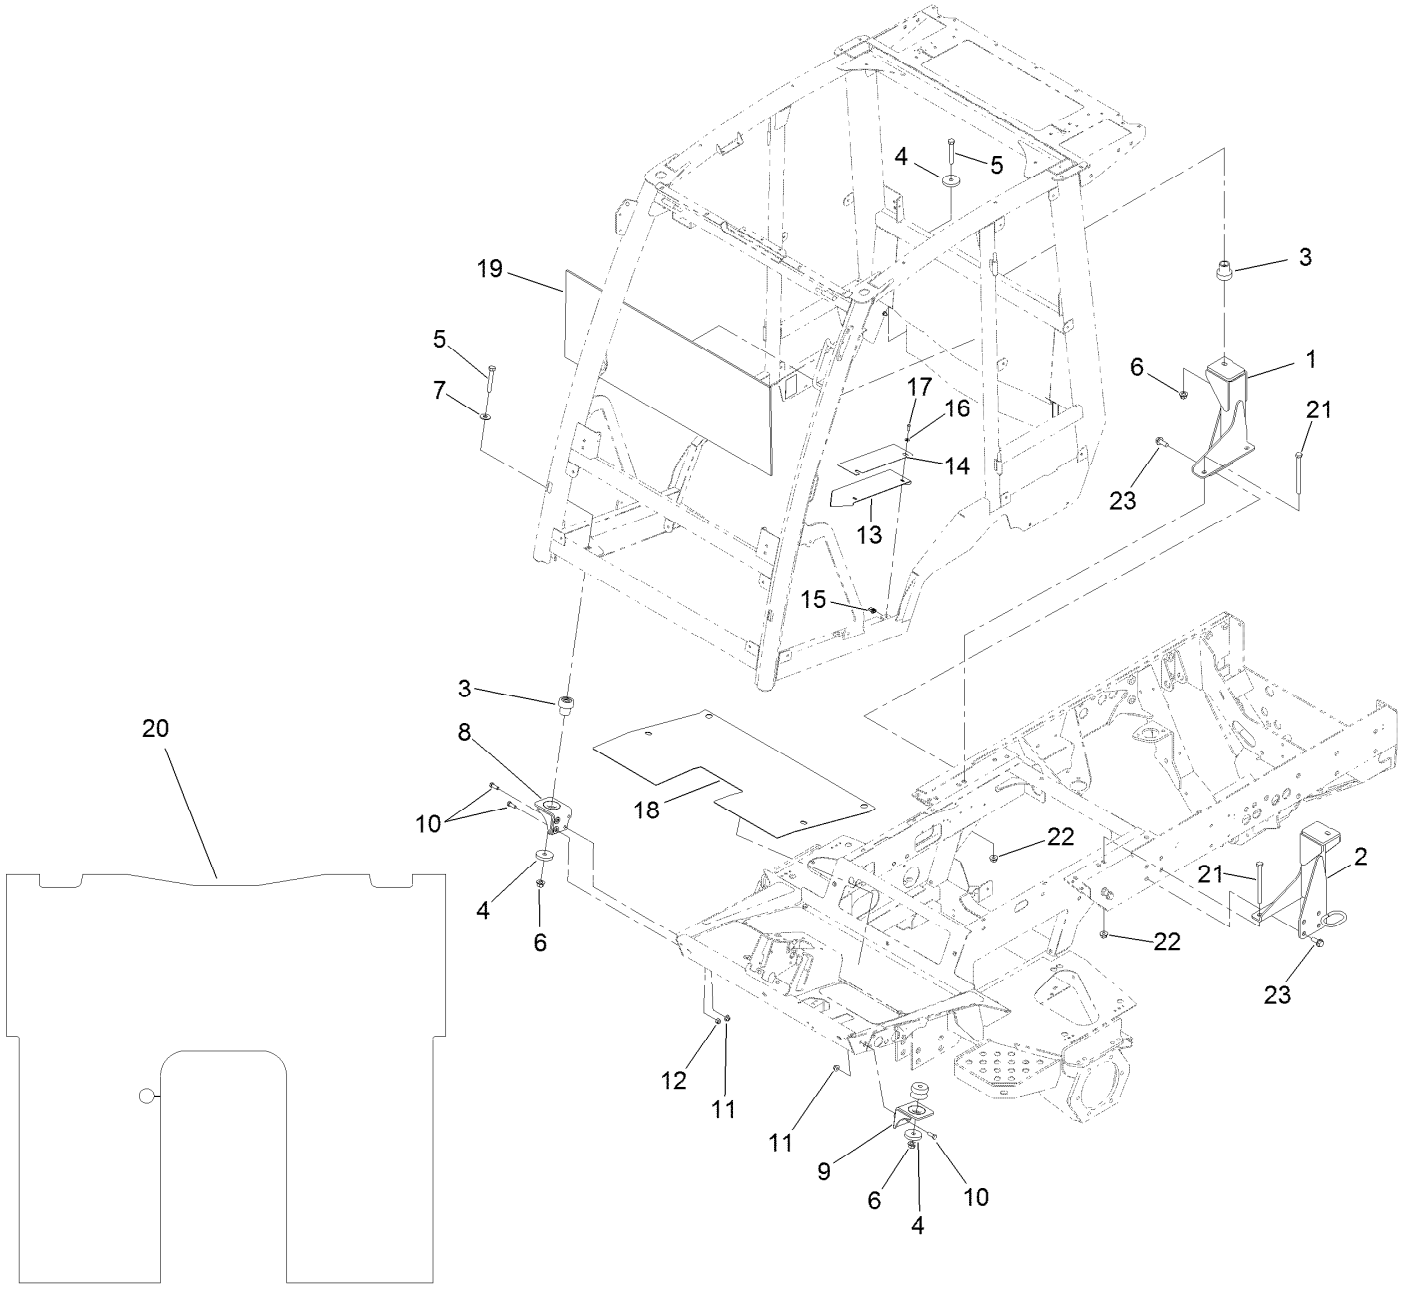

Frame Mount Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-0330-03	1	RH Rear Mount ASM
2	130-0331-03	1	LH Rear Mount ASM
3	110-5954	4	Mount-Center, Bonded
4	115-5519	4	Washer-Plain
5	112-7264	4	Screw-HH
6	99-5107	4	Nut-Lock
7	3256-6	2	Washer-Flat
8	130-0379-03	1	RH Front Mount ASM
9	130-0380-03	1	LH Front Mount ASM
10	323-6	7	Screw-HH
11	104-8301	5	Nut-HF, NI
12	3296-39	2	Nut-Lock, NI
13	132-3255-03	1	Bracket-Step
14	132-3256	1	Pad-Adhesive
15	107069	2	Clip
16	3256-1	2	Washer-Flat
17	3274-69	2	Screw-HSBH
18	132-3254	1	Tread-Floor
19	132-3261	1	Panel-Upholstery, Rear
20	132-3265	1	Blanket-Insulation
21	325-20	4	Screw-HH
22	32128-49	4	Nut-HHF
23	3234-38	8	Screw-HHF

Windshield Wiper and Condenser Core Assembly

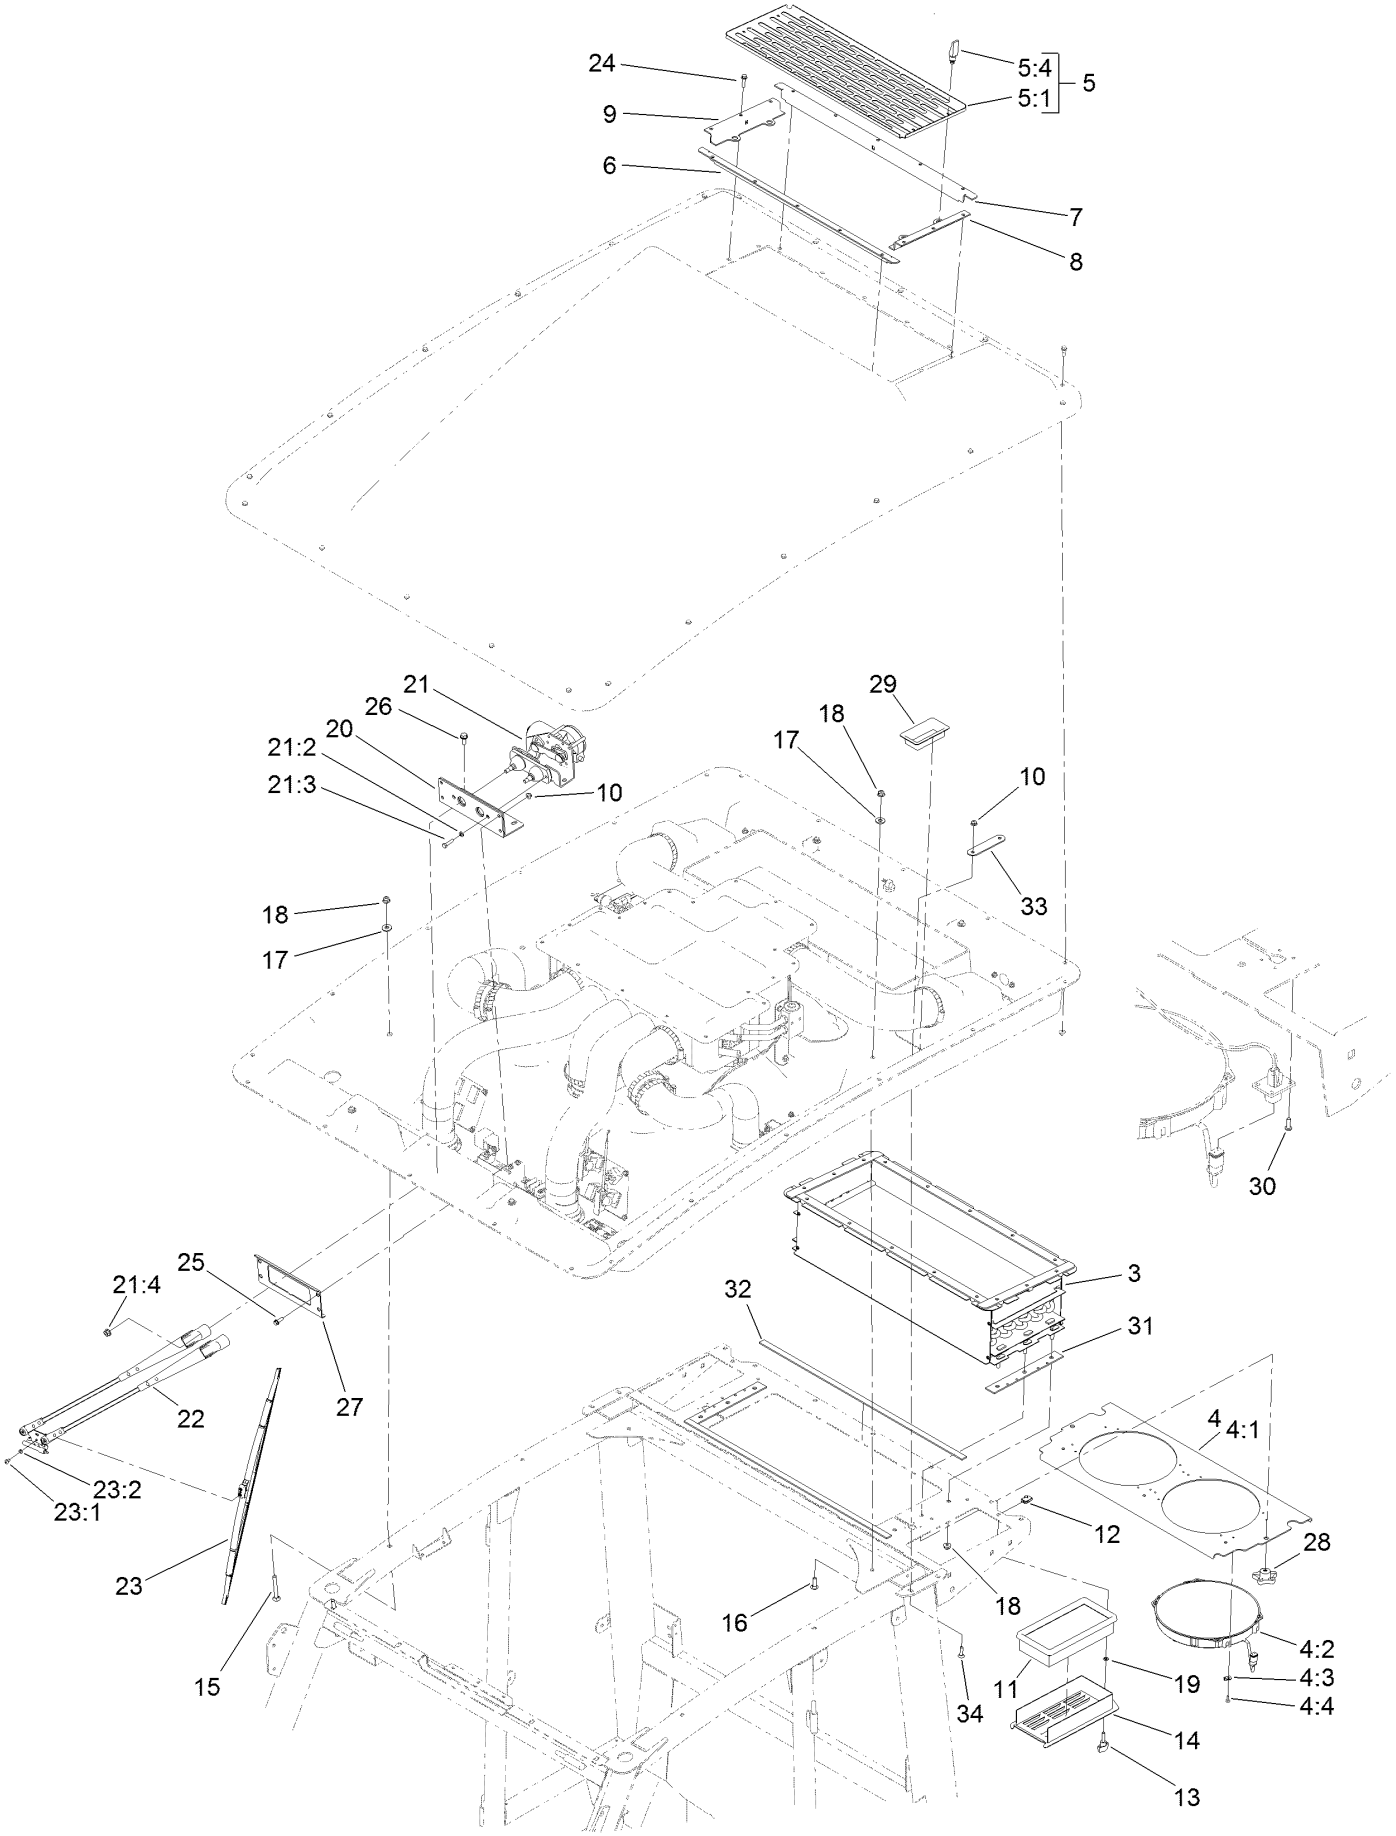


Windshield Wiper and Condenser Core Assembly (continued)

Ref.	Part Number	Qty.	Description
3	132-3468	1	A/C Duct ASM
4	132-3488	1	Panel-Fan
4:1	132-3486-03	1	Plate-Mount, Fan
4:2	132-3607	2	Fan-Condenser
4:3	132-3606	8	Tab-Fan
4:4	105-6849	8	Screw-Forming, Thread
5		1	Screen ASM ●
5:1	132-3530-03	1	Screen
5:4	74-5950	4	Latch-Swell
6	132-3531-03	1	Seal-Front
7	132-3532-03	1	Seal-Rear
8	132-3533-03	1	Seal-Side, Left
9	132-3534-03	1	Seal-Side, Right
10	104-7201	8	Nut-HF, NI
11	121-8457	2	Filter-Air
12	107069	2	Clip
13	126-5846	2	Knob-T
14	125-9825-03	2	Cover-Air, Fresh
15	3230-9	4	Screw-CARR
16	3230-22	13	Screw-CARR
17	3256-3	17	Washer-Flat
18	104-8300	21	Nut-HF, NI
19	106-8737	2	Nut-Retainer
20	130-5871	1	Bracket-Wiper
21	125-7452	1	Wiper Motor ASM
21:2	3253-3	1	Washer-Lock
21:3	33113-025	1	Screw-HH
21:4	112-2844	2	Nut-HF
22	125-7453	1	Arm-Wiper
23	125-7454	1	Blade-Wiper
23:1	47-2830	2	Screw
23:2	43-5920	2	Washer-Lock, Spring
24	120-4654	16	Screw-HHF
25	32105-15	4	Screw-HWH
26	32144-11	3	Screw-HWH
27	130-6068-03	1	Plate-Washer, Wiper Motor
28	117-5976	2	Knob-Handle
29	130-5661	2	Tube-Sleeve
30	363-8245	8	Screw-TAP
31	132-3608	2	Seal-Edge
32	132-3609	2	Seal-Strip
33	130-5854	2	Brace-Seal
34	3229-30	4	Screw-CARR

● Not serviced separately


Air Conditioning Duct Assembly No. 132-3468

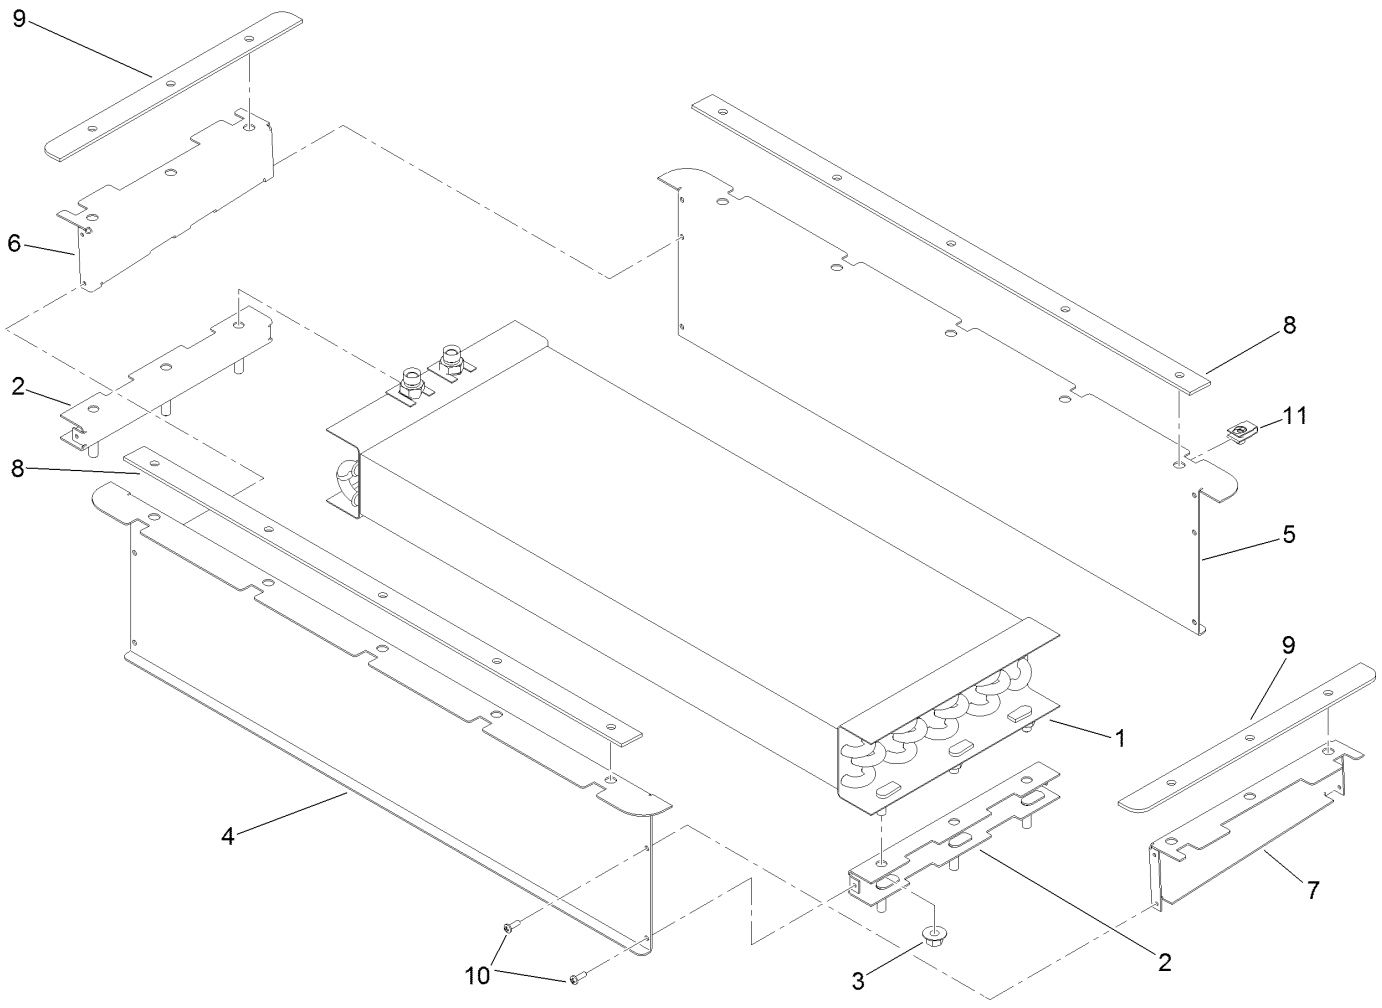



Air Conditioning Duct Assembly No. 132-3468 (continued)


Ref.	Part Number	Qty.	Description
1	121-8447	1	Core-Condenser
2	132-3469-03	2	Leg-Lower
3	32128-44	6	Nut
4	132-3462-03	1	Wall-Front
5	132-3463-03	1	Wall-Back
6	132-3464-03	1	Wall-Side, Right
7	132-3465-03	1	Wall-Side, Left
8	132-3466	2	Seal-Strip
9	132-3467	2	Seal-Edge
10	363-8245	12	Screw-TAP
11	107069	16	Clip

Wire Harness Assembly

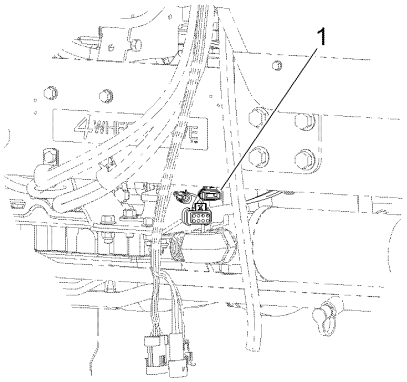

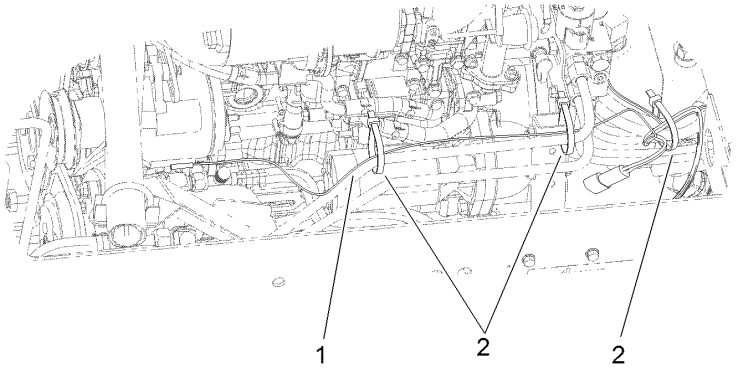

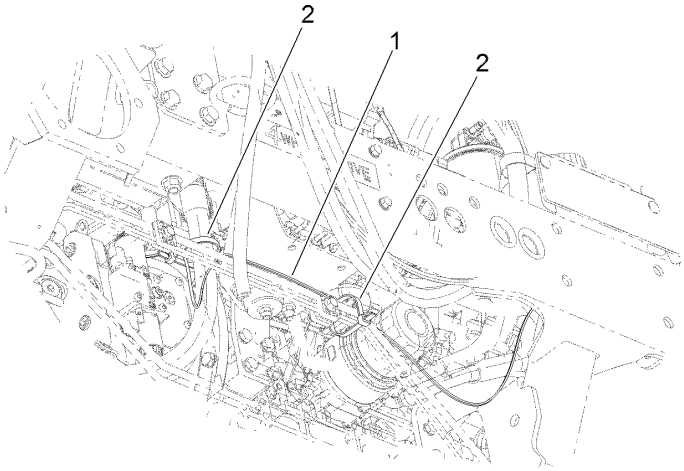


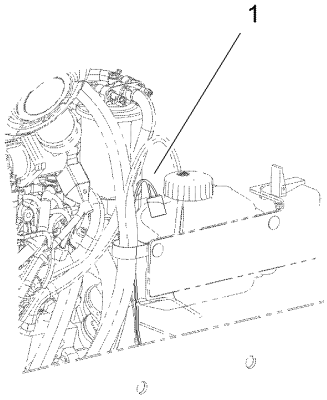

Wire Harness Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	122-0667	1	Harness-Wire
2	3334-945	5	Tie-Cable

Door and Window Assembly

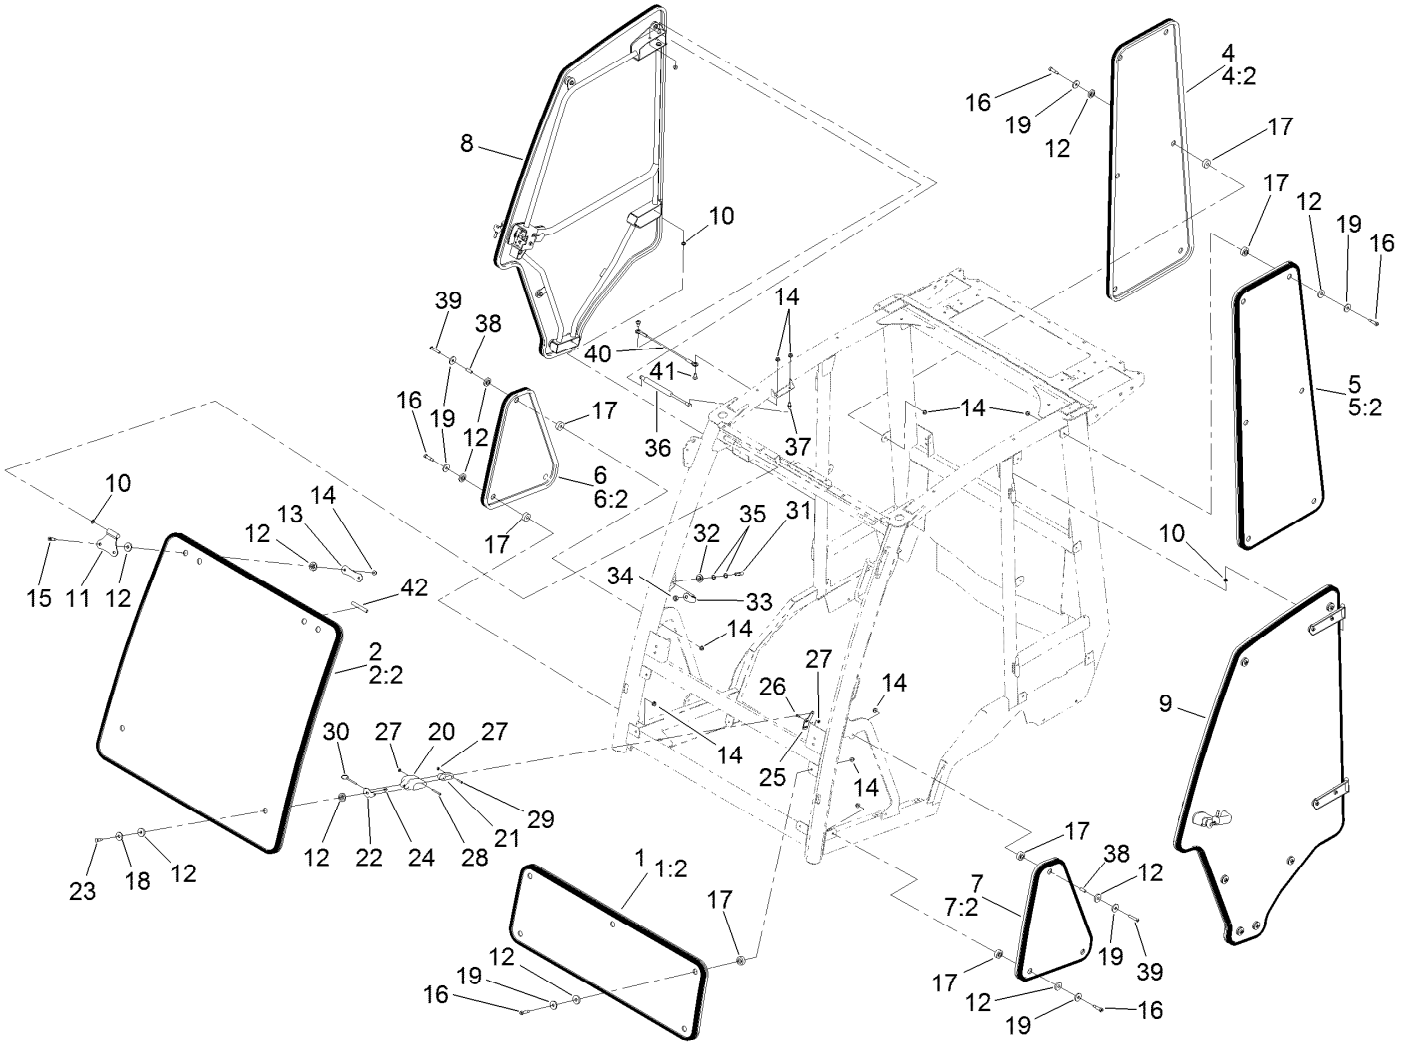


Door and Window Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-6193	1	Front-Lower Window ASM
1:2	130-0329	1	Seal-Trim
2	130-5680	1	Upper Front Window ASM
2:2	121-8212	1	Seal-Trim
4	130-5676	1	RH-Side Window ASM
4:2	121-8215	1	Seal-Trim
5	130-5677	1	LH-Side Window ASM
5:2	121-8215	1	Seal-Trim
6	130-6191	1	RH Forward Window ASM
6:2	130-0357	1	Seal-Trim
7	130-6192	1	LH Forward Window ASM
7:2	130-0357	1	Seal-Trim
8		1	RH Door ASM ■
9		1	LH Door ASM ■
10	121-8441	6	Washer-Spacer
11	121-8535-03	2	Hinge-Window
12	125-9982	35	Bushing-Flange
13	127-9933	2	Plate-Backer, Windshield
14	104-8300	31	Nut-HF, NI
15	125-9520	4	Screw-Shoulder, HSH
16	125-9521	19	Screw-Shldr HSH
17	125-9537	23	Bushing-Flange
18	125-9676	2	Washer-Backup
19	130-5815	23	Washer-Backup
20	125-9792	2	Handle-Window
21	125-9793	2	Link-Window
22	125-9987	2	Mount-Latch
23	119-9812	2	Bolt-Shoulder
24	104-7201	2	Nut-HF, NI
25	130-0590	2	Mount-Tab
26	1-807513	4	Bolt-CARR
27	120-9681	8	Nut-Lock, NI
28	3274-59	2	Screw-HSH
29	3274-14	2	Screw-HSH
30	127-9850	2	Pin-Release, Quick
31	132-3718	2	Stud-Striker
32	125-9992	2	Adjuster-Stud
33	121-8393	2	Guard-Striker
34	106-0327	2	Nut-Hex
35	73-0040	4	Washer-Thrust
36	130-6083	2	Spring-Gas, Door
37	98-3104	2	Stud-Ball
38	130-5725	4	Spacer
39	125-7977	4	Screw-HSBH
40	130-5726	2	Lanyard
41	120-9471	2	Bolt-Shoulder
42	130-5578	1	Tubing-Seal, Rubber
43	133-1110	1	Pin-Hinge ●
44	121-8439	1	Receiver-Pivot, Hinge ●
45	121-8440	1	Pivot-Hinge ●

● Not illustrated

■ Not serviced separately


RH Door Assembly

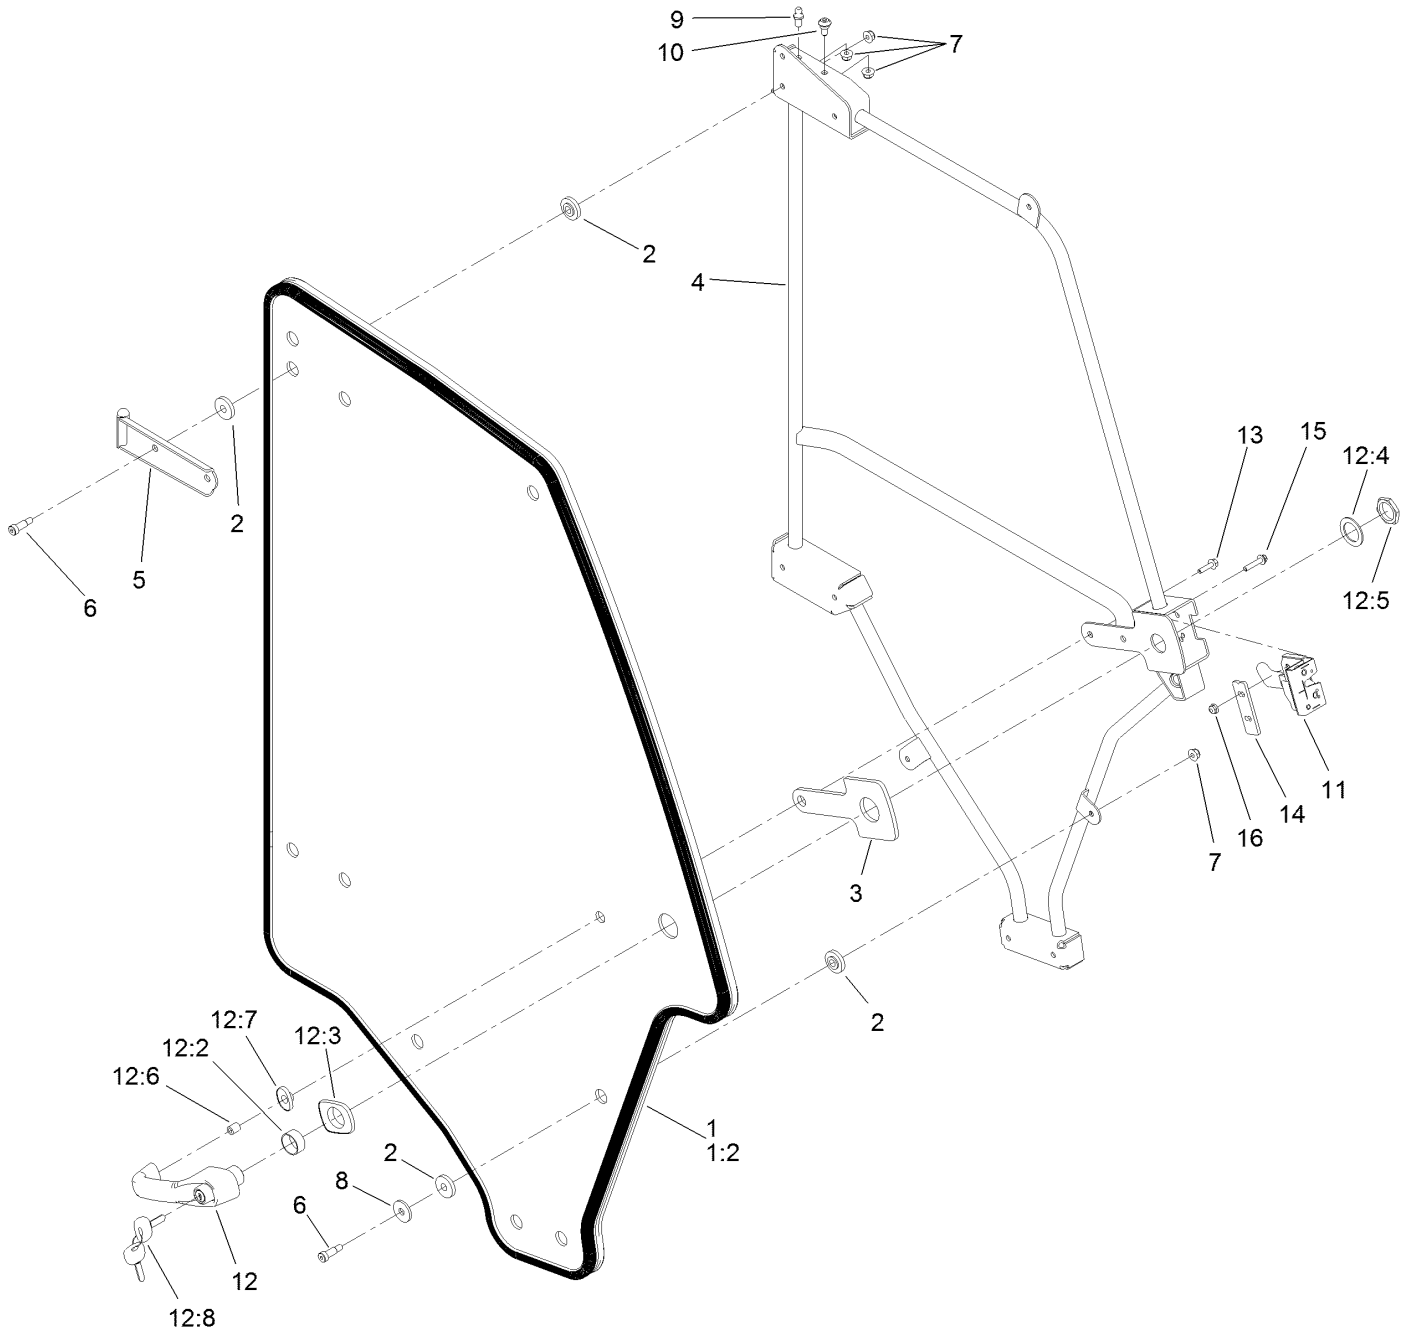

RH Door Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-6188	1	RH Door ASM
1:2	130-0362	1	Trim-Door
2	125-9982	20	Bushing-Flange
3	121-8331	1	Gasket-Handle
4	130-0367-03	1	Frame-Door, RH
5	125-9618-03	2	Hinge-Door, RH
6	125-9520	10	Screw-Shoulder, HSH
7	104-8300	12	Nut-HF, NI
8	125-9676	6	Washer-Backup
9	98-3104	1	Stud-Ball
10	120-9471	1	Bolt-Shoulder
11	121-8390	1	Latch-RH
12	121-8630	1	Handle ASM
12:2	121-8628	1	Cylinder-Mounting, Key
12:3	121-8322	1	Grommet-Mounting, Large
12:4	121-8327	1	Washer
12:5	121-8328	1	Nut
12:6	121-8627	1	Cylinder-Mounting, End
12:7	121-8323	1	Grommet-Mounting, Small
12:8	125-9531	1	Key-Set
13	33103-025	1	Screw-HHF
14	121-8395	1	Plate-Support, Latch
15	3234-21	2	Screw-HHF
16	104-7201	2	Nut-HF, NI


LH Door Assembly

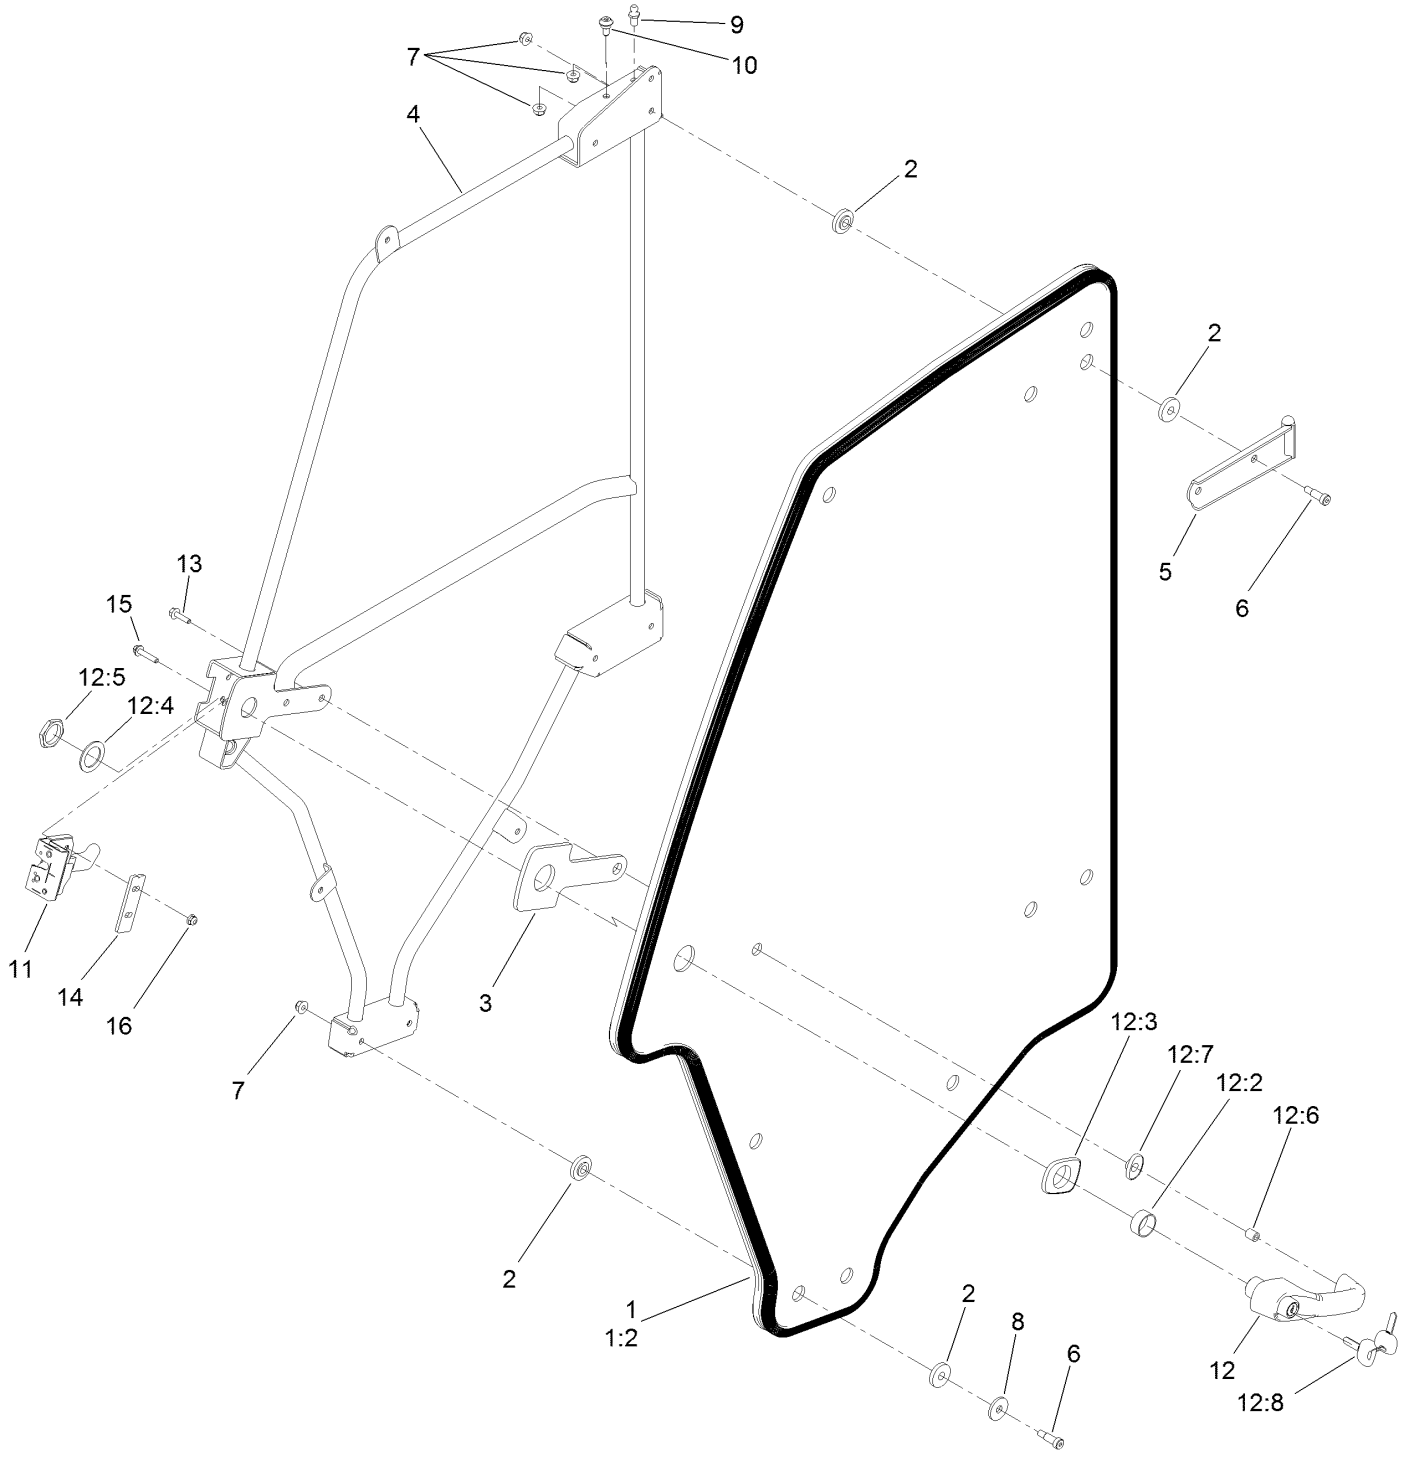

LH Door Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-6189	1	LH Door ASM
1:2	130-0362	1	Trim-Door
2	125-9982	20	Bushing-Flange
3	121-8331	1	Gasket-Handle
4	130-0368-03	1	Frame-Door, LH
5	125-9619-03	2	Hinge-Door, LH
6	125-9520	10	Screw-Shoulder, HSH
7	104-8300	12	Nut-HF, NI
8	125-9676	6	Washer-Backup
9	98-3104	1	Stud-Ball
10	120-9471	1	Bolt-Shoulder
11	121-8391	1	Latch-LH
12	121-8630	1	Handle ASM
12:2	121-8628	1	Cylinder-Mounting, Key
12:3	121-8322	1	Grommet-Mounting, Large
12:4	121-8327	1	Washer
12:5	121-8328	1	Nut
12:6	121-8627	1	Cylinder-Mounting, End
12:7	121-8323	1	Grommet-Mounting, Small
12:8	125-9531	1	Key-Set
13	33103-025	1	Screw-HHF
14	121-8395	1	Plate-Support, Latch
15	3234-21	2	Screw-HHF
16	104-7201	2	Nut-HF, NI


Rear Window Assembly

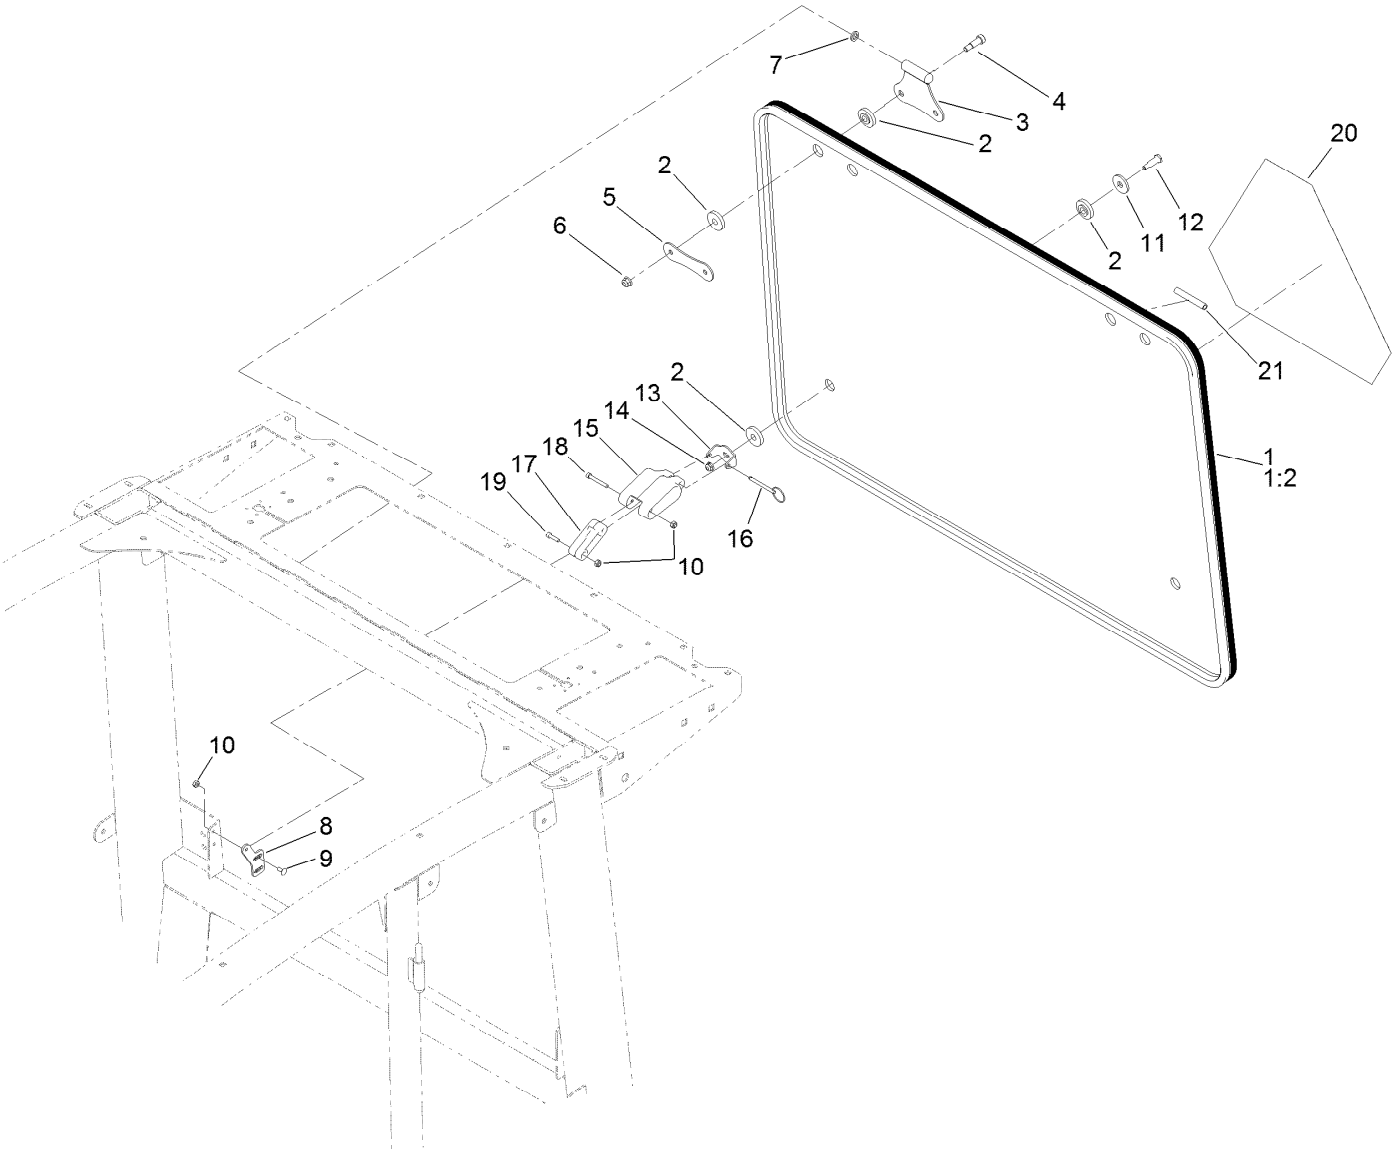

Rear Window Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-5682	1	Rear Window ASM
1:2	130-0637	1	Seal-Trim
2	125-9982	12	Bushing-Flange
3	121-8535-03	2	Hinge-Window
4	125-9520	4	Screw-Shoulder, HSH
5	127-9933	2	Plate-Backer, Windshield
6	104-8300	4	Nut-HF, NI
7	121-8441	2	Washer-Spacer
8	130-0590	2	Mount-Tab
9	1-807513	4	Bolt-CARR
10	120-9681	8	Nut-Lock, NI
11	125-9676	2	Washer-Backup
12	119-9812	2	Bolt-Shoulder
13	125-9987	2	Mount-Latch
14	104-7201	2	Nut-HF, NI
15	125-9792	2	Handle-Window
16	127-9850	2	Pin-Release, Quick
17	125-9793	2	Link-Window
18	3274-59	2	Screw-HSH
19	3274-14	2	Screw-HSH
20	120-0250	1	Decal-Warning
21	130-5578	1	Tubing-Seal, Rubber


Washer Bottle, Air-Conditioner Hose and Heater Hose Assembly

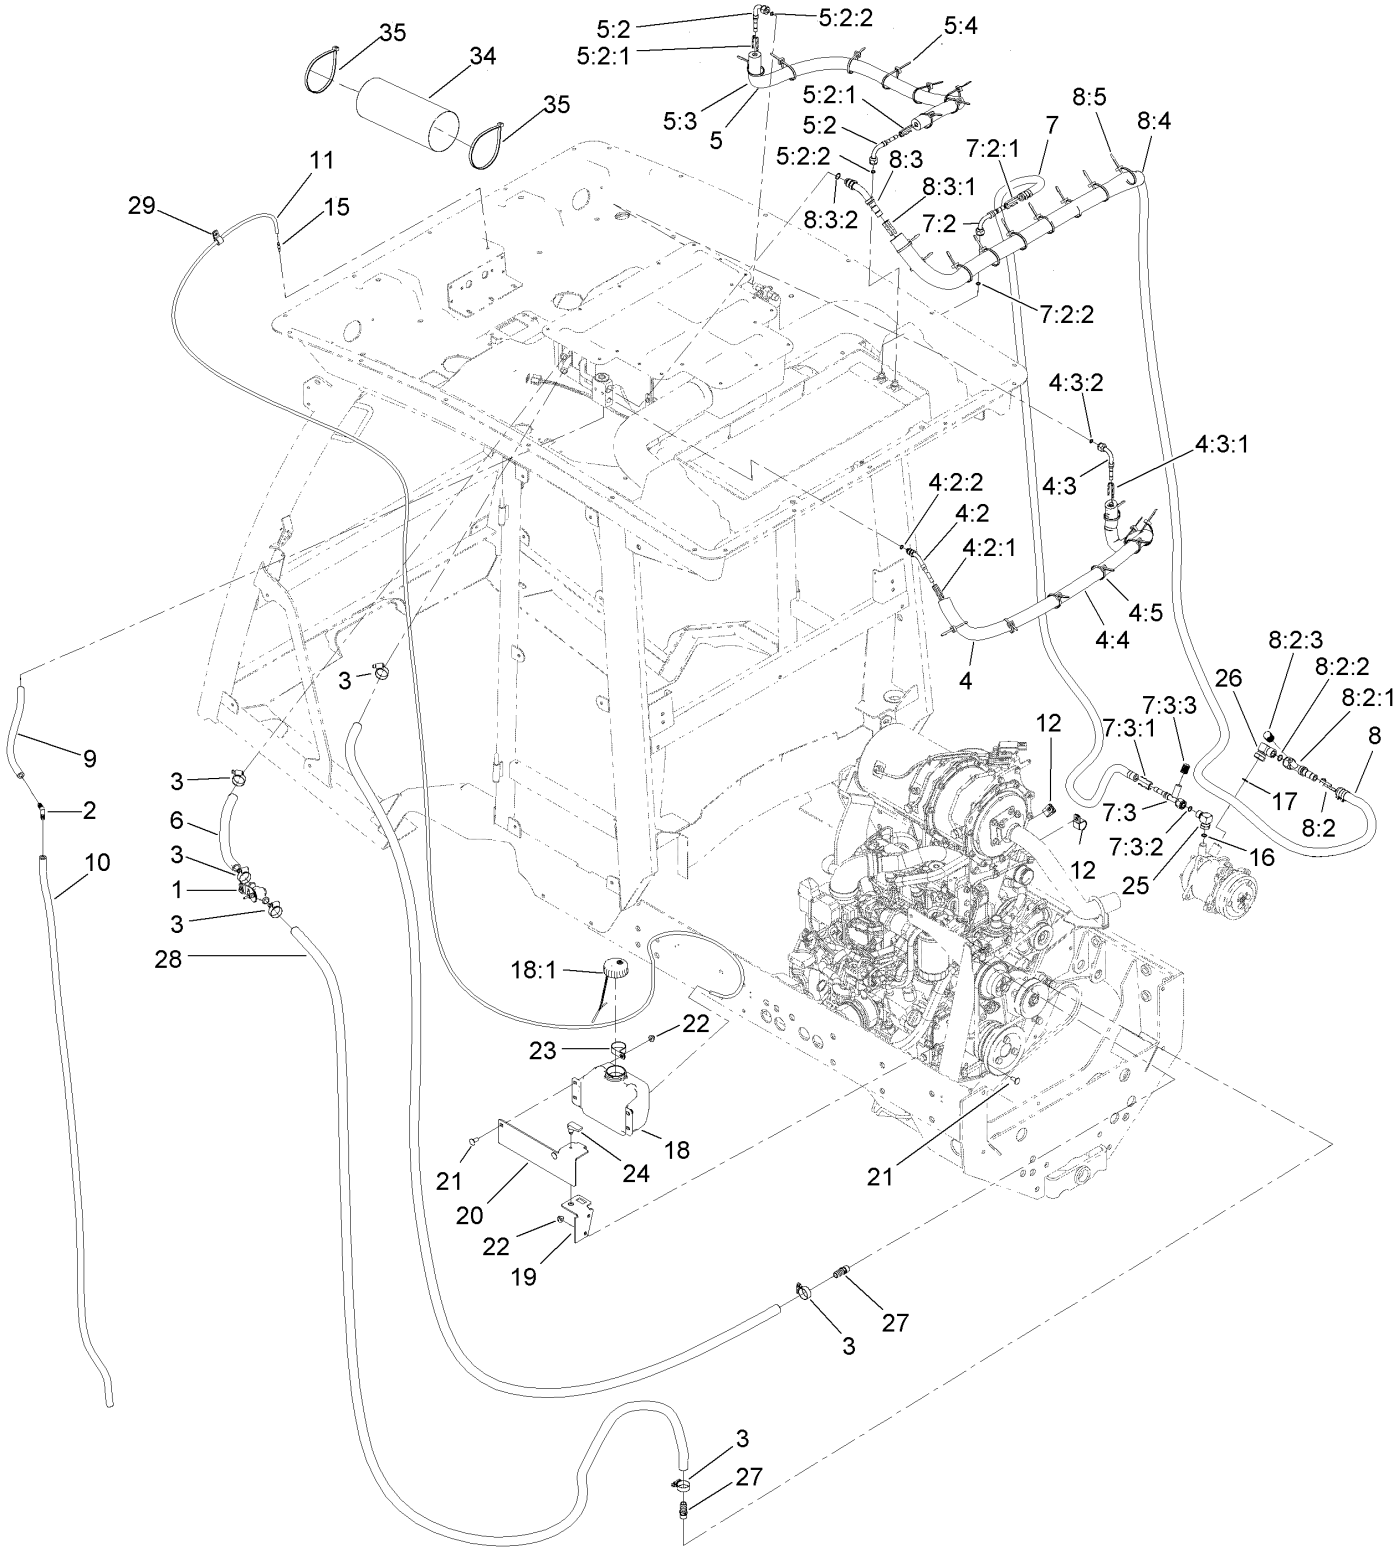

Washer Bottle, Air-Conditioner Hose and Heater Hose Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-4947	1	Valve-Heater
2	130-0578	2	Fitting-Barb, 90 DEG
3	2412-129	6	Clamp-Hose
4	125-9702	1	Hose ASM
4:2	130-5753	1	Fitting-45 DEG
4:2:1	130-5772	1	Fitting Kit
4:2:2	117-2778	1	O-Ring
4:3	130-5751	1	Fitting-Female, 90 DEG
4:3:1	130-5772	1	Fitting Kit
4:3:2	117-2778	1	O-Ring
4:4	130-5958	1	Cover-Foam
4:5	3290-378	8	Tie-Cable
5	125-9703	1	Hose ASM
5:2	130-5751	2	Fitting-Female, 90 DEG
5:2:1	130-5772	1	Fitting Kit
5:2:2	117-2778	1	O-Ring
5:3	130-5958	1	Cover-Foam
5:4	3290-378	8	Tie-Cable
6	125-9706	1	Hose-Heater
7	132-3333	1	Hose ASM
7:2	130-5752	1	Fitting-Female, 90 DEG
7:2:1	130-5773	1	Fitting Kit
7:2:2	117-2778	1	O-Ring
7:3	130-5757	1	Fitting-Straight, Female
7:3:1	130-5773	1	Fitting Kit
7:3:2	117-2779	1	O-Ring
7:3:3	117-2783	1	Cap-Side, High
8	125-9862	1	Hose ASM
8:2	130-5755	1	Fitting-Female, Straight
8:2:1	130-5775	1	Fitting Kit
8:2:2	117-2780	1	O-Ring
8:2:3	117-2784	1	Cap-Side, Low
8:3	130-5754	1	Fitting-Male, 45 DEG
8:3:1	130-5775	1	Fitting Kit
8:3:2	117-2780	1	O-Ring
8:4	130-5959	1	Cover-Foam
8:5	3290-378	16	Tie-Cable
9	125-9865	2	Hose-Drain
10	125-9866	2	Hose-Drain
11	127-9901	1	Hose-Washer Fluid
12	2412-39	2	Clamp-R
15	127-9905	1	Fitting-Hose, Barb
16	117-2779	1	O-Ring
17	117-2780	1	O-Ring
18	125-5257	1	Tank-Fluid, Washer
18:1	125-5258	1	Lid-Tank, Washer Fluid
19	132-3268-03	1	Mount-Washer Bottle
20	132-3269-03	1	Plate-Bottle
21	3230-23	4	Bolt-CARR
22	104-8300	4	Nut-HF, NI
23	2412-74	1	R-Clamp
24	74-5950	1	Latch-Swell
25	119-0129	1	Fitting-Elbow, 90 DEG
26	119-0128	1	Fitting-Elbow, 90 DEG
27	117-9410	2	Fitting-Straight
28	132-3347	2	Hose-Heater
29	2412-73	1	Clamp-R
34	133-1025	1	Wrap-Abrasion
35	94-3890	2	Tie-Cable


Pre-Filter Screen Assembly

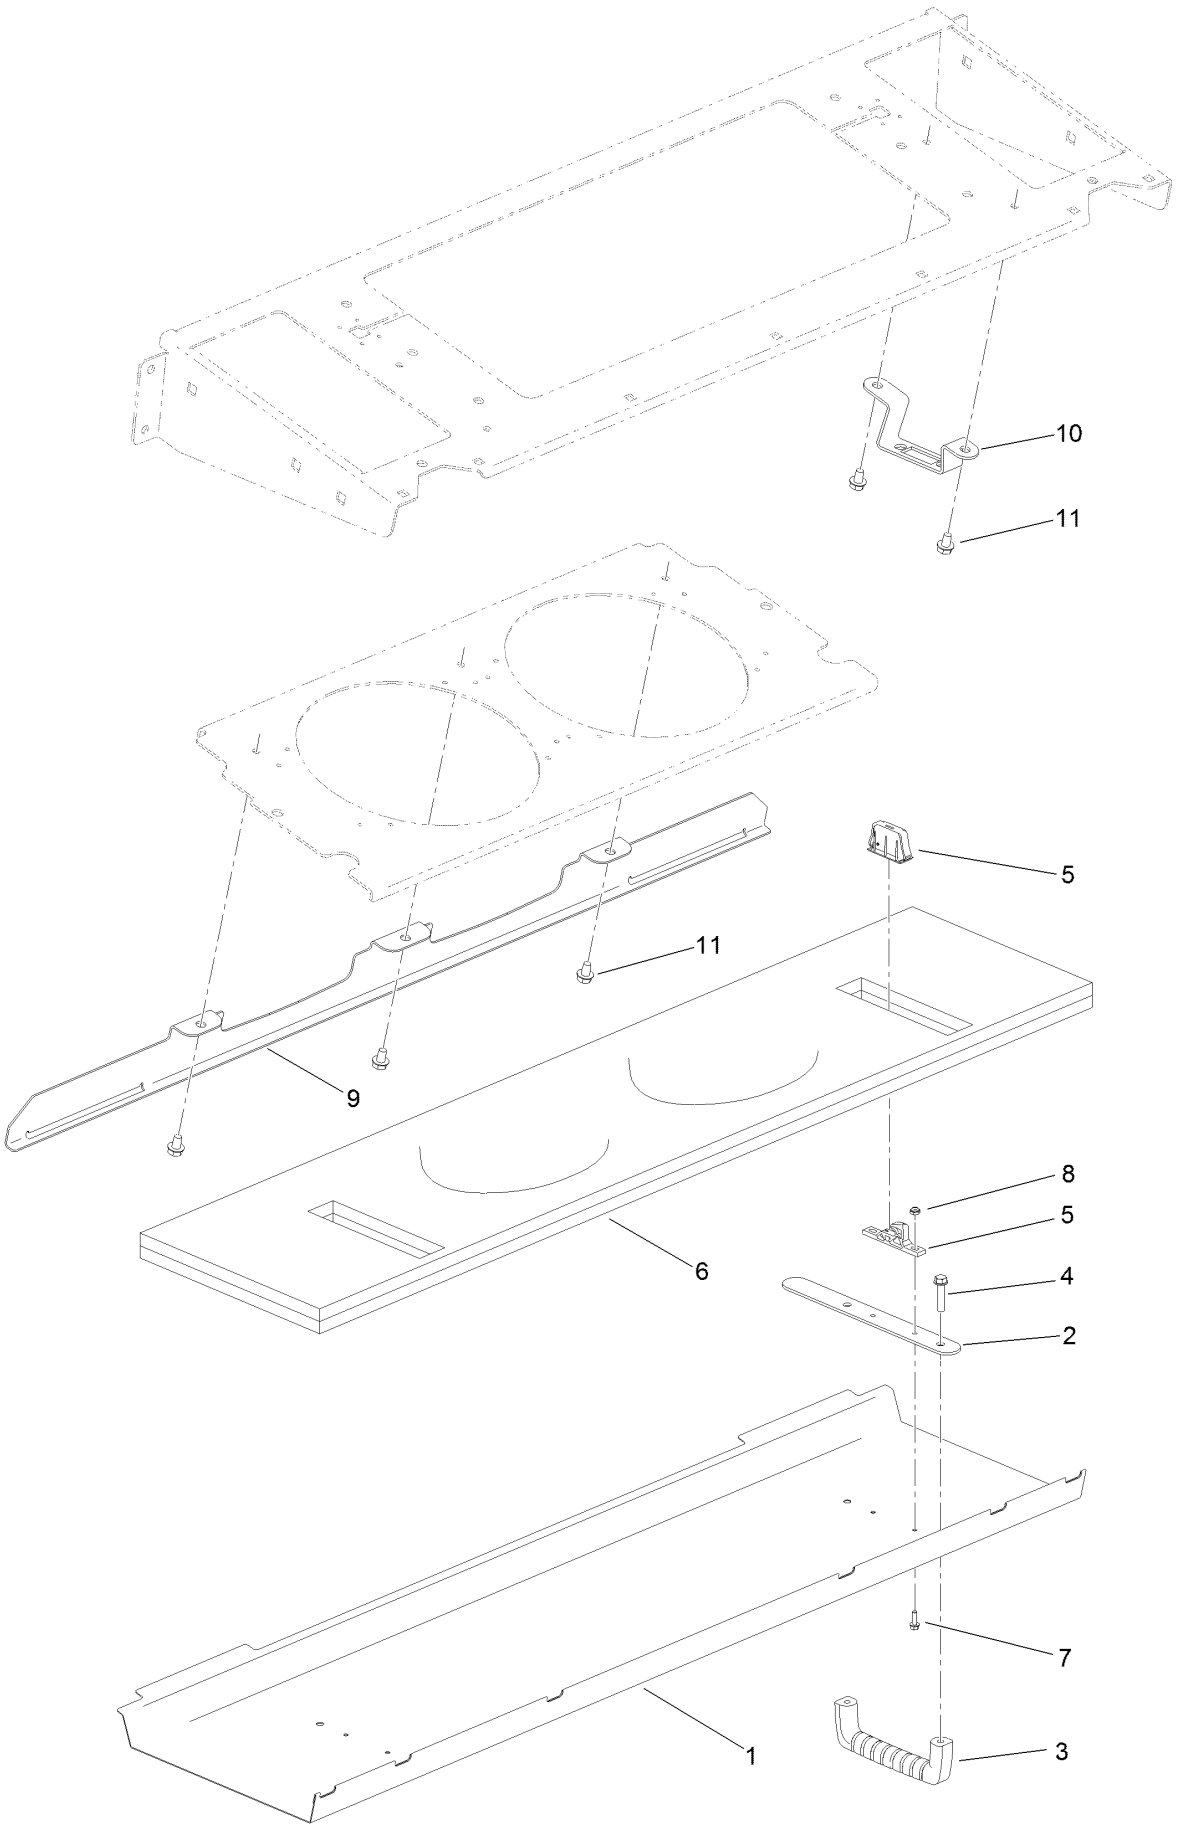

Pre-Filter Screen Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-0640-03	1	Screen
2	130-0642-03	2	Backplate
3	65-5100	2	Handle-Door
4	46-8092	4	Screw-Plastite
5	130-0643	2	Latch-Push To Close
6	130-5875	1	Pre-Filter
7	112-3169	4	Screw-HHF, Serrated
8	3296-54	4	Nut-Lock
9	132-3630-03	1	Screen-Mount, Front
10	136-2171	2	Mount-Latch
11	32104-82	7	Screw-HHF

Mixing Box and Vent Hose Assembly

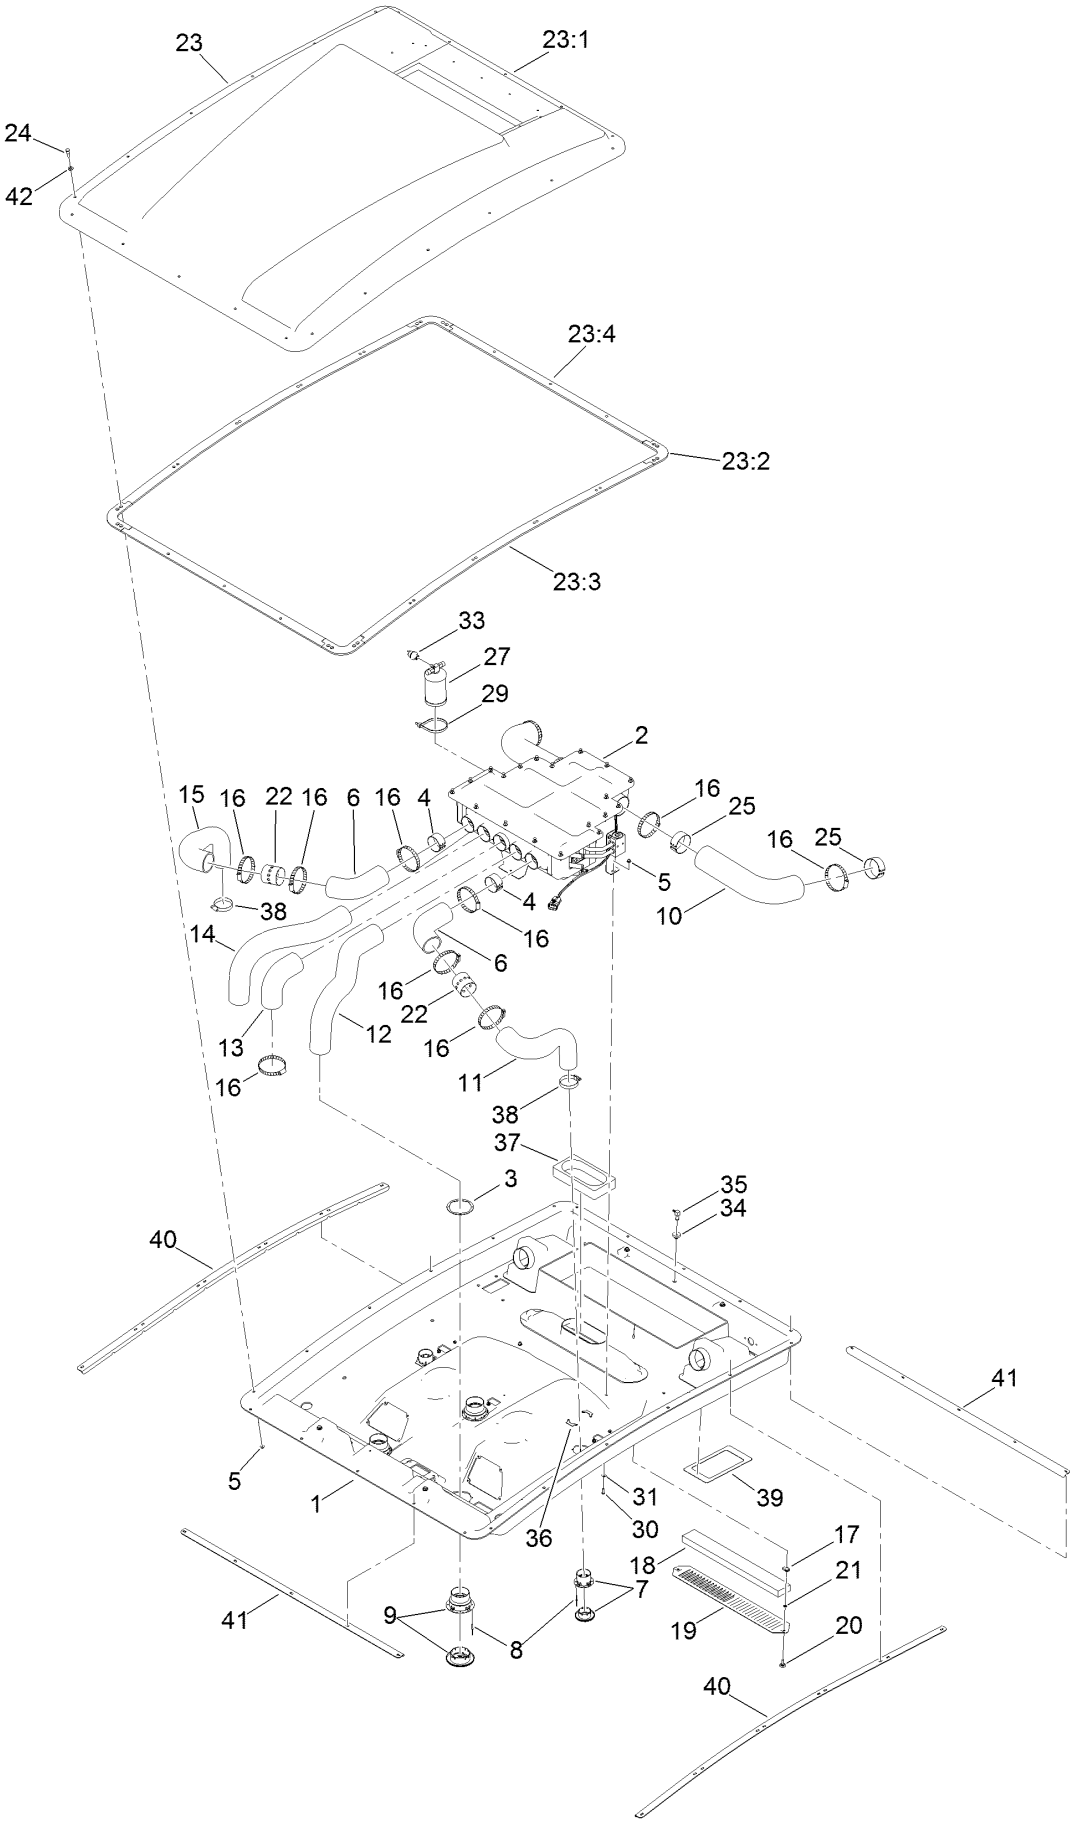


Mixing Box and Vent Hose Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-8470	1	Headliner
2	121-8495	1	Box-Mixing, Heater A/C
3	130-0558	3	Backplate-Rivet
4	130-5938	2	Tube-Support
5	104-7201	24	Nut-HF, NI
6	130-5860	2	Hose-Vent
7	130-0455	2	Louver-Round, Snap-In
8	125-7503	20	Rivet-Pop
9	130-0465	3	Louver-Round, Snap-In (4 Inch)
10	121-8473	2	Hose-Intake, Fresh Air
11	130-5861	1	Hose-Vent, Outer (LH)
12	121-8477	1	Hose-Vent, Defrost (LH)
13	130-0437	1	Hose-Vent, Center
14	121-8478	1	Hose-Vent, Defrost (RH)
15	130-5862	1	Hose-Vent, Outer (RH)
16	2412-110	11	Clamp-Band/Screw
17	107069	2	Clip
18	125-9532	1	Filter-Cab, Inside
19	125-9604-03	1	Plate-Cover, Recirculation
20	125-7438	2	Knob-Screw, Thumb
21	106-8737	2	Nut-Retainer
22	130-5927	2	Adapter-Bleed
23		1	Roof ASM ●
23:1	132-3602	1	Roof
23:2	130-5961	4	Seal-Corner
23:3	130-5960	2	Seal-Side
23:4	130-5962	2	Seal-Front, Rear
24	119-3301	22	Bolt-Pivot, Eccentric
25	130-5939	4	Tube-Support
27	130-5999	1	Drier-Receiver
29	3334-945	2	Tie-Cable
30	3274-69	2	Screw-HSBH
31	3256-1	2	Washer-Flat
33	119-4501	1	Switch-Function, Dual
34	46-6560	1	Bushing
35	104-5228	1	Fitting-Elbow, 90 DEG
36	130-0445	4	Backplate-Rivet
37	130-0444	1	Foam-Inlet, Airbox
38	2412-130	2	Clamp-Hose
39	132-3474	2	Insert-Seal, Filter
40	132-1461-03	2	Strap-Cab, Side
41	132-1462-03	2	Strap-Cab
42	3256-74	22	Washer-Flat

● Not serviced separately


Headliner Wire Harness and Control Assembly

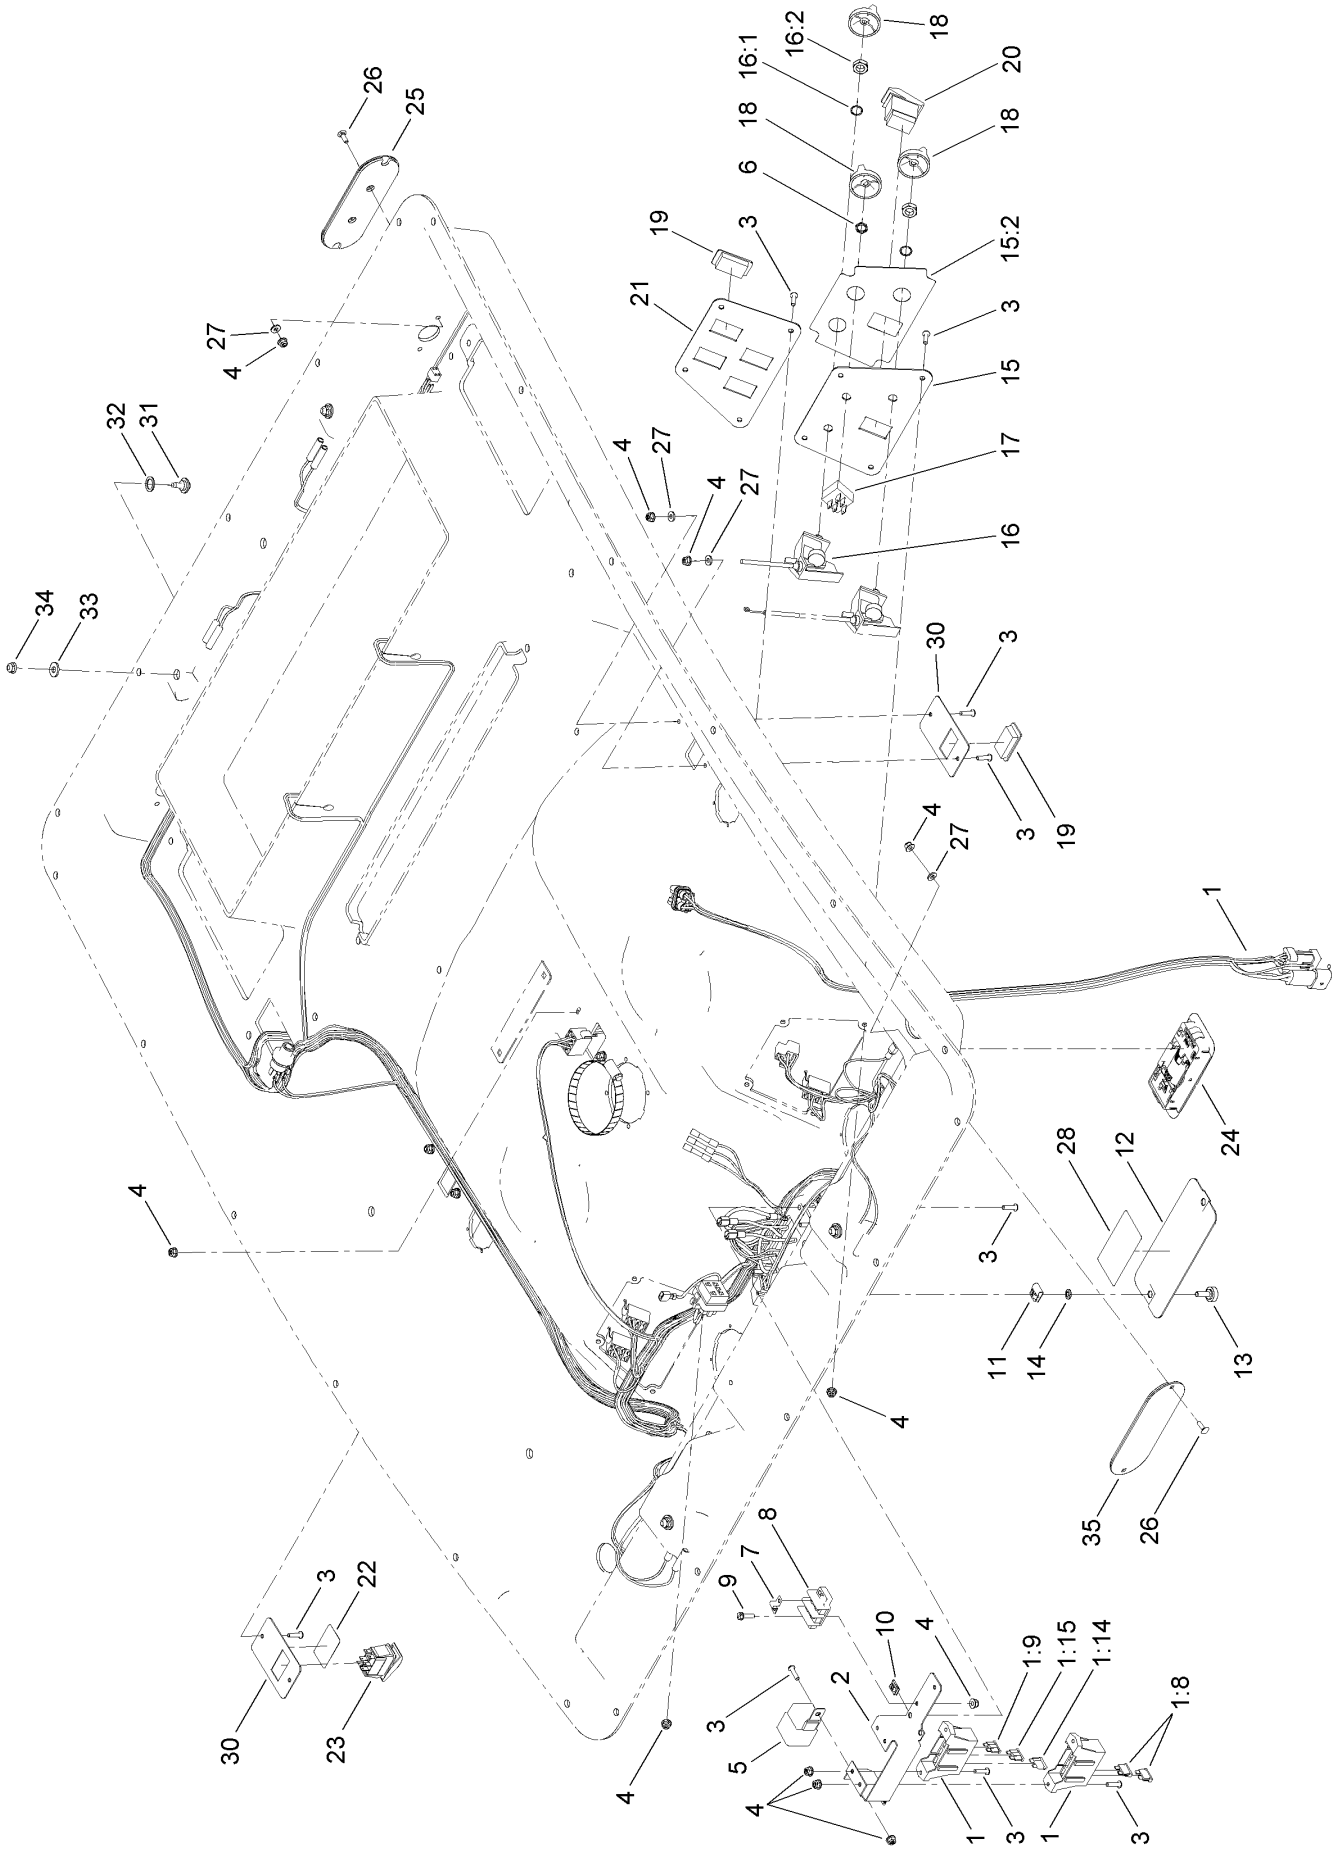

Headliner Wire Harness and Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	122-0723	1	Harness-Wire, Headliner
1:8	109355	2	Fuse-Blade, 15 Amp
1:9	109103	1	Fuse-Blade, 30 Amp
1:14	109101	1	Fuse-Blade, 20 Amp
1:15	109102	1	Fuse-Blade, 25 Amp
2	125-9606-03	1	Bracket-Fuse Block
3	104-2408	22	Screw-HSBH
4	120-4578	29	Nut-HF
5	99-7430	1	Relay-Mini
6	130-0588	1	Nut-Switch
7	42863	1	Strip-Jumper
8	42862	1	Block-Terminal, Ground
9	32105-13	3	Screw-HWH
10	107-1013	4	Nut-Speed
11	609900	2	Nut-Speed
12	125-9603-03	1	Plate-Cover, Fuse
13	125-7438	2	Knob-Screw, Thumb
14	106-8737	2	Nut-Retainer
15	121-8481	1	Panel-Air/Heat
15:2	121-8378	1	Decal, Air/Heat
16	125-9677	1	Control-Rotary, Linear
16:1	3254-20	1	Washer-Lock, Int
16:2	3220-4	1	Nut-Jam
17	122-0150	1	Switch, Rotary
18	125-9510	3	Knob-Control
19	99-7420	6	Plug-Hole
20	95-8999	1	Switch-Rocker, On-None-On
21	125-9691-03	1	Panel-Switch, Lights
22	125-9688	1	Decal-Washer
23	119-8355	1	Switch-Rocker
24	125-7437	1	Light-Dome
25	130-5867	2	Cover-Light, Rear
26	3229-34	8	Screw-CARR
27	3256-14	14	Washer-Flat
28	132-3600	1	Decal-Panel, Fuse
30	130-0436	3	Panel-Switch
31	92-9698	4	Screw-Shoulder
32	94-8196	4	Washer-Nylon
33	3256-2	4	Washer-Flat
34	104-7201	4	Nut-HF, NI
35	130-5868	2	Cover-Light, Front


Mixing Box Mounting Bracket and Water Tray Assembly

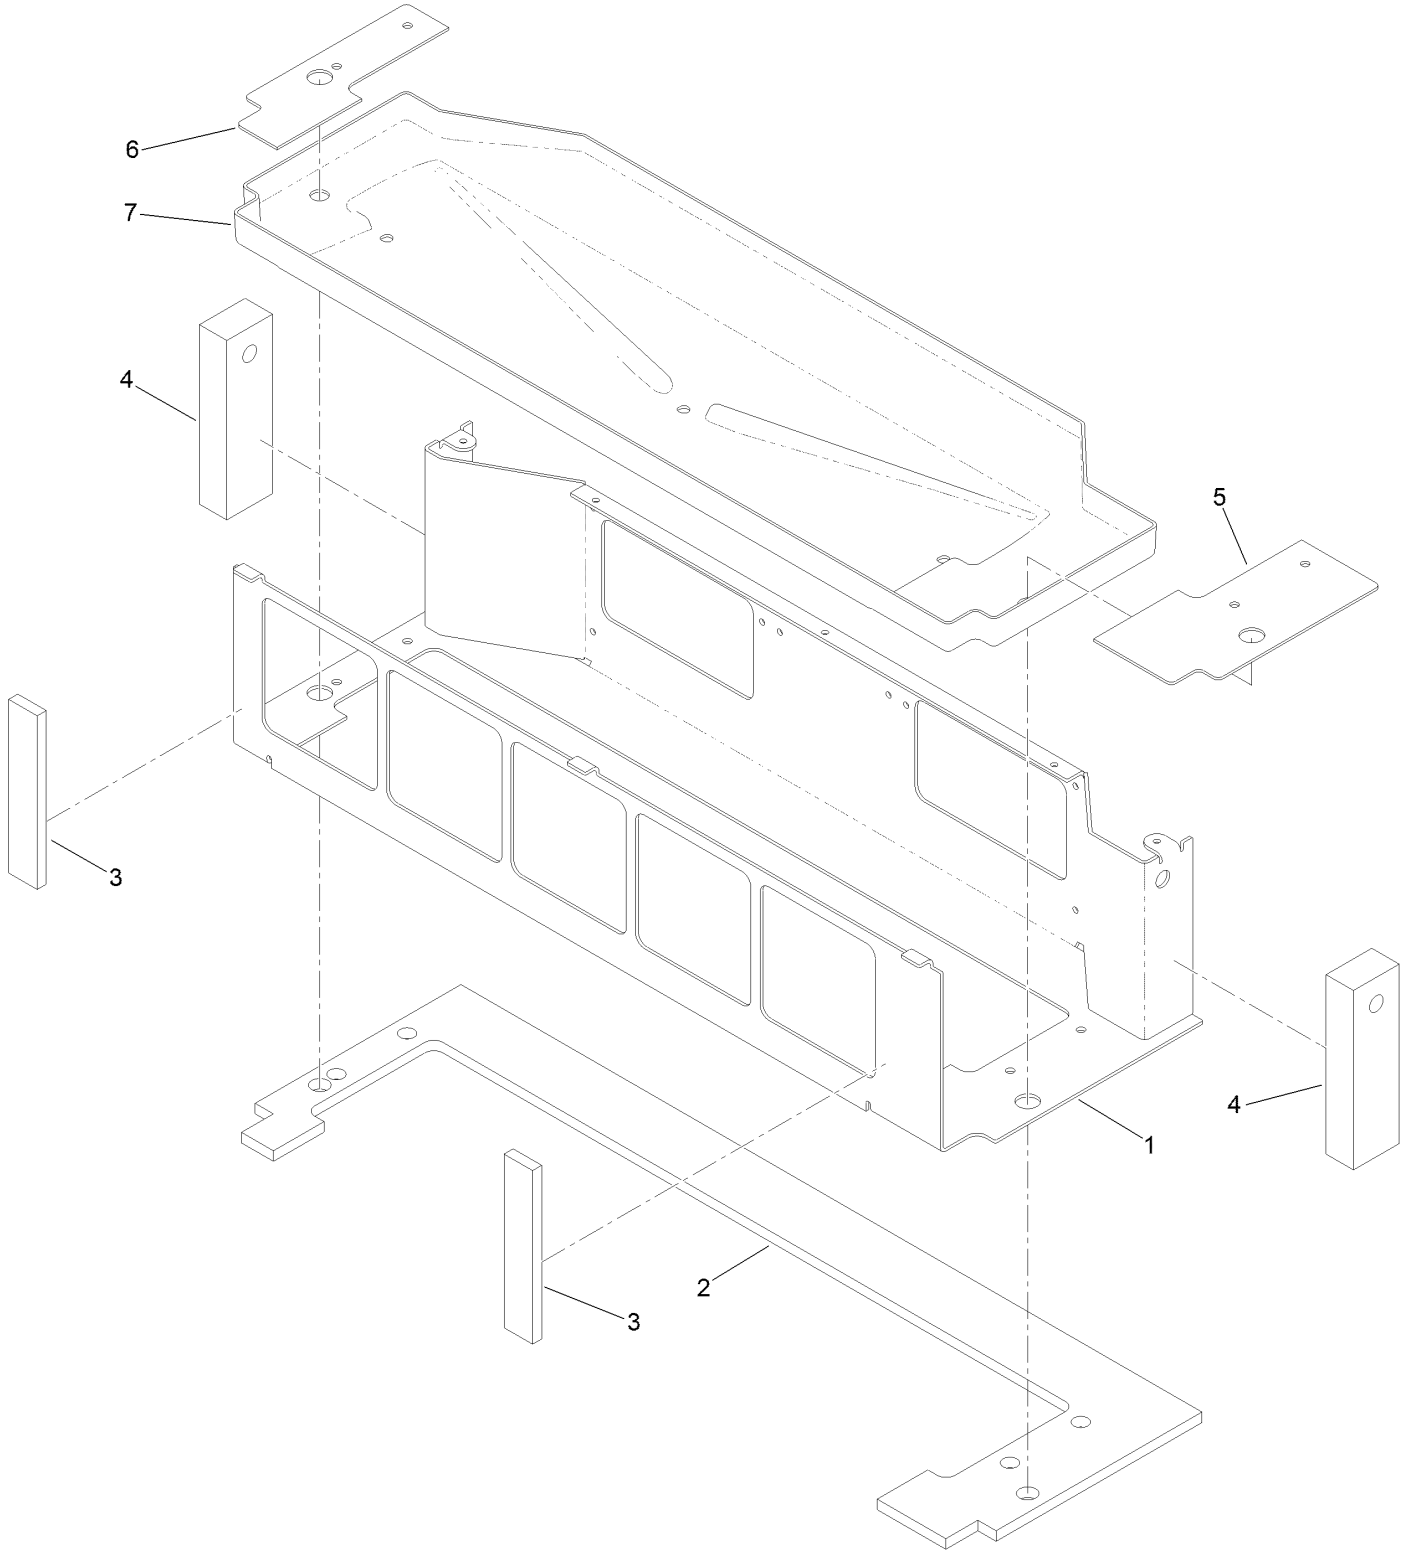

Mixing Box Mounting Bracket and Water Tray Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-5655-03	1	Bracket-Mount
2	130-5659	1	Seal-Foam
3	130-5808	2	Seal-Foam, Front
4	130-0602	2	Seal-End
5	130-5653	1	Gasket-Mount, LH Bracket
6	130-5654	1	Gasket-Mount, RH Bracket
7	130-5660	1	Tray-Water


Blower Fan and Evaporator Core Assembly

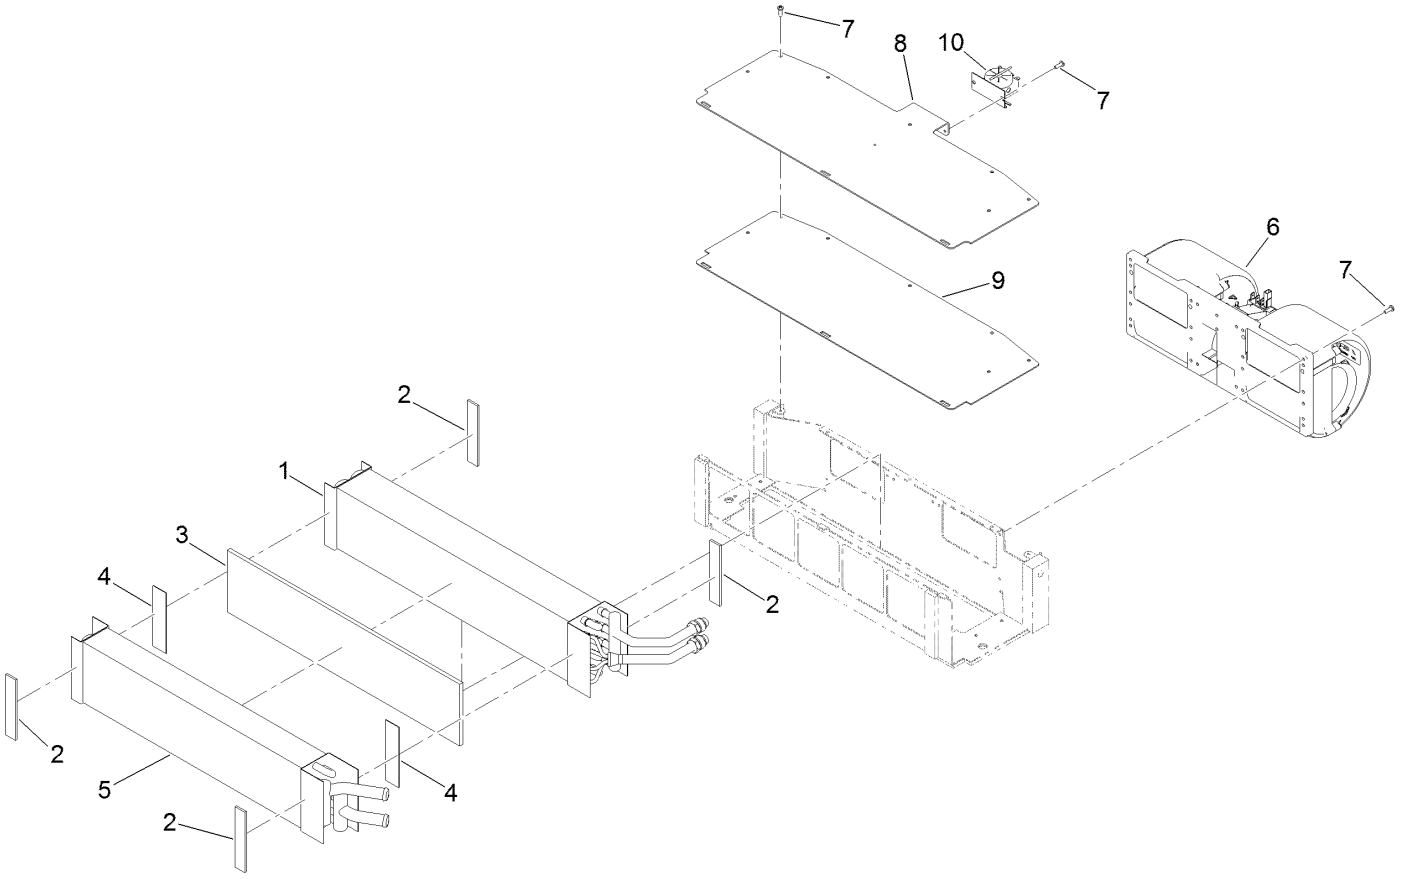

Blower Fan and Evaporator Core Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-5392	1	Core-Evaporator
2	130-5658	4	Gasket-Coil
3	130-5807	1	Foam
4	130-5806	2	Tape, Double-Sided
5	127-9915	1	Core-Heater
6	121-8451	1	Fan-Blower
7	363-8245	13	Screw-TAP
8	130-5656-03	1	Cover, Bracket-Mount
9	130-5652	1	Gasket-Mount, Cover Bracket
10	121-8385	1	Thermostat-Switch, Freeze


Heat / Air Conditioner Housing Assembly

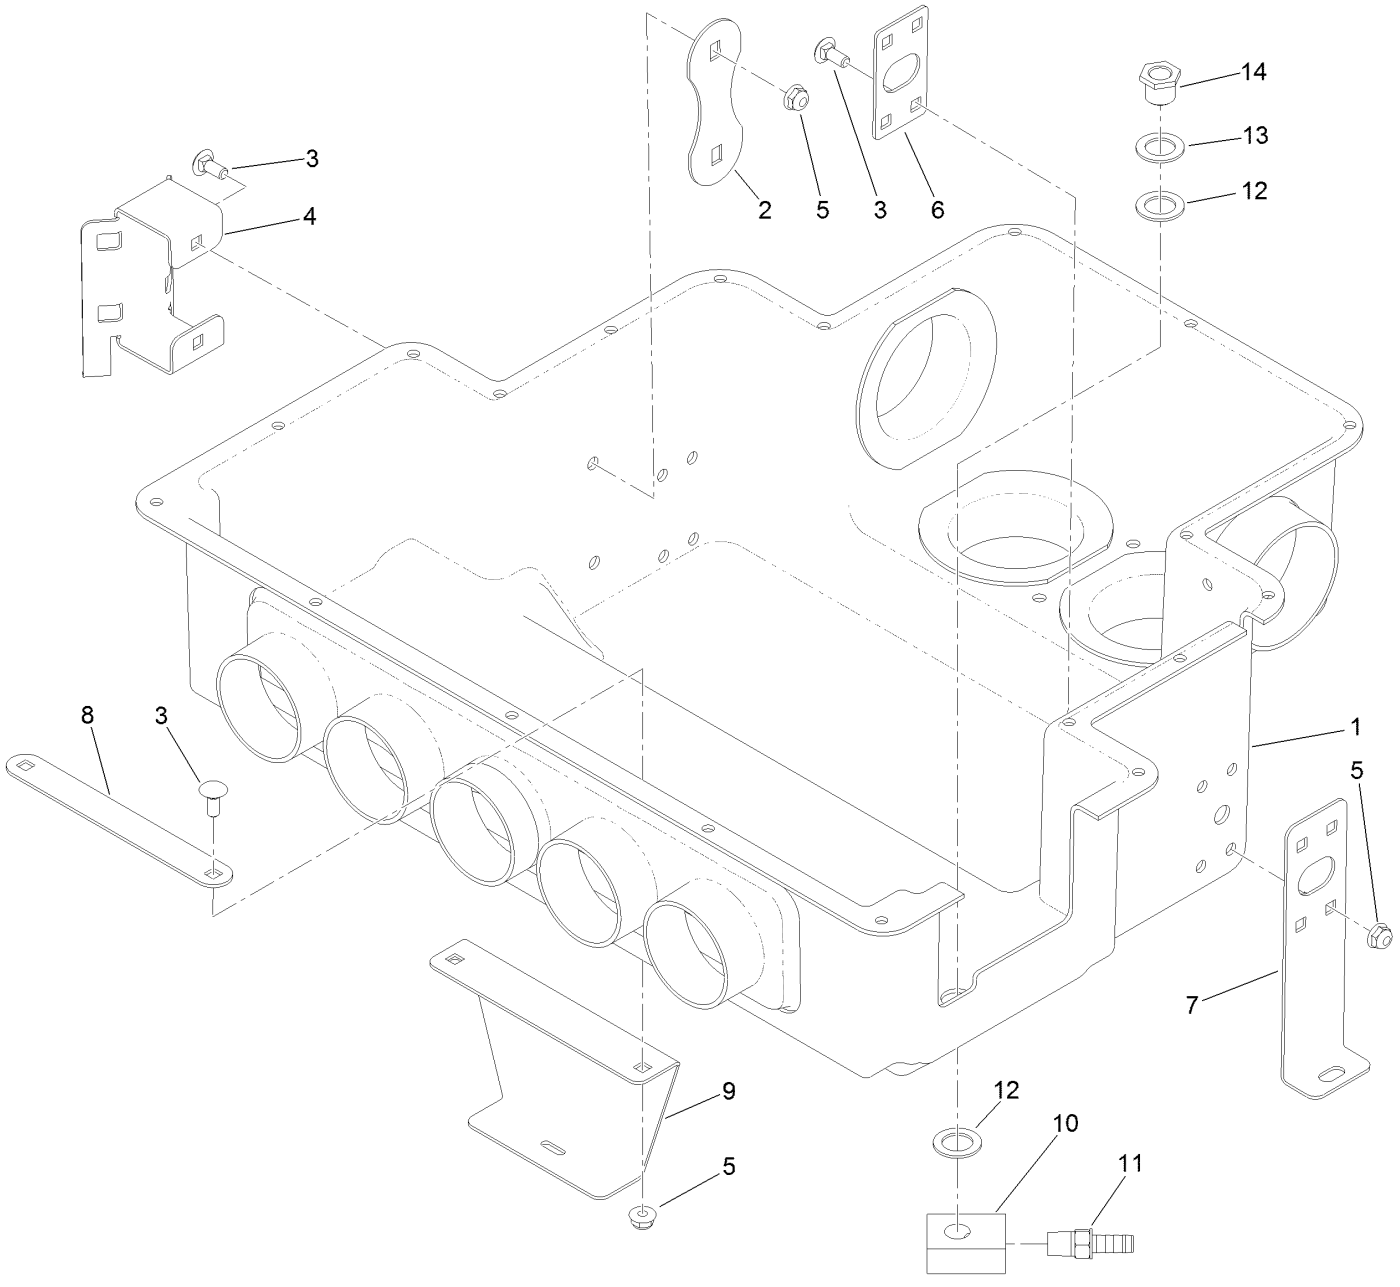

Heat / Air Conditioner Housing Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-5830	1	Housing-Heat/AC
2	121-8491	1	Plate-Support
3	3229-11	12	Screw-CARR
4	121-8490	1	Bracket-Mount, Drier
5	104-7201	12	Nut-HF, NI
6	130-5834	2	Bracket-Support
7	130-5821	2	Bracket-Airbox, Side
8	125-7504	1	Plate-Backer, Center
9	130-0554	1	Bracket-Airbox, Center
10	130-5601	2	Drain-Lower
11	108-0342	2	Fitting-Straight
12	121-6840	4	Washer-Rubber
13	107-3041	2	Washer-Flat
14	130-0293	2	Drain-Upper


Air Diverter and Expansion Valve Assembly

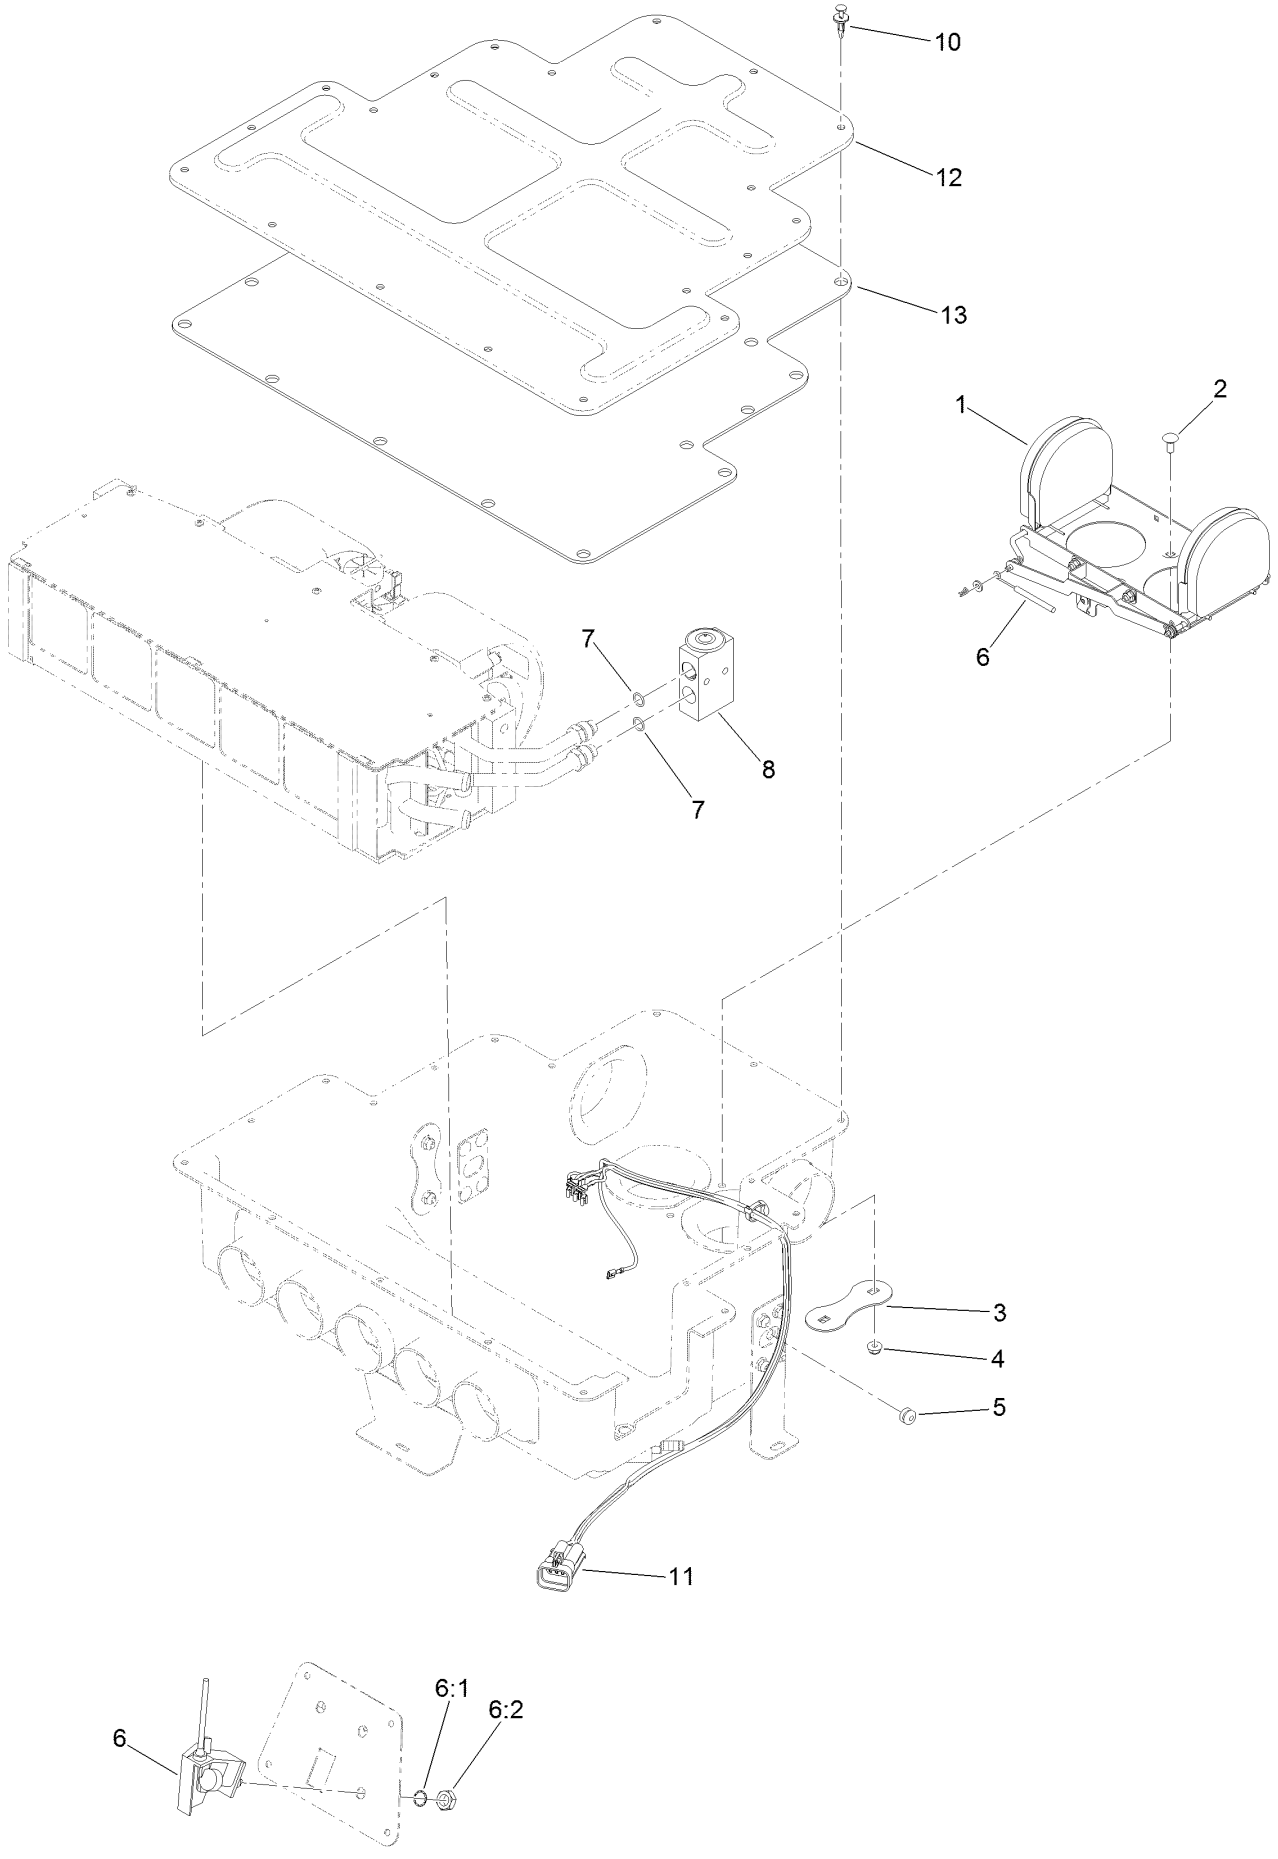

Air Diverter and Expansion Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-8369	1	Air Diverter ASM
2	3229-11	2	Screw-CARR
3	121-8491	1	Plate-Support
4	104-7201	2	Nut-HF, NI
5	125-7528	1	Grommet-Cable
6	125-9678	1	Control-Rotary, Linear
6:1	3254-20	1	Washer-Lock, Int
6:2	3220-4	1	Nut-Jam
7	125-9524	2	O-Ring
8	121-8384	1	Valve-Expansion
10	125-9622	19	Rivet-Blind
11	122-0153	1	Harness-Wire, Heat/AC Blower
12	121-8449	1	Housing-Ventilation, Upper
13	130-5614	1	Insulation-Cover

Air Diverter Assembly No. 121-8369

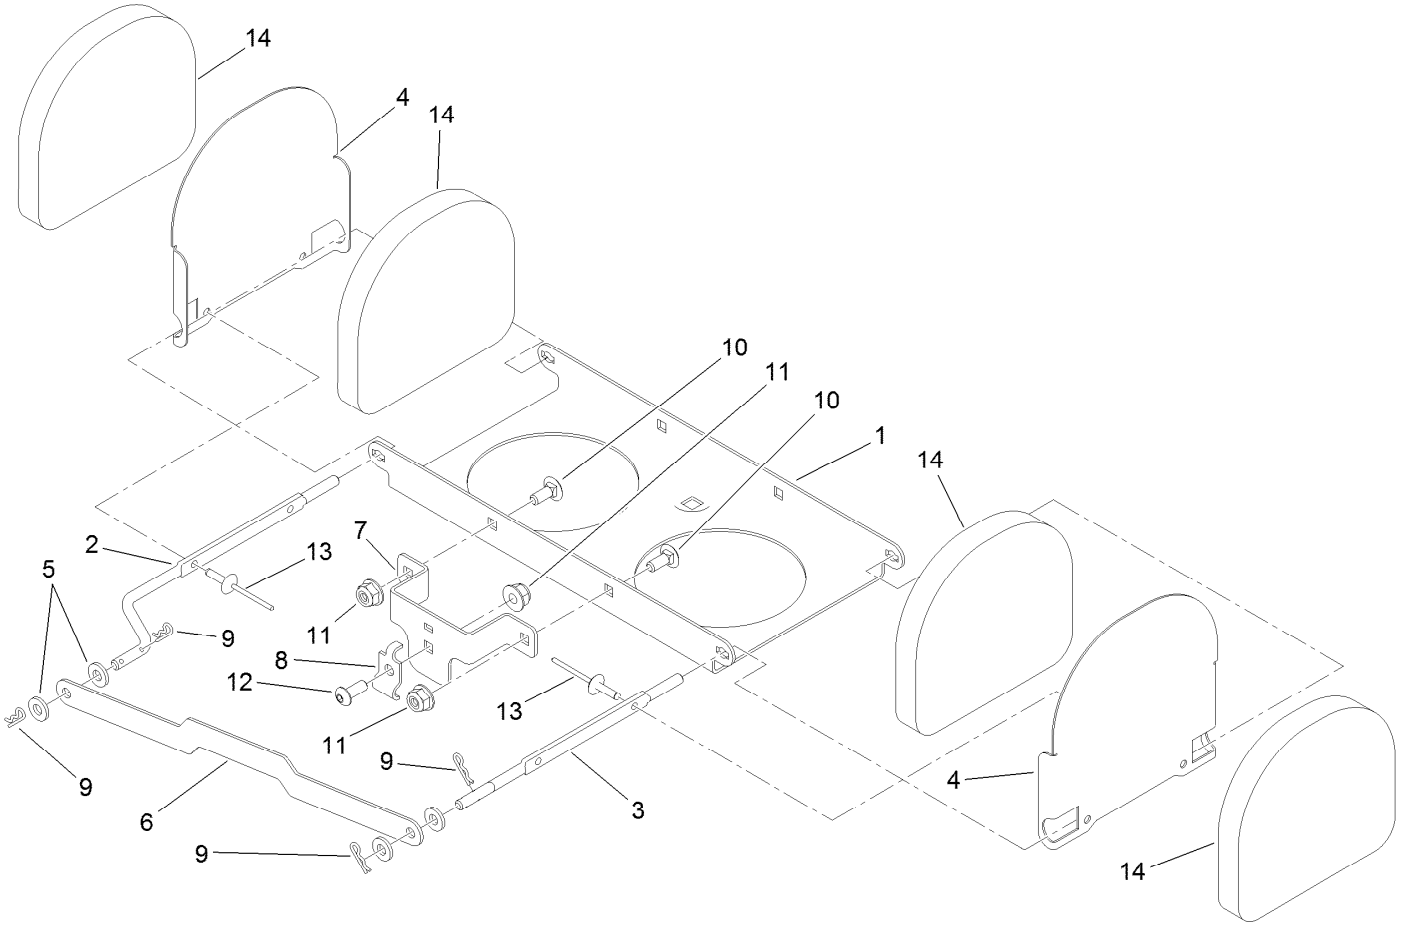

Air Diverter Assembly No. 121-8369 (continued)

Ref.	Part Number	Qty.	Description
1	125-9697	1	Base-Mount
2	121-8381	1	Shaft-Baffle, RH
3	121-8382	1	Shaft-Baffle, LH
4	125-9698	2	Baffle-Air
5	3256-51	4	Washer-Flat
6	125-9696	1	Link-Baffle
7	121-8374	1	Mount-Cable
8	121-8256	1	Clamp-Conduit
9	108-2992	4	Pin-Hair
10	1-807513	2	Bolt-CARR
11	120-4578	3	Nut-HF
12	115-9830	1	Screw-HSBH
13	3290-271	4	Rivet-Pop
14	125-9699	4	Damper-Foam

Attachments and Accessories

For 30901 Cab Kit Serial Number 315000001 and After Groundsmaster 4500/4700-D or Reelmaster 7000-D Traction Unit

Product Name	Model/Part
Work Light Kit	114-5610
Exterior Mirror Kit	130-5448
Interior Mirror Kit	130-5449
Window Guard Kit, 2015 and After Reelmaster 7000-D Traction Unit with Cab	132-3295
Cab A/C Kit (Yanmar)	30877
Beacon Kit, 2015 and After Groundsmaster Series Traction Unit	31509
CE Light Kit, Groundsmaster 4500-D, 4700-D or Reelmaster 7000-D Traction Unit	31573
LED Work Light Kit, 2015 and After Cab and 2 Post ROPS Extension Kit	31596

Notes:

Notes:

Notes:



Count on it.