Form No. 3365-587 Rev B

TORO®

Count on it.

Parts Catalog

MH-400SH2 Material Delivery Unit

Model No. 44931—Serial No. 311000001 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3365-587 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Box Frame Assembly 4
Box Frame Decal Assembly No. 120-0890 5
Attachment Clamp Assembly No. T36015800 6
Guard Assembly 7
Hitch Assembly 8
Belt and Skirting Assembly 9
Skirting Assembly 10
Conveyor Assembly 11
Chain Drive Assembly 12
Wheel Assembly 13
RH Shaft Assembly No. 120-0942 14
Hub Assembly No. T54031039 15
LH Brake Assembly No. 120-0818 16
LH Shaft Assembly No. 120-0943 17
RH Brake Assembly No. 120-0819 18
Hydraulic Valve and Manifold Assembly 19
Hydraulic Valve Assembly No. 120-0850 21
Hydraulic Hose and Clamp Assembly 22
Hydraulic Cylinder and Junction Box Manifold Assembly 23
Hydraulic Hose Assembly 24
Hydraulic Guard Box Assembly 25
Hydraulic Motor Assembly No. T0000-5303 26
Electrical Assembly 27
Brake Assembly 28

© 2024—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420


Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

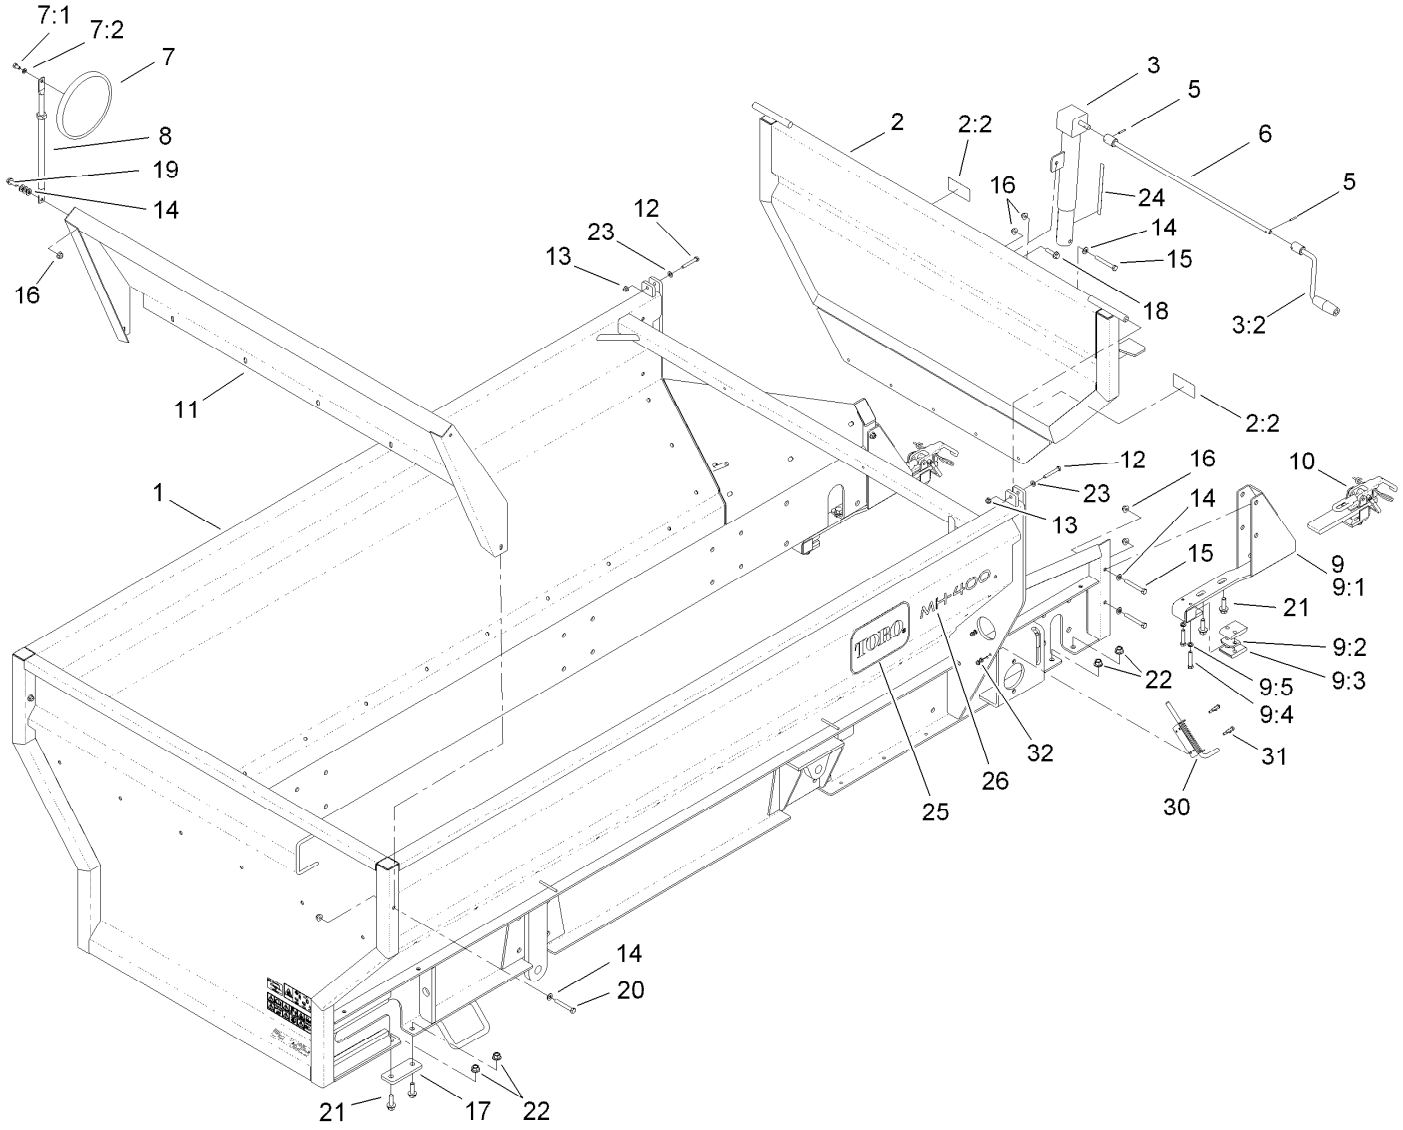

Box Frame Assembly


Ref.	Part Number	Qty.	Description
1	120-0890	1	Box Frame ASM
2	120-0891	1	Tailgate ASM
2:2	119-6838	2	Decal-Warning, Conveyor
3	T36031200	1	Tailgate Jack ASM
3:2	T36031210	1	Handle-Crank
5	32121-45	2	Pin-Spring
6	T36011220-01	1	Crank-Jack
7	92-2678	1	Convex Mirror ASM
7:1	322-2	1	Screw-HH
7:2	3253-4	1	Washer-Lock
8	T36011560	1	Arm-Mirror
9	T36015790	2	Attachment Bracket ASM
9:1	119-6872-01	1	Bracket-Attachment
9:2	T01-13489B	1	Tab-Spacer
9:3	T36015200	2	Bar-Bearing
9:4	323-10	2	Screw-HH
9:5	3253-21	2	Washer-Lock
10	T36015800	2	Attachment Clamp ASM
11	T36011550-01	1	Panel-Sloped

Ref.	Part Number	Qty.	Description
12	322-11	2	Screw-HH
13	104-8300	2	Nut-HF, NI
14	3256-24	10	Washer-Plain
15	323-14	5	Screw-HH
16	104-8301	14	Nut-HF, NI
17	T36011650	2	Bar-Bridge
18	114-4681	1	Screw-HHF
19	3234-42	6	Screw-HHF
20	323-13	2	Screw-HH
21	100-6116	8	Screw-HHF
22	99-5107	8	Nut-Lock
23	3256-23	2	Washer-Plain
24	119-6869	1	Decal-Adjustment, Tailgate
25	66-6140	3	Decal
26	119-6802	3	Decal
30	T62021030	2	Latch-Spring
31	321-6	8	Screw-HH
32	104-7201	8	Nut-HF, NI

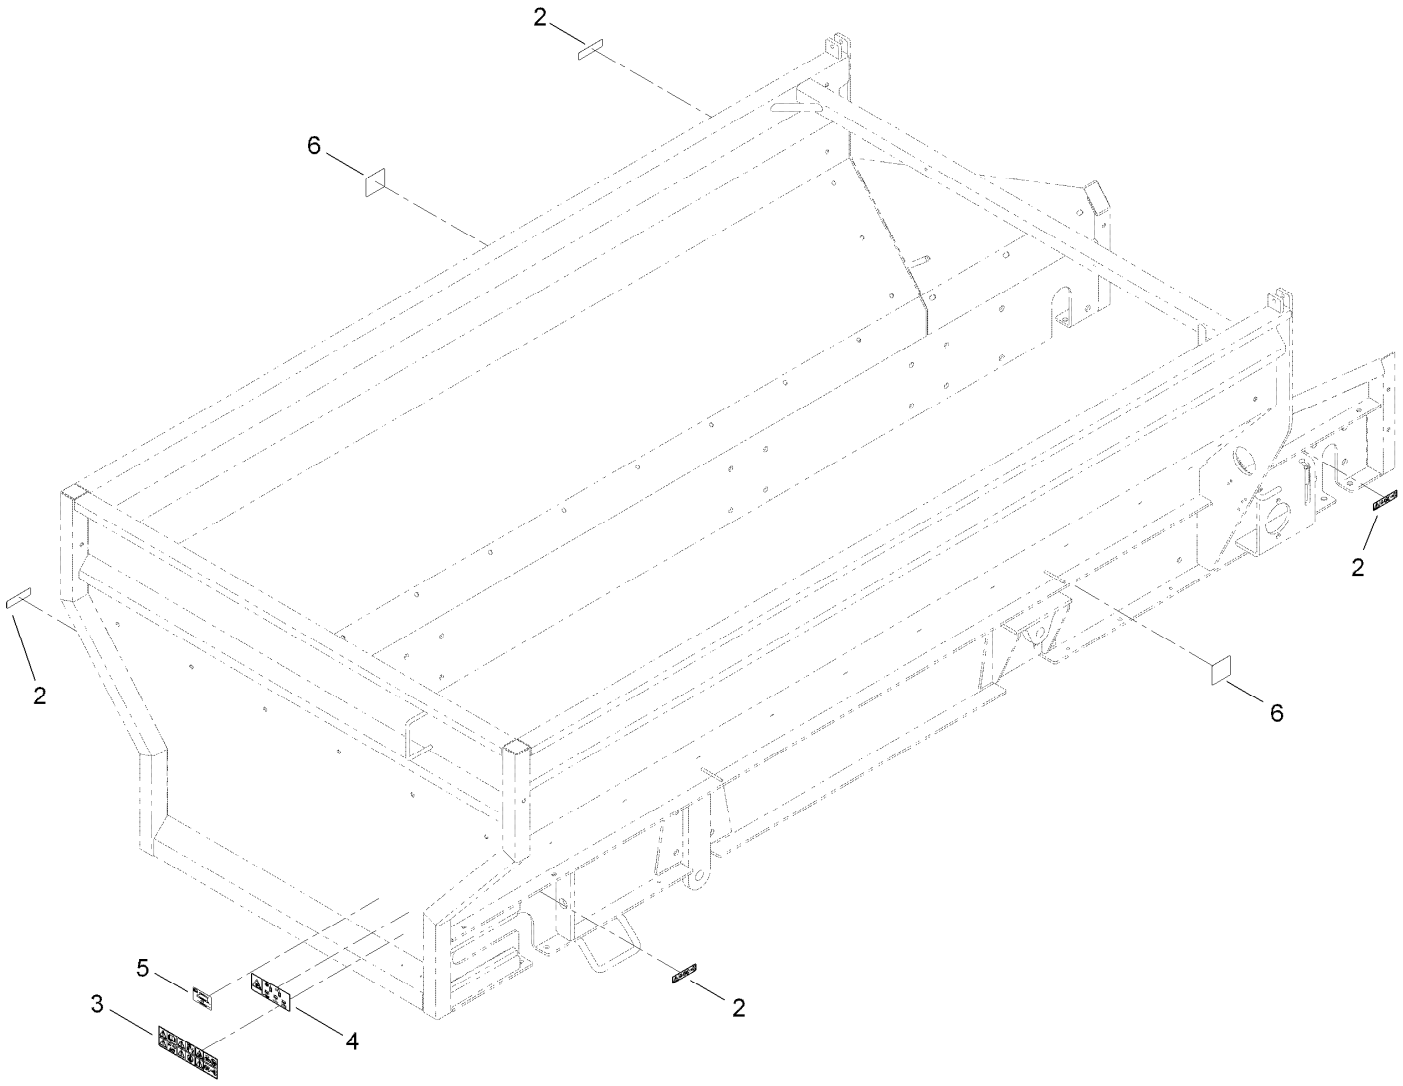


Box Frame Decal Assembly No. 120-0890

Ref.	*Part Number*	*Qty.*	*Description*
2	119-0217	4	Decal-Danger
3	119-6806	1	Decal-Danger
4	119-6812	1	Decal-Warning, Tipping Hazard
5	119-6833	1	Decal-Max Load
6	93-9899	2	Decal-Warning

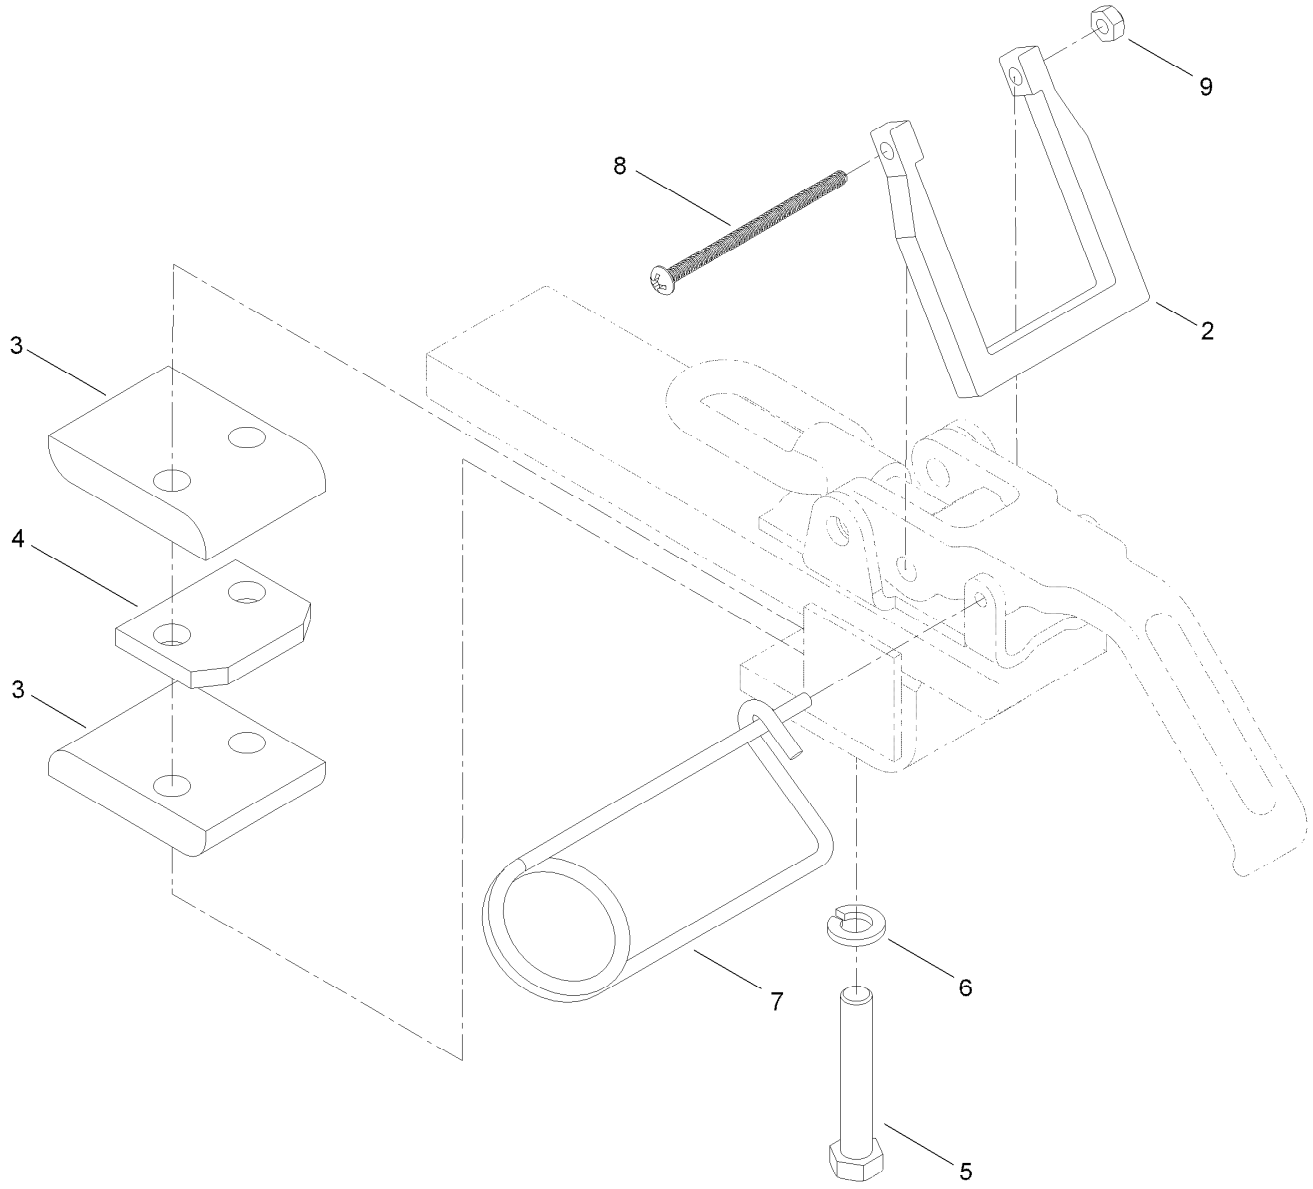


Attachment Clamp Assembly No. T36015800

Ref.	*Part Number*	*Qty.*	*Description*
2	T36015794	1	Lock-Clamp, Attachment
3	T36015200	2	Bar-Bearing
4	T01-13489B	1	Tab-Spacer
5	323-11	2	Screw-HH
6	3253-21	2	Washer-Lock
7	T0000-3247	1	Pin-Lock
8	120-0884	1	Screw-PRH
9	3296-2	1	Nut-Lock, NI

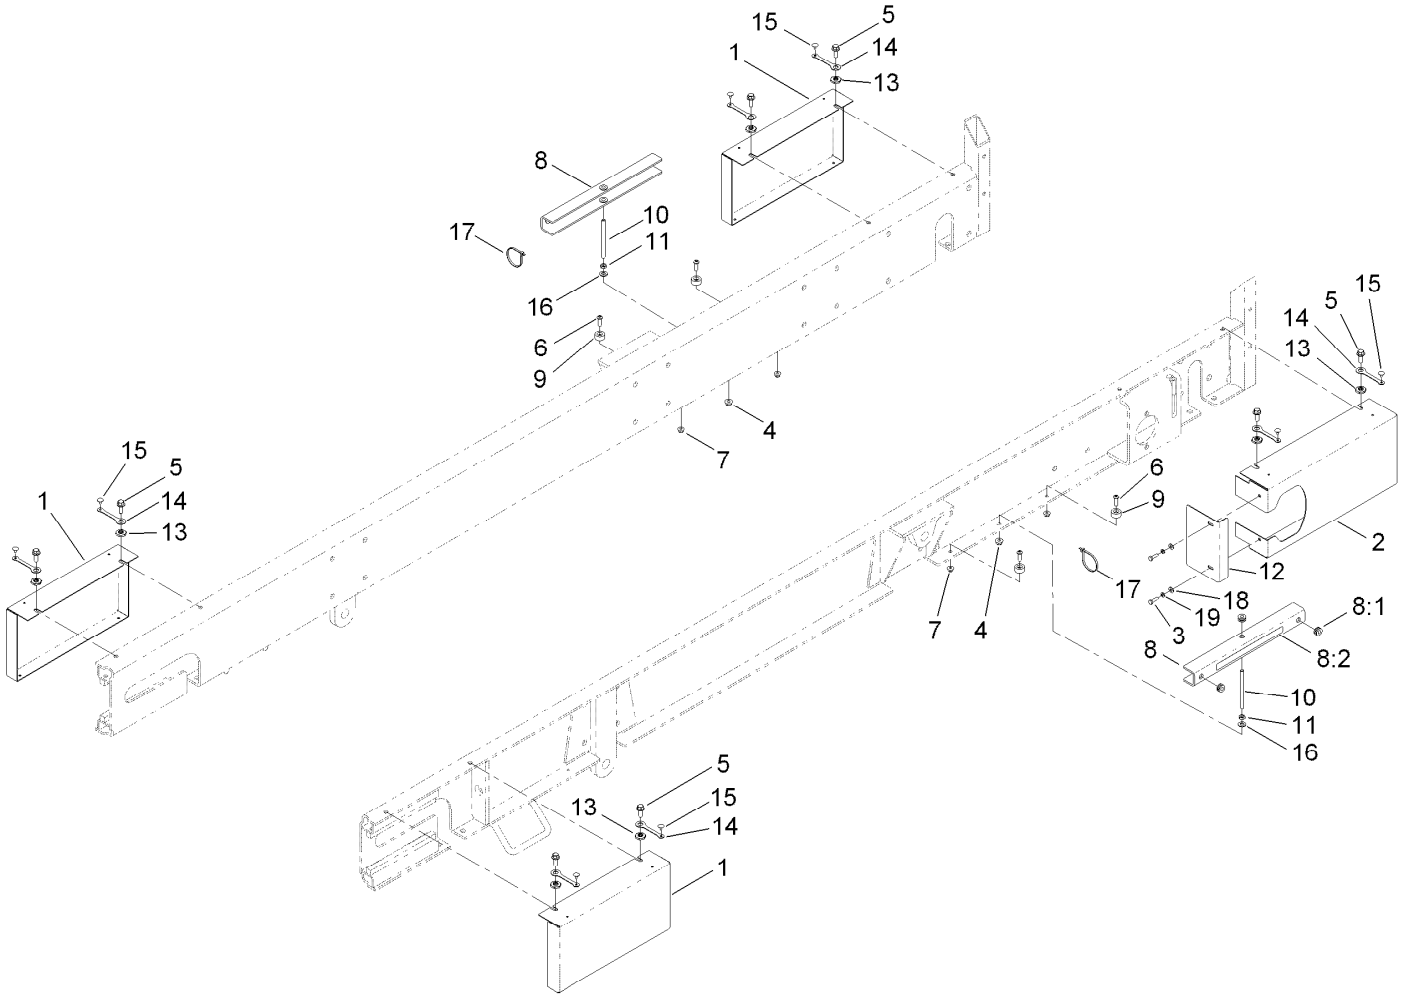

Guard Assembly


Ref.	Part Number	Qty.	Description
1	T36011630-03	3	Guard-Idler
2	T36011640-03	1	Guard-Drive
3	321-5	2	Screw-HH
4	104-8301	2	Nut-HF, NI
5	3234-42	8	Screw-HHF
6	3274-104	4	Screw-HSBH
7	104-8300	4	Nut-HF, NI
8	T36011580	2	Lift Cylinder Stop ASM
8:1	92-5972	4	Grommet-Rubber
8:2	93-9852	1	Decal-Warning
9	T0001-3570	4	Spacer-Stop, Lift Cylinder
10	T36011590	2	Pin-Stop, Lift Cylinder
11	3218-3	2	Nut-Jam
12	T0000-5529-03	1	Guard-Motor, Drive
13	117-8347	8	Nut-Shoulder
14	117-8339	8	Lanyard-3 Inch
15	146489	8	Rivet
16	3256-24	2	Washer-Plain
17	3290-379	2	Tie-Cable
18	3256-22	2	Washer-Flat
19	3253-3	2	Washer-Lock

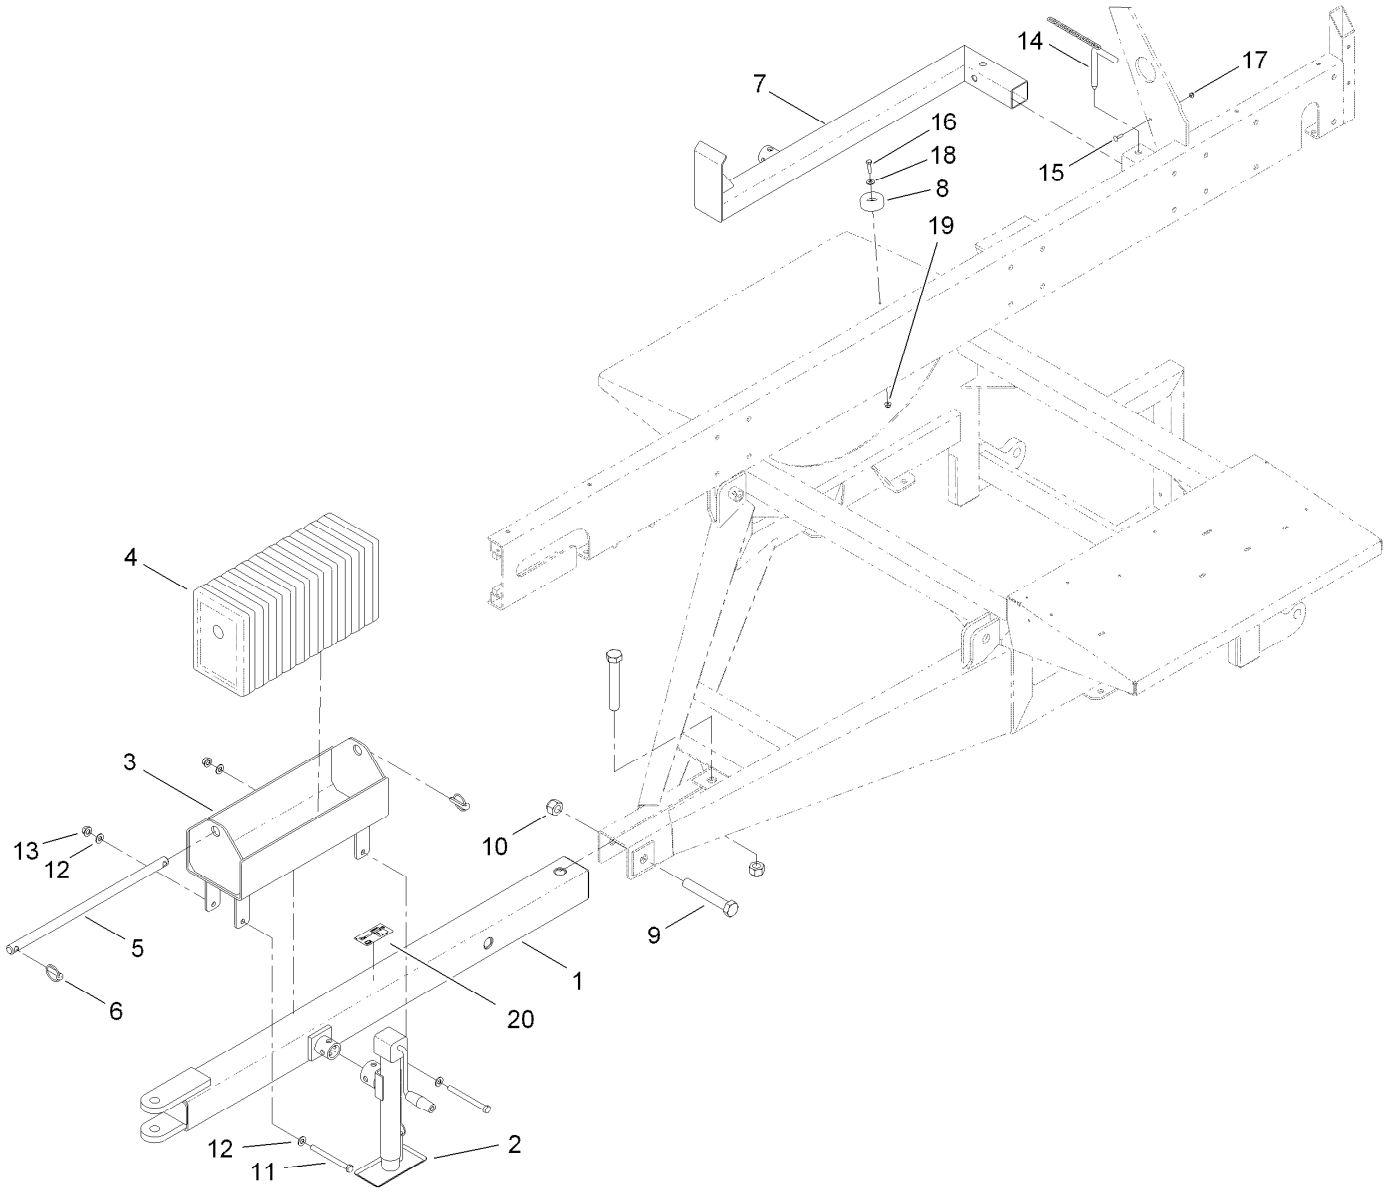

Hitch Assembly


Ref.	Part Number	Qty.	Description
1	T36012112-01	1	Tube-Hitch
2	T0000-3423	1	Jack-Sidewind
3	T36028000-01	1	Box-Weight
4	119-6860-01	10	Casting-Counterweight
5	T36028010-01	1	Shaft-Weight Box
6	283-71	2	Pin-Lynch
7	T36011190-01	1	Leg-Jack
8	108-1605	1	Bumper-Recess
9	120-0887	2	Screw-HH
10	120-0888	2	Nut-HH

Ref.	Part Number	Qty.	Description
11	325-22	2	Screw-HH
12	3256-26	4	Washer-Flat
13	99-5107	2	Nut-Lock
14	T36011195	1	Pin
15	3229-2	1	Screw-CARR
16	322-6	1	Screw-HH
17	104-7201	1	Nut-HF, NI
18	3256-3	1	Washer-Flat
19	104-8300	1	Nut-HF, NI
20	119-6836	1	Decal-Weight Case

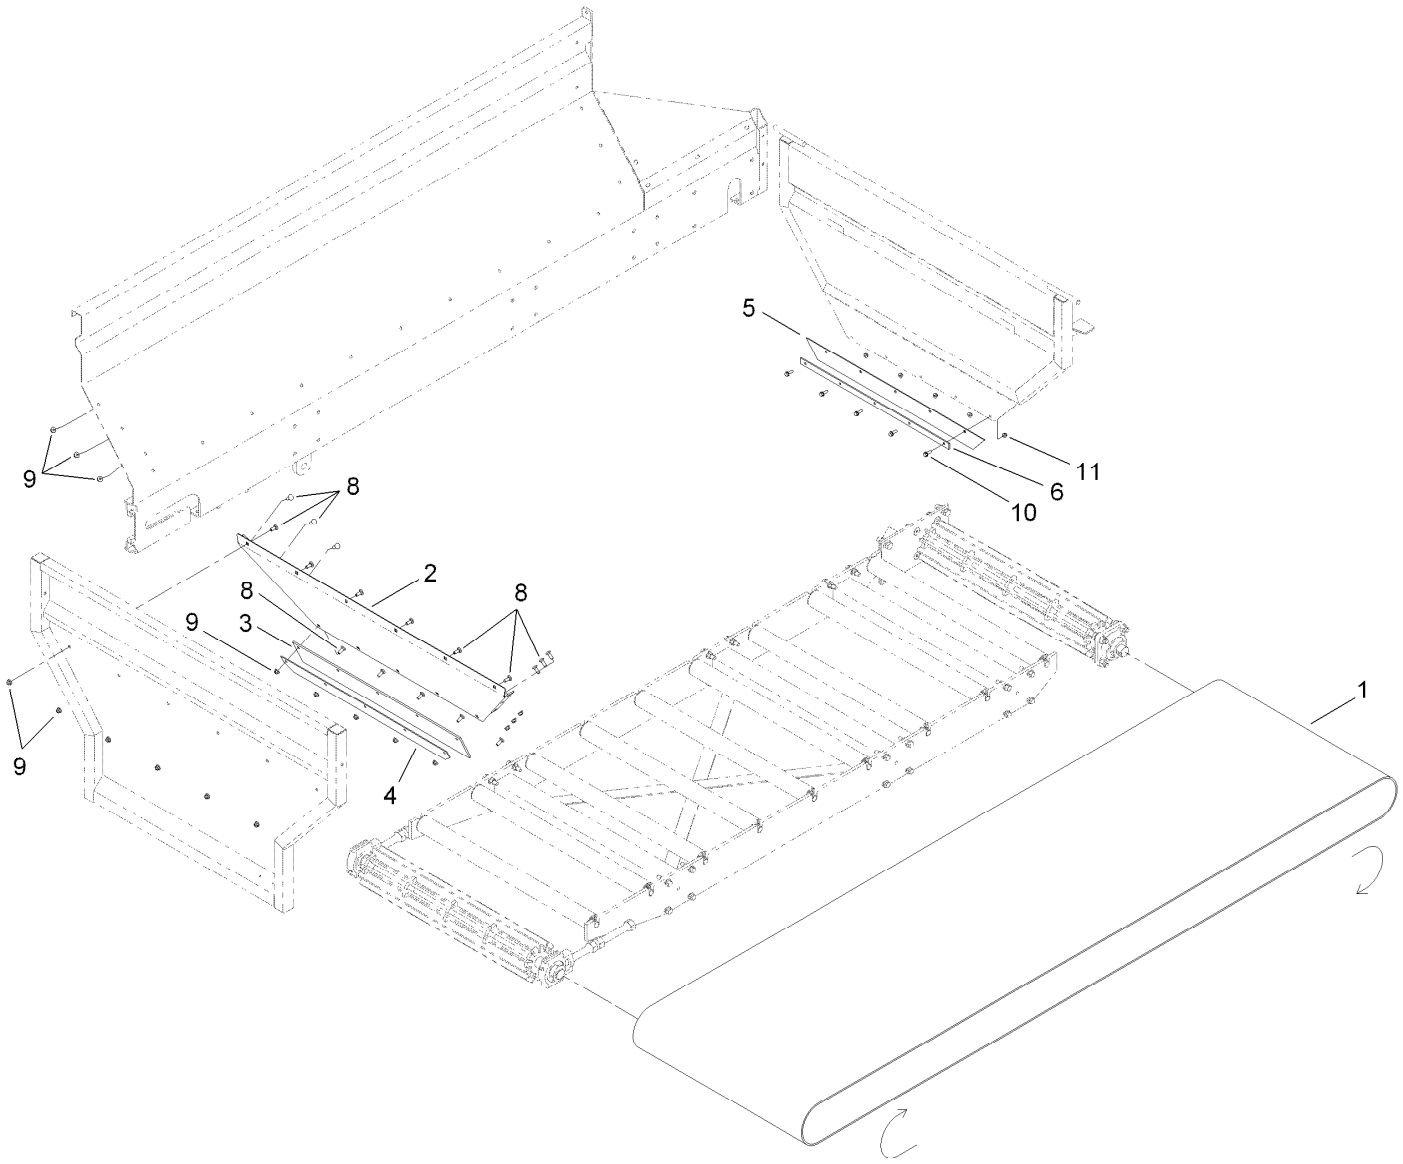


Belt and Skirting Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	T60191215	1	Belt-Endless
2	T36011525-01	1	Panel-Sloped
3	T01-22002B	1	Skirt-Front Seal, Rubber
4	T36011535-01	1	Bar-Front Seal
5	T36013010	1	Seal-Belt
6	T36011230-01	1	Seal-Retainer, Belt
8	3231-22	17	Screw-CARR
9	104-8301	17	Nut-HF, NI
10	3234-29	5	Screw-HHF
11	104-8300	5	Nut-HF, NI

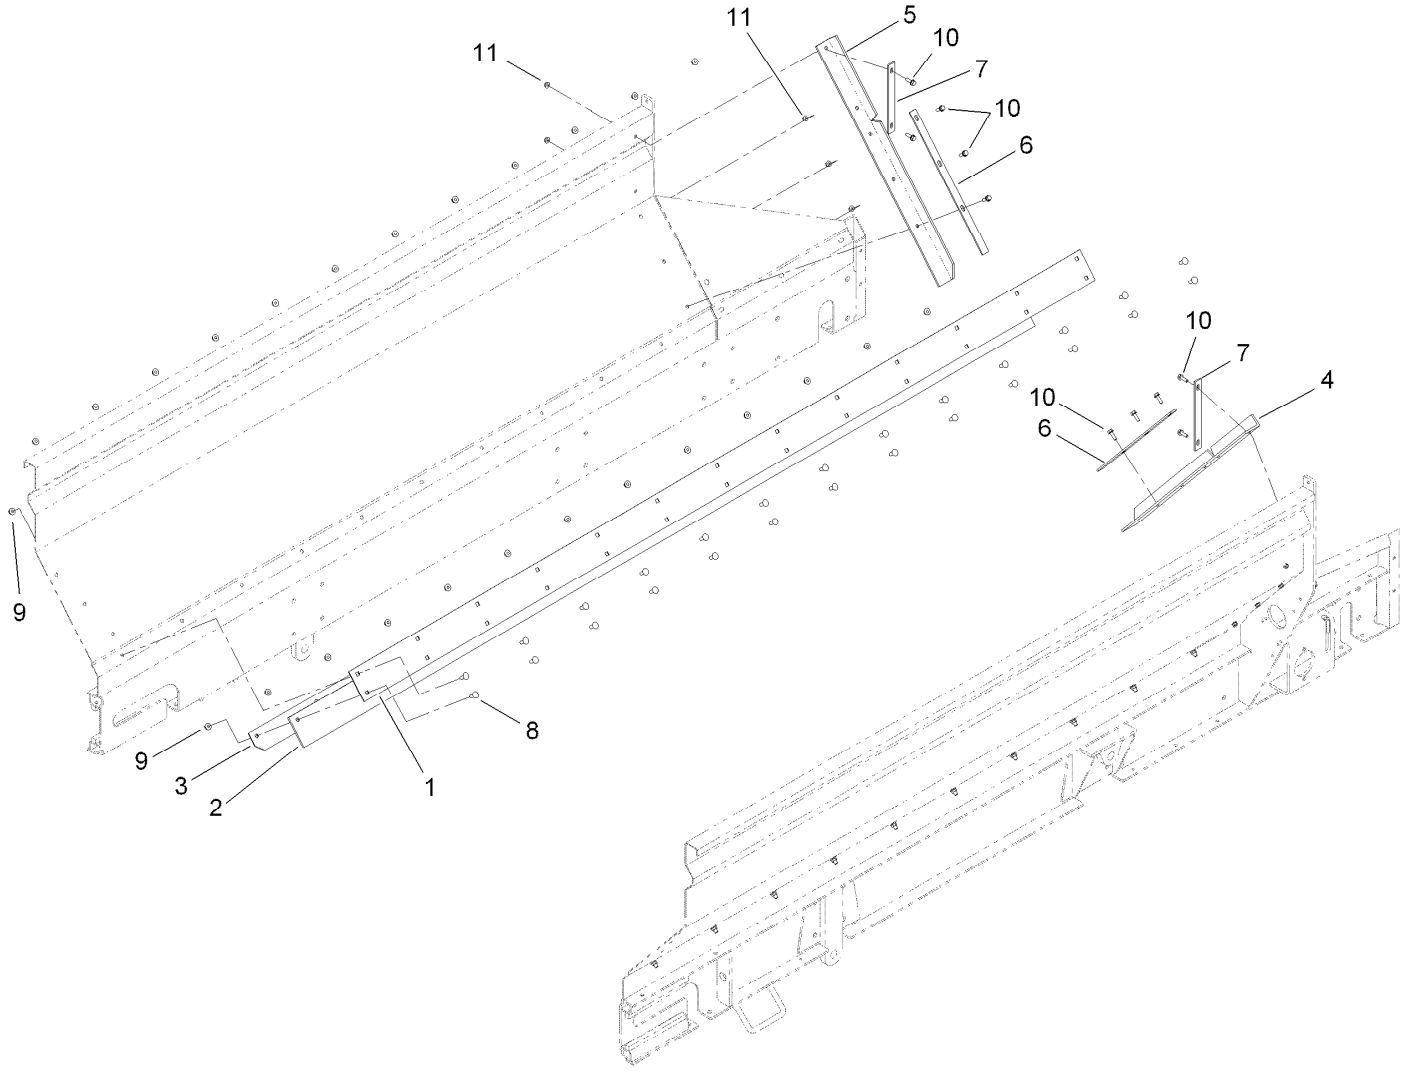

Skirting Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	T36011520-01	2	Seal-Panel, Side
2	T01-22000B	2	Seal-Rubber, Side
3	T36011530-01	2	Seal-Bar, Side
4	T36011260	1	Seal-Tailgate, LH
5	T36011270	1	Seal-Tailgate, RH
6	T36011280-01	2	Seal-Bar, Lower
7	T36011290-01	2	Seal-Bar, Upper
8	3231-22	52	Screw-CARR
9	104-8301	52	Nut-HF, NI
10	3234-29	10	Screw-HHF
11	104-8300	10	Nut-HF, NI

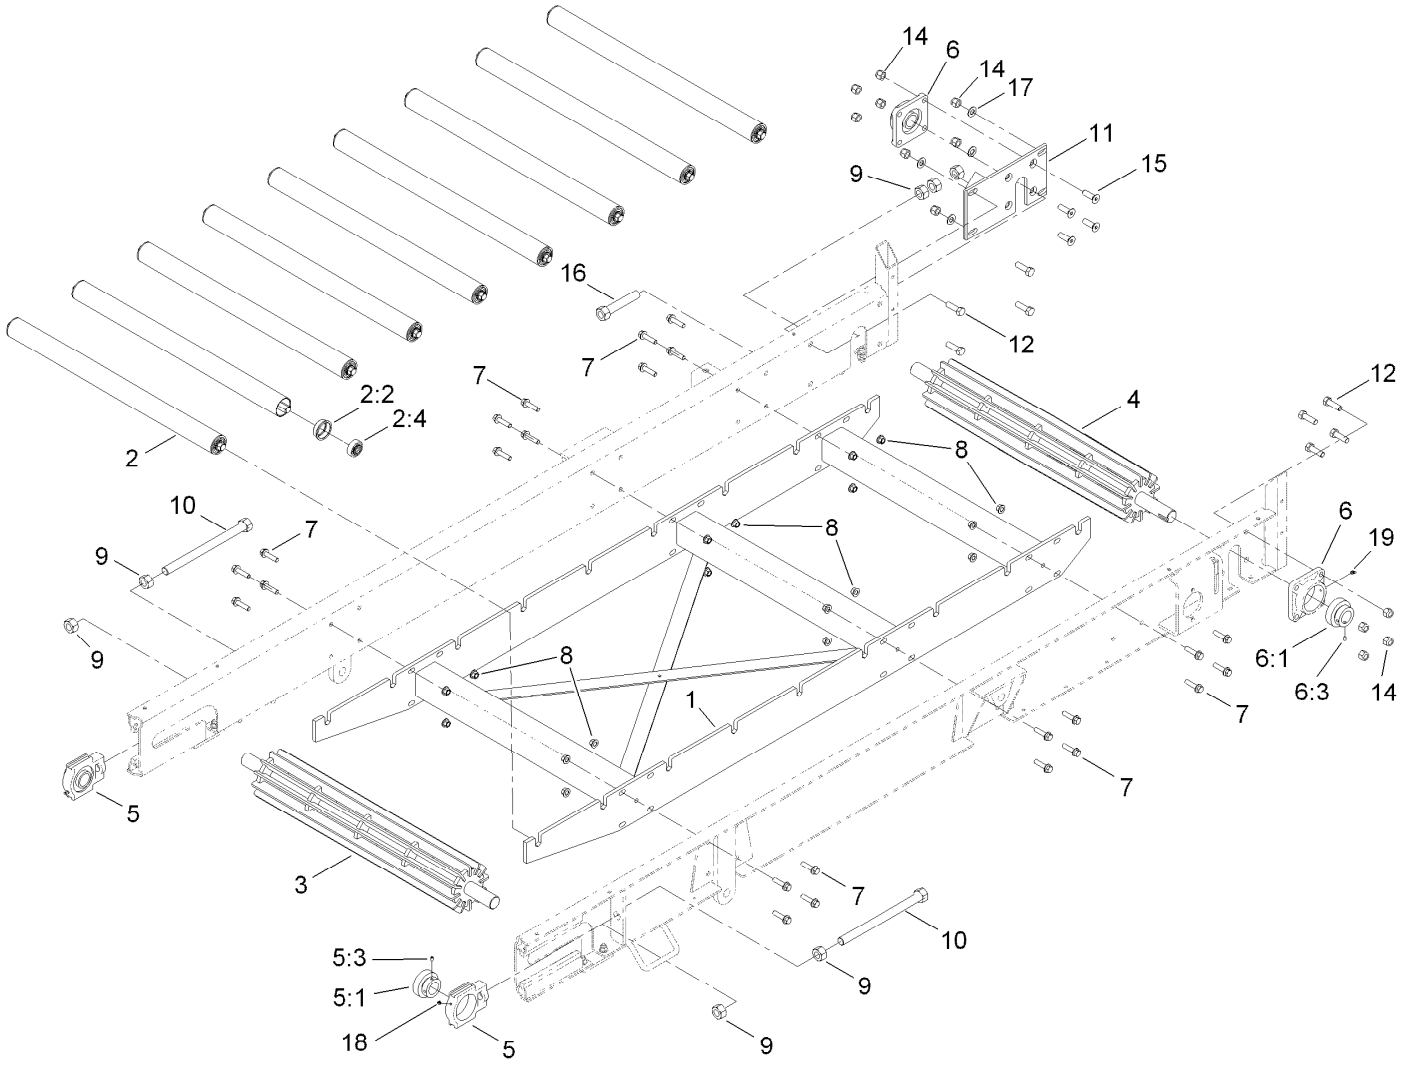

Conveyor Assembly

Ref.	Part Number	Qty.	Description
1	T36011600-01	1	Frame-Roller
2	T36011680	9	Belt Roller ASM
2:2	T36011685	2	Insert-Roller
2:4	T60111000	2	Bearing-Ball
3	T36011620-03	1	Idler Roller ASM
4	119-6892-03	1	Roller-Drive
5	T60114305	2	Take-Up Bearing ASM
5:1	120-0817	1	Bearing-Collar, Lock
5:3	3246-17	1	Setscrew-HSH
6	T60116355	2	4-Bolt Bearing ASM
6:1	120-0817	1	Bearing-Collar, Lock
6:3	3246-17	1	Setscrew-HSH


Ref.	Part Number	Qty.	Description
7	3234-27	24	Screw-HHF
8	99-5107	24	Nut-Lock
9	SG330081	7	Nut-Hex
10	T36011670	2	Rod-Tensioner
11	T36011690	1	Mounting Plate ASM
12	327-6	8	Screw-HH
14	3296-53	12	Nut-Lock, NI
15	120-0904	4	Screw-HSH
16	T36011675	1	Rod-Lock
17	3256-27	4	Washer-Flat
18	302-61	2	Fitting-Grease
19	302-10	2	Fitting-Grease

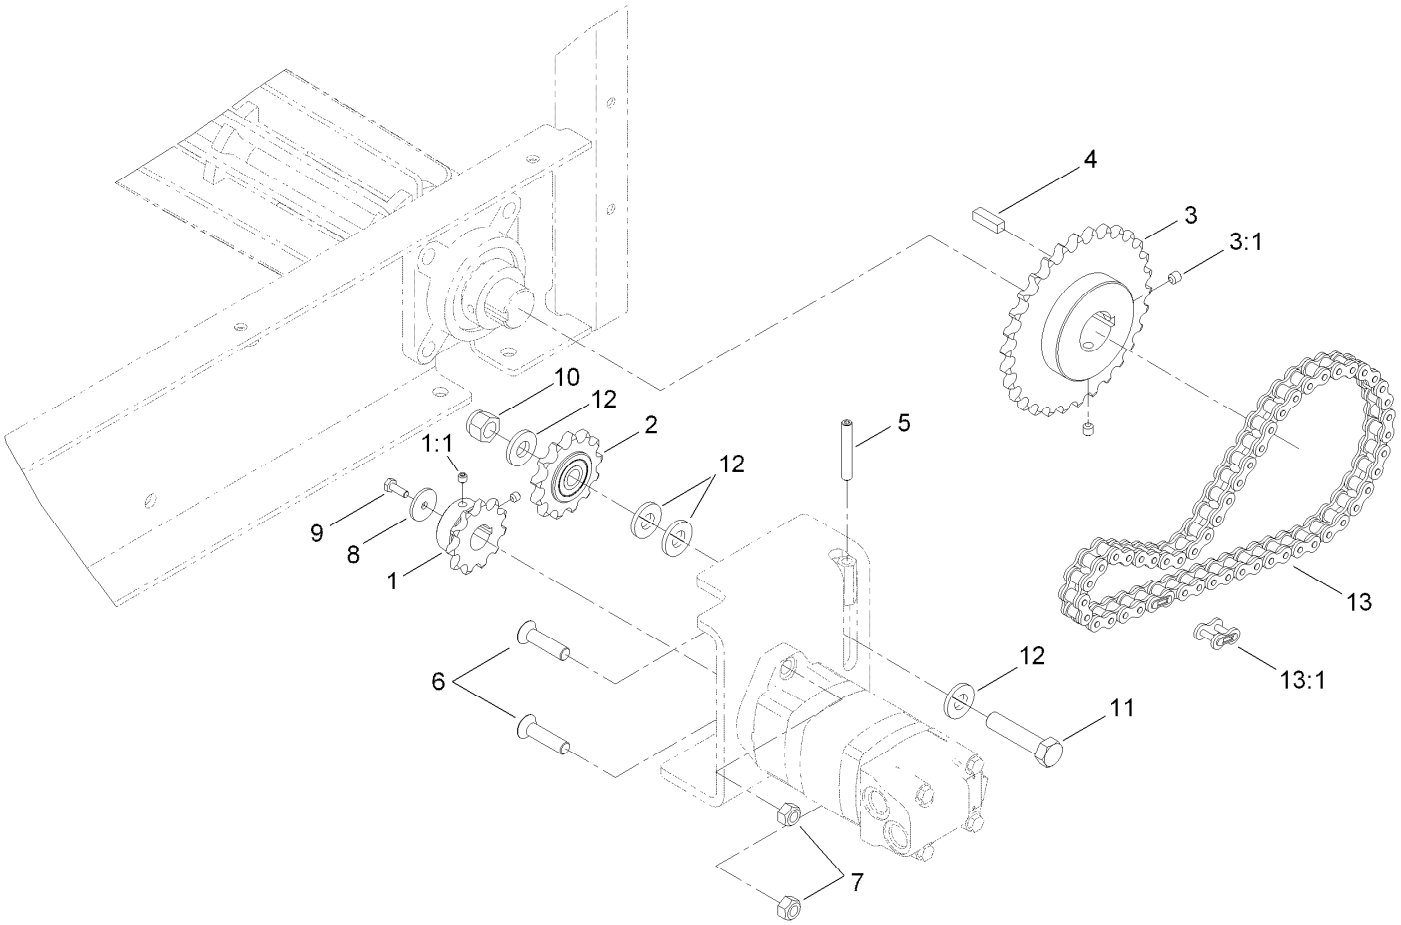

Chain Drive Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	T60135010	1	Sprocket
1:1	3246-2	2	Screw-Set, HSH
2	T60134090	1	Sprocket
3	T60135750	1	Sprocket
3:1	3247-2	2	Screw-Set, HSH
4	T36011810	1	Key
5	120-0909	1	Screw-HSH
6	120-0898	2	Screw-Fhhs


Ref.	*Part Number*	*Qty.*	*Description*
7	97-1206	2	Locknut
8	103995	1	Washer
9	321-4	1	Screw-HH
10	3296-53	1	Nut-Lock, NI
11	327-8	1	Screw-HH
12	99-7667	4	Washer-Flat
13	T36011800	1	Chain-Drive, 39 Inch
13:1	T60151016	1	Link-Connecting, #60

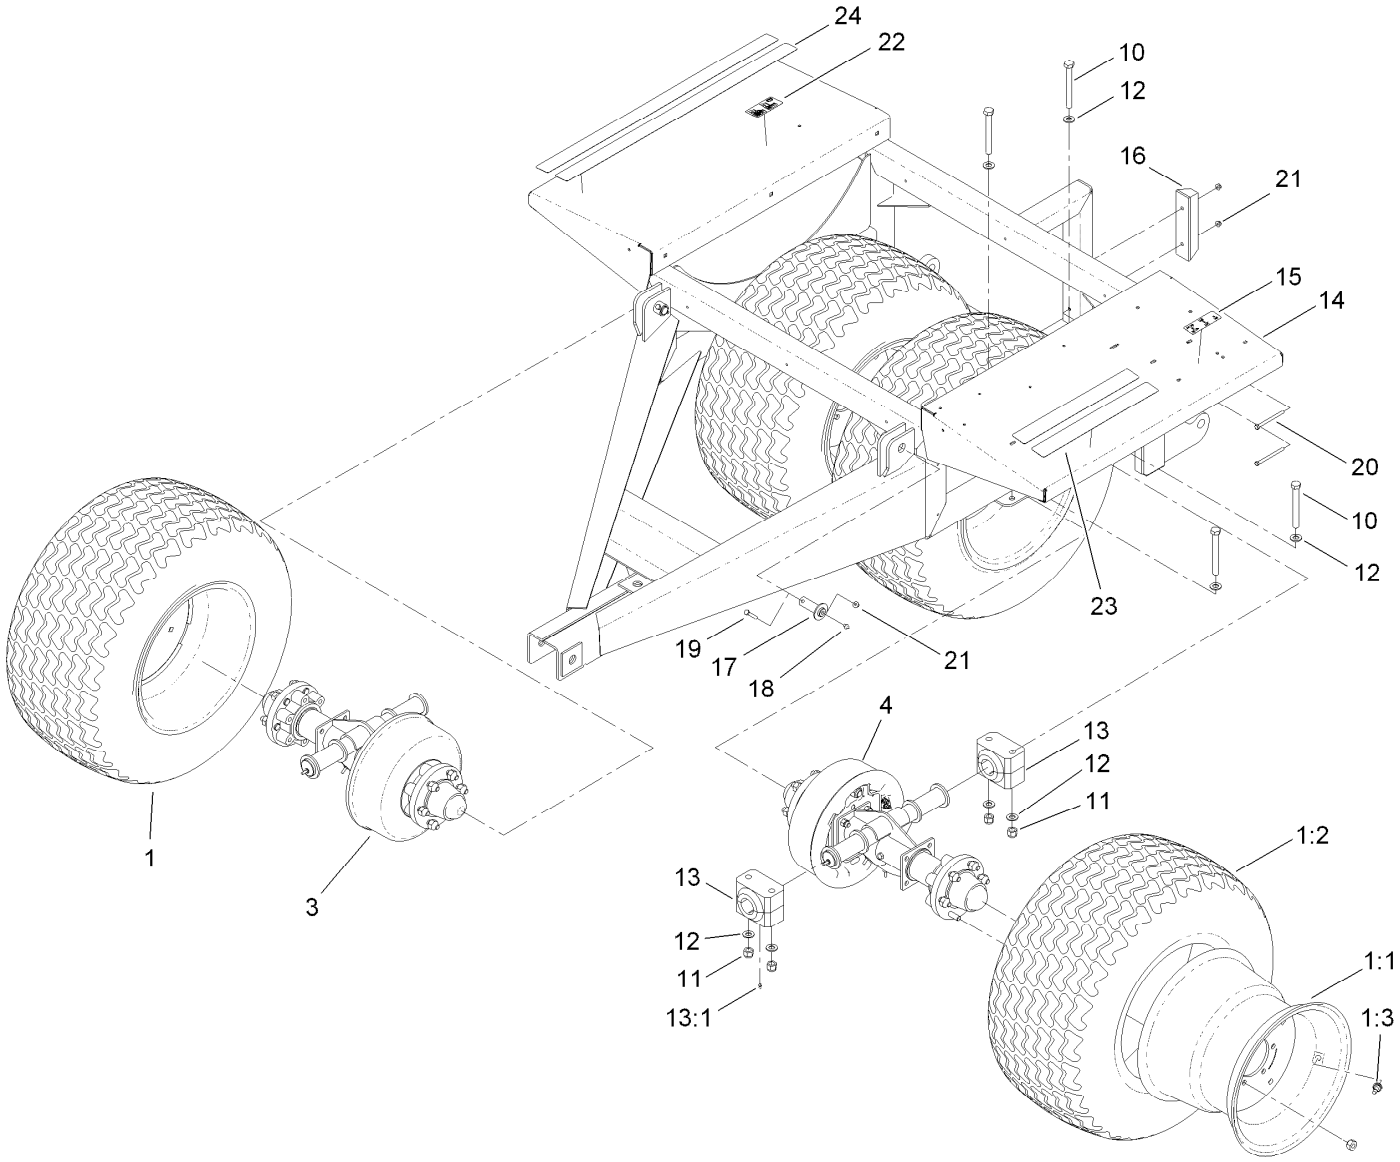

Wheel Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	T0000-6872	4	Wheel And Tire ASM
1:1	T54011022	1	Wheel-Turf
1:2	T68021100	1	Tire-Turf
1:3	232-24	1	Stem-Valve
3	120-0942	1	RH Shaft ASM
4	120-0943	1	LH Shaft ASM
10	120-0923	8	Screw-HH
11	120-0924	8	Nut-Hex
12	119-1868	16	Washer
13	T60111196	4	Bearing-Polyurethane
13:1	302-19	1	Fitting-Grease

Ref.	*Part Number*	*Qty.*	*Description*
14	T01-43164D-01	1	Frame
15	119-6823	1	Decal-Hydraulic Control
16	T62011021	1	Bumper-Rubber
17	T36012070-01	2	Pin-Hinge
18	302-2	2	Fitting-Grease
19	322-10	2	Screw-HH
20	322-19	2	Screw-HH
21	104-8300	4	Nut-HF, NI
22	119-6835	1	Decal-Jack
23	T36013050	2	Thread-Walk, Safety
24	T36013052	2	Thread-Walk, Safety

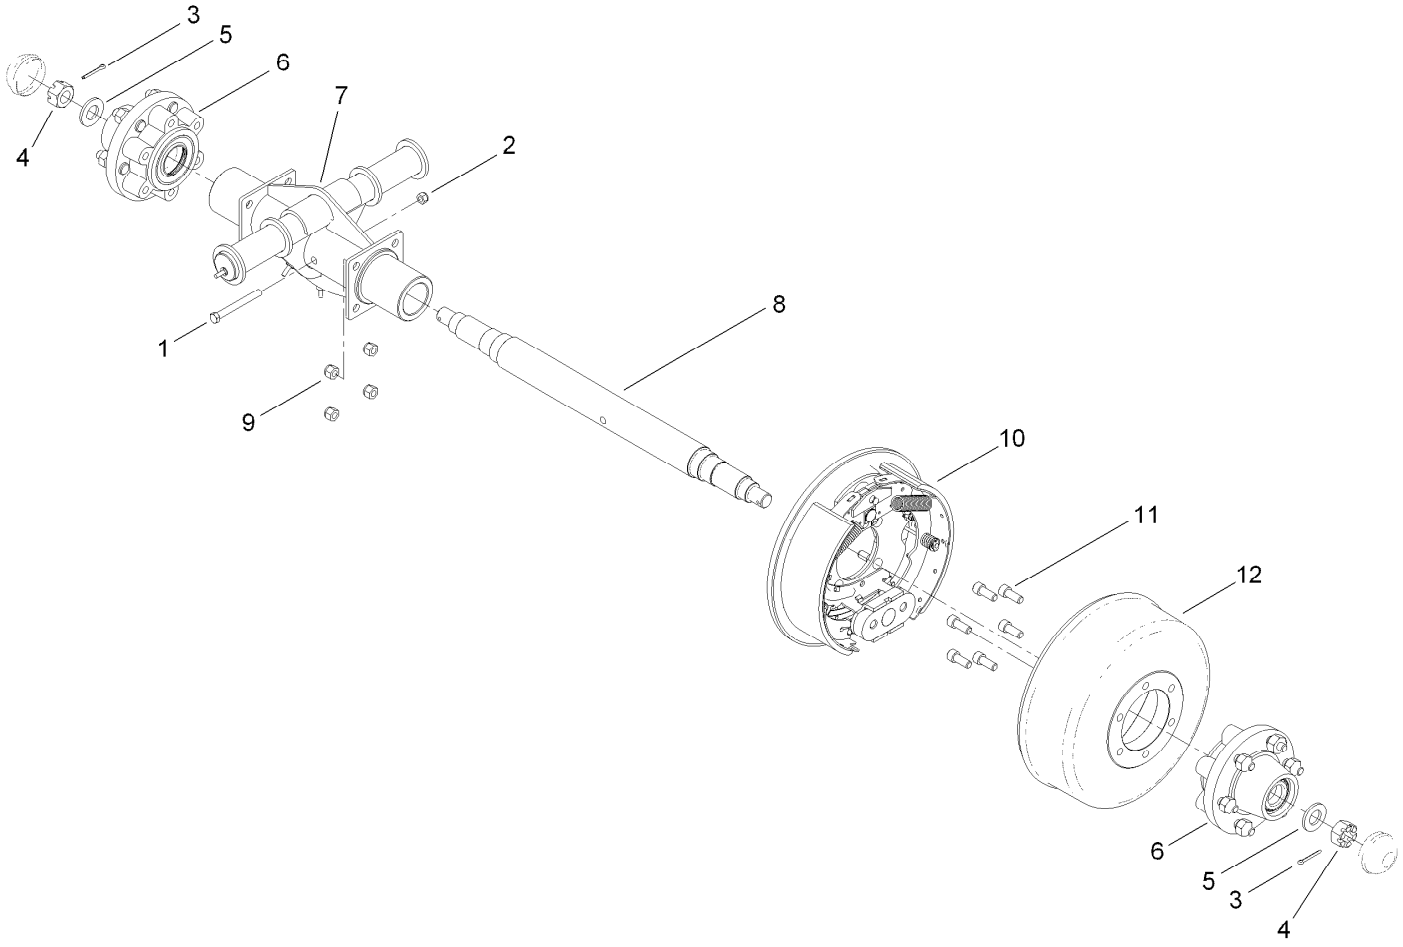


RH Shaft Assembly No. 120-0942

Ref.	*Part Number*	*Qty.*	*Description*
1	120-0922	1	Screw-HH
2	3296-76	1	Nut-Lock, NI
3	3272-23	2	Pin-Cotter
4	32136-11	2	Nut-Hex, Slot
5	T54051068	2	Washer-Spindle
6	T54031039	2	Hub ASM
7	T36012020-03	1	Walking Beam ASM
8	T54031102	1	Spindle-Double End
9	3296-19	4	Nut-Hex
10	120-0818	1	LH Brake ASM
11	120-0940	6	Screw-HSH
12	119-6871	1	Drum-Brake

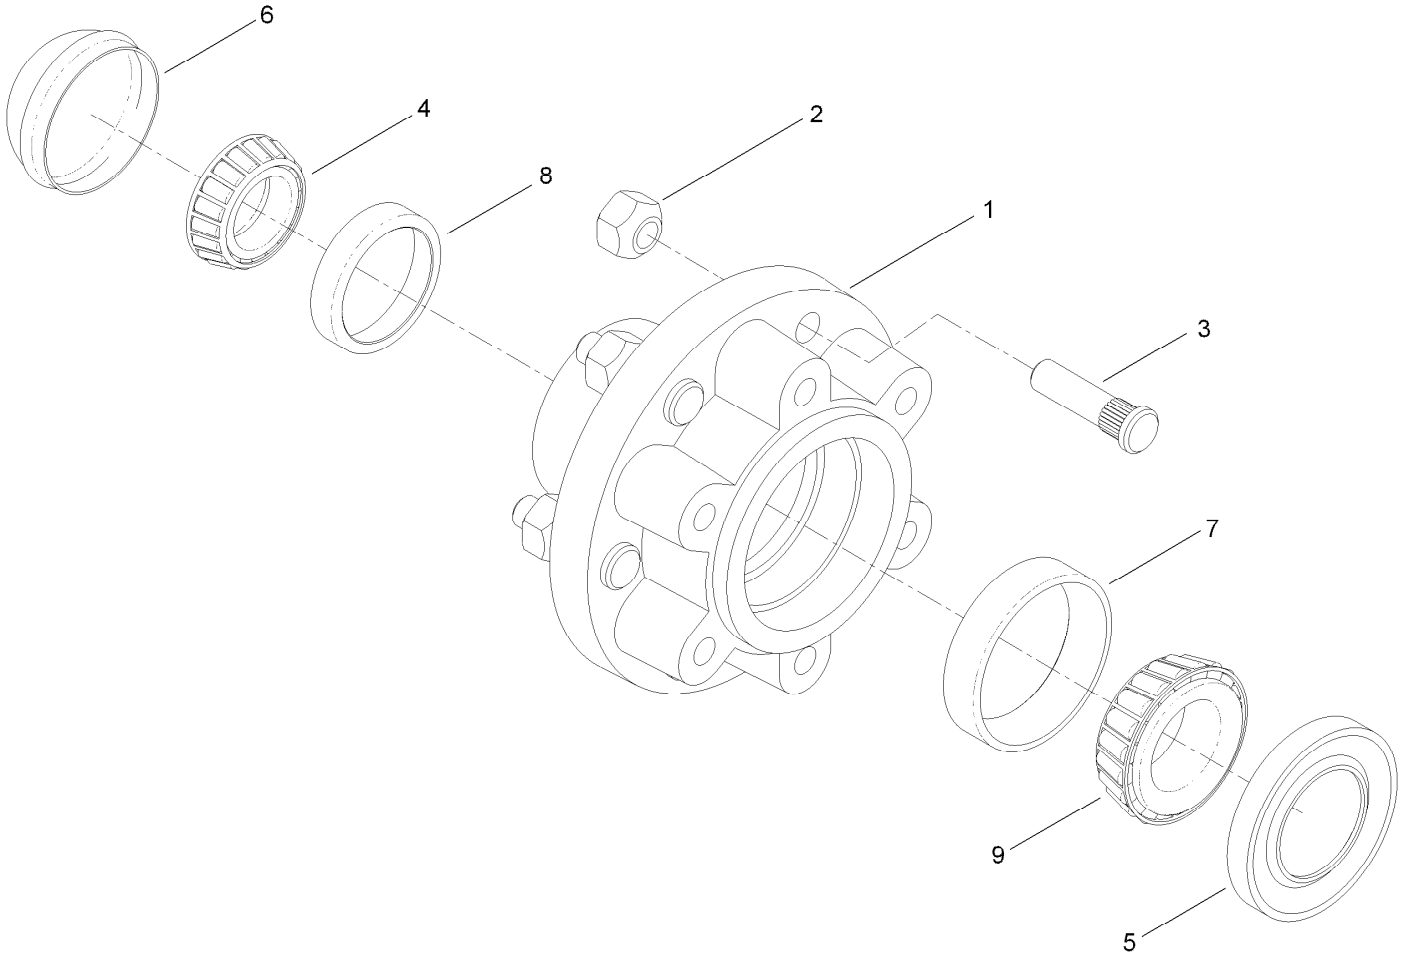


Hub Assembly No. T54031039

Ref.	*Part Number*	*Qty.*	*Description*
1	120-0911	1	Hub-Wheel
2	T54031040	6	Nut-Wheel
3	T54031042	6	Stud-Wheel
4	T54051010	1	Bearing-Hub, Outer
5	T54051019	1	Seal-Bearing
6	T54051026	1	Cap-Hub (5000/6000 Lb)
7	T54051037	1	Race-Bearing, Inner
8	T54051042	1	Races-Bearing, Outer
9	T54051100	1	Bearing-Hub, Inner

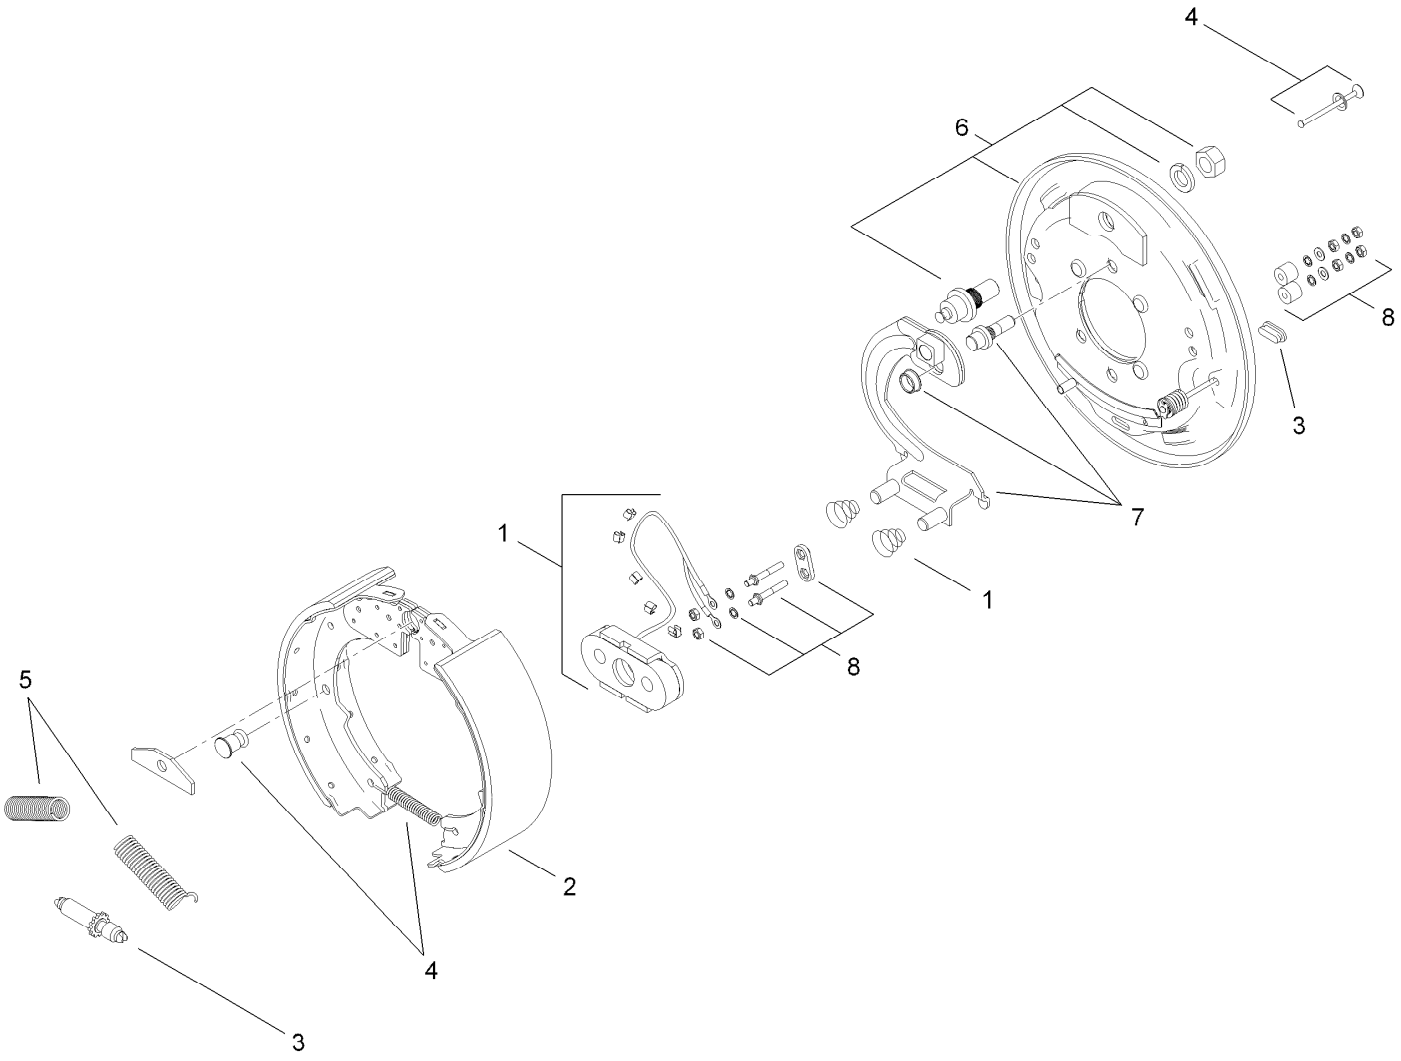


LH Brake Assembly No. 120-0818

Ref.	*Part Number*	*Qty.*	*Description*
1	120-0822	1	Magnet Kit
2	120-0823	1	Shoe And Lining Kit
3	120-0824	1	Adjuster Kit
4	120-0825	1	Hold Down Kit
5	120-0826	1	Shoe Return Spring Kit
6	120-0827	1	Backing Plate Kit
7	120-0829	1	LH Lever Arm Kit
8	120-0830	1	Terminal Assembly Kit

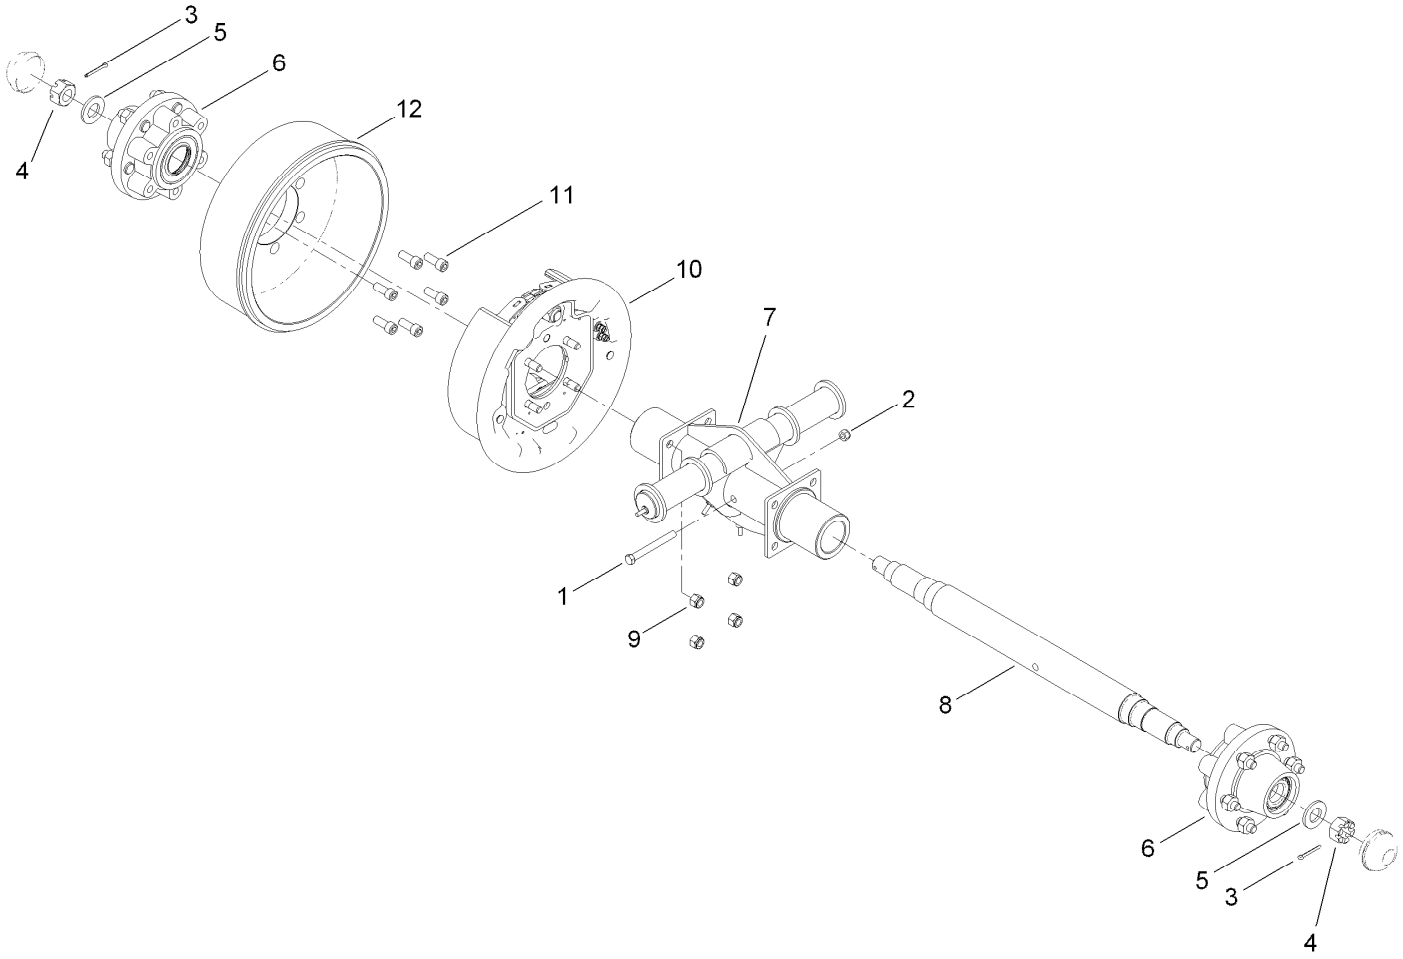


LH Shaft Assembly No. 120-0943

Ref.	*Part Number*	*Qty.*	*Description*
1	120-0922	1	Screw-HH
2	3296-76	1	Nut-Lock, NI
3	3272-23	2	Pin-Cotter
4	32136-11	2	Nut-Hex, Slot
5	T54051068	2	Washer-Spindle
6	T54031039	2	Hub ASM
7	T36012020-03	1	Walking Beam ASM
8	T54031102	1	Spindle-Double End
9	3296-19	4	Nut-Hex
10	120-0819	1	RH Brake ASM
11	120-0940	6	Screw-HSH
12	119-6871	1	Drum-Brake

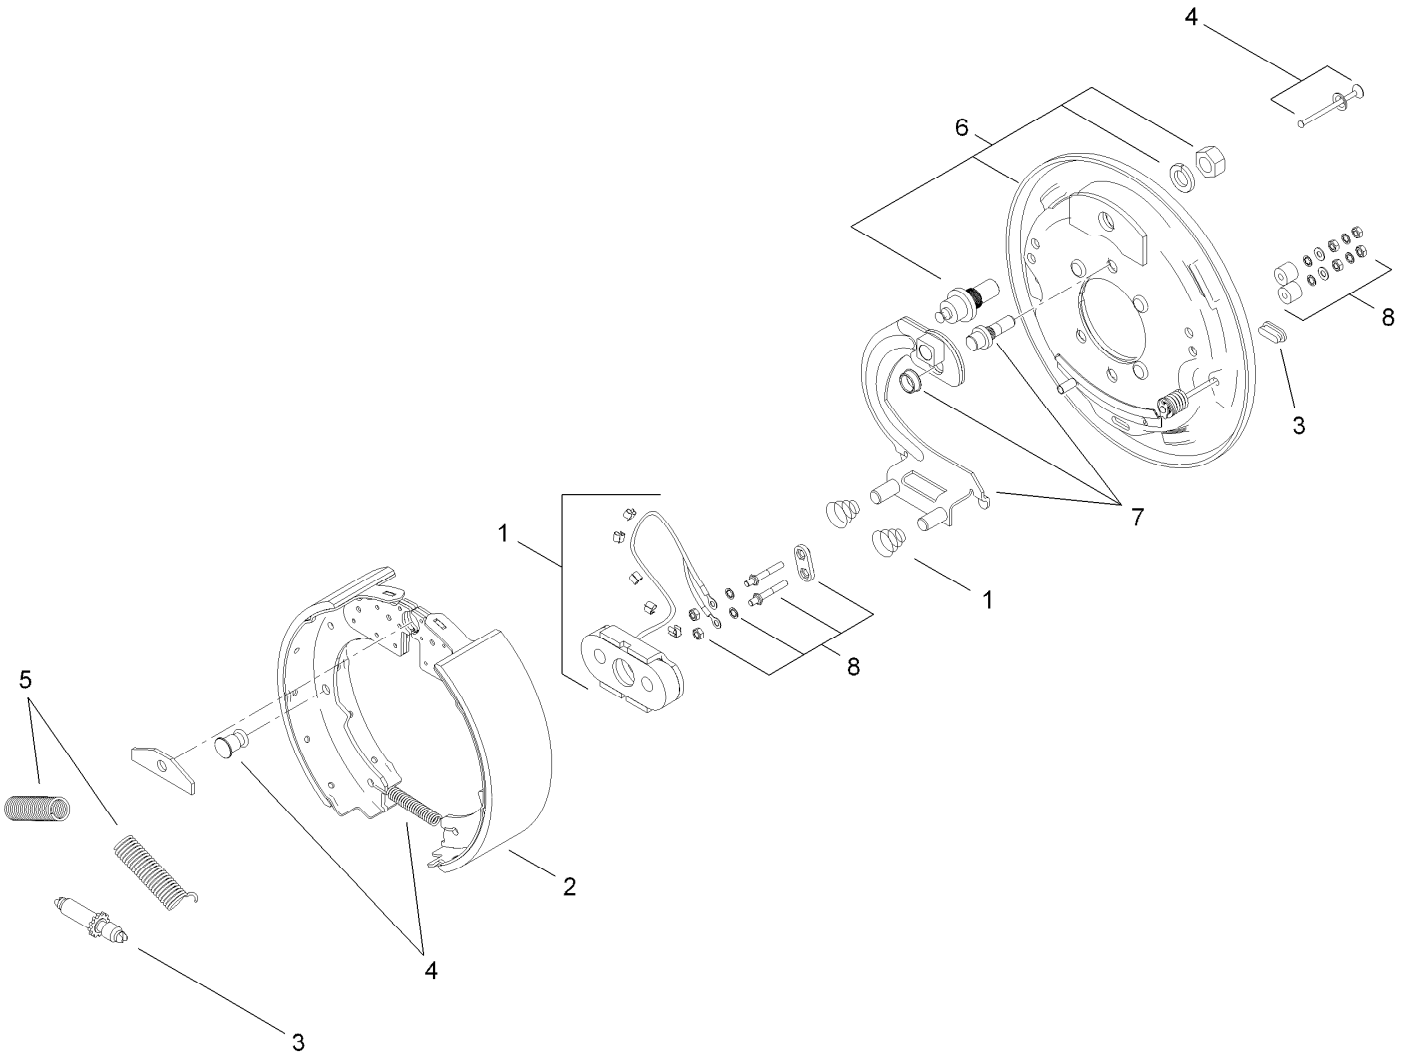

RH Brake Assembly No. 120-0819


Ref.	*Part Number*	*Qty.*	*Description*
1	120-0822	1	Magnet Kit
2	120-0823	1	Shoe And Lining Kit
3	120-0824	1	Adjuster Kit
4	120-0825	1	Hold Down Kit
5	120-0826	1	Shoe Return Spring Kit
6	120-0827	1	Backing Plate Kit
7	120-0828	1	RH Lever Arm Kit
8	120-0830	1	Terminal Assembly Kit

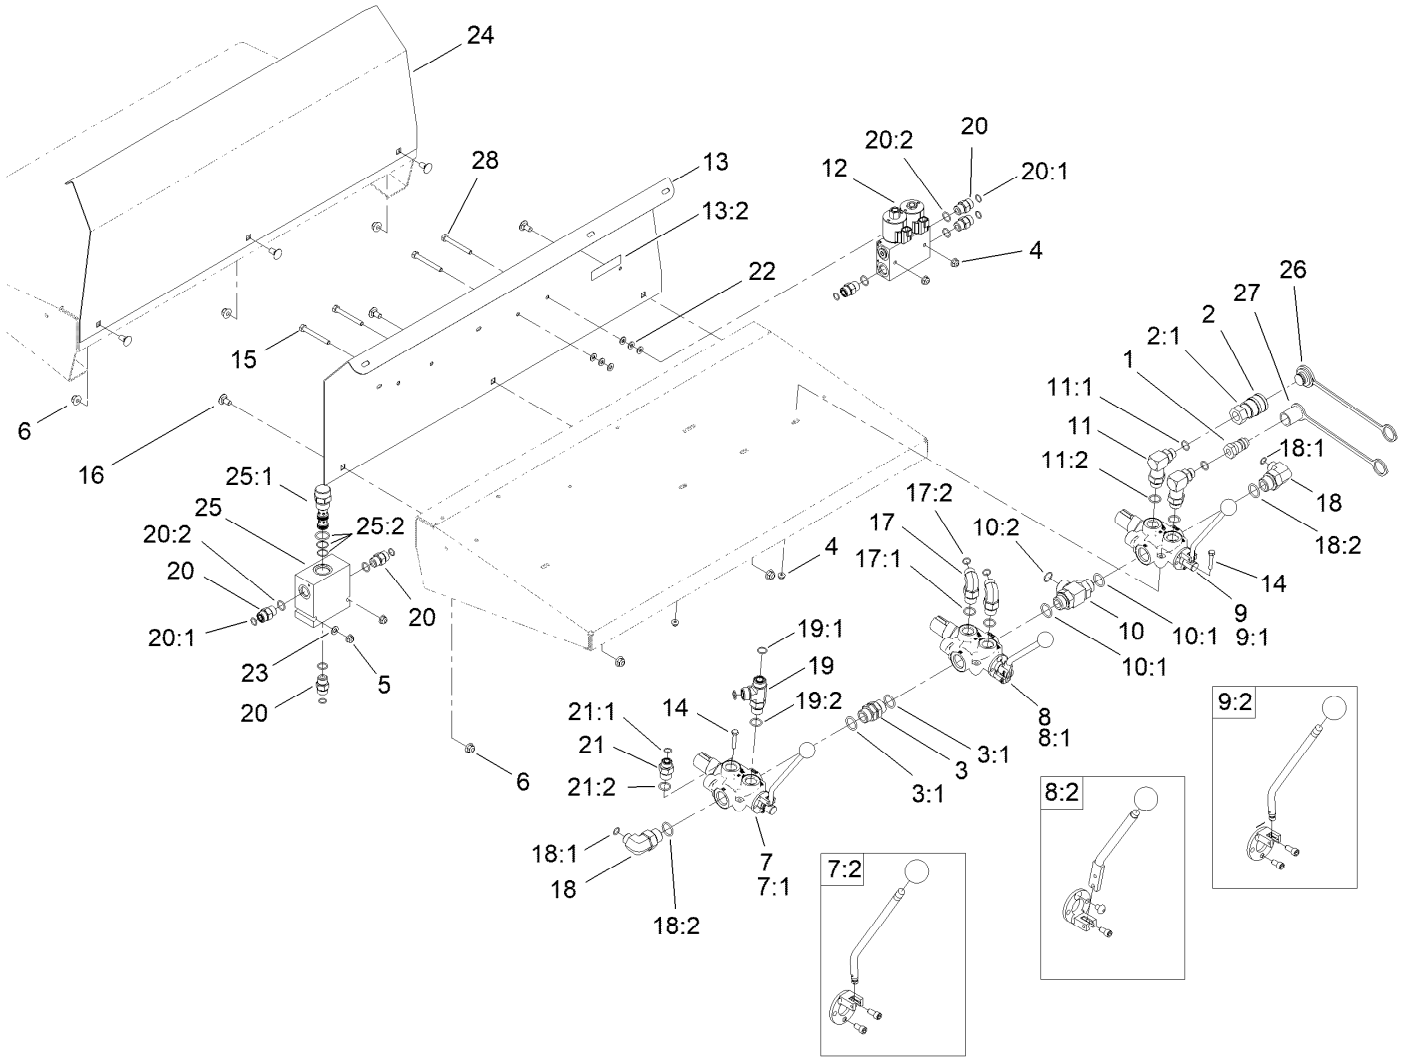

Hydraulic Valve and Manifold Assembly

Ref.	Part Number	Qty.	Description
1	98-4698	1	Male-Disconnect, Quick
2	98-4699	1	Female-Disconnect, Quick
2:1	100-4165	1	Seal Kit
3	98-9906	1	Fitting-Thread, Straight
3:1	237-81	2	O-Ring
4	104-7201	4	Nut-HF, NI
5	104-8300	4	Nut-HF, NI
6	104-8301	6	Nut-HF, NI
7	161-8381	1	Hydraulic Valve ASM
7:1	125-0119	1	Kit-Seal
7:2	161-8384	1	Kit-Lever, Valve
8	161-8382	1	Hydraulic Valve ASM
8:1	125-0119	1	Kit-Seal
8:2	161-8385	1	Kit-Lever, Valve
9	161-8383	1	Hydraulic Valve ASM
9:1	125-0119	1	Kit-Seal
9:2	161-8384	1	Kit-Lever, Valve
10	120-0844	1	Fitting-Tee
10:1	237-81	2	O-Ring
10:2	237-58	1	O-Ring
11	120-0847	2	Fitting-Elbow-90


Ref.	Part Number	Qty.	Description
11:1	237-79	1	O-Ring
11:2	237-80	1	O-Ring
12	125-0149	1	Conveyor Belt Manifold ASM
13	120-0921	1	LH Fender Guard ASM
13:2	119-0217	1	Decal-Danger
14	321-43	2	Capscrew
15	322-13	2	Screw-HH
16	3231-1	6	Screw-CARR
17	340-105	2	Fitting-Elbow, 90 DEG
17:1	237-80	1	O-Ring
17:2	237-30	1	O-Ring
18	340-131	2	Fitting-HYD, 90 DEG
18:1	237-30	1	O-Ring
18:2	237-81	1	O-Ring
19	340-22	1	Fitting-Tee
19:1	237-65	2	O-Ring
19:2	237-80	1	O-Ring
20	340-4	6	Fitting-Straight
20:1	237-30	1	O-Ring
20:2	237-79	1	O-Ring

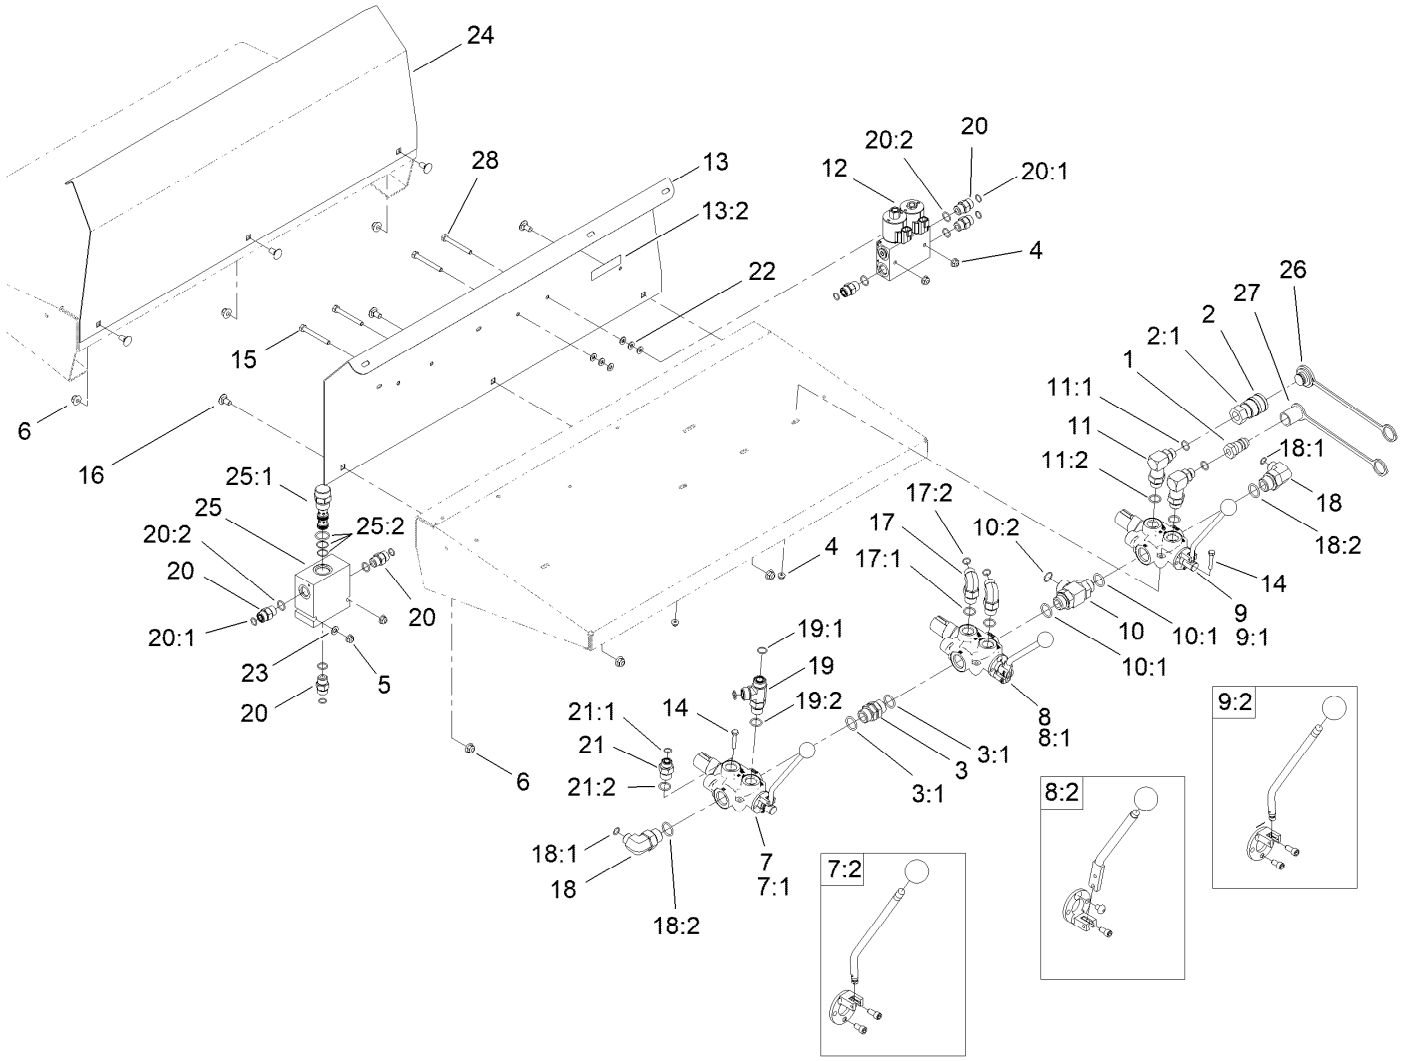

Hydraulic Valve and Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
21	340-6	1	Fitting-Straight
21:1	237-30	1	O-Ring
21:2	237-80	1	O-Ring
22	3256-22	6	Washer-Flat
23	3256-23	2	Washer-Plain
24	T36011720-01	1	Guard-Fender, RH
25	T56051020	1	Valve-HYD


Ref.	Part Number	Qty.	Description
25:1	120-0851	1	Valve-Cartridge, Pressure Comp
25:2	114-5515	1	Seal Kit
26	T56152150	1	Plug-Quick Connect
27	T56152152	1	Cap-Connect, Quick
28	321-18	2	Screw-HH

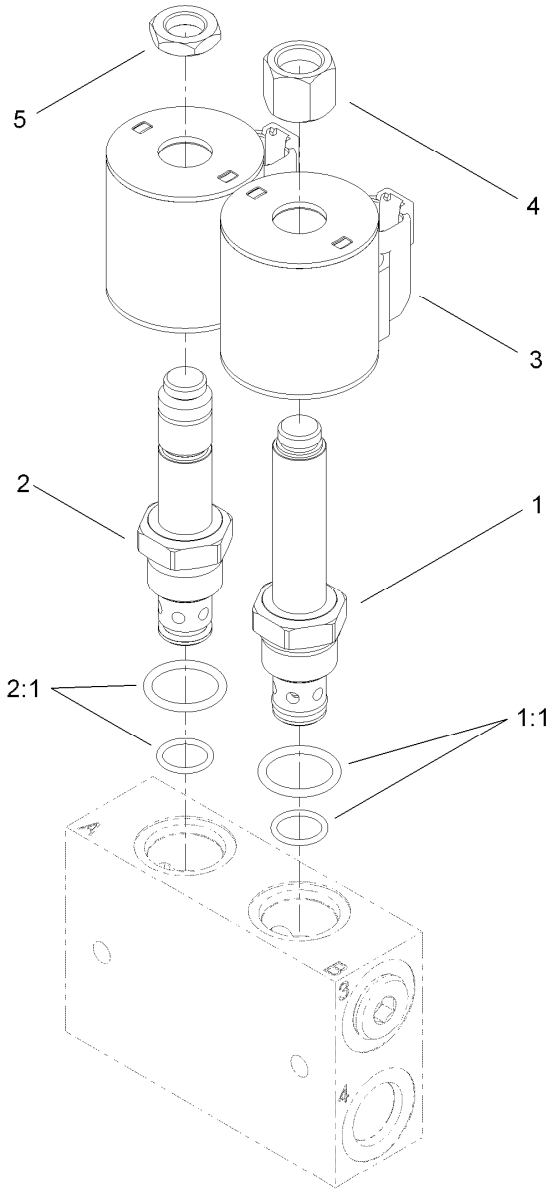

Hydraulic Valve Assembly No. 120-0850


Ref.	*Part Number*	*Qty.*	*Description*
1	105-9158	1	Valve-Solenoid, N.O.
1:1	105-9159	1	Seal Kit ●
2	120-0913	1	Valve-Solenoid
2:1	105-9159	1	Seal Kit
3	115-3021	2	Coil-12V
4	110-2635	1	Nut-Coil
5	110-2634	1	Nut-Coil

● Not illustrated

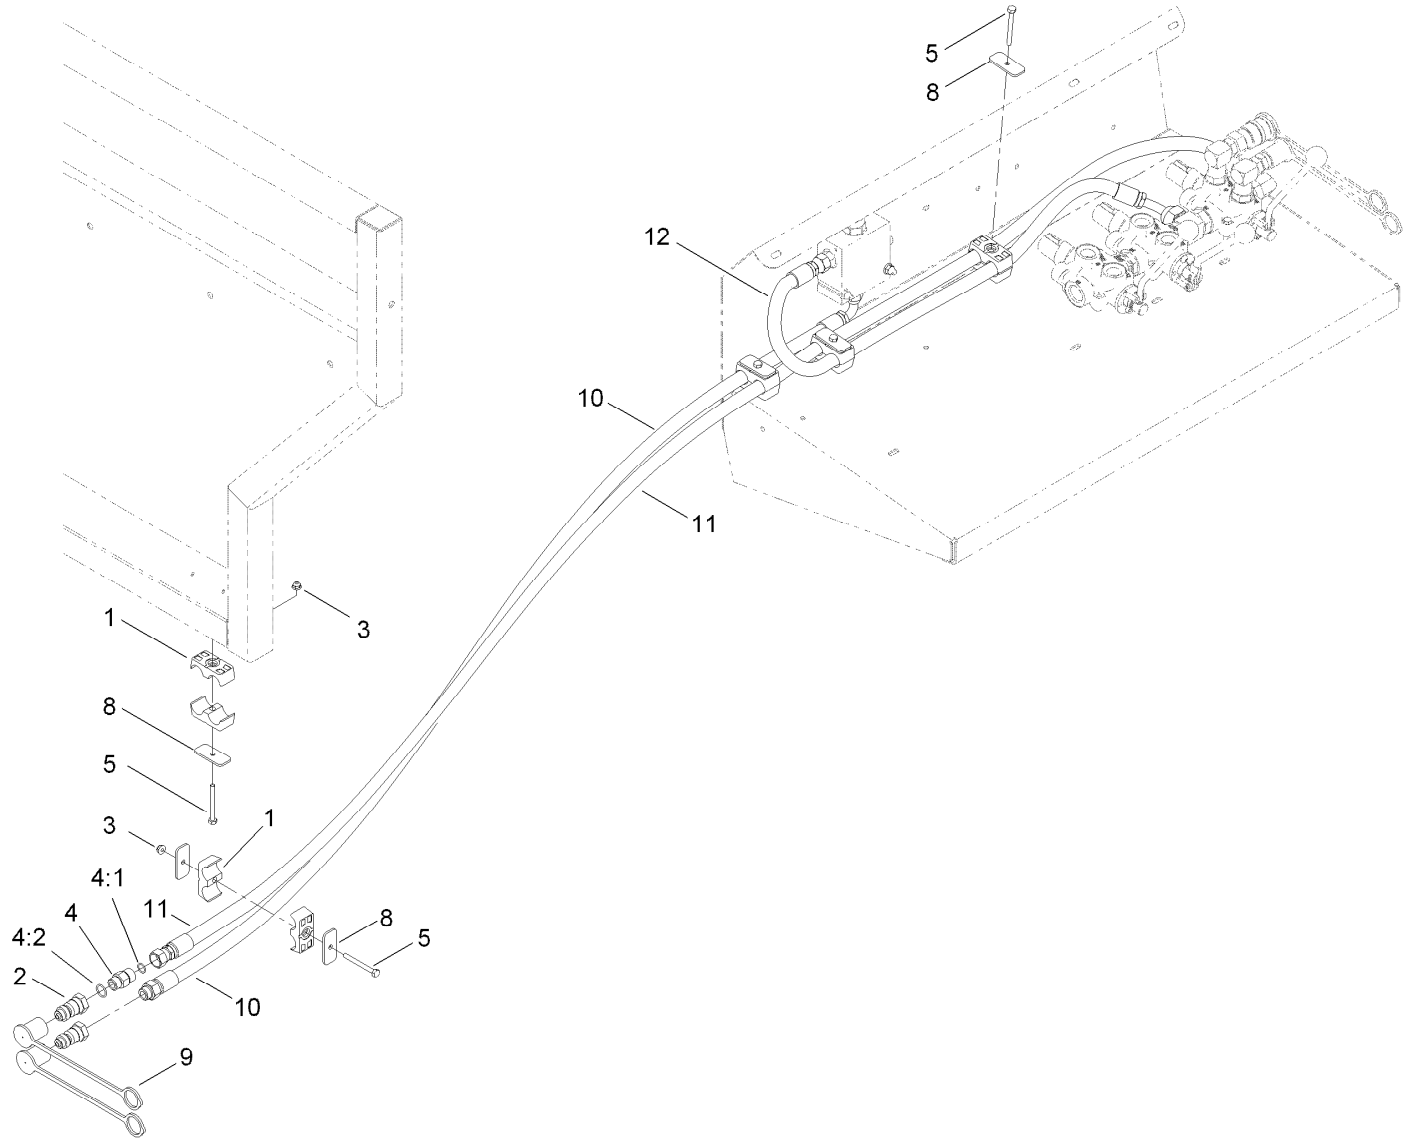

Hydraulic Hose and Clamp Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	56-7974	10	Clamp-Tube
2	98-4698	2	Male-Disconnect, Quick
3	104-7201	5	Nut-HF, NI
4	119-6898	1	Valve-Check, HYD
4:1	237-30	1	O-Ring
4:2	237-79	1	O-Ring
5	321-15	5	Screw-HH
8	T36033040	6	Plate-Clamp
9	T56152152	2	Cap-Connect, Quick
10	120-0862	1	Hose-HYD
11	120-0863	1	Hose-HYD
12	120-0874	1	Hose-HYD

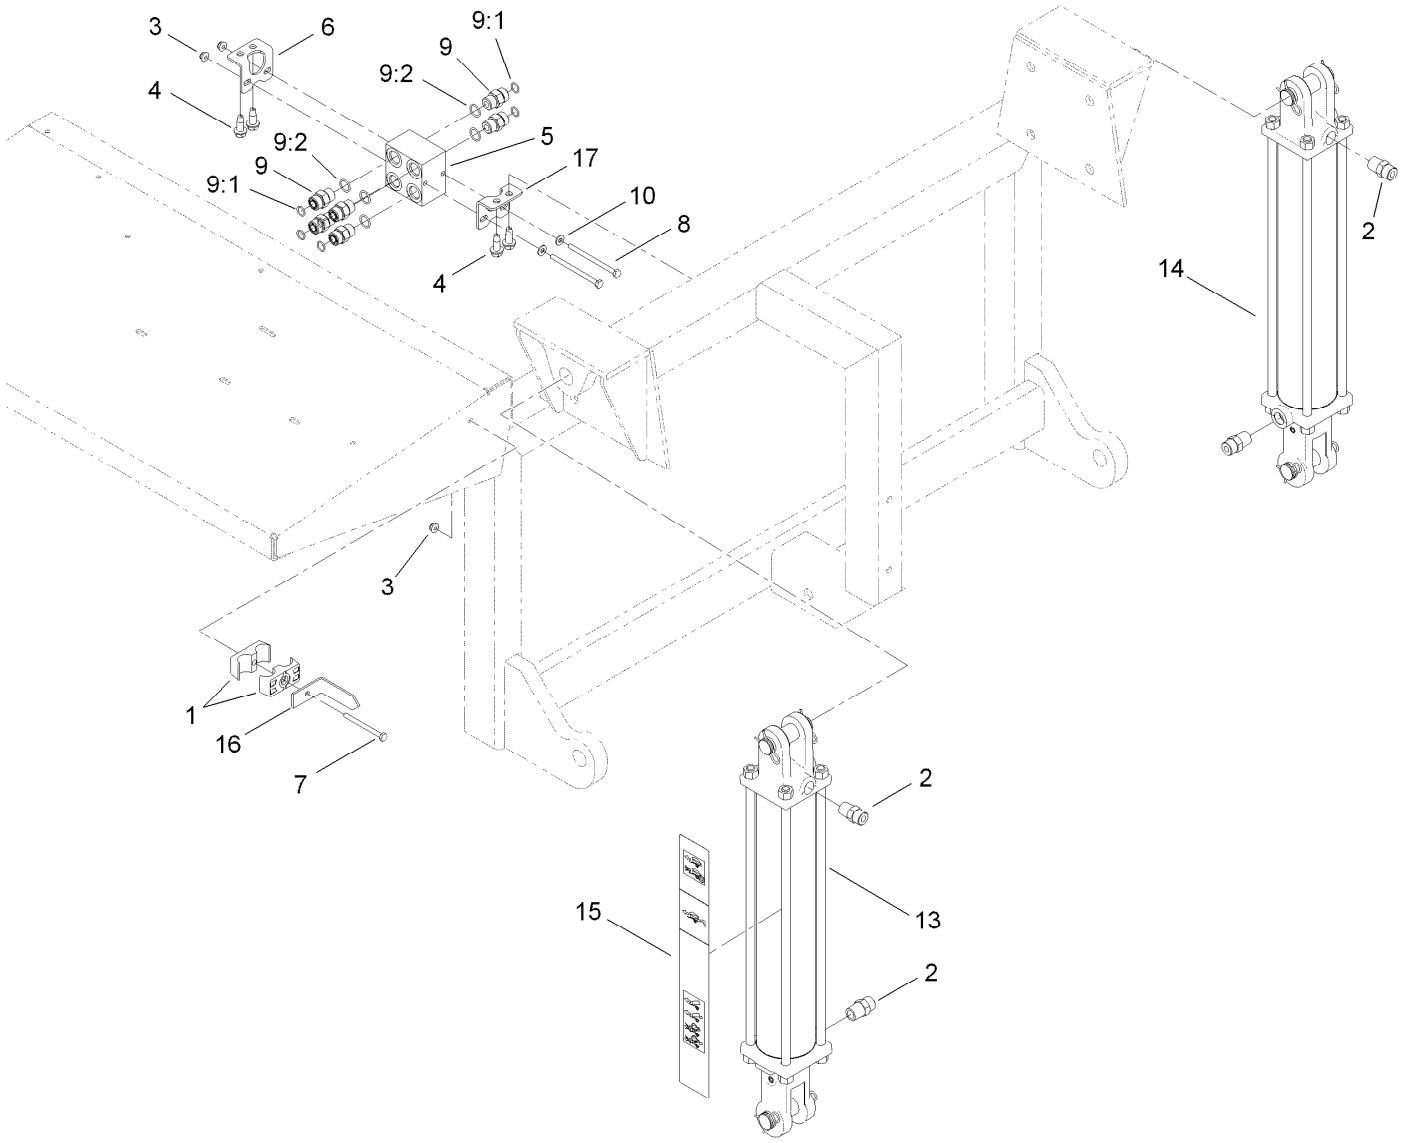

Hydraulic Cylinder and Junction Box Manifold Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	56-7974	2	Clamp-Tube
2	93-5107	4	Fitting-Adapter
3	104-7201	3	Nut-HF, NI
4	105-6245	4	Screw-Tapping
5	120-0848	1	Manifold-Junction Block
6	120-0875-03	1	Bracket-Mounting, Manifold
7	321-23	1	Screw-HH
8	321-28	2	Screw-HH
9	340-4	6	Fitting-Straight

Ref.	*Part Number*	*Qty.*	*Description*
9:1	237-30	1	O-Ring
9:2	237-79	1	O-Ring
10	3256-22	2	Washer-Flat
13	T56071160	1	HYD Cylinder ASM
14	T56071170	1	HYD Cylinder ASM
15	119-6863	1	Decal-Load Range
16	T36011570	1	Bar-Indicator, Lift
17	120-0983-03	1	Bracket-Manifold

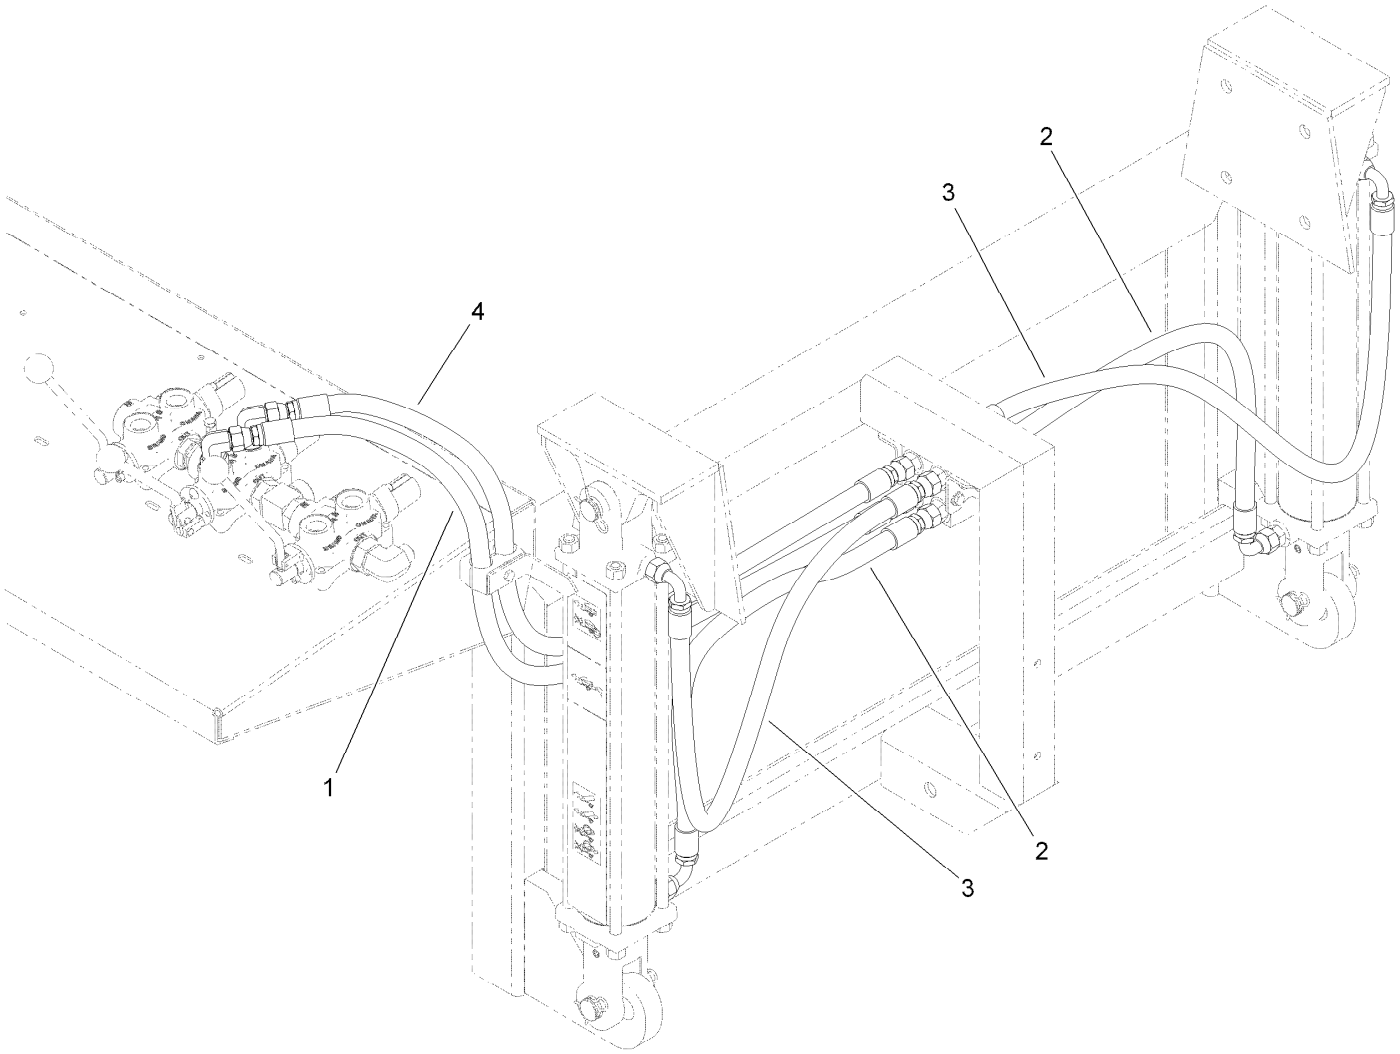

Hydraulic Hose Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	120-0980	1	Hose-HYD
2	120-0869	2	Hose-HYD
3	120-0870	2	Hose-HYD
4	120-0981	1	Hose-HYD

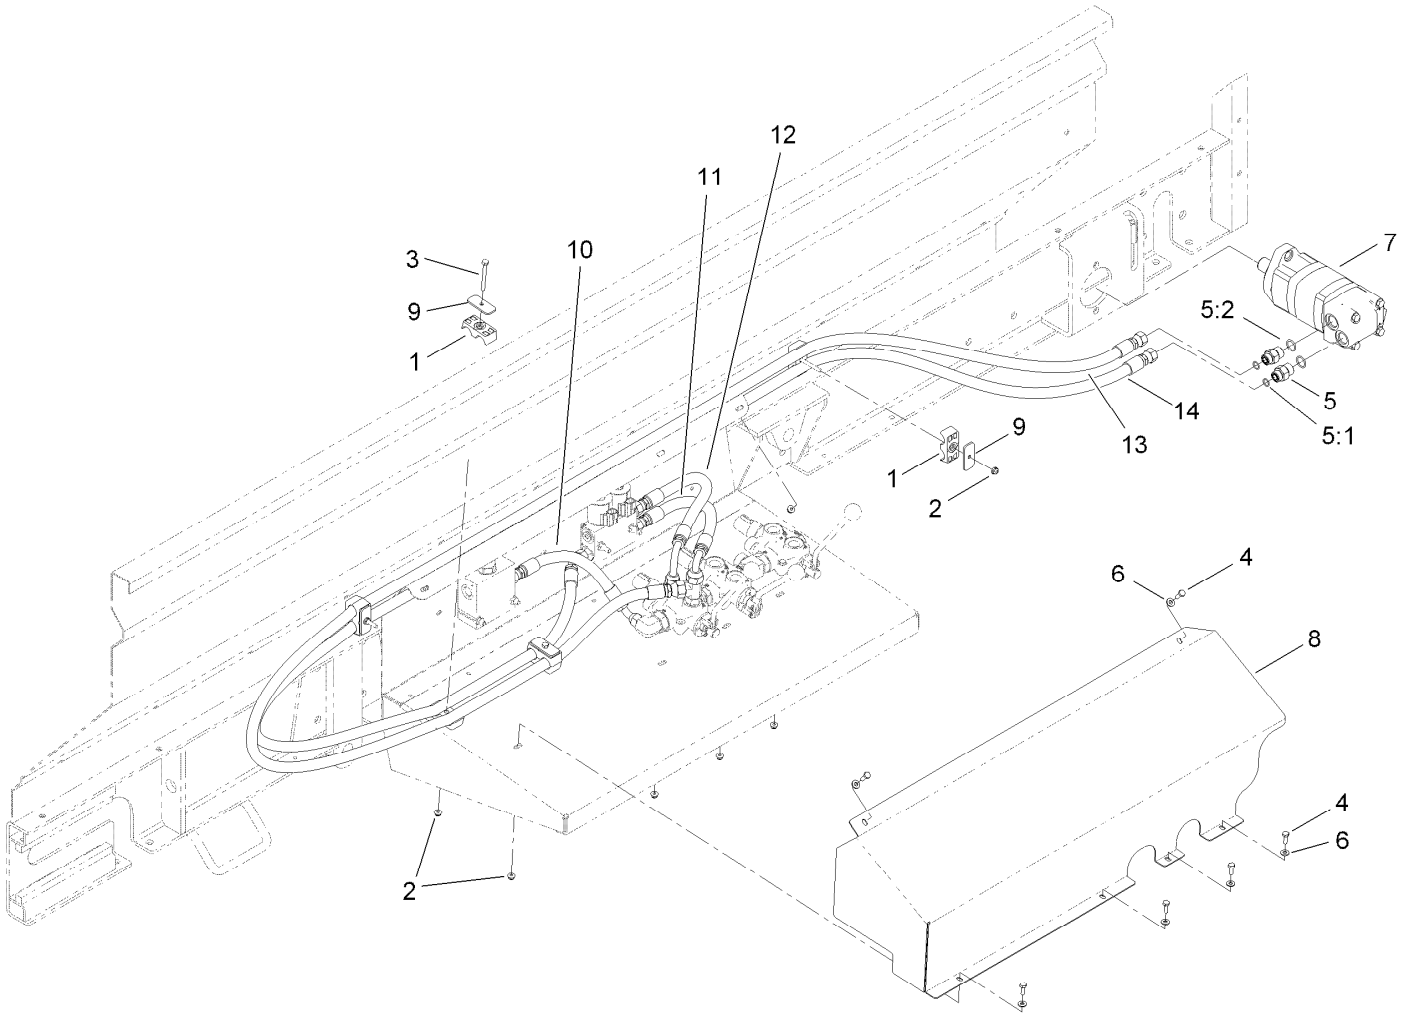

Hydraulic Guard Box Assembly

Ref.	Part Number	Qty.	Description
1	56-7974	8	Clamp-Tube
2	104-7201	10	Nut-HF, NI
3	321-15	2	Screw-HH
4	321-4	6	Screw-HH
5	340-6	3	Fitting-Straight
5:1	237-30	1	O-Ring
5:2	237-80	1	O-Ring
6	3256-22	6	Washer-Flat


Ref.	Part Number	Qty.	Description
7	T0000-5303	1	HYD Motor ASM
8	T36011770-01	1	Guard-Hydraulic
9	T36033040	4	Plate-Clamp
10	120-0858	1	Hose-HYD
11	120-0860	1	Hose-HYD
12	120-0861	1	Hose-HYD
13	120-0864	1	Hose-HYD
14	119-4591	1	Hose-HYD

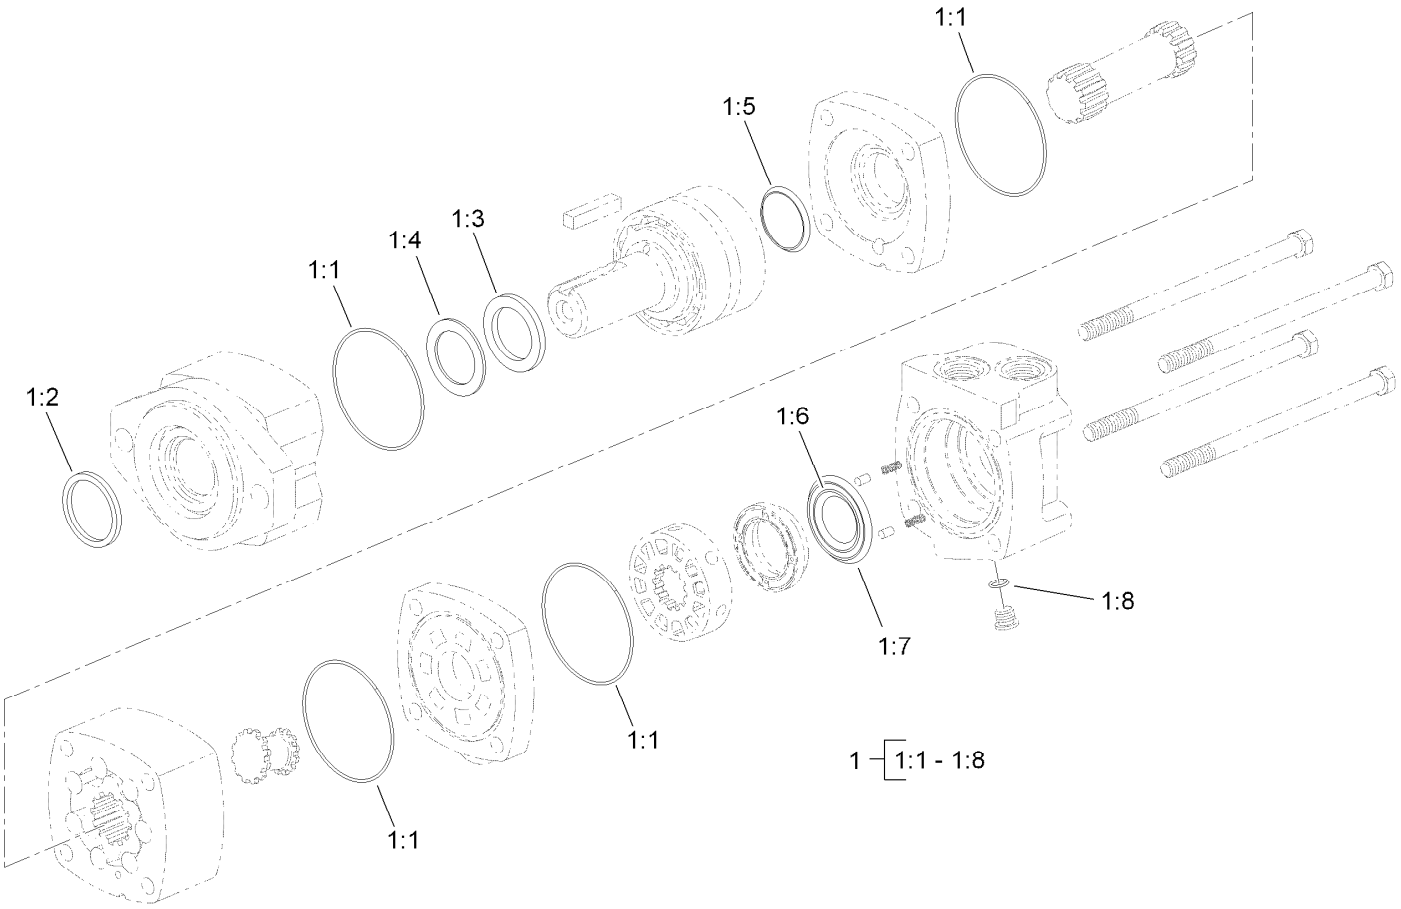

Hydraulic Motor Assembly No. T0000-5303


Ref.	*Part Number*	*Qty.*	*Description*
1	56-6890	1	Seal Kit
1:1		4	Ring-Retaining ●
1:2		1	Seal-Exclusion, Shaft ●
1:3		1	Seal-Shaft ●
1:4		1	Ring-Back-Up ●
1:5		1	Seal-Face, Shaft ●
1:6		1	Seal-Face, Inner ●
1:7		1	Seal-Face, Outer ●
1:8		1	Ring-Retaining ●

● Not serviced separately

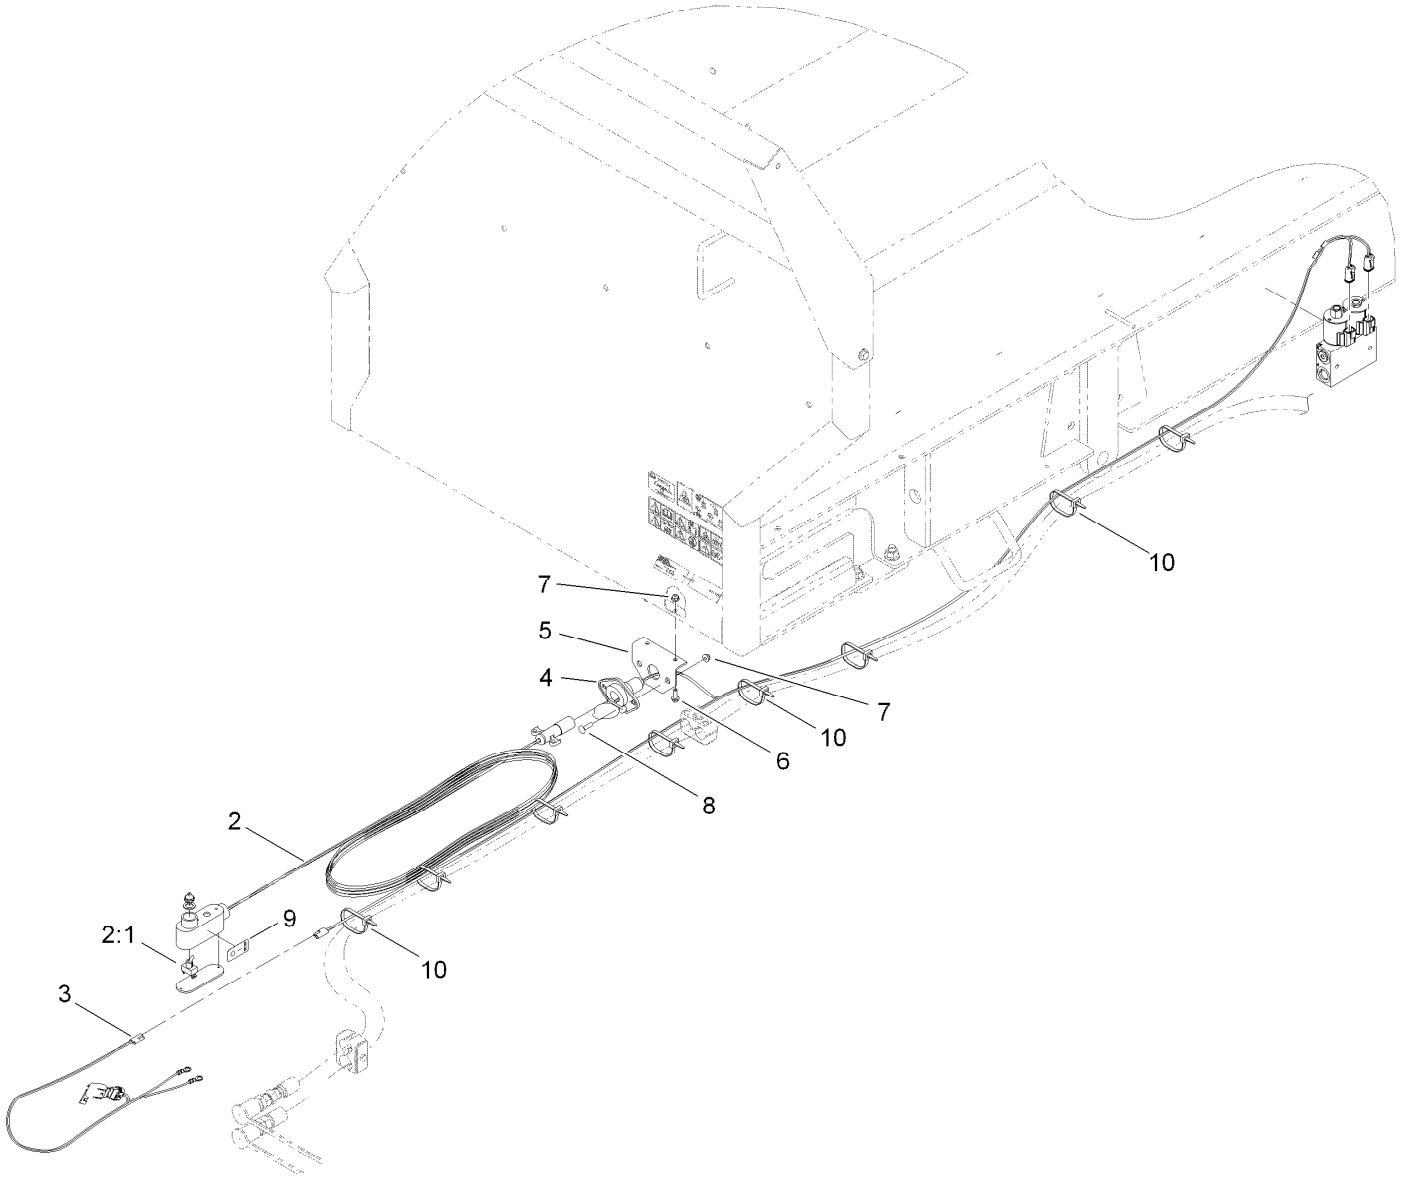

Electrical Assembly

Ref.	*Part Number*	*Qty.*	*Description*
2	120-0801	1	Pendant ASM
2:1	119-7551	1	Switch-Toggle, 2-Way
3	120-0852	1	Harness-Wire, Battery
4	120-0853	1	Harness-Wire, Rear
5	T36016086-01	1	Bracket-Socket
6	115-5103	2	Screw-HHF
7	104-7201	4	Nut-HF, NI
8	3229-2	2	Screw-CARR
9	119-6822	1	Decal-Floor Conveyor
10	3290-378	10	Tie-Cable

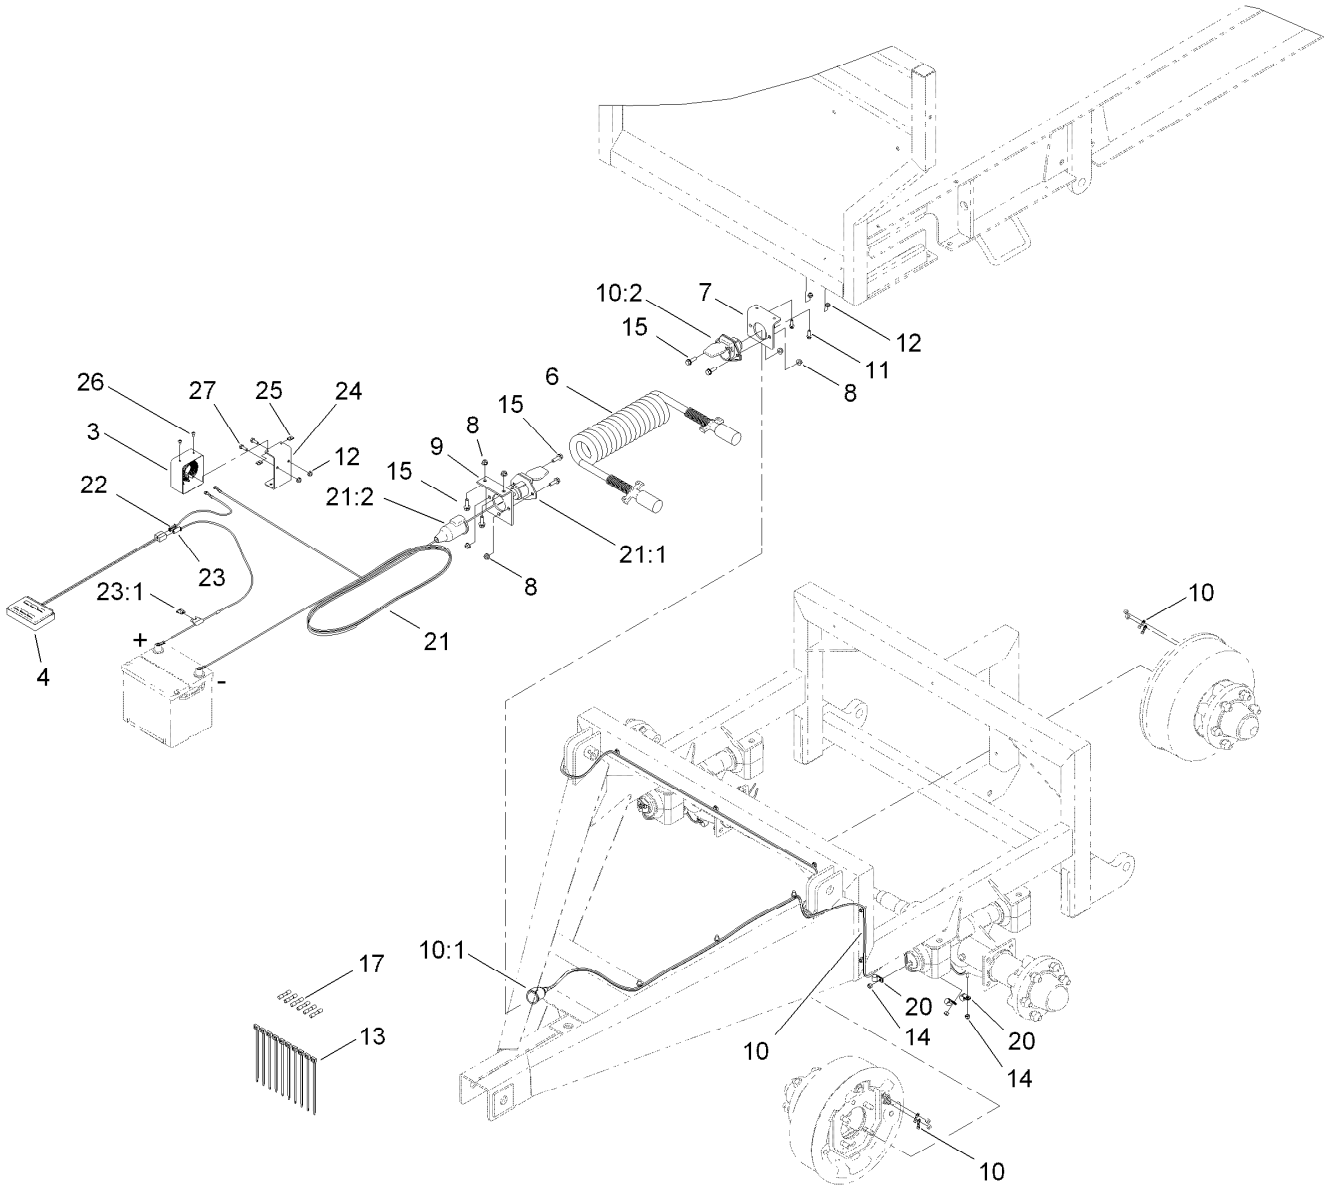

Brake Assembly

Ref.	Part Number	Qty.	Description
3	T54085020	1	Control-Load, Electric Brakes
4	T54085030	1	Control-Foot, Electric Brakes
6	T58071132	1	Cable-Coil, 12 Ft.
7	120-0892	1	Bracket-Connector
8	104-8300	6	Nut-HF, NI
9	T36016080	1	Bracket-Tractor
10	120-0802	1	Harness-Wire, Electric Brakes
10:1	120-0876	1	Boot-Socket
10:2	32160-322	1	Connector-Trailer, 7M
11	115-5103	2	Screw-HHF
12	104-7201	4	Nut-HF, NI
13	3290-378	10	Tie-Cable
14	3296-42	6	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
15	3234-29	6	Screw-HHF
17	32180-046	6	Splice-Heatshrink Covered
20	2412-73	6	Clamp-R
21	120-0958	1	Harness-Wire, Brake (Trailer Battery)
21:1	32160-322	1	Connector-Trailer, 7M
21:2	120-0876	1	Boot-Socket
22	120-0959	1	Harness-Wire, Brake (Rheostat-Pedal)
23	120-0960	1	Wire-Brake, Pedal (Battery)
23:1	218-578	1	Fuse-Blade, 10 Amp
24	120-0938-03	1	Bracket-Controller, Load
25	701493	2	Nut-Speed
26	3251-1	2	Screw-PPH
27	321-4	2	Screw-HH

Notes:

Notes:

Notes:



Count on it.