
FORM NO. 95–9478

TORO®

MODEL NO. 09910–80001 & UP

PARTS CATALOG

# SUBSURFACE INJECTOR

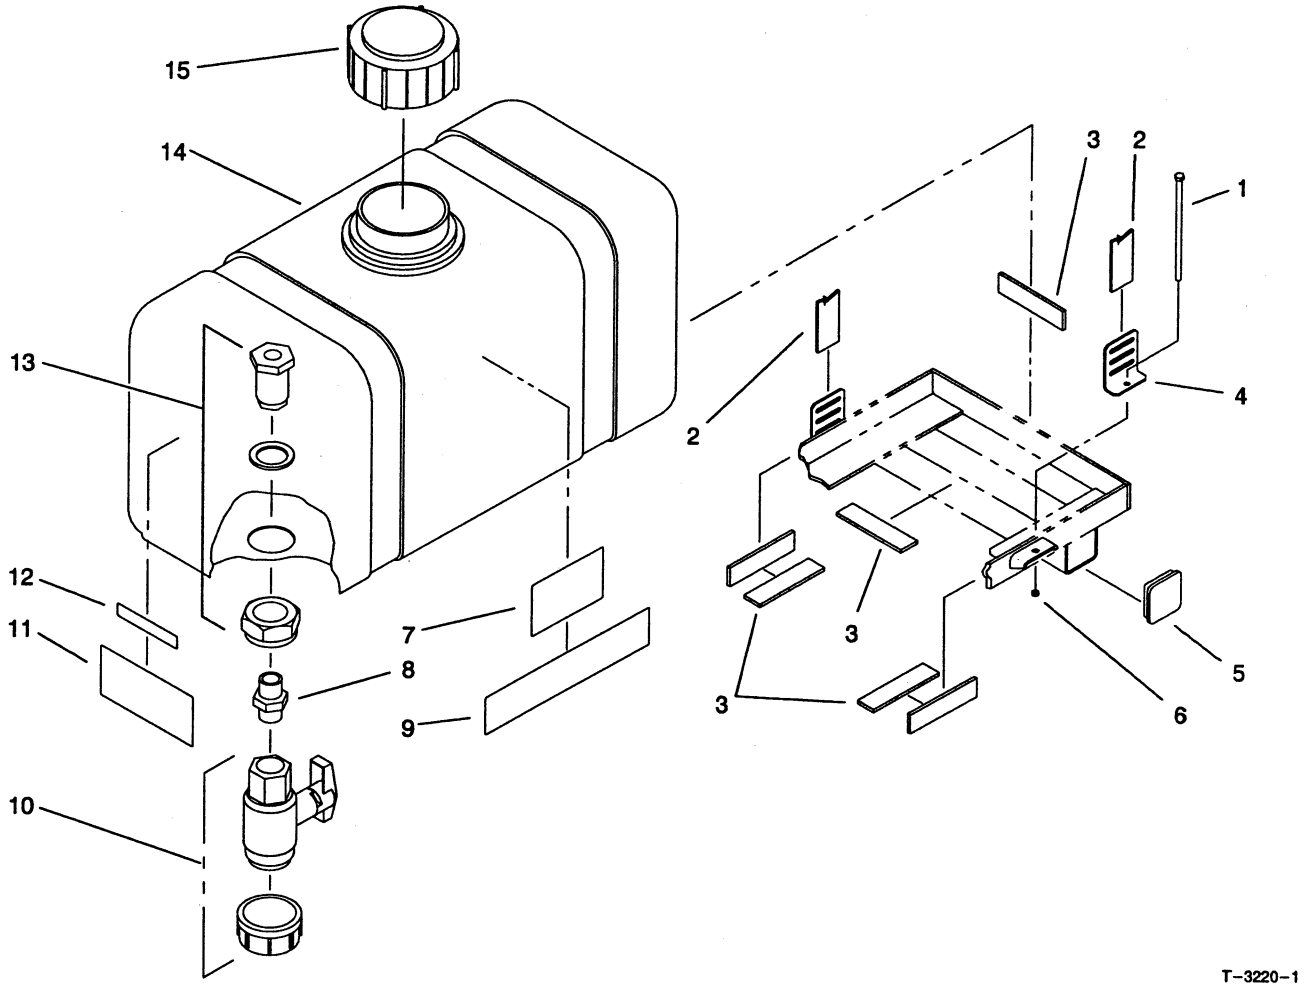


T–3220–1


## BALLAST TANK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 322–19 | Screw–HH | 4 |
| 2 | 95–9432 | Strap–Tank | 4 |
| 3 | 95–9447 | Pad–Tank Bumper | 24 |
| 4 | 95–7822 | Bracket–Tank Strap | 4 |
| 5 | 95–9395 | Plug–Plastic | 4 |
| 6 | 3296–29 | Nut–Lock | 4 |
| 7 | 62–5550 | Decal–Toro | 2 |
| 8 | 41304 | Nipple | 2 |
| 9 | 99–0432 | Decal–Subsurface Injector | 2 |
| 10 | 40020 | Valve–Ball | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 75–5190 | Decal–No Riders | 2 |
| 12 | 95–9491 | Decal–High Pressure | 1 |
| 13 | 41800 | Fitting–Tank | 2 |
| 14 | 99–0403 | Tank–45 Gallon, LH (Incl. Ref. #7, 9, 11–13 & 15) | 1 |
| 15 | 99–0613 | Cap–Tank | 2 |
| * | 99–0404 | Tank–45 Gallon, RH (Incl. Ref. #7, 9, 11, 13 & 15) | 1 |

*Not Illustrated

©The TORO Company – 1998
*All Rights Reserved*

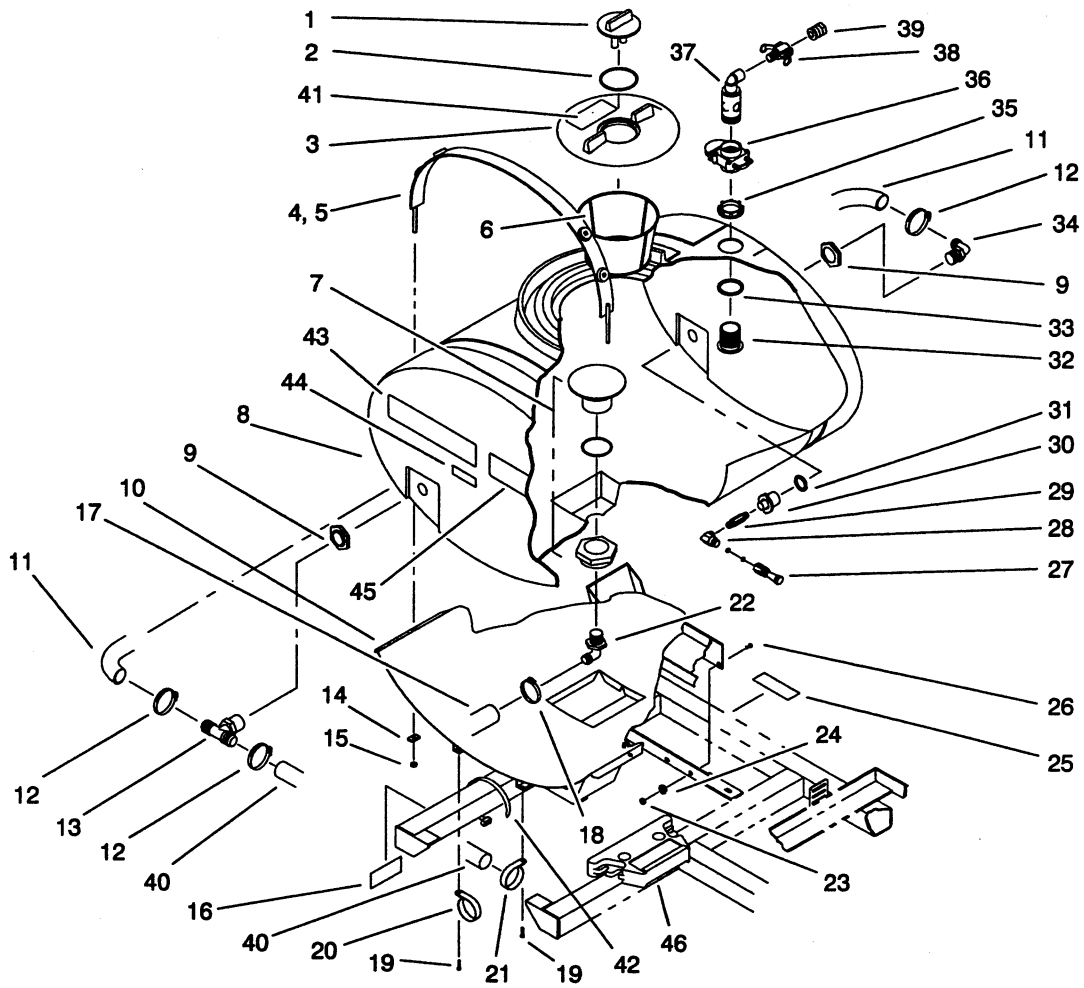



T-3226-1

# SPRAY TANK ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 92-3765 | Cap-Vent | 1 |
| 2 | 42859 | Gasket-Breather | 1 |
| 3 | 42322 | Lid-Tank (Incl. Ref. #1, 2 & 41) | 1 |
| 4 | 42880 | Front Tank Band Assembly | 1 |
| 5 | 43013 | Rear Tank Band Assembly | 1 |
| 6 | 42323 | Basket-Filler | 1 |
| 7 | 41798 | Anti-Vortex Fitting | 1 |
| 8 | 99-0402 | Elliptical Tank (Incl. Ref. #3, 6, 7, 30 & 43-45) | 1 |
| †9 | | Nut | 2 |
| 10 | 42878 | Tank Saddle Assembly | 1 |
| 11 | 95-9143 | Hose-Agitator | 1 |
| 12 | 96609 | Clamp-Hose | 2 |
| 13 | 94-7101 | Fitting-Tee | 1 |
| 14 | 43014 | Strip-Backing | 4 |
| 15 | 3217-7 | Nut-Hex. | 4 |
| 16 | 95-9493 | Decal-Transport Lock | 1 |
| 17 | 92-3677 | Hose-Suction | 1 |
| 18 | 21146 | Clamp-Hose | 1 |
| 19 | 322-3 | Screw-HH | 2 |
| 20 | 92-8385 | Clamp-R | 1 |
| 21 | 2412-104 | Clamp-R | 1 |
| 22 | 42057 | Fitting-Barb 90° | 1 |
| 23 | 3217-9 | Nut-Hex. | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 24 | 3253-7 | Washer-Lock | 2 |
| 25 | 59-9930 | Decal-Danger, Tines | 1 |
| 26 | 325-5 | Screw-HH | 2 |
| 27 | 92-8392 | Agitator-Jet | 2 |
| 28 | 94-7104 | Fitting-90° | 2 |
| 29 | 94-7103 | Nipple | 2 |
| 30 | 94-7089 | Fitting-Tank (Incl. Ref. #9 & 31) | 2 |
| †31 | | Washer-Rubber | 2 |
| 32 | 43066 | Bulk Head | 1 |
| 33 | 43067 | Washer-Sealing | 1 |
| 34 | 42046 | Fitting-90° | 1 |
| 35 | 43068 | Nut-Fly | 1 |
| 36 | 43064 | Valve-Knife | 1 |
| 37 | 43069 | Standup Assembly | 1 |
| 38 | 41316 | Adapter-Quick | 1 |
| 39 | 92-0238 | Coupling-Quick | 1 |
| 40 | 94-7121 | Hose-Agitator | 1 |
| 41 | 93-0688 | Decal-Chemicals | 1 |
| 42 | 3334-945 | Tie-Cable | 1 |
| 43 | 95-9490 | Decal-Tractor Requirements | 1 |
| 44 | 98-8763 | Decal-Not for Highway Use | 1 |
| 45 | 92-3993 | Decal-Hills & Slopes | 1 |
| 46 | 24-5790 | Weight-Rear (Optional) | 8 |
| * | 99-0430 | Weight Mounting Kit (Optional) | 1 |

†Not Serviced Separately
*Not Illustrated

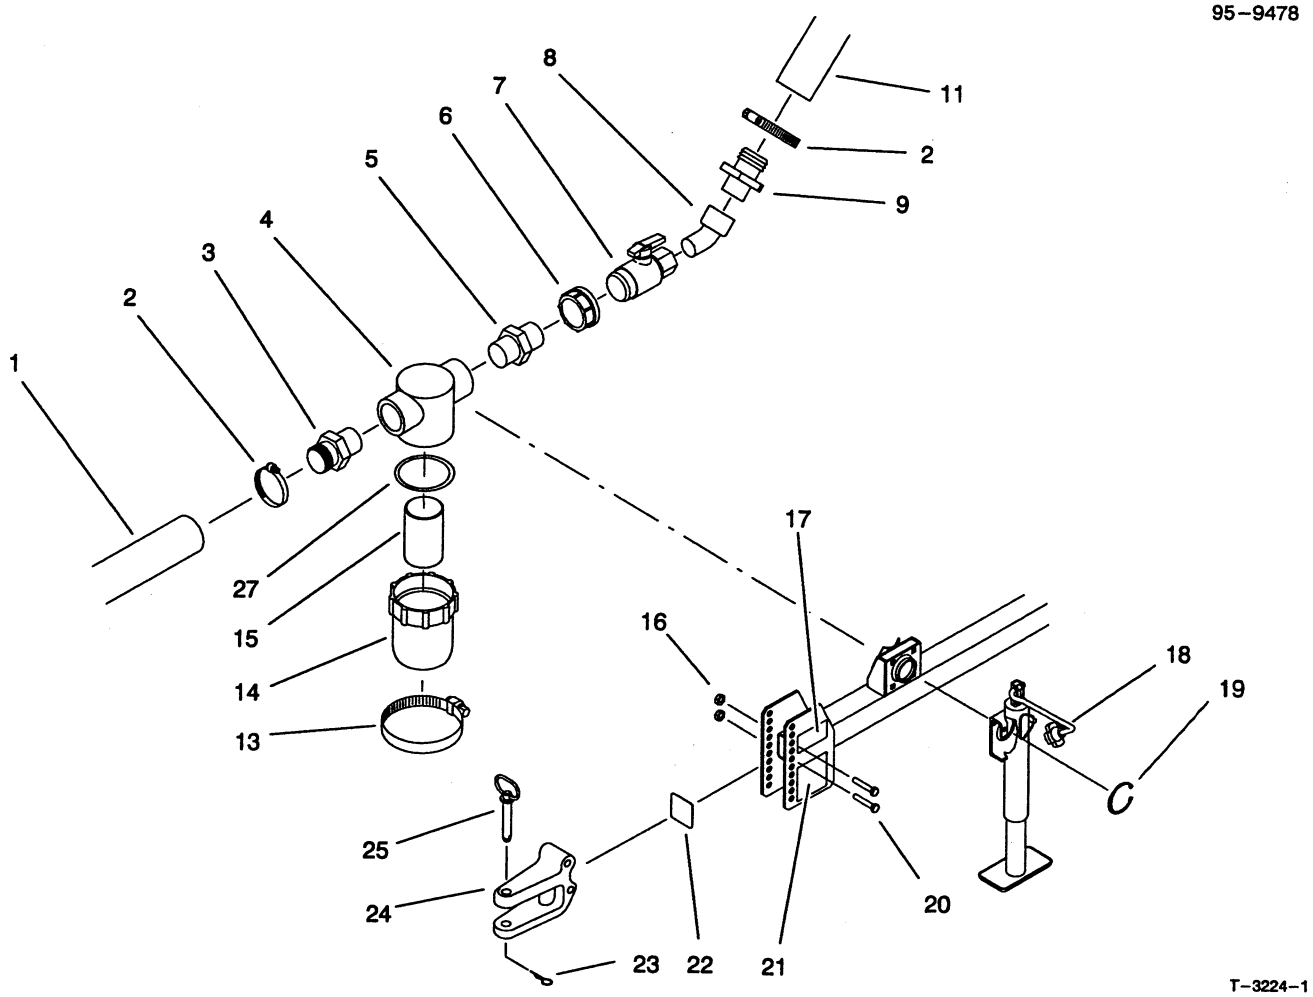


T-3224-1


# TONGUE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 95-9285 | Hose-Suction | 1 |
| 2 | 21146 | Clamp-Hose | 2 |
| 3 | 93-6178 | Barb-Hose | 1 |
| 4 | 99-0426 | Strainer Assembly (Incl. Ref. #14-15 & 27) | 1 |
| 5 | 42992 | Nipple-Reducing | 1 |
| †6 | | Cap | 1 |
| 7 | 40020 | Valve-Ball (Incl. Ref. #6) | 1 |
| 8 | 5706 | Elbow-45° Street | 1 |
| 9 | 92-0012 | Barb-Hose | 1 |
| 11 | 92-3677 | Hose-Suction | 1 |
| 13 | 92-0054 | Clamp-Hose | 1 |
| 14 | 93-0687 | Bowl | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 15 | 42702 | Screen | 1 |
| 16 | 3296-53 | Nut-Lock | 2 |
| 17 | 92-1370 | Decal-Warning | 1 |
| 18 | 92-0270 | Jack (Incl. Ref. #19) | 1 |
| †19 | | Ring-Retaining | 1 |
| 20 | 327-23 | Screw-HH | 2 |
| 21 | 92-8308 | Decal-Warning | 1 |
| 22 | 95-9395 | Plug-Plastic | 1 |
| 23 | 30908 | Pin-Hair | 1 |
| 24 | 47-3550 | Clevis-Trailer Hitch | 1 |
| 25 | 92-0341 | Pin-Hitch (Incl. Ref. #23) | 1 |
| 27 | 42703 | Gasket | 1 |

†Not Serviced Separately

95-9478

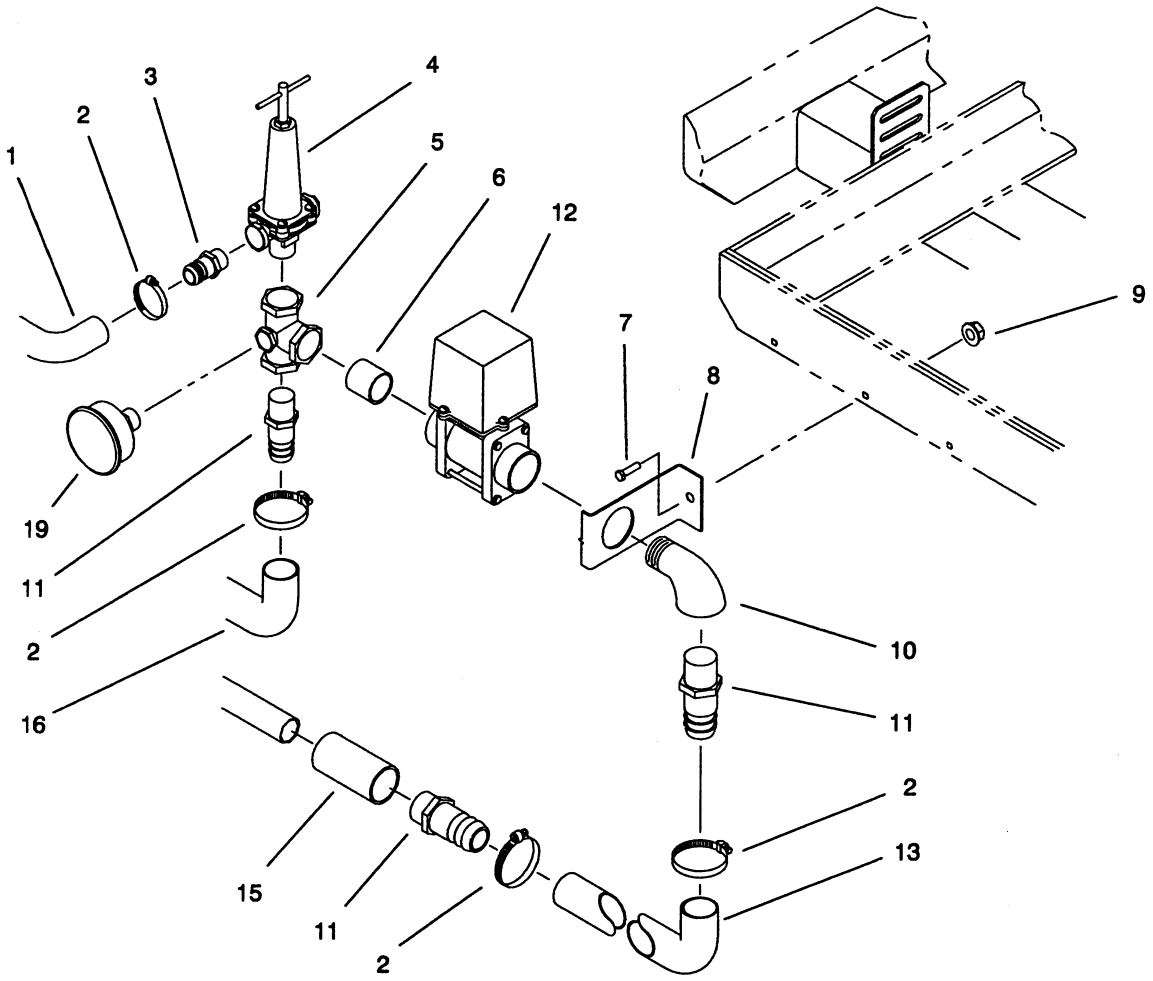



T-3236-1

# VALVE ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 94-7121 | Hose-Agitator | 1 |
| 2 | 92-0045 | Clamp-Hose | 4 |
| 3 | 41248 | Barb-Hose | 1 |
| 4 | 95-9449 | Valve-Relief | 1 |
| 5 | 93-6457 | Tee-Pipe | 1 |
| 6 | 95-9465 | Nipple-Close | 1 |
| 7 | 321-9 | Screw-HH | 2 |
| 8 | 95-9467 | Bracket-Ball Valve | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 9 | 32128-33 | Nut-Lock, Flange | 2 |
| 10 | 95-9463 | Elbow-90° | 1 |
| 11 | 41257 | Barb-Hose | 2 |
| 12 | 95-9448 | Valve-Ball, 2-Way | 1 |
| 13 | 94-7111 | Hose-Solenoid Feed | 1 |
| 15 | 95-9469 | Coupling-Pipe | 1 |
| 16 | 42273 | Hose-Boom | 1 |
| 19 | 95-9466 | Gauge-Pressure | 1 |

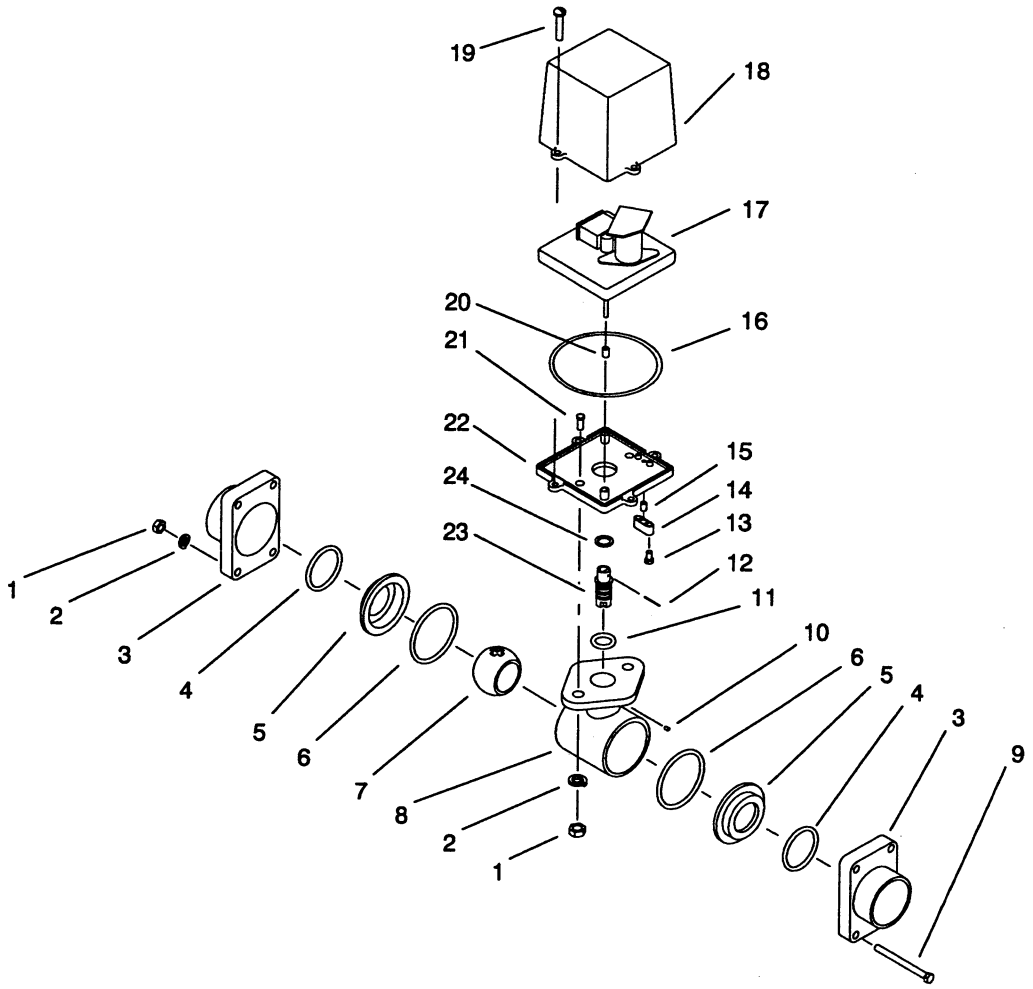



T-3237-1

# BALL VALVE ASSEMBLY NO. 95-9448

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 99-0704 | Nut-Hex. | 6 |
| 2 | 99-0705 | Washer-Lock | 6 |
| 3 | 99-0706 | Cap-End | 2 |
| 4 | 99-0707 | O-Ring | 2 |
| 5 | 99-0708 | Seal | 2 |
| 6 | 99-0709 | O-Ring | 2 |
| 7 | 99-0710 | Ball | 1 |
| 8 | 99-0711 | Body | 1 |
| 9 | 99-0712 | Screw-HH | 4 |
| 10 | 99-0713 | Plug-Dust | 1 |
| 11 | 99-0714 | O-Ring | 1 |
| 12 | 99-0715 | Pin-Spring | 1 |
| 13 | 99-0716 | Screw-Slotted Hex. Washer | 2 |
| 14 | 99-0717 | Retainer-Grommet | 1 |
| 15 | 99-0718 | Grommet | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 16 | 99-0719 | O-Ring | 1 |
| 17 | 99-0720 | Motor | 1 |
| 18 | 99-0721 | Cover | 1 |
| 19 | 99-0722 | Screw-Phillips Sq. Pan Hd. | 4 |
| 20 | 99-0723 | Mount-Motor | 2 |
| 21 | 99-0724 | Stud-Self Clinching | 2 |
| 22 | 99-0725 | Plate-Mounting | 1 |
| 23 | 99-0726 | Stem-Ball Valve | 1 |
| 24 | 99-0727 | Washer-Thrust | 1 |
| †* | | Holder-Fuse | 1 |
| †* | | Fuse-Glass (1.5 Amp. 12 V) | 1 |
| * | 99-0728 | Spare Parts Kit (Incl. Ref. #4-7, 10-11 & 23-24) | 1 |

*Not Illustrated
†Not Serviced Separately

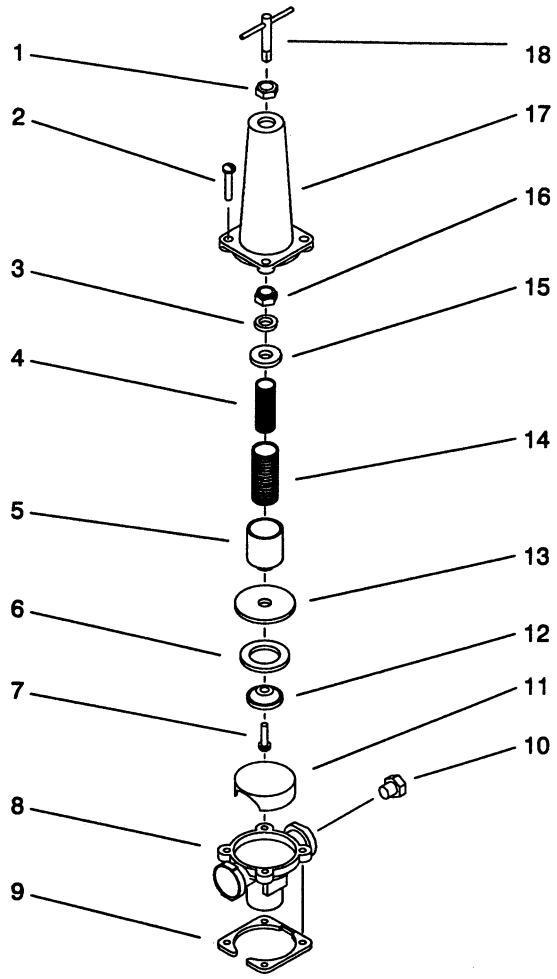



T-3238-1

# RELIEF VALVE ASSEMBLY NO. 95-9449

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 99-0686 | Nut-Lock | 1 |
| 2 | 99-0687 | Screw | 4 |
| 3 | 99-0688 | Washer-Nylon | 1 |
| 4 | 99-0689 | Spring-Inside | 1 |
| 5 | 99-0690 | Sleeve-Guide | 1 |
| 6 | 99-0691 | Ring-Stop | 1 |
| 7 | 99-0692 | Screw | 1 |
| 8 | 99-0693 | Body-Nylon | 1 |
| 9 | 99-0694 | Plate-Clamp | 1 |
| 10 | 92-0068 | Plug-Pipe | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 11 | 99-0695 | Insert-Chamber | 1 |
| 12 | 99-0696 | Seal-Back-up | 1 |
| 13 | 99-0697 | Diaphragm | 1 |
| 14 | 99-0698 | Spring-Outside | 1 |
| 15 | 99-0699 | Retainer-Spring | 1 |
| 16 | 99-0700 | Nut-Adjusting | 1 |
| 17 | 99-0701 | Bonnet | 1 |
| 18 | 99-0702 | Stem-Adjusting | 1 |
| * | 99-0703 | Spare Parts Kit (Incl. Ref. #3, 4 & 12-14) | 1 |

*Not Illustrated

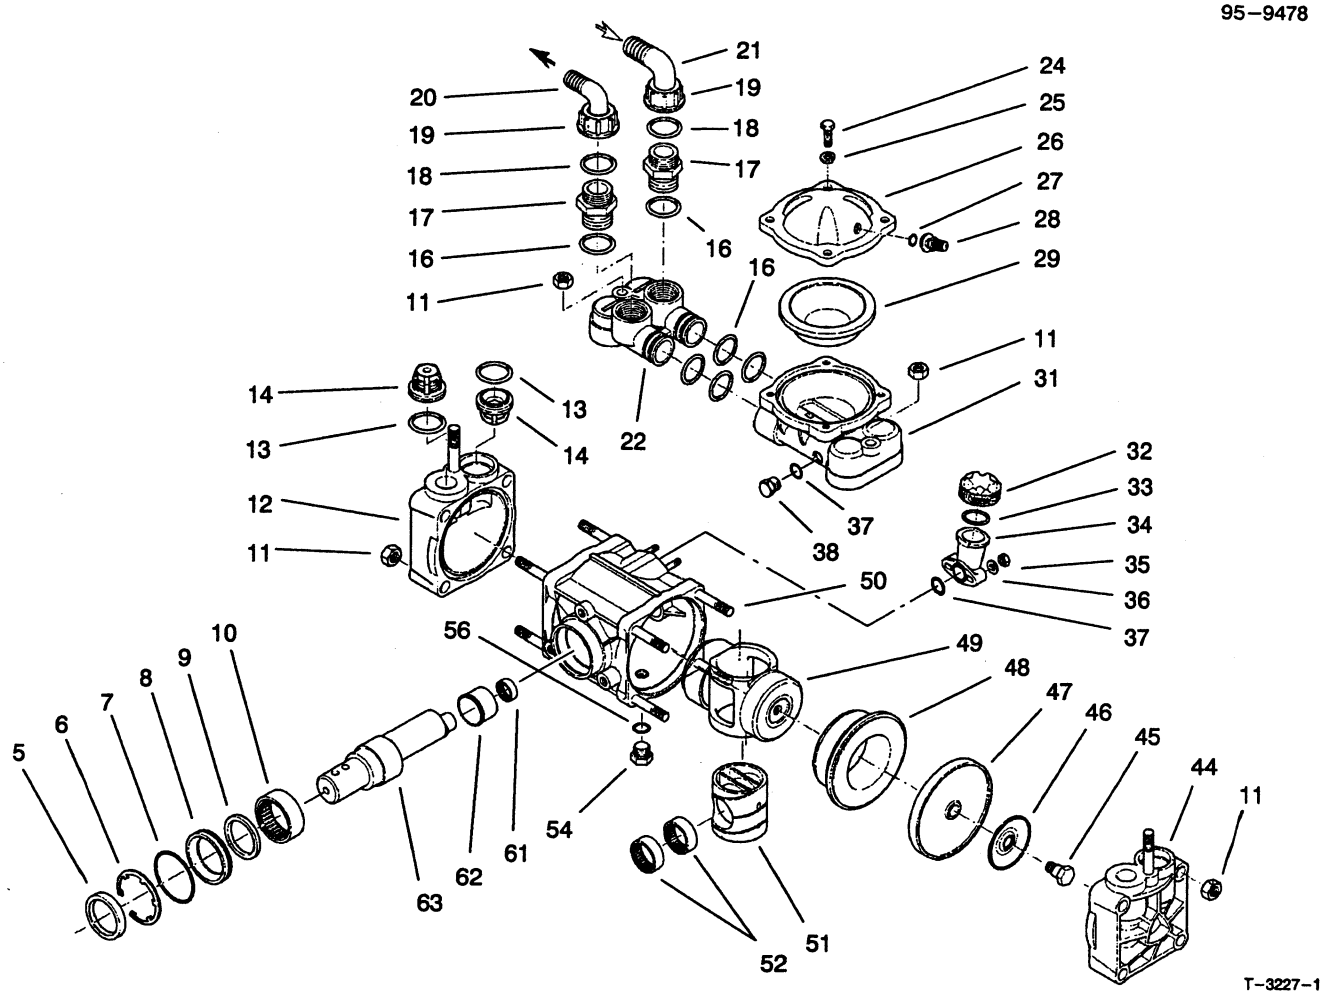



# DIAPHRAGM PUMP NO. 95–9473

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 5 | 99–0615 | Ring–Seal | 1 |
| 6 | 99–0616 | Circlip | 1 |
| 7 | 99–0617 | O–Ring | 1 |
| 8 | 99–0618 | Bushing | 1 |
| 9 | 99–0619 | Spacer | 1 |
| 10 | 92–3557 | Bearing–Roller | 1 |
| 11 | 92–3545 | Nut | 10 |
| 12 | 99–0622 | Head Assembly–RH | 1 |
| 13 | 99–0623 | O–Ring | 4 |
| 14 | 99–0624 | Valve–Check | 4 |
| 16 | 99–0625 | O–Ring | 6 |
| 17 | 92–3562 | Adapter–Threaded | 2 |
| 18 | 99–0627 | O–Ring | 2 |
| 19 | 92–3563 | Nut–Ring | 2 |
| 20 | 99–0629 | Fitting–Barb 90° | 1 |
| 21 | 92–3564 | Fitting–Barb 90° | 1 |
| 22 | 99–0631 | Manifold | 1 |
| 24 | 99–0632 | Bolt | 4 |
| 25 | 99–0633 | Washer | 4 |
| 26 | 99–0634 | Head–Accumulator | 1 |
| 27 | 99–0635 | Gasket | 1 |
| 28 | 99–0636 | Valve–Air | 1 |
| 29 | 99–0637 | Diaphragm–Accumulator | 1 |
| 31 | 99–0638 | Accumulator Pressure Asm (Incl. Ref. #37 & 38) | 1 |
| 32 | 92–3555 | Cap–Oil | 1 |
| 33 | 99–0640 | O–Ring | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 34 | 92–3554 | Sight Glass–Oil | 1 |
| 35 | 92–3551 | Nut | 2 |
| 36 | 92–3552 | Washer | 2 |
| 37 | 99–0644 | O–Ring | 2 |
| 38 | 99–0645 | Plug | 1 |
| 44 | 99–0646 | Head Assembly–LH | 1 |
| 45 | 99–0647 | Pin–Diaphragm | 2 |
| 46 | 99–0648 | Plate | 2 |
| 47 | 99–0649 | Diaphragm | 2 |
| 48 | 99–0650 | Sleeve | 2 |
| 49 | 99–0651 | Piston | 1 |
| 50 | 99–0652 | Body–Pump | 1 |
| 51 | 99–0653 | Cylinder | 1 |
| 52 | 99–0654 | Bearing–Roller | 2 |
| 54 | 99–0655 | Plug–Oil | 1 |
| 56 | 99–0656 | O–Ring | 1 |
| 61 | 99–0657 | Bearing–Roller | 1 |
| 62 | 99–0658 | Spacer | 1 |
| 63 | 99–0659 | Crankshaft | 1 |
| * | 99–0660 | Kit–Check Valve Assembly (Incl. 4 each of Ref. #13 & 14) | 1 |
| * | 99–0661 | Kit–Seal (Incl. Ref. #13, 16, 18, 27, 33 & 37) | 1 |
| * | 99–0662 | Kit–Repair (Incl. Ref. #13, 29 & 47) | 1 |

*Not Illustrated

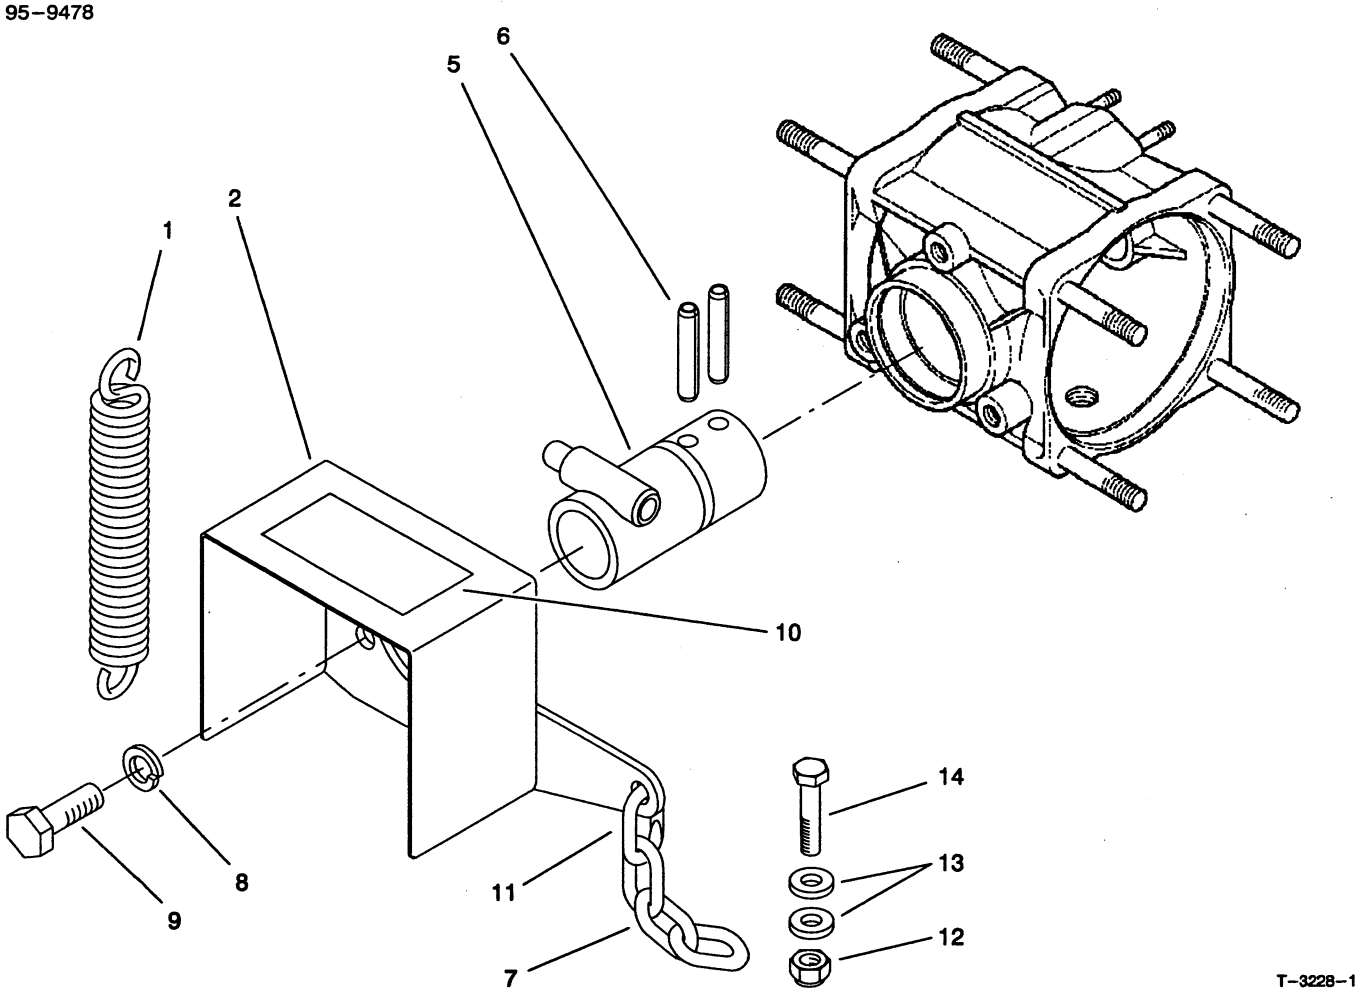



T–3228–1

# P.T.O. SHIELD ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 41721 | Spring | 1 |
| 2 | 99–0400 | PTO Shield Assembly (Incl. Ref. #10) | 1 |
| 5 | 95–9471 | Quick Coupler–PTO | 1 |
| 6 | 95–9398 | Pin–Roll | 2 |
| 7 | 95–9480 | Chain–Pump | 2 |
| 8 | 3253–6 | Washer–Lock | 2 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 9 | 48–7770 | Screw–HH | 2 |
| 10 | 87–5990 | Decal–PTO Shield | 1 |
| 11 | 95–9131 | Lap Link | 1 |
| 12 | 32153–2 | Nut–Lock | 2 |
| 13 | 3256–4 | Washer–Flat | 4 |
| 14 | 323–8 | Screw–HH | 2 |

*Not Illustrated

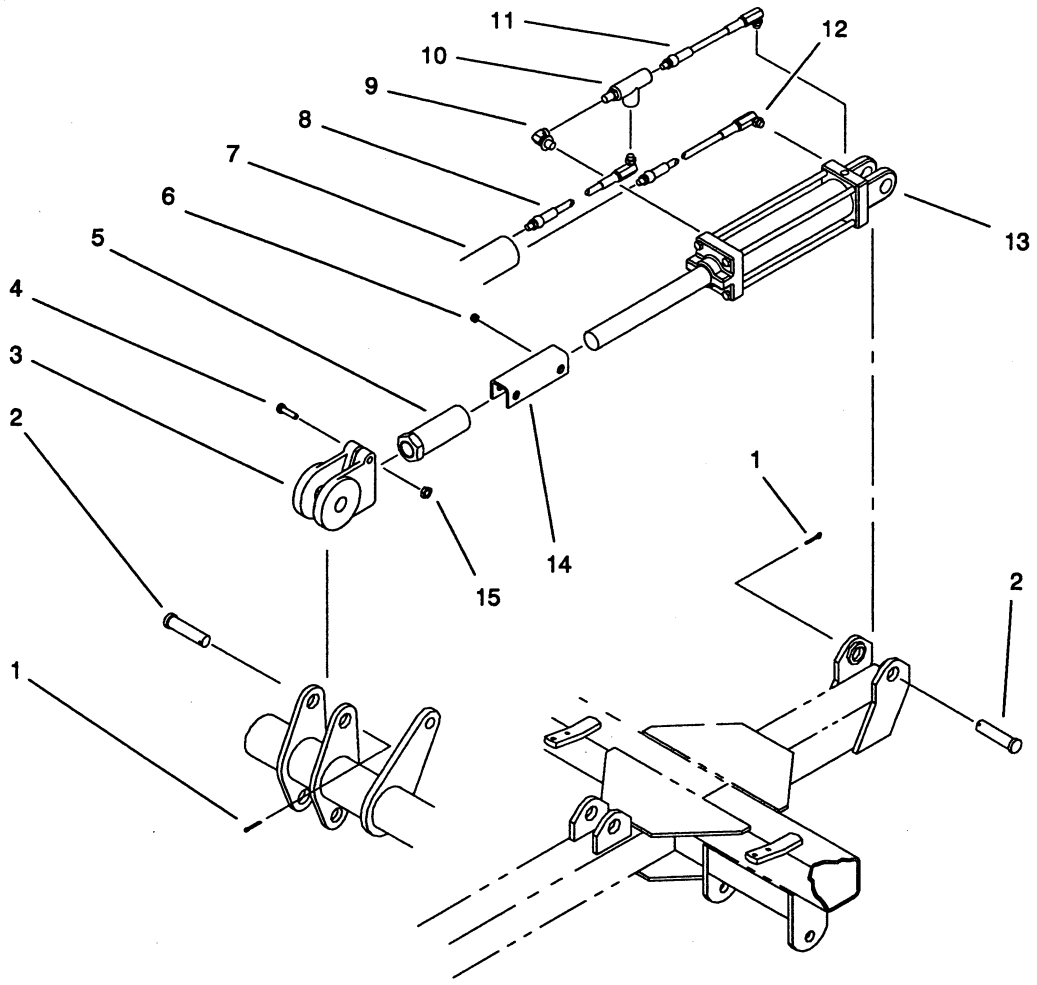



T-3225-1

# HYDRAULIC CYLINDER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 3272-13 | Pin-Cotter | 2 |
| 2 | 40969 | Pin-Clevis | 2 |
| 3 | 99-0610 | Yoke-Cylinder | 1 |
| 4 | 323-45 | Screw-HH | 1 |
| 5 | 99-0421 | Stroke Control Assembly | 1 |
| 6 | 95-5972 | Grommet | 4 |
| 7 | 95-9462 | Cover-Hose | 1 |
| 8 | 95-9426 | Hose-Hydraulic | 1 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 9 | 95-9429 | Fitting-Hydraulic 90° | 1 |
| 10 | 42694 | Valve-Pilot Check | 1 |
| 11 | 95-9428 | Hose-Hydraulic | 1 |
| 12 | 95-9427 | Hose-Hydraulic | 1 |
| 13 | 95-9430 | Cylinder-Hydraulic (Incl. Ref. #3-4 & 15) | 1 |
| 14 | 95-9494 | Channel-Transport Lock | 1 |
| 15 | 32153-2 | Nut-Hex. | 1 |

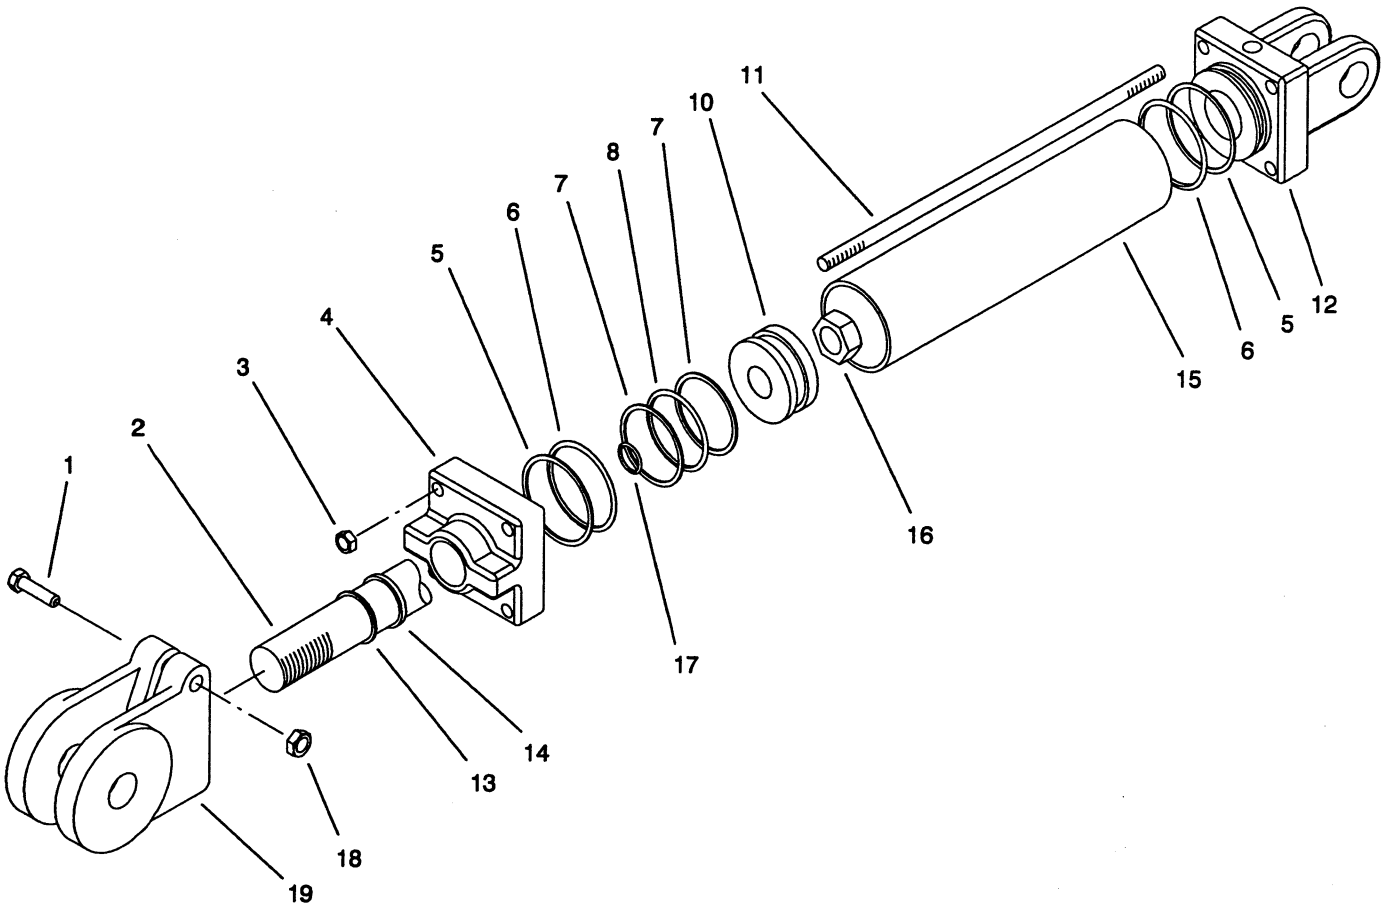



T–3248–1

# HYDRAULIC CYLINDER ASSEMBLY NO. 95–9430

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 323–45 | Screw–HH | 1 |
| 2 | 99–0671 | Rod–Piston | 1 |
| 3 | 99–0672 | Nut–Tie Rod | 4 |
| 4 | 99–0673 | Gland | 1 |
| 5 | 99–0674 | Back–Up Washer | 2 |
| 6 | 99–0675 | O–Ring | 2 |
| 7 | 99–0676 | Back–Up Washer | 2 |
| 8 | 99–0677 | O–Ring | 1 |
| 10 | 99–0678 | Piston | 1 |
| 11 | 99–0679 | Rod (Incl. Ref. #3) | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 12 | 99–0680 | Butt | 1 |
| 13 | 99–0684 | Wiper | 1 |
| 14 | 99–0685 | U–Cup | 1 |
| 15 | 99–0681 | Tube | 1 |
| 16 | 99–0682 | Nut–Lock | 1 |
| 17 | 99–0683 | O–Ring | 1 |
| 18 | 32153–2 | Nut–Hex. | 1 |
| 19 | 99–0610 | Yoke–Cylinder | 1 |
| * | 99–0729 | Kit–Seal (Incl. Ref. #5–8, 13–14 & 17) | 1 |

*Not Illustrated

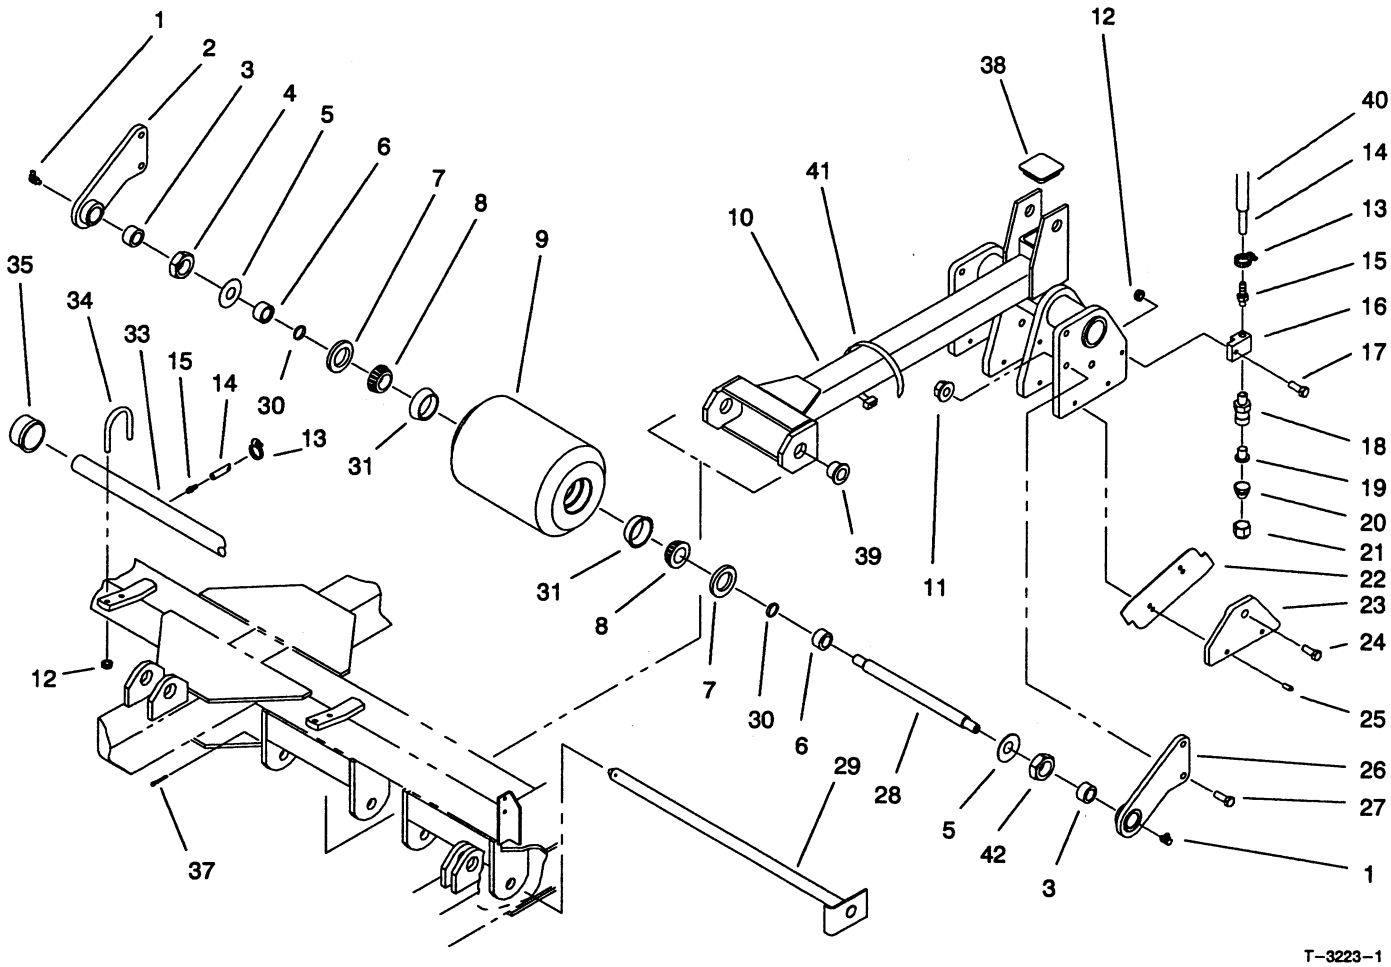



# BLADE & ROLLER ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 302-40 | Fitting-Grease | 8 |
| 2 | 95-9424 | Roller Bracket Asm-RH | 4 |
| 3 | 59-5780 | Roller Bushing Assembly | 8 |
| 4 | 3296-15 | Nut-Lock | 4 |
| 5 | 66-5620 | Washer | 8 |
| 6 | 59-5690 | Sleeve-Wear | 8 |
| 7 | 253-165 | Seal-Outside | 8 |
| 8 | 254-78 | Cone-Bearing | 8 |
| 9 | 95-9421 | Roller | 4 |
| 10 | 95-9438 | Blade Arm Assembly (Incl. Ref. #25 & 39) | 4 |
| 11 | 32128-43 | Nut-Lock Flange | 16 |
| 12 | 32128-33 | Nut-Lock Flange | 20 |
| 13 | 97406 | Clamp-Hose | 32 |
| 14 | 95-9440 | Hose-Nozzle | 16 |
| 15 | 94-7220 | Barb-Hose | 32 |
| 16 | 95-9419 | Block-Nozzle Mount | 16 |
| 17 | 321-8 | Screw-HH | 16 |
| 18 | 95-9460 | Body-Nozzle, Brass | 16 |
| 19 | 95-9458 | Strainer-Nozzle, 50 Mesh | 16 |
| * | 99-0409 | Strainer-Nozzle, 100 Mesh | 16 |
| * | 99-0410 | Strainer-Nozzle, 200 Mesh | 16 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 20 | 95-9439 | Orifice-Nozzle 0002 Spray Tip | 16 |
| * | 99-0406 | Orifice-Nozzle 00015 Spray Tip | 16 |
| * | 99-0407 | Orifice-Nozzle 0001 Spray Tip | 16 |
| * | 99-0408 | Orifice-Nozzle 000067 Spray Tip | 16 |
| 21 | 95-9461 | Cap-Nozzle, Brass | 16 |
| 22 | 95-9418 | Blade | 16 |
| 23 | 95-9416 | Plate-Blade Clamp | 16 |
| 24 | 325-4 | Screw-HH | 16 |
| 25 | 95-9417 | Pin-Dowel | 32 |
| 26 | 95-9425 | Roller Bracket Asm-LH | 4 |
| 27 | 323-8 | Screw-HH | 16 |
| 28 | 95-9402 | Shaft-Roller | 4 |
| 29 | 95-7839 | Pivot Pin Assembly | 2 |
| 30 | 237-54 | O-Ring | 8 |
| 31 | 254-79 | Cup-Bearing | 8 |
| 33 | 95-9452 | Manifold | 1 |
| 34 | 92-0010 | U-Bolt | 2 |
| 35 | 95-9468 | Cap-Pipe | 1 |
| 37 | 3272-13 | Pin-Cotter | 2 |
| 38 | 95-9495 | Cap-Plastic | 4 |
| 39 | 99-0485 | Bearing-Flange | 8 |
| 40 | 94-8606 | Cover-Hose | 8 |
| 41 | 3334-945 | Tie-Cable | 8 |
| 42 | 3220-7 | Nut-Jam | 4 |

*Not Illustrated

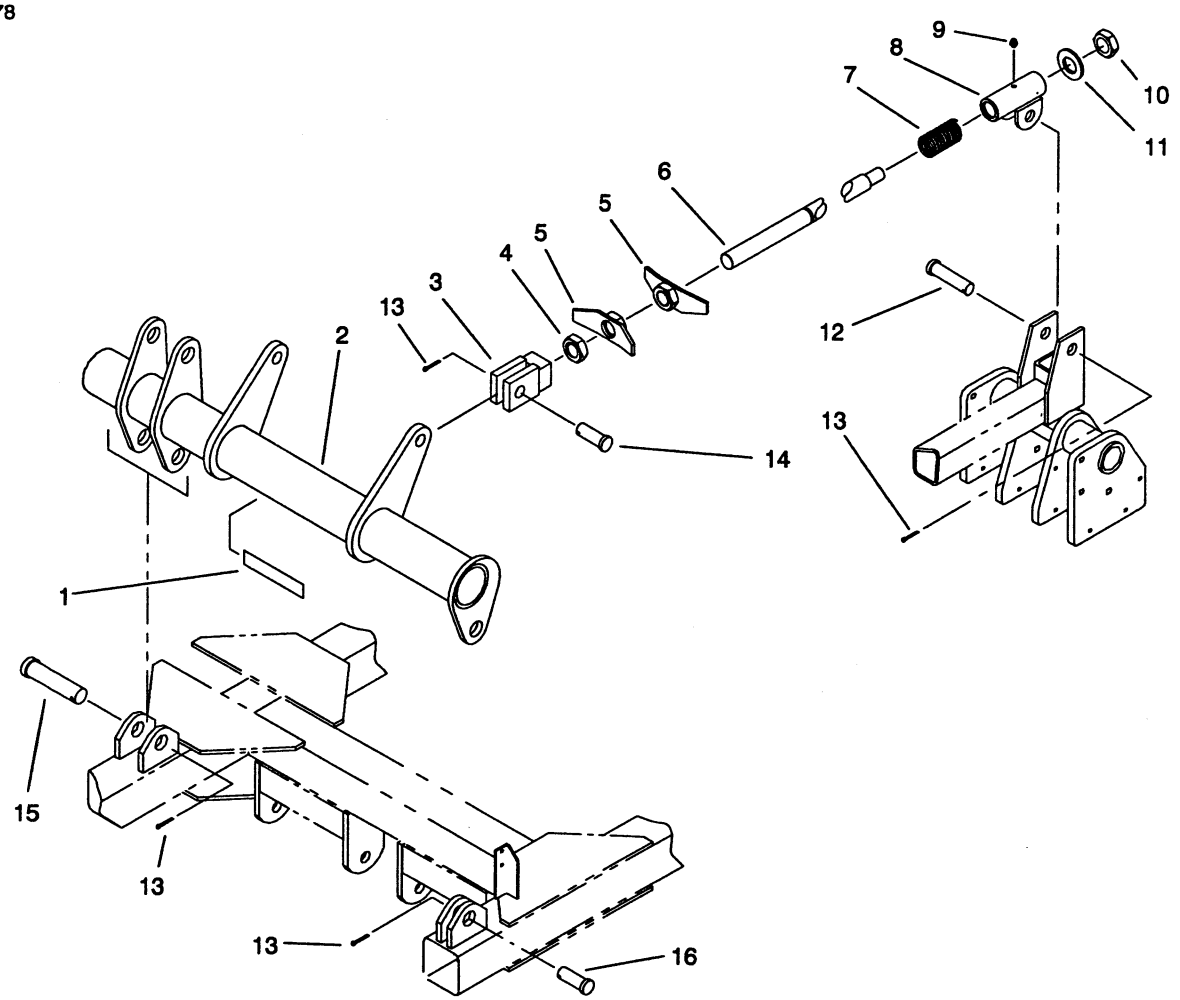



T-3222-1

# ROCKER ARM ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 93-7518 | Decal-Pinch Point | 1 |
| 2 | 99-0487 | Rocker Bar Assembly (Incl. Ref. #1) | 1 |
| 3 | 95-9405 | Clevis Assembly | 4 |
| 4 | 3218-9 | Nut-Hex. Jam | 4 |
| 5 | 99-0425 | Wing Nut Assembly | 8 |
| 6 | 95-9401 | Rod-Compression | 4 |
| 7 | 95-9433 | Spring | 8 |
| 8 | 95-7843 | Rear Mount Assembly | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 9 | 302-40 | Fitting-Grease | 4 |
| 10 | 3296-51 | Nut-Lock | 4 |
| 11 | 3256-28 | Washer-Flat | 4 |
| 12 | 95-7810 | Pin-Clevis | 4 |
| 13 | 3272-13 | Pin-Cotter | 11 |
| 14 | 95-7809 | Pin-Clevis | 2 |
| 15 | 40969 | Pin-Clevis | 1 |
| 16 | 95-7812 | Pin-Clevis | 2 |

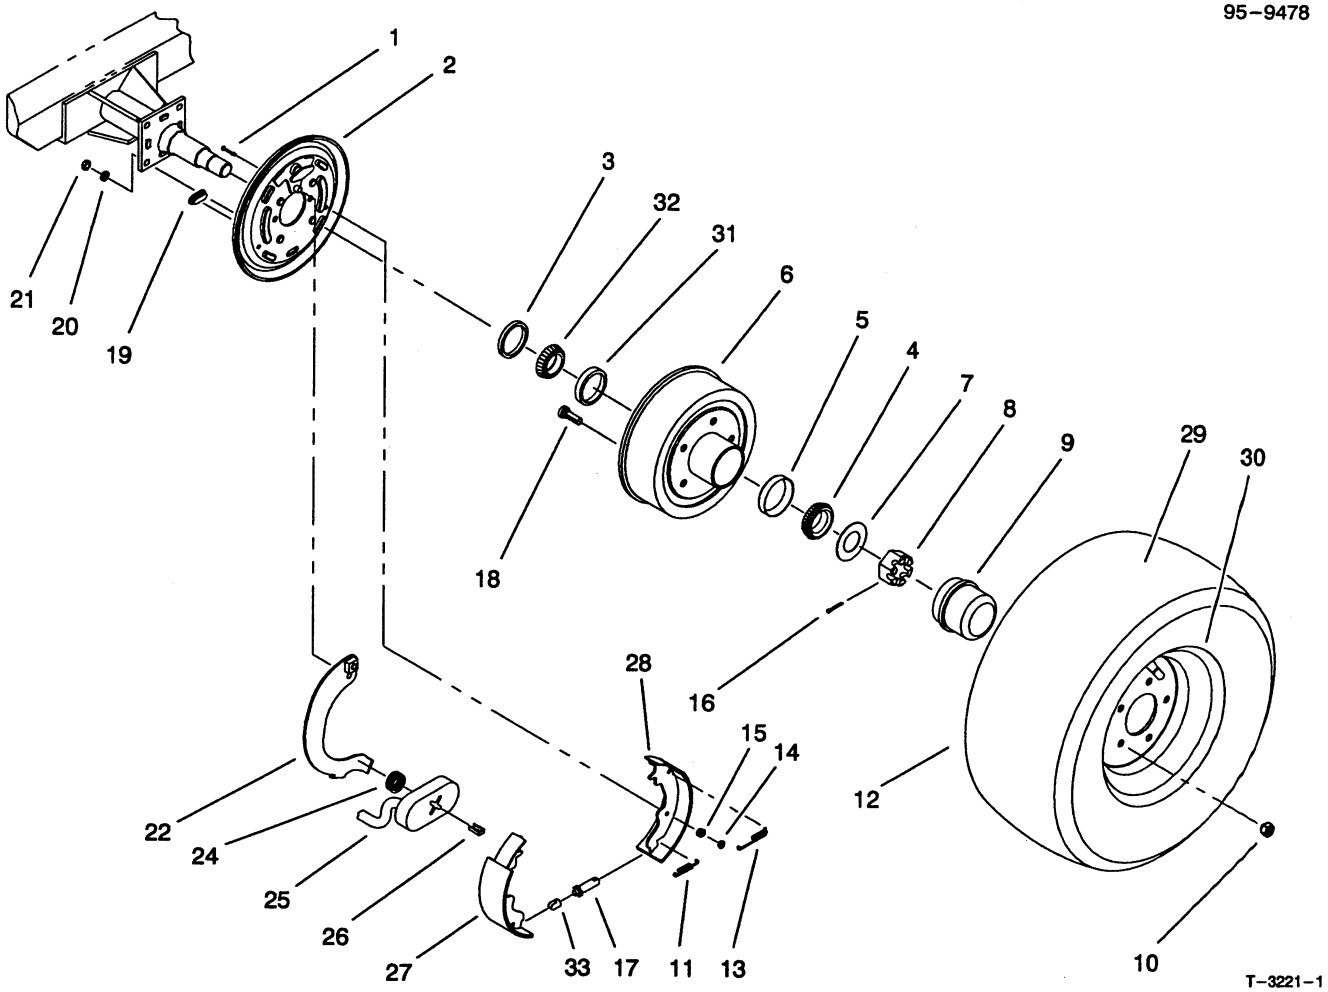


# WHEEL & BRAKE ASSEMBLY


| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 99-0583 | Pin-Hold Down | 4 |
| †2 | | Backing Plate Assembly | 2 |
| 3 | 99-0585 | Seal-Grease | 2 |
| 4 | 99-0586 | Bearing-Outer | 2 |
| 5 | 99-0587 | Cup-Outer | 2 |
| 6 | 99-0588 | Drum (Incl. Ref. #5, 18 & 31) | 2 |
| 7 | 99-0589 | Washer-Spindle | 2 |
| 8 | 99-0590 | Nut-Spindle | 2 |
| 9 | 99-0591 | Cap-Grease | 2 |
| 10 | 242-50 | Nut-Lug | 10 |
| 11 | 99-0592 | Spring-Adjusting Screw | 2 |
| 12 | 42684 | Wheel & Tire Assembly (Incl. Ref. #29 & 30) | 2 |
| 13 | 99-0593 | Spring-Shoe Retract | 2 |
| 14 | 99-0594 | Cups-Hold Down (Incl. Ref. #15) | 4 |
| †15 | | Spring | 4 |
| 16 | 99-0596 | Pin-Cotter | 2 |
| 17 | 99-0597 | Adjusting Screw Assembly | 2 |
| 18 | 99-0598 | Stud-Wheel | 20 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 19 | 99-0599 | Plug-Adjusting Slot | 2 |
| 20 | 3253-6 | Washer-Lock | 8 |
| 21 | 3219-4 | Nut-Hex. | 8 |
| 22 | 99-0600 | Arm-Magnet Lever, LH | 1 |
| *23 | 99-0601 | Arm-Magnet Lever, RH | 1 |
| 24 | 99-0603 | Spring-Magnet | 2 |
| 25 | 99-0604 | Magnet Assembly | 2 |
| 26 | 99-0605 | Clip-Magnet | 2 |
| 27 | 99-0606 | Shoe-Primary | 2 |
| 28 | 99-0607 | Shoe-Secondary | 2 |
| 29 | 42685 | Tire | 2 |
| 30 | 42667 | Rim-Wheel | 2 |
| 31 | 99-0608 | Cup-Inner | 2 |
| 32 | 99-0609 | Bearing-Inner | 2 |
| 33 | 99-0612 | Adjusting Socket | 2 |
| * | 99-0731 | Brake Cluster, LH (Incl. Ref. #1, 2, 11, 13-15, 17, 19, 22-28 & 33) | 1 |
| * | 99-0732 | Brake Cluster, RH (Incl. Ref. #1-2, 11, 13-15 17, 19, 22-28 & 33) | 1 |

†Not Serviced Separately

*Not Illustrated

Note: Left Hand Wheel & Brake Assembly Shown.

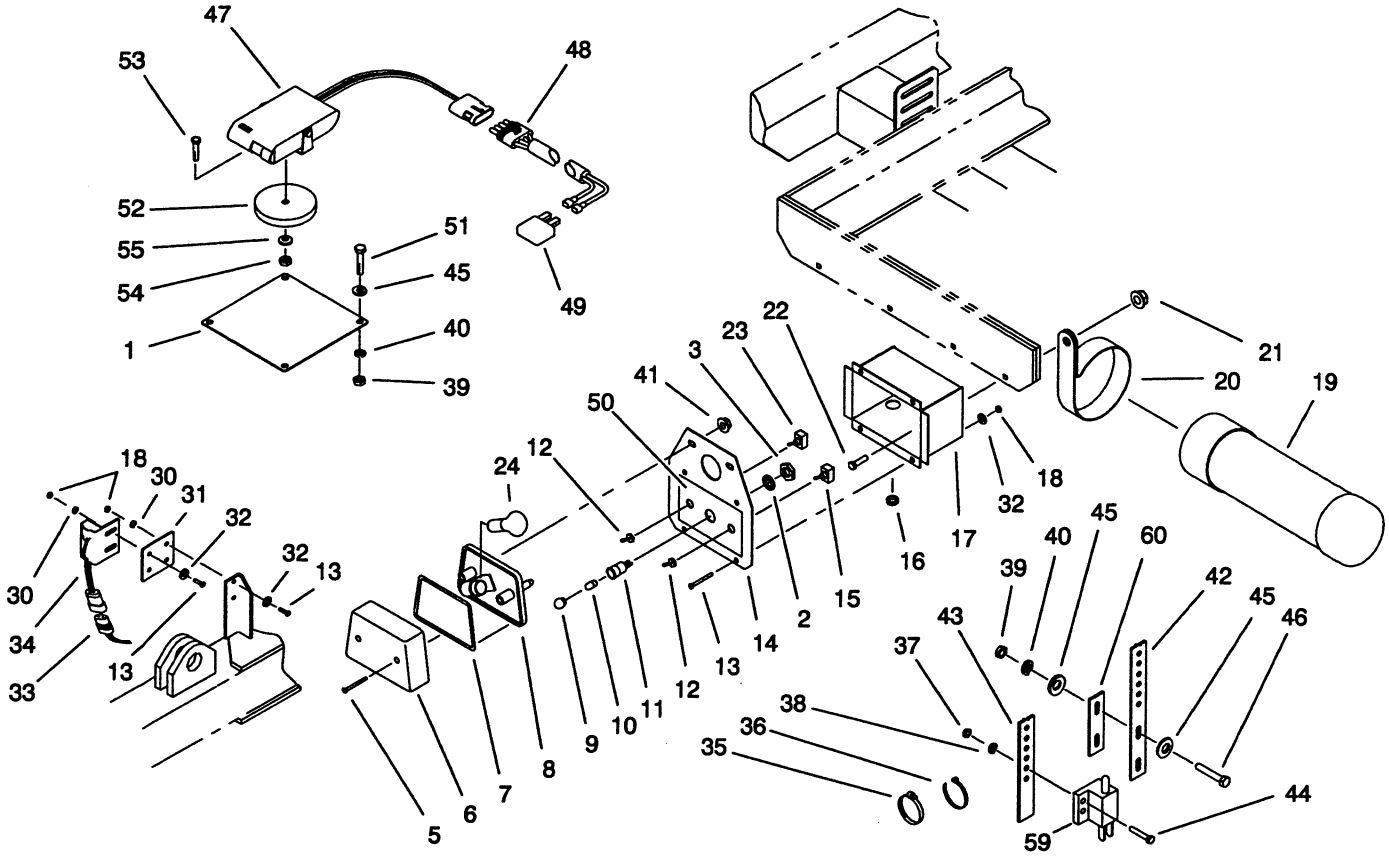


T-3232-1

# ELECTRICAL ASSEMBLY

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 1 | 95-9498 | Plate-Brake Controller | 1 |
| 2 | 218-536 | Washer-Lock | 1 |
| 3 | 218-535 | Nut-Hex. | 1 |
| 5 | 32144-93 | Screw-PPH | 2 |
| 6 | 87-6300 | Lens-Tail Light | 1 |
| 7 | 87-6310 | Gasket-Tail Light | 1 |
| 8 | 87-2110 | Tail Light (Incl. Ref. #5-7 & 24) | 1 |
| 9 | 218-562 | Lens-Amber | 1 |
| 10 | 93-7480 | Bulb-LED | 1 |
| 11 | 44-2212 | Lamp-Warning (Incl. Ref. #2-3 & 9-10) | 1 |
| 12 | 30955 | Boot-Switch | 2 |
| 13 | 3250-31 | Screw-HWH | 8 |
| 14 | 99-0486 | Panel-Switch Box Cover (Incl. Ref. #50) | 1 |
| 15 | 92-0250 | Switch-Toggle | 1 |
| 16 | 95-2282 | Grommet | 1 |
| 17 | 95-9456 | Electrical Box Assembly | 1 |
| 18 | 3219-14 | Nut-Hex. | 8 |
| 19 | 42559 | Tube-Manual | 1 |
| 20 | 42560 | R-Clamp | 2 |
| 21 | 32128-33 | Nut-Lock, Flange | 2 |
| 22 | 321-9 | Screw-HH | 2 |
| 23 | 30953 | Switch-Toggle | 1 |
| 24 | | Bulb-Tail Light (#1157 Standard 12 Volt) | 1 |
| 30 | 3253-17 | Washer-Lock | 4 |

| Ref. No. | Part No. | Description | No. Used |
|---|---|---|---|
| 31 | 99-0420 | Plate-Switch | 1 |
| 32 | 3256-14 | Washer-Flat | 8 |
| 33 | 95-9455 | Harness-Sub. Surf. Appl. | 1 |
| 34 | 99-0560 | Switch-Limit | 1 |
| 35 | 21146 | Clamp-Hose | 2 |
| 36 | 95672 | Tie-Cable | 12 |
| 37 | 3217-26 | Nut-Hex. | 2 |
| 38 | 3253-17 | Washer-Lock | 2 |
| 39 | 3217-5 | Nut-Hex. | 6 |
| 40 | 3253-3 | Washer-Lock | 6 |
| 41 | 3290-506 | Nut | 2 |
| 42 | 92-8361 | Strap-Switch Mount | 1 |
| 43 | 92-8357 | Switch Mount Bracket Asm | 1 |
| 44 | 3251-3 | Screw-Round | 2 |
| 45 | 3256-22 | Washer-Flat | 8 |
| 46 | 321-8 | Screw-HH | 2 |
| 47 | 95-9483 | Brake Controller Assembly | 1 |
| 48 | 95-9397 | Harness-Tractor (Incl. Ref. #49) | 1 |
| 49 | 99-0670 | Auto-Reset Circuit Breaker | 1 |
| 50 | 95-9492 | Decal-Control Panel | 1 |
| 51 | 321-4 | Screw-HH | 4 |
| 52 | 92-0256 | Magnet | 1 |
| 53 | 32105-8 | Screw-HH | 1 |
| 54 | 3217-26 | Nut-Hex. | 1 |
| 55 | 3256-14 | Washer-Flat | 1 |
| 59 | 92-0305 | Switch-Limit | 1 |
| 60 | 92-8362 | Strap-Mount | 1 |

*Not Illustrated




*Helping you put quality into play.* ®




*Helping you put quality into play.* ®