Form No. 3329-734

Z587L

Z Master® with 60in TURBO FORCE Side Discharge Mower

Model No. 74250—240000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2003
All Rights Reserved

Contents

Description	Page
Front Frame Assembly	4
Castor and Wheel Assembly	5
Main Frame Assembly	6
Brake and Wheel Hub Assembly	7
Steering Control Assembly	8
Hydraulic System Assembly	9
Seat and Roll–Over–Protection–System Assembly	11
Seat Assembly No. 107–1867	12
Deck Mounting Assembly	13
Drive Idler Assembly	14
Z–Stand Assembly	15
Engine, Clutch, Air Cleaner and Muffler Assembly	16
Cooling System Assembly	17
Hood Assembly	18
Cooling Mounting Frame Assembly	19
Fuel Tank Assembly	20
Electrical Components Assembly	21
60in Deck Assembly	23
Spindle Assembly No. 106–3217	24
Deck Assembly No. 107–1624	25
Rubber Deflector Assembly No. 106–3249	26
Lever Assembly No. 106–3242	27
Cylinder/Crankcase Assembly Kawasaki FD750D–AS03	28
Piston/Crankshaft Assembly Kawasaki FD750D–AS03	29
Valve/Camshaft Assembly Kawasaki FD750D–AS03	30
Lubrication Equipment Assembly Kawasaki FD750D–AS03	31
Cooling Equipment Assembly Kawasaki FD750D–AS03	32
Electric Equipment Assembly Kawasaki FD750D–AS03	33
Control Equipment Assembly Kawasaki FD750D–AS03	34
Carburetor Assembly Kawasaki FD750D–AS03	35
Air Filter/Muffler Assembly Kawasaki FD750D–AS03	36
Fuel Tank/Fuel Valve Assembly Kawasaki FD750D–AS03	37
Starter Assembly Kawasaki FD750D–AS03	38

Accessories

Description	Model / Part No.
Mid Flow Blade	105–7715–03
Lo Flow Blade	105–7716–03


Description	Model / Part No.
Lo Flow Blade	105–7716–03
Atomic Blade	105–7777–03

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming

Abbreviation	Meaning
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

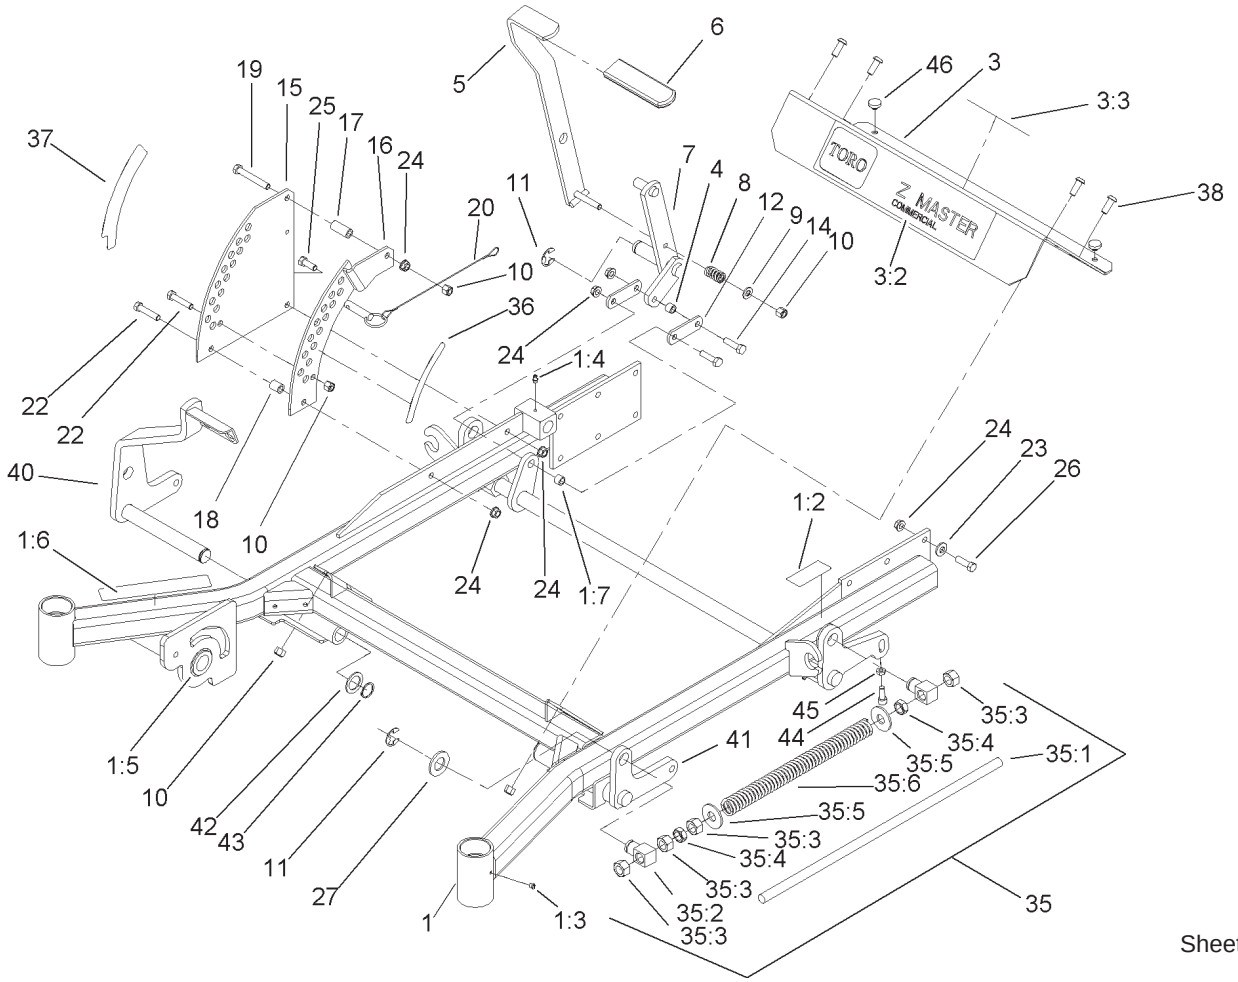


Sheet No.:2

Front Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	106–8998	1	Frame ASM
1:2	107–1857	1	Decal–Brake, Parking
1:3	1–811010	2	Plug
1:4	302–19	5	Fitting–Grease
1:5	94–1291	2	Bushing
1:6	104–7759	1	Decal–Warning
1:7	103–1918	1	Bushing
3	106–9981	1	Front Floorpan ASM
3:2	106–7451	1	Decal
3:3	107–2112	1	Decal–Warning
4	103–1918	1	Bushing
5	103–2083–03	1	Lever–Lift
6	1–633295	1	Grip–Lever, Lift
7	103–2064–03	1	Arm–Lift, Deck
8	1–633325	1	Spring–Compression
9	3256–24	1	Washer–Flat
10	3296–39	9	Nut–Lock, NI
11	32151–103	5	Ring–Snap
12	1–633068	2	Arm–Lift, Deck
14	323–29	2	Screw–HH
15	1–633889–01	1	Plate–Lift, Deck
16	1–632899–01	1	Plate–Lift, Deck
17	1–633082	1	Bushing–Lever, Lift
18	1–633080	1	Bushing–Lever, Lift
19	323–13	1	Screw–HH
20	106–9951	1	Hitch Pin ASM

Ref. No.	Part No.	Qty.	Description
22	323–9	2	Screw–HH
23	98–5975	12	Washer–Belleville
24	3290–357	15	Nut–HHF
25	323–6	1	Screw–HH
26	323–7	12	Screw–HH
27	3256–29	4	Washer–Flat
☆35		2	Front Frame Spring ASM
35:1	1–633096	1	Rod–Lift, Deck
35:2	1–633441	2	Swivel–Deck Mount, Rear
35:3	3217–11	4	Nut–Hex
35:4	3218–6	2	Nut–Jam
35:5	3256–7	2	Washer–Flat
35:6	1–633064	1	Spring–Support, Deck
36	107–1861	1	Decal–Height, Deck
37	107–1860	1	Decal–Height, Deck
38	3274–94	4	Screw–HSBH
40	106–8983–01	1	RH Deck Lift ASM
41	106–8984–01	1	LH Deck Lift ASM
42	1–523157	2	Washer–Spacer
43	32151–29	2	Ring–Retaining
44	3274–18	2	Screw–HSH
45	3218–2	2	Nut–Jam
46	1–513658	2	Bumper

☆ Not serviced separately

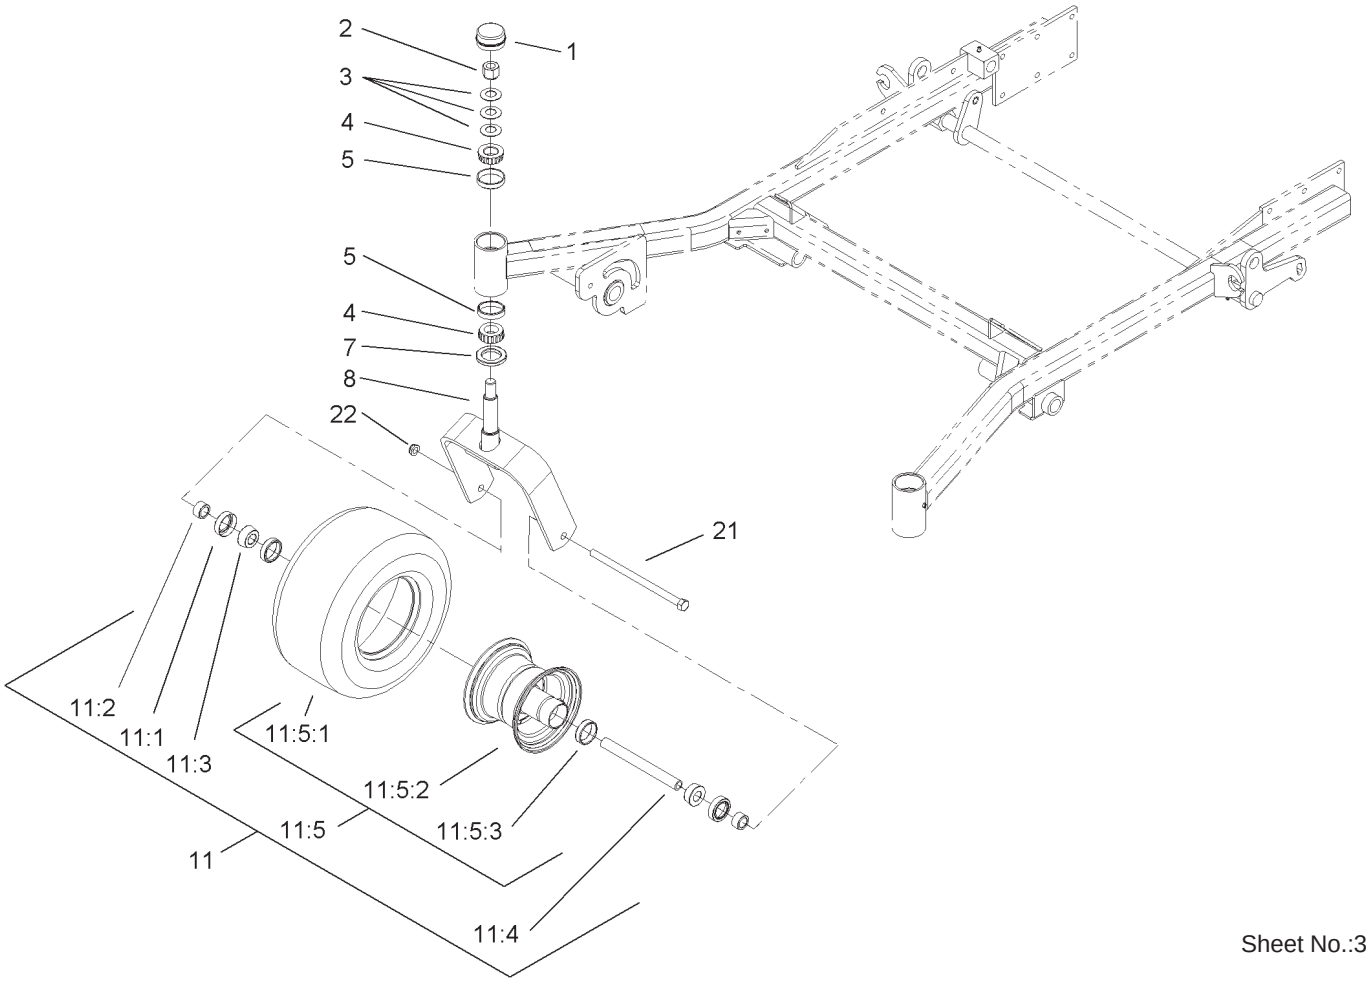


Sheet No.:3

Castor and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	1–543513	2	Cap–Grease
2	3296–51	2	Nut–Lock, NI
3	1–633508	6	Washer–Bellville
4	254–94	4	Bearing–Cone, Taper
5	254–72	4	Bearing–Cup, Tapered
7	1–543511	2	Seal–Grease
8	103–1474–01	2	Fork–Caster
11	1–644251	2	Caster Wheel ASM
11:1	1–633580	2	Seal–Bearing
11:2	1–633581	2	Spacer–Bearing
11:3	1–633585	2	Bearing–Cone, Taper
11:4	1–633959	1	Spacer–Caster, Front
☆11:5		1	Wheel And Tire ASM
11:5:1	1–523009	1	Tire
11:5:2	1–633987	1	Wheel
11:5:3	1–633584	2	Bearing–Cup
21	325–39	2	Screw–HH
22	3296–45	2	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

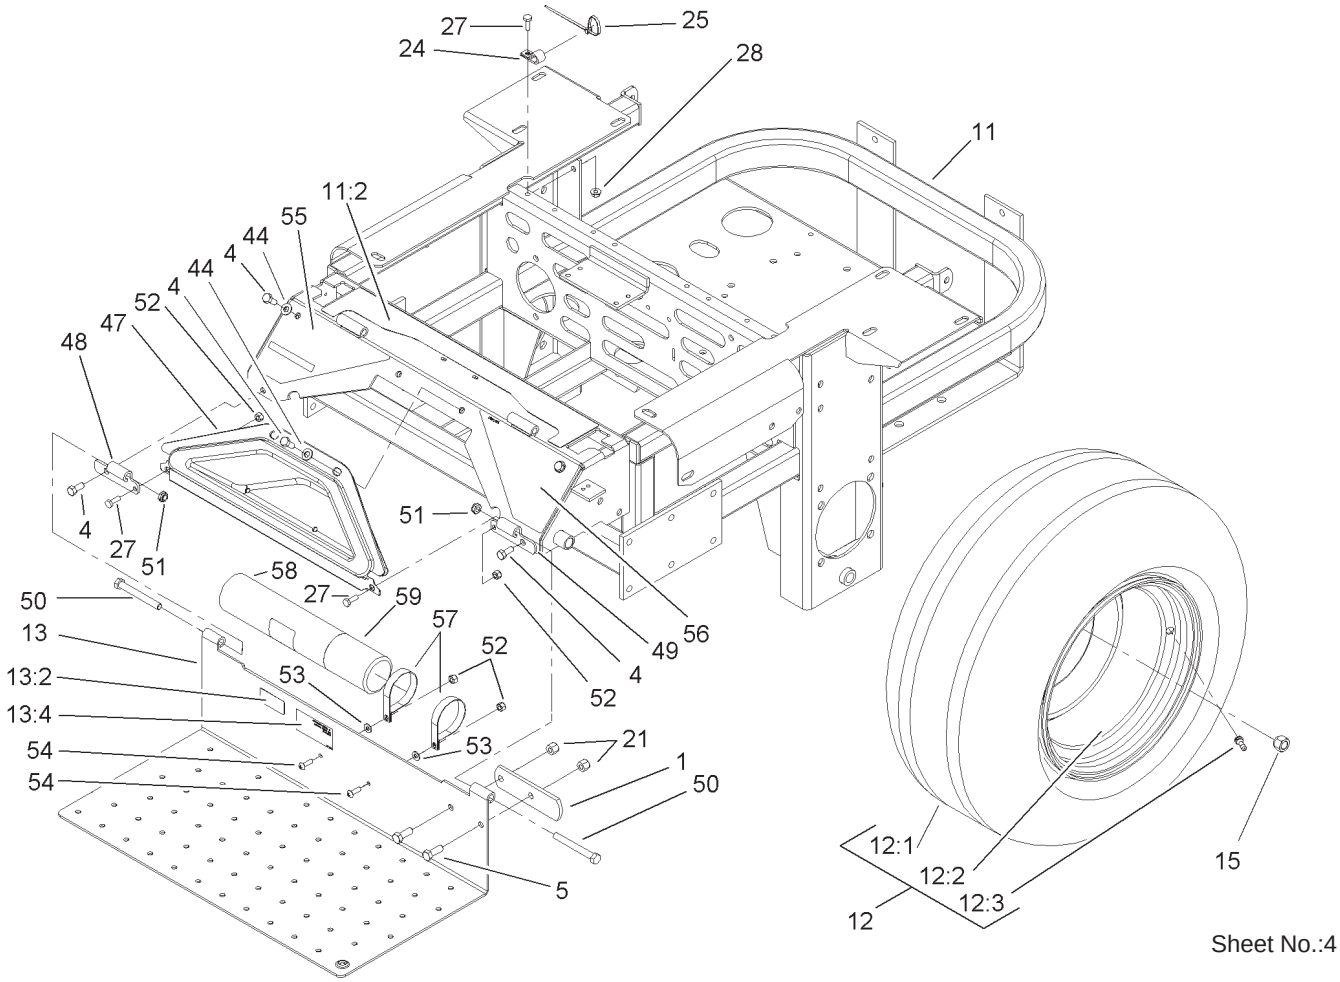


Sheet No.:4

Main Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	1–633964–03	1	Stop–Brake, Park
4	322–43	6	Screw–HH
5	323–6	2	Screw–HH
11	106–6599	1	Main Frame ASM
11:2	103–2433	1	Decal–Console, Top
12	1–633970	2	Wheel And Tire ASM
12:1	1–633993	1	Tire
12:2	1–633992	1	Wheel
12:3	232–27	1	Stem–Valve
13	107–1858	1	Rear Floorpan ASM
13:2	98–4387	1	Decal–Protection, Ear
13:4	107–1864	1	Decal–Location, Manual
15	242–50	8	Nut–Lug
21	3296–39	2	Nut–Lock, NI
24	1–513762	1	Clip–Loom
25	1–303335	1	Tie–Plastic
27	321–4	3	Screw–HH
28	32128–33	1	Nut–HF
44	3256–70	6	Washer–Flat
47	106–7498	1	Pocket
48	106–7488–03	1	Hinge–Floorpan, LH
50	323–20	2	Screw–HH
51	3296–59	2	Nut–Lock, NI
52	3296–42	4	Nut–Lock, NI
53	3256–63	2	Washer–Flat

Ref. No.	Part No.	Qty.	Description
54	3258–166	2	Screw
55	106–9989	1	Decal–Warning
56	106–7492	1	Decal–Danger
57	107–1865	2	R–Clamp
58	104–7050	1	Housing–Manual
59	104–7048	1	Cap–Housing

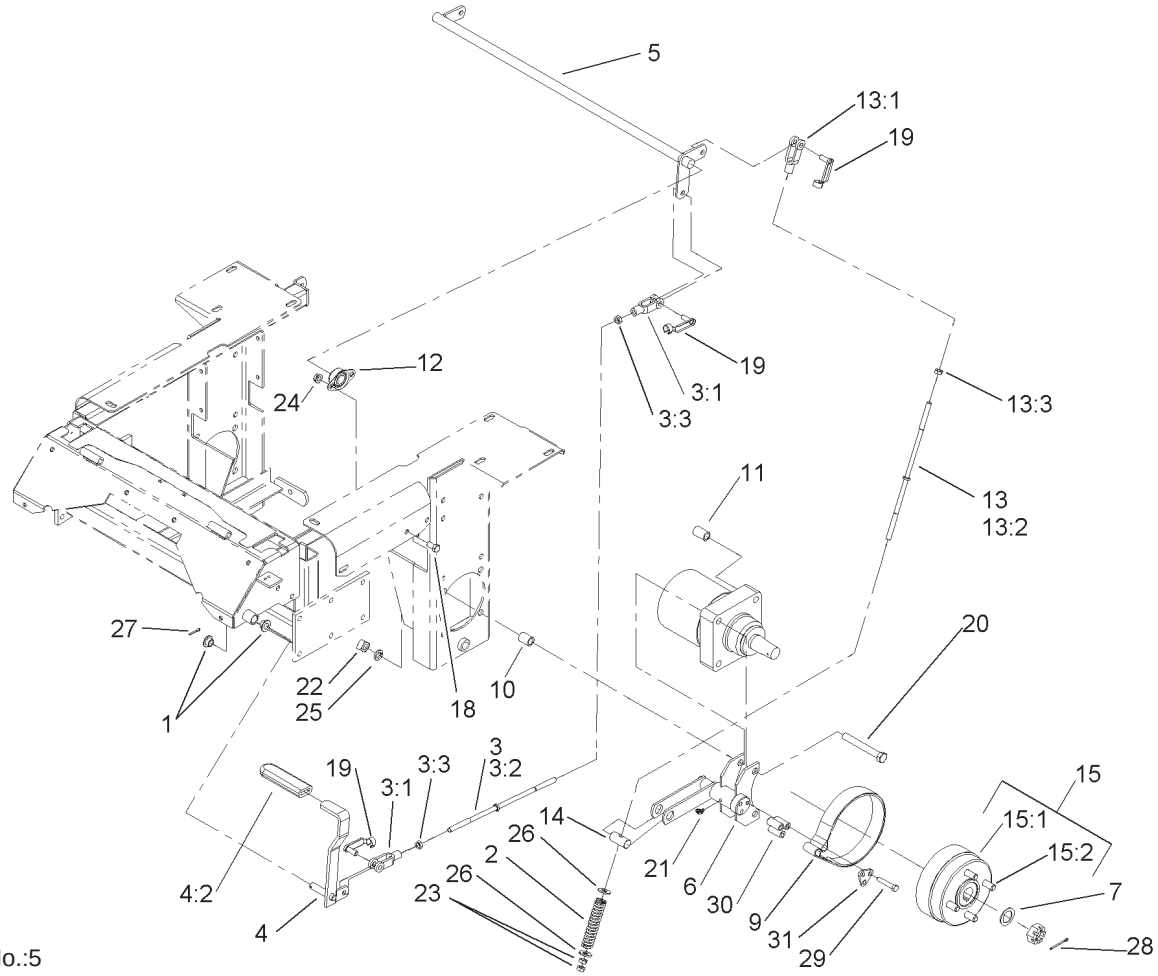


Sheet No.:5

Brake and Wheel Hub Assembly

Ref. No.	Part No.	Qty.	Description
1	1–513140	2	Bearing–Control
2	1–633454	2	Spring–Brake
3	103–4332	1	Brake Rod And Yoke ASM
3:1	1–633131	2	Yoke–Linkage, Brake
3:2	1–633477	1	Rod–Brake
3:3	3219–3	2	Nut–HH
4	1–634500	1	Brake Lever ASM
4:2	1–633268	1	Grip–Lever, Brake
5	1–632217–03	1	Shaft–Brake
6	103–0352–03	2	Bracket–Brake
7	1–523157	2	Washer–Spacer
9	103–0355	2	Band–Brake
10	1–633380	4	Spacer–Wheel, Short
11	1–633382	4	Spacer–Wheel, Long
12	1–633102	2	Bearing–Flange, Side
13	103–4333	2	Brake Rod And Yoke ASM
13:1	1–633131	1	Yoke–Linkage, Brake
13:2	1–633477	1	Rod–Brake
13:3	3219–3	1	Nut–HH
14	1–633144	2	Pin–Trunion
15	103–0590	2	Hub–Wheel
15:1	103–0589	1	Wheel Hub ASM
15:2	1–633926	4	Stud–Wheel
18	323–4	4	Screw–HH

Ref. No.	Part No.	Qty.	Description
19	103–2399	4	Pin–Spring, Clevis
20	325–17	8	Screw–HH
21	1481	2	Fitting–Grease
22	103–0131	8	Nut–Square
23	3219–3	4	Nut–HH
24	3290–357	4	Nut–HHF
25	3253–7	8	Washer–Lock
26	3256–4	4	Washer–Flat
27	3272–10	1	Pin–Cotter
28	1–806800	2	Pin–Cotter
29	322–9	6	Screw–HH
30	103–0384	6	Spacer
31	103–0374	2	Retainer–Band, Brake

3329–734

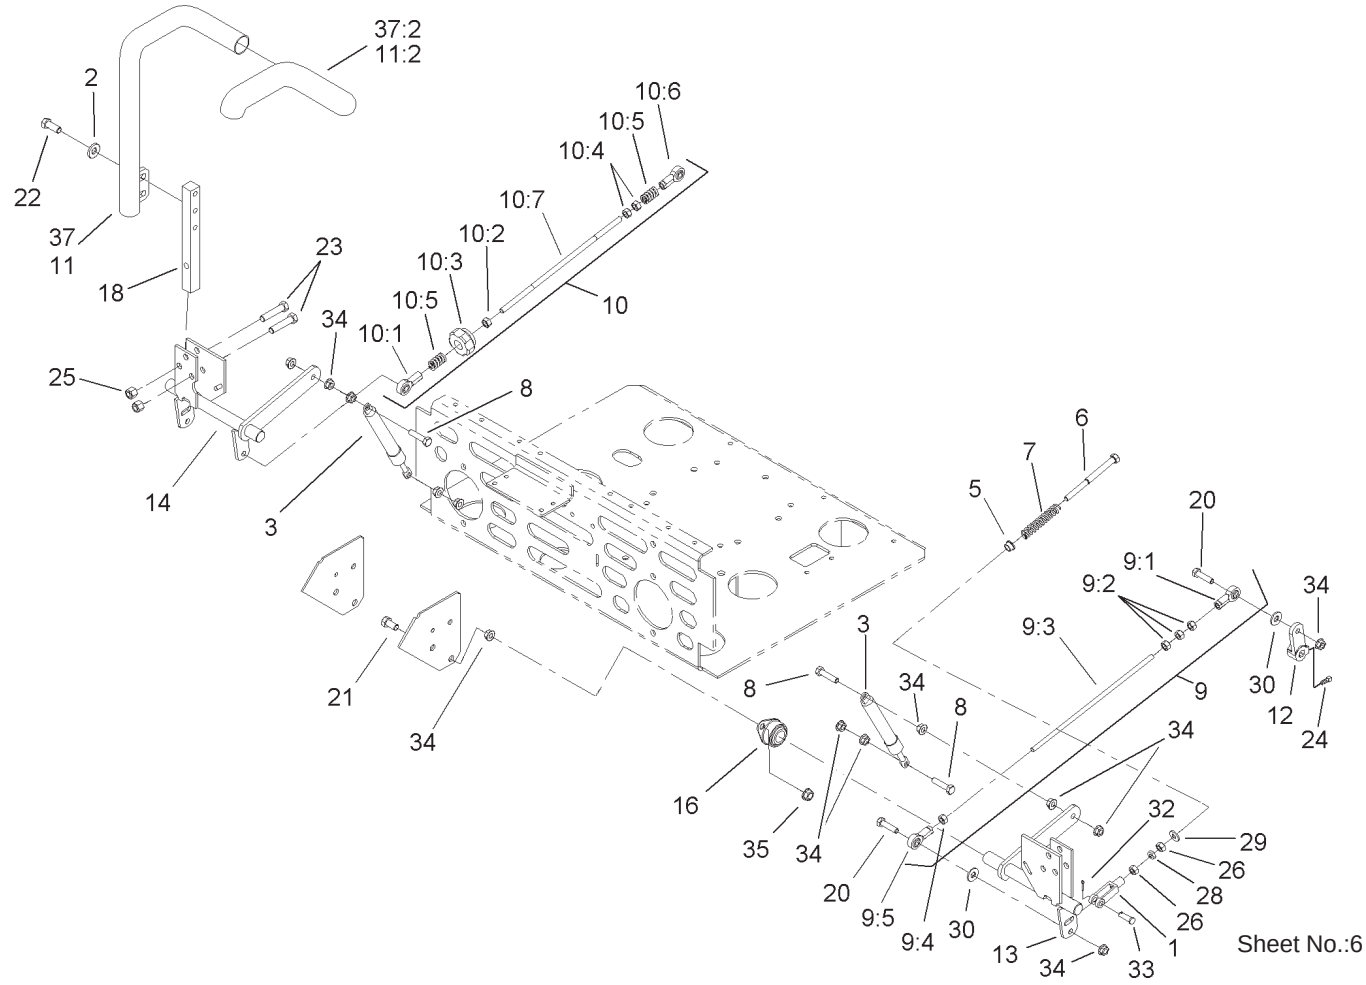


Steering Control Assembly

Ref. No.	Part No.	Qty.	Description
1	1–303105	2	Yoke–Adjustable
2	98–5975	4	Washer–Belleville
3	103–4079	2	Damper–Motion Control
5	1–603735	2	Bushing–Flanged
6	1–603737	2	Bolt–Return, Neutral
7	1–603807	2	Spring–Return, Neutral
8	1–403180	4	Screw–HH
☆9		1	Tracking Rod ASM
9:1	1–543017	1	Balljoint–RH
9:2	3219–2	3	Nut–Hex
9:3	103–3064	1	Link–Rod, Tracking
9:4	1–804524	1	Nut
9:5	1–633152	1	Balljoint–Thread, LH
☆10		1	Tracking Rod ASM
10:1	1–543017	1	Balljoint–RH
10:2	3219–2	1	Nut–Hex
10:3	103–3060	1	Knob–Tracking
10:4	1–804524	2	Nut
10:5	1–323245	2	Spring–Compression
10:6	1–633152	1	Balljoint–Thread, LH
10:7	103–3064	1	Link–Rod, Tracking
11	106–9982	1	LH Lever ASM
11:2	106–9987	1	Grip–Control, Motion
12	1–632208	2	Arm–Control, Pump

Ref. No.	Part No.	Qty.	Description
13	103–4781	1	Control–Motion, LH
14	103–4782	1	Control–Motion, RH
16	1–633102	4	Bearing–Flange, Side
18	103–0407	2	Arm–Shaft, Control
20	322–6	4	Screw–HH
21	323–4	8	Screw–HH
22	323–6	4	Screw–HH
23	323–9	6	Screw–HH
24	1–803022	2	Screw–Set
25	3296–39	6	Nut–Lock, NI
26	3219–2	4	Nut–Hex
28	3220–2	2	Nut
29	3256–2	2	Washer–Flat
30	3256–3	4	Washer–Flat
32	3272–5	2	Pin–Cotter
33	1–808280	2	Pin–Clevis
34	32128–20	16	Nut–HF
35	3290–357	8	Nut–HHF
37	106–9983	1	RH Lever ASM
37:2	106–9987	1	Grip–Control, Motion

☆ Not serviced separately

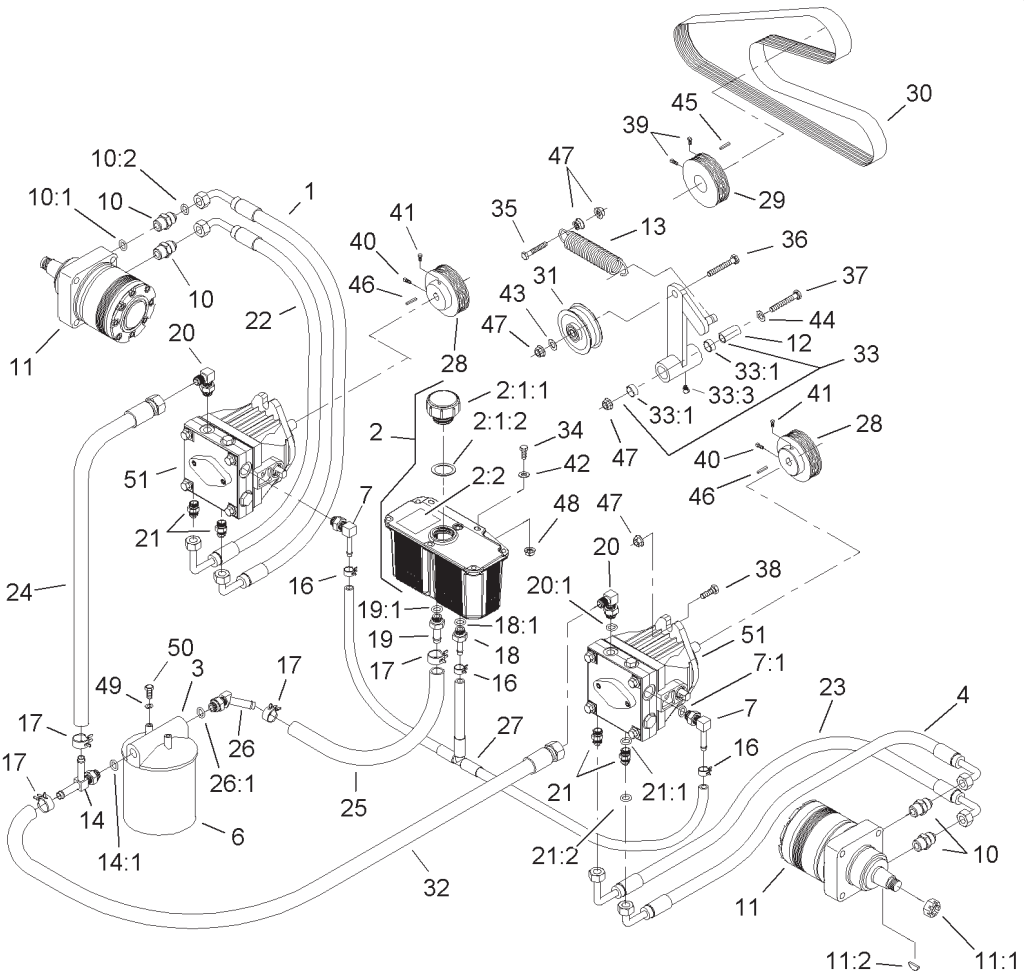


Sheet No.:7

Hydraulic System Assembly

Ref. No.	Part No.	Qty.	Description
1	103–3736	1	HYD Hose ASM
2	103–1947	1	HYD Reservoir ASM
2:1:1	103–1948	1	Cap–Reservoir, HYD
2:1:2	103–1949	1	Gasket–Cap
2:2	1–523552	1	Decal–Tank, HYD
3	104–7836	1	Head–Filter
4	103–3733	1	HYD Hose ASM
6	1–633752	1	Filter–HYD, Winter
6	1–633750	1	Filter–HYD
7	103–1799	2	Elbow–90°
7:1	237–42	1	O–Ring
10	1–603991	4	Fitting–Straight
10:1	237–80	1	O–Ring
10:2	1–603992	1	O–Ring
11	1–523328	2	Motor–Wheel
11:1	1–809036	1	Nut–HH
11:2	3257–42	1	Key–Woodruff
*11:99	103–2748	1	Drive Link Kit
*11:99	1–000139	1	Bearing Kit
*11:99	1–000099	1	Seal Kit
12	1–603384	1	Bushing–Pivot, Idler
13	103–3330	1	Spring–Extension
14	103–1828	1	Adapter–Run, Tee
14:1	237–42	1	O–Ring
16	103–1716	3	Clamp–Hose
17	103–1988	4	Clamp–Hose

Ref. No.	Part No.	Qty.	Description
18	103–1801	1	Adapter–Straight
18:1	237–42	1	O–Ring
19	103–1912	1	Adapter–Straight
19:1	237–42	1	O–Ring
20	103–1802	2	Fitting–HYD, 90°
20:1	237–42	1	O–Ring
21	1–603990	4	Fitting–Straight
21:1	237–79	1	O–Ring
21:2	1–603992	1	O–Ring
22	103–3737	1	HYD Hose ASM
23	103–3735	1	HYD Hose ASM
24	103–1826	1	HYD Hose ASM
25	103–1808	1	Hose–HYD
26	103–1807	1	Elbow–45°
26:1	237–42	1	O–Ring
27	103–1806	1	HYD Hose ASM
28	1–633568	2	Sheave
29	1–633567	1	Sheave
30	1–633749	1	Belt–Drive, Pump
31	1–633167	1	Sheave–Idler
32	103–1827	1	HYD Hose ASM
33	1–634277	1	Bearing Arm ASM
33:1	1–513034	2	Sleeve–Bearing
33:3	302–40	1	Fitting–Grease
34	321–6	2	Screw–HH
35	323–8	1	Screw–HH

* Not illustrated

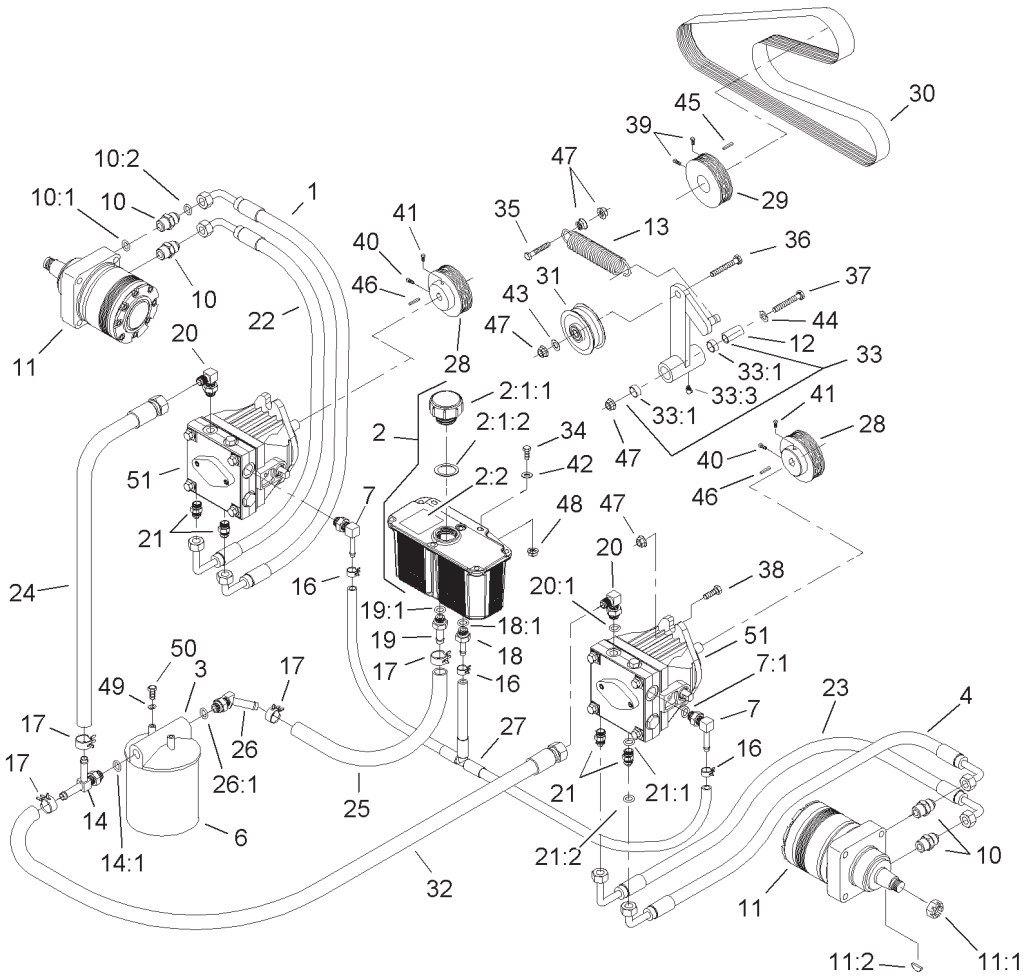


Sheet No.:7

Hydraulic System Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
36	323–9	1	Screw–HH
37	1–800805	1	Screw–HH
38	323–7	4	Screw–HH
39	1–803022	2	Screw–Set
40	30–1710	2	Screw
41	1–803050	2	Screw–Set
42	3256–22	2	Washer–Flat
43	3256–3	1	Washer–Flat
44	3256–4	1	Washer–Flat
45	13–2840	1	Key–Square
46	1–807272	2	Key
47	3290–357	8	Nut–HHF
48	32128–33	2	Nut–HF
49	1–805004	2	Washer–Lock
50	321–3	2	Screw–HH
51	103–2675	2	Pump–HYD
*51:1	103–2664	1	Input Shaft Kit
*51:2	94–6922	1	Bearing–Thrust
*51:3	103–2666	1	Cylinder Block Kit
*51:4	105–6185	1	Plate–Valve
*51:5	105–6184	1	Seal Overhaul Kit
*51:7	106–2053	1	Shock Valve Kit

Ref. No.	Part No.	Qty.	Description

* Not illustrated

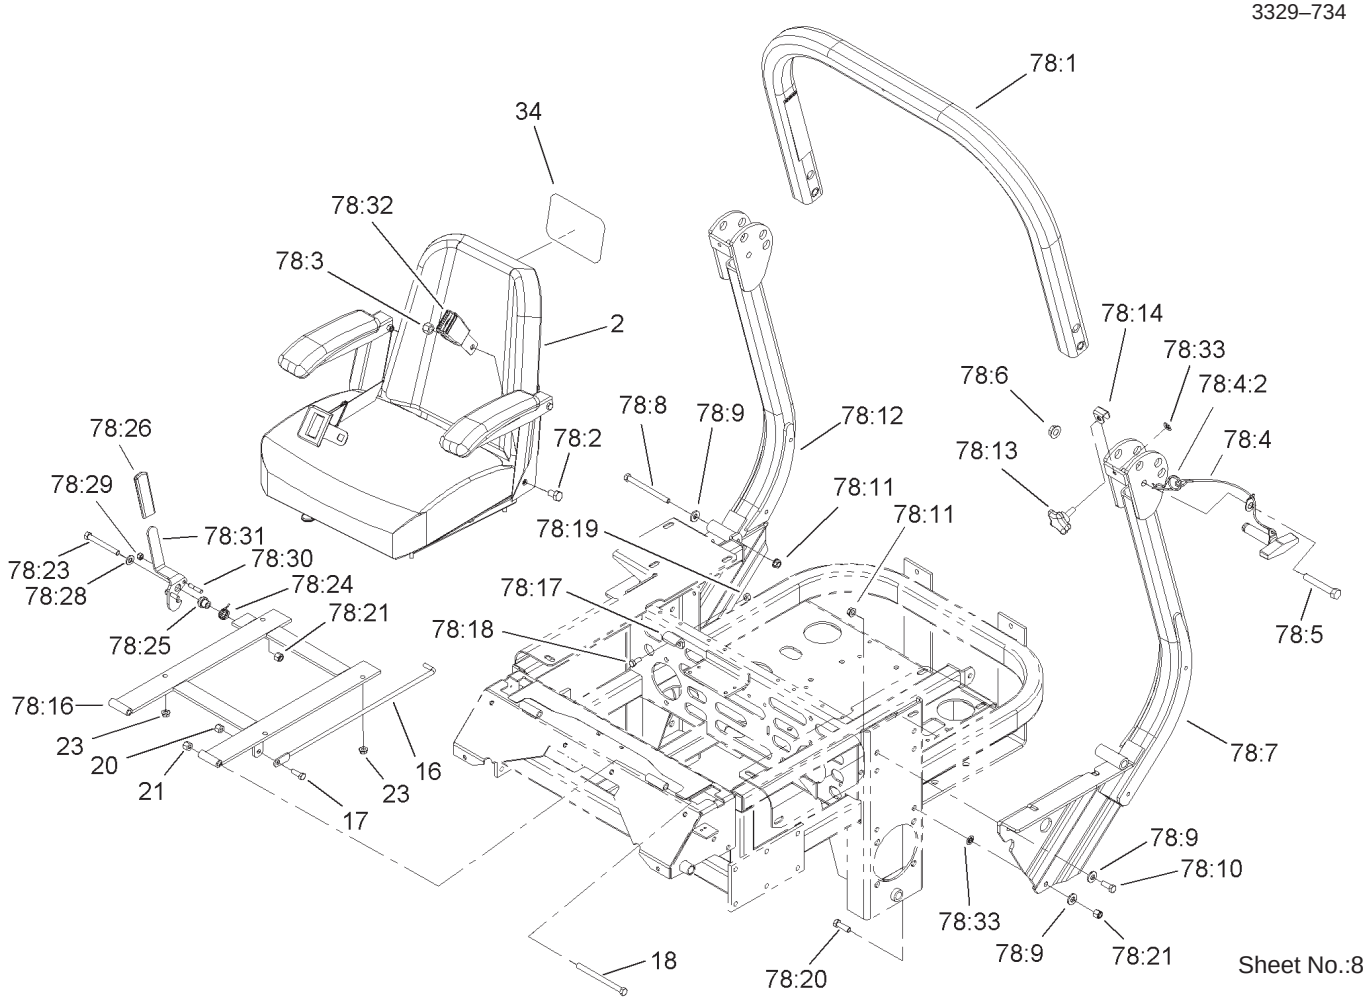


Seat and Roll–Over–Protection–System Assembly

Ref. No.	Part No.	Qty.	Description
2	107–1867	1	Seat ASM
16	1–633293	1	Rod–Holdup, Seat
17	322–5	1	Screw–HH
18	323–39	2	Screw–HH
20	3296–29	3	Nut–Lock, NI
21	3296–39	5	Nut–Lock, NI
23	32128–20	4	Nut–HF
78	107–0038	1	Rops
☆78:1		1	Upper Tube ASM
78:2	3212–4	2	Screw–HH
78:3	3296–7	2	Nut–Lock NI
78:4	107–3060	2	Pin Latch ASM
78:4:2	107–3155	1	Hairpin
78:5	325–13	2	Screw–HH
78:6	32128–23	2	Nut–HF
☆78:7		1	LH Rops ASM
78:8	323–23	2	Screw–HH
78:9	98–5975	8	Washer–Belleville
78:10	323–6	4	Screw–HH
78:11	3290–357	6	Nut–HHF
☆78:12		1	RH Rops ASM
78:13	106–0887	2	Knob
78:14	107–3124	2	Clip
78:16	107–3052–03	1	Frame–Support, Seat
78:17	107–3058	1	Catch–Latch, Seat
78:18	322–3	2	Screw–HH

Ref. No.	Part No.	Qty.	Description
78:19	3296–29	2	Nut–Lock, NI
78:20	323–7	2	Screw–HH
78:21	3296–39	3	Nut–Lock, NI
78:23	323–20	1	Screw–HH
78:24	107–0076	1	Spring–Torsion
78:25	107–0075	1	Bushing–Latch, Seat
78:26	62–9130	1	Grip–Handle
78:28	3256–24	1	Washer–Flat
78:29	3296–42	2	Nut–Lock, NI
78:30	107–0095	2	Pin
78:31	107–0094	1	Latch
78:32	103–4317	1	Belt–Seat
78:33	107–3154	4	Nut–Push

☆ Not serviced separately

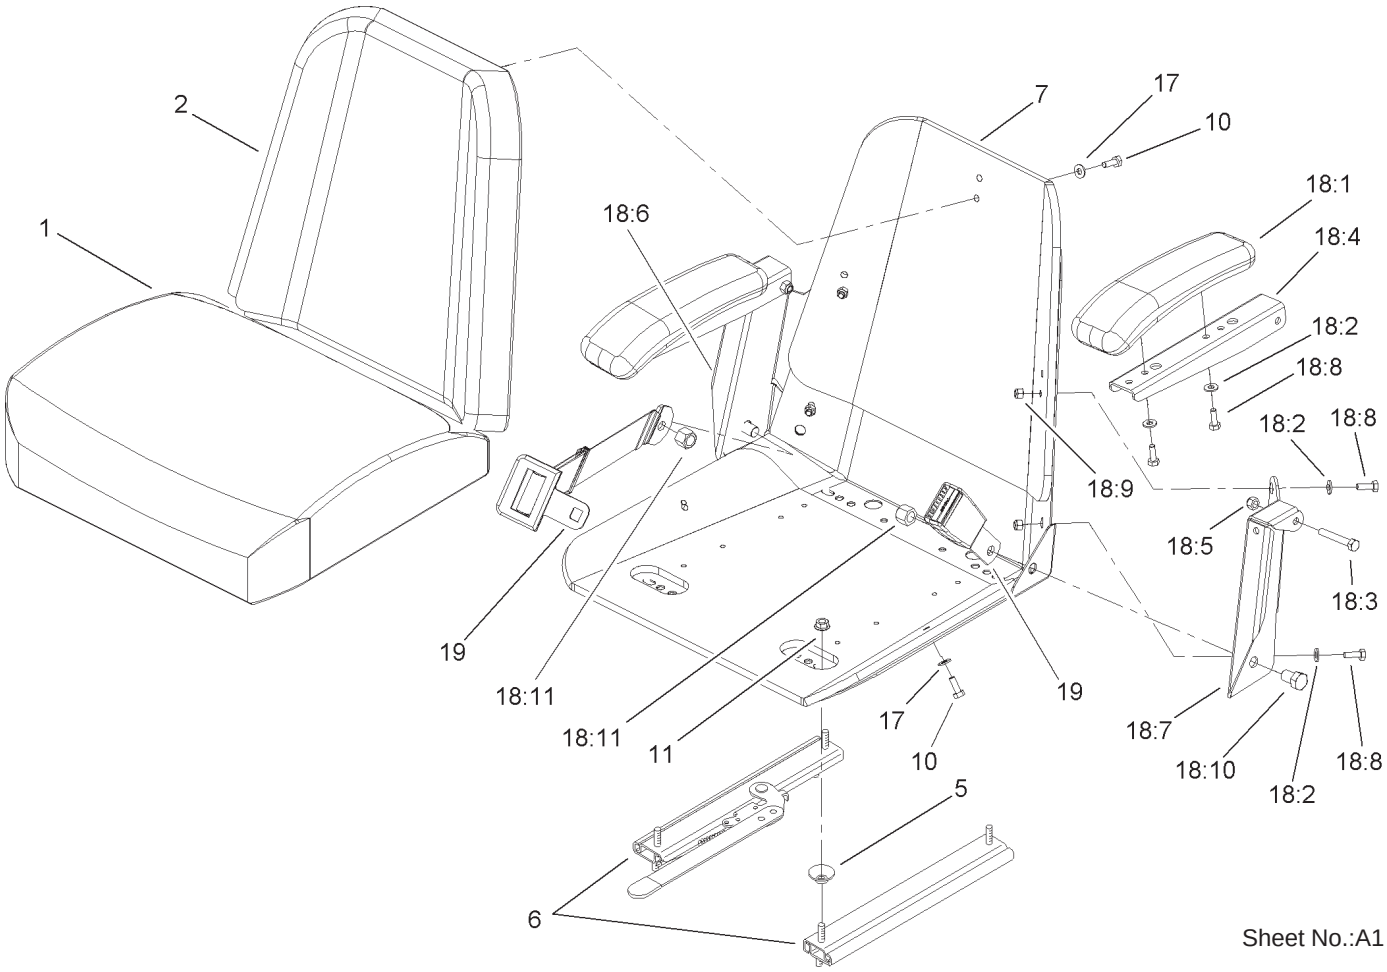


Sheet No.:A1

Seat Assembly No. 107–1867

Ref. No.	Part No.	Qty.	Description
1	103–0290	1	Cushion–Seat, Bottom
2	104–7754	1	Cushion–Seat, Back
5	1–543401	4	Spacer–Track
6	1–643255	1	Track–Seat
7	1–633859	1	Frame–Seat
10	321–30	11	Screw–HH
11	32128–20	4	Nut–HF
17	3256–22	11	Washer–Flat
18	105–3620	1	Armrest Kit
18:1	1–633710	2	Cushion–Armrest
18:2	3256–22	4	Washer–Flat
18:3	322–10	2	Screw–HH
18:4	105–3623	2	Channel–Armrest
18:5	32153–3	2	Nut–Lock
18:6	105–3621	1	Bracket–Armrest, RH
18:7	105–3622	1	Bracket–Armrest, LH
18:8	321–30	6	Screw–HH
18:9	3296–42	4	Nut–Lock, NI
18:10	325–2	2	Screw–HH
18:11	3296–23	2	Nut–Lock, NI
19	103–4317	1	Belt–Seat

Ref. No.	Part No.	Qty.	Description

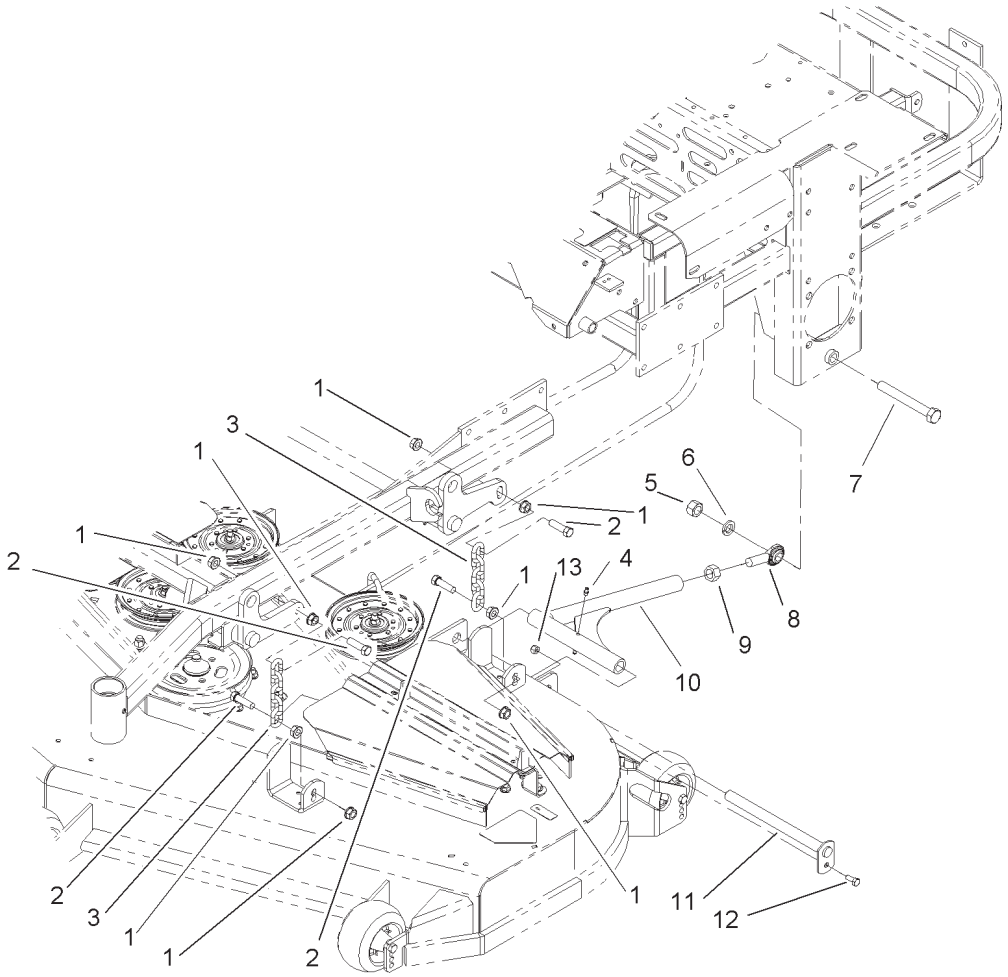


Sheet No.:9

Deck Mounting Assembly

Ref. No.	Part No.	Qty.	Description
1	32128–37	16	Nut–HF
2	1–800811	8	Screw–Cap, HH
3	1–633447	4	Chain–Lift, Deck
4	302–19	4	Fitting–Grease
5	3217–11	2	Nut–Hex
6	3253–8	2	Washer–Lock
7	327–11	2	Screw–HH
8	1–633029	2	Balljoint–Spherical
9	3219–6	2	Nut–Hex
10	103–1072–01	2	Strut
11	1–632199–01	2	Pin–Strut
12	322–3	2	Screw–HH
13	3296–29	2	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

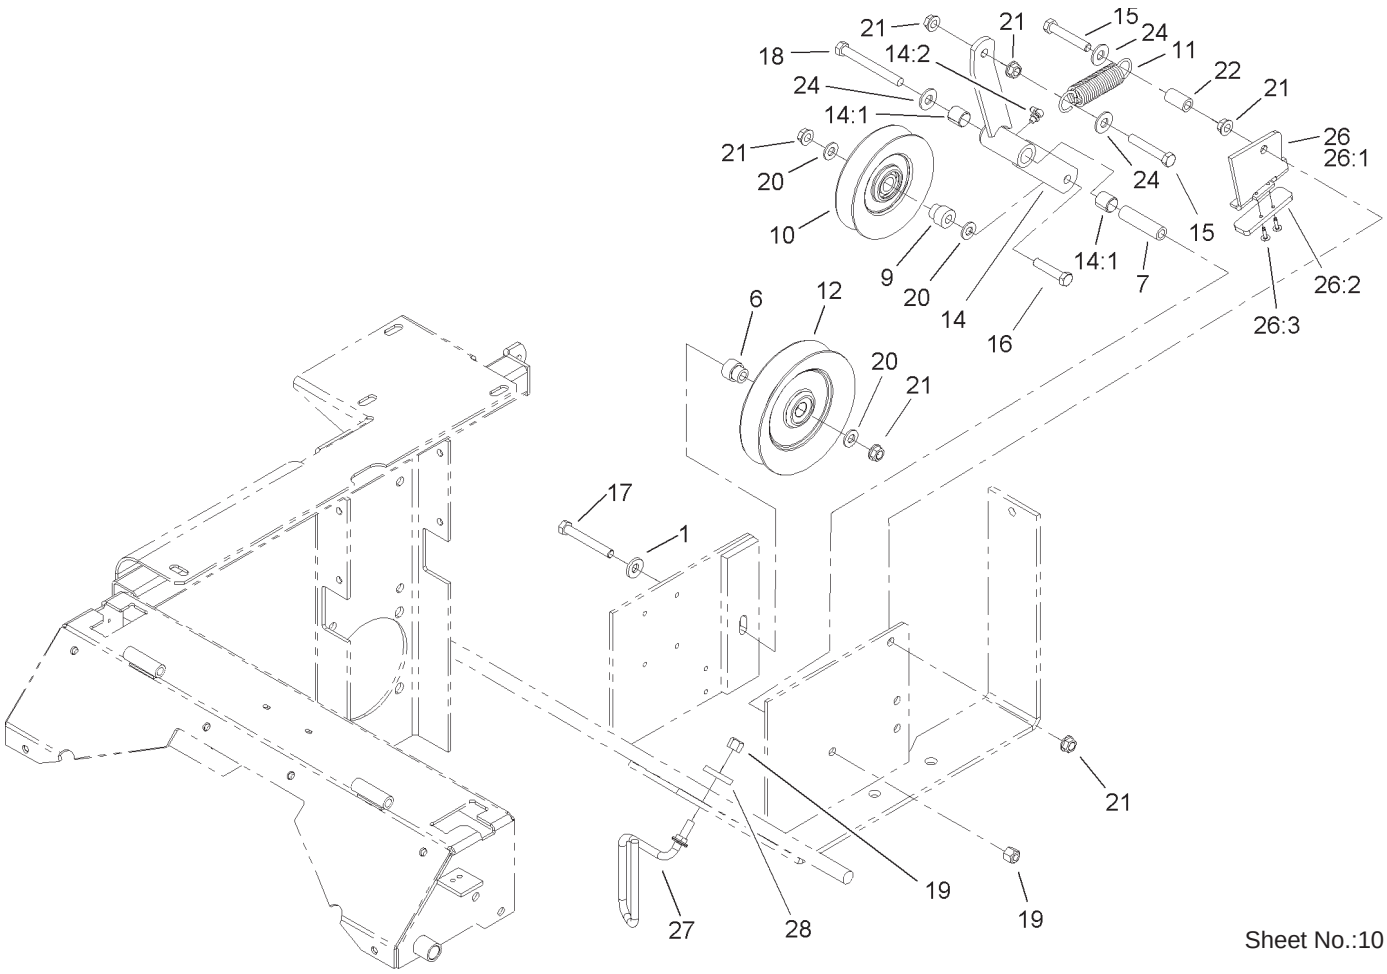


Sheet No.:10

Drive Idler Assembly

Ref. No.	Part No.	Qty.	Description
1	98–5975	1	Washer–Belleville
6	103–2627	1	Bushing–Idler
7	1–603384	1	Bushing–Pivot, Idler
9	1–603496	1	Bushing–Idler
10	99–4638	1	Idler
11	1–603402	1	Spring–Extension
12	1–633166	1	Pulley–Idler
14	103–3147	1	Arm ASM
14:1	1–513034	2	Sleeve–Bearing
14:2	302–40	1	Fitting–Grease
15	323–12	2	Screw–HH
16	323–9	1	Screw–HH
17	323–13	1	Screw–HH
18	1–800805	1	Screw–HH
19	3296–39	2	Nut–Lock, NI
20	3256–24	3	Washer–Flat
21	3290–357	6	Nut–HHF
22	1–603401	1	Spacer–Fender
24	3256–4	3	Washer–Flat
☆26		1	Travel Limiter ASM
26:1	106–3228–03	1	Plate–Limiter, Pulley
26:2	106–3229	1	Pad–Bumber
26:3	3269–24	2	Rivet
27	105–7772	1	Guide–Belt
28	112843	1	Washer

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

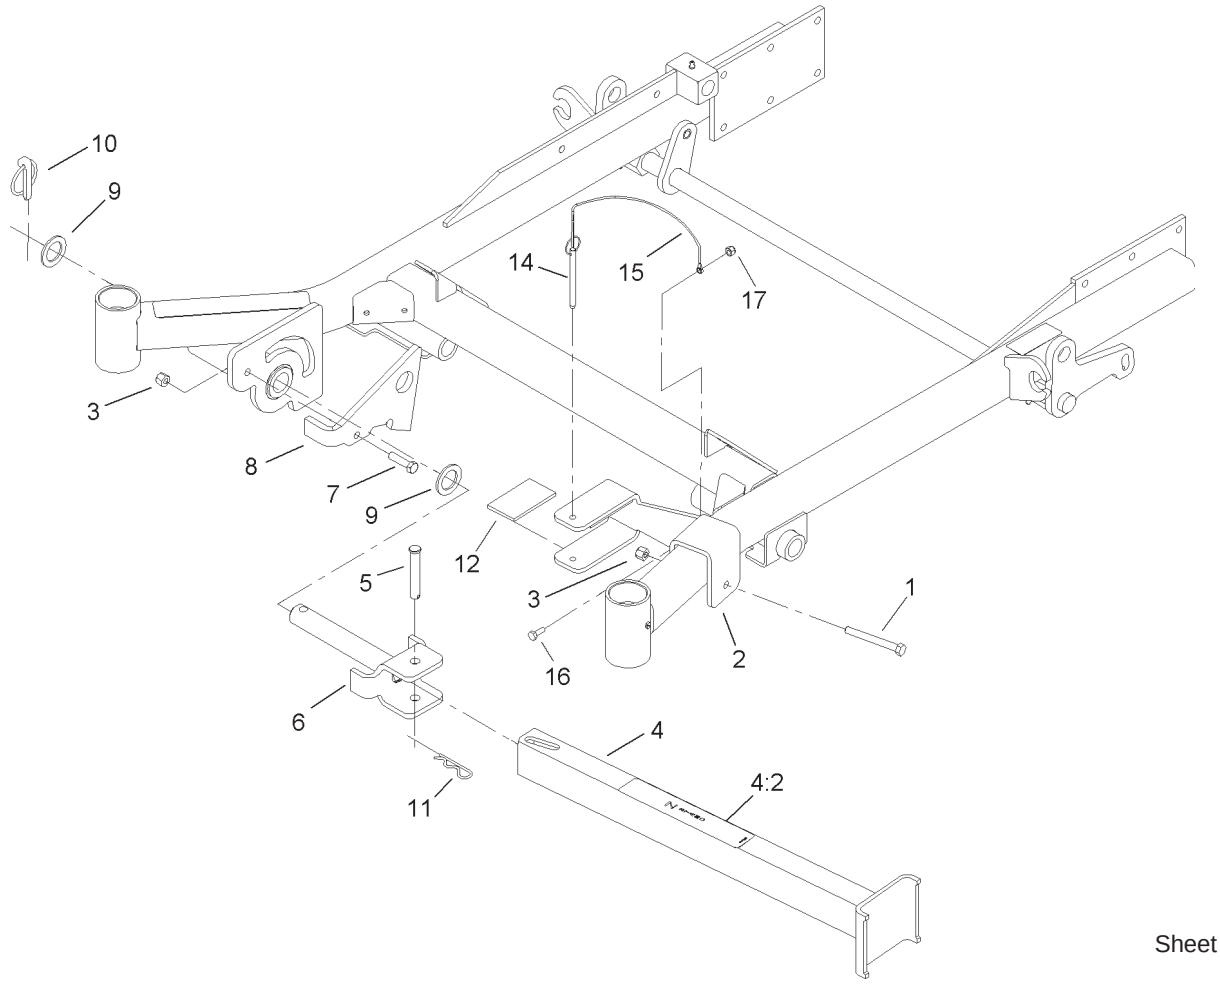


Sheet No.:11

Z–Stand Assembly

Ref. No.	Part No.	Qty.	Description
1	323–20	1	Screw–HH
2	100–6542–01	1	Bracket–Cradle
3	3296–39	2	Nut–Lock, NI
4	107–1874	1	Leg ASM
4:2	106–7464	1	Decal
5	283–55	1	Pin–Clevis
6	100–9692–01	1	Pivot Pin ASM
7	323–8	1	Screw–HH
8	100–9686–01	1	Bracket–Latch
9	3–6781	2	Washer–Thrust
10	283–71	1	Pin–Lynch
11	3290–355	1	Pin–Hair
12	100–6547	2	Cushion–Rubber
14	105–1647	1	Pin–Hitch, Cotterless
15	100–9385	1	Lanyard–Nylon
16	321–4	1	Screw–HH
17	3296–42	1	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

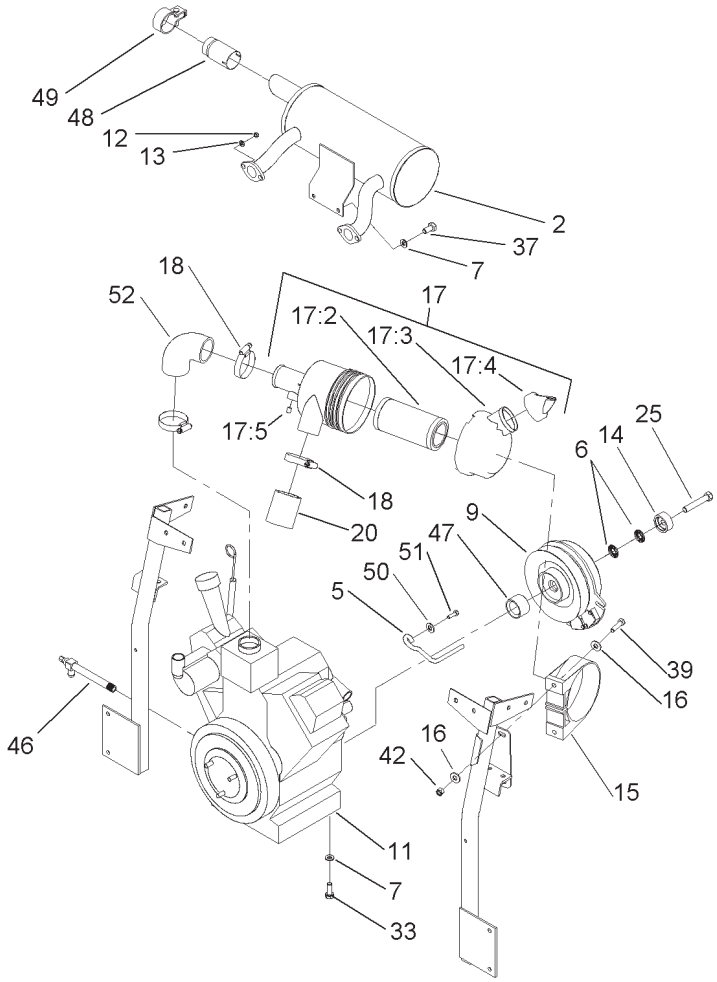


Sheet No.:14

Engine, Clutch, Air Cleaner and Muffler Assembly

Ref. No.	Part No.	Qty.	Description
2	103–2759	1	Muffler
5	52–4780	1	Rod–Belt
6	1–603610	2	Washer–Spring
7	1–303334	6	Washer–Spring
9	103–2453	1	Clutch
☆11	103–0112	1	Engine–Kawasaki, Fd750d–As03
12	33013–00	4	Nut–Hex
13	1–805004	4	Washer–Lock
14	103–0152	1	Keeper–Clutch
15	95–5806	1	Bracket–Mounting
16	3256–3	4	Washer–Flat
17	95–5805	1	Air Cleaner ASM
17:2	93–2195	1	Filter
17:3	94–3652	1	Cover ASM
17:4	94–1414	1	Valve–Vacuator
17:5	285–17	1	Plug–Pipe
18	1–643009	2	Clamp–Hose
20	1–643084	1	Hose–Inlet, Air
25	48–7570	1	Screw–HH
33	33115–025	4	Screw–HH
37	33115–020	2	Screw–HH
39	322–6	3	Screw–HH
42	3296–29	2	Nut–Lock, NI
46	103–3068	1	Valve–Drain, Oil
47	103–0114	1	Spacer–Clutch

Ref. No.	Part No.	Qty.	Description
48	103–1511	1	Arrestor–Spark
49	103–1512	1	Clamp–Muffler
50	3256–24	1	Washer–Flat
51	48–7630	1	Screw
52	1–643083	1	Hose–Aircleaner

☆ Not serviced separately

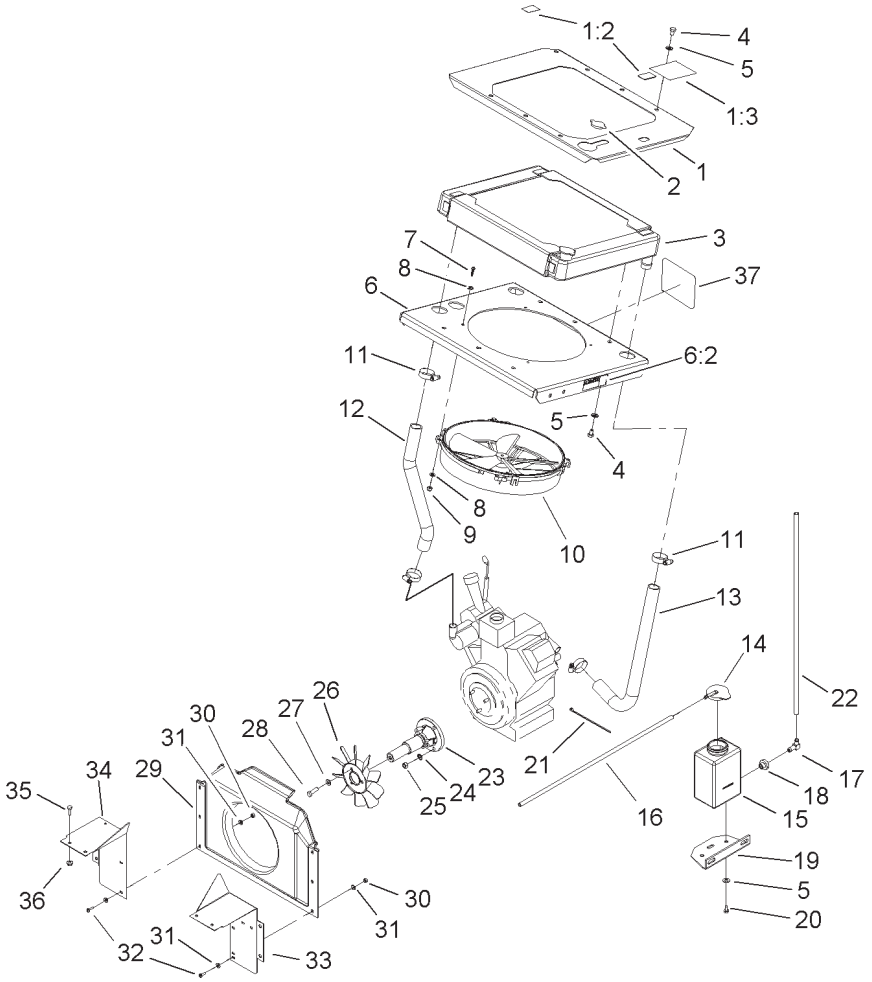


Sheet No.:15

Cooling System Assembly

Ref. No.	Part No.	Qty.	Description
1	104–7843	1	Radiator Trim Plate ASM
1:2	65–2690	2	Decal–Surface, Hot
1:3	104–2449	1	Decal–Coolant
2	1–643161	1	Cap–Radiator
3	103–1046	1	Radiator–Mount
4	322–1	12	Screw–HH
5	3256–23	14	Washer–Flat
6	100–4301	1	Fan Mounting Plate ASM
6:2	1–643253	2	Decal–Fan, Radiator
7	1–803067	4	Screw
8	3256–16	8	Washer–Flat
9	1–804254	4	Nut
10	1–633831	1	Fan
11	1–633989	4	Clamp–Hose
12	103–0074	1	Hose–Inlet, Radiator
13	103–0075	1	Hose–Outlet, Radiator
14	1–643164	1	Cap–Tank, Overflow
15	1–643163	1	Tank–Overflow
16	1–643131	1	Hose
17	1–643259	1	Fitting–Elbow
18	1–513645	1	Bushing–Valve, Fuel
19	103–2603–03	1	Bracket–Bottle
20	321–2	2	Screw–HH
21	1–303287	3	Tie–Plastic

Ref. No.	Part No.	Qty.	Description
22	1–643129	1	Hose
23	1–633851	1	Extension–Crankshaft
24	3255–8	3	Washer–Lock
25	33014–00	3	Nut–Hex
26	1–633869	1	Fan–Pump, Cooling
27	3256–22	3	Washer–Flat
28	1–809095	3	Screw–HSH
29	103–0098	1	Shroud–Fan, HYD
30	3296–2	6	Nut–Lock
31	3256–14	12	Washer–Flat
32	3290–500	6	Screw–PPH
33	103–0895–03	1	Shield–LH
34	1–633794–03	1	Shield–RH
35	321–4	6	Screw–HH
36	32128–33	6	Nut–HF
37	103–3270	1	Decal

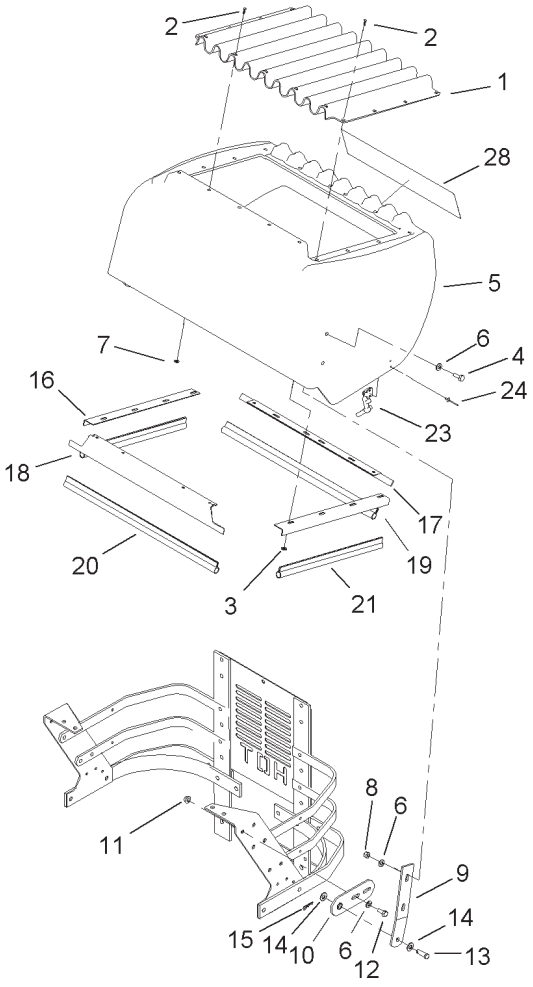


Sheet No.:16

Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	1–633864–03	1	Screen–Radiator
2	1–803072	17	Rivet
3	3256–14	12	Washer–Flat
4	322–4	4	Screw–HH
5	104–5136	1	Hood
6	3256–23	10	Washer–Flat
7	1–303435	5	Washer–Spring
8	3296–29	4	Nut–Lock, NI
9	1–633885–03	2	Plate–Hinge, Hood
10	1–632986–03	2	Shackle–Hinge
11	32128–20	25	Nut–HF
12	322–3	16	Screw–HH
13	1–808285	2	Pin–Clevis
14	3256–24	6	Washer–Flat
15	1–806003	2	Pin–Hair
16	1–643106–03	1	Angle–Radiator, RH
17	1–643108–03	1	Angle–Radiator, Bottom
18	1–643107–03	1	Angle–Radiator, Top
19	1–643105–03	1	Angle–Radiator, LH
20	1–643187	2	Seal–Trim
21	1–643186	2	Seal–Trim
23	1–643188	2	Latch–Rubber
24	923786	4	Rivet–Pop
28	106–7456	1	Decal

Ref. No.	Part No.	Qty.	Description

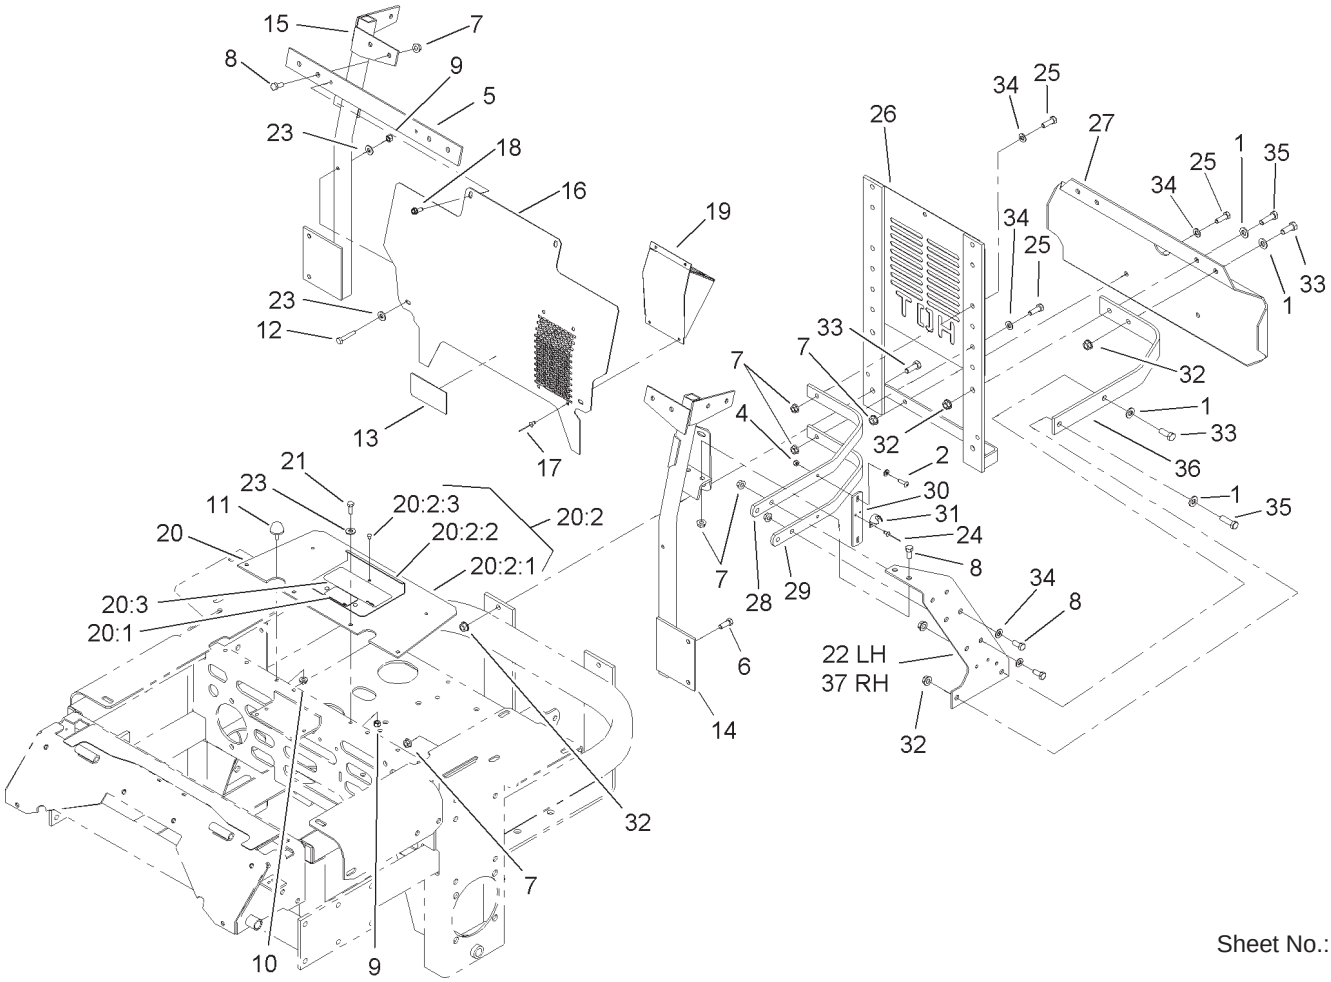


Sheet No.:17

Cooling Mounting Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	3256–24	6	Washer–Flat
2	1–803075	4	Screw–Head, Truss
4	3296–2	4	Nut–Lock
5	1–633878–03	1	Crossbar
6	322–4	4	Screw–HH
7	32128–20	12	Nut–HF
8	322–3	8	Screw–HH
9	3296–42	6	Nut–Lock, NI
10	32128–33	2	Nut–HF
11	1–523420	2	Bumper
12	321–9	2	Screw–HH
13	1–643339	1	Decal–Routing, Belt
14	103–0107–03	1	Brace–Radiator, LH
15	1–632985–03	1	Brace–Radiator, RH
16	103–2870–03	1	Deflector–Air
17	3269–3	4	Rivet–Pop
18	49–2040	2	Screw–Tapping
19	103–0110–03	1	Plenum–Intake, Air
20	1–644276	1	Shield ASM
20:1	1–633462	1	Decal–Important
20:2	1–634308	1	Shield/Lift ASM
20:2:1	103–1308	1	Shield–Engine
20:2:2	1–633300–03	1	Lift–Shield
20:2:3	1–803035	3	Rivet–Pop
20:3	103–0368	1	Decal–Devices, Rotating

Ref. No.	Part No.	Qty.	Description
21	321–4	4	Screw–HH
22	103–0896–03	1	Plate–Side, LH
23	3256–2	6	Washer–Flat
24	923786	4	Rivet–Pop
25	322–5	9	Screw–HH
26	1–632873–03	1	Mount–Radiator, Rear
27	1–633886–03	1	Guard–Bumper
28	1–633897–03	2	Rib–Top
29	1–633898–03	2	Rib–Bottom
30	1–633877–03	2	Bar–Hook, Latch
31	1–643189	2	Keeper–Latch, Rubber
32	3290–357	10	Nut–HHF
33	323–6	6	Screw–HH
34	3256–23	11	Washer–Flat
35	323–7	4	Screw–HH
36	1–633896–03	2	Bar–Mount Frame, Radiator
37	103–0897–03	1	Plate–Side, RH

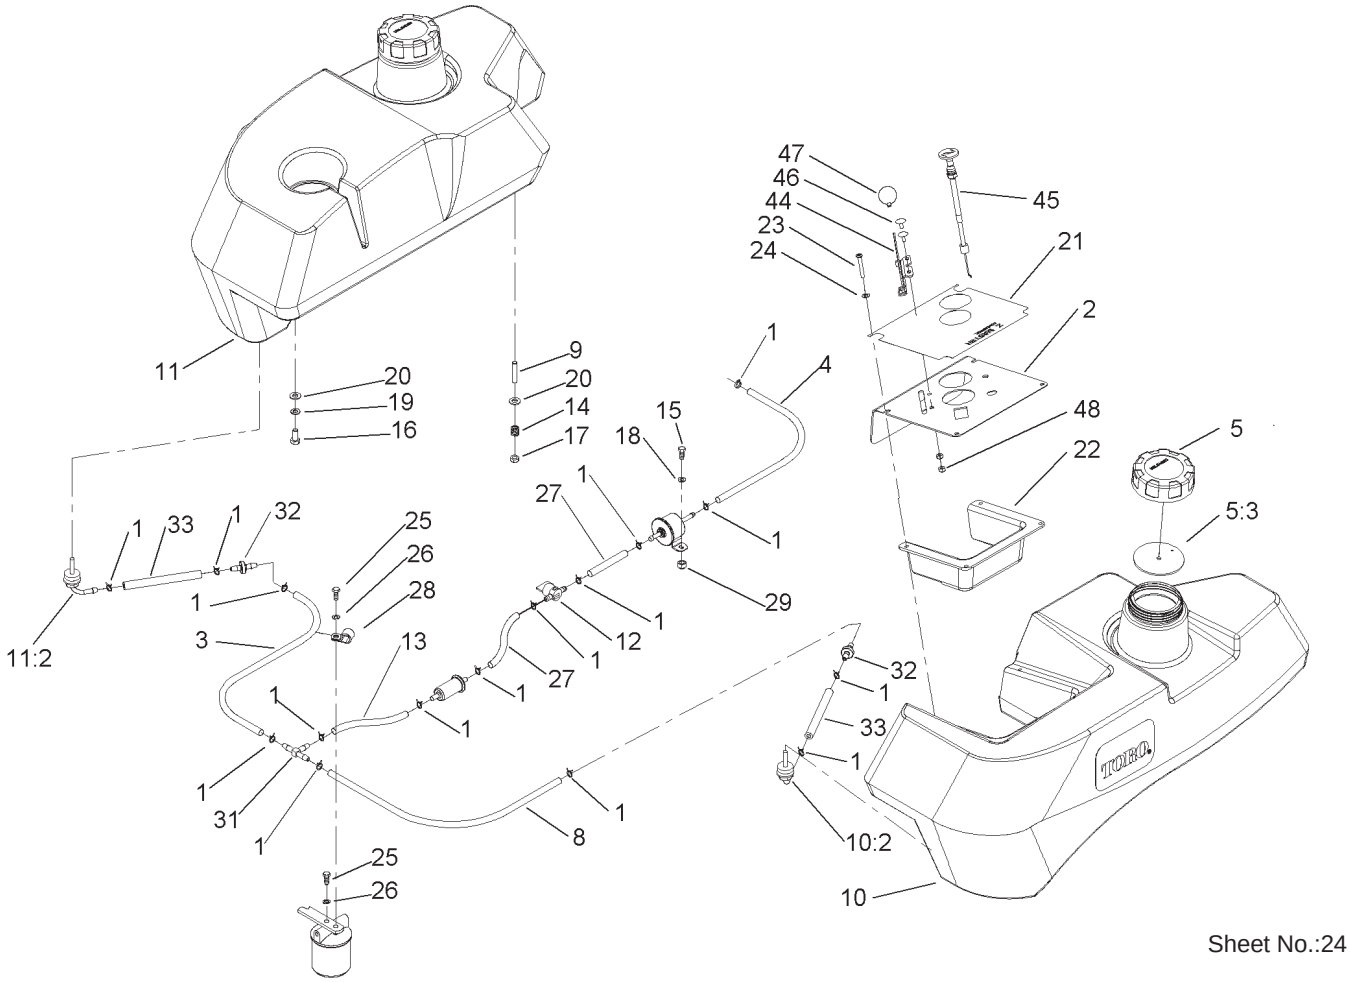


Sheet No.:24

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	1–303077	17	Clamp
2	106–7475–03	1	Panel–Control
3	1–543526	1	Hose–Fuel
4	103–1335	1	Hose–Fuel
5	88–3980	2	Gas Cap ASM
5:3	88–4010	1	Gasket–Cap, Gas
8	80–7360	1	Hose–Fuel
9	1–633023	6	Stud
10	106–9980	1	LH Fuel Tank ASM
10:2	103–2605	1	Fitting–Fuel, Bulkhead
11	106–9979	1	RH Fuel Tank ASM
11:2	103–2605	1	Fitting–Fuel, Bulkhead
12	1–603770	1	Valve–Fuel
13	47–2965	1	Hose–Fuel
14	1–633349	6	Spring–Tank, Fuel
15	321–4	2	Screw–HH
16	322–3	2	Screw–HH
17	3296–47	6	Nut–Lock, NI
18	3256–2	2	Washer–Flat
19	1–805005	2	Washer–Lock
20	3256–23	8	Washer–Flat
21	106–9968	1	Decal–Panel, Control
22	99–4940	1	Shield–Panel, Control
23	1–803071	4	Screw
24	1–303435	4	Washer–Spring
25	321–3	2	Screw–HH

Ref. No.	Part No.	Qty.	Description
26	1–805004	2	Washer–Lock
27	47–2965	2	Hose–Fuel
28	1–513762	1	Clip–Loom
29	32128–33	2	Nut–HF
31	99–5005	1	Fitting–Tee, Barbed
32	99–5000	2	Valve–Check, Fuel
33	99–7190	2	Hose–Fuel
44	1–633696	1	Cable–Throttle
45	106–9962	1	Control–Choke, Push/Pull
46	1–807513	2	Bolt–CARR
47	1–513592	1	Knob–Ball
48	3296–2	2	Nut–Lock
*49	1–303335	4	Tie–Plastic


* Not illustrated

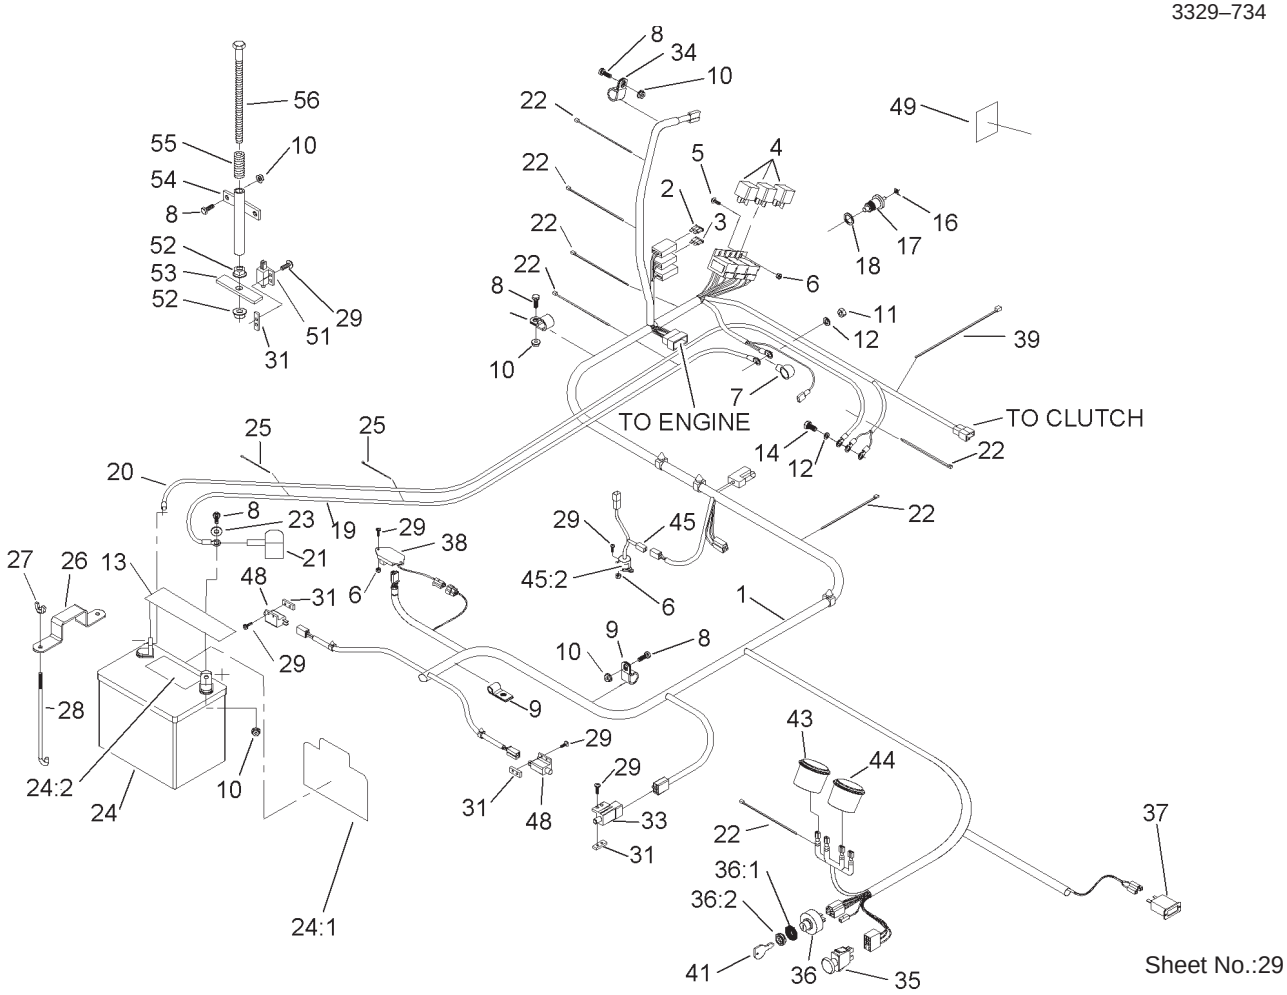

Electrical Components Assembly

Ref. No.	Part No.	Qty.	Description
1	106–7496	1	Harness–Wire
2	1–816001	1	Fuse–Type, Blade
3	1–816003	1	Fuse–Blade Type, 30 Amp
4	1–643275	3	Relay
5	1–803071	2	Screw
6	3296–2	6	Nut–Lock
7	1–543393	1	Insulator–Solenoid
8	321–4	7	Screw–HH
9	1–633396	3	Clip–Loom
10	32128–33	7	Nut–HF
11	33014–00	1	Nut–Hex
12	3256–23	2	Washer–Flat
13	105–3646	1	Decal–Warning, Battery
14	33114–016	1	Screw–HH
16	1–643145	1	Tab
17	103–0283	1	Sender–Temperature
18	1–643153	1	Washer–Aluminum
19	1–523279	1	Wire–Battery, Positive
20	1–633307	1	Wire–Ground
21	1–543391	1	Insulator–Battery
22	1–303335	12	Tie–Plastic
23	3256–2	2	Washer–Flat
24	105–1692	1	Battery
24:1	104–4163	1	Decal–Battery


Ref. No.	Part No.	Qty.	Description
24:2	104–4164	1	Decal–Battery
25	1–303287	2	Tie–Plastic
26	1–633652–03	1	Strap–Holddown
27	1–543792	2	Wingnut
28	1–633651	2	Bolt–Holddown
29	3290–500	12	Screw–PPH
31	1–633181	4	Plate–Tapped
33	1–633111	1	Switch
34	1–513762	1	Clip–Loom
35	1–633673	1	Switch–Delta
36	88–9830	1	Key Switch ASM
36:1	3254–5	1	Washer–Tooth
36:2	218–461	1	Nut–HH
37	1–513374	1	Meter–Hour
38	100–6186	1	Module–Delay, Seat
39	1–643115	1	Tie–Plastic
41	63–8360	2	Key–Ignition
43	1–643037	1	Gauge–Voltmeter
44	1–643021	1	Gauge–Temperature
45	1–644427	1	Tilt Switch ASM
45:2	1–643401	1	Decal–Switch, Mercury
48	1–513051	2	Switch–Open, Normally
49	103–1027	1	Decal–Relay

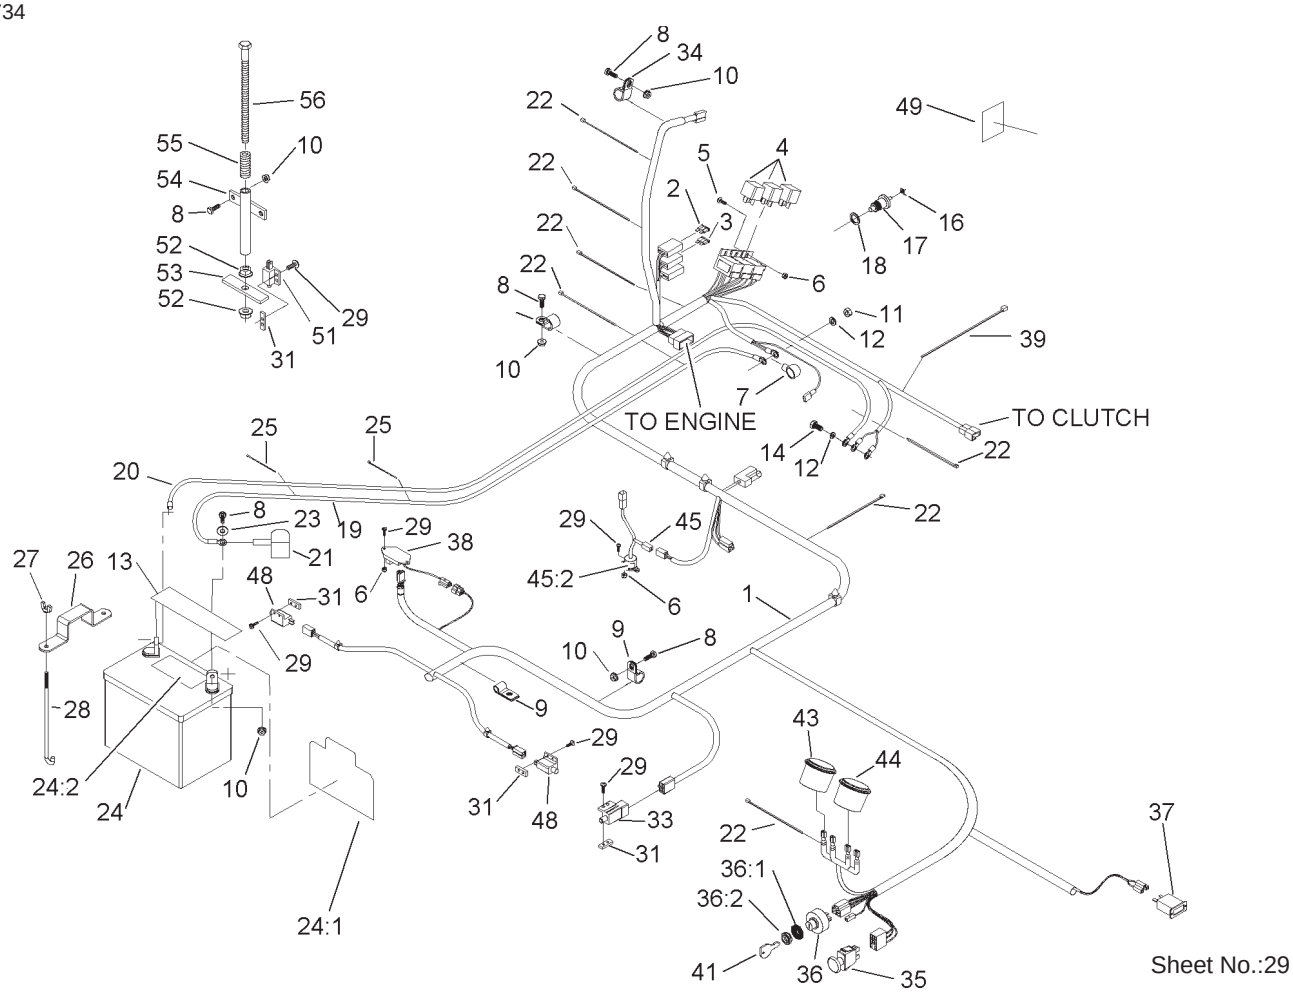

Electrical Components Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
51	1–513152	1	Switch–,Closed, Normally
52	32128–20	2	Nut–HF
53	1–513180	1	Plate–Switch, Seat
54	1–522424–03	1	Mount–Spring, Seat
55	1–523415	1	Spring–Switch, Seat
56	1–800282	1	Screw–HH

Ref. No.	Part No.	Qty.	Description

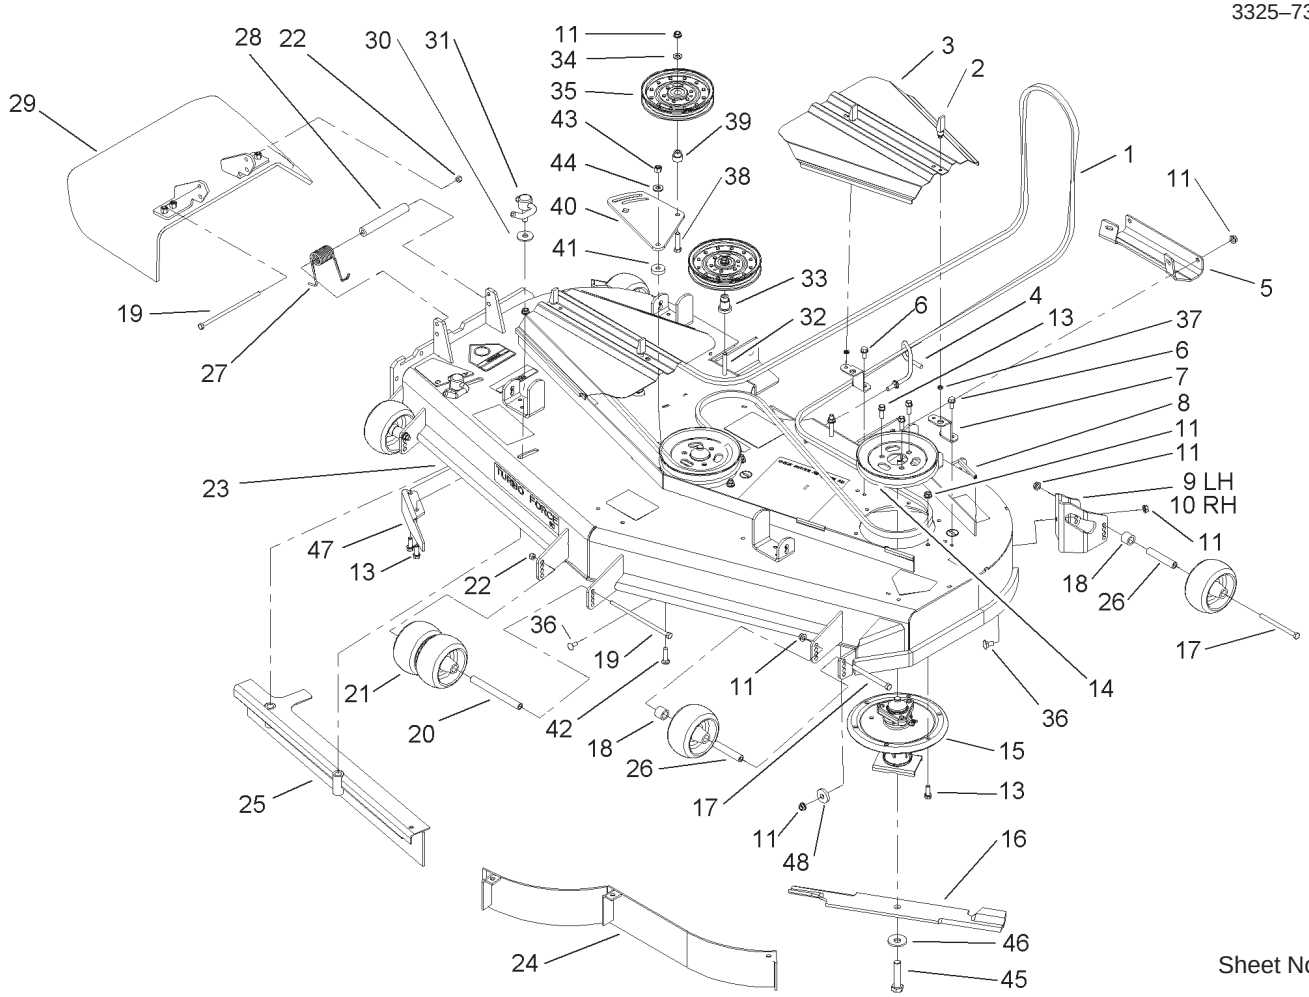


Sheet No.:0

60in Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	105–8783	1	Belt
2	74–5950	4	Latch–Swell
3	105–8786–01	2	Cover–Belt
4	106–3220	1	Guide–Wire
5	105–8792–01	1	Plate–Skid
6	32144–70	4	Screw–HH
7	105–8787–01	4	Bracket–Cover
8	105–7699	8	Seal–Strip
9	106–7354–01	1	Plate–Roller, LH
10	106–7355–01	1	Plate–Roller, RH
11	3290–357	42	Nut–HHF
13	95–1726	33	Screw–Taptite
14	105–7734	3	Pulley
15	106–3217	3	Spindle ASM
16	105–7718	3	Blade–Rotary, High Flow
17	323–23	4	Screw–HH
18	98–7913	4	Tube–Spacer
19	322–50	2	Screw–HH
20	98–5967	1	Spacer
21	1–603299	6	Roller–Anti Scalp
22	3296–29	2	Nut–Lock, NI
23	107–1624	1	Deck ASM
24	105–7657–01	1	Baffle ASM
25	105–7669–01	1	Baffle ASM
26	98–7912	4	Tube–Spanner

Ref. No.	Part No.	Qty.	Description
27	104–8554	1	Spring–Torsion
28	105–4622	1	Spacer
29	106–3249	1	Rubber Deflector ASM
30	105–7697	2	Washer–Plastic
31	106–3242	2	Lever ASM
32	323–12	2	Screw–HH
33	106–3214	2	Support–Pulley
34	3256–24	3	Washer–Flat
35	1–633109	3	Idler–Flat
36	3231–1	10	Screw–CARR
37	99–3058	4	Washer
38	323–9	1	Screw–HH
39	1–603496	1	Bushing–Idler
40	105–7787–01	1	Plate–Idler
41	105–7788	2	Spacer
42	3231–4	2	Screw–CARR
43	3296–39	2	Nut–Lock, NI
44	98–5975	1	Washer–Belleville
45	103–0862	3	Screw–Cap
46	103–0865	3	Washer–Blade Bolt, Heavy
47	106–3216–01	1	Baffle–Discharge
48	112843	1	Washer

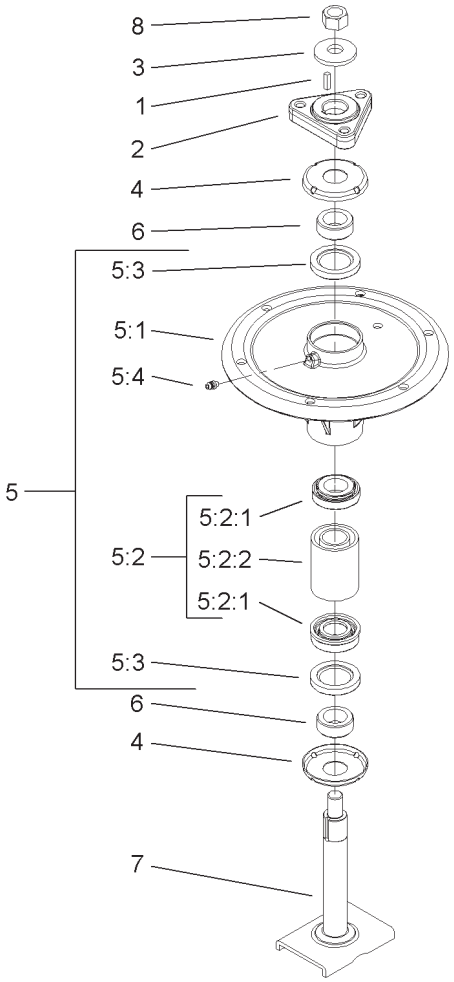


Sheet No.:A1

Spindle Assembly No. 106–3217

Ref. No.	Part No.	Qty.	Description
1	10–8040	1	Key–Square
2	106–3277	1	Hub–Pulley
3	103–0865	1	Washer–Blade Bolt, Heavy
4	106–3204	2	Shield–Bearing
5	107–1627	1	Spindle Bearing ASM
5:1	106–3211	1	Housing–Spindle
5:2	106–3207	1	Bearing ASM
5:2:1	27–0960	1	Bearing ASM
5:2:2	106–3206	1	Spacer–Set, Matched
5:3	253–133	2	Seal–Oil
5:4	302–5	1	Fitting–Grease
6	106–3218	2	Spacer–Seal
7	106–3233	1	Spindle Shaft ASM
8	3219–6	1	Nut–Hex

Ref. No.	Part No.	Qty.	Description

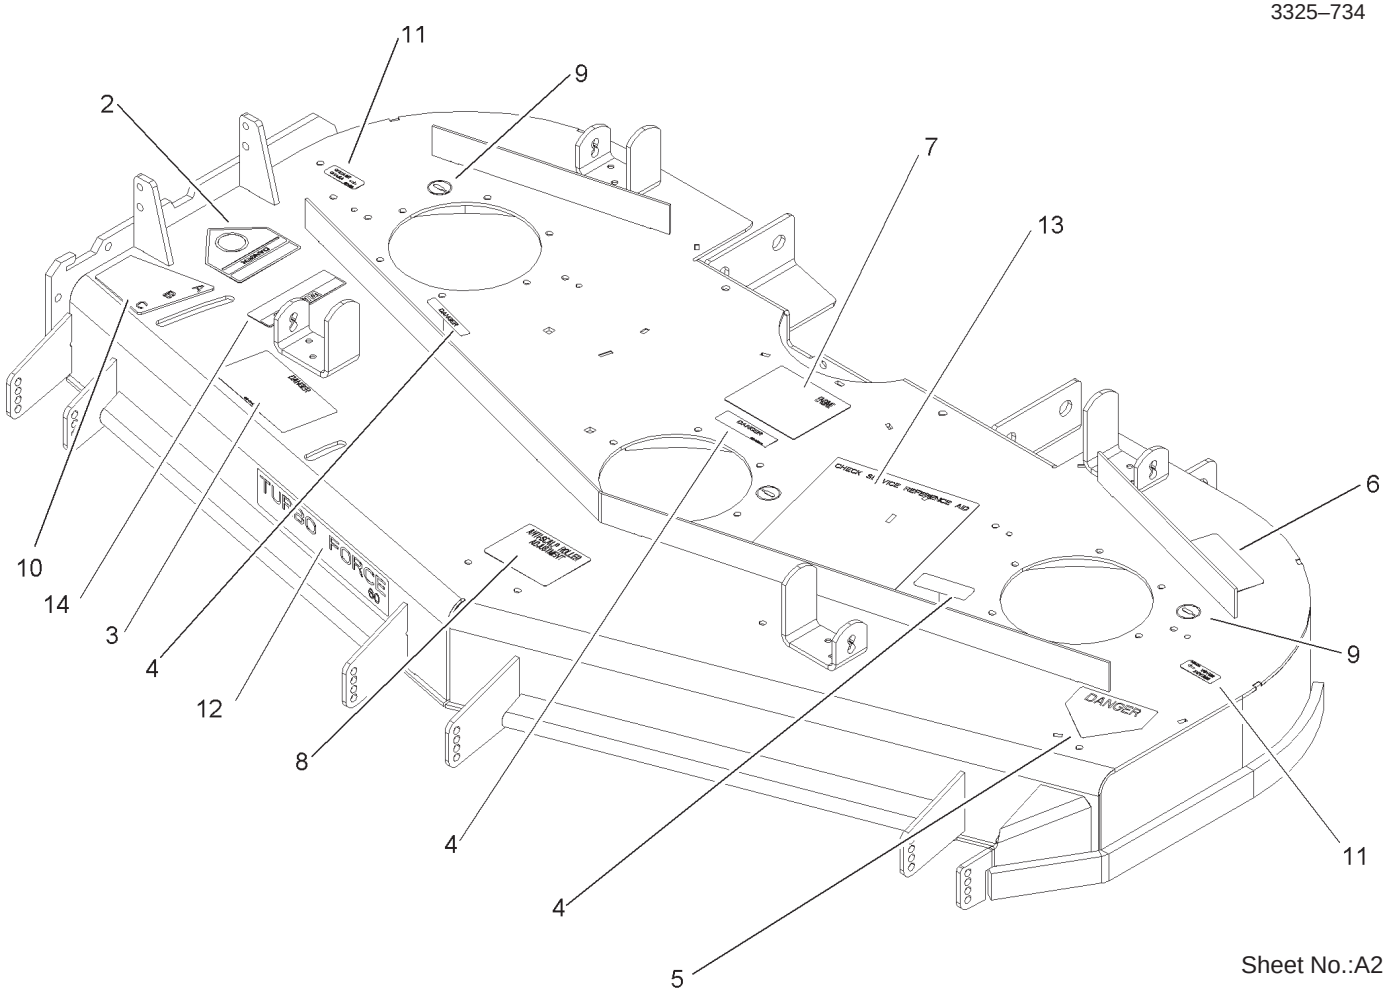


Sheet No.:A2

Deck Assembly No. 107–1624

Ref. No.	Part No.	Qty.	Description
2	54–9220	1	Decal–Danger
3	66–1340	1	Decal–Danger
4	98–5954	3	Decal–Missing, Cover
5	43–8480	1	Decal–Danger
6	68–8340	1	Decal–Torque
7	105–7797	1	Decal–Routing, Belt
8	105–7798	1	Decal–Anti Scalp
9	58–6520	3	Decal–Grease
10	107–1622	1	Decal–Adjustment, Baffle
11	107–1613	2	Decal–Grease
12	107–1619	1	Decal–Turbo Force 60
13	107–1621	1	Decal–Service, Check
14	104–8569	1	Decal–Warning

Ref. No.	Part No.	Qty.	Description

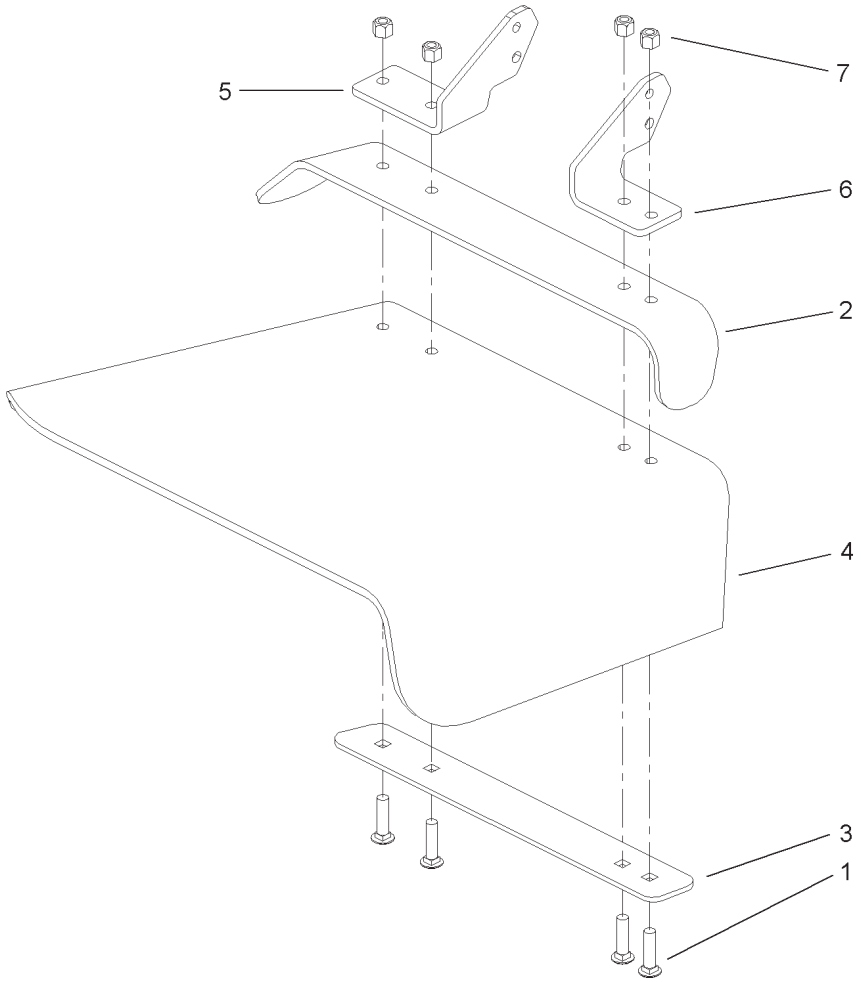


Sheet No.:A3

Rubber Deflector Assembly No. 106–3249

Ref. No.	Part No.	Qty.	Description
1	3231–4	4	Screw–CARR
2	106–3246–01	1	Deflector
3	106–3248–03	1	Strap–Discharge
4	107–1617	1	Defelector–Rubber
5	106–3252–01	1	Plate–Hinge, Rear
6	106–3253–01	1	Plate–Hinge, Front
7	3296–39	4	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

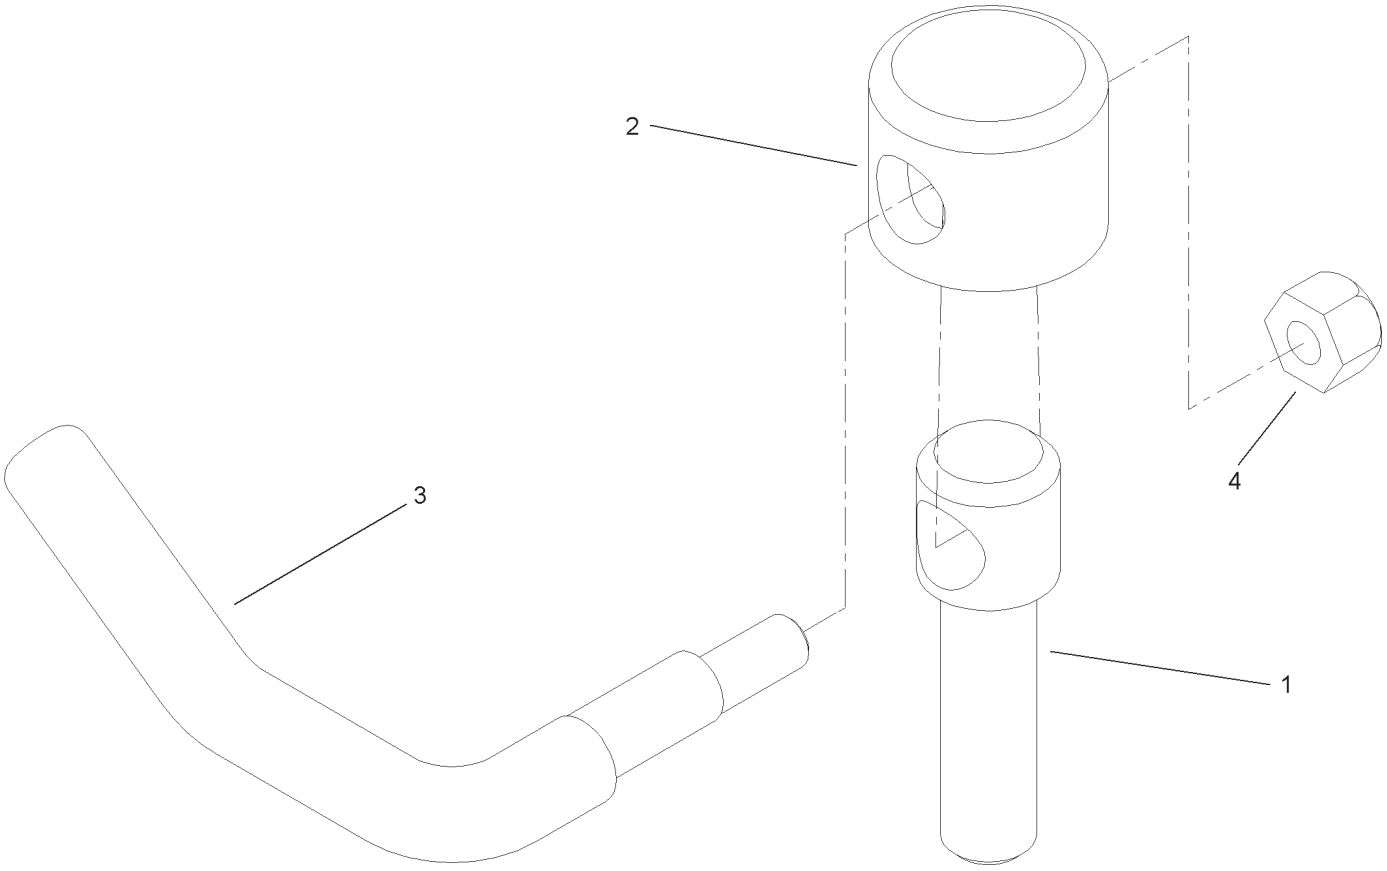


Sheet No.:A4

Lever Assembly No. 106–3242

Ref. No.	Part No.	Qty.	Description
1	106–3239	1	Screw–Lock
2	106–3240	1	Cap–Lock
3	106–3241	1	Lever–Lock
4	3296–29	1	Nut–Lock, NI

Ref. No.	Part No.	Qty.	Description

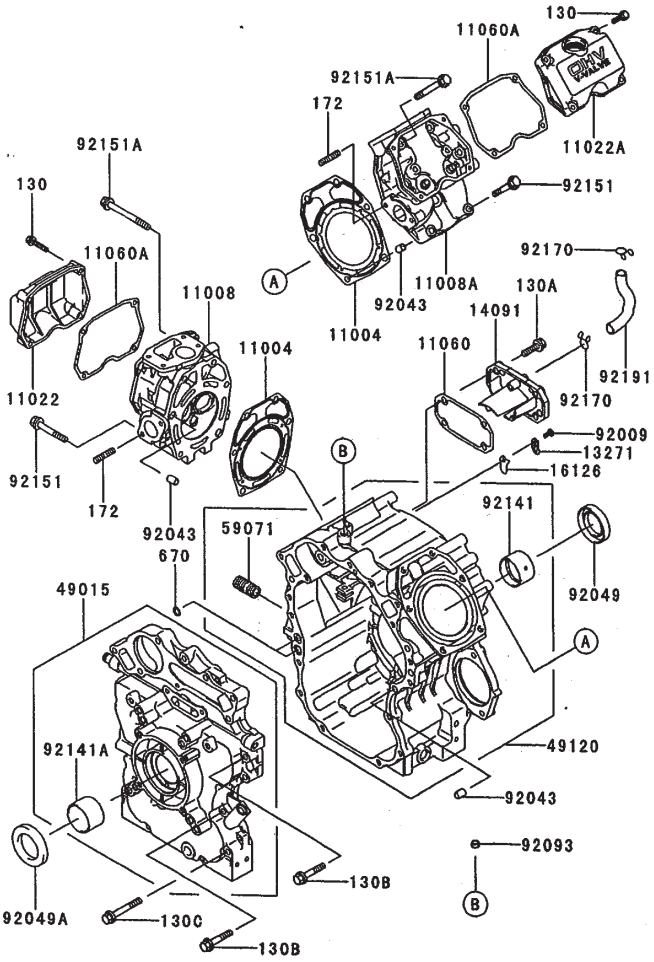


Cylinder/Crankcase Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
11004	11004–2142	2	Gasket–Head
11008	11008–2145	1	Head–Comp–Cylinder
11008A	11008–2146	1	Head–Comp–Cylinder
11022	11022–2072	1	Case–Rocker
11022A	11022–2073	1	Case–Rocker
11060	11060–2466	1	Gasket, Breath
11060A	11060–2470	2	Gasket, Rocker, Case
13271	13271–2105	2	Plate
14091	14091–2064	1	Cover, Breath
16126	16126–2225	2	Valve, Breath
49015	49015–6232	1	Cover–Crankcase
49120	49120–6127	1	Crankcase–Comp
59071	59071–2079	1	Joint
92009	92009–2308	2	Screw
92043	92043–1037	6	Pin
92049	92049–2242	1	Seal–Oil
92049A	92049–2243	1	Seal–Oil
92093	92093–2086	1	Seal
92141	92141–2118	1	Bearing–Plane
92141A	92141–2119	1	Bearing–Plane
92151	92151–2158	4	Bolt
92151A	92151–2159	8	Bolt
92170	92170–2002	2	Clamp
92191	92191–2105	1	Tube

Ref. No.	Part No.	Qty.	Description
130	130G0630	8	Bolt–Flanged
130A	130G0830	4	Bolt–Flanged
130B	130G0845	4	Bolt–Flanged
130C	310G0860	4	Bolt–Flanged
172	172G0822	4	Bolt–Stud
670	670B2011	2	O–Ring

Obtain Parts from Kawasaki

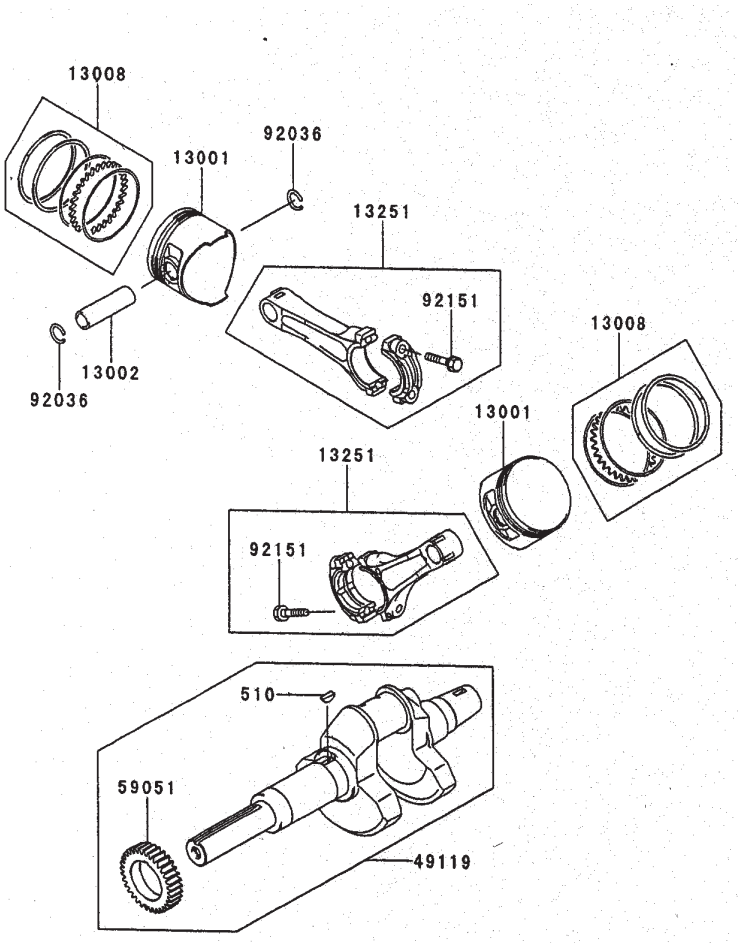


Piston/Crankshaft Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
13001	13001–2125	2	Piston–Engine
13002	13002–2069	2	Pin–Piston
13008	13008–6007	2	Ring–Set–Piston
13251	13251–2058	2	Rod ASM–Connecting
49119	49119–2198	1	Crankshaft ASM
59051	59051–2358	1	Gear–Spur, 33T
92036	92036–008	4	Ring–Snap
92151	92151–2150	4	Bolt
510	510A5100	1	Key–Woodruff

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

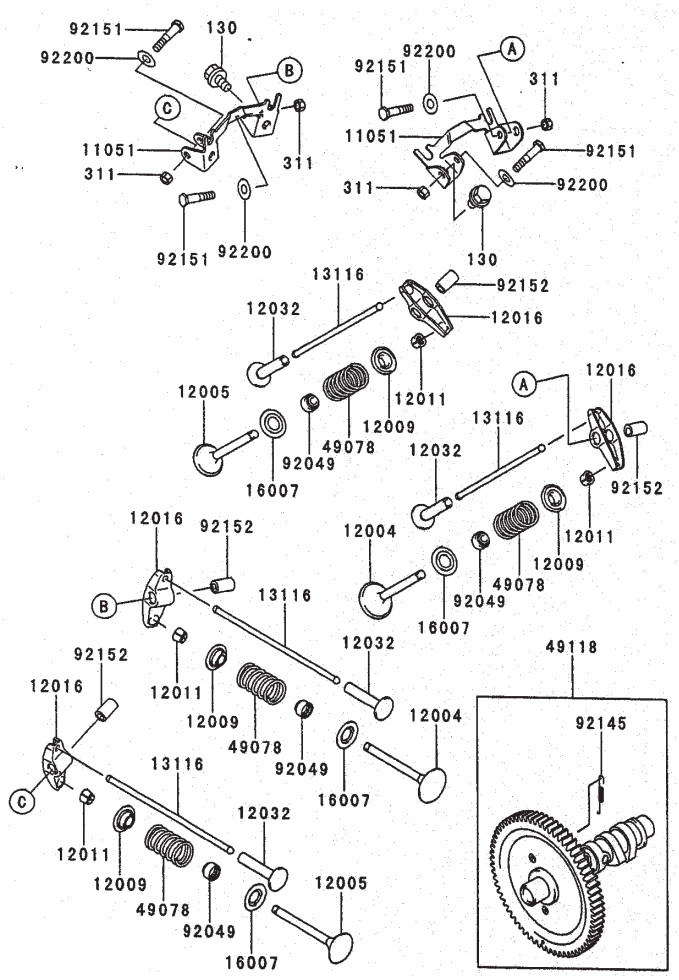


Valve/Camshaft Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
11051	11051–2092	2	Bracket
12004	12004–2113	2	Valve–Intake
12005	12005–2100	2	Valve–Exhaust
12009	12009–2060	4	Retainer–Valve Spring
12011	12011–2052	8	Collet
12016	12016–2063	4	Arm–Rocker
12032	12032–2060	4	Tappet
13116	13116–2074	4	Rod–Push
16007	16007–2052	4	Seat–Spring
49078	49078–2060	4	Spring–Engine Valve
49118	49118–2138	1	Camshaft
92049	92049–2100	4	Seal–Oil
92145	92145–2085	1	Spring
92151	92151–2134	4	Bolt
92152	92152–2066	4	Collar
92200	92200–2128	4	Washer
130	130G0814	4	Bolt–Flanged
311	311B0600	4	Nut–Hex

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

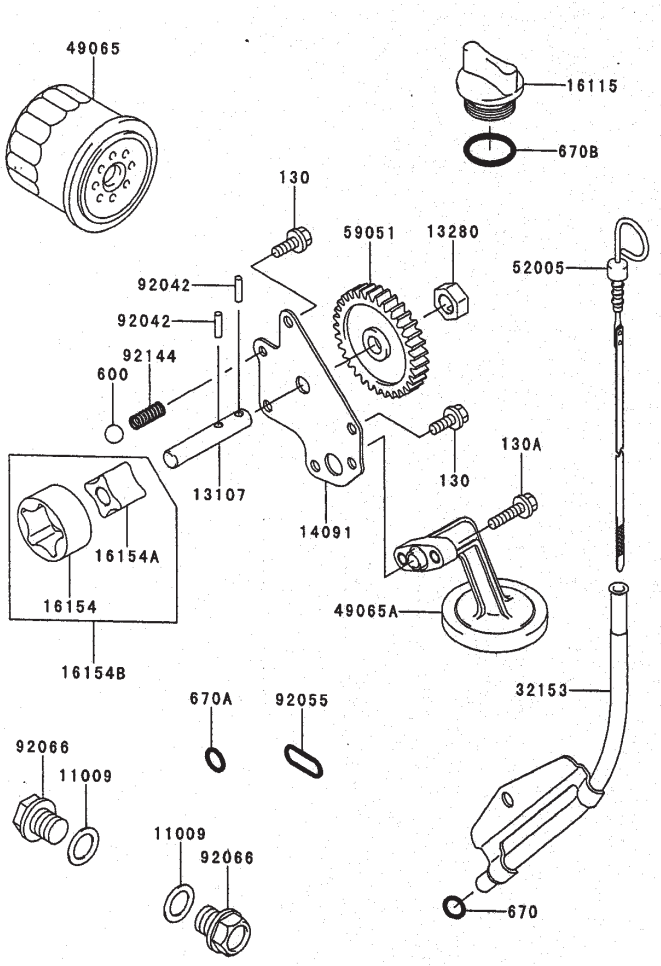


Lubrication Equipment Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
11009	11009–2566	2	Gasket, Drain Plug
13107	13107–2281	1	Shaft, Oil Pump
13280	13280–2061	1	Holder, Oil Pump
14091	14091–2065	1	Cover, Oil Pump
16115	16115–2126	1	Cap–Oil Filler
16154	16154–1075	1	Rotor–Pump, Outer
16154A	16154–1076	1	Rotor–Pump, Inner
16154B	16154–1079	1	Rotor–Pump
32153	32153–2076–9H	1	Pipe, Oil Gauge
49065	49065–2071	1	Filter–Oil
49065A	49065–2082	1	Filter
52005	52005–2132	1	Gauge, Oil
59051	59051–2354	1	Gear–Spur, 33T
92042	92042–014	2	Pin
92055	92055–2086	1	O–Ring
92066	92066–2099	2	Plug, Drain
92144	92144–2053	1	Spring
130	130G0616	3	Bolt–Flanged
130A	130G0625	2	Bolt–Flanged
600	600A1300	1	Ball–Steel
670	670B2010	1	O–Ring
670A	670B2011	1	O–Ring
670B	670B3025	1	O–Ring

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

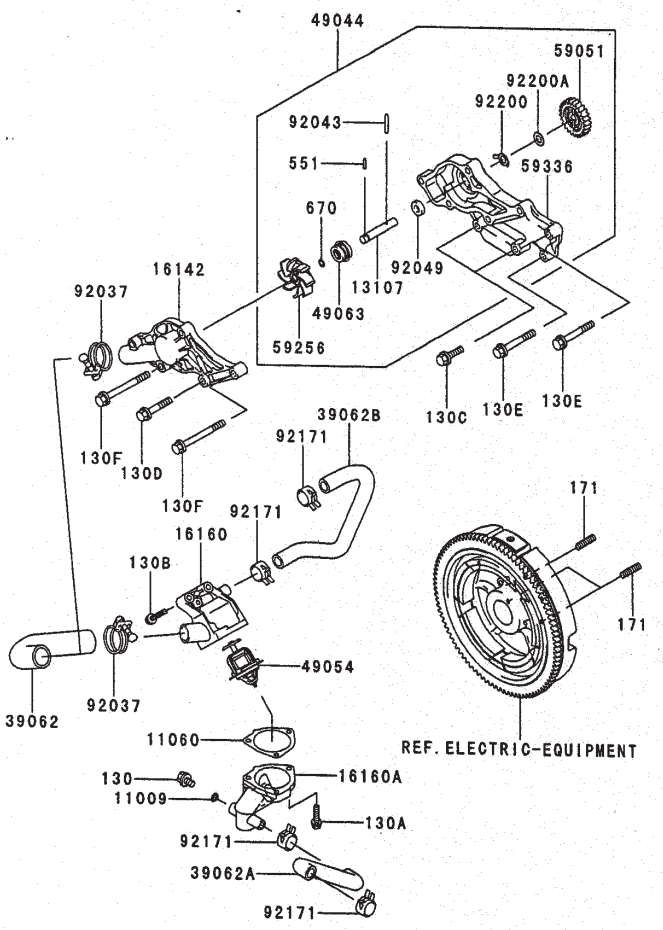


Cooling Equipment Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
11009	11009–3028	1	Gasket
11060	11060–2475	1	Gasket–Thermostat
13107	13107–2097	1	Shaft–Impeller
16142	16142–2077	1	Cover–Pump
16160	16160–2127	1	Body–Upper
16160A	16160–6002	1	Body–Valve
39062	39062–2080	1	Hose–Cooling
39062A	39062–2083	1	Hose–Cooling
39062B	39062–2084	1	Hose–Cooling
49044	49044–2063	1	Pump–Water
49054	49054–2058	1	Thermostat
49063	49063–1054	1	Seal–Mechanical
59051	59051–2355	1	Gear–Spur, 25T
59256	59256–2069	1	Impeller
59336	59336–2078	1	Case–Pump
92037	92170–1284	2	Clamp
92043	92043–2237	1	Pin
92049	92049–2111	1	Seal–Oil
92171	92171–2056	4	Clamp
92200	92200–2134	1	Washer
92200A	92200–2135	1	Washer
130	130C0812	1	Bolt–Flanged
130A	130G0625	3	Bolt–Flanged
130B	130G0635	2	Bolt–Flanged

Ref. No.	Part No.	Qty.	Description
130C	130G0830	2	Bolt–Flanged
130D	130G0845	1	Bolt–Flanged
130E	130G0860	2	Bolt–Flanged
130F	130G0880	4	Bolt–Flanged
171	171G0818	3	Bolt–Stud
551	551A0314	1	Pin–Dowel
670	670B1507	1	O–Ring

Obtain Parts from Kawasaki

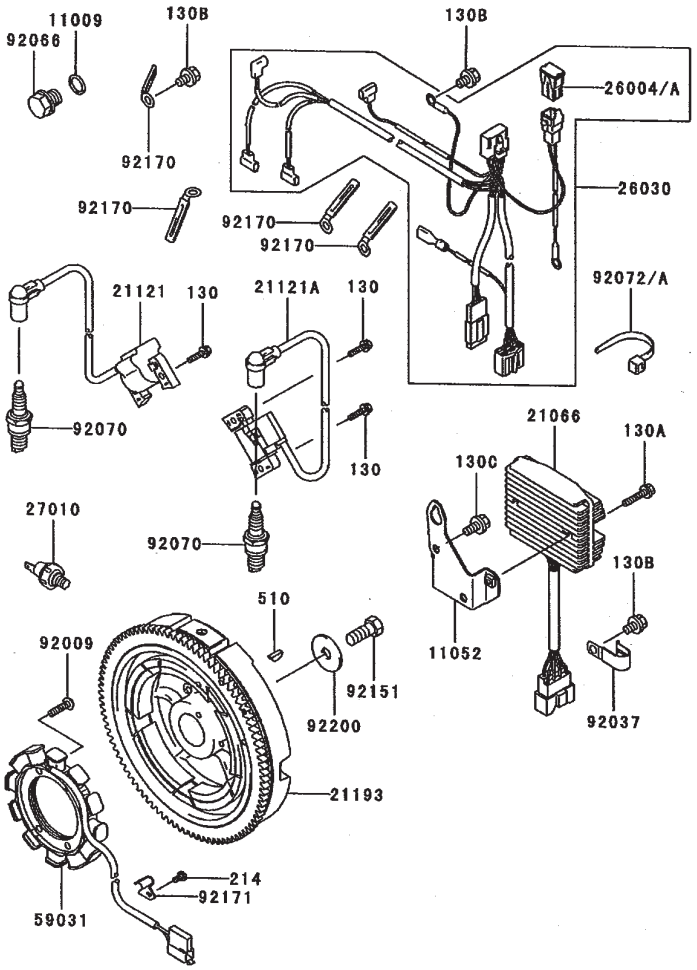


Electric Equipment Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
11009	11009–2766	1	Gasket
11052	11052–2058	1	Bracket
21066	21066–2079	1	Regulator–Voltage
21121	21121–2090	1	Coil–Ignition, No. 1
21121A	21121–2091	1	Coil–Ignition, No. 2
21193	21193–2177	1	Flywheel ASM
26004	26004–1093	1	Fuse ASM
26030	26030–2320	1	Harness
27010	27010–7001	1	Switch
59031	59031–2127	1	Coil–Charging
92009	92009–2273	4	Scerw
92037A	92037–2101	1	Clamp
92066	92066–2099	1	Plug–Drain
92070	92070–2110	2	Plug–Spark, BPR2ES
92072	92072–1195	1	Band
92151	92151–2097	1	Bolt
92170	92170–2060	4	Clamp
92171	92171–2060	1	Clamp
92200	92200–2119	1	Washer
130	130G0520	1	Bolt–Flanged
130A	130G0630	2	Bolt–Flanged
130B	130G0812	3	Bolt–Flanged
130C	130G0816	2	Bolt–Flanged
214	214B0510	1	Screw–Pan+–

Ref. No.	Part No.	Qty.	Description
510	510A5100	1	Key–Woodruff

Obtain Parts from Kawasaki

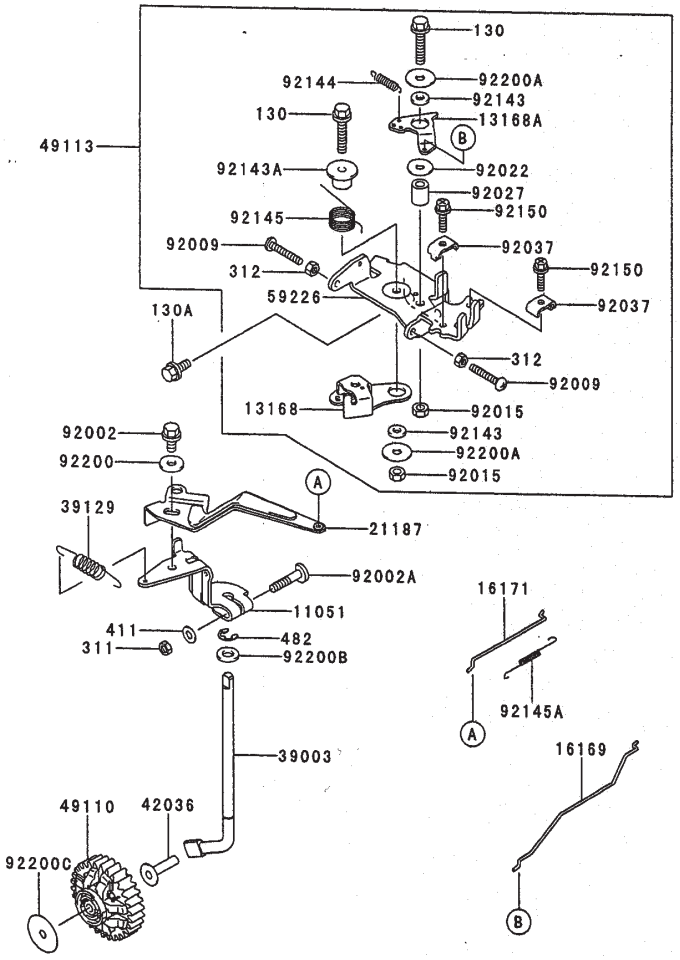


Control Equipment Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
11051	11051–2113	1	Bracket
13168	13168–2466	1	Lever–Throttle
13168A	13168–2467	1	Lever–Choke
16169	16169–2142	1	Link–Choke
16171	16171–2091	1	Link
21187	21187–2073	1	Arm ASM
39003	39003–2091	1	Arm–Pivot
39129	39129–2099	1	Spring–Governor
42036	42036–2060	1	Sleeve
49110	49110–2094	1	Governor ASM
49113	49113–2170	1	Panel–Comp–Control
59226	59226–2328	1	Panel–Control
92002	92002–1902	1	Bolt
92002A	92002–2269	1	Bolt
92009	92009–2381	2	Screw
92015	92015–2051	2	Nut
92022	92002–2372	1	Washer
92027	92027–1461	1	Collar
92037	92037–2209	2	Clamp
92143	92143–2135	2	Collar
92143A	92143–2148	1	Collar
92144	92144–2052	1	Spring
92145	92145–2058	1	Spring
92145A	92145–2095	1	Spring

Ref. No.	Part No.	Qty.	Description
92150	92150–2182	2	Bolt
92200	92200–2035	1	Washer
92200A	92200–2108	2	Washer
92200B	92200–2120	1	Washer
92200C	92200–2122	1	Washer
130	130B0630	2	Bolt–Flanged
130A	130G0614	2	Bolt–Flanged
311	311B0600	2	Nut–Hex
312	312G0500	2	Nut–Hex
411	411B0600	1	Washer
482	482J7000	1	Circlip–Type E

Obtain Parts from Kawasaki

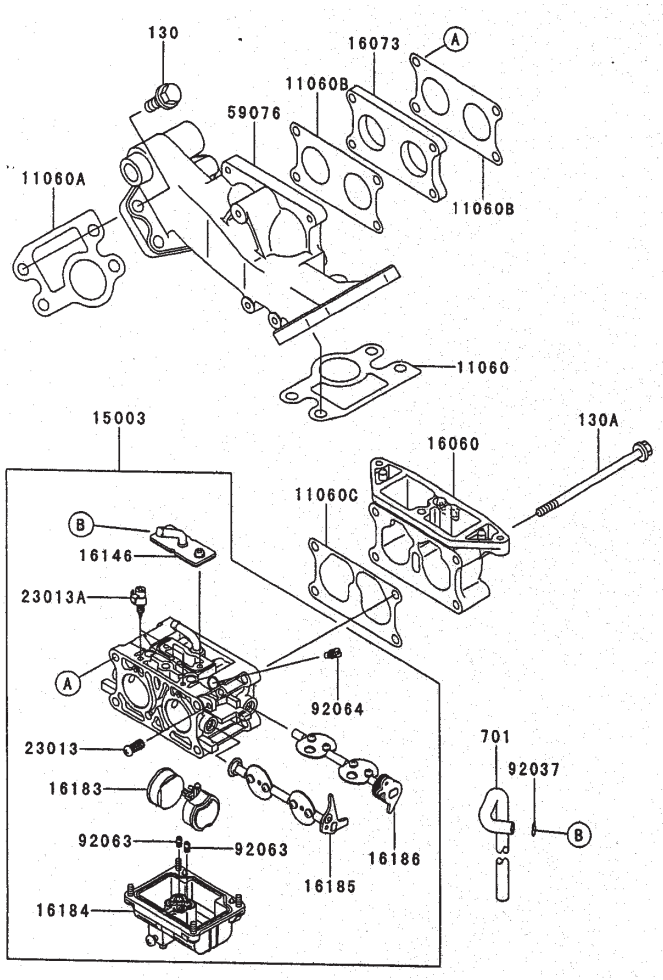


Carburetor Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
11060	11060–2468	1	Gasket–Intake
11060A	11060–2469	1	Gasket–Intake
11060B	11060–2471	2	Gasket–Intake Pipe
11060C	11060–2473	1	Gasket–Carburetor
15003	15003–2776	1	Carburetor ASM
16060	16060–2194	1	Pipe–Intake
16073	16073–2206	1	Insulator
16146	16146–2227	1	Cover ASM
16183	16183–2006	1	Float ASM
16184	16184–2004	1	Float Chamber ASM
16185	16185–2036	1	Throttle Valve ASM
16186	16186–2036	1	Choke Valve ASM
23013	23013–2059	1	Screw ASM
23013A	23013–2060	1	Screw ASM
59076	59076–2065	1	Manifold–Intake
92037	92037–1610	1	Clamp
92063	92063–2400	2	Jet–Main
92064	92064–2113	2	Jet–Pilot
130	130G0825	8	Bolt–Flanged
130A	130T06110	4	Bolt–Flanged
701	701Q061000	1	Tube–PVC

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

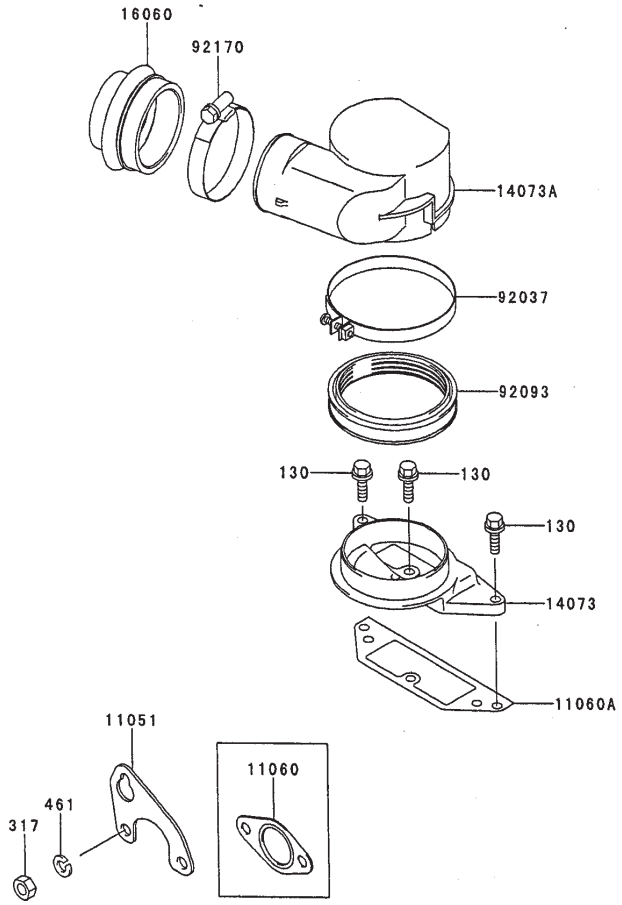


Air Filter/Muffler Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
11051	11051–2088	1	Bracket
11060	11060–2467	2	Gasket–Muffler
11060A	11060–2474	2	Gasket–Air Filter
14073	14073–2075	1	Duct–Lower
14073A	14073–2076	1	Duct–Upper
16060	16060–2197	1	Pipe–Intake
92037	92037–1654	1	Clamp
92093	92093–2118	1	Seal
92170	92170–2075	1	Clamp
130	130G0620	3	Bolt–Flanged
317	317R0800	1	Nut–Hex
461	461F0800	1	Washer–Spring

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

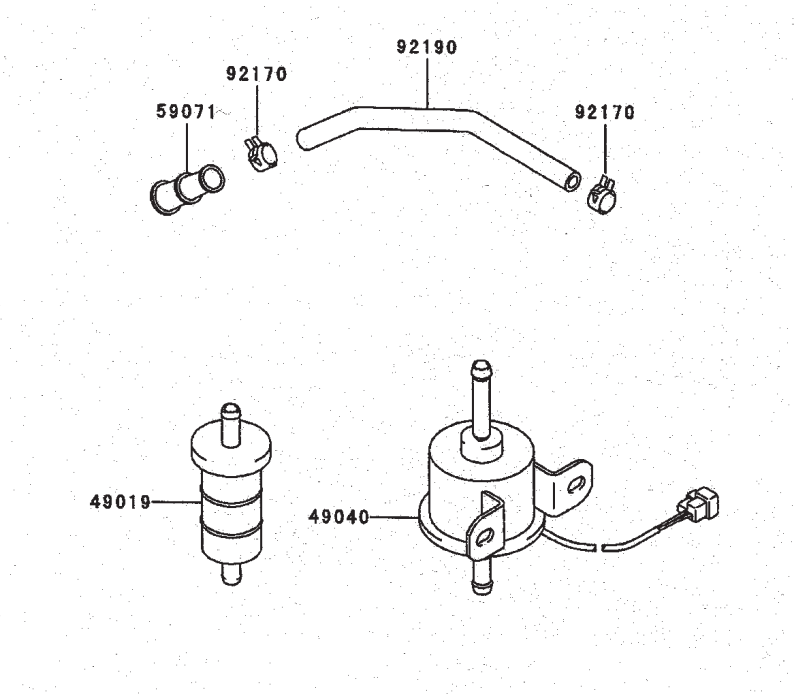


Fuel Tank/Fuel Valve Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
49019	49019–1055	1	Filter–Fuel
49040	49040–2065	1	Pump–Fuel
59071	59071–2119	1	Joint
92170	92170–2042	2	Clamp
92190	92190–2095	1	Tube

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

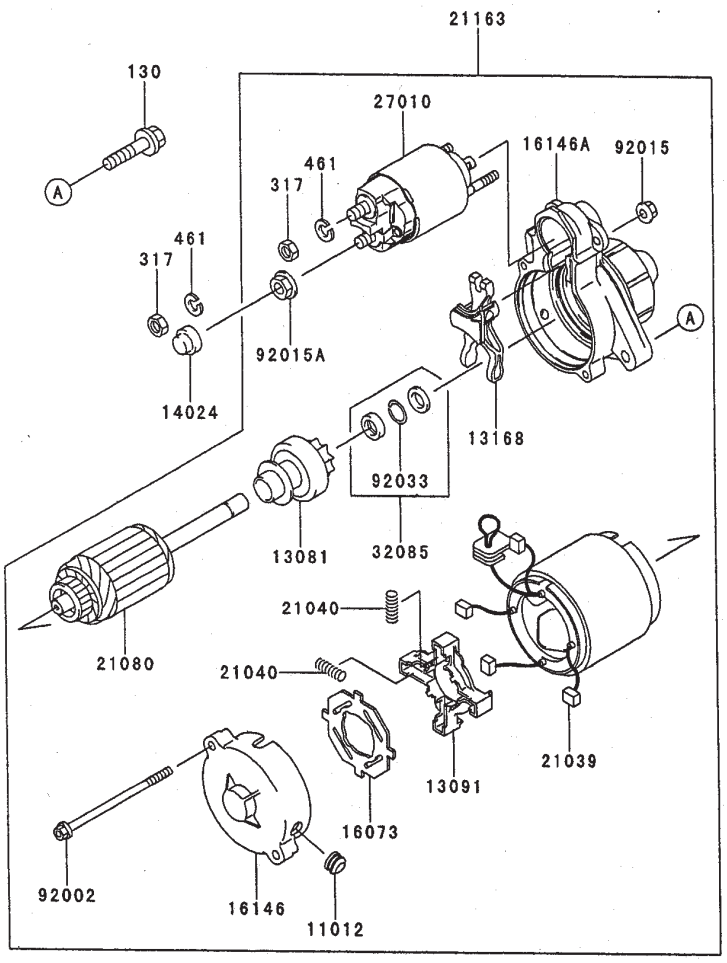

Starter Assembly
Kawasaki FD750D–AS03

Ref. No.	Part No.	Qty.	Description
11012	11012–2226	1	Cap
13081	13081–2108	1	Clutch ASM
13091	13091–2068	1	Holder–Brush
13168	13168–2131	1	Lever–Shift
14024	14024–2205	1	Cover
16073	16073–2098	1	Insulator
16146	16146–2187	1	Cover ASM
16146A	16146–2225	1	Cover ASM
21039	21039–2059	4	Brush
21040	21040–2052	4	Spring–Brush
21080	21080–2054	1	Armature
21163	21163–2120	1	Starter–Electric
27010	27010–2122	1	Switch
32085	32085–2097	1	Stopper
92002	92002–2277	2	Bolt
92015	92015–2146	2	Nut
92015A	92015–2147	1	Nut
992033	92033–2081	1	Ring–Snap
130	130G0835	2	Bolt–Flanged
317	317B0800	2	Nut–Hex
461	461F0800	2	Washer–Spring

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

Maintenance Record

Date								


TORO®