Form No. 3473-248 Rev A

TORO®

Count on it.

Parts Catalog

Z Master® Professional 5000 Series MR Riding Mower

with 52in Turbo Force® Side Discharge Mower

Model No. 72956—Serial No. 418000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3473-248 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly 4
Seat Frame Suspension Assembly 6
Roll-Over Protection System Assembly No. 116-0231 8
Caster Fork and Wheel Assembly 10
Hydraulic Drive Assembly 12
Pump Idler Assembly No. 116-1255 14
LH Hydro Assembly No. 135-7899 16
RH Hydro Assembly No. 135-7900 18
Rear Wheel Assembly 20
Park Brake Assembly 22
Fuel System Assembly 24
Fuel Tank Assembly No. 135-0643 26
Seat Mounting Assembly 28
Seat Assembly No. 147-4983 30
Motion Control Assembly 32
Control Console Assembly 34
Electrical System Assembly 36
Deck Lift Assembly 38
Height-of-Cut Assembly No. 109-7438 40
Engine, Clutch and Muffler Assembly 42
Deck Assembly 44
Deck Decal Assembly No. 140-1168 46
Spindle Assembly No. 137-9780 48
Rubber Deflector Assembly No. 108-2792 50
Idler Arm Assembly 52
Frame Decal Assembly 54
Attachments and Accessories 56

© 2025—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Main Frame Assembly

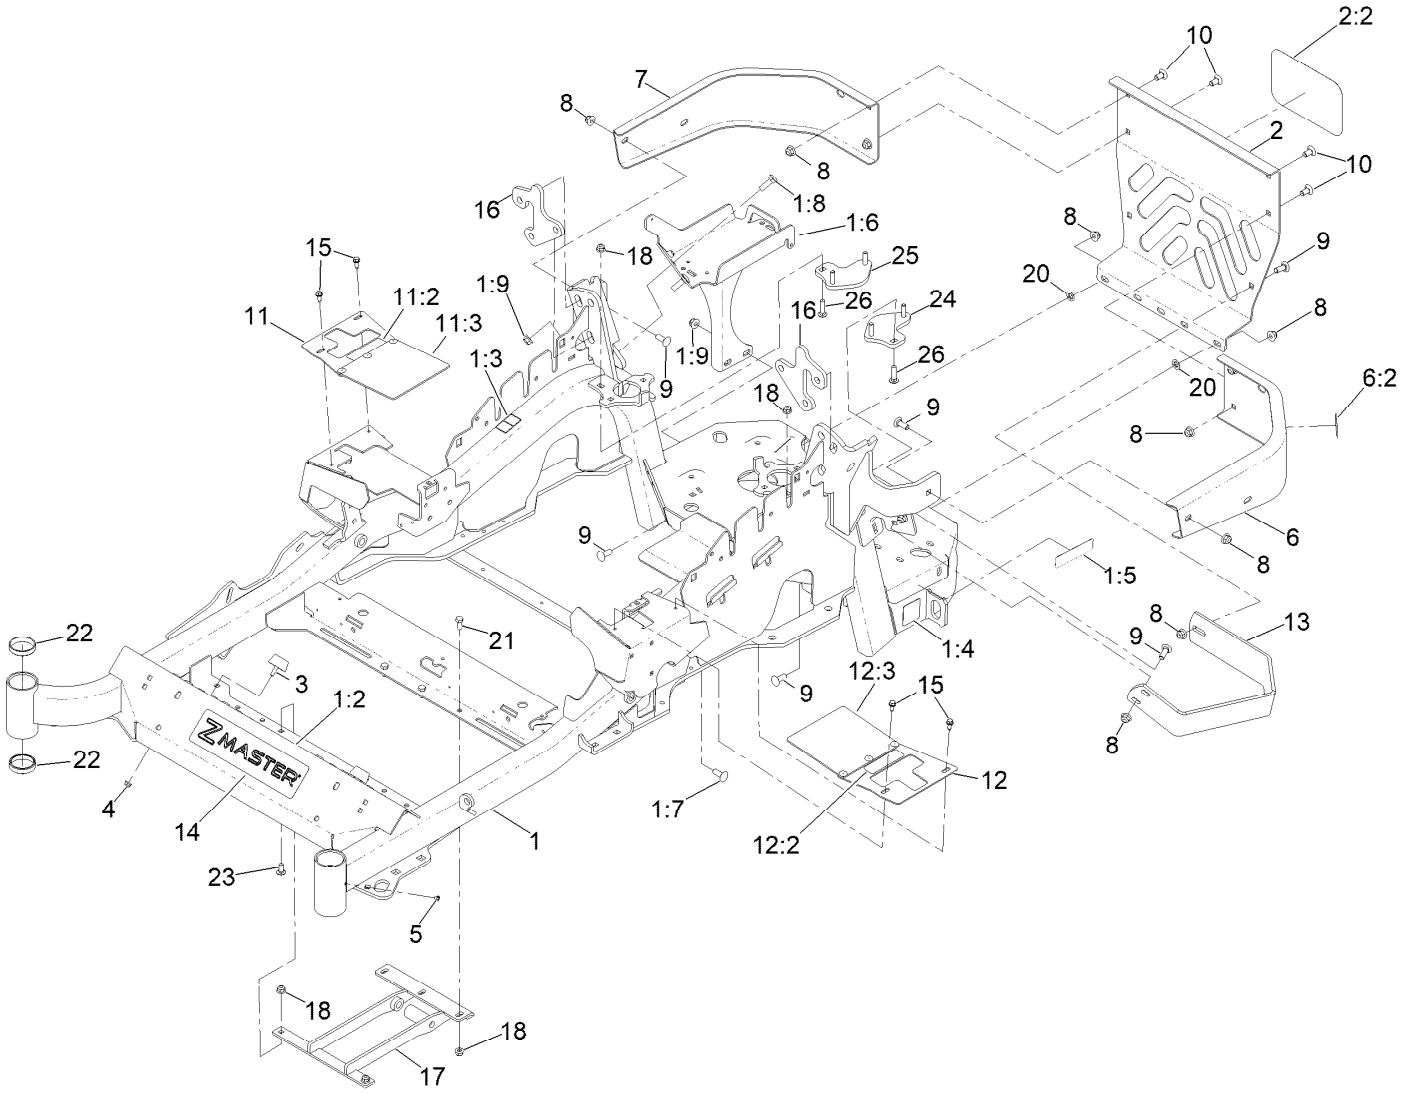

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	142-7272	1	Mainframe Service ASM - 48/52
1:2	132-0871	1	Decal-Danger
1:3	106-5517	2	Decal-Warning
1:4	106-2655	2	Decal-Hazard, Pinched Finger
1:5	133-8062	1	Decal-Spark Arrestor
1:6	142-6404-01	1	Battery Mount ASM [red]
1:7	3231-22	2	Screw-CARR
1:8	3231-25	2	Bolt-CARR
1:9	104-8301	4	Nut-HF, NI
2	115-7410	1	Rear Guard ASM
2:2	67-7320	1	Decal
3	131-8834	2	Bumper
4	104-7201	2	Nut-HF, NI
5	1-811010	2	Plug
6	116-0180	1	LH Bumper ASM
6:2	106-5517	1	Decal-Warning
7	116-0057-03	1	Bumper-RH
8	104-8301	15	Nut-HF, NI
9	3231-22	9	Screw-CARR
10	3231-21	4	Screw-CARR
11	131-4615	1	RH Motion Control Cover ASM
11:2	99-8936	1	Decal-Control, Motion
11:3	136-8967	1	Flap-Rubber
12	131-4610	1	LH Motion Control Cover ASM
12:2	99-8936	1	Decal-Control, Motion
12:3	136-8967	1	Flap-Rubber
13	126-2067-03	1	Guard-Muffler
14	140-1215	1	Decal-Console
15	32144-10	4	Screw-HWH
16	136-1674-01	2	Plate-Mount, Shock
17	131-6327-01	1	Mount-Lower
18	104-8300	7	Nut-HF, NI
20	107-3154	2	Nut-Push
21	322-3	3	Screw-HH
22	1-543508	4	Cup-Bearing
23	3230-23	2	Bolt-CARR
24	127-6766	1	LH Plate ASM (W/Studs)
25	127-6765	1	RH Plate ASM (W/Studs)
26	3230-3	2	Screw-CARR

Seat Frame Suspension Assembly

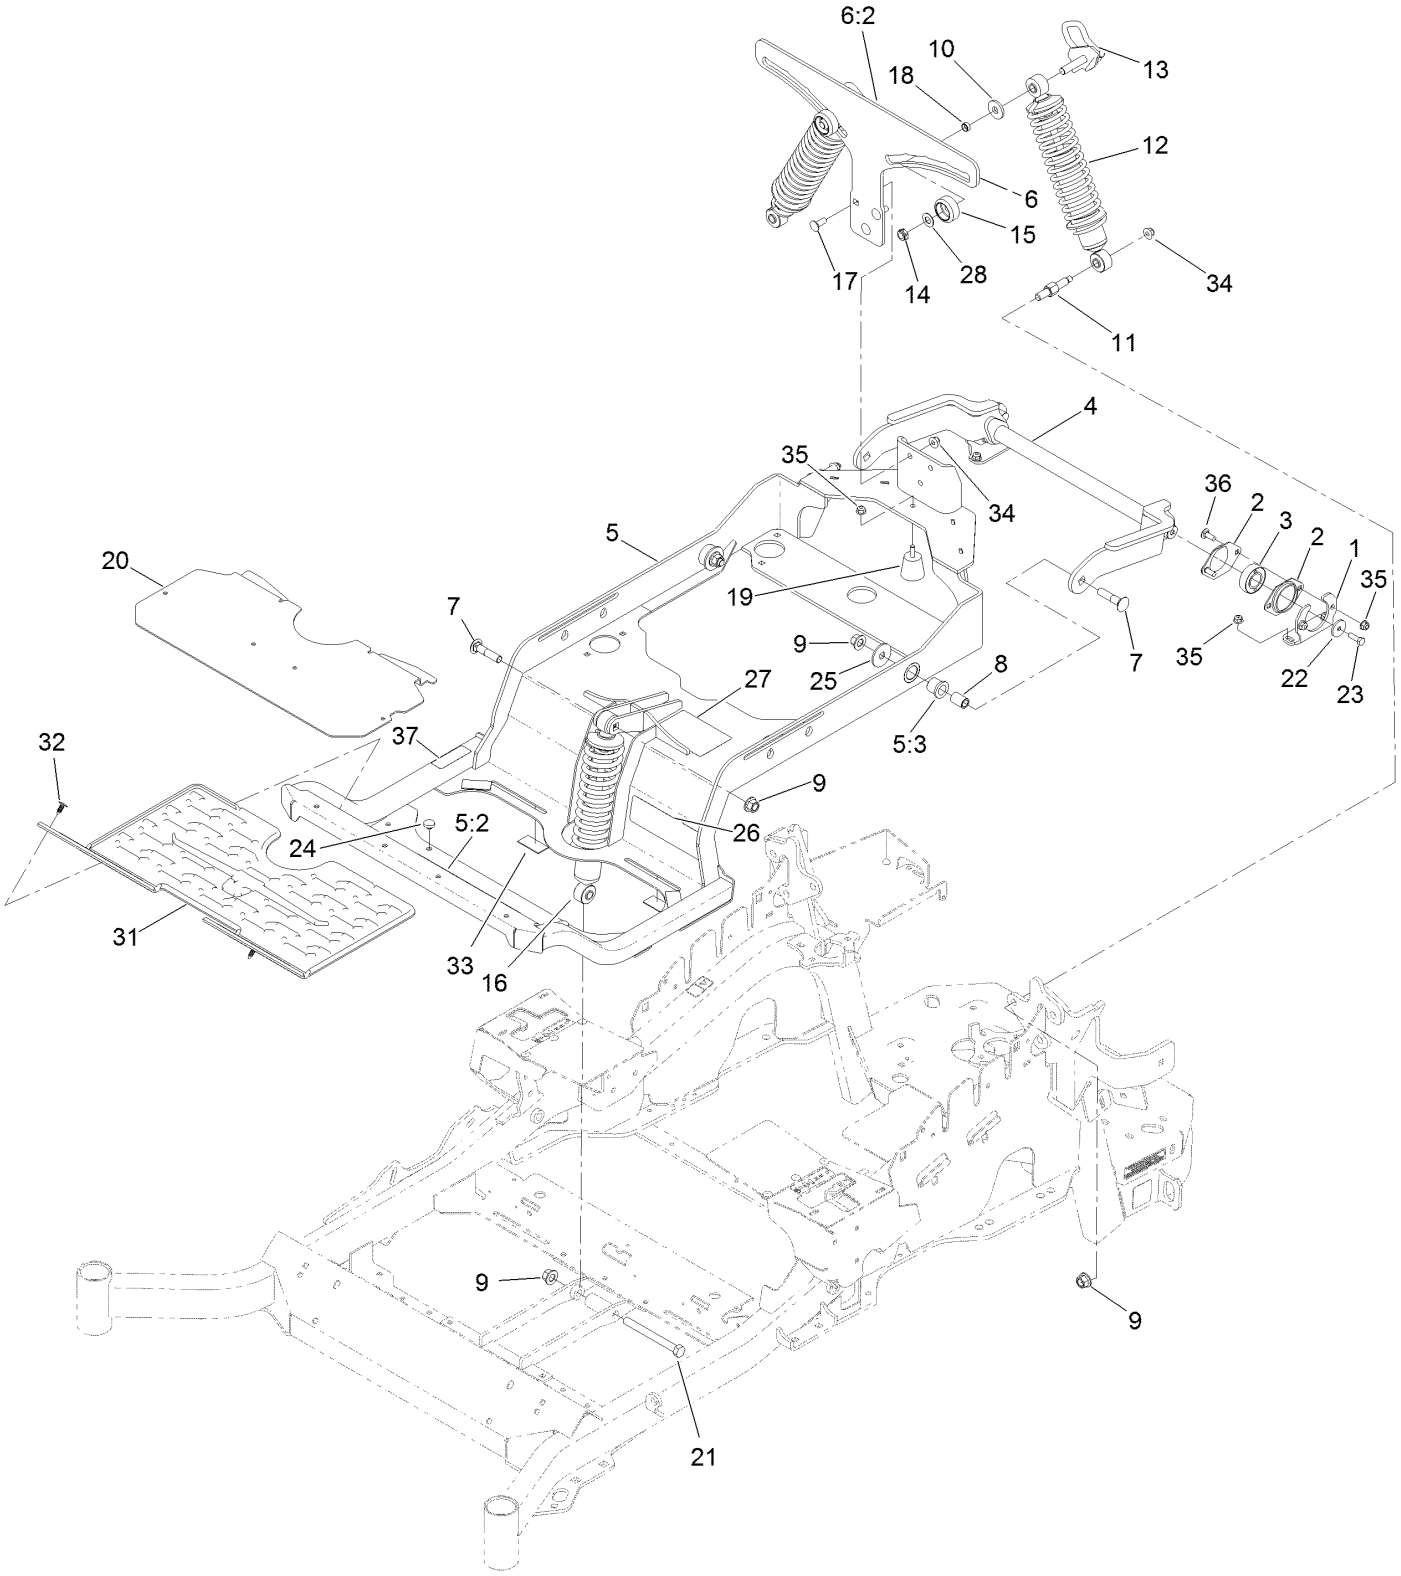

Seat Frame Suspension Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-6759-03	2	Bracket-Bearing
2	127-6743	4	Housing-Bearing, Flange
3	1-653346	2	Bearing
4	127-6754-03	1	Arm-Trailing
5	140-4868	1	Subframe ASM
5:2	132-0871	1	Decal-Danger
5:3	127-6745	2	Bushing-Flange
6	144-2602	1	Bracket-Mounting
6:2	132-5067	1	Decal-Adjustment, Ride
7	127-6768	3	Screw-CARR
8	127-6751	2	Spacer-Aluminum
9	99-5107	6	Nut-Lock
10	131-4699	2	Washer-Plastic
11	131-6348	2	Bolt-Shoulder
12	133-1815	2	Shock/Spring ASM
13	136-9017	2	Cam Lock ASM
14	3296-45	2	Nut-Hex
15	136-5636	2	Knob-Lock, Cam
16	136-1719	1	Shock ASM-Front
16	136-8993	1	Shock/Spring ASM
17	3231-22	3	Screw-CARR
18	133-5109	2	Bearing-Sleeve
19	132-5058	1	Bumper-Rubber
20	144-0381-01	1	Floorpan
21	325-19	1	Screw-HH
22	105-3048	2	Washer-Flat
23	116-0648	2	Screw-HH, Thd Lock
24	1-513658	2	Bumper
25	86-1990	2	Washer
26	144-0437	1	Decal-Myride
27	125-9383	1	Decal-Service Aid
28	3-6803	2	Washer-Adjusting
31	144-0355	1	Floormat-Myride
32	117-2382	2	Plug-Plastic
33	130-0733	4	Pad-Rubber
34	104-8301	5	Nut-HF, NI
35	104-8300	9	Nut-HF, NI
36	3230-10	4	Bolt-CARR
37	115-9625	1	Decal-Brake, Parking

Roll-Over Protection System Assembly No. 116-0231

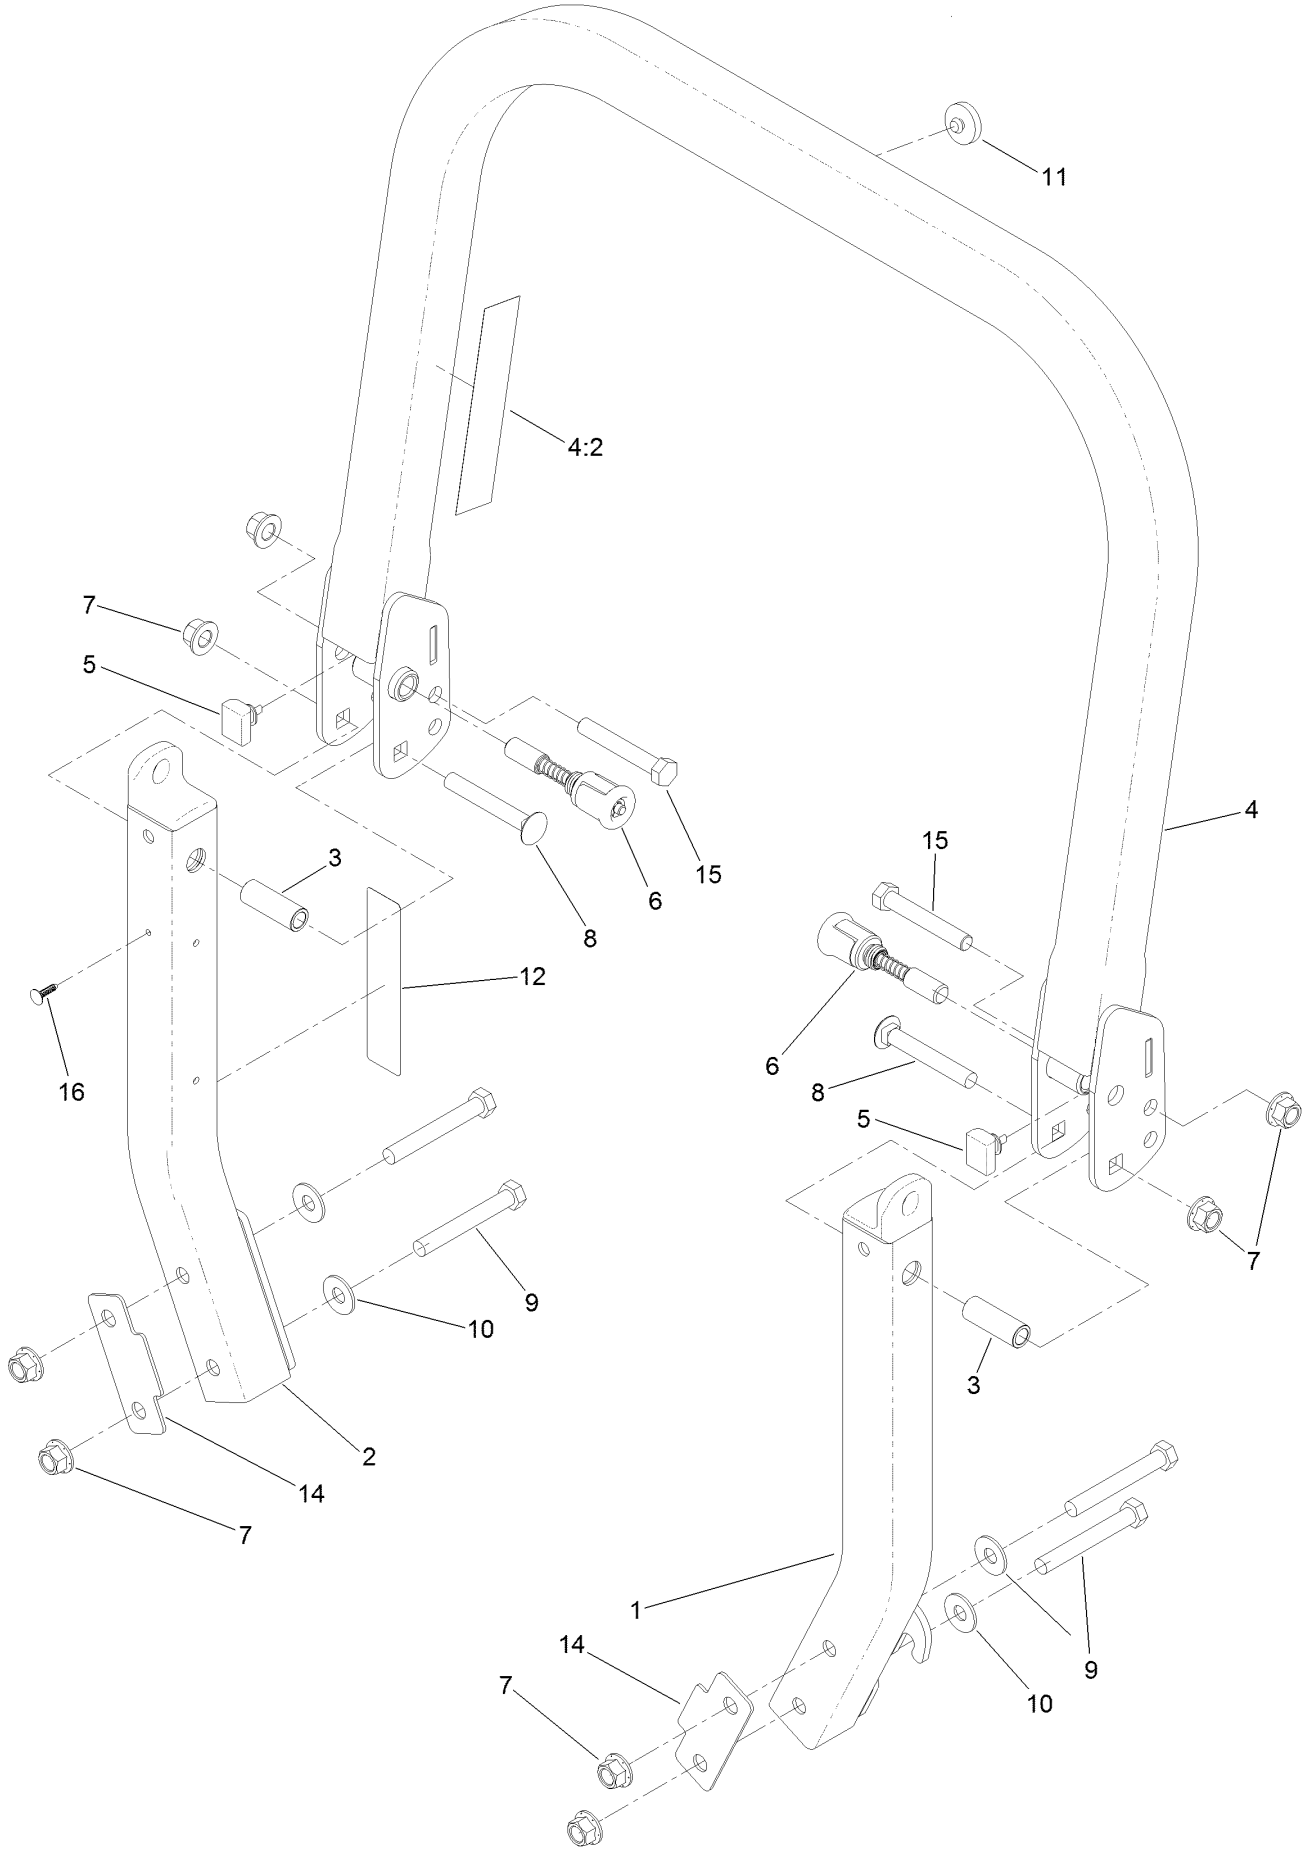

Roll-Over Protection System Assembly No. 116-0231 (continued)

Ref.	Part Number	Qty.	Description
1		1	Leg-ROPS, LH ●
2		1	Leg-ROPS, RH ●
3	109-6653	2	Spacer
4		1	Upper ROPS ASM ●
4:2	107-3069	1	Decal-Warning
5	109-5337	2	Bumper-ROPS
6	116-0104	2	Pin-Spring
7	99-5107	8	Nut-Lock
8	3233-10	2	Screw-CARR
9	325-35	4	Screw-HH
10	109-9505	4	Washer-Spring
11	109-9233	1	Bumper-Push-In, Rubber
12	117-0346	1	Decal-Caution, Fuel Vent
14	116-0960	2	Spacer
15	325-13	2	Screw-HH
16	125-8067	1	Plug-Plastic

● Not serviced separately

Caster Fork and Wheel Assembly

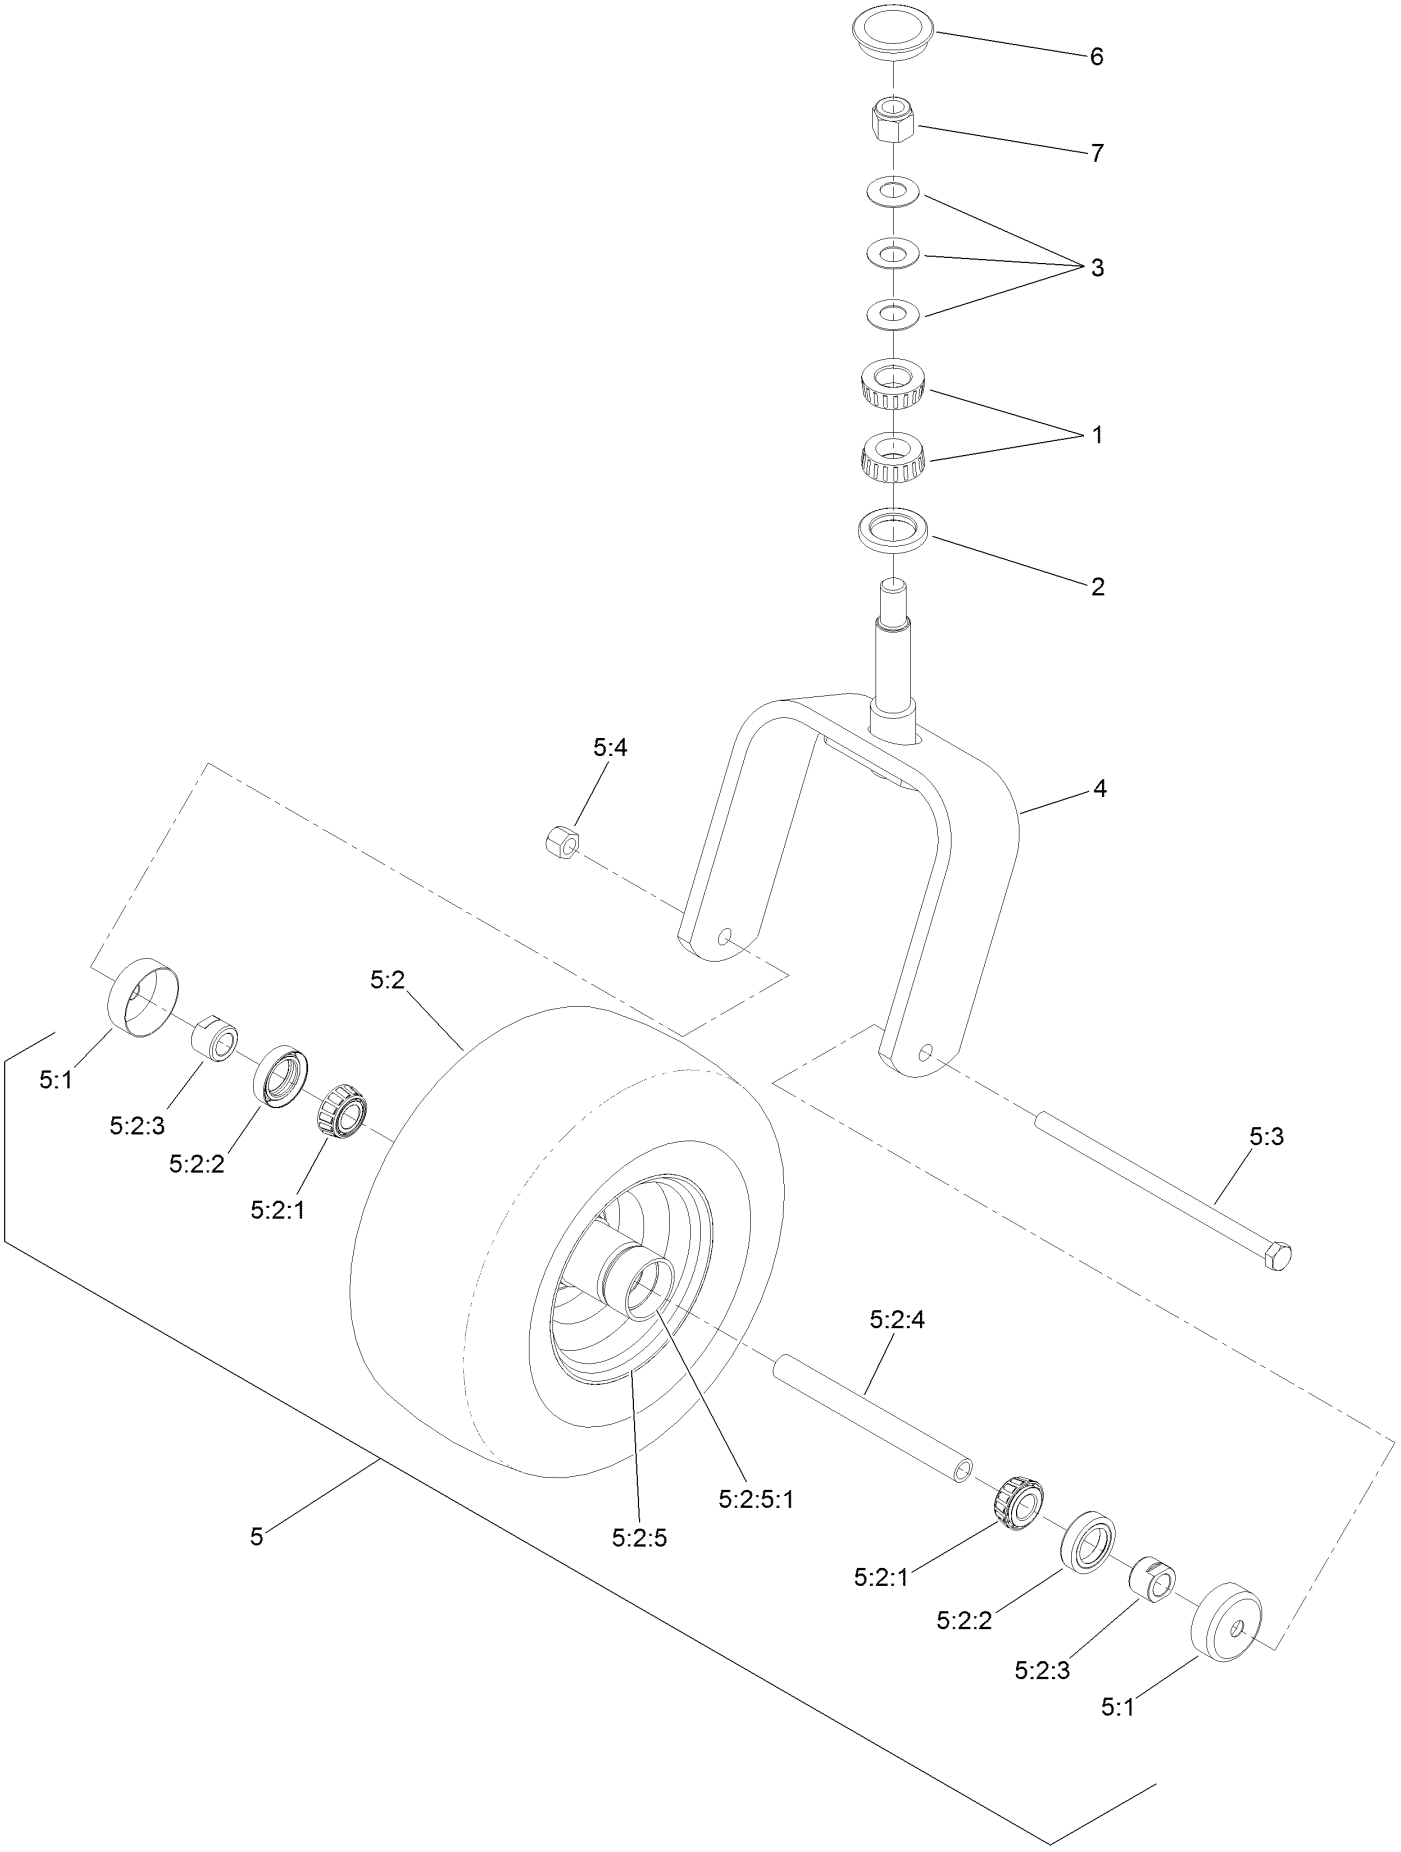

Caster Fork and Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-543509	2	Bearing-Roller, Tapered
2	116-5647	1	Seal-Grease
3	1-633508	3	Washer-Bellville
4	116-6707-01	1	Caster
5	127-9528	1	Wheel And Axle ASM
5:1	103-2768	2	Guard-Seal
5:2		1	Wheel And Bearing ASM ●
5:2:1	1-633585	2	Bearing-Cone, Taper
5:2:2	103-0063	2	Seal-Caster
5:2:3	103-3051	1	Spacer-Nut ■
5:2:4	126-5361	1	Axle Caster ASM
5:2:5		1	Wheel And Tire ASM ●
5:2:5:1	1-633584	2	Bearing-Cup
5:3	325-39	1	Screw-HH
5:4	3296-23	1	Nut-Lock, NI
6	103-4882	1	Cap-Grease
7	3296-51	1	Nut-Lock, NI

● Not serviced separately
■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

Hydraulic Drive Assembly

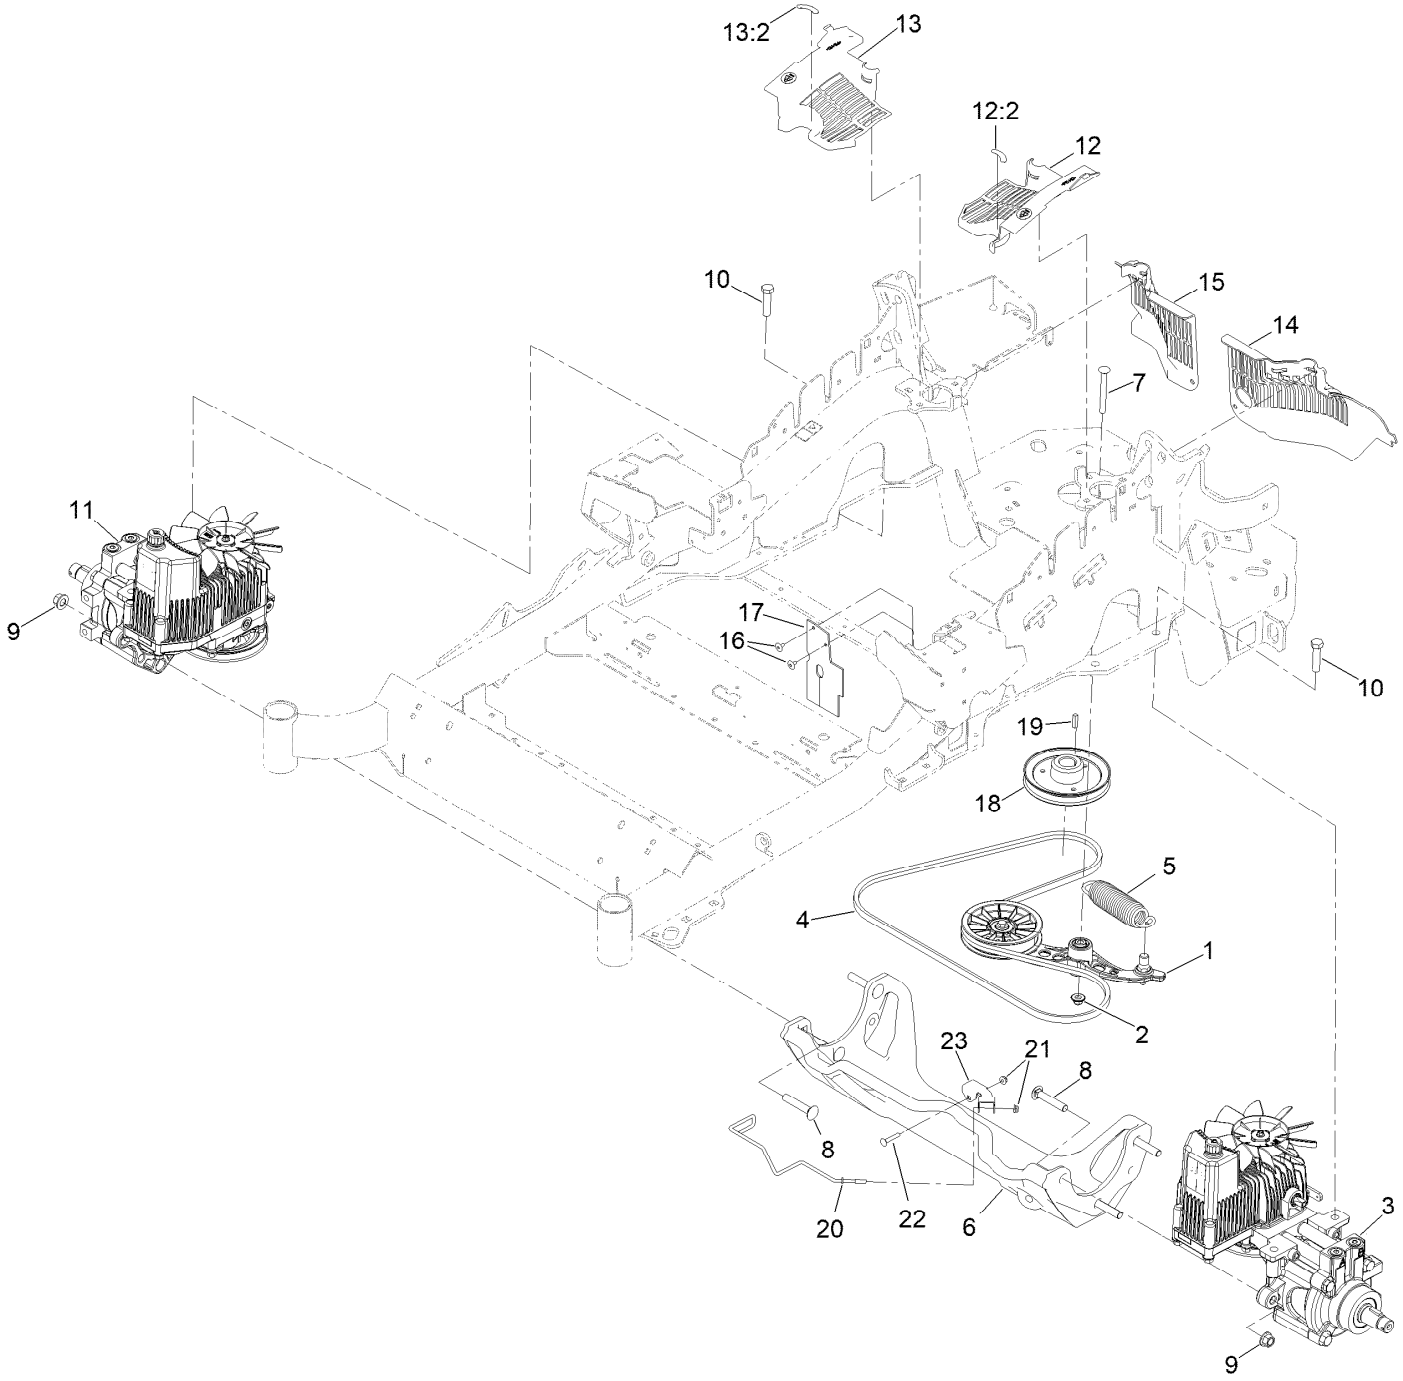

Hydraulic Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-1255	1	Pump Idler ASM
2	109-6658	1	Nut-Flange, NI
3	135-7899	1	Hydro-LH
4	126-9835	1	Belt-V
5	116-6317	1	Spring-Extension
6	116-7558	1	Cradle-Hydro
7	116-1502	1	Bolt-Shoulder, Carriage
8	126-0095	6	Screw-CARR
9	99-5107	6	Nut-Lock
10	325-8	4	Screw-HH
11	135-7900	1	Hydro-RH
12	116-0170	1	LH Hydro Guard ASM
12:2	116-8726	1	Decal-Oil, Hydro
13	116-0171	1	RH Hydro Guard ASM
13:2	116-8726	1	Decal-Oil, Hydro
14	109-9057	1	Guard-Hydro, Rear (LH)
15	109-9058	1	Guard-Hydro, Rear (RH)
16	1-803035	2	Rivet-Pop
17	116-2362	1	Deflector-Air Flow
18	142-9445	1	Sheave, W/Hub
19	1-807259	1	Key
20	146-5103	1	Guide-Belt
21	104-7201	2	Nut-HF, NI
22	3229-4	1	Screw-CARR
23	146-5102	1	Bracket-U
99	114-4713	1	Hypr-Oil 500 (Quart) ●
99	114-4714	1	Hypr-Oil 500 (Gallon) ●
99	114-4715	1	Hypr-Oil 500-5 (5 Gallon) ●
99	117-0390	1	Filter-Hydro ●

● Not illustrated

Pump Idler Assembly No. 116-1255

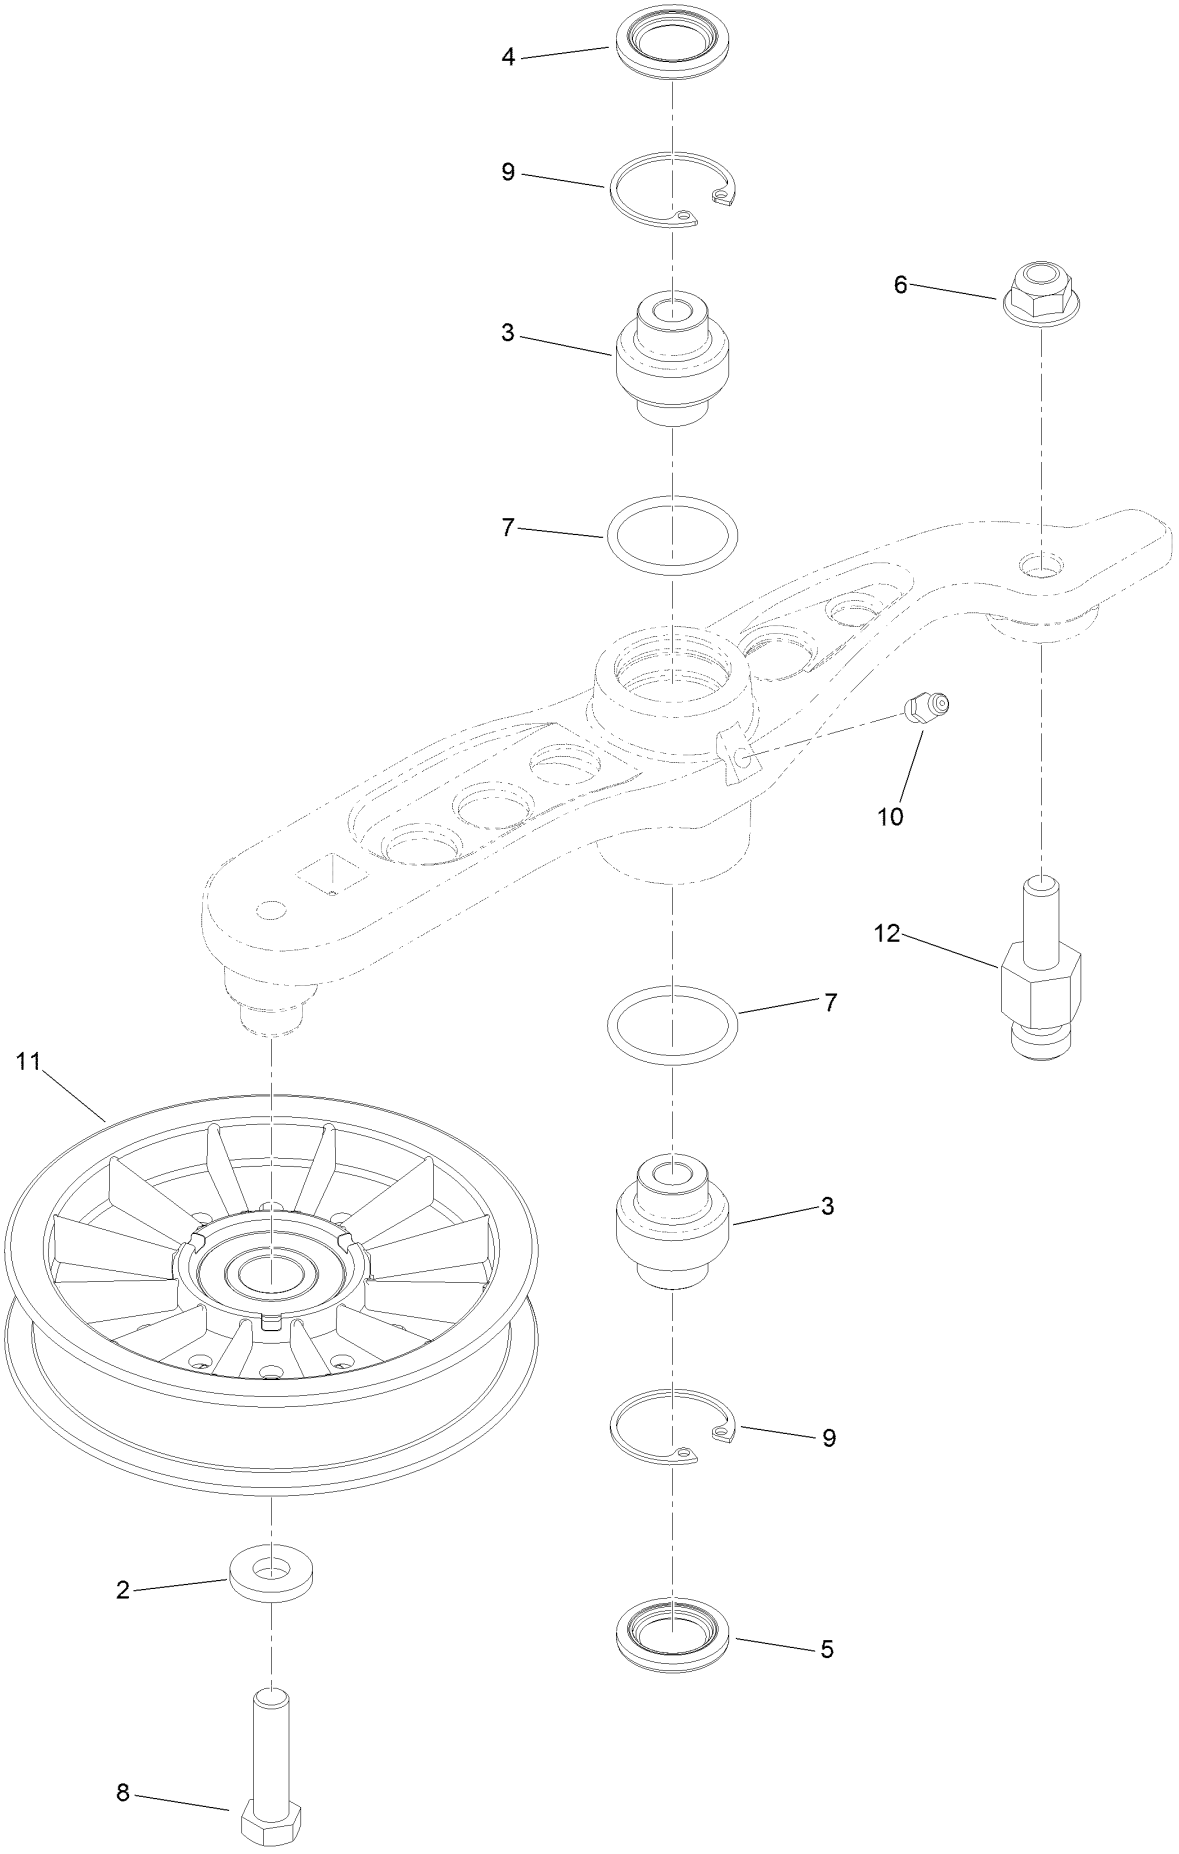

Pump Idler Assembly No. 116-1255 (continued)

Ref.	Part Number	Qty.	Description
2	43-0940	1	Spacer
3	103-3504	2	Bearing-Spherical
4	103-3505	1	Seal-Lip, Double
5	103-3506	1	Seal-Lip, Single
6	109-6658	1	Nut-Flange, NI
7	106-7159	2	O-Ring
8	323-8	1	Screw-HH
9	32120-10	2	Ring-Snap
10	302-19	1	Fitting-Grease
11	109-8076	1	Pulley-Idler
12	132-4724	1	Pin-Anchor, Spring

LH Hydro Assembly No. 135-7899

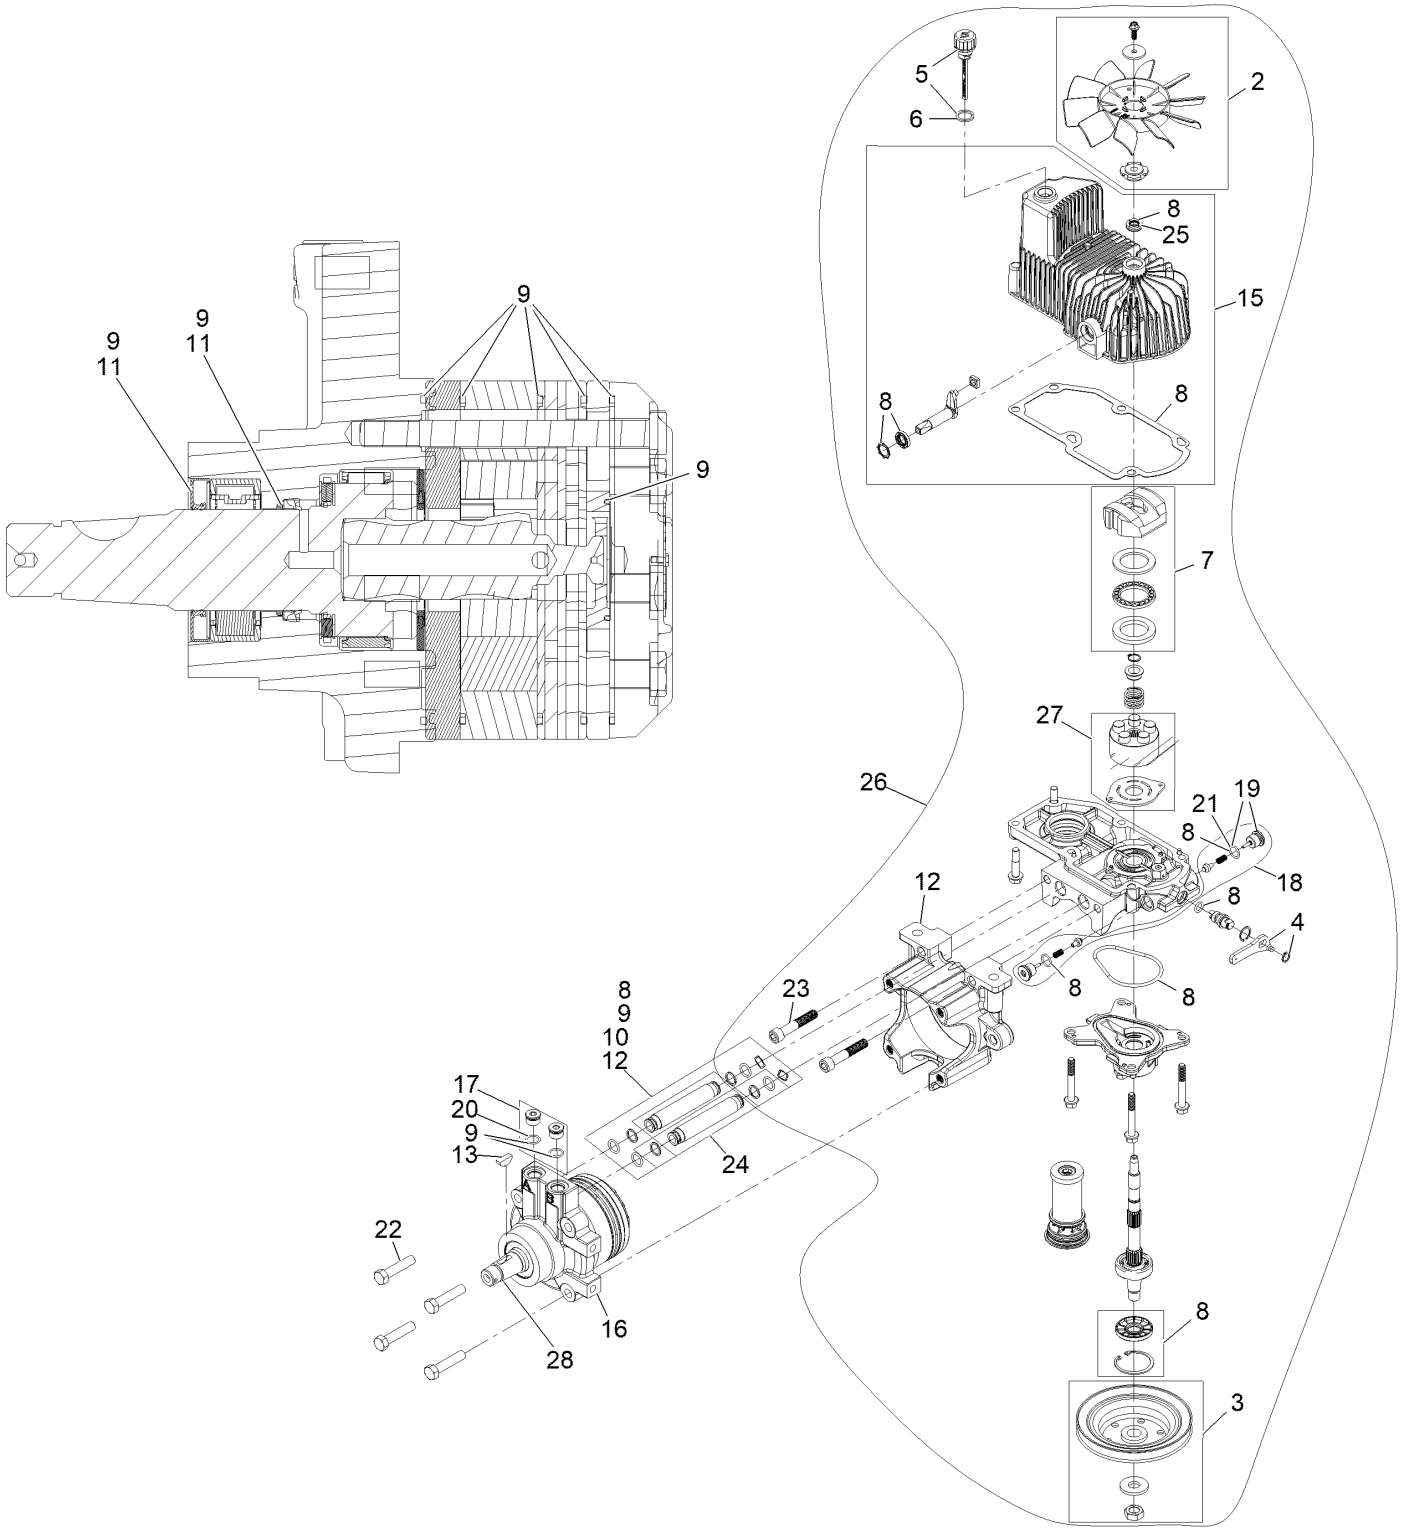

LH Hydro Assembly No. 135-7899 (continued)

Ref.	Part Number	Qty.	Description
2	142-3603	1	Kit, 7.8 In Fan
3	116-0234	1	Pulley Kit
4	116-0235	1	Handle
5	116-0236	1	Dipstick
6	116-0237	1	Gasket
7	116-1367	1	Swash Block Kit
8	142-3604	1	Kit, Pump Seal
9	116-1369	1	Motor Seal Kit
10	116-1370	1	Tube Seal Kit
11	116-1371	1	Output Shaft Seal Kit
12	116-5469	1	Cup-Nose
13	3257-42	1	Key-Woodruff
15	142-4460	1	Kit, Housing-Hydro LH
16	116-8915	1	Motor-Hydraulic
17	116-7901	1	Magnetic Plugs Service Kit
18	142-3605	1	ASM, Check Valve
19	116-1631	2	Plug-Check (W/O-Ring)
20	76-1900	2	O-Ring
21	116-8662	2	O-Ring-Valve, Check
22	116-8974	4	Screw HH
23	116-8975	2	Screw-HSH
24	116-9922	2	Hydraulic Tube Kit
25	126-7711	1	Seal-Drive, Fan
26	142-3609	1	Kit, Pump Section 12Cc LH
27	142-4500	1	Kit - 12Cc Port Plate,Rotate Grp
28	146-3749	1	Output Shaft- Tl Uht Motor
99	116-1373	1	Flow Test Kit ●
99	116-4245	1	Puller-Pulley ●

● Not illustrated

RH Hydro Assembly No. 135-7900

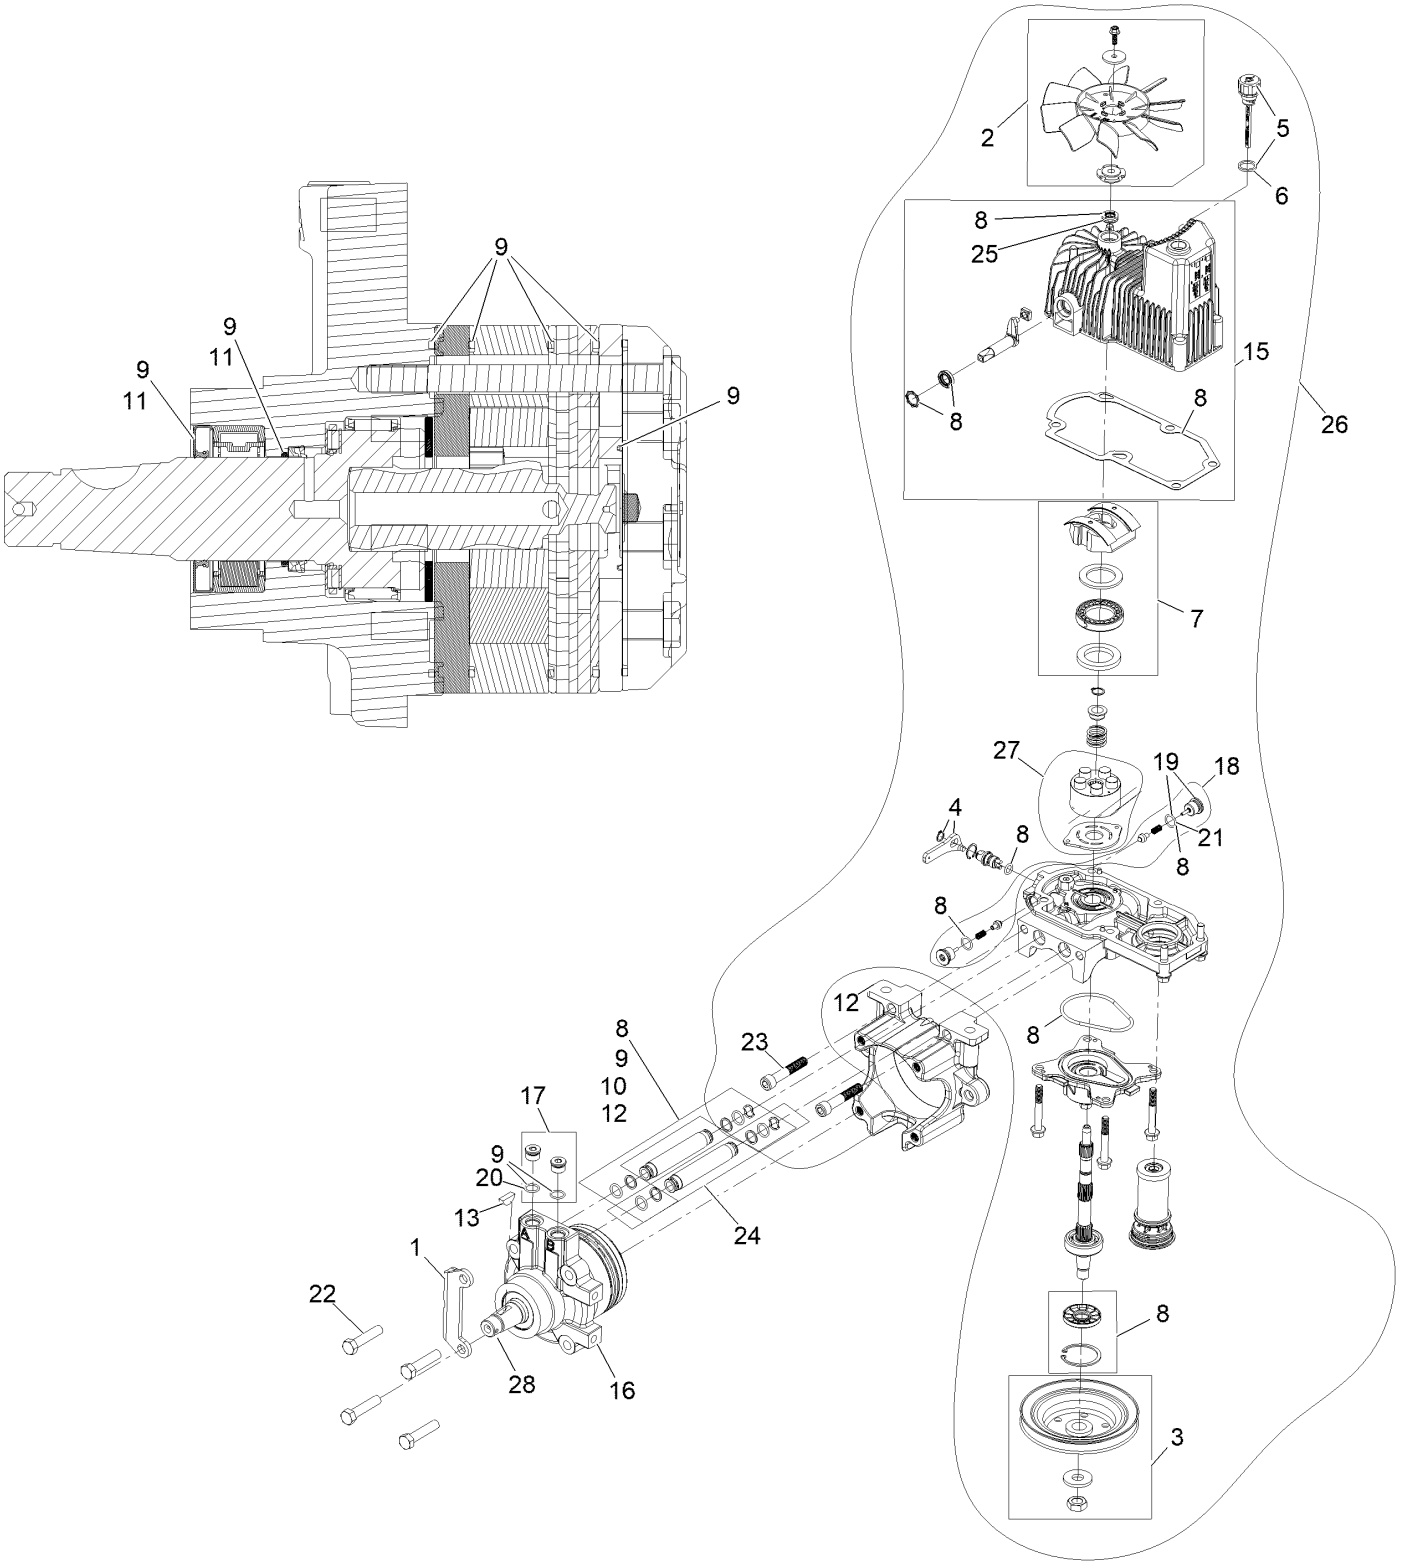

RH Hydro Assembly No. 135-7900 (continued)

Ref.	Part Number	Qty.	Description
1	135-7827	1	Plate, Horse Shoe Mount
2	142-3603	1	Kit, 7.8 In Fan
3	116-0234	1	Pulley Kit
4	116-0235	1	Handle
5	116-0236	1	Dipstick
6	116-0237	1	Gasket
7	116-1367	1	Swash Block Kit
8	142-3604	1	Kit, Pump Seal
9	116-1369	1	Motor Seal Kit
10	116-1370	1	Tube Seal Kit
11	116-1371	1	Output Shaft Seal Kit
12	116-5469	1	Cup-Nose
13	3257-42	1	Key-Woodruff
15	142-4461	1	Kit, Housing-Hydro RH
16	116-8916	1	Motor-Hydraulic RH 240Cc
17	116-7901	1	Magnetic Plugs Service Kit
18	142-3605	1	ASM, Check Valve
19	116-1631	2	Plug-Check (W/O-Ring)
20	76-1900	2	O-Ring
21	116-8662	2	O-Ring-Valve, Check
22	116-8974	4	Screw HH
23	116-8975	2	Screw-HSH
24	116-9922	2	Hydraulic Tube Kit
25	126-7711	1	Seal-Drive, Fan
26	142-3608	1	Kit, Pump Section 12Cc RH
27	142-4500	1	Kit - 12Cc Port Plate,Rotate Grp
28	146-3749	1	Output Shaft- Tl Uht Motor
99	116-1373	1	Flow Test Kit ●
99	116-4245	1	Puller-Pulley ●

● Not illustrated

Rear Wheel Assembly

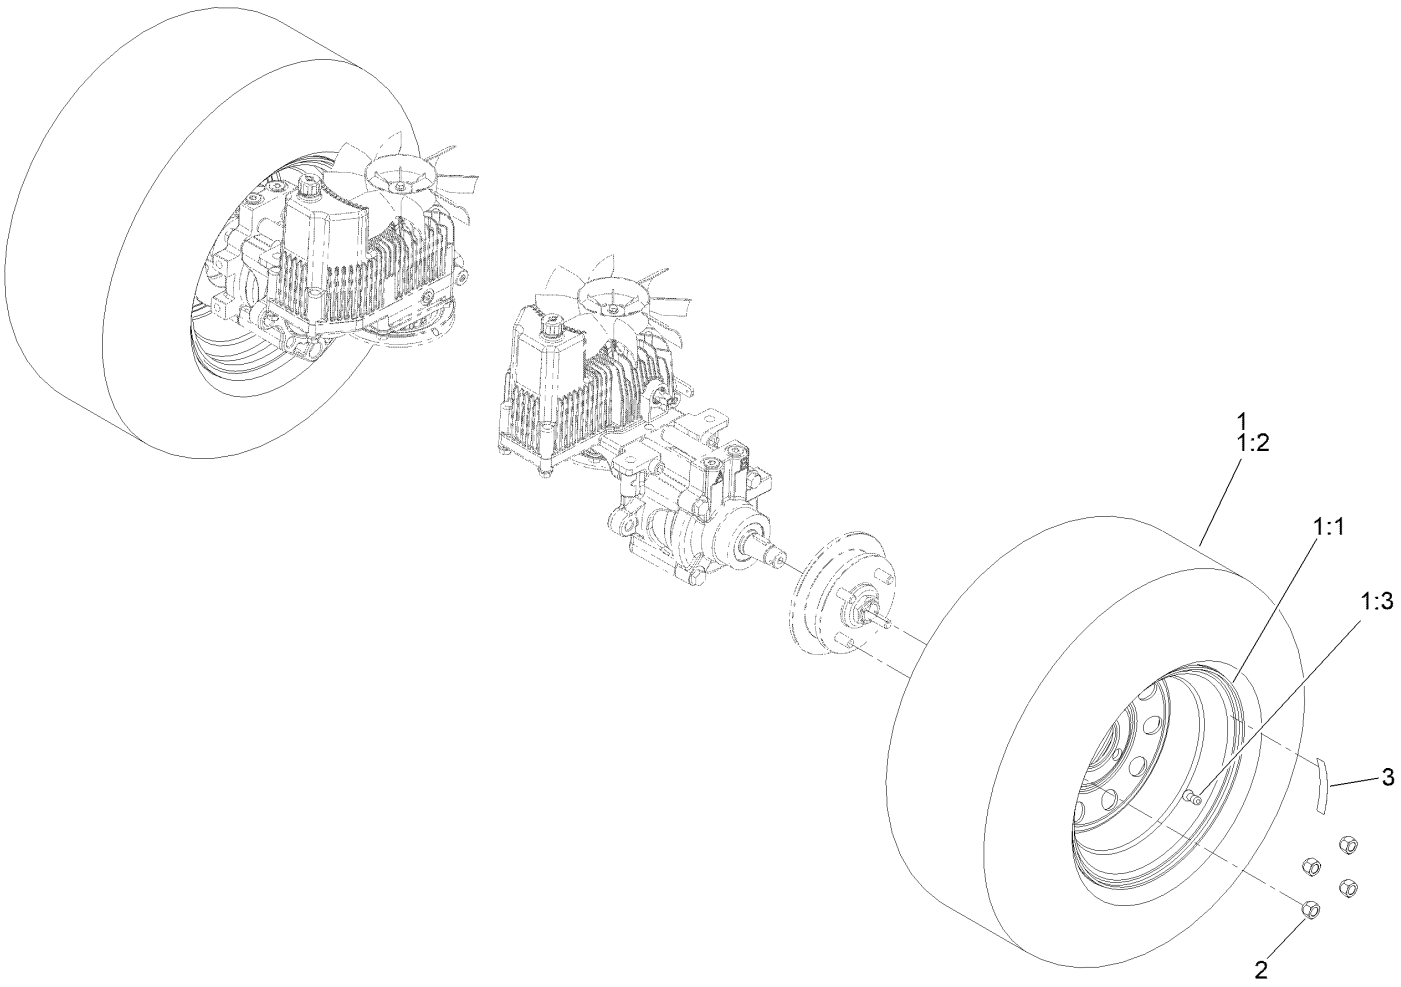

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-9514	2	Wheel And Tire ASM
1:1	127-9515	1	Wheel
1:2	135-2216	1	Tire, 23 X 9.50-12
1:3	232-27	1	Stem-Valve
2	139-2564	8	Nut-Lug
3	126-2055	2	Decal-Torque, Wheel Hub Lug

Park Brake Assembly

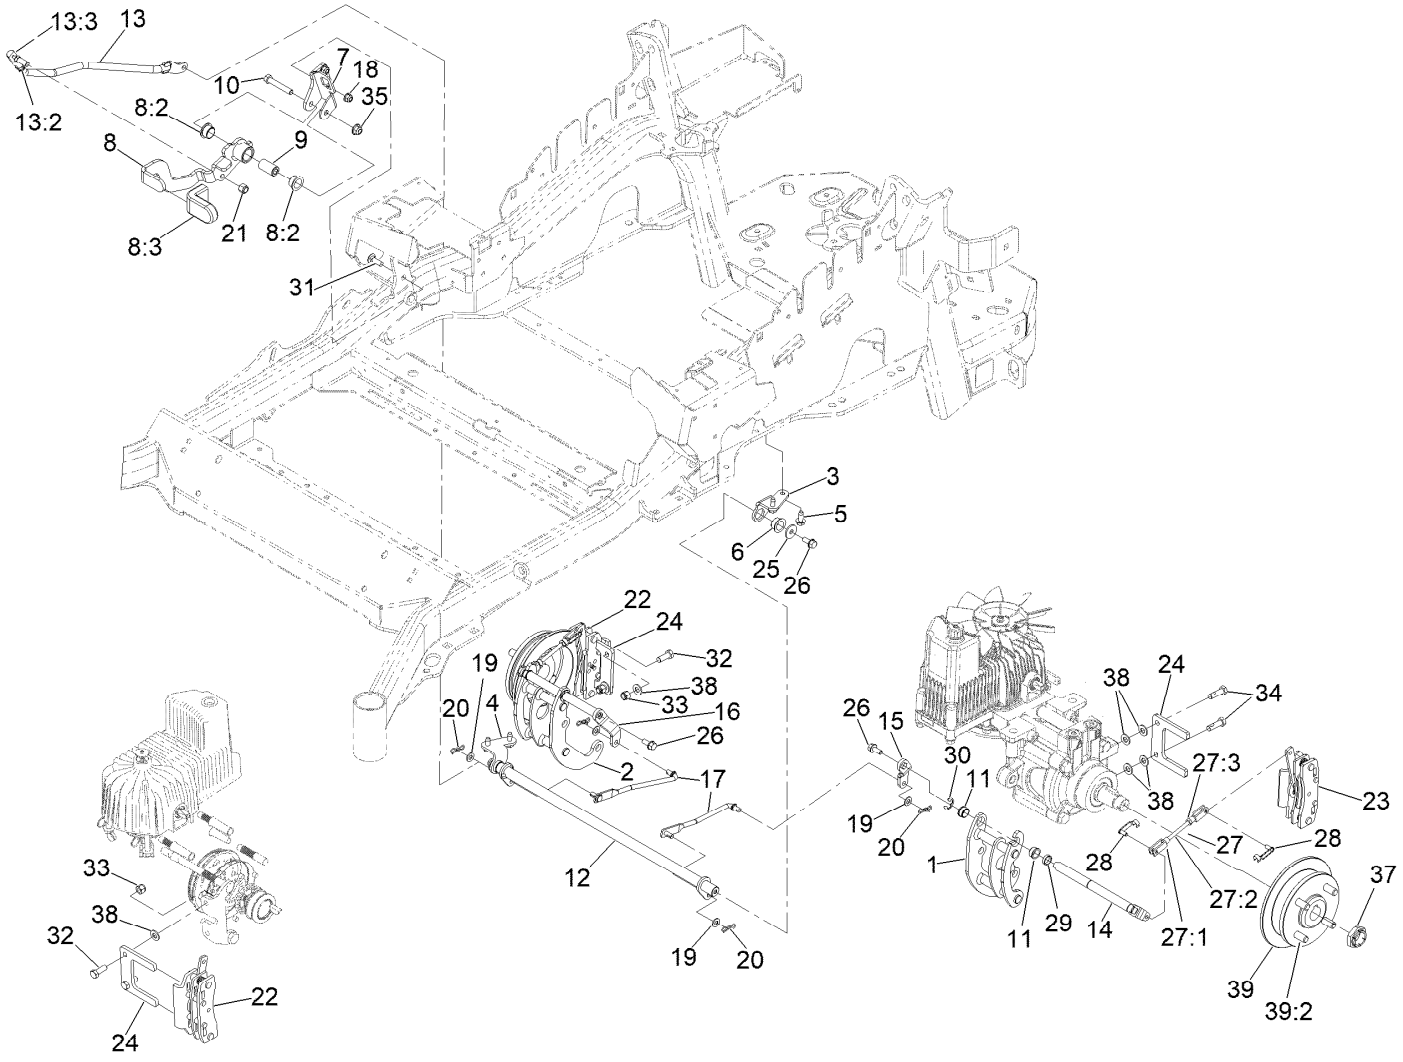

REAR VIEW OF
RIGHT HAND HYDRO.

Park Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-4248	1	Mount-Bellcrank, LH
2	126-4249	1	Mount-Bellcrank, RH
3	116-9681	1	Mount-Pivot, LH
4	116-9682	1	Mount-Pivot, RH
5	32144-70	4	Screw-HWHTF
6	109-8054	2	Bushing-Flange
7	116-9096-01	1	Bracket-Mount
8	135-7982	1	Brake Lever ASM W/Grip M-R
8:2	109-8054	2	Bushing-Flange
8:3	132-4749	1	Grip-Lever
9	116-9117	1	Pivot-Handle, Brake
10	323-11	1	Screw-HH
11	126-6199	4	Bushing
12	135-7800	1	Shaft-Cross
13	135-7805	1	ASM, Front Linkage
13:2	94-7572	1	End-Tie Rod, RH
13:3	3220-3	1	Nut-HJ
14	126-4251	2	Bellcrank
15	126-3716	1	Arm-Inner, RH
16	126-3715	1	Arm-Inner, LH
17	142-6327	2	Mid-Link, Long
18	104-8300	2	Nut-HF, NI
19	3256-23	4	Washer-Plain
20	119-1415	4	Pin-Cotter, Locking
21	3296-6	1	Nut-Lock
22	135-7440	1	Caliper-Brake, RH
23	135-7441	1	Caliper-Brake, LH
24	135-7828	2	Plate-Mount, Brake
25	115-7109	2	Washer-Flat
26	98-9940	4	Screw-HHF
27	126-7587	2	Rear Linkage ASM
27:1	126-7588	2	Yoke
27:2	116-9069	1	Linkage, Rear
27:3	3220-1	1	Nut-Jam
28	126-6395	4	Pin-Clevis, Spring
29	126-6200	2	Spacer
30	32120-19	2	E-Ring
31	3230-2	2	Bolt-CARR
32	135-7915	2	Screw-HH,
33	112-0236	2	Nut-Lock
34	135-7890	2	Screw-HH, Patch,
35	104-8301	1	Nut-HF, NI
37	116-1399	2	Locknut
38	3256-24	6	Washer-Plain
39	142-2701	2	Wheel Hub ASM
39:2	116-1696	4	Stud-Wheel

Fuel System Assembly

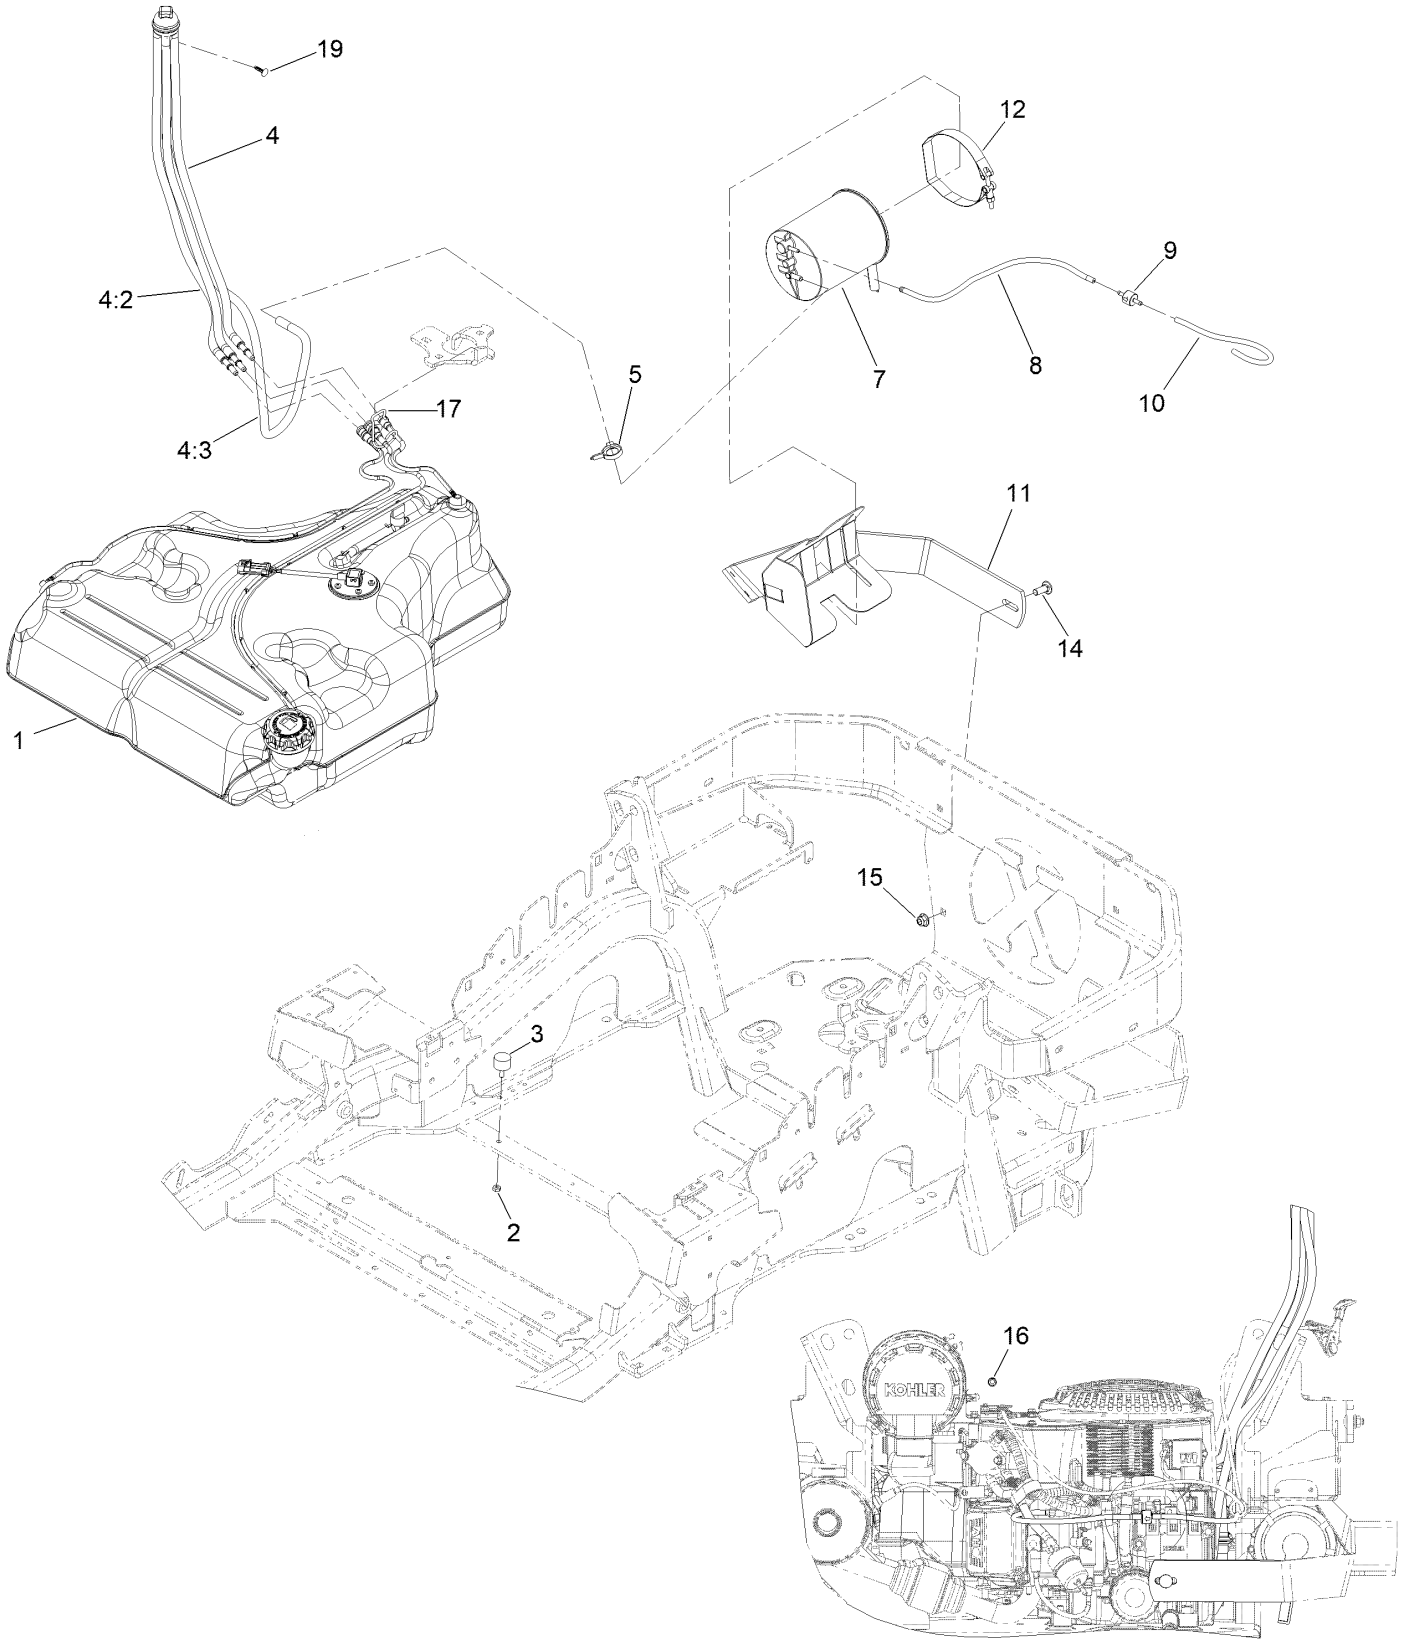

Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	135-0643	1	Fuel Tank ASM
2	3218-1	2	Nut-Jam 1/4-20
3	1-523420	2	Bumper
4	127-0583	1	Fuel Manifold Vent ASM
4:2	109-0302	3	Hose-Fuel Line 24"
4:3	108-5376	1	Hose-Fuel
5	105-1853	1	Clamp-Hose
7	116-1442	1	Canister-Carbon, 1200Cc
8	116-2963	1	Hose-Vent, Formed
9	133-8499	1	Valve-Check, Vacuum
10	119-4235	1	Hose-Vent, Formed
11	116-1433-03	1	Mount-Canister
12	116-2228	1	Clamp, T-Bolt
14	3231-22	1	Bolt-Carriage 3/8-16 X 1
15	104-8301	1	Nut-Nyloc 3/8-16 Flg
16	116-4464	1	Plug-Port
17	116-6005	1	Retainer-Line, Vapor
19	125-8067	1	Plug-Plastic

Fuel Tank Assembly No. 135-0643

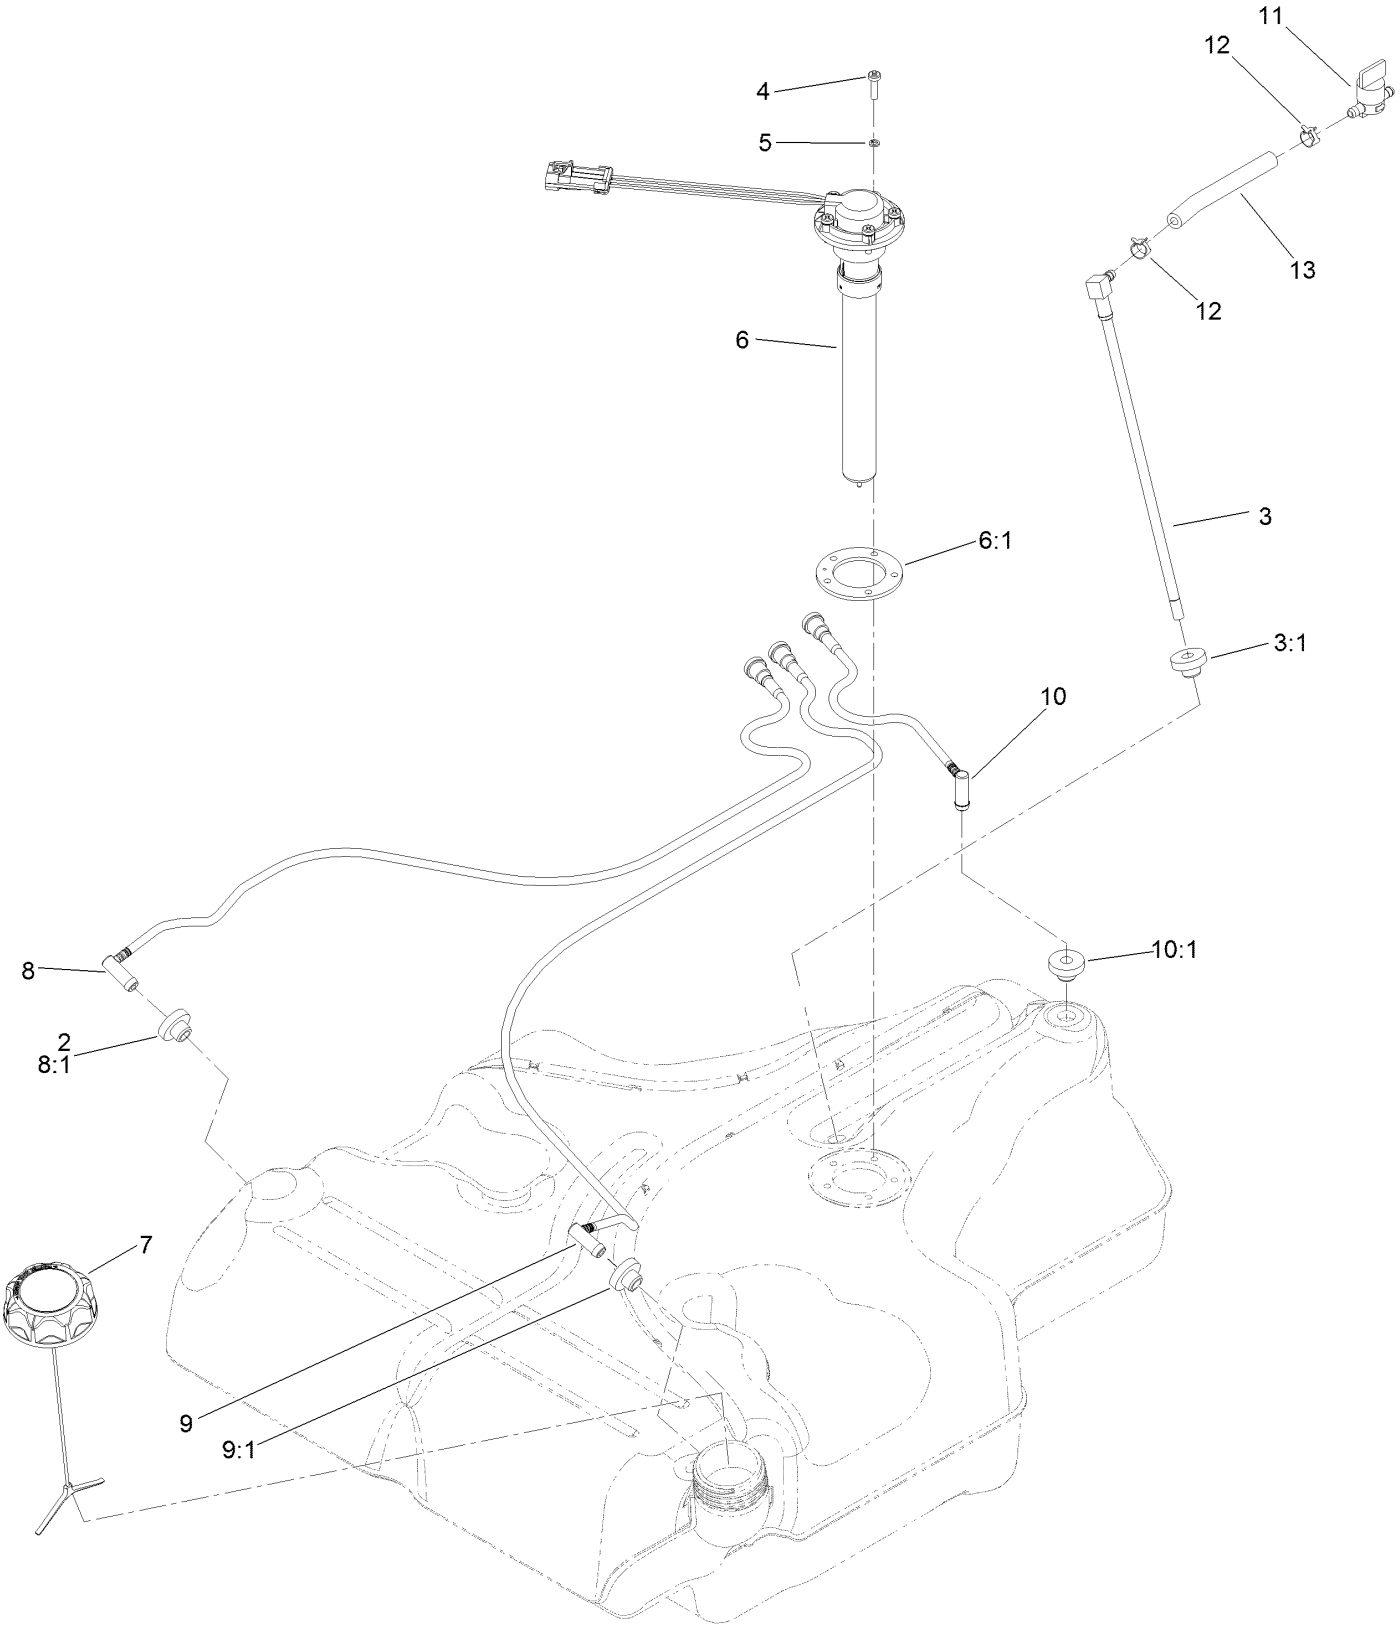

Fuel Tank Assembly No. 135-0643 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	4	Bushing
3	116-2459	1	Fuel Line Kit (With Grommet)
3:1	46-6560	1	Bushing
4	3290-500	5	Screw-PPH
5	3253-17	5	Washer-Lock
6	126-3913	1	Float-Sender, Fuel
6:1	126-3950	1	Gasket-Sender
7	126-1789	1	Cap-Fuel, Ratcheting
8	116-2460	1	RH Vent Line Kit (With Grommet)
8:1	46-6560	1	Bushing
9	116-2461	1	LH Vent Line Kit (With Grommet)
9:1	46-6560	1	Bushing
10	116-2462	1	Rear Vent Line Kit (With Grommet)
10:1	46-6560	1	Bushing
11	1-603770	1	Valve-Fuel
12	2412-98	2	Clamp-Hose
13	109-0650	1	Hose-Fuel

Seat Mounting Assembly

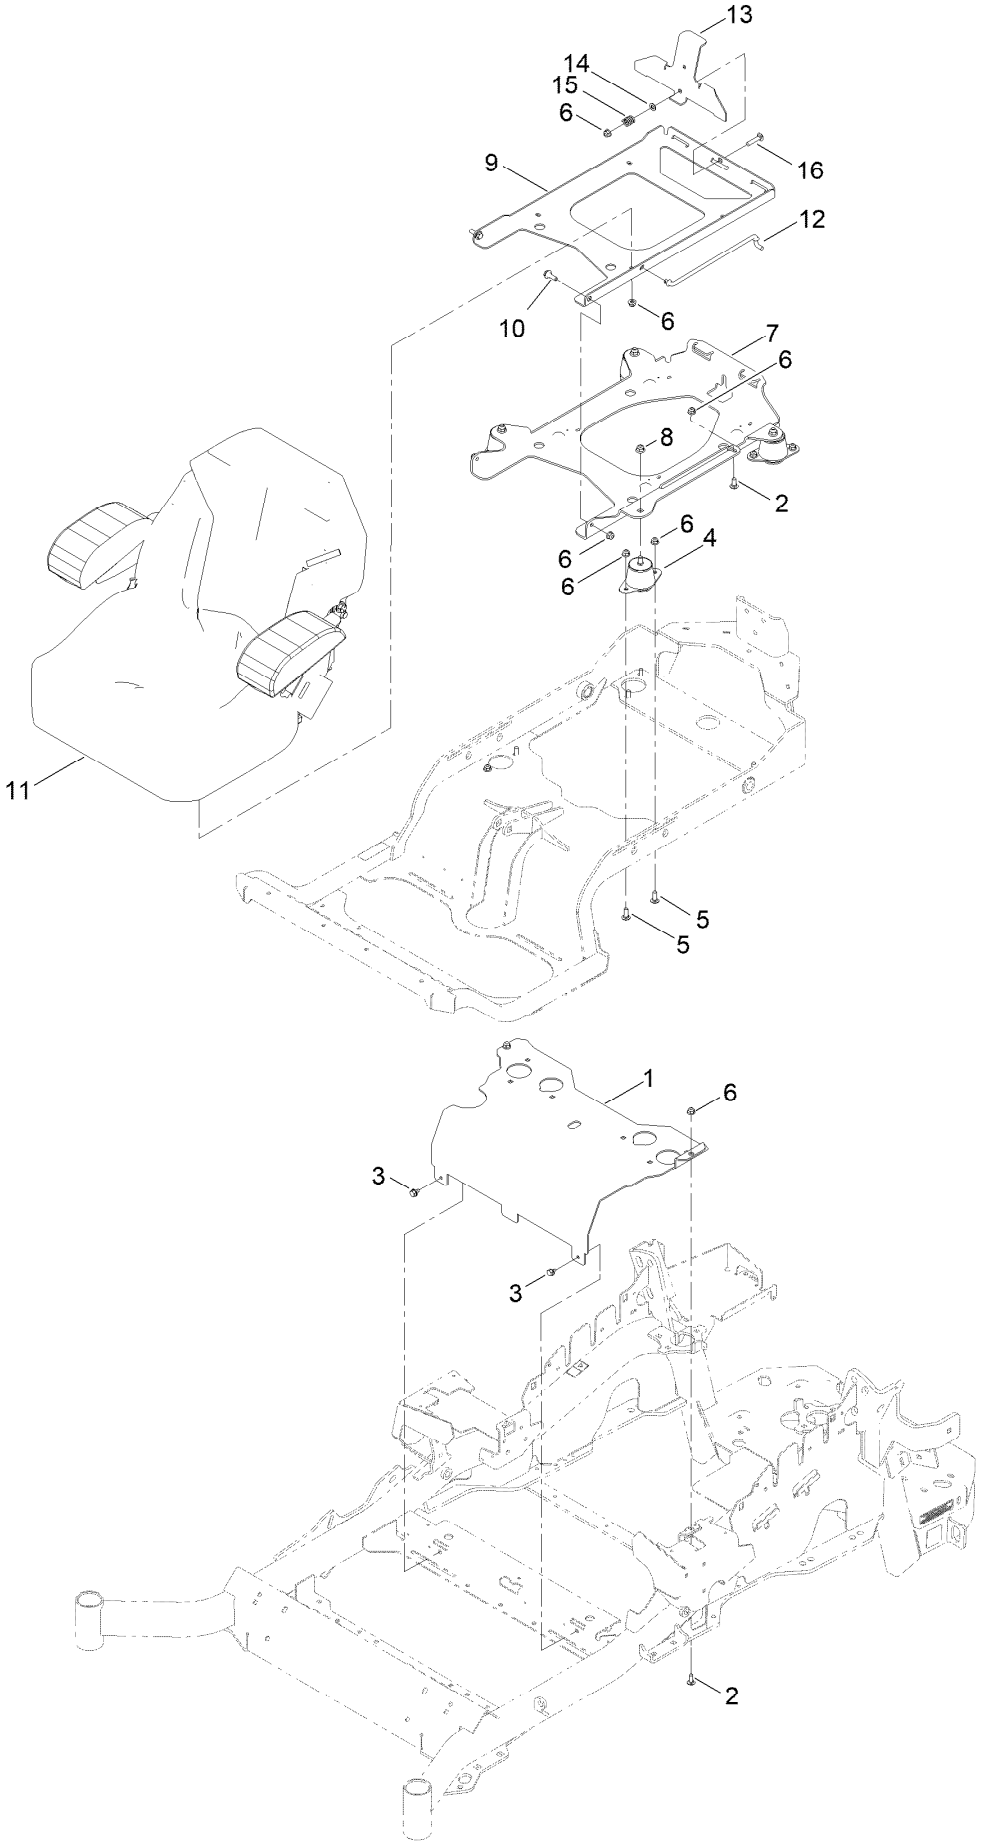

Seat Mounting Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-2130-03	1	Panel-Front, Seat Mount
2	3230-23	3	Bolt-CARR
3	9266934	2	Screw
4	109-9034	4	Isolator-Seat
5	3230-10	8	Bolt-CARR
6	104-8300	18	Nut-HF, NI
7	131-6324-03	1	Plate-Support, ISO Seat
8	104-8301	4	Nut-HF, NI
9	116-3859-03	1	Plate-Frame, Seat
10	116-1297	2	Screw-Shoulder
11	147-4983	1	Seat-Standard
12	116-0070	1	Rod-Prop
13	132-5088-03	1	Plate-Latch,Seat
14	3256-23	1	Washer-Plain
15	107-3017	1	Spring-Compression
16	3230-4	1	Bolt-CARR

Seat Assembly No. 147-4983

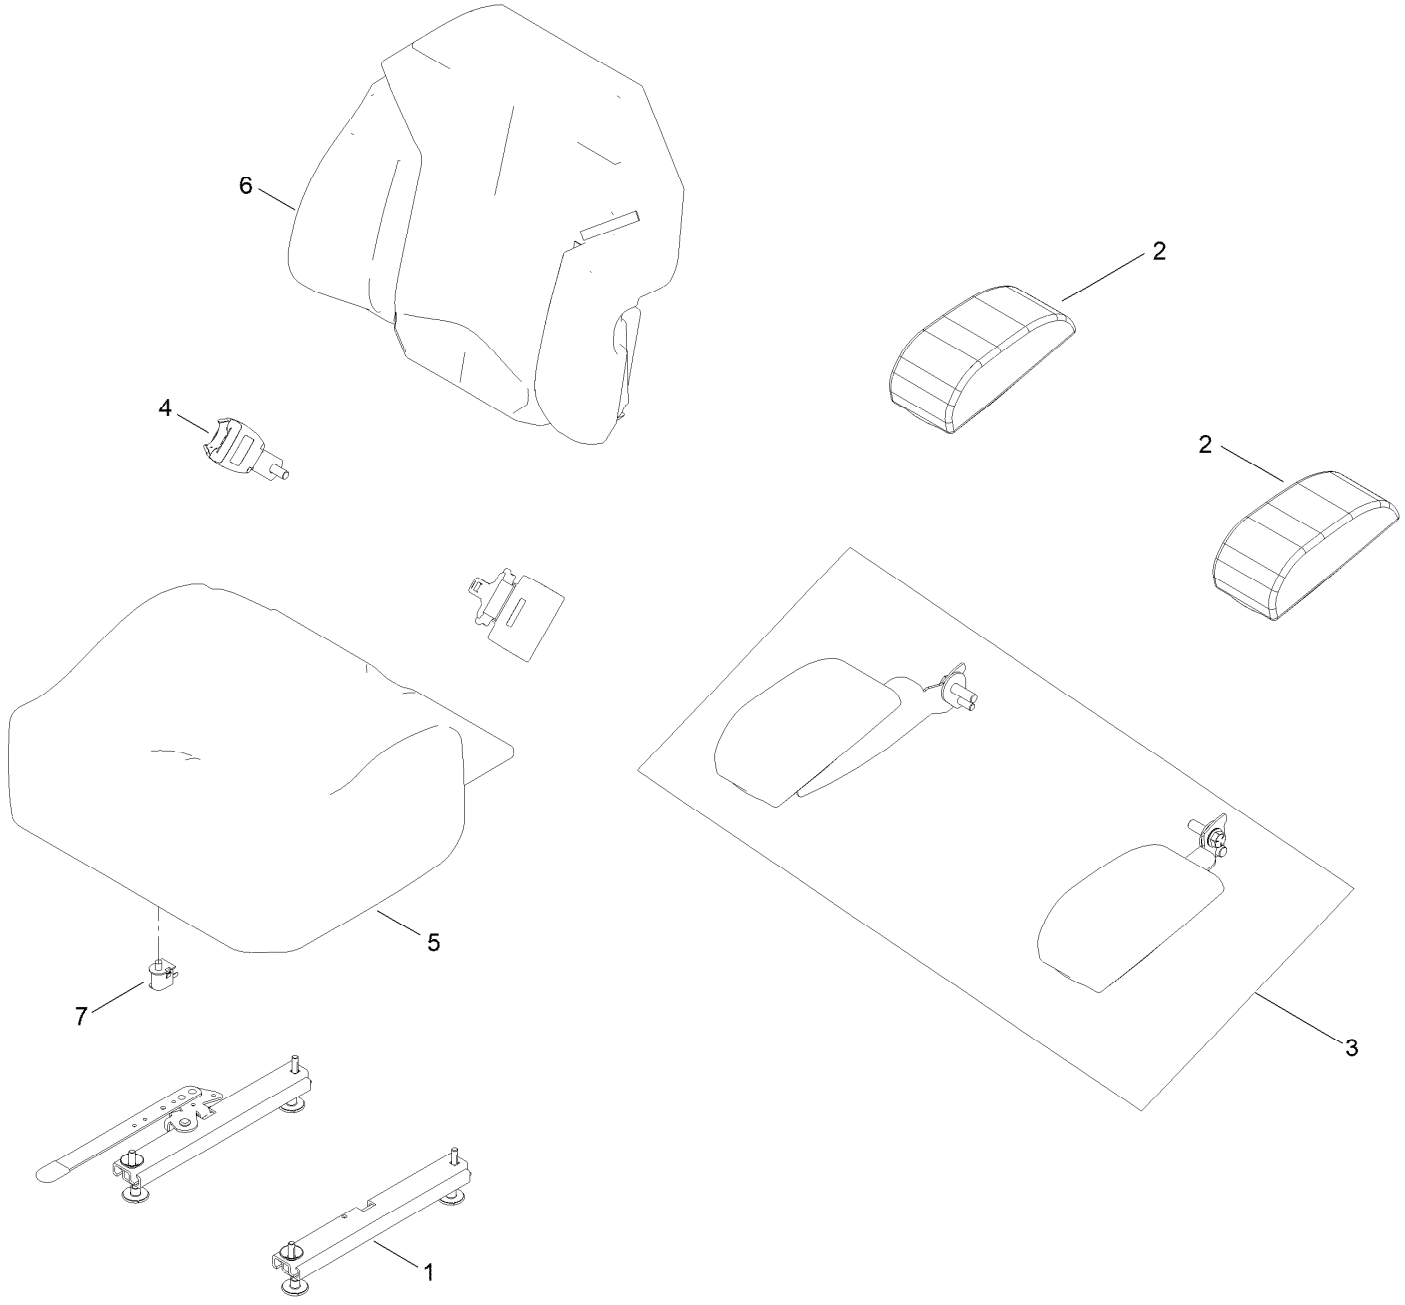

Seat Assembly No. 147-4983 (continued)

Ref.	Part Number	Qty.	Description
1	147-7883	1	Seat Track Kit
2	109-9802	1	Arm Rest Pad Set
3	147-4985	1	Armrest Kit
4	109-9805	1	Seat Belt Kit
5	140-8006	1	Cover-Cushion
6	140-8004	1	Cover-Back
7	82-2190	1	Switch-Bail

Motion Control Assembly

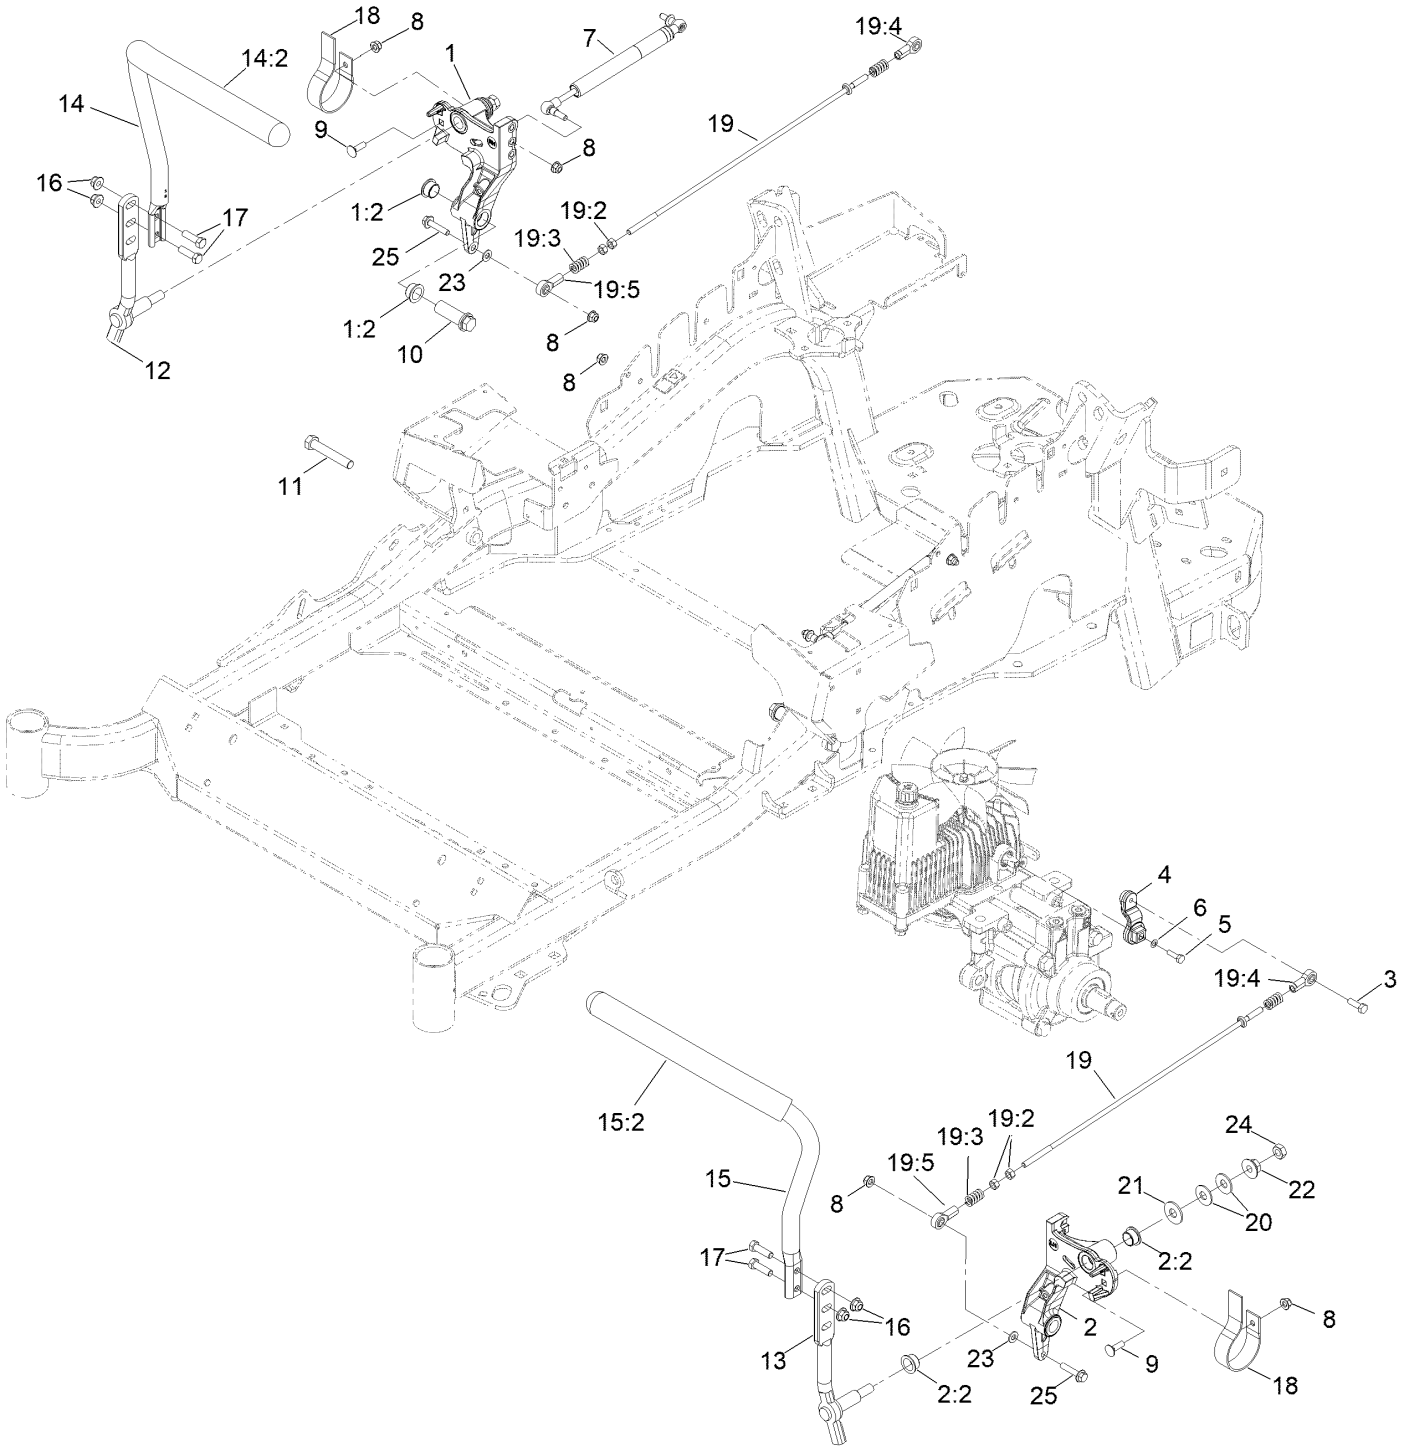

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flange
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flange
3	116-0648	2	Screw-HH, Thd Lock ●
4	109-4581	2	Arm-Control, Pump
5	9080046	2	Screw-HH ●
6	1-303435	2	Washer-Spring
7	146-0859	2	Damper, Motion Control
8	104-8300	8	Nut-HF, NI
9	3230-2	2	Bolt-CARR
10	109-5891	2	Hub-Threaded
11	325-12	2	Screw-HH
12	116-0039	1	Lever-Control Motion, RH
13	116-0040	1	Lever-Control Motion, LH
14	135-4727	1	Handle- RH W/Grip
14:2	109-5668	1	Grip-Lever, Control
15	135-4476	1	ASM-Handle-LH
15:2	109-5668	1	Grip-Lever, Control
16	104-8301	4	Nut-HF, NI
17	323-7	4	Screw-HH
18	109-5575	2	Spring-Leaf
19	109-8107	2	Pump Linkage Rear ASM
19:2	3219-2	2	Nut-Hex
19:3	1-323245	2	Spring-Compression
19:4	1-633152	1	Balljoint-LH
19:5	1-543017	1	Balljoint-RH
20	109-9505	4	Washer-Spring
21	3256-6	2	Washer-Flat
22	32128-56	2	Nut-HF
23	3256-23	2	Washer-Plain
24	3218-5	2	Nut-Jam
25	115-1794	2	Screw-HHF

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

Control Console Assembly

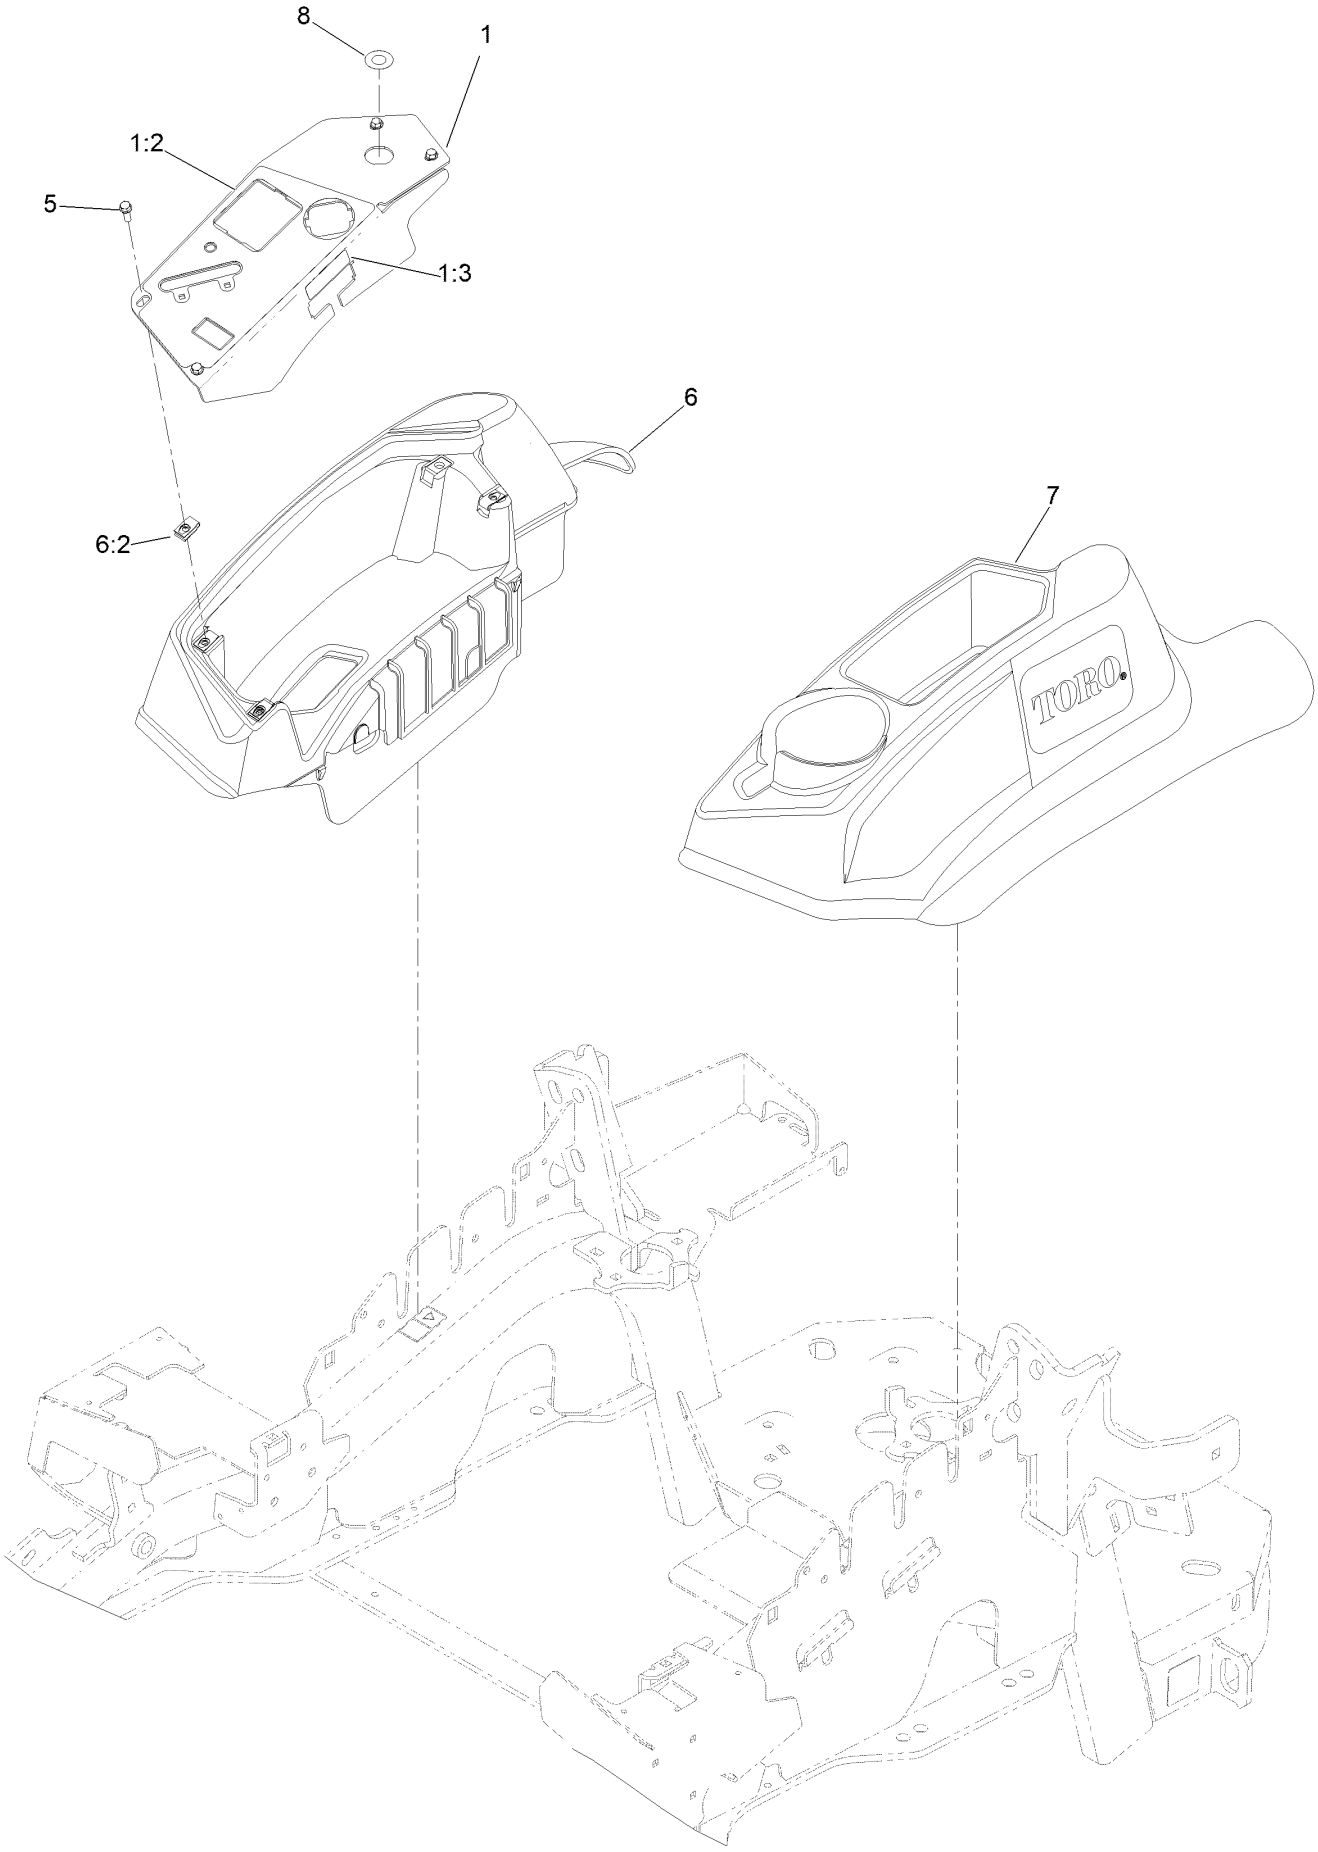

Control Console Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-7587	1	Control Panel W/Decal ASM
1:2	121-7586	1	Decal-Panel, Control
1:3	114-4466	1	Decal-Fuses
5	32105-15	4	Screw-HWH
6	119-2603	1	RH Console ASM
6:2	107069	4	Clip
7	119-2602	1	Console-LH
8	142-3251	1	Decal-Cover 12V

Electrical System Assembly

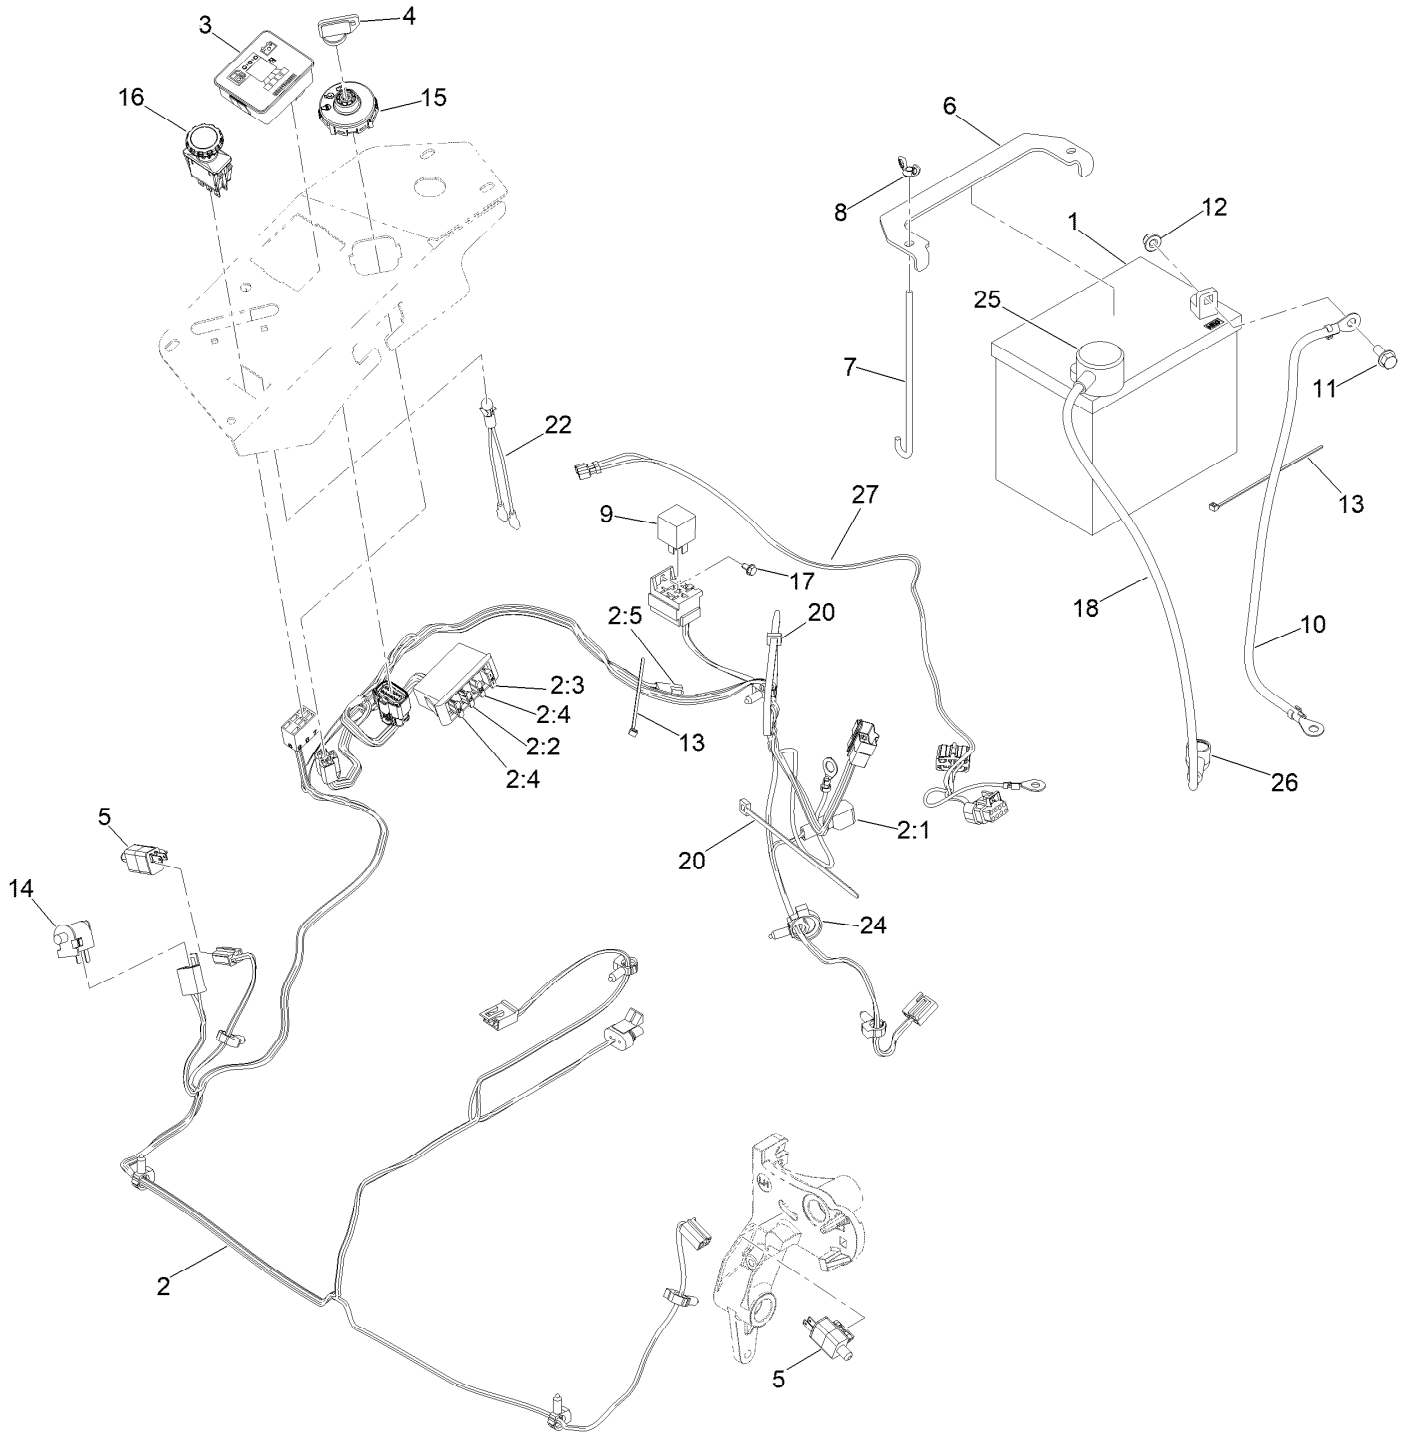

Electrical System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery
2	116-6009	1	Harness-Wire, Main ●
2:1	103-3895	1	Diode
2:2	218-578	1	Fuse-Blade, 10 Amp
2:3	109355	1	Fuse-Blade, 15 Amp
2:4	109102	2	Fuse-Blade, 25 Amp
2:5	116-0053	1	Cap-Plug
3	117-3882	1	Fuel/Hour Meter ASM
4	1-603511	1	Keys-Ignition (Spare Pair)
4	63-8360	1	Key-Ignition
5	110-6765	2	Switch
6	116-0042-03	1	Strap-Tie Down, Battery
7	1-633651	2	Bolt-Holddown
8	1-543792	2	Wingnut
9	1-643275	1	Relay
10	112-7063	1	Cable-Battery, Black
11	3234-5	2	Screw-HHF
12	104-8300	2	Nut-HF, NI
13	1-303287	2	Tie-Cable
14	82-2190	1	Switch-Bail
15	137-4100	1	Switch-Ignition
16	135-3653	1	Switch, PTO 10A
17	104-2065	1	Screw-HWH
18	115-3864	1	Cable-Battery, Positive
20	3290-378	2	Tie-Cable
22	1-643267	1	Indicator-LED, Red
24	105-1853	1	Clamp-Hose
25	109-2407	1	Insulator-Battery
26	1-543393	1	Insulator-Solenoid
27	146-4688	1	Harness-Jumper EFI

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Deck Lift Assembly

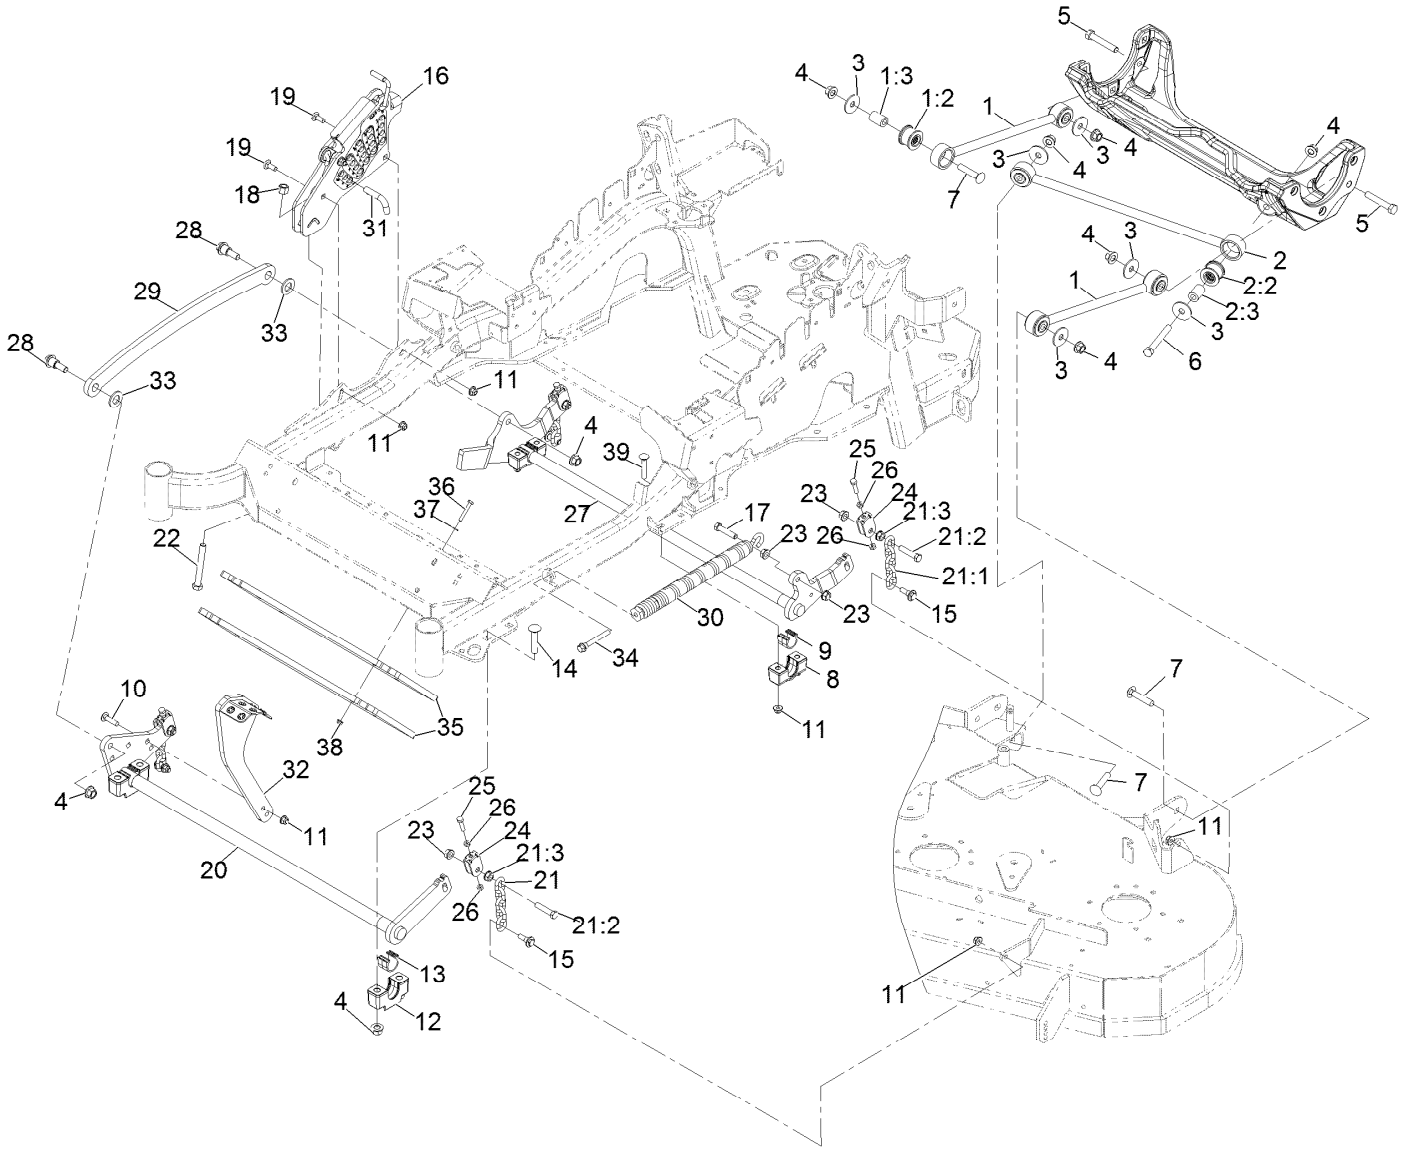

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	109-7952	2	Deck Strut ASM
1:2	109-5009	2	Bushing-Suspension, Rubber
1:3	109-5010	2	Spacer
2	109-5013	1	Panhard Rod ASM
2:2	109-5009	2	Bushing-Suspension, Rubber
2:3	109-5010	2	Spacer
3	86-1990	6	Washer
4	99-5107	12	Nut-Lock
5	325-12	2	Screw-HH
6	325-17	1	Screw-HH
7	3233-34	3	Screw-CARR
8	127-0553	2	Support-Bearing, Cross Shaft (Rear)
9	109-7173	2	Bearing-Cross Shaft, Rear
10	3231-4	2	Screw-CARR
11	104-8301	12	Nut-HF, NI
12	109-9409	2	Support-Bearing, Cross Shaft (Front)
13	109-9410	2	Bearing-Cross Shaft, Front
14	116-1700	4	Bolt-CARR
15	109-9840	4	Screw-Shoulder, HHF
16	109-7438	1	HOC ASM
17	109-9065	1	Screw-HH
18	3296-23	1	Nut-Lock, NI
19	3231-2	2	Bolt-CARR
20	126-2475-03	1	Decklift-Front
21	116-0756	4	Deck Lift Chain ASM
21:1	1-633447	1	Chain-Lift, Deck
21:2	109-9065	1	Screw-HH
21:3	32128-37	1	Nut-HF
22	116-0559	1	Bolt-TAP
23	32128-37	6	Nut-HF
24	109-9066	4	Yoke-Adjust, Deck
25	322-47	4	Screw-HH
26	3218-2	8	Nut-Hex Jam
27	116-0459-03	1	Lift-Deck, Rear
28	116-0780	2	Screw-Shoulder, HHF
29	116-0797-03	1	Link-Lift, Deck
30	116-0886	1	Spring-Extension
31	116-5584	1	Pin-HOC
32	131-8812-01	1	Lever-Foot
33	3256-28	2	Washer-Flat
34	92-7674	1	Bolt-Shoulder
35	140-4963-01	2	Weight-Toe Board
36	321-10	4	Screw-HH
37	3256-22	4	Washer-Flat
38	104-7201	4	Nut-HF, NI
39	3231-7	4	Screw-CARR

Height-of-Cut Assembly No. 109-7438

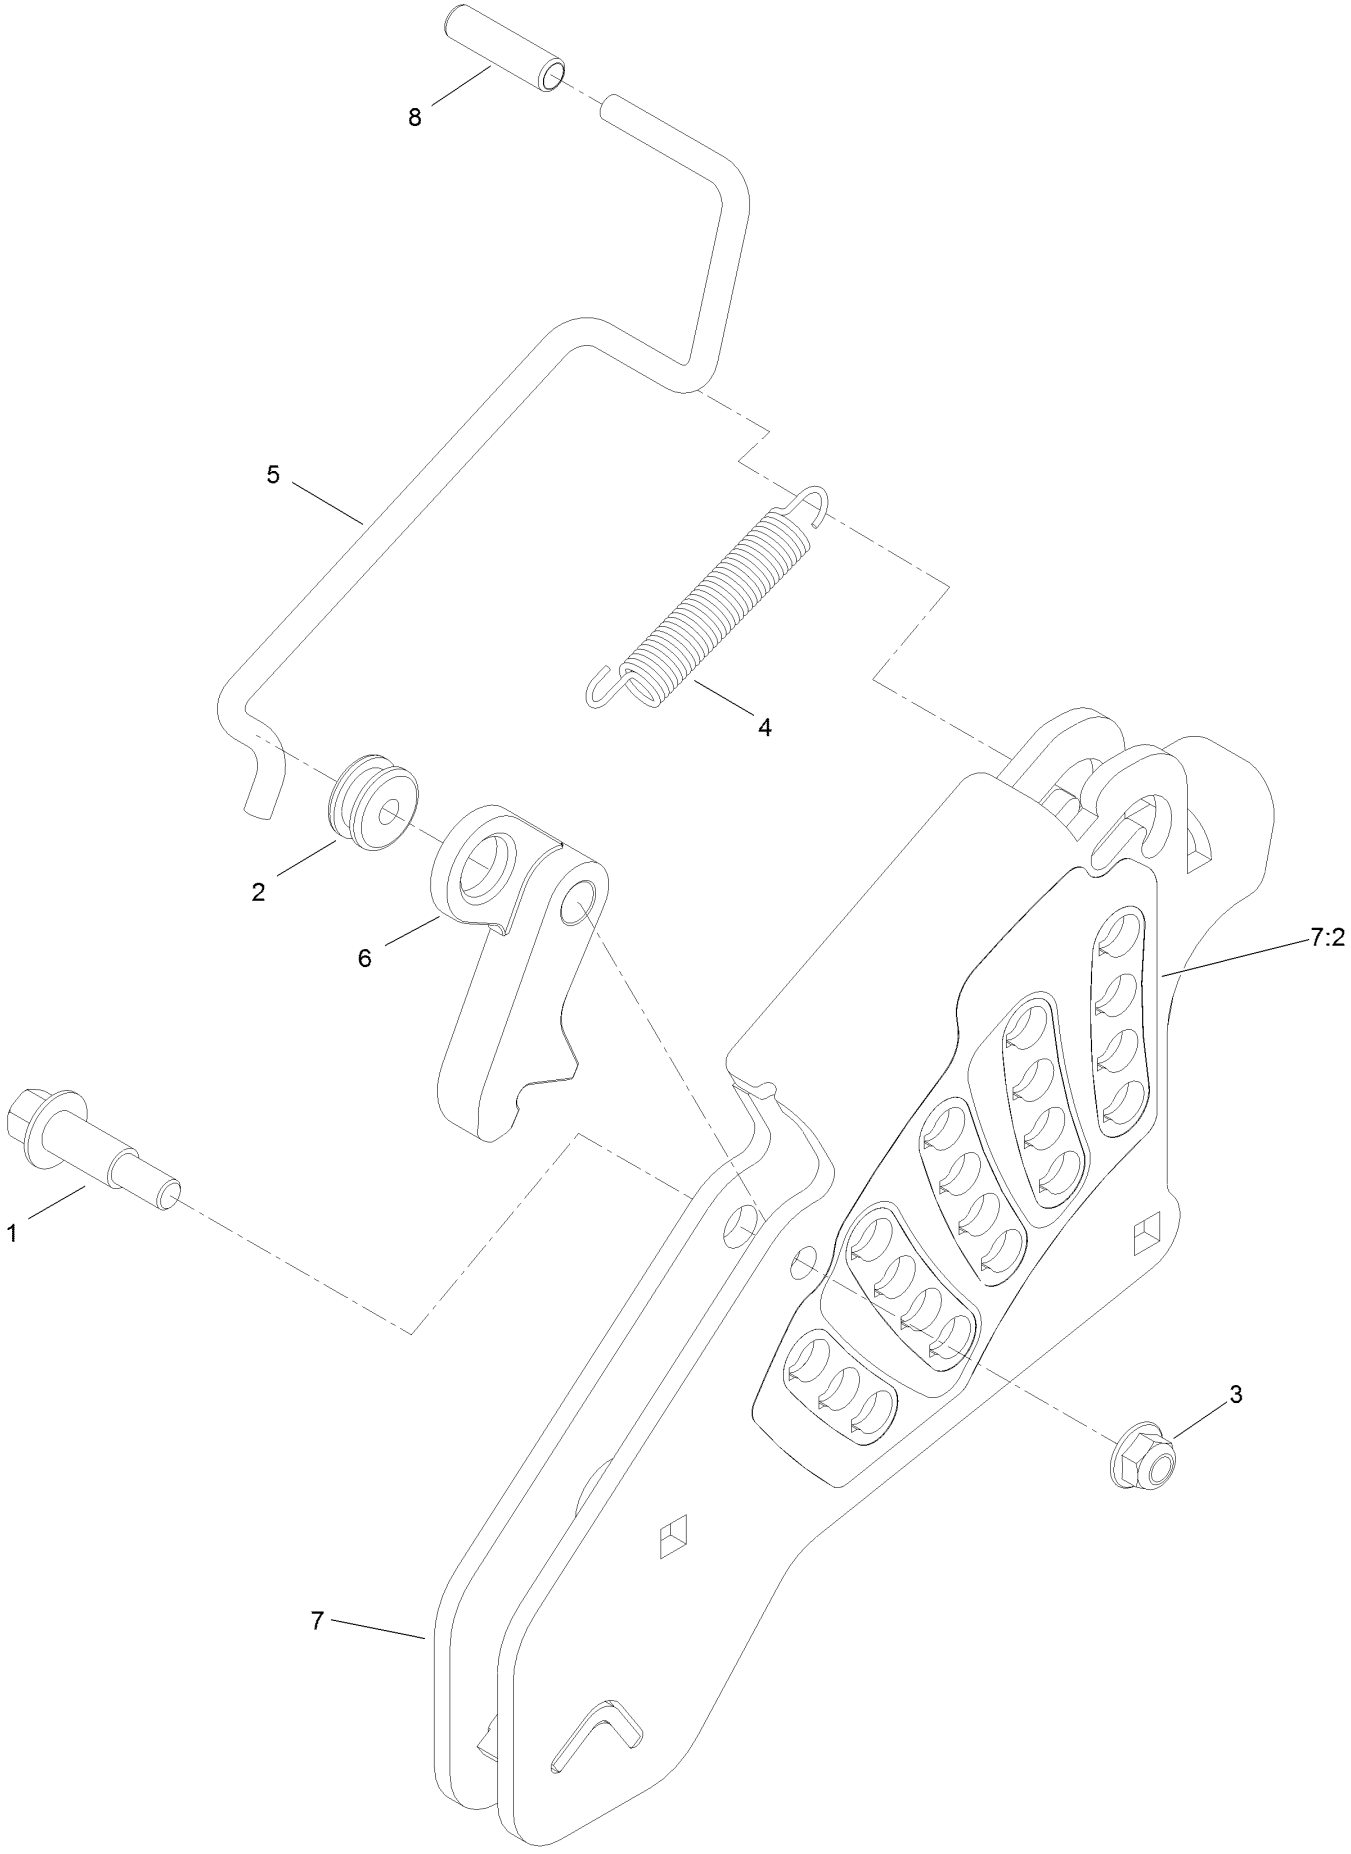

Height-of-Cut Assembly No. 109-7438 (continued)

Ref.	Part Number	Qty.	Description
1	62-1330	1	Bolt-Shoulder
2	109-7130	1	Grommet
3	104-8301	1	Nut-HF, NI
4	109-7124	1	Spring-Extension
5	109-7128	1	Rod-Lock, Transport
6	116-0118	1	Pawl-Transport, HOC
7	109-7335	1	HOC Plate ASM
7:2	126-4398	1	Decal-HOC
8	109-8250	1	Grip-Lever

Engine, Clutch and Muffler Assembly

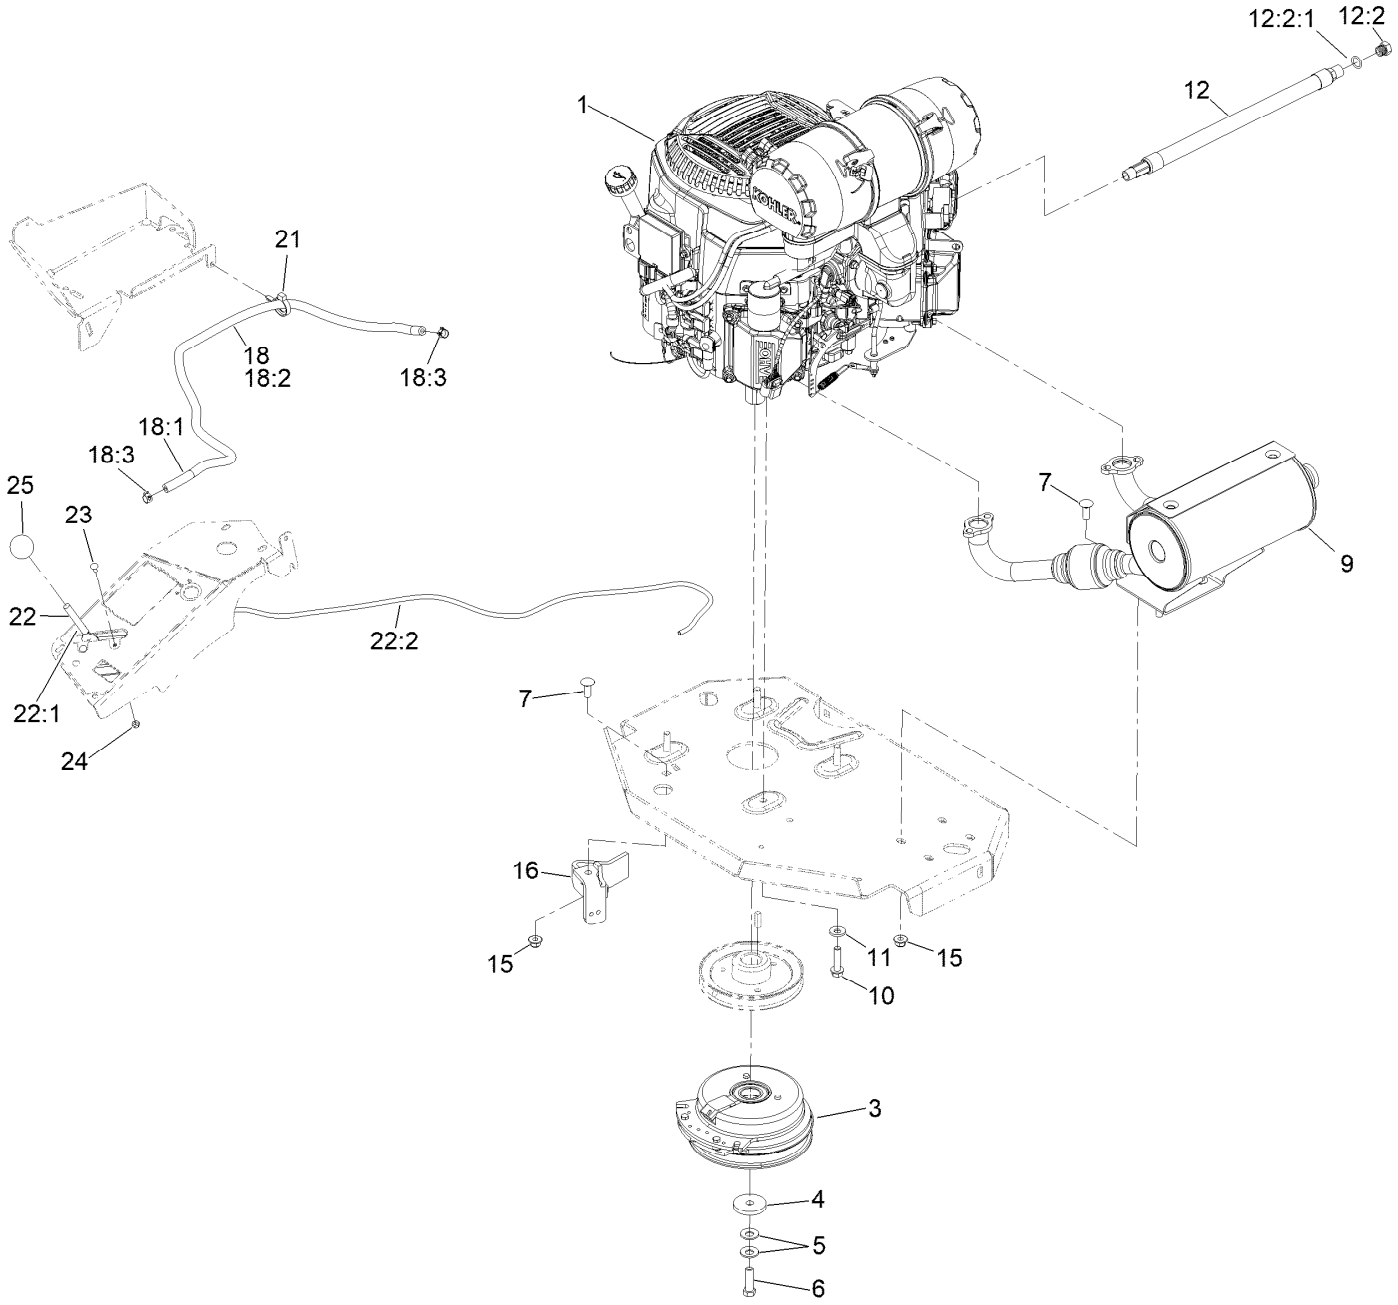

Engine, Clutch and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kohler ▲◆
3	116-1620	1	Clutch Kit
4	109-6919	1	Washer-Plain
5	1-603610	2	Washer-Spring
6	109-9761	1	Screw-HH ❑
7	3231-22	5	Screw-CARR
9	142-6858	1	Kit,Muffler
10	32144-102	4	Screw-HWH
11	98-5975	4	Washer-Belleville
12	116-5316	1	Oil Drain Hose ASM ■
12:2	353-508	1	Plug-HH ●
12:2:1	237-42	1	O-Ring
15	104-8301	5	Nut-HF, NI
16	116-2612-01	1	Clutch-Anchor
18	117-3893	1	Fuel Line ASM
18:1	109-0273	1	Hose-Fuel
18:2	117-3892	1	Sleeve-Thermal
18:3	2412-98	2	Clamp-Hose
21	105-1853	1	Clamp-Hose
22	115-2752	1	Throttle Control ASM
22:1	112-2334	1	Lever-Throttle
22:2	115-3868	1	Cable-Throttle
23	1-807513	2	Bolt-CARR
24	3296-2	2	Nut-Lock, NI
25	1-603175	1	Knob-Ball

● Torque to 24-26 ft-lb
▲ Not serviced separately
❑ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.
■ Torque to 17-23 ft-lb
◆ Obtain parts from www.kohlerplus.com

Deck Assembly

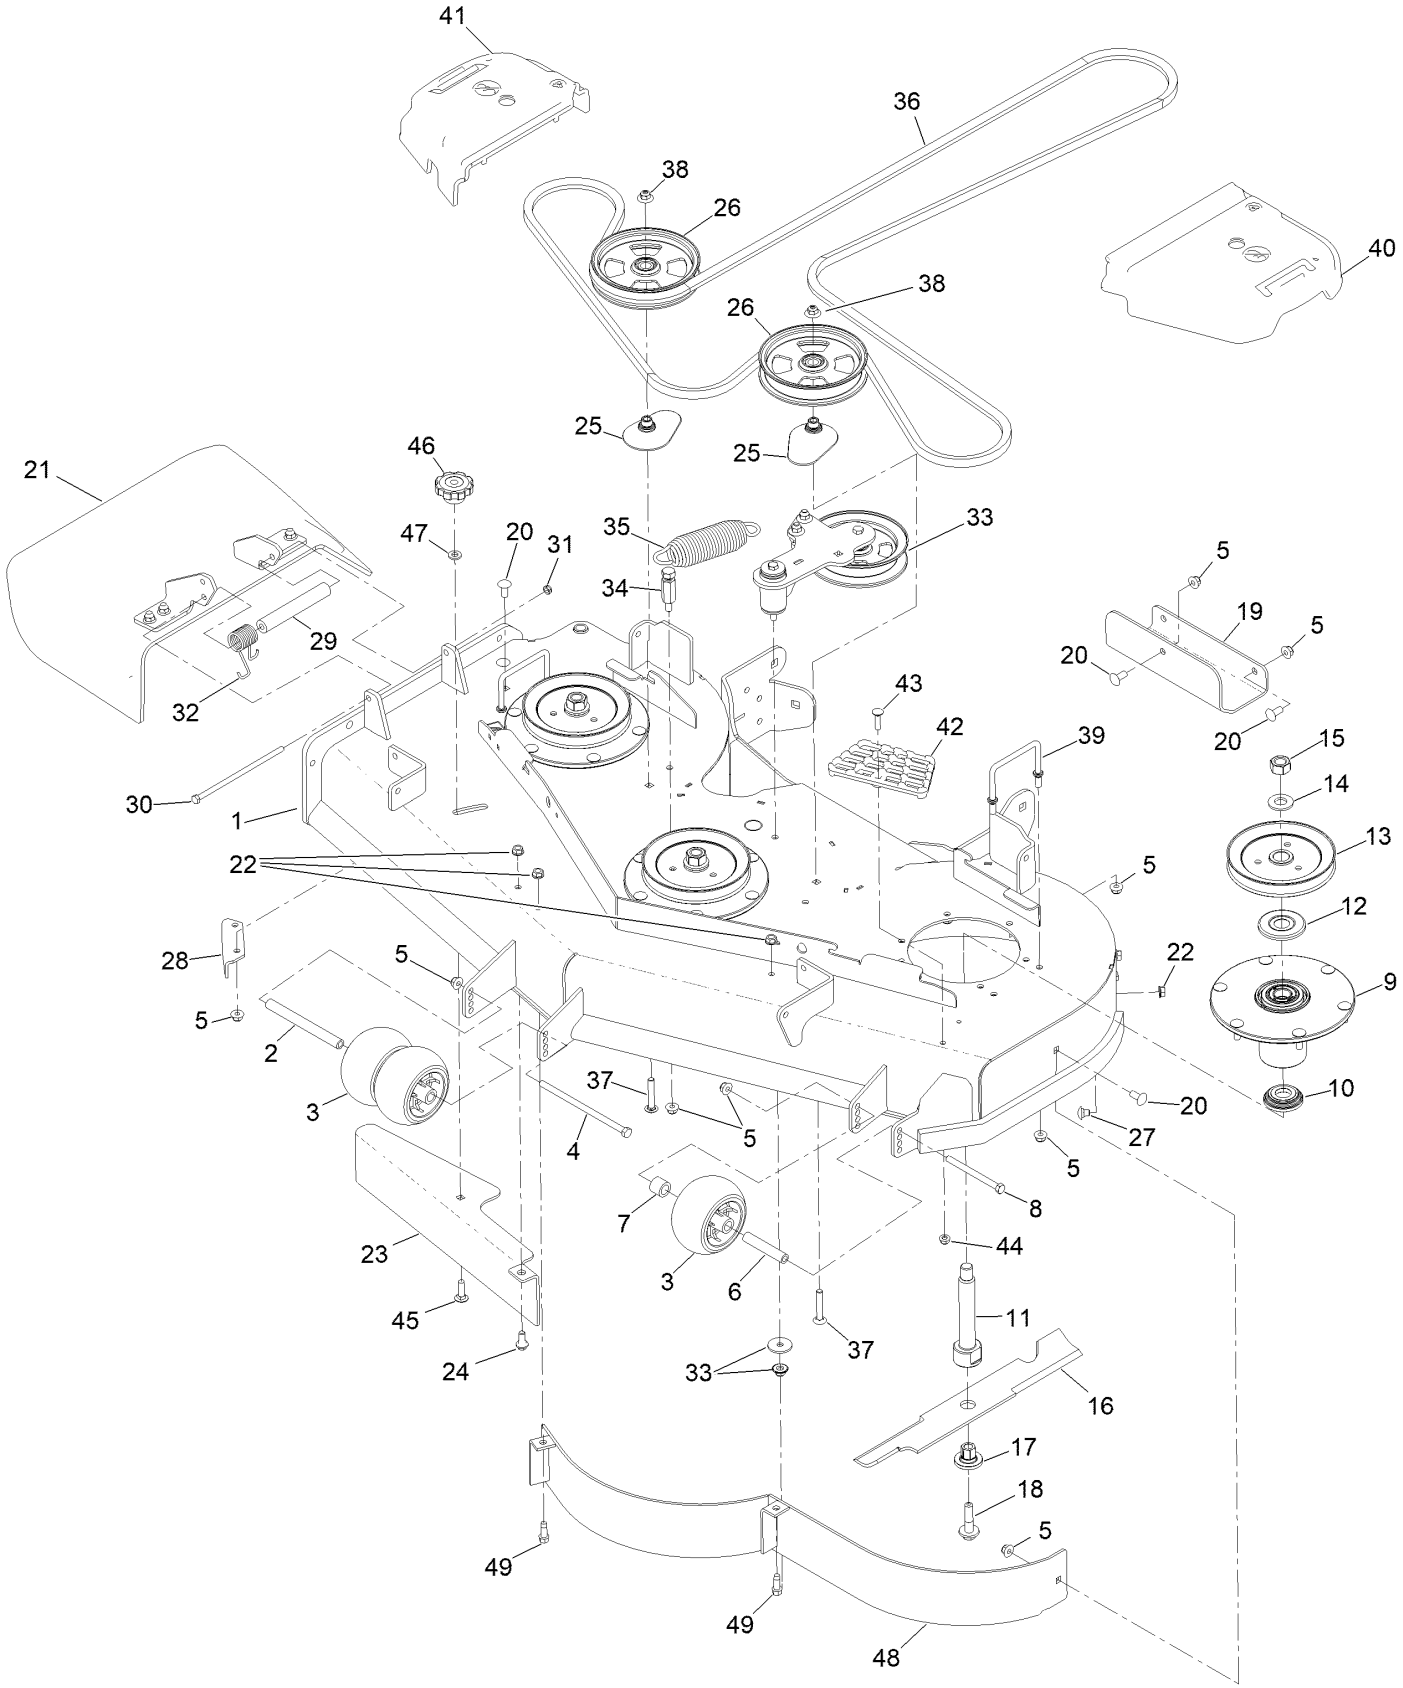

Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-1168	1	Deck Decal ASM
2	98-5967	1	Spacer-Wheel
3	1-603299	3	Roller-Scalp, Anti
4	108-5388	1	Screw-HH
5	104-8301	31	Nut-HF, NI
6	98-7912	1	Tube-Spanner
7	98-7913	1	Tube-Spacer
8	323-23	1	Screw-HH
9	137-9780	3	Spindle ASM
10	137-9784	3	Guard-Bottom
11	138-6045	3	Shaft-Spindle
12	103-1330	3	Guard-Bearing, Top
13	138-6058	3	Sheave-Blade Drive 6.50
14	103-2802	3	Washer
15	116-7306	3	Nut-Hex
16	140-1242	3	Blade-Flow, High
17	137-9787	3	Bushing-Hex
18	109-9220	3	Screw-Sems
19	121-7975-01	1	Plate-Skid
20	3231-27	6	Screw-CARR
21	108-2792	1	Rubber Deflector ASM
22	3290-357	6	Nut-HSF
23	138-6052-01	1	Plate-Baffle, Formed
24	94-7582	1	Bolt-Shoulder
25	109-2872	2	Spacer-Pulley
26	136-5404	2	Pulley-Idler, Flat
27	108-5387	3	Screw-CARR
28	107-8541-01	1	Baffle-Discharge
29	105-4622	1	Spacer
30	322-50	1	Screw-HH
31	3296-47	1	Nut-Lock,NI
32	108-4052	1	Spring-Torsion
33		1	Idler Arm ASM ●
34	114-5867	1	Anchor-Spring, Tall
35	116-6317	1	Spring-Extension
36	115-7426	1	Belt-V
37	3231-40	2	Bolt-CARR
38	109-6658	2	Nut-Flange, NI
39	109-6982	2	Wireform-Cover
40	109-6936	1	Cover-Belt, LH
41	109-6935	1	Cover-Belt, RH
42	126-4781-03	1	Step-Deck
43	3230-3	1	Screw-CARR
44	104-8300	1	Nut-HF, NI
45	3231-25	1	Bolt-CARR
46	109-1092	1	Knob
47	100-4852	1	Washer-Hardened
48	115-7461-01	1	Baffle
49	92-1624	2	Screw-HWH Thd Form

● Not serviced separately

Deck Decal Assembly No. 140-1168

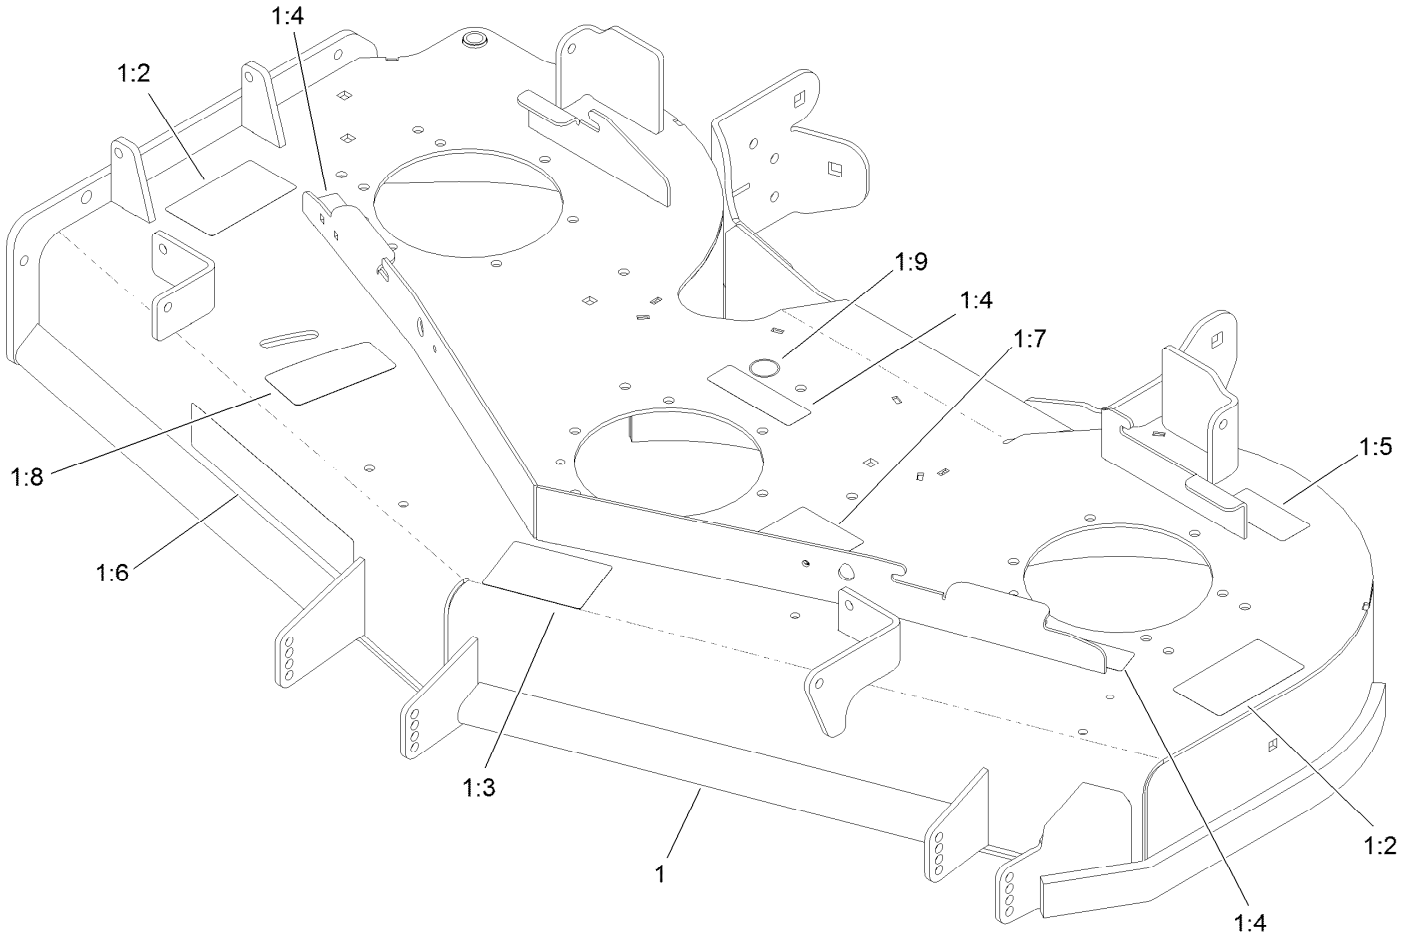

Deck Decal Assembly No. 140-1168 (continued)

Ref.	Part Number	Qty.	Description
1		1	Deck ASM ●
1:2	117-3848	2	Decal-Danger
1:3	127-0326	1	Decal-Scalp, Anti
1:4	112-9028	3	Decal-Cover, Missing
1:5	116-8283	1	Decal-Torque, Bolt
1:6	107-1618	1	Decal
1:7	136-5508	1	Decal-Routing, Deck Belt
1:8	131-1180	1	Decal-Adjustment, Baffle
1:9	58-6520	1	Decal-Grease

● Not serviced separately

Spindle Assembly No. 137-9780

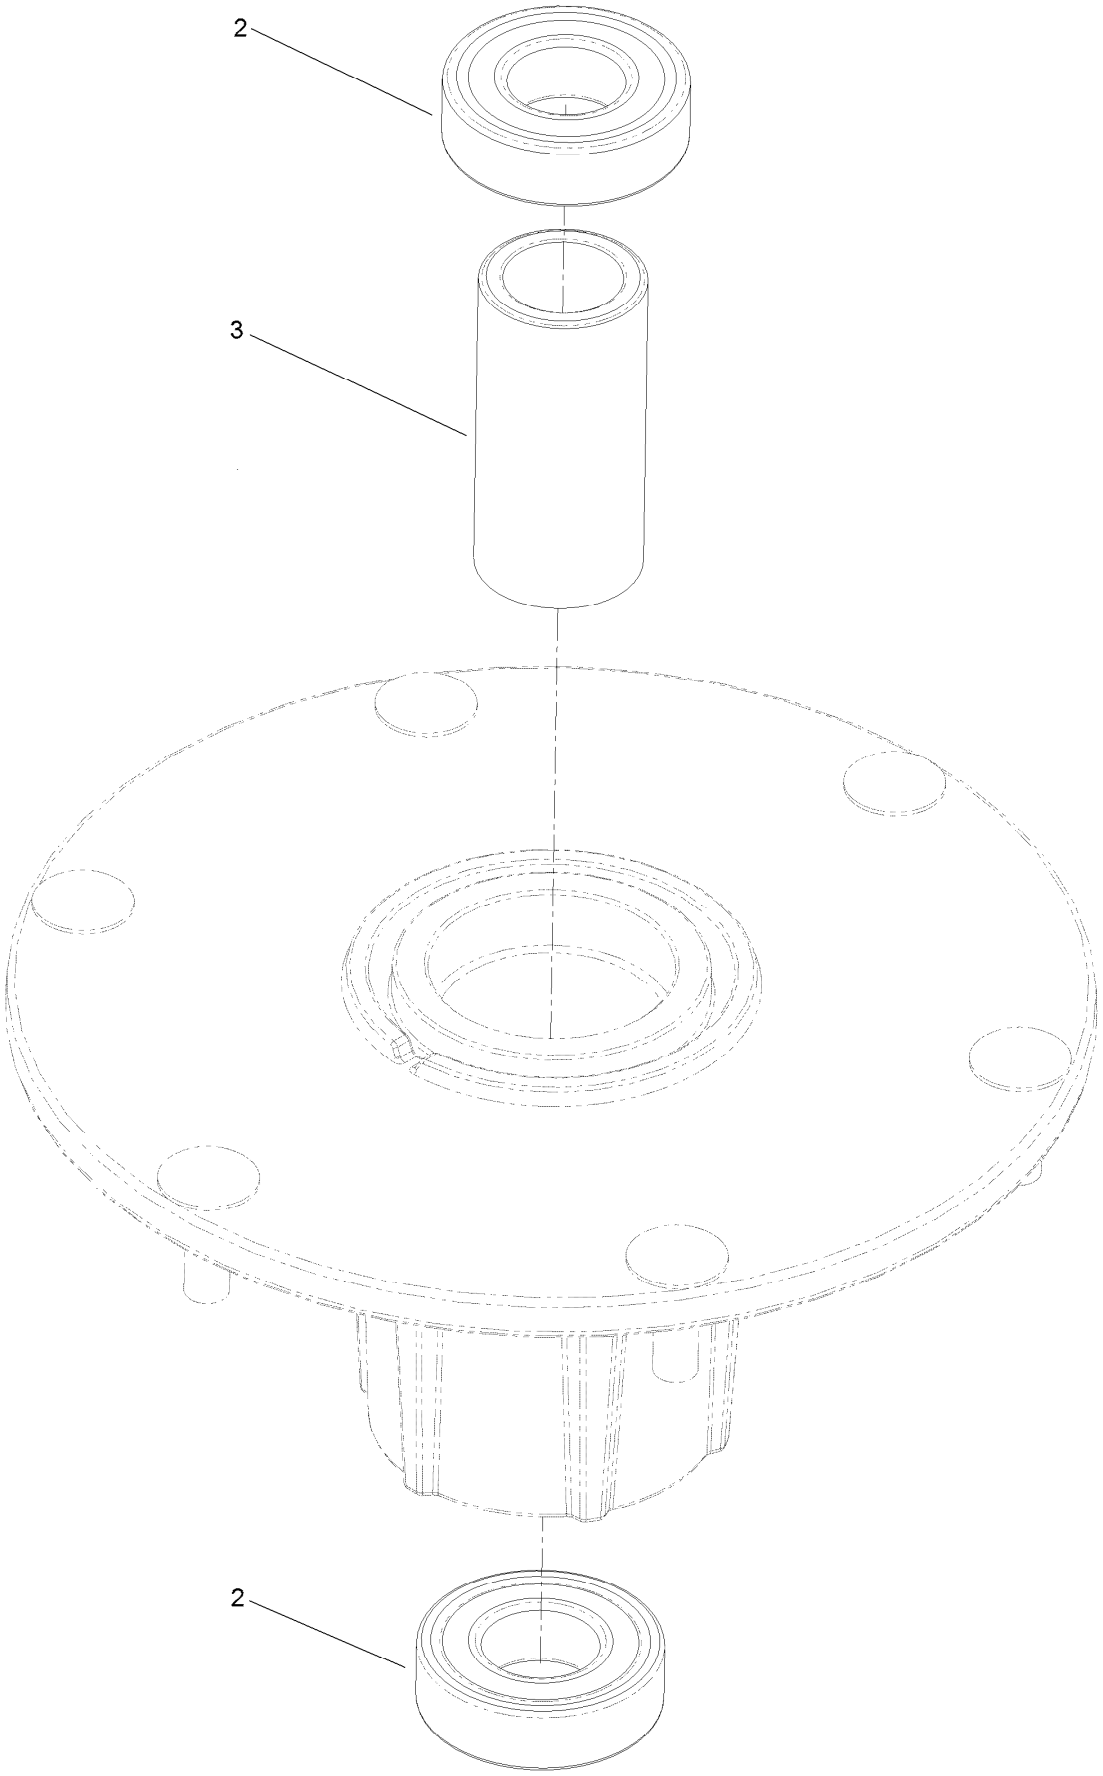

Spindle Assembly No. 137-9780 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
2	116-0720	2	Bearing-Ball
3	138-6042	1	Spacer-Bearing

Rubber Deflector Assembly No. 108-2792

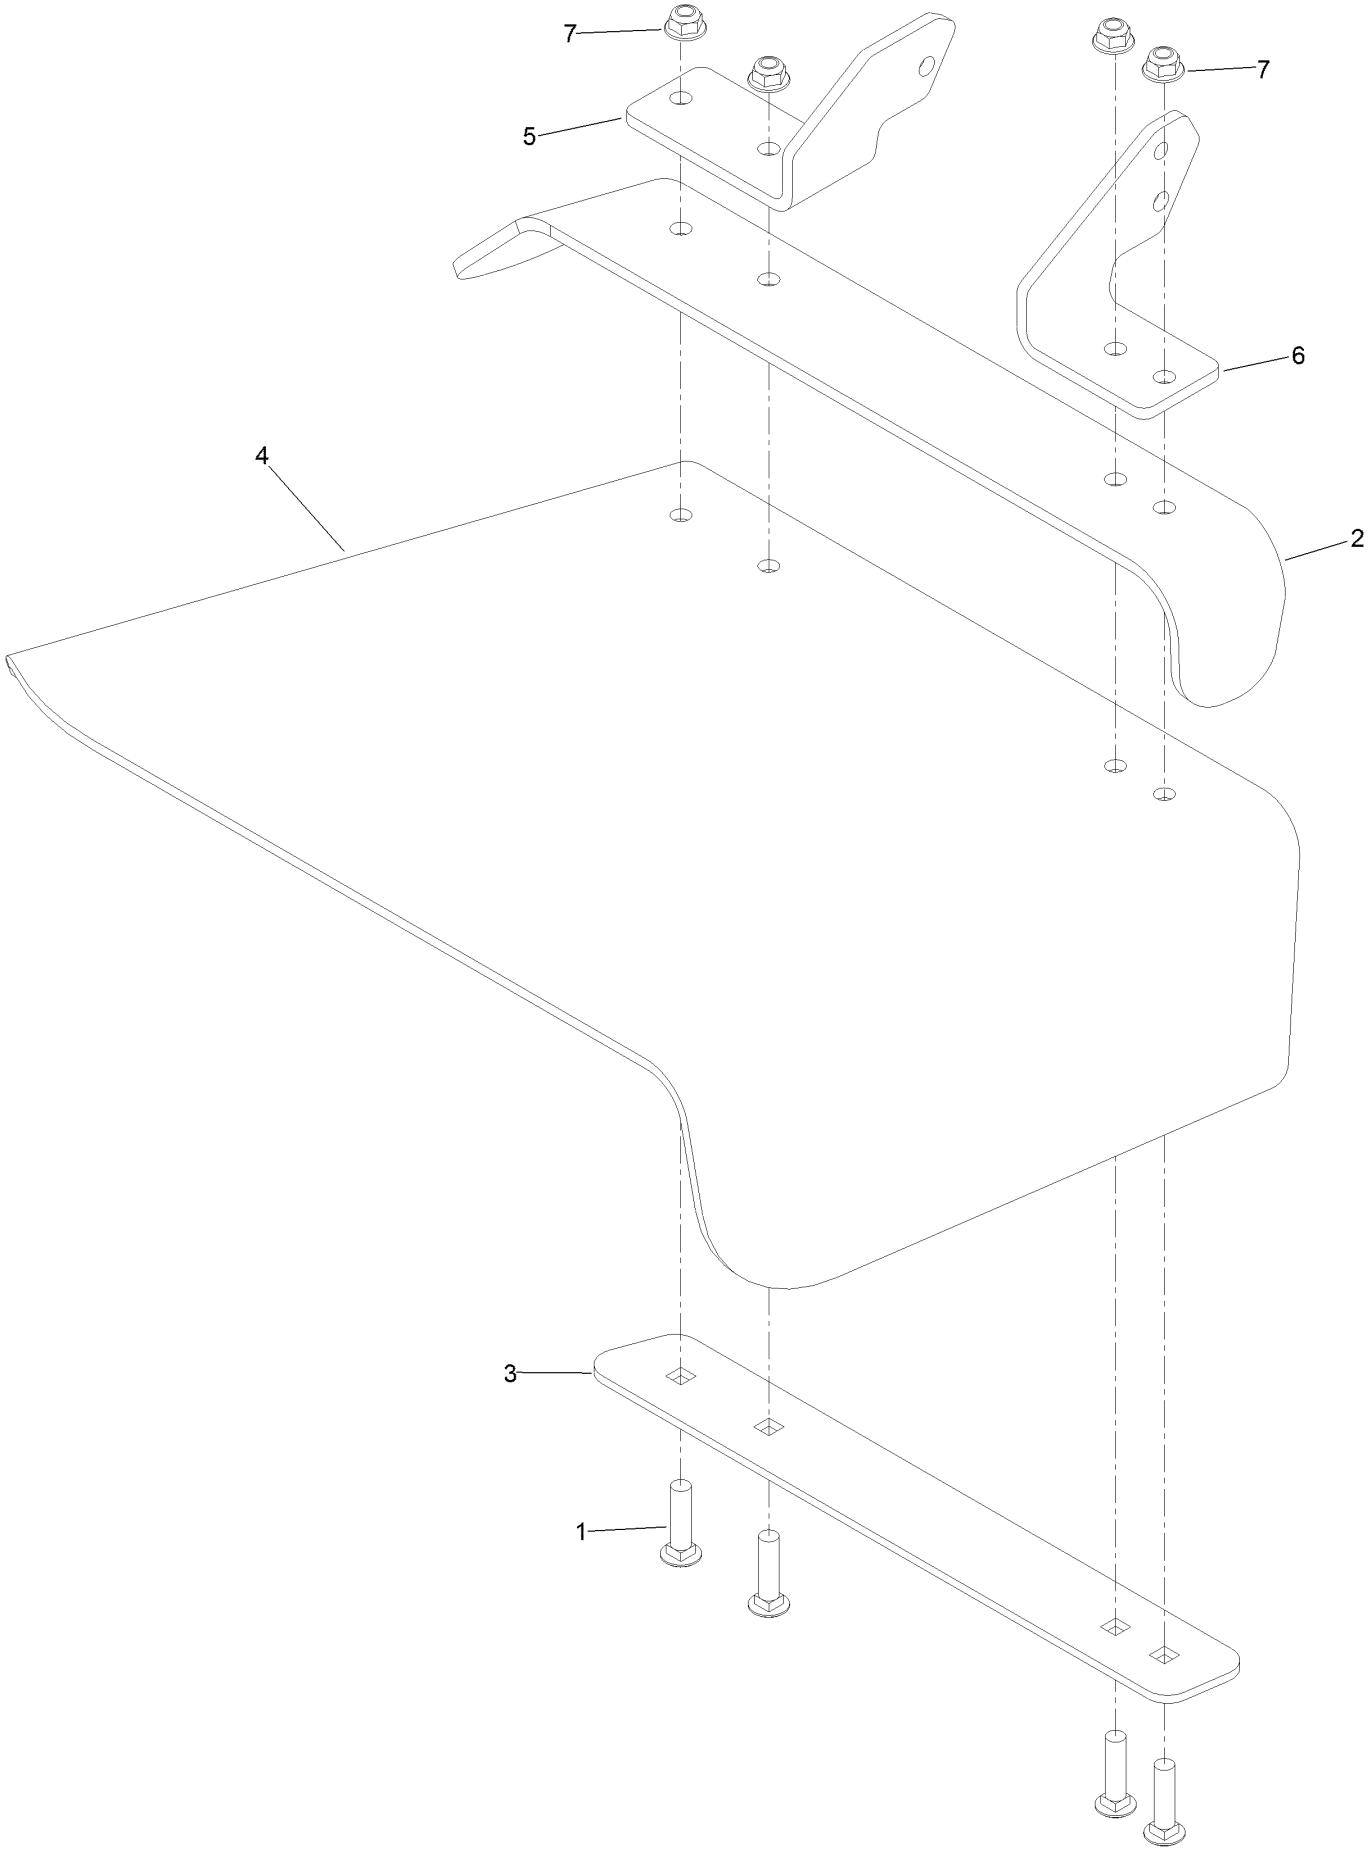

Rubber Deflector Assembly No. 108-2792 (continued)

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI

Idler Arm Assembly

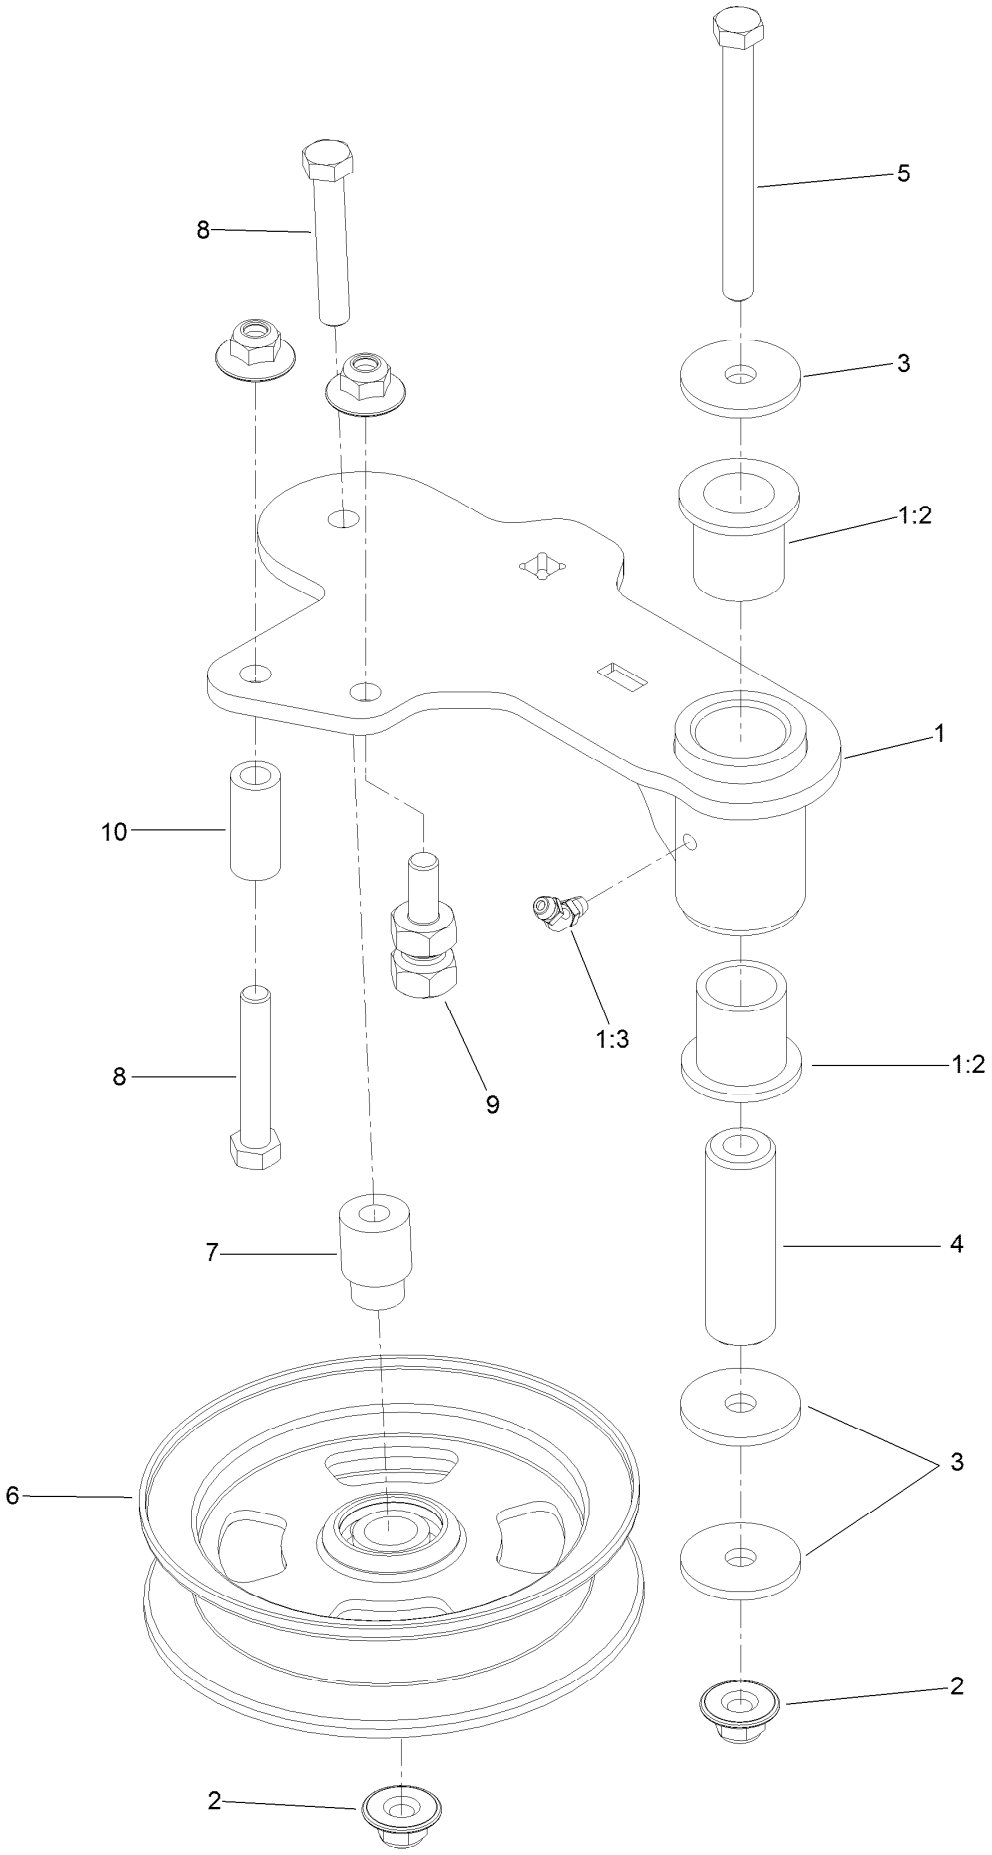

Idler Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	114-5870	1	Idler Arm ASM
1:2	1-303514	2	Bearing-Flanged
1:3	1481	1	Fitting-Grease
2	109-6658	4	Nut-Flange, NI
3	1-213069	3	Washer
4	114-5848	1	Spacer-Plain
5	98-5961	1	Screw-HH
6	132-9425	1	Pulley-Idler, Flat
7	112-4212	1	Mount-Pulley
8	323-11	2	Screw-HH
9	132-4729	1	Anchor-Spring, Short
10	104-0151	1	Spacer

Frame Decal Assembly

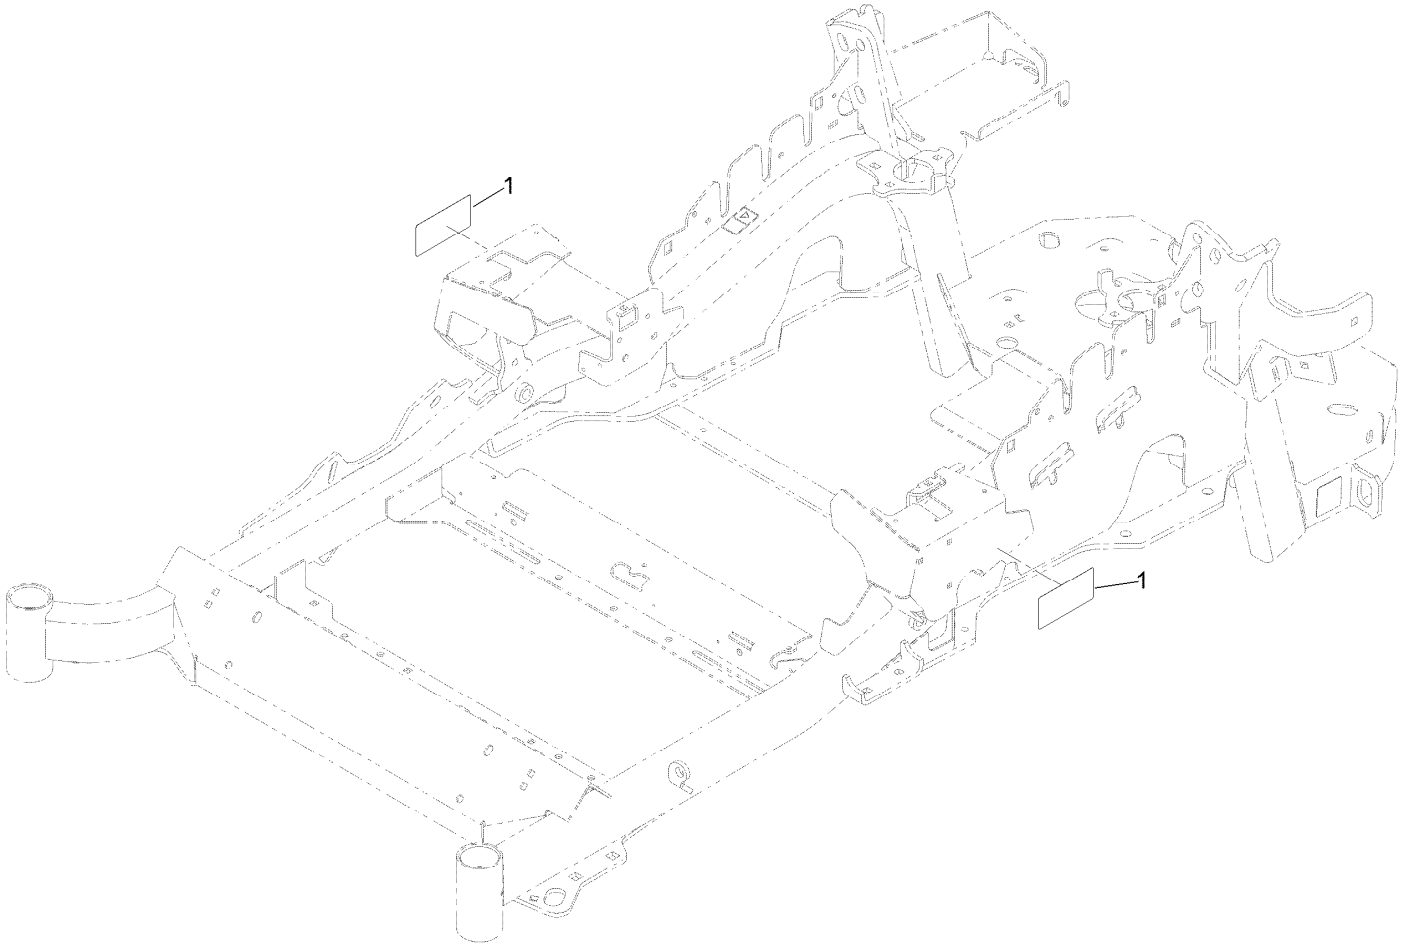

Frame Decal Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	120-5894	2	Decal

Attachments and Accessories

For 72956 Z Master Professional 5000 Series MR Riding Mower with 52in Turbo Force Side Discharge Mower

Product Name	Model/Part
Turbo Baffle Kit	107-1634
Anti-Scalp Kit (Trim Side)	108-4140
Hitch Kit	109-9487
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Roller Striper Kit	115-7470
Light Kit	116-1154
Seat Cover (W/arm rest)	117-0095
Operator Controlled Discharge Chute Kit	117-3600
Toro Rops Lock Kit	126-4064
Jack Kit	127-6666
Worklight Kit	135-7320
Shock/Spring Asm	136-8993
Bucket Mount Kit	137-9216
Trimmer Mount	137-9769
Recycler Kit	139-6653
24x12n12 - Tweel Turf	139-7891
Blade-18.00 High Flow	140-1242
Blade-18.00 Medium Flow	140-4856
Blade-18.00 Low Flow	140-4857
Blade-18.00 Atomic	140-4858
Blade-18.00 Recycler	140-4859
6 Pack-Blade, 18.00 High Flow	140-4882
6 Pack-Blade, 18.00 Med Flow	140-4883
6 Pack-Blade, 18.00 Low Flow	140-4884
6 Pack-Blade, 18.00 Atomic	140-4885
6 Pack-Blade, 18.00 Recycler	140-4886
Weight Kit, Under Toe Board	140-4958
Slope Sensor-Lazer/Z-Master 3000/5000/6000	142-4910
Screen-Spark Arrestor	142-7683
Jack Mount Kit	146-0696
Blade-18.00 High Flow	147-6251
6 Pack-blade, 18.00 High Flow	147-6255
13inx6.5n6 Caster Tweel Asm	147-6295
Toro Rider Over Seat Bag	490-7317
Toro Deluxe Rider Cover	490-7319
Toro Rider Arm Rest Bag	490-7320
Blower and Drive Kit	78552
E-Z Vac Twin Bagging System	78562
E-Z Vac DFS Collection System	78566
Filter Minder Gauge	99-4664
Trash Holder Kit	TC26

Notes:

Notes:

Notes:

Count on it.