Form No. 3327–377 REV A

Mid–Size Mower

ProLine T–Bar Gear 15 HP with 52in Side Discharge Mower

Model No. 30319—2300000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2003
All Rights Reserved


Contents

Description	Page
Engine Installation Assembly	3
Fuel Tank Assembly	4
Lower Control Assembly	5
Transmission Drive Assembly	6
Wheel Drive and Brake Assembly	7
Upper Handle Assembly	8
Control Panel Assembly	9
Carrier Frame Assembly	10
Spindle, Pulley and Belt Assembly	11
Spindle Assembly No. 104–6317	12
Spindle Assembly No. 104–6315	13
Deck Assembly	14
Drive Belt and Tensioner Assembly	15
Electrical Schematic	16
Crankcase Assembly Kohler Model CV15T–41604	17
Oil Pan and Lubrication Assembly Kohler Model CV15T–41604	18
Cylinder Head, Valves And Breather Assembly Kohler Model CV15T–41604	19
Ignition and Electrical Assembly Kohler Model CV15T–41604	20
Blower Housing And Baffles Assembly Kohler Model CV15T–41604	21
Starter Assembly Kohler Model CV15T–41604	22
Fuel System Assembly Kohler Model CV15T–41604	23
Engine Controls Assembly Kohler Model CV15T–41604	24
Air Cleaner Assembly Kohler Model CV15T–41604	25
Exhaust Assembly Kohler Model CV15T–41604	26

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

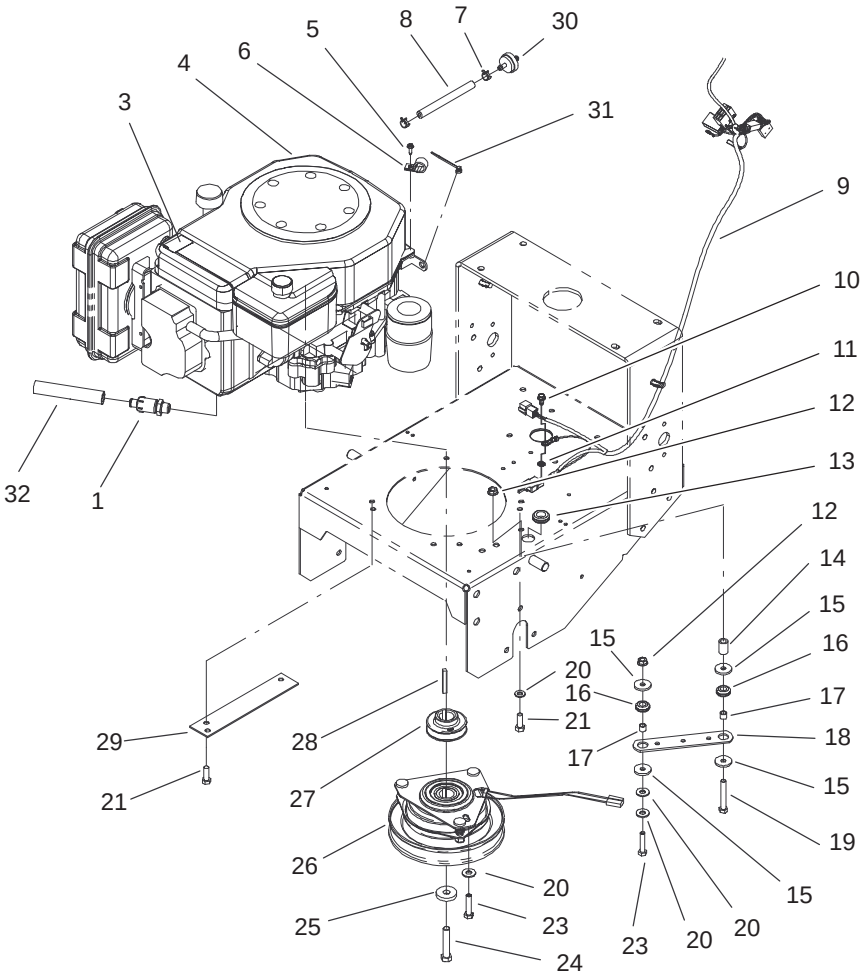


Sheet No.:3

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	92–6877	1	Valve–Drain, Oil
3	106–0699	1	Decal–Warning, Hot Surfaces
☆4		1	Engine–Kohler, Cv15t–41604
5	32144–19	1	Screw–Forming, Thread
6	2412–87	1	Clamp–Cable
7	2412–98	2	Clamp
8	47–2982	1	Hose–Fuel
9	104–8136	1	Harness–Wire
10	12–3270	1	Screw
11	3255–7	1	Washer–Lock/Ext
12	32128–20	2	Nut–HF
13	237–124	1	Grommet
14	104–6373	1	Tube–Retainer
15	1–613235	4	Washer
16	1–633630	2	Grommet–Brake
17	1–633545	2	Spacer–Grommet
18	1–633543	1	Strap–Clutch/Brake
19	322–11	1	Screw–HH
20	3256–23	5	Washer–Flat
21	33114–025	4	Screw–HH
23	322–7	1	Screw–HH
24	3212–9	1	Screw–HH
25	112843	1	Washer

Ref. No.	Part No.	Qty.	Description
26	105–2635	1	Clutch/Brake
27	105–0827	1	Pulley–Drive
28	608006	1	Key–Square
29	94–5847–01	1	Cover–Pulley
30	56–6360	1	Filter–Fuel
31	3290–381	1	Tie–Cable
32	103–1964	1	Hose–Drain, Oil

☆ Not serviced separately

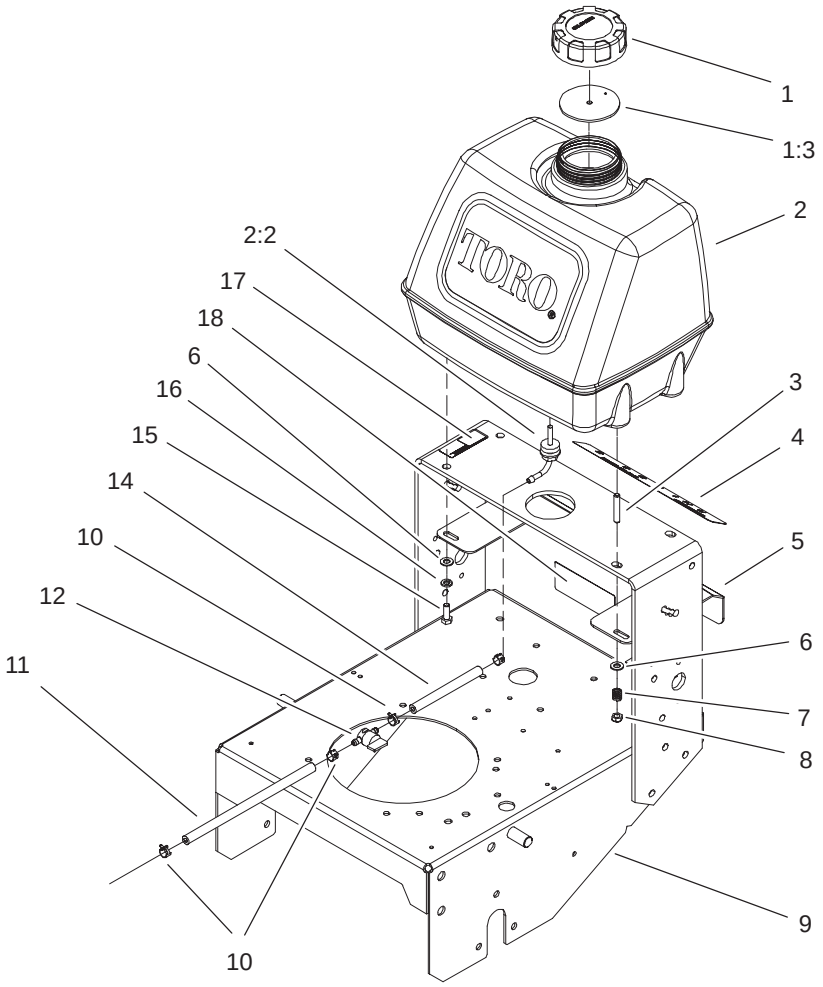


Sheet No.:5

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	88–3980	1	Gas Cap ASM
1:3	88–4010	1	Gasket–Cap, Gas
2	106–0730	1	Fuel Tank ASM
2:2	103–2605	1	Fitting–Fuel, Bulkhead
3	104–8121	2	Stud–Threaded
4	106–5494	1	Decal–Ground Speed
5	104–8102–01	1	Plate–Gate, Shift
6	3256–23	4	Washer–Flat
7	1–633349	2	Spring–Tank, Fuel
8	3296–47	2	Nut–Lock, NI
9	106–0546–01	1	Gear Frame ASM
10	2412–98	4	Clamp
11	47–2982	1	Hose–Fuel
12	1–603770	1	Valve–Fuel
14	47–2966	1	Hose–Fuel
15	322–4	2	Screw–HH
16	3253–4	2	Washer–Lock
17	95–2814	1	Decal–Shut Off, Fuel
18	98–0776	1	Decal–Caution

Ref. No.	Part No.	Qty.	Description

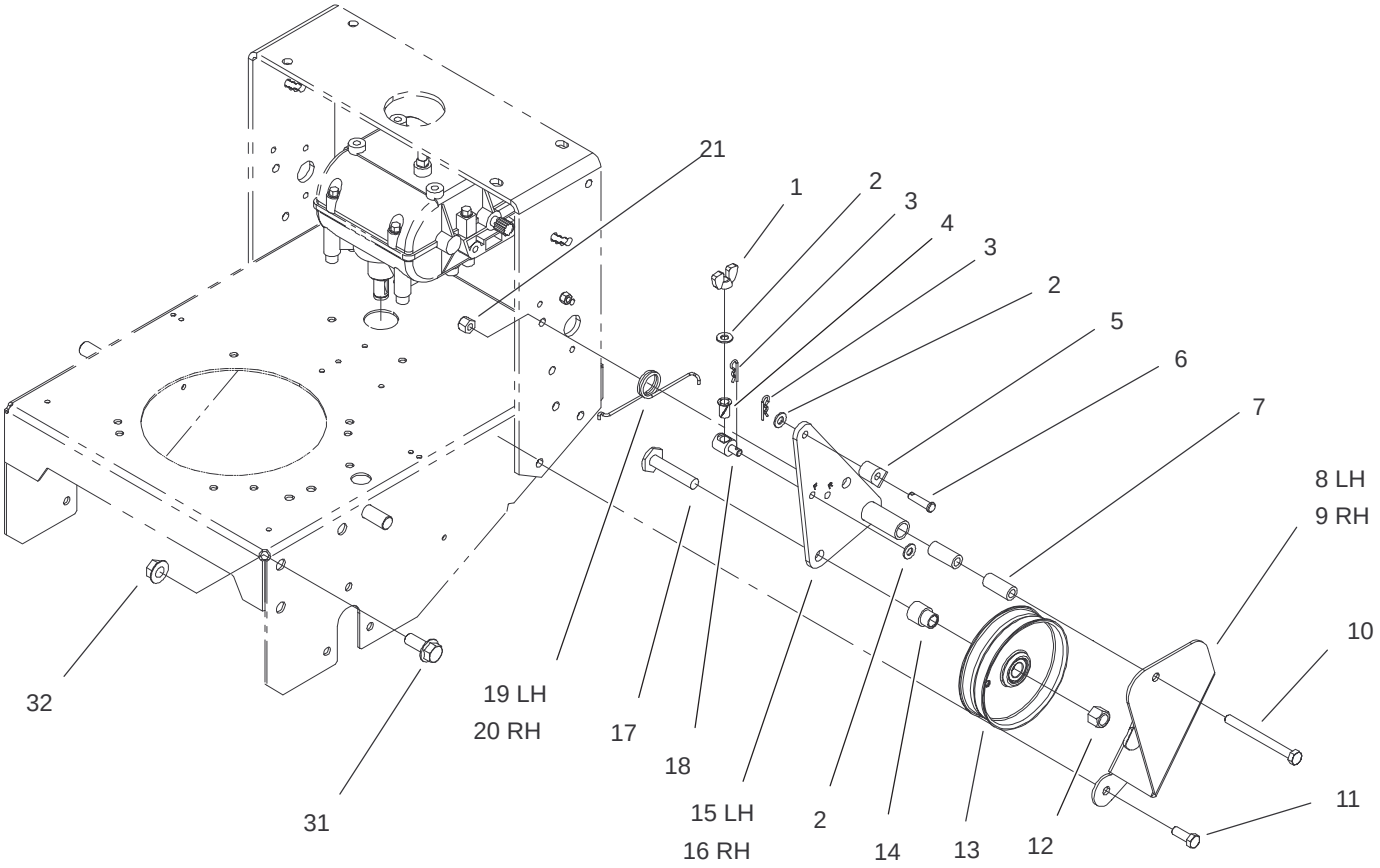


Sheet No.:6

Lower Control Assembly

Ref. No.	Part No.	Qty.	Description
1	32103–25	2	Nut–Wing
2	3256–23	6	Washer–Flat
3	3290–307	4	Pin–Hair
4	52–2890	2	Bushing–Nylon
5	74–0521	2	Fitting–Rod
6	283–6	2	Pin–Clevis
7	74–0040	4	Spacer–Pivot, Idler
8	67–6380–01	1	Bracket–Support, LH
9	67–6370–01	1	Bracket–Support, RH
10	323–16	2	Screw–HH
11	323–6	4	Screw–HH
12	3296–23	2	Nut–Lock, NI
13	95–2800	2	Pulley–Idler
14	95–2801	2	Spacer–Pulley
15	74–0220–01	1	Bracket–Idler, LH
16	74–0230–01	1	Bracket–Idler, RH
17	51–4450	2	Screw–Leveler
18	68–9690	2	Fitting–Rod
19	51–4380	1	Spring–Torsion, LH
20	51–4370	1	Spring–Torsion, RH
21	3296–39	6	Nut–Lock, NI
31	3234–32	6	Screw–HHF
32	32128–23	6	Nut–HF

Ref. No.	Part No.	Qty.	Description

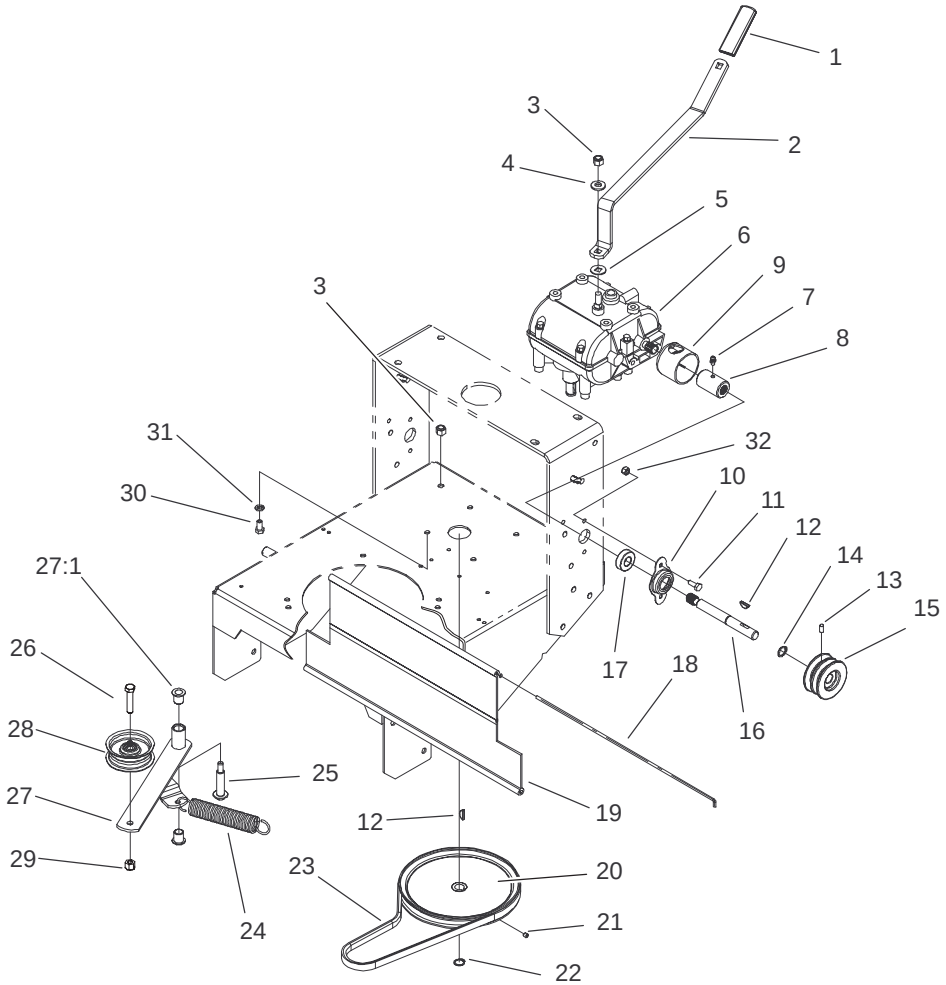


Sheet No.:7

Transmission Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	47–1970	1	Grip
2	98–3274–03	1	Lever–Shift
3	3296–6	2	Nut–Lock, NI
4	98–5975	1	Washer–Belleville
5	1–323379	1	Washer
6	1–323500	1	Transmission
7	302–5	2	Fitting–Grease
8	1–323680	2	Coupler
9	51–4220	2	Guard–Coupler
10	1–323254	2	Flange–Output
11	321–4	4	Screw–HH
12	3257–5	3	Key–Woodruff
13	3245–9	2	Screw–Set
14	32151–62	2	Ring–Retaining
15	105–2698	2	Pulley–Transmission
16	104–1102	2	Shaft–Output
17	1–323252	2	Bearing–Shaft
18	95–1529	1	Rod–Shield
19	95–1526	1	Shield–Trailing
20	105–5646	1	Pulley–Driven
21	3245–1	1	Screw–Set, HSH
22	32120–64	1	Ring–Snap, External
23	105–5668	1	V–Belt
24	68–2190	1	Spring
25	27–6230	1	Bolt–Wheel
26	323–9	1	Screw–HH


Ref. No.	Part No.	Qty.	Description
27	16–7509	1	Lever–Idler
27:1	256–155	2	Bushing–Flange
28	62–4540	1	Pulley
29	3296–39	1	Nut–Lock, NI
30	322–2	4	Screw–HH
31	3253–4	4	Washer–Lock
32	3296–42	4	Nut–Lock, NI

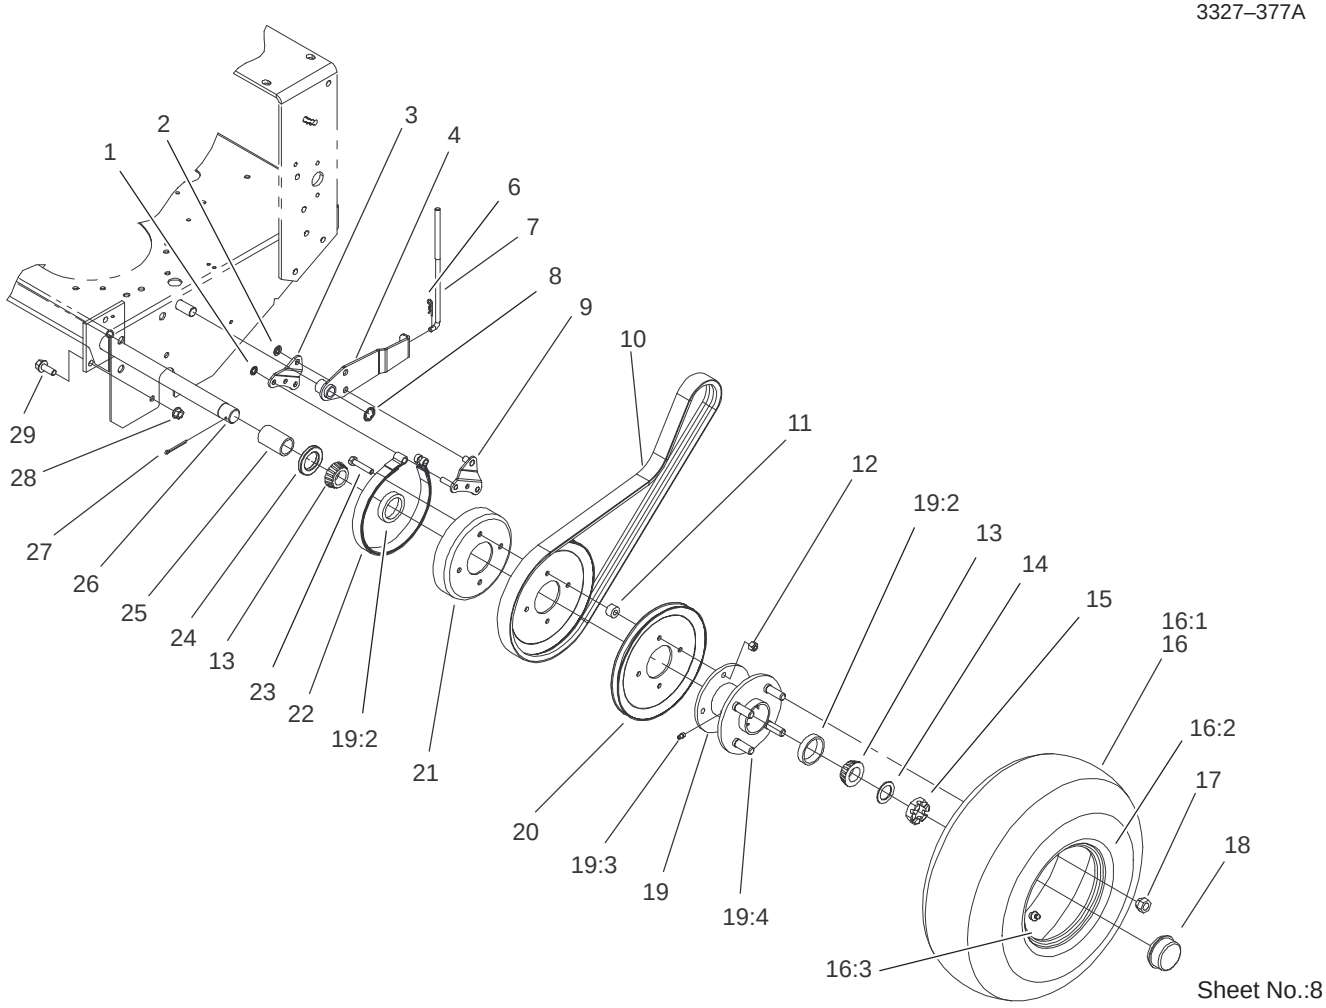

Sheet No.:8

Wheel Drive and Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	32151–72	4	Ring–Retaining
2	32151–56	2	Ring–Retaining, External
3	105–4651–01	2	Plate–Link, Brake
4	106–5537–01	2	Brake Arm ASM
6	3290–307	2	Pin–Hair
7	51–4580	2	Rod–Brake
8	32151–40	2	Ring–Retaining
9	105–4652–01	2	Brake Link ASM
10	51–4290	2	V–Belt
11	51–4170	8	Spacer–Pulley
12	3296–29	8	Nut–Lock, NI
13	254–94	4	Bearing–Cone, Taper
14	1–523157	2	Washer–Spacer
15	1–809082	2	Nut–SHH
16	104–6321	2	Wheel And Tire ASM
16:1	104–6322	1	Tire
16:2	104–6323	1	Wheel
16:3	232–27	1	Stem–Valve
17	242–50	8	Nut–Lug
18	241–119	2	Cap–Dust
19	1–413333	2	Hub–Wheel ASM
19:2	254–72	2	Bearing–Cup, Tapered
19:3	302–19	1	Fitting–Grease
19:4	1–633926	4	Stud–Wheel
20	51–4160–03	4	Pulley–Wheel
21	1–323261	2	Drum–Brake
22	1–323262	2	Band–Brake
23	322–8	8	Screw–HH
24	1–543511	2	Seal–Grease
25	104–1197	2	Spacer–Wheel
26	104–1196–01	1	Axle ASM
27	1–806800	2	Pin–Cotter
28	32128–21	6	Nut–HF
29	3234–11	6	Screw–HHF

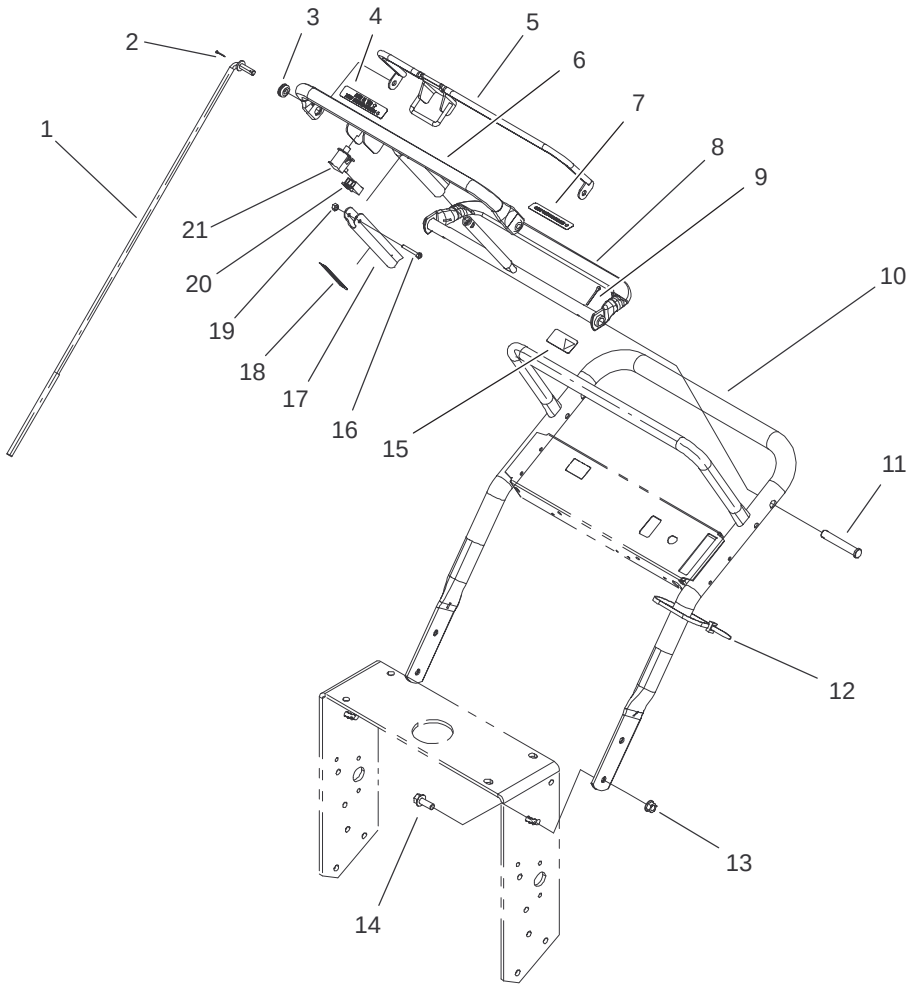


Sheet No.:9

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	105–4677	2	Rod–Control
2	3272–4	2	Pin–Cotter
3	237–141	2	Grommet–Rubber
4	82–2290	1	Decal–Bar, Control
5	82–7680–03	1	Bail
6	82–7690–03	1	Bar–Control
7	82–2280	1	Decal–Handle, Reverse
8	106–5477–03	1	Control Pivot ASM
9	3272–11	2	Pin–Cotter
10	105–3158–03	1	Upper Handle ASM
11	283–55	2	Pin–Clevis
12	3290–378	1	Tie–Cable
13	32128–21	4	Nut–HF
14	3234–11	4	Screw–HHF
15	98–4387	1	Decal–Protection, Ear
16	32105–1	1	Screw–SHH
17	51–4850–03	1	Lever–Brake, Parking
18	52–2010	1	Decal–Lever, Parking
19	3296–2	1	Nut–Lock
20	218–595	1	Connector–Body
21	82–2190	1	Switch–Bail

Ref. No.	Part No.	Qty.	Description

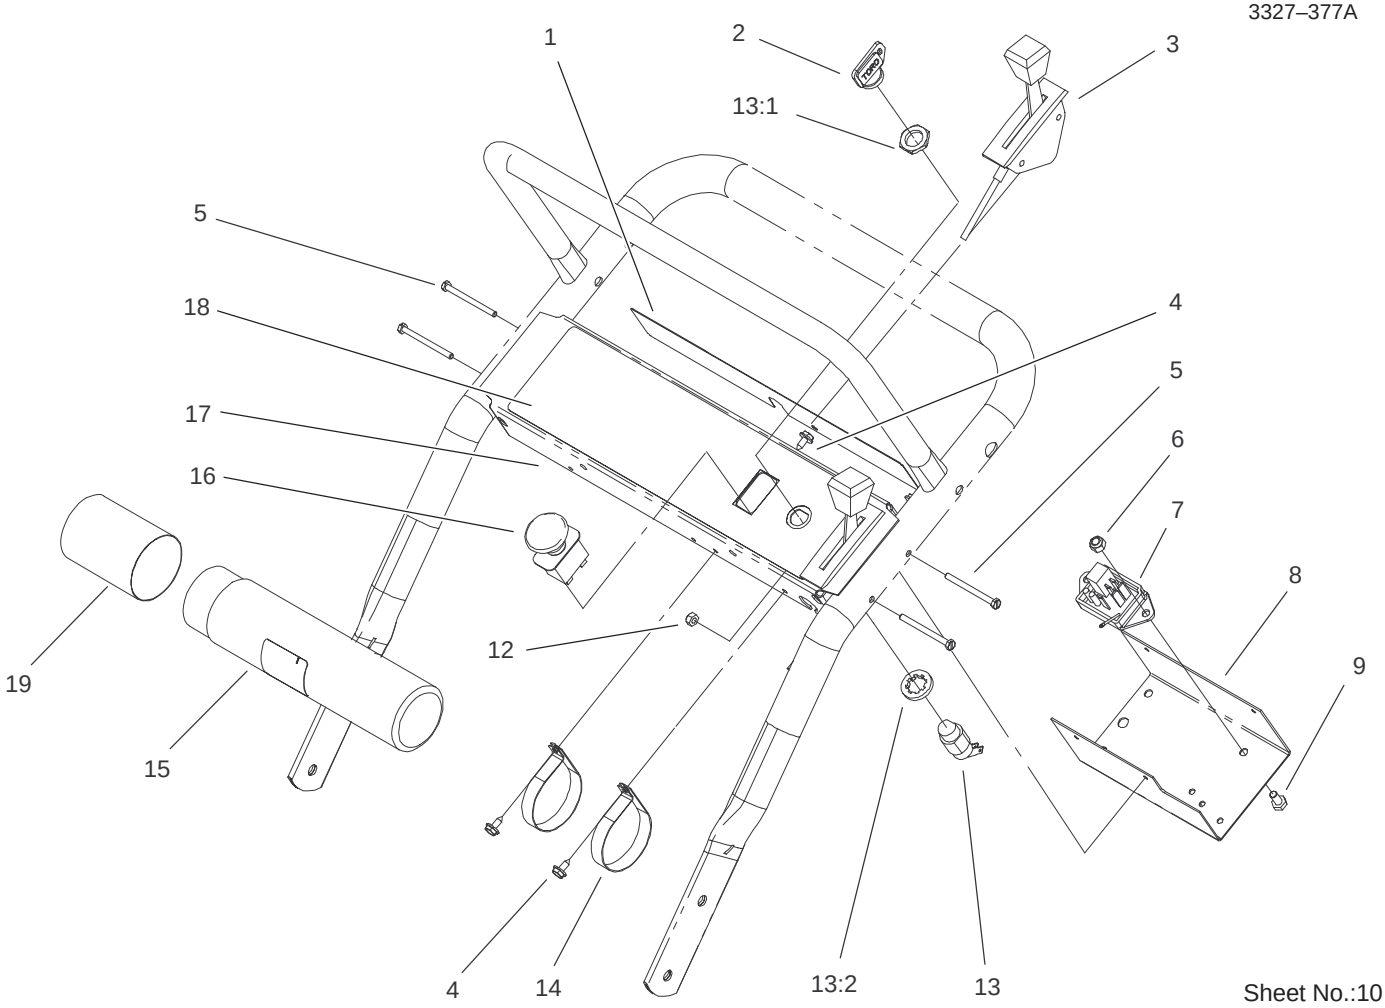


Sheet No.:10

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	105–0884	1	Decal–Danger
2	63–8360	2	Key–Ignition
3	74–0630	1	Control–Throttle
4	32104–76	4	Screw
5	32105–14	4	Screw
6	3296–42	1	Nut–Lock, NI
7	104–8141	1	Module–Delay
8	93–1187–03	1	Panel–Bottom
9	321–2	1	Screw–HH
12	3296–2	4	Nut–Lock
13	29–5560	1	Switch–On/Off
13:1	218–461	1	Nut–HH
13:2	3254–5	1	Washer–Tooth
14	2412–120	2	R–Clamp
15	104–7050	1	Housing–Manual
16	104–8140	1	Switch–PTO
17	104–8177–03	1	Panel–Control
18	106–5499	1	Decal–Control Panel
19	104–7048	1	Cap–Housing

Ref. No.	Part No.	Qty.	Description

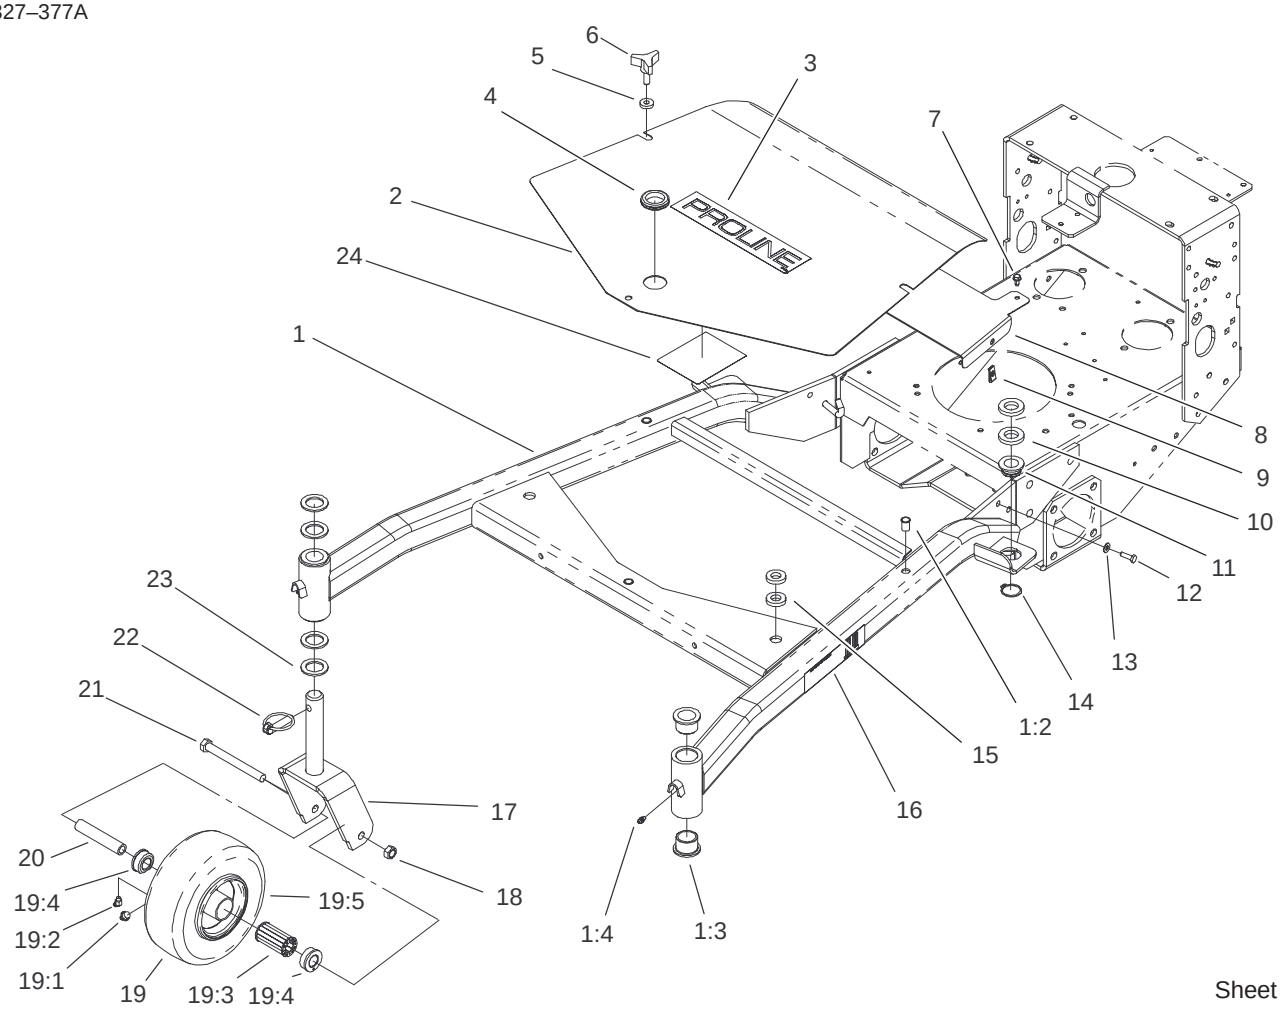


Sheet No.:2

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	106–0708	1	Carrier Frame ASM
1:2	32148–9	3	Insert–Nut
1:3	94–1291	4	Bushing–Special
1:4	302–5	2	Fitting–Grease
2	106–3360–01	1	Cover–Carrier Frame
3	106–0719	1	Decal–Proline
4	240–3	1	Grommet–Rubber
5	106–0565	3	Washer–Rubber
6	104–8587	3	Knob
7	12–3270	2	Screw
8	106–3361–01	1	Shield–Heat
9	3290–199	2	Nut–Speed
10	104–1105	4	Spacer–Support, Deck
11	1–513336	2	Bushing–Deck
12	321–5	2	Screw–HH
13	3256–22	2	Washer–Flat
14	32120–33	2	Ring–Retaining
15	105–0842	4	Spacer
16	106–0635	2	Decal–HOC
17	105–3159–01	2	Castor Fork ASM
18	32153–5	2	Nut–Lock
19	100–6451	2	Castor Wheel ASM
19:1	232–27	1	Stem–Valve
19:2	302–11	1	Fitting–Lube, 45°
19:3	83–4740	1	Bearing
19:4	62–5580	2	Bearing–Outside


Ref. No.	Part No.	Qty.	Description
19:5	100–6452	1	Tire–Tubeless
20	100–6453	2	Bushing–Spanner
21	325–19	2	Screw–HH
22	283–71	2	Pin–Lynch
23	3–6781	8	Washer–Thrust
24	106–5505	1	Decal–Service

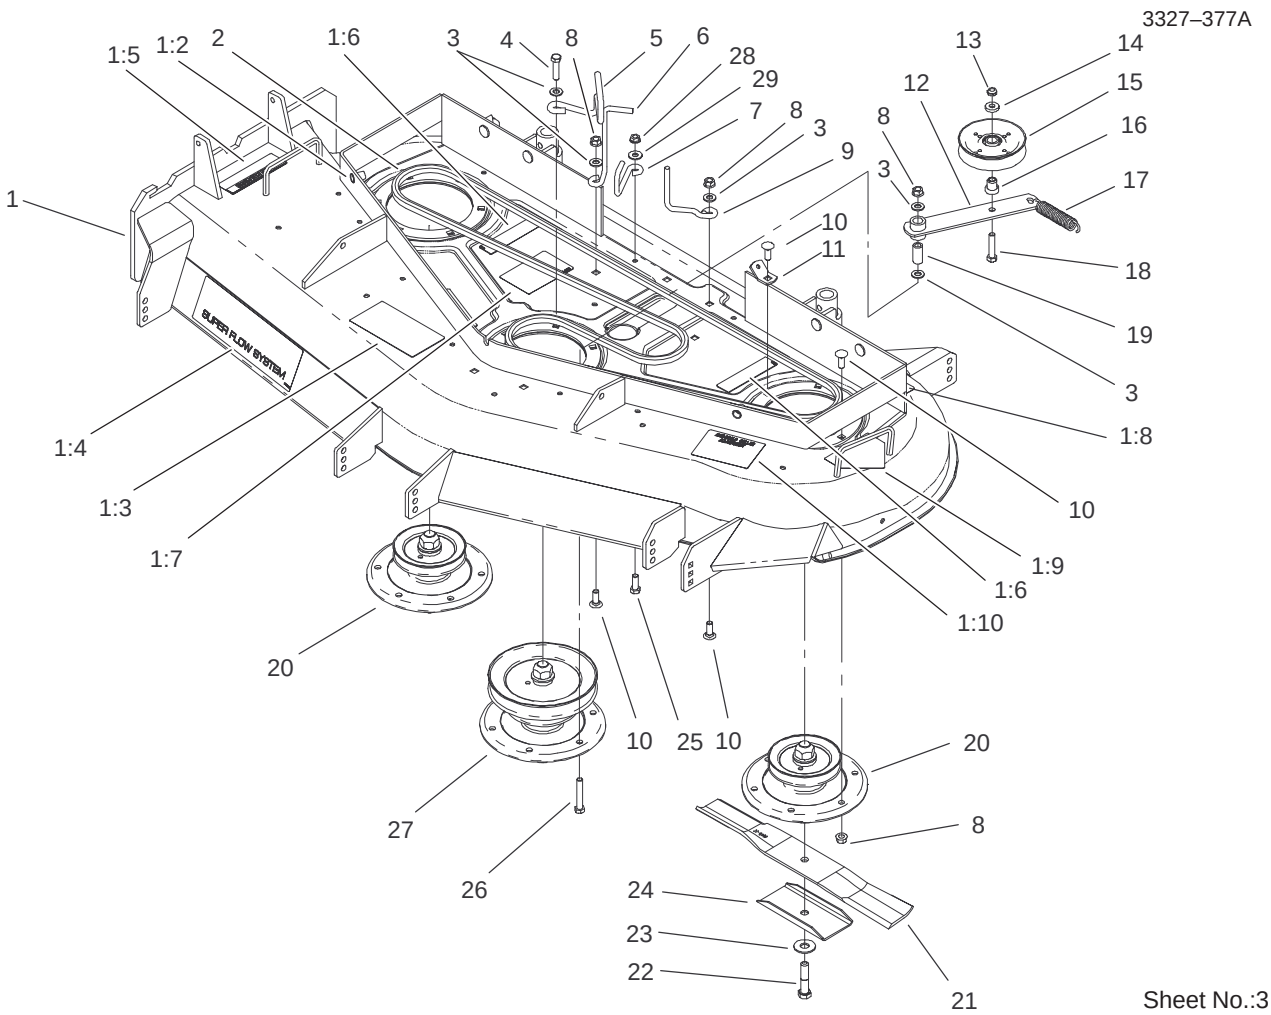

Spindle, Pulley and Belt Assembly

Ref. No.	Part No.	Qty.	Description
1	106–0619	1	Deck ASM
1:2	32148–10	2	Insert–Threaded
1:3	66–1340	1	Decal–Danger
1:4	106–0705	1	Decal–Sfs, 52”
1:5	104–8569	1	Decal–Warning
1:6	67–5360	3	Decal–Danger
1:7	104–8186	1	Decal–Routing, Belt
1:8	68–8340	1	Decal–Torque
1:9	43–8480	1	Decal–Danger
1:10	106–5532	1	Decal–Antiscalp
2	104–6397	1	V–Belt
3	3256–24	5	Washer–Flat
4	323–8	1	Screw–HH
5	105–0850	1	Guide–Belt
6	98–5980	1	Guide–Belt
7	104–6396	1	Guide–Belt
8	32128–21	20	Nut–HF
9	52–4780	1	Rod–Belt
10	3231–22	18	Screw–CARR
11	104–6374	1	Plate–Spring
12	104–6375	1	Idler Arm ASM
13	3296–5	1	Nut–Lock, NI
14	7–0081	1	Washer–Flat
15	65–5940	1	Pulley–Idler
16	104–6379	1	Bushing–Pulley
17	51–3650	1	Spring–Extension

Ref. No.	Part No.	Qty.	Description
18	3211–8	1	Screw–HH
19	51–3640	1	Sleeve
20	106–0787	2	Spindle Housing ASM
21	27–0990	3	Blade
22	44–2200	3	Screw–Blade
23	3256–6	3	Washer–Flat
24	92–9820	3	Stiffener–Blade
25	323–6	1	Screw–HH
26	323–11	1	Screw–HH
27	106–0785	1	Spindle Housing ASM
28	32128–25	1	Nut–Flange
29	3256–3	1	Washer–Flat

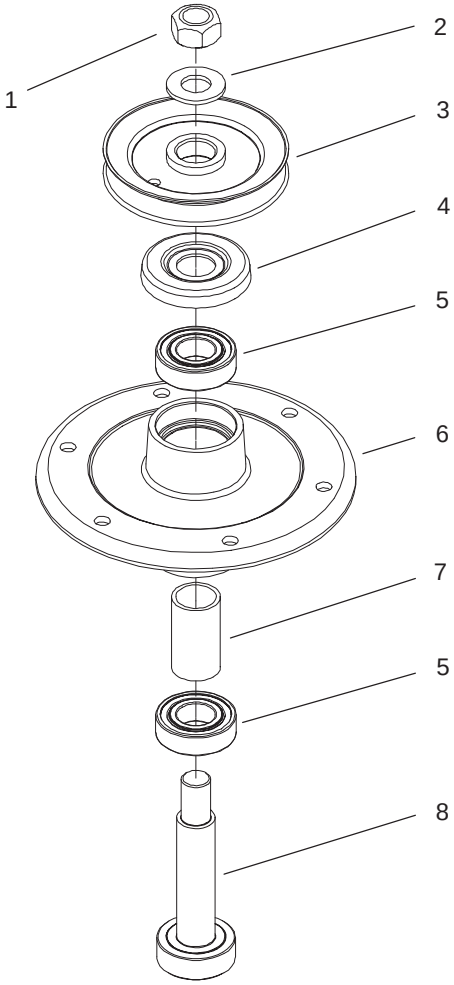


Sheet No.:A1

Spindle Assembly No. 106–0787

Ref. No.	Part No.	Qty.	Description
1	3219–7	1	Nut–Hex
2	7–4150	1	Washer
3	104–1118	1	Pulley And Hub ASM
4	106–0873	1	Shield–Bearing
5	104–6325	2	Bearing
6	106–0819	1	Housing–Spindle
7	106–0795	1	Spacer–Bearing
8	106–0782	1	Shaft–Spindle

Ref. No.	Part No.	Qty.	Description

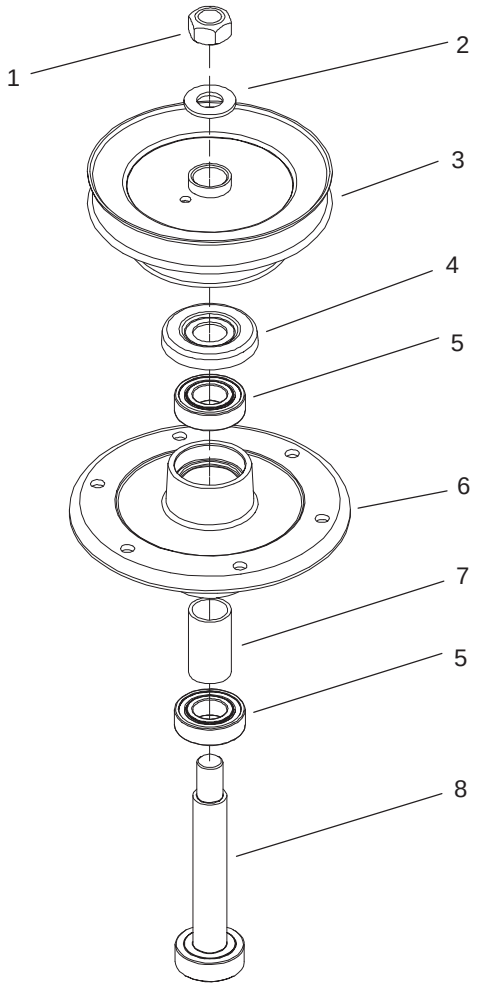


Sheet No.:A2

Spindle Assembly No. 106–0785

Ref. No.	Part No.	Qty.	Description
1	3219–7	1	Nut–Hex
2	7–4150	1	Washer
3	104–1117	1	Pulley And Hub ASM
4	106–0873	1	Shield–Bearing
5	104–6325	2	Bearing
6	106–0819	1	Housing–Spindle
7	106–0795	1	Spacer–Bearing
8	106–0781	1	Shaft–Spindle


Ref. No.	Part No.	Qty.	Description

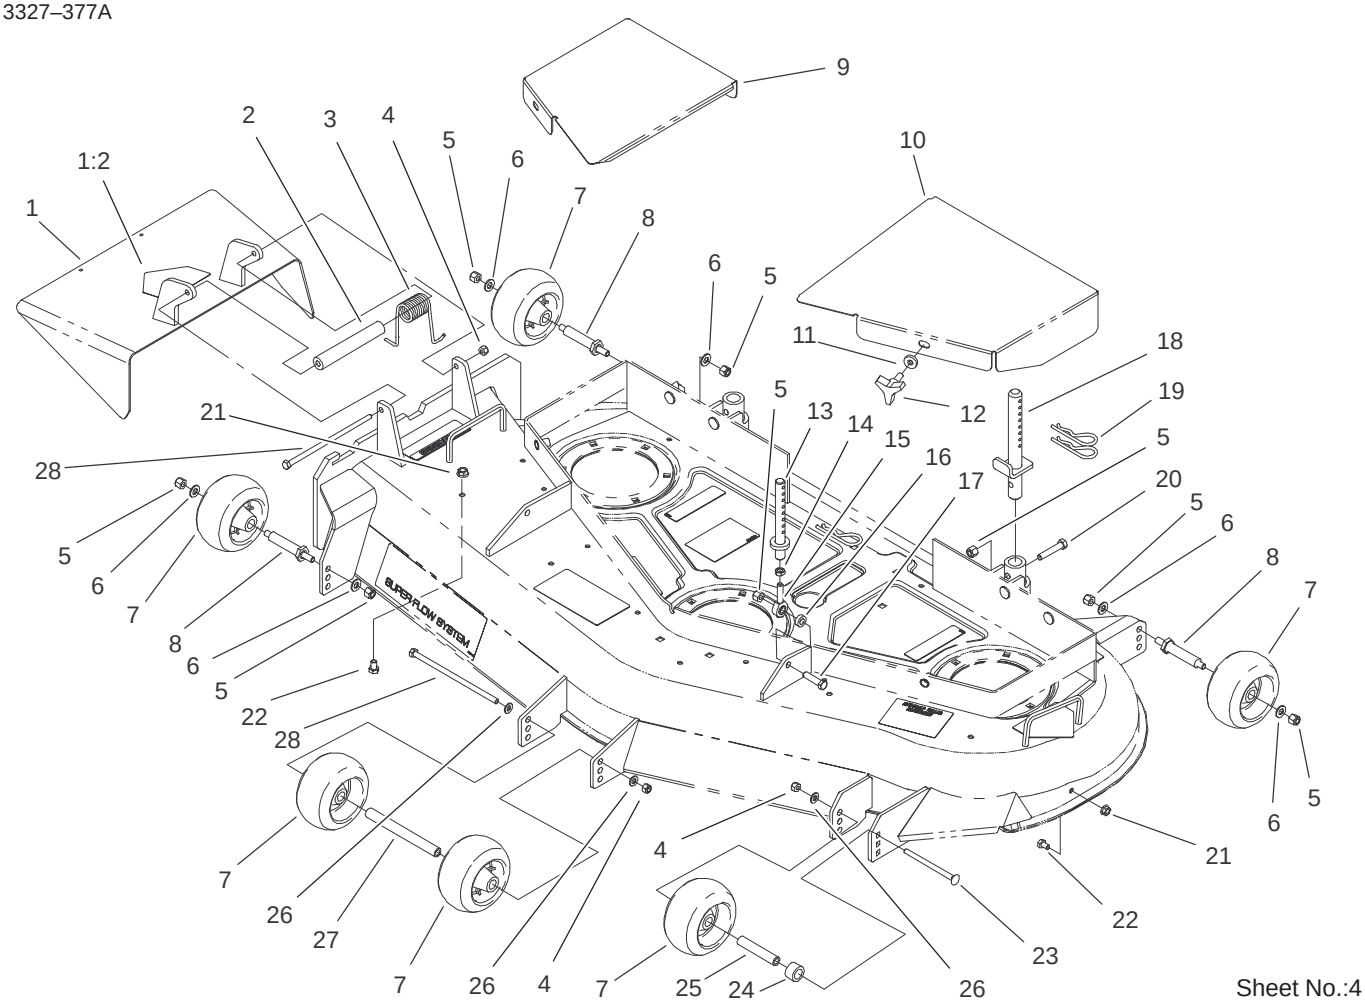

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	105–4623	1	Deflector ASM
1:2	93–1122	1	Decal–Danger
2	105–4622	1	Spacer
3	104–8554	1	Spring–Torsion
4	3296–29	3	Nut–Lock, NI
5	3296–39	10	Nut–Lock, NI
6	3256–24	6	Washer–Flat
7	68–2730	6	Wheel–Gage
8	99–2842	3	Spacer
9	106–3363–01	1	Cover–Belt, RH
10	106–3362–01	1	Cover–Belt, LH
11	106–0565	2	Washer–Rubber
12	104–8587	2	Knob
13	106–0684	2	Front Pin ASM
14	3220–3	2	Nut–Jam
15	1–613204	2	Balljoint
16	104–1156	2	Spacer
17	323–8	2	Screw–HH
18	106–3365	2	Rear Pin ASM
19	3290–256	6	Pin–Hair
20	323–10	2	Screw–HH
21	32128–20	6	Nut–HF
22	322–1	6	Screw–HH
23	3230–30	1	Screw–CARR
24	106–0563	1	Spacer–Wheel
25	106–0545	1	Bushing–Roller

Ref. No.	Part No.	Qty.	Description
26	3256–23	3	Washer–Flat
27	98–5967	1	Spacer
28	322–50	2	Screw–HH

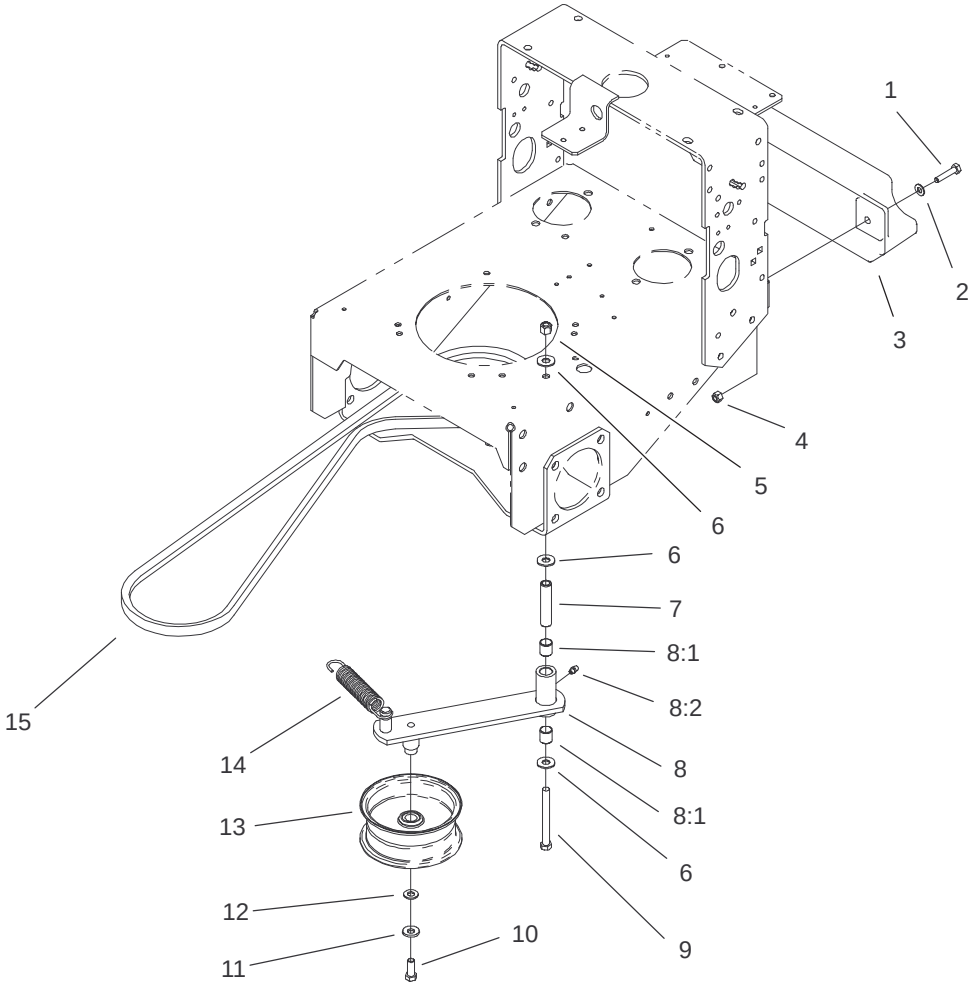


Sheet No.:5

Drive Belt and Tensioner Assembly


Ref. No.	Part No.	Qty.	Description
1	322–7	2	Screw–HH
2	3256–23	2	Washer–Flat
3	105–3173–01	1	Weight–Rear
4	3296–29	2	Nut–Lock, NI
5	3296–39	1	Nut–Lock, NI
6	1–809107	3	Washer–Hardened
7	104–6377	1	Tube–Idler
8	106–0734	1	Idler Arm ASM
8:1	1–513034	2	Sleeve–Bearing
8:2	302–5	1	Fitting–Grease
9	323–42	1	Screw–HH
10	323–6	1	Screw–HH
11	98–5975	1	Washer–Belleville
12	3256–24	1	Washer–Flat
13	1–413099	1	Pulley–Idler
14	105–8443	1	Spring–Extension
15	106–0632	1	V–Belt, PTO

Ref. No.	Part No.	Qty.	Description

Electrical Schematic

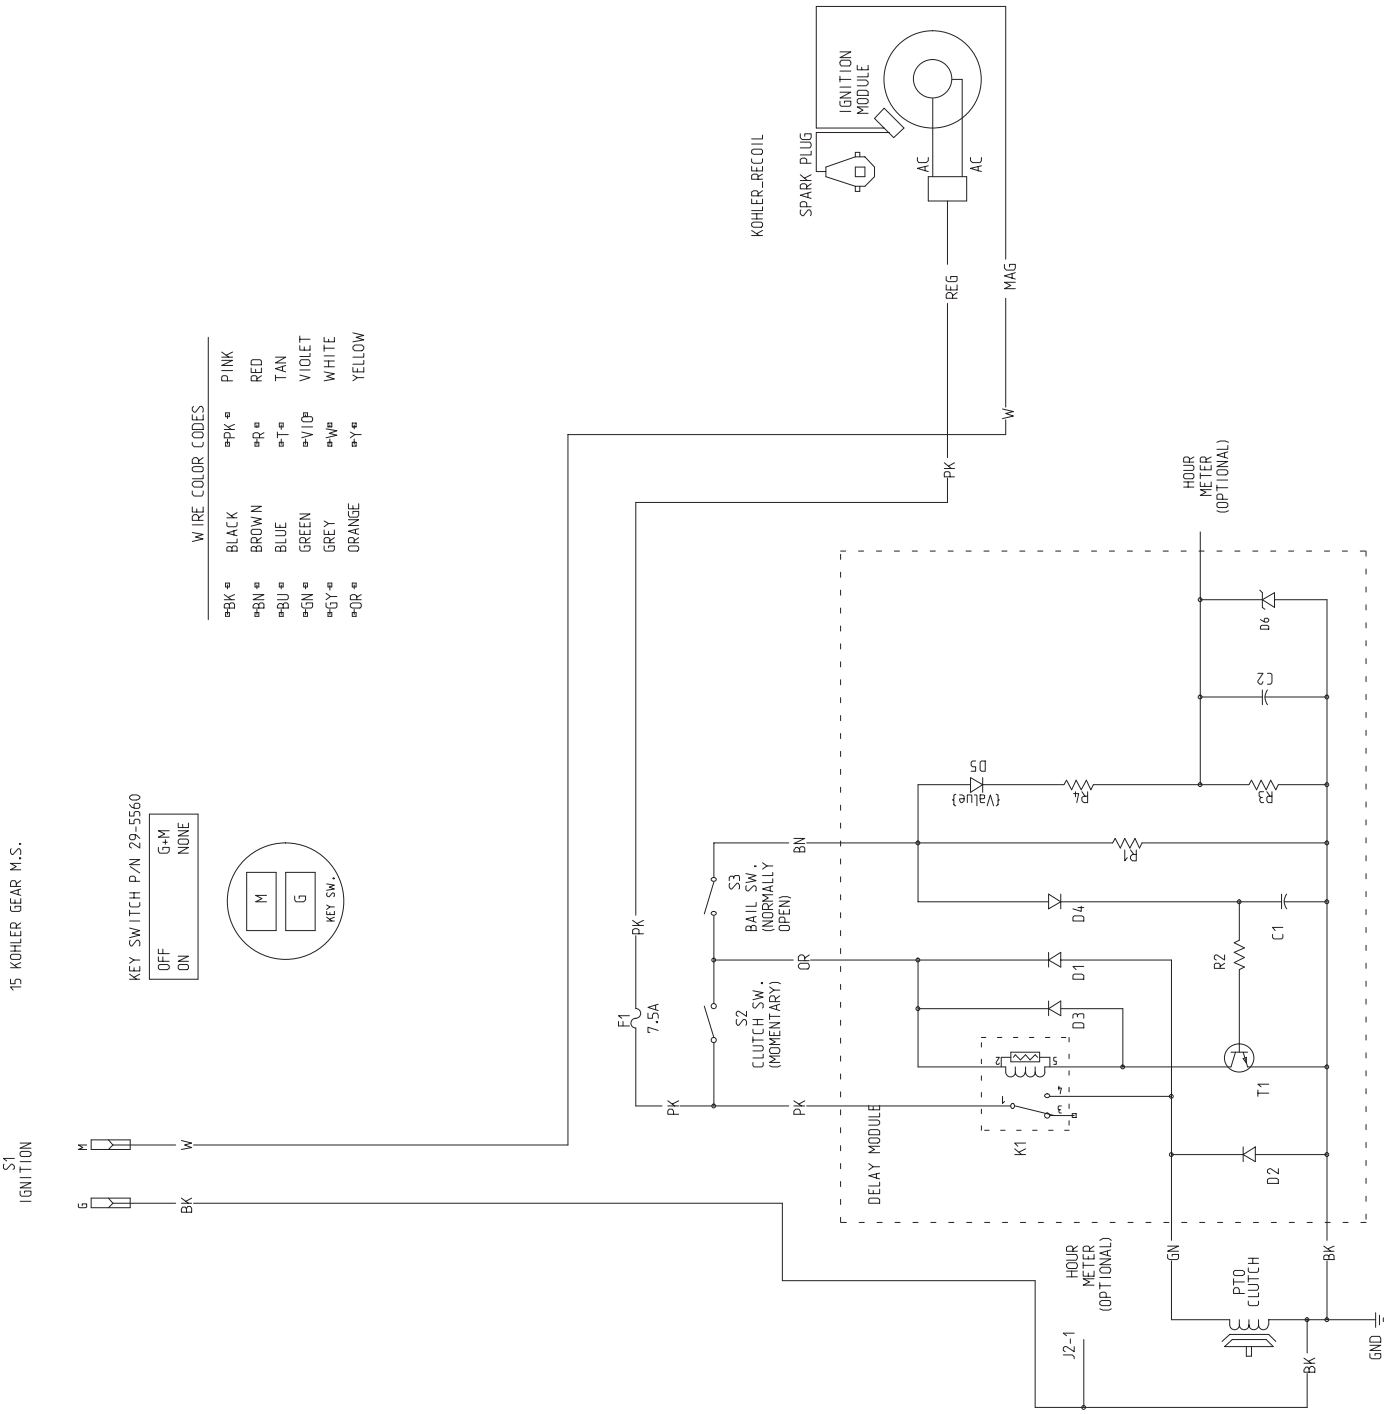

Sheet No.:13

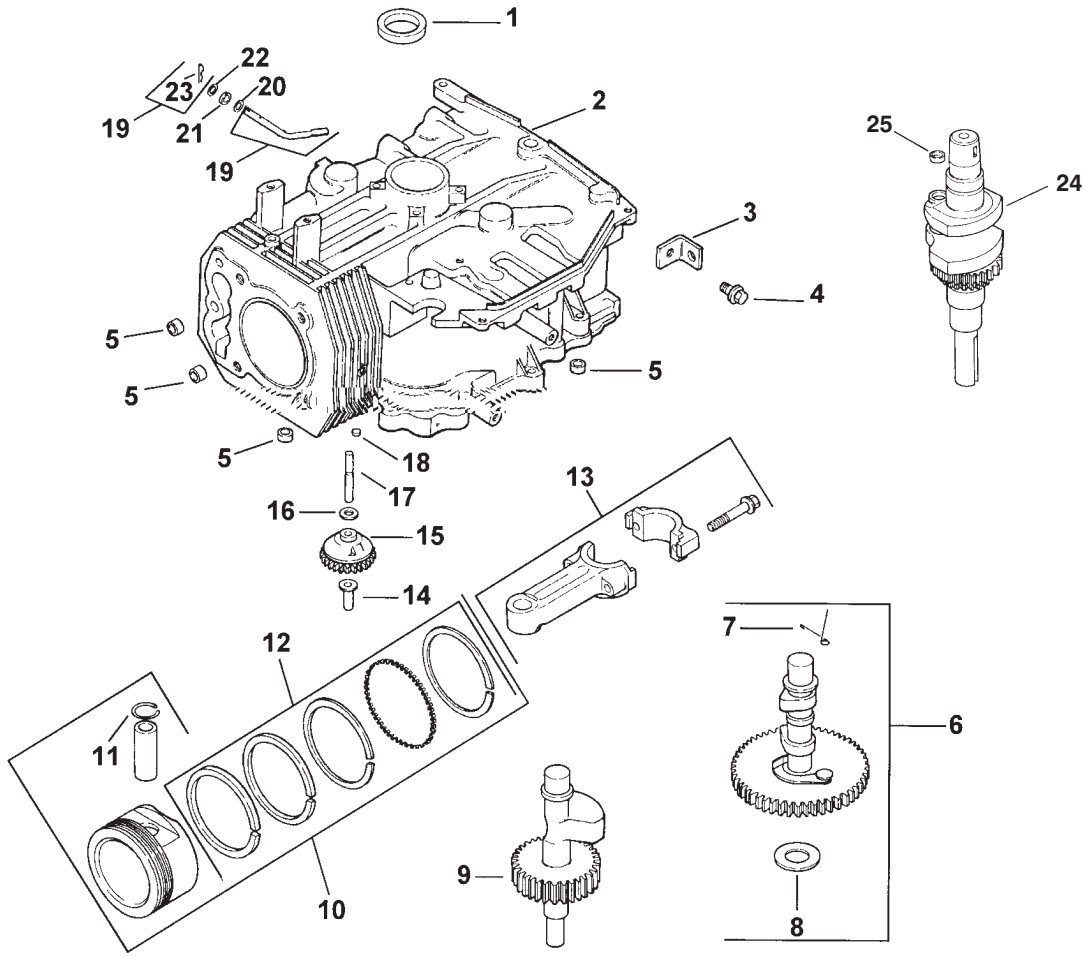


Crankcase Assembly – Kohler Model CV15T–41604

Ref. No.	Part No.	Qty.	Description
1	12 032 03–S	1	Seal–Crankshaft
2	12 522 18–S	1	Shortblock
3	12 445 02–S	1	Strap–Lifting
4	M–839025–S	1	Screw–HF M8x1.25x22
5	24 380 13–S	4	Dowel–Locating
6	12 755 49–S	1	Kit–Camshaft (Incl.7–8)
7	12 089 31–S	1	Spring–Actuating
8	12 422 07–S	A/R	Shim–Camshaft, White
8	12 422 08–S	1	Shim–Camshaft, Blue
8	12 422 09–S	A/R	Shim–Camshaft, Red
8	12 422 10–S	A/R	Shim–Camshaft,Yellow
8	12 422 11–S	A/R	Shim–Camshaft, Green
8	12 422 12–S	A/R	Shim–Camshaft, Gray
8	12 422 13–S	A/R	Shim–Camshaft, Black
9	12 144 27–S	1	Shaft–Balance
10	12 874 07–S	1	Piston w/Ring Set STD (Incl. 11,12)
10	12 874 08–S	1	Set–Piston w/Ring .25
10	12 874 09–S	1	Set–Piston w/Ring .50
10	12 874 11–S	1	Set–Piston w/Ring .08
11	12 018 02–S	2	Retainer–Piston Pin
12	12 108 07–S	1	Ring Set STD
12	12 108 08–S	1	Ring Set .25
12	12 108 09–S	1	Ring Set .50
13	12 067 05–S	1	Rod–Connecting, STD
13	12 067 06–S	1	Rod–Connecting .25

Ref. No.	Part No.	Qty.	Description
14	12 380 01–S	1	Pin–Governor Regulating
15	12 043 05–S	1	Gear–Governor
16	M–631005–S	1	Washer–Plain, 6mm
17	12 144 02–S	1	Shaft–Governor Gear
18	52 139 09–S	1	Plug–Cup
19	12 755 64–S	1	Kit–Governor Cross Shaft (Incl. 23)
20	X–25–102–S	1	Washer–Plain, 1/4
21	12 032 01–S	1	Seal–Governor Cross Shaft
22	M–631015–S	1	Washer–Plain, 6mm
23	12 154 05–S	1	Clip–Hitch Pin
24	12 014 30–S	1	Crankshaft ASM (Incl. 25)
25	12 139 01–S	1	Plug–Cup
*	12 755 93–S	1	Set–Gasket

* Not illustrated
Order Parts from Kohler

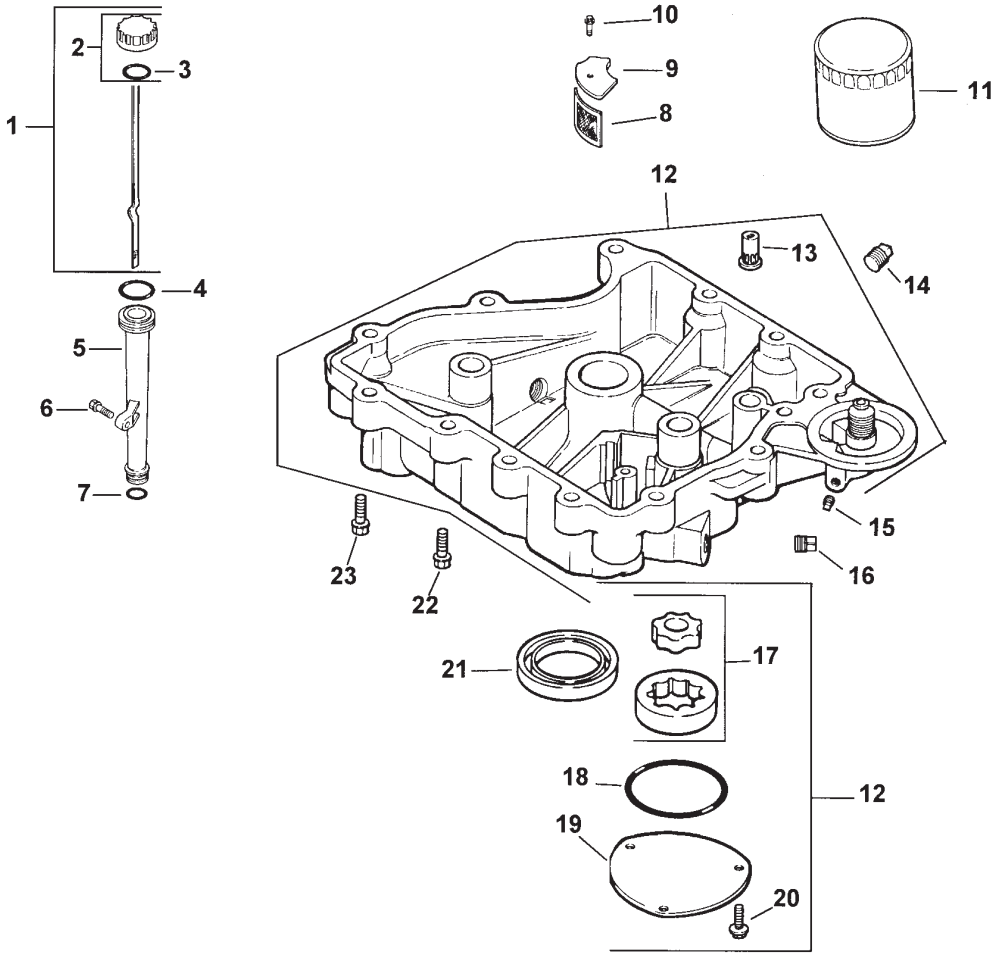


Oil Pan and Lubrication Assembly
Kohler Model CV15T–41604

Ref. No.	Part No.	Qty.	Description
1	12 038 01–S	1	Dipstick ASM(Incl. 2–3)
2	25 755 13–S	1	Kit–Oil Fill Cap (Incl. 3)
3	12 153 03–S	1	O Ring–Dipstick
4	12 153 02–S	1	O Ring–Upper Oil Fill Tube
5	12 123 04–S	1	Tube–Oil Fill
6	M–545020–S	1	Screw–HF, M5x0.8x20
7	12 153 01–S	1	O Ring–Lower Oil Fill Tube
8	25 162 07–S	1	Screen–Oil Pickup
9	12 096 03–S	1	Cover–Oil Pickup Screen
10	M–545016–S	1	Screw–HF, M5x0.8x16
11	52 050 02–S	1	Filter–Oil
12	12 199 50–S	1	Pan ASM – Oil (Incl.13, 17–20)
13	25 462 09–S	1	Valve–Oil Pressure Relief
14	25 139 57–S	1	Plug–Pipe, 3/8 SH
15	25 139 52–S	1	Plug–Pipe,1/8
16	25 139 62–S	1	Plug–Pipe, 3/8 HSH
17	12 393 01–S	1	Pump–Oil
18	12 153 06–S	1	O Ring–Oil Pump Cover

Ref. No.	Part No.	Qty.	Description
19	12 096 34–S	1	Cover–Oil Pump
20	M–545016–S	3	Screw–HF, M5x0.8x16
21	12 032 03–S	1	Seal–Oil (PTO End)
22	24 086 16–S	11	Screw–HF, M8x1.25x45
23	24 086 17–S	1	Screw–HF, M8x1.25x45

Order Parts From Kohler

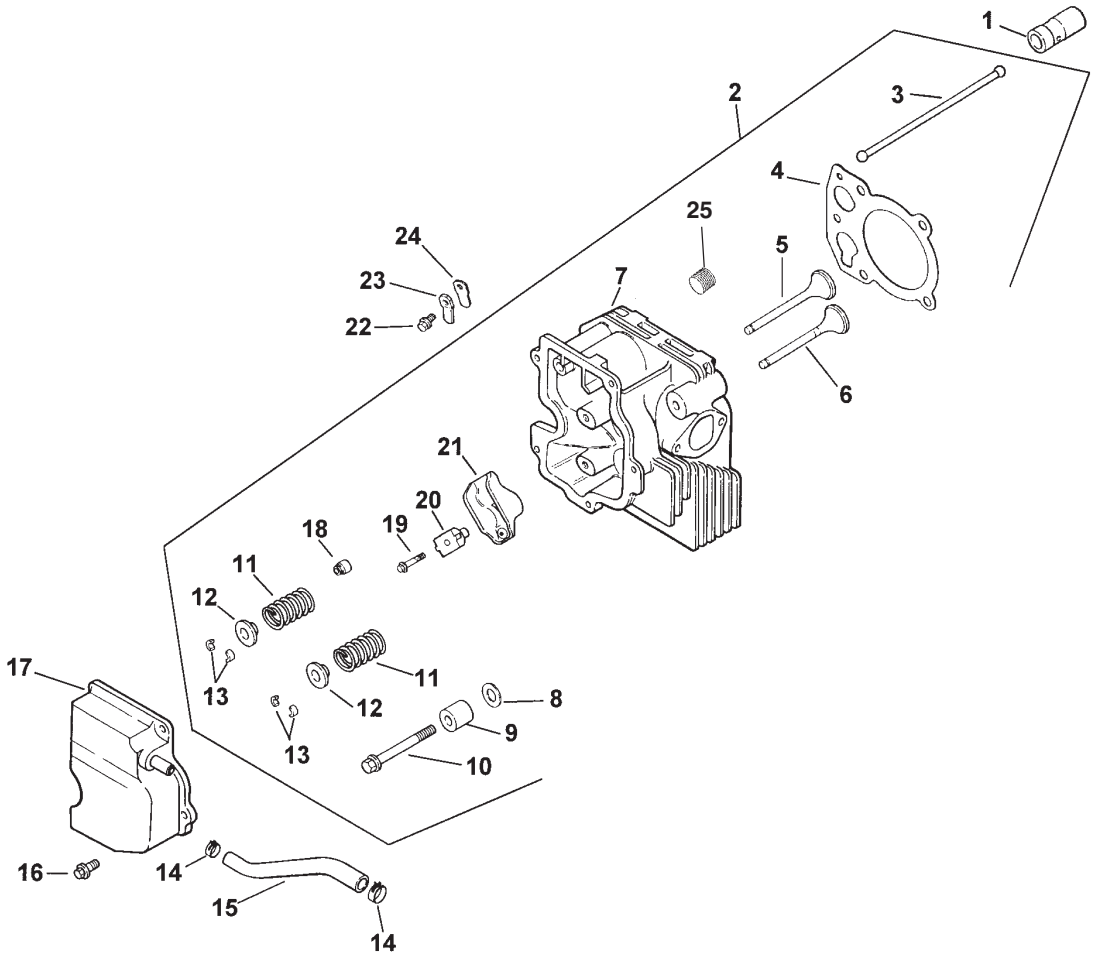


Cylinder Head, Valves And Breather Assembly
Kohler Model CV15T–41604

Ref. No.	Part No.	Qty.	Description
1	12 351 01–S	2	Lifter–Valve
2	12 755 81–S	1	Kit–Cylinder Head (Incl. 3–13, 18–21, 25, Carburator Gasket 12 041 01–S(2), Exaust Manifold Gasket 12 041 03–S, Air Cleaner Gasket 12 041 02–S)
3	12 411 01–S	2	Rod–Push
4	12 041 10–S	1	Gasket–Cylinder Head
5	12 017 01–S	1	Valve–Intake STD
5	12 017 02–S	1	Valve–Intake .25
6	12 016 01–S	1	Valve–Exhaust STD
6	12 016 02–S	1	Valve–Exhaust, .25
7	12 318 19–S	1	Head – Cylinder
8	12 468 05–S	1	Washer–Plain 13/32
9	12 112 13–S	1	Spacer–Head Bolt Exhaust Port
10	12 086 15–S	5	Screw–HF M10x1.5x81
11	12 089 01–S	2	Spring–Valve
12	12 173 01–S	2	Cap–Valve Spring
13	12 755 03–S	2	Kit–Retainer
14	25 237 14–S	2	Clamp–Hose

Ref. No.	Part No.	Qty.	Description
15	12 326 03–S	1	Hose–Breather
16	M–645020–S	3	Screw–HF M6x1.0x20
17	12 096 07–S	1	Cover–Valve w/Nipple
18	24 032 05–S	1	Seal–Valve Stem
19	M–640034–S	2	Screw–HF M6x1.0x34
20	12 599 03–S	2	Pivot–Rocker Arm
21	25 186 01–S	2	Arm–Rocker
22	M–545010–S	1	Screw–HF M5x0.8x10
23	12 018 01–S	1	Retainer–Breather Reed
24	12 402 02–S	1	Reed–Breather
25	25 139 60–S	1	Plug–Pipe, HSH 1/8


Order Parts From Kohler

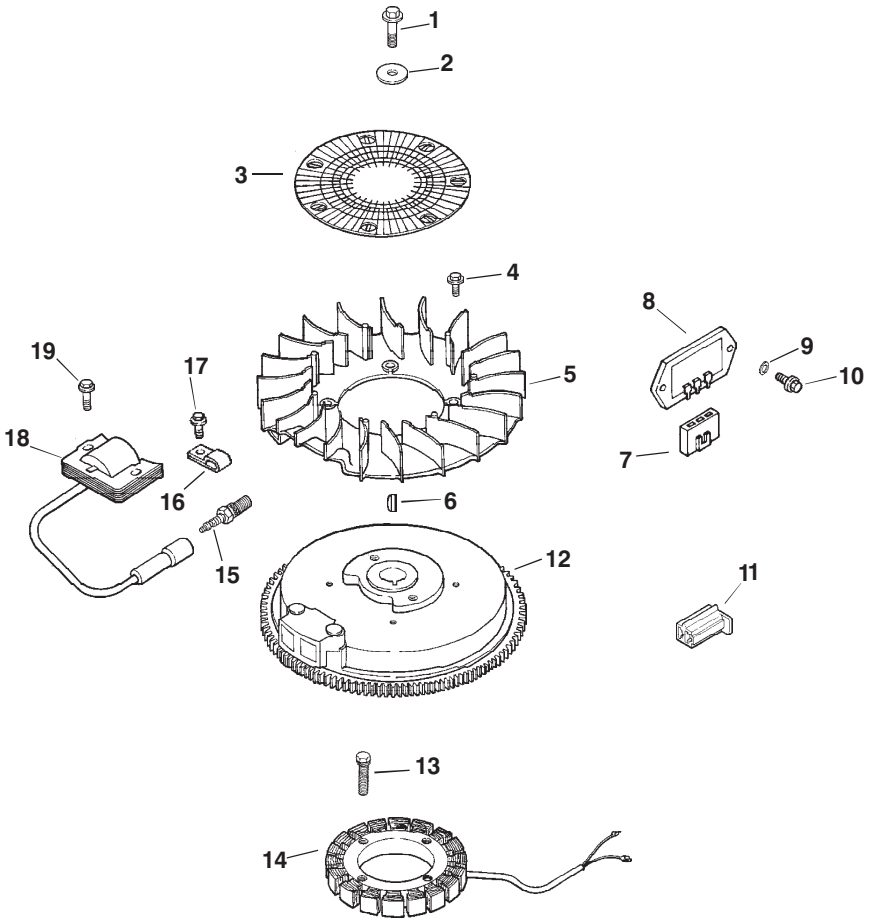

Ignition and Electrical Assembly
Kohler Model CV15T–41604

Ref. No.	Part No.	Qty.	Description
1	12 086 14–S	1	Screw–HF,M10x1.5x46
2	12 468 03–S	1	Washer–Plain, 3/8
3	12 162 03–S	1	Screen–Grass
4	25 086 47–S	4	Bolt–Shoulder
5	12 157 03–S	4	Fan
6	X–42–15–S	1	Key
7	236602–S	1	Connector–Rectifier, Regulator(3 contact)
8	12 403 01–S	1	Rectifier–Unregulated, 15 amp
9	X–22–11–S	2	Washer – Lock
10	M–639016–S	2	Screw–HF, M6x1.0x16
11	41 155 03–S	1	Connector
12	12 025 33–S	1	Flywheel
13	M–548025–S	2	Screw–HH M5x0.8x25
14	237878–S	1	Kit–Stator, 15 Amp
15	12 132 06–S	1	Spark Plug
16	X–728–1–S	2	Clip–Cable
17	M–545010–S	2	Screw–HF, M5x0.8x10
18	12 584 05–S	1	Module–Ignition
19	M–545020–S	2	Screw–HF, M5x0.8x20
*	25 518 05–S	1	Lead–Black, Rectifier/ Regulator,(5”–14Gauge Uninsulated Push On Tab Terminals)
*	12 518 01–S	1	Lead–White, Ground To Kill, (19”–18 Gauge Fully Insulated Push On Tab and Uninsulated Push On Tab Terminals
*	25 518 12–S	1	Lead–Black,Ground, (5”–12Gauge–Insulated Grip Barrel Eyelet Terminals

* Not illustrated
Order Parts From Kohler

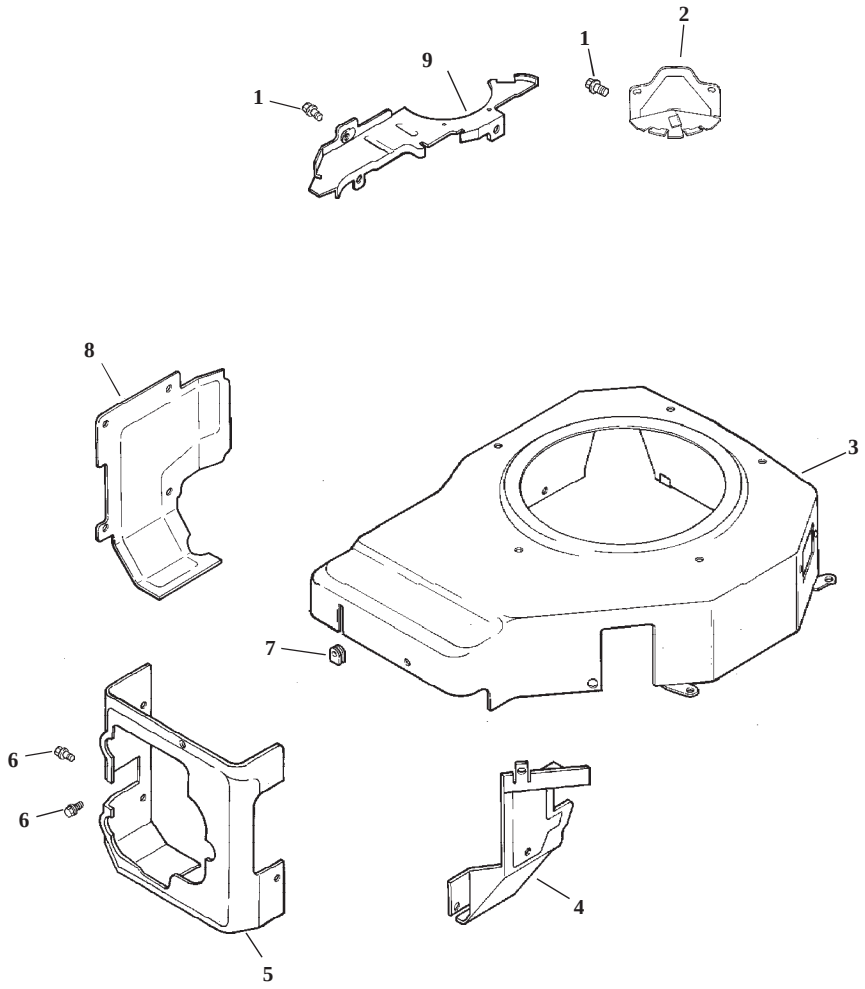


Blower Housing And Baffles Assembly
Kohler Model CV15T–41604

Ref. No.	Part No.	Qty.	Description
1	M–550010–S	6	Screw–HF, M5x0.8x10
2	12 096 29–S	1	Cover–Starter
3	12 027 68–S	1	Housing–Blower
4	12 063 10–S	1	Baffle–Intake, Side
5	12 063 08–S	1	Baffle–Cylinder Head
6	M–545010–S	9	Screw–HF, M5x0.8x10
7	12 313 03–S	1	Grommet–Spark Plug leads
8	12 063 19–S	1	Baffle–Cylinder
9	12 146 07–S	1	Plate–Blower Housing
*	12 146 21–S	1	Decal–Hoursepower

Ref. No.	Part No.	Qty.	Description

* Not illustrated
Order Parts From Kohler

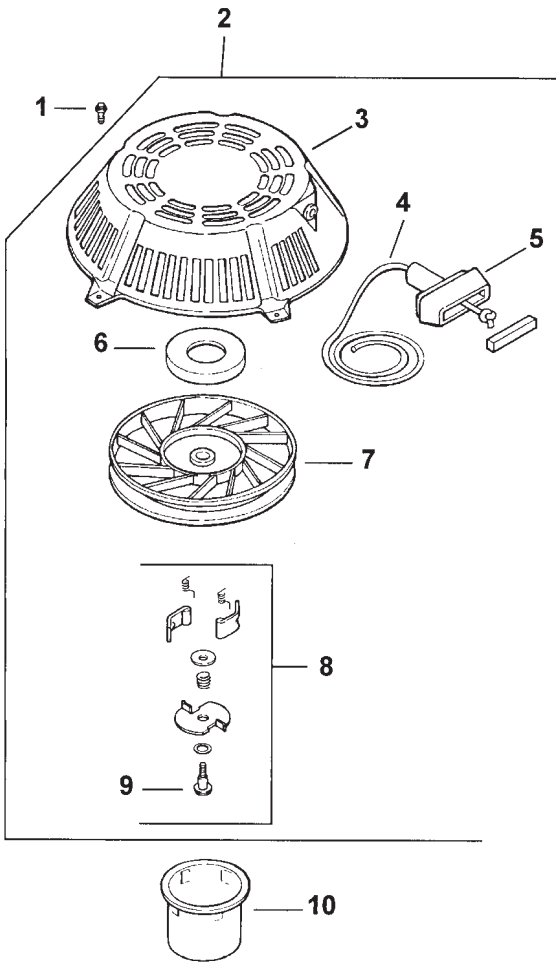


Starter Assembly
Kohler Model CV15T–41604

Ref. No.	Part No.	Qty.	Description
1	M–550010–S	5	Screw–HF, M5x0.8x10
2	12 165 01–S	1	Starter ASM Retractable (Incl. 3–9)
3	12 081 01–S	1	Housing–Starter
4	12 160 01–S	1	Rope–Starter
5	25 166 01–S	1	Handle–Recoil
6	12 089 06–S	1	Spring & Keeper
7	12 093 01–S	1	Pulley
8	12 757 06–S	1	Kit–Dog Repair (incl. 9)
9	41 086 09–S	1	Screw–Posidrive
10	15 109 01–S	1	Cup–Drive
*	12 113 07–S	1	Decal–Starting

Ref. No.	Part No.	Qty.	Description

* Not illustrated
Order Parts From Kohler

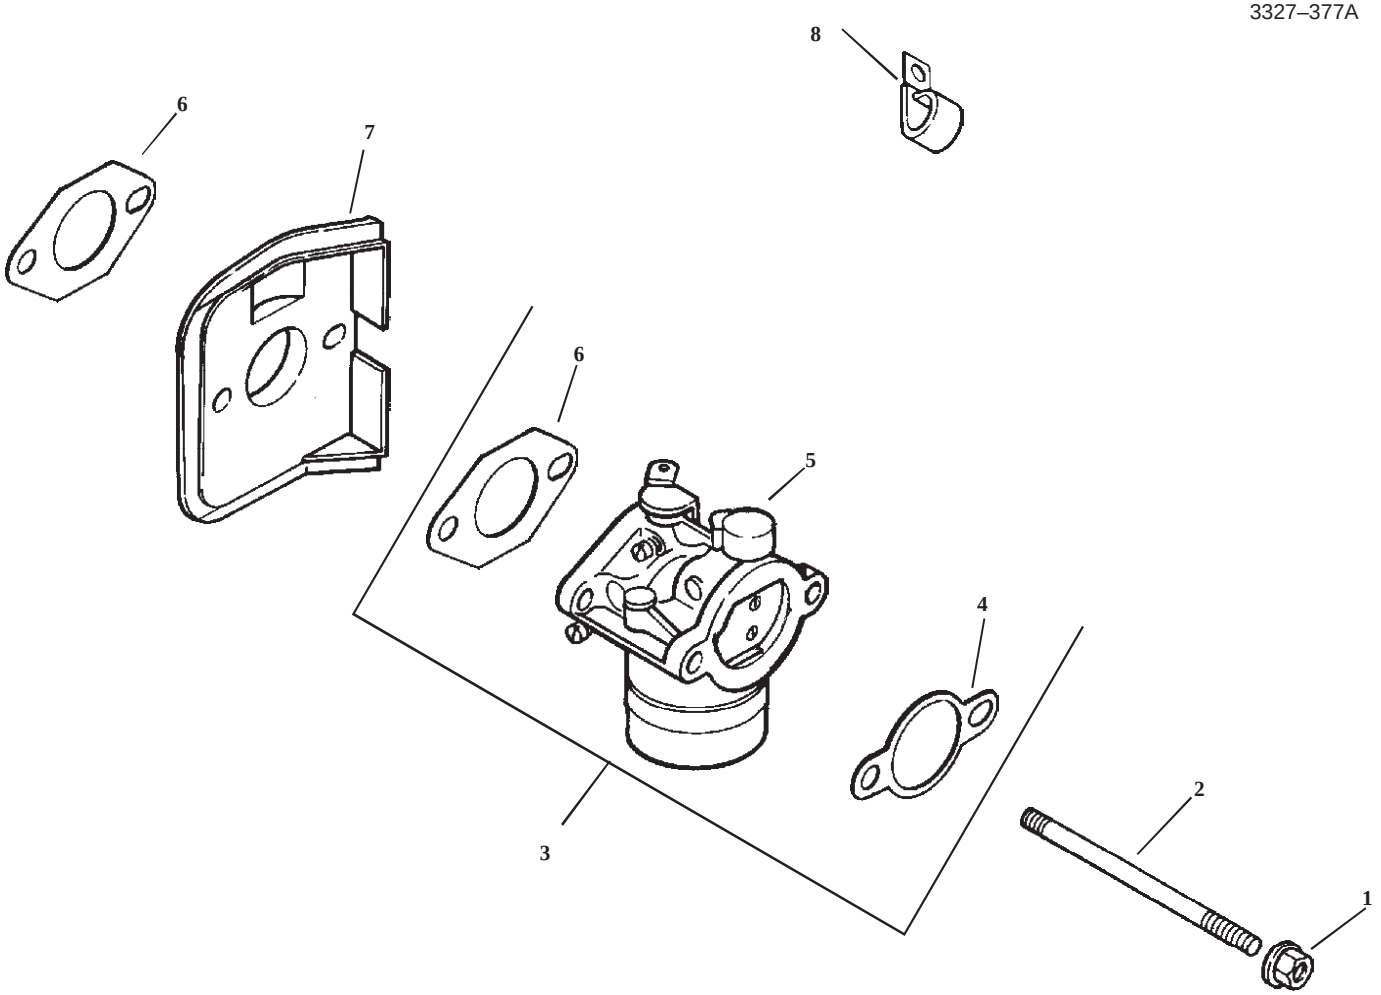


Fuel System Assembly
Kohler Model CV15T–41604

Ref. No.	Part No.	Qty.	Description
1	M–641060–S	2	Nut–HF M6x1.0
2	M–629116–S	2	Stud M6x1.0x116
3	12 853 80–S	1	Kit–Carburetor w/Gaskets (Incl. 4–6)
4	12 041 02–S	1	Gasket–Air Cleaner
5	12 053 80	1	Carburetor ASM (For Information Only Not Available Separately) (Service With Kits 12 757 02–S Float Kit 12 757 03–S Carb. Repair Kit and 12 757 08–S Choke Repair Kit)
6	12 041 01–S	2	Gasket–Carburetor
7	12 265 04–S	1	Deflector–Heat
8	47 154 01–S	1	Clip–Cable
*	12 757 02–S	1	Kit–Float
*	12 757 08–S	1	Kit–Choke Repair
*	12 757 03–S	1	Kit–Carburetor Repair

Ref. No.	Part No.	Qty.	Description

* Not illustrated
Order Parts From Kohler

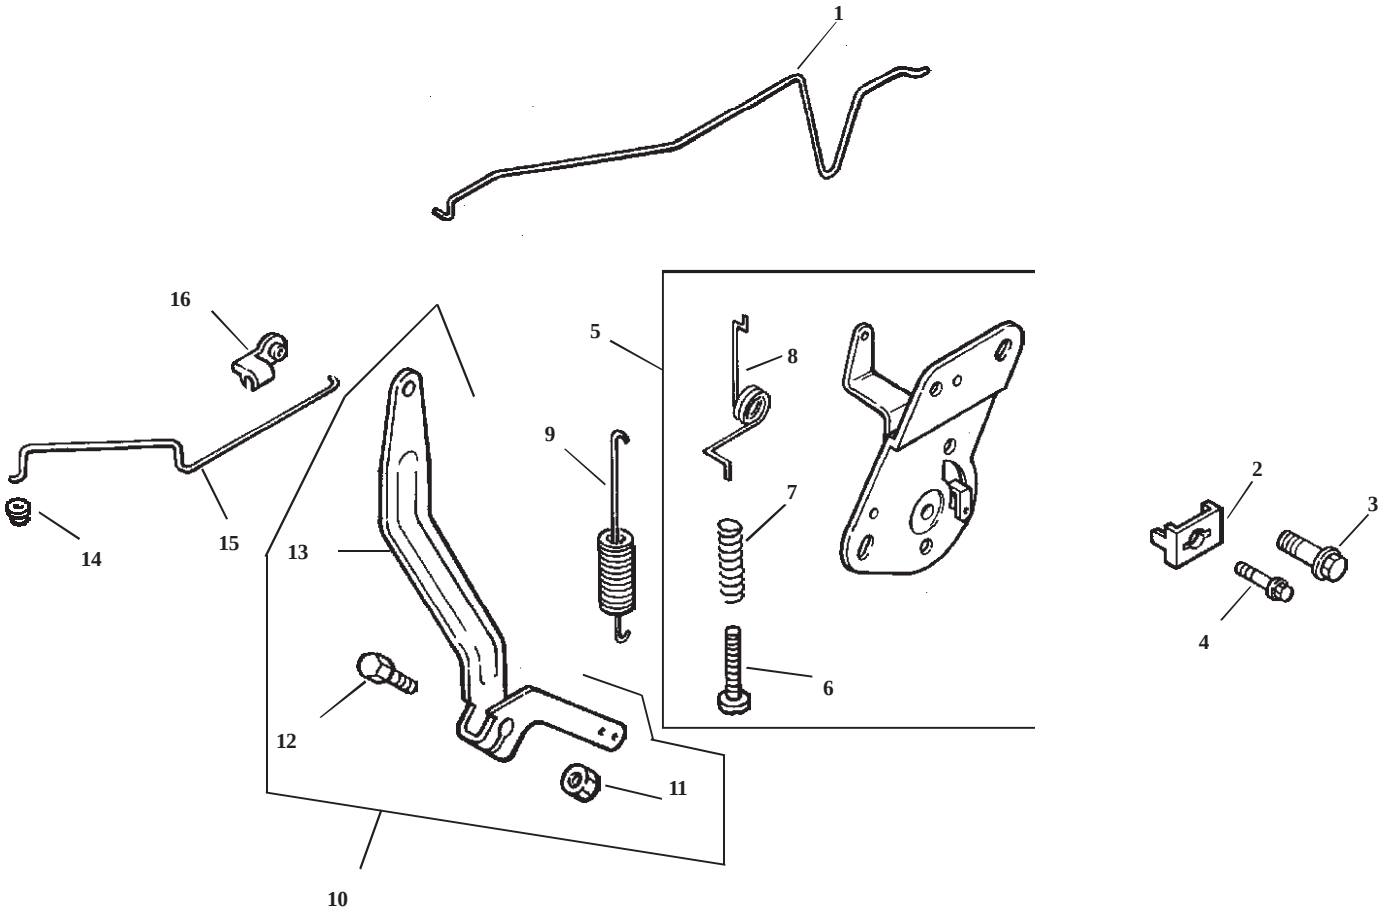


Engine Controls Assembly
Kohler Model CV15T–41604

Ref. No.	Part No.	Qty.	Description
1	12 079 07–S	1	Linkage–Choke
2	12 237 01–S	1	Clamp–Cable
3	M–664020–S	2	Screw–Lobed Socket M6x1.0x20
4	M–545016–S	1	Screw–HF M5x .08x16
5	12 536 01–S	1	Control–Speed ASM (Incl. 6–8)
6	M–443025–S	1	Screw–SPH, M4x0.7x25
7	12 089 11–S	1	Spring–Choke Adjustment
8	12 089 23–S	1	Spring–Choke Return
9	12 089 19–S	1	Spring–Governor
10	12 755 83–S	1	Kit – Governor Lever (Incl. 11–13)
11	12 100 07–S	1	Nut–HF
12	52 211 04–S	1	Bolt – Round HD
13	12 090 28–S	1	Lever–Governor
14	25 158 08–S	1	Bushing–Linkage Retaining
15	12 079 01–S	1	Linkage–Throttle
16	25 158 11–S	1	Bushing–Throttle Linkage

Ref. No.	Part No.	Qty.	Description

Order Parts From Kohler

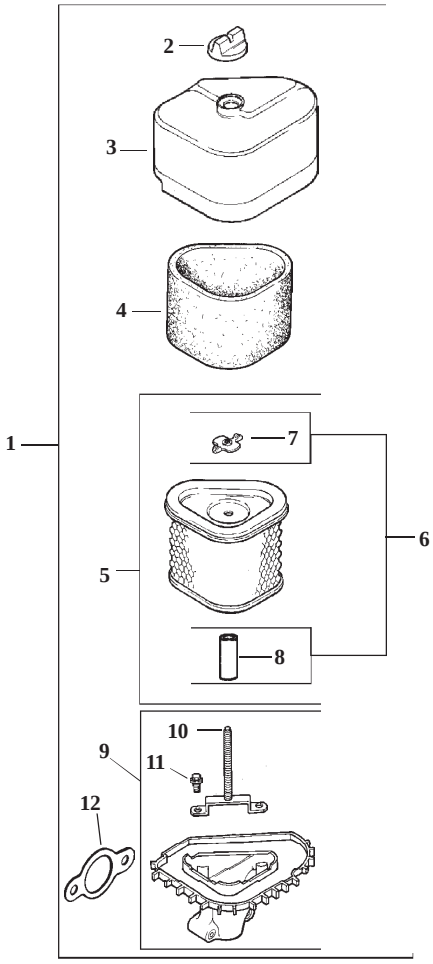


Air Cleaner Assembly
Kohler Model CV15T–41604

Ref. No.	Part No.	Qty.	Description
1	12 743 02–S	1	Kit–Air Cleaner (Incl. 2–12)
2	25 341 03–S	1	Knob–Air Cleaner Cover
3	12 096 38–S	1	Cover–Air Cleaner
4	12 083 12–S	1	Element–Precleaner
5	12 083 10–S	1	Element–Air Cleaner (Incl. 6–8)
6	12 743 12–S	1	Kit–Seal (Incl. 7–8)
7	12 100 08–S	1	Nut–Wing
8	12 032 11–S	1	Seal
9	12 094 07–S	1	Base–Air Cleaner (Incl. 10,11)
10	12 072 04–S	1	Stud–M6x1.0x66
11	12 086 01–S	2	Screw–#10 Hi–Lo Thread Forming
12	12 041 02–S	1	Gasket–Air Cleaner
*	12 113 04–S	1	Decal–Air Cleaner

Ref. No.	Part No.	Qty.	Description

* Not illustrated
Order Parts From Kohler

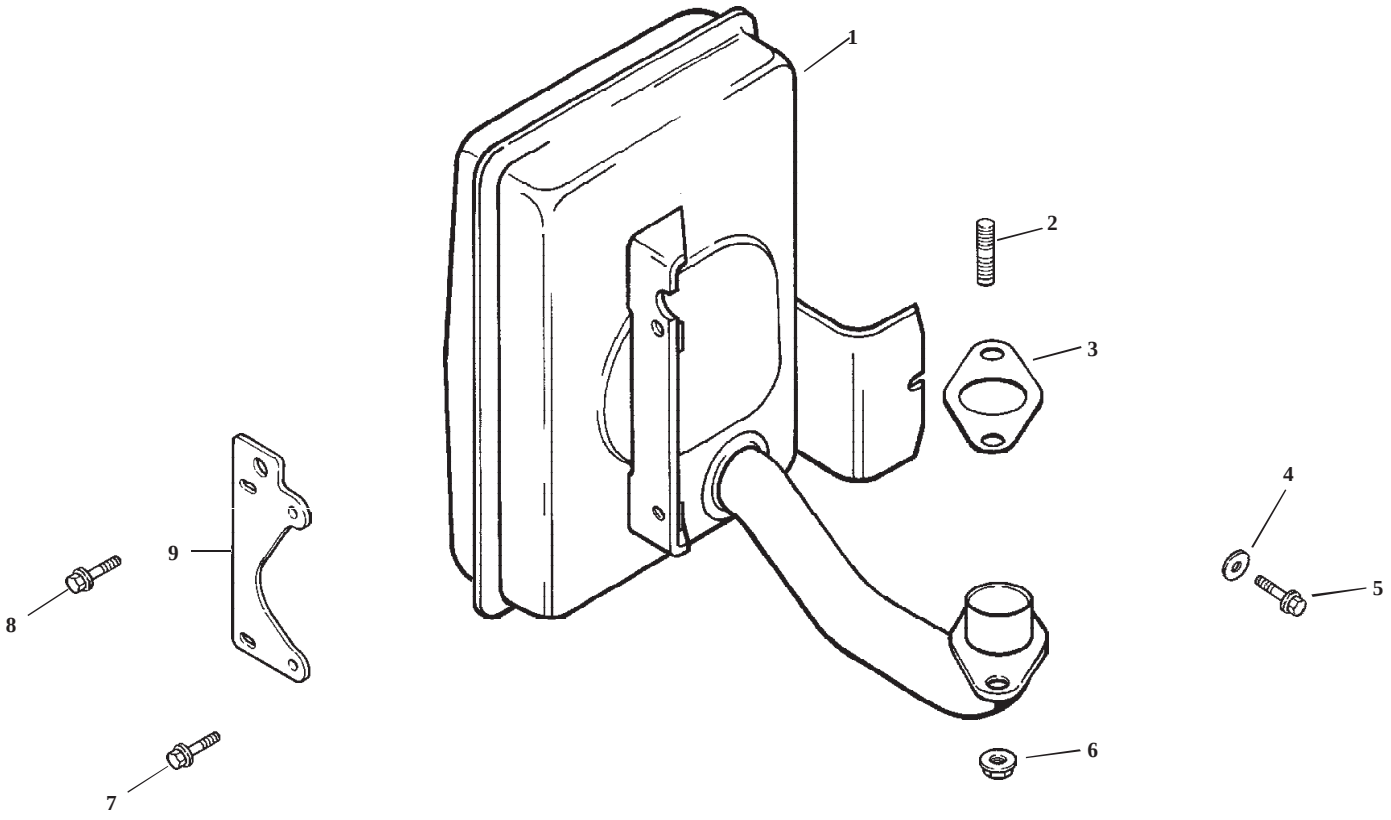

Exhaust Assembly
Kohler Model CV15T–41604

Ref. No.	Part No.	Qty.	Description
1	12 068 44–S	1	Muffler
2	25 072 04–S	2	Stud M8x1.25x33
3	12 041 03–S	1	Gasket–Exhaust Manifold
4	X–25–78–S	1	Washer–Plain,1/4
5	M–545016–S	1	Screw–HF, M5x0.8x16
6	M–841080–S	2	Nut–HF, M8x1.25
7	M–645016–S	2	Screw–HF, M6x1.0x16
8	M–645025–S	2	Screw–HF, M6x1.0x25
9	12 126 71–S	1	Bracket–Muffler

Ref. No.	Part No.	Qty.	Description

Obtain Parts From Kohler

Maintenance Record

Date								


TORO®