Form Number 3329-826

# Sulky
## Fixed-Deck Mid-Size Mowers

**Model No. 30109 - 230000001 and up.**

# Parts Catalog

### Ordering Replacement Parts
To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers
Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by **6:**1, the valve by **6:**2, and the wheel by **6:**3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

**©The Toro Company - 2003**
**All Rights Reserved**

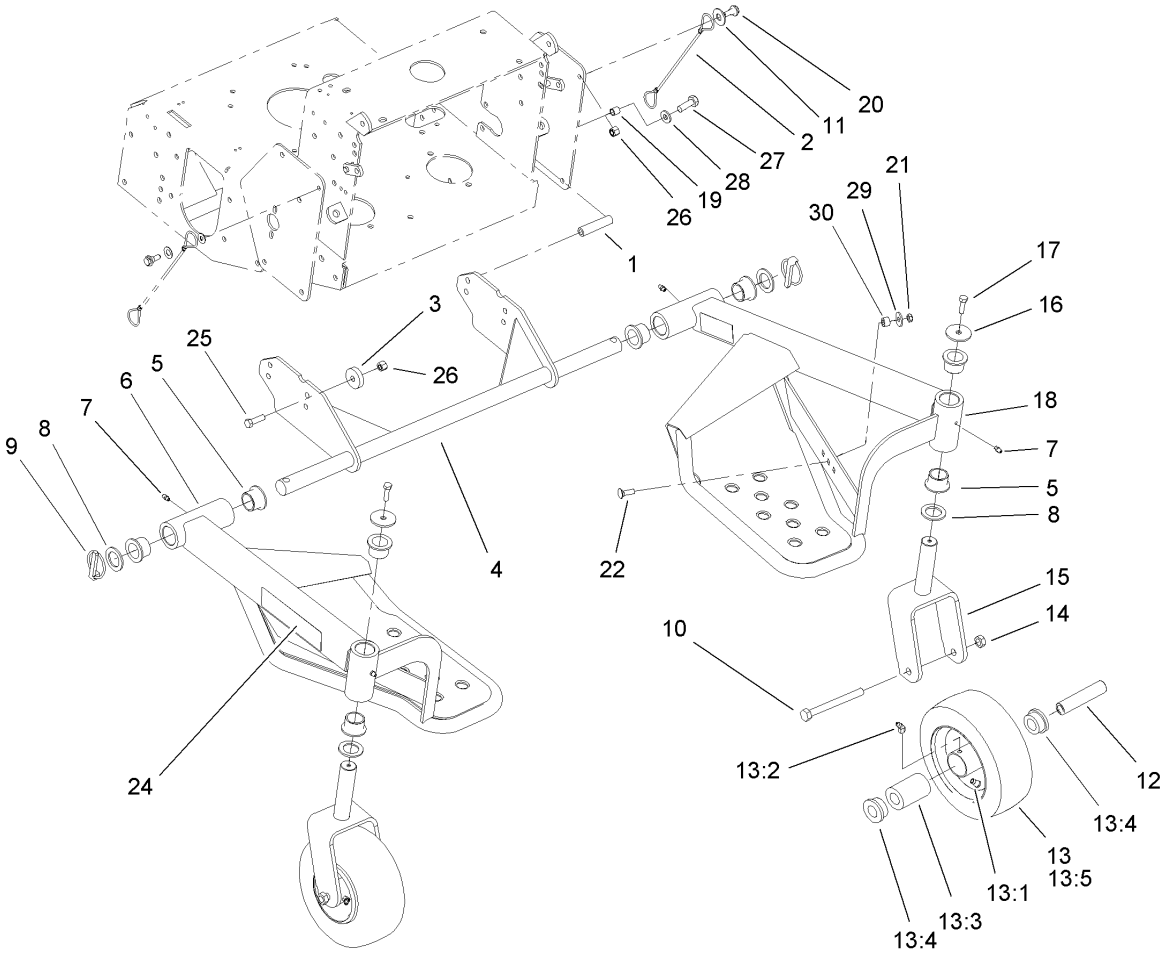


# Sulky Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 106-0877 | 4 | Spacer-Shield (Used On Hydro Units Only) |
| 2 | 93-9595 | 2 | Lanyard |
| 3 | 106-0861 | 4 | Spacer (Used On Gear Drive Units Only) |
| 4 | 106-0866-01 | 1 | Axle |
| 5 | 94-1291 | 8 | Bushing |
| 6 | 104-8407-01 | 1 | LH Floor Plate ASM |
| 7 | 302-5 | 4 | Fitting-Grease |
| 8 | 3-6781 | 4 | Washer-Thrust |
| 9 | 283-71 | 2 | Pin-Lynch |
| 10 | 325-19 | 2 | Screw-HH |
| 11 | 3256-6 | 2 | Washer-Flat |
| 12 | 100-6453 | 2 | Bushing-Spanner |
| 13 | 100-6451 | 2 | Castor Wheel ASM |
| 13:1 | 232-27 | 1 | Stem-Valve |
| 13:2 | 302-11 | 1 | Fitting-Lube, 45 DEG |
| 13:3 | 83-4740 | 1 | Bearing |
| 13:4 | 62-5580 | 2 | Bearing-Outside |
| 13:5 | 100-6452 | 1 | Tire-Tubeless |
| 14 | 32153-5 | 2 | Nut-Lock |
| 15 | 104-8402-01 | 2 | Castor ASM |
| 16 | 63-7400 | 2 | Washer-Rebound |
| 17 | 322-16 | 2 | Screw-HH |
| 18 | 104-2743-01 | 1 | RH Floor Plate ASM |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 19 | 105-4820 | 1 | Spacer-Short (Used On Hydro Units Only) |
| 20 | 614672 | 2 | Bolt-Shoulder |
| 21 | 3296-47 | 2 | Nut-Lock, NI |
| 22 | 3230-2 | 2 | Bolt-CARR |
| 24 | 104-8477 | 2 | Decal |
| 25 | 323-7 | 4 | Screw-HH (Used On Gear Drive Units Only) |
| 26 | 3296-39 | 6 | Nut-Lock, NI |
| 27 | 323-23 | 2 | Screw-HH |
| 28 | 3256-3 | 2 | Washer-Flat |
| 29 | 1-603716 | 2 | Washer-Friction |
| 30 | 98-4695 | 2 | Spacer |