Form No. 3470-818 Rev B

TORO®

Count on it.

Parts Catalog

TX 700

Narrow Track Compact Tool Carrier

Model No. 22750—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3470-818 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly 4
Main Frame Assembly No. 163-3244 6
Track Assembly 8
RH Track Assembly No. 139-7293 10
LH Track Assembly No. 139-7294 12
Parking Brake Assembly 14
Traction Hydraulic Assembly 16
Radiator and Air Cleaner Assembly 18
Air Cleaner Assembly No. 117-9989 20
Engine and Pump Assembly 22
Hydraulic Pump Assembly No. 140-3048 24
Hydraulic Assembly 26
Traction Control Assembly No. 140-2940 28
Control Valve Assembly No. 145-3279 30
Loader Arm Assembly 32
Loader Arm Assembly No. 145-3225 34
Hydraulic Cylinder Assembly No. 140-2974 36
Loader Arm Hydraulic Assembly 38
Quick Attach Assembly 40
Quick Attach Assembly No. 132-8418 42
Hydraulic Cylinder Assembly No. 145-3202 44
Fuel Assembly 46
Fuel Tank Assembly No. 140-5762 48
Hood and Manual Tube Assembly 50
Platform Assembly 52
Electrical Assembly 54
Main Wire Harness Assembly No. 122-3946 56
Attachments and Accessories 58

© 2025—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame Assembly

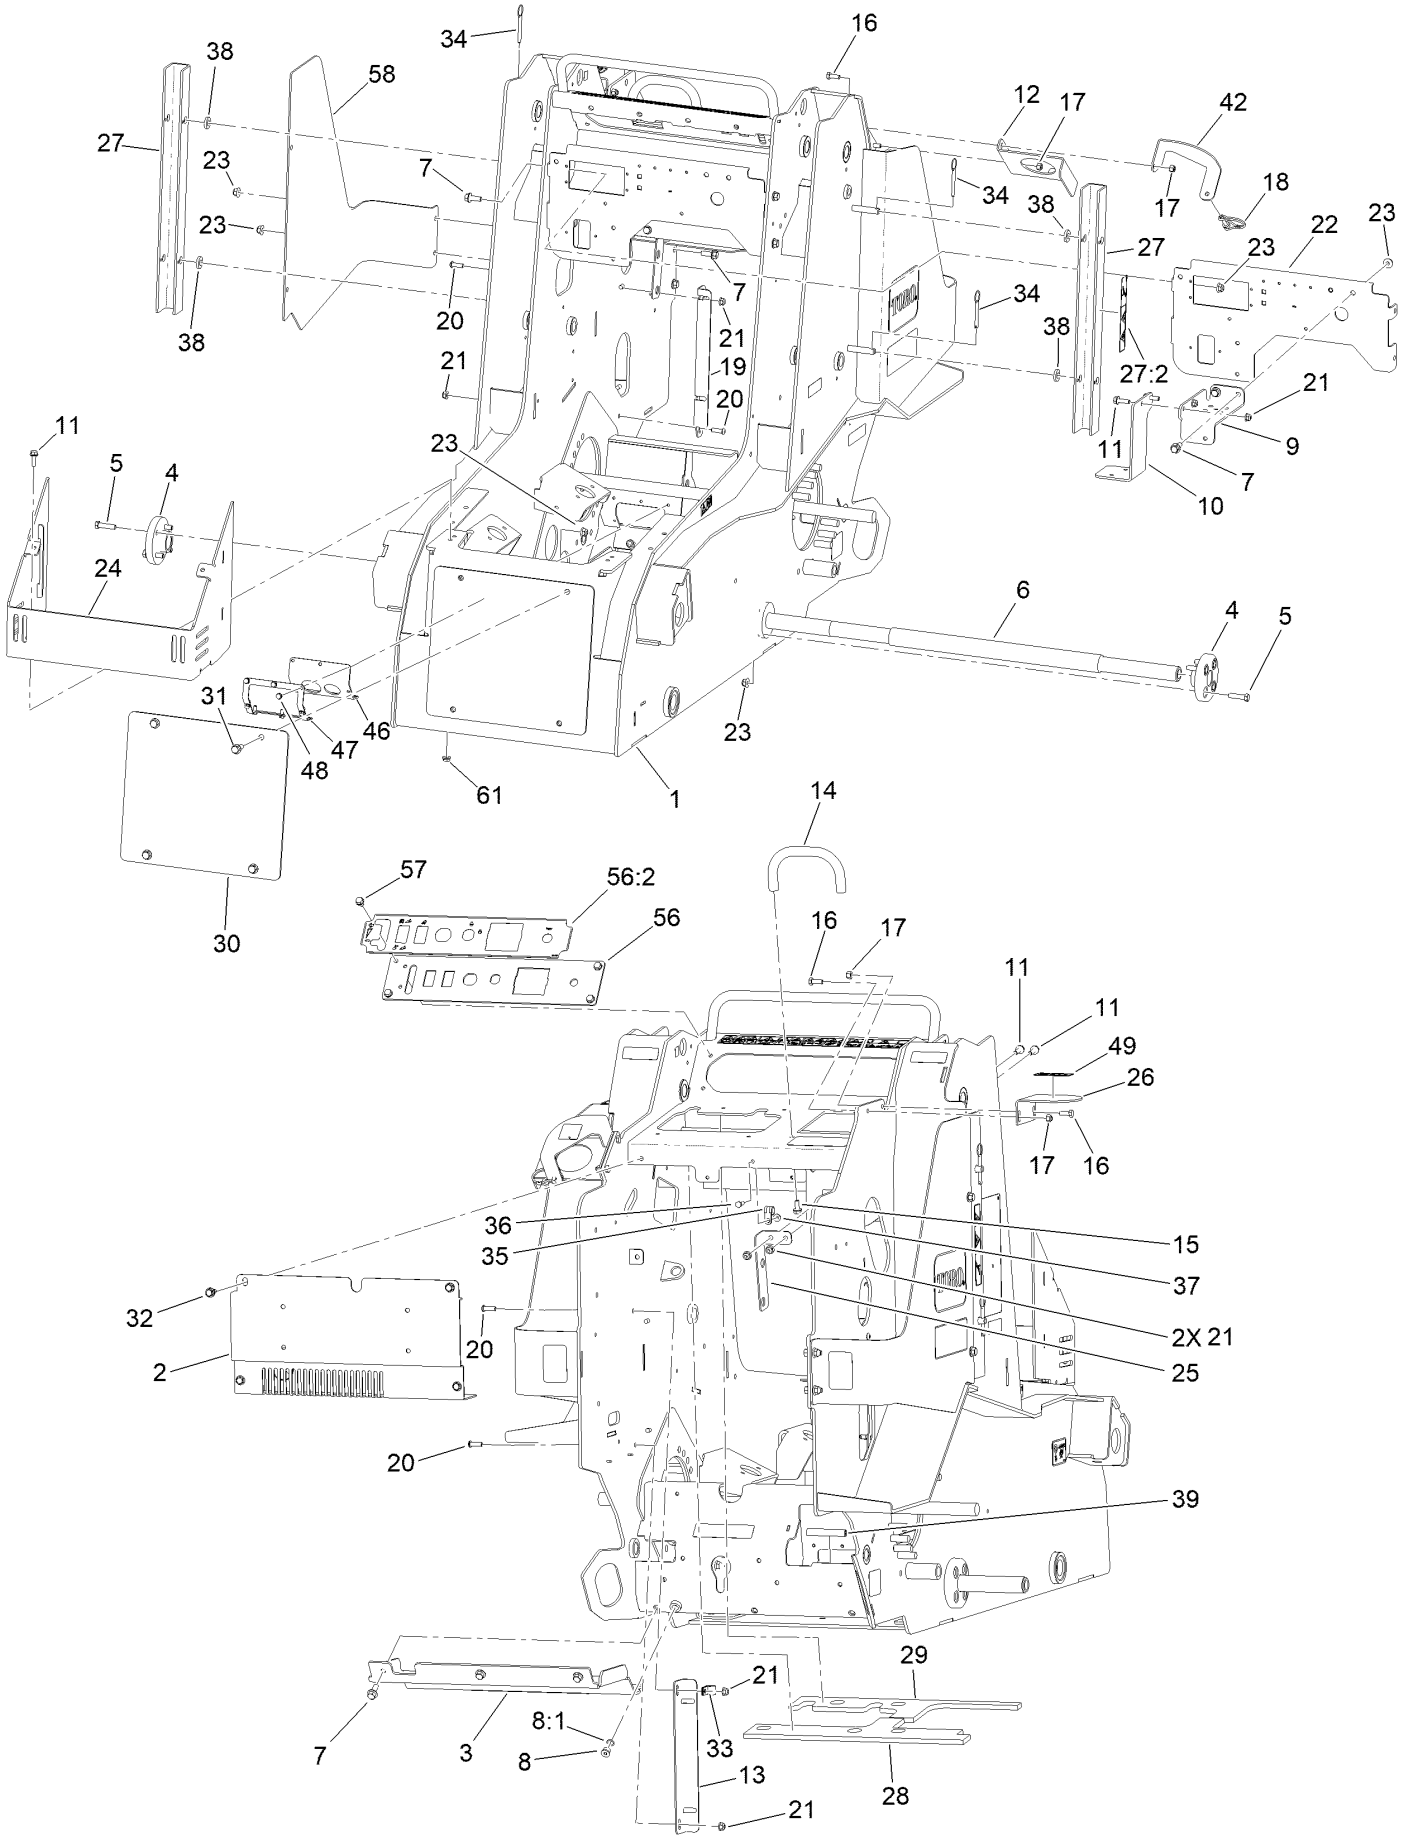

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-3244	1	Main Frame ASM
2	144-6085-05	1	Air Box [blk-Txt]
3	147-9024-01	1	Plate-Bottom, Frame
4	132-9074	2	Hub-Shaft
5	323-8	8	Screw-HH
6	125-0425	1	Shaft-Track
7	3234-42	13	Screw-HHF
8	353-989	1	Plug-Hex, Hollow
8:1	237-42	1	O-Ring
9	145-3332-01	1	Bracket-Tank
10	140-2923-01	1	Bracket-Tank
11	3234-17	8	Screw-HHF
12	144-6068-05	1	Bracket-Fuel
13	140-5734-03	1	Angle
14	112-2620	1	Bar-Reference
15	3234-5	2	Screw-HHF
16	322-4	4	Screw-HH
17	3296-29	4	Nut-Lock, NI
18	145-3228	1	Pin-Lynch
19	140-5735-03	1	Angle
20	109-4872	4	Screw-HSH
21	104-8300	8	Nut-HF, NI
22	161-6934-01	1	Plate-Console Cover, Front
23	104-8301	18	Nut-HF, NI
24	161-6914-05	1	Shield-Front, ASM
25	140-2924-03	1	Bracket-Tank
26	147-9010-05	1	Cap-Cover
27	130-5315	2	Arm-Locking
27:2	115-4858	1	Decal-Danger
28	163-3209	1	Foam-Heat Shield
29	163-3208	1	Foam-Heat Shield
30	163-3239-01	1	Cover-Front
31	3234-24	4	Screw-HHF
32	105-6245	4	Screw-Tapping
33	92-6064	1	Clamp-R
34	108-0094	4	Pin-Cotterless
35	2412-134	1	Clamp-R
36	321-5	1	Screw-HH
37	32128-33	1	Nut-HF
38	83-1470	4	Washer-Neoprene
39	144-6078	1	Trim
42	130-5317	1	Plate-Lock, Fuel Cap, RH
46	145-3270	1	Air - Guard
47	145-3271	1	Retaining - Ring
48	32144-4	7	Screw-HWH
49	125-8483	1	Decal-HYD Fluid
56	163-3242	1	Plate-Console (Service)
56:2	161-9441	1	Decal-Controls
57	700057	4	Screw-HWH
58	163-3246	1	Wrap-Tank, RH
61	32128-20	4	Nut-HF


Main Frame Assembly No. 163-3244

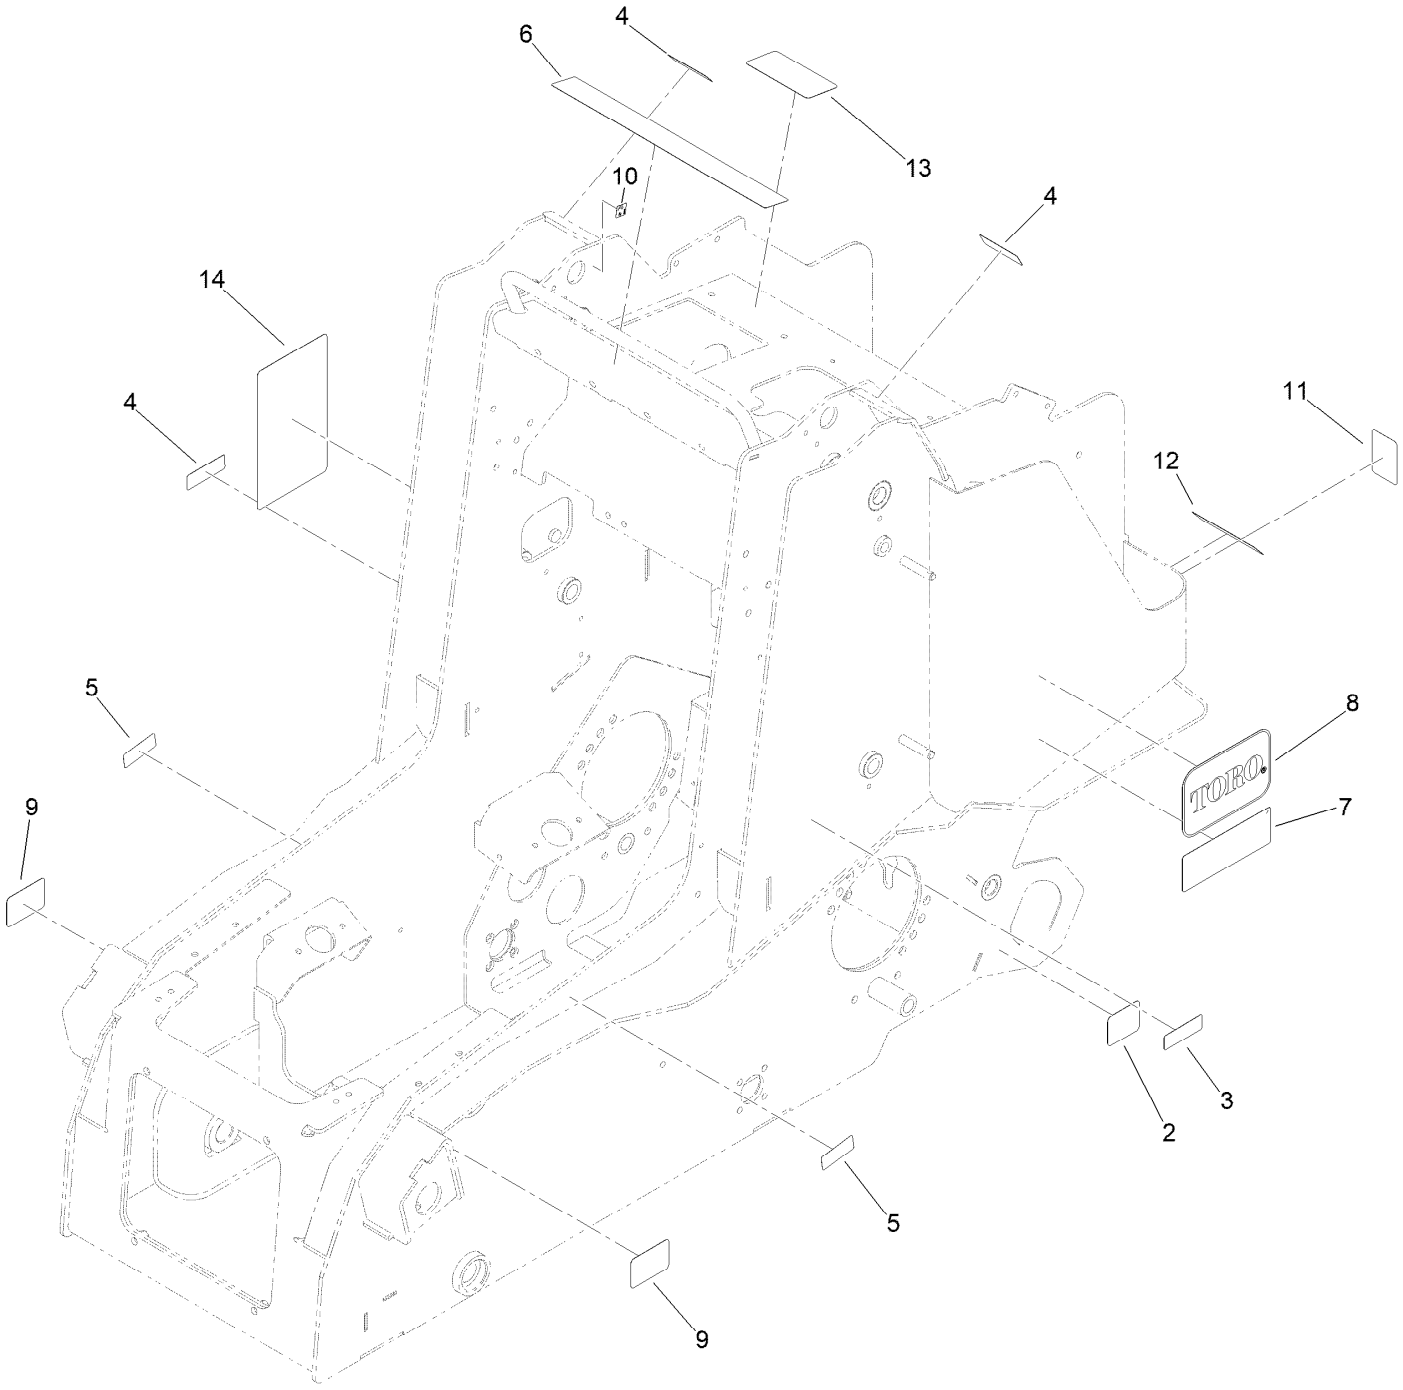

Main Frame Assembly No. 163-3244 (continued)

Ref.	Part Number	Qty.	Description
2	125-6694	2	Decal-Tie Down
3	133-8062	1	Decal-Spark Arrestor
4	120-0625	4	Decal-Warning
5	115-2047	2	Decal-Surface, Hot
6	145-0637	1	Decal-Safety
7	140-5790	1	Decal-Dingo Tx700
8	145-0609	1	Decal-Toro Logo
9	125-6139	2	Decal-Lift/Tie Down
10	93-9084	2	Decal-Point, Lift
11	100-4627	1	Reflector
12	131-0709	1	Decal-Parking Brake
13	161-9449	1	Decal-Awd
14	163-8679	1	Decal-Service


Track Assembly

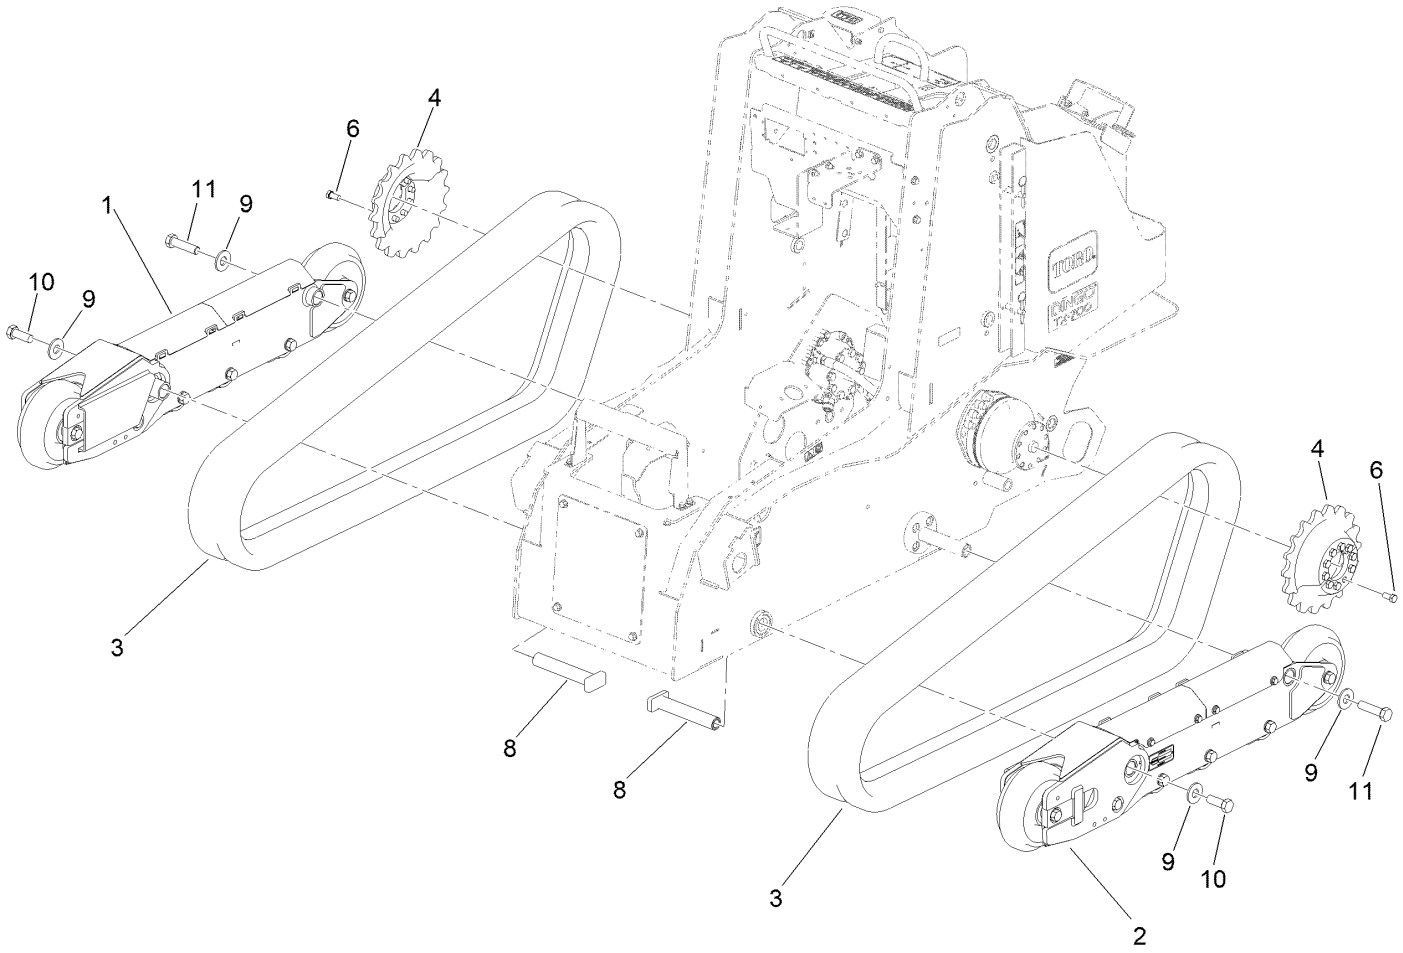

Track Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-7293	1	Track ASM-RH
2	139-7294	1	Track ASM-LH
3	138-0804	2	Track-Narrow
4	145-4463	4	Sprocket-Drive, Nt
6	33116-025	20	Screw-HH
8	145-3322	2	Pin-Track
9	99-2659	4	Washer
10	AU426-1232	2	Bolt
11	328-25	2	Screw-HH


RH Track Assembly No. 139-7293

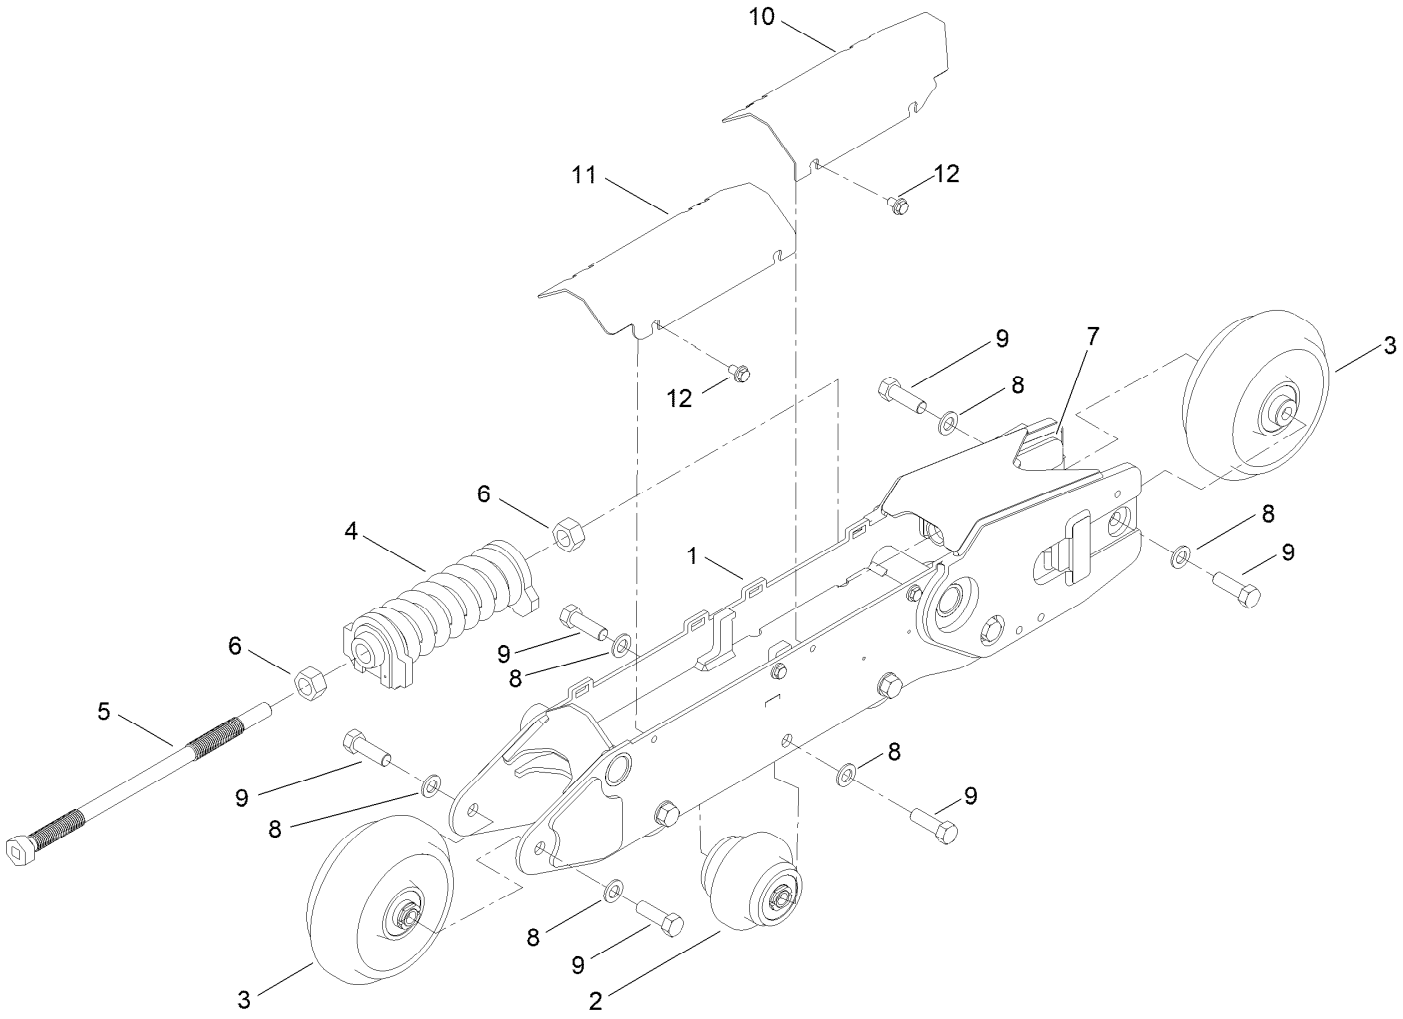

RH Track Assembly No. 139-7293 (continued)

Ref.	Part Number	Qty.	Description
1	139-7292	1	Frame-Track RH
2	137-8808	4	Wheel ASM,
3	137-8807	2	Tensioner Wheel ASM
4	140-5872	1	Kit-Spring Tension
5	139-7298	1	Screw-Tensioner
6	3217-15	2	Nut-Hex
7	139-7301	1	Yoke-Tensioner
8	139-7310	12	Washer
9	111-3484	12	Screw-HH
10	139-7311	1	Plate-Cover RH
11	139-7312	1	Plate-Cover RH
12	63-11-019	4	Screw-HHF


LH Track Assembly No. 139-7294

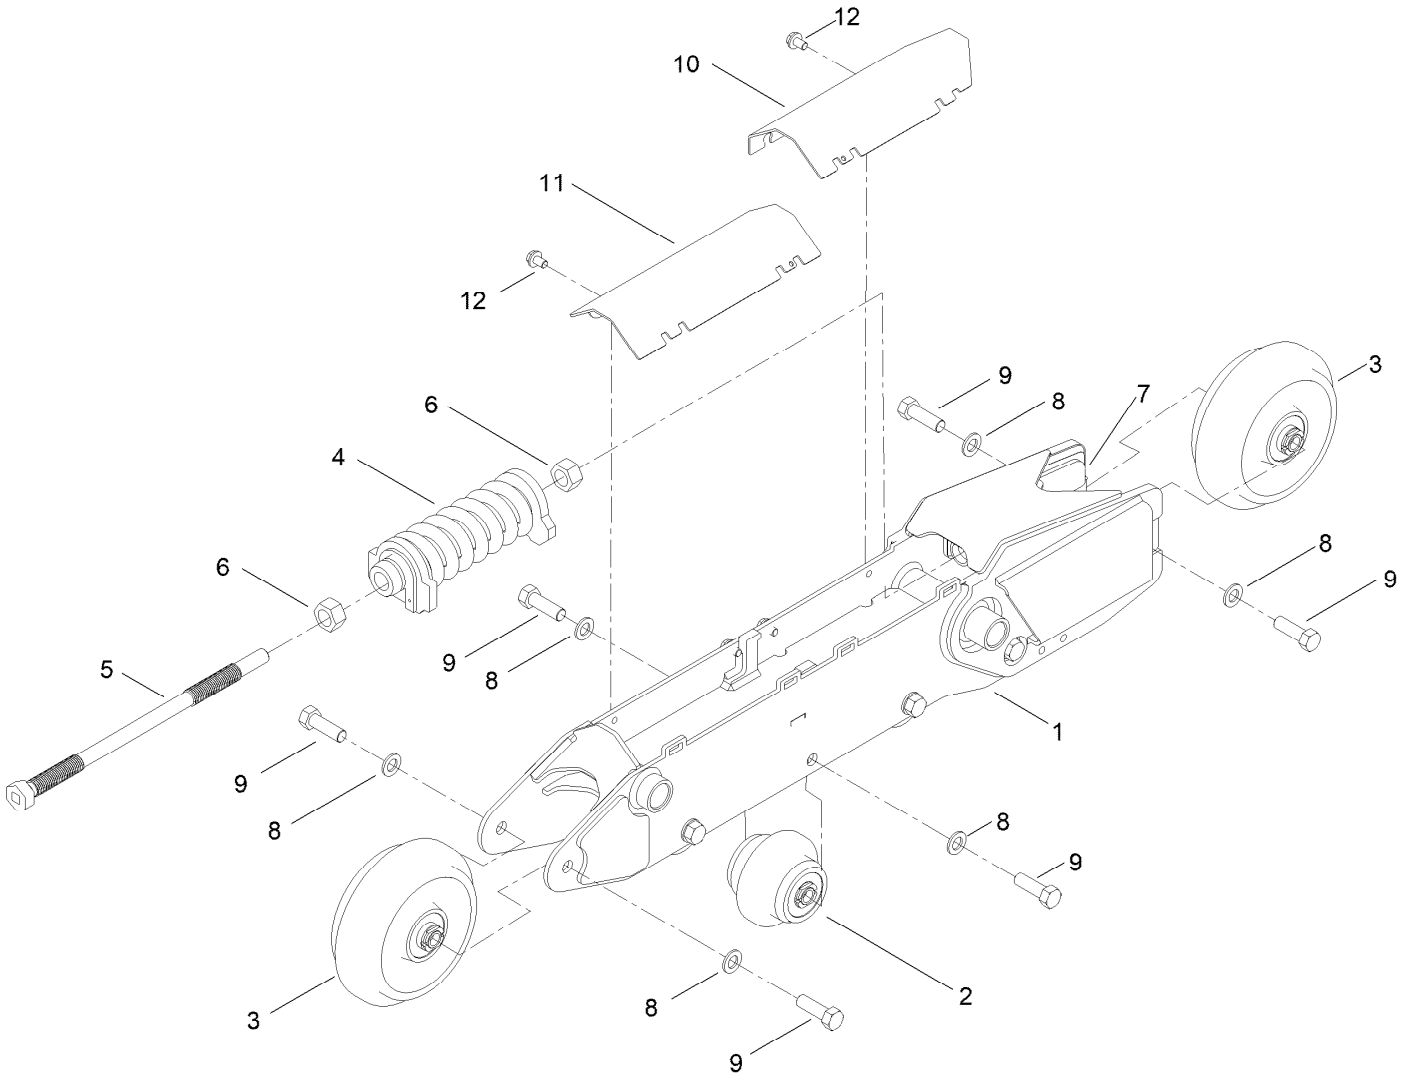

LH Track Assembly No. 139-7294 (continued)

Ref.	Part Number	Qty.	Description
1	139-7303	1	Frame-Track LH
2	137-8808	4	Wheel ASM,
3	137-8807	2	Tensioner Wheel ASM
4	140-5872	1	Kit-Spring Tension
5	139-7298	1	Screw-Tensioner
6	3217-15	2	Nut-Hex
7	139-7301	1	Yoke-Tensioner
8	139-7310	12	Washer
9	111-3484	12	Screw-HH
10	139-7304	1	Plate-Cover LH
11	139-7305	1	Plate-Cover LH
12	63-11-019	4	Screw-HHF


Parking Brake Assembly

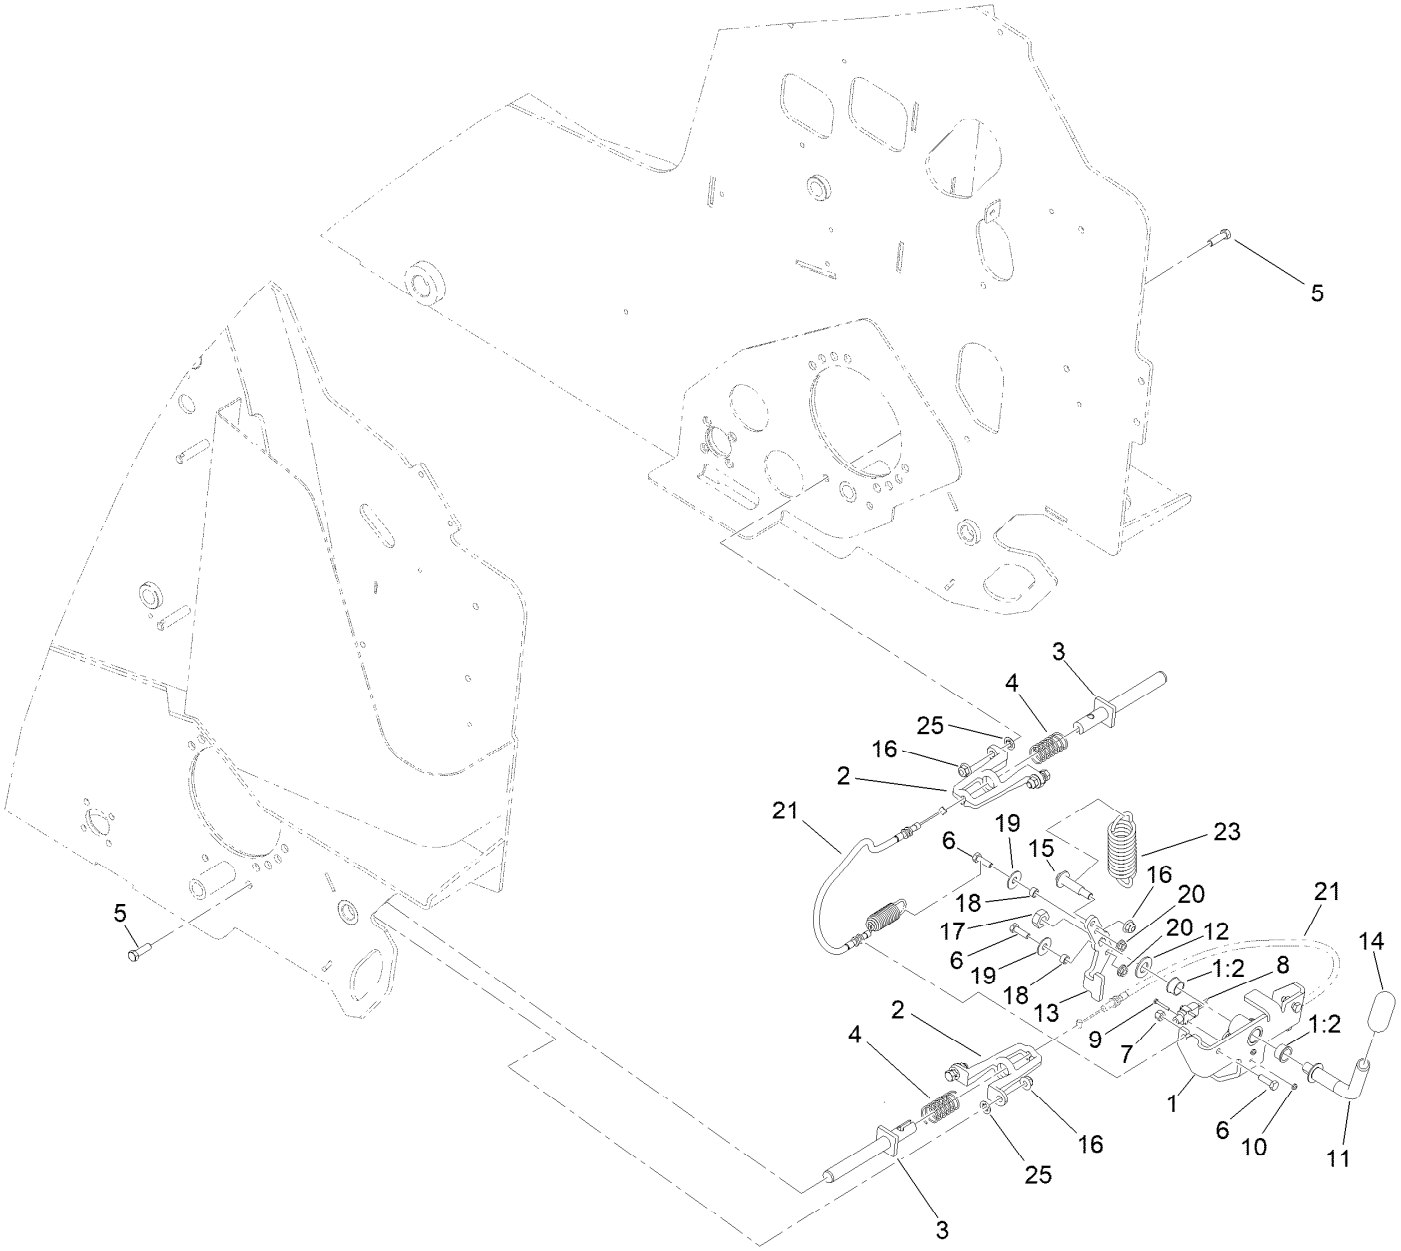

Parking Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-3171	1	Brake Bracket ASM
1:2	256-252	2	Bearing-Flange
2	138-0207-03	2	Mount-Pin [black]
3	144-2137	2	Brake Rod ASM
4	125-0344	2	Spring-Compression
5	323-7	4	Screw-HH
6	323-5	4	Screw-HH
7	3296-29	2	Nut-Lock, NI
8	95-8900	1	Switch
9	32105-9	2	Screw-HH
10	3296-9	2	Nut-Hex
11	133-0232	1	Lever-Brake
12	3256-27	1	Washer-Flat
13	138-0205-0P	1	Plate-Brake Linkage
14	110-1037	1	Grip-Handle
15	136-7198	1	Bolt-Shoulder
16	104-8301	5	Nut-HF, NI
17	3296-33	1	Nut-Lock, NI
18	85-9120	2	Spacer-Pivot, Tilt
19	52-2860	2	Washer
20	32128-20	2	Nut-HF
21	136-4789	2	Cable-Brake
23	136-4787	1	Spring-EXT
25	107-3154	4	Nut-Push


Traction Hydraulic Assembly

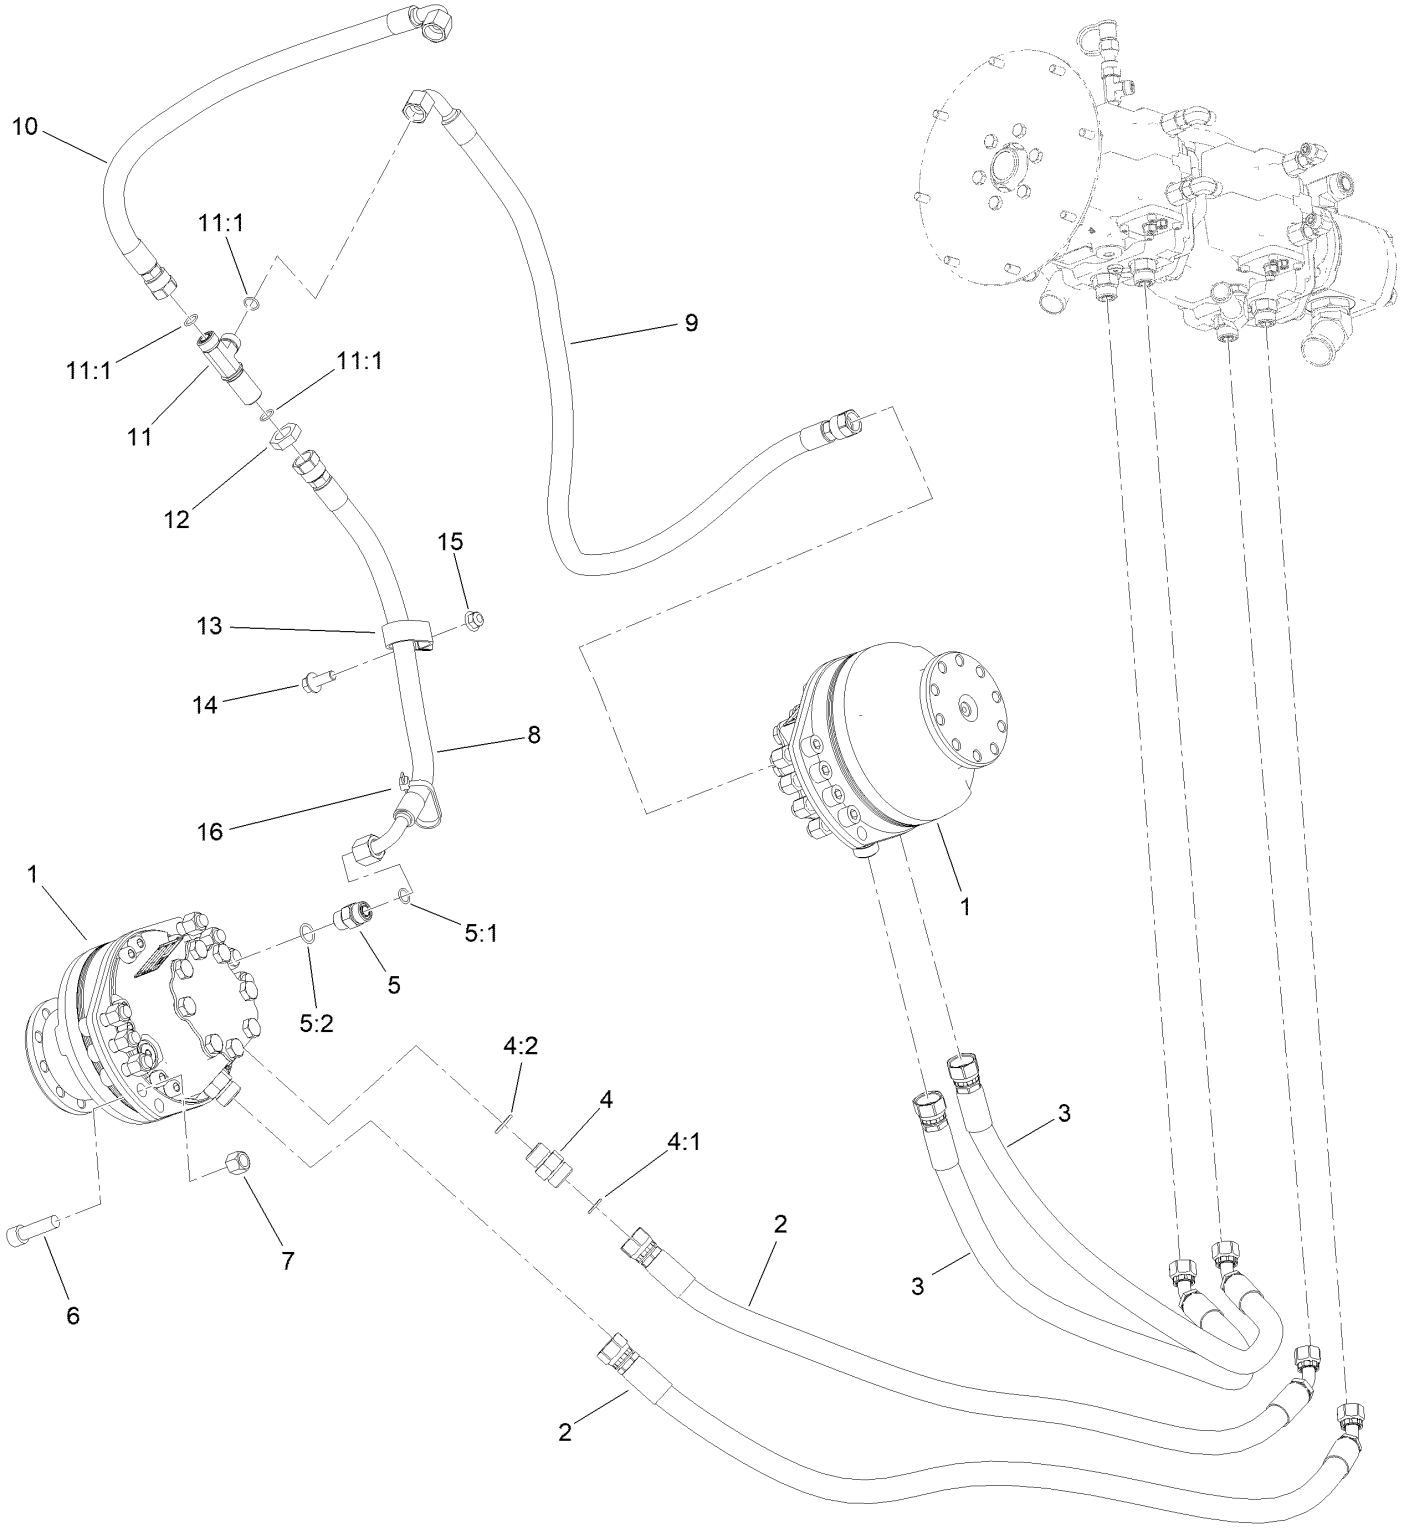

Traction Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-4427	2	Wheelmotor ASM
2	140-2874	2	Hose ASM-HYD
3	140-2913	2	Hose ASM-HYD
4	340-7	4	Fitting-Straight
4:1	237-65	1	O-Ring
4:2	237-80	1	O-Ring
5	340-4	2	Fitting-Straight
5:1	237-30	1	O-Ring
5:2	237-79	1	O-Ring
6	131-0661	16	Screw-HSH
7	3296-23	16	Nut-Lock, NI
8	145-3310	1	Hose ASM-HYD
9	145-3311	1	Hose ASM-HYD
10	145-3312	1	Hose ASM-HYD
11	340-121	1	Fitting-Tee
11:1	237-30	3	O-Ring
12	340-127	1	Nut-Bulkhead
13	2412-137	1	Clamp-R, Double
14	3234-42	1	Screw-HHF
15	104-8301	1	Nut-HF, NI
16	3334-945	1	Tie-Cable

Radiator and Air Cleaner Assembly

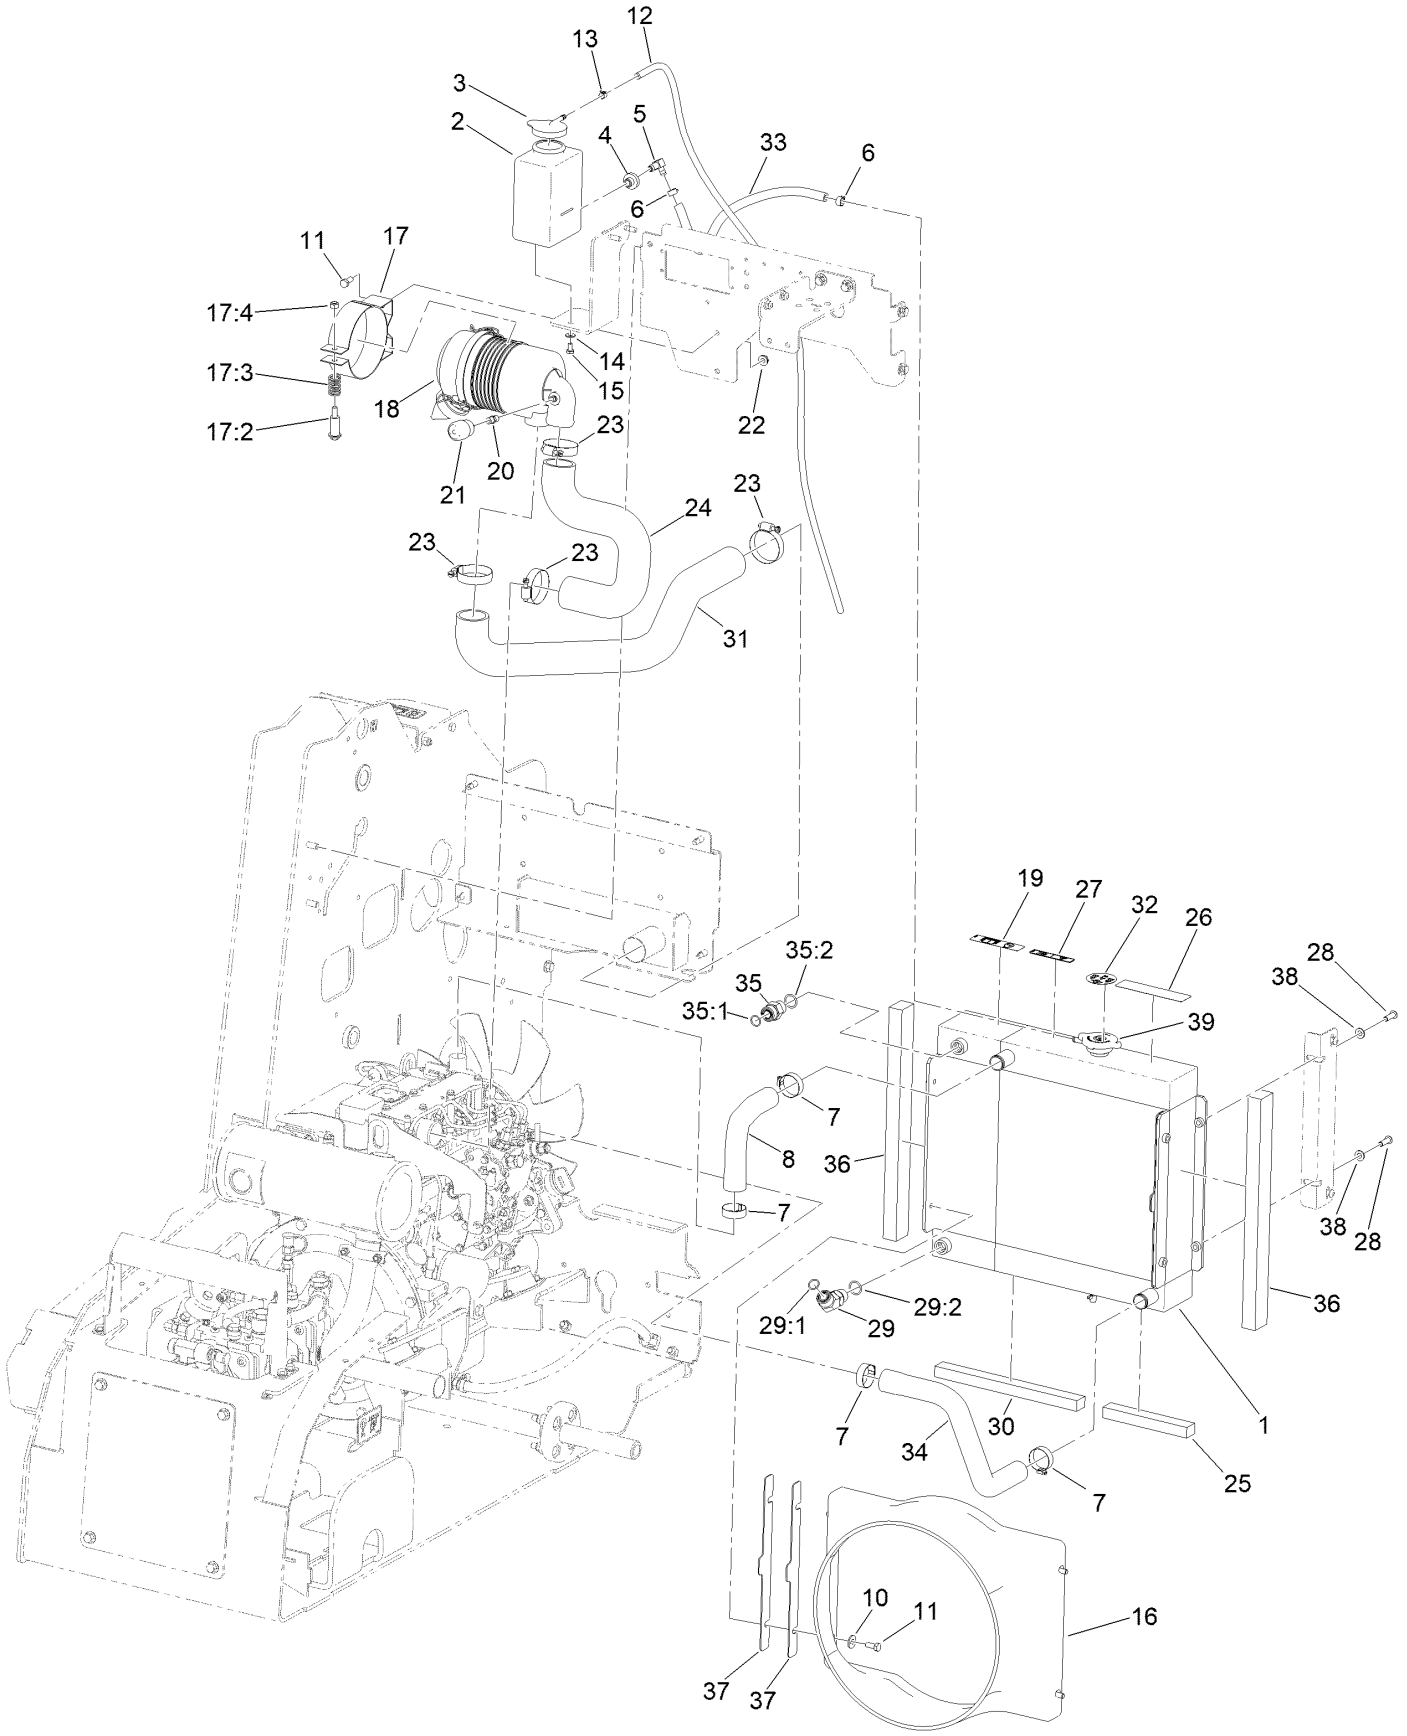


Radiator and Air Cleaner Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-2852	1	Rad/Oil Cooler
2	1-643163	1	Tank-Overflow
3	1-643164	1	Cap-Tank, Overflow
4	46-6560	1	Bushing
5	46-6550	1	Fitting-Elbow, 90 DEG
6	92-2379	2	Clamp-Hose
7	2412-34	4	Clamp-Hose
8	140-2858	1	Hose-Radiator, Upper
10	3256-3	4	Washer-Flat
11	322-3	6	Screw-HH
12	108-9698	1	Hose-Fuel
13	2412-80	1	Clamp-Hose
14	3256-22	2	Washer-Flat
15	321-2	2	Screw-HH
16	140-5745	1	Shroud-Fan
17	93-2191	1	Air Cleaner Mounting Band ASM
17:2	94-3653	1	Bolt
17:3	94-3654	1	Spring
17:4	33024-00	1	Nut-Lock, NI
18	117-9989	1	Air Cleaner ASM
19	115-4865	1	Decal-Fill, Radiator
20	105-4292	1	Nipple-Pipe
21	104-3563	1	Indicator
21:1	94-1416	1	Adapter-Indicator ●
22	32128-20	2	Nut-HF
23	2412-92	4	Clamp-Hose
24	140-2856	1	Hose-Air, Inlet
25	144-2132	1	Foam-Radiator Bottom LH
26	93-7814	1	Decal-Danger
27	93-6681	1	Decal-Warning, Fan
28	109-4872	4	Screw-HSH
29	340-14	1	Fitting-HYD, 45 DEG
29:1	237-65	1	O-Ring
29:2	237-80	1	O-Ring
30	144-2131	1	Foam-Radiator Bottom RH
31	144-6082	1	Hose-Air, Inlet
32	117-3276	1	Decal-Danger
33	110-3257	1	Hose-Fuel
34	140-2857	1	Hose-Radiator, Lower
35	340-7	1	Fitting-Straight
35:1	237-65	1	O-Ring
35:2	237-80	1	O-Ring
36	144-2130	2	Foam-Radiator Side
37	145-3326	2	Spacer-Radiator
38	3256-23	2	Washer-Plain
39	161-9418	1	Cap-Radiator

● Not illustrated


Air Cleaner Assembly No. 117-9989

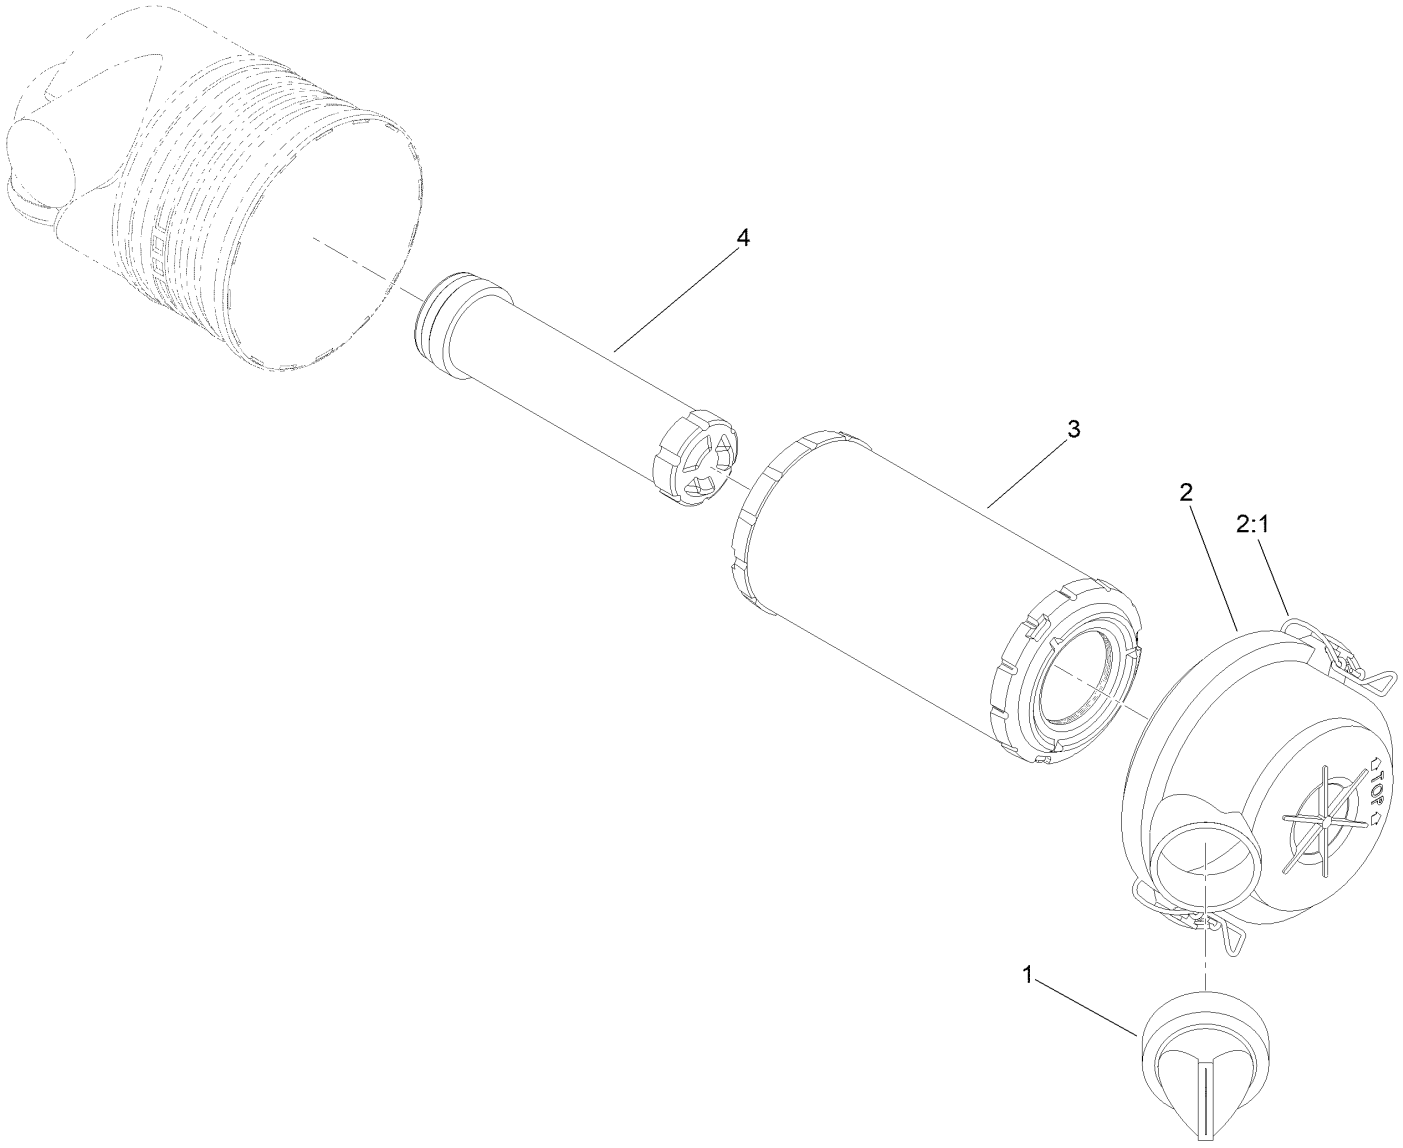

Air Cleaner Assembly No. 117-9989 (continued)

Ref.	Part Number	Qty.	Description
1	87-9400	1	Valve-Vacuator
2	94-3652	1	Cover ASM
2:1	1-643283	2	Latch-Cleaner, Air
3	108-3811	1	Filter-Air V-Twin HD
4	98-2982	1	Filter-Element, Safety


Engine and Pump Assembly

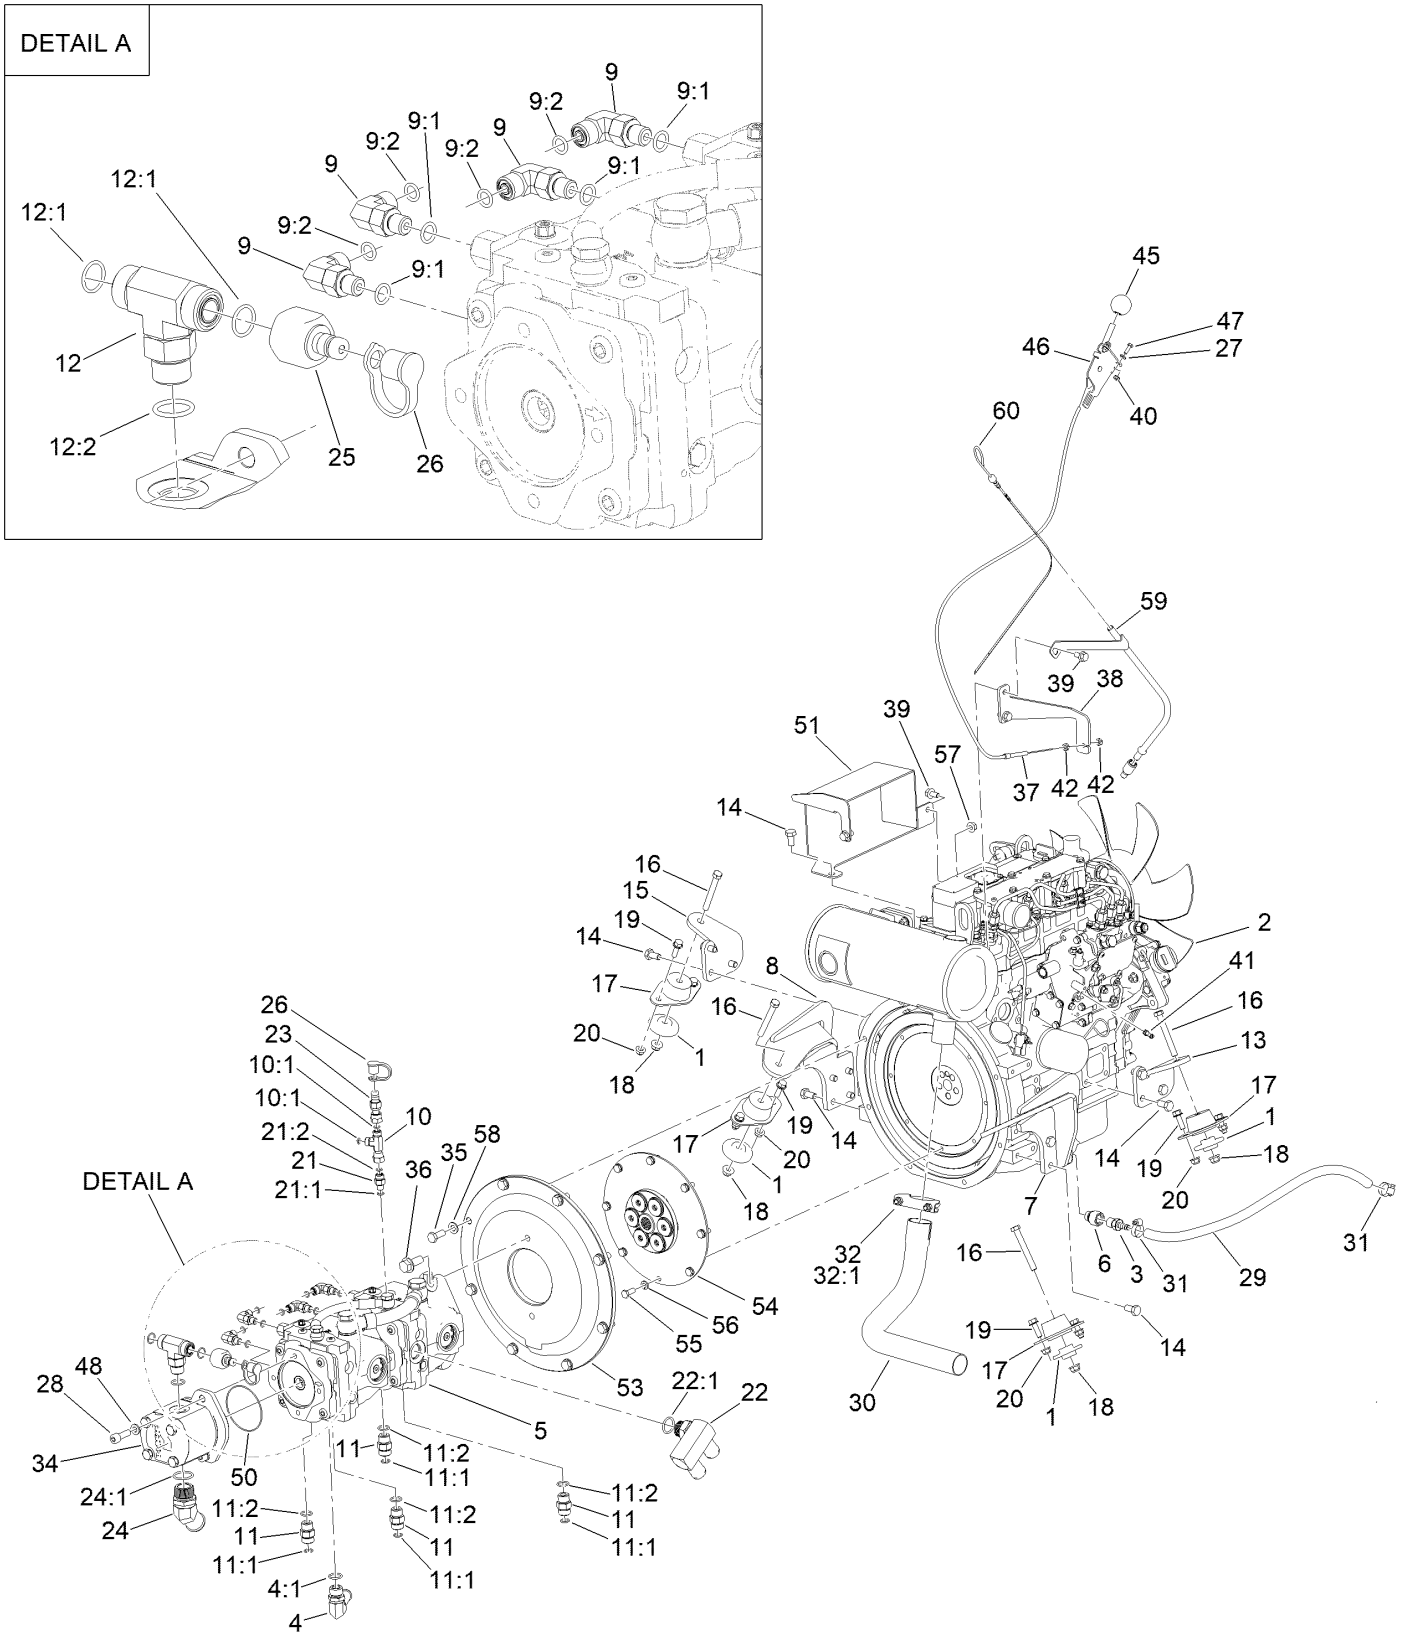

Engine and Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-6462	4	Support-Isolator
2	145-3262	1	Engine-Yanmar 3Tnv80F-Nxdtr2
3	1-513200	1	Fitting,Male
4	87-8170	1	Fitting-90
4:1	237-80	1	O-Ring
5	145-3348	1	Pump - Tandem
6	139-2218	1	Adaptor-STR
7	145-3341-03	1	Left Hand Mount [black]
8	145-3340-03	1	Right Hand Mount [black]
9	340-132	4	Fitting-Elbow, 90 DEG
9:1	237-78	1	O-Ring
9:2	237-21	1	O-Ring
10	340-151	1	Fitting-Tee
10:1	237-21	2	O-Ring
11	340-4	4	Fitting-Straight
11:1	237-30	1	O-Ring
11:2	237-79	1	O-Ring
12	340-93	1	Tee-Adapter
12:1	237-65	2	O-Ring
12:2	237-80	1	O-Ring
13	140-2771-03	1	Bracket-Engine Mount, Rear LH
14	33115-020	15	Screw-HH
15	140-2772-03	1	Bracket-Engine Mount, Rear RH
16	323-14	4	Screw-HH
17	120-6274	4	Mount-Engine
18	104-8301	4	Nut-HF, NI
19	3234-29	8	Screw-HHF
20	104-8300	8	Nut-HF, NI
21	340-92	1	Fitting-Straight
21:1	237-78	1	O-Ring
21:2	237-21	1	O-Ring
22	145-0621	1	Fitting
22:1	237-81	1	O-Ring
23	115-8886	1	Nipple-Test
24	136-6071	1	Fitting-45 Elbow
24:1	237-146	1	O-Ring
25	86-5860	1	Nipple
26	354-79	2	Cap-Dust
27	3256-51	2	Washer-Flat
28	AU862-10030	2	Screw-HSH
29	119-8562	1	Hose-Fuel
30	140-5731	1	Pipe-Exhaust
31	2412-108	2	Clamp-Worm
32	2112-6	1	Clamp-Muffler
32:1	3218-2	2	Nut-Hex Jam
34	140-3048	1	Pump-Hydraulic
35	33115-025	8	Screw-HH
36	147-6874	2	Screw-HF
37	144-7483	1	Throttle Cable
38	163-3236	1	Bracket-Throttle Cable
39	33104-016	4	Screw-HHF
40	32149-7	2	Nut-Keps
41	142-3886	1	Wire-Stop
42	3220-1	2	Nut-Jam
45	233-42	1	Knob
46	108-9730	1	Lever-Control
47	3290-134	2	Screw
48	107-1413	2	Washer-Hardened
50	353-949	1	O-Ring
51	145-3176-03	1	Shield-Exhaust [black]
53	145-3210-0P	1	Cover-Flywheel
54	126-6531	1	Coupler-Flywheel
55	33114-020	8	Screw-HH
56	3253-4	8	Washer-Lock
57	33004-00	1	Nut-HF
58	33095-00	8	Washer-Flat
59	163-5320	1	Dipstick
60	163-1158	1	Dipstick, Lub.Oil

Hydraulic Pump Assembly No. 140-3048

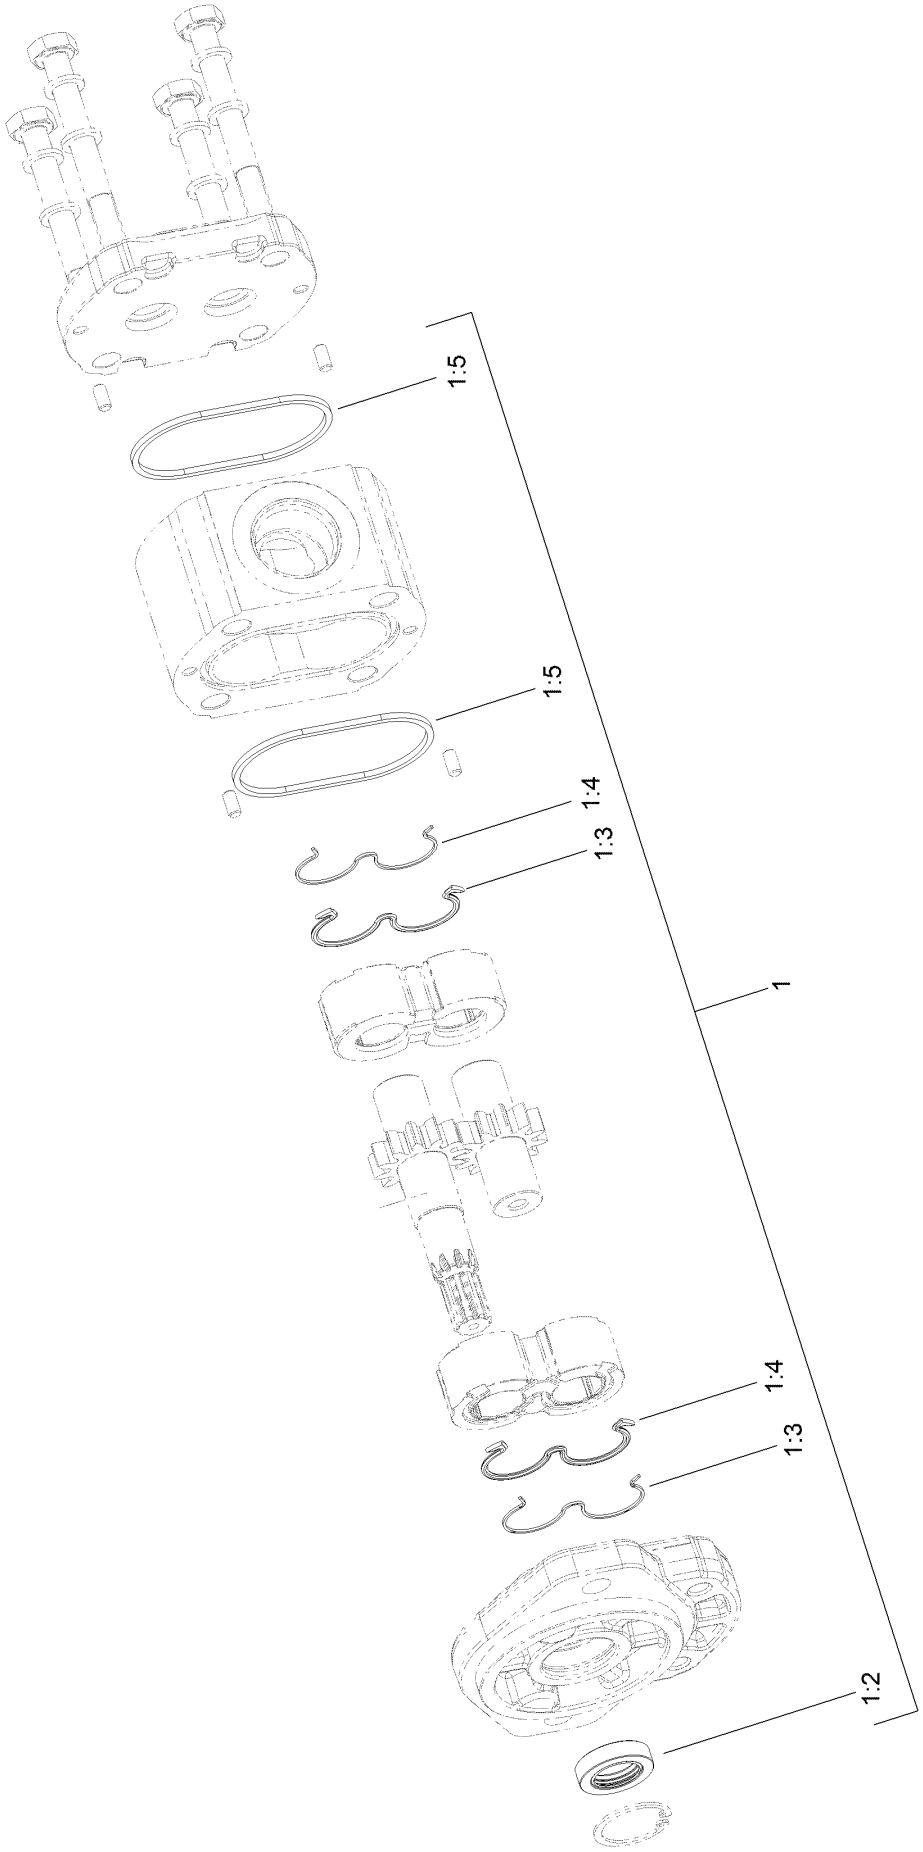


Hydraulic Pump Assembly No. 140-3048 (continued)

Ref.	Part Number	Qty.	Description
1	119-7135	1	Kit-Seal
1:2		1	Shaft Seal ●
1:3		2	Anti-Extrusion Seal ●
1:4		2	Seal ●
1:5		2	Seal Square Section ●

● Not serviced separately


Hydraulic Assembly

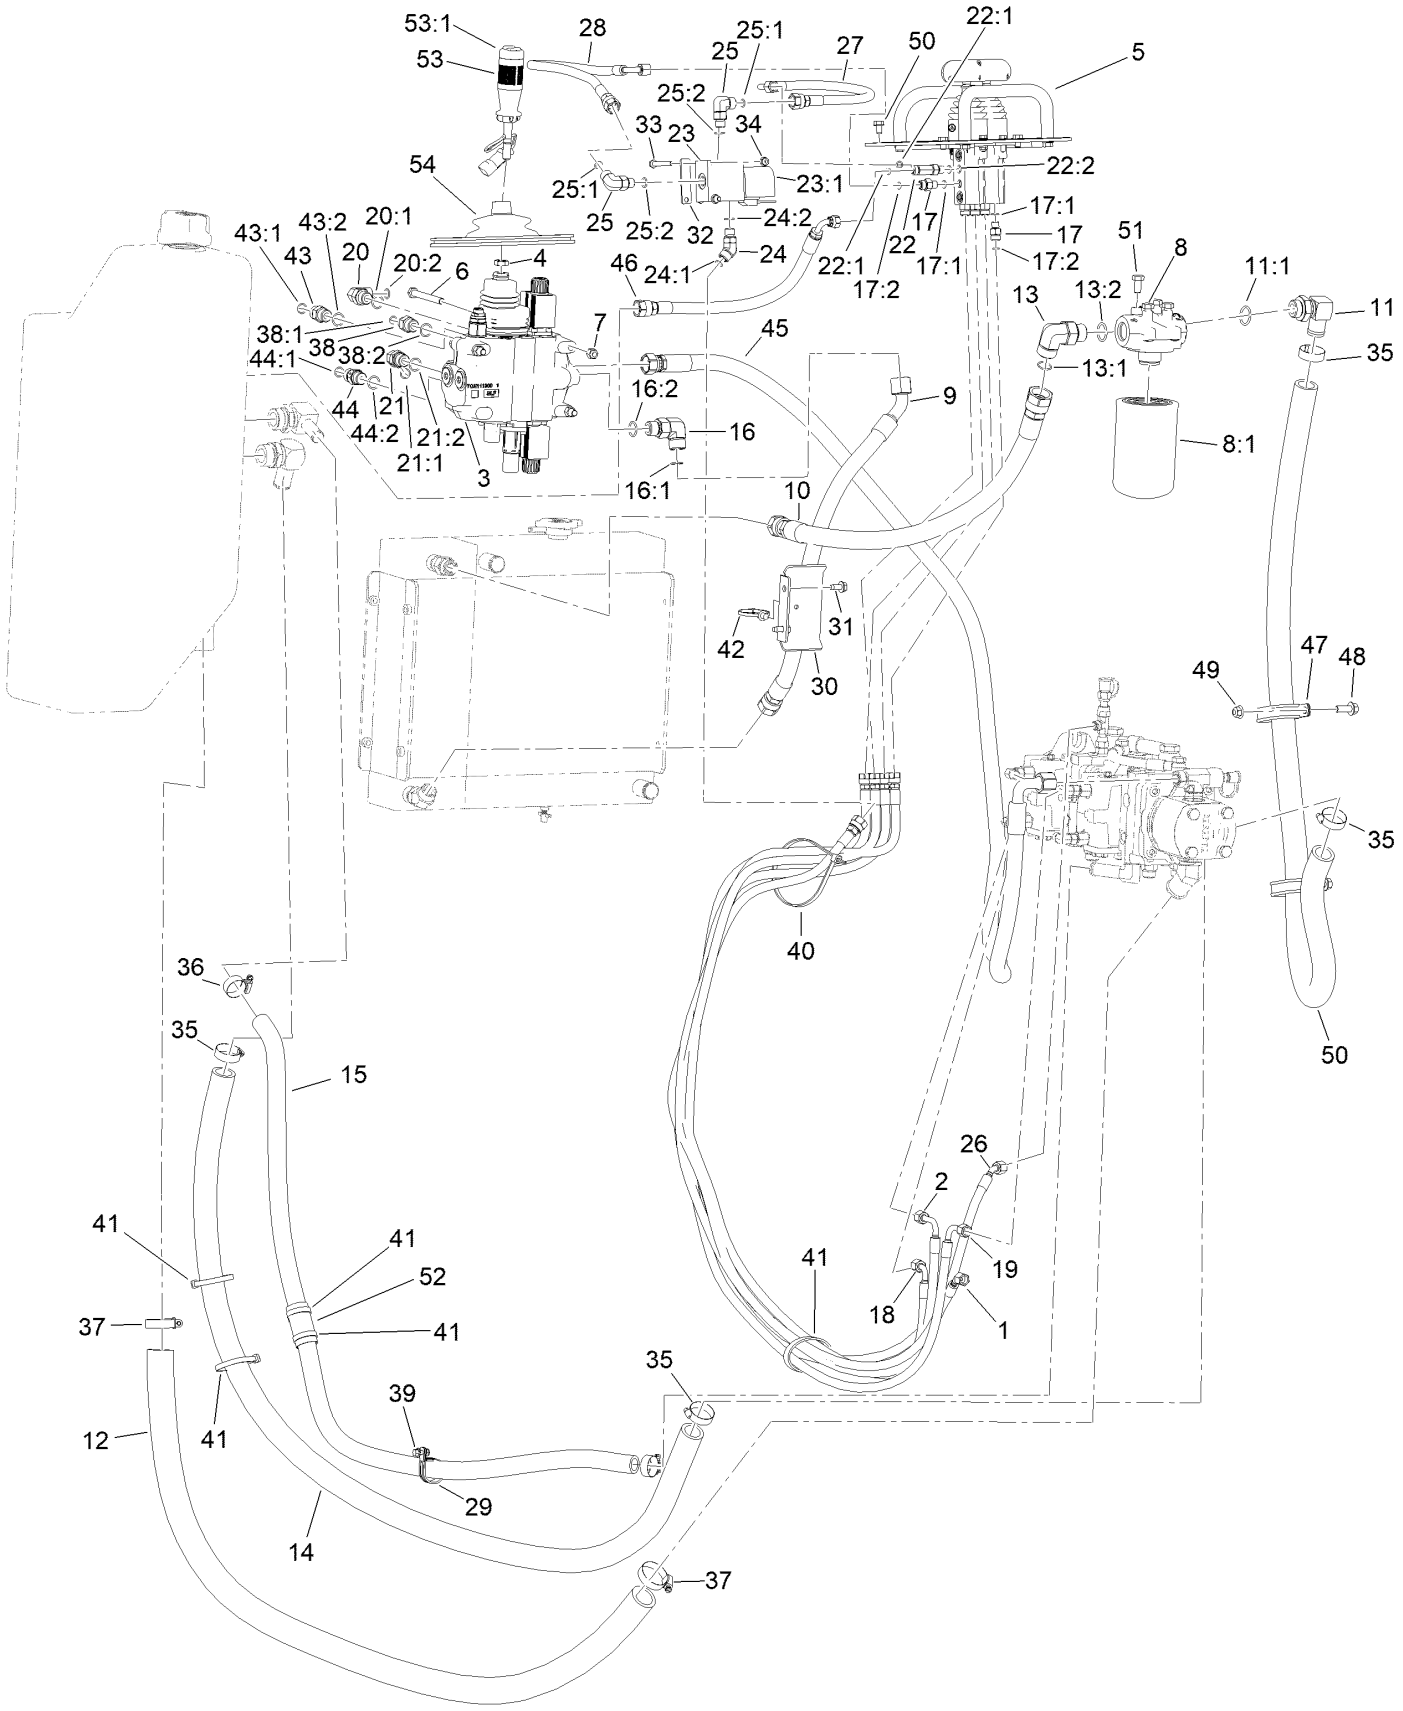

Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-3016	1	Hose ASM-HYD
2	140-3017	1	Hose ASM-HYD
3	161-9440	1	Loader Valve ASM
4	51-2070	1	Nut
5	140-2940	1	Traction Control ASM
6	323-15	3	Screw-HH
7	3296-39	3	Nut-Lock, NI
8	93-2242	1	Oil Filter ASM
8:1	75-1310	1	Filter-HYD
9	140-3012	1	Hose ASM-HYD
10	161-6852	1	Hose ASM-HYD
11	100-4202	1	Fitting-90
11:1	237-81	1	O-Ring
12	140-3023	1	Hose-Return
13	340-142	1	Fitting-Elbow, 90 DEG
13:1	237-58	1	O-Ring
13:2	237-81	1	O-Ring
14	140-3025	1	Hose-Return
15	140-3026	1	Hose-Return
16	340-17	2	Fitting-Elbow, 90 DEG
16:1	237-65	1	O-Ring
16:2	237-80	1	O-Ring
17	340-92	5	Fitting-Straight
17:1	237-78	1	O-Ring
17:2	237-21	1	O-Ring
18	140-3015	1	Hose ASM-HYD
19	140-3018	1	Hose ASM-HYD
20	340-98	1	Fitting-Elbow, 90 DEG
20:1	237-79	1	O-Ring
20:2	237-30	1	O-Ring
21	340-101	1	Fitting-HYD, 45 DEG
21:1	237-30	1	O-Ring
21:2	237-79	1	O-Ring
22	340-140	1	Fitting-Tee
22:1	237-21	2	O-Ring
22:2	237-78	1	O-Ring
23	158-627	1	Solenoid Valve
23:1	217-770	1	Solenoid Coil
24	340-87	1	Fitting-Elbow, 45 DEG
24:1	237-22	1	O-Ring
24:2	237-42	1	O-Ring
25	340-77	2	Fitting-Elbow, 90 DEG
25:1	237-22	1	O-Ring
25:2	237-42	1	O-Ring
26	140-3020	1	Hose ASM-HYD
27	140-3021	1	Hose ASM-HYD
28	140-3019	1	Hose ASM-HYD
29	119-9037	1	Clamp-R
30	161-2399-03	1	Plate-Hose
31	32144-70	2	Screw-HWHTF
32	145-3260	1	Plate, Backing
33	321-18	2	Screw-HH
34	104-7201	3	Nut-HF, NI
35	2412-34	4	Clamp-Hose
36	2412-129	2	Clamp-Hose
37	2412-111	2	Clamp-Hose, W/Liner
38	340-3	2	Fitting-Straight
38:1	237-22	1	O-Ring
38:2	237-79	1	O-Ring
39	3234-4	1	Screw-HHF
40	32180-118	1	Clip-Tie
41	3334-945	5	Tie-Cable
42	32180-030	1	Clip-Tie
43	340-4	1	Fitting-Straight
43:1	237-30	1	O-Ring
43:2	237-79	1	O-Ring
44	163-5286	1	Valve-Check
44:1	237-79	1	O-Ring
44:2	237-30	1	O-Ring
45	140-3014	1	Hose-HYD ASM
46	145-3293	1	Hose ASM-HYD
47	127-0516	2	Clamp-R, Double
48	3234-42	2	Screw-HHF
49	104-8301	2	Nut-HF, NI
50	145-3295	1	Hose-Return
51	33115-020	4	Screw-HH
52	AU112950	1	Protector-Hose
53	140-5742	1	Handle-Auxiliary ASM
53:1	147-6873	1	Boot-Switch, Joystick
54	163-3207	1	Boot


Traction Control Assembly No. 140-2940

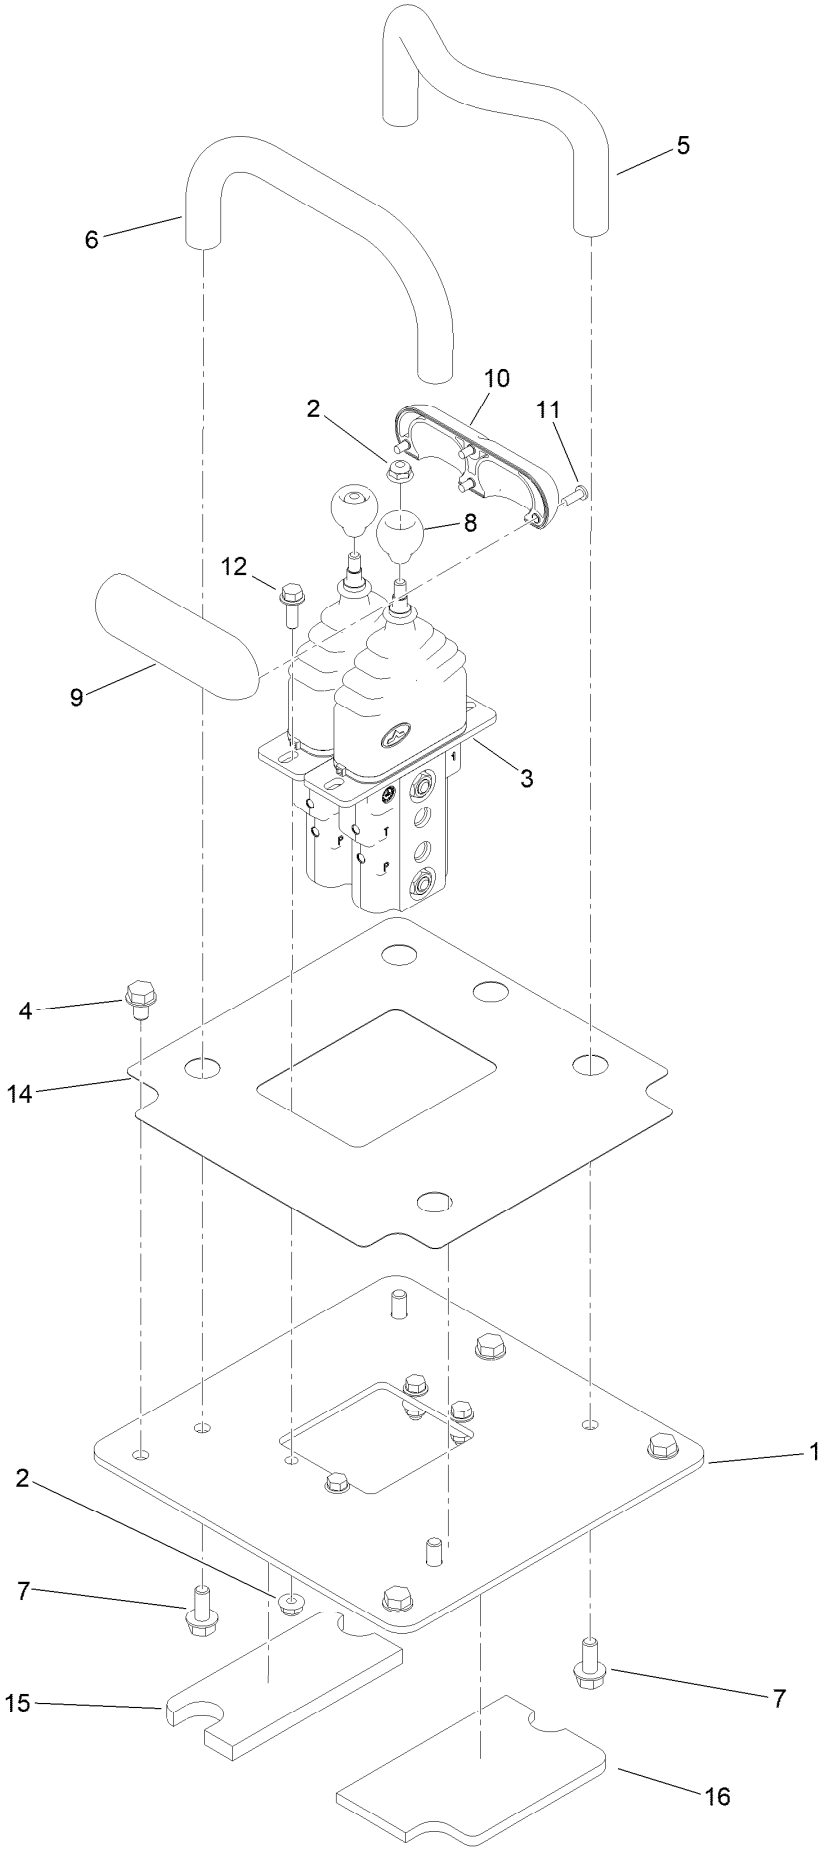

Traction Control Assembly No. 140-2940 (continued)

Ref.	Part Number	Qty.	Description
1	140-5749-01	1	Panel-Cover
2	104-7201	6	Nut-HF, NI
3	145-3279	1	Valve-Control (Traction)
4	700057	4	Screw-HWH
5	138-0791	1	Bar-Reference
6	145-4400	1	Bar-Reference
7	3234-5	4	Screw-HHF
8	130-7723	2	Ball-Traction
9	130-7692	1	Handle-Control
10	131-9162	1	Handle-Traction
11	94-6961	4	Screw
12	115-5103	4	Screw-HHF
14	145-3242	1	Decal-Traction
15	132-8415	1	Foam-Shield, Heat
16	145-3241	1	Foam-Shield, Heat

Control Valve Assembly No. 145-3279

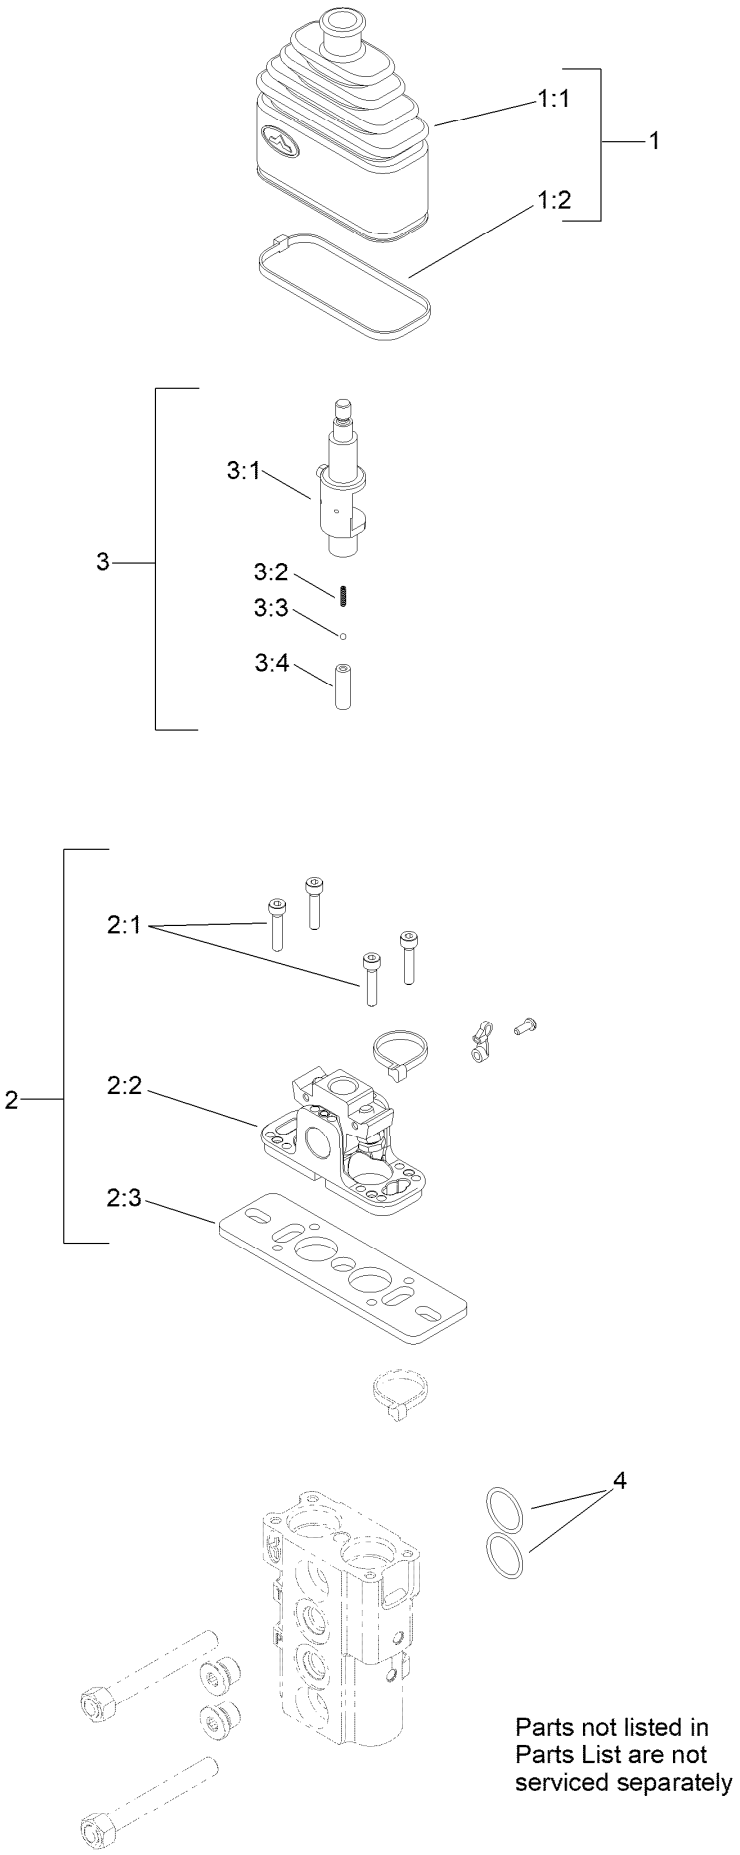


Parts not listed in Parts List are not serviced separately

Control Valve Assembly No. 145-3279 (continued)

Ref.	Part Number	Qty.	Description
1	132-6034	2	Bellow Kit
1:1		1	Bellow-Rubber ●
1:2		1	Tie-Cable ●
2	132-6036	2	Fulcrum Kit
2:1		4	Screw ●
2:2		1	Support Kit ●
2:3		1	Plate-Mounting ●
3	132-6037	2	Switch Holder Lever Kit
3:1		1	Lever-Holder, Switch ●
3:2		1	Spring-Return ●
3:3		1	Sphere ●
3:4		1	Holder-Spring ●
4	100-7246	2	O-Ring

● Not serviced separately


Loader Arm Assembly

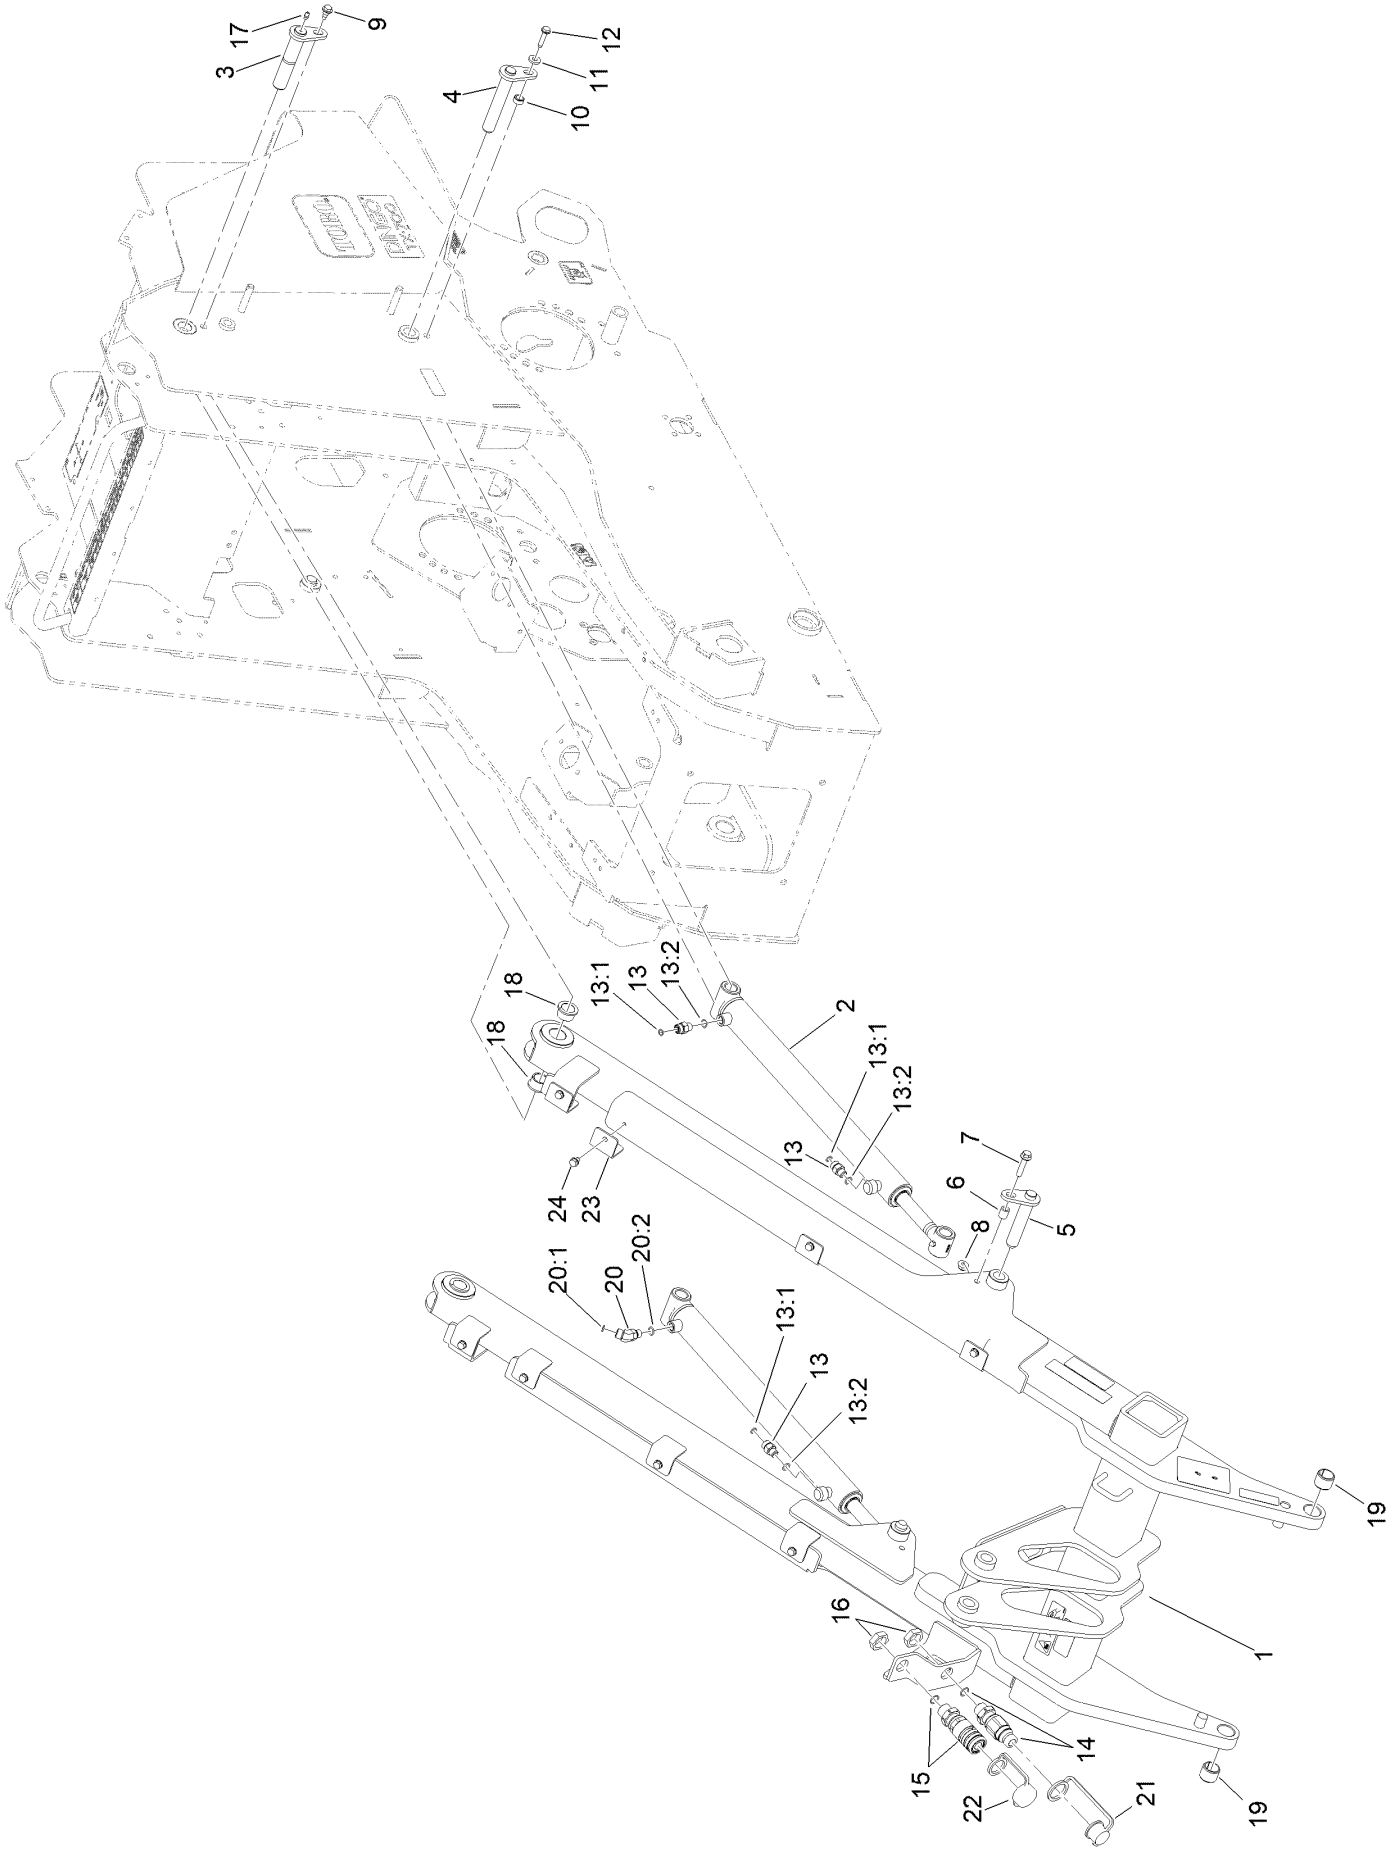

Loader Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-3225	1	Loader Arm ASM
2	140-2974	2	Cly-HYD
3	139-7270	2	Pin-Flag
4	140-2927	2	Pivot Pin ASM (Welded)
5	140-2925	2	Pivot Pin ASM (Welded)
6	136-1462	2	Spacer
7	3234-19	2	Screw-HHF
8	104-8301	2	Nut-HF, NI
9	99-5105	2	Screw-Shoulder
10	99-4201	2	Tube-Spacer
11	71-9310	2	Spacer
12	32144-57	2	Screw
13	340-2	3	Fitting-Straight
13:1	237-22	1	O-Ring
13:2	237-42	1	O-Ring
14	139-4799	1	Coupler ASM,Bulkhead,
15	139-4798	1	Coupler ASM,Bulkhead,
16	340-74	2	Nut-Lock, Bulkhead
17	302-5	2	Fitting-Grease
18	112-1626	4	Bushing-Flange
19	98-4871	2	Bushing-Tension
20	340-87	1	Fitting-Elbow, 45 DEG
20:1	237-22	1	O-Ring
20:2	237-42	1	O-Ring
21	100-8815	1	Cap-Dust, Nipple
22	100-8816	1	Cap-Dust, Coupler
23	145-3304	8	Plate-Retainer, Hose
24	700057	8	Screw-HWH


Loader Arm Assembly No. 145-3225

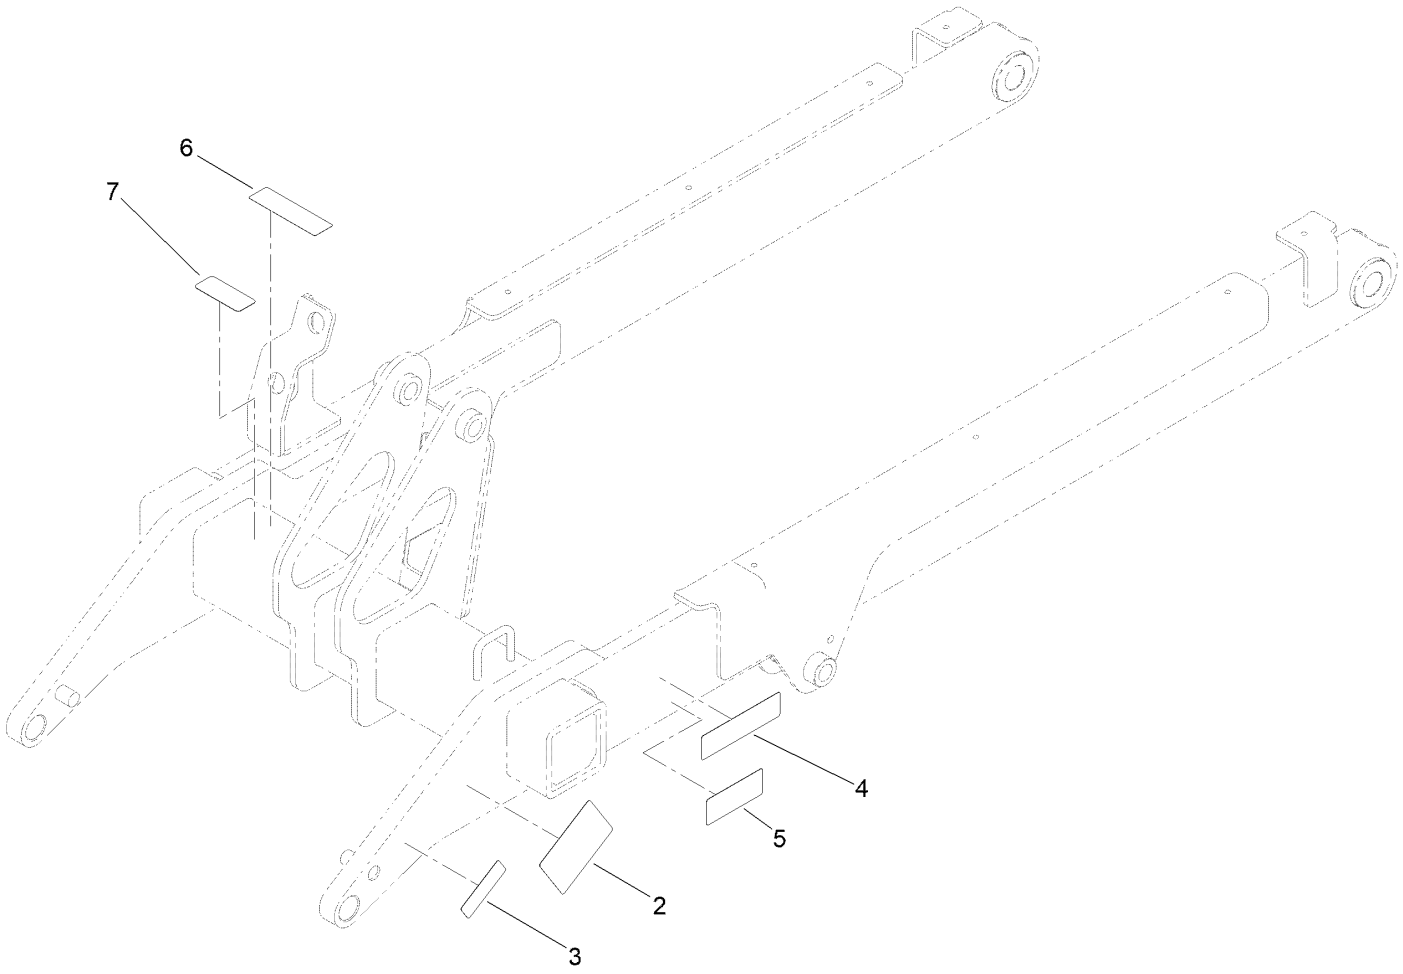

Loader Arm Assembly No. 145-3225 (continued)

Ref.	Part Number	Qty.	Description
2	145-3252	2	Decal - Warning, Bucket
3	120-0625	2	Decal-Warning
4	139-1158	2	Decal-Warning
5	139-1159	2	Decal-Warning
6	115-4855	1	Decal-Caution
7	139-1173	1	Decal-Warning


Hydraulic Cylinder Assembly No. 140-2974

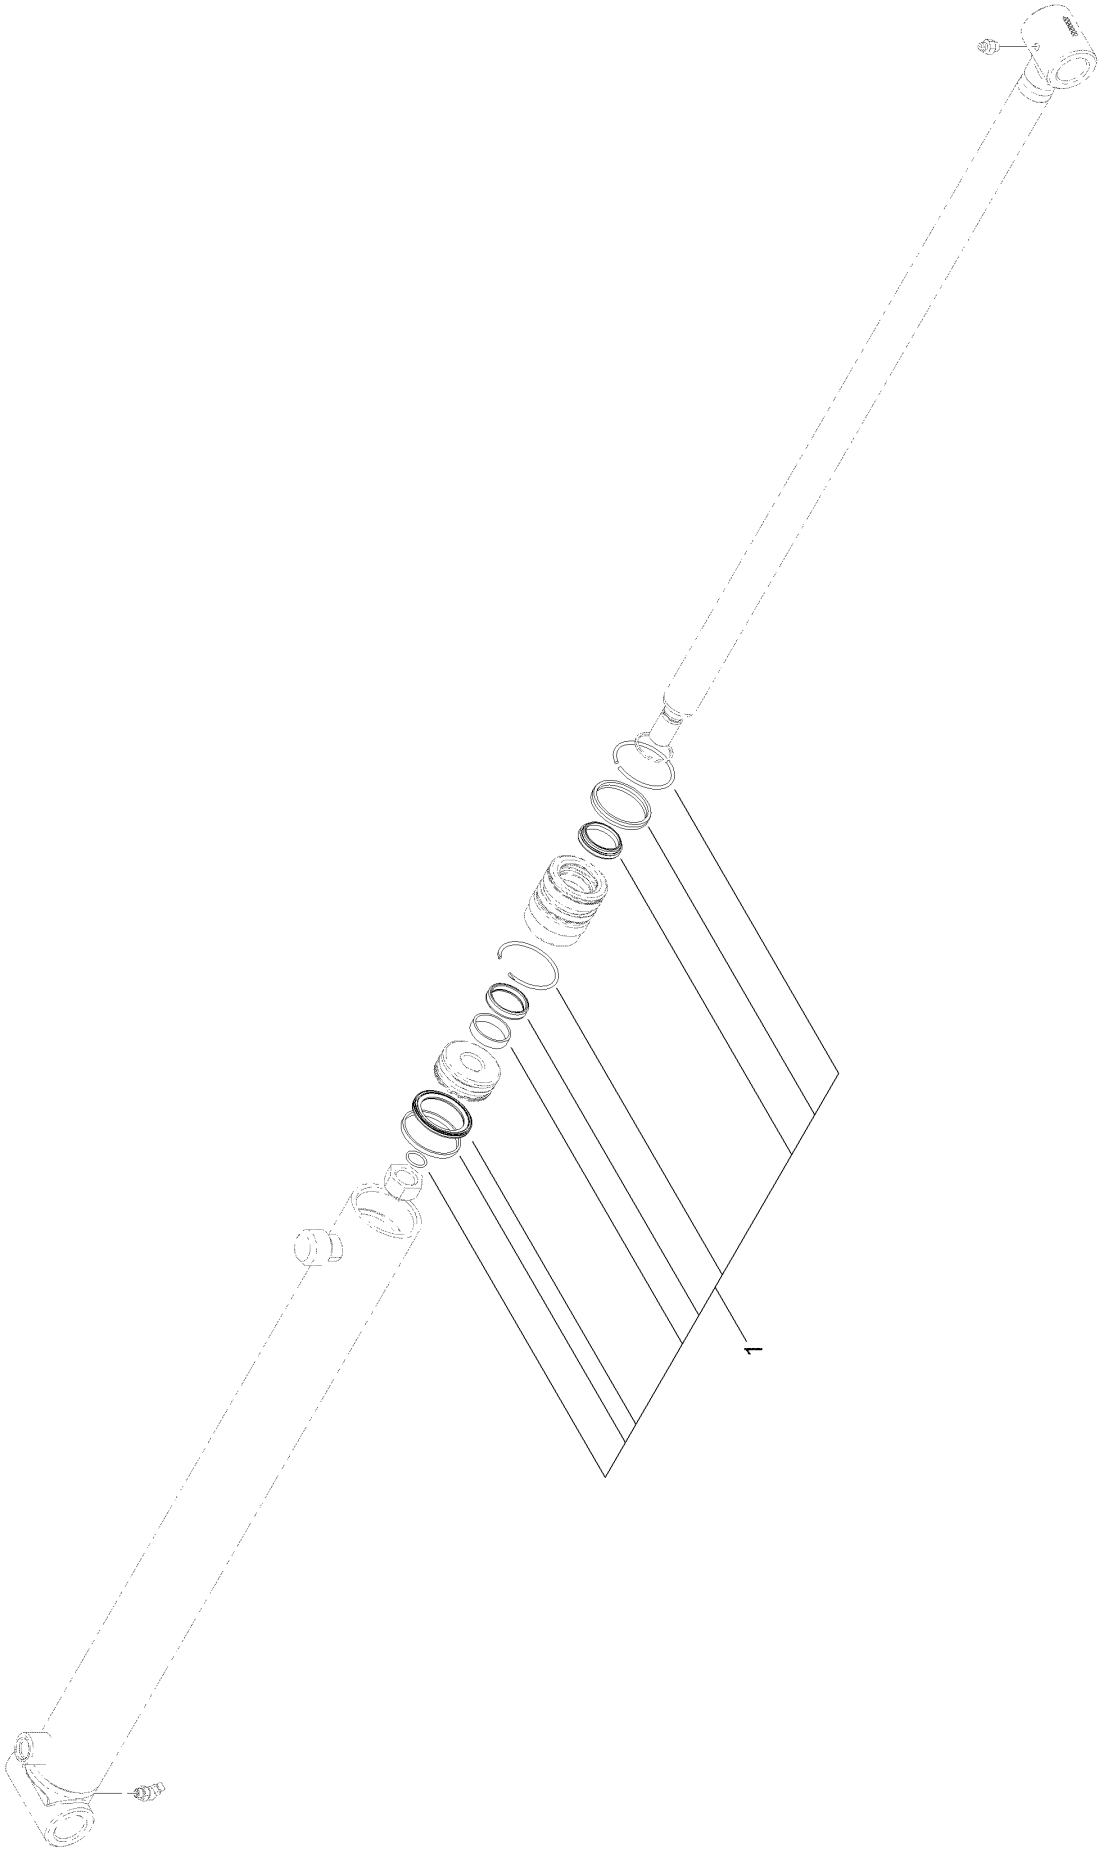

Hydraulic Cylinder Assembly No. 140-2974 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	144-7487	1	Kit-Seal, Hydraulic CYL


Loader Arm Hydraulic Assembly

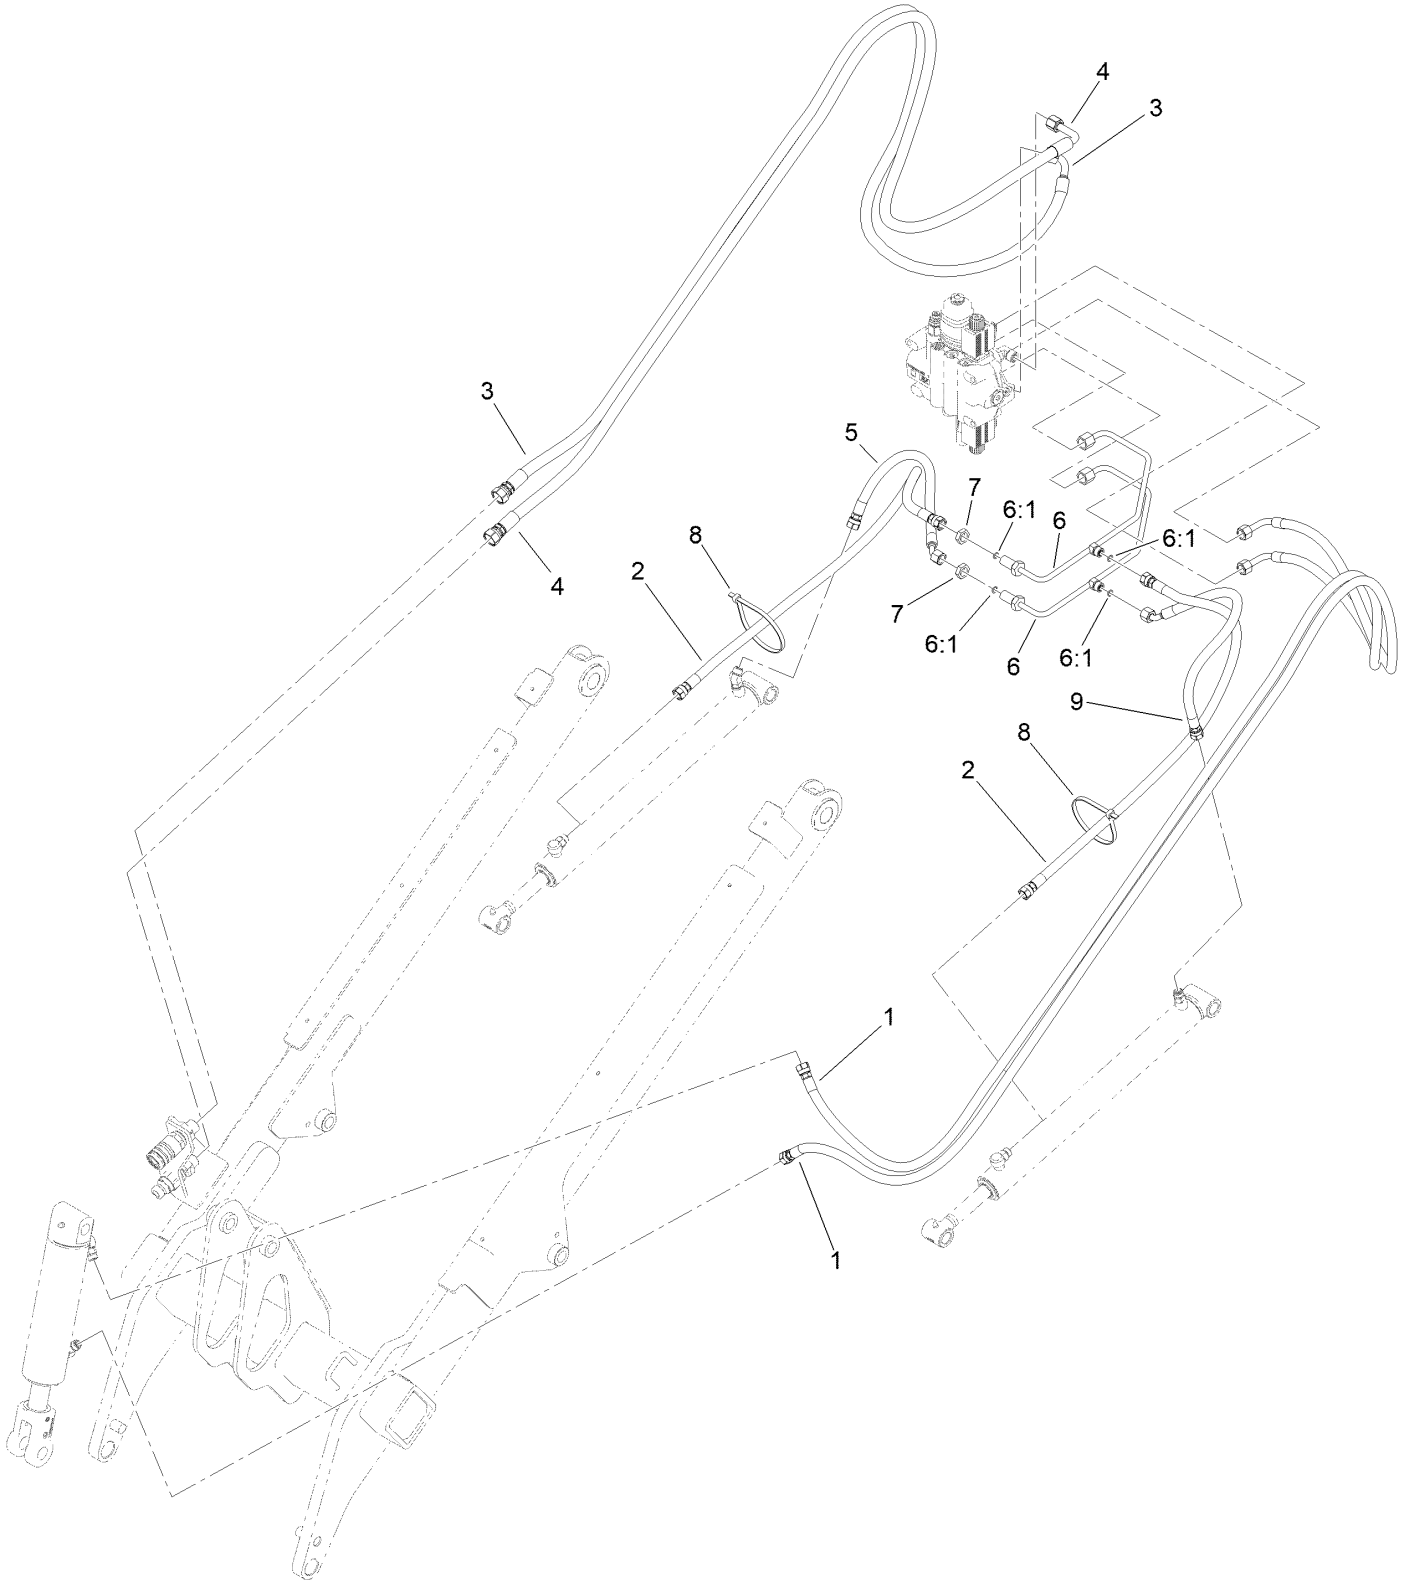

Loader Arm Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-3008	2	Hose ASM-HYD
2	140-5732	2	Hose ASM-HYD
3	140-3010	1	Hose ASM-HYD
4	140-3011	1	Hose ASM-HYD
5	140-2892	1	Hose ASM-HYD
6	140-3007	2	Hydraulic Tube ASM
6:1	237-22	2	O-Ring
7	340-70	2	Nut-Lock
8	3334-945	2	Tie-Cable
9	145-3329	1	Hose ASM-HYD


Quick Attach Assembly

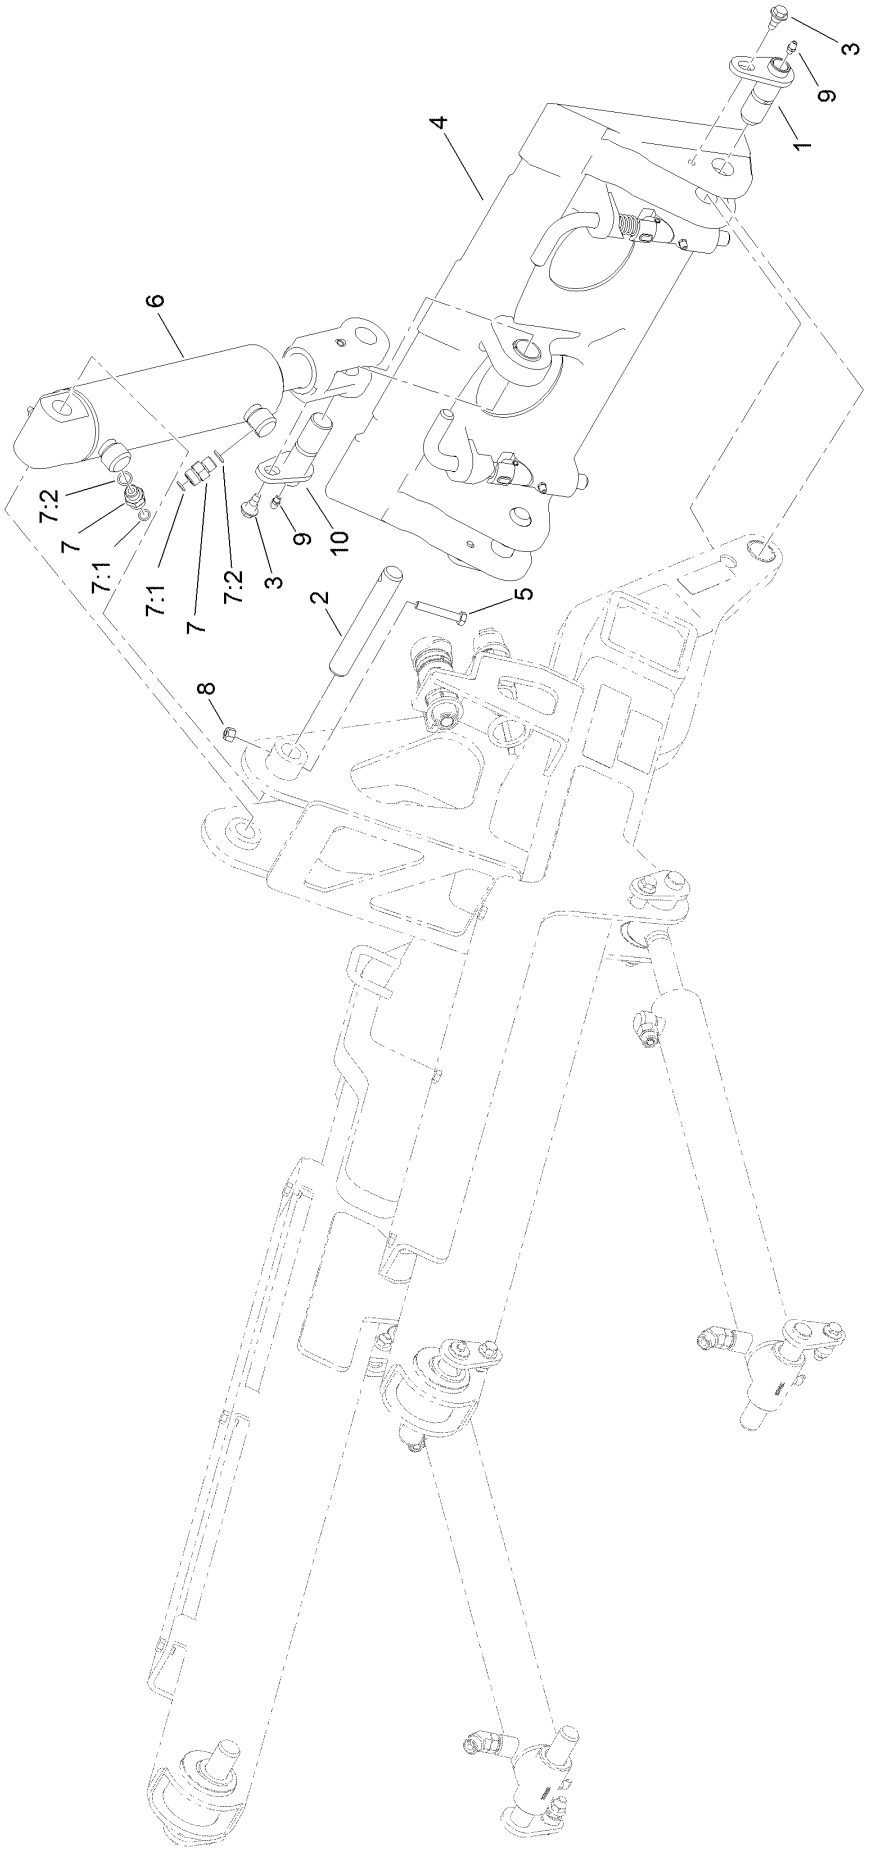

Quick Attach Assembly (continued)

Ref.	Part Number	Qty.	Description
1	130-5222	2	Pin-Pivot
2	104-2849	1	Pin-Locking
3	99-5105	3	Screw-Shoulder
4	132-8418	1	Quick Attach ASM
5	322-10	1	Screw-HH
6	145-3202	1	HYD CYL ASM
7	340-2	2	Fitting-Straight
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring
8	3296-29	1	Nut-Lock, NI
9	302-5	3	Fitting-Grease
10	145-3203	1	Pivot Pin ASM


Quick Attach Assembly No. 132-8418

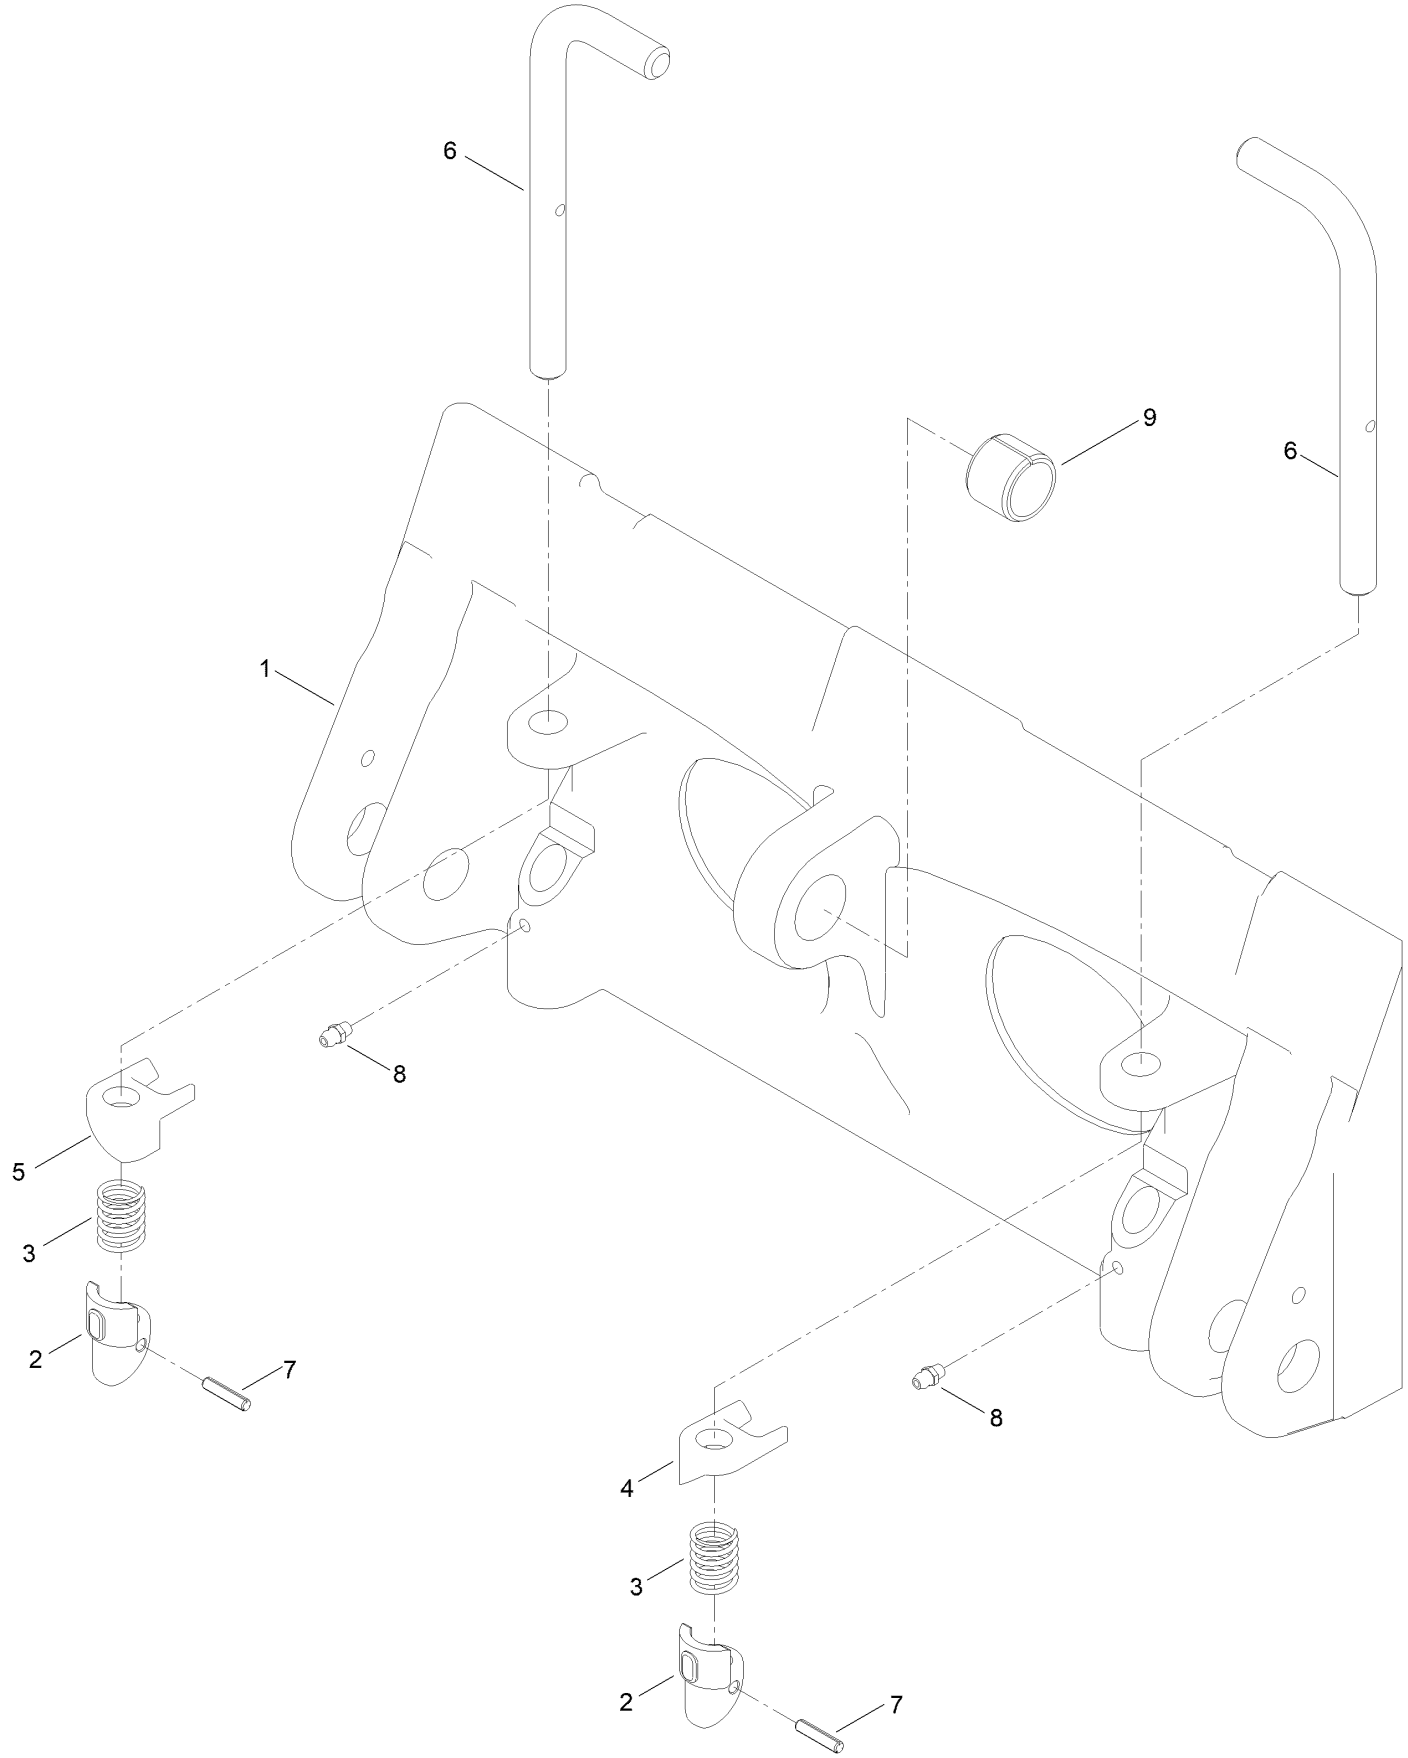

Quick Attach Assembly No. 132-8418 (continued)

Ref.	Part Number	Qty.	Description
1	130-7708-05	1	Mount-Qtach, [blk-Txt]
2	105-0246	2	Cam
3	98-4694	2	Spring-Compression
4	104-5909	1	Stop-RH
5	104-5903	1	Stop-LH
6	132-8419	2	Pin-Locking
7	3285-1	2	Pin-Grooved
8	302-5	2	Fitting-Grease
9	98-4871	1	Bushing-Tension

Hydraulic Cylinder Assembly No. 145-3202

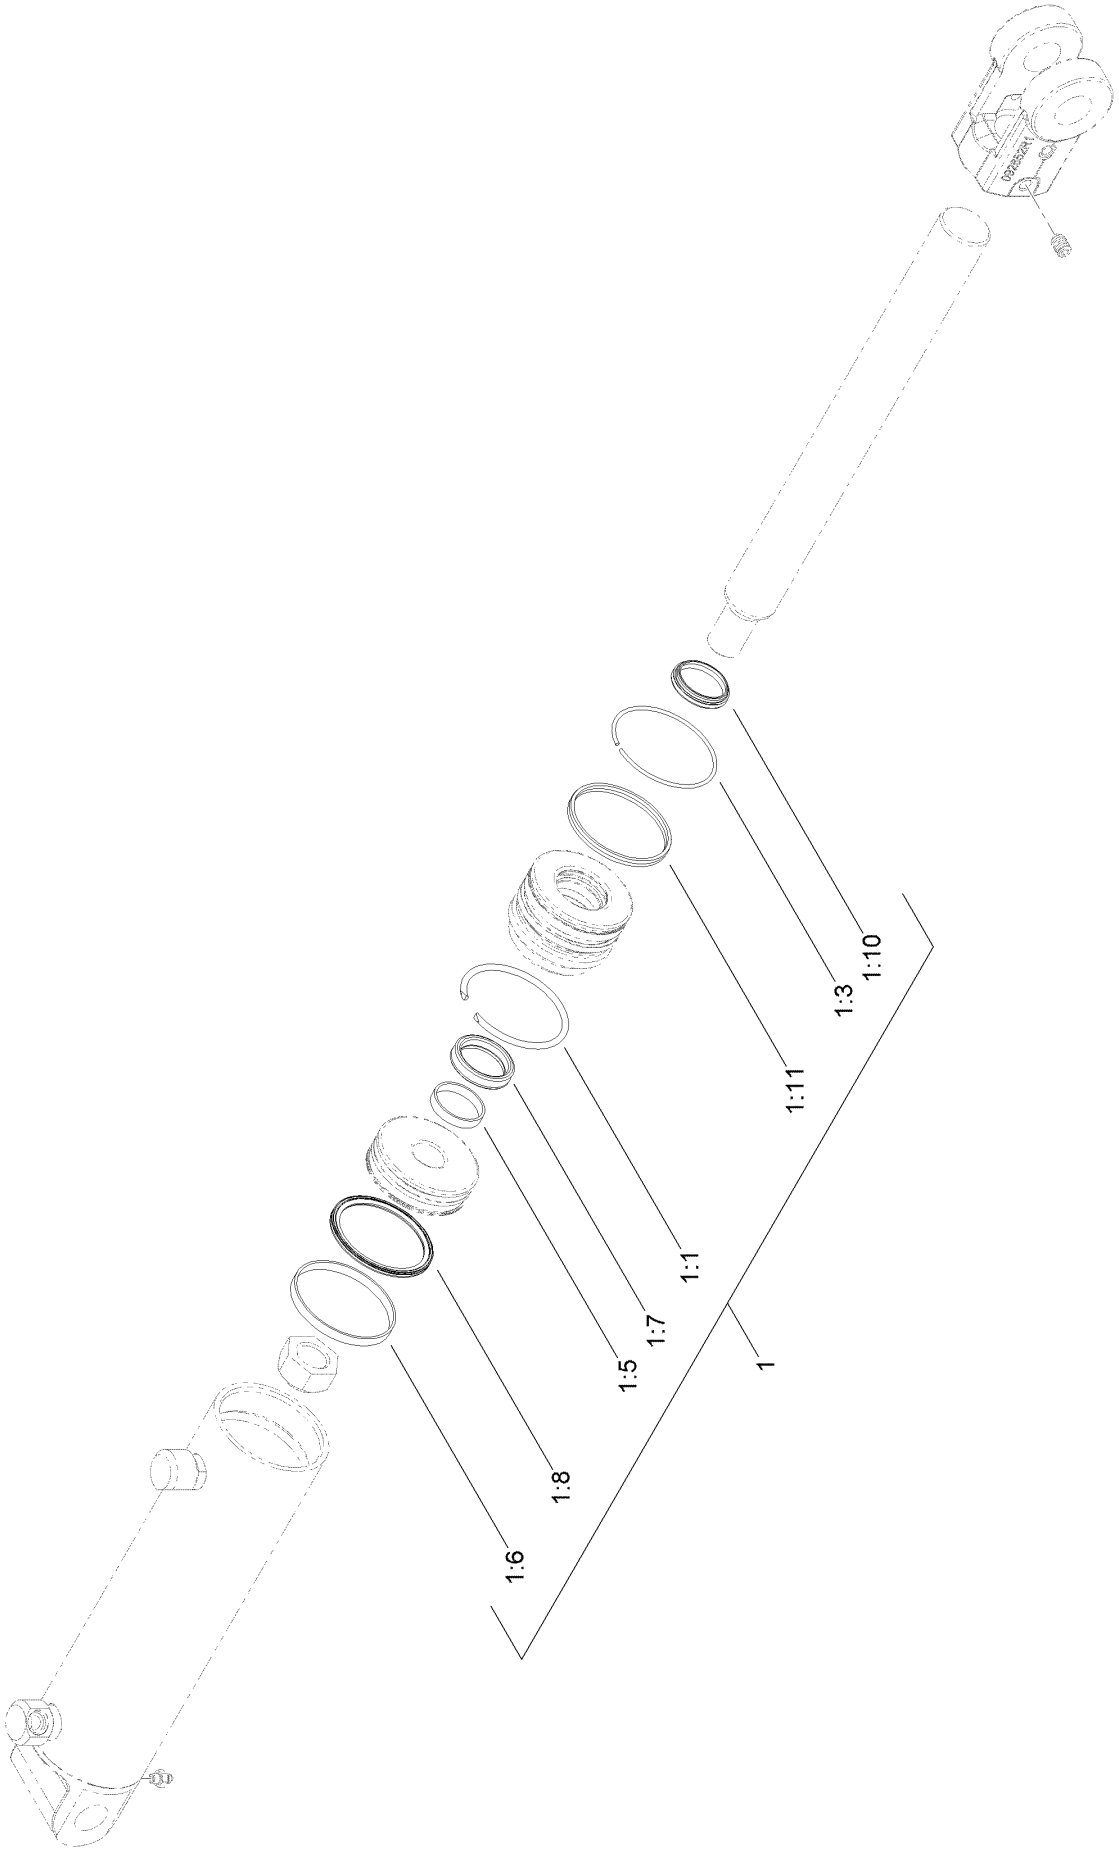


Hydraulic Cylinder Assembly No. 145-3202 (continued)

Ref.	Part Number	Qty.	Description
1	145-3227	1	Kit-Seal, Hydraulic CYL
1:1		1	Retaining Ring Internal 2.7 ■
1:2		2	Retaining Ring Remov Tool 2 ● ■
1:3		1	Retaining Ring External 2.7 ■
1:4		1	Clamp Gear 2.75" ● ■
1:5		1	Wear Ring 1.50-1.38-0.250 ■
1:6		1	Wear Ring 2.75-2.63-0.250 ■
1:7		1	Seal Zurcon U-Cup Ru9 1.38 ■
1:8		1	Seal Zurcon Wynseal 2.75"-I ■
1:9		1	Seal Zurcon Glyd Ring P 2.7 ● ■
1:10		1	Seal Wiper 1.38 Snap In Da2 ■
1:11		2	Seal Dual 2.75 ■
1:12		1	Seal Kit Stuff Wire Rng Rep ● ■
1:13		1	Seal Kit Stuff Tss Seals ● ■

● Not illustrated

■ Not serviced separately


Fuel Assembly

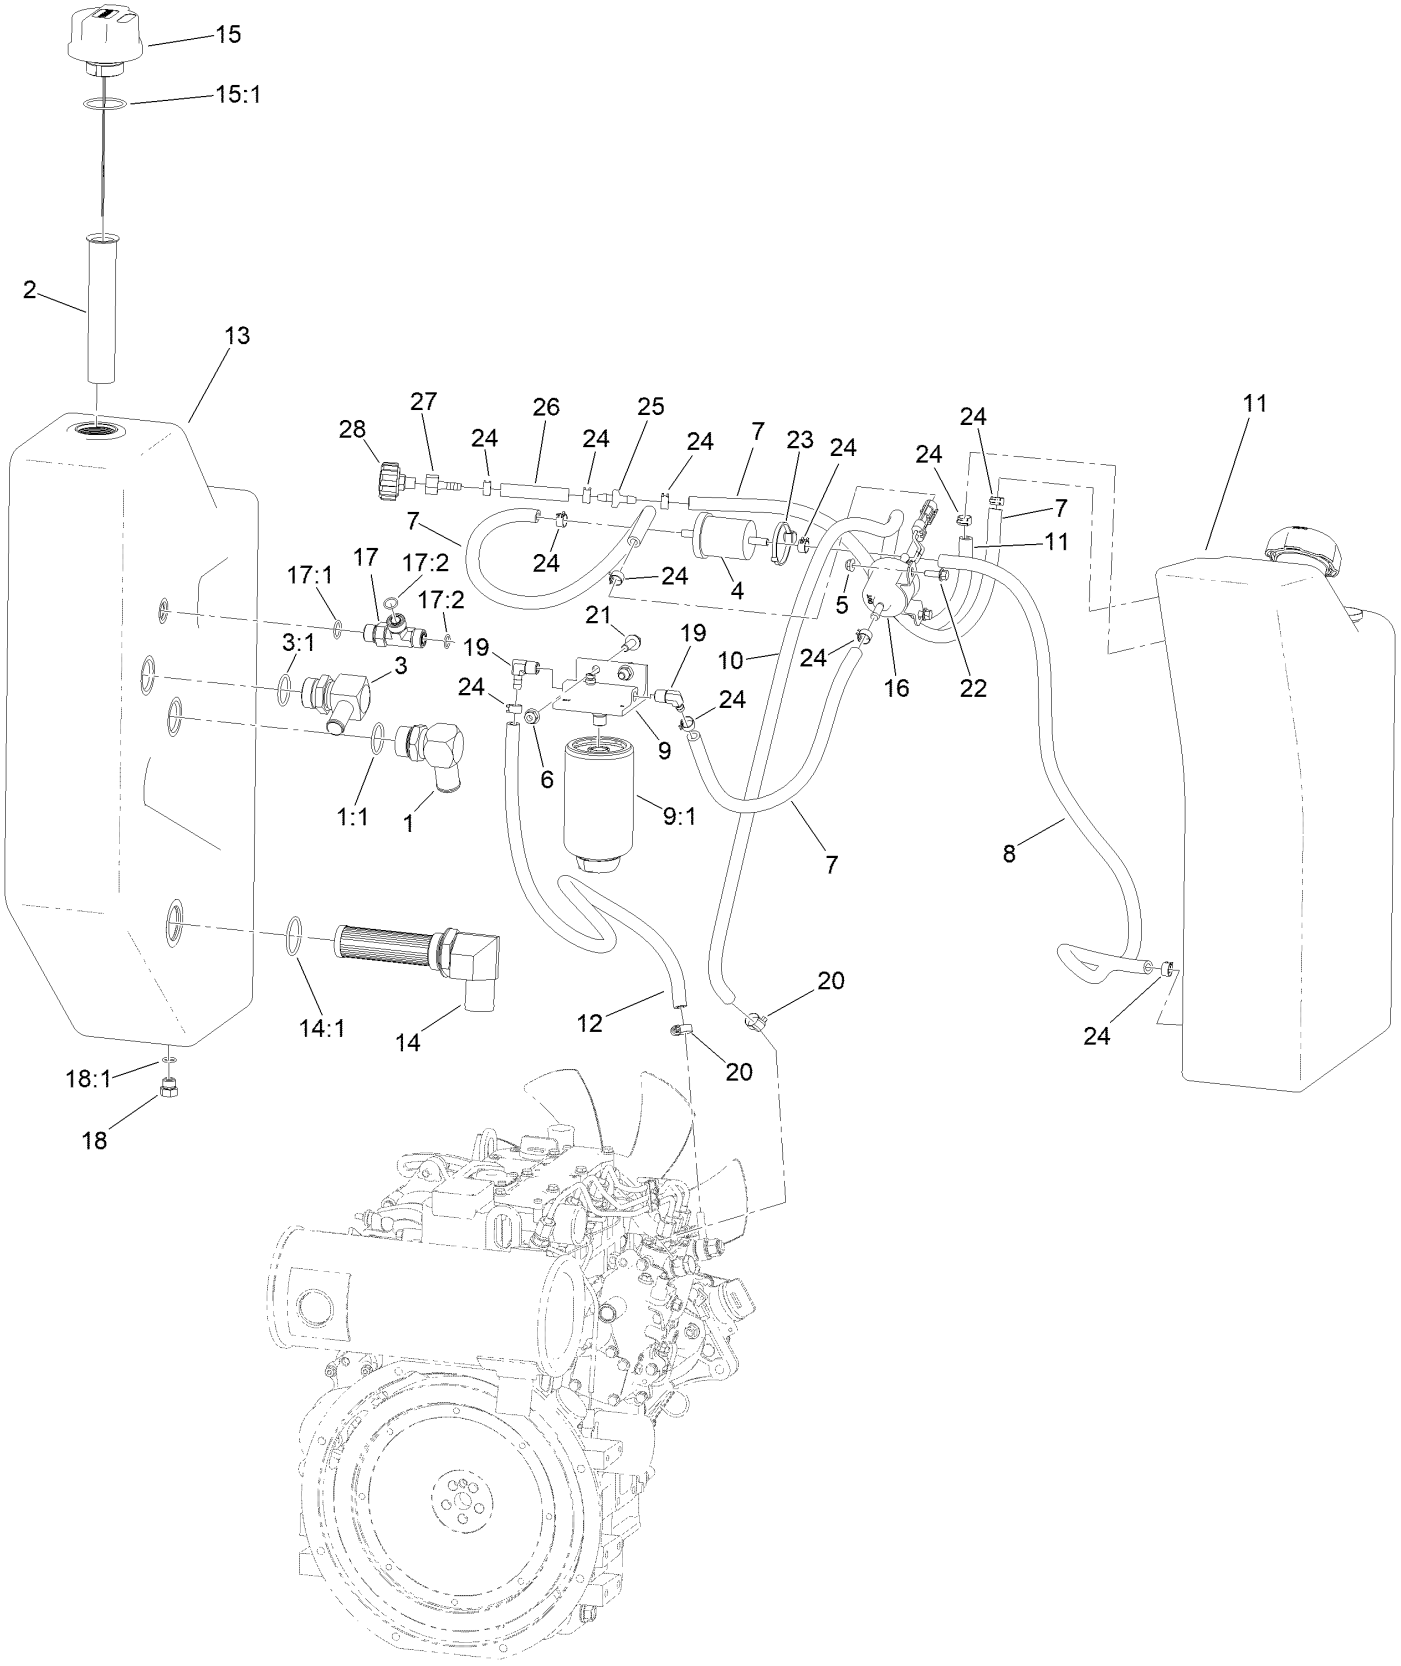

Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	23-8910	1	Stem-Barb-90
1:1	237-146	1	O-Ring
2	61-2790	1	Filter-Screen
3	98-0971	1	Fitting-Elbow, 90
3:1	237-117	1	O-Ring
4	98-7612	1	Filter-Fuel
5	104-7201	2	Nut-HF, NI
6	104-8300	2	Nut-HF, NI
7	108-3284	3	Hose-Fuel
8	109-0309	1	Hose-Fuel
9	110-9044	1	Separator-Filter
9:1	110-9049	1	Filter-Spin On, Fuel/Water
10	130-4346	1	Hose-Fuel
11	140-5762	1	Tank ASM, LH
12	140-5774	1	Hose-Fuel
13	144-6096	1	Tank-Hydraulic
14	145-0622	1	Strainer Fitting ASM
14:1	237-101	1	O-Ring
15	145-0642	1	Cap-Filler, Breather
15:1	237-101	1	O-Ring
16	145-3154	1	Pump-Fuel, Electric
17	340-109	1	Fitting-Tee
17:1	237-79	1	O-Ring
17:2	237-30	2	O-Ring
18	353-508	1	Plug-HH
18:1	237-42	1	O-Ring
19	353-781	2	Fitting-HYD, 90
20	2412-108	2	Clamp-Worm
21	3234-17	2	Screw-HHF
22	3234-4	2	Screw-HHF
23	32180-030	1	Clip-Tie
24	92-2379	12	Clamp-Hose
25	99-5000	1	Valve-Check, Fuel
26	112-6388	1	Hose-Fuel
27	354-95	1	Fitting-Straight
28	68-6150	1	Breather


Fuel Tank Assembly No. 140-5762

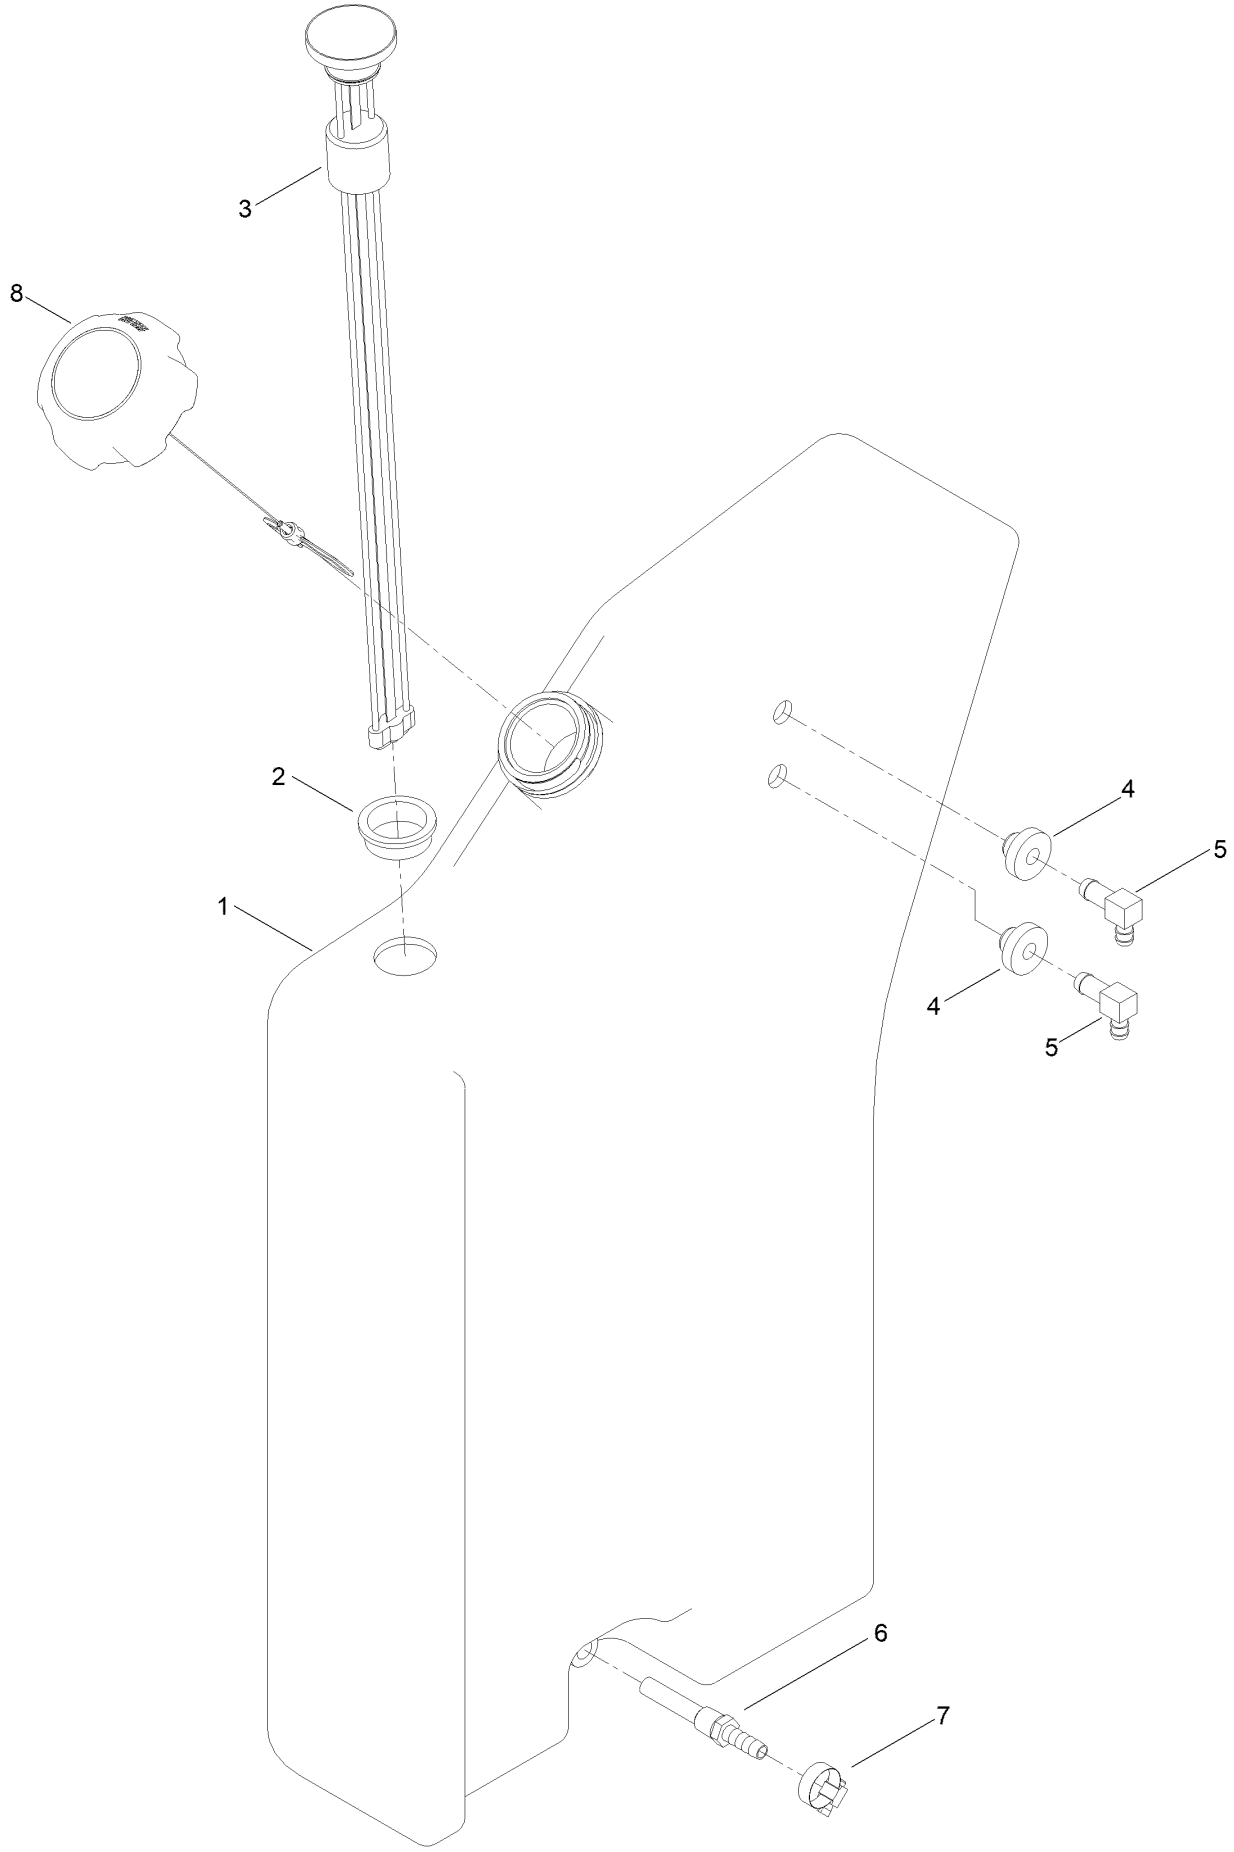

Fuel Tank Assembly No. 140-5762 (continued)

Ref.	Part Number	Qty.	Description
1	125-3709	1	Fuel Tank ASM
2	95-8972	1	Grommet
3	104-5603	1	Gauge-Level, Fuel
4	46-6560	2	Bushing
5	46-6550	2	Fitting-Elbow, 90 DEG
6	112-6374	1	Fitting-Strainer
7	2412-36	1	Clamp-Hose
8	130-7567	1	Cap-Diesel,


Hood and Manual Tube Assembly

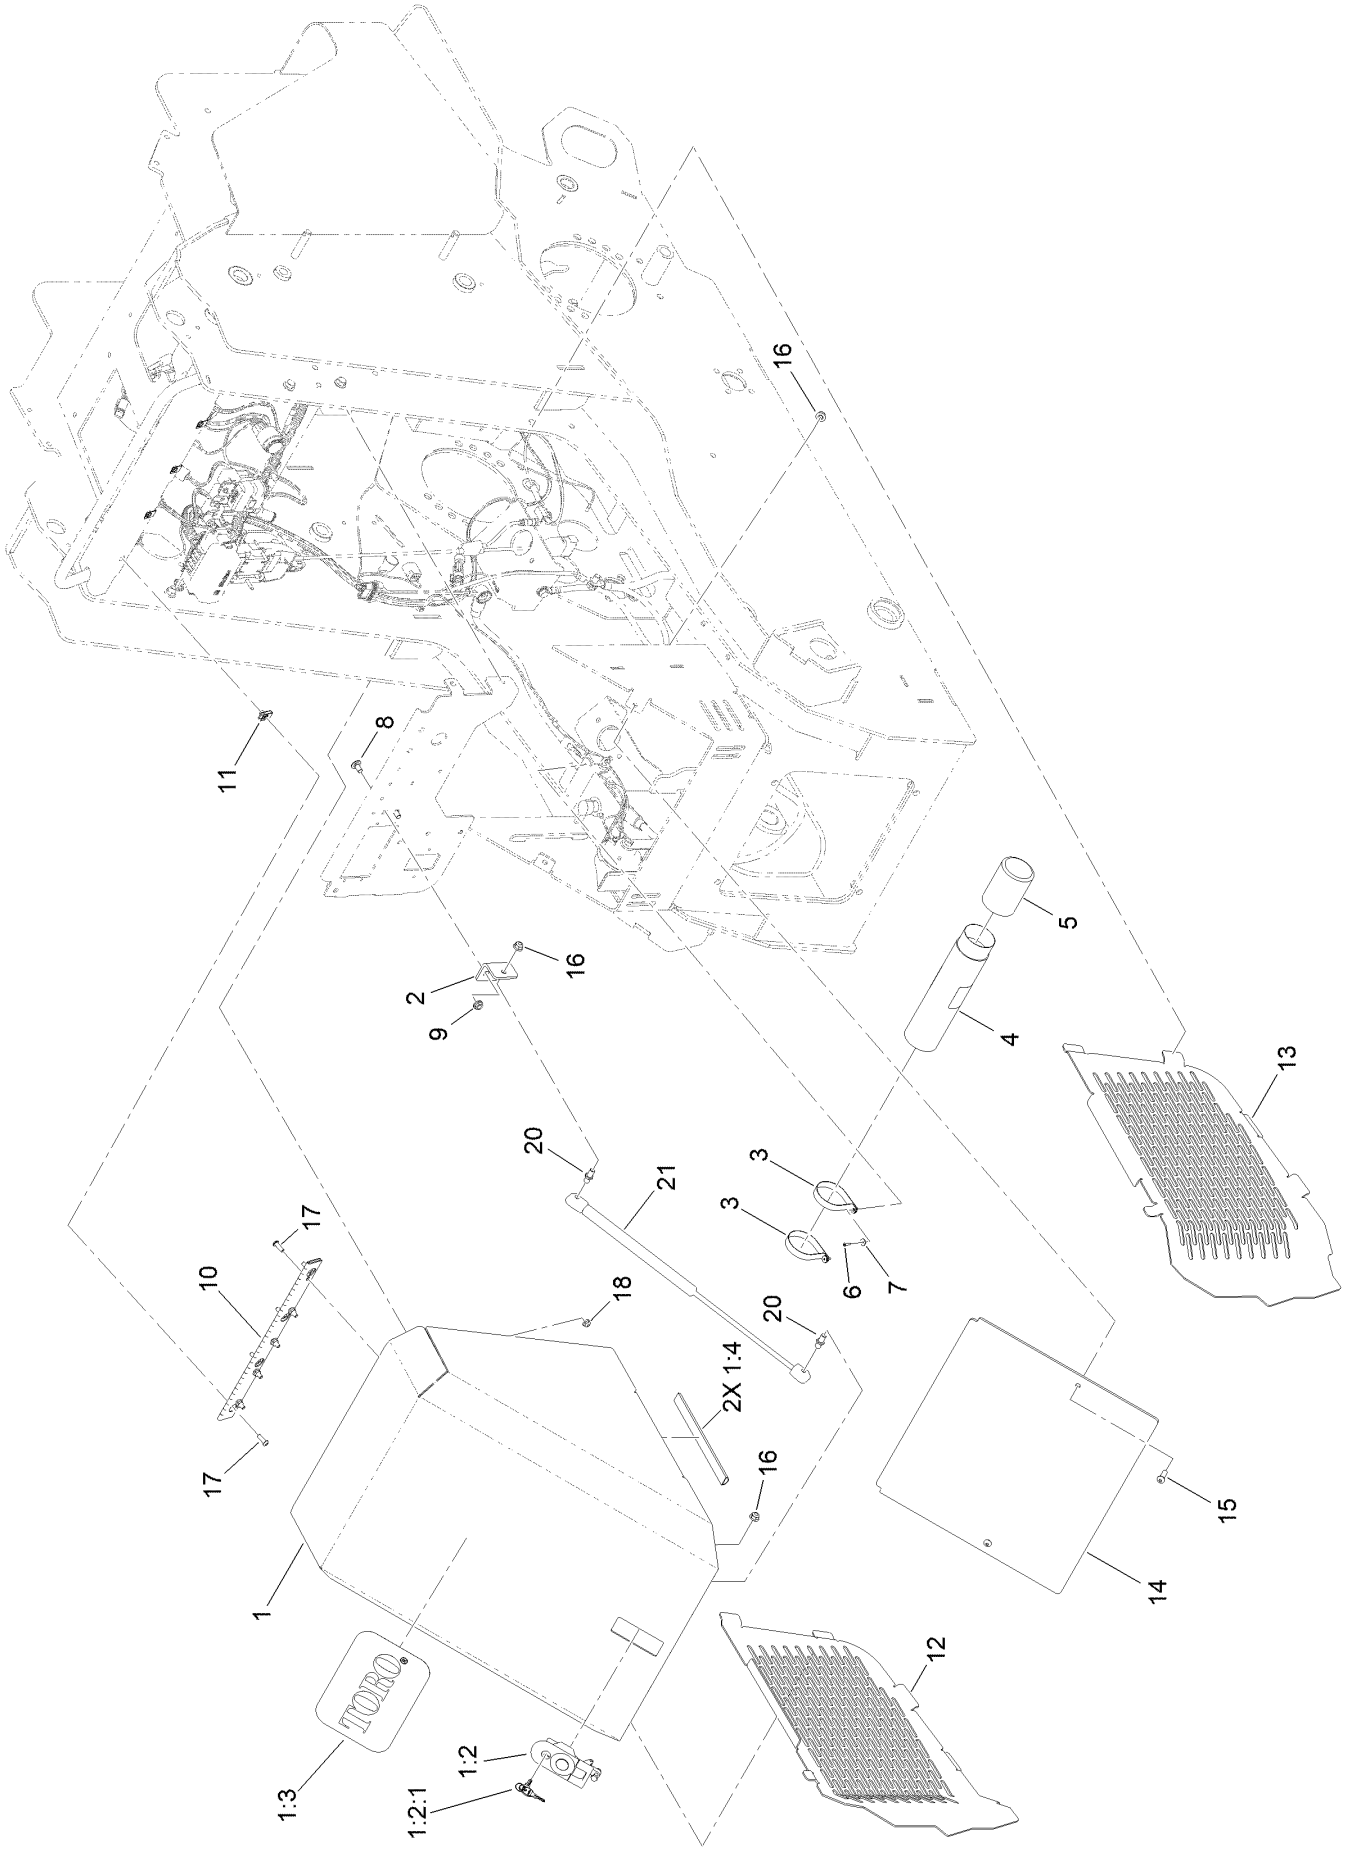

Hood and Manual Tube Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-6916	1	ASM-Hood
1:2	144-4364	1	Latch-Compression, Locking
1:2:1	145-4488	1	Keys-Latch
1:3	92-1242	1	Decal
1:4	140-5942	2	Seal-Bulb
2	161-6920-05	1	Mount-Shock
3	2412-120	2	Clamp-R
4	104-7050	1	Tube-Manual
5	104-7048	1	Cap-Housing
6	3269-17	2	Rivet-Pop
7	3269-10	2	Washer-Back
8	137-3060	2	Bolt-CARR
9	32128-20	2	Nut-HF
10	140-2953	1	Hinge-Hood
11	107069	4	Clip
12	161-6909-05	1	Panel-Side, RH
13	161-6912-05	1	Panel-Side, LH
14	163-3225-05	1	Panel, Front
15	109-4872	2	Screw-HSH
16	104-8300	2	Nut-HF, NI
17	3274-69	9	Screw-HSBH
18	104-7201	5	Nut-HF, NI
20	98-3104	2	Stud-Ball
21	147-6766	1	Spring-Gas


Platform Assembly

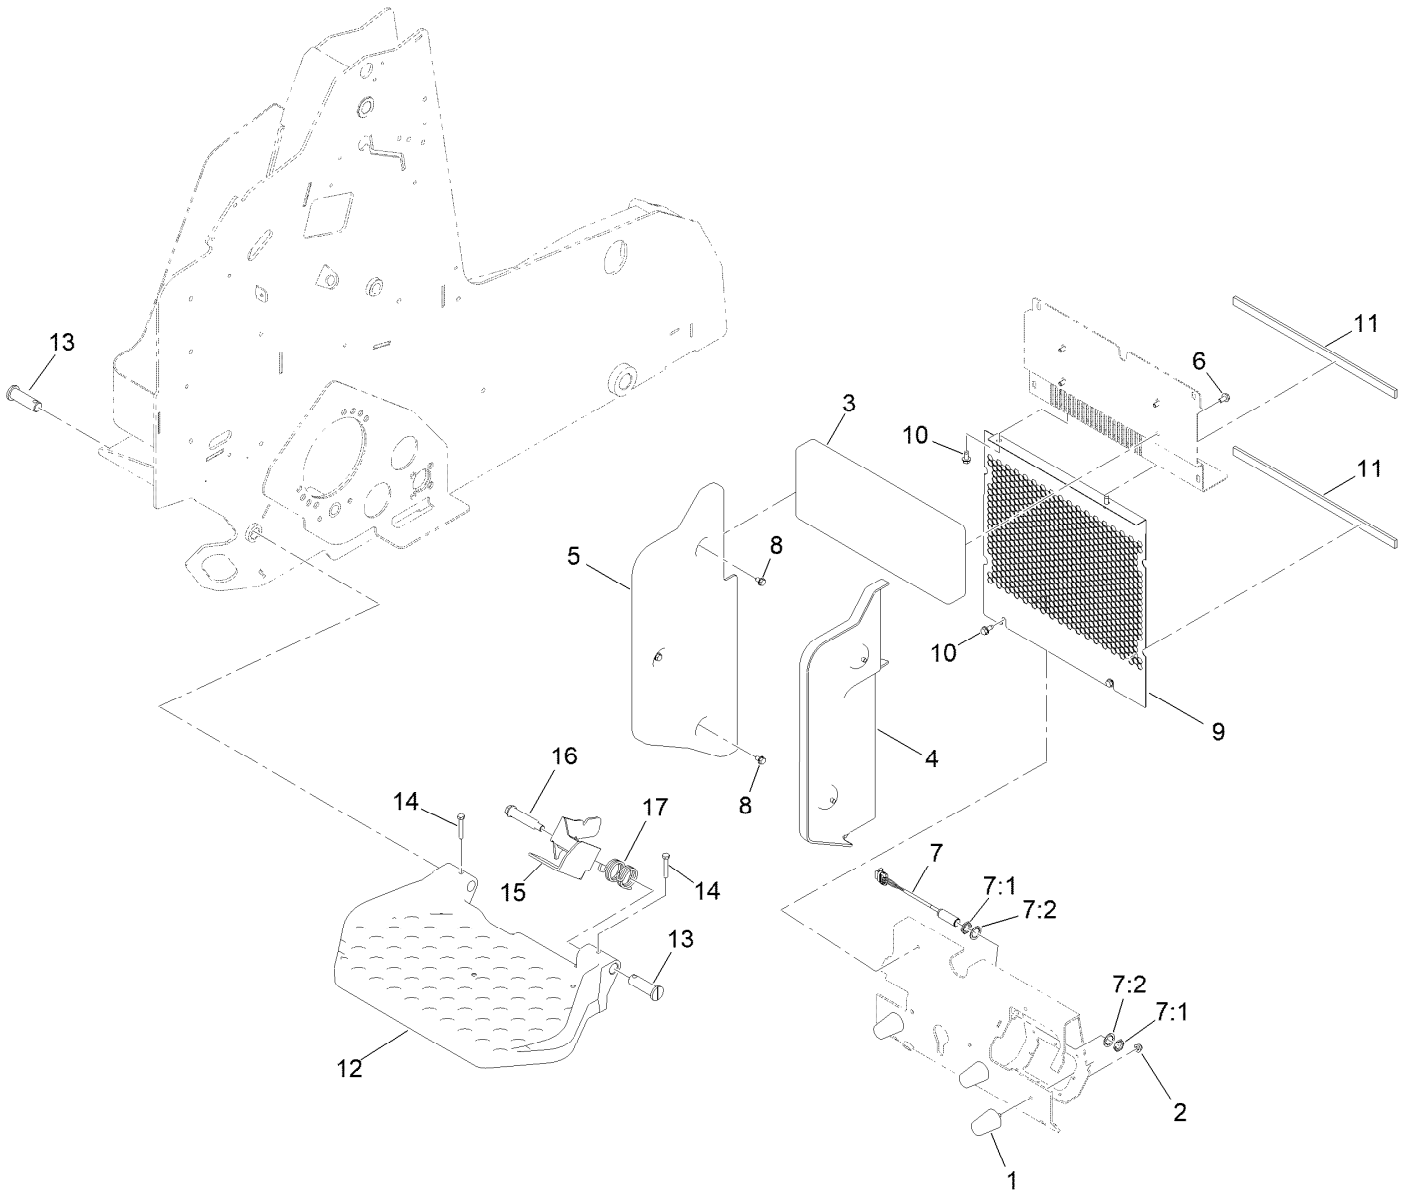

Platform Assembly (continued)

Ref.	Part Number	Qty.	Description
1	110-5070	3	Bumper
2	104-8300	3	Nut-HF, NI
3	144-6059	1	Cushion-Pad
4	144-2113	1	Cover-Right
5	144-2114	1	Cover-Left
6	3234-7	4	Screw-HHF
7	115-5300	1	Proximity Switch ASM
7:1	117-3207	2	Nut-Hex
7:2	117-3208	2	Washer-Lock, Internal Tooth
8	700057	5	Screw-HWH
9	140-5781-05	1	Screen-Radiator
10	32144-70	4	Screw-HWHTF
11	145-3276	2	Pad-Rubber
12	147-9001-05	1	Operator Platform [blk-Txt]
13	147-6772	2	Pin-Platform
14	322-10	2	Screw-HH
15	147-9030-05	1	Pedal-ASM
16	126-9209	1	Bolt-Shoulder
17	147-6857	1	Spring-Torsion, Twin Coils

Electrical Assembly

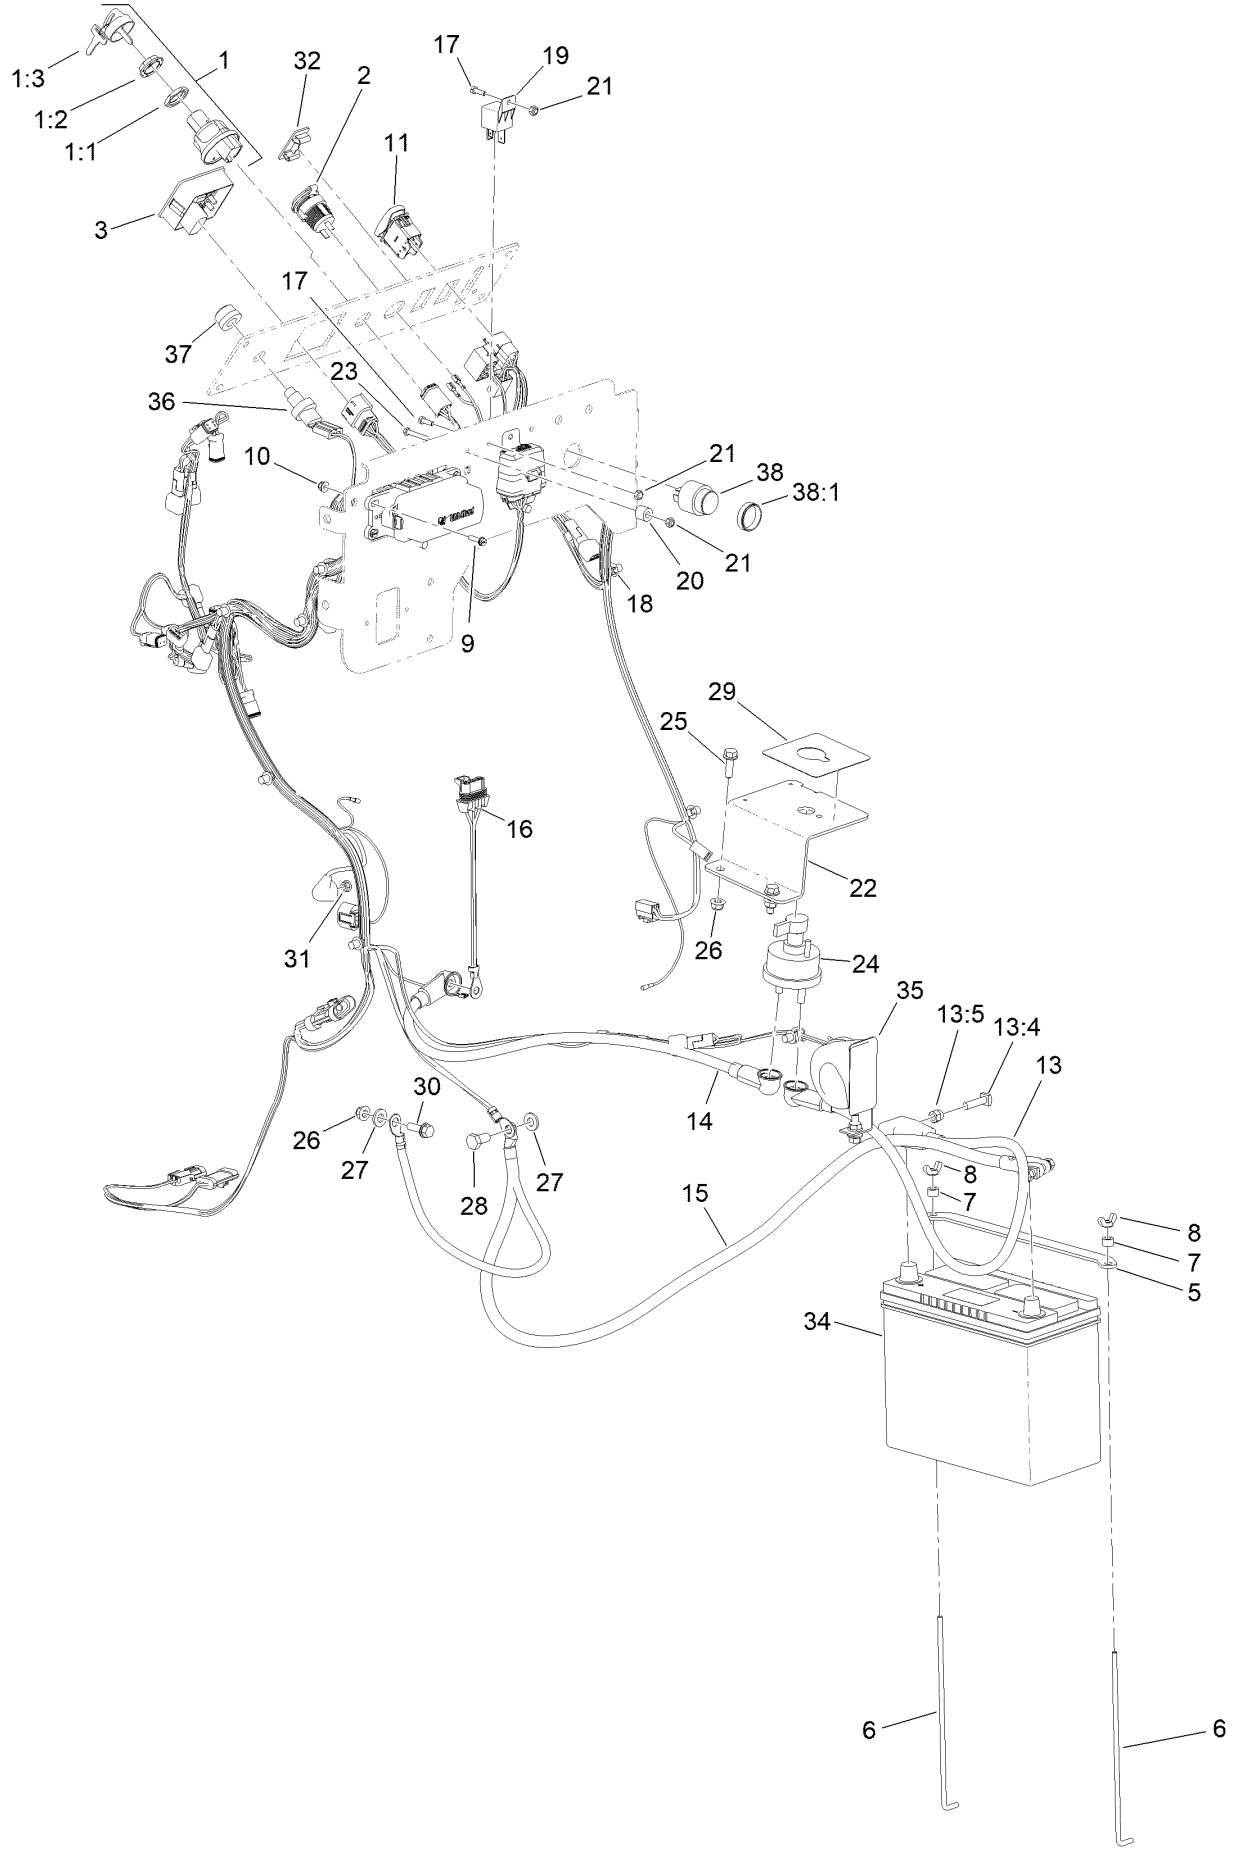


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-5159	1	Switch-Ignition
1:1	121-5160	1	Nut-Hex
1:2	122-2704	1	Nut-Face, M22 (Plastic)
1:3	121-5162	1	Set-Key, Ignition
2	109-9376	1	Receptacle-12V
3	130-7635	1	Module-Hour Meter
5	136-5755-03	1	Strap-Hold Down, Battery
6	136-5756	2	Rod-Hold Down, Battery
7	98-4799	2	Spacer
8	1-803038	2	Wingnut
9	32105-13	4	Screw-HWH
10	120-4578	4	Nut-HF
11	122-3953	1	Switch-Rocker, (On)-Off-(On)
13	122-2825	1	Cable-Battery, Rd ASM
13:4	32180-109	1	Bolt-Battery Clamp, 5/16-18 Unc
13:5	32180-108	1	Nut-Hex Shoulder
14	122-2826	1	Cable-Battery, Rd ASM
15	122-2827	1	Cable-Battery, Bk ASM
16	99-3441	1	Harness-Wire, Fusible Link
17	3290-134	2	Screw
18	122-3946	1	Harness-Wire, Main
19	99-7435	3	Relay
20	93-1144	1	Spacer - Fuel Tank
21	3296-2	3	Nut-Lock, NI
22	161-6935-05	1	Bracket-Switch
23	3290-360	1	Screw-HH
24	AUR52278	1	Switch-Disconnect, Master
24:1	3253-21	2	Washer-Lock ●
24:2	126-0687	2	Nut-Hex ●
24:3	515-0040	1	Washer,Lock,Int,.91X1.387X.056,Stl, ●
25	3234-17	3	Screw-HHF
26	104-8300	4	Nut-HF, NI
27	100-4852	2	Washer-Hardened
28	33115-020	1	Screw-HH
29	131-8026	1	Decal-Battery Disconnect
30	3234-29	1	Screw-HHF
31	33003-00	1	Nut-HF
32	99-7420	1	Plug-Hole
34	145-3278	1	Battery - Corrosive
35	116749	1	Horn
36	112-3324	1	Switch-Horn
37	112-3313	1	Nut-Weatherproof
38	80-9330	1	Audio Alarm ASM
38:1	104-5107	1	Nut-Plastic, Knurled

● Not illustrated

Main Wire Harness Assembly No. 122-3946

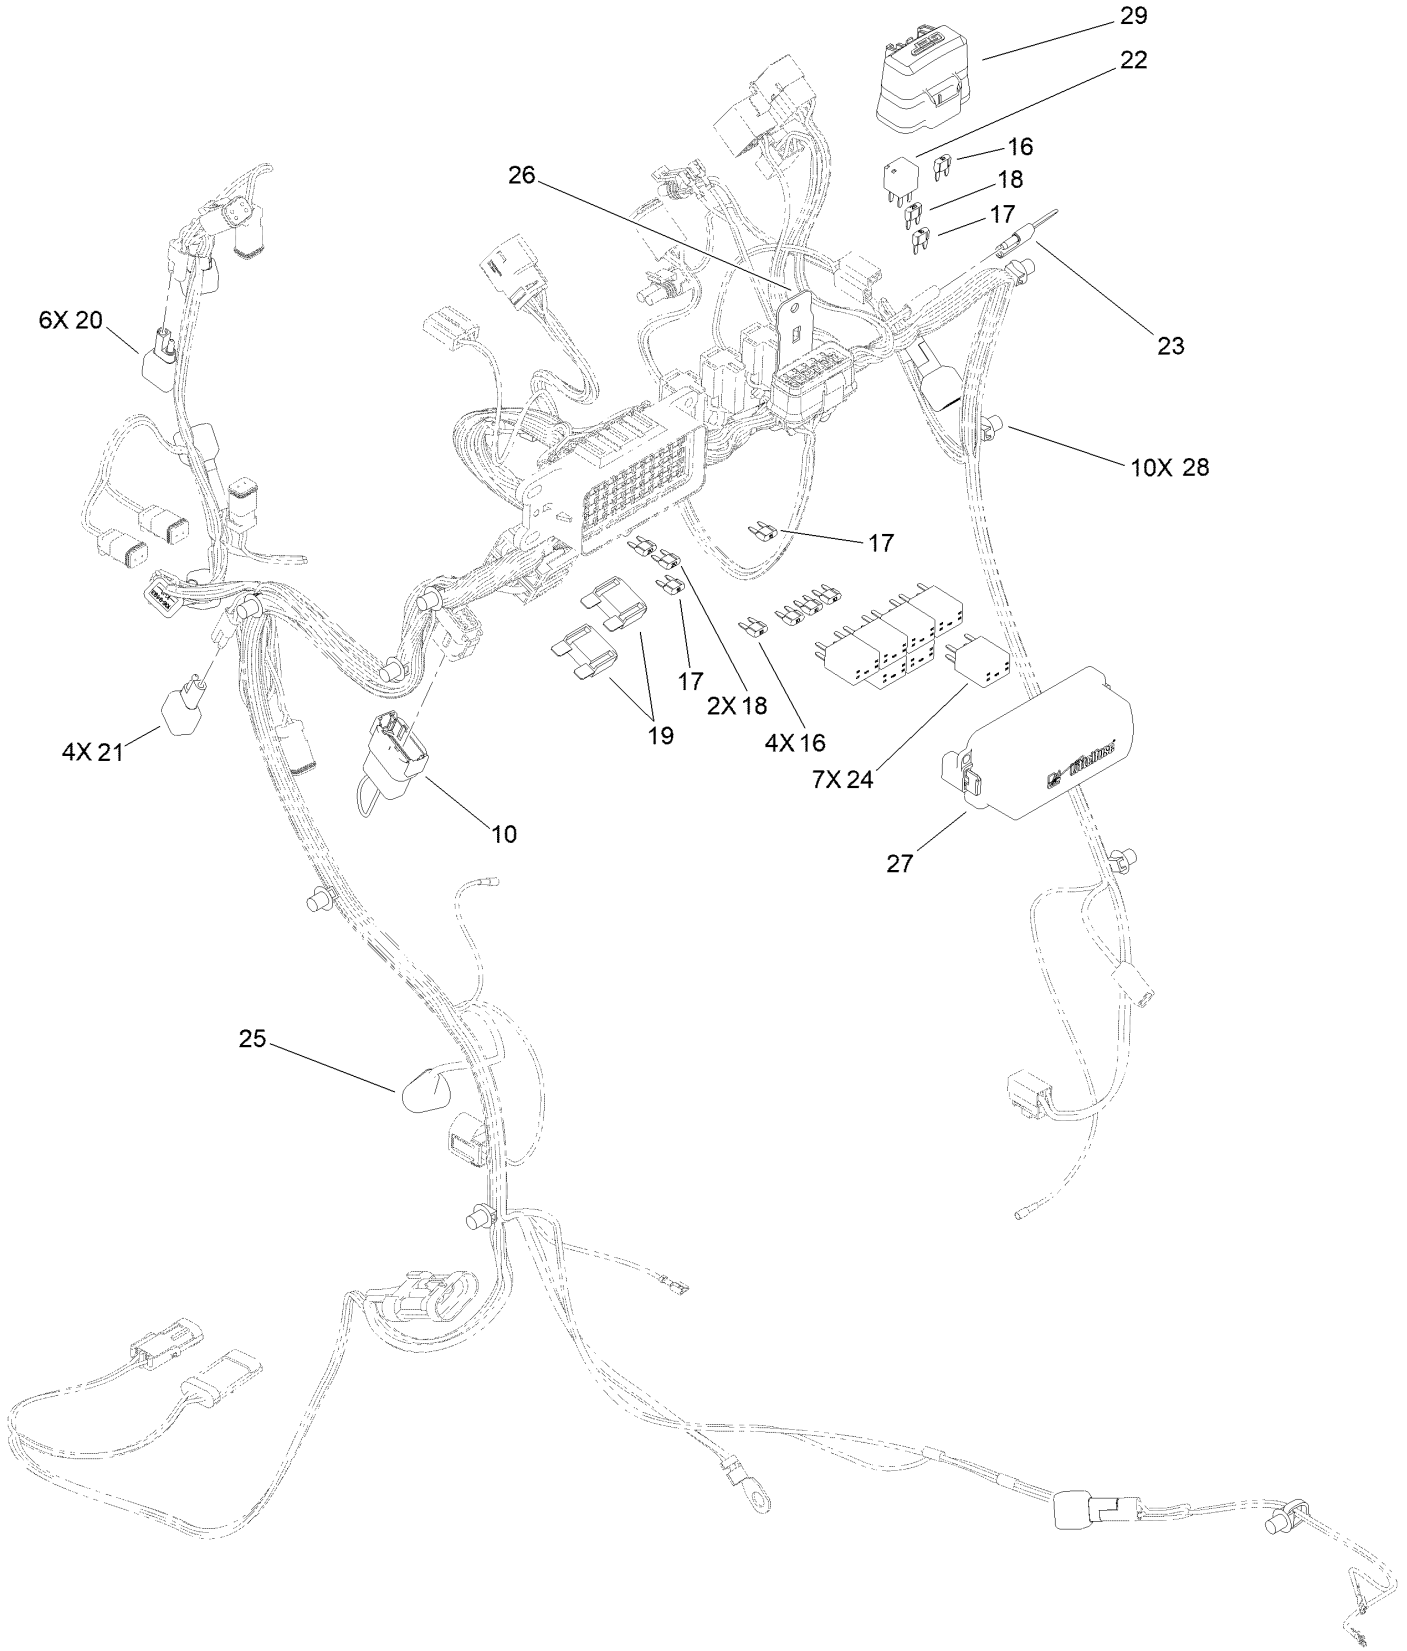

Main Wire Harness Assembly No. 122-3946 (continued)

Ref.	Part Number	Qty.	Description
10	122-3975	1	Harness-Wire, Jumper
16	121-8866	5	Fuse-Mini Blade, 10 Amp
17	121-8867	3	Fuse-Mini Blade, 15 Amp
18	121-8868	3	Fuse-Mini Blade, 20 Amp
19	94-8002	2	Fuse-Blade, 50 Amp
20	100-4918	6	Diode
21	108-9493	4	Diode-Tvs
22	126-3991	1	Relay-Micro
23	32180-416	1	Cap-Tethered
24	122-0368	7	Relay-280 ISO
25	32180-017	1	Insulater-Terminal, Black
26	32180-177	1	Clip-Mounting
27	32180-229	1	Cover-Littelfuse, Pdm 60F
28	32180-139	10	Mount-Tie Wrap, Magnetic
29	32180-176	1	Cover-Block, Fuse
30	32180-156	1	Cap-Plug, 6 Way ●

● Not illustrated

Attachments and Accessories

For 22750 TX 700 Narrow Track Compact Tool Carrier

Product Name	Model/Part
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Premium Engine Oil 15w40 (55 Gallon Drum)	121-6394
Premium Engine Oil 15w40 (5 Gallon Pail)	121-6395
PX Hydraulic Fluid (5 Gal)	133-8086
PX Hydraulic Fluid (55 Gal)	133-8087
PX Hydraulic Fluid-4 Pack (Gallon)	138-9460
Standard Bucket	22340
4 Cubic Foot Standard Bucket	22409
Loose Materials Bucket	22410
48in Hydraulic Blade	22414
Bore Drive Head	22420
Rod and Reamer	22421
Stump Grinder	22429
Tree Forks	22438
Cement Bowl	22442
40in Tiller	22445
Crumber Kit	22464
Trench Filler	22472
High-Torque Trencher Head	22473
High-Speed Trencher Head	22474
Crumber Kit	22477
4-in-1 Bucket	22478
Narrow Bucket	22520
Standard Bucket with Spacer	22522
Grapple Rake	22577
Snow Thrower	22585
Grapple Bucket	22590
Floor Scraper	22673
Auger Head	22805
Universal Swivel Auger Head	22806
18in Auger Bit	22814
24in Auger Bit	22815
30in Auger Bit	22816
12in Auger Bit Extension	22818
24in Auger Bit Extension	22819
6in Full-Flight Auger Bit	22820
9in Full-Flight Auger Bit	22821
12in Full-Flight Auger Bit	22822
15in Full-Flight Auger Bit	22823
Vibratory Plow	22911
Soil Cultivator	23102
Leveler	23165
30in Standard Bucket	23174
30in Pallet Fork	23175
30in Grapple	23176

Attachments and Accessories (continued)

New Red Paint - Gallon 361-11
Semi-Gloss Black Spray Paint 361-9
Air Dry Red Paint - Qt 5340



Count on it.