Form Number 3329-943

Spreader Base Unit

2002 and later Workman® 3000 and 4000 Series

Model No. 41253

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by **6:**1, the valve by **6:**2, and the wheel by **6:**3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2003
All Rights Reserved

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes

❶ Not serviced separately

Contents


Description	Page
Frame Assembly	 3
Hopper Support Assembly	 4
Hydraulic Drive Kit Assembly	 5
Hydraulic Motor Assembly No. 105-9455	 6

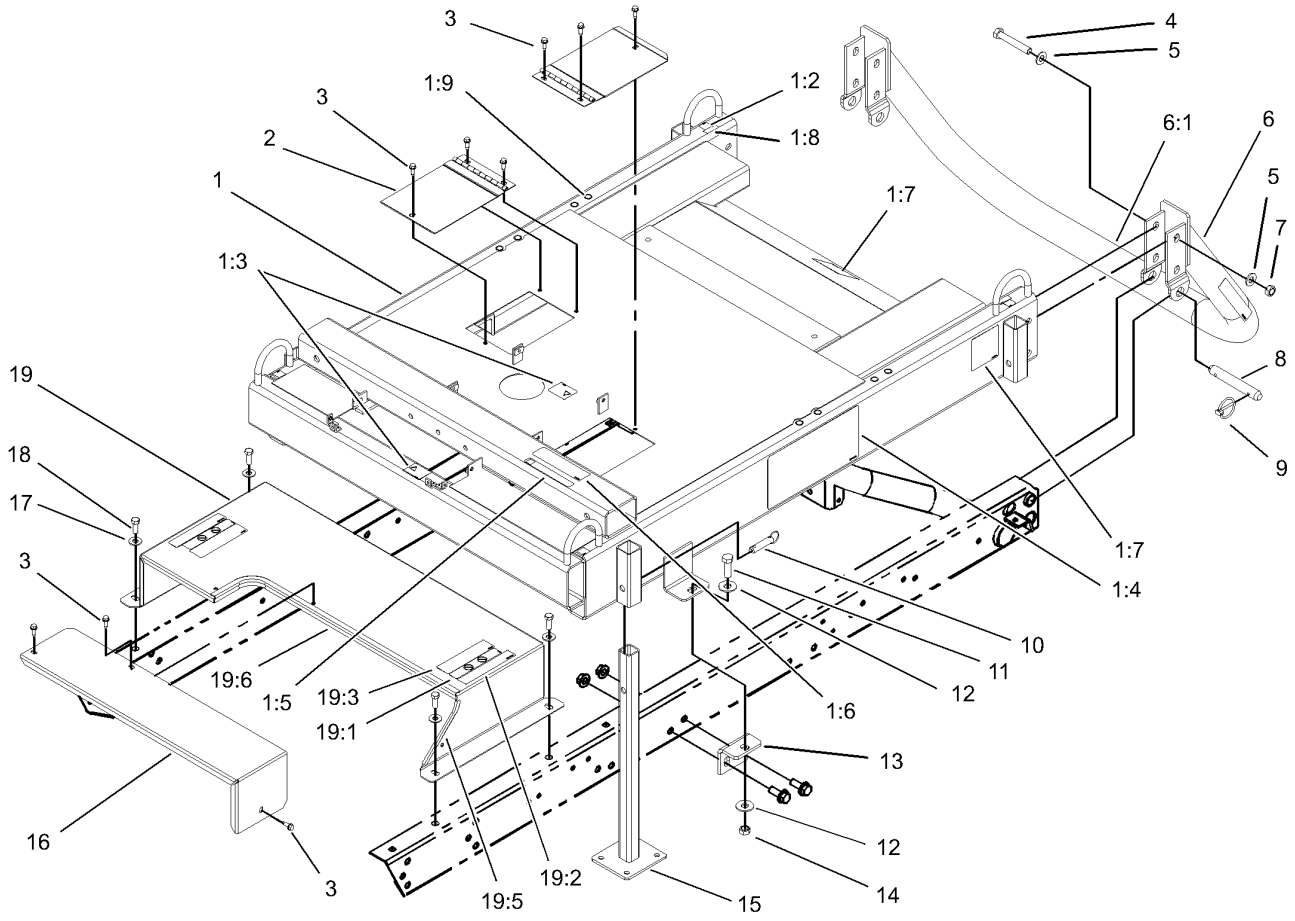

Frame Assembly


Ref	Part No.	Qty.	Description
1	106-2252	1	Frame ASM
1:2	93-9084	4	Decal-Point, Lift
1:3	93-9356	2	Decal-Warning, Belt
1:4	93-9863	2	Decal-Danger, Tipover
1:5	65-3090	1	Decal-Instruction
1:6	93-7814	1	Decal-Danger
1:7	94-1236	3	Decal-Residual Risk
1:8	93-9528	4	Decal
1:9	32148-10	8	Insert-Threaded
2	92-8211-03	2	Service Door ASM
3	32104-95	9	Screw-HWH
4	325-13	4	Screw-HH
5	3256-26	8	Washer-Flat
6	106-2255	1	Support Tube ASM
6:1	93-6689	2	Decal-No Riders
7	32153-5	4	Nut-Lock
8	92-1233	2	Pin-Clevis
9	92-1298	4	Pin-Lynch
10	100-4523	2	Pin-Hitch
11	325-6	2	Screw-HH
12	3256-6	4	Washer-Flat
13	92-2667-03	2	Bracket-Attach. Mount
14	32153-5	2	Nut-Lock
15	105-9482-03	2	Jack Stand ASM
16	93-6427-03	1	Panel-Radiator

Ref	Part No.	Qty.	Description
17	3256-4	4	Washer-Flat
18	323-6	4	Screw-HH
19	106-2275	1	Radiator Cover ASM
19:1	93-6687	2	Decal-No Step
19:2	93-6689	2	Decal-No Riders
19:3	93-7814	2	Decal-Danger
19:5	92-3627	1	Trim
19:6	42657	1	Trim-Panel, Front

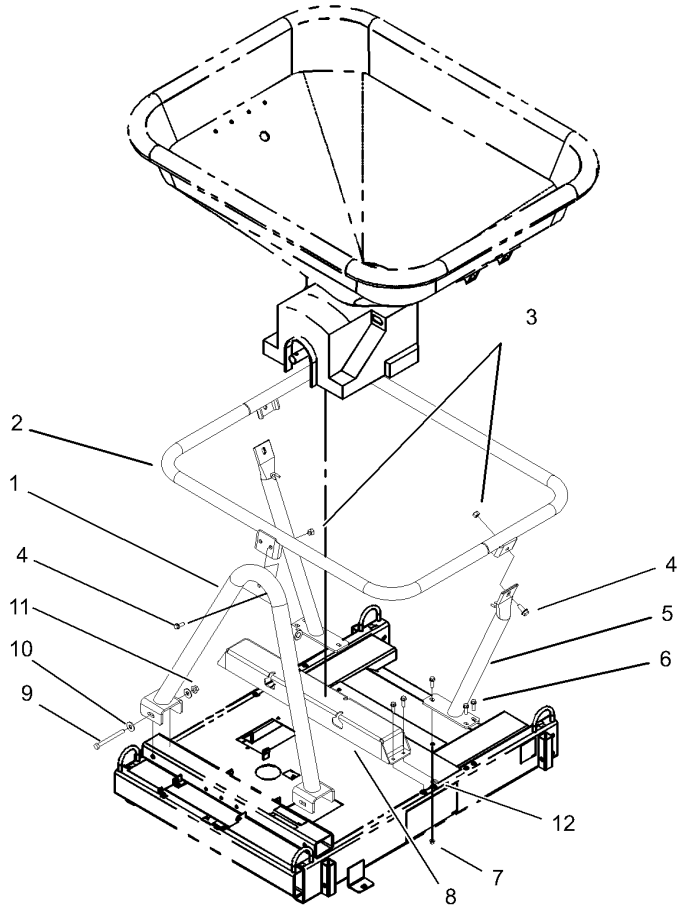


Hopper Support Assembly

Ref	Part No.	Qty.	Description
1	105-9456-03	1	Support Tube ASM
2	105-9459-03	1	Upper Frame ASM
3	3296-25	4	Nut-Lock, NI
4	3234-32	4	Screw-HHF
5	105-8007-03	2	Support Tube ASM
6	3234-24	10	Screw-HHF
7	32128-40	2	Nut-Flange
8	105-7973-03	1	Channel-Support
9	325-19	2	Screw-HH
10	3256-6	4	Washer-Flat
11	32128-49	2	Nut-HHF
12	3256-24	4	Washer-Flat

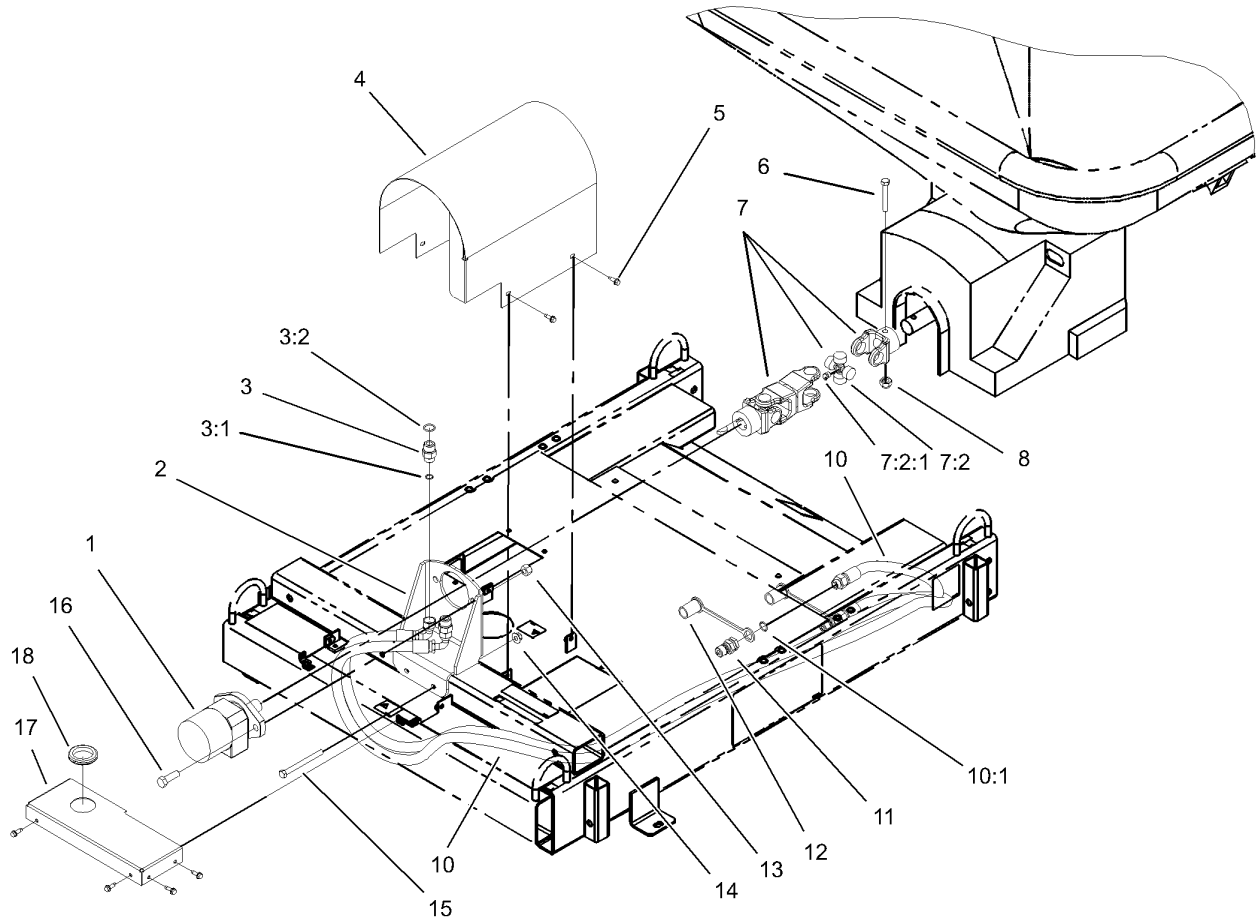

Hydraulic Drive Kit Assembly

Ref	Part No.	Qty.	Description
1	105-9455	1	Motor
2	105-7984-03	1	Mount-Motor
3	340-6	2	Fitting-Hyd, Straight
3:1	237-30	1	O-Ring
3:2	237-80	1	O-Ring
4	105-9485-03	1	Cover-Shaft, Drive
5	32104-95	8	Screw-HWH
6	323-12	1	Screw-HH
7	105-9536	1	Drive Shaft ASM
7:2	54-9180	2	U-Joint Kit
7:2:1	62-3820	1	Fitting-Grease
8	3296-59	1	Nut-Lock, NI
10	105-9539	2	HYD Hose ASM
10:1	237-79	1	O-Ring
11	105-4170	2	Coupler-Male
12	105-7963	2	Cap-Dust
13	3296-25	2	Nut-Lock, NI
14	32128-19	2	Nut-HF
15	323-17	2	Screw-HH
16	325-6	2	Screw-HH
17	105-9474-03	1	Cover-Access
18	240-2	1	Grommet-Rubber

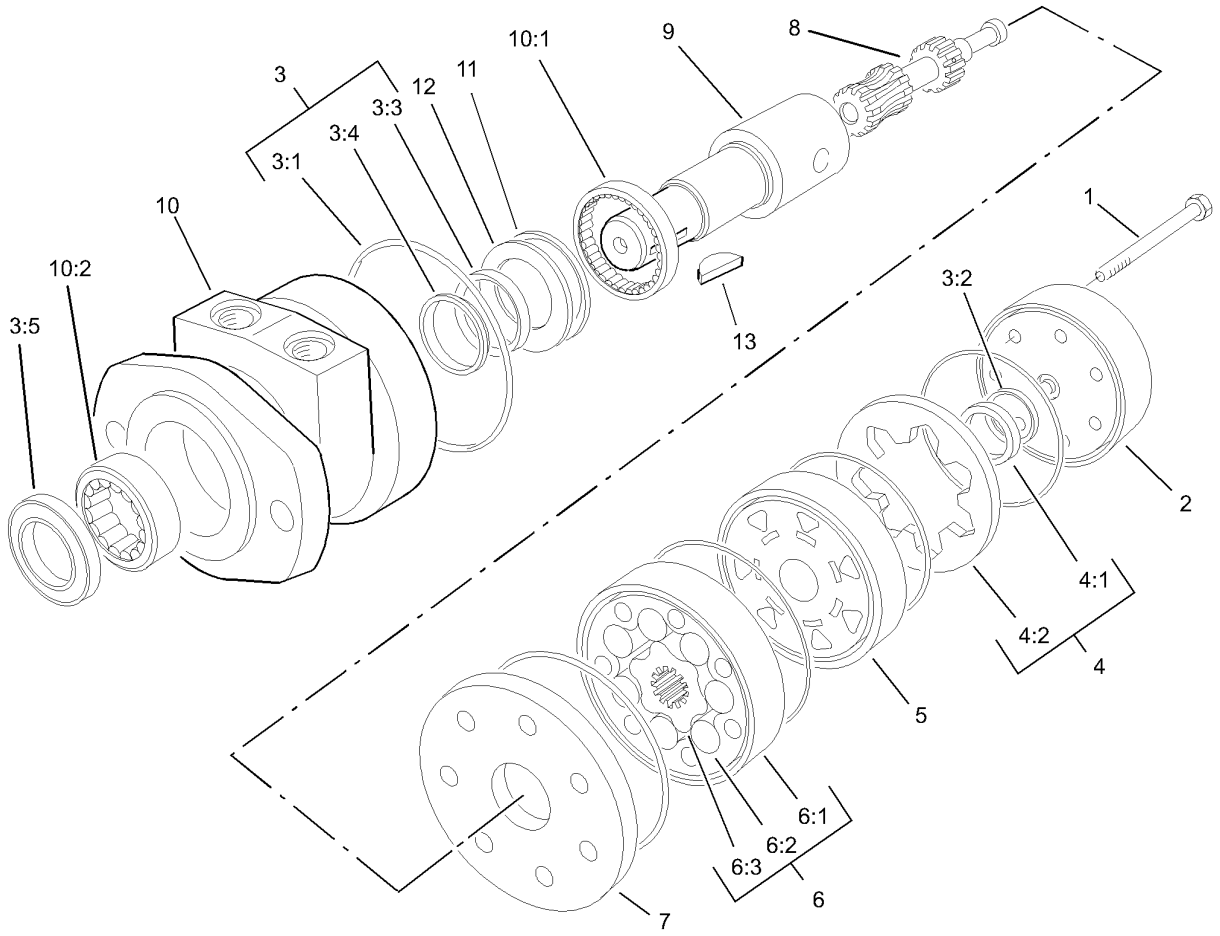

Hydraulic Motor Assembly No. 105-9455

Ref	Part No.	Qty.	Description
1	322-33	5	Screw-HH
2	106-1981	1	Cover-End
3	106-1989	1	Seal Kit
❶3:1		6	Seal-Ring
❶3:2		1	Seal-Commutator
❶3:3		1	Seal-Inner
❶3:4		1	Washer-Backup
❶3:5		1	Seal-Dirt And Water
4	106-1982	1	Commutator ASM
❶4:1		1	Commutator
❶4:2		1	Ring-Commutator
5	106-1983	1	Manifold
6	106-1984	1	Rotor Set
❶6:1		1	Stator
❶6:2		7	Vane
❶6:3		1	Rotor
7	106-1985	1	Plate-Wear
8	106-1986	1	Link-Drive
9	106-1987	1	Shaft-Coupling
10	106-1988	1	Housing ASM
❶10:1		1	Bearing
❶10:2		1	Bearing
❶11		1	Bearing-Thrust
❶12		1	Washer-Thrust

Ref	Part No.	Qty.	Description
13	106-1990	1	Key-Woodruff

NOTES


TORO®