Form Number 3329-979

# 12-32XL Lawn Tractor

**Model No. 71199 - 240000001 and up.**

## Parts Catalog

**Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head
WH. . . . . wing head

# Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Included in Engine Gasket Set-Ref. 358.
❹ Included in Valve Gasket Set-Ref. 1095.
❺ Included in Carburetor Overhaul Kit-Ref. 121.
❻ Obtain parts from your local Briggs and Stratton dealer


# Contents


| Description | Page |
|---|---|
| Frame and Body Assembly | 3 |
| Hood and Tower Assembly | 4 |
| Rear Body and Seat Assembly | 5 |
| Steering Assembly | 6 |
| Fixed Steering Assembly | 7 |
| Engine System Component Assembly | 8 |
| Traction Clutch Assembly | 9 |
| Shifter Assembly | 10 |
| 5 Speed Transaxle Assembly | 11 |
| 32in Deck Assembly | 12 |
| 32in Deck Blade Drive/Brake Assembly | 13 |
| Height of Cut Assembly | 14 |
| Electrical Component Assembly | 15 |
| Engine Assembly | 16 |
| 32in Deck and Baffle Assembly | 17 |
| Cylinder Assembly Briggs and Stratton Model No. 219907-0170-E1 | 18 |
| Cylinder Head Assembly Briggs and Stratton Model No. 219907-0170-E1 | 19 |
| Crankshaft Assembly Briggs and Stratton Model No. 219907-0170-E1 | 20 |
| Crankcase Assembly Briggs and Stratton Model No. 219907-0170-E1 | 21 |
| Oil Filter, Tube and Pump Assembly Briggs and Stratton Model No. 219907-0170-E1 | 22 |
| Carburetor Assembly Briggs and Stratton Model No. 219907-0170-E1 | 23 |
| Governor Assembly Briggs and Stratton Model 219907-0170-E1 | 24 |
| Blower Housing Assembly Briggs and Straton Model No. 219907-0170-E1 | 25 |
| Starter Assembly Briggs and Stratton Model No. 219907-0170-E1 | 26 |
| Gasket Assembly Briggs and Stratton Model No. 219907-0170-E1 | 27 |
| Carburetor Overhaul Kit Assembly Briggs and Stratton Model No. 219907-0170-E1 | 28 |

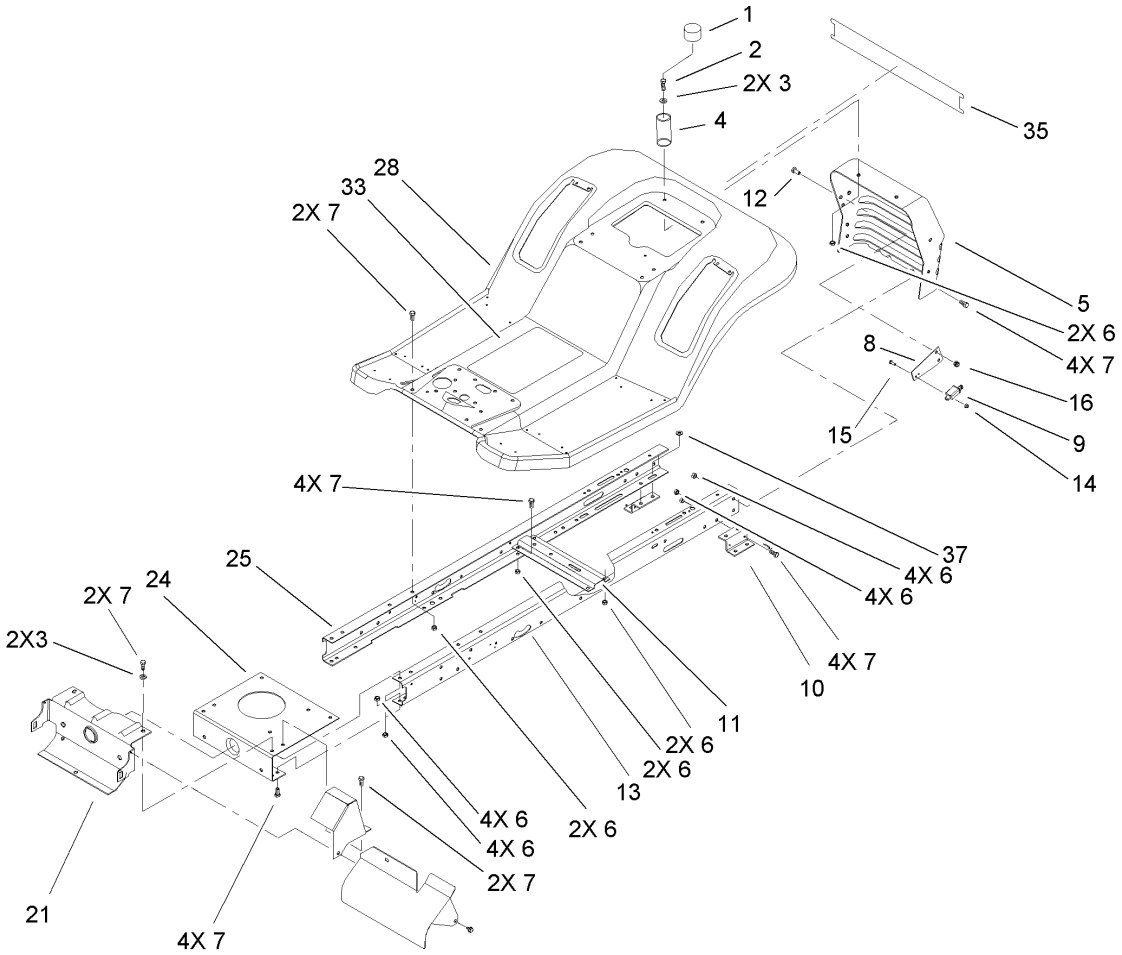


# Frame and Body Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 701178 | 2 | Cap-Protector |
| 2 | 322-5 | 2 | Screw-HH |
| 3 | 3256-23 | 4 | Washer-Flat |
| 4 | 88-6220 | 2 | Spring-Compression |
| 5 | 99-2957-03 | 1 | Panel-Rear, Hitch |
| 6 | 3296-29 | 24 | Nut-Lock, NI |
| 7 | 322-3 | 22 | Screw-HH |
| 8 | 99-2953-03 | 1 | Plate-Switch |
| 9 | 95-1653 | 1 | Switch-Pole, Single |
| 10 | 94-1967-03 | 2 | Bracket-Mounting, Transmission |
| 11 | 88-4620-03 | 1 | Bracket-Idler, Pivot |
| 12 | 322-3 | 2 | Screw-HH |
| 13 | 99-2958-03 | 1 | Rail-Frame, LH |
| 14 | 3296-1 | 2 | Nut-Lock, NI |
| 15 | 3290-392 | 2 | Screw-HHF |
| 16 | 3296-29 | 2 | Nut-Lock, NI |
| 21 | 98-3575-03 | 1 | Support-Front, Axle |
| 24 | 88-4630-03 | 1 | Plate-Engine, Mounting |
| 25 | 99-2959-03 | 1 | Rail-Frame, RH |
| 28 | 99-2971 | 1 | Rear Body ASM |
| 33 | 99-6094 | 1 | Decal-Instruction |
| 35 | 105-2498 | 1 | Decal-Rear |
| 37 | 3256-23 | 2 | Washer-Flat |

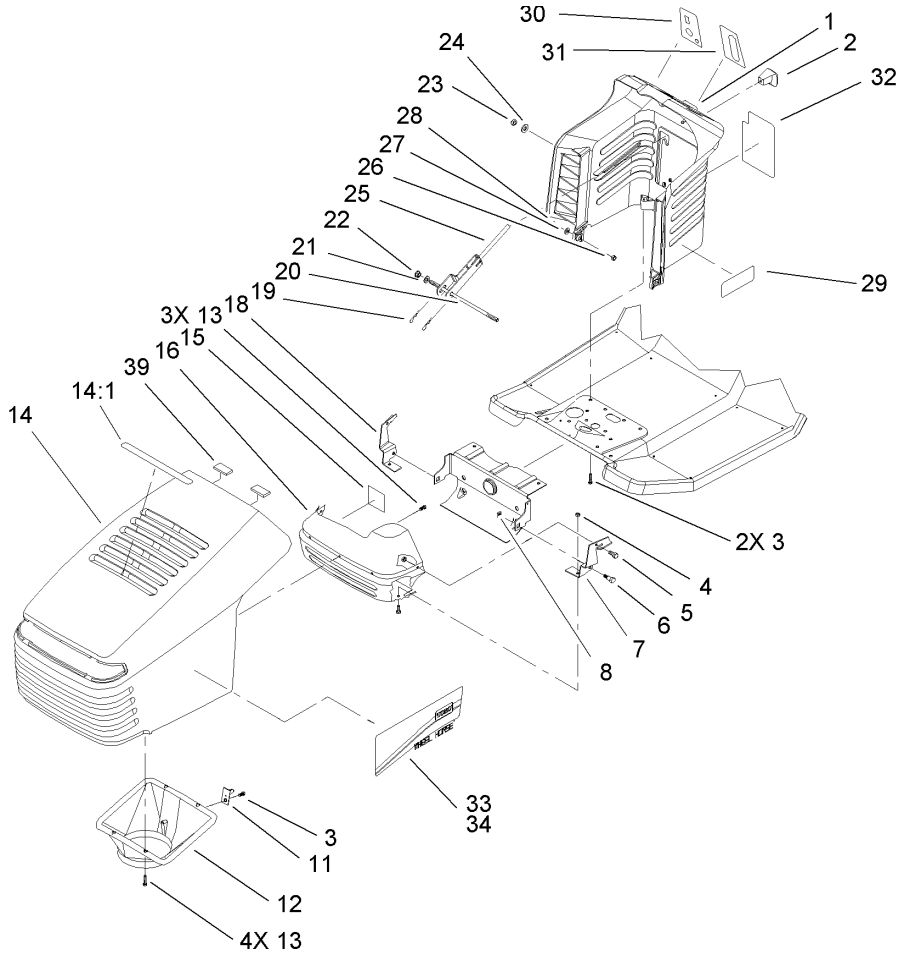


# Hood and Tower Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 99-1947 | 1 | Tower-Steering |
| 2 | 94-5565 | 1 | Knob-Shift |
| 3 | 46-8091 | 3 | Screw-HWH |
| 4 | 3296-42 | 4 | Nut-Lock, NI |
| 5 | 321-2 | 4 | Screw-HH |
| 6 | 28-0540 | 2 | Bolt-Shoulder |
| 7 | 88-6050-03 | 1 | Bracket-Hinge, LH |
| 8 | 3290-496 | 2 | Nut-Retainer |
| 11 | 94-1984 | 1 | Latch-Pin |
| 12 | 93-3891 | 1 | Duct-Air, Hood |
| 13 | 46-8090 | 7 | Screw-Plastite |
| 14 | 92-8650 | 1 | Hood ASM |
| 14:1 | 92-5748 | 1 | Decal-Duct, Air |
| 15 | 92-5782 | 3 | Tape-Foil |
| 16 | 93-3864-03 | 1 | Shield-Heat |
| 18 | 88-6040-03 | 1 | Bracket-Hinge, RH |
| 19 | 3290-307 | 2 | Pin-Hair |
| 20 | 100-7401 | 1 | Rod-Tower, Pivot |
| 21 | 3256-24 | 2 | Washer-Flat |
| 22 | 3218-3 | 2 | Nut-Jam |
| 23 | 100-7402 | 2 | Nut-Cap |
| 24 | 100-7403 | 2 | Washer-Flat |
| 25 | 88-5190-03 | 1 | Lever-Deck, Engage |
| 26 | 3296-29 | 2 | Nut-Lock, NI |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 27 | 3256-23 | 2 | Washer-Flat |
| 28 | 322-3 | 2 | Screw-HH |
| 29 | 106-6405 | 2 | Decal-Tower |
| 30 | 99-8140 | 1 | Decal-Ignition |
| 31 | 92-2461 | 1 | Decal-Throttle |
| 32 | 92-2462 | 1 | Decal-Deck, Engage |
| 33 | 105-2497 | 1 | Decal-Hood, LH |
| 34 | 105-2496 | 1 | Decal-Hood, RH |
| 39 | 94-1980 | 2 | Foam-Hood |

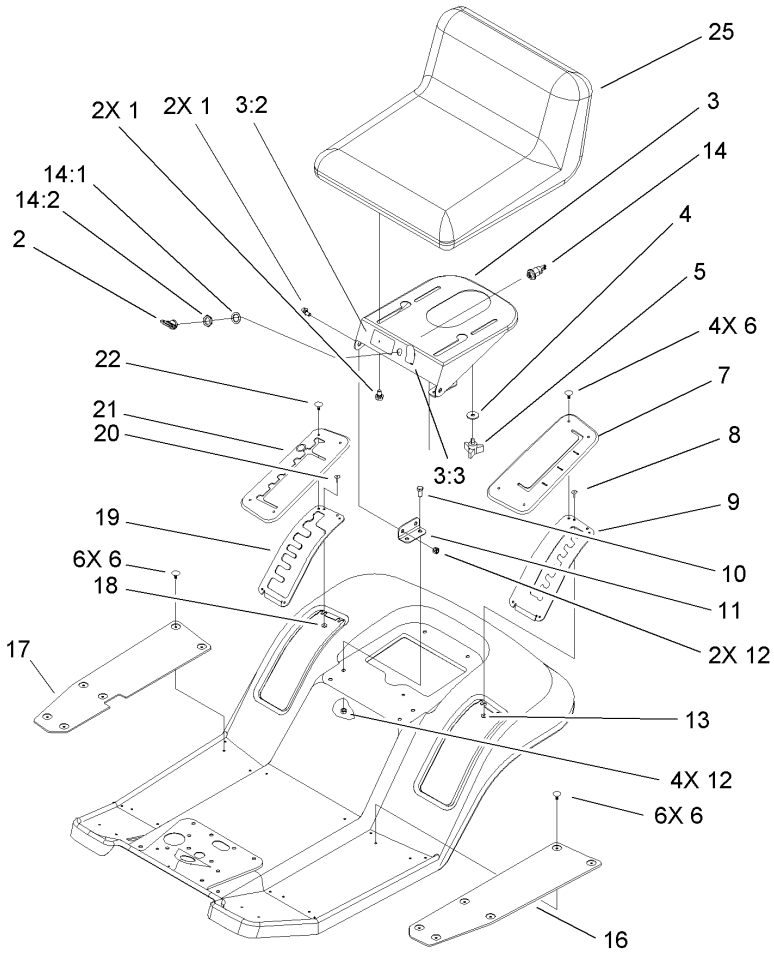


# Rear Body and Seat Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 37-8770 | 4 | Bolt-Shoulder |
| 2 | 63-8360 | 1 | Key-Ignition |
| 3 | 106-6436 | 1 | Support ASM-Seat |
| 3:2 | 99-2985 | 1 | Danger-Decal |
| 3:3 | 99-5339 | 1 | Decal |
| 4 | 5-4460 | 2 | Washer-Pivot |
| 5 | 92-9674 | 2 | Knob |
| 6 | 3290-479 | 16 | Fastener-Panel |
| 7 | 88-5170 | 1 | Cover-HOC |
| 8 | 3290-282 | 2 | Rivet-Pop |
| 9 | 88-5030-03 | 1 | Gate-HOC |
| 10 | 322-3 | 4 | Screw-HH |
| 11 | 88-4820-03 | 2 | Bracket-Hinge, Seat |
| 12 | 3296-29 | 6 | Nut-Lock, NI |
| 13 | 3269-26 | 2 | Washer-Flat |
| 14 | 46-5780 | 1 | Switch-Starter |
| 14:1 | 3254-5 | 1 | Washer-Tooth |
| 14:2 | 218-461 | 1 | Nut-HH |
| 16 | 88-5240 | 1 | Mat-Foot, LH |
| 17 | 88-5220 | 1 | Mat-Foot, RH |
| 18 | 3269-26 | 2 | Washer-Flat |
| 19 | 88-5020-03 | 1 | Plate-Shift Gate |
| 20 | 3290-282 | 2 | Rivet-Pop |
| 21 | 88-5160 | 1 | Cover-Shift Gate |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 22 | 3290-479 | 4 | Fastener-Panel |
| 25 | 106-6439 | 1 | Seat-11in |

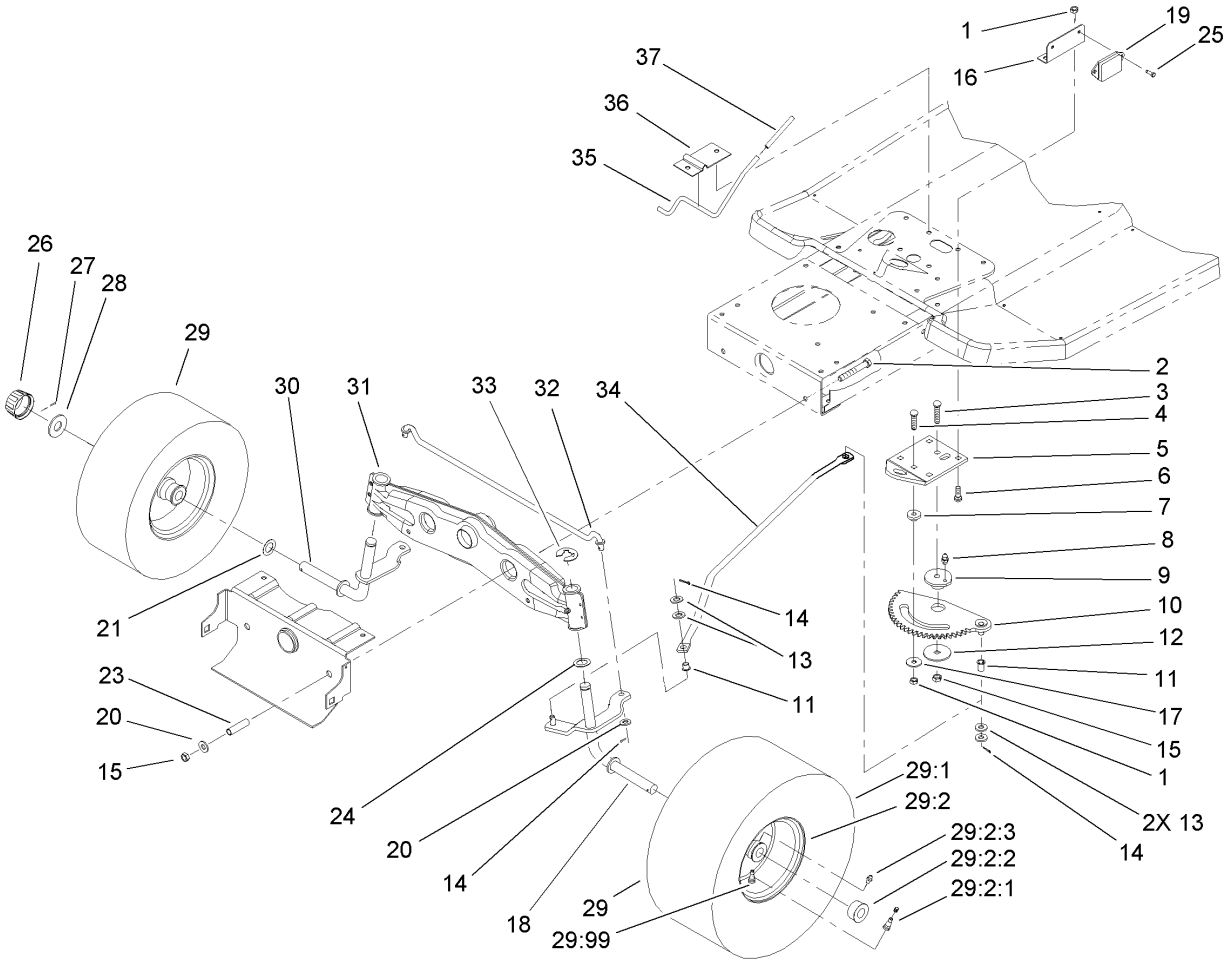


# Steering Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 3296-29 | 5 | Nut-Lock, NI |
| 2 | 323-13 | 2 | Screw-HH |
| 3 | 3231-4 | 1 | Screw-CARR |
| 4 | 3230-3 | 1 | Screw-CARR |
| 5 | 88-5130-03 | 1 | Bracket-Rack, Steering |
| 6 | 3230-2 | 4 | Bolt-CARR |
| 7 | 88-5010 | 1 | Spacer-Rack, Steering |
| 8 | 302-26 | 1 | Fitting-Grease |
| 9 | 88-4670 | 1 | Bushing-Eccentric |
| 10 | 88-5200 | 1 | Rack-Steering |
| 11 | 52-2891 | 2 | Bushing-Link, Steering |
| 12 | 111419 | 1 | Washer-Bearing |
| 13 | 3256-25 | 4 | Washer-Flat |
| 14 | 3272-10 | 4 | Pin-Cotter |
| 15 | 3296-39 | 3 | Nut-Lock, NI |
| 16 | 99-2956-03 | 1 | Bracket-Module |
| 17 | 5-4460 | 1 | Washer-Pivot |
| 18 | 92-7890-03 | 1 | Spindle-LH |
| 19 | 99-3700 | 1 | Module |
| 20 | 3256-24 | 4 | Washer-Flat |
| 21 | 3-6498 | 4 | Washer-Thrust |
| 23 | 88-5470 | 2 | Spacer-Axle, Front |
| 24 | 3-6498 | 4 | Washer-Thrust |
| 25 | 9266714 | 2 | Screw-HWH |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 26 | 61-9780 | 2 | Cap-Hub |
| 27 | 3272-12 | 2 | Pin-Cotter |
| 28 | 28-2480 | 2 | Washer |
| ❷29 | | 2 | Front Wheel And Tire ASM |
| 29:1 | 99-2992 | 1 | Tire |
| 29:2 | 110513 | 1 | Rim ASM |
| 29:2:1 | 232-27 | 1 | Stem-Valve |
| 29:2:2 | 88-4400 | 2 | Bearing-Wheel |
| 29:2:3 | 302-5 | 1 | Fitting-Grease |
| 29:99 | 232-38 | 1 | Tube |
| 30 | 92-7889-03 | 1 | Spindle-RH |
| 31 | 94-1962-03 | 1 | Front Axle ASM |
| 32 | 88-5380 | 1 | Tie Rod-Steering |
| 33 | 32151-48 | 2 | E-Ring |
| 34 | 88-4830 | 1 | Link-Drag |
| 35 | 88-5510 | 1 | Rod-Brake, Parking |
| 36 | 88-5520-03 | 1 | Bracket-Brake, Parking |
| 37 | 88-0890 | 1 | Grip-Brake, Parking |

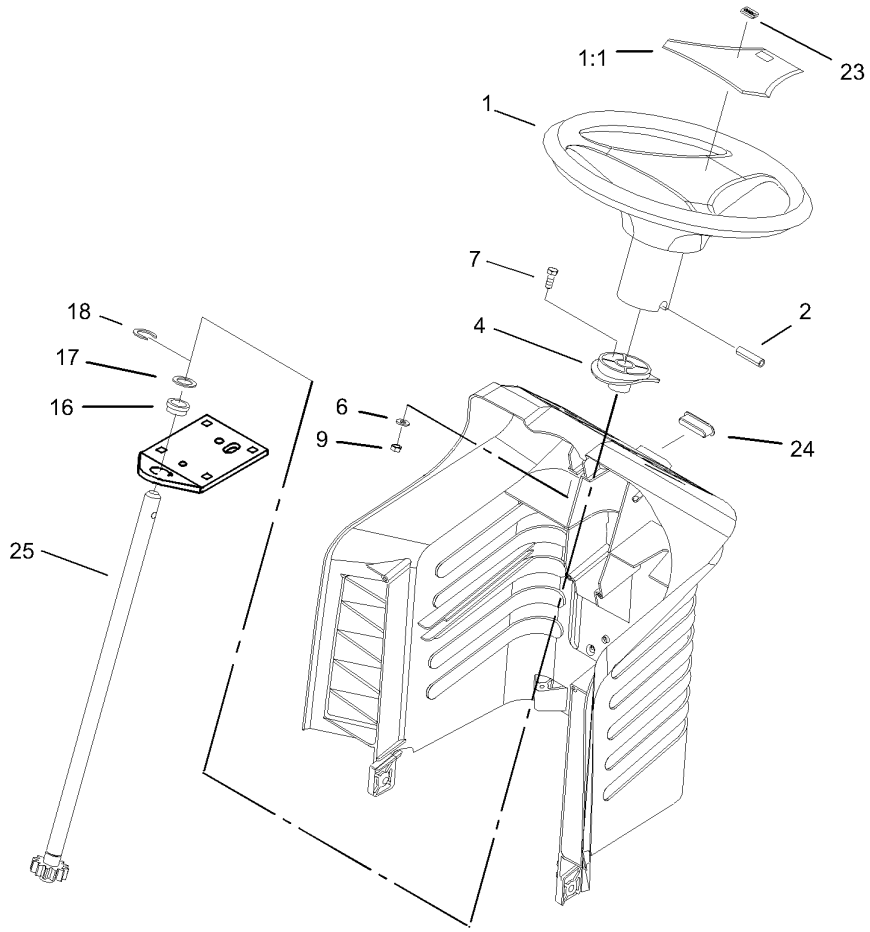


# Fixed Steering Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 98-1467 | 1 | Wheel-Steering |
| 1:1 | 98-1468 | 1 | Cover-Wheel, Steering |
| 2 | 32121-111 | 1 | Pin-Roll |
| 4 | 88-4190 | 1 | Bushing-Sliding |
| 6 | 3256-22 | 2 | Washer-Flat |
| 7 | 321-4 | 2 | Screw-HH |
| 9 | 3296-42 | 2 | Nut-Lock, NI |
| 16 | 88-5150 | 1 | Bearing-Flange |
| 17 | 3-6498 | 1 | Washer-Thrust |
| 18 | 32151-48 | 1 | E-Ring |
| 23 | 98-1459 | 1 | Decal |
| 24 | 88-4150 | 1 | Plug |
| 25 | 88-6380 | 1 | Shaft-Steering, Long |

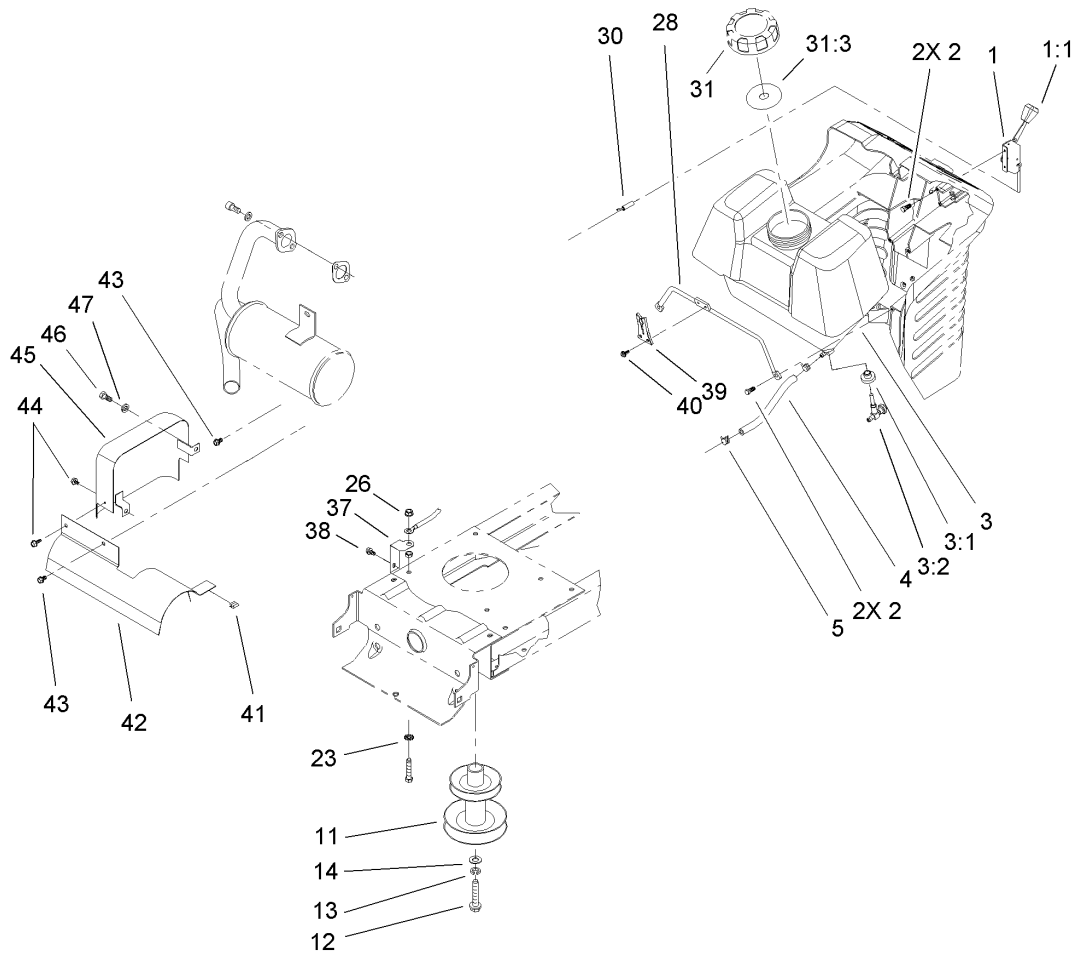


# Engine System Component Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 88-4340 | 1 | Control-Throttle |
| 1:1 | 66-0120 | 1 | Knob |
| 2 | 27-0220 | 4 | Screw-Special |
| 3 | 88-3880 | 1 | Gas Tank ASM |
| 3:1 | 46-6560 | 1 | Bushing |
| 3:2 | 104048 | 1 | Valve-Fuel |
| 4 | 47-2963 | 1 | Hose-Fuel |
| 5 | 2412-98 | 2 | Clamp |
| 11 | 88-5050 | 1 | Pulley-Engine |
| 12 | 62-3760 | 1 | Screw-HH |
| 13 | 3253-22 | 1 | Washer-Lock |
| 14 | 3256-25 | 1 | Washer-Flat |
| 23 | 3255-8 | 1 | Washer-Lock |
| 26 | 32149-1 | 2 | Nut |
| 28 | 94-1952 | 1 | Rod-Tank, Gas |
| 30 | 88-4350 | 1 | Cable-Throttle |
| 31 | 88-3980 | 1 | Gas Cap ASM |
| 31:3 | 88-4010 | 1 | Gasket-Cap, Gas |
| 37 | 93-3809 | 1 | Bracket-Ground |
| 38 | 9266714 | 1 | Screw-HWH |
| 39 | 94-1951 | 1 | Latch-Hood |
| 40 | 32144-112 | 2 | Screw-HWH |
| 41 | 93-3882 | 1 | Clip-Tinnerman |
| 42 | 105-2462-03 | 1 | Shield-Muffler |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 43 | 9266714 | 2 | Screw-HWH |
| 44 | 32104-76 | 2 | Screw |
| 45 | 93-8450-03 | 1 | Exhaust Shield ASM |
| 46 | 322-3 | 1 | Screw-HH |
| 47 | 3253-4 | 1 | Washer-Lock |

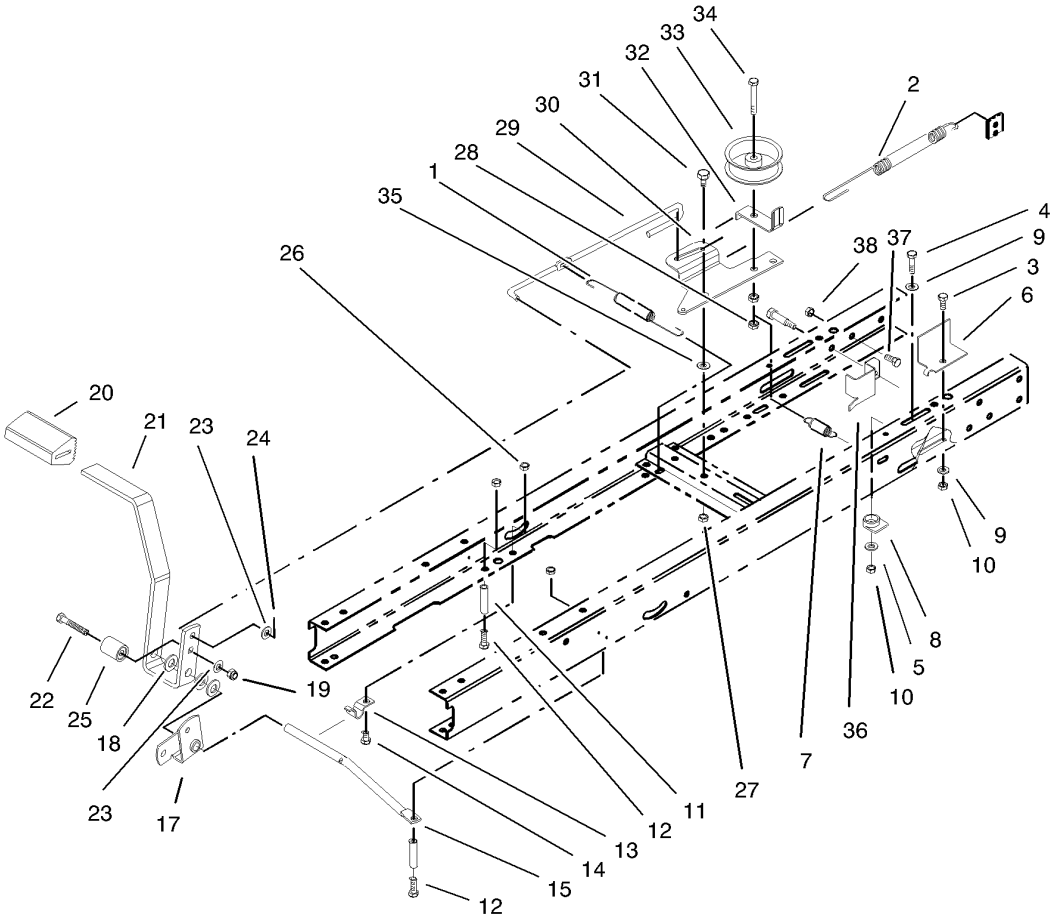


# Traction Clutch Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 27-8890 | 1 | Spring-Return |
| 2 | 94-4295 | 1 | Spring-Brake |
| 3 | 322-3 | 1 | Screw-HH |
| 4 | 322-6 | 1 | Screw-HH |
| 5 | 5-4460 | 1 | Washer-Pivot |
| 6 | 94-5433 | 1 | Bracket-Belt, Guide |
| 7 | 88-6330 | 1 | Spring-Extension |
| 8 | 84-5610 | 1 | Guide-Cable |
| 9 | 3256-23 | 2 | Washer-Flat |
| 10 | 3296-29 | 2 | Nut-Lock, NI |
| 11 | 46-5590 | 2 | Tubing-Spacer |
| 12 | 322-12 | 2 | Screw-HH |
| 13 | 88-4810 | 1 | Clamp-Shift, Pivot |
| 14 | 322-3 | 1 | Screw-HH |
| 15 | 88-5500 | 1 | Rod-Pedal, Pivot |
| 17 | 88-4800-03 | 1 | Bellcrank |
| 18 | 3256-26 | 3 | Washer-Flat |
| 19 | 3296-47 | 1 | Nut-Lock, NI |
| 20 | 65-2920 | 1 | Pad-Pedal |
| 21 | 88-5000-03 | 1 | Pedal-Clutch/brake |
| 22 | 322-9 | 1 | Screw-HH |
| 23 | 3256-23 | 2 | Washer-Flat |
| 24 | 3272-10 | 1 | Pin-Cotter |
| 25 | 99-6836 | 1 | Spacer-Switch |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 26 | 3296-29 | 3 | Nut-Lock, NI |
| 27 | 3296-29 | 1 | Nut-Lock, NI |
| 28 | 3296-59 | 2 | Nut-Lock, NI |
| 29 | 88-5270 | 1 | Rod-Clutch/brake |
| 30 | 88-6070 | 1 | Arm-Idler |
| 31 | 37-8770 | 1 | Bolt-Shoulder |
| 32 | 88-5560 | 1 | Guide-Idler, Belt |
| 33 | 104-4160 | 1 | Pulley-Idler |
| 34 | 323-10 | 1 | Screw-HH |
| 35 | 5-4460 | 1 | Washer-Pivot |
| 36 | 94-4926 | 1 | Bracket-Belt, Guide |
| 37 | 322-3 | 1 | Screw-HH |
| 38 | 3296-29 | 1 | Nut-Lock, NI |

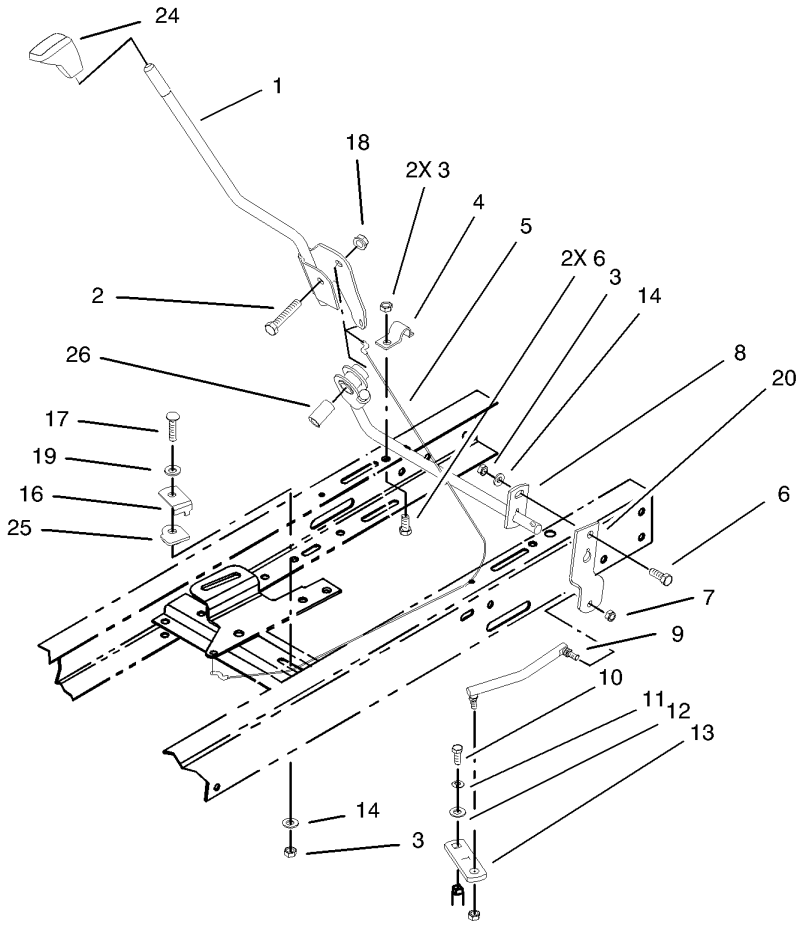



# Shifter Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 94-1991-03 | 1 | Lever-Shift |
| 2 | 323-10 | 1 | Screw-HH |
| 3 | 3296-29 | 4 | Nut-Lock, NI |
| 4 | 88-4810 | 2 | Clamp-Shift, Pivot |
| 5 | 55-9321 | 1 | Cable-Clutch |
| 6 | 322-3 | 3 | Screw-HH |
| 7 | 3296-3 | 2 | Nut-Lock, NI |
| 8 | 94-1993-03 | 1 | Shift Pivot ASM |
| 9 | 94-5432 | 1 | Link-Shift |
| 10 | 329-23 | 1 | Screw-HH |
| 11 | 3253-3 | 1 | Washer-Lock |
| 12 | 7-5461 | 1 | Spacer |
| 13 | 88-5340 | 1 | Lever-Shift |
| 14 | 3256-23 | 2 | Washer-Flat |
| 16 | 88-5930 | 1 | Keeper-Cable |
| 17 | 3230-3 | 1 | Screw-CARR |
| 18 | 3296-39 | 1 | Nut-Lock, NI |
| 19 | 3256-25 | 1 | Washer-Flat |
| 20 | 94-1968 | 1 | Lever-Shift Pivot |
| 24 | 94-5565 | 1 | Knob-Shift |
| 25 | 84-5610 | 1 | Guide-Cable |
| 26 | 94-1997 | 1 | Bushing-Shift, Lever |

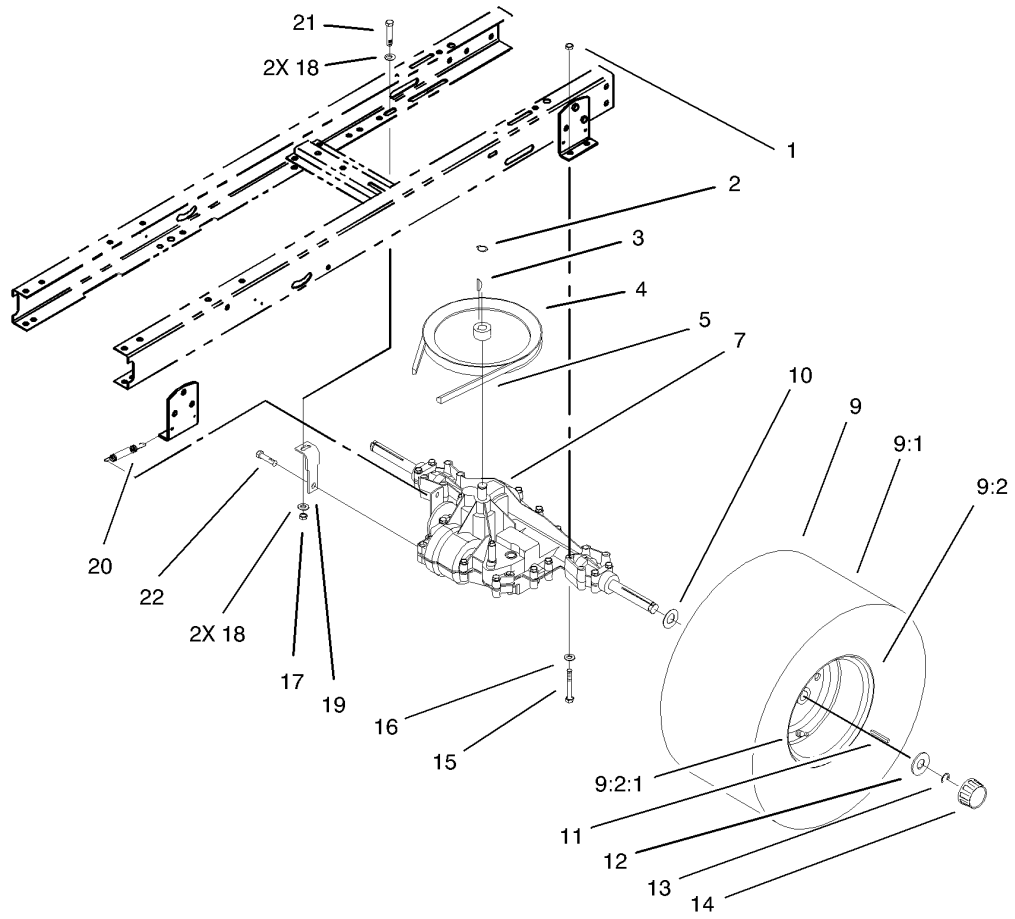


# 5 Speed Transaxle Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 3296-29 | 4 | Nut-Lock, NI |
| 2 | 32120-64 | 1 | Ring-Snap, External |
| 3 | 3257-23 | 1 | Key-Woodruff |
| 4 | 88-4840 | 1 | Pulley-Transmission |
| 5 | 94-4291 | 1 | V-Belt, Traction |
| 7 | 94-6022 | 1 | Transaxle |
| ❷9 | | 2 | Rear Wheel & Tire ASM |
| 9:1 | 99-2336 | 1 | Tire |
| 9:2 | 88-4380 | 1 | Rim ASM |
| 9:2:1 | 232-27 | 1 | Stem-Valve |
| ❶9:99 | 231-91 | 1 | Tube |
| 10 | 3-6498 | 2 | Washer-Thrust |
| 11 | 7-0036 | 2 | Key-Square |
| 12 | 28-2480 | 2 | Washer |
| 13 | 32151-48 | 2 | E-Ring |
| 14 | 61-9780 | 2 | Cap-Hub |
| 15 | 322-12 | 4 | Screw-HH |
| 16 | 3256-23 | 4 | Washer-Flat |
| 17 | 3296-29 | 2 | Nut-Lock, NI |
| 18 | 3256-23 | 4 | Washer-Flat |
| 19 | 94-1969 | 2 | Strap-Torque |
| 20 | 26-6701 | 1 | Spring-Brake Return |
| 21 | 322-3 | 2 | Screw-HH |
| 22 | 32144-14 | 2 | Screw-HWH |

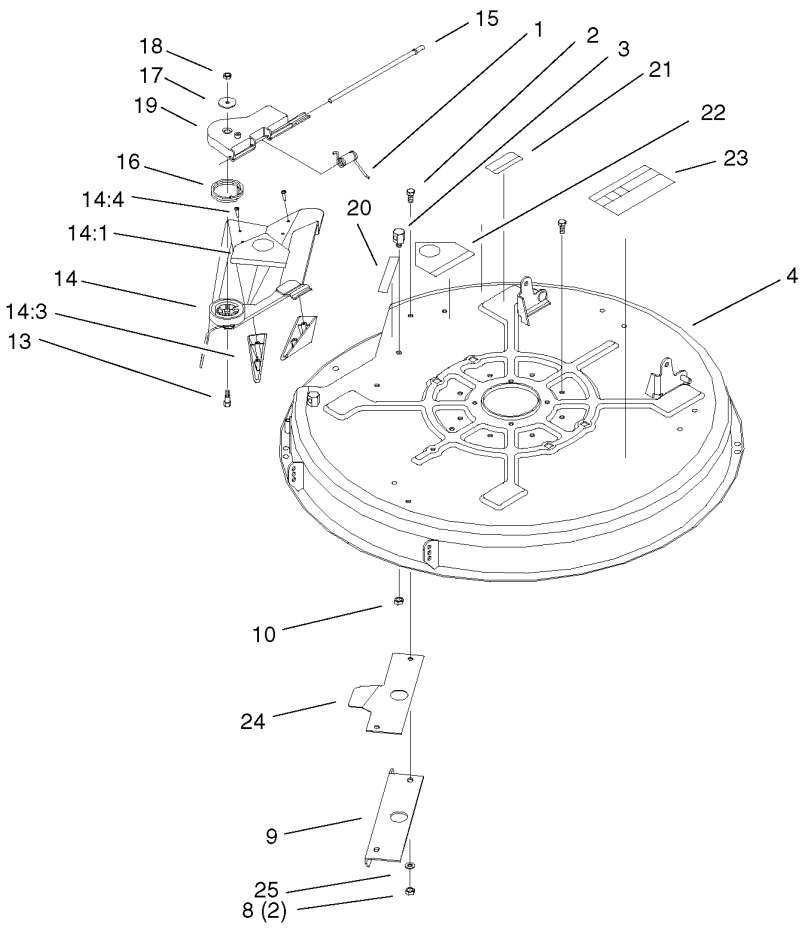


# 32in Deck Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 92-2493 | 1 | Spring |
| 2 | 322-3 | 2 | Screw-HH |
| 3 | 28-7350 | 1 | Post-Pivot |
| 4 | 95-7482 | 1 | ASM-Deck |
| 8 | 3296-29 | 2 | Nut-Lock, NI |
| 9 | 44-5720-03 | 1 | Baffle-Deck |
| 10 | 3296-59 | 1 | Nut-Lock, NI |
| 13 | 92-8916 | 1 | Bolt-Shoulder |
| 14 | 100-6200 | 1 | ASM - Deflector, 32in |
| 14:1 | 93-1122 | 1 | Decal-Danger |
| 14:3 | 93-7696 | 2 | Kicker |
| 14:4 | 93-0231 | 4 | Screw-PPH |
| 15 | 88-6150 | 1 | Rod-Deflector Hinge |
| 16 | 88-6160 | 1 | Spring-Torsion |
| 17 | 3256-58 | 1 | Washer-Flat |
| 18 | 3296-42 | 1 | Nut-Lock, NI |
| 19 | 88-4540 | 1 | Pivot-Hinge Deflector |
| 20 | 68-3650 | 1 | Decal-Danger, Deflector |
| 21 | 55-4300 | 2 | Decal-Warning |
| 22 | 93-1122 | 1 | Decal-Danger |
| 23 | 66-1340 | 1 | Decal-Danger |
| 24 | 92-2494-03 | 1 | Ramp-Deflector |
| 25 | 3256-23 | 2 | Washer-Flat |


| | | | |
|---|---|---|---|

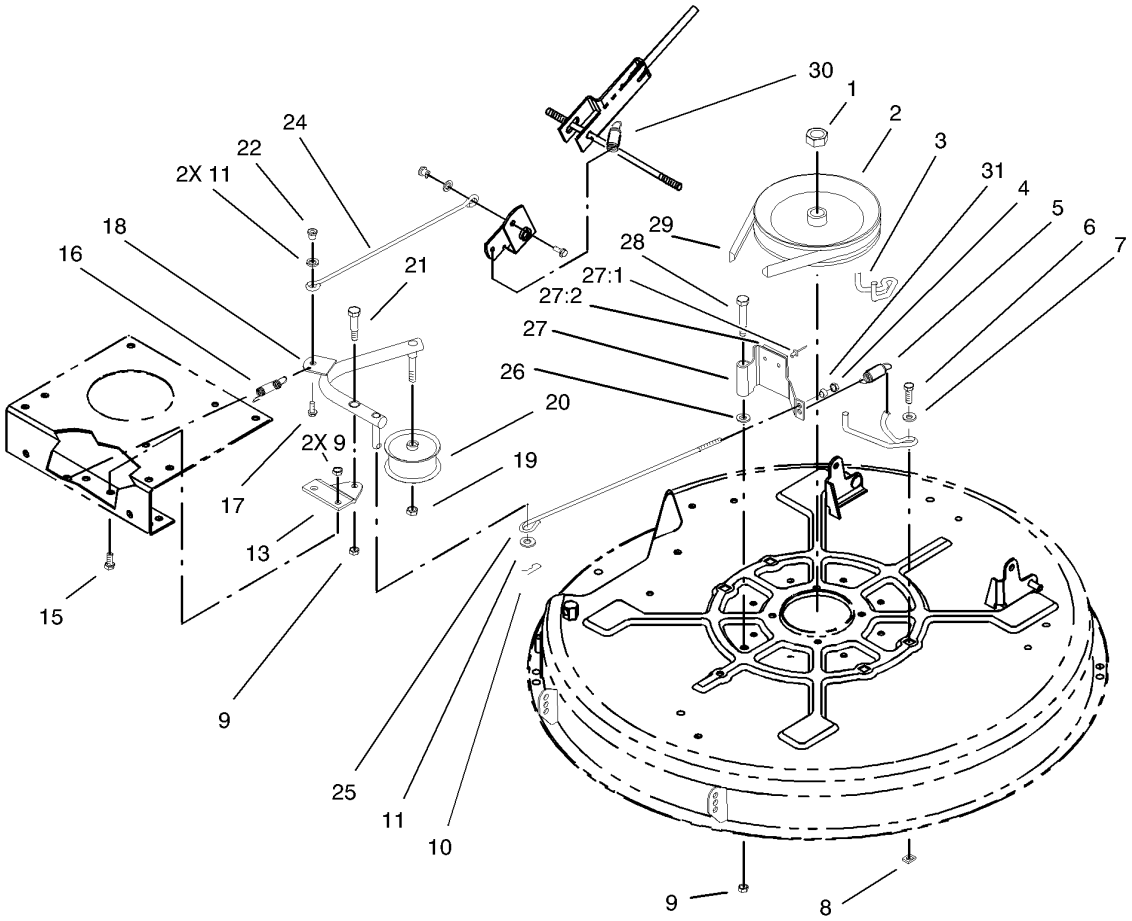


# 32in Deck Blade Drive/Brake Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 3219-7 | 1 | Nut-Hex |
| 2 | 88-5060 | 1 | Pulley-Deck |
| 3 | 88-5760 | 2 | Guide-Deck Belt |
| 4 | 3296-42 | 1 | Nut-Lock, NI |
| 5 | 88-6330 | 1 | Spring-Extension |
| 6 | 322-5 | 2 | Screw-HH |
| 7 | 5-4460 | 2 | Washer-Pivot |
| 8 | 3290-496 | 2 | Nut-Retainer |
| 9 | 3296-29 | 4 | Nut-Lock, NI |
| 10 | 3290-307 | 1 | Pin-Hair |
| 11 | 3256-24 | 3 | Washer-Flat |
| 13 | 88-5370-03 | 1 | Plate-Idler Mounting |
| 15 | 322-3 | 2 | Screw-HH |
| 16 | 26-6700 | 1 | Spring-Brake Return |
| 17 | 3234-13 | 2 | Screw-HHF |
| 18 | 88-5850-03 | 1 | Arm-Idler |
| 19 | 3296-39 | 1 | Nut-Lock, NI |
| 20 | 56-9870 | 1 | Pulley-Idler |
| 21 | 7-0030 | 1 | Bolt-Shoulder |
| 22 | 47-4990 | 2 | Post-Linkage Mounting |
| 24 | 88-5980 | 1 | Rod-Deck Engage |
| 25 | 88-5690 | 1 | Rod-Deck Brake |
| 26 | 3256-23 | 1 | Washer-Flat |
| 27 | 88-6110 | 1 | Brake Arm ASM |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 27:1 | 3290-282 | 2 | Rivet-Pop |
| 27:2 | 56-9830 | 1 | Pad-Brake |
| 28 | 88-4590 | 1 | Bolt-Shoulder |
| 29 | 88-6260 | 1 | V-Belt |
| 30 | 88-6420 | 1 | Spring-Cable ASM |
| 31 | 67-0710 | 1 | Ball-Swivel, Stop |

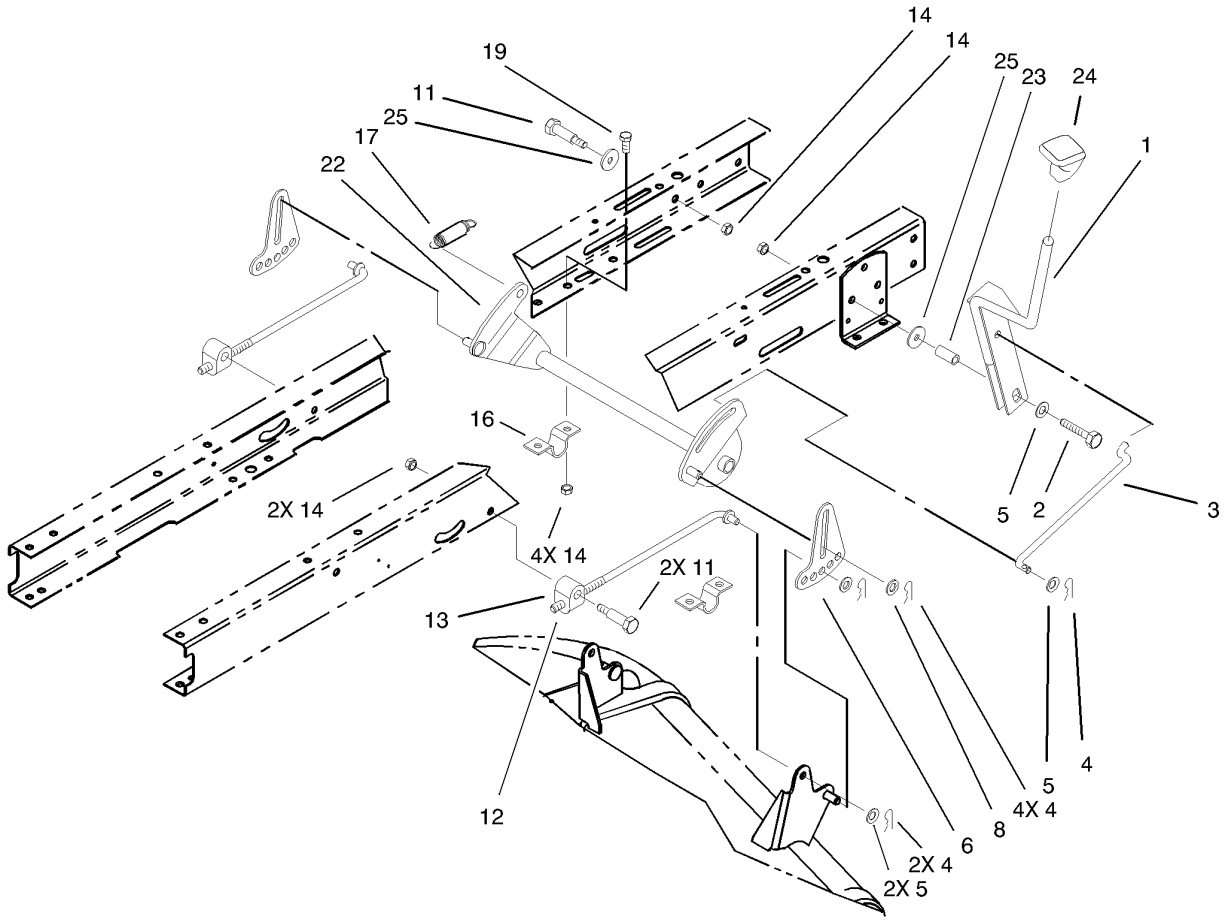


# Height of Cut Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 93-3822-03 | 1 | Lever |
| 2 | 322-32 | 1 | Screw-HH |
| 3 | 88-5900 | 1 | Link-HOC |
| 4 | 3290-307 | 7 | Pin-Hair |
| 5 | 3256-24 | 4 | Washer-Flat |
| 6 | 88-5570-03 | 2 | Link-Adjusting, HOC |
| 8 | 80-6990 | 4 | Washer-Hardened |
| 11 | 7-0030 | 3 | Bolt-Shoulder |
| 12 | 88-5450 | 2 | Rod-Hanger, Rear |
| 13 | 88-4230 | 2 | Trunnion-HOC |
| 14 | 3296-29 | 8 | Nut-Lock, NI |
| 16 | 88-4730 | 2 | Clamp-Hoc, Pivot |
| 17 | 88-6460 | 1 | Spring-Extension |
| 19 | 322-3 | 4 | Screw-HH |
| 22 | 88-5110-03 | 1 | Pivot |
| 23 | 65-7210 | 1 | Spacer |
| 24 | 94-5565 | 1 | Knob-Shift |
| 25 | 5-4460 | 2 | Washer-Pivot |

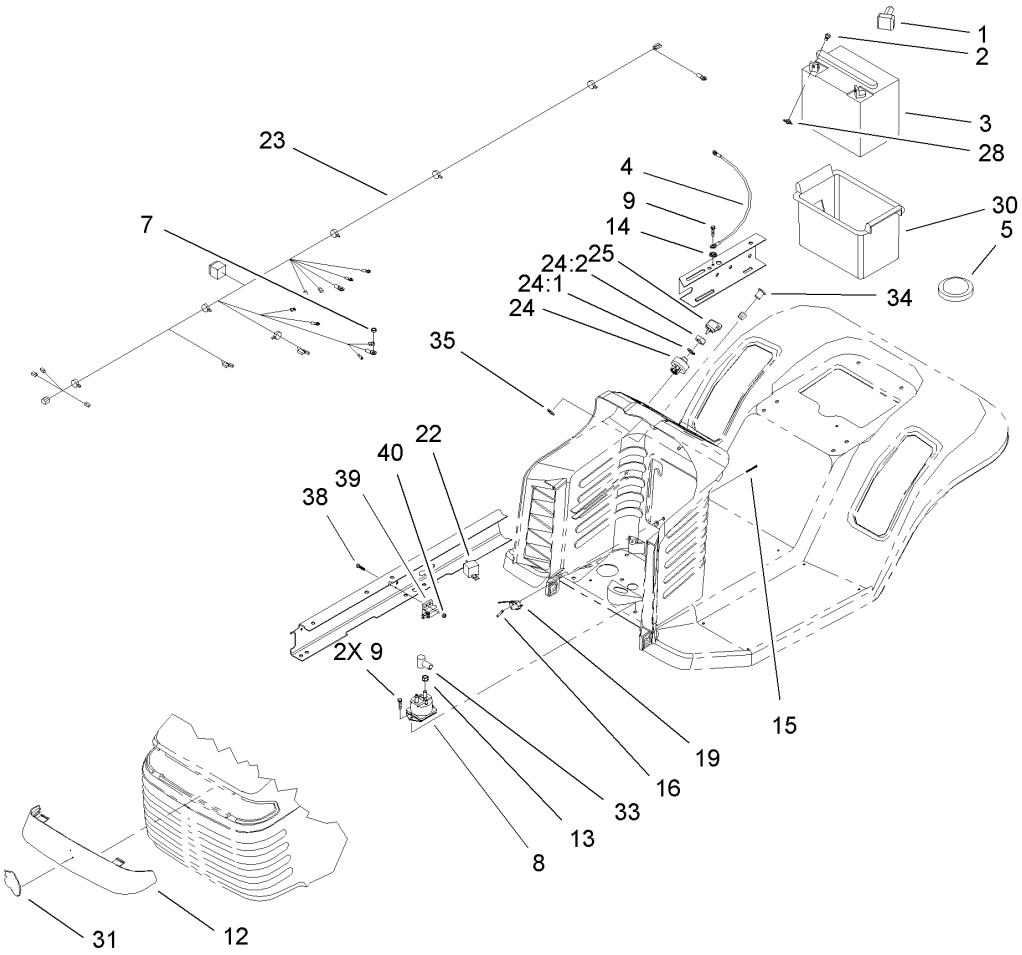


# Electrical Component Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 28-8080 | 1 | Boot-Terminal |
| 2 | 321-4 | 2 | Screw-HH |
| 3 | 104-1755 | 1 | Battery |
| 4 | 44-8110 | 1 | Wire ASM |
| 5 | 100-3524 | 1 | Switch-Seat |
| 7 | 32149-2 | 1 | Nut |
| 8 | 106-8245 | 1 | Solenoid |
| 9 | 9266714 | 3 | Screw-HWH |
| 12 | 88-3960 | 1 | Lens-Headlight |
| 13 | 32149-2 | 2 | Nut |
| 14 | 3255-7 | 2 | Washer-Lock/ext |
| 15 | 93-0539 | 2 | Screw-HH |
| 16 | 3290-354 | 1 | Nut-Speed |
| 19 | 88-9932 | 1 | Switch-Micro |
| 22 | 98-7249 | 1 | Relay |
| 23 | 106-6434 | 1 | Wire Harness-Gear |
| 24 | 88-9830 | 1 | Key Switch ASM |
| 24:1 | 3254-5 | 1 | Washer-Tooth |
| 24:2 | 218-461 | 1 | Nut-HH |
| 25 | 63-8360 | 1 | Key-Ignition |
| 28 | 32103-22 | 2 | Nut-Wing |
| 30 | 88-4040 | 1 | Box-Battery |
| 31 | 95-4248 | 1 | Decal |
| 33 | 93-3190 | 1 | Boot-Insulator, Terminal |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 34 | 95-7652 | 1 | Light-Indicator |
| 35 | 99-6059 | 1 | Clip-Retainer |
| 38 | 3274-14 | 2 | Screw-HSH |
| 39 | 65-7410 | 1 | Switch-Pole, Single |
| 40 | 3296-2 | 2 | Nut-Lock |

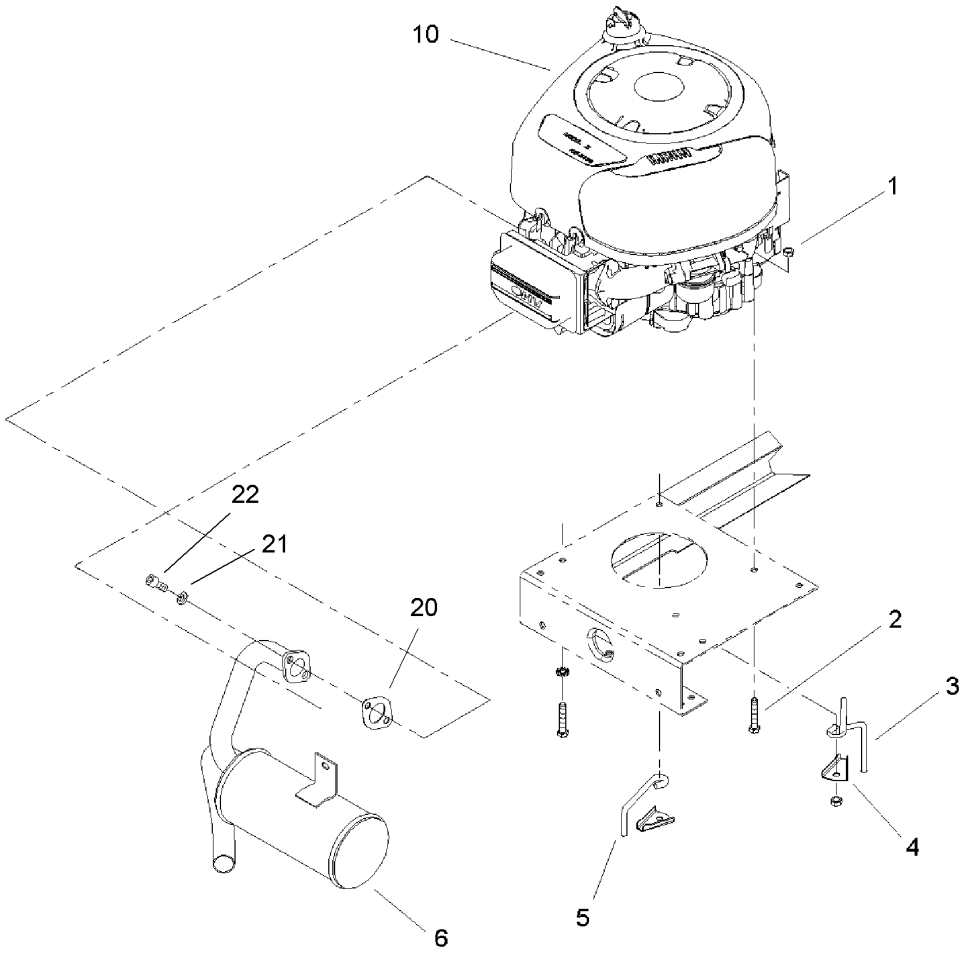


# Engine Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 3296-29 | 3 | Nut-Lock, NI |
| 2 | 322-9 | 4 | Screw-HH |
| 3 | 88-6060 | 1 | Guide-LH Belt |
| 4 | 76-3820 | 2 | Anchor-Belt Guide |
| 5 | 88-5490 | 1 | Guide-Belt RH |
| 6 | 105-2461 | 1 | Muffler-Exhaust |
| ❷10 | | 1 | Engine-12 Hp Briggs And Stratton Model No. 219907-0170-E1 |
| 20 | 88-4410 | 1 | Gasket-Muffler |
| 21 | 3253-4 | 2 | Washer-Lock |
| 22 | 3274-10 | 2 | Screw-HSH |

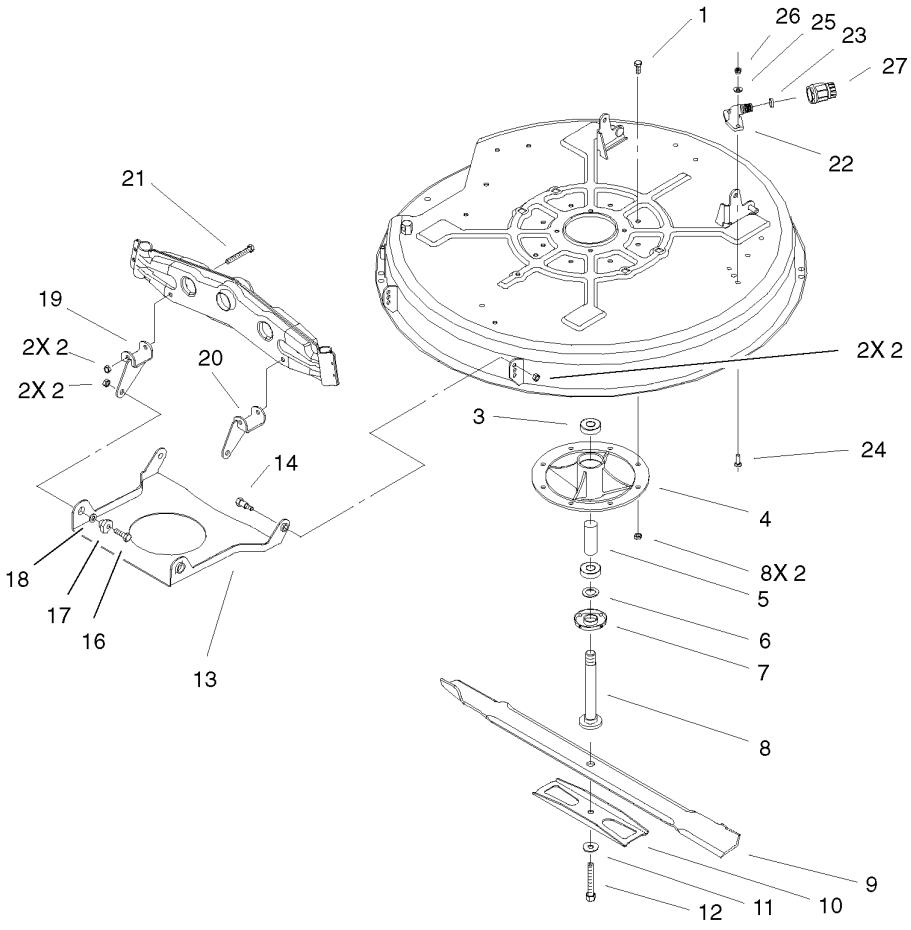



# 32in Deck and Baffle Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 322-3 | 8 | Screw-HH |
| 2 | 3296-29 | 14 | Nut-Lock, NI |
| 3 | 251-297 | 2 | Bearing |
| 4 | 56-7030 | 1 | Spindle |
| 5 | 83-7020 | 1 | Spacer-Bearing |
| 6 | 80-4390 | 1 | Spacer-Hardned |
| 7 | 80-4370 | 1 | Shield-Bearing |
| 8 | 80-4350 | 1 | Shaft-Spindle |
| 9 | 33-4750-03 | 1 | Blade |
| 10 | 80-4570-03 | 1 | Stiffener |
| 11 | 3290-465 | 1 | Washer-Belleville |
| 12 | 26-0671 | 1 | Screw-Blade |
| 13 | 88-4940-03 | 1 | Suspension-Front Pan |
| 14 | 28-0540 | 2 | Bolt-Shoulder |
| 16 | 322-6 | 2 | Screw-HH |
| 17 | 106661 | 2 | Cam |
| 18 | 3256-23 | 2 | Washer-Flat |
| 19 | 88-5640-03 | 1 | Bracket RH |
| 20 | 88-5650-03 | 1 | Bracket LH |
| 21 | 322-12 | 2 | Screw-HH |
| 22 | 95-2747 | 1 | Fitting-Washout |
| 23 | 46-6290 | 1 | O-Ring |
| 24 | 3229-1 | 2 | Screw-CARR |
| 25 | 3256-1 | 2 | Washer-Flat |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 26 | 3296-16 | 2 | Nut-Lock, NI |
| 27 | 95-3270 | 1 | Connector-Hose |

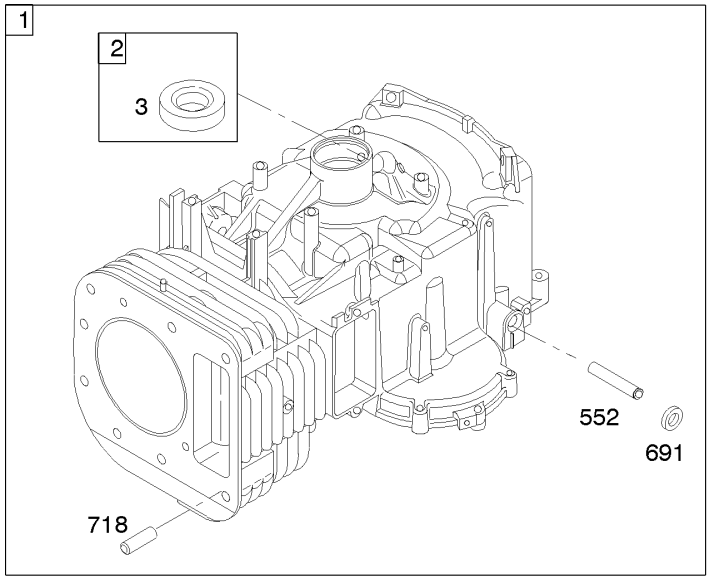

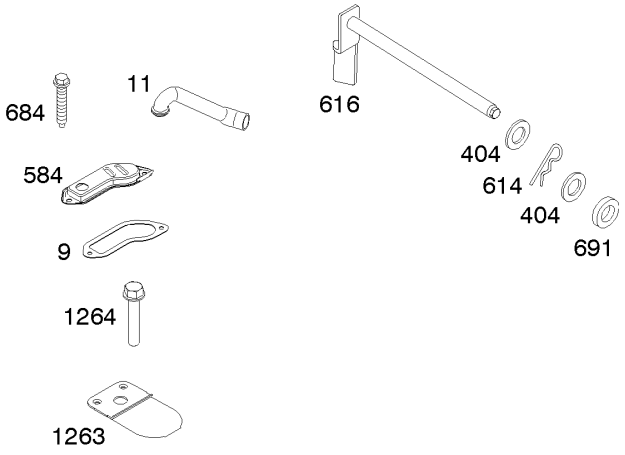
1019 LABEL KIT


1058 OWNER'S MANUAL

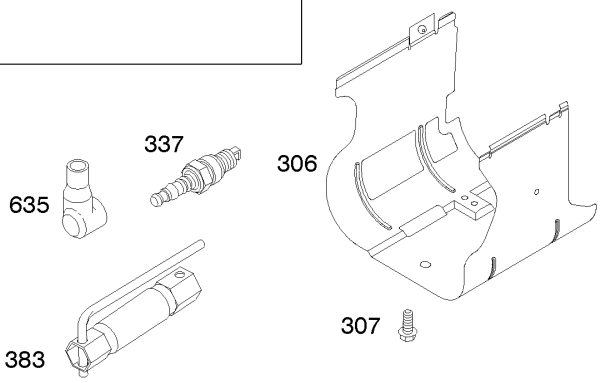


Assemblies include all parts shown in frames.

# Cylinder Assembly
# Briggs and Stratton Model No. 219907-0170-E1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻1 | 697377 | 1 | Cylinder Assembly |
| ❻2 | 399265 | 1 | Kit-Bushing/seal (Magneto Side) |
| ❸❻3 | 391086 | 1 | Seal-Oil (Magneto Side) |
| ❸❻9 | 697109 | 1 | Gasket-Breather |
| ❻11 | 697113 | 1 | Tube-Breather |
| ❻306 | 697359 | 1 | Shield-Cylinder |
| ❻307 | 691003 | 1 | Screw (Flywheel Guard) |
| ❻337 | 491055 | 1 | Plug-Spark |
| ❻383 | 89838 | 1 | Wrench-Spark Plug |
| ❻404 | 691691 | 1 | Washer (Governor Crank) |
| ❻552 | 697144 | 1 | Bushing-Governor |
| ❻584 | 697112 | 1 | Cover-Breather Passage |
| ❻614 | 691620 | 1 | Pin-Cotter |
| ❻616 | 692012 | 1 | Crank-Governor |
| ❻635 | 691909 | 1 | Boot-Spark Plug |
| ❻684 | 697157 | 1 | Screw (Breather Passage Cover) |
| ❸❻691 | 692407 | 1 | Seal-Governor Shaft |
| ❻718 | 690959 | 1 | Pin-Locating |
| ❻1019 | 697143 | 1 | Kit-Label |
| ❻1058 | 275038 | 1 | Owner's Manual |
| ❻1263 | 697124 | 1 | Reed-Breather |
| ❻1264 | 697104 | 1 | Screw (Breather Reed) |

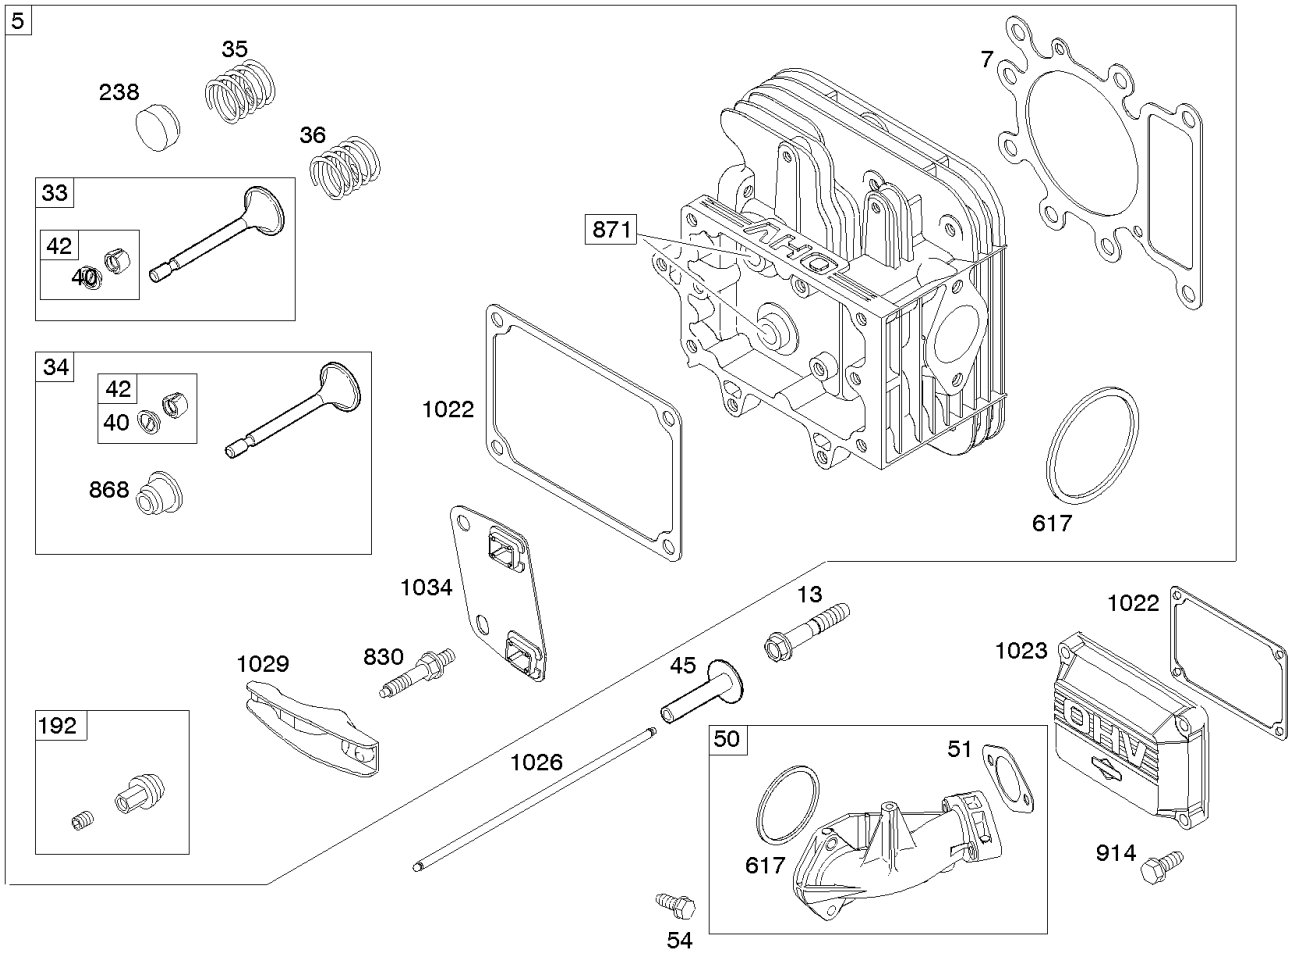




# Cylinder Head Assembly
# Briggs and Stratton Model No. 219907-0170-E1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻5 | 697396 | 1 | Head-Cylinder |
| ❸❹7 ❻ | 273280 | 1 | Gasket-Cylinder Head |
| ❻13 | 690360 | 1 | Screw (Cylinder Head Gasket) |
| ❻33 | 695760 | 1 | Valve-Exhaust |
| ❻34 | 695761 | 1 | Valve-Intake |
| ❻35 | 691279 | 1 | Spring-Valve (Exhaust) |
| ❻36 | 691279 | 1 | Spring-Valve (Exhaust) |
| ❻40 | 690964 | 1 | Retainer-Valve |
| ❻42 | 499586 | 1 | Keeper-Valve |
| ❻45 | 690564 | 1 | Tappet-Valve |
| ❻50 | 697361 | 1 | Manifold-Intake |
| ❸❹51 ❺❻ | 692137 | 1 | Gasket-Intake |
| ❻54 | 691148 | 1 | Screw (Intake Manifold) |
| ❻192 | 691986 | 1 | Adjustor-Rocker Arm |
| ❻238 | 691843 | 1 | Cap-Valve |
| ❸❺617 ❻ | 692138 | 1 | Seal-O Ring (Intake Manifold) |
| ❻830 | 691095 | 1 | Stud-Rocker Arm |
| ❸❹868 ❻ | 690968 | 1 | Seal-Valve |
| ❻871 | 690969 | 1 | Bushing-Valve Guide |
| ❻914 | 690960 | 1 | Screw (Rocker Cover) |
| ❸❹1022 ❻ | 272475 | 1 | Gasket-Rocker Cover |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻1023 | 692492 | 1 | Cover-Rocker |
| ❻1026 | 697394 | 1 | Rod-Push (Intake) |
| ❻ | 697395 | 1 | Rod-Push (Exhaust) |
| ❻1029 | 691751 | 1 | Arm-Rocker |
| ❻1034 | 690822 | 1 | Guide-Push Rod |

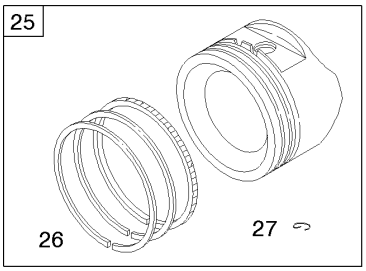

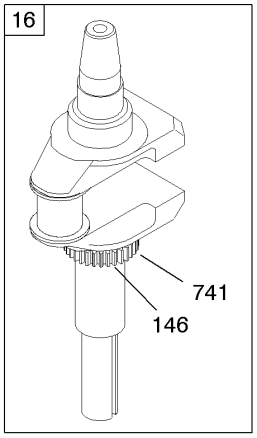


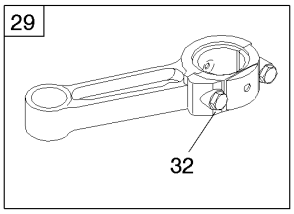
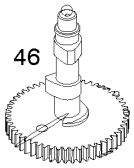

Assemblies include all parts shown in frames.

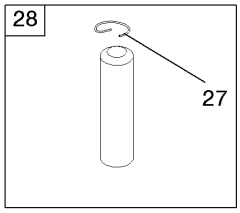
# Crankshaft Assembly
# Briggs and Stratton Model No. 219907-0170-E1
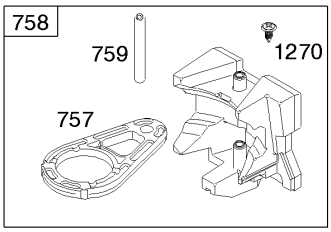
| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻16 | 697390 | 1 | Crankshaft |
| ❻24 | 222698 | 1 | Key-Flywheel |
| ❻25 | 698371 | 1 | Piston Assembly (Standard) |
| ❻ | 698373 | 1 | Piston Assembly (.020" Oversize) |
| ❻26 | 698375 | 1 | Ring Set (Standard) |
| ❻ | 698377 | 1 | Ring Set (.020" Oversize) |
| ❻27 | 698469 | 1 | Lock-Piston Pin |
| ❻28 | 697099 | 1 | Pin-Piston (Standard) |
| ❻29 | 697364 | 1 | Rod-Connecting (Standard)) |
| ❻32 | 692852 | 1 | Screw (Connecting Rod) |
| ❻146 | 691639 | 1 | Key-Timing |
| ❻741 | 697128 | 1 | Gear-Timing |
| ❻757 | 697607 | 1 | Link-Counterweight |
| ❻758 | 697391 | 1 | Counterweight |
| ❻759 | 697392 | 1 | Pin-Counterweight |
| ❻1270 | 697156 | 1 | Plug-Avs Counterweight |

48 SHORT BLOCK

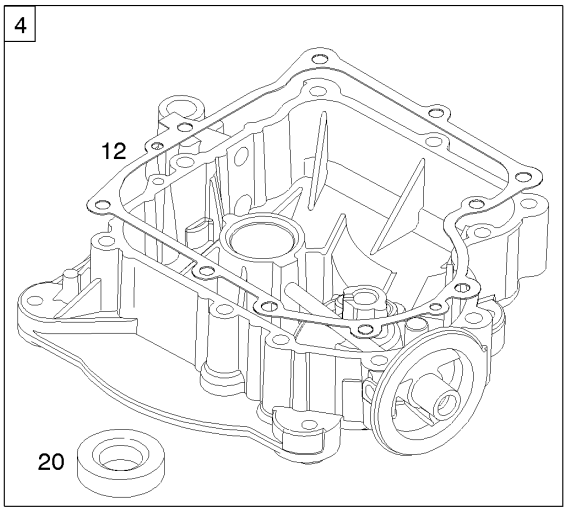









Assemblies include all parts shown in frames.

# Crankcase Assembly
# Briggs and Stratton Model No. 219907-0170-E1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻4 | 697106 | 1 | Sump-Engine |
| ❸❻12 | 697110 | 1 | Gasket-Crankcase |
| ❻15 | 690946 | 1 | Plug-Oil Drain |
| ❸❻20 | 690947 | 1 | Seal-Oil (Pto Side) |
| ❻22 | 692125 | 1 | Screw (Engine Sump) |
| ❻43 | 691968 | 1 | Governor/oil Slinger |
| ❻46 | 699016 | 1 | Camshaft |
| ❻48 | 697740 | 1 | Short Block |

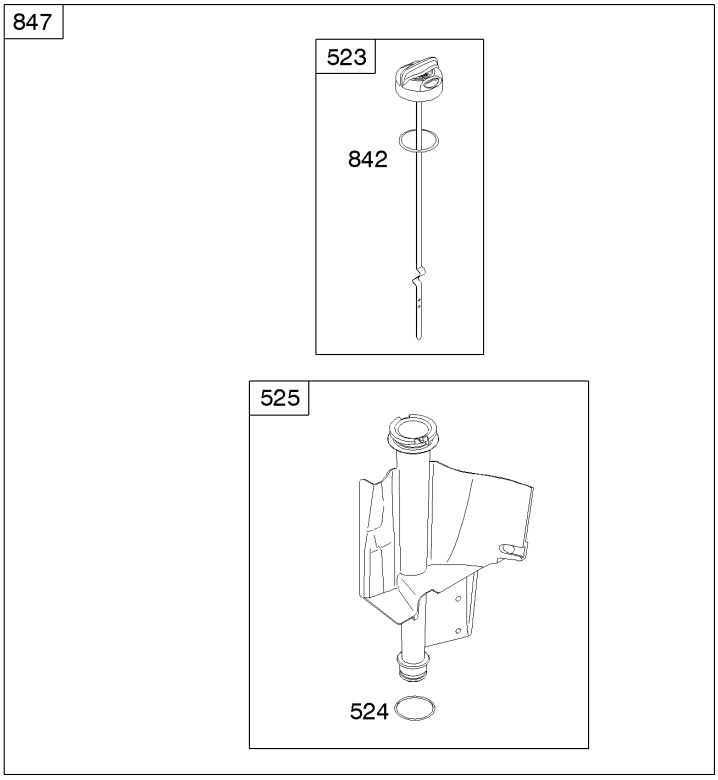


Assemblies include all parts shown in frames.

# Oil Filter, Tube and Pump Assembly
# Briggs and Stratton Model No. 219907-0170-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻523 | 697086 | 1 | Dipstick |
| ❸❻524 | 691032 | 1 | Seal-Dipstick Tube |
| ❻525 | 697184 | 1 | Tube-Dipstick |
| ❸❻842 | 691031 | 1 | Seal-O Ring (Dipstick Tube) |
| ❻847 | 697611 | 1 | Dipstick/tube |

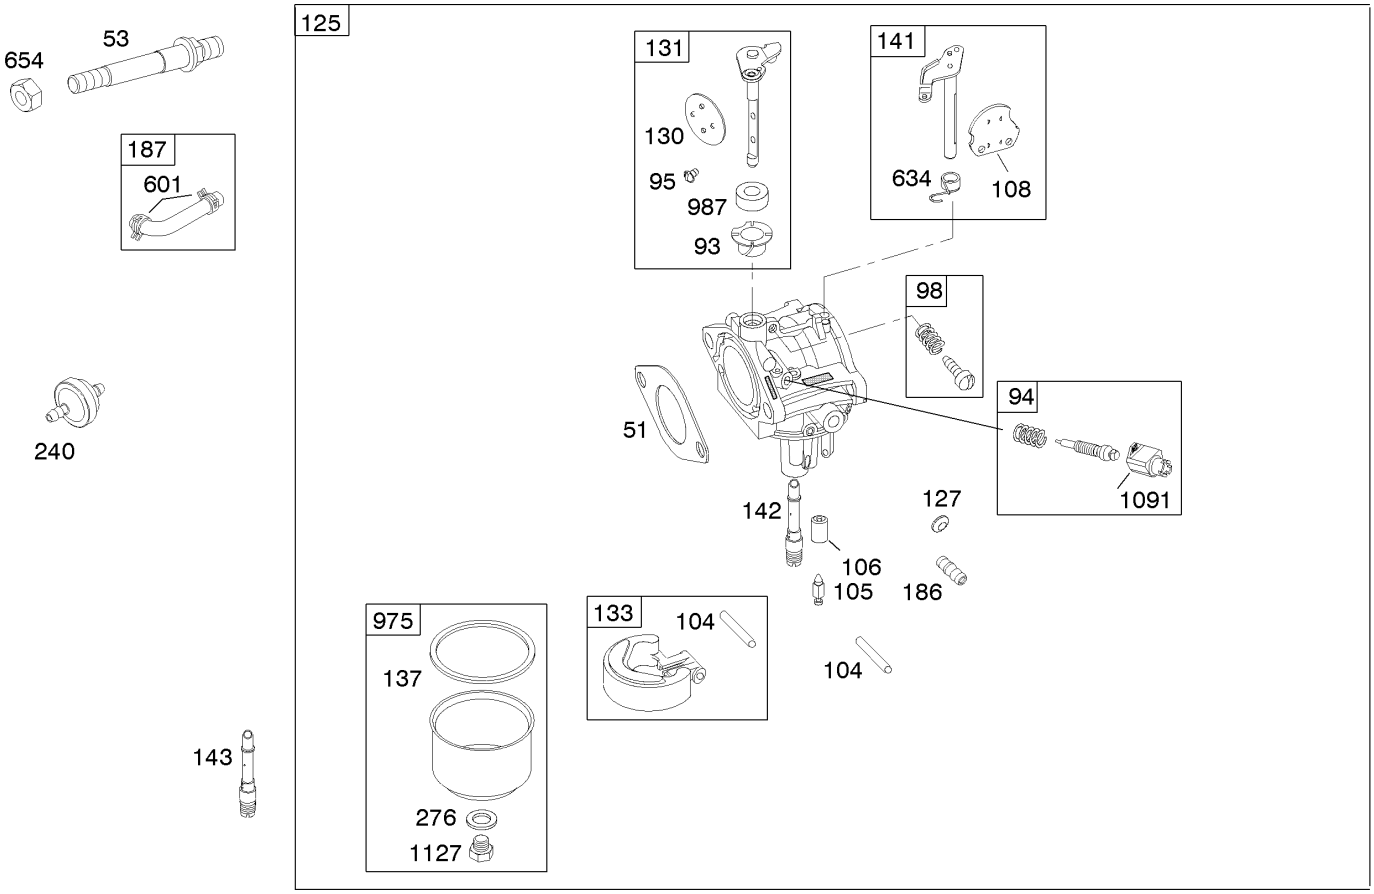



Assemblies include all parts shown in frames.

# Carburetor Assembly
# Briggs and Stratton Model No. 219907-0170-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸❹51 ❺❻ | 692137 | 0 | Gasket-Intake |
| ❻53 | 690227 | 1 | Stud (Carburetor) |
| ❺❻93 | 60602 | 1 | Bushing-Throttle Shaft |
| ❻94 | 498030 | 1 | Kit-Idle Mixture |
| ❺❻95 | 691636 | 1 | Screw (Throttle Valve) |
| ❻98 | 495800 | 1 | Kit-Idle Speed |
| ❺❻104 | 690525 | 1 | Pin-Float Hinge |
| ❺❻105 | 231855 | 1 | Valve-Float Needle |
| ❺❻106 | 690577 | 1 | Seat-Inlet |
| ❻108 | 691227 | 1 | Valve-Choke (Manual Choke) |
| ❻125 | 790019 | 1 | Carburetor |
| ❺❻127 | 694524 | 1 | Plug-Welch |
| ❻130 | 698774 | 1 | Valve-Throttle |
| ❻131 | 790175 | 1 | Kit-Throttle Shaft |
| ❻133 | 494381 | 1 | Float-Carburetor |
| ❺❻137 | 281165 | 1 | Gasket-Float Bowl |
| ❻141 | 699027 | 1 | Kit-Choke Shaft (Manual Choke) |
| ❺❻142 | 790025 | 1 | Nozzle-Carburetor |
| ❻143 | 790028 | 1 | Nozzle-Carburetor (High Altitude) |
| ❻186 | 698174 | 1 | Connector-Hose |
| ❻187 | 699331 | 1 | Line-Fuel (Molded) |
| ❻240 | 394358 | 1 | Filter-Fuel |
| ❺❻276 | 692255 | 1 | Washer-Sealing |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻601 | 95162 | 1 | Clamp-Hose |
| ❻634 | 690802 | 1 | Spring/seal Assembly |
| ❻654 | 690958 | 1 | Nut (Carburetor) |
| ❻975 | 495933 | 1 | Bowl-Float |
| ❺❻987 | 691326 | 1 | Seal-Throttle Shaft |
| ❻1091 | 691333 | 1 | Cap-Limiter |
| ❻1127 | 691657 | 1 | Screw (Float Bowl ) |

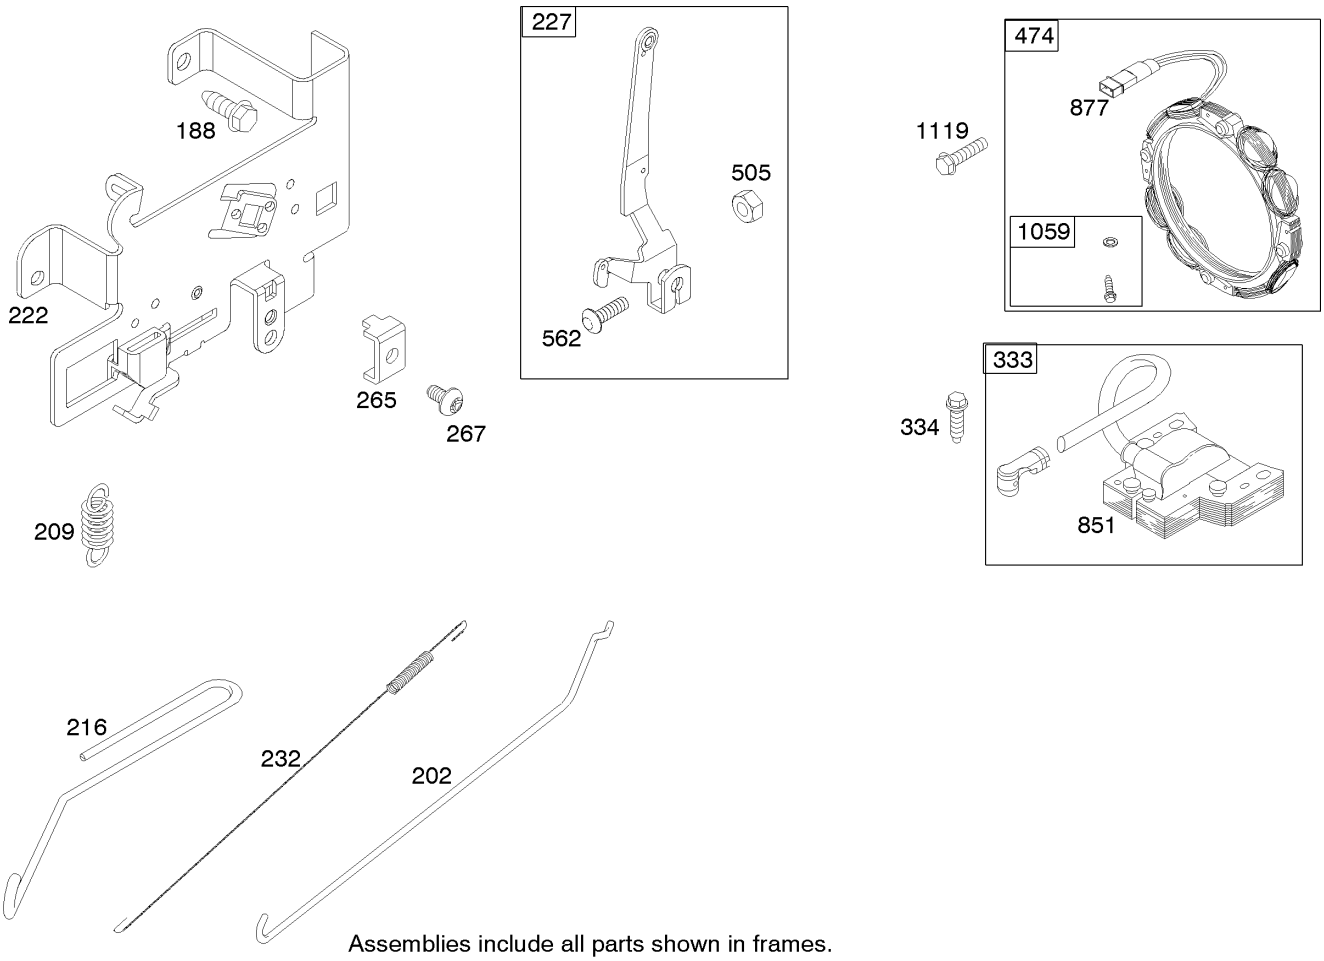


Assemblies include all parts shown in frames.

# Governor Assembly
# Briggs and Stratton Model 219907-0170-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻188 | 691693 | 0 | Screw (Control Bracket) |
| ❻202 | 691841 | 1 | Link-Mechanical Governor |
| ❻209 | 690480 | 1 | Spring-Governor |
| ❻216 | 691840 | 1 | Link-Choke |
| ❻222 | 694042 | 1 | Bracket-Control |
| ❻227 | 691374 | 1 | Lever-Governor Control |
| ❻232 | 691842 | 1 | Spring-Governor Link |
| ❻265 | 691024 | 1 | Clamp-Casing |
| ❻267 | 695134 | 1 | Screw (Casing Clamp) |
| ❻333 | 492341 | 1 | Armature-Magneto |
| ❻334 | 691061 | 1 | Screw (Magneto Armature) |
| ❻474 | 696459 | 1 | Alternator |
| ❻505 | 691251 | 1 | Nut (Governor Control Lever) |
| ❻562 | 691119 | 1 | Bolt (Governor Control Lever) |
| ❻851 | 493880 | 1 | Terminal-Spark Plug |
| ❻877 | 393456 | 1 | Wire-Connector/alternator |
| ❻1119 | 691183 | 1 | Screw (Alternator) |
| ❻1059 | 698516 | 1 | Kit-Screw/washer |

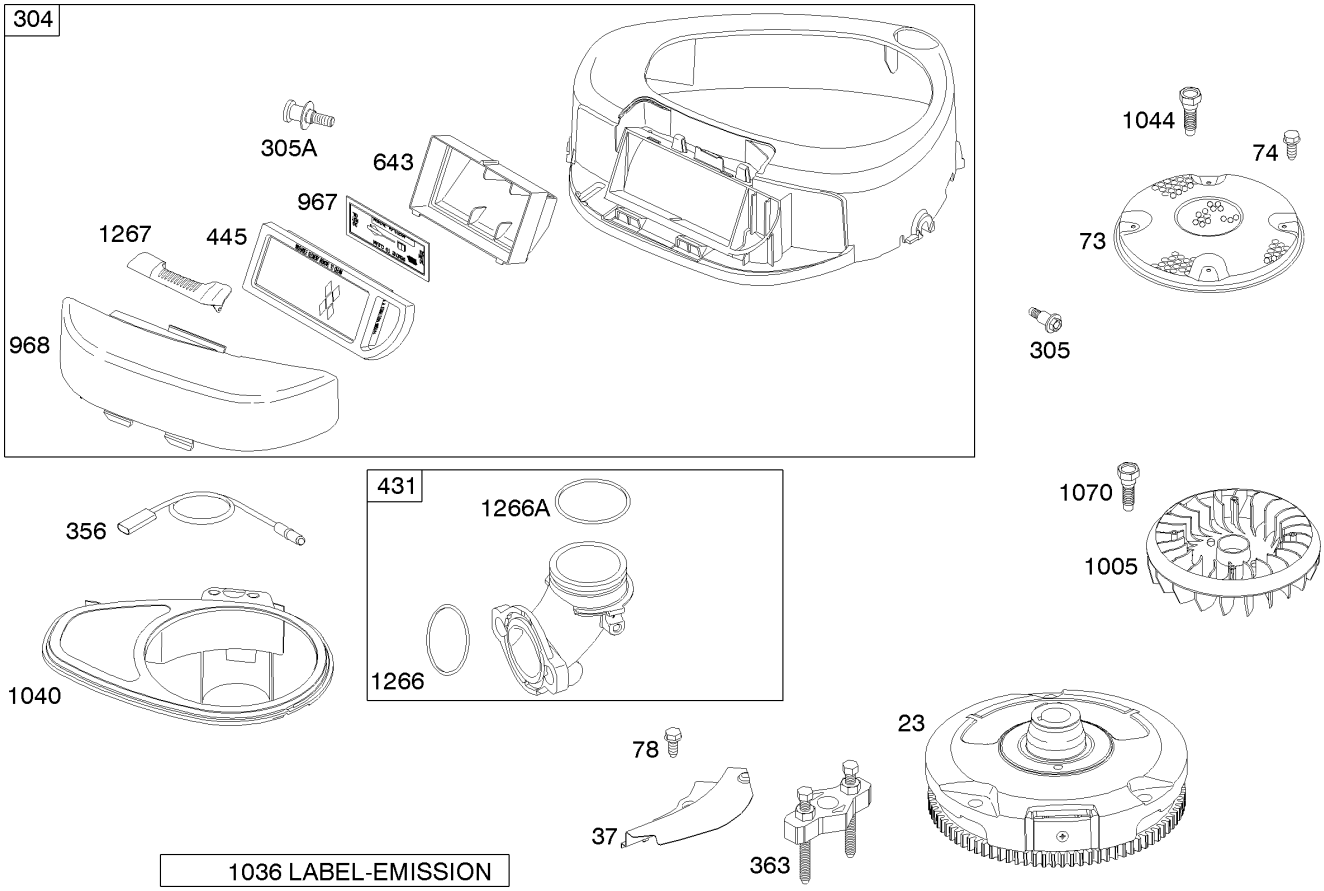



Assemblies include all parts shown in frames.

# Blower Housing Assembly
# Briggs and Straton Model No. 219907-0170-E1


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻23 | 698281 | 1 | Flywheel |
| ❻37 | 697352 | 1 | Guard-Flywheel |
| ❻73 | 697133 | 1 | Screen-Rotating |
| ❻74 | 697897 | 1 | Screw (Rotating Screen) |
| ❻75 | 690582 | 1 | Washer (Flywheel) |
| ❻78 | 691003 | 1 | Screw (Flywheel Guard) |
| ❻304 | 698473 | 1 | Housing-Blower |
| ❻305 | 697102 | 1 | Screw (Blower Housing) |
| ❻305A | 697103 | 1 | Screw (Blower Housing) |
| ❻356 | 690807 | 1 | Wire-Stop |
| ❻363 | 19203 | 1 | Puller-Flywheel |
| ❻431 | 697122 | 1 | Elbow-Intake |
| ❻445 | 698413 | 1 | Filter-Air Cleaner Cartridge |
| ❻643 | 697155 | 1 | Retainer-Air Filter |
| ❻967 | 697292 | 1 | Filter-Pre Cleaner |
| ❻968 | 697420 | 1 | Cover-Air Cleaner |
| ❻1005 | 699044 | 1 | Fan-Flywheel |
| ❻1036 | 697221 | 1 | Label-Emission |
| ❻1040 | 698368 | 1 | Plate-Trim |
| ❻1044 | 698139 | 1 | Screw (Crankshaft Extension) |
| ❻1070 | 690372 | 1 | Screw (Drive Cap) |
| ❸❺❻1266 | 691917 | 1 | Seal-O Ring (Intake Elbow) |
| ❸❺❻1266A | 697123 | 1 | Seal-O Ring (Intake Elbow) |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻1267 | 697419 | 1 | Latch-Blower Housing |

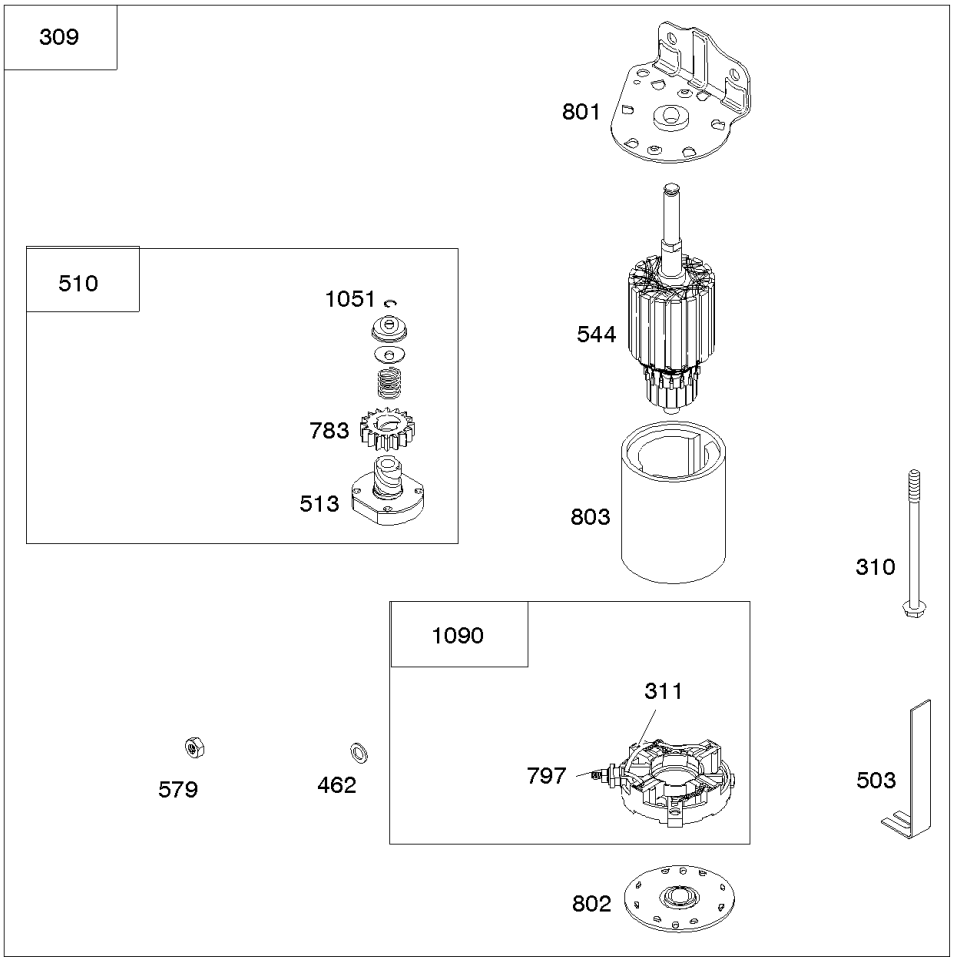


# Starter Assembly
# Briggs and Stratton Model No. 219907-0170-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❻309 | 693551 | 1 | Motor-Starter |
| ❻310 | 690323 | 1 | Bolt (Starter Motor) |
| ❻311 | 497608 | 1 | Brush Set |
| ❻462 | 691261 | 1 | Washer (Brush Retainer) |
| ❻503 | 691532 | 1 | Strap-Starter |
| ❻510 | 693699 | 1 | Drive-Starter |
| ❻513 | 692024 | 1 | Drive Clutch |
| ❻544 | 692034 | 1 | Armature-Starter |
| ❻579 | 691029 | 1 | Nut (Brush Retainer) |
| ❻697 | 690372 | 1 | Screw (Drive Cap) |
| ❻729 | 691224 | 1 | Clip-Wire |
| ❻783 | 693713 | 1 | Gear-Pinion |
| ❻797 | 693167 | 1 | Nut (Brush Retainer) |
| ❻801 | 691283 | 1 | Cap-Drive |
| ❻802 | 691286 | 1 | Cap-End |
| ❻803 | 693757 | 1 | Housing-Starter |
| ❻1051 | 691265 | 1 | Ring-Retaining |
| ❻1090 | 691293 | 1 | Retainer-Brush |

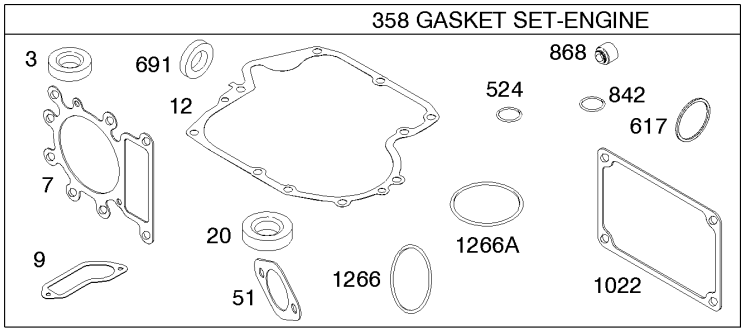

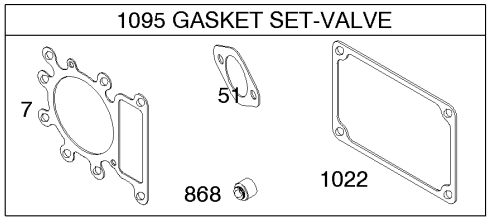




Assemblies include all parts shown in frames.

# Gasket Assembly

# Briggs and Stratton Model No. 219907-0170-E1
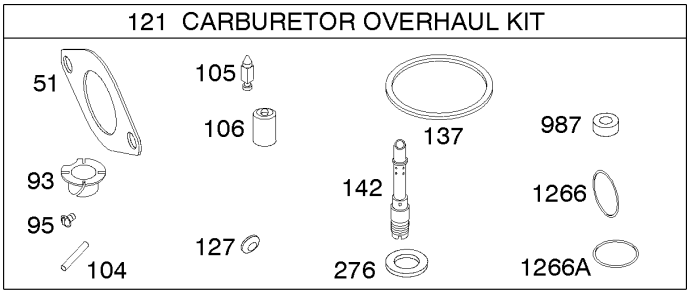
| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸❻3 | 391086 | 1 | Seal-Oil (Magneto Side) |
| ❸❹7 ❻ | 273280 | 1 | Gasket-Cylinder Head |
| ❸❻9 | 697109 | 1 | Gasket-Breather |
| ❸❻12 | 697110 | 1 | Gasket-Crankcase |
| ❸❻20 | 690947 | 1 | Seal-Oil (Pto Side) |
| ❸❹51 ❺❻ | 692137 | 1 | Gasket-Intake |
| ❻358 | 697151 | 1 | Gasket Set-Engine |
| ❸❹617 ❺❻ | 692138 | 1 | Seal-O Ring (Intake Manifold) |
| ❸❻524 | 691032 | 1 | Seal-Dipstick Tube |
| ❸❻691 | 692407 | 1 | Seal-Governor Shaft |
| ❸❻842 | 691031 | 1 | Seal-O Ring (Dipstick Tube) |
| ❸❹868 ❻ | 690968 | 1 | Seal-Valve |
| ❸❹1022 ❻ | 272475 | 1 | Gasket-Rocker Cover |
| ❻1095 | 691581 | 1 | Gasket Set-Valve |
| ❸❺1266 ❻ | 691917 | 1 | Seal-O Ring (Intake Elbow) |
| ❸❺1266A ❻ | 697123 | 0 | Seal-O Ring (Intake Elbow) |




Assemblies include all parts shown in frames.

# Carburetor Overhaul Kit Assembly
# Briggs and Stratton Model No. 219907-0170-E1

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸❹51 ❺❻ | 692137 | 0 | Gasket-Intake |
| ❺❻93 | 690602 | 1 | Bushing-Throttle Shaft |
| ❺❻95 | 691636 | 1 | Screw (Throttle Valve) |
| ❺❻104 | 690525 | 1 | Pin-Float Hinge |
| ❺❻105 | 231855 | 1 | Valve-Float Needle |
| ❺❻106 | 690577 | 1 | Seat-Inlet |
| ❻121 | 790031 | 1 | Kit-Carburetor Overhaul |
| ❺❻127 | 694524 | 1 | Plug-Welch |
| ❺❻137 | 281165 | 1 | Gasket-Float Bowl |
| ❺❻142 | 790025 | 1 | Nozzle-Carburetor |
| ❺❻276 | 692255 | 1 | Washer-Sealing |
| ❸❺617 ❻ | 692138 | 1 | Seal-O Ring (Intake Manifold) |
| ❺❻987 | 691326 | 1 | Seal-Throttle Shaft |
| ❸❺1266 ❻ | 691917 | 0 | Seal-O Ring (Intake Elbow) |
| ❸❺1266A ❻ | 697123 | 1 | Seal-O Ring (Intake Elbow) |

# NOTES

# NOTES

# NOTES


TORO®