Form Number 3350-247

Flow Divider Kit

Groundsmaster® 4000-D and 4100-D

Model No. 30429

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by **6:**1, the valve by **6:**2, and the wheel by **6:**3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.


©The Toro Company - 2003
All Rights Reserved

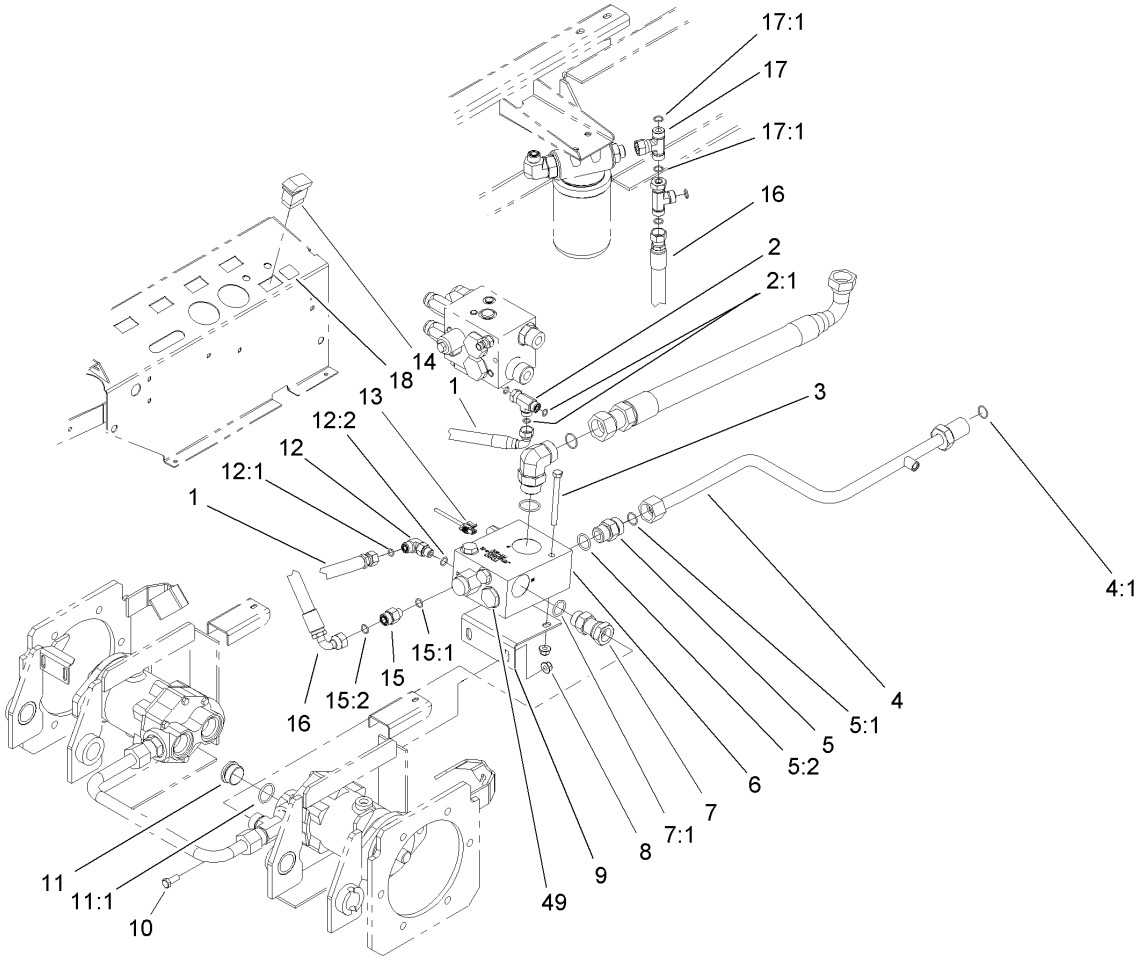

Flow Divider Assembly

Ref	Part No.	Qty.	Description
1	66-8490	1	HYD Hose ASM
2	340-115	1	Fitting-Tee
2:1	237-22	2	O-Ring
3	323-42	1	Screw-HH
4	105-3236	1	Tube-HYD
4:1	237-58	1	O-Ring
5	340-9	1	Fitting-Hyd, Straight
5:1	237-58	1	O-Ring
5:2	237-81	1	O-Ring
6	105-4516	1	Manifold-Traction
7	106-2009	1	Fitting-Hyd, Swivel
7:1	237-81	1	O-Ring
8	104-8301	3	Nut-Flange, NI
9	105-3232-03	1	Bracket-Valve
10	323-5	2	Screw-HH
11	106-2030	1	Plug-Hex, Hollow
11:1	237-146	1	O-Ring
12	340-77	1	Fitting-Hyd, 90 DEG
12:1	237-22	1	O-Ring
12:2	237-42	1	O-Ring
13	106-2028	1	Harness-Wire
14	106-2027	1	Switch-Intermittent
15	340-5	1	Fitting-Straight
15:1	237-42	1	O-Ring

Ref	Part No.	Qty.	Description
15:2	237-30	1	O-Ring
16	95-3738	1	HYD Hose ASM
17	93-6810	1	Fitting-Tee
17:1	237-30	2	O-Ring
18	106-2042	1	Decal-Flow Divider
49	107-0191	1	Valve-Flow Divider (Used In Groundsmaster 4100 Series)
49:1	107-1554	1	Seal Kit (Not Illustrated)

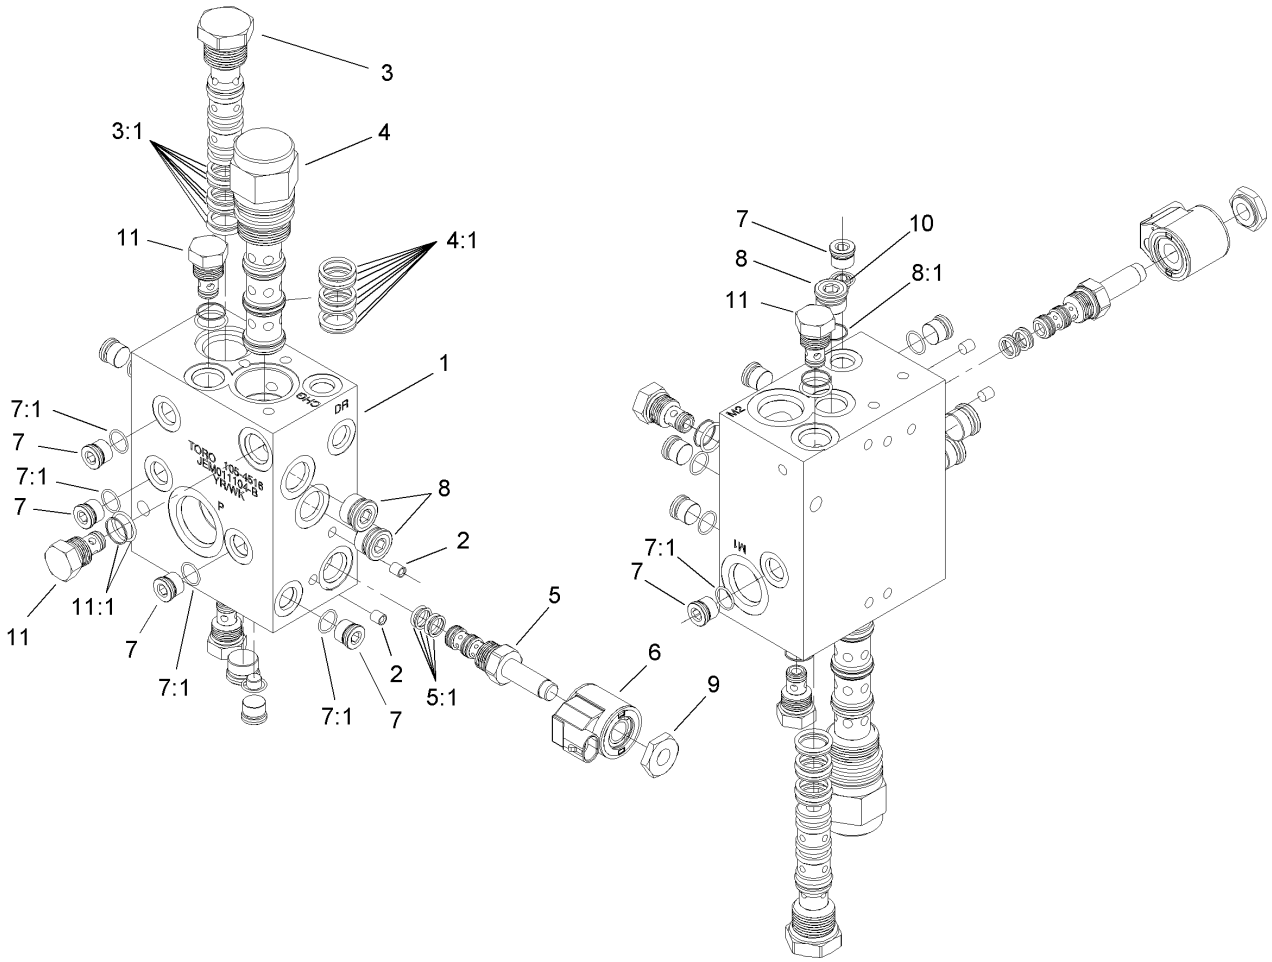

Traction Manifold Assembly No. 105-4516

Ref	Part No.	Qty.	Description
1		1	Manifold (Not Serviced Separately)
2		13	Plug (Not Serviced Separately)
3	106-1997	1	Valve-Flow Divider (Used In Groundsmaster 4000 Series)
3:1	107-1554	1	Seal Kit
4	106-1996	1	Valve-Piloted Directional
4:1	106-6775	1	Seal Kit
5	106-1995	1	Valve-3 Way
5:1	107-1553	1	Seal Kit
6	105-9333	1	E-Coil
7	353-989	6	Plug-Hex, Hollow
7:1	237-42	1	O-Ring
8	353-988	3	Plug-Hex, Hollow
8:1	237-79	1	O-Ring
9	105-9332	1	Nut-E Coil
10	105-9326	1	Orifice
11	105-9321	3	Valve-Check
11:1	105-9156	1	Seal Kit


TORO®