Form No. 3470-669 Rev B

TORO®

Count on it.

Parts Catalog

46cm

Lawn Mower

Model No. 20949—Serial No. 324000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3470-669 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Deck and Bag Assembly 4
Engine and Blade Assembly 6
Suspension and Wheel Assembly 8
Handle Assembly 10
Shroud, Flywheel and Fuel Assembly 12
Crankcase Assembly 14
Carburetor, Muffler, Air Cleaner and Valve Cover Assembly 16

© 2025—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Deck and Bag Assembly

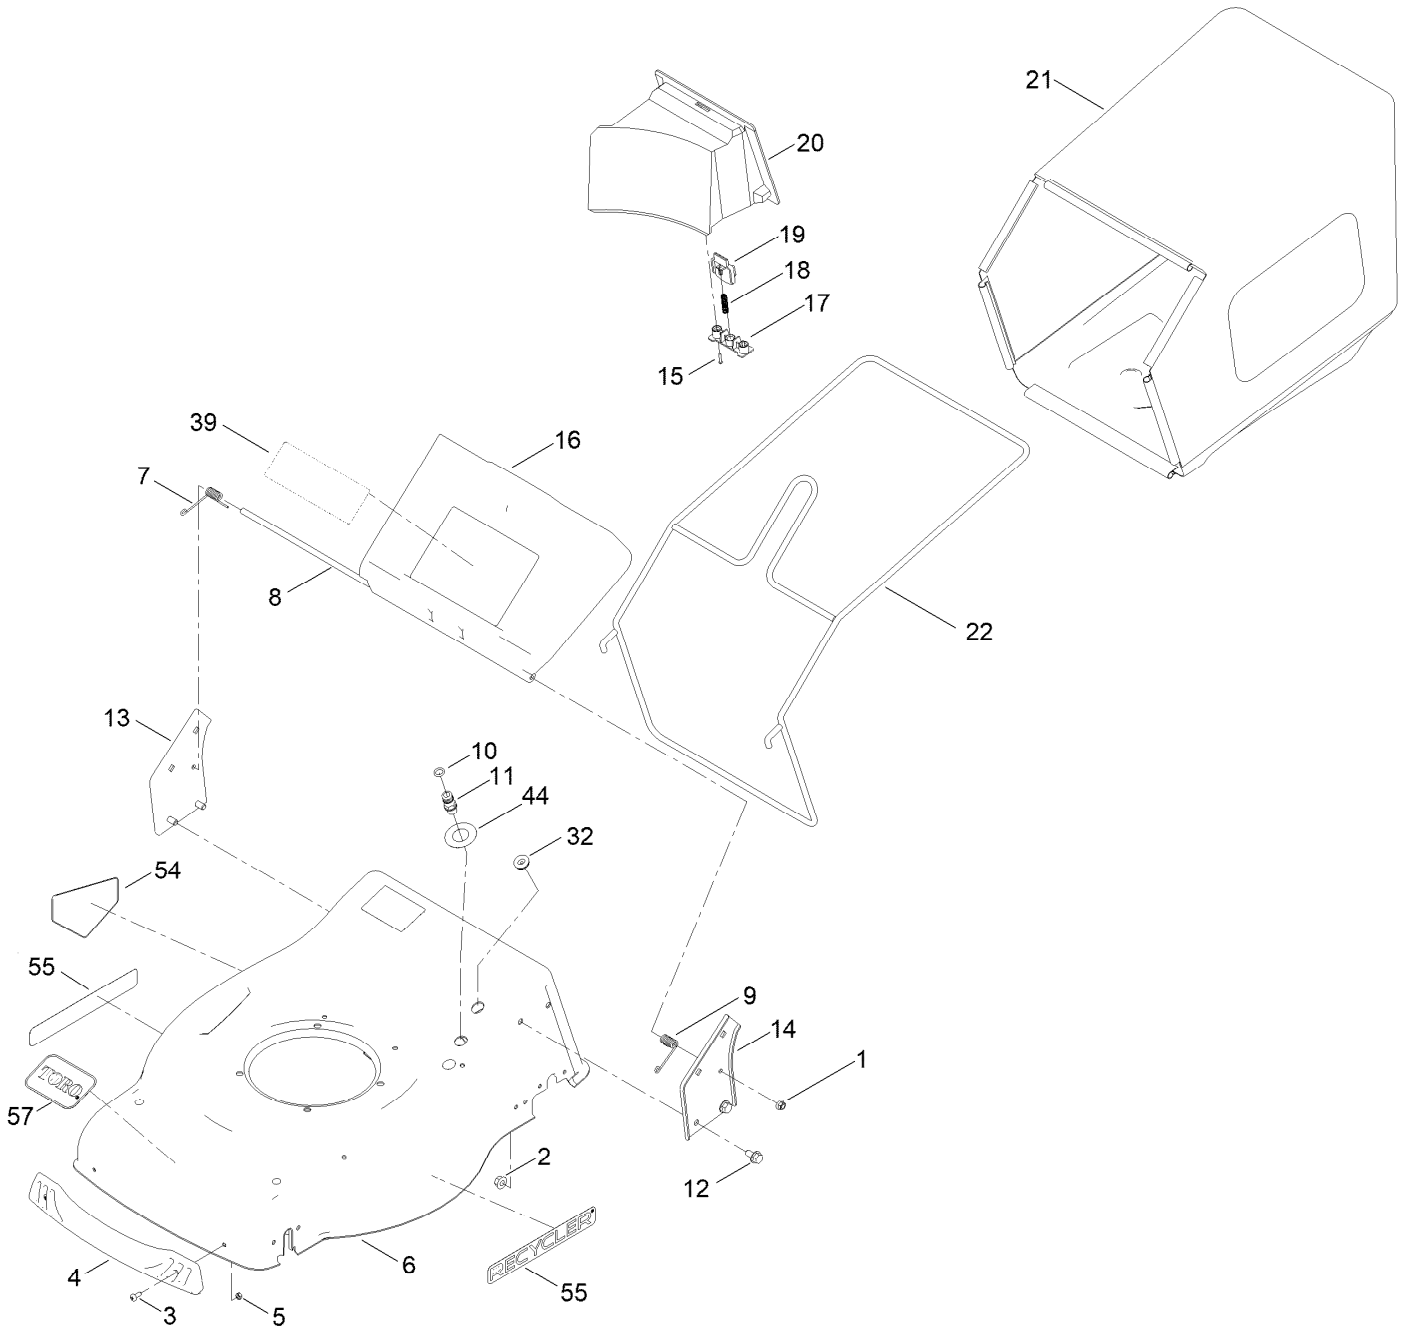

Deck and Bag Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-0117	2	Nut-Lock, Flange
2	134-0118	4	Nut-Lock, Flange
3	134-0119	2	Screw-Tooth
4	134-0120	1	Bumper-Front
5	134-0121	2	Nut-Lock
6	134-0122	1	Deck
7	134-0123	1	Spring-Twist, RH
8	134-0124	1	Rod-Spring, Rear Deflector
9	134-0125	1	Spring-Twist, LH
10	134-0126	1	O-Ring
11	134-0127	1	Port-Wash
12	134-0128	4	Bolt-HH, Flange
13	134-0129	1	Bracket-Handle, RH
14	134-0130	1	Bracket-Handle, LH
15	134-0131	2	Screw-Self Driving
16	134-0132	1	Deflector-Rear
17	134-0133	1	Pressing Board-Lock Button, Mulch
18	134-0134	1	Spring-Button, Mulch
19	134-0135	1	Lock-Button, Mulch
20	134-0136	1	Plug-Mulch
21	162-0756	1	Grass Bag Toro
22	134-0138	1	Frame-Bag, Grass
32	134-0148	1	Sheath-Cable, Protective
39	134-0084	1	Decal-Safety
44	134-3615	1	Decal-Port, Washout
54	111-9826	1	Decal-Danger
55	140-4184	2	Decal
57	140-4183	1	Decal


Engine and Blade Assembly

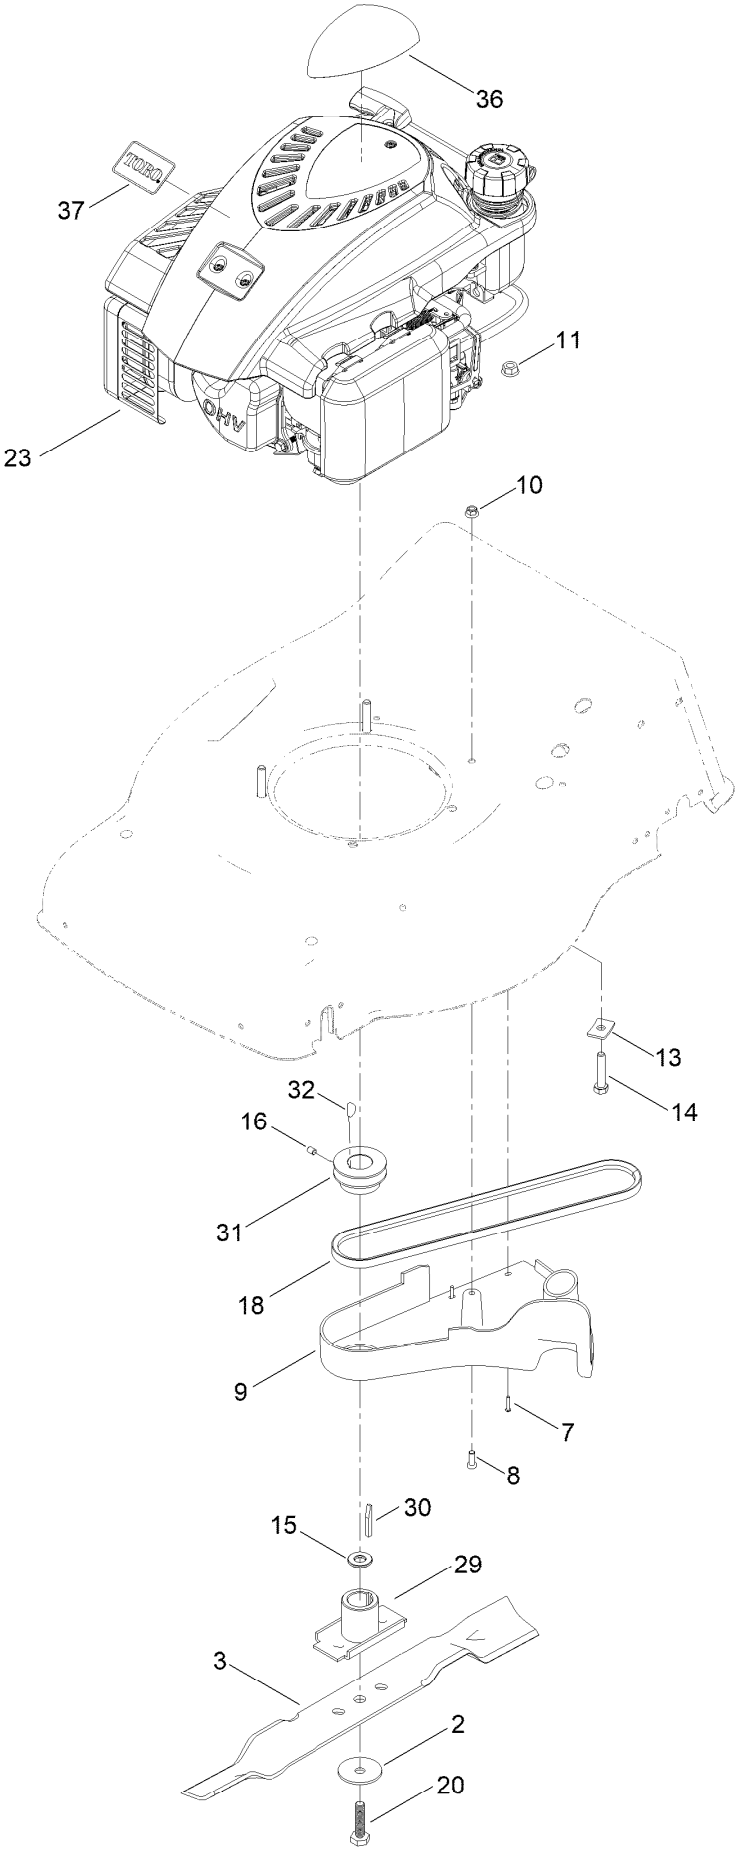

Engine and Blade Assembly (continued)

Ref.	Part Number	Qty.	Description
2	134-2016	1	Washer-Dished
3	162-1117	1	Blade - 46CM
7	134-0155	2	Screw-Self Driving
8	134-0156	1	Screw-Tooth
9	134-0157	1	Cover-Pulley, Belt
10	134-0117	1	Nut-Lock, Flange
11	134-0118	3	Nut-Lock, Flange
13	134-0158	3	Washer-Square
14	134-2011	3	Bolt-Blade
15	134-0160	1	Sheath-Blade
16	134-0161	1	Screw-Grub
18	134-0163	1	Belt-Triangle
20	134-0164	1	Bolt-Blade
23	147-7103	1	Engine-1P65Fc, Recoil
29	134-0171	1	Support-Blade
30	134-0172	1	Key-Flat
31	134-0173	1	Pulley-Drive
32	134-0174	1	Key-Woodruff
36	162-0738	1	Decal - Engine
37	121-2396	1	Decal

Suspension and Wheel Assembly

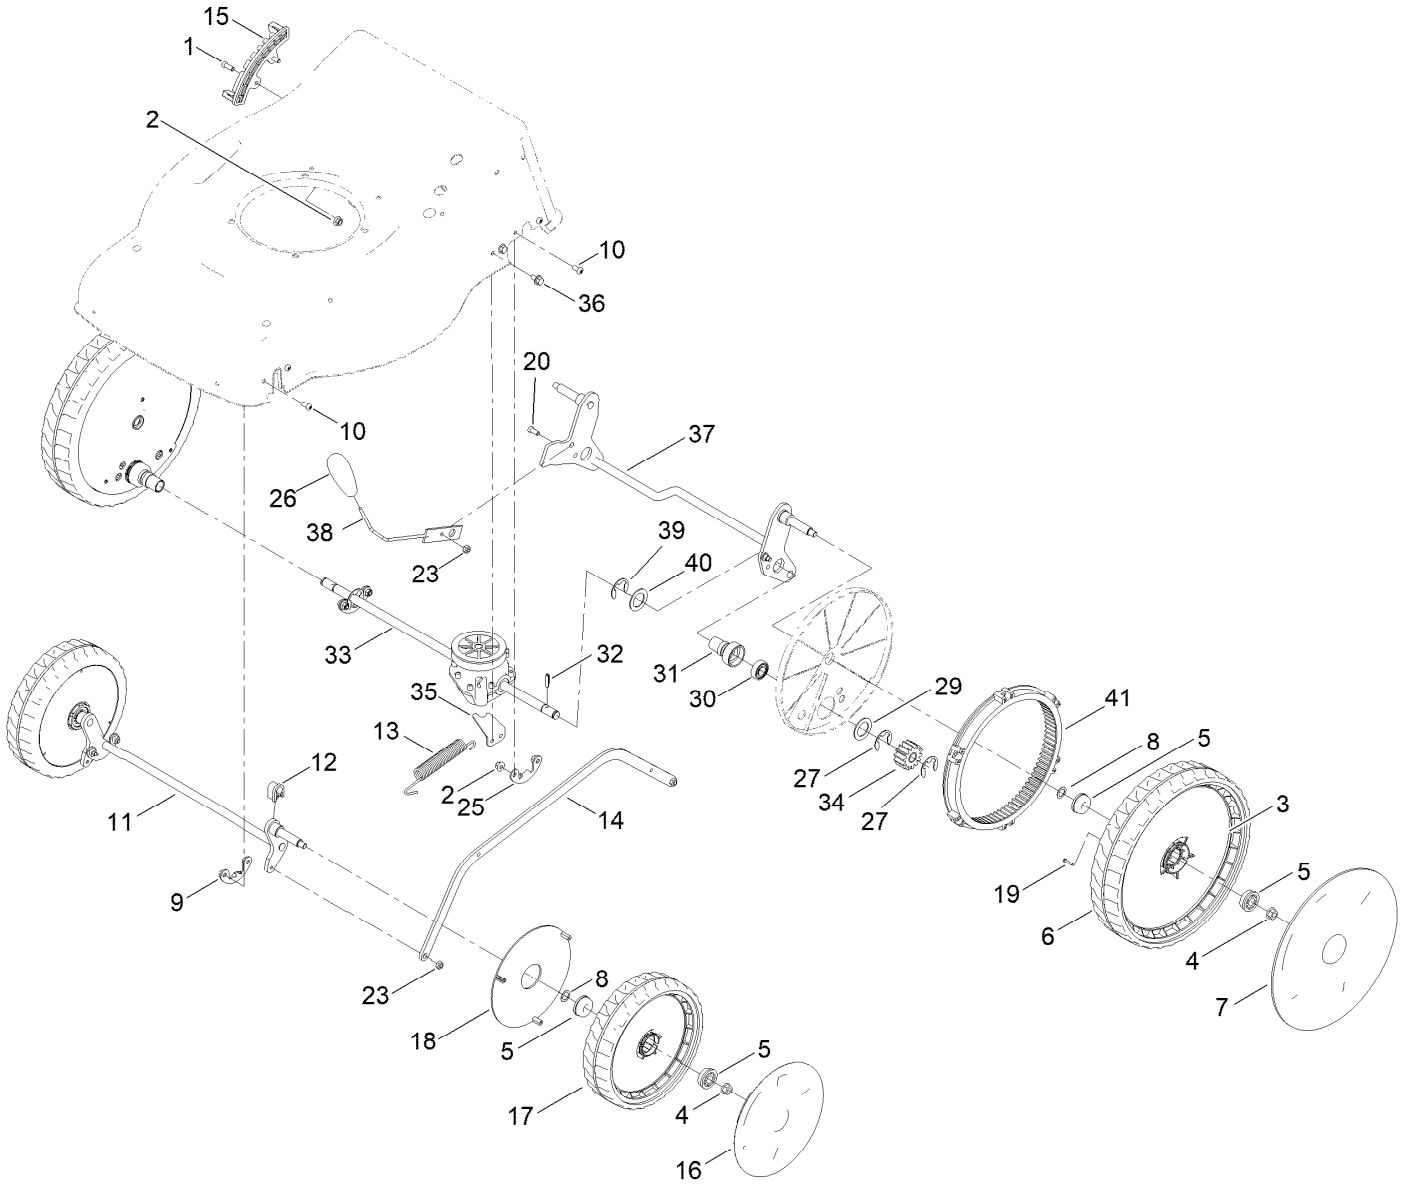


Suspension and Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-0156	2	Screw-Tooth
2	134-0117	6	Nut-Lock, Flange
3	162-0755	2	Cap-Hub 7"
4	134-0118	4	Nut-Lock, Flange
5	134-0176	8	Bearing
6	134-8650	2	Wheel ASM
7	134-0178	2	Cover-Wheel, Dustproof
8	134-0179	4	Washer-Wave
9	134-0180	2	Clamp-Axle, Fixed
10	134-0181	8	Screw-Tooth
11	134-0182	1	Front Wheel Axis ASM
12	134-0183	2	Ring-Fixed
13	134-0184	1	Spring-Tension
14	134-0185	1	Bracket-Connecting, HOC
15	134-0186	1	Board-Adjuster, HOC
16	162-0754	2	Cap-Hub 8"
17	134-0188	2	Wheel ASM (8)
18	134-0212	2	Cover-Wheel, Dustproof
19	134-0131	6	Screw-Self Driving
20	134-0189	1	Screw-Pan, Cross
23	134-0190	3	Nut-Lock
25	134-0191	2	Ring-Fixed
26	134-0192	1	Handle-Lever, HOC
27	134-0197	4	Washer-Spring
28	134-0198	1	Gear Output ASM-RH ●
29	134-0199	2	Washer-Flat
30	134-0200	2	Bearing
31	134-0201	2	Sheath-Bearing
32	134-0202	2	Pin-Cynlindrical
33	134-0203	1	Gearbox
34	134-0204	1	Gear Output ASM-LH
35	134-0205	1	Bracket-Location
36	134-0206	2	Bolt-HH, Flange
37	134-0207	1	Rear Axle Shaft ASM
38	134-0208	1	Handle ASM
39	134-0209	2	Washer-Spring
40	134-0210	1	Washer
41	134-0211	2	Gear Ring

● Not illustrated


Handle Assembly

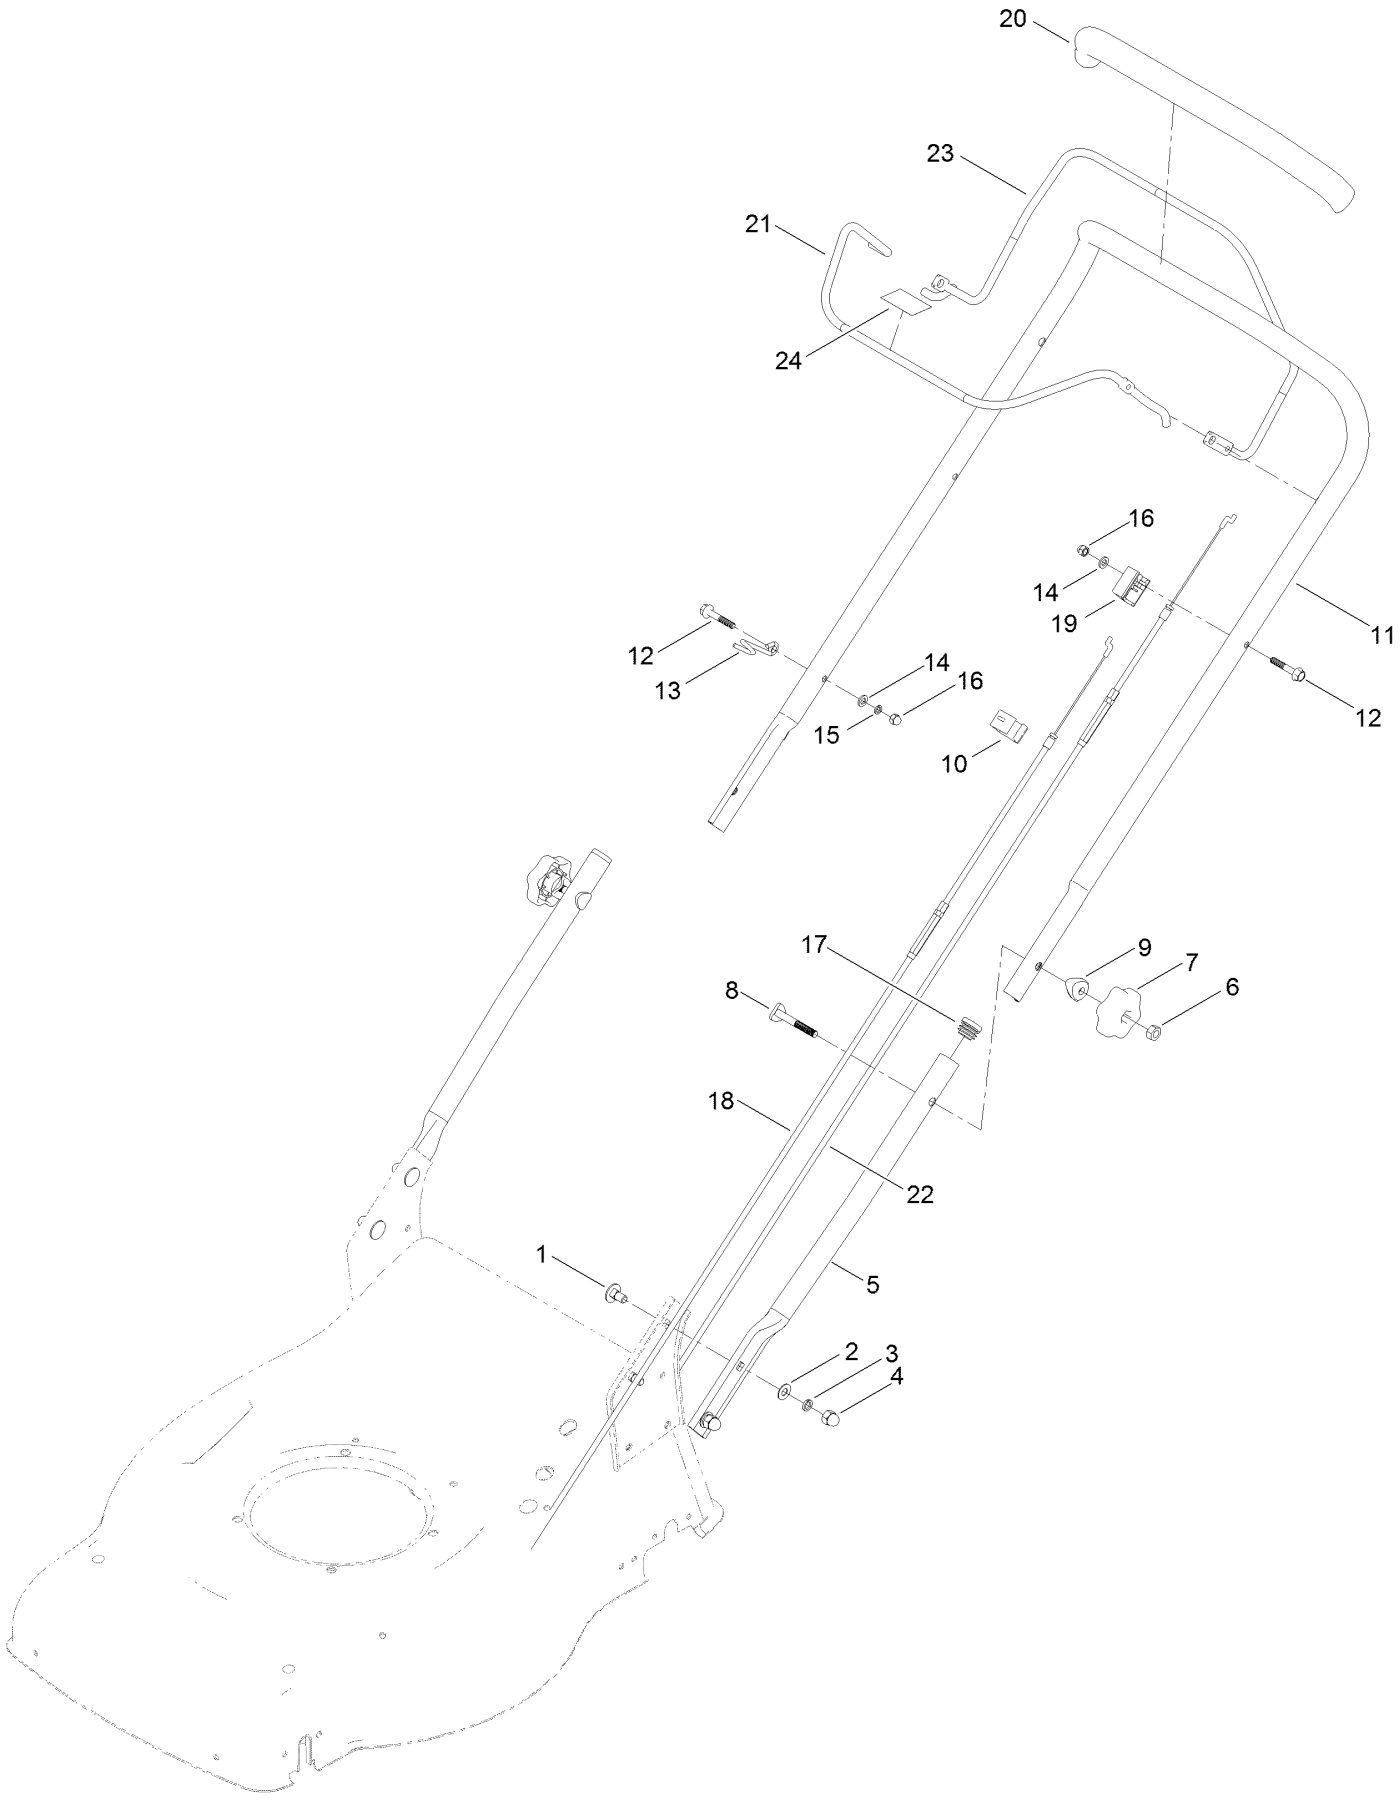

Handle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-0219	4	Bolt
2	09475	4	Washer
3	03469	4	Washer-Spring
4	134-0222	4	Nut-Lid
5	134-0223	2	Handlebar-Lower
6	134-0224	2	Nut-Hex
7	134-0225	2	Knob-Rotary
8	134-0226	2	Bolt-Flat Head
9	134-0227	2	Washer-Curve
10	134-0228	1	Cable Clamp
11	134-0229	1	Handlebar-Upper
12	134-0230	2	Bolt-HH, Flange
13	134-0231	1	Hook-Cable
14	09472	2	Washer-Plain
15	09474	1	Washer-Spring
16	134-0234	2	Nut-Lid
17	134-0235	2	Plug-Tube
18	134-0236	1	Cable-Brake, Engine
19	134-0237	1	Cable-Block, Fixed
20	134-0238	1	Grip-Handle
21	134-0239	1	Lever-Engine
22	134-0240	1	Cable-Clutch
23	134-0241	1	Lever-Clutch, Gearbox
24	H295159	1	Decal-Stop


Shroud, Flywheel and Fuel Assembly

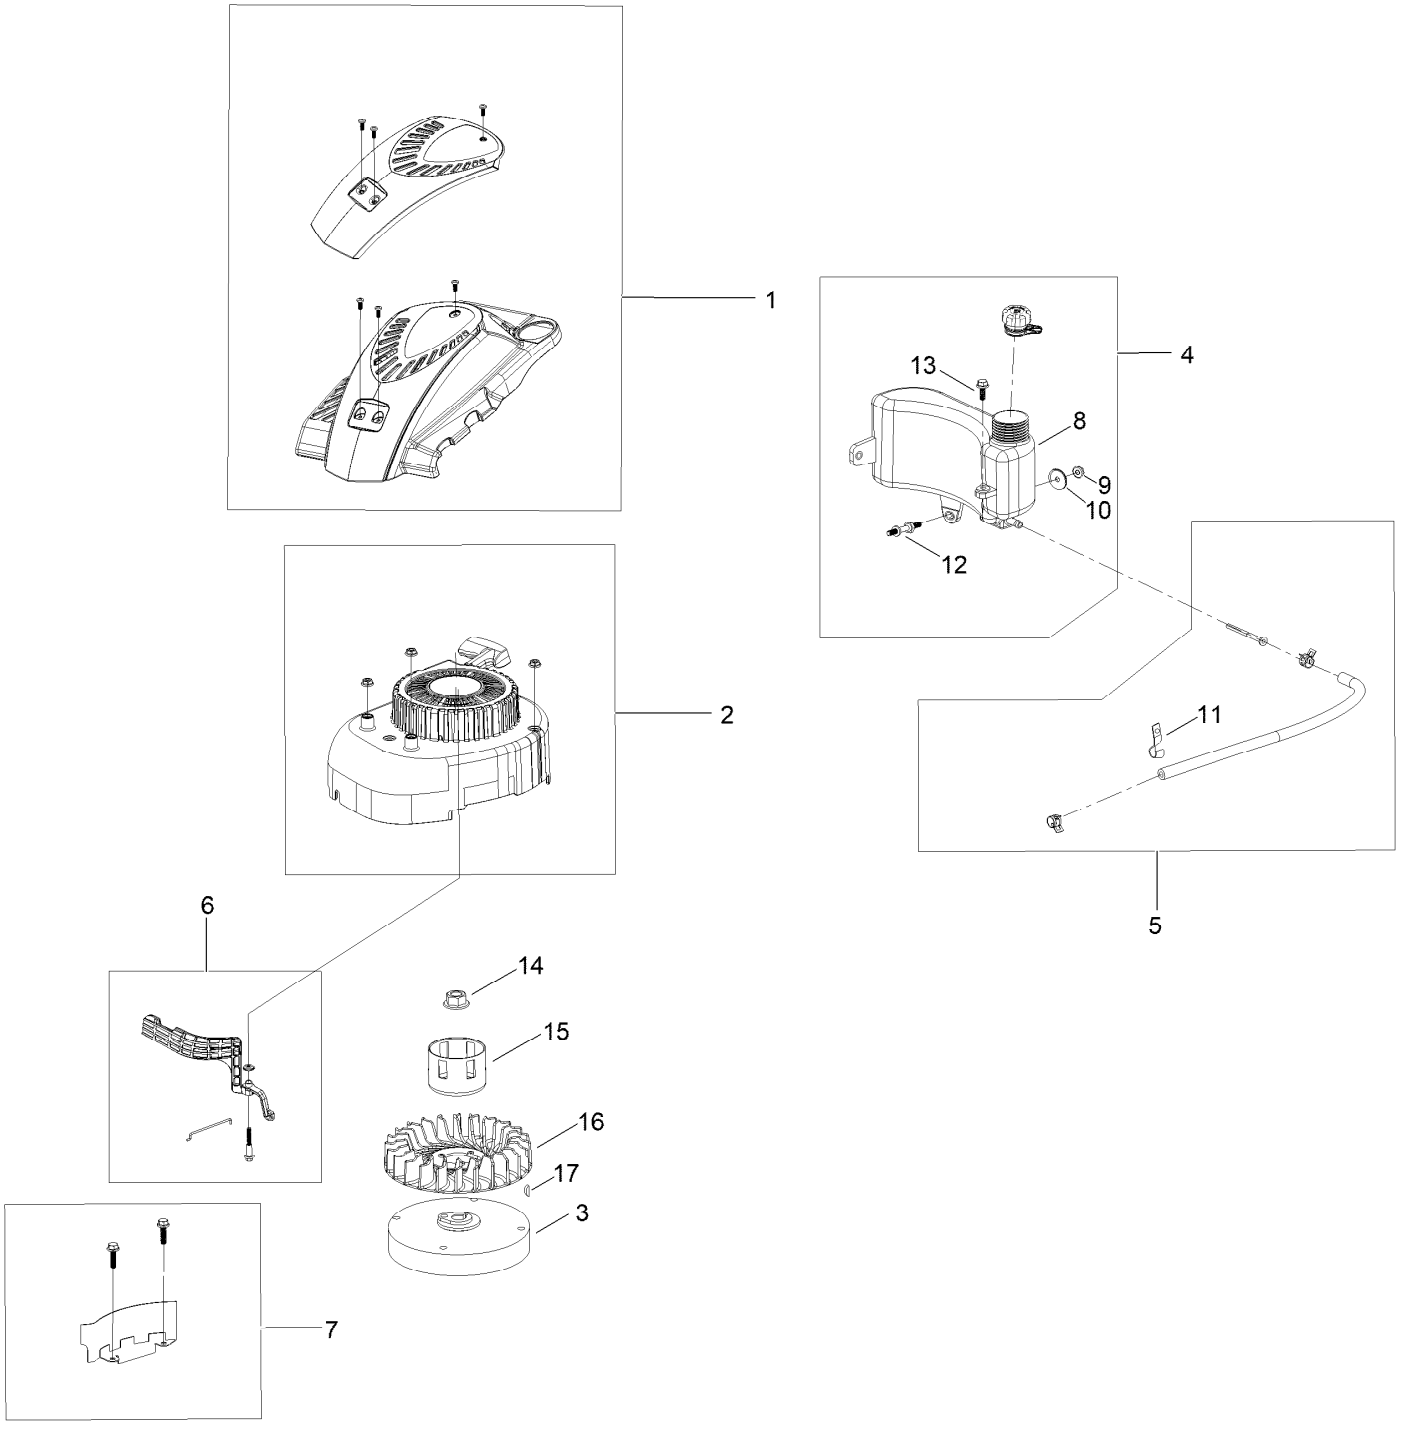

Shroud, Flywheel and Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-1990	1	Shroud ASM
2	121-4160	1	Recoil And Blower Shroud Kit
3	147-7106	1	Flywheel
4	144-1019	1	Cap-Fuel
5	121-4167	1	Fuel Line Kit
6	121-4168	1	Air Vane Kit
7	119-1994	1	Flywheel Shield Kit
8	121-4164	1	Tank-Fuel
9	121-0010	1	Nut-Flange
10	121-0203	1	Washer-Flat
11	121-0017	1	Clip-Harness, Wire
12	121-0016	1	Bolt-Stud
13	121-0007	1	Bolt-Flange
14	121-0047	1	Nut-Flange
15	121-0035	1	Cup-Starter
16	120-4480	1	Fan
17	120-4320	1	Key-Woodruff


Crankcase Assembly

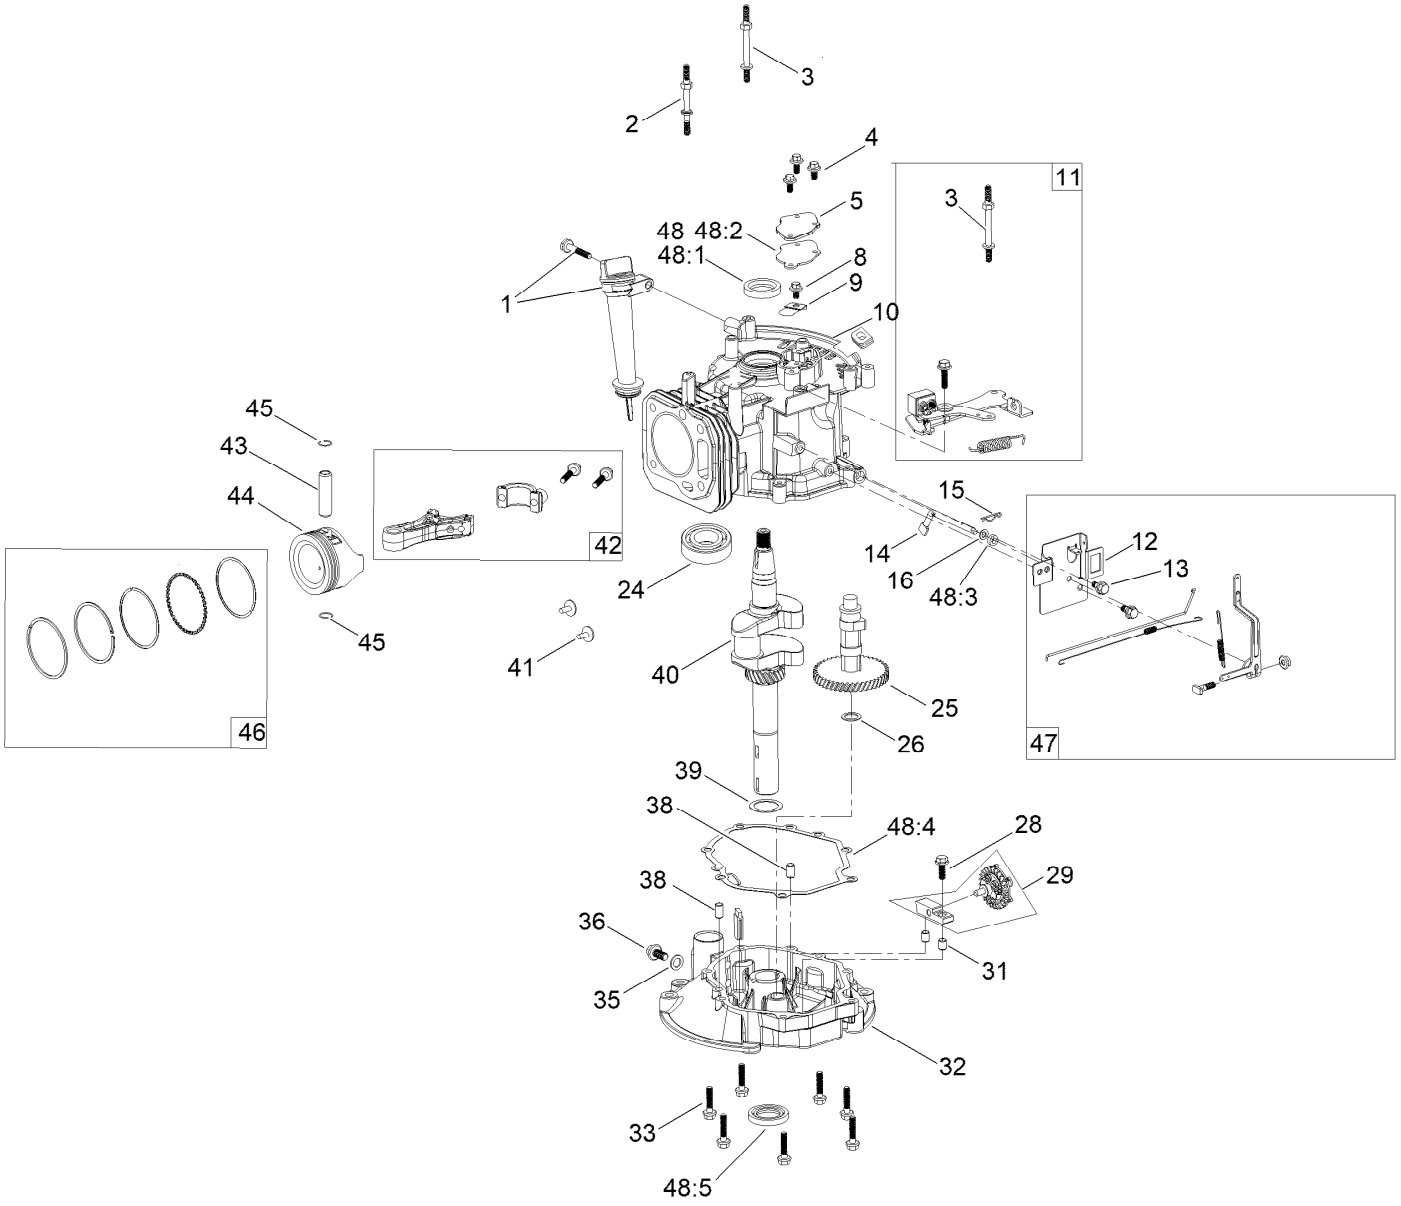

Crankcase Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-4279	1	Dipstick And Fill Tube Kit
2	121-0058	1	Bolt-Stud
3	121-0059	2	Bolt-Stud
4	121-0044	3	Screw-HHF
5	121-0032	1	Cover-Pump, Oil
8	121-0041	1	Bolt-Flange
9	120-4263	1	Valve-Reed
10	121-0371	1	Crankcase
11	119-1991	1	Brake ASM Recoil Kit
12	121-0026	1	Control ASM
13	120-4216	2	Screw-HHF
14	136-7865	1	Arm-Governor
15	120-4256	1	Pin-Hair
16	136-7866	1	Washer-Flat
24	121-0056	1	Bearing-Ball
25	121-4174	1	Camshaft ASM
26	121-0051	1	Washer-Flat
28	121-0007	1	Bolt-Flange
29	136-7903	1	Governor Gear ASM
31	121-0055	2	Pin-Dowel
32	121-0031	1	Cover-Crankcase
33	121-0040	7	Bolt-Flange
35	121-0048	1	Washer-Plain
36	121-0030	1	Screw-HHF
38	121-0054	2	Pin-Dowel
39	136-7863	1	Washer-Flat
40	147-7105	1	Crankshaft ASM
41	120-4477	2	Tappet-Valve
42	120-4469	1	Connecting Rod ASM
43	120-4467	1	Pin-Piston
44	121-4173	1	Piston
45	121-0052	2	Clip-Pin, Wrist
46	121-4171	1	Piston Ring Set
47	119-1968	1	Governor Arm Kit
48	127-9144	1	Seal And Gasket Kit
48:1	121-0019	1	Seal-Oil
48:2	121-0020	1	Gasket-Breather
48:3	121-0021	1	Seal-Oil
48:4	120-4459	1	Gasket-Cover, Case
48:5	121-0022	1	Seal-Oil

Carburetor, Muffler, Air Cleaner and Valve Cover Assembly

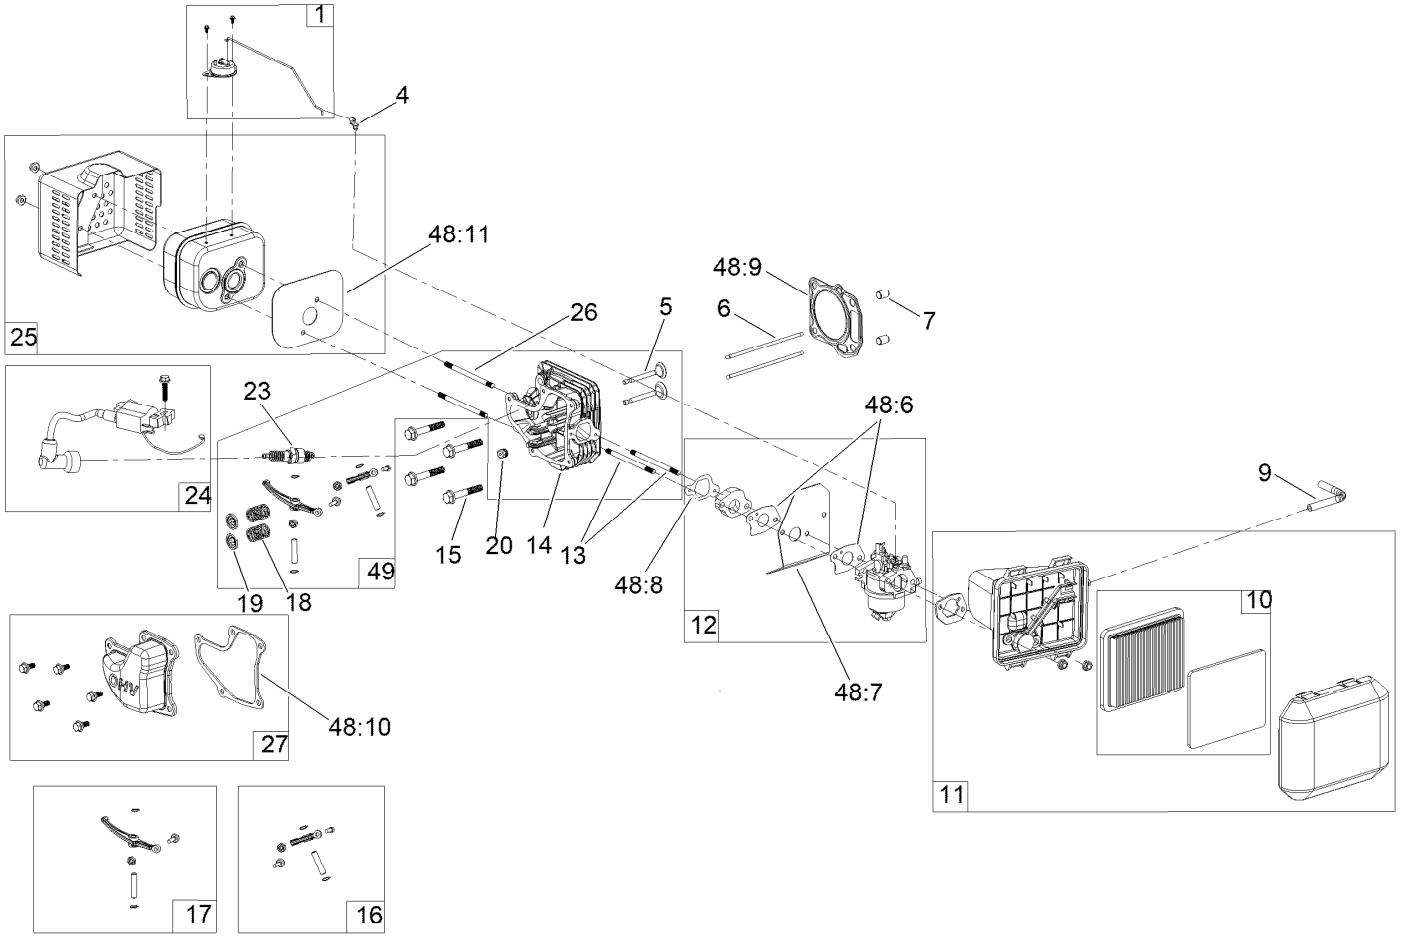

Carburetor, Muffler, Air Cleaner and Valve Cover Assembly (continued)

Ref.	Part Number	Qty.	Description
1	121-4175	1	Thermal Control Kit
4	120-4451	1	Lock-Throttle
5	121-4192	1	Valve Set
6	121-4193	2	Rod-Push
7	121-0053	2	Pin-Dowel
9	119-1902	1	Tube-Breather
10	119-1909	1	Air Filter And Prefilter Kit
11	121-4177	1	Air Cleaner ASM Kit
12	136-7907	1	Carb Replacement Kit
13	121-0367	2	Stud-Intake
14	121-4194	1	Head-Cylinder
15	121-0043	4	Bolt-Flange
16	136-7869	1	Intake Rocker Arm ASM
17	136-7868	1	Exhaust Rocker Arm ASM
18	120-4473	2	Spring-Valve
19	120-4474	2	Retainer-Valve, Spring
20	121-4202	1	Seal-Stem, Valve
23	121-4199	1	Spark Plug
24	136-7912	1	Ignition ASM
25	121-4277	1	Muffler And Shield Kit
26	121-0045	2	Stud-Exhaust
27	121-4188	1	Valve Cover Kit
48	127-9144	1	Seal And Gasket Kit ●
48:6	121-4184	2	Gasket-Carburetor
48:7	120-4446	1	Insulator-Carburetor
48:8	121-4183	1	Gasket-Intake
48:9	121-4197	1	Gasket-Head
48:10	121-4190	1	Gasket-Valve Cover
48:11	121-0034	1	Gasket-Exhaust
49	136-7915	1	Complete Head ASM ●
50	127-9146	1	Internal Carb Kit With Gaskets ●
99	121-4242	1	High Altitude Kit ●

● Not illustrated

Notes:

Notes:



Count on it.