Form No. 3464-990 Rev B

TORO®

Count on it.

Parts Catalog

E-Z Vac™ Complete Twin Bagger

TimeCutter® HD Riding Mower

Model No. 79345—Serial No. 416800000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3464-990 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame and Bag Assembly 4
Bagger Hood Assembly No. 140-5031 6
Blower and Tube Assembly 8
Blower Assembly No. 140-5032 10

© 2025—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame and Bag Assembly

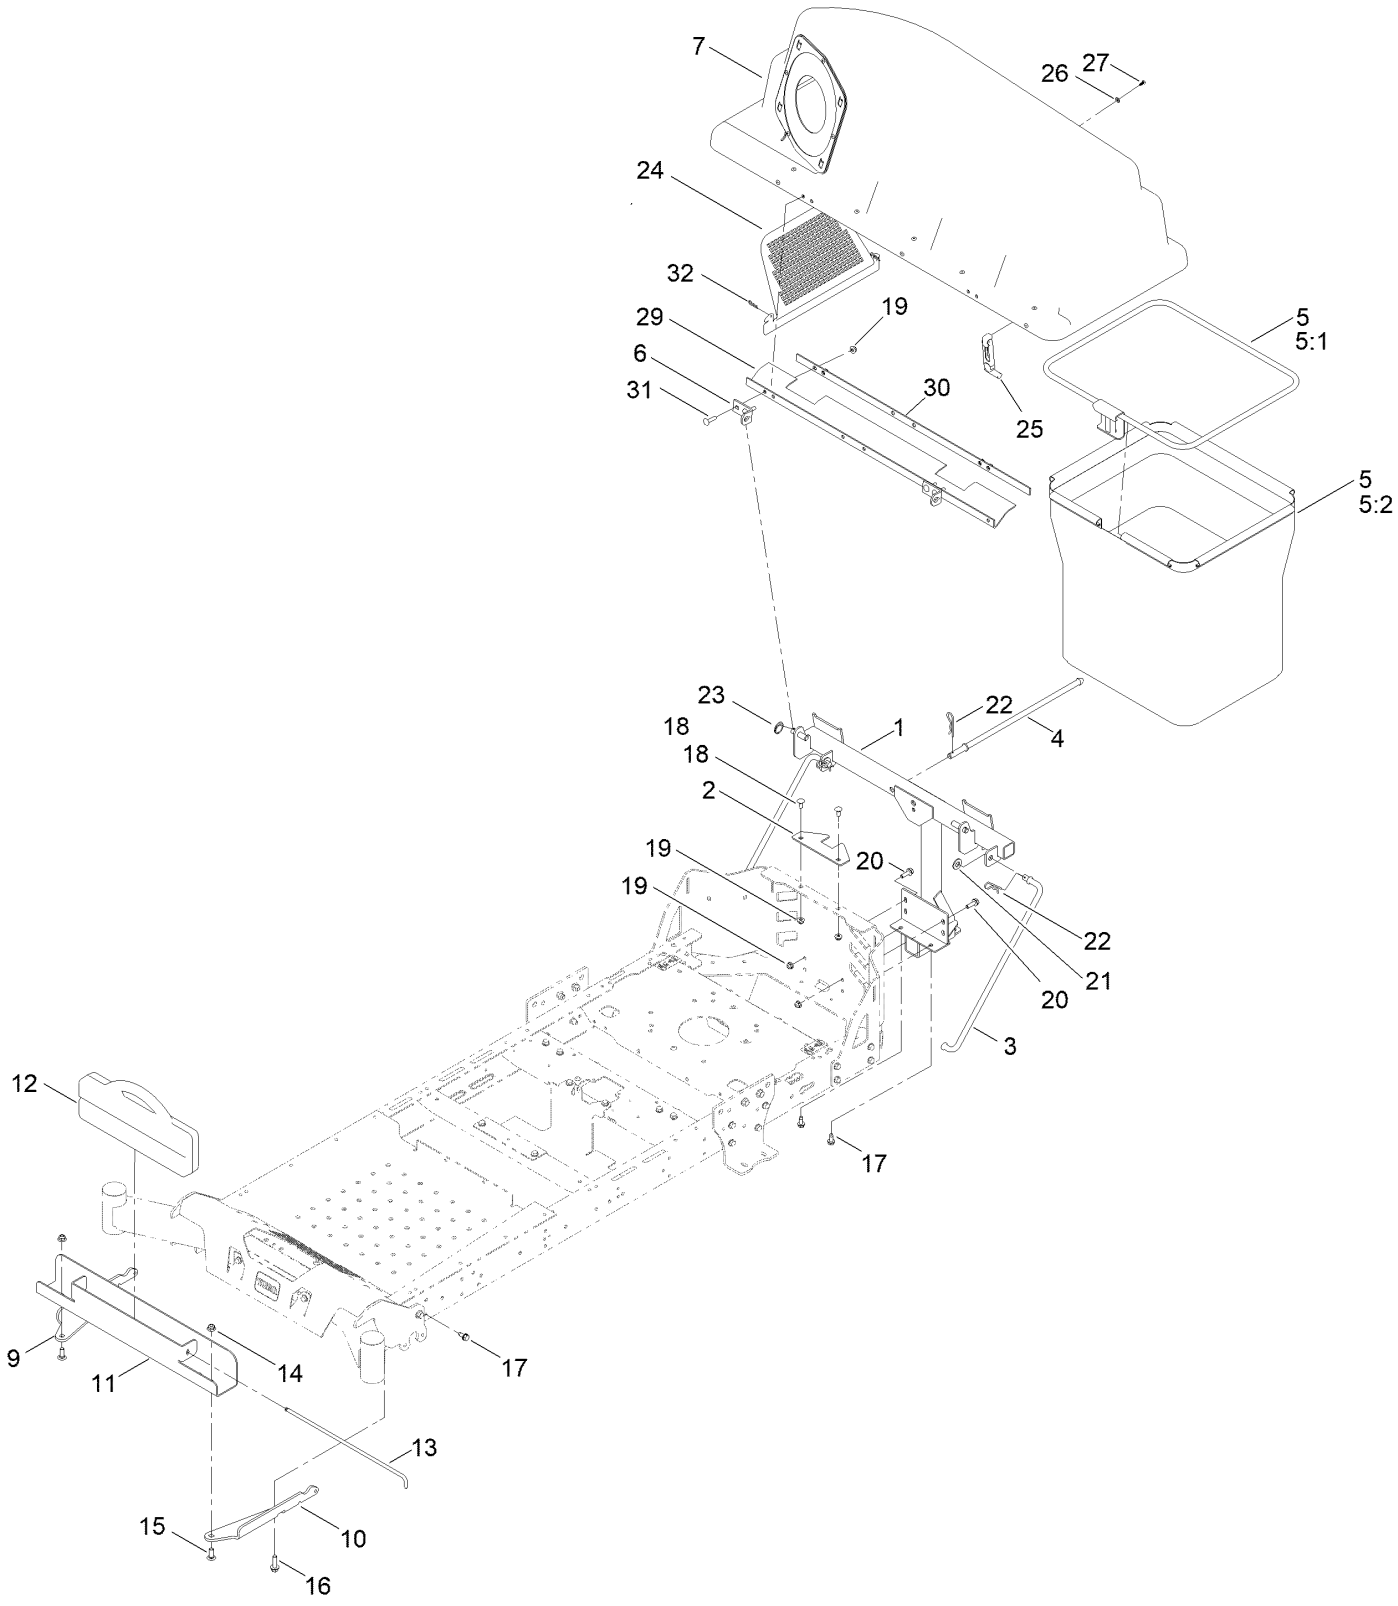

Frame and Bag Assembly (continued)

Ref.	Part Number	Qty.	Description
1	136-4231-03	1	Frame-Pivot
2	131-3967-03	1	Bracket-Stabilizer
3	140-0444	2	Rod-Support
4	131-4189	1	Rod-Hood, Down
5	147-2888	2	Bag ASM
5:1	140-5179-03	1	Frame-Bag
5:2	140-5192	1	Bag ASM 20In Depth
6	140-5016	2	Bracket-Hopper Pivot
7	140-5031	1	Bagger Hood ASM
9	136-7461-03	1	Bracket-Weight, RH
10	136-7462-03	1	Bracket-Weight, LH
11	120-5491-03	1	Channel-Weight, Bagger
12	109-9742-05	1	Weight-35 Pound
13	109-9759	1	Pin-Weight
14	119-4042	4	Nut-HF, NI
15	137-3064	2	Bolt-CARR
16	119-4061	2	Screw-HHF
17	32144-70	4	Screw-HWHTF
18	139-2630	2	Bolt-CARR
19	119-4041	8	Nut-HF
20	139-2596	2	Screw-HHF
21	139-2611	2	Washer-Flat
22	139-2562	3	Pin-Hair
23	120-7127	1	Pin-Cotter, Circular
24	112-3993	1	Screen-Bagger
25	116-4992	1	Latch-Rubber
26	137-3073	2	Washer-Plain
27	137-9137	2	Screw-PPH
29	116-4126	1	Seal
30	116-4127-03	1	Plate-Backing
31	139-1702	4	Bolt-Carriage
32	137-3083	2	Pin-Hair


Bagger Hood Assembly No. 140-5031

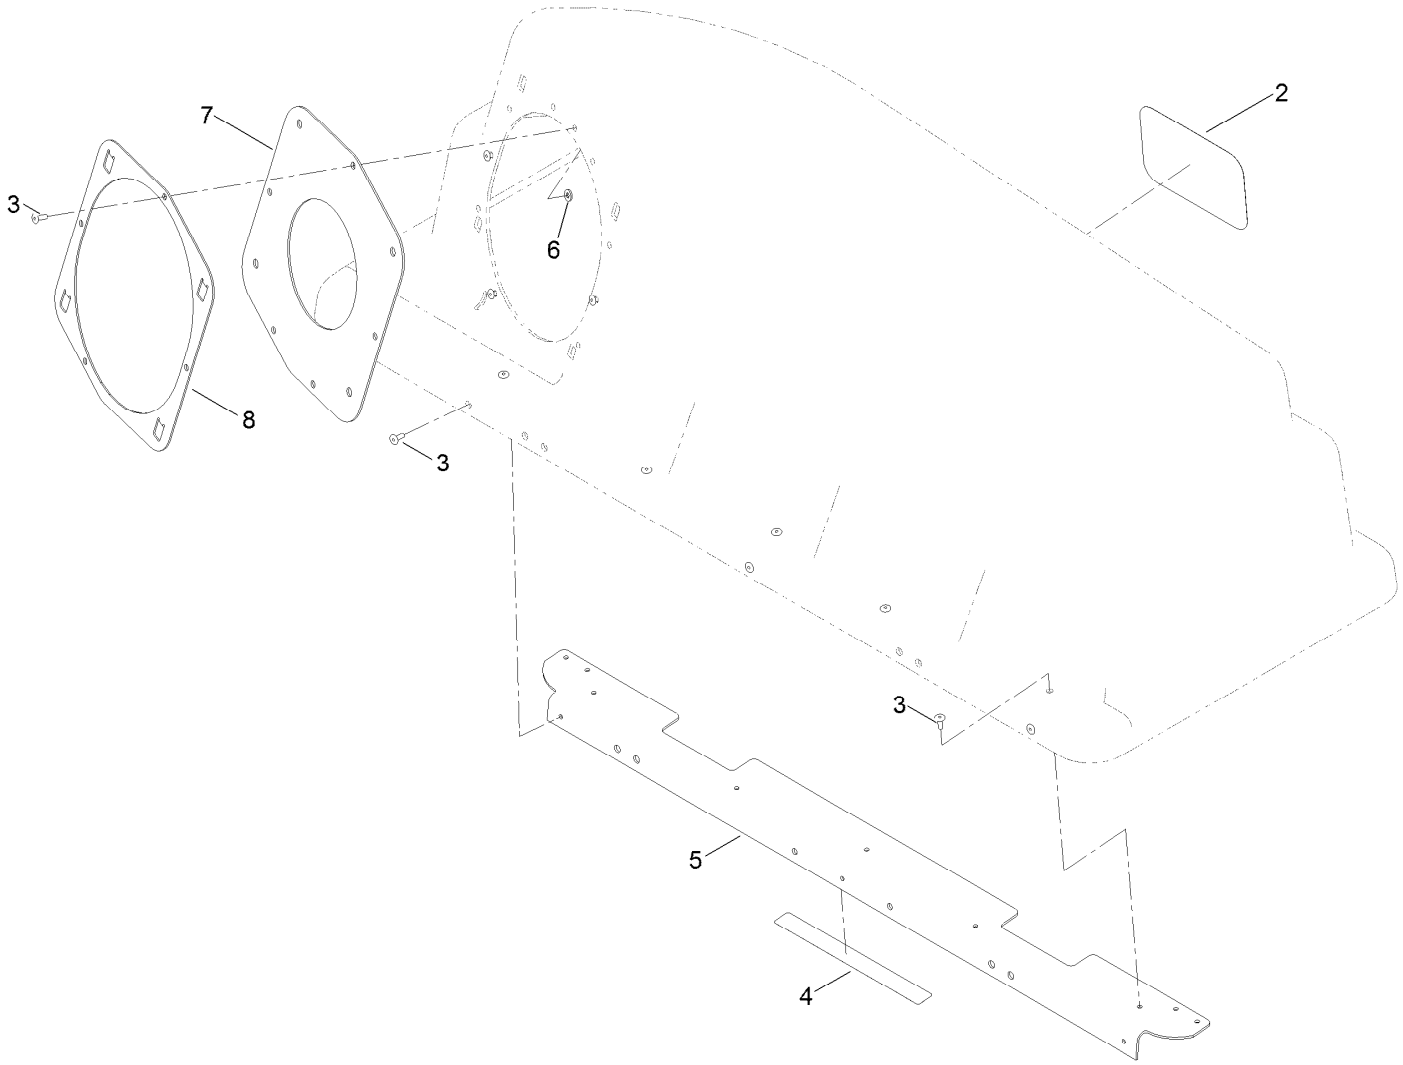

Bagger Hood Assembly No. 140-5031 (continued)

Ref.	Part Number	Qty.	Description
2	99-4693	1	Decal
3	114439	12	Rivet-Blind
4	109-6809	1	Decal-Caution, Bagger
5	116-5071-03	1	Stiffener-Bagger, Top
6	137-3073	4	Washer-Plain
7	116-4478	1	Gasket
8	112-4000-03	1	Ring-Retainer


Blower and Tube Assembly

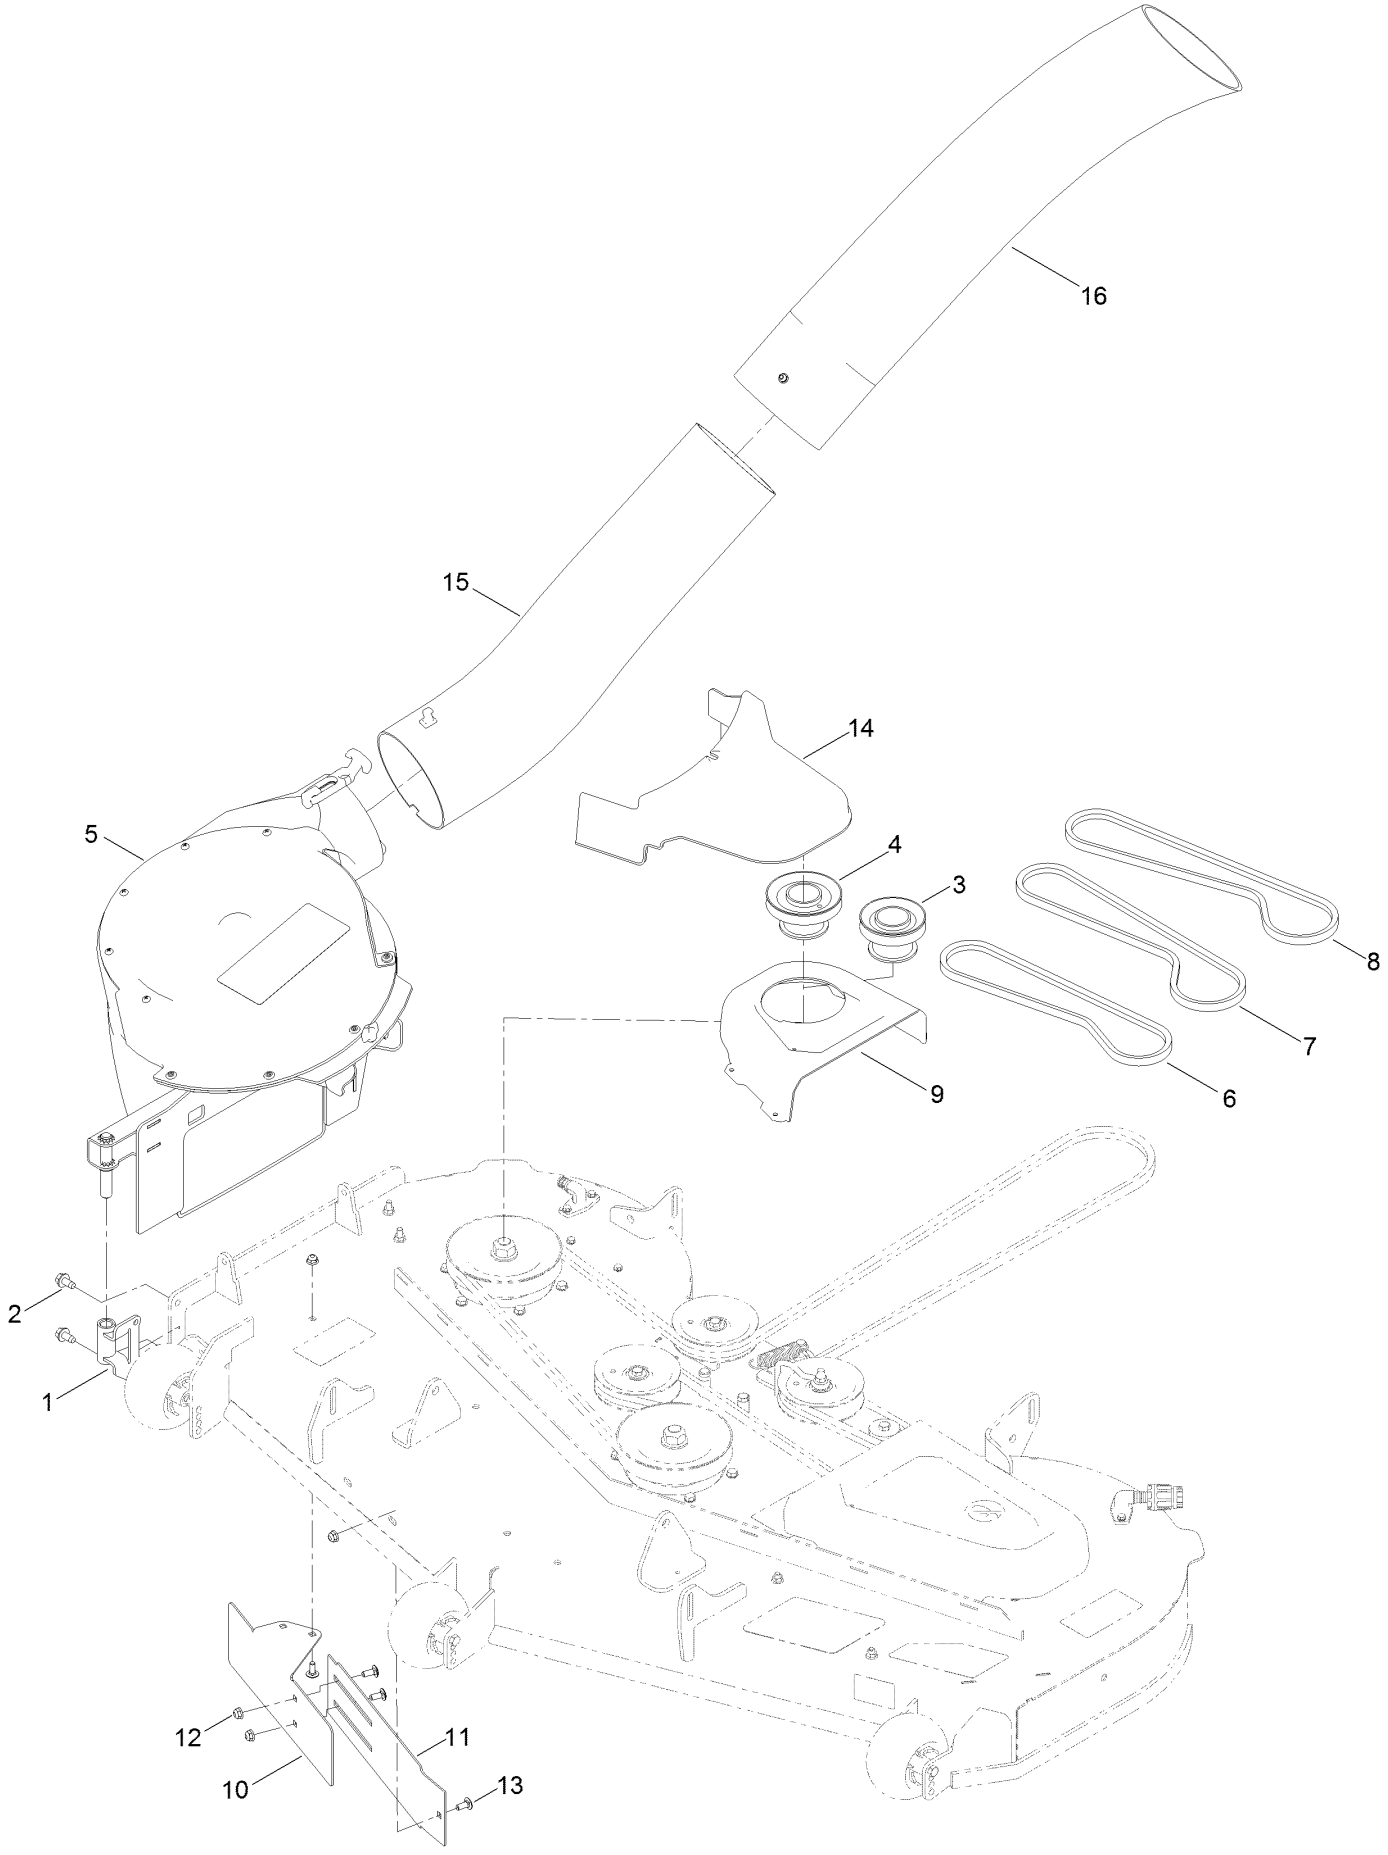

Blower and Tube Assembly (continued)

Ref.	Part Number	Qty.	Description
1	136-4152	1	Pivot-Blower
2	110-9380	2	Screw-HWH
3	125-0085	1	Pulley-Bagger
4	125-0086	1	Pulley-Bagger
5	140-5032	1	Blower ASM - Powered Bagger
6	127-0074	1	Belt-V
7	127-0075	1	Belt-V
8	127-0076	1	Belt-V
9	136-4151	1	Cover-Belt, RH
10	133-7022-03	1	Baffle-Outer
11	133-7021-03	1	Baffle-Inner
12	119-4041	4	Nut-HF
13	137-3061	4	Bolt-CARR
14	136-4172	1	Cover-Bagger, Powered
15	140-5030	1	Tube ASM-Lower
16	140-5029	1	Tube ASM-Upper

Blower Assembly No. 140-5032

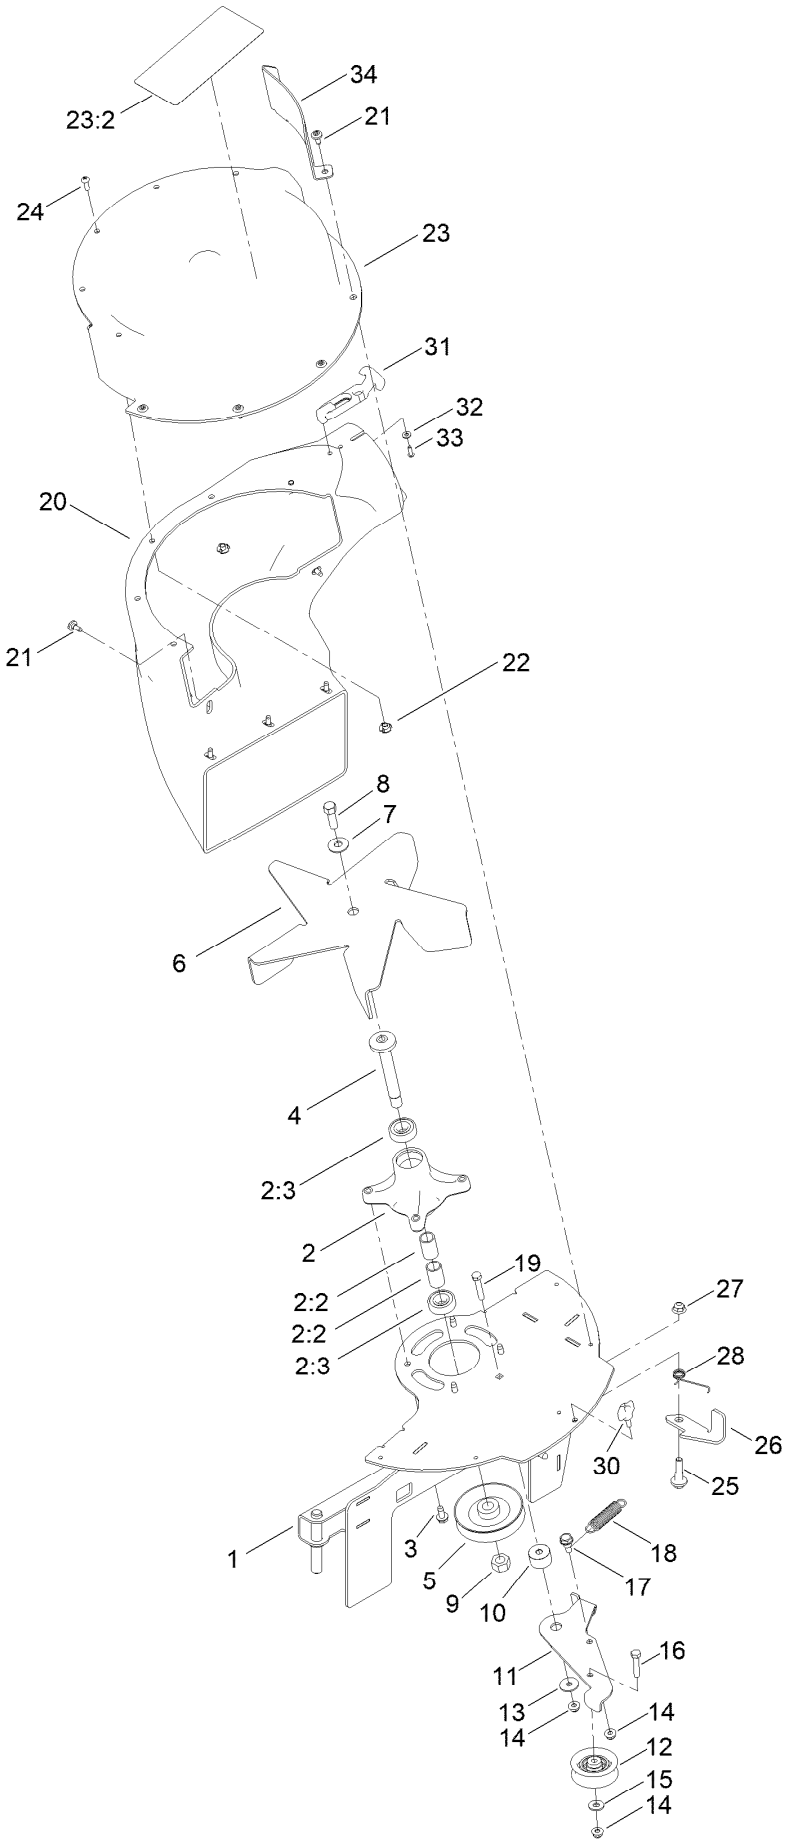

Blower Assembly No. 140-5032 (continued)

Ref.	Part Number	Qty.	Description
1	133-9287-03	1	Frame-Blower
2	121-0751	1	Spindle ASM
2:2	120-7935	2	Spacer
2:3	136-5441	2	Bearing-Ball
3	32144-70	4	Screw-HWHTF
4	137-7009	1	Shaft-Spindle
5	133-4492	1	Pulley-Blower
6	133-4336	1	Fan-Blower
7	3290-465	1	Washer-Belleville
8	108-8823	1	Screw-HH
9	3219-16	1	Nut-Hex
10	140-5015	1	Spacer-Idler Arm
11	140-5019	1	Idler Arm, Blower
12	138-7597	1	Pulley-Idler, Flat
13	5-4460	1	Washer-Pivot
14	119-4041	3	Nut-HF
15	139-1723	1	Washer-Flat
16	120-2779	1	Screw-HH
17	140-5020	1	Bolt Shoulder
18	137-7040	1	Spring-Return, Pedal
19	139-1719	1	Screw-HH
20	137-5004	1	Blower Chute ASM
21	120-7950	10	Screw-Torx
22	136-9187	5	Insert-T-Nut
23	137-5003	1	Blower Cover ASM
23:2	136-4164	1	Decal-Danger
24	3258-166	5	Screw-PRH
25	139-2560	1	Bolt-Shoulder
26	133-7058	1	Latch-Blower
27	119-4042	1	Nut-HF, NI
28	133-7048	1	Spring-Torsion
30	98-8332	1	Knob
31	103-4080	2	Latch-Rubber
32	137-3073	4	Washer-Plain
33	3274-39	4	Screw-HSBH
34	136-9213-03	1	Guard-Blower



Count on it.