Form No. 3449-889 Rev B

TORO®

Count on it.

Parts Catalog

# Powered Bagger

## TITAN® MAX Zero-Turn-Radius Riding Mower

**Model No. 79347—Serial No. 410000000 and Up**

Register at www.Toro.com.
Original Instructions (EN)

*3449-889* B

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents


Caster Weight Kit No. 126-8639 . . . . . 4
Bagger and Hood Assembly . . . . . 6
Bag Assembly No. 116-0754 . . . . . 8
Bagger Hood Assembly No. 121-3215 . . . . . 10
Blower and Drive Assembly . . . . . 12
Blower Assembly No. 140-5032 . . . . . 14

© 2025—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420



Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


# Caster Weight Kit No. 126-8639

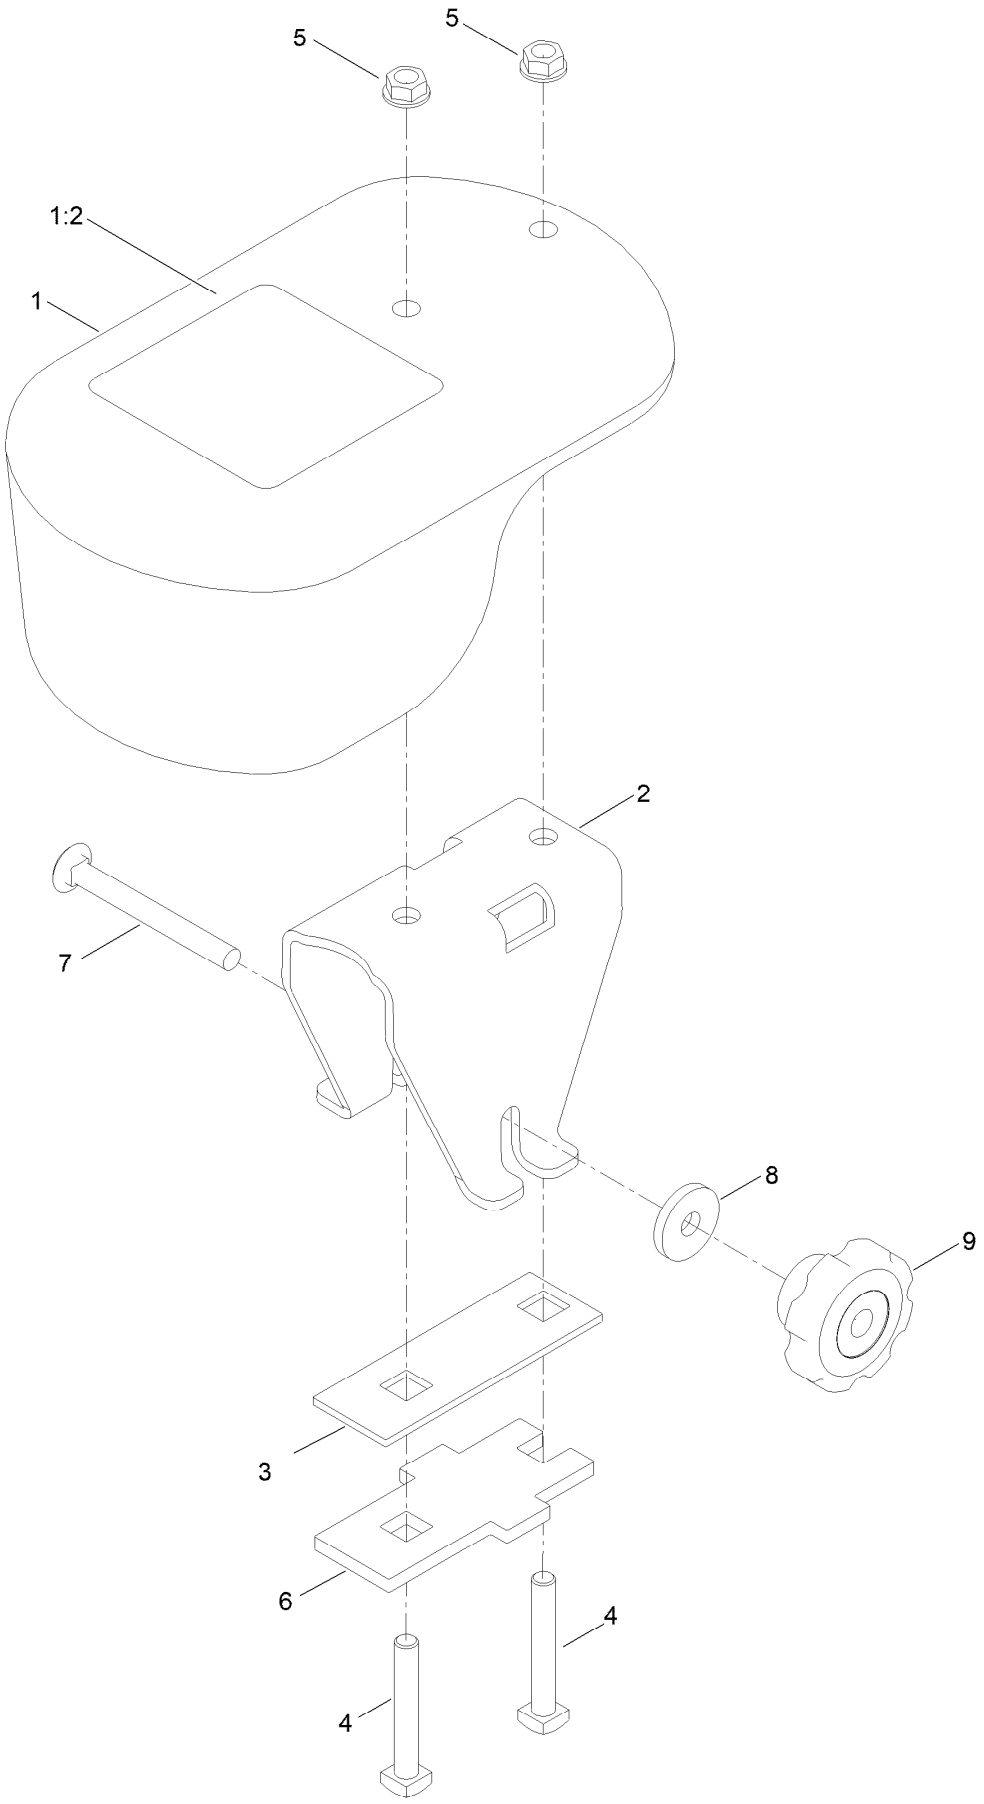

# Caster Weight Kit No. 126-8639 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 126-7639 | 1 | Weight With Decal ASM |
| 1:2 | 126-4662 | 1 | Decal-Warning, Traction |
| 2 | 126-5967-01 | 1 | Channel-Mount, Weight |
| 3 | 126-5966-01 | 1 | Plate-Bracket, Weight |
| 4 | 103-2500 | 2 | Bolt-SQH |
| 5 | 3290-357 | 2 | Nut-HSF |
| 6 | 126-5961-01 | 1 | Plate-Bracket, Weight |
| 7 | 3231-11 | 1 | Screw-CARR |
| 8 | 130-5815 | 1 | Washer-Backup |
| 9 | 109-1092 | 1 | Knob |

# Bagger and Hood Assembly

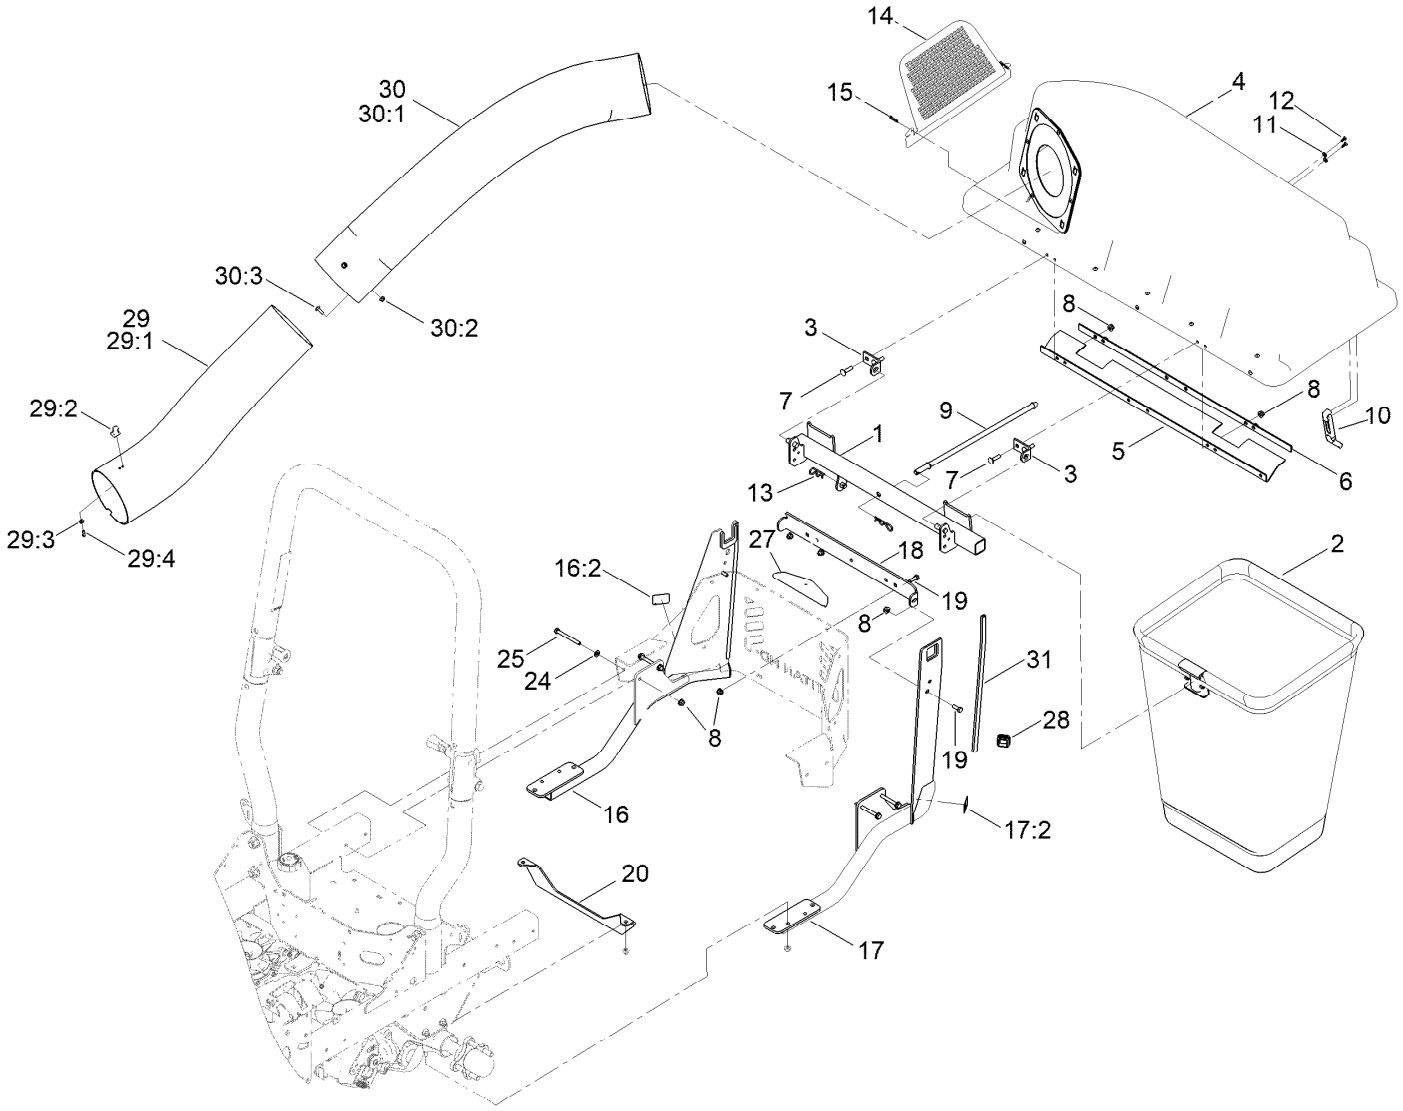


# Bagger and Hood Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 116-4783-03 | 1 | Frame Pivot ASM |
| 2 | 116-0754 | 2 | Bag And Frame ASM |
| 3 | 112-3987 | 2 | Bracket-Pivot, Hopper |
| 4 | 121-3215 | 1 | Bagger Hood ASM |
| 5 | 116-4126 | 1 | Seal |
| 6 | 116-4127-03 | 1 | Plate-Backing |
| 7 | 3230-3 | 4 | Screw-CARR |
| 8 | 104-8300 | 8 | Nut-HF, NI |
| 9 | 116-6491 | 1 | Rod-Hold Down, Hood |
| 10 | 116-4992 | 1 | Latch-Rubber |
| 11 | 3256-77 | 2 | Washer-Flat |
| 12 | 107-7461 | 2 | Screw-Plastite |
| 13 | 3290-355 | 2 | Pin-Hair |
| 14 | 112-3993 | 1 | Screen-Bagger |
| 15 | 3290-307 | 2 | Pin-Cotter |
| 16 | 126-9662 | 1 | RH Bagger Support ASM |
| 16:2 | 106-5517 | 1 | Decal-Warning |
| 17 | 126-9663 | 1 | LH Bagger Support ASM |
| 17:2 | 106-5517 | 1 | Decal-Warning |
| 18 | 140-9504-03 | 1 | Angle - Support, Bagger |
| 19 | 322-4 | 4 | Screw-HH |
| 20 | 126-5672-03 | 1 | Support-Transmission |
| 24 | 3256-23 | 4 | Washer-Plain |
| 25 | 126-8742 | 4 | Screw-HH |
| 27 | 126-8299 | 1 | Cover-Hitch |
| 28 | 126-9159 | 2 | Plug |
| 29 | 116-4128 | 1 | Lower Tube ASM |
| 29:1 | 116-4495 | 1 | Tube-Lower |
| 29:2 | 103-4081 | 2 | Latch-Keeper ● |
| 29:3 | 3256-14 | 2 | Washer-Flat |
| 29:4 | 3290-500 | 2 | Screw-PPH |
| 30 | 116-4825 | 1 | Upper Tube ASM |
| 30:1 | 116-4496 | 1 | Tube-Upper |
| 30:2 | 104-7201 | 3 | Nut-HF, NI |
| 30:3 | 1-803076 | 3 | Screw |
| 31 | 126-9923 | 2 | Strip-Trim |

● Kit No. 103-4188 - Contains catch, rubber latch, and mounting hardware


# Bag Assembly No. 116-0754

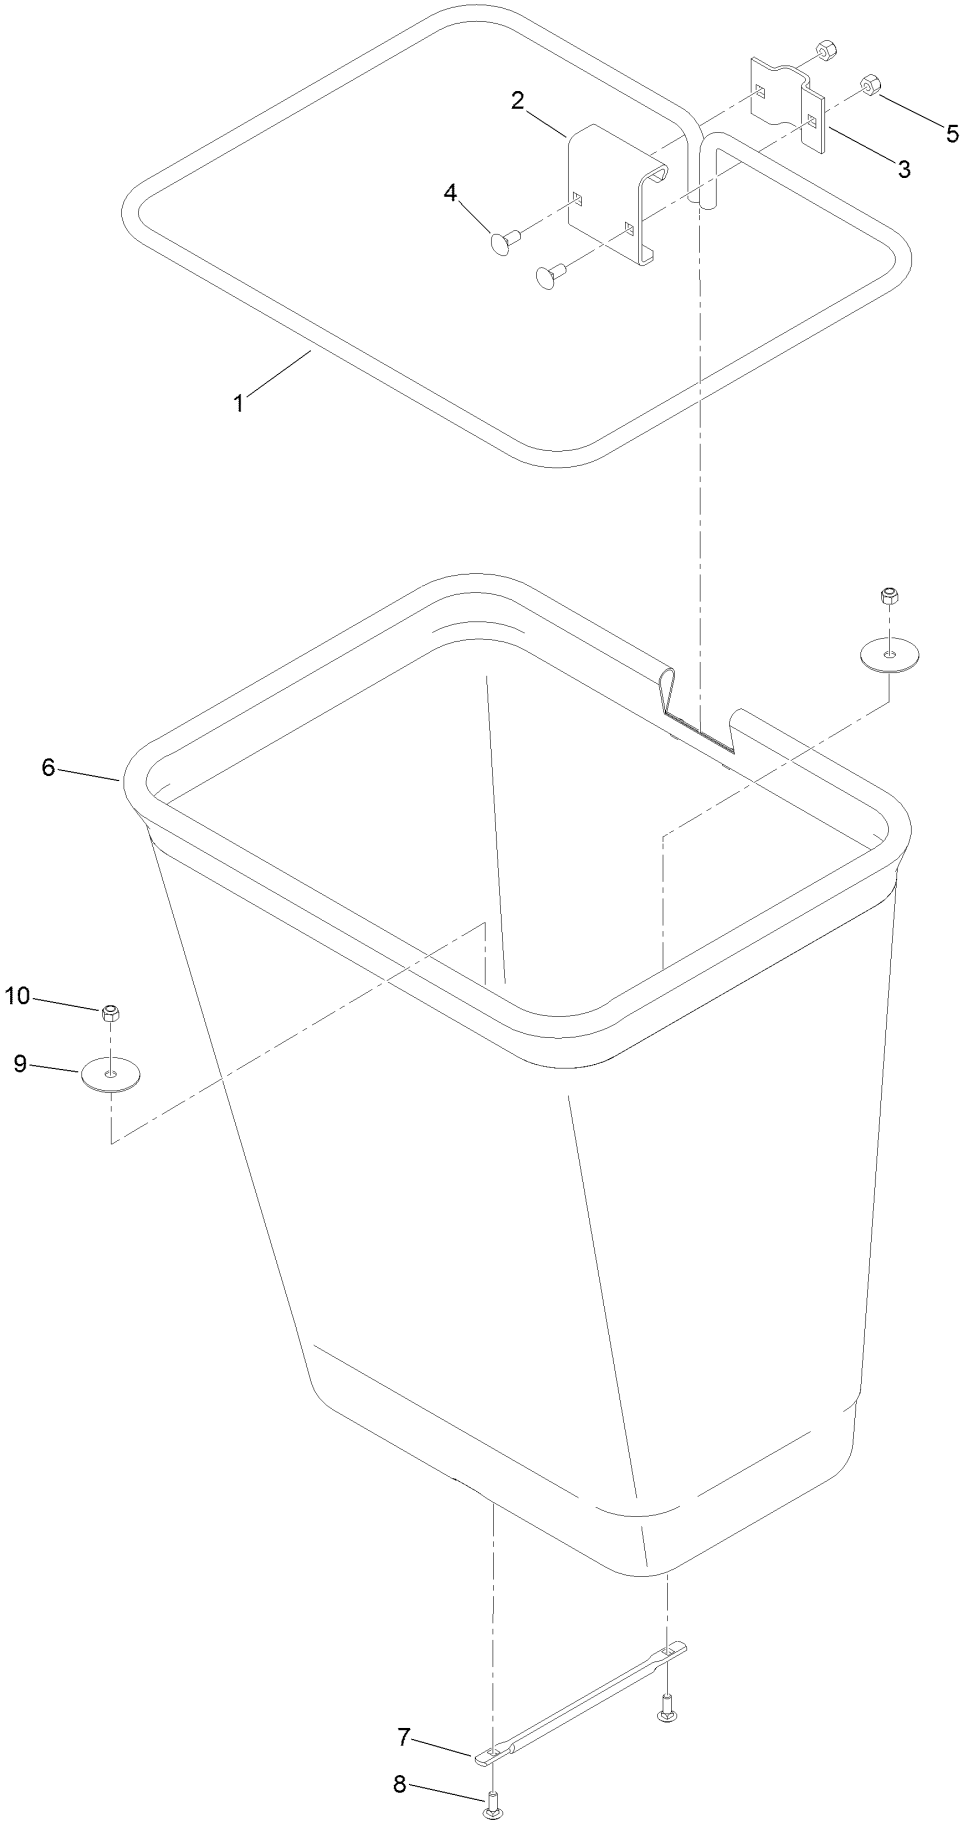

# Bag Assembly No. 116-0754 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 1-653529-03 | 1 | Frame-Bag |
| 2 | 114973-03 | 1 | Hanger-Bag |
| 3 | 114974-03 | 1 | Clamp |
| 4 | 3230-1 | 2 | Bolt-CARR |
| 5 | 3296-29 | 2 | Nut-Lock, NI |
| 6 | 116-0757 | 1 | Bag |
| 7 | 1-653566 | 1 | Handle-Bag |
| 8 | 3229-1 | 2 | Screw-CARR |
| 9 | 1-653036 | 2 | Washer |
| 10 | 3296-42 | 2 | Nut-Lock, NI |


# Bagger Hood Assembly No. 121-3215

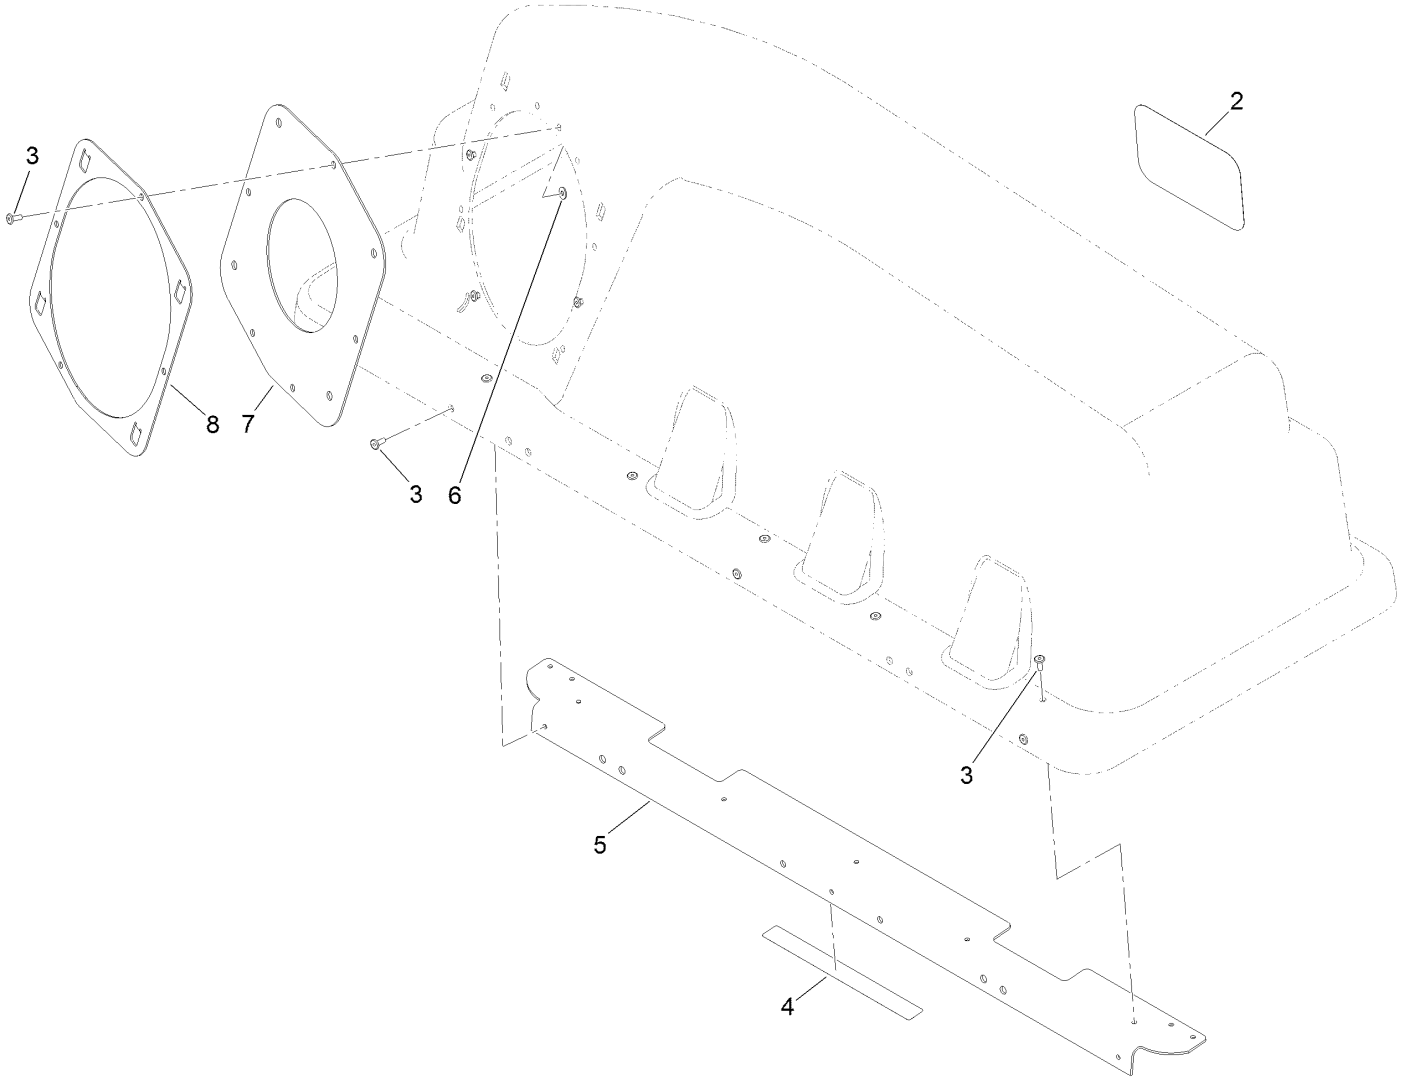

# Bagger Hood Assembly No. 121-3215 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 99-4693 | 1 | Decal |
| 3 | 114439 | 12 | Rivet-Blind |
| 4 | 109-6809 | 1 | Decal-Caution, Bagger |
| 5 | 116-5071-03 | 1 | Stiffener-Bagger, Top |
| 6 | 9202704 | 4 | Washer-Flat |
| 7 | 116-4478 | 1 | Gasket |
| 8 | 112-4000-03 | 1 | Ring-Retainer |


# Blower and Drive Assembly

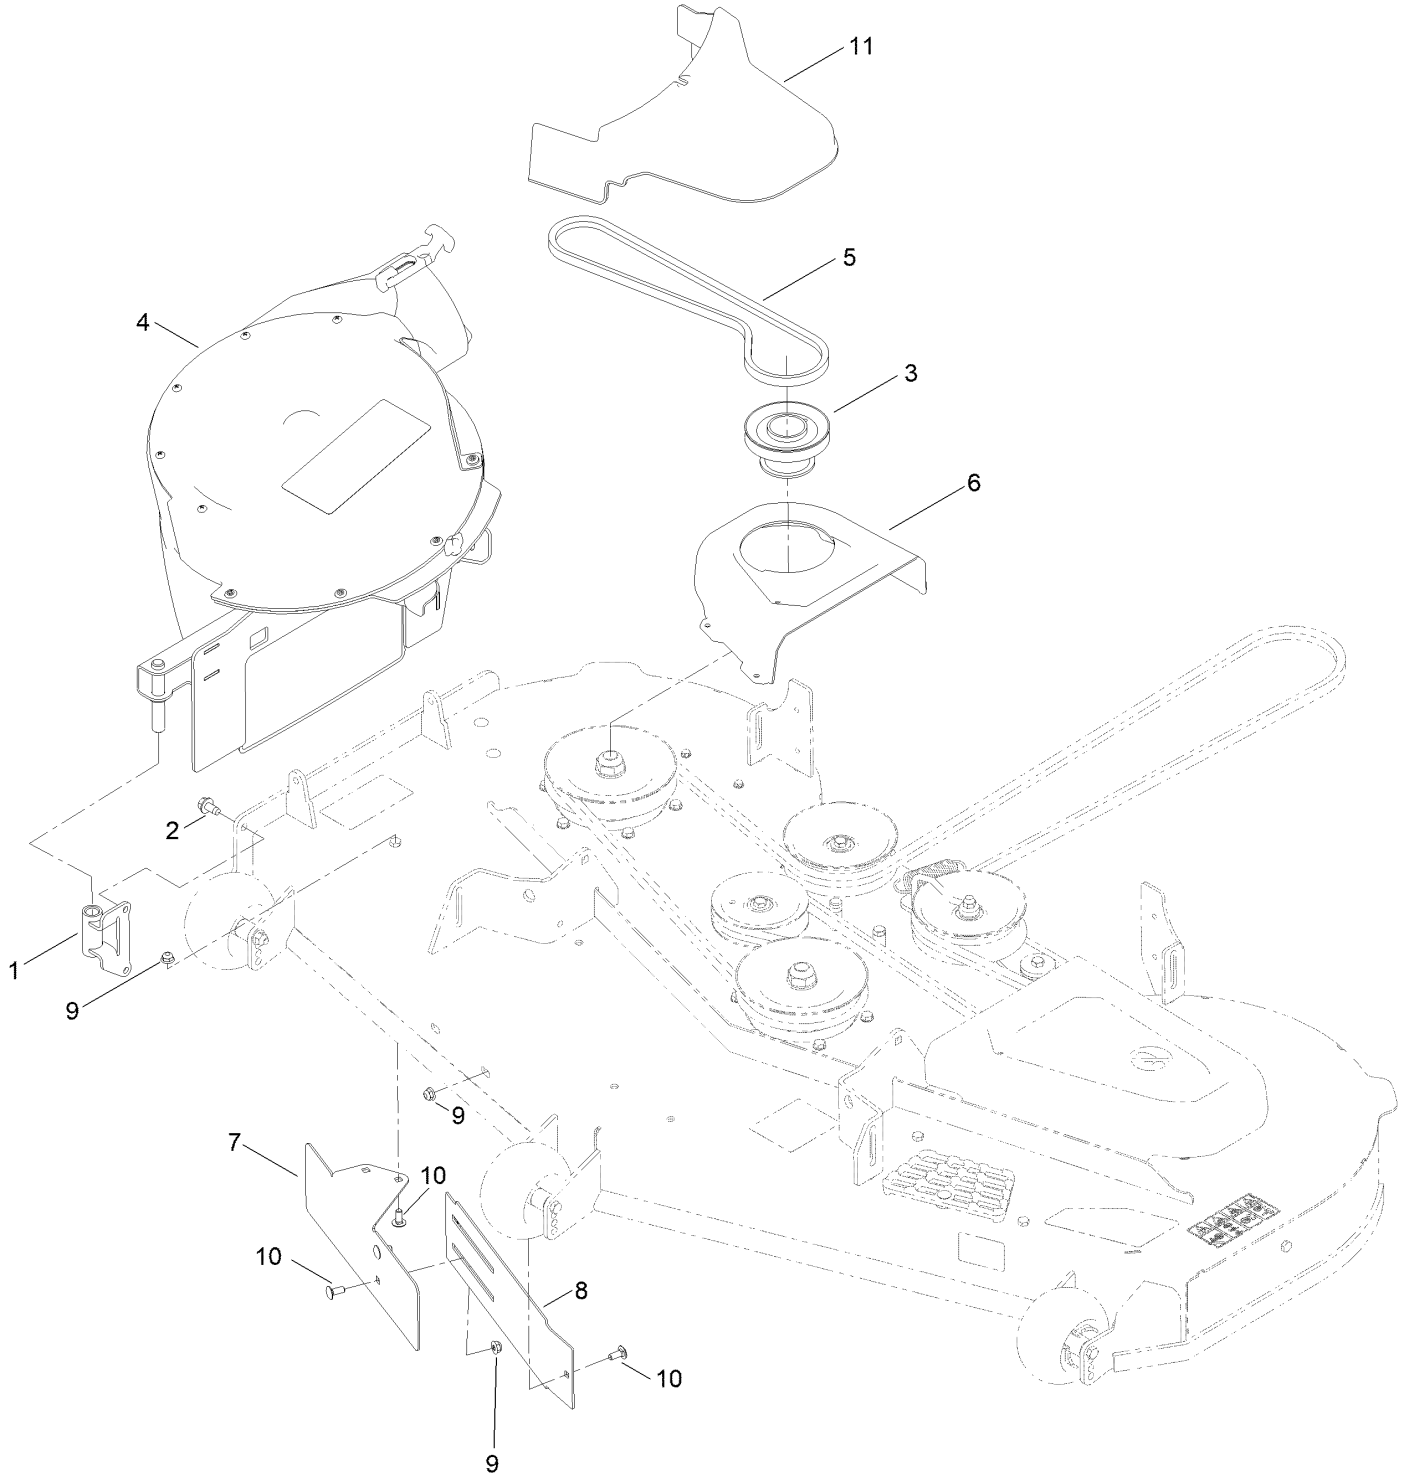

# Blower and Drive Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 136-4152 | 1 | Pivot-Blower |
| 2 | 110-9380 | 2 | Screw-HWH |
| 3 | 125-0086 | 1 | Pulley-Bagger |
| 4 | 140-5032 | 1 | Blower ASM - Powered Bagger |
| 5 | 127-0076 | 1 | Belt-V |
| 6 | 136-4151 | 1 | Cover-Belt, RH |
| 7 | 133-7022-03 | 1 | Baffle-Outer |
| 8 | 133-7021-03 | 1 | Baffle-Inner |
| 9 | 119-4041 | 4 | Nut-HF |
| 10 | 137-3061 | 4 | Bolt-CARR |
| 11 | 136-4172 | 1 | Cover-Bagger, Powered |

# Blower Assembly No. 140-5032

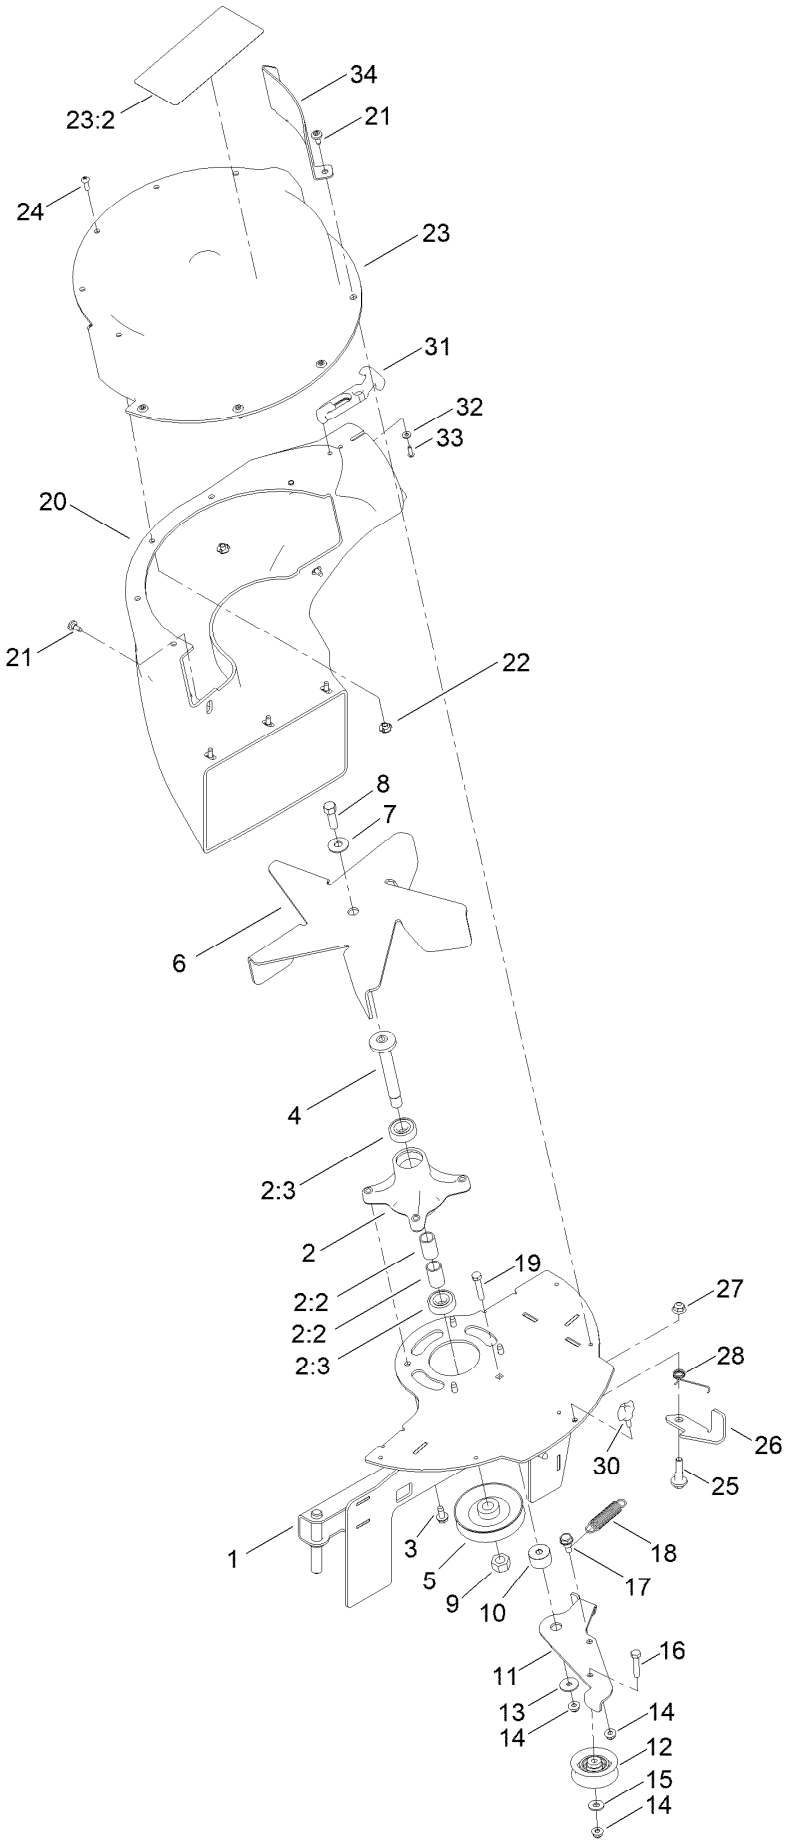

# Blower Assembly No. 140-5032 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 133-9287-03 | 1 | Frame-Blower |
| 2 | 121-0751 | 1 | Spindle ASM |
| 2:2 | 120-7935 | 2 | Spacer |
| 2:3 | 136-5441 | 2 | Bearing-Ball |
| 3 | 32144-70 | 4 | Screw-HWHTF |
| 4 | 137-7009 | 1 | Shaft-Spindle |
| 5 | 133-4492 | 1 | Pulley-Blower |
| 6 | 133-4336 | 1 | Fan-Blower |
| 7 | 3290-465 | 1 | Washer-Belleville |
| 8 | 108-8823 | 1 | Screw-HH |
| 9 | 3219-16 | 1 | Nut-Hex |
| 10 | 140-5015 | 1 | Spacer-Idler Arm |
| 11 | 140-5019 | 1 | Idler Arm, Blower |
| 12 | 138-7597 | 1 | Pulley-Idler, Flat |
| 13 | 5-4460 | 1 | Washer-Pivot |
| 14 | 119-4041 | 3 | Nut-HF |
| 15 | 139-1723 | 1 | Washer-Flat |
| 16 | 120-2779 | 1 | Screw-HH |
| 17 | 140-5020 | 1 | Bolt Shoulder |
| 18 | 137-7040 | 1 | Spring-Return, Pedal |
| 19 | 139-1719 | 1 | Screw-HH |
| 20 | 137-5004 | 1 | Blower Chute ASM |
| 21 | 120-7950 | 10 | Screw-Torx |
| 22 | 136-9187 | 5 | Insert-T-Nut |
| 23 | 137-5003 | 1 | Blower Cover ASM |
| 23:2 | 136-4164 | 1 | Decal-Danger |
| 24 | 3258-166 | 5 | Screw-PRH |
| 25 | 139-2560 | 1 | Bolt-Shoulder |
| 26 | 133-7058 | 1 | Latch-Blower |
| 27 | 119-4042 | 1 | Nut-HF, NI |
| 28 | 133-7048 | 1 | Spring-Torsion |
| 30 | 98-8332 | 1 | Knob |
| 31 | 103-4080 | 2 | Latch-Rubber |
| 32 | 137-3073 | 4 | Washer-Plain |
| 33 | 3274-39 | 4 | Screw-HSBH |
| 34 | 136-9213-03 | 1 | Guard-Blower |




**Count on it.**