Form Number 3350-545

Mid-Size Mower, ProLine Pistol Grip Gear
13 HP with 36in Side Discharge Mower

Model No. 30519 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head
WH. . . . . wing head

Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Obtain parts from your local Kawasaki dealer.
❹ Obtain parts from Peerless Transmissions, model 700-070A
❺ Obtain parts from your local Kawasaki dealer

Contents


Description	Page
Engine and Fuel Tank Assembly	3
Transmission and Drive Pully Assembly	4
Wheel Drive Assembly	6
Upper Handle Assembly	8
Handle Assembly No. 106-2742	10
Deck Assembly	11
Front Caster and Blade Brake Assembly	12
Spindle Assembly	14
Cylinder and Crankcase Assembly Kawasaki Model FH381V-AS25	15
Piston and Crankshaft Assembly Kawasaki Model FH381V-AS25	16
Valve and Camshaft Assembly Kawasaki Model FH381V-AS25	17
Lubrication-Equipment Assembly Kawasaki Model FH381V-AS25	18
Cooling Equipment Assembly Kawasaki Model FH381V-AS25	19
Electric-Equipment Assembly Kawasaki Model FH381V-AS25	20
Control-Equipment Assembly Kawasaki Model FH381V-AS25	21
Carburetor Assembly Kawasaki Model FH381V-AS25	22
Air-Filter and Muffler Assembly Kawasaki Model FH381V-AS25	23
Fuel Tank/Fuel Valve Assembly Kawasaki Model FH381V-AS25	24
Starter Assembly Kawasaki Model FH381V-AS25	25
Decal Assembly Kawasaki Model FH381V-AS25	26

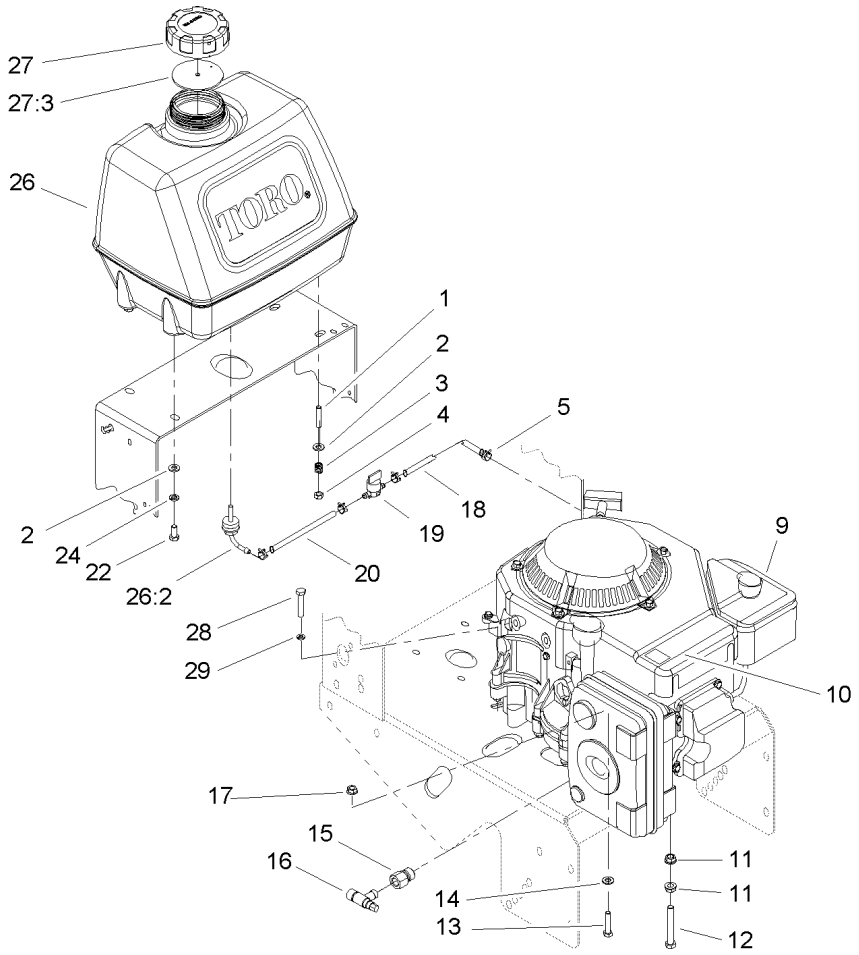

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
9		1	Engine-Kawasaki, Fh381v-As25
10	63-8440	1	Decal-Surface, Hot
11	3290-357	2	Nut-HHF
12	323-13	1	Screw-HH
13	322-7	4	Screw-HH
14	1-303334	4	Washer-Spring
15	103-1966	1	Adapter
16	103-1965	1	Valve-Drain, Oil
17	32128-20	4	Nut-HF
18	1-303022	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	1-603955	1	Hose-Fuel
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas
28	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
29	1-805004	1	Washer-Lock
❶99	1-303335	1	Tie-Plastic

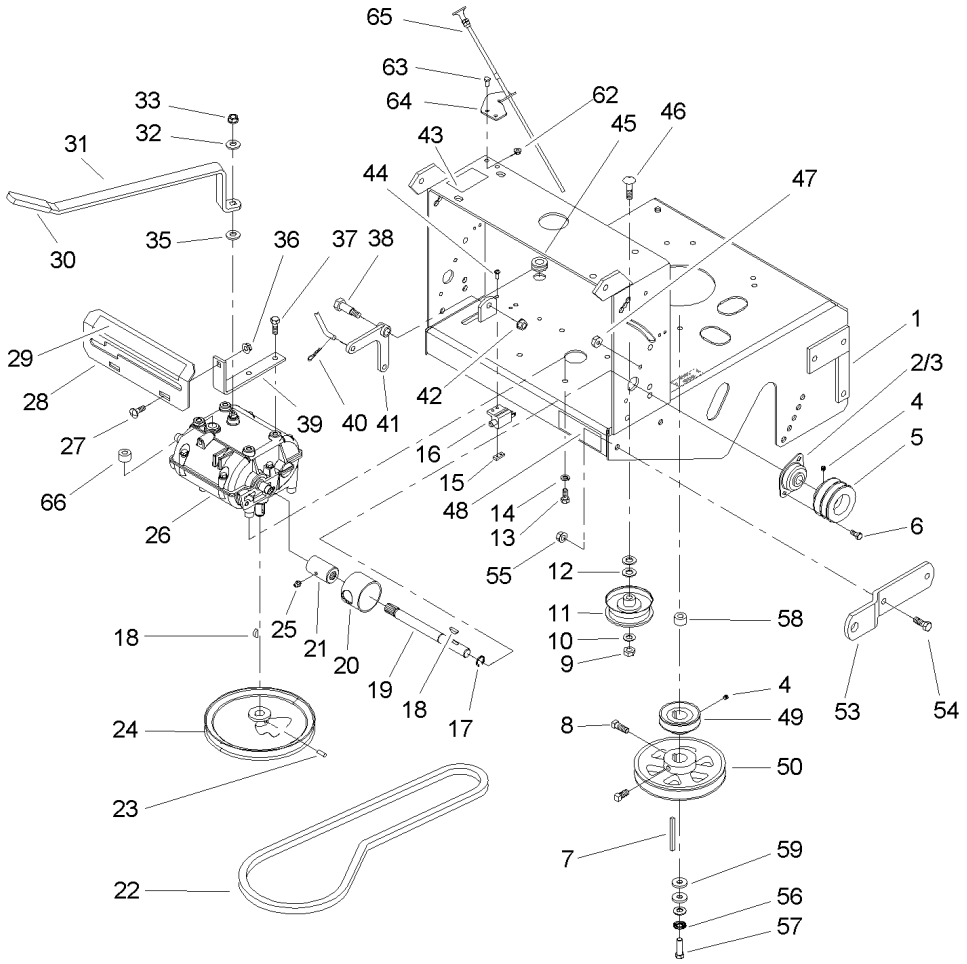

Transmission and Drive Pully Assembly


Ref	Part No.	Qty.	Description
1	103-2923-01	1	Deck-Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	103-6511	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	103-4177	1	Key-Machine
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
❹26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock, NI
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-Hwh, Thd Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission

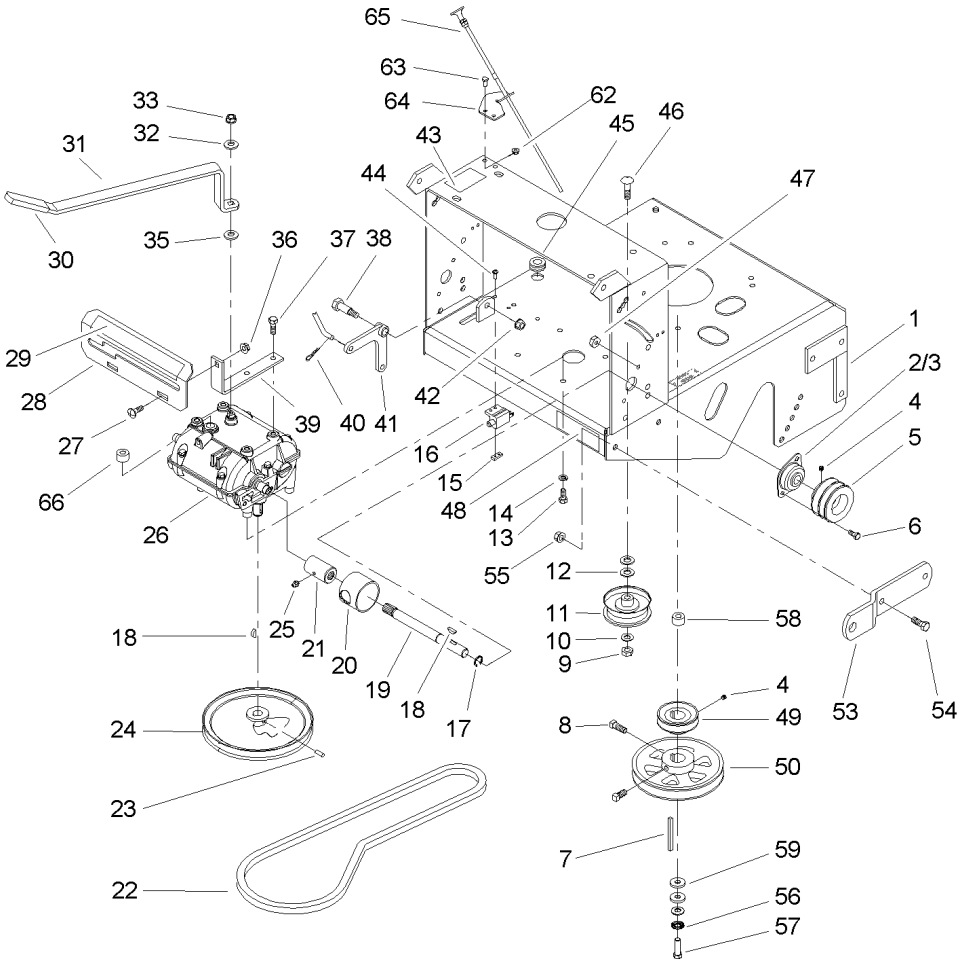

Transmission and Drive Pully Assembly (continued)


Ref	Part No.	Qty.	Description
50	103-1668	1	Sheave
53	1-323318-01	2	Hitch-Sulky
54	323-6	4	Screw-HH
55	3290-357	4	Nut-HHF
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
63	321-3	2	Screw-HH
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
66	1-303282	1	Switch-Start, Neutral

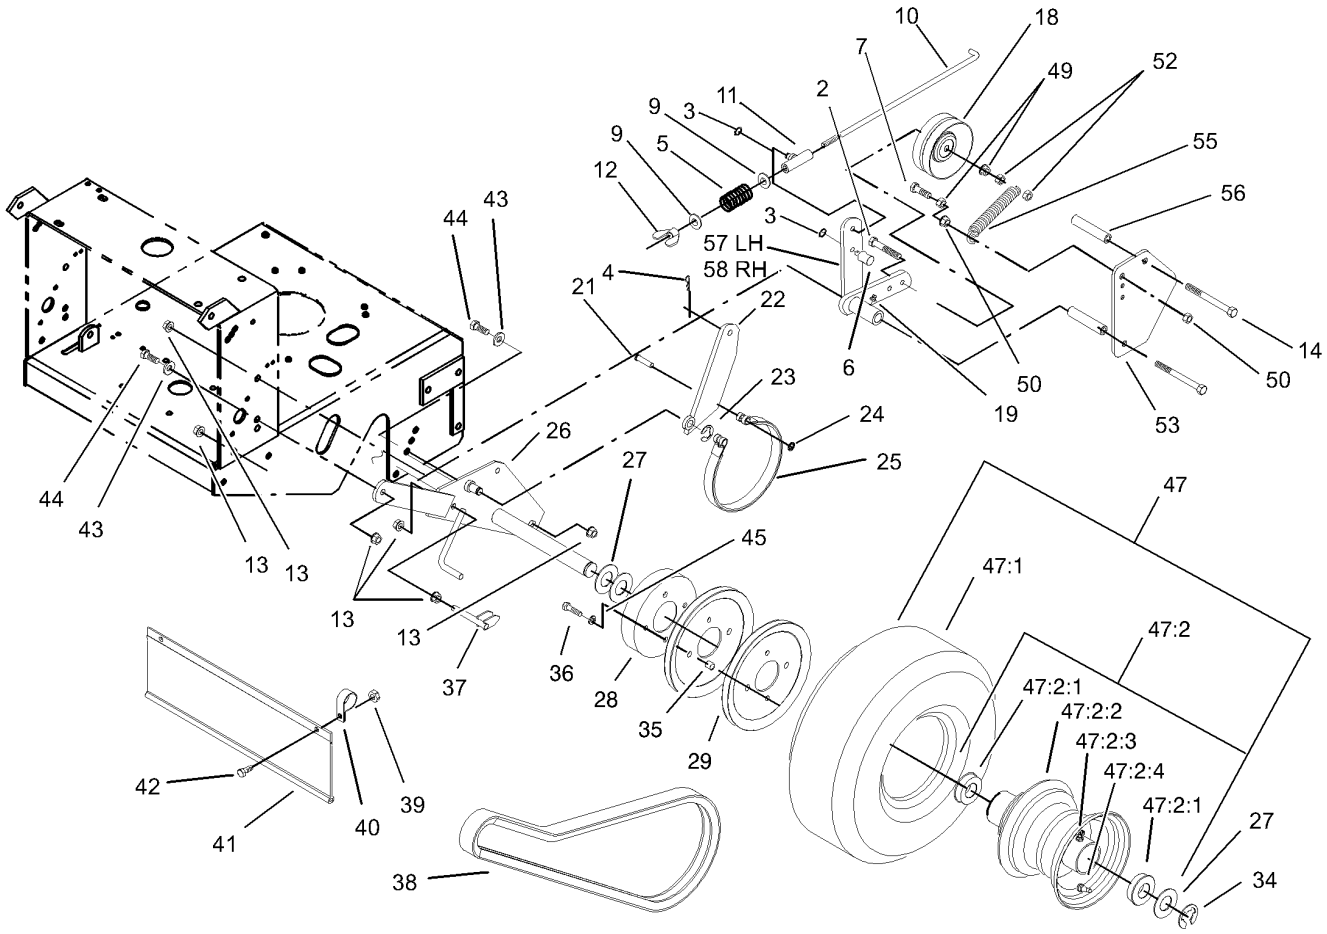

Wheel Drive Assembly


Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	4	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-39	4	Screw-HH
18	1-323277	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322117-03	1	Axle
27	1-543436	8	Washer-Spacer
27	1-523157	6	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323253	4	Sheave-Wheel, Drive

Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
35	1-323260	8	Spacer-Sheave, Wheel
36	322-6	8	Screw-HH
37	1-412358	2	Scraper
38	1-323631	2	V-Belt
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
❷47		2	Wheel And Tire ASM
47:1	1-323720	1	Tire-Turfmaster
47:2	1-323328	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
❷47:2:2		1	Rim ASM
❷47:2:3		1	Fitting-Grease
❷47:2:4		1	Stem-Valve
49	3290-357	2	Nut-HHF
50	32128-20	2	Nut-HF
52	3296-39	8	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension

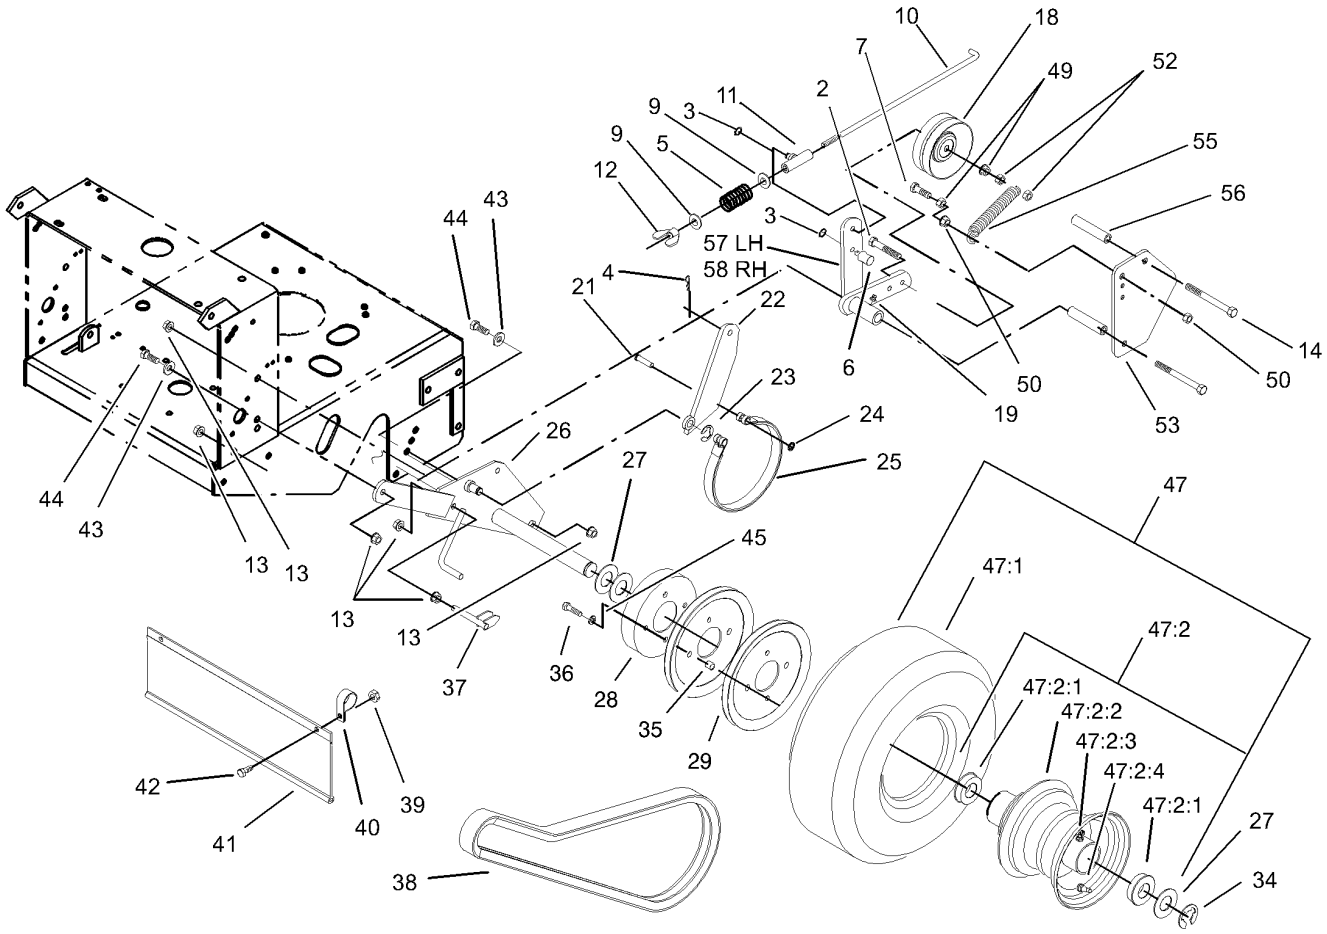

Wheel Drive Assembly (continued)


Ref	Part No.	Qty.	Description
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH
58	103-1616-03	1	Arm-Idler, RH

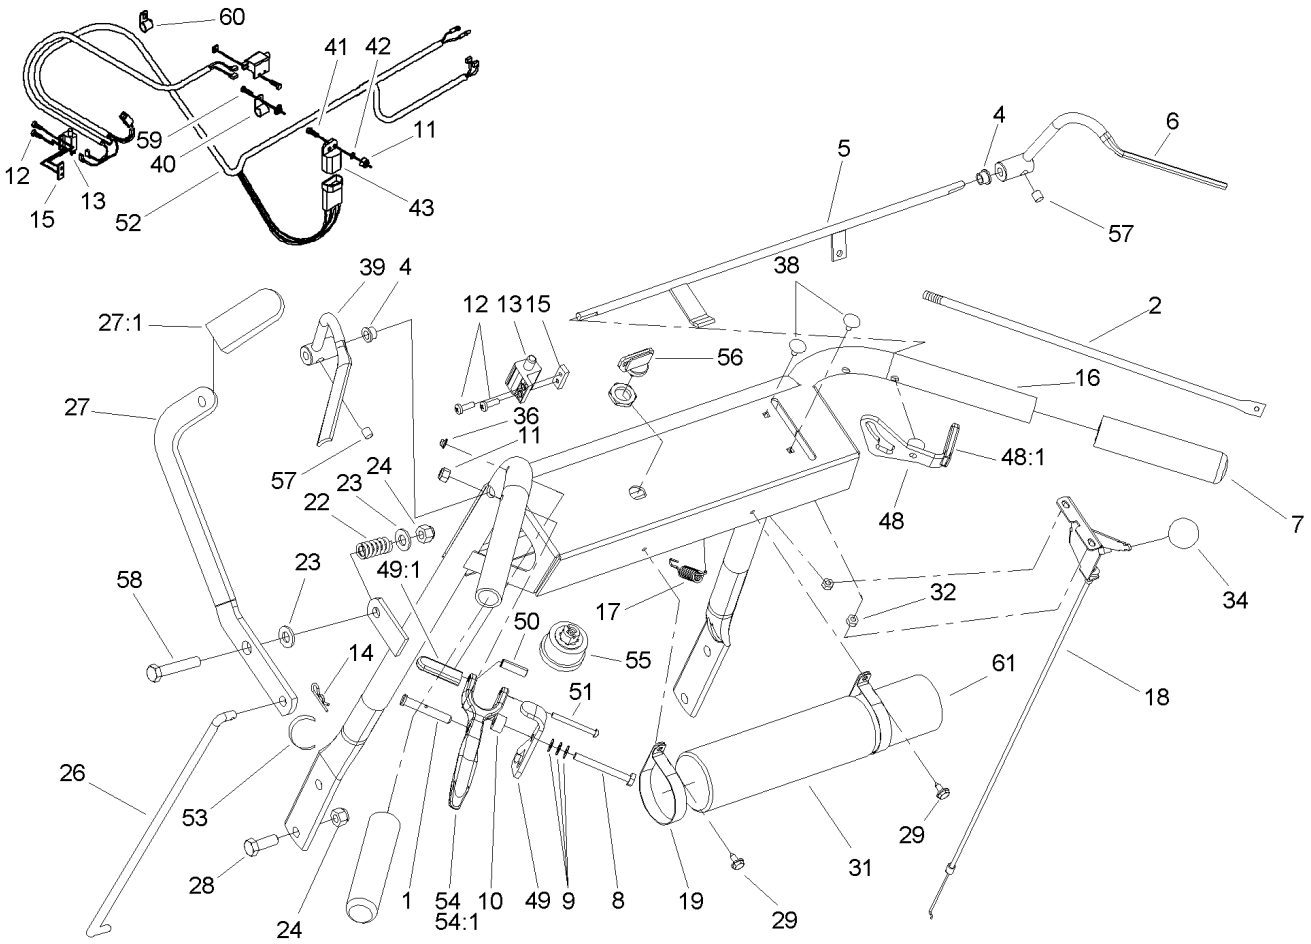

Upper Handle Assembly


Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Operator Presence Control Rod ASM
6	1-412185-03	1	Lever-RH
7	1-303097	2	Grip-Handle
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	3	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	2	Pin-Hair
15	1-633181	1	Plate-Tapped
16	106-2742	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Cable-Throttle
19	2412-120	2	R-Clamp
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	5	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper
27	1-322157	1	Lever ASM

Ref	Part No.	Qty.	Description
27:1	1-303020	1	Grip-Lever
28	323-6	4	Screw-HH
29	32104-76	2	Screw
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	1-412183-03	1	Lever-LH
40	1-323229	1	Clip-Loom
41	321-4	1	Screw-HH
42	3256-22	1	Washer-Flat
43	1-323430	1	Module-Interlock
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Drive Lever
52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	1-403121	1	Switch-Key

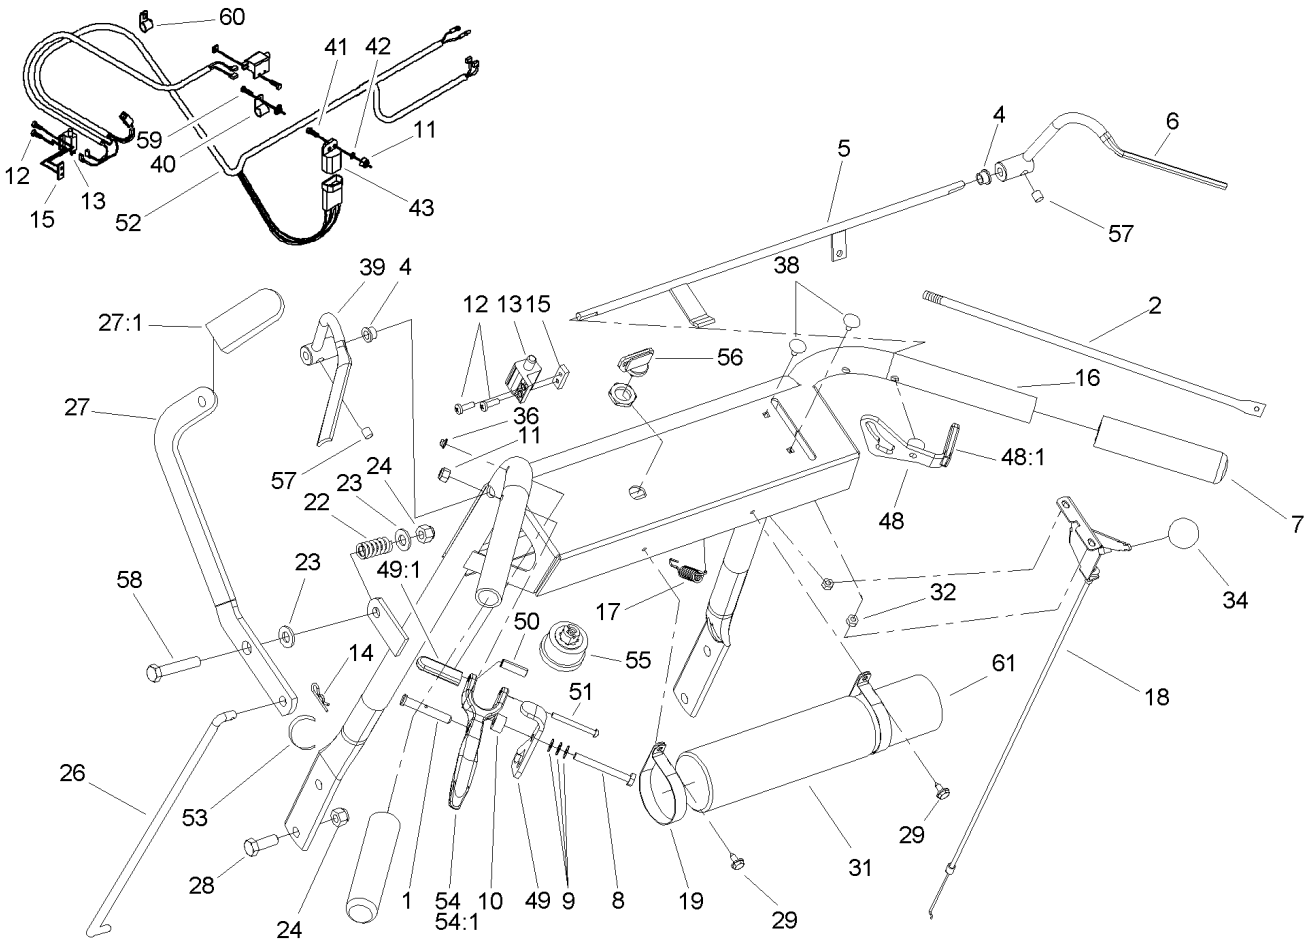


Upper Handle Assembly (continued)

Ref	Part No.	Qty.	Description
56	63-8360	1	Key-Ignition
57	1-803322	2	Screw-Set
58	323-10	1	Screw-HH
59	33114-016	1	Screw-HH
60	1-413510	1	Clip-Loom
61	104-7048	1	Cap-Housing

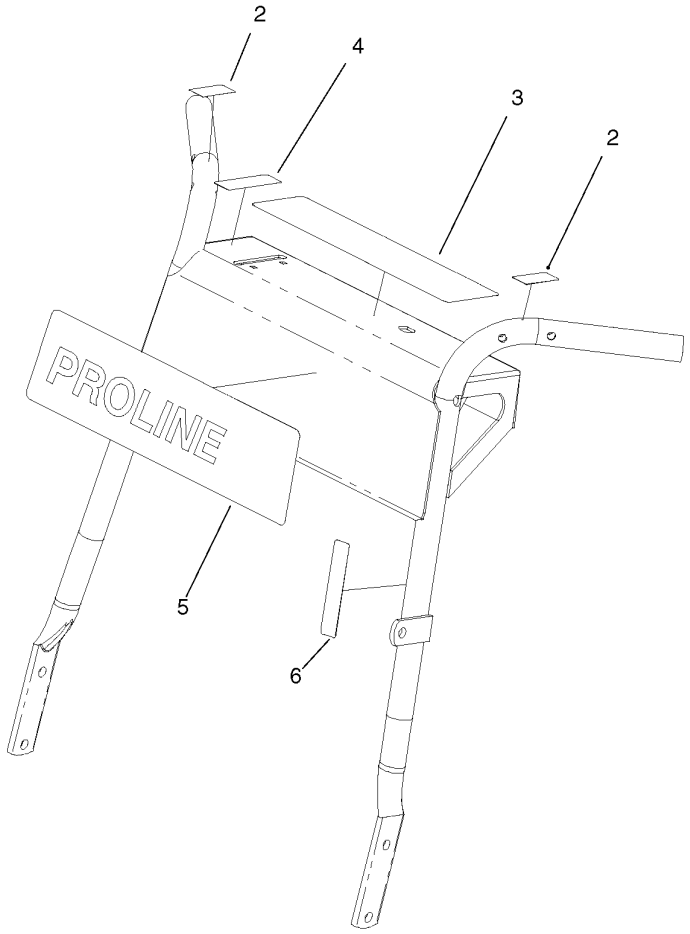

Handle Assembly No. 106-2742


Ref	Part No.	Qty.	Description
2	105-4111	2	Decal-Lock, Neutral
3	106-2737	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	106-2735	1	Decal-Proline
6	95-5537	1	Decal-Engage, Deck

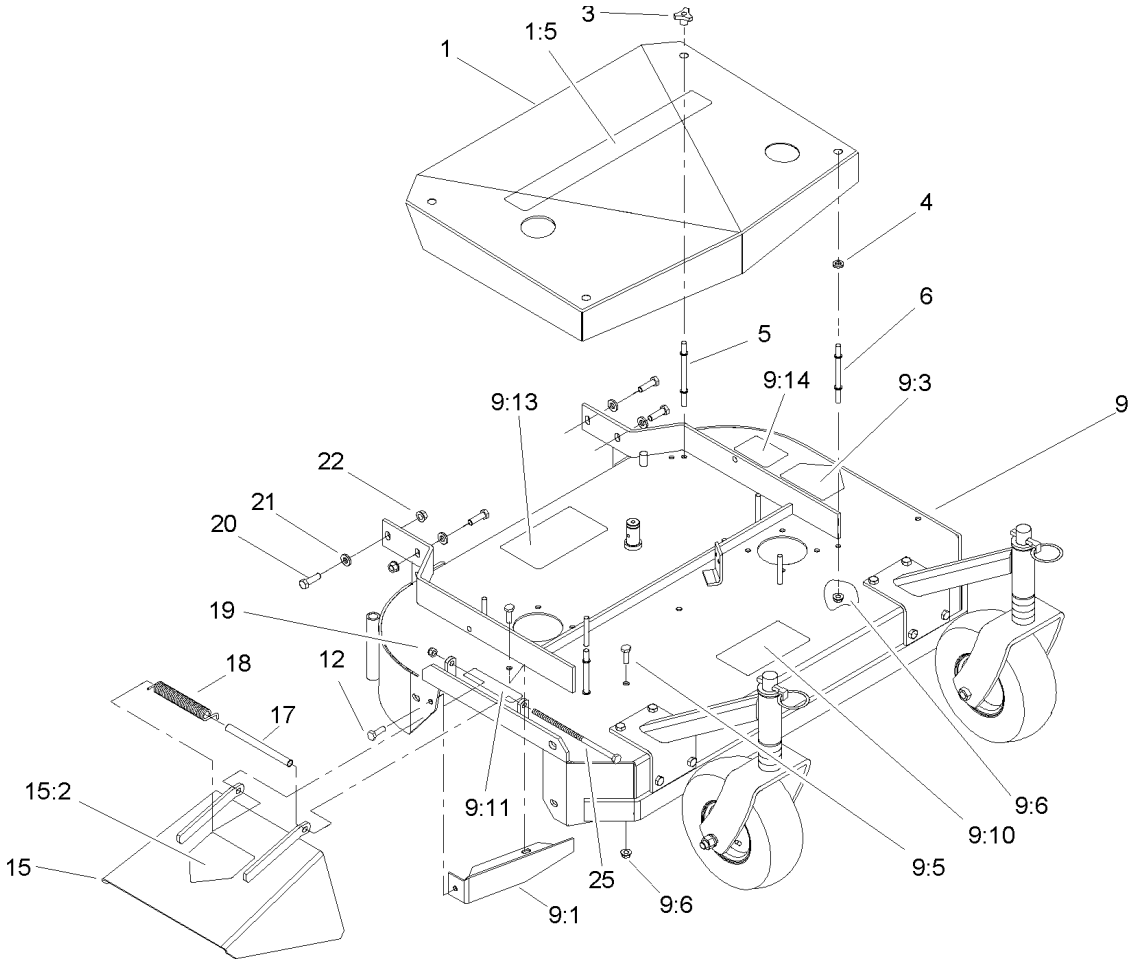

Deck Assembly

Ref	Part No.	Qty.	Description
1	1-304258	1	Belt Shield ASM
1:5	106-0711	1	Decal
3	106-4161	4	Knob-Handle
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	105-4680	1	Deck ASM
9:1	1-302189-01	1	Baffle
9:3	1-403005	1	Decal-Danger
9:5	322-2	8	Screw-HH
9:6	32128-20	8	Nut-HF
9:10	66-1340	1	Decal-Danger
9:11	98-5954	1	Decal-Missing, Cover
9:13	98-3296	1	Decal-Routing, Belt
9:14	98-5130	1	Decal-Torque, Bolt
12	322-2	8	Screw-HH
15	1-304256	1	Chute-Discharge
15:2	54-9220	1	Decal-Danger
17	98-3281	1	Spacer-Spring
18	98-3280	1	Spring-Deflector
19	3296-29	1	Nut-Lock, NI
20	323-8	6	Screw-HH
21	98-5975	6	Washer-Belleville
22	3290-357	6	Nut-HHF


Ref	Part No.	Qty.	Description
25	322-50	1	Screw-HH

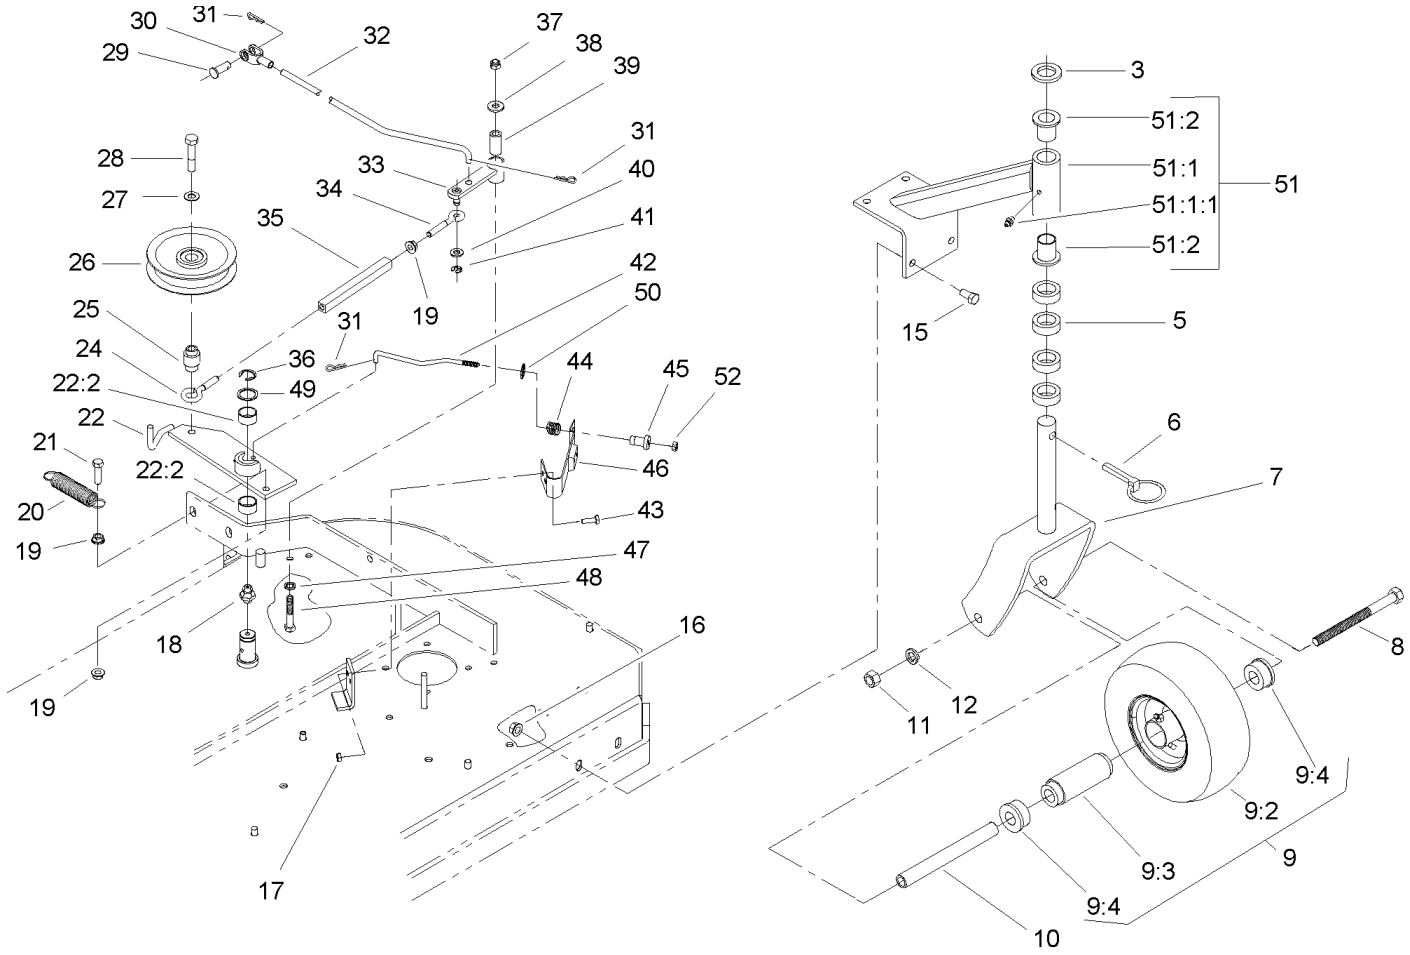

Front Caster and Blade Brake Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	2	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler

Ref	Part No.	Qty.	Description
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
29	1-808280	1	Pin-Clevis
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323715	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad/spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On

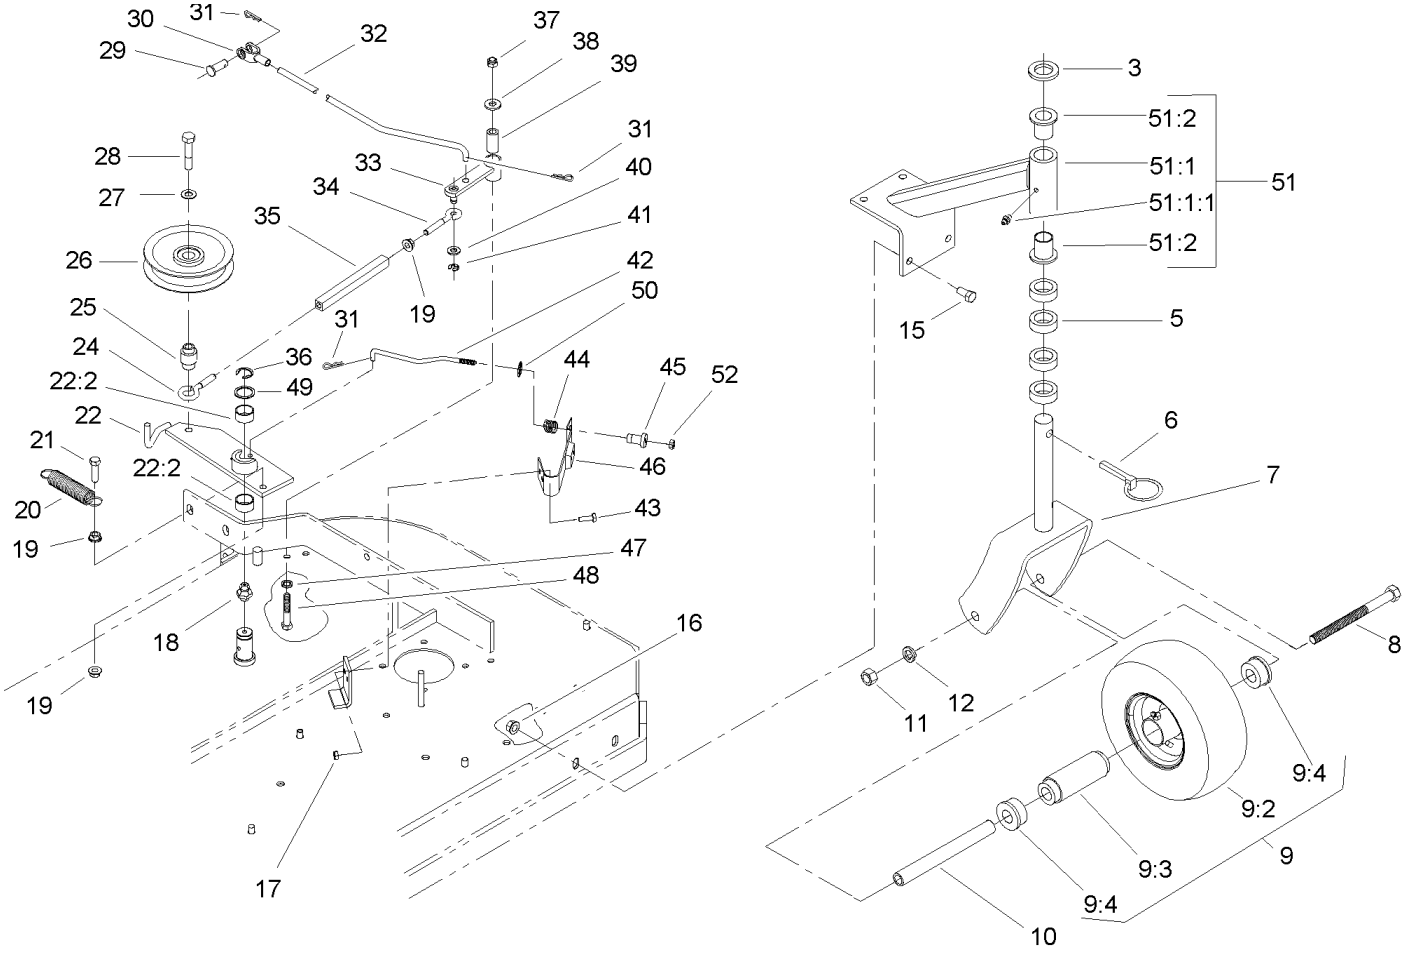


Front Caster and Blade Brake Assembly (continued)

Ref	Part No.	Qty.	Description
51	1-302203	2	Support ASM
❷51:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI

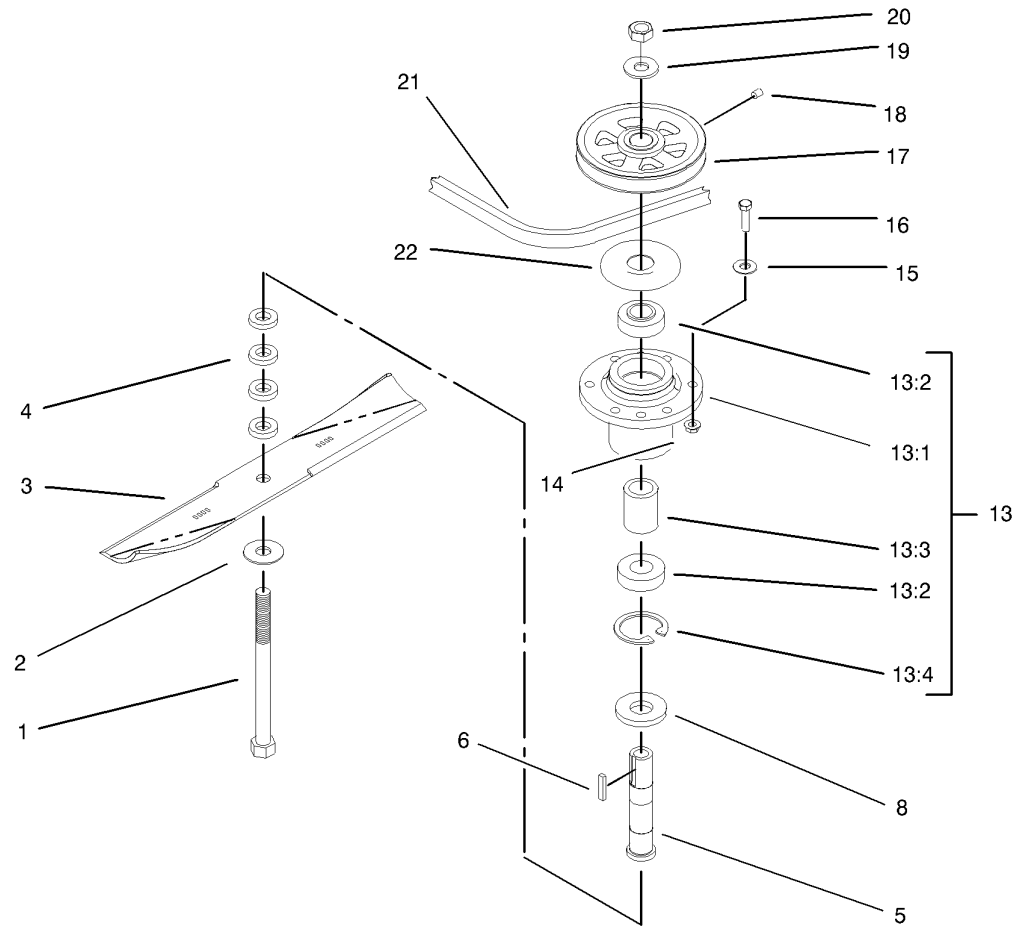

Spindle Assembly


Ref	Part No.	Qty.	Description
1	1-800861	2	Screw-Cap, HH
2	1-513208	2	Washer-Spring
3	103-2508	2	Blade-Lift, Low
❶3	103-2528	2	Blade-Notched
4	1-323539	8	Spacer-Drive, Blade
5	1-323529	2	Tube-Spindle, Short
6	1-807267	2	Key
8	103-2535	2	Spacer-Guard, Bottom
❷13		2	Cutter Housing ASM
13:1	1-323532	1	Housing-Spindle
13:2	103-2477	2	Bearing-Ball
13:3	103-2534	1	Spacer-Bearing
13:4	32120-8	1	Ring-Snap
14	32128-20	8	Nut-HF
15	1-303334	8	Washer-Spring
16	322-6	8	Screw-HH
17	1-403183	2	Sheave
18	1-803310	2	Screw-Set
19	1-323339	2	Washer-Retainer, Sheave
20	3219-6	2	Nut-Hex
21	1-323737	1	Belt-Blade, Drive
22	103-1330	2	Guard-Bearing, Top

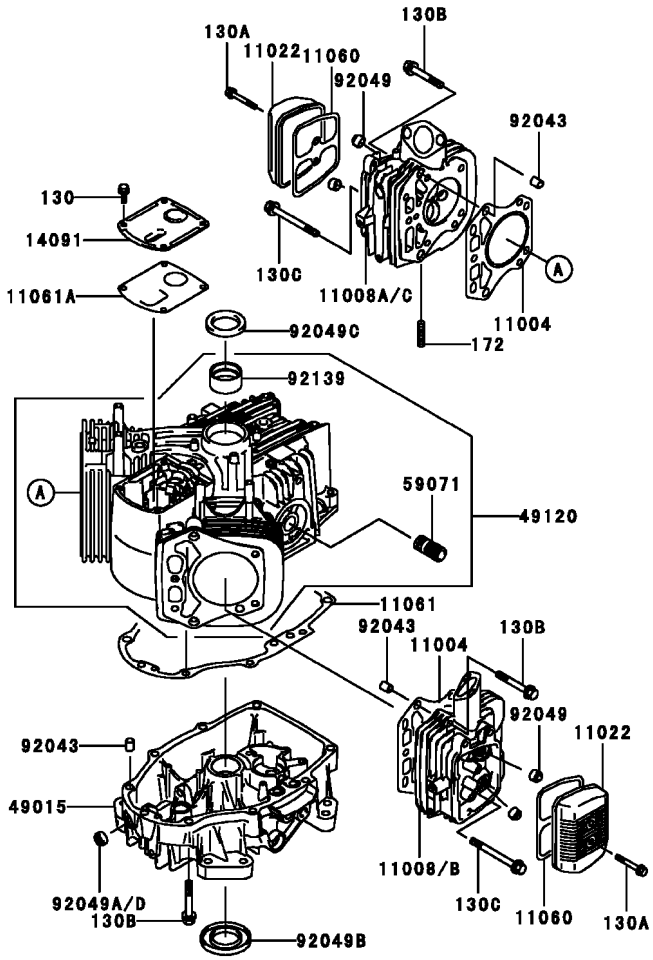

Cylinder and Crankcase Assembly
Kawasaki Model FH381V-AS25


Ref	Part No.	Qty.	Description
❺11004	11004-7008	2	Gasket-Head
❺11008	11008-7011	1	Head-Comp-Cylinder, No.2
❺11008A	11008-7017	1	Head-Comp-Cylinder, No.1
❺11008B	11008-7021	1	Head-Comp-Cylinder, No.2
❺11008C	11008-7022	1	Head-Comp-Cylinder, No.1
❺11022	11022-7003	2	Case-Rocker
❺11060	11060-7001	2	Gasket, Rocker Case
❺11061	11061-7007	1	Gasket, Cover-Crankcase
❺11061A	11061-7008	1	Gasket, Breather
❺14091	14091-7007	1	Cover
❺49015	49015-7032	1	Cover-Crankcase
❺49120	49120-7015	1	Crankcase-Comp
❺59071	59071-2079	1	Joint
❺92043	92043-7001	6	Pin
❺92049	92049-7001	4	Seal-Oil
❺92049A	92049-7005	1	Seal-Oil
❺92049B	92049-7015	1	Seal-Oil
❺92049C	92049-7016	1	Seal-Oil
❺92049D	92049-7019	1	Seal-Oil
❺92139	92139-7002	1	Bushing
❺130	130B0612	4	Bolt-Flanged
❺130A	130B0640	4	Bolt-Flanged
❺130B	130T0850	17	Bolt-Flanged
❺130C	130T0875	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
❺172	172G0818	4	Bolt-Stud

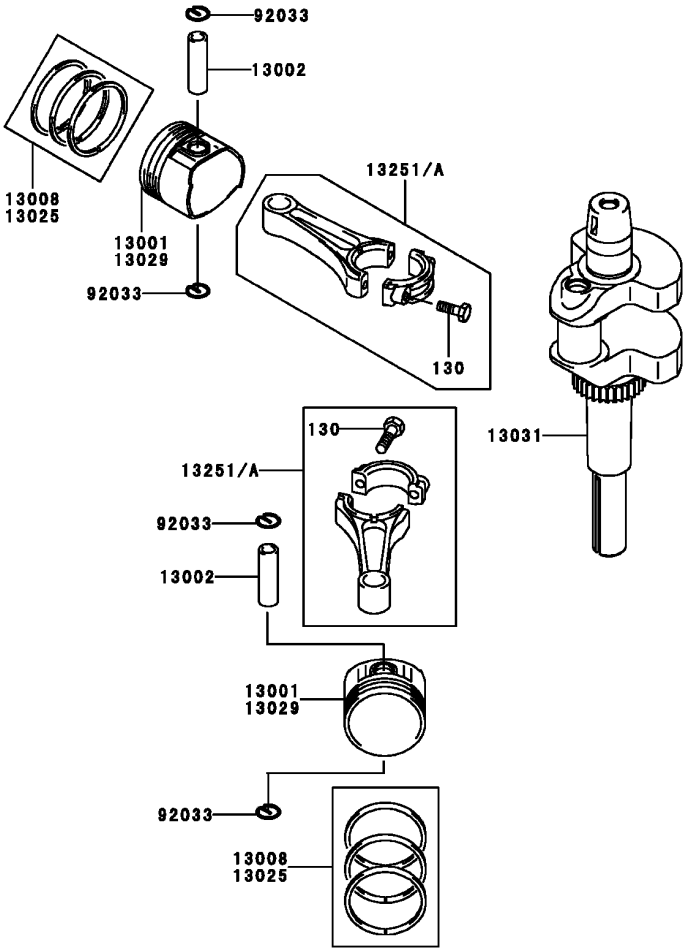


Piston and Crankshaft Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❺13001	13001-7009	2	Piston-Engine
❺13002	13002-7001	2	Pin-Piston
❺13008	13008-7001	2	Ring-Set-Piston
❺13025	13025-7003	1	Ring-Set-Piston L, 0.50
❺13029	13029-7005	1	Piston-Engine L, 0.50
❺13031	13031-7033	1	Crankshaft-Comp
❺13251	13251-7007	2	Rod-ASM-Connecting
❺13251A	13251-7008	2	Rod-ASM-Connecting
❺92033	92033-7005	4	Ring-Snap
❺130	130G0630	4	Bolt-Flanged

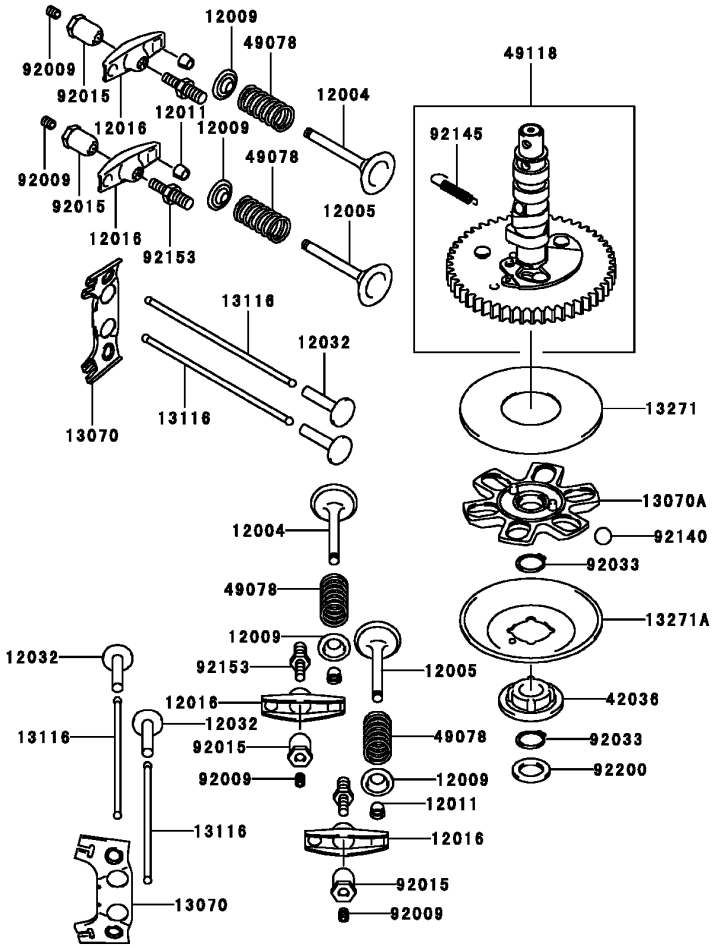


Valve and Camshaft Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❺12004	12004-7003	2	Valve-Intake
❺12005	12005-7003	2	Valve-Exhaust
❺12009	12009-7001	4	Retainer-Valve Spring
❺12011	12011-2056	8	Collet
❺12016	12016-7001	4	Arm-Rocker
❺12032	12032-7001	4	Tappet
❺13070	13070-7001	2	Guide
❺13070A	13070-7004	1	Guide
❺13116	13116-2057	4	Rod-Push
❺13271	13271-7007	1	Plate
❺13271A	13271-7021	1	Plate, Governor
❺42036	42036-7009	1	Sleeve
❺49078	49078-7001	4	Spring-Engine Valve
❺49118	49118-7009	1	Camshaft-Comp
❺92009	92009-2341	4	Screw
❺92015	92015-2253	4	Nut
❺92033	92033-7001	2	Ring-Snap
❺92140	92140-7002	6	Ball
❺92145	92145-7001	1	Spring
❺92153	92153-7019	4	Bolt
❺92200	92200-7001	1	Washer

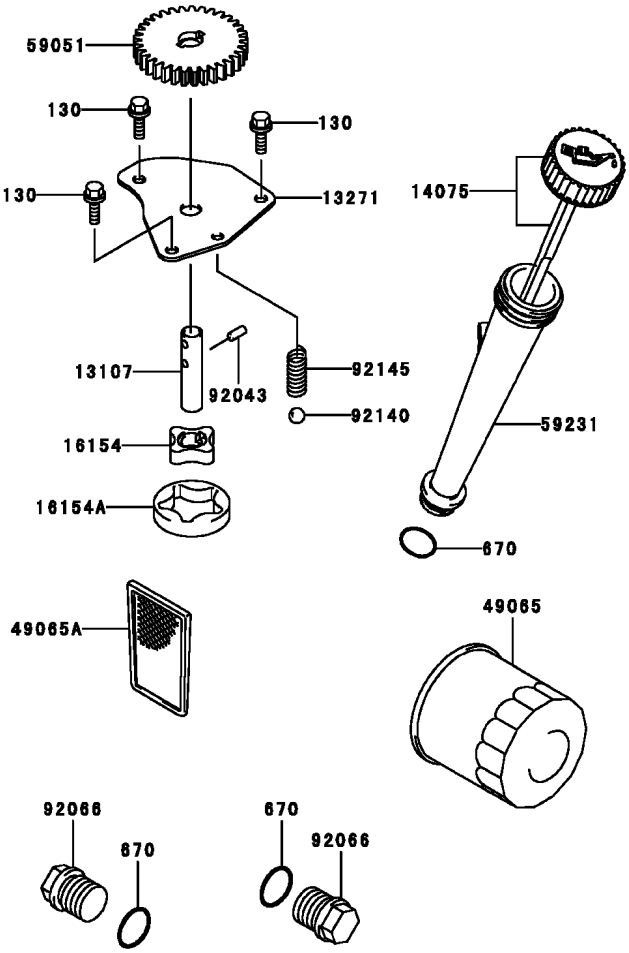


Lubrication-Equipment Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❺13107	13107-7009	1	Shaft
❺13271	13271-7017	1	Plate
❺14075	14075-7009	1	Cap-ASM
❺16154	16154-2053	1	Rotor-Pump, In
❺16154A	16154-2054	1	Rotor-Pump, Out
❺49065	49065-2078	1	Filter-Oil
❺49065A	49065-7004	1	Filter-Oil
❺59051	59051-7011	1	Gear-Spur
❺59231	59231-7003	1	Filler
❺92043	92043-7003	2	Pin
❺92066	92066-7003	2	Plug
❺92140	92140-7003	1	Ball
❺92145	92145-7002	1	Spring
❺130	130B0612	3	Bolt-Flanged
❺670	670D2016	3	O Ring, 16mm

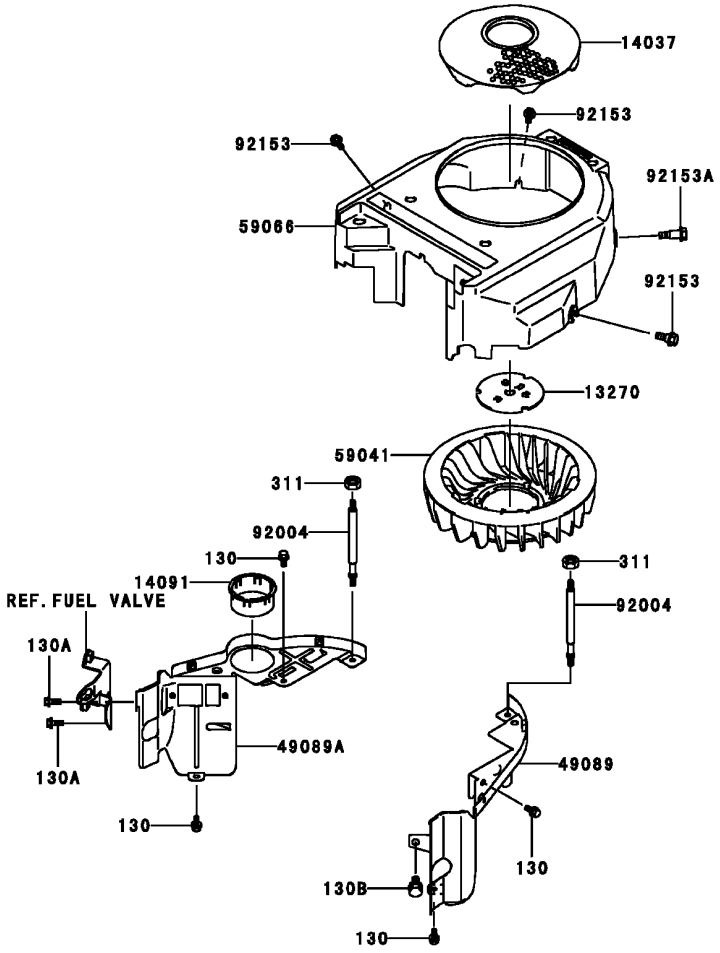


Cooling Equipment Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❺13270	13270-7007	1	Plate
❺14037	14037-7021-9H	1	Screen
❺14091	14091-7009	1	Cover
❺49089	49089-7044	1	Shroud-Engine
❺49089A	49089-7045	1	Shroud-Engine
❺59041	59041-7010	1	Fan
❺59066	59066-7023	1	Housing-Fan
❺92004	92004-7007	2	Stud
❺92153	92153-7007	3	Bolt
❺92153A	92153-7008	1	Bolt
❺130	130B0612	4	Bolt-Flanged
❺130A	130B0616	2	Bolt-Flanged
❺130B	130B0816	1	Bolt-Flanged
❺311	311F0600	2	Nut-Hex

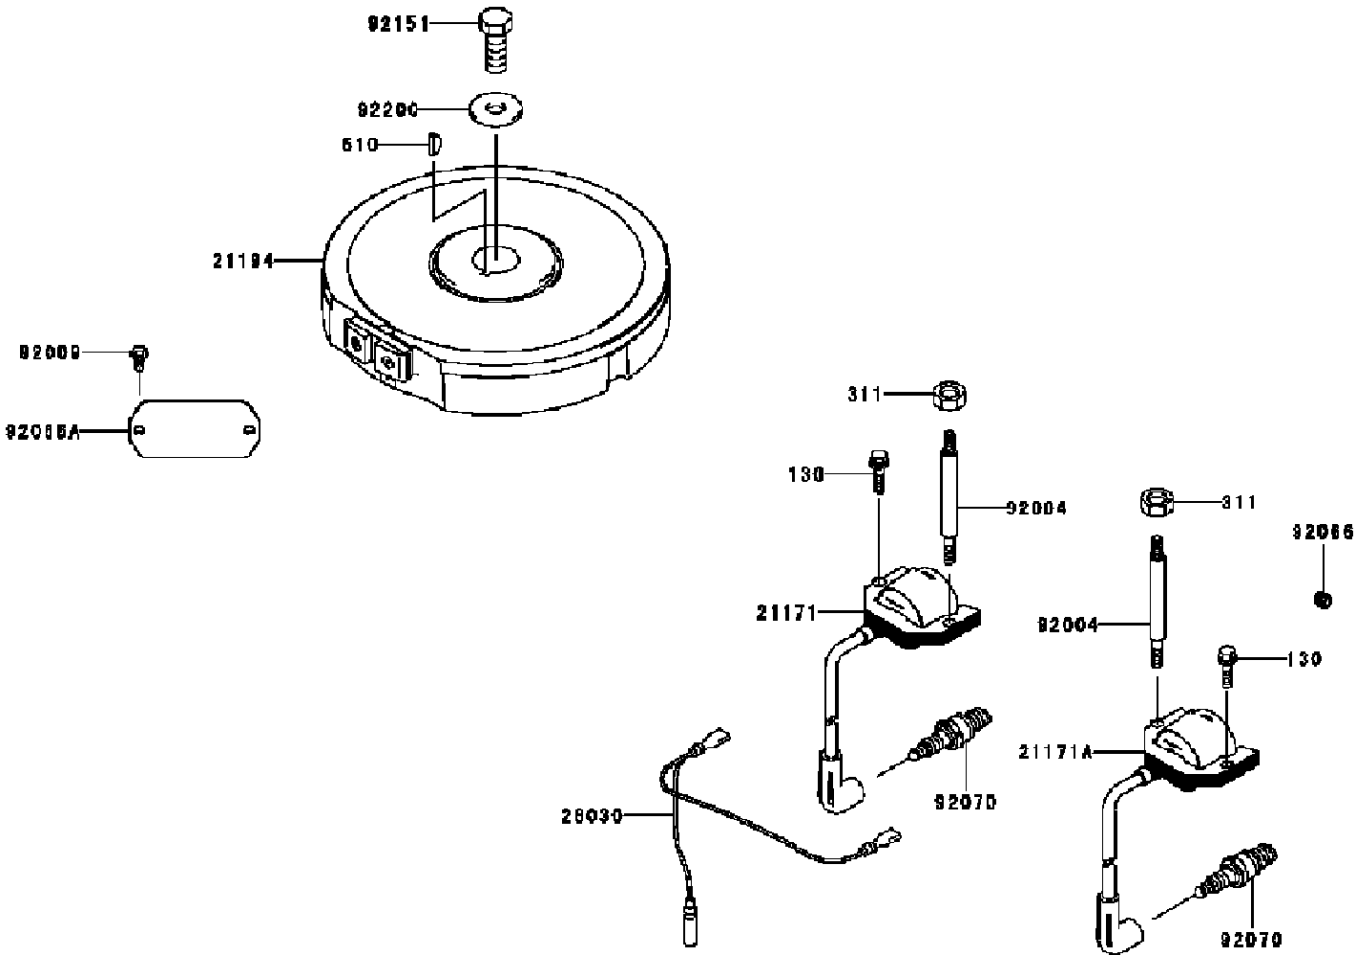


Electric-Equipment Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❺21171	21171-7013	1	Coil-ASM-Ignition
❺21171A	21171-7014	1	Coil-ASM-Ignition
❺21194	21194-7013	1	Flywheel-Comp
❺26030	26030-7001	1	Harness
❺92004	92004-7008	2	Stud
❺92009	92009-2308	2	Screw
❺92066	92066-7002	1	Plug
❺92066A	92066-7005	1	Plug
❺92070	92070-7003	2	Plug-Spark, Rcj8y, Solid
❺92151	92151-2097	1	Bolt
❺92200	92200-7002	1	Washer
❺130	130B0620	2	Bolt-Flanged
❺311	311F0600	2	Nut-Hex
❺510	510A5100	1	Key-Woodruff

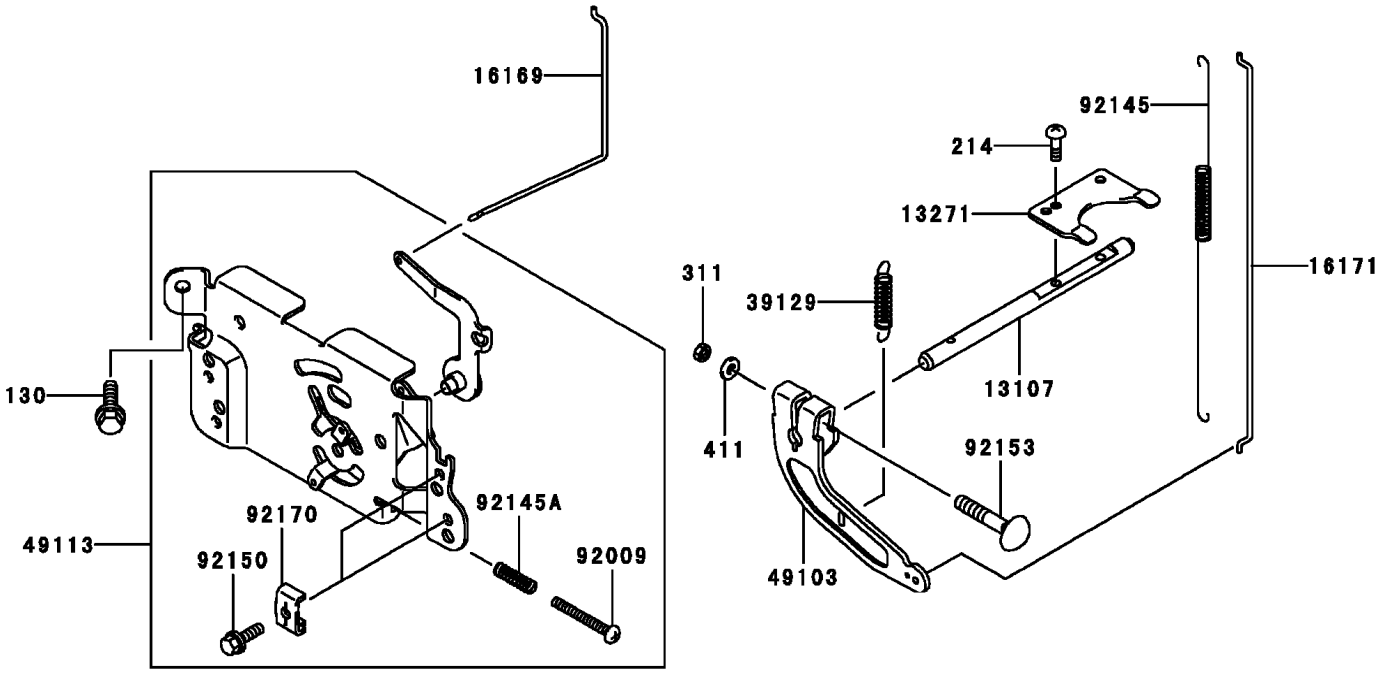

Control-Equipment Assembly
Kawasaki Model FH381V-AS25


Ref	Part No.	Qty.	Description
❺13107	13107-7010	1	Shaft
❺13271	13271-7018	1	Plate
❺16169	16169-7012	1	Link-Choke
❺16171	16171-7007	1	Link
❺39129	39129-7003	1	Spring-Governor
❺49103	49103-7004	1	Arm-Governor
❺49113	49113-7024	1	Panel-Comp-Control
❺92009	92009-7007	1	Screw
❺92145	92145-7003	1	Spring
❺92145A	92145-7005	1	Spring
❺92150	92150-2182	2	Bolt
❺92153	92153-7005	1	Bolt
❺92170	92170-7001	2	Clamp
❺130	130B0612	2	Bolt-Flanged
❺214	214B0408	2	Screw-Pan
❺311	311B0600	1	Nut-Hex
❺411	411b0600	1	Washer-Plain

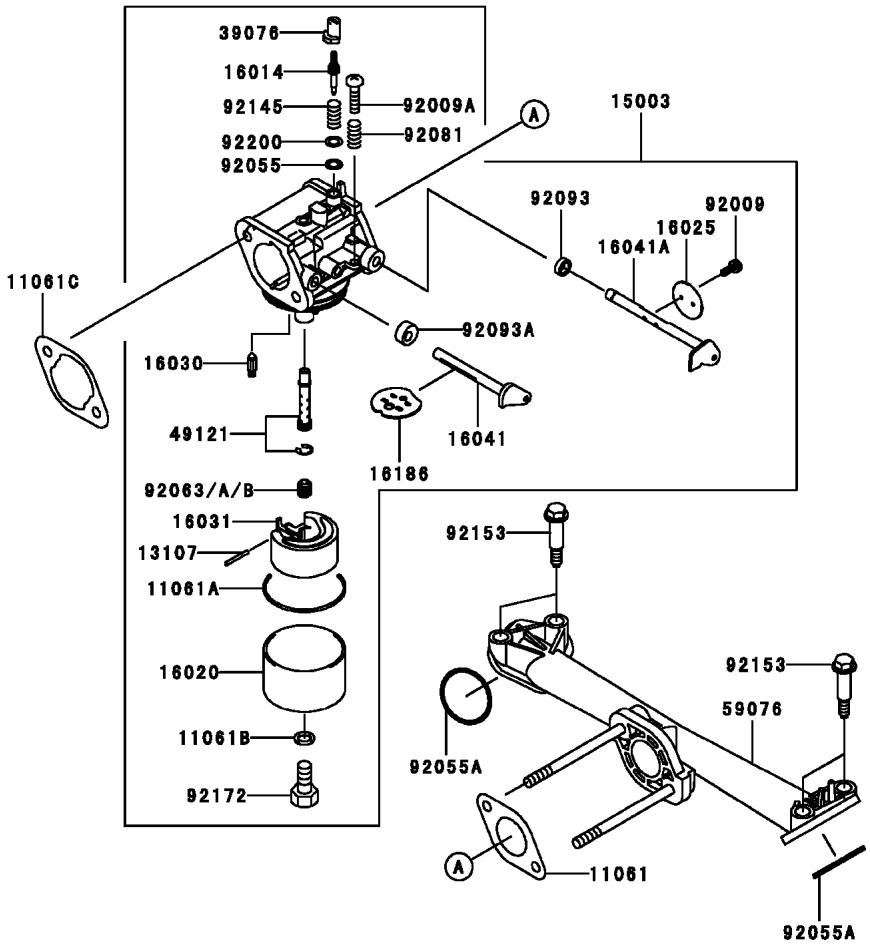

Carburetor Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❺11061	11061-7004	1	Gasket, Insulator
❺11061A	11061-7009	1	Gasket, Chamber
❺11061B	11061-7010	1	Gasket, Screw
❺11061C	11061-7018	1	Gasket, Air Cleaner
❺13107	13107-7018	1	Shaft
❺15003	15003-7054	1	Carburetor-ASM
❺16014	16014-7002	1	Screw-Pilot Air
❺16020	16020-7003	1	Chamber-Float
❺16025	16025-7006	1	Valve-Throttle
❺16030	16030-7003	1	Valve-Float
❺16031	16031-7002	1	Float
❺16041	16041-7016	1	Shaft-Carburetor, Choke
❺16041A	16041-7018	1	Shaft-Carburetor, Throttle
❺16186	16186-7002	1	Valve-ASM-Choke
❺39076	39076-7001	1	Limiter
❺49121	49121-7002	1	Nozzle-Main
❺59076	59076-7005	1	Manifold-Intake
❺92009	92009-2083	2	Screw
❺92009A	92009-2349	1	Screw
❺92055	92055-2174	1	Ring-O
❺92055A	92055-7007	2	Ring-O
❺92063	92063-7027	1	Jet-Main-#78
❺92063A	92063-7030	1	Jet-Main-#75
❺92063B	92063-7031	1	Jet-Main-#72


Ref	Part No.	Qty.	Description
❺92081	92081-2234	1	Spring
❺92093	92093-2100	1	Seal
❺92093A	92093-7003	1	Seal
❺92145	92145-7015	1	Spring
❺92153	92153-7009	4	Bolt
❺92172	92172-7002	1	Screw
❺92200	92200-7014	1	Washer

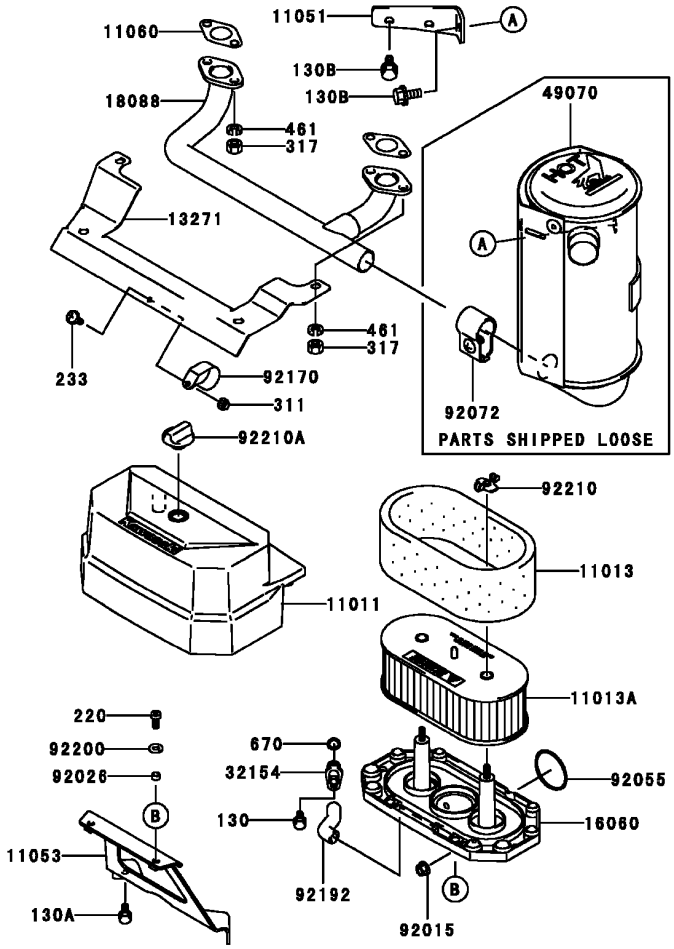

Air-Filter and Muffler Assembly
Kawasaki Model FH381V-AS25


Ref	Part No.	Qty.	Description
❺11011	11011-7035	1	Case-Air Filter
❺11013	11013-7025	1	Element-Air Filter
❺11013A	11013-7031	1	Element-Air Filter
❺11051	11051-7005-9H	1	Bracket
❺11053	11053-7022	1	Bracket
❺11060	11060-7021	2	Gasket, Muffler
❺13271	13271-7022	1	Plate
❺16060	16060-7016	1	Pipe-Intake
❺18088	18088-7001	1	Pipe-Exhaust
❺32154	32154-7006	1	Pipe
❺49070	49070-7015	1	Muffler-Comp
❺92015	92015-1193	2	Nut
❺92026	92026-7001	2	Spacer
❺92055	92055-7015	1	O-Ring
❺92072	92072-7008	1	Band
❺92170	92170-7002	1	Clamp
❺92192	92192-7010	1	Tube
❺92200	92200-2070	2	Washer
❺92210	92210-7004	2	Nut
❺92210A	92210-7019	1	Nut
❺130	130B0610	1	Bolt-Flanged
❺130A	130B0612	2	Bolt-Flanged
❺130B	130B0816	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
❺220	220B0614	2	Screw-Pan-Cross
❺233	233B0416	1	Screw-Pan, Wp
❺311	311B0400	1	Nut-Hex
❺317	317R0800	4	Nut-Hex-Small
❺461	461F0800	4	Washer-Spring
❺670	670B2010	1	O Ring, 10mm

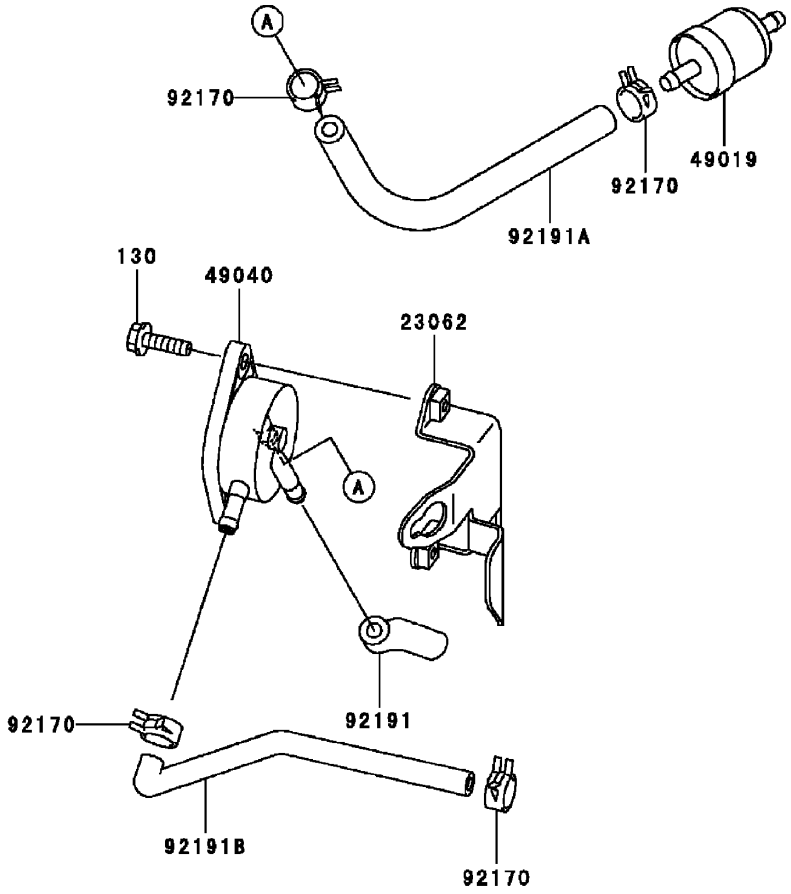


Fuel Tank/Fuel Valve Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❸23062	23062-7004-9H	1	Bracket-Comp
❸49019	49019-7001	1	Filter-Fuel
❸49040	49040-7001	1	Pump-Fuel
❸92170	92170-2088	4	Clamp
❸92191	92191-7002	1	Tube
❸92191A	92191-7003	1	Tube
❸92191B	92191-7004	1	Tube
❸130	130B0620	2	Bolt-Flanged

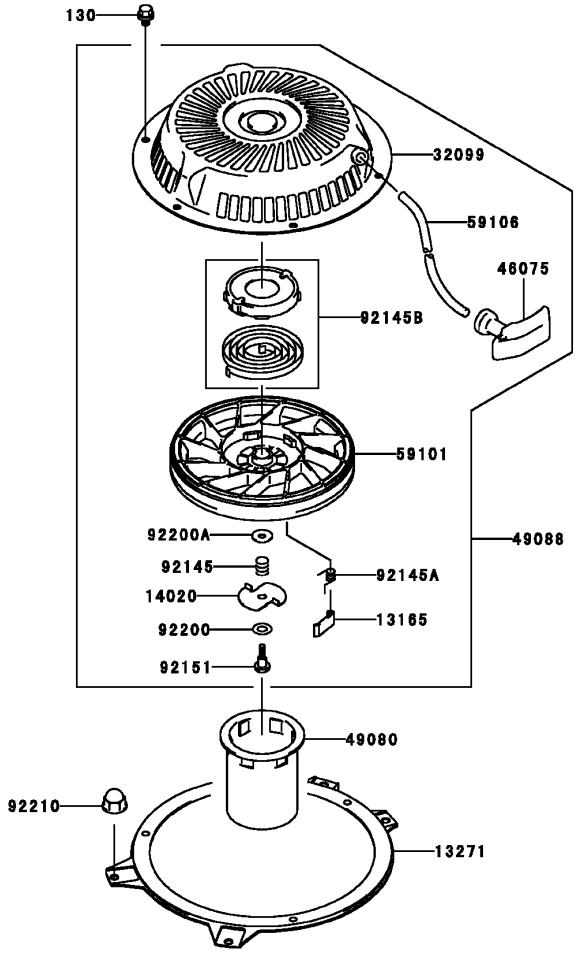

Starter Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❺13165	13165-7001	2	Pawl-Recoil, Starter
❺13271	13271-7003-9H	1	Plate
❺14020	14020-7001	1	Retainer
❺32099	32099-7002	1	Case-Recoil, Starter
❺46075	46075-7001	1	Grip-Recoil, Starter
❺49080	49080-7001	1	Pulley-Starting
❺49088	49088-7013	1	Starter-Recoil
❺59101	59101-7001	1	Reel- Recoil, Starter
❺59106	59106-7001	1	Rope
❺92145	92145-7006	1	Spring
❺92145A	92145-7007	2	Spring
❺92145B	92145-7008	1	Spring
❺92151	92151-7008	1	Bolt
❺92200	92200-7004	1	Washer
❺92200A	92200-7005	1	Washer
❺92210	92210-0003	4	Nut
❺130	130B0608	3	Bolt-Flanged

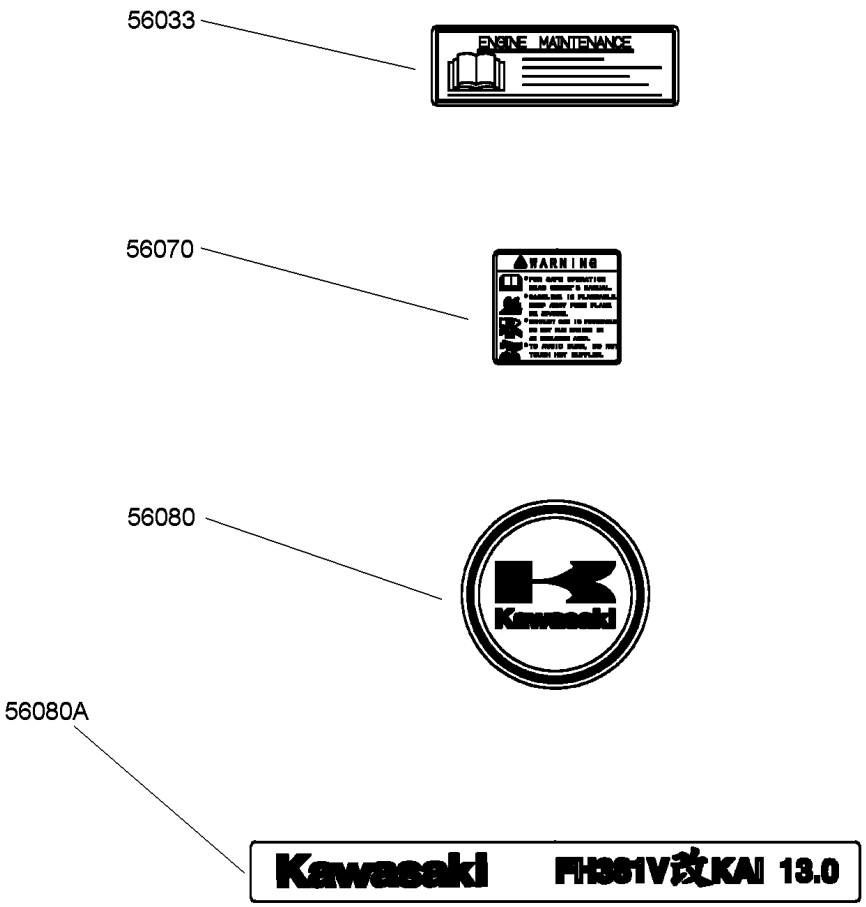

Decal Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description
❺56033	56033-7001	1	Label-Manual
❺56070	56070-7001	1	Label-Warning
❺56080	56080-2077	1	Label-Brand
❺56080A	56080-7025	1	Label-Brand

NOTES


TORO®