Form Number 3350-618

LAWN-BOY®

Silver Series® Lawnmower

Model No. 10367 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head
WH. . . . . wing head

Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Included in Repair Kit No. 632809
❹ Obtain parts from your local Tecumseh dealer

Contents


Description	Page
Housing Assembly	3
Housing Assembly 98-4477	4
Gear Case Assembly No. 106-8328	5
Gear Case and Wheel Assembly	6
Engine and Blade Assembly	7
Handle Assembly	8
Rear Grass Bag Assembly	9
Engine Assembly No. 1 Tecumseh Model No. LV195EA-362005B	10
Engine Assembly No. 2 Tecumseh Model No. LV195EA-362005B	12
Carburetor Assembly No. 640303 Tecumseh Model No. LV195EA-362005B	14
Recoil Starter Assembly No. 590739 Tecumseh Model No. LV195EA-362005B	15
Recoil Starter Assembly No. 590702 (Optional) Tecumseh Model No. LV195EA-362005B	16

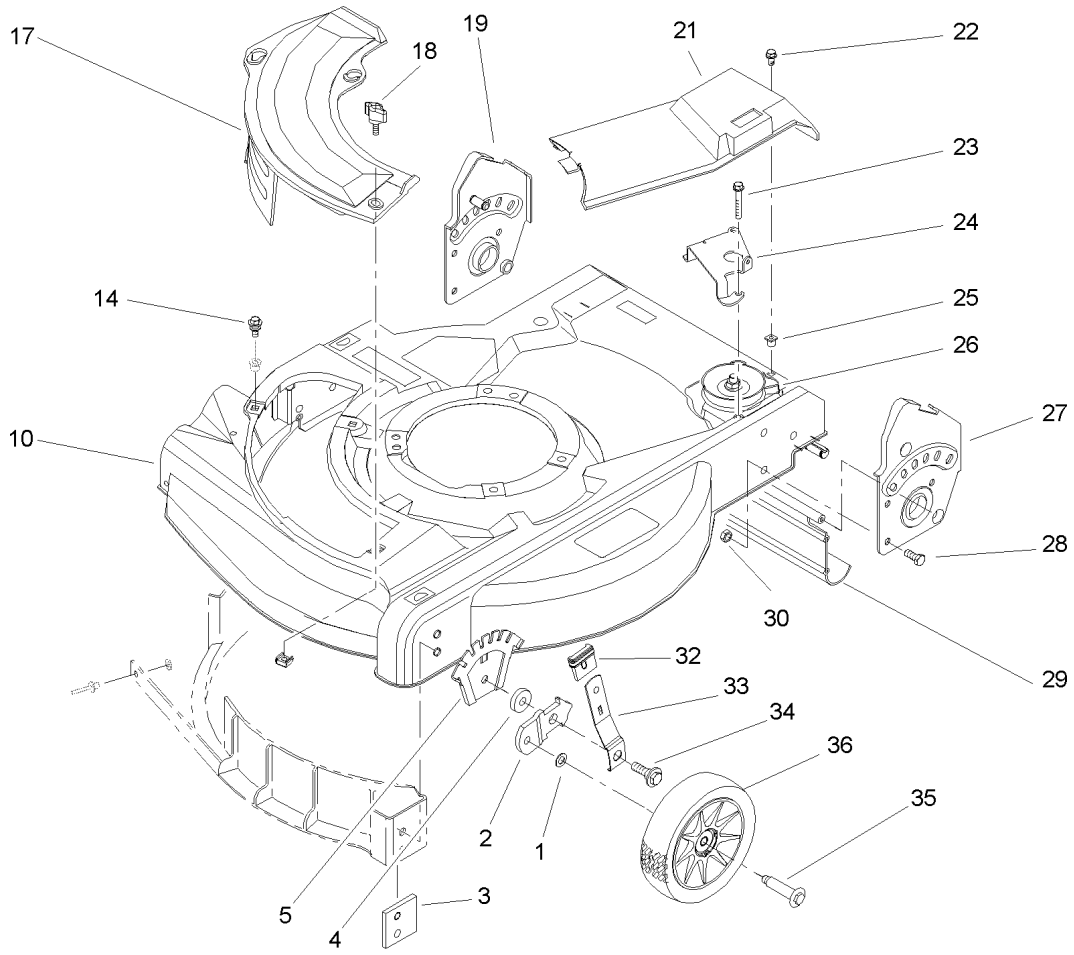

Housing Assembly


Ref	Part No.	Qty.	Description
1	40-1940	2	Washer
2	95-7403-03	2	Bracket-Height Adjustment, Wheel
3	92-7731	2	Plate-Baffle
4	92-4890	2	Washer-Wheel
5	92-4881-03	2	Plate-Height, Adjustment
10	98-4477	1	Deck ASM
14	614677	2	Screw-Sems
17	92-8630	1	Plate-Mulch
18	98-8332	1	Knob
19	105-8602	1	RH Bracket ASM
21	95-7068	1	Cover-Drive
22	92-9665	1	Screw
23	65-5221	2	Screw-HWHTF
24	92-7728-03	1	Guide-Transmission
25	605120	1	Nut-Clip
26	106-8328	1	Gear Case ASM
27	105-8604	1	LH Bracket ASM
28	322-3	6	Screw-HH
29	92-8647	1	Shield-Trailing
30	3296-29	6	Nut-Lock, NI
32	92-1008	2	Knob-Lever, Height Adjustment
33	614687	2	Arm-Front Spring
34	614672	2	Bolt-Shoulder
35	92-1099	2	Bolt-Shoulder

Ref	Part No.	Qty.	Description
36	684776	2	Wheel And Tire ASM
❶99	95-7052	1	Plate-Opening, Chute

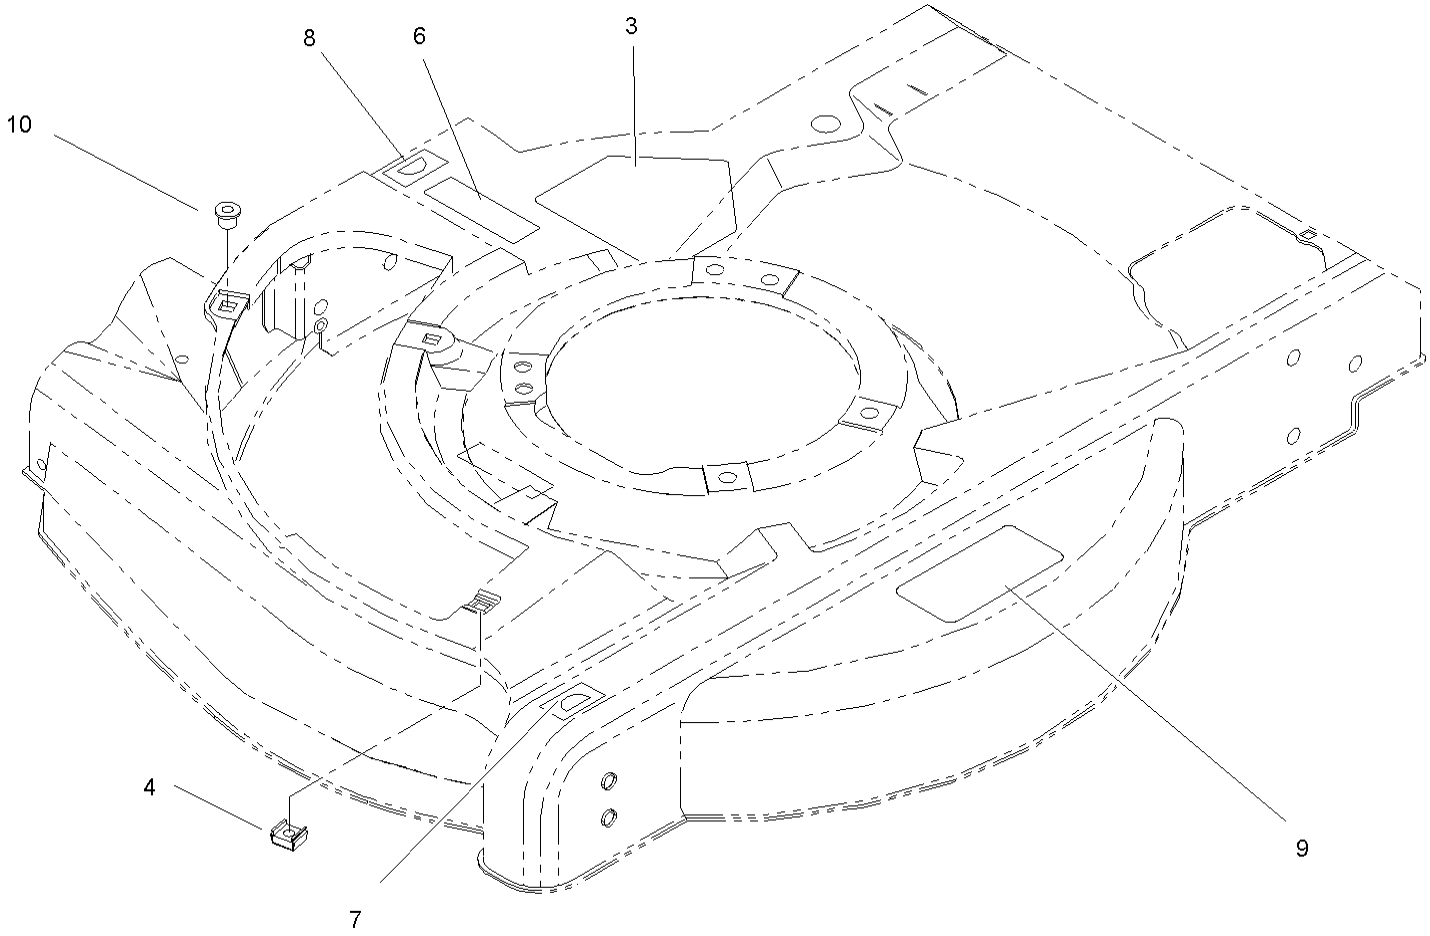


Housing Assembly 98-4477

Ref	Part No.	Qty.	Description
3	43-8480	1	Decal-Danger
4	613765	1	Nut-Cage
6	99-6018	1	Decal-Warning
7	92-2914	1	Decal-Hoc, LH
8	92-2915	1	Decal-Hoc, RH
9	93-7250	1	Decal-Warning
10	94-1610	2	Nut-Clip

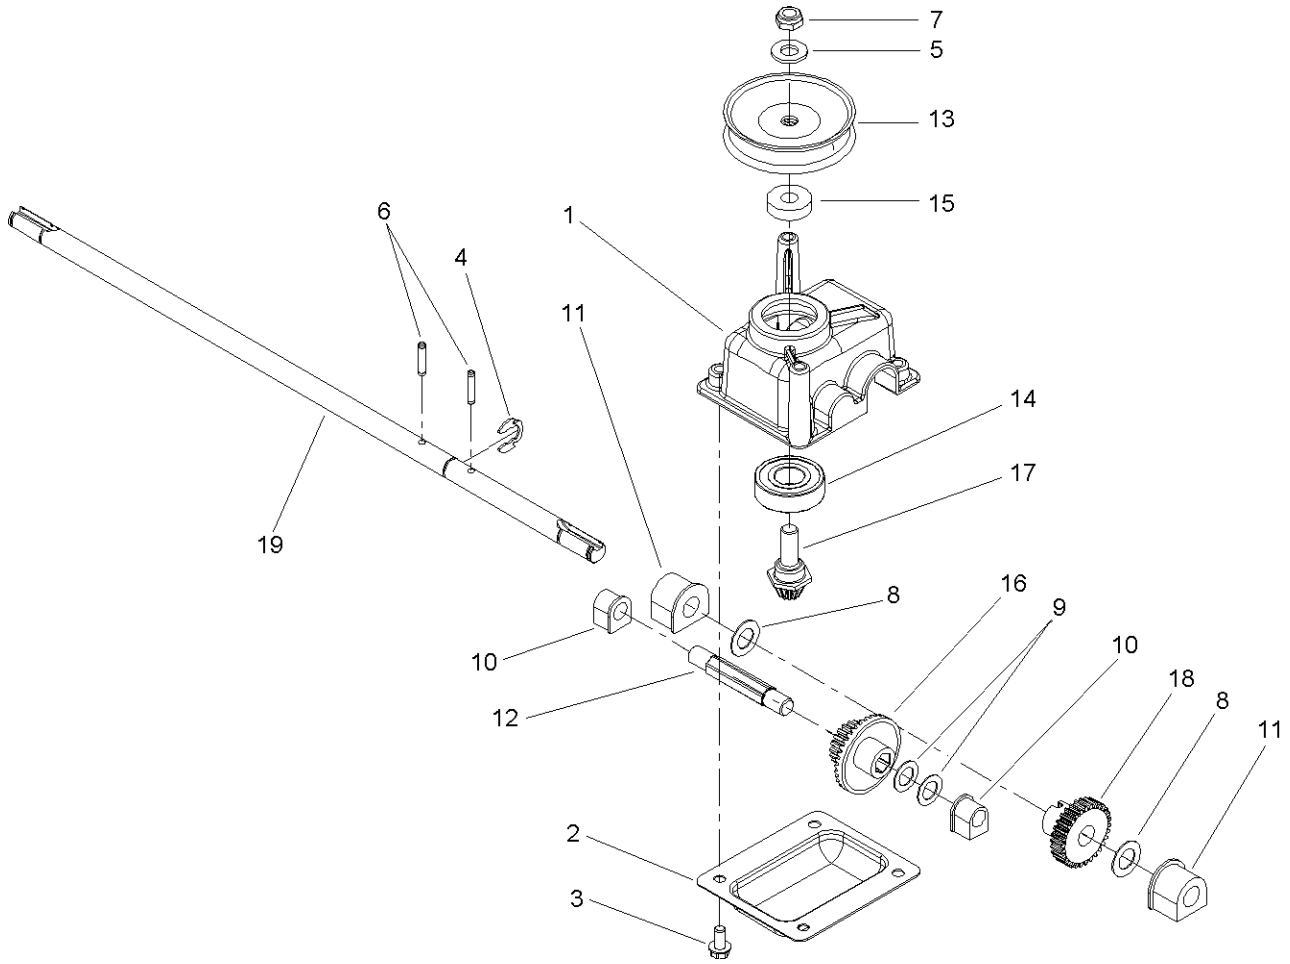

Gear Case Assembly No. 106-8328


Ref	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock, NI
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing
12	614696	1	Shaft-Intermediate
13	614669	2	Half-Pulley
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-1005	1	Gear-19t Spur, 37t Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	104-1004	1	Gear-30t
19	104-7670	1	Shaft-Output

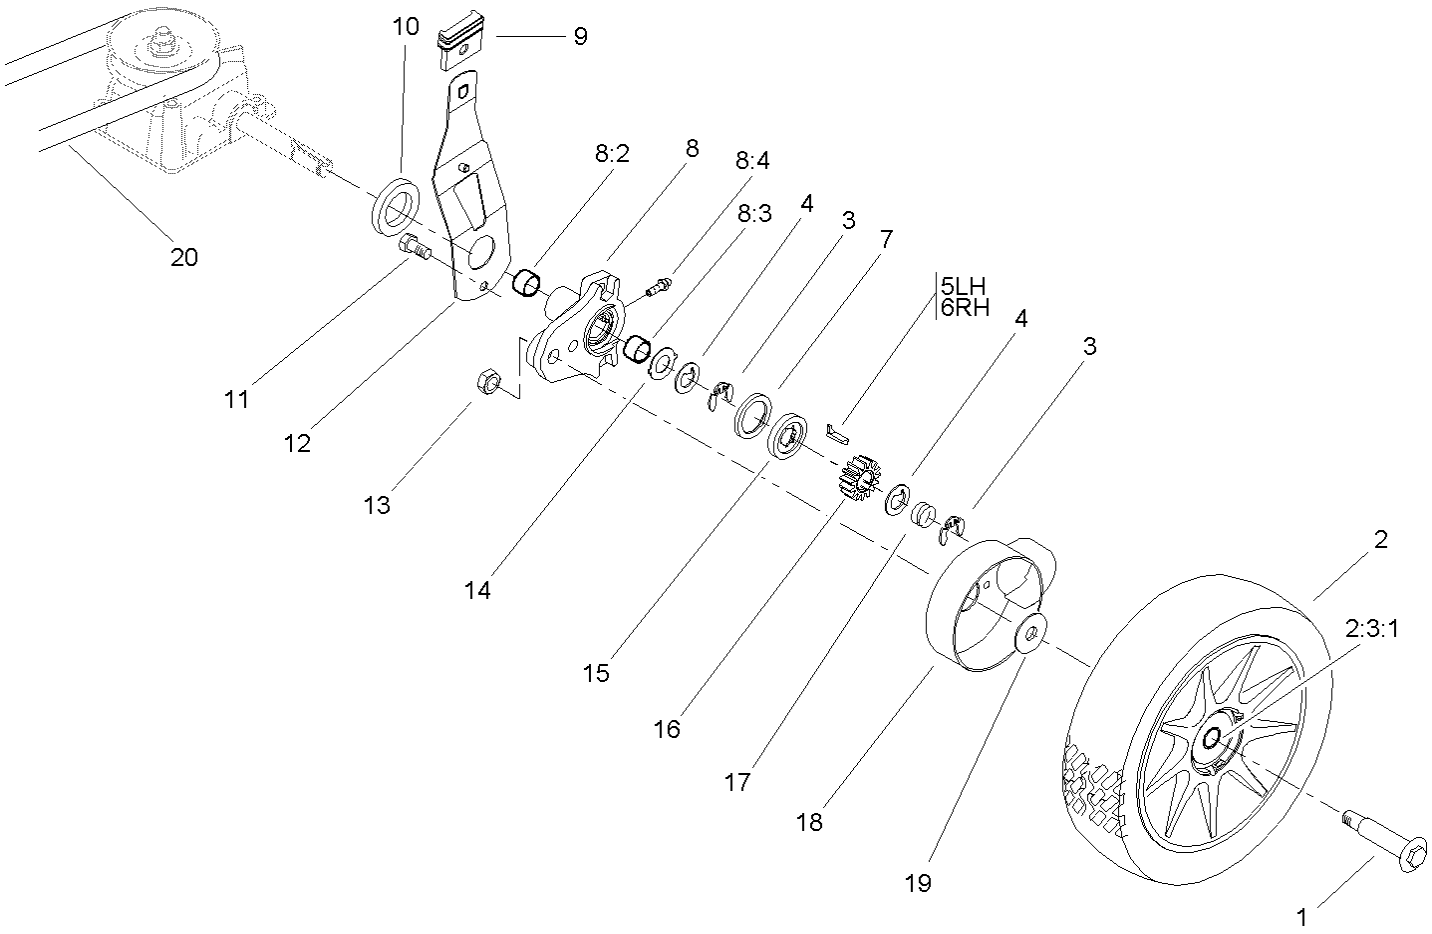

Gear Case and Wheel Assembly


Ref	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	Wheel And Tire ASM
❷2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
❶6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Rear Height Adjustment Arm ASM
8:2	70-9760	1	Bushing
8:3	47-2900	1	Bushing
8:4	302-56	1	Fitting-Grease
9	92-1008	2	Knob-Lever, Height Adjustment
10	614447	2	Spacer-Axle Shaft
11	32144-85	2	Screw-HWH
12	92-1004	2	Rear Spring Arm ASM
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped

Ref	Part No.	Qty.	Description
20	93-7381	1	V-Belt

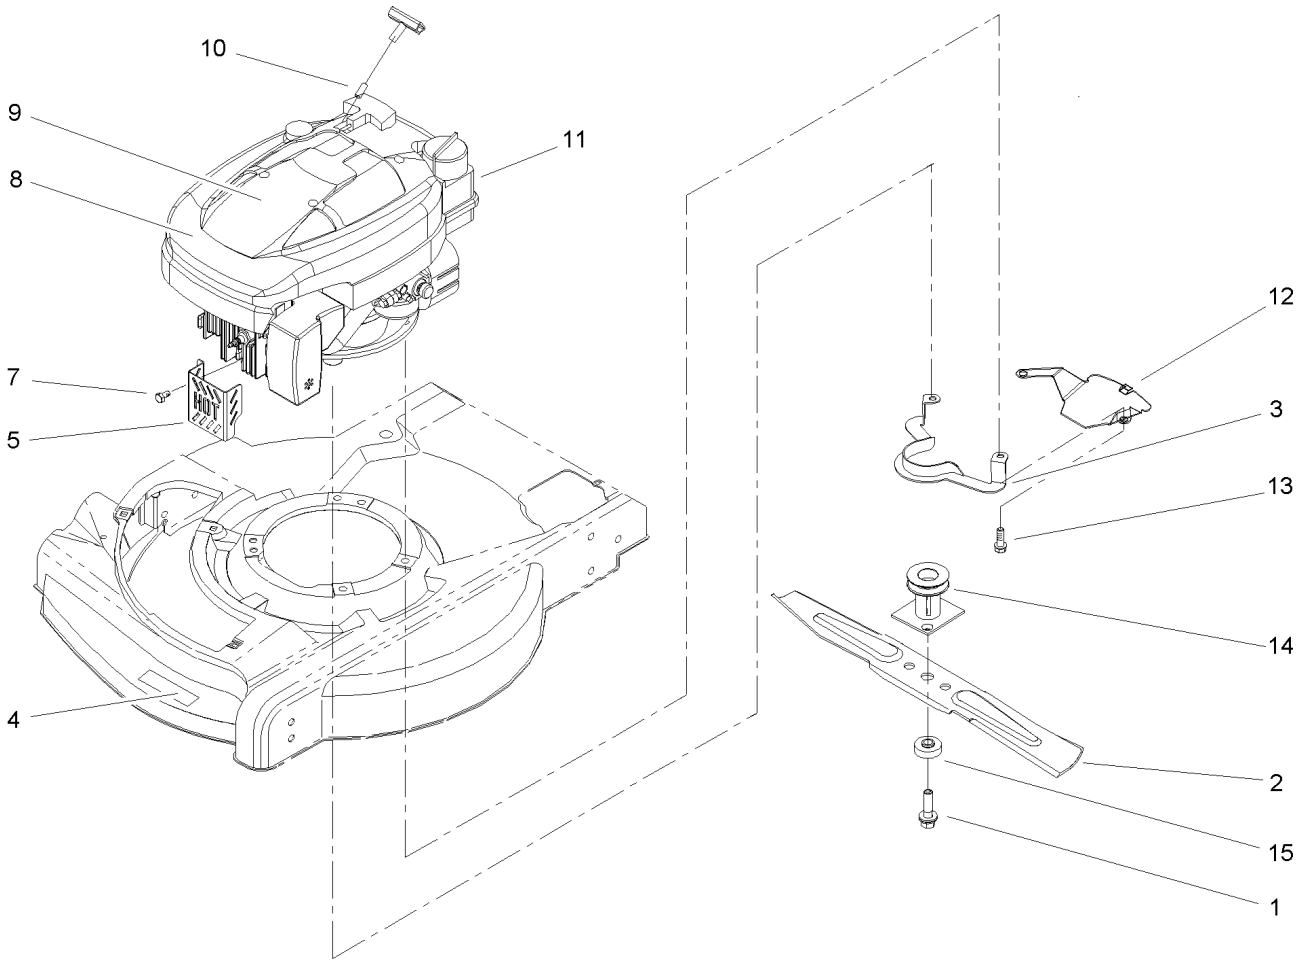


Engine and Blade Assembly

Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
2	612543-03	1	Blade
3	92-1024-03	1	Guide-Belt
4	104-7955	1	Decal-Deck
5	106-8346-03	1	Guard-Muffler
7	32144-4	1	Screw-HWH
8	98-1593	1	Applique
9	106-8375	1	Decal-Recoil
10	92-1701	1	Stop-Rope
❷11		1	Engine-Tecumseh, Lv195ea-362005b
12	93-4196-03	1	Shield-Grass
13	95-1726	3	Screw-Taptite
14	106-3950	1	Driver-Blade
15	106-6826	1	Spacer

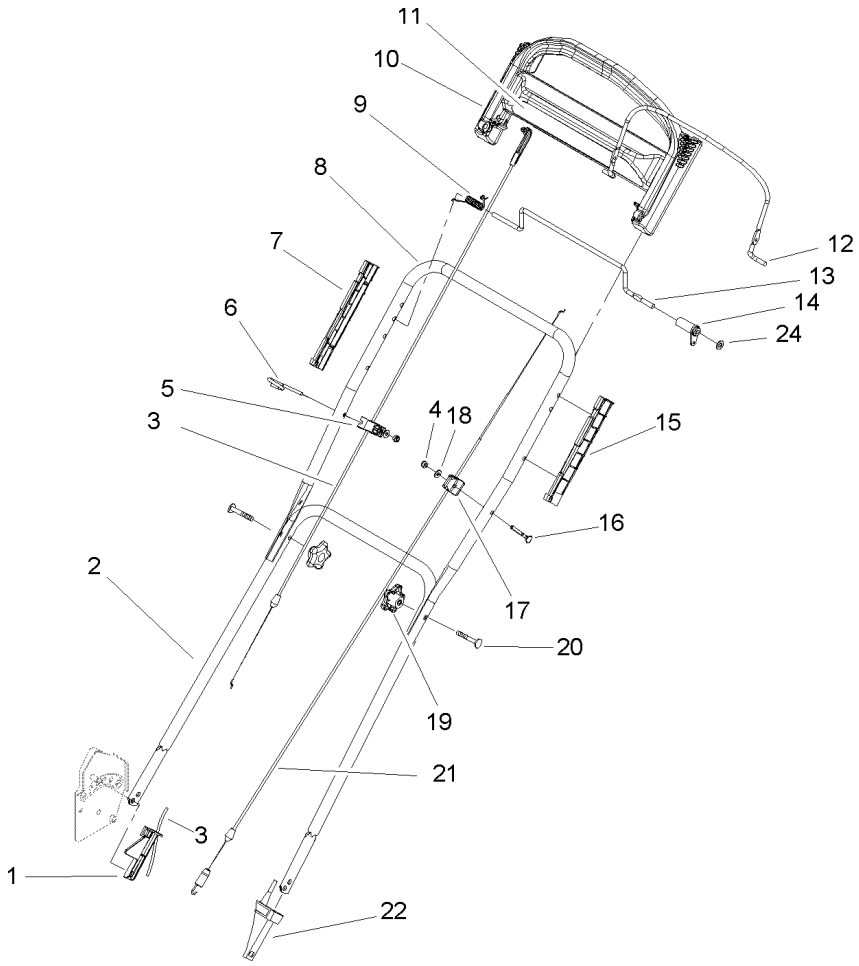

Handle Assembly


Ref	Part No.	Qty.	Description
1	104-1013	1	Guard-Cable
2	614643-05	1	Handle-Lower
3	106-8349	1	Cable-Brake
4	3296-73	2	Nut-Lock, NI
5	106-8331	1	Anchor-Cable
6	106-8330	1	Guide-Rope
7	105-6841	1	Guide-RH
8	106-8327-05	1	Handle-Upper
9	104-8690	1	Spring-Torsion
10	104-8678	1	Handle-Control
11	106-8329	1	Decal-Handle
12	104-8679-03	1	Bail-Brake
13	99-1588	1	Bar-Control, Traction
14	99-1589	1	Lever-Traction
15	105-6842	1	Guide-LH
16	95-4453	1	Screw
17	92-7729	1	Anchor-Cable, Upper
18	3256-1	2	Washer-Flat
19	106-4161	2	Knob-Handle
20	614697	2	Screw
21	105-1844	1	Cable-Traction
22	93-7380	1	Anchor-Cable
24	3256-23	1	Washer-Flat

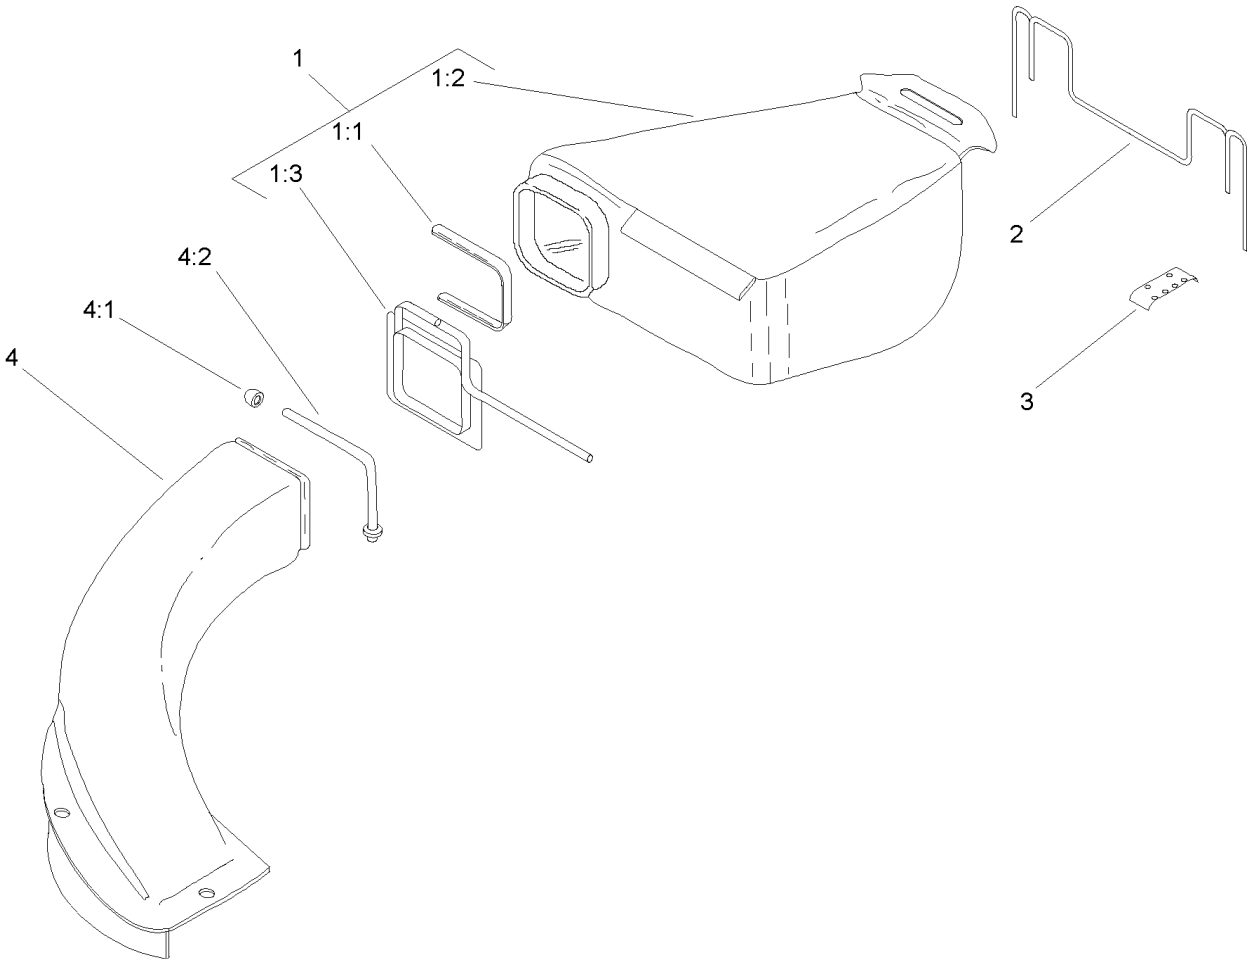

Rear Grass Bag Assembly

Ref	Part No.	Qty.	Description
❶1	100-6361	1	Bag And Adapter ASM
1:1	614700	1	Strap-Tie
1:2	100-6362	1	Replacement Bag ASM
1:3	684727-03	1	Adapter
2	613455	1	Hanger-Wire
3	613462-03	2	Clamp-Hanger
4	684729	1	Chute And Support ASM
4:1	614589	1	Nut-Cap
4:2	614591	1	Support-Chute

Engine Assembly No. 1
Tecumseh Model No. LV195EA-362005B

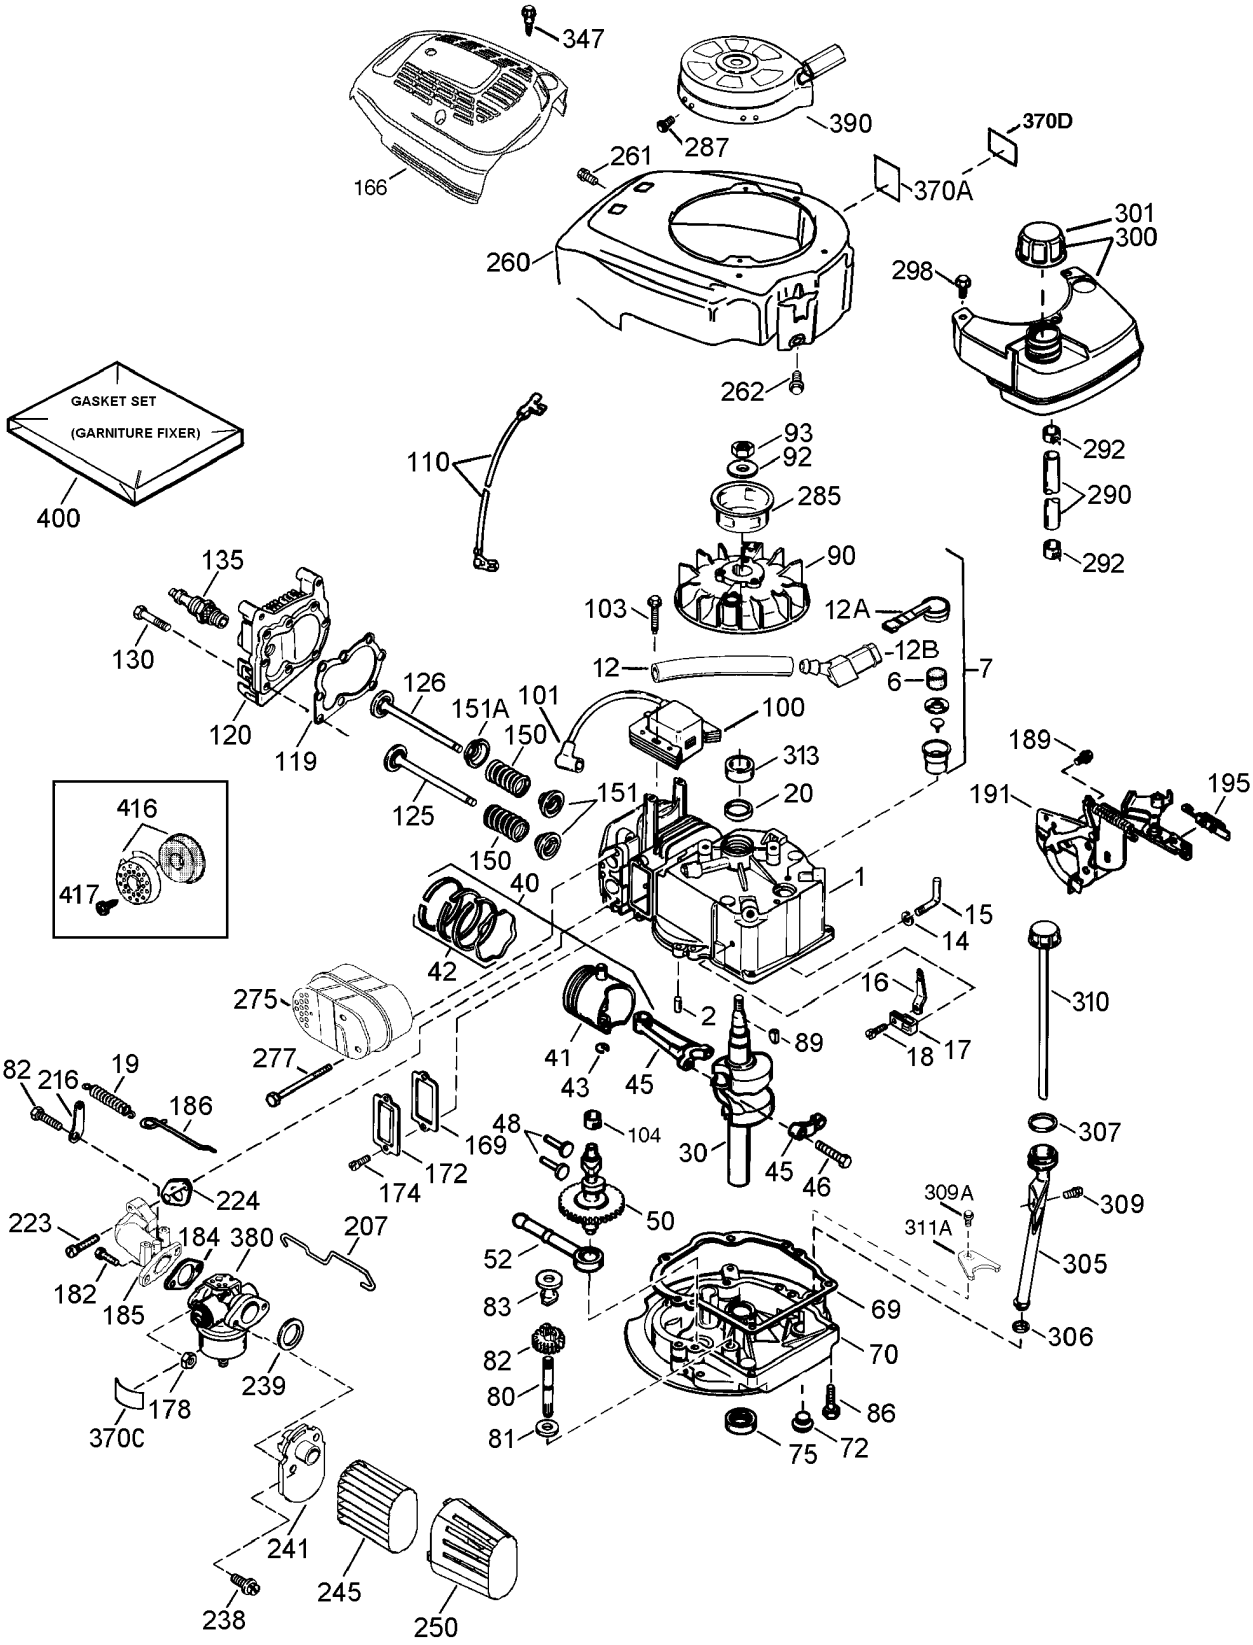


Engine Assembly No. 1
Tecumseh Model No. LV195EA-362005B

Ref	Part No.	Qty.	Description
❹1	37465	1	Cylinder(Incl. Ref. #2, 20 And 150)
❹2	26727	2	Pin-Dowel
❹6	33734	1	Element-Breather
❹7	36557	1	Breather ASM (Incl. Ref. #6 And 12a)
❹12	36775	1	Tube-Breather
❹12A	36558	1	Breather Cover And Tube (Incl. Ref. #12b)
❹12B	36694	1	Elbow-Breather, Tube
❹14	28277	1	Washer
❹15	30589	1	Governor Rod (Incl. Ref. #14)
❹16	34839A	1	Lever-Governor
❹17	31335	1	Lever Clamp-Governor
❹18	651018	1	Screw, T-15, 8-32 X 19/64in
❹19	36281	1	Spring-Extension
❹20	32600	1	Seal-Oil
❹30	37692	1	Crankshaft
❹40	40027	1	Piston, Pin And Ring Set (Std.)
❹41	40042	1	Piston And Pin ASM (Std.) (Incl. Ref. #43)
❹42	40006	1	Ring Set (Std.)
❹43	20381	2	Retaining Ring-Piston Pin
❹45	36777	1	Connecting Rod ASM (Incl. Ref. #46)
❹46	32610A	2	Bolt-Connecting Rod
❹48	27241	2	Lifter-Valve
❹50	37460	1	Camshaft (Exhaust Mcr) (Incl. Ref. #104)
❹52	29914	1	Oil Pump ASM
❸❹69	37609	1	Gasket-Mounting Flange
❹70	37608	1	Mounting Flange (Incl. Ref. #72-83, 306, 309a And 311a)
❹72	37614	1	Plug-Oil Drain
❹75	27897	1	Seal-Oil
❹80	30574A	1	Shaft-Governor
❹81	30590A	1	Washer
❹82	30591	1	Governor Gear ASM (Incl. Ref. # 81)
❹83	30588A	1	Spool-Governor
❹86	650488	6	Screw, 1/4-20 X 1-1/4in
❹89	611004	1	Key-Flywheel
❹90	611112	1	Flywheel
❹92	650815	1	Washer-Belleville
❹93	650816	1	Nut-Flywheel
❹100	34443C	1	Ignition-Solid State
❹101	610118	1	Cover-Spark Plug
❹103	651007	2	Screw, T-15, 10-24 X 15/16in
❹104	37480	1	Bushing-Cam
❹110	37047	1	Wire-Ground
❸❹119	36787	1	Gasket-Cylinder Head
❹120	37714	1	Sprocket Assembly
❹125	36780	1	Exhaust Valve (1/32" Os) (Incl. Ref. #151)


Ref	Part No.	Qty.	Description
❹125	37288	1	Exhaust Valve (Std.) (Incl. Ref. #151)
❹126	37289	1	Intake Valve (Std.) (Incl. Ref. #151and 151a)
❹130	6021A	8	Screw, 5/16-18 X 1-7/16in
❹135	35395	1	Resistor Spark Plug (Rj19lm)
❹150	31672	2	Spring-Valve
❹151	31673	2	Cap-Valve Spring
❹151A	40017	1	Seal-Intake Valve
❹166	37813	1	Engine Shroud (Green)
❸❹169	36783	1	Gasket-Valve Cover
❹172	36784	1	Cover-Valve
❹174	30200	2	Screw, 10-24 X 9/16in
❹178	29752	2	Nut And Lock Washer, 1/4-28
❹182	6201	2	Screw, 1/4-28 X 7/8in
❸❹184	26756	1	Gasket-Carburetor To Intake Pipe
❹185	37466	1	Pipe-Intake
❹186	32653	1	Link-Governor
❹189	650839	2	Screw, 1/4-20 X 3/8in
❹191	36559A	1	S.e. Brake Bracket (Incl. Ref. #195)
❹195	610973	1	Terminal
❹207	34336A	1	Link-Throttle
❹216	33086	1	Lever-R.p.m. Adjusting
❹223	650451	2	Screw, 1/4-20 X 1in
❸❹224	36786	1	Gasket-Intake Pipe
❹238	650932	2	Screw, 10-32 X 49/64in
❸❹239	34338	1	Gasket-Air Cleaner
❹241	36919	1	Collar-Air Cleaner
❹245	36905	1	Filter-Air Cleaner
❹250	37122	1	Cover-Air Cleaner
❹260	37696A	1	Housing-Blower
❹261	30200	2	Screw, 10-24 X 9/16in
❹262	650831	2	Screw, 1/4-20 X 1/2in
❹275	37498	1	Muffler
❹277	650988	2	Screw, 1/4-20 X 2-9/32in
❹285	35000A	1	Cup-Starter
❹287	650926	2	Screw, 8-32 X 21/64in
❹290	29774	1	Line-Fuel
❹292	26460	2	Clamp-Fuel Line
❹298	28763	2	Screw

Engine Assembly No. 2
Tecumseh Model No. LV195EA-362005B

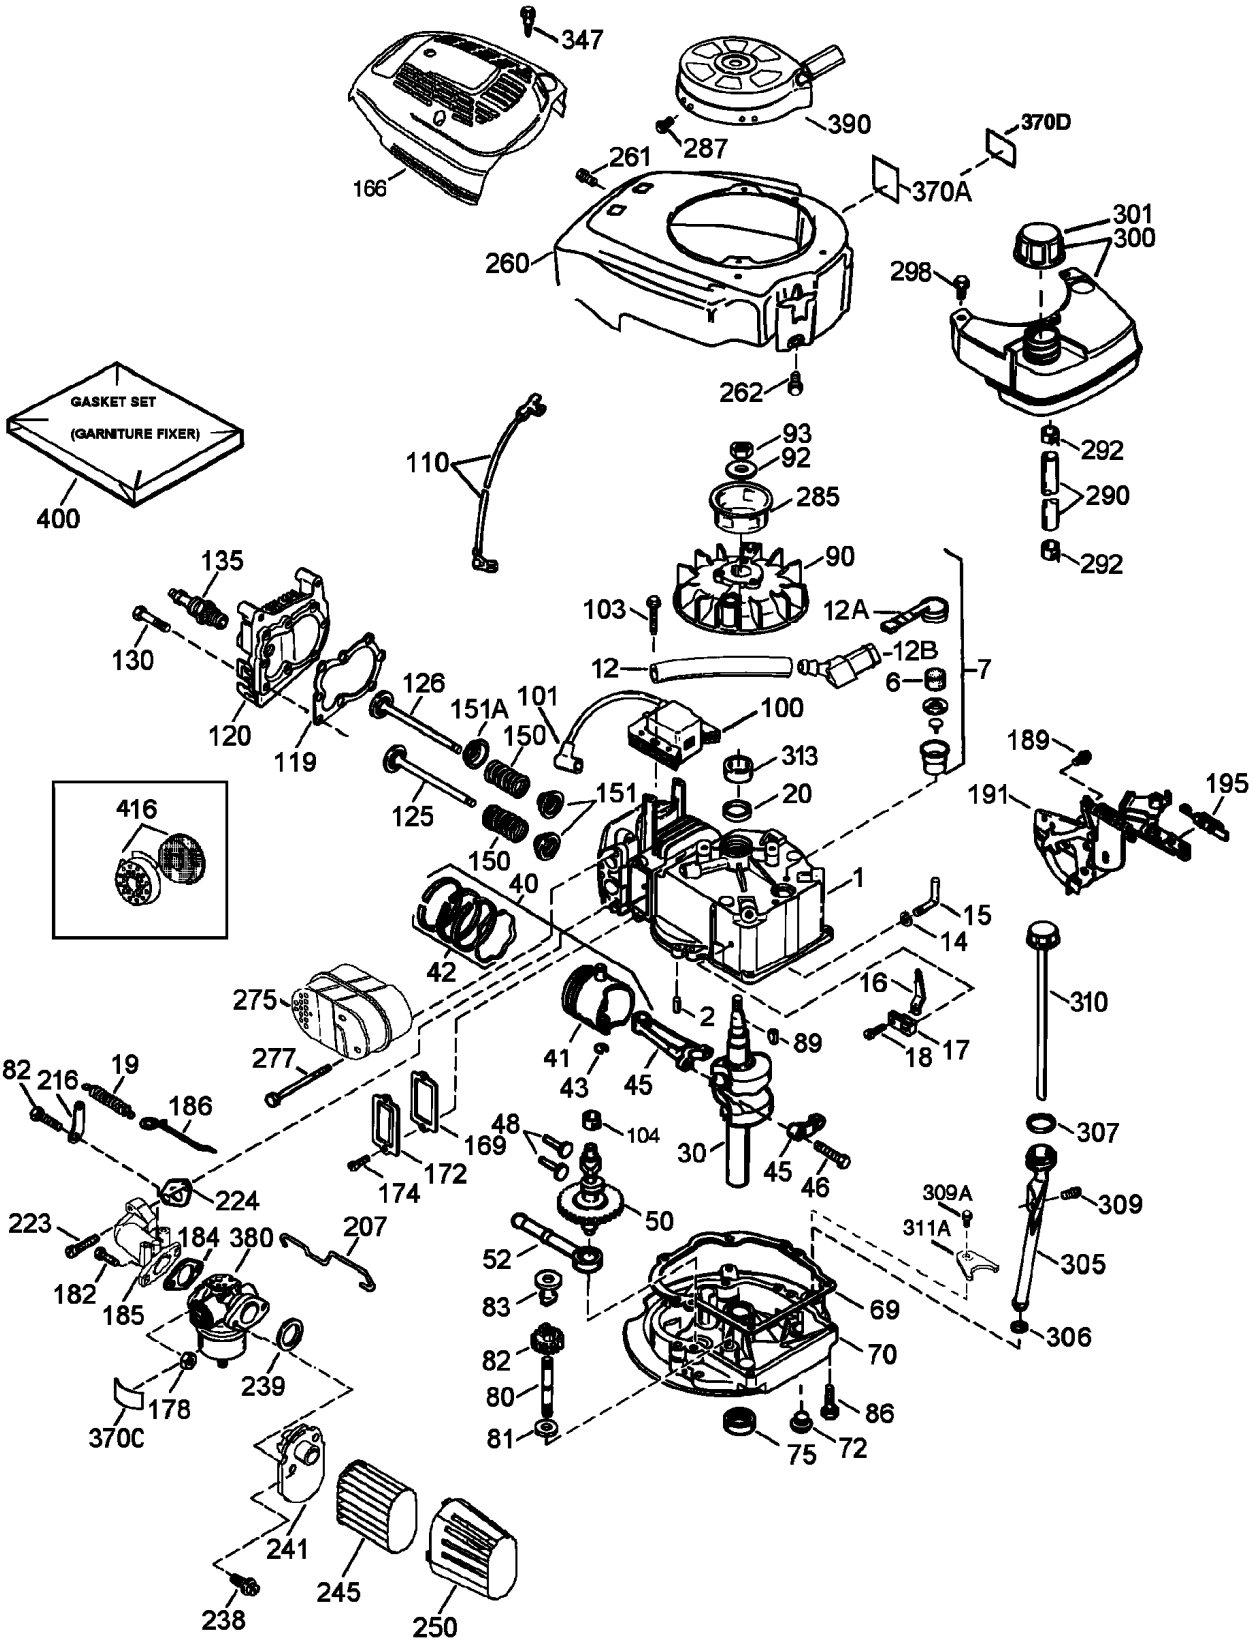

Engine Assembly No. 2
Tecumseh Model No. LV195EA-362005B


Ref	Part No.	Qty.	Description
❹300	35586A	1	Fuel Tank (Incl. Ref. #292 And 301)
❹301	36246	1	Fuel Cap ASM
❹305	35647	1	Tube-Oil Fill
❸❹306	37610	1	O-Ring
❹307	35499	1	O-Ring
❹309	650562	1	Screw, 10-32 X 1/2in
❹309A	650783	1	Screw, 10-24 X 3/4in
❹310	35648	1	Dipstick
❹311A	37611	1	Bracket-Hold Down
❹313	34080	1	Spacer
❹347	650898A	1	Screw, 10-32 X 27/32in
❹370A	36261	2	Decal-Lubrication
❹370C	37695	1	Decal-primer(3 X)
❹370D	35977	1	Decal-Warning
❹380	640303	1	Carburetor (Incl. Ref. #184)
❹390	590739	1	Starter-Rewind
❹400	37613	1	Gasket Set (Incl. Items Marked Pk In Notes)
❹416	37530	1	Spark Arrestor Kit (Optional)
❹	750876	1	Short Block Asm

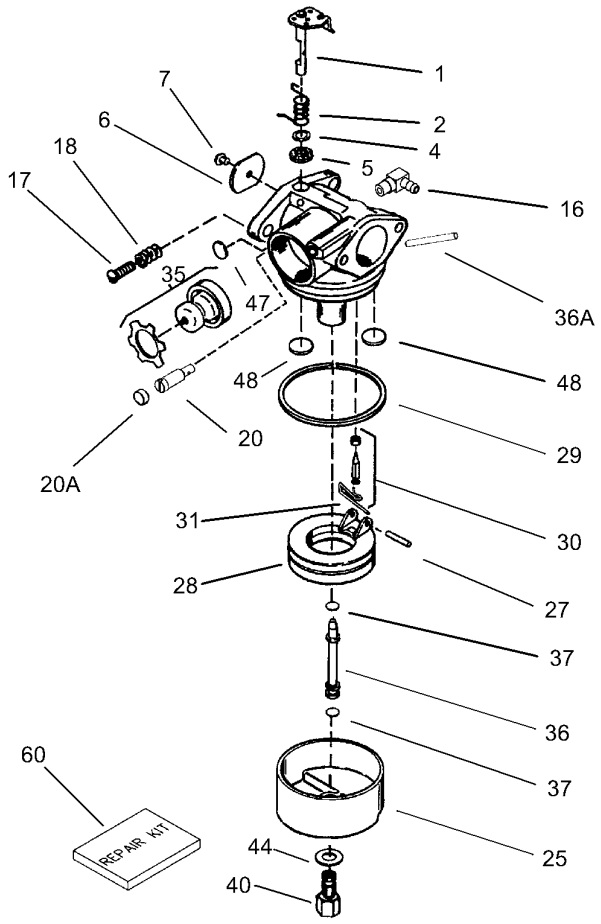

Carburetor Assembly No. 640303
Tecumseh Model No. LV195EA-362005B


Ref	Part No.	Qty.	Description
❹0	640303	1	Carburetor (Incl. Ref. #184 Of Engine Parts List)
❹1	631615	1	Throttle Shaft & Lever ASM
❹2	631767	1	Spring-Throttle Return
❸❹4	631184	1	Washer-Dust Seal
❸❹5	631183	1	Seal-Dust
❹6	640070	1	Shutter-Throttle
❸❹7	650506	1	Screw-Shutter
❹16	631807	1	Fitting-Fuel
❹17	651025	1	Throttle Crack Screw/idle Speedscrew
❹18	630766	1	Spring-Tension
❹20	640018	1	Screw-Idle Restrictor
❸❹20A	640200	1	Cap-Idle Restrictor Screw
❹25	631867	1	Bowl-Float
❸❹27	631024	1	Shaft-Float
❹28	632802	1	Float (Plastic)
❸❹29	631028	1	O-Ring-Float Bowl
❸❹30	632807	1	Inlet Needle, Seat, And Clip (Incl. Ref. #31)
❸❹31	631022	1	Spring Clip
❹35	640259	1	Primerbulb (Red)/retainer Ring
❹36	640019	1	Tube-Main Nozzle
❹36A	632766	1	Extension-Bowl Vent Tube
❸❹37	632547	2	O-Ring-Main Nozzle Tube

Ref	Part No.	Qty.	Description
❹40	640087	1	Nut-High Speed Bowl
❸❹44	27110A	1	Washer-Bowl Nut
❸❹47	630748	1	Welch Plug-Idle Mixture Well
❸❹48	631027	2	Welch Plug-Atmospheric Vent
❸❹60	632809	1	Repair Kit (Incl. Items Marked * In Notes)

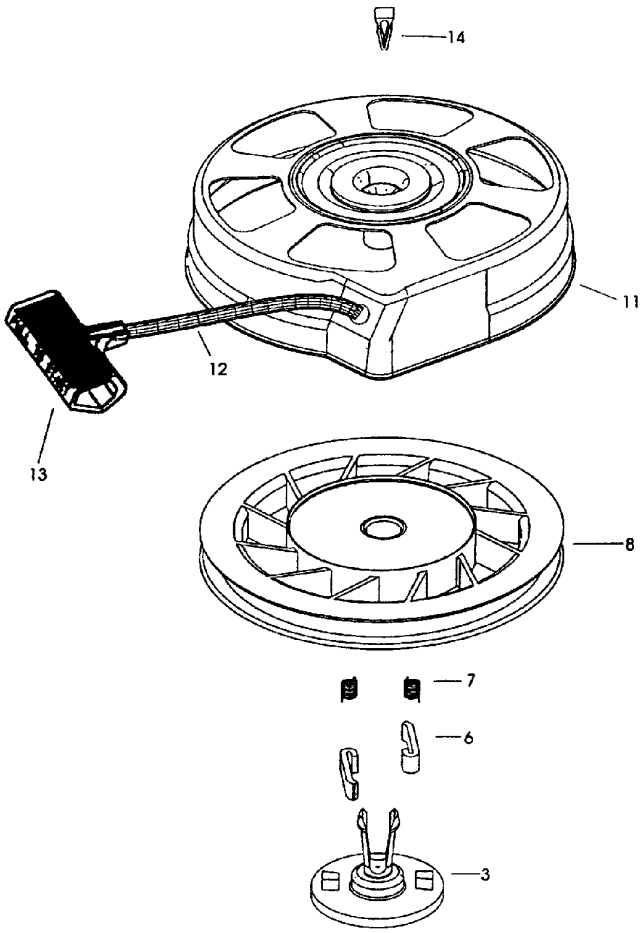

Recoil Starter Assembly No. 590739
Tecumseh Model No. LV195EA-362005B

Ref	Part No.	Qty.	Description
❹0	590739	0	Starter-Rewind
❹3	590740	1	Retainer
❹6	590616	2	Dog-Starter
❹7	590617	2	Spring-Dog
❹8	590618A	1	Pulley And Rewind Spring ASM
❹11	590638	1	Housing Assembly-Starter
❹12	590535	1	Rope-Starter (Length 98in X 9/64in Dia.)
❹13	590701	1	Handle-Starter
❹14	590760	1	Spring Clip

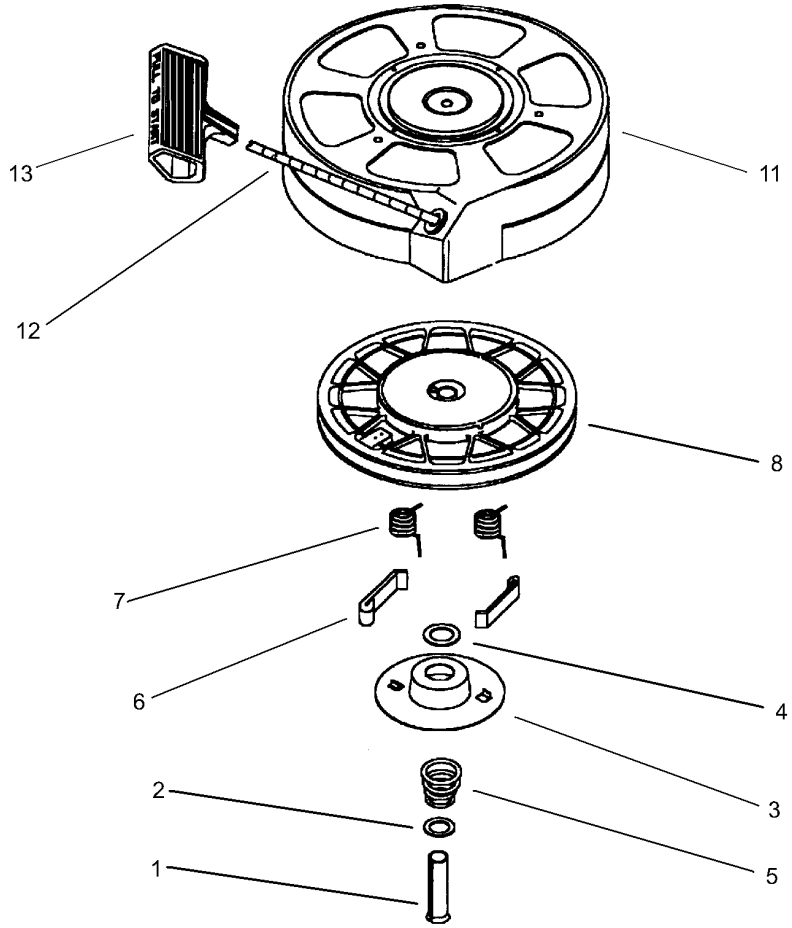

Recoil Starter Assembly No. 590702 (Optional)
Tecumseh Model No. LV195EA-362005B

Ref	Part No.	Qty.	Description
❹0	590702	0	Starter-Recoil
❹1	590599A	1	Pin-Spring (Incl. Ref. #4)
❹2	590600	1	Washer
❹3	590696	1	Retainer
❹4	590601	1	Washer
❹5	590697	1	Spring-Brake
❹6	590698	2	Dog-Starter
❹7	590699	2	Spring-Dog
❹8	590700	1	Pulley And Rewind Spring ASM
❹11	590703A	1	Starter Housing ASM (40 Degree Grommet)
❹12	590535	1	Rope-Starter (Length 98in X 9/64in Dia.)
❹13	590701	1	Handle-Starter

NOTES

NOTES

NOTES

LAWN-BOY®