Form No. 3477-520 Rev A

TORO®

Count on it.

Parts Catalog

Pro Force® Debris Blower

Model No. 44556—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3477-520 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame, Wheel, Axle and Hitch Assembly 4
Frame Assembly No. 161-7874 6
Hub and Axle Assembly No. 144-3630 8
Wheel and Tire Assembly No. 144-3664 10
Turbine Mounting Assembly 12
Turbine Assembly No. 140-6946SP 14
Nozzle Assembly 16
Driveshaft and Battery Assembly 18
Engine, Muffler and Fuel Tank Assembly 20
Fuel Tank Assembly No. 115-9048 22
Fuel Delivery Assembly 24
Electrical System Assembly 26
Wire Harness Assembly No. 122-3530 28
Ignition Switch Assembly No. 121-5159 30
Controller Assembly No. 132-9600 32
Remote Assembly No. 125-1270 34
Red LED Indicator Lamp Assembly No. 122-0630 36
Attachments and Accessories 38

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame, Wheel, Axle and Hitch Assembly

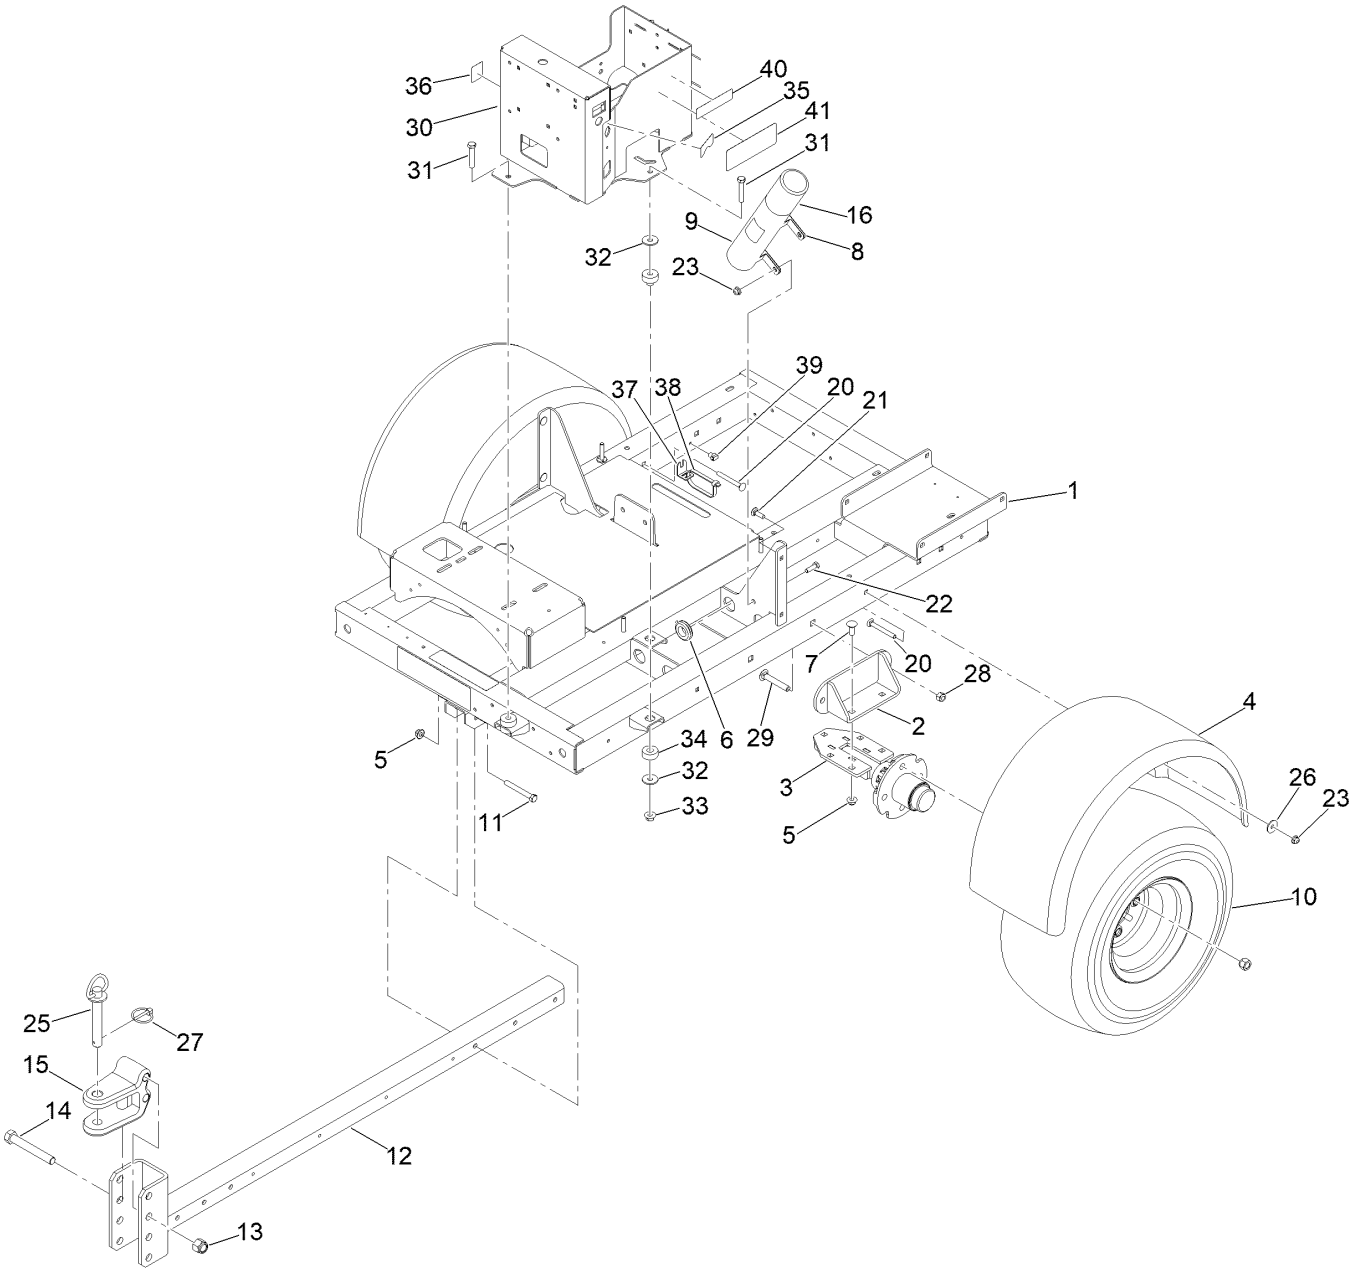

Frame, Wheel, Axle and Hitch Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-7874	1	Frame ASM Service Kit
2	119-2958-01	2	Mount-Axle
3	144-3630	2	Hub Axle ASM
4	112-6852	2	Fender
5	119-4042	8	Nut-HF, NI
6	1-543286	2	Grommet
7	3231-2	6	Bolt-CARR
8	2412-133	2	Clamp-R
9	104-7050	1	Tube-Manual
10	144-3664	2	Wheel ASM
11	323-14	2	Screw-HH
12	112-6942-01	1	Hitch
13	3296-53	2	Nut-Lock, NI
14	327-23	2	Screw-HH
15	131-4381-01	1	Hitch-Clevis
16	104-7048	1	Cap-Housing
20	3230-9	4	Screw-CARR
21	3230-2	4	Bolt-CARR
22	322-5	2	Screw-HH
23	119-4041	10	Nut-HF
25	13-6200	1	Pin-Hitch, Pointed
26	3256-82	8	Washer-Flat
27	92-1298	1	Pin-Lynch
28	3296-48	4	Nut-Hex
29	3232-17	4	Screw-CARR
30	161-4947-01	1	Tower-Control
31	323-10	3	Screw-HH
32	93-8806	6	Washer-Hardened
33	32128-19	3	Nut-HF Lock,Large Flg
34	121-2870	3	Mount-2 Piece
35	119-6165	1	Decal-Ignition
36	131-6766	1	Decal-Fuses
37	131-6703	1	Bracket-Hold Down, Electrical
38	3334-945	1	Tie-Cable
39	32180-030	1	Clip-Tie
40	133-8062	1	Decal-Spark Arrestor
41	140-6843	1	Decal-Proforce Frame


Frame Assembly No. 161-7874

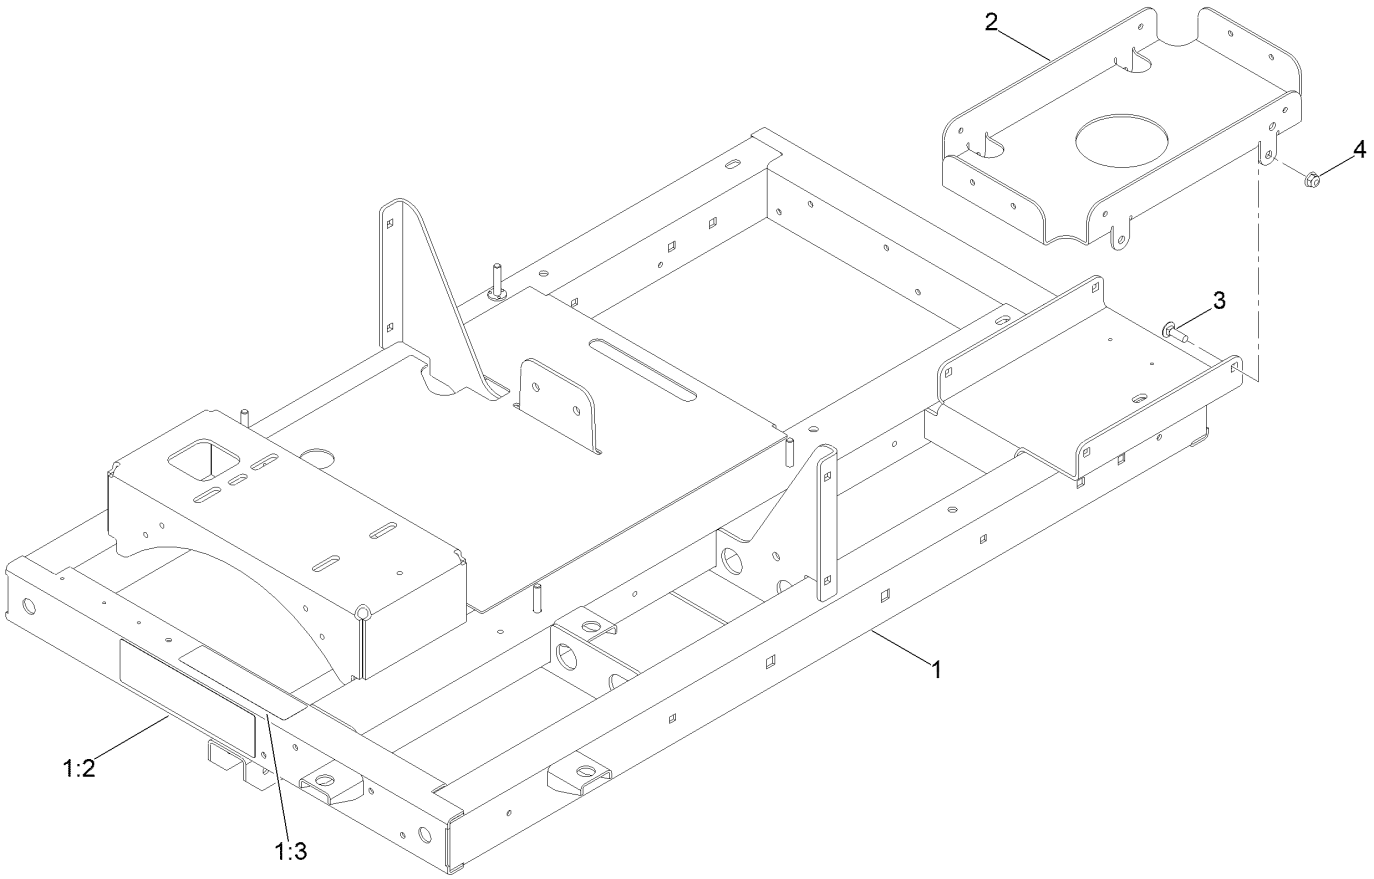

Frame Assembly No. 161-7874 (continued)

Ref.	Part Number	Qty.	Description
1	144-3212	1	Frame ASM
1:2	140-6767	1	Decal-Warning, Db
1:3	115-5113	1	Decal-Protection, Eye And Ear
2	145-7461-01	1	Mount-Tank, 5GA
3	3230-2	4	Bolt-CARR
4	119-4041	4	Nut-HF


Hub and Axle Assembly No. 144-3630

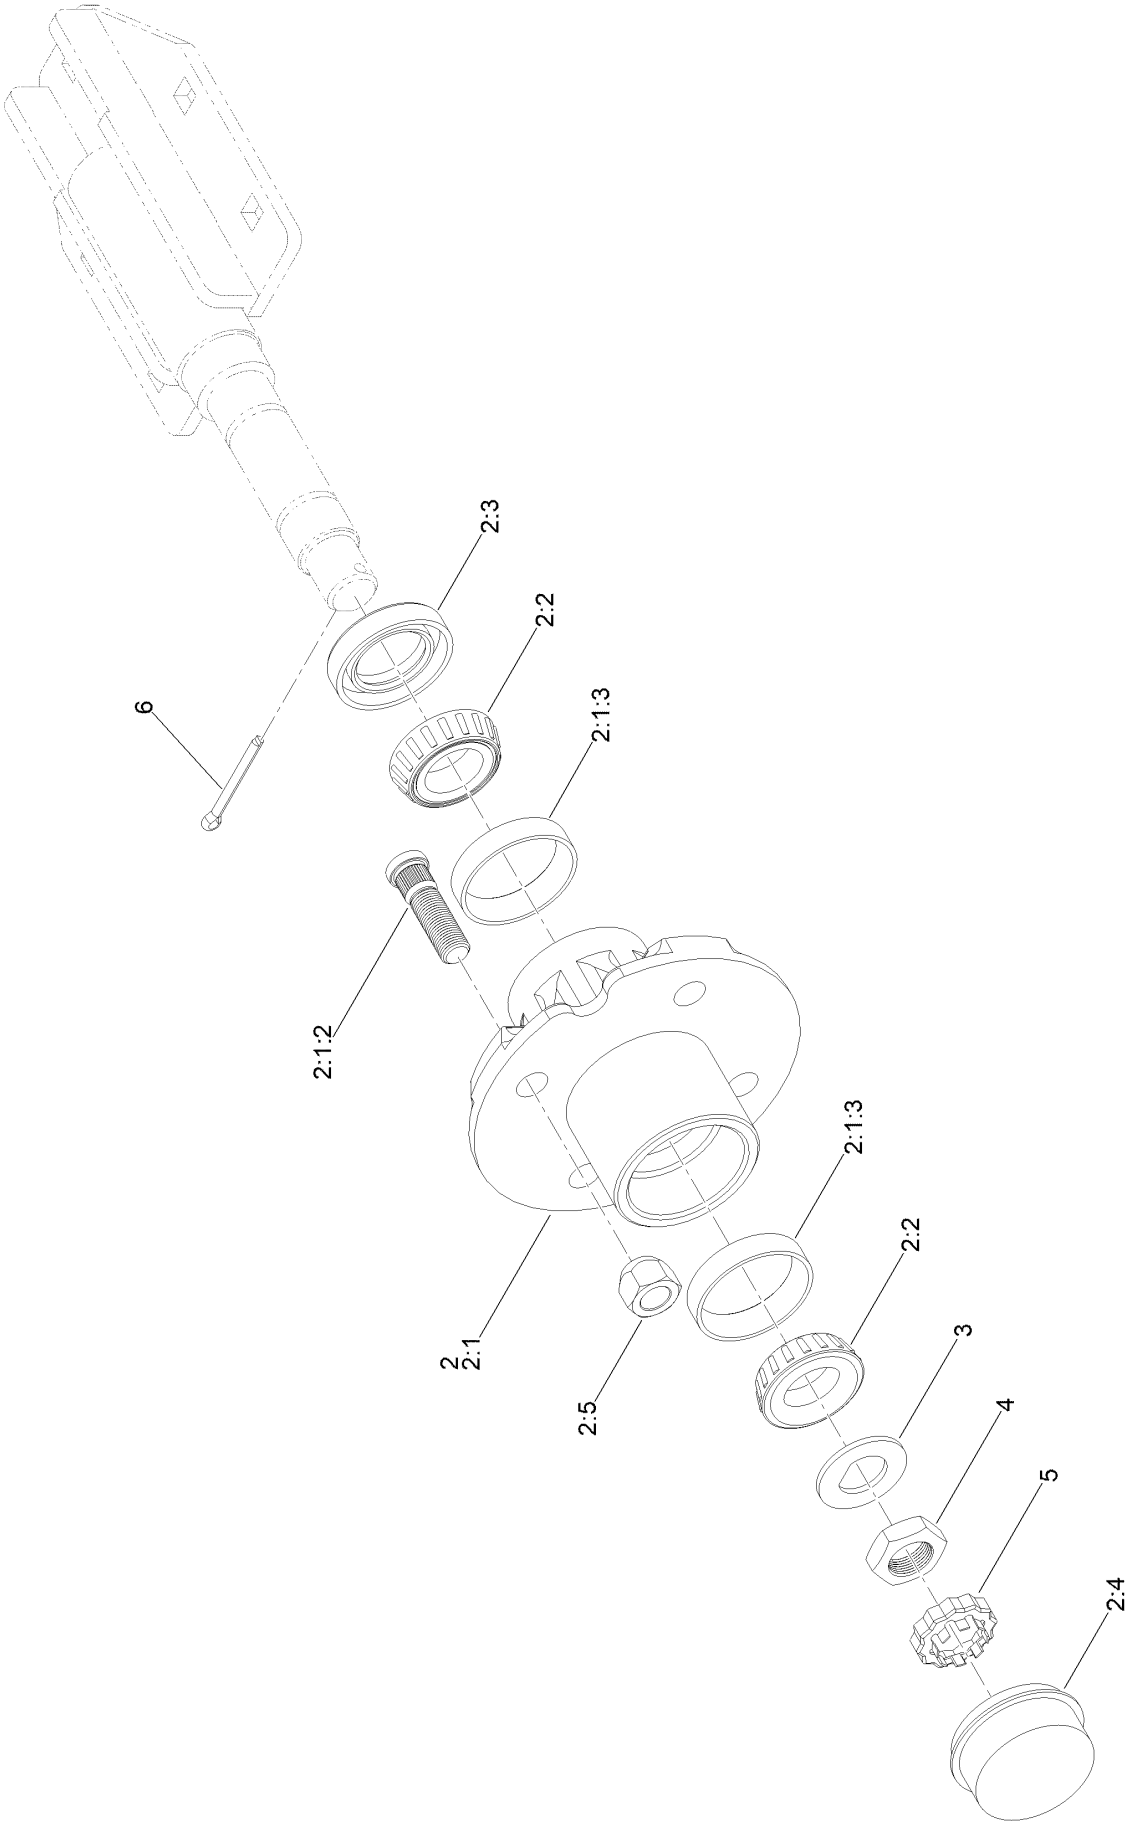

Hub and Axle Assembly No. 144-3630 (continued)

Ref.	Part Number	Qty.	Description
2	117-5115	1	Hub And Bearing ASM
2:1	117-8251	1	Hub ASM
2:1:2	114-3918	4	Stud-Wheel
2:1:3	254-72	2	Bearing-Cup, Tapered
2:2	254-94	2	Bearing-Cone, Tapered
2:3	112-1690	1	Seal-Oil
2:4	241-119	1	Cap-Dust
2:5	139-2564	4	Nut-Lug
3	117-8259	1	Washer-Spindle
4	117-8260	1	Nut
5	93-0307	1	Nut-Lock, Retainer
6	3272-18	1	Pin-Cotter


Wheel and Tire Assembly No. 144-3664

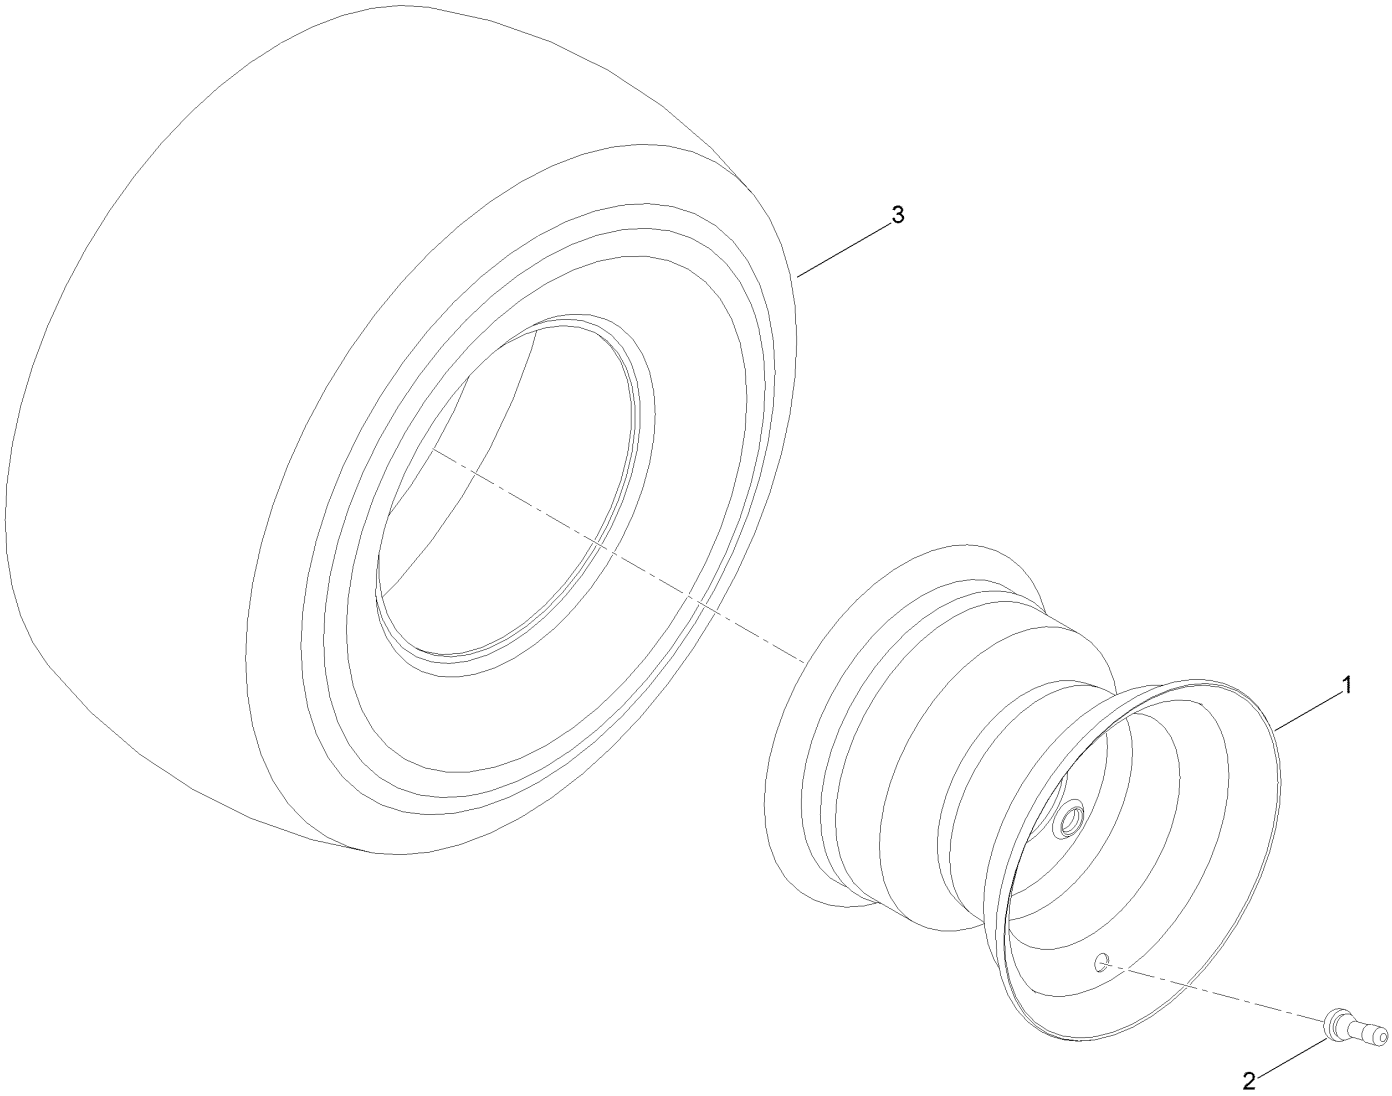

Wheel and Tire Assembly No. 144-3664 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	137-2597	1	Rim
2	232-27	1	Stem-Valve
3	144-3665	1	Tire


Turbine Mounting Assembly

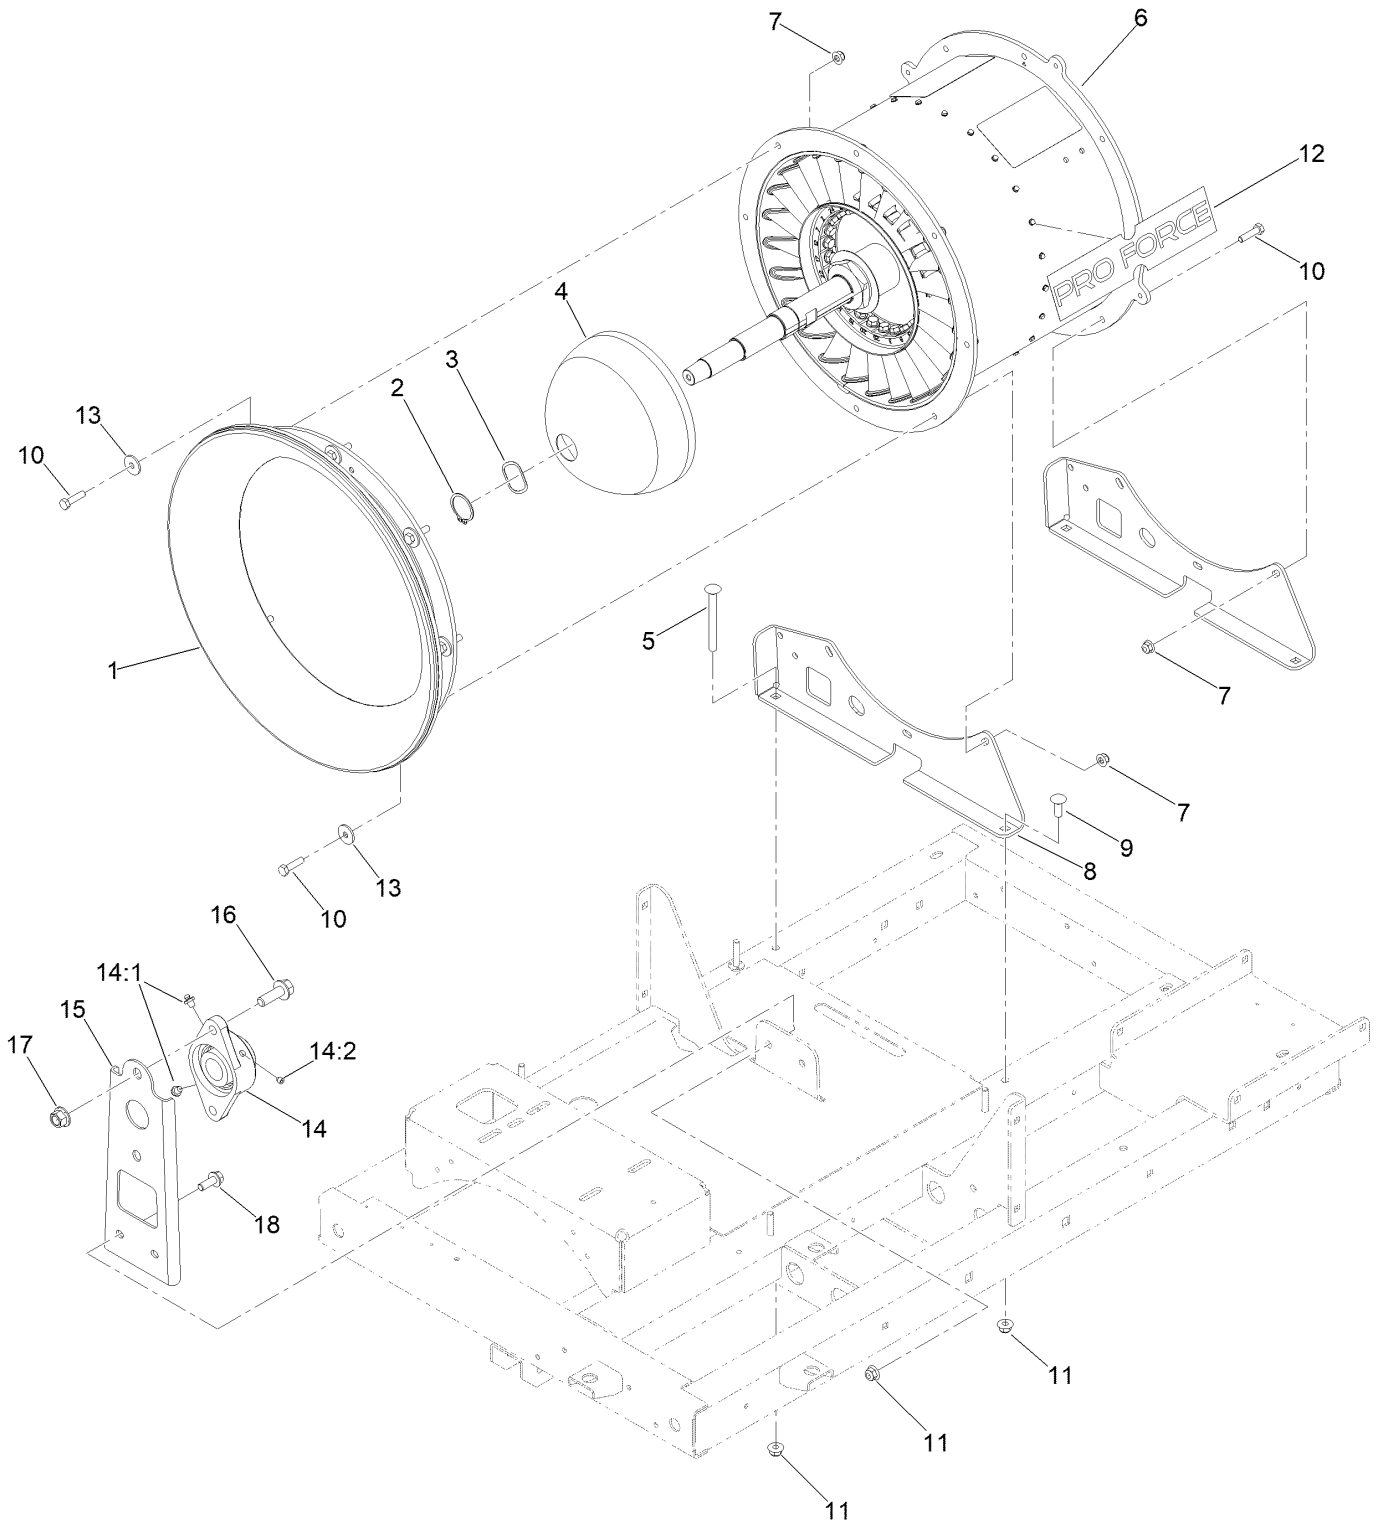

Turbine Mounting Assembly (continued)

Ref.	Part Number	Qty.	Description
1	117-8329	1	Bell-Inlet
2	112-1952	1	Ring-Snap, EXT
3	93-4632	1	Washer-Wavey
4	131-9440	1	Cap-Front
5	3231-24	2	Screw-CARR
6	140-6946SP	1	Turbine ASM-Horizontal
7	119-4041	11	Nut-HF
8	140-6983-01	2	Mount-Housing
9	3231-22	2	Screw-CARR
10	322-6	11	Screw-HH
11	119-4042	4	Nut-HF, NI
12	115-5102	2	Decal
13	115-7109	8	Washer-Flat
14	94-7484	1	Bearing
14:1	302-2	2	Fitting-Grease
14:2	106-9662	1	Screw-Set, HSH
15	144-3316-01	1	Mount-Bearing
16	100-6116	2	Screw-HHF
17	139-1689	2	Nut-HF
18	3234-42	2	Screw-HHF


Turbine Assembly No. 140-6946SP

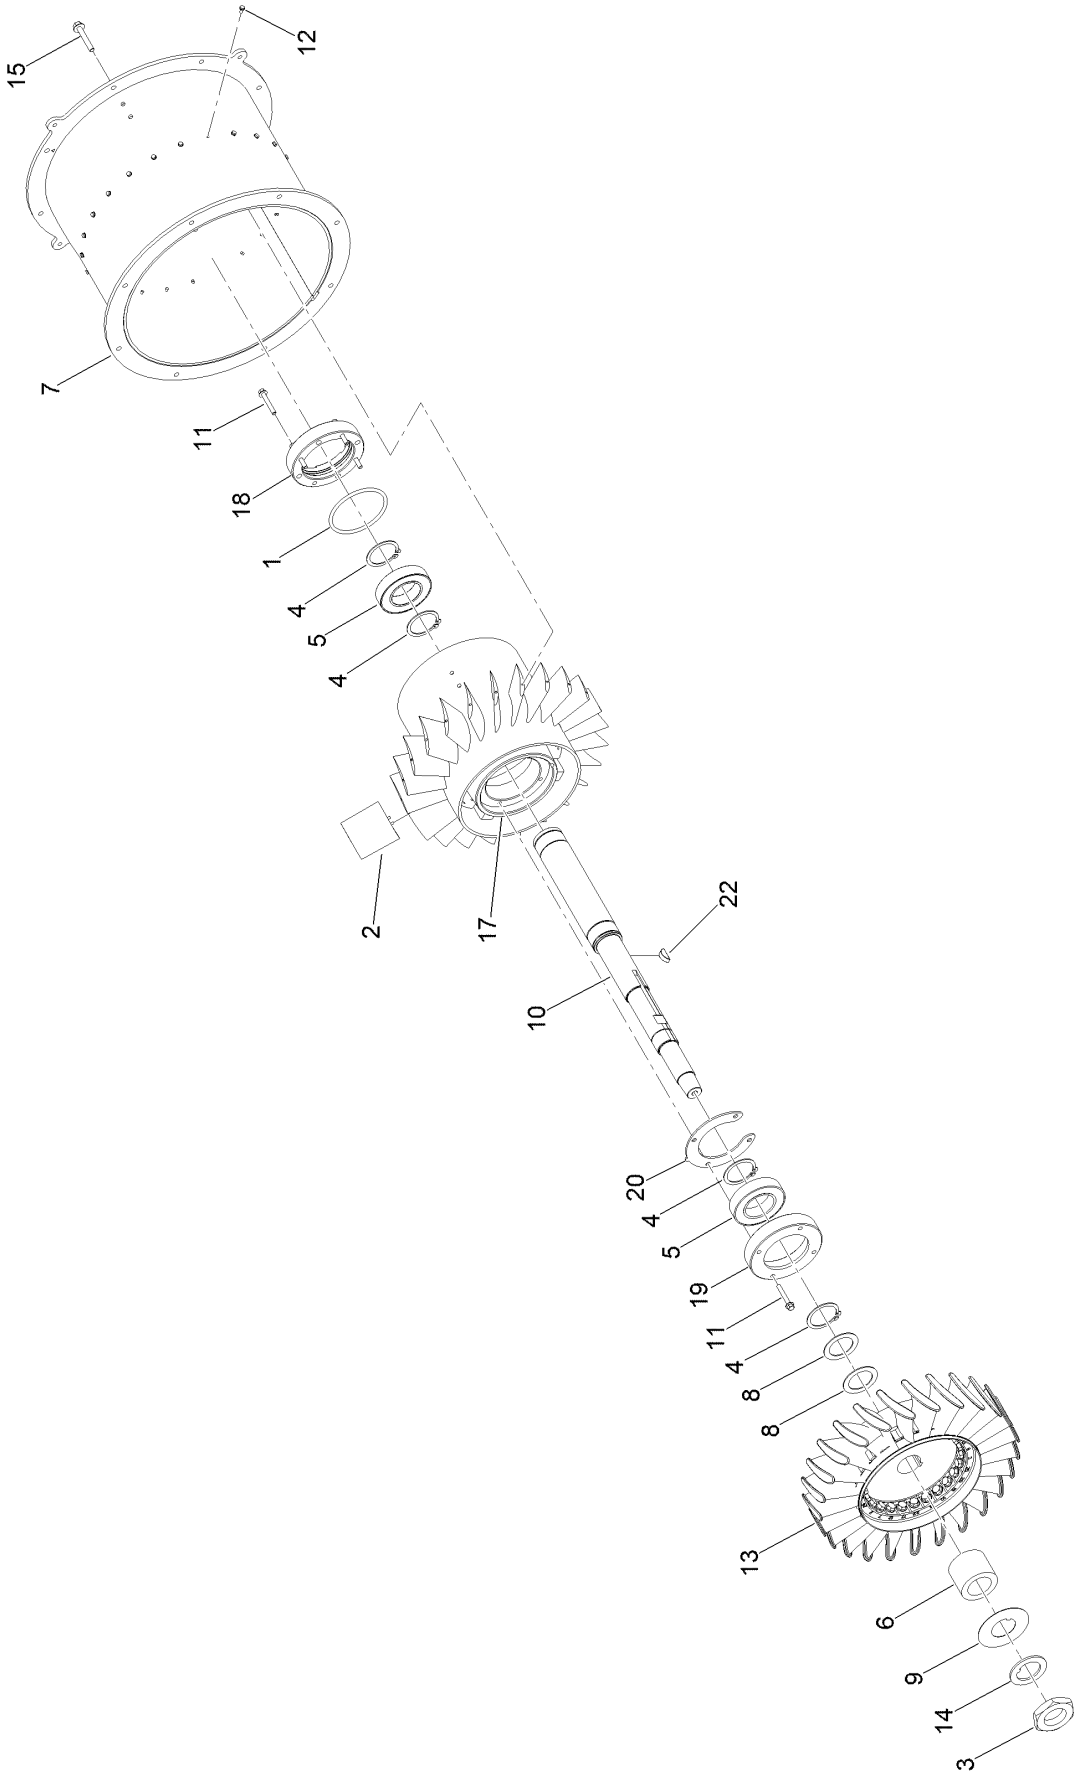

Turbine Assembly No. 140-6946SP (continued)

Ref.	Part Number	Qty.	Description
1	92-9533	1	O-Ring
2	112-1871	24	Vane-Stator
3	112-1899	1	Nut
4	112-1951	4	Ring-Snap, EXT
5	112-6764	2	Bearing-Ball
6	114-2164	1	Spacer
7	140-6945	1	Housing-Horizontal, Service ASM
8	115-5131	2	Washer
9	115-9005	1	Washer-Tab
10	140-6997	1	Shaft-Fan Long
11	125-4287	8	Screw-HHF
12	117-8303	24	Screw-HWH
13	117-8356	1	Rotor
14	119-6202	1	Washer-Tab
15	161-7875	4	Screw-HHSF
17	145-7583	1	Inner Housing
18	140-6933	1	End-Oring
19	120-6061	1	Bearing-Cap
20	120-6063	1	End-Cap
22	3257-42	1	Key-Woodruff


Nozzle Assembly

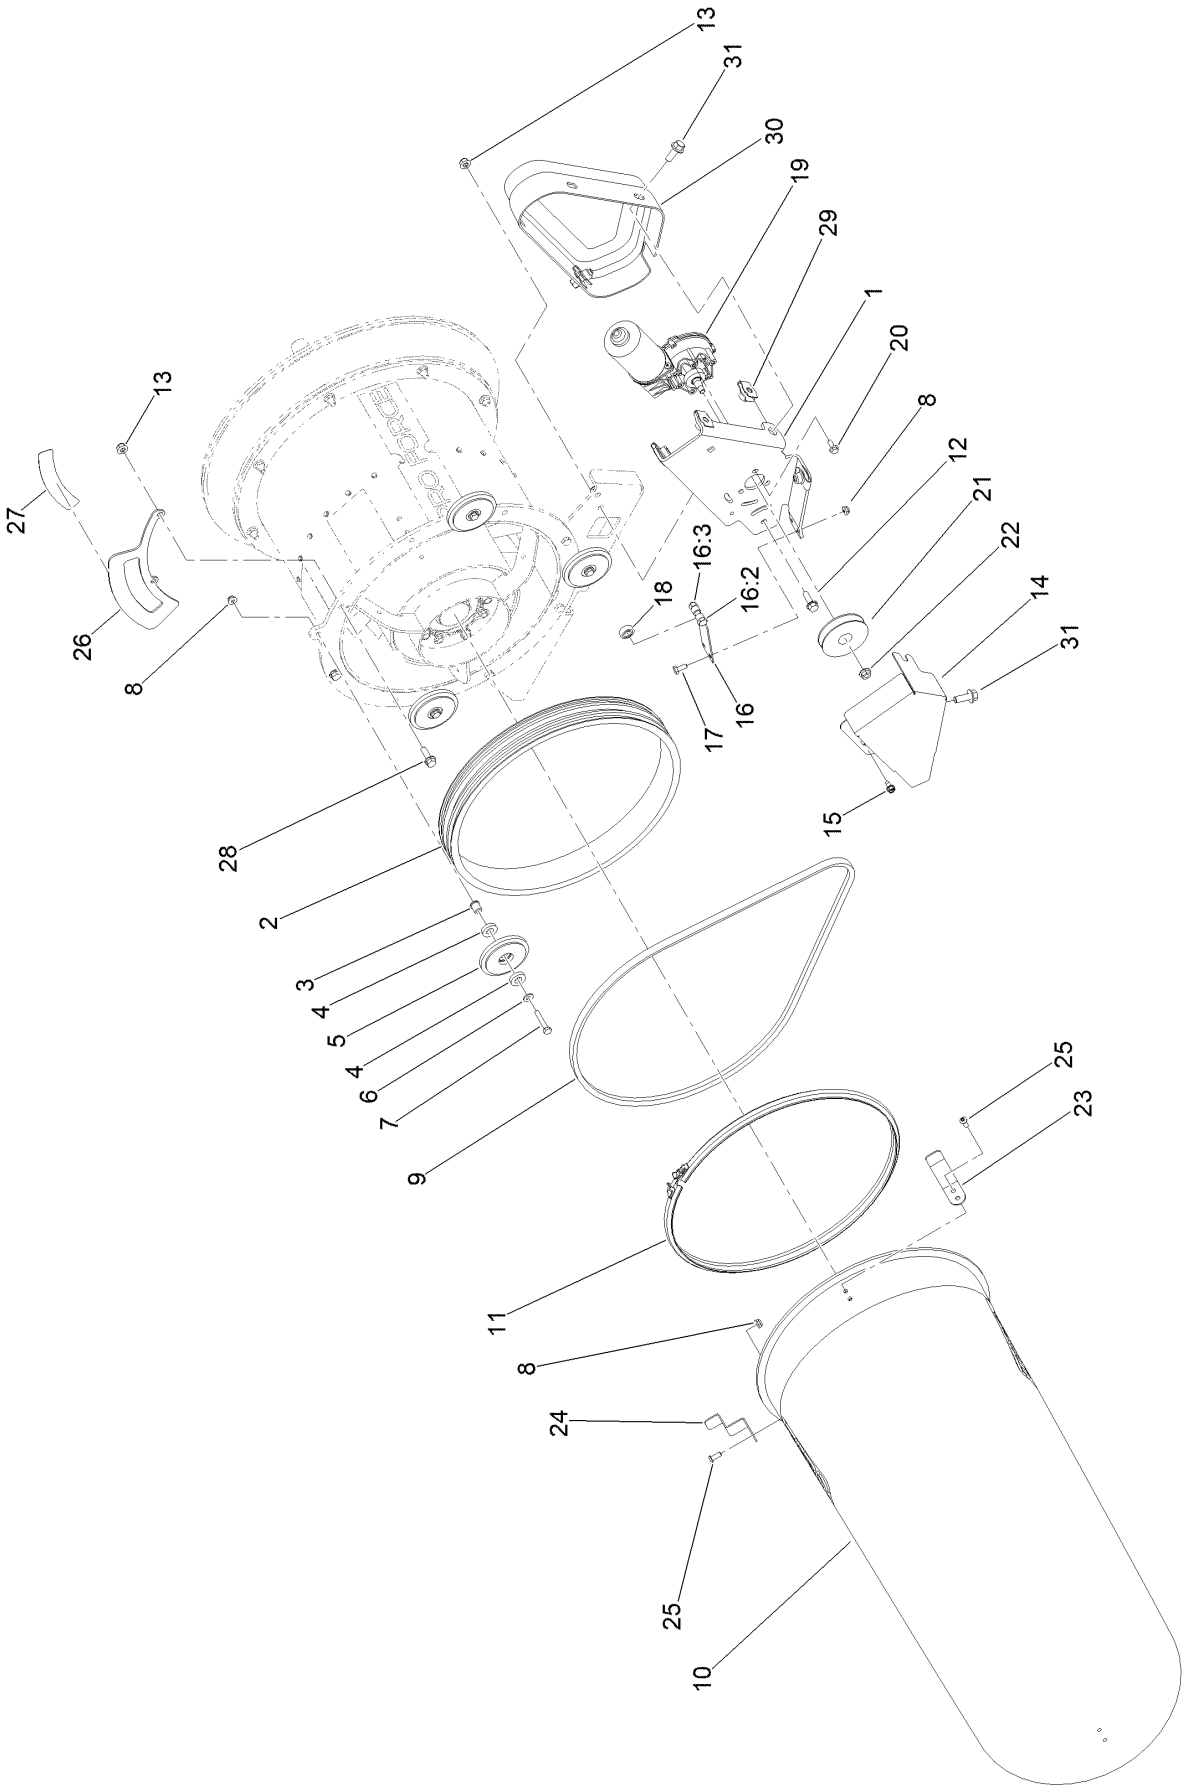

Nozzle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-0456-01	1	Brkt-Motor, Nozzle
2	112-1874	1	Pulley-Nozzle
3	140-6982	4	Spacer-Bearing
4	115-6870	8	Bearing-Ball, Sealed
5	140-6979	4	Roller-Bearing
6	120-9679	4	Washer-Flat
7	321-9	4	Screw-HH
8	104-7201	10	Nut-HF, NI
9	112-1853	1	Belt-V
10	144-3382	1	Nozzle-Toro Proforce Trailer
11	112-6899	1	Clamp-Nozzle
12	3234-29	2	Screw-HHF
13	119-4041	2	Nut-HF
14	163-0457-01	1	Cover-Pulley
15	32104-17	1	Screw-HWH
16	110-9650	1	Leaf Spring ASM
16:2	36-2250	1	Bolt-Shoulder
16:3	3296-42	1	Nut-Lock, NI
17	321-3	2	Screw-HH
18	251-259	1	Bearing-Ball
19	144-3274	1	Motor-Reversible
20	114-8414	3	Screw-HHF
21	115-5147	1	Pulley
22	98-0668	1	Nut
23	140-2220-01	1	Indicator
24	140-2220-07	1	Indicator
25	119-6906	4	Screw-HSBH
26	140-6814-03	1	Gauge-Rotation
27	140-2247	1	Decal-Position, Chute
28	3234-17	2	Screw-HHF
29	105-4886	5	Nut-Tinnerman
30	140-6848	1	Motor-Cover
31	3234-42	5	Screw-HHF


Driveshaft and Battery Assembly

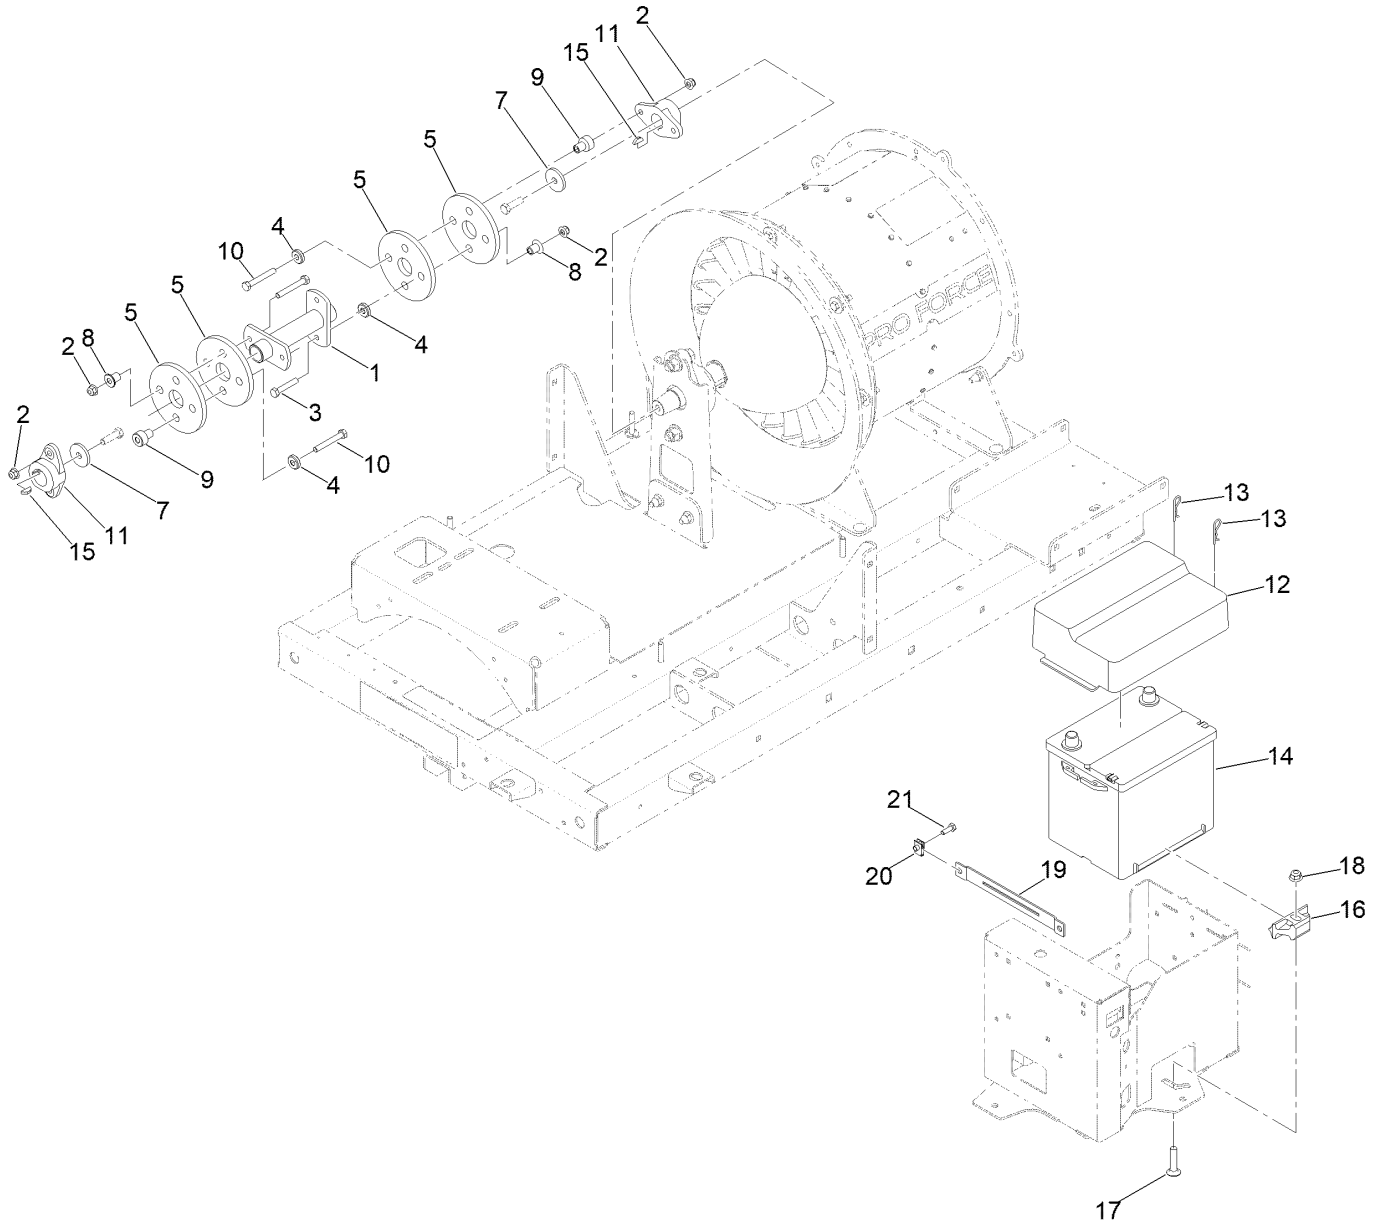

Driveshaft and Battery Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-6936-03	1	Shaft-Drive, Short
2	119-4041	8	Nut-HF
3	322-39	4	Screw-HH
4	131-6761	8	Washer
5	115-5129	4	Coupling-Rubber
7	114-2120	2	Washer
8	131-6763	4	Spacer-Coupling, Rubber
9	131-6762	4	Spacer-Coupling, Rubber
10	322-32	4	Screw-HH
11	114-2122	2	Hub-Engine
12	130-8569	1	Cover-Battery
13	3290-467	2	Pin-Hair
14	106-5187	1	Battery- Dry, 12V, 525 CCA
15	3257-5	2	Key-Woodruff
16	138-6335	1	Retainer-Battery
17	3231-5	1	Screw-CARR
18	119-4042	1	Nut-HF, NI
19	130-0932-01	1	Bracket-Cover
20	107069	2	Clip
21	321-4	2	Screw-HH


Engine, Muffler and Fuel Tank Assembly

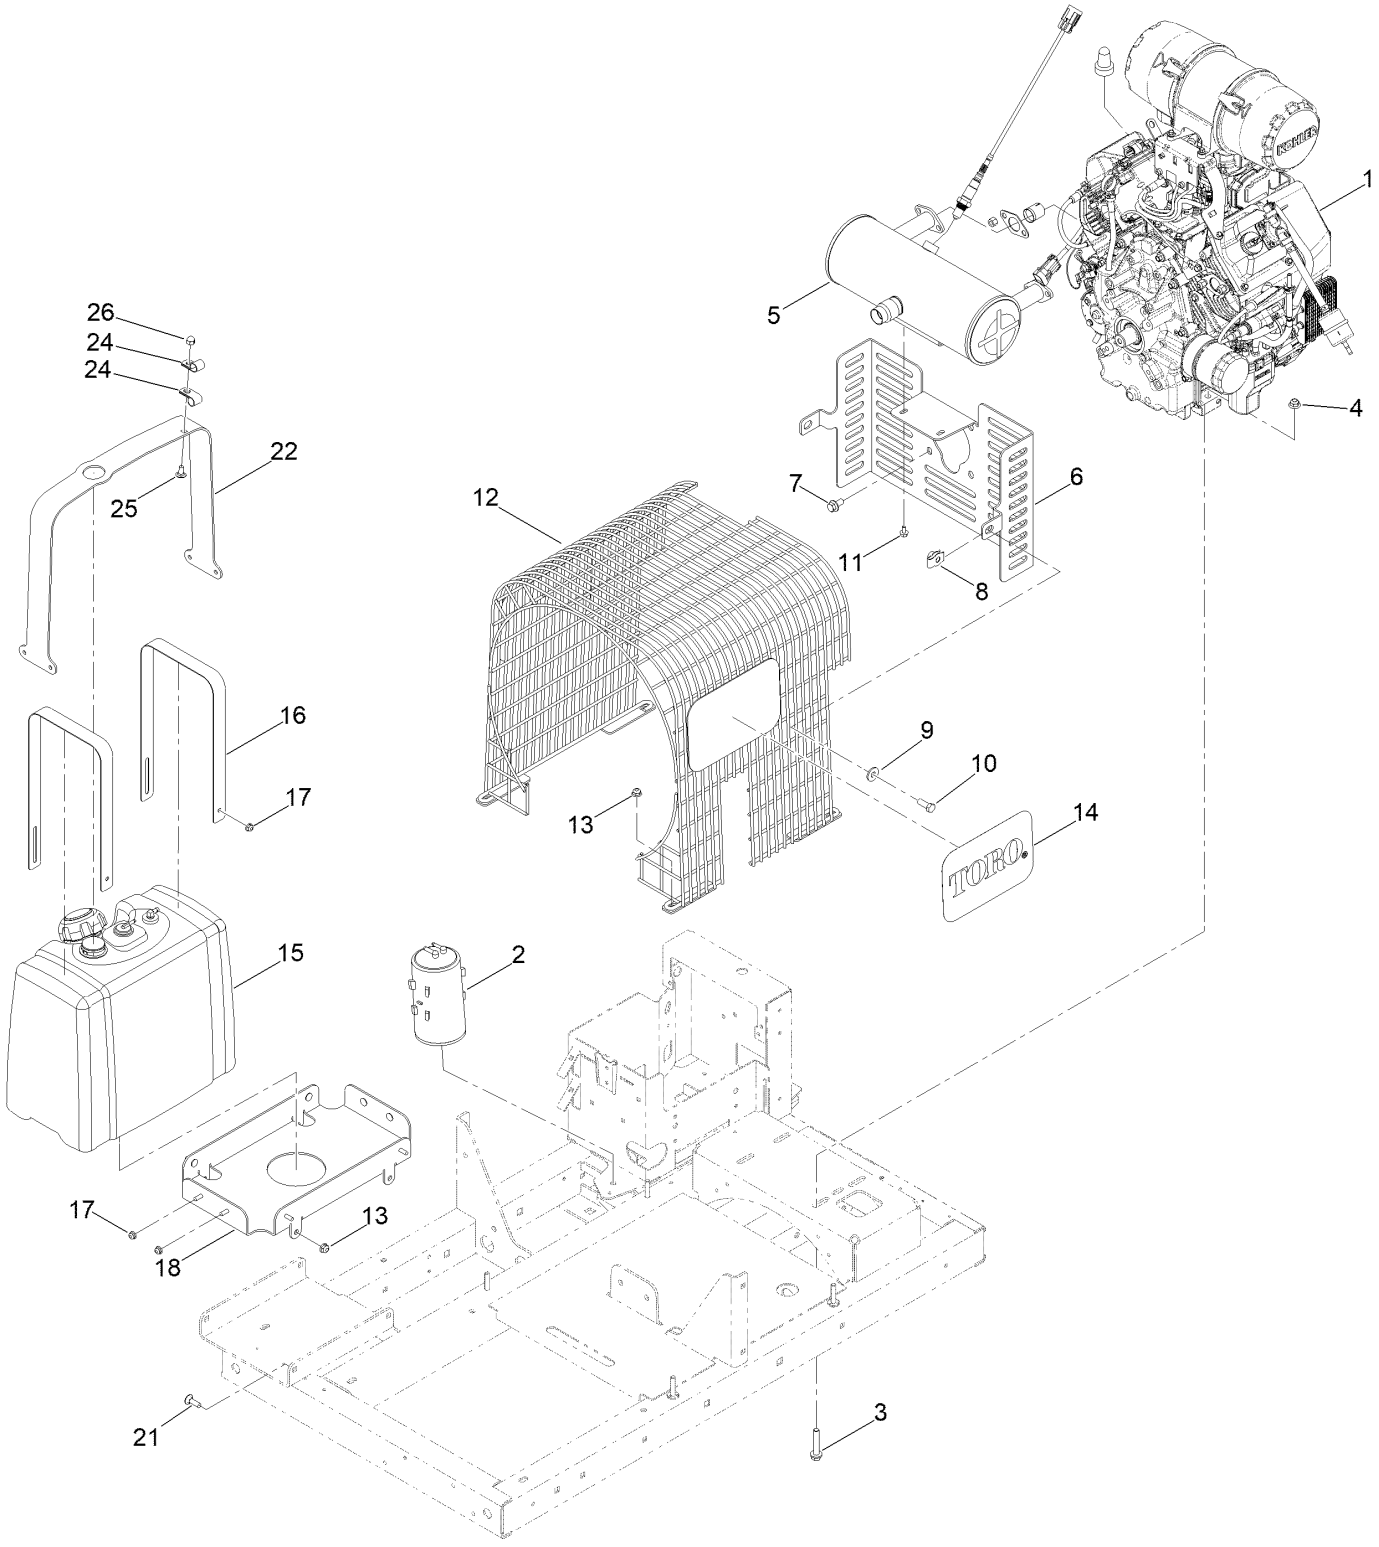

Engine, Muffler and Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-0495	1	Engine-Rehlko
2	127-8685	1	Canister-Carbon
3	66-9302	4	Screw-HHF Lock
4	119-4042	4	Nut-HF, NI
5	163-0401	1	Muffler
6	161-4854-03	1	Mount-Muffler
7	110-1718	4	Screw-HHSF,Patch
8	105-4886	2	Nut-Tinnerman
9	80-6990	2	Washer-Hardened
10	323-6	2	Screw-HH
11	33103-012	2	Screw-HHF
12	112-6876	1	Grill-Top
13	119-4041	8	Nut-HF
14	92-1242	2	Decal
15	115-9048	1	Fuel Tank ASM
16	119-6285	2	Strap-Hold Down, Tank
17	104-7201	8	Nut-HF, NI
18	145-7461-01	1	Mount-Tank, 5GA
21	3230-2	4	Bolt-CARR
22	144-3629-03	1	Guard-Gauges
24	2412-138	2	R-Clamp
25	3230-18	1	Screw-CARR
26	137-4808	1	Nut-Acorn


Fuel Tank Assembly No. 115-9048

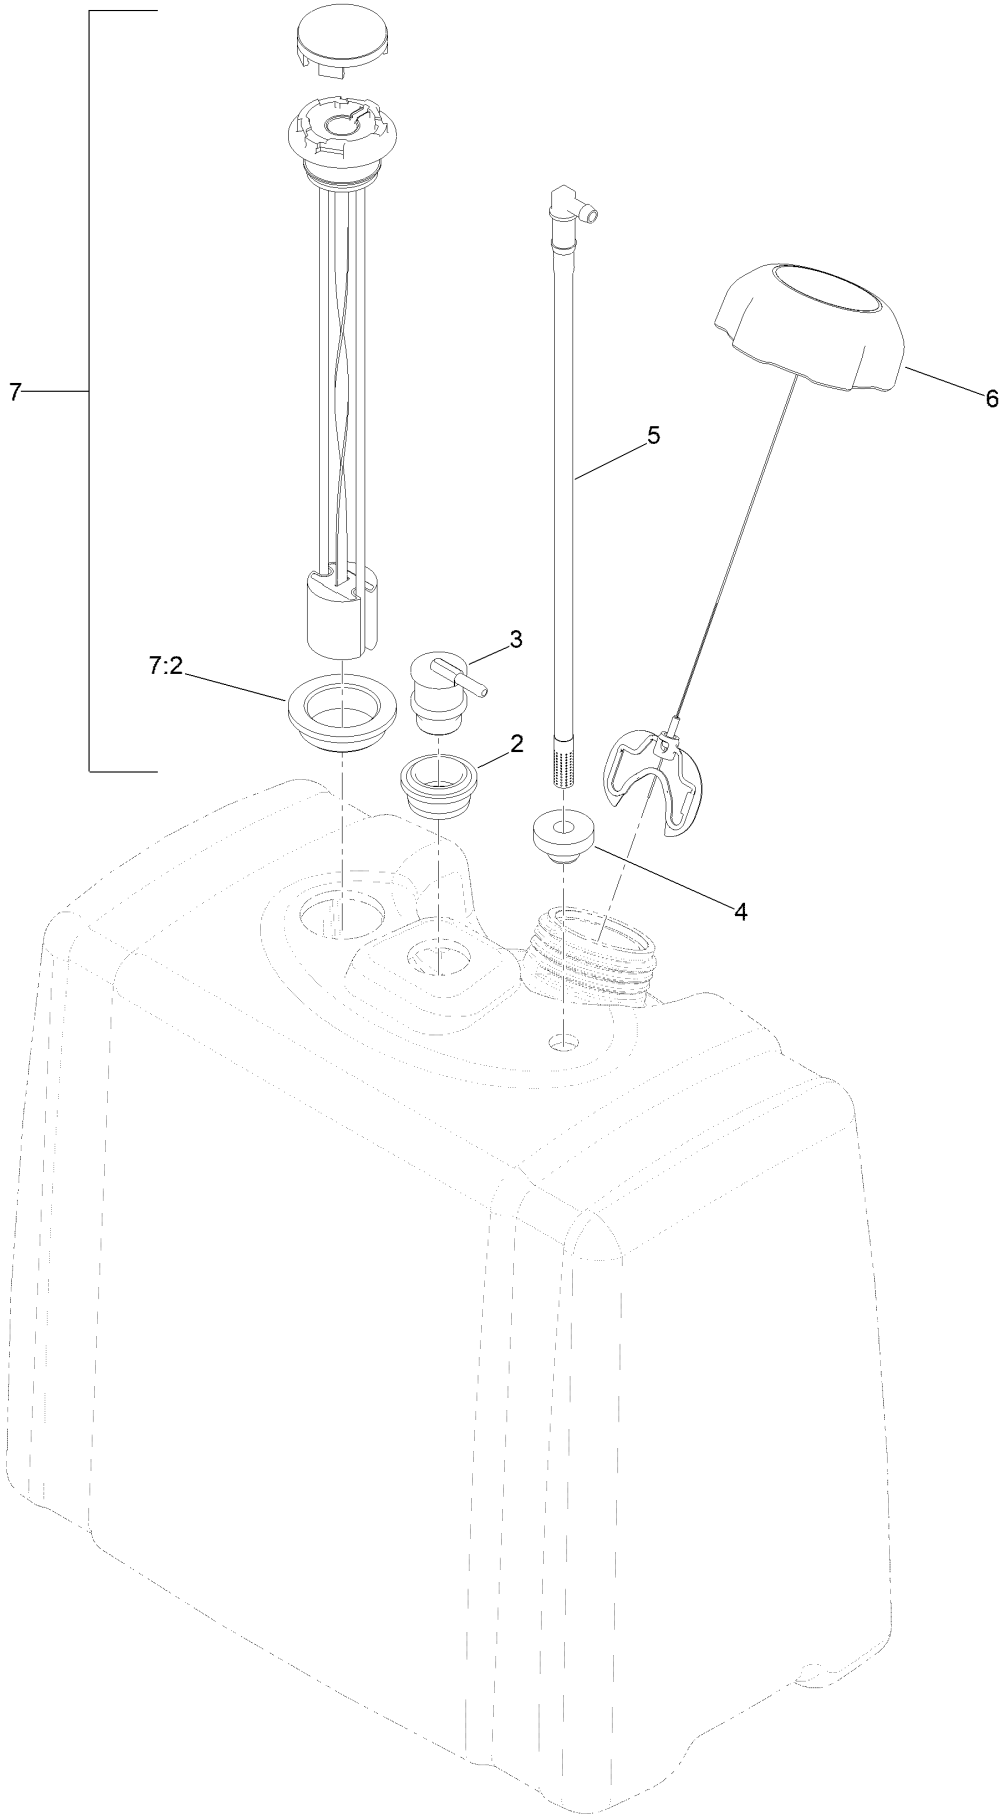

Fuel Tank Assembly No. 115-9048 (continued)

Ref.	Part Number	Qty.	Description
2	114-0284	1	Grommet
3	114-0285	1	Valve-Rollover
4	46-6560	1	Bushing
5	115-9044	1	Pipe-Stand
6	137-4127	1	Cap-Fuel
7	119-0509	1	Gauge ASM
7:2	119-0508	1	Seal


Fuel Delivery Assembly

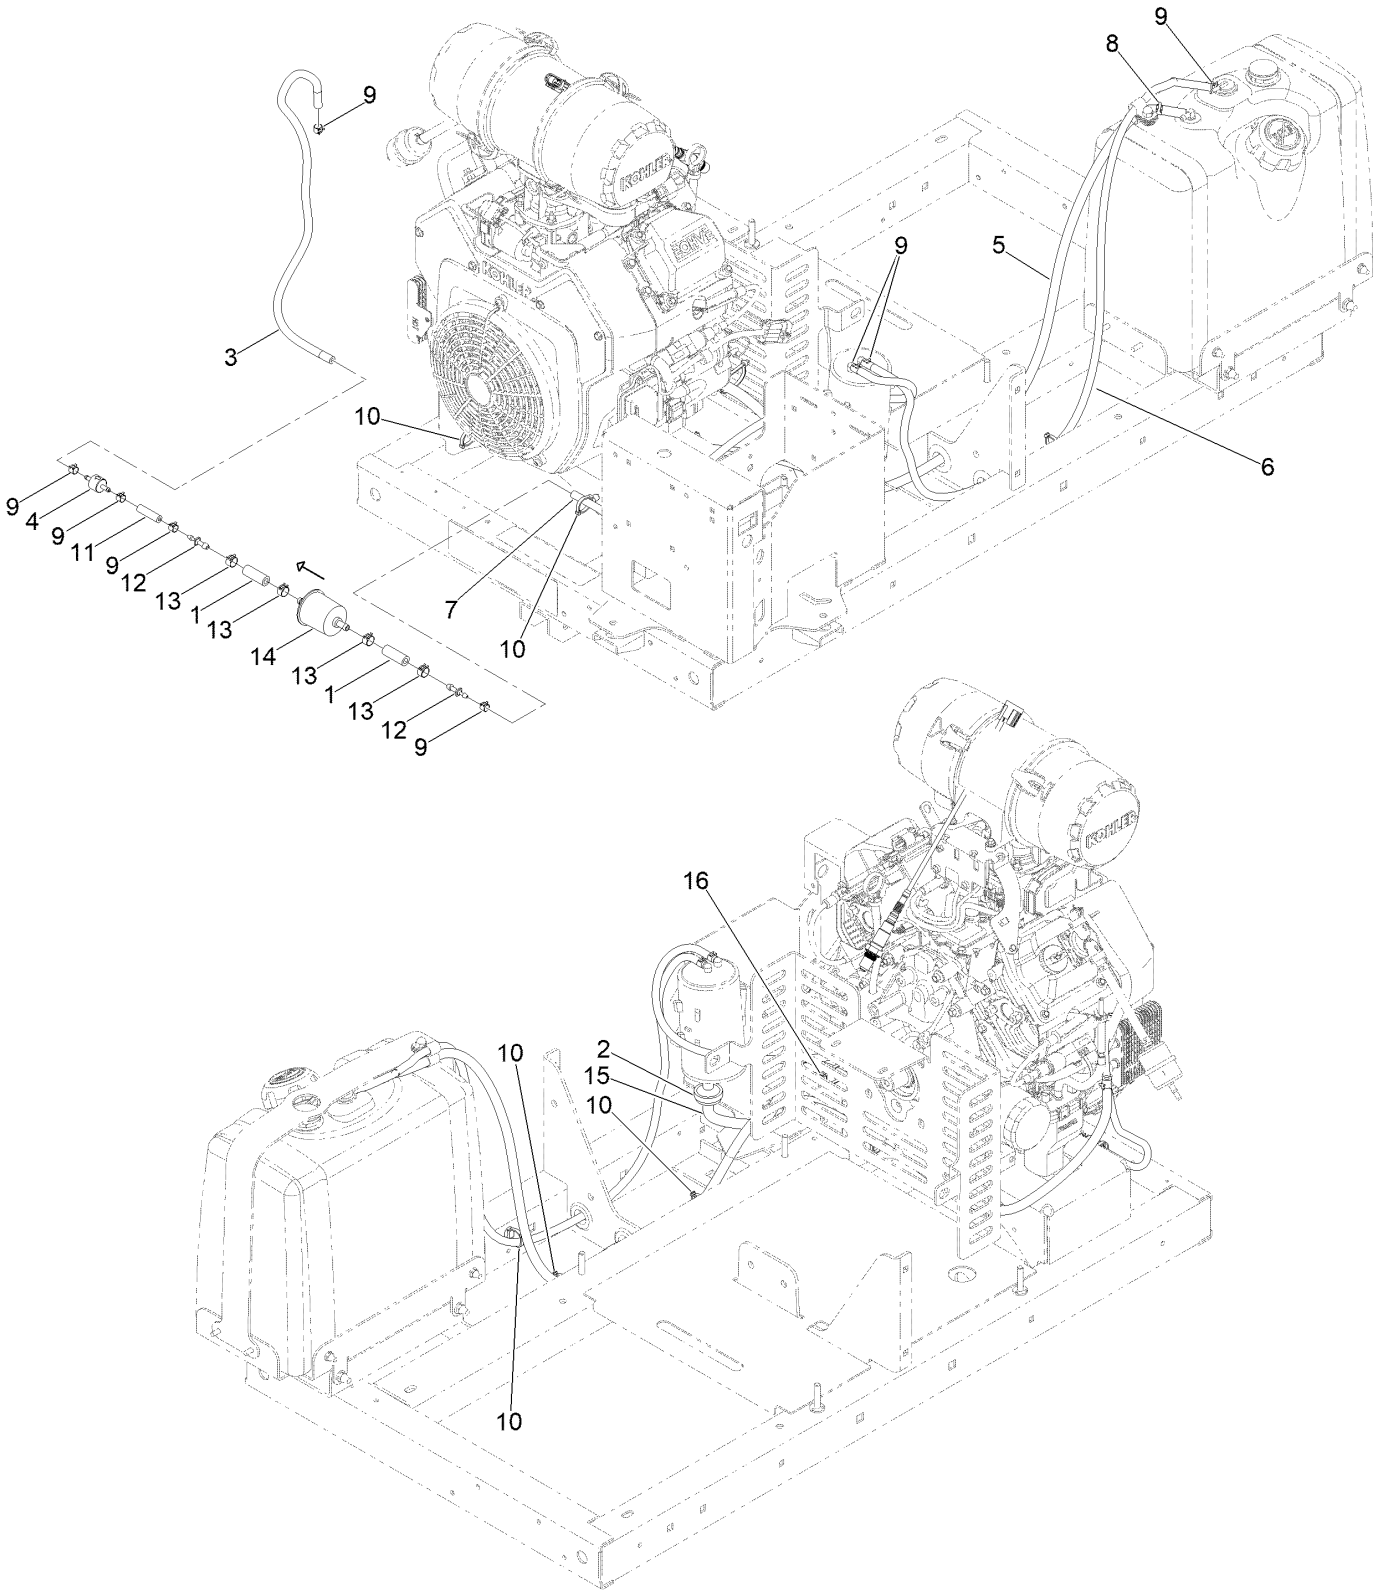

Fuel Delivery Assembly (continued)

Ref.	Part Number	Qty.	Description
1	106-5317	3	Hose-Fuel
2	115-7854	1	Filter-Fuel, Inline
3	143-2545	1	Hose-Fuel
4	133-8499	1	Valve-Check, Vacuum
5	163-0402	1	Hose-Fuel
6	119-6073	1	Hose-Fuel
7	110-3254	1	Hose-Fuel
8	2412-98	2	Clamp-Hose
9	2412-80	8	Clamp-Hose
10	32180-030	7	Clip-Tie
11	119-8561	1	Hose-Fuel
12	106-8150	2	Fitting-Straight
13	92-2379	4	Clamp-Hose
14	120-2235	1	Filter-Fuel
15	110-4109	1	Hose-Fuel
16	3290-378	1	Tie-Cable


Electrical System Assembly

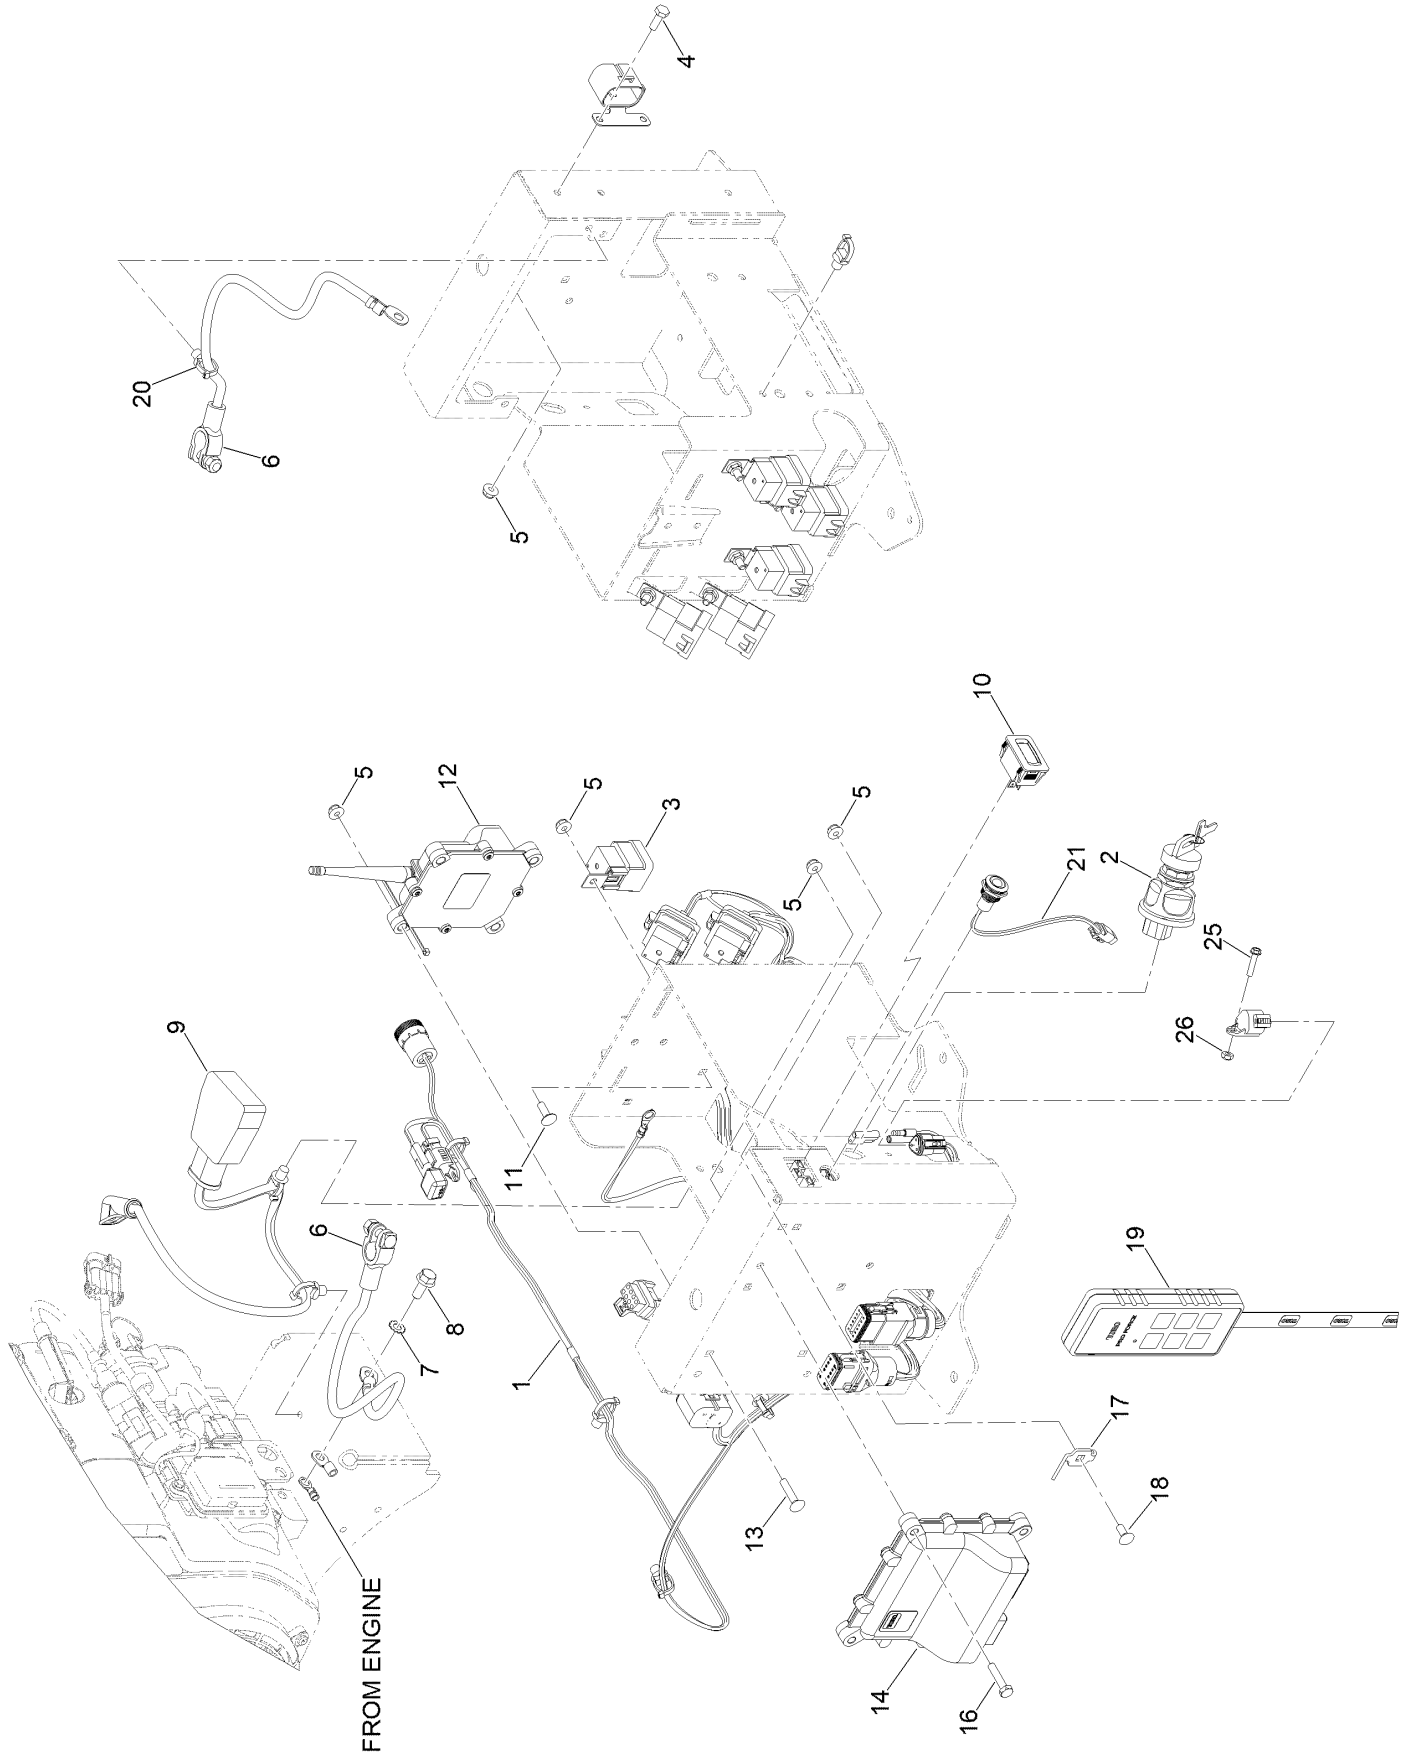

Electrical System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	122-3530	1	Harness-Wire, Proforce Blower Rf2Can
2	121-5159	1	Switch-Ignition
3	99-7430	5	Relay-Mini
4	321-4	2	Screw-HH
5	104-7201	16	Nut-HF, NI
6	125-5966	1	Cable-Battery, Negative
7	3255-8	1	Washer-Lock
8	33104-020	1	Screw-HHF
9	122-0629	1	Cable-Battery, Positive
10	120-2244	1	Hourmeter
11	1-807512	5	Bolt-CARR
12	132-9600	1	Controller
13	3229-3	4	Screw-CARR
14	125-1360	1	Controller
16	321-8	4	Screw-HH
17	121-2761	1	Mount-Transmitter
18	3229-11	1	Screw-CARR
19	125-1270	1	Remote ASM
20	32180-030	3	Clip-Tie
21	122-0630	1	Red LED Indicator Lamp ASM
25	106-9169	1	Screw-HWH
26	3296-12	1	Nut-Lock, NI


Wire Harness Assembly No. 122-3530

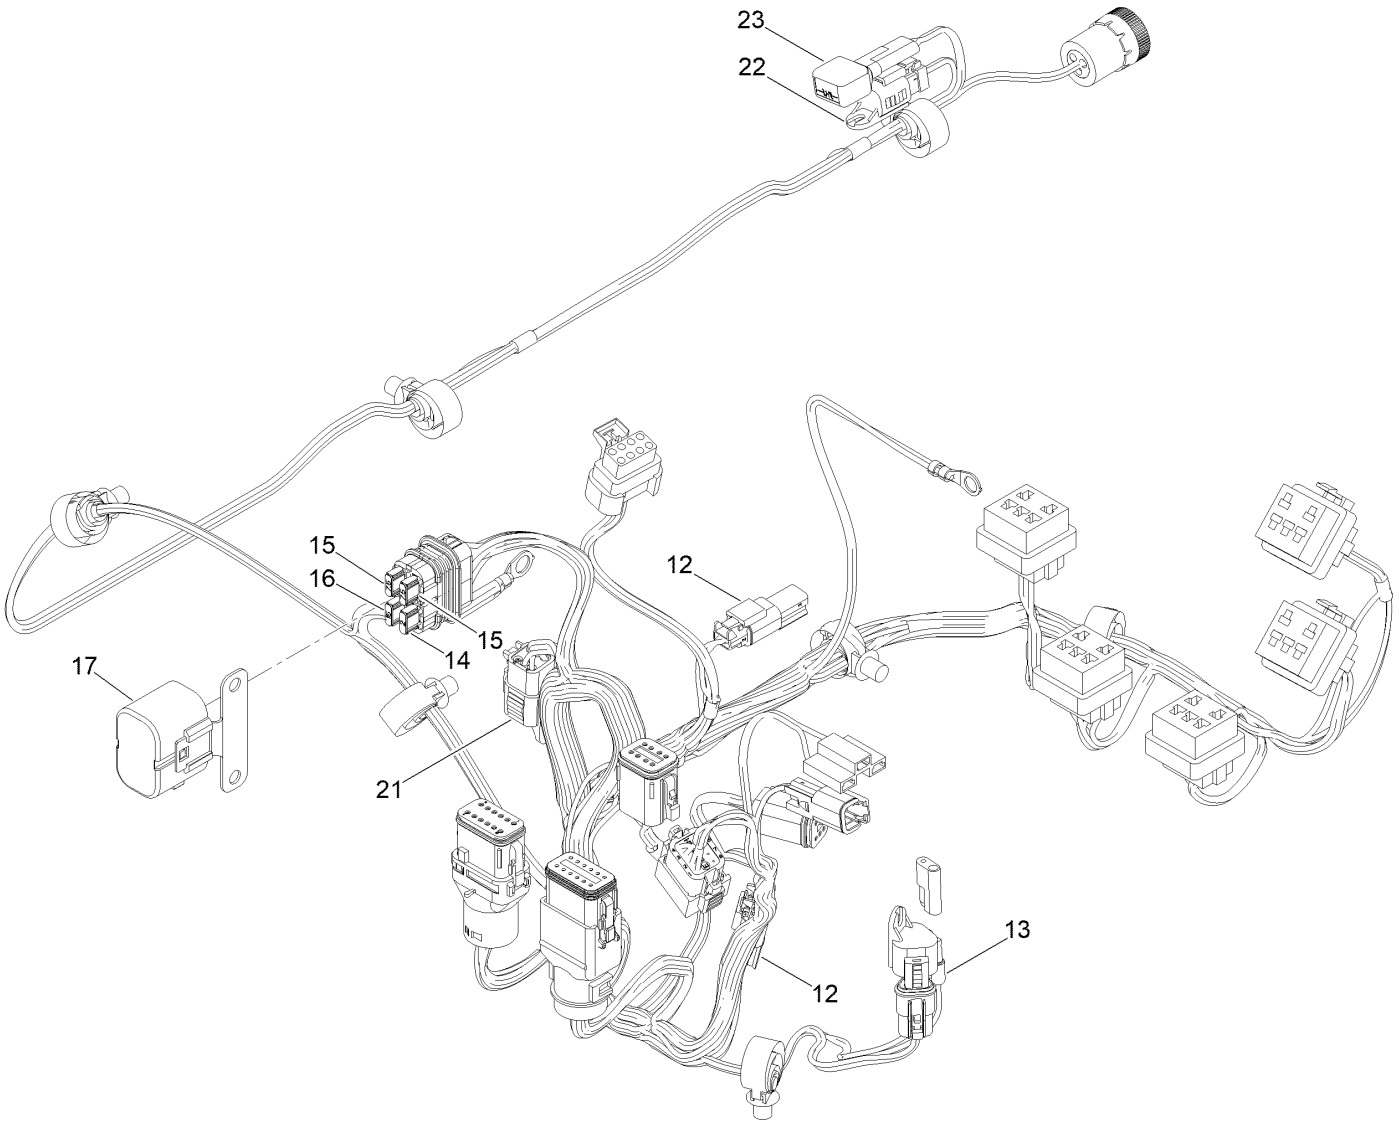

Wire Harness Assembly No. 122-3530 (continued)

Ref.	Part Number	Qty.	Description
12	32180-282	2	Conn, Res, 120 Ohm
13	32180-089	1	Cap-Plug, 3 Way
14	121-8861	1	Fuse-Mini Blade, 2 Amp
15	121-8865	2	Fuse-Mini Blade, 7.5 Amp
16	121-8867	1	Fuse-Mini Blade, 15 Amp
17	32180-179	1	Cover-Bussman
21	32180-156	1	Cap-Plug, 6 Way
22	32180-091	1	Cap-Dust, 2 Way
23	108-9493	1	Diode-Tvs


Ignition Switch Assembly No. 121-5159

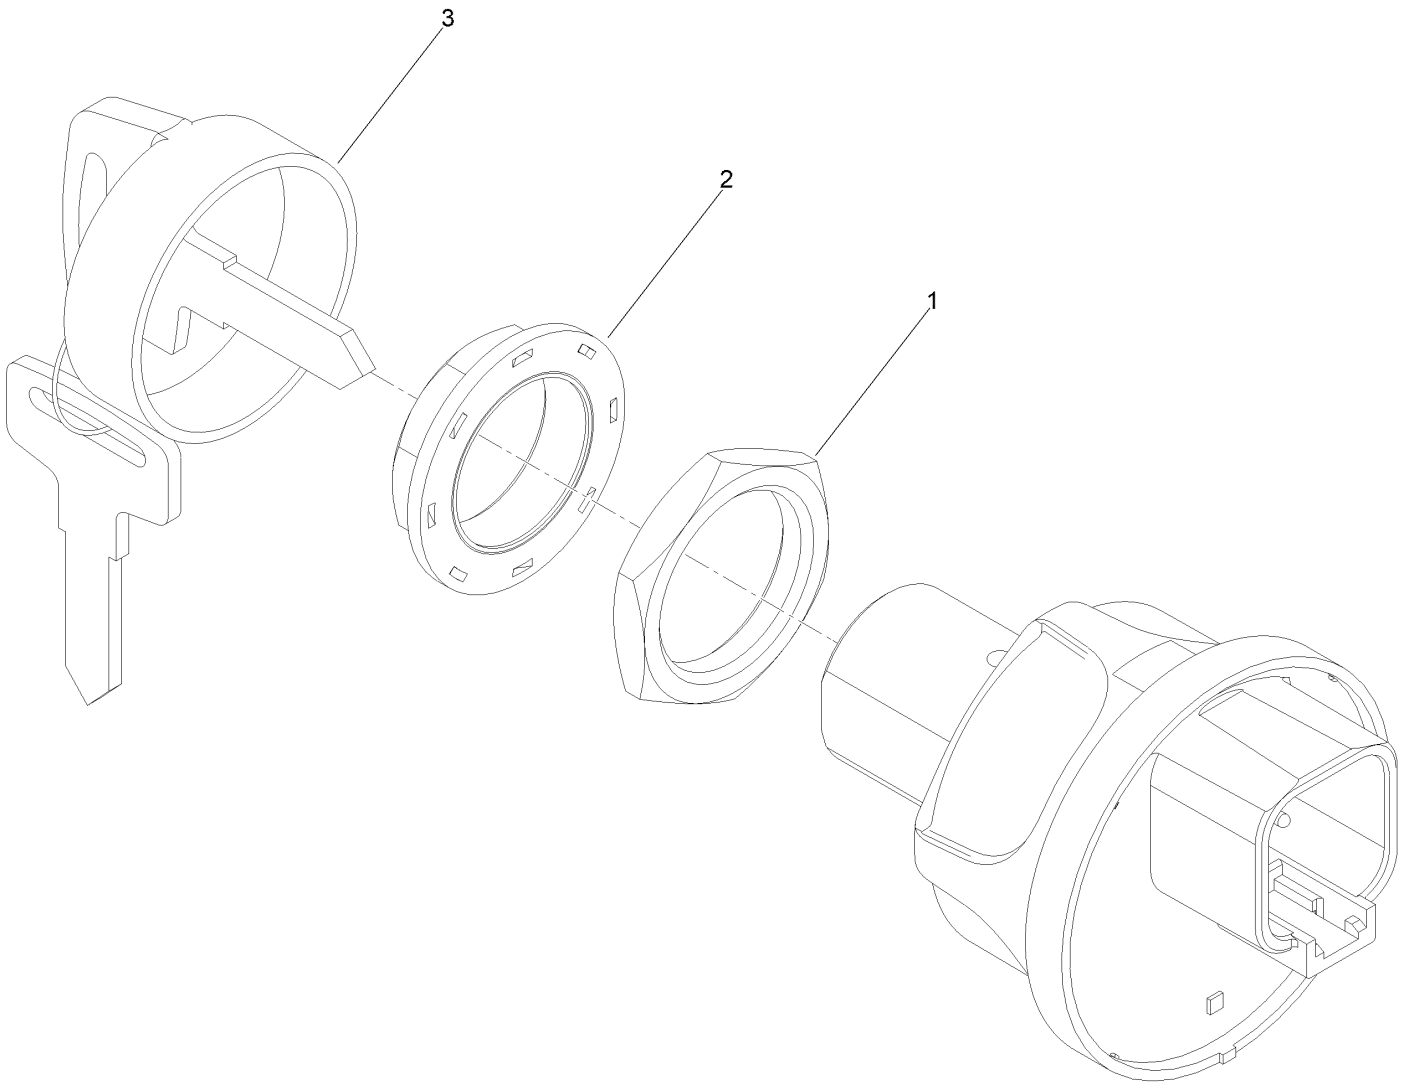

Ignition Switch Assembly No. 121-5159 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	121-5160	1	Nut-Hex
2	122-2704	1	Nut-Face, M22 (Plastic)
3	121-5162	1	Set-Key, Ignition


Controller Assembly No. 132-9600

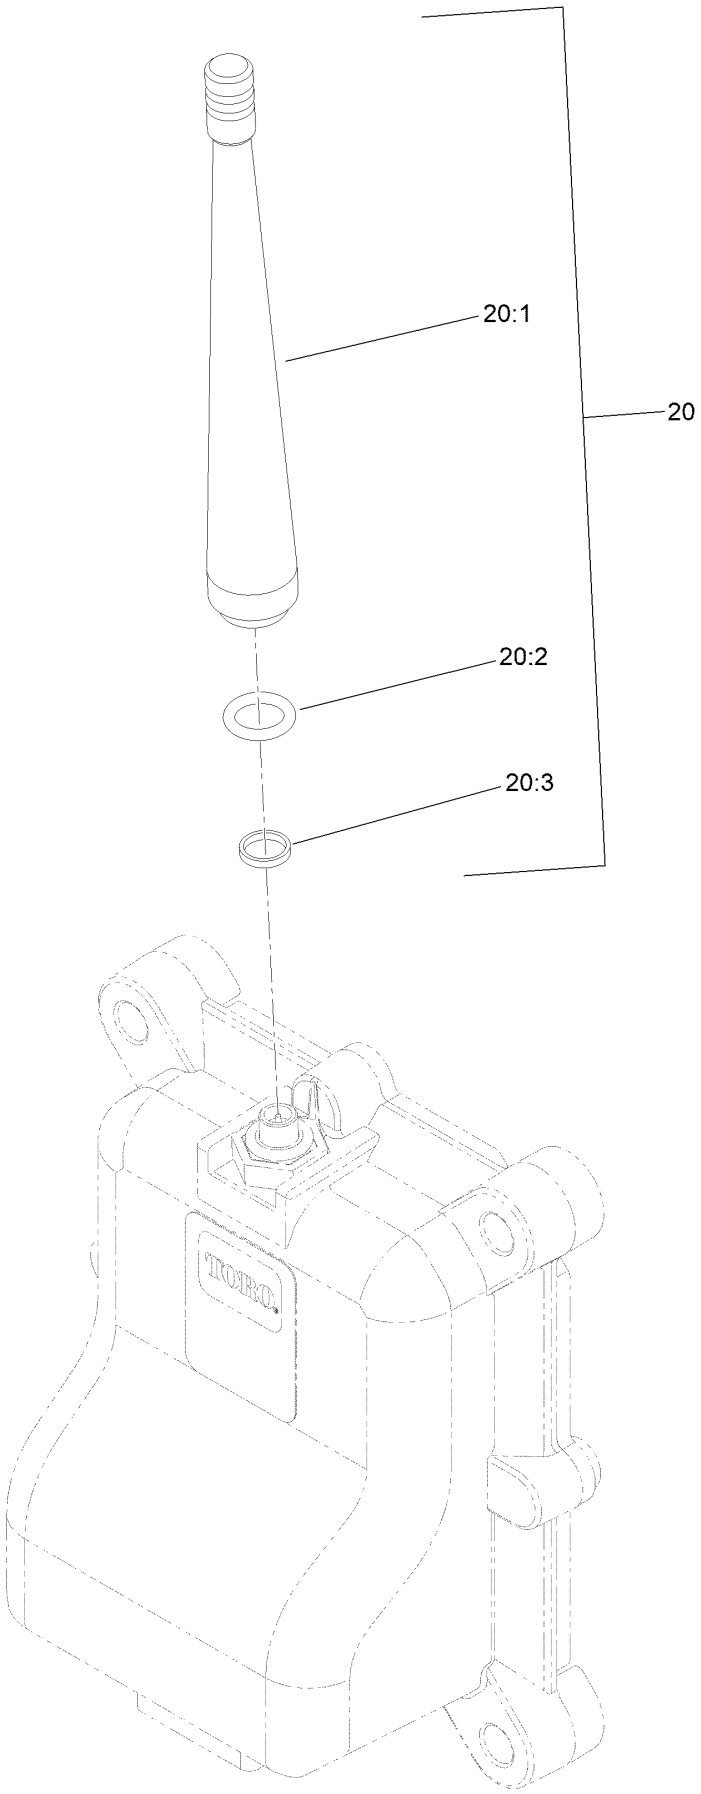

Controller Assembly No. 132-9600 (continued)

Ref.	Part Number	Qty.	Description
20	140-6605	1	Antenna Service Kit
20:1	125-1567	1	Antenna
20:2	127-2323	1	O-Ring
20:3	127-2506	1	Spacer


Remote Assembly No. 125-1270

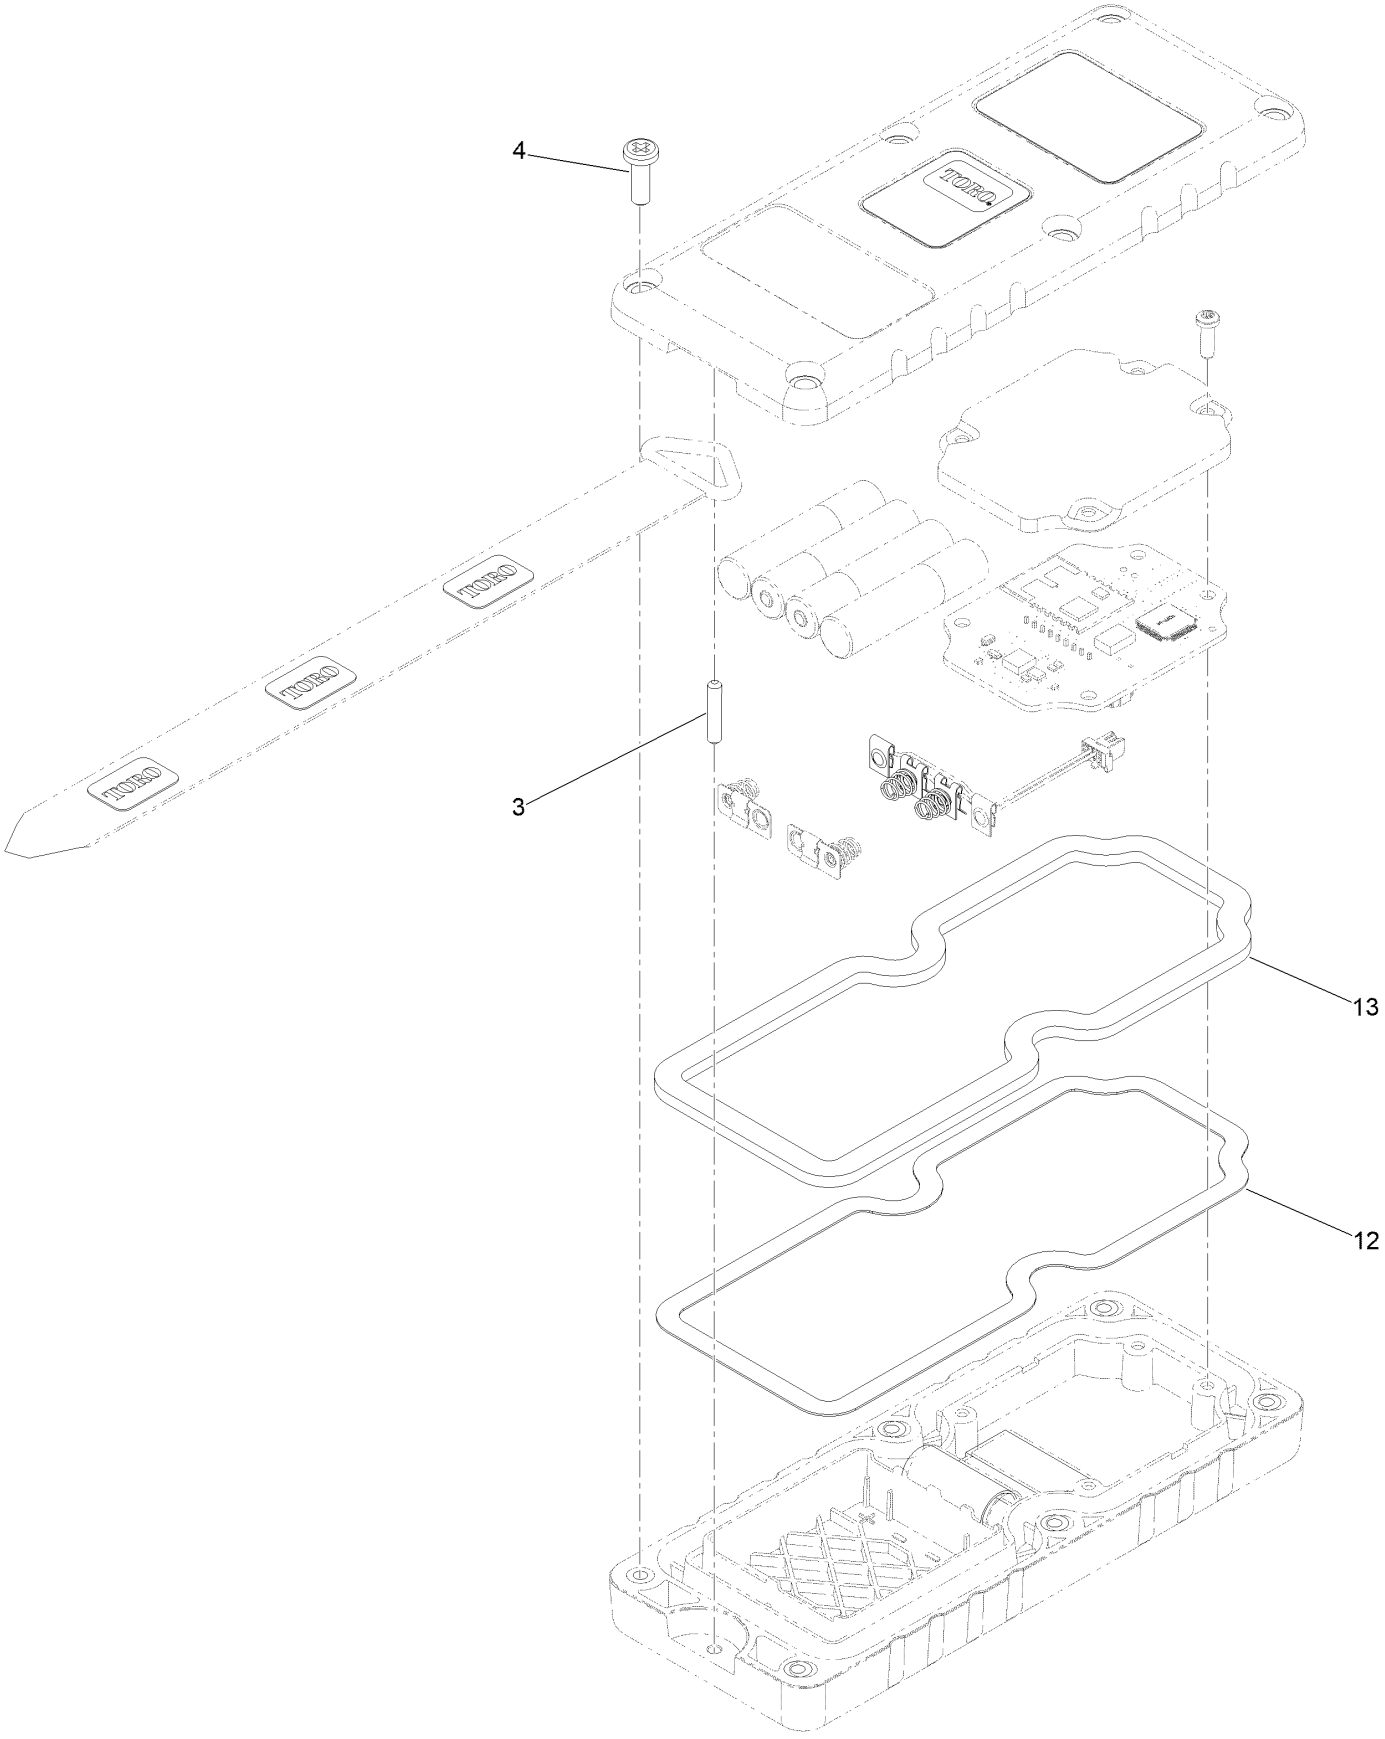

Remote Assembly No. 125-1270 (continued)

Ref.	Part Number	Qty.	Description
3	121-2906	1	Pin-Lanyard
4	121-2908	6	Screw-PPH
12	125-1294	1	Backer-Gasket
13	163-0307	1	Gasket-HH

Red LED Indicator Lamp Assembly No. 122-0630

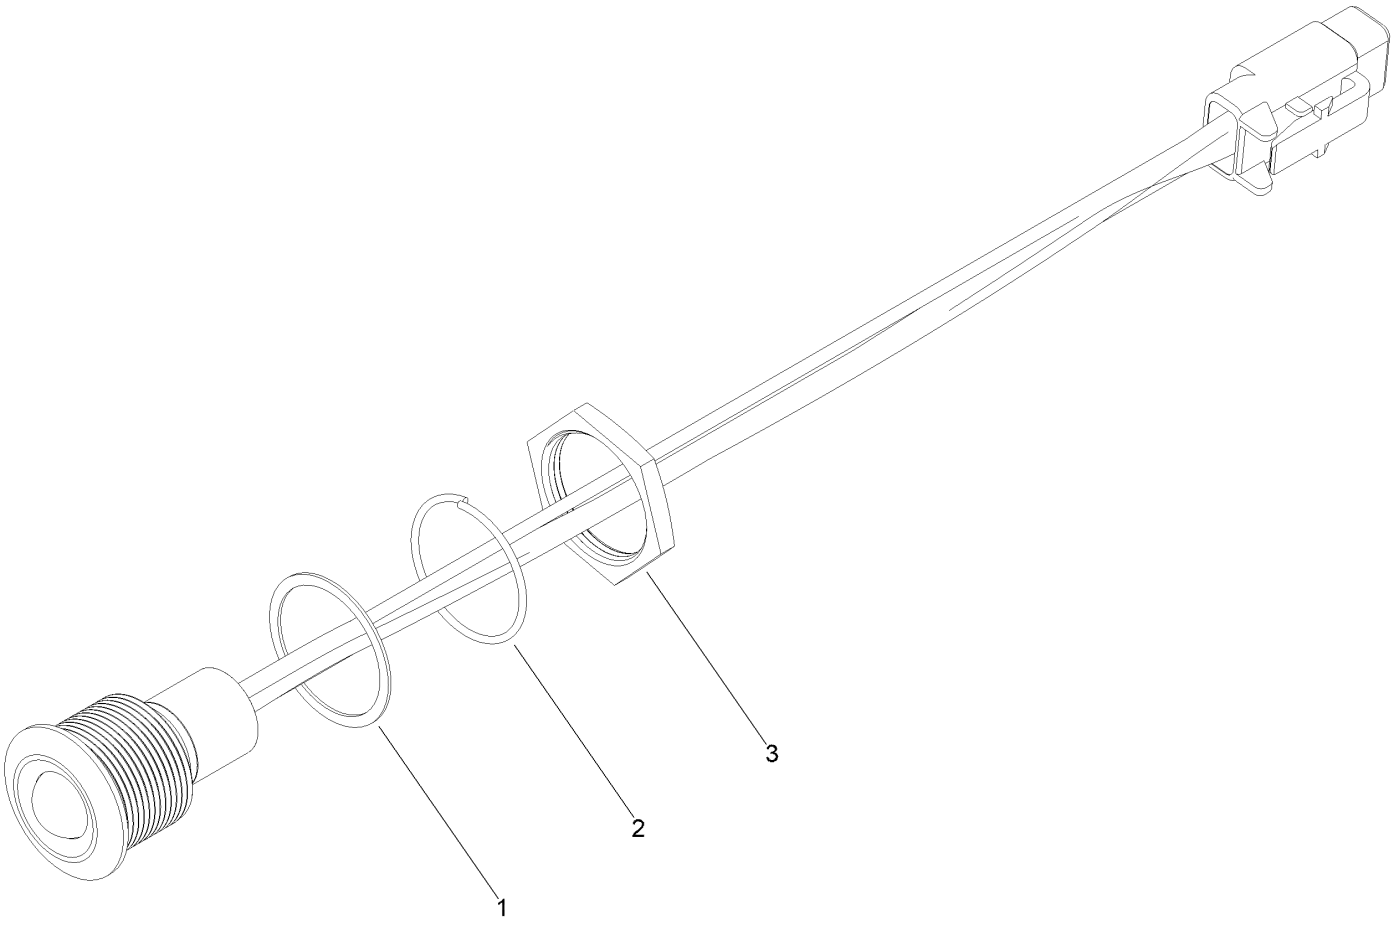

Red LED Indicator Lamp Assembly No. 122-0630 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	122-0634	1	Gasket-LED
2	122-0633	1	Washer-Locking
3	122-0632	1	Nut-Fixing

Attachments and Accessories

For 44556 — Pro Force Debris Blower

Product Name	Model/Part
LED Light Kit	44559
10 Gallon Kit, Pro Force Debris Blower	130-4371
Safety Chain Kit	139-3179
Alignment Tool Assembly	161-7891
Tapered Nozzle Kit	119-6280
Rectangular Nozzle Kit	119-6281
Telematics Kit	163-4515
Telematics Lite Kit	163-4516
External Antenna Kit, Wireless Hourmeter System	115-9524
Base Station Kit, Wireless Hourmeter System	115-9542
Repeater Kit, Wireless Hourmeter System	115-9543
Semi-Gloss Black Spray Paint	361-9
New Red Paint - Gallon	361-11
Wireless Hourmeter	115-4754
Toro Red 12oz Aerosol Can	361-10

Notes:



Count on it.