Form Number 3350-739

Mid-Size ProLine, Pistol Grip, Hydro Drive
15 HP with 36in Side Discharge Mower

Model No. 30433 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine Installation Assembly	3
Fuel Tank Assembly	4
Hydraulic Pump Assembly No. 106-5489	5
Hydraulic Pump Assembly No. 106-5490	6
Wheel and Drive Assembly	7
Hydraulic Wheel Motor Assembly No. 104-1171	8
Lower Control Assembly	9
Hydraulic Plumbing Assembly	10
Upper Control Assembly	11
Control Panel Assembly	12
Parking Brake Assembly	13
Carrier Frame Assembly	14
Spindle, Pulley and Belt Assembly	15
Spindle Assembly No. 106-0785	16
Outer Spindle Assembly 106-0787	17
Deck Assembly	18
Deflector Assembly No. 107-4194	19
Drive Belt and Tensioner Assembly	20
Crankshaft Assembly Kohler CV15T-41629	21
Crankcase Assembly Kohler CV15T-41629	22
Oil Pan/Lubrication Assembly Kohler CV15T-41629	23
Head/Valve/Breather Assembly Kohler CV15T-41629	24
Ignition/Electrical Assembly Kohler CV15T-41629	25
Blower Housing and Baffle Assembly Kohler CV15T-41629	26
Starting System Assembly Kohler CV15T-41629	27
Fuel System Assembly Kohler CV15T-41629	28
Engine Control Assembly Kohler CV15T-41629	29
Air Intake/Filtration Assembly Kohler CV15T-41629	30
Exhaust Assembly Kohler CV15T-41629	31
Attachments and Accessories List	32


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PPH. . . . . phillips pan head
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
ROPS. . . . . roll over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard

Footnotes


❶ Not illustrated
❷ Not serviced separately
❸ Obtain Parts From Your Local Kohler Dealer

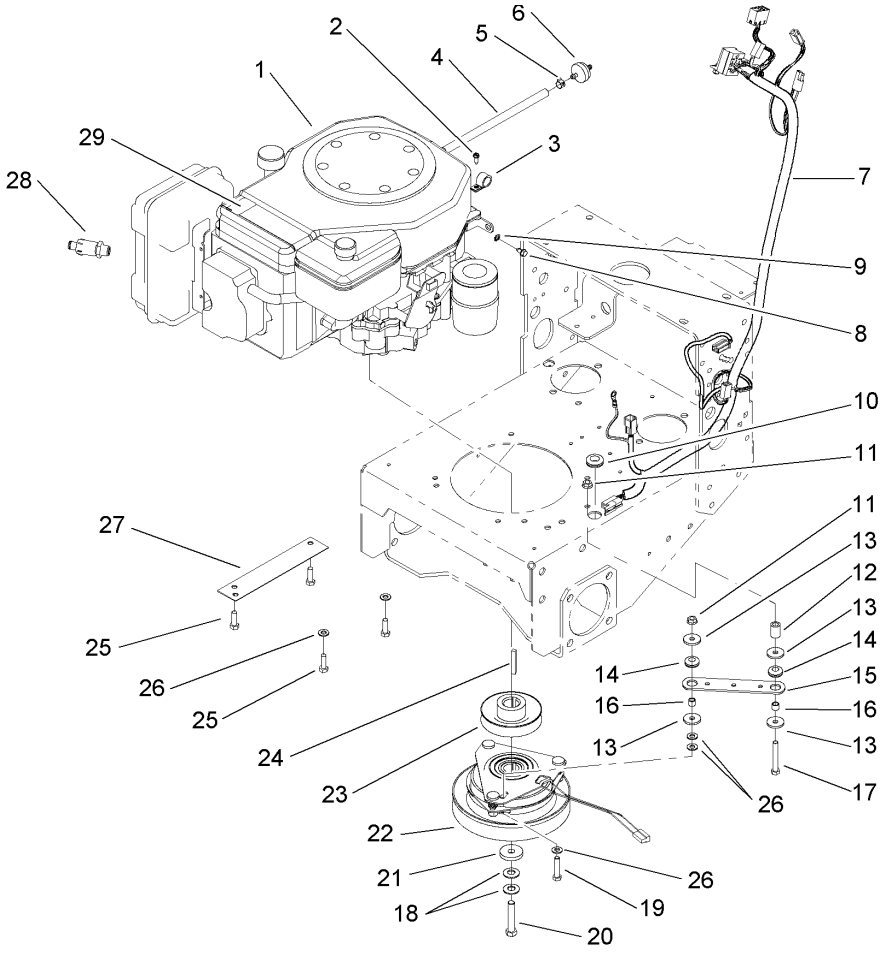

Engine Installation Assembly

Ref	Part No.	Qty.	Description
❷1		1	Engine-Kohler, Cv15t-41629
2	32144-19	1	Screw-SHWH
3	2412-87	1	Clamp-Cable
4	47-2982	1	Hose-Fuel
5	2412-98	2	Clamp
6	56-6360	1	Filter-Fuel
7	106-8782	1	Harness-Wire
8	33104-025	1	Screw-HHF
9	3255-8	1	Washer-Lock
10	237-124	1	Grommet
11	32128-20	2	Nut-HF
12	104-6373	1	Tube-Retainer
13	1-613235	4	Washer
14	1-633630	2	Grommet-Brake
15	1-633543-03	1	Strap-Clutch, Brake
16	1-633545	2	Spacer
17	322-11	1	Screw-HH
18	1-603610	2	Washer-Spring
19	322-7	1	Screw-HH
20	3212-9	1	Screw-HH
21	107-4136	1	Washer
22	105-2635	1	Clutch / Brake
23	44-5940	1	Pulley
24	608006	1	Key-Square


Ref	Part No.	Qty.	Description
25	33114-025	4	Screw-HH
26	3256-23	5	Washer-Flat
27	94-5847-01	1	Cover-Pulley
28	92-6877	1	Valve-Drain, Oil
29	106-0699	1	Decal-Warning, Hot Surfaces
❶99	103-1964	1	Hose-Drain, Oil

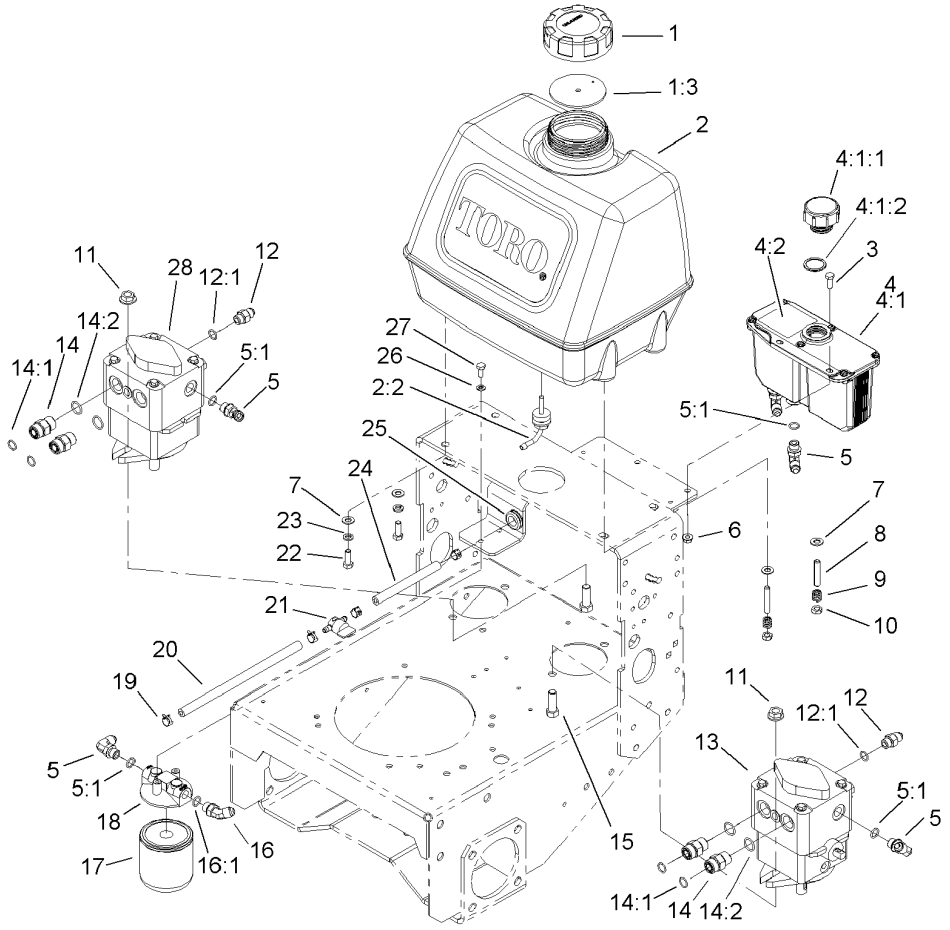

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	321-4	2	Screw-HH
4	103-1947	1	HYD Reservoir ASM
❷4:1		1	Reservoir-HYD
4:1:1	103-1948	1	Cap-Reservoir, HYD
4:1:2	103-1949	1	Gasket-Cap
4:2	1-523552	1	Decal-Tank, HYD
5	353-374	5	Elbow-90 DEG
5:1	237-42	1	O-Ring
6	32128-33	2	Nut-HF
7	3256-23	4	Washer-Flat
8	104-8121	2	Stud-Threaded
9	1-633349	2	Spring-Tank, Fuel
10	3296-47	2	Nut-Lock, NI
11	32128-42	4	Nut-HF
12	353-384	2	Fitting-Straight
12:1	237-42	1	O-Ring
13	106-5490	1	Pump-HYD
14	340-4	4	Fitting-Hyd, Straight
14:1	237-30	1	O-Ring
14:2	237-79	1	O-Ring


Ref	Part No.	Qty.	Description
15	324-5	4	Screw-HH
16	353-212	1	Elbow
16:1	237-42	1	O-Ring
17	1-633752	1	Filter-Hyd, Winter
17	1-633750	1	Filter-HYD
18	104-7836	1	Head-Filter
19	2412-98	4	Clamp
20	47-2982	1	Hose-Fuel
21	1-603770	1	Valve-Fuel
22	322-4	2	Screw-HH
23	3253-4	2	Washer-Lock
24	47-2966	1	Hose-Fuel
25	237-124	1	Grommet
26	3253-3	2	Washer-Lock
27	321-3	2	Screw-HH
28	106-5489	1	Pump-HYD

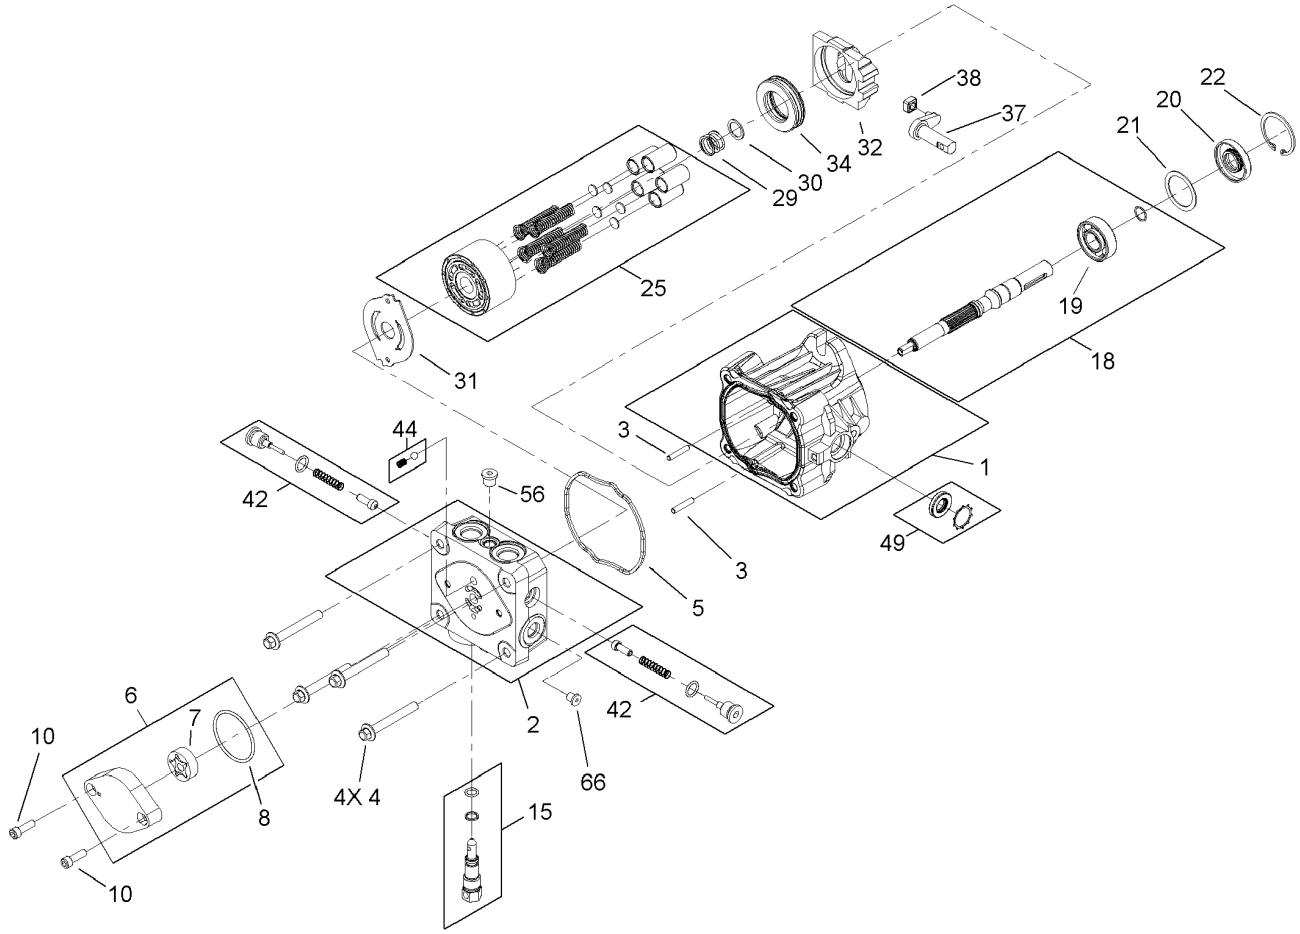

Hydraulic Pump Assembly No. 106-5489

Ref	Part No.	Qty.	Description
1	106-8751	1	Housing Kit
2	106-8752	1	End Cap Kit (W/poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	106-8758	2	Screw-HSH
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	104-2106	1	Cylinder Block ASM
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	94-1909	1	Arm-Trunion
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/poppet)


Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal/retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
❶99	105-6184	1	Seal Kit

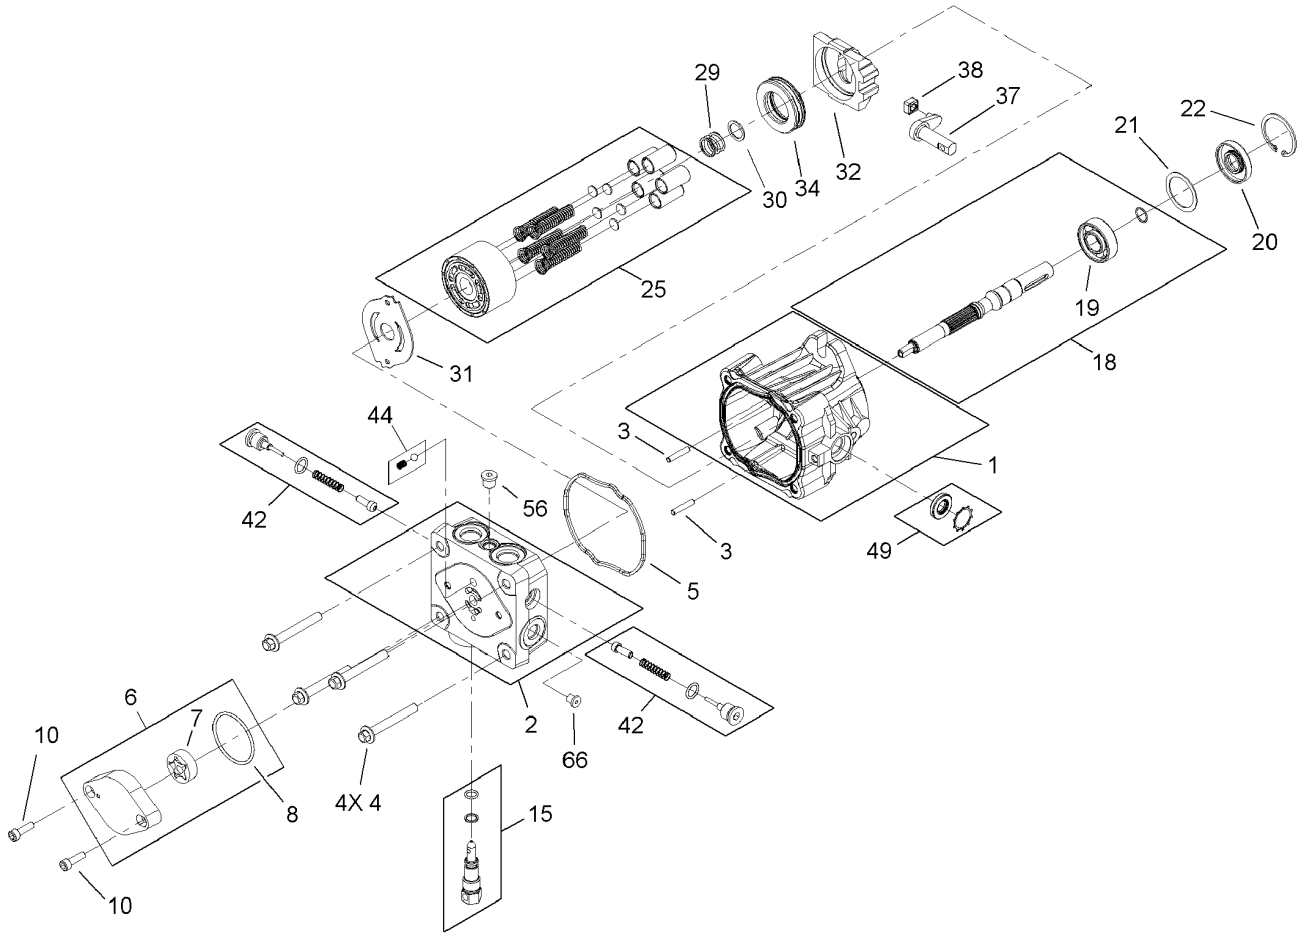

Hydraulic Pump Assembly No. 106-5490

Ref	Part No.	Qty.	Description
1	106-8751	1	Housing Kit
2	106-8752	1	End Cap Kit (W/poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	106-8758	2	Screw-HSH
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	104-2106	1	Cylinder Block ASM
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	94-1909	1	Arm-Trunion
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/poppet)


Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal/retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
❶99	105-6184	1	Seal Kit

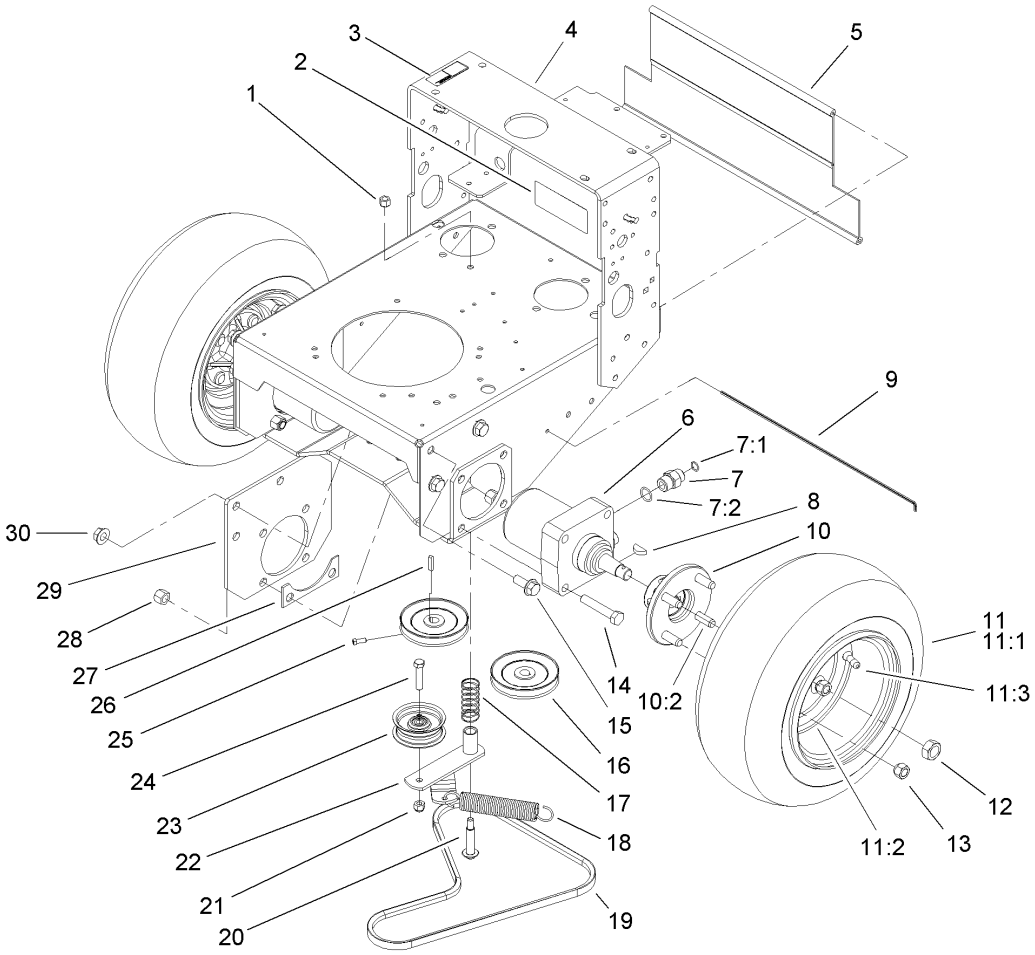

Wheel and Drive Assembly


Ref	Part No.	Qty.	Description
1	3296-6	1	Nut-Lock
2	98-0776	1	Decal-Caution
3	95-2814	1	Decal-Shut Off, Fuel
4	106-0548-01	1	Hydro Frame ASM
5	95-1526	1	Shield-Trailing
6	104-1171	2	Motor-Wheel
7	340-6	4	Fitting-Hyd, Straight
7:1	237-30	1	O-Ring
7:2	237-80	1	O-Ring
8	3257-8	2	Key-Woodruff
9	95-1529	1	Rod-Shield
10	105-0800	2	Wheel Hub / Stud ASM
10:2	10-6830	4	Stud-Type, Drive
11	106-0892	2	Wheel And Tire ASM
11:1	104-6322	1	Tire
11:2	106-0893	1	Wheel
11:3	232-27	1	Stem-Valve
12	85-7310	2	Nut-Motor, Wheel
13	242-50	8	Nut-Lug
14	325-11	8	Screw-HH
15	3234-32	6	Screw-HHF
16	105-5648	2	Pulley-Pump
17	88-1880	1	Spring-Compression
18	68-2190	1	Spring

Ref	Part No.	Qty.	Description
19	105-5649	1	V-Belt
20	27-6230	1	Bolt-Wheel
21	3296-39	1	Nut-Lock, NI
22	86-4770	1	Idler Lever ASM
23	62-4540	1	Pulley
24	323-9	1	Screw-HH
25	3241-5	4	Screw-Set
26	80-6090	2	Key-Pump
27	86-4740-01	2	Spacer-Frame
28	3296-23	8	Nut-Lock, NI
29	105-5643-01	2	Plate-Frame
30	32128-23	6	Nut-HF

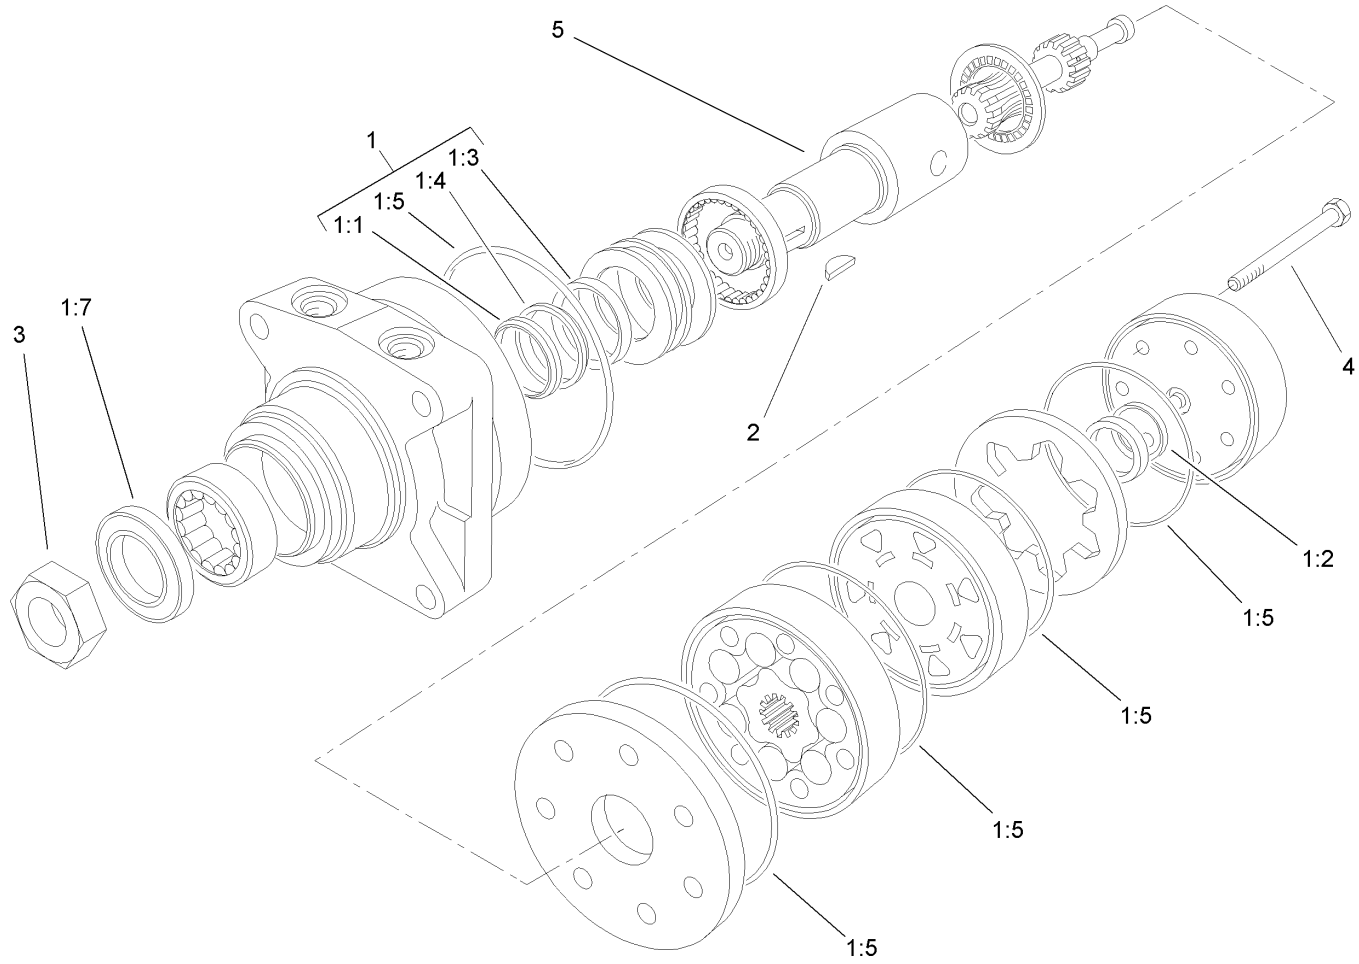

Hydraulic Wheel Motor Assembly No. 104-1171


Ref	Part No.	Qty.	Description
1	1-000119	1	Seal Kit
❷1:1		1	Ring-Back Up
❷1:2		1	Seal-Commutator
❷1:3		1	Seal-Shaft (Viton)
❷1:4		1	Washer-Back Up, Steel
❷1:5		5	Ring-Seal (Viton)
❷1:7		1	Seal-Dirt And Water
2	3257-8	1	Key-Woodruff
3	85-7310	1	Nut-Motor, Wheel
4	106-5549	6	Bolt-Special
5	106-8764	1	Shaft-Coupling

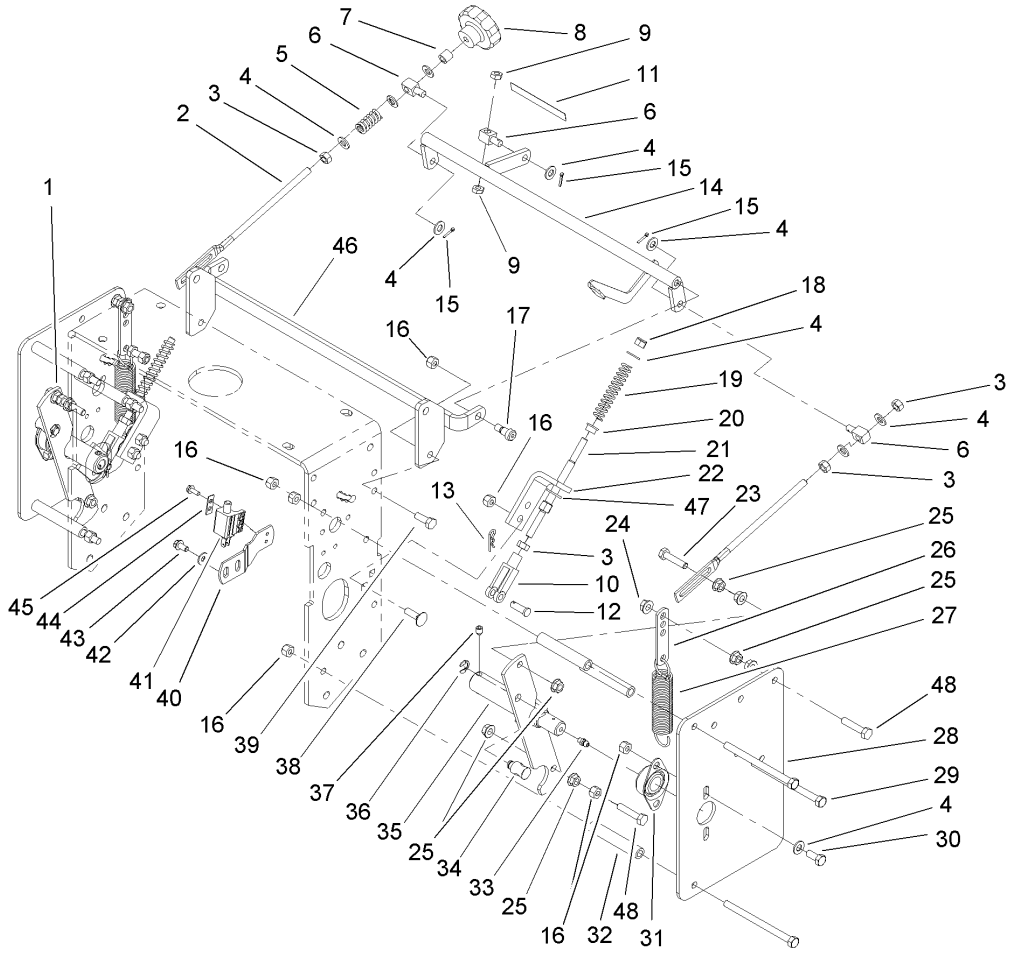

Lower Control Assembly


Ref	Part No.	Qty.	Description
1	106-5484	1	RH Control Arm ASM
2	1-413350	2	Link-Control, Speed
3	3219-2	5	Nut-Hex
4	3256-23	14	Washer-Flat
5	1-323245	1	Spring-Compression
6	1-603676	3	Swivel-Adjustable, Short
7	1-603903	1	Spacer
8	1-413151	1	Knob-Tracking
9	3220-2	2	Nut
10	1-303105	2	Yoke-Adjustable
11	105-4109	1	Decal-Tracking
12	1-808280	2	Pin-Clevis
13	3290-307	2	Pin-Hair
14	106-5538-01	1	Speed Control Crank ASM
15	3272-5	3	Pin-Cotter
16	3296-29	18	Nut-Lock, NI
17	1-809056	2	Screw
18	3296-4	2	Nut-Lock
19	1-603807	2	Spring-Return, Neutral
20	1-603735	2	Bushing-Flanged
21	105-9372	2	Stud-Adjustment
22	104-9802-01	2	Bracket-Mount, Spring
23	1-403180	2	Screw-HH
24	32128-25	2	Nut-HF

Ref	Part No.	Qty.	Description
25	32128-20	14	Nut-HF
26	1-613089	2	Tab-Spring, Extension.
27	1-603693	2	Spring-Extension
28	104-9817-01	2	Plate-Side, Hydro
29	322-38	6	Screw-HH
30	322-3	4	Screw-HH
31	1-633102	2	Bearing-Flange, Side
32	104-9820	6	Spacer-Shield
33	302-5	2	Fitting-Grease
34	103-1235	2	Swivel-Lever, Drive
35	106-5480	1	LH Control Arm ASM
36	32151-47	2	Ring-Retaining
37	3246-3	4	Screw-HS
38	3230-2	4	Bolt-CARR
39	322-4	2	Screw-HH
40	106-5539-01	1	Bracket-Neutral
41	95-1653	1	Switch-Pole, Single
42	3256-1	2	Washer-Flat
43	32144-4	2	Screw-HWH
44	82-4570	1	Plate-Switch
45	32144-1	2	Screw-Taptite
46	105-3163-01	1	Crank Support ASM
47	3256-24	2	Washer-Flat
48	1-800016	4	Bolt-Tap, HH

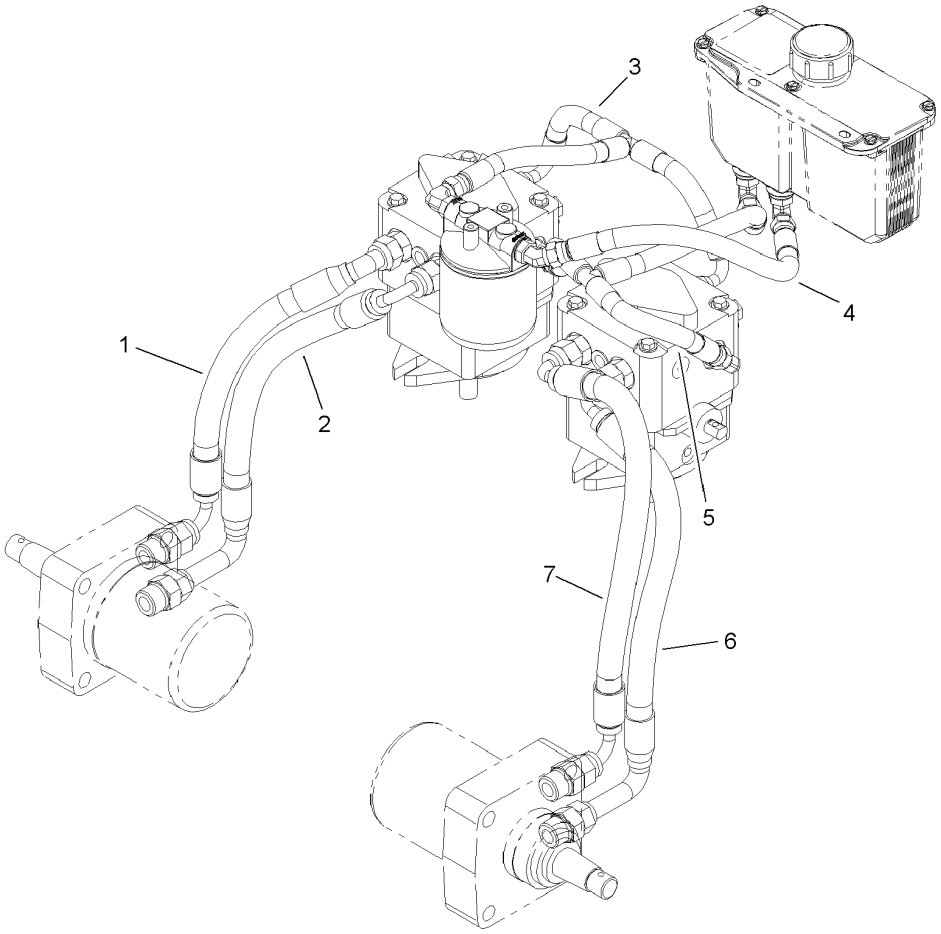

Hydraulic Plumbing Assembly


Ref	Part No.	Qty.	Description
1	106-0824	1	HYD Hose ASM
2	106-0825	1	HYD Hose ASM
3	105-5697	1	HYD Hose ASM
4	105-5699	1	HYD Hose ASM
5	105-5698	1	HYD Hose ASM
6	106-3368	1	HYD Hose ASM
7	106-0826	1	HYD Hose ASM

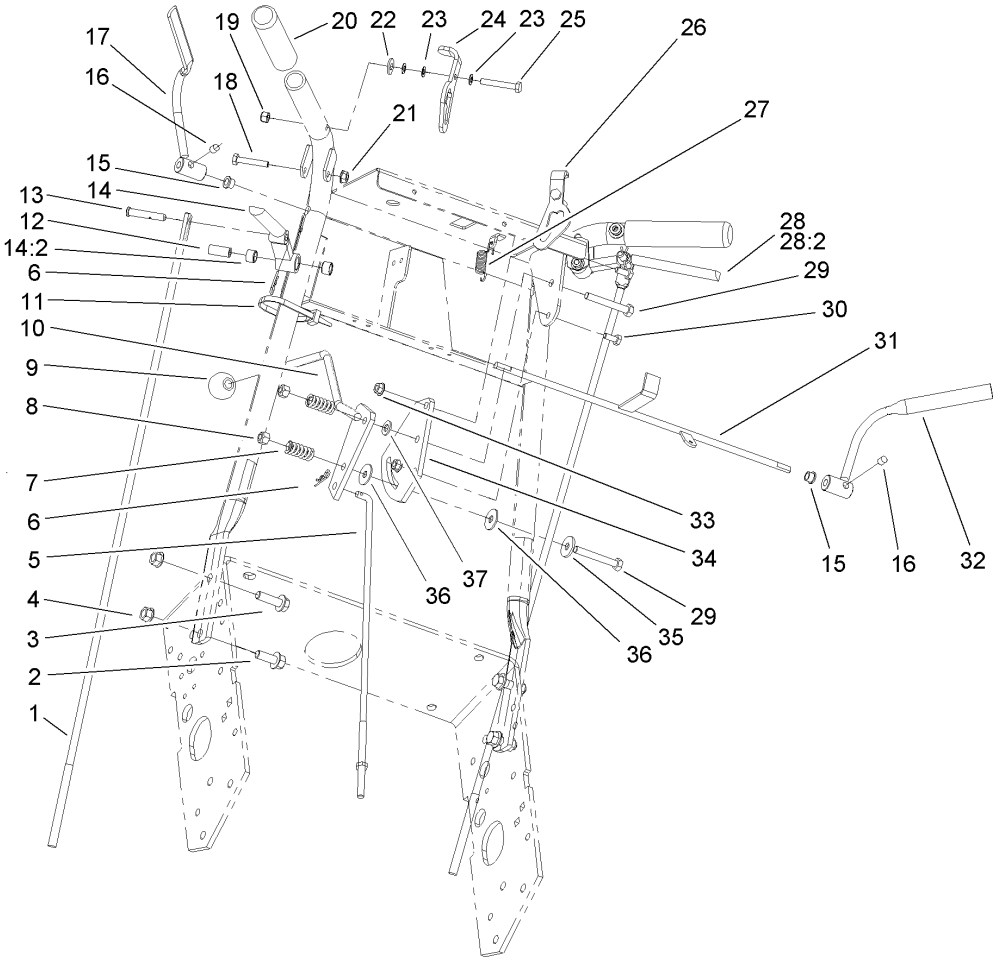

Upper Control Assembly

Ref	Part No.	Qty.	Description
1	1-413219	2	Rod-Lever, Drive
2	3234-11	2	Screw-HHF
3	3234-24	2	Screw-HHF
4	32128-21	4	Nut-HF
5	106-5534	1	Rod-Control, Speed
6	3290-307	3	Pin-Hair
7	1-323245	2	Spring-Compression
8	3296-29	2	Nut-Lock, NI
9	233-42	1	Knob
10	106-2748	1	Lever-Shift
11	3290-378	1	Tie-Cable
12	1-603749	2	Bushing-Lever, Drive
13	1-613055	2	Pin-Clevis
14	103-0218	1	LH Drive Lever ASM
14:2	1-413152	2	Sleeve-Bushing
15	1-303365	2	Bushing-Nylon
16	1-803322	2	Screw-Set
17	106-5485	1	LH Opc Lever ASM
18	321-9	2	Screw-HH
19	3296-42	2	Nut-Lock, NI
20	104-9838	2	Grip-Foam
21	32128-33	2	Nut-HF
22	3256-2	2	Washer-Flat
23	1-303435	6	Washer-Spring


Ref	Part No.	Qty.	Description
24	106-5483	1	Latch-Thumb, LH
25	321-10	2	Screw-HH
26	106-5481	1	Latch-Thumb, RH
27	1-303363	1	Spring-Extension
28	103-0219	1	RH Drive Lever ASM
28:2	1-413152	2	Sleeve-Bushing
29	322-11	2	Screw-HH
30	321-3	2	Screw-HH
31	104-9803	1	Rod ASM
32	106-5486	1	RH Opc Lever ASM
33	32128-33	2	Nut-HF
34	1-603730	1	Plate-Lever, Shifter
35	1-603716	1	Washer-Friction
36	1-323244	2	Washer-Friction
37	3256-23	1	Washer-Flat

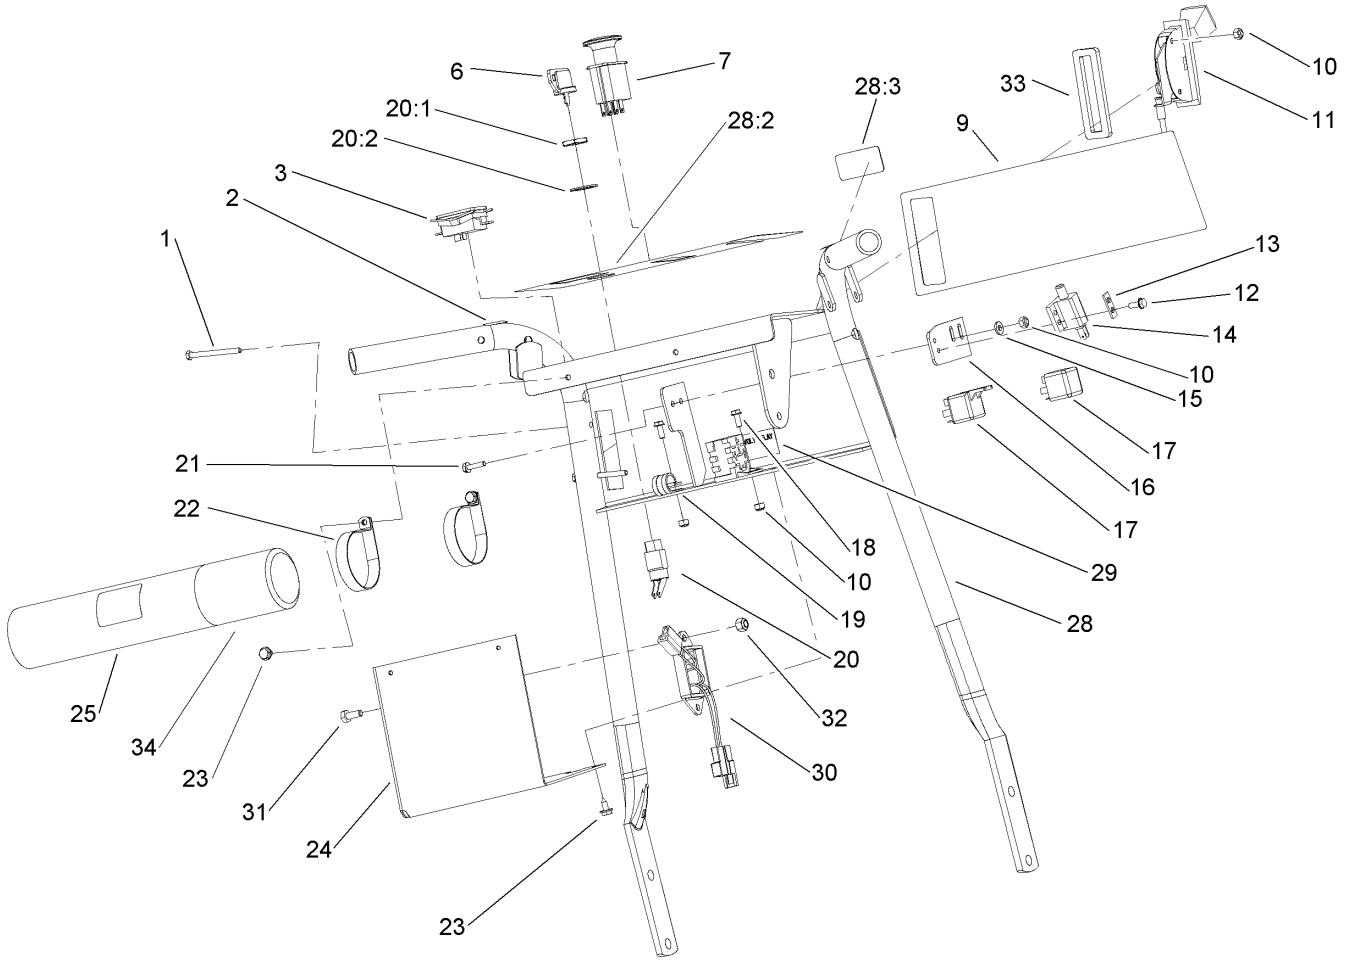

Control Panel Assembly


Ref	Part No.	Qty.	Description
1	32105-14	2	Screw-SHH
2	105-4110	2	Decal-Lock, Neutral
3	104-8143	1	Hourmeter
6	63-8360	1	Key-Ignition
7	95-7489	1	Switch-PTO
9	106-5501	1	Decal-Control, Throttle
10	3296-2	6	Nut-Lock
11	107-4073	1	Cable-Throttle
12	32144-1	2	Screw-Taptite
13	82-4570	1	Plate-Switch
14	95-1653	1	Switch-Pole, Single
15	3256-14	2	Washer-Flat
16	105-4137-03	1	Plate-Mounting, Switch
17	105-4145	1	Relay
18	3290-321	2	Screw-HWH
19	2412-134	1	R-Clamp
20	29-5560	1	Switch-On / Off
20:1	218-461	1	Nut-HH
20:2	3254-5	1	Washer-Tooth
21	32105-13	2	Screw-SHH
22	2412-120	2	R-Clamp
23	32104-76	4	Screw
24	105-4112-03	1	Bracket-Cover
25	104-7050	1	Housing-Manual

Ref	Part No.	Qty.	Description
28	105-3175	1	Handle ASM
28:2	106-5515	1	Decal-Panel, Control
28:3	98-4387	1	Decal-Protection, Ear
29	105-4146	1	Decal-Relay, 24 Volt
30	105-4608	1	Module-Filter
31	321-3	2	Screw-HH
32	3296-42	2	Nut-Lock, NI
33	106-5487	1	Gasket-Throttle
34	104-7048	1	Cap-Housing

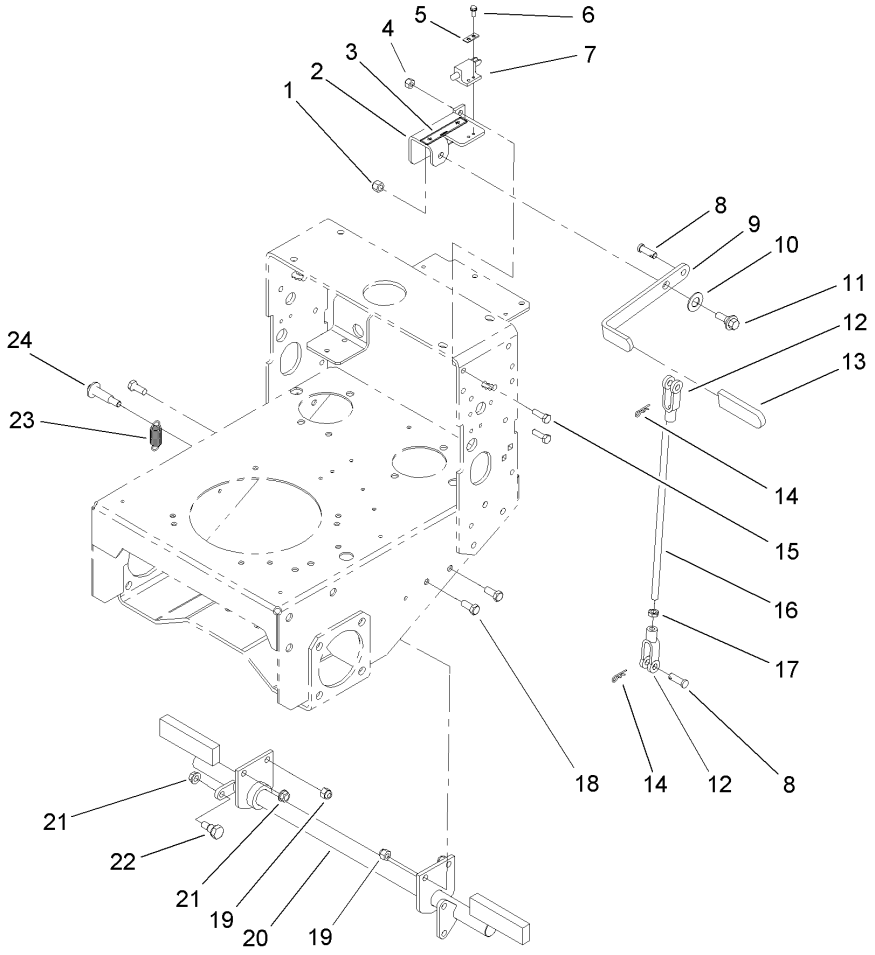

Parking Brake Assembly


Ref	Part No.	Qty.	Description
1	3296-6	1	Nut-Lock
2	106-0666-01	1	Brake Handle Support ASM
3	104-2838	1	Decal-Brake
4	3296-29	2	Nut-Lock, NI
5	82-4570	1	Plate-Switch
6	32144-1	2	Screw-Taptite
7	1-513051	1	Switch-Open, Normally
8	1-808285	2	Pin-Clevis
9	106-0671-01	1	Handle-Brake
10	257-7	1	Bearing-Thrust
11	93-2364	1	Bolt-Shoulder
12	1-633131	2	Yoke-Linkage, Brake
13	1-303020	1	Grip-Lever
14	3290-307	2	Pin-Hair
15	322-5	2	Screw-HH
16	106-0670	1	Rod-Connecting, Brake
17	3220-3	1	Nut-Jam
18	323-5	3	Screw-HH
19	3296-39	3	Nut-Lock, NI
20	106-0660-01	1	Parking Brake ASM
21	3290-357	2	Nut-HHF
22	27-5240	1	Bolt-Shoulder
23	613386	1	Spring-Brake
24	56-6590	1	Bolt-Wheel

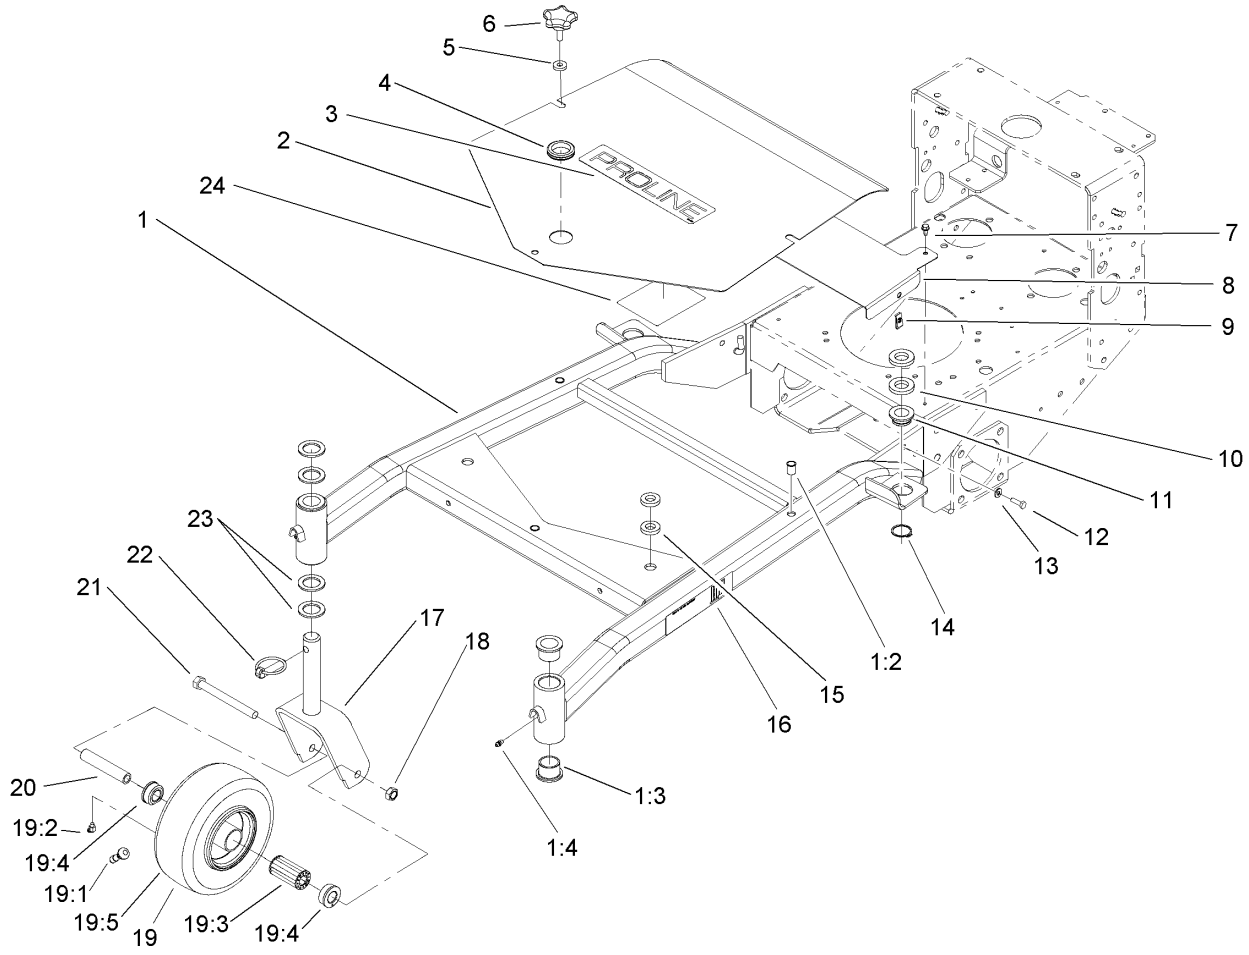

Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	106-0706	1	Carrier Frame ASM
1:2	32148-9	3	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	105-3165-01	1	Cover-Frame, Carrier
3	106-0719	1	Decal
4	240-3	1	Grommet-Rubber
5	106-0565	3	Washer-Rubber
6	106-0887	3	Knob
7	12-3270	2	Screw
8	106-5473-01	1	Shield-Heat
9	3290-199	2	Nut-Speed
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	321-5	2	Screw-HH
13	3256-22	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	105-0842	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock, Side
19	100-6451	2	Castor Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	302-11	1	Fitting-Lube, 45 DEG


Ref	Part No.	Qty.	Description
19:3	83-4740	1	Bearing
19:4	62-5580	2	Bearing-Outside
19:5	100-6452	1	Tire-Tubeless
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust
24	106-5512	1	Decal-Hydro, Pistol Grip
24	106-5510	1	Decal-Gear, Pistol Grip
24	106-5506	1	Decal-Gear, Tbar
24	106-5504	1	Decal-Hydro, Tbar

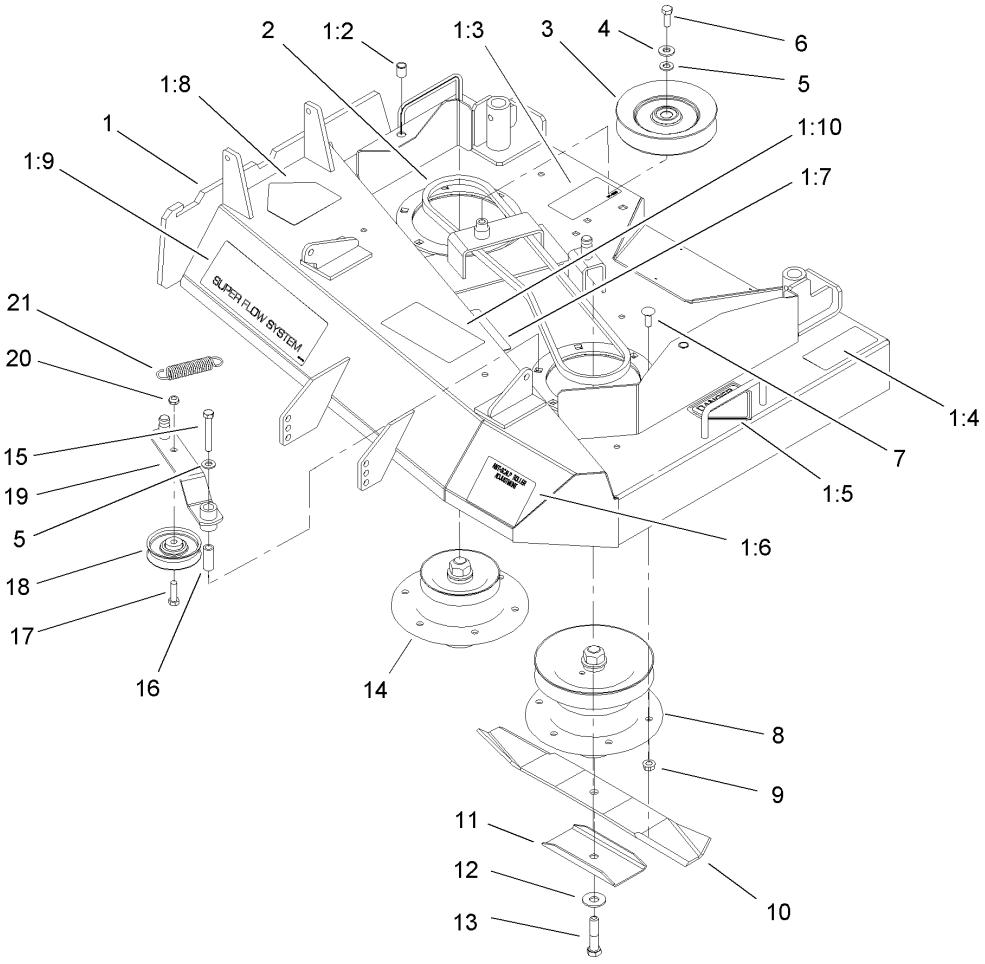

Spindle, Pulley and Belt Assembly


Ref	Part No.	Qty.	Description
1	106-0615	1	36in Deck ASM
1:2	32148-9	2	Insert-Nut
1:3	104-8185	1	Decal
1:4	68-8340	1	Decal-Torque
1:5	43-8480	1	Decal-Danger
1:6	106-5532	1	Decal-Anti Scalp
1:7	67-5360	1	Decal-Danger
1:8	93-1122	1	Decal-Danger
1:9	106-0703	1	Decal
1:10	66-1340	1	Decal-Danger
2	51-3530	1	V-Belt-Drive, Deck
3	1-633166	1	Pulley-Idler
4	98-5975	1	Washer-Belleville
5	3256-24	2	Washer-Flat
6	323-6	1	Screw-HH
7	3231-22	11	Screw-CARR
8	106-0785	1	Spindle Housing ASM
9	32128-21	12	Nut-HF
10	56-2390	2	Blade-Sail, Extra High
11	92-9820	2	Stiffener-Blade
12	3256-6	2	Washer-Flat
13	44-2200	2	Screw-Blade
14	106-0787	1	Spindle Housing ASM
15	323-12	1	Screw-HH

Ref	Part No.	Qty.	Description
16	51-3641	1	Sleeve-Pivot, Idler
17	3211-5	1	Screw-HH
18	51-3660	1	Pulley-Idler
19	105-0889	1	Idler Arm ASM
20	3296-5	1	Nut-Lock
21	105-2673	1	Spring-Extension

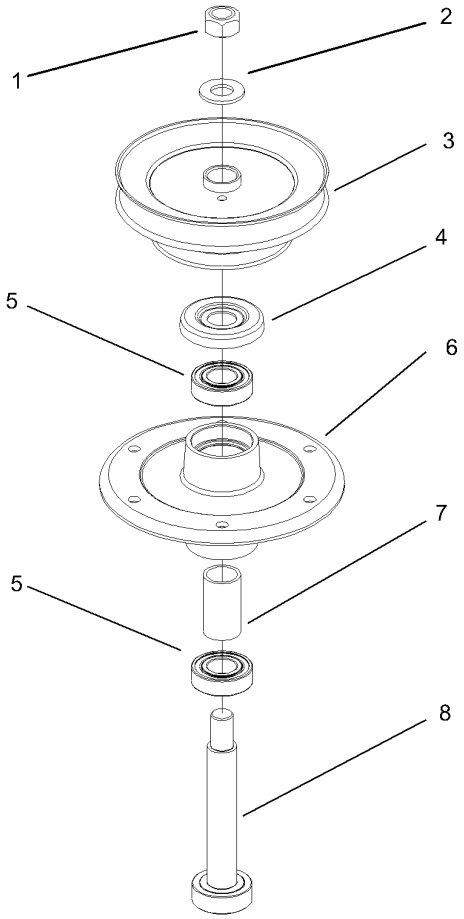


Spindle Assembly No. 106-0785

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1117	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0819	1	Housing-Spindle
7	106-0795	1	Spacer-Bearing
8	106-0781	1	Shaft-Spindle

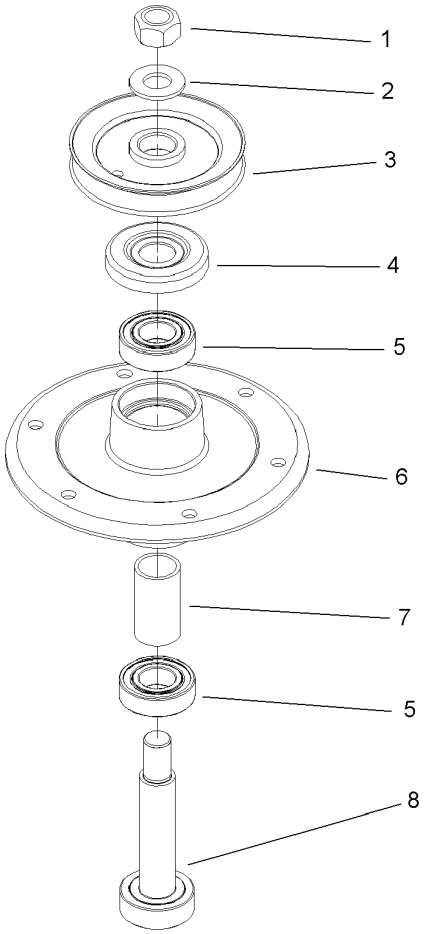


Outer Spindle Assembly 106-0787

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1118	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0819	1	Housing-Spindle
7	106-0795	1	Spacer-Bearing
8	106-0782	1	Shaft-Spindle

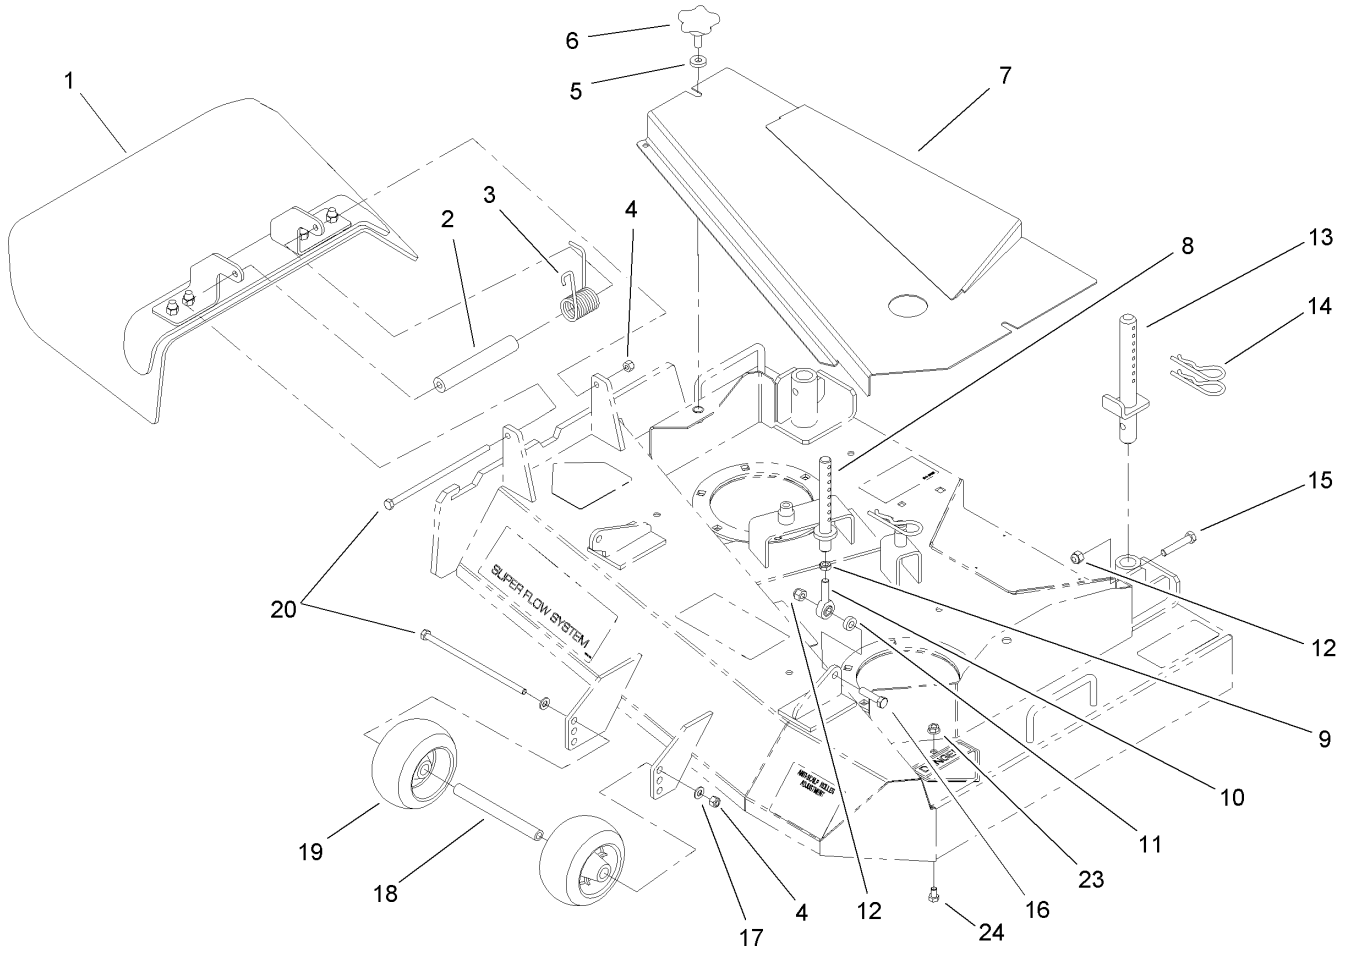


Deck Assembly

Ref	Part No.	Qty.	Description
1	107-4194	1	Deflector ASM
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	2	Nut-Lock, NI
5	106-0565	2	Washer-Rubber
6	106-0887	2	Knob
7	106-5475-01	1	Cover ASM
8	106-0684	2	Front Pin ASM
9	3220-3	2	Nut-Jam
10	1-613204	2	Balljoint
11	104-1156	2	Spacer
12	3296-39	4	Nut-Lock, NI
13	106-3365	2	Rear Pin ASM
14	3290-256	6	Pin-Hair
15	323-10	2	Screw-HH
16	323-8	2	Screw-HH
17	3256-23	2	Washer-Flat
18	98-5967	1	Spacer-Wheel
19	1-603299	2	Roller-Anti Scalp
20	322-50	2	Screw-HH
23	32128-20	2	Nut-HF
24	322-1	2	Screw-HH

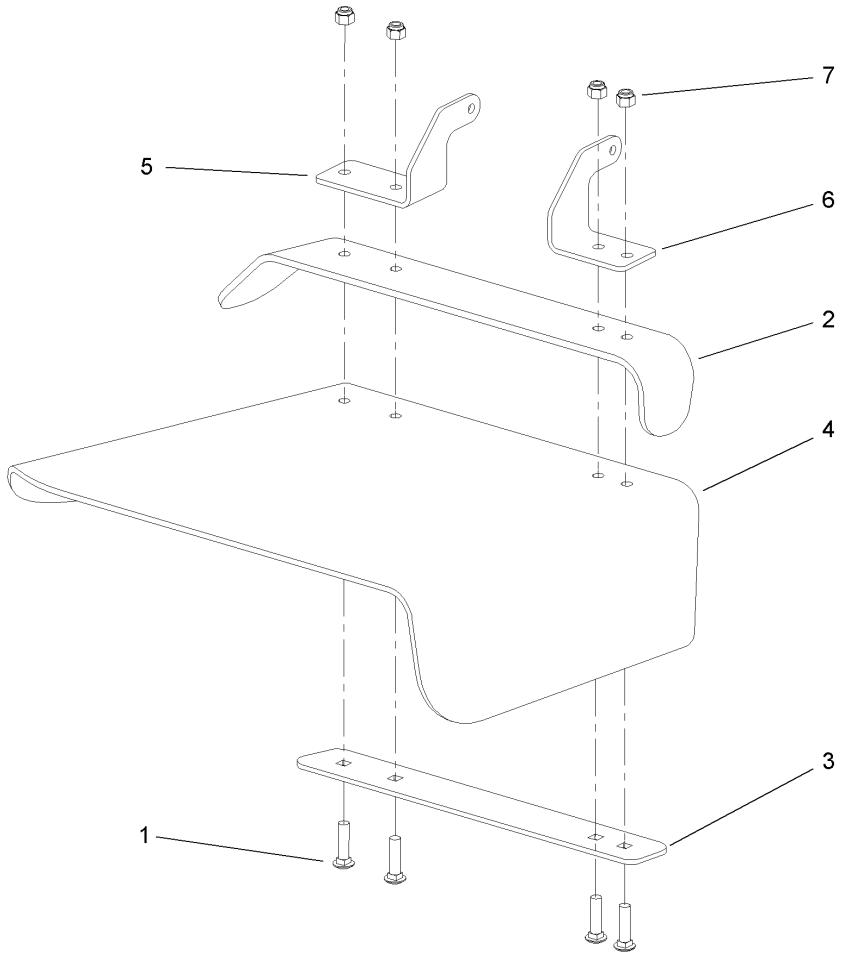


Deflector Assembly No. 107-4194

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	107-4197-01	1	Bracket-Hinge, Rear
6	107-4196-01	1	Bracket-Hinge, Front
7	3296-39	4	Nut-Lock, NI

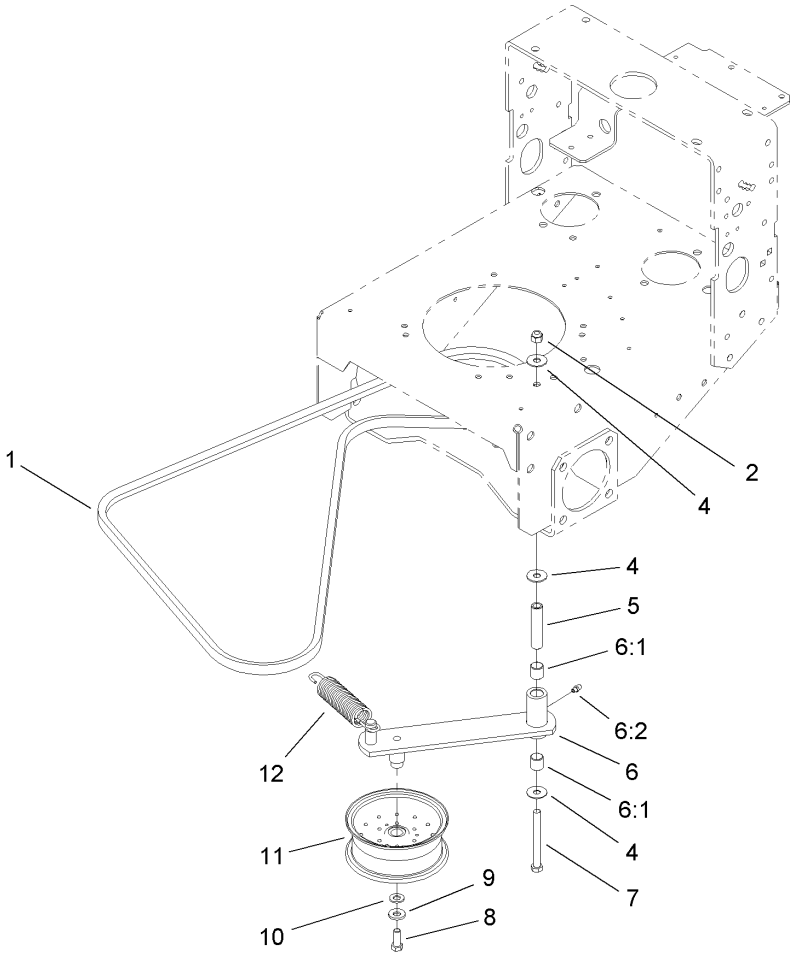


Drive Belt and Tensioner Assembly

Ref	Part No.	Qty.	Description
1	106-5492	1	Belt-Drive, PTO
2	3296-39	1	Nut-Lock, NI
4	52-2860	3	Washer-Flat
5	104-6377	1	Tube-Idler
6	106-0734	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension

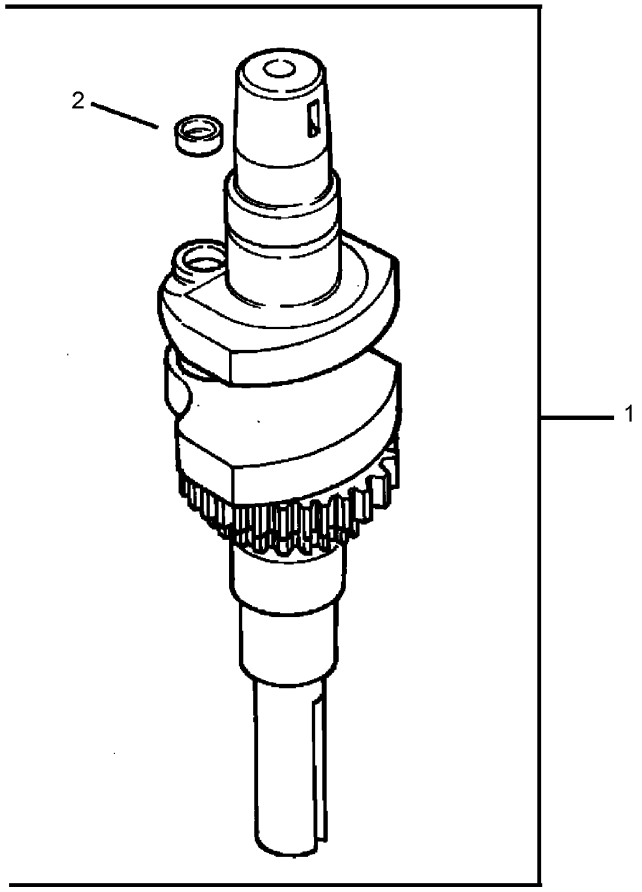

Crankshaft Assembly
Kohler CV15T-41629


Ref	Part No.	Qty.	Description
❸1	12 014 30-S	1	Crankshaft (Includes 2)
❸2	12 139 01-S	1	Plug-Cup

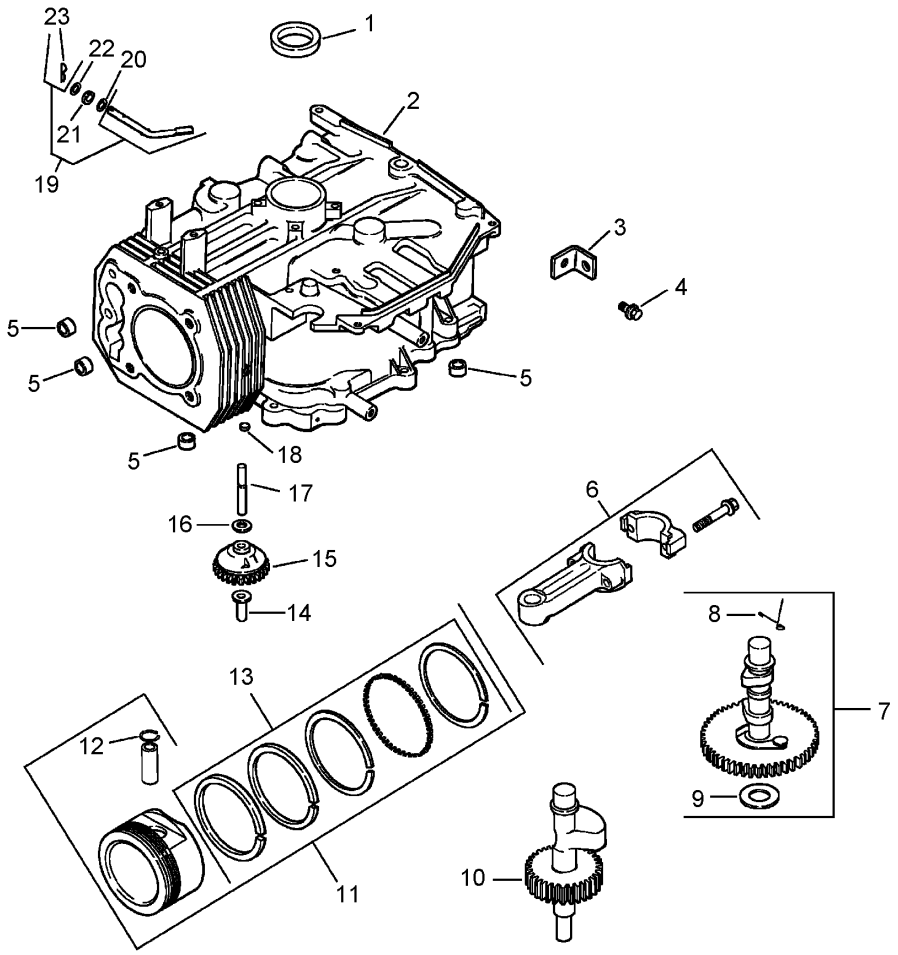

Crankcase Assembly
Kohler CV15T-41629


Ref	Part No.	Qty.	Description
❸1	12 032 03-S	1	Seal-Oil, Front
❸2		1	Crankcase (Use: Short Block 12 522 18)
❸3	12 445 02-S	1	Strap-Lifting
❸4	M-839025-S	1	Screw-HF (M8x1.25x25)
❸5	24 380 13-S	4	Pin-Locating
❸6	12 067 05-S	1	Rod-Connecting (Std.)
❸	12 067 06-S	1	Rod-Connecting (.25)
❸7	12 755 49-S	1	Camshaft Kit (Includes 8,9)
❸8	12 089 31-S	1	Spring-Actuating
❸9	12 422 08-S	1	Shim-Camshaft, Blue
❸	12 422 09-S	1	Shim-Camshaft, Red
❸	12 422 10-S	1	Shim-Camshaft, Yellow
❸	12 422 11-S	1	Shim-Camshaft, Green
❸	12 422 12-S	1	Shim-Camshaft, Gray
❸	12 422 13-S	1	Shim-Camshaft, Black
❸	12 422 07-S	1	Shim-Camshaft, White
❸10	12 144 27-S	1	Shaft-Balance
❸11	12 874 07-S	1	Piston W/ring Set (Std) (Includes 12-13)
❸	12 874 11-S	1	Piston W/ring Set (.08)
❸	12 874 08-S	1	Piston W/ring Set (.25)
❸	12 874 09-S	1	Piston W/ring Set (.50)
❸12	12 018 02-S	2	Retainer-Pin, Piston

Ref	Part No.	Qty.	Description
❸13	12 108 07-S	1	Ring Set (Std. And .08)
❸	12 108 08-S	1	Ring Set (.25)
❸	12 108 09-S	1	Ring Set (.50)
❸14	12 380 01-S	1	Pin-Regulating, Governor
❸15	12 043 05-S	1	Gear-Governor
❸16	M-631005-S	1	Washer-Plain (6mm)
❸17	12 144 02-S	1	Shaft-Gear, Governor
❸18	52 139 09-S	1	Plug-Cup
❸19	12 755 64-S	1	Governor Cross Shaft Kit (Includes 23)
❸20	X-25-102-S	1	Washer-Plain, 1/4in
❸21	12 032 01-S	1	Seal-Cross Shaft, Governor
❸22	M-631015-S	1	Washer-Plain (6mm)
❸23	12 154 05-S	1	Clip-Pin, Hitch

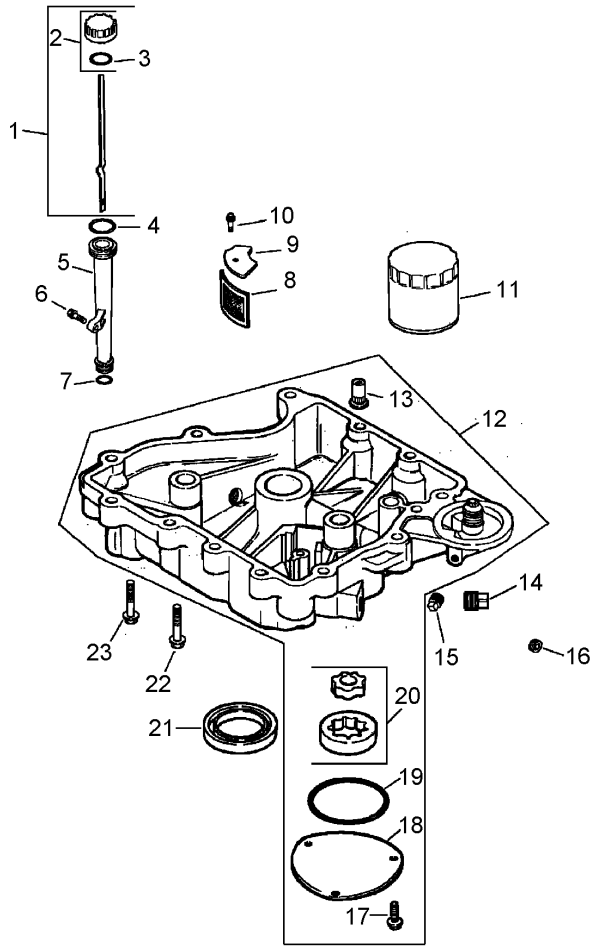

Oil Pan/Lubrication Assembly
Kohler CV15T-41629


Ref	Part No.	Qty.	Description
❸1	12 038 01-S	1	Dipstick ASM (Includes 2-3)
❸2	25 755 13-S	1	Oil Fill Cap ASM (Includes 3)
❸3	25 153 02-S	1	O-Ring
❸4	12 153 02-S	1	O-Ring (Upper Oil Fill Tube)
❸5	12 123 04-S	1	Tube-Fill, Oil
❸6	M-545020-S	1	Screw-HF (M5x0.8x20)
❸7	12 153 01-S	1	O-Ring (Lower Oil Fill Tube)
❸8	25 162 07-S	1	Screen-Pickup, Oil
❸9	12 096 03-S	1	Cover-Screen, Oil Pickup
❸10	M-545016-S	1	Screw-HF (M5x0.8x16)
❸11	12 050 01-S	1	Filter-Oil
❸12	12 199 50-S	1	Oil Pan ASM (Includes 13, 17-19)
❸13	25 462 09-S	1	Valve-Relief, Oil Pressure
❸14	25 139 57-S	2	Plug-SQH (3/8in Nptf)
❸15	25 139 52-S	1	Plug-Pipe (1/8in)
❸16	25 139 62-S	1	Plug, Pipe 3/8in Hex Ctsk
❸17	M-545016-S	3	Screw-HF (M5x0.8x16)
❸18	12 096 34-S	1	Cover-Pump, Oil
❸19	12 153 06-S	1	O-Ring (Oil Pump Cover)
❸20	12 393 01-S	1	Oil Pump ASM
❸21	12 032 03-S	1	Seal-Oil, Front
❸22	24 086 16-S	10	Screw-HF (M8x1.25x45)
❸23	24 086 17-S	1	Screw-HF (M8x1.25x45)

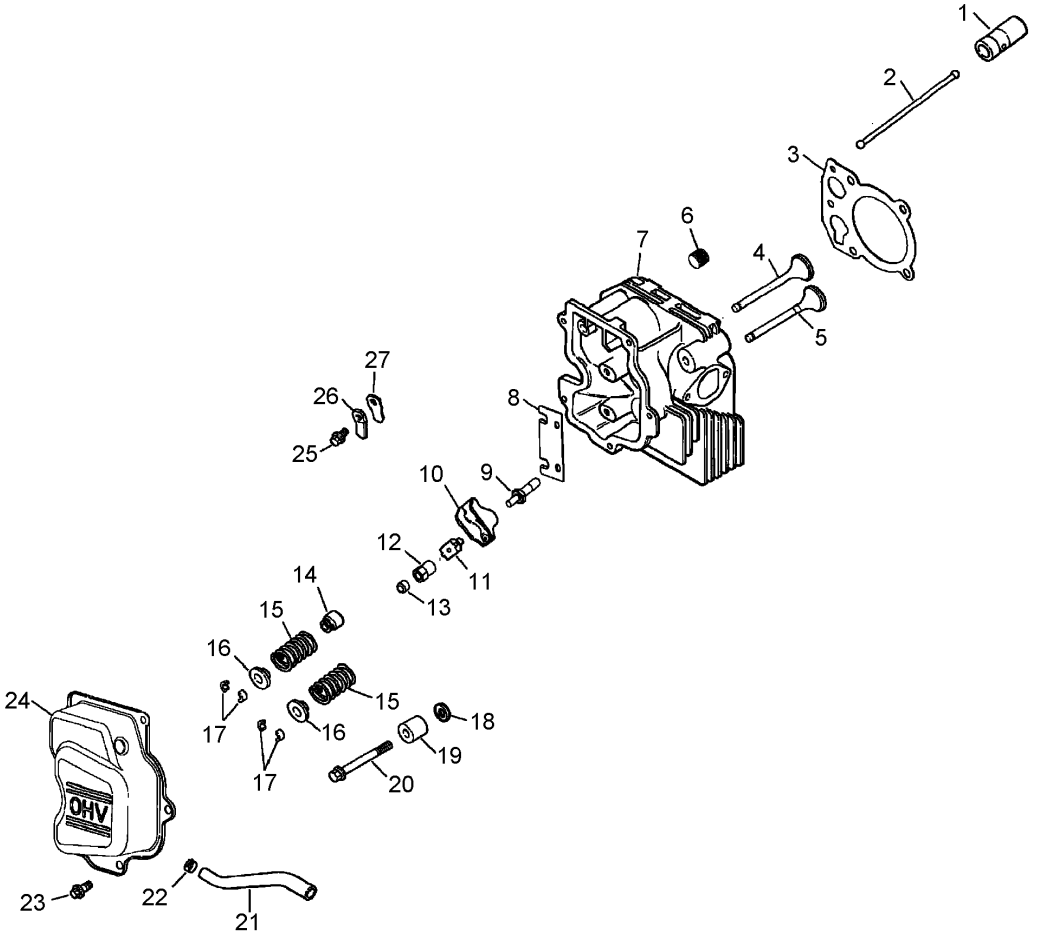

Head/Valve/Breather Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	25 351 01-S	2	Lifter-Valve
❸2	12 411 04-S	2	Rod-Push
❸3	12 041 10-S	1	Gasket-Head, Cylinder
❸4	12 017 01-S	1	Valve-Intake (Std.)
❸5	12 016 01-S	1	Valve-Exhaust (Std.)
❸6	25 139 60-S	1	Plug-Pipe, 1/8in Allen Head
❸7	12 318 19-S	1	Head-Cylinder
❸8	12 146 22-S	2	Plate-Guide
❸9	25 072 12-S	2	Stud-Rocker
❸10	25 186 01-S	2	Arm-Rocker
❸11	12 599 03-S	2	Pivot-Arm, Rocker
❸12	25 100 29-S	2	Nut-Hex
❸13	25 086 112-S	2	Screw-Set
❸14	66 032 05-S	2	Seal-Stem, Valve
❸15	12 089 34-S	2	Spring-Valve
❸16	12 173 01-S	2	Cap-Spring, Valve
❸17	12 755 03-S	2	Retainer Kit
❸18	12 468 05-S	1	Washer-Plain (13/32in)
❸19	12 112 13-S	1	Spacer-Head Bolt, Exhaust Port
❸20	20 086 02-S	5	Screw-HF (M10x1.5x81)
❸21	25 237 14-S	1	Clamp
❸22	12 326 18-S	1	Hose-Breather
❸23	M-645016-S	3	Screw-HF (M6x1.0x16)
❸24	12 096 47-S	1	Cover-Valve


Ref	Part No.	Qty.	Description
❸25	M-545010-S	1	Screw-HF (M5x0.8x10)
❸26	66 018 04-S	1	Retainer-Reed, Breather
❸27	12 402 02-S	1	Reed-Breather
❶❸	12 017 02-S	1	Valve-Intake (.25)
❶❸	12 016 02-S	1	Valve-Exhaust (.25)
❶❸	12 041 01-S	1	Gasket-Carburetor
❶❸	12 041 02-S	1	Gasket-Base, Air Cleaner
❶❸	12 041 03-S	1	Gasket-Manifold, Exhaust

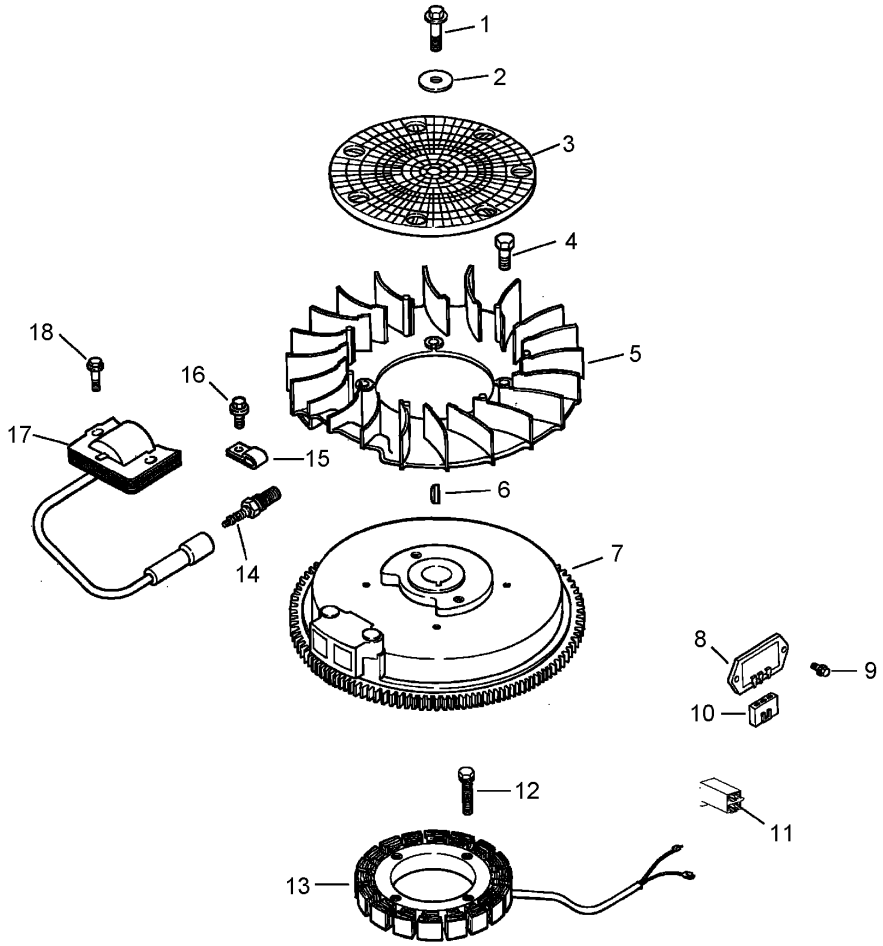

Ignition/Electrical Assembly
Kohler CV15T-41629


Ref	Part No.	Qty.	Description
❸1	12 086 14-S	1	Screw-HF (M10x1.5x46)
❸2	12 468 03-S	1	Washer-Plain (3/8in)
❸3	24 162 03-S	1	Screen-Grass
❸4	25 086 47-S	4	Bolt-Shoulder (M6x1.0x16)
❸5	12 157 03-S	1	Fan
❸6	X-42-15-S	1	Key
❸7	12 025 56-S	1	Flywheel
❸8	12 403 01-S	1	Rectifier-Regulator
❸9	M-639016-S	2	Screw-HF (M6x1.0x16)
❸10	236602-S	1	Connector
❸11	41 155 03-S	1	Connector-Contact, Two
❸12	M-548025-S	2	Screw (M5x0.8x25)
❸13	237878-S	1	Stator Kit (Includes 25 452 01-S)
❸14	12 132 02-S	1	Spark Plug
❸15	X-728-1-S	2	Clip
❸16	M-545010-S	2	Screw-HF (M5x0.8x10)
❸17	12 584 05-S	1	Module-Ignition
❸18	M-545020-S	2	Screw-HF (M5x0.8x20)
❶❸	X-22-11-S	1	Washer-Lock (1/4in)
❶❸	12 518 01-S	1	Lead-White, Ground To Kill (19in, 18 Gauge)
❶❸	25 518 05-S	1	Lead-Black, Rectifier To Connector
❶❸	24 518 12-S	1	Lead-Black (5in, 12 Gauge)

Ref	Part No.	Qty.	Description
❶❸	25 452 01-S	1	Terminal

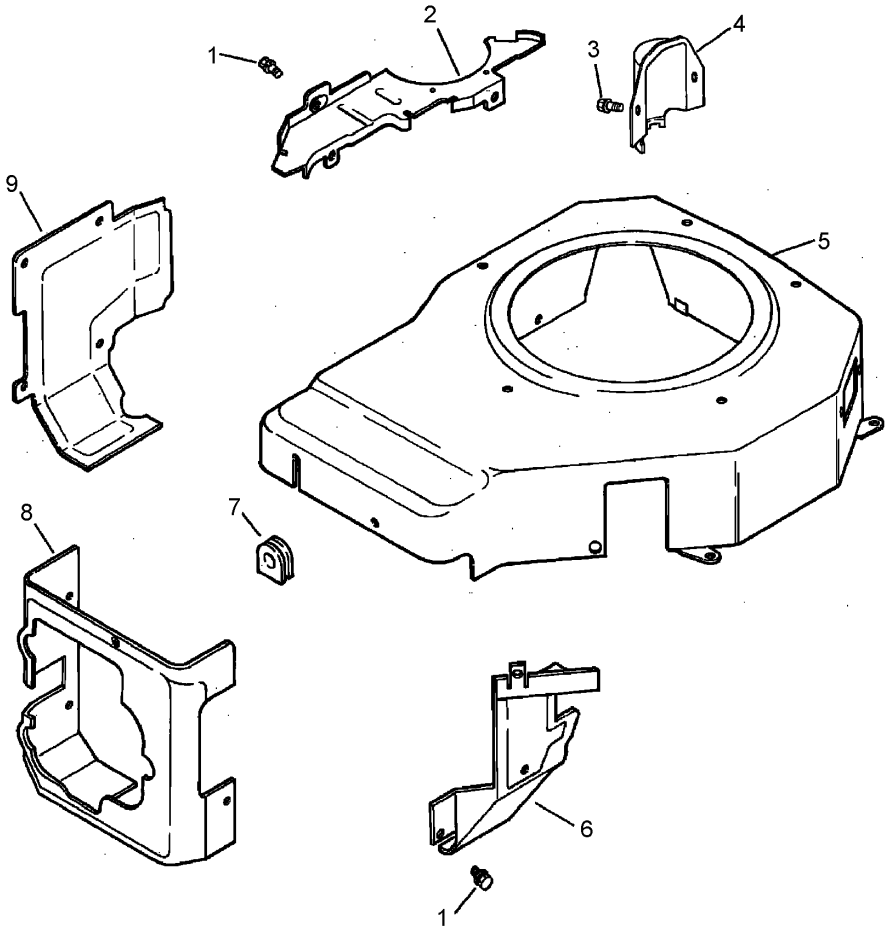


Blower Housing and Baffle Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	M-545010-S	9	Screw-HF (M5x0.8x10)
❸2	12 146 07-S	1	Plate-Housing, Blower
❸3	M-550010-S	6	Screw-HF (M5x0.8x10)
❸4	12 096 29-S	1	Cover-Starter
❸5	12 027 68-S	1	Housing, Blower
❸6	12 063 10-S	1	Baffle-Side, Intake
❸7	12 313 03-S	1	Grommet-Spark Plug
❸8	12 063 08-S	1	Baffle-Head, Cylinder
❸9	12 063 19-S	1	Baffle (Cylinder)
❸	12 113 124-S	1	Decal-15hp
❸	25 113 39-S	1	Decal-Lamination, Clear

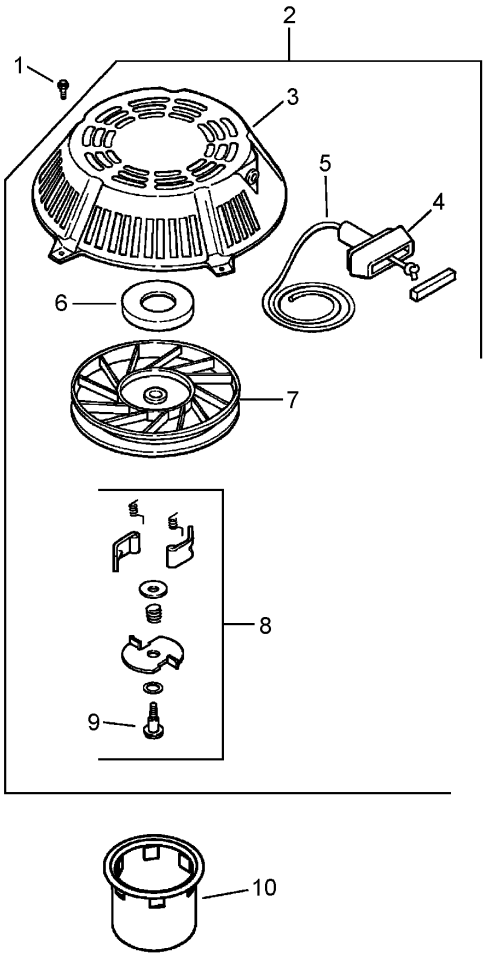


Starting System Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	M-550010-S	5	Screw-HF (M5x0.8x10)
❸2	12 165 01-S	1	Retractable Starter ASM (Includes 3-9)
❸3	12 081 01-S	1	Housing-Starter
❸4	25 166 01-S	1	Handle-Start, Recoil
❸5	12 160 01-S	1	Rope-Starter
❸6	12 089 06-S	1	Spring And Keeper
❸7	12 093 01-S	1	Pulley
❸8	12 757 06-S	1	Dog Repair Kit
❸9	41 086 09-S	1	Screw-Pozidriv
❸10	15 109 01-S	1	Cup, Drive
❶❸	12 113 07-S	1	Decal-Starting

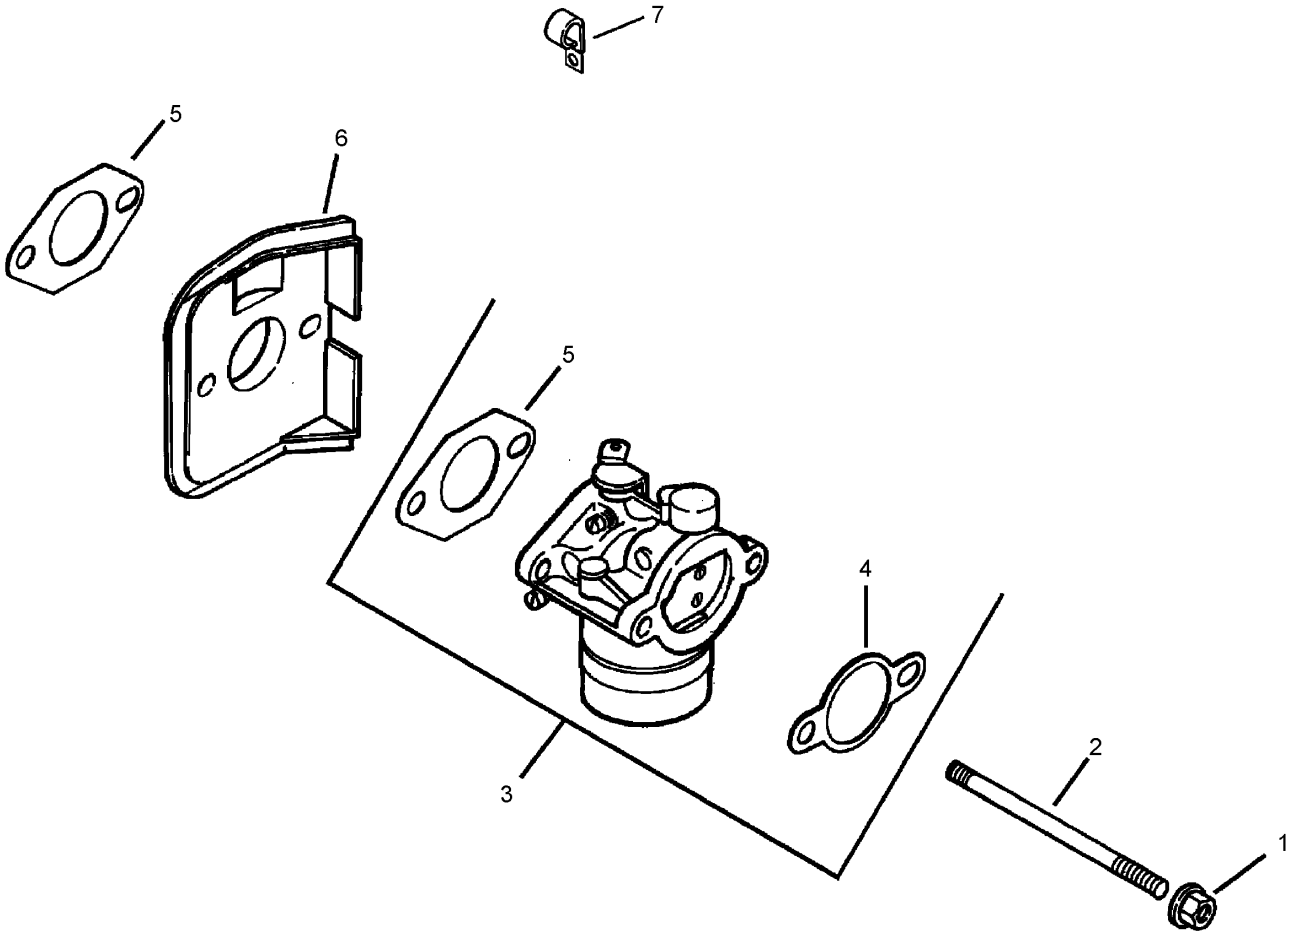


Fuel System Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	M-641060-S	2	Nut-HF
❸2	M-629116-S	2	Stud (M6x1.0x116)
❸3	12 853 140-S	1	Carburetor Kit (Includes 4-5)
❸4	12 041 02-S	1	Gasket-Base, Air Cleaner
❸5	12 041 01-S	2	Gasket-Carburetor
❸6	12 265 04-S	1	Deflector-Heat
❸7	47 154 01-S	1	Clip-Cable
❶❸	12 757 02-S	1	Float Kit
❶❸	12 757 03-S	1	Carburetor Repair Kit
❶❸	12 757 08-S	1	Choke Repair Kit
❶❸	12 757 36-S	1	Throttle Shaft Bearing Kit
❶❸	12 757 37-S	1	Bowl Replacement Kit
❶❸	12 755 92-S	1	High Altitude Kit

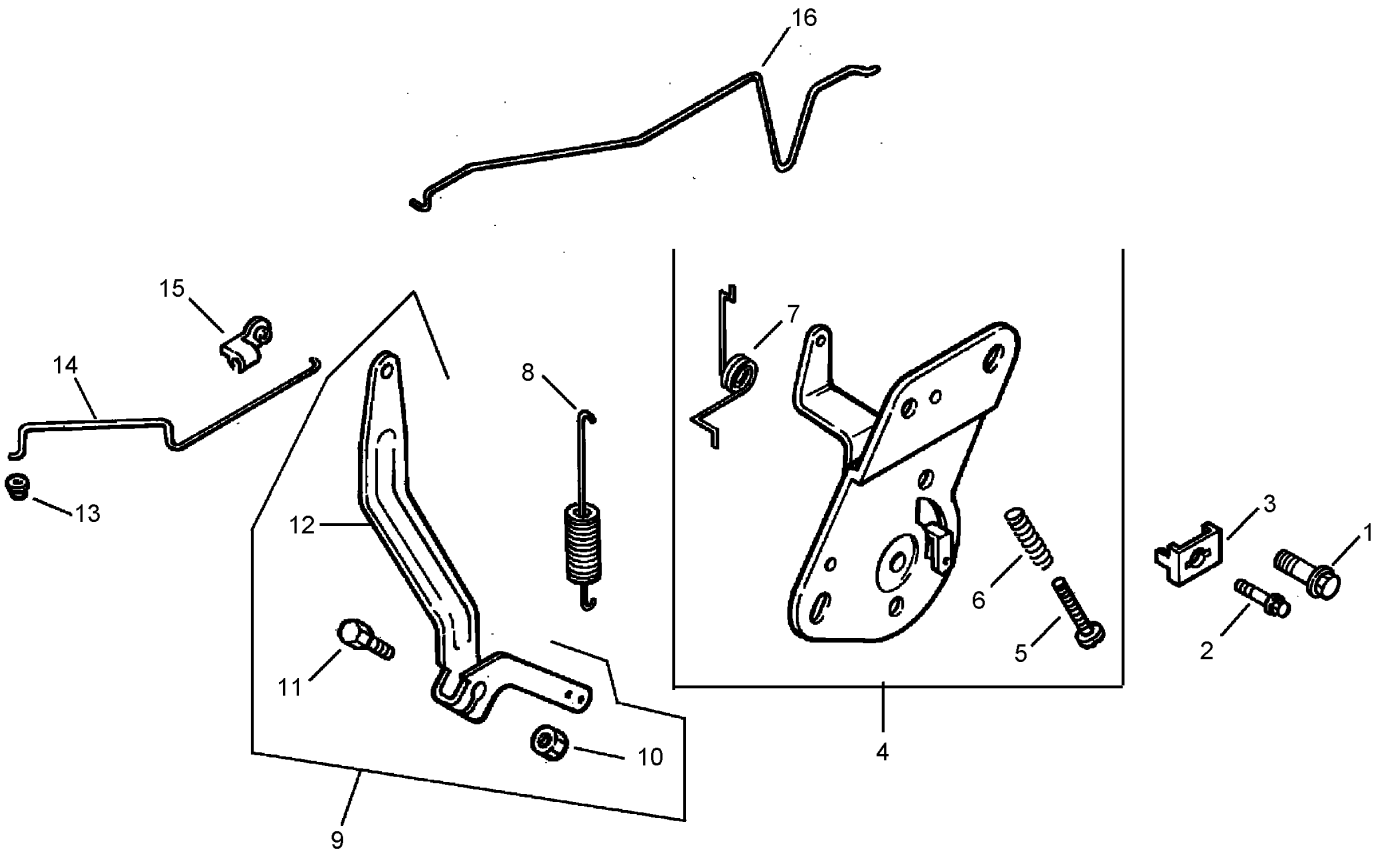


Engine Control Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	M-664020-S	2	Screw-Socket, Lobed (M6x1.0x20)
❸2	M-545016-S	1	Screw-HF (M5x0.8x16)
❸3	12 237 01-S	1	Clamp-Cable
❸4	12 536 01-S	1	Speed Control ASM (Includes 5-7)
❸5	12 086 39-S	1	Screw-Pan Head (W/loctite)
❸6	12 089 11-S	1	Spring-Control, Speed
❸7	12 089 23-S	1	Spring-Return, Choke
❸8	12 089 19-S	1	Spring-Governor
❸9	12 755 83-S	1	Governor Lever Kit (Includes 10-12)
❸10	12 100 07-S	1	Nut-HF (M6x1.0)
❸11	52 211 04-S	1	Screw-HF (M6x1.0x25)
❸12	12 090 28-S	1	Lever-Governor
❸13	25 158 08-S	1	Bushing-Retaining, Linkage
❸14	12 079 01-S	1	Linkage-Throttle
❸15	25 158 11-S	1	Bushing-Retaining, Linkage
❸16	12 079 07-S	1	Linkage-Choke

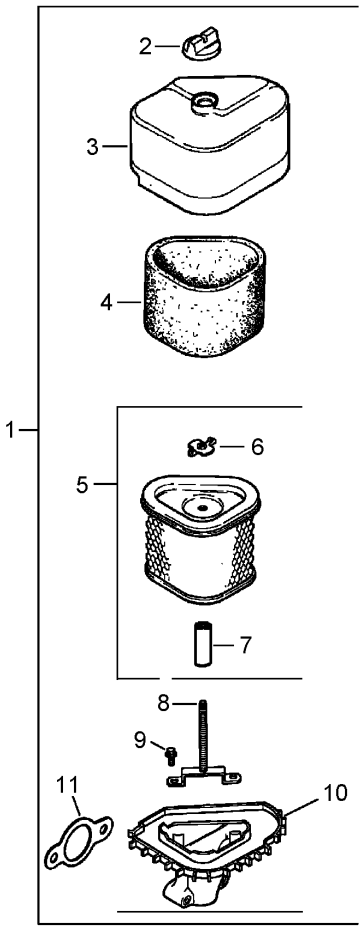

Air Intake/Filtration Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	12 743 04-S	1	Air Cleaner Kit (Includes 2-11)
❸2	20 341 01-S	1	Knob-Cover
❸3	12 096 44-S	1	Cover-Cleaner, Air
❸4	12 083 12-S	1	Precleaner
❸5	12 083 10-S	1	Element-Cleaner, Air (Includes 6-7)
❸6	12 100 01-S	1	Nut-Wing
❸7	12 032 11-S	1	Seal
❸8	12 072 04-S	1	Stud-Plate, Mounting
❸9	12 086 01-S	2	Screw
❸10	12 094 14-S	1	Base-Cleaner, Air
❸11	12 041 02-S	1	Gasket-Base, Air Cleaner
❶❸	12 113 04-S	1	Decal-Cleaner, Air

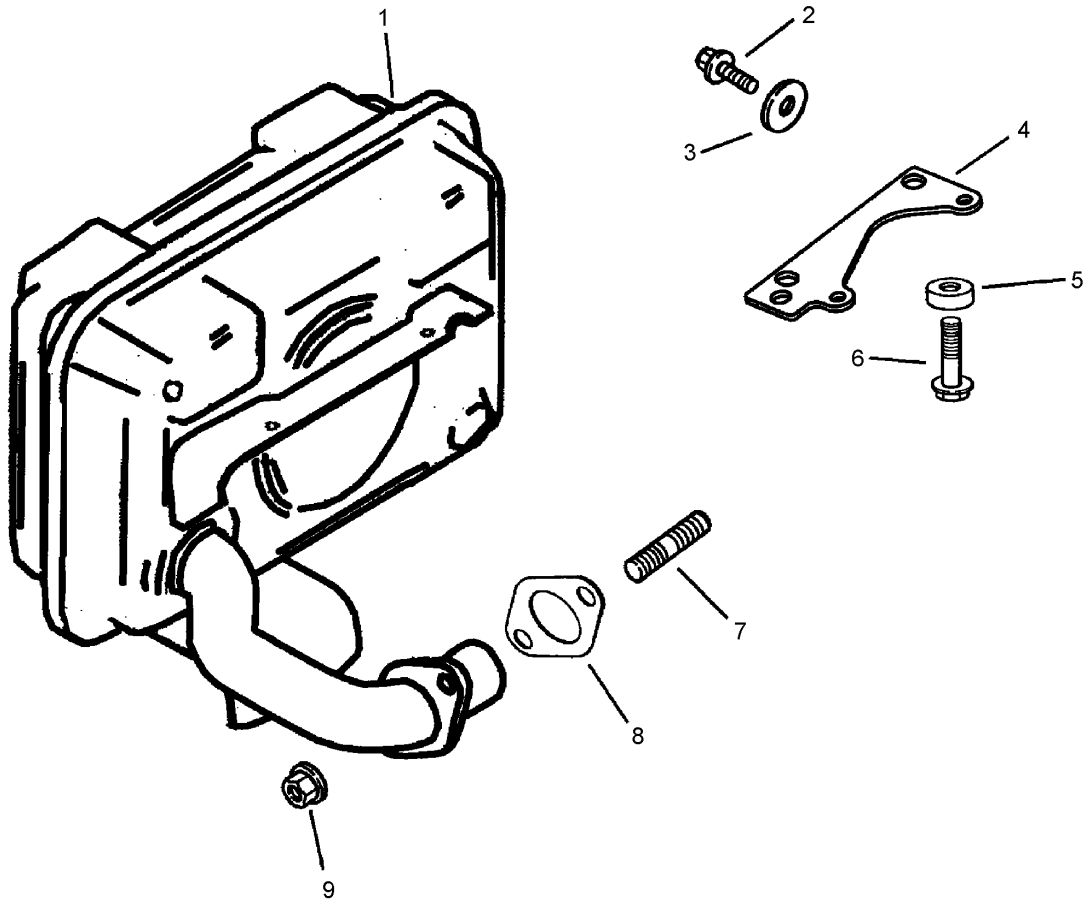

Exhaust Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	12 068 44-S	1	Muffler
❸2	M-645016-S	2	Screw-HF (M6x1.0x16)
❸3	X-25-78-S	2	Washer-Plain (1/4in)
❸4	12 126 71-S	1	Bracket-Muffler
❸5	12 112 20-S	2	Spacer
❸6	M-645025-S	2	Screw-HF (M6x1.0x25)
❸7	25 072 04-S	2	Stud (M8x1.25x33)
❸8	12 041 03-S	1	Gasket-Manifold, Exhaust
❸9	M-841080-S	2	Nut-HF (M8x1.25)
❶❸	M-545016-S	1	Screw-HF (M5x0.8x16)
❶❸	12 522 18	1	Block-Short
❶❸	12 755 93-S	1	Gasket Set

Attachments and Accessories

For 30433 - Mid-Size ProLine Pistol Grip Hydro, 15 HP with 36in Side Discharge Mower

Product Name	Model/Part
Blade-Atomic	104-1301
Electric Starter Kit	104-8580
36 Inch Recycler Kit	105-3180
Weight Kit	106-5491
Soft Bag (3 Bushel)	30104
Steel Grass Catcher	30107
Tru Trak Sulky	30110
Blade	56-2390-03
Blade-Mulch	99-8549

NOTES

NOTES

NOTES


TORO®