Form No. 3458-721 Rev D

TORO®

Count on it.

Parts Catalog

ProLine H600

Rotary Mower

Model No. 31040—Serial No. 323000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3458-721 D

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Cutting Deck Blade and Pulley Assembly . . . 6
Cutting Deck Belt and Idlers Assembly . . . 8
Cutting Deck Frame and Casters Assembly . . . 10
Cutting Deck Anti-Scalp Assembly . . . 12
Cutting Deck Cover and Chute Assembly . . . 14
Cutting Deck Gearbox Assembly . . . 16
Cutting Deck and Lift Arms Assembly . . . 18
Exhaust Manifold Assembly . . . 20
Engine and Air Filter Assembly . . . 22
Engine Fuel Tank and Water Expansion Tank Assembly . . . 24
Main Frame Assembly . . . 26
Central Bar and Rear Axle Frame Assembly . . . 28
Operator Platform and Seat Assembly . . . 30
Gearbox Assembly No. 1 . . . 32
Gearbox Assembly No. 2 . . . 34
Transmission Assembly . . . 36
Transmission, PTO and Drive Shaft Assembly . . . 38
Parking Brakes Assembly . . . 40
Axle and Front Wheels Assembly . . . 42
Axle and Steering Rear Assembly . . . 44
Cooling Water System Assembly . . . 46
Body and Pedals Assembly . . . 48
Body Assembly . . . 50
Hydraulic Assembly No. 1 . . . 52
Hydraulic Assembly No. 2 . . . 54
Hydraulic Assembly No. 3 . . . 56
Hydraulic Assembly No. 4 . . . 58
Hopper and Frame Assembly . . . 60
Hopper Parts Assembly . . . 62
Hopper Electrical Assembly . . . 64
Hopper Lift Frame Assembly . . . 66
Electric Equipment Assembly . . . 68
Decals Assembly . . . 70
Crankcase Assembly . . . 72
Oil Pan Assembly . . . 74
Cylinder Head Assembly . . . 76
Gear Case Assembly . . . 78
Cylinder Head Cover Assembly . . . 80
Engine Oil Filter Assembly . . . 82
Engine Oil Dipstick Assembly . . . 84
Oil Pump Assembly . . . 86
Main Bearing Case Assembly . . . 88
Camshaft and Idle Gear Shaft Assembly . . . 90
Piston and Crankshaft Assembly . . . 92
Flywheel Assembly . . . 94
Fuel Camshaft Assembly . . . 96
Idle Apparatus Assembly . . . 98
Stop Solenoid Assembly . . . 100
Injection Pump Assembly . . . 102
Speed Control Plate Assembly . . . 104
Nozzle Holder and Glow Plug Assembly . . . 106
Nozzle Holder Component Assembly . . . 108
Governor Fork Lever Assembly . . . 110
Fuel Filter Assembly . . . 112

© 2025—The Toro® Company

8111 Lyndale Avenue South
Bloomington, MN 55420


Contact us at www.Toro.com.
Printed in the USA.

All Rights Reserved

Contents (continued)

Mechanical Fuel Pump Assembly 114
Alternator and Pulley Assembly 116
Alternator Components Assembly 118
Starter Installation Assembly 120
Starter Component Assembly 122
Oil Switch and Thermo Switch Assembly 124
Water Flange and Thermostat Assembly 126
Water Pump Assembly 128
Water Pipe Assembly. 130
Fan Assembly 132
Valve and Rocker Arm Assembly 134
Inlet Manifold Assembly 136
Exhaust Manifold Assembly 138
Accessories and Service Parts. 140
Operator Manual and Miscellaneous Engine Parts 142
Attachments and Accessories 144


Cutting Deck Blade and Pulley Assembly

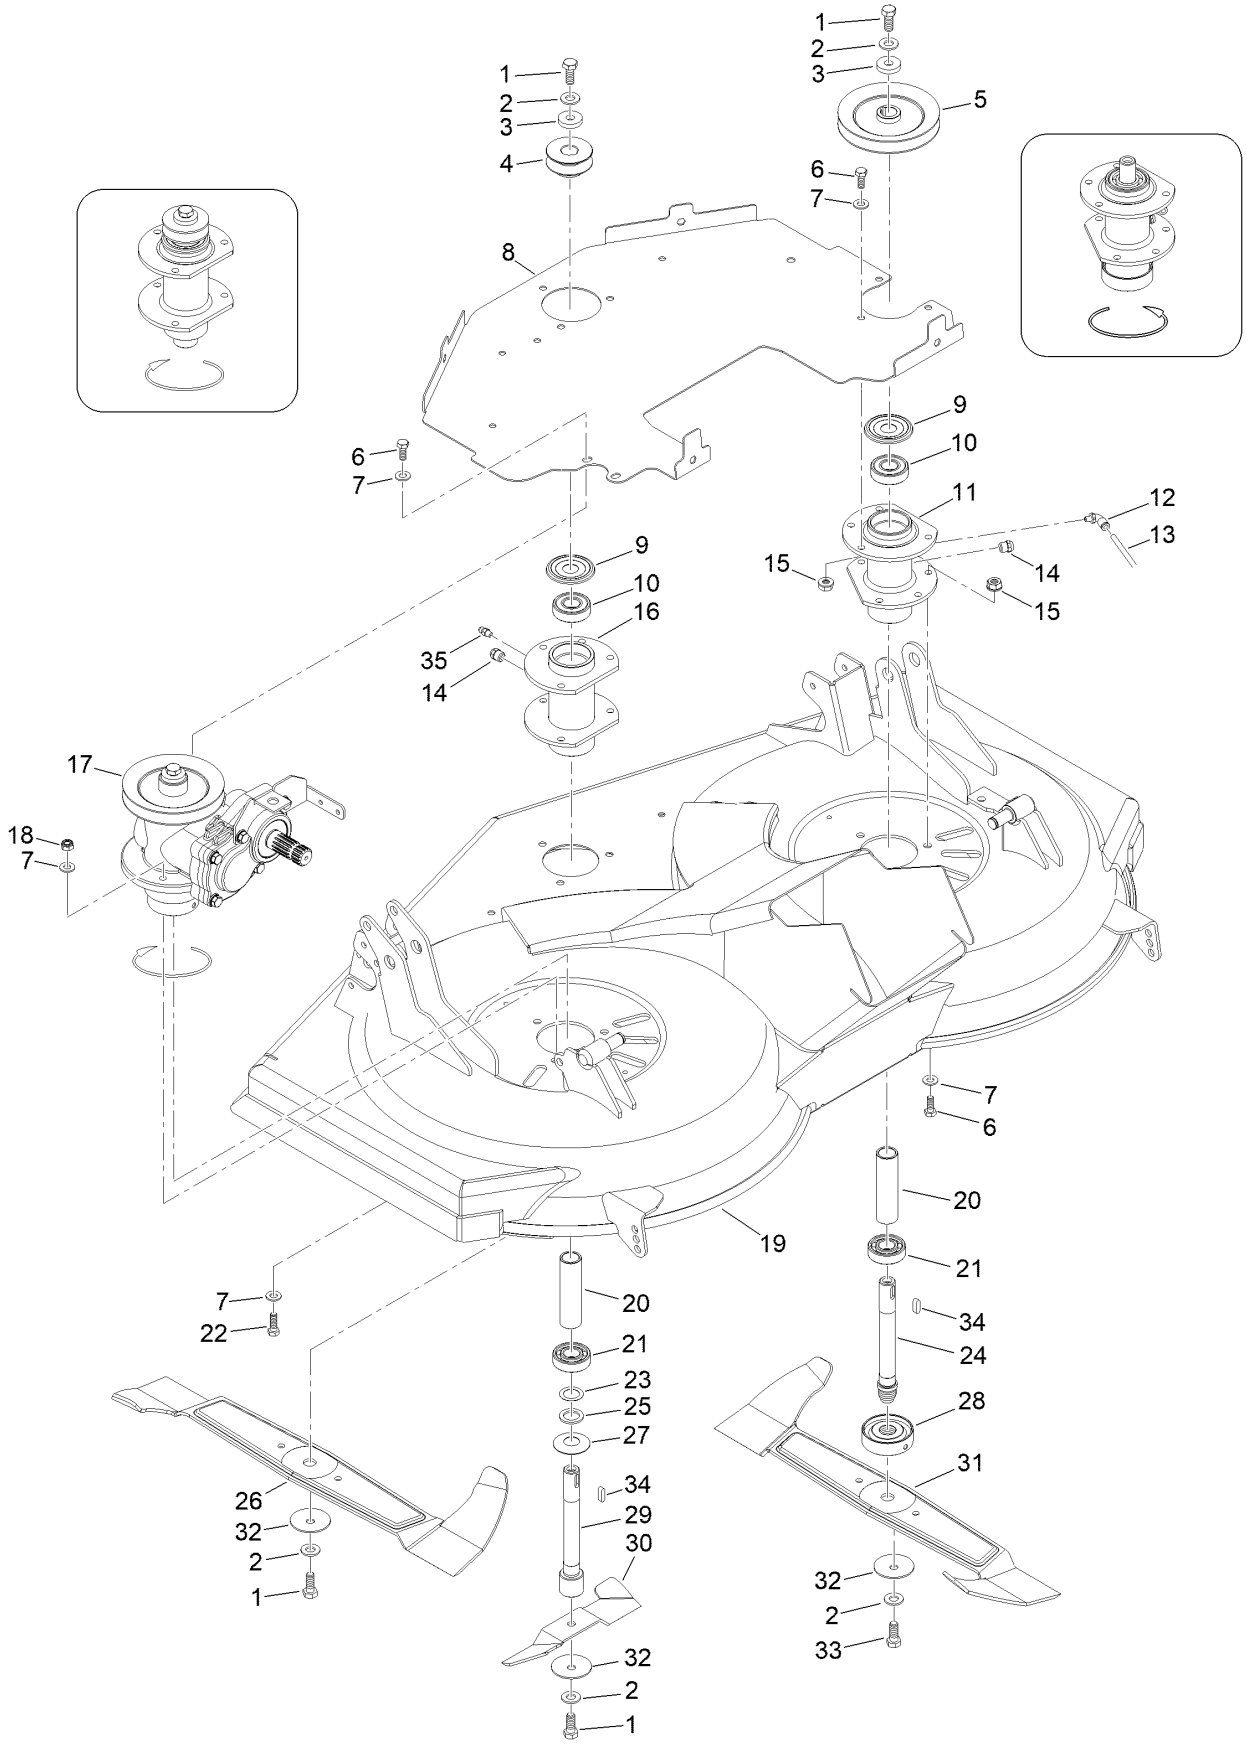

Cutting Deck Blade and Pulley Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-2956	4	Screw
2	134-1051	5	Washer
3	134-1337	2	Washer
4	134-9014	1	Pulley, Central Blade
5	134-9451	1	Pulley, Blade Shaft
6	134-1011	8	Screw
7	134-1045	14	Washer
8	134-9020	1	Shell, Deck
9	134-9002	2	Guard, Pulley Side
10	134-9001	2	Bearing, 6204 2Rs
11	134-9015	1	Hub, Right Blade
12	134-9017	1	Fitting, Taper
13	134-9038	1	Hose
14	134-9003	2	Purge Valve
15	134-1082	6	Nut
16	134-9000	1	Hub, Central Blade
17	134-9466	1	Deck Gearbox Assy
18	134-1092	3	Nut
19	134-9072	1	Deck, Chassis
20	134-9011	2	Spacer, Hub
21	134-9010	2	Bearing, 6204 Rs
22	134-1013	3	Screw
23	134-1354	1	Spacer
24	134-9008	1	Shaft-Blade, Right
25	134-9013	1	Shim
26	134-8390	1	Blade-Rotary, LH
27	134-9012	1	Guard, Blade Side
28	134-9007	1	Support-Blade, Right
29	134-9004	1	Shaft, Central Blade
30	134-8392	1	Blade-Rotary, Center
31	134-8391	1	Blade-Rotary, RH
32	134-9006	3	Washer, Belleville
33	134-1347	1	Screw-HH, LH Thd
34	134-8267	2	Key
35	134-1065	1	Fitting-Grease

Cutting Deck Belt and Idlers Assembly

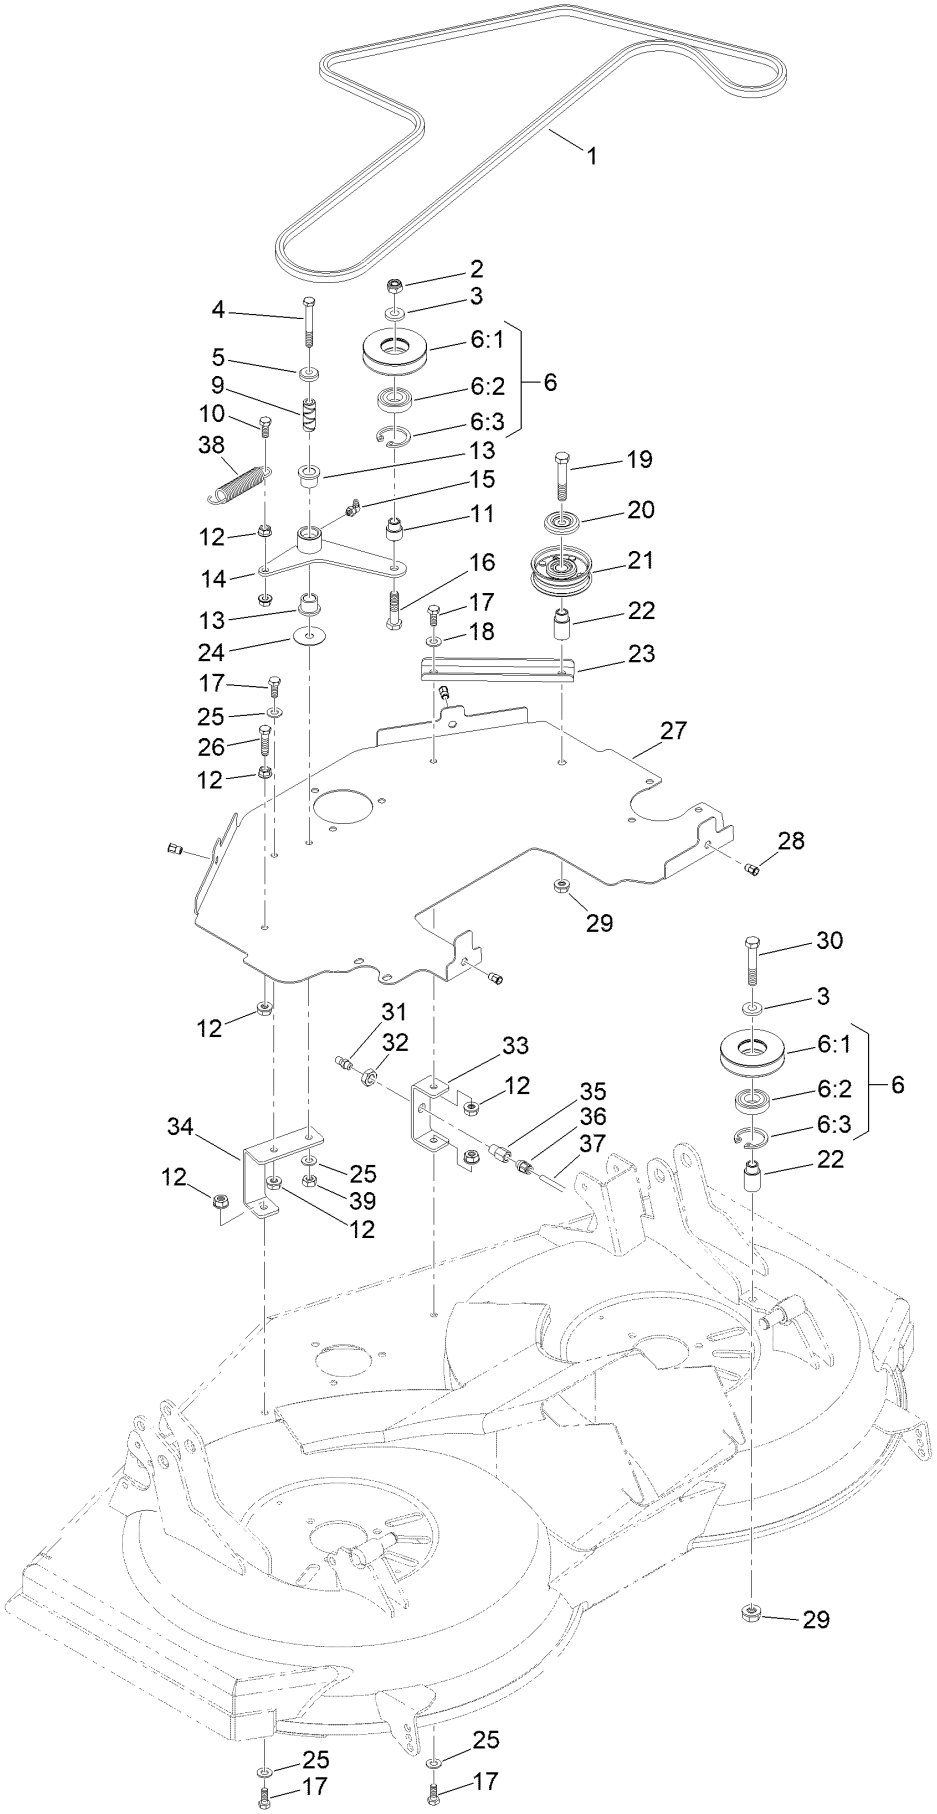


Cutting Deck Belt and Idlers Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9021	1	Belt, Deck
2	134-1081	1	Nut
3	134-9408	2	Washer
4	134-2953	1	Screw
5	134-9032	1	Washer
6	134-9178	2	Pulley Assy, Belt Tensioner
6:1		1	Pulley, Belt Tensioner ●
6:2	134-9176	1	Bearing
6:3	134-9175	1	Retainer
9	134-0730	1	Spacer
10	134-1015	1	Screw
11	134-9025	1	Bushing
12	134-1082	8	Nut
13	134-2954	2	Bushing
14	134-9026	1	Bracket, Deck Belt Tensioner
15	134-9034	1	Nipple, Grease
16	134-9031	1	Screw, HH Cap
17	134-1011	4	Screw
18	134-3126	1	Washer
19	134-3090	1	Screw
20	134-9023	1	Guard, Idler
21	134-9022	1	Pulley, Idler
22	134-9024	2	Bushing
23	134-9030	1	Reinforcement Bracket
24	134-9029	1	Shim
25	134-1045	4	Washer
26	134-1014	1	Screw
27	134-9020	1	Shell, Deck
28	134-1257	4	Insert-Threaded
29	134-3009	2	Nut
30	134-8134	1	Screw-HH
31	134-1065	1	Fitting-Grease
32	134-1035	1	Nut
33	134-9035	1	Bracket, Shell RH
34	134-9033	1	Bracket, Shell LH
35	134-9036	1	Fitting
36	134-9037	1	Fitting-Straight
37	134-9038	1	Hose
38	134-9028	1	Spring-Extension
39	134-1092	1	Nut

● Not serviced separately


Cutting Deck Frame and Casters Assembly

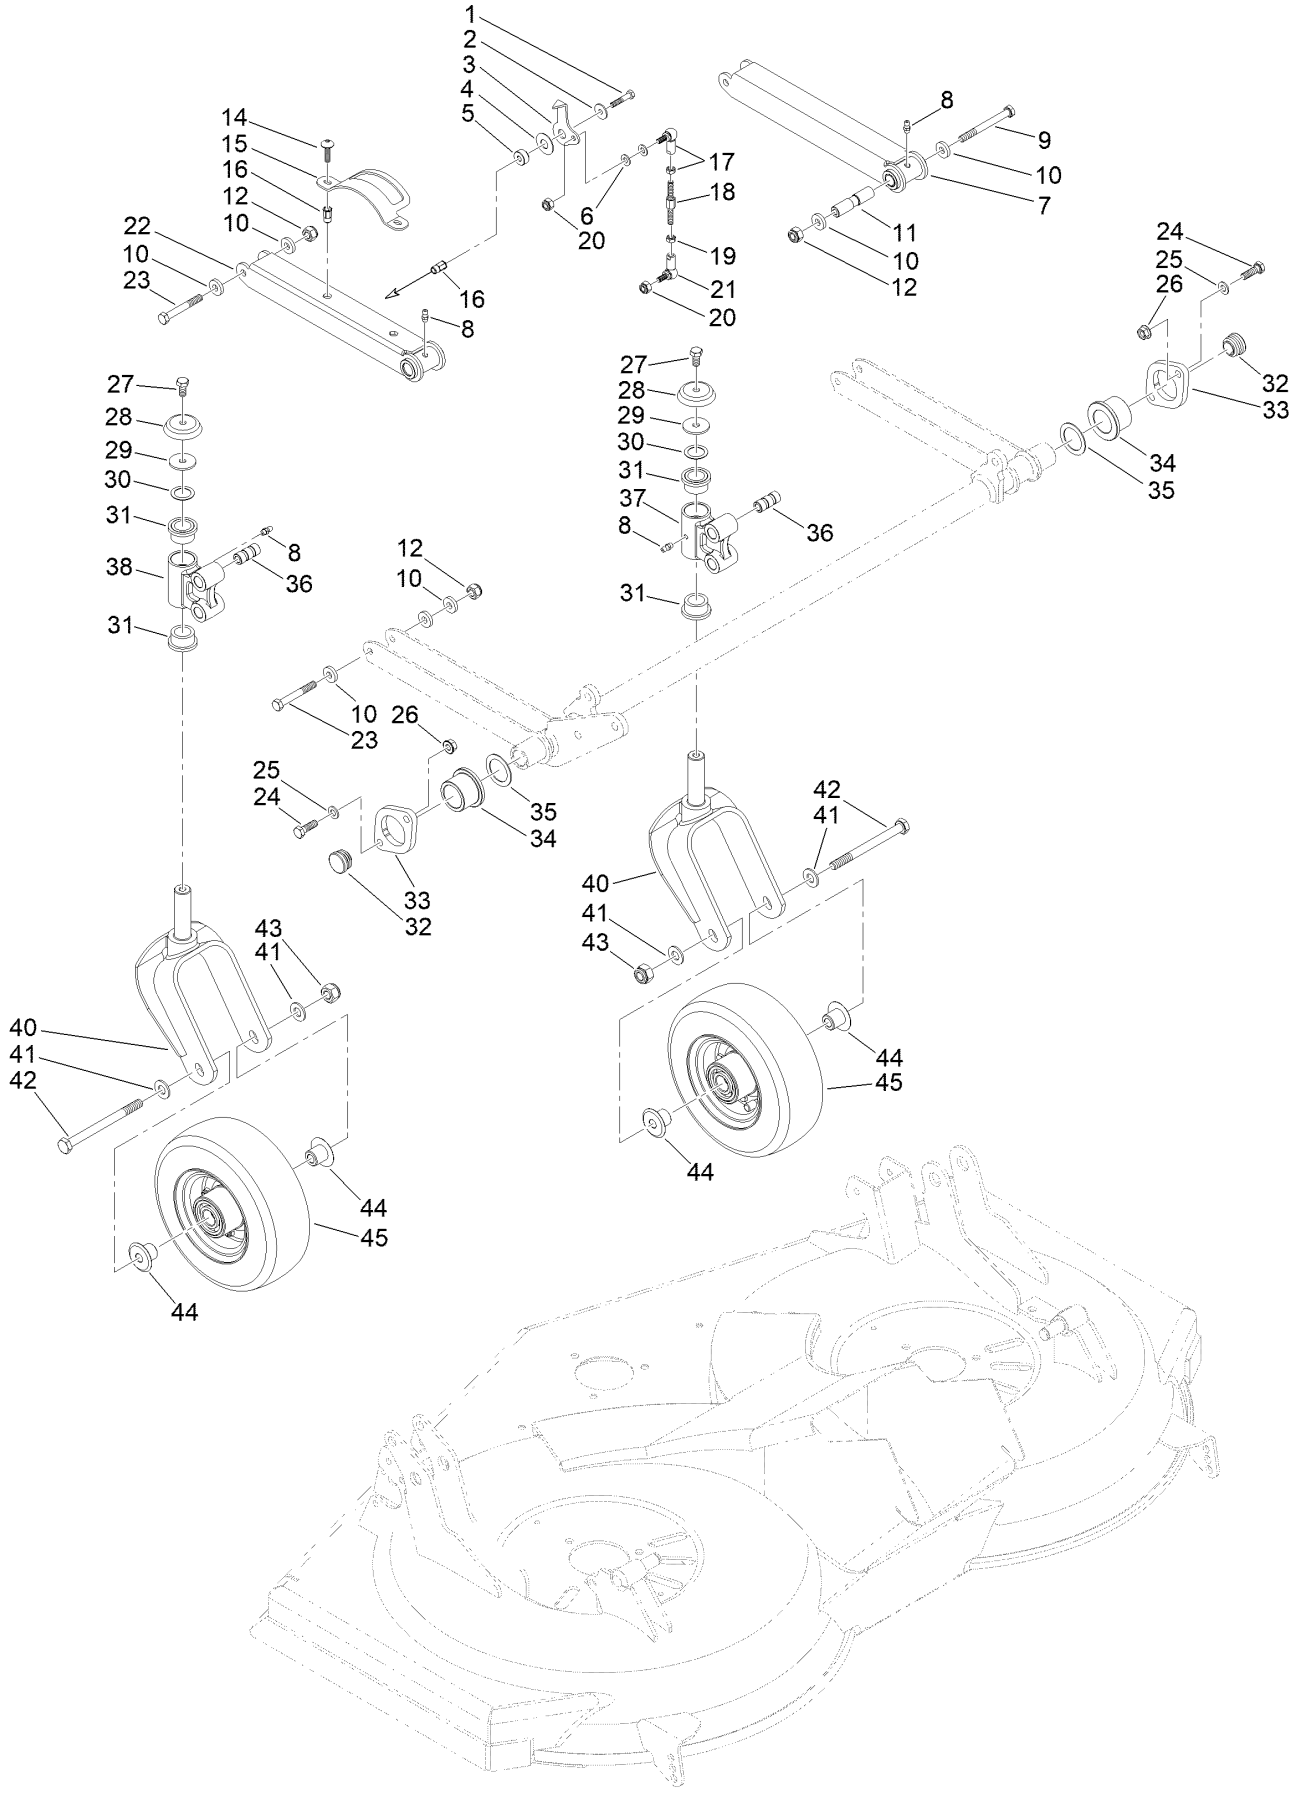

Cutting Deck Frame and Casters Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-3019	1	Screw
2	134-1234	1	Washer
3	134-9055	1	Indicator, HOC
4	134-9056	1	Washer, Belleville
5	134-9057	1	Bushing
6	134-1044	2	Washer
7	134-9042	1	Arm Assy, RH Castor Wheel
8	134-1065	4	Fitting-Grease
9	134-9040	1	Screw
10	134-0997	10	Washer
11	134-9048	1	Pivot, Arms
12	134-1038	4	Nut
14	134-1304	2	Screw
15	134-9044	1	Bracket, HOC Decal
16	134-1194	3	Insert-Threaded
17	134-9059	1	Tie, Rod-End
18	134-9058	1	Rod
19	134-1083	1	Nut
20	134-1042	2	Nut
21	134-1327	1	Articulation
22	134-9045	1	Arm Assy, LH Castor Wheel
23	134-1024	3	Screw
24	134-1015	4	Screw
25	134-1045	4	Washer
26	134-1082	4	Nut
27	134-1010	2	Screw
28	134-9054	2	Guard, Castor Wheel
29	134-8239	2	Washer
30	134-1354	2	Spacer
31	134-9043	4	Bushing
32	134-9052	2	Plug
33	134-9049	2	Flange, Bar
34	134-9050	2	Bushing
35	134-9051	2	Shim
36	134-9047	2	Pivot, Joint
37	134-9053	1	Joint, RH Castor Wheel
38	134-9039	1	Joint, LH Castor Wheel
40	134-9041	2	Yoke, Castor Wheel
41	134-1046	4	Washer
42	134-1295	2	Screw
43	134-1081	2	Nut
44	134-0731	4	Bushing
45	134-9046	2	Castor Wheel Assy


Cutting Deck Anti-Scalp Assembly

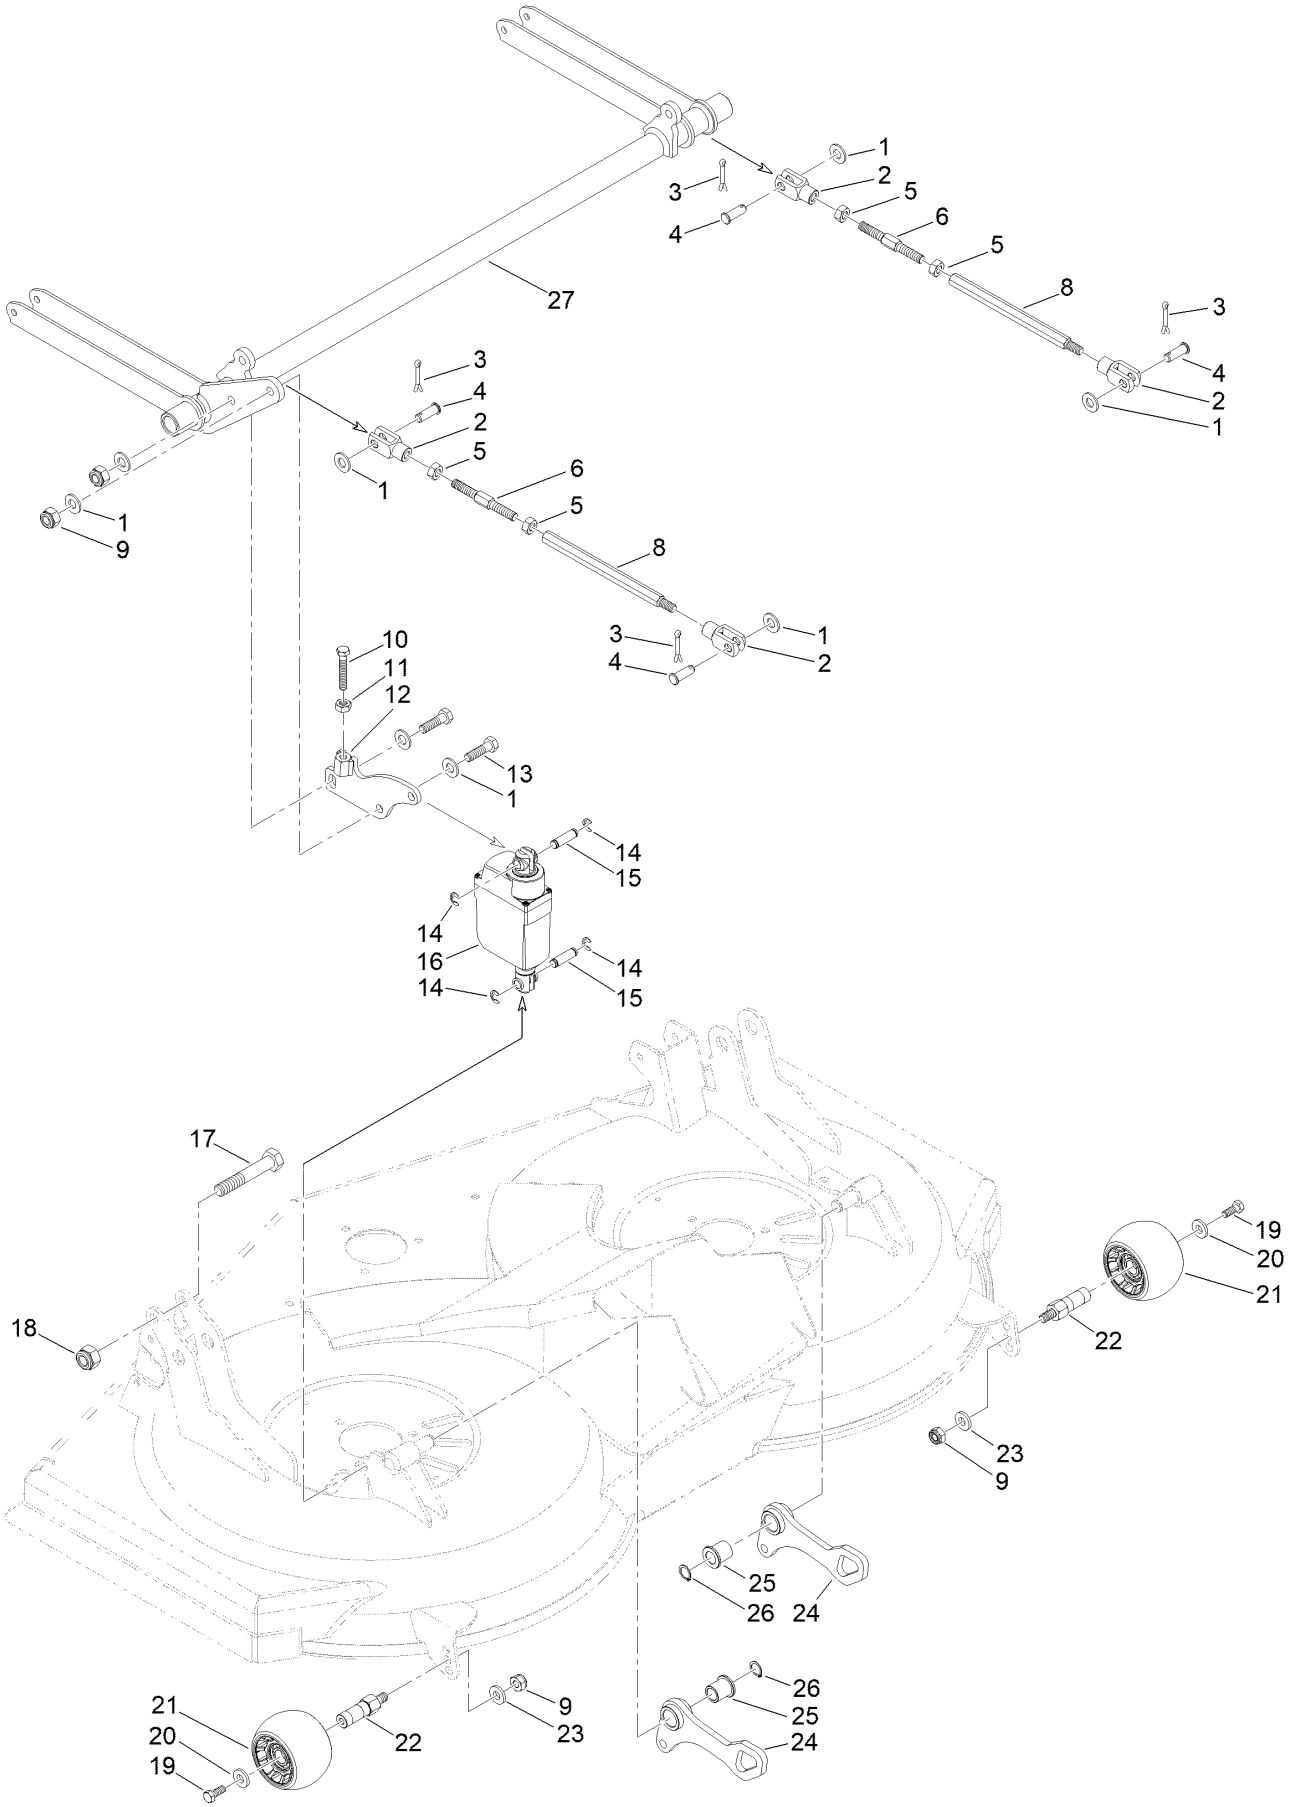


Cutting Deck Anti-Scalp Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-1046	8	Washer
2	134-1241	4	Fork
3	134-2957	4	Pin-Split
4	134-1242	4	Pin
5	134-9069	4	Nut
6	134-9068	2	Rod-Adjustment
8	134-9070	2	Rod
9	134-1081	4	Nut
10	134-9354	1	Screw-HH
11	134-1034	1	Nut
12	134-9065	1	Bracket, Electric Actuator
13	134-1023	2	Screw
14	134-2966	4	Ring Snap
15	134-9063	2	Pin, Electric Actuator
16	134-9064	1	Actuator, Electric
17	134-9062	1	Screw, HH Cap
18	134-2969	1	Nut
19	134-1011	2	Screw
20	134-0997	2	Washer
21	134-0639	2	Wheel-Anti Scalp
22	134-9060	2	Pivot, Anti-Scalp Wheel
23	134-9449	2	Washer
24	134-9061	2	Pivot-Arm, Connecting Rod
25	134-1264	2	Bushing
26	134-9274	2	Retainer
27	134-9066	1	Torsion-Bar, Deck

Cutting Deck Cover and Chute Assembly

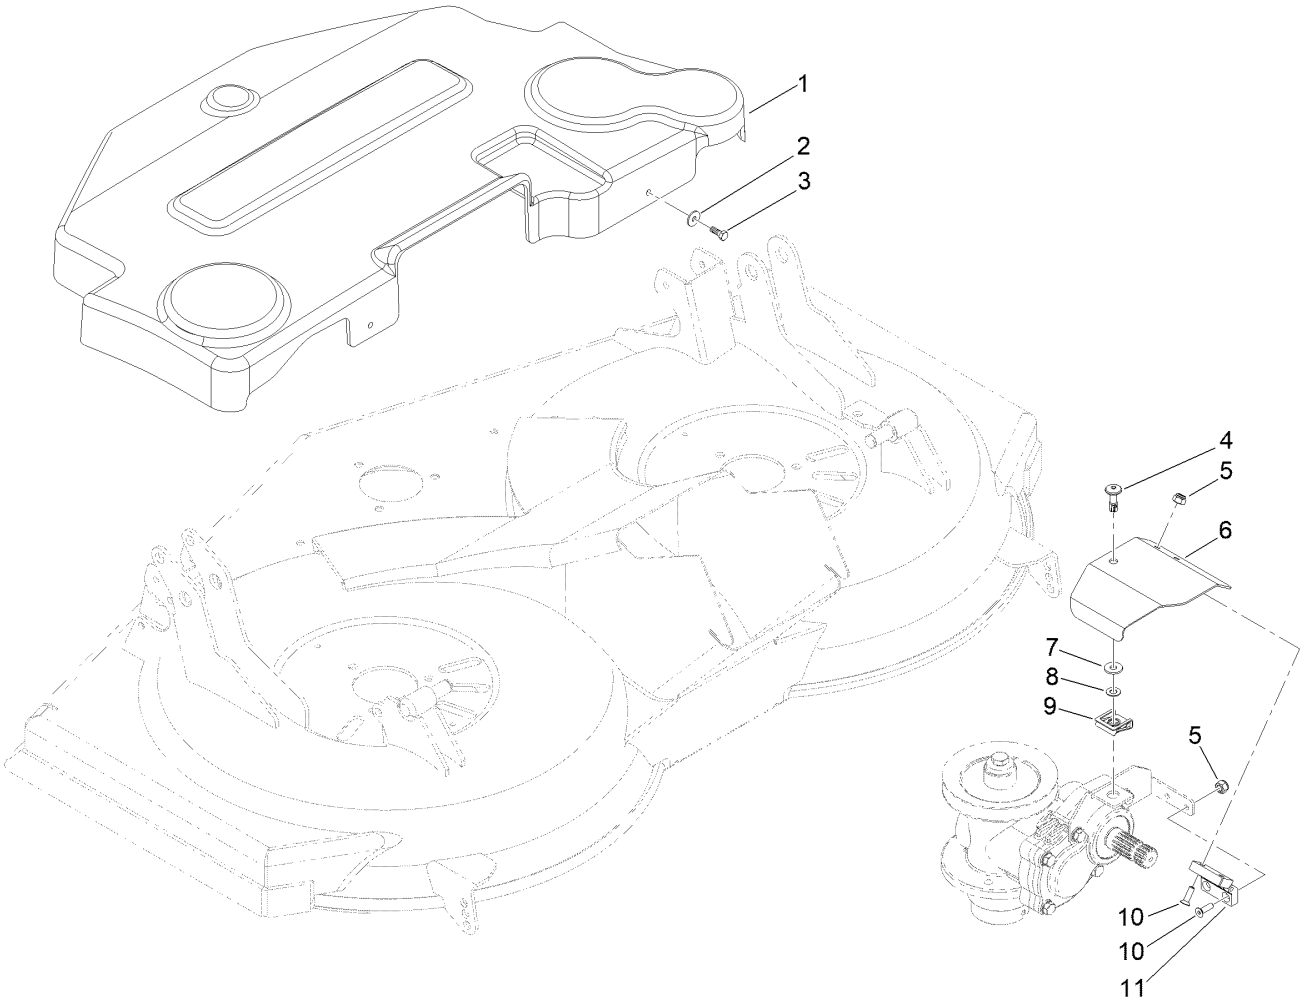


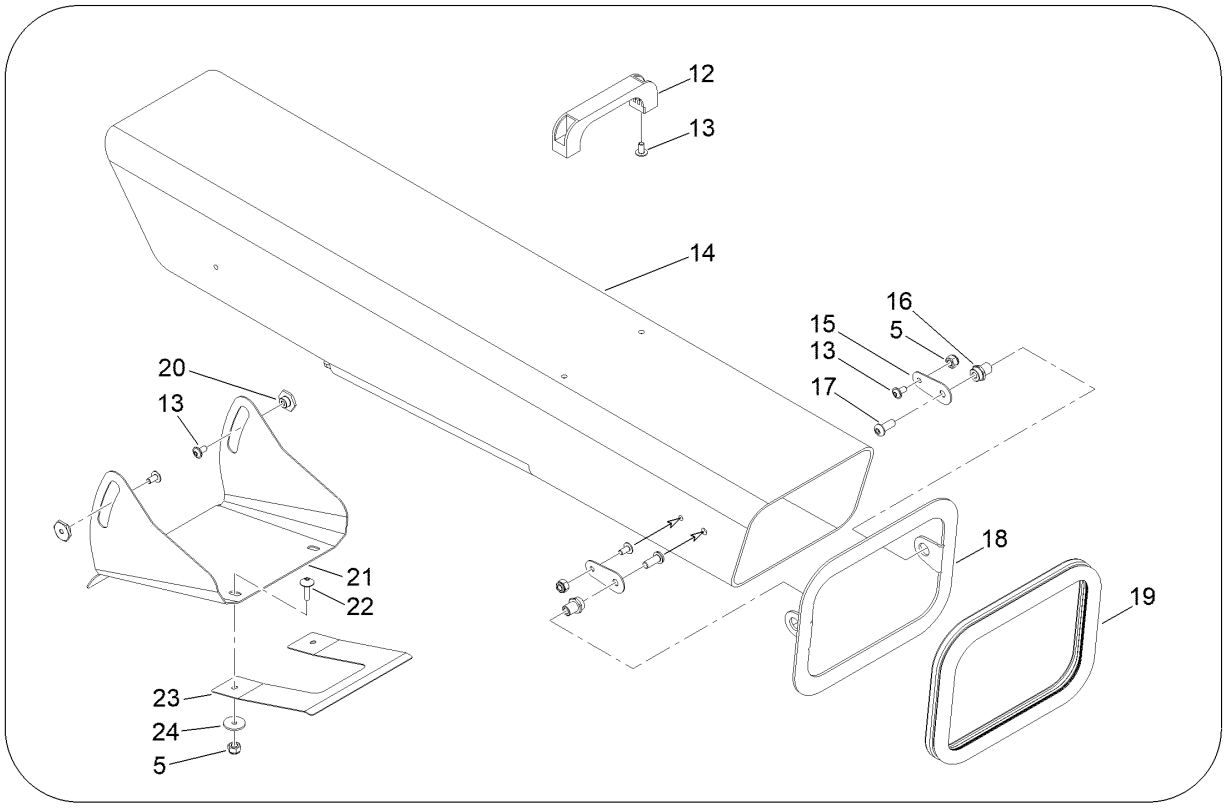

Cutting Deck Cover and Chute Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9071	1	Cover, Deck
2	134-1234	4	Washer
3	134-1008	4	Screw
4	134-9082	1	Fastener-Retained
5	134-1042	8	Nut
6	134-9080	1	Cover, Cardan Shaft
7	134-3003	1	Washer
8	134-1192	1	Washer
9	134-1193	1	Plate-Small
10	134-3111	4	Screw
11	134-1147	1	Hinge-Plastic
12	134-1140	1	Handle
13	134-1314	6	Screw
14	134-9073	1	Chute
15	134-9078	2	Plate, Chute
16	134-9076	2	Pin, Chute
17	134-9149	2	Screw, H-Sckt B Head
18	134-9074	1	Frame, Chute
19	134-9077	1	Gasket, Chute
20	134-0803	2	Pin
21	134-9075	1	Bulkhead, Chute
22	134-1304	2	Screw
23	134-0801	1	Plate
24	134-1232	2	Washer


Cutting Deck Gearbox Assembly

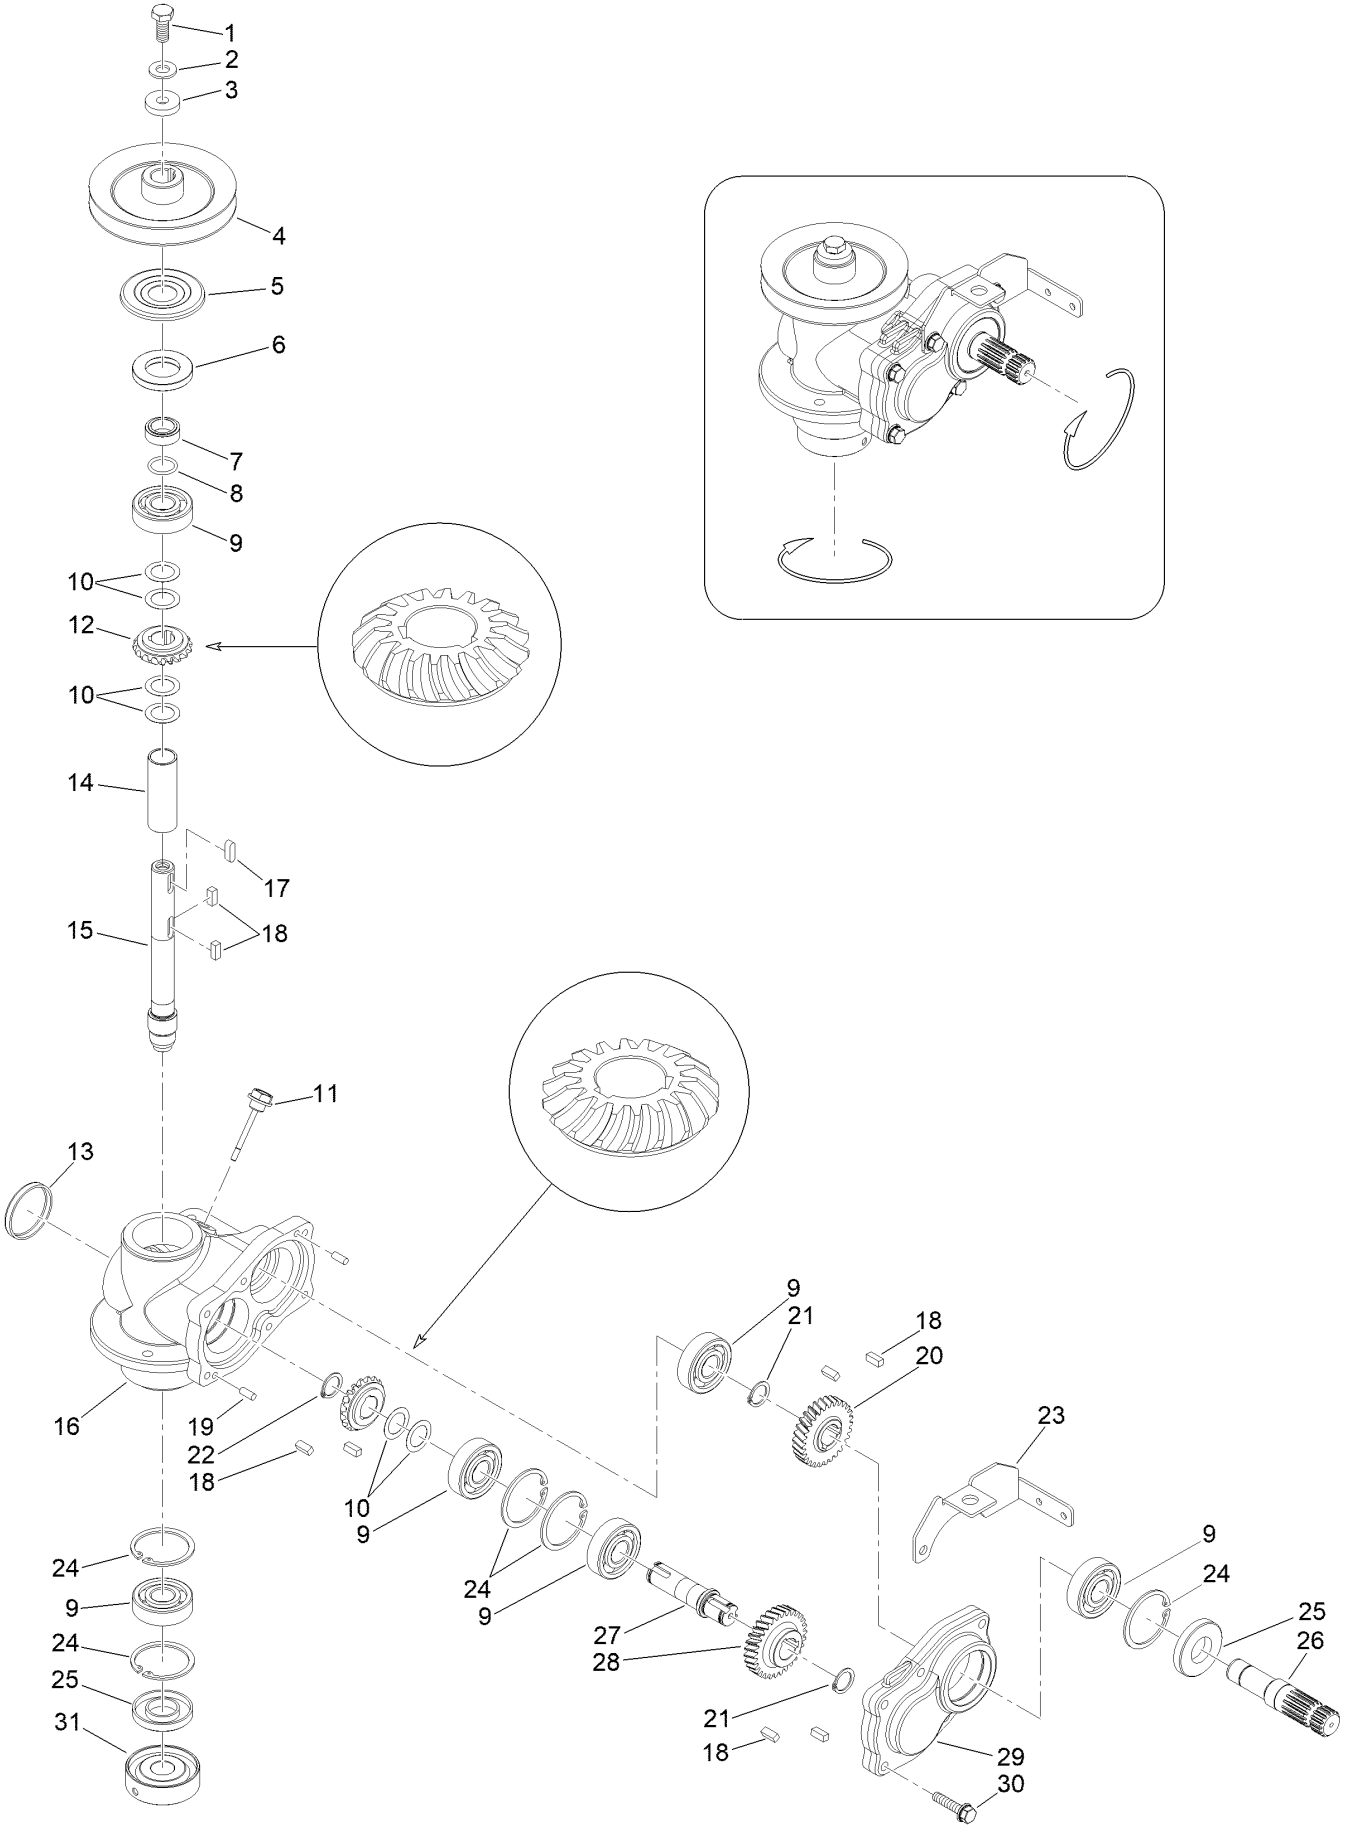

Cutting Deck Gearbox Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-2956	1	Screw
2	134-1051	1	Washer
3	134-1337	1	Washer
4	134-9451	1	Pulley, Blade Shaft
5	134-9452	1	Guard, Deck Gearbox
6	134-9453	1	Oil Seal
7	134-9454	1	Ring, Deck Gearbox
8	134-9455	1	O-Ring,
9	134-1110	6	Bearing
10	134-1354	6	Spacer
11	134-9456	1	Dipstick, Transmission
12	134-9457	1	Spiral Bevel Gear, LH
13	134-1238	1	Cap
14	134-9459	1	Spacer
15	134-9460	1	Shaft, LH Blade
16	134-9458	1	Gearbox, Deck
17	134-8267	1	Key
18	134-1341	8	Key-Shaft
19	134-9462	2	Pin
20	134-9470	1	Gear, Helical-LH
21	134-1060	3	Ring-Retaining, Int
22	134-9464	1	Spiral Bevel Gear, RH
23	134-9465	1	Support, Cardan Shaft Cover
24	134-1057	5	Ring-Retaining, Int
25	134-9481	2	Seal, Oil
26	134-9471	1	Shaft, Primary Deck Gearbox
27	134-9468	1	Shaft, Secondary Deck Gearbox
28	134-9469	1	Gear, Helical-LH
29	134-9461	1	Cover, Deck Gearbox
30	134-9463	6	Screw-HHF
31	134-9467	1	Support, Blade


Cutting Deck and Lift Arms Assembly

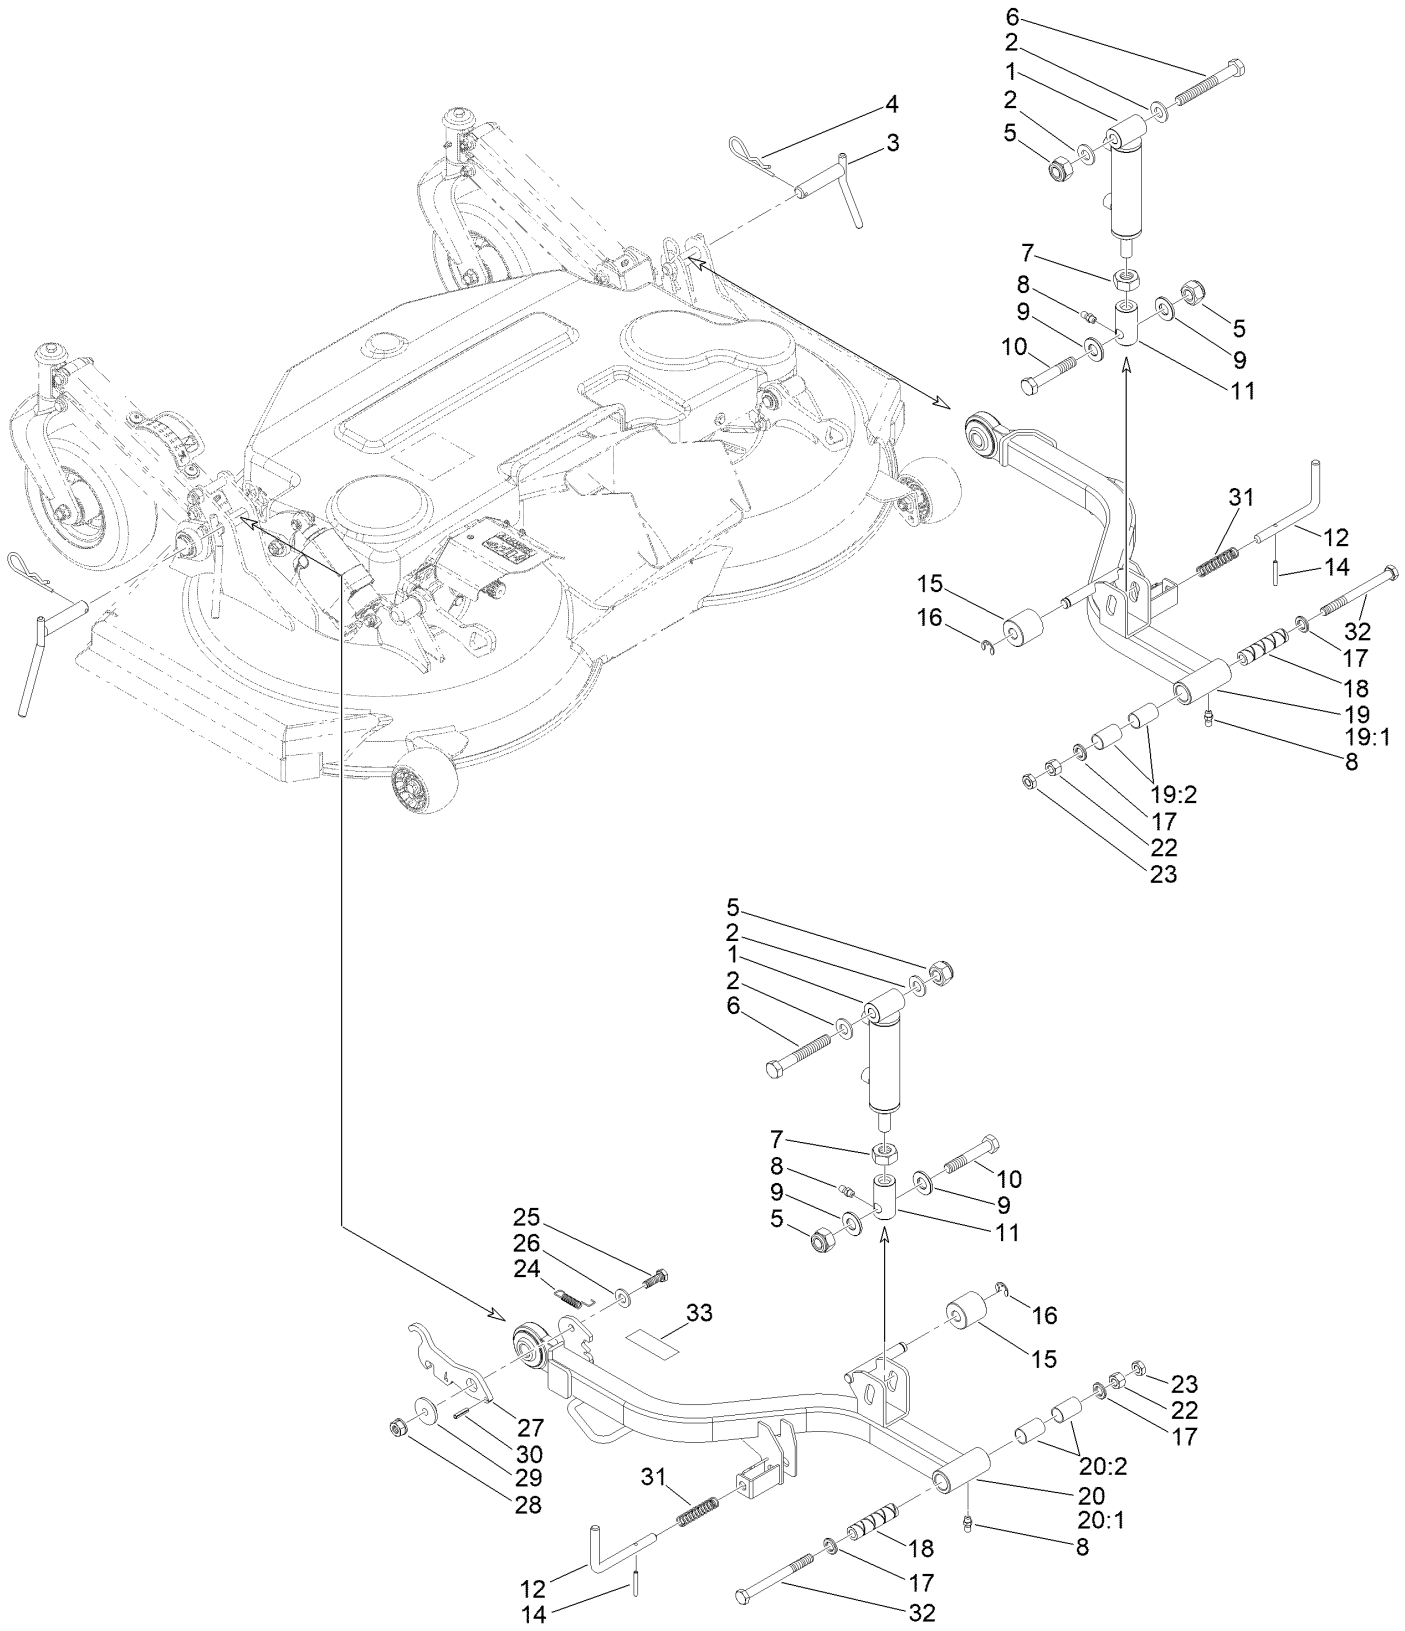

Cutting Deck and Lift Arms Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9337	2	Ram
2	134-3012	4	Washer
3	134-9091	2	Pin-Pivot
4	134-1098	2	Pin-Spring
5	134-1090	4	Nut
6	134-9089	2	Screw, HH Cap
7	134-1037	2	Nut
8	134-1065	4	Fitting-Grease
9	134-0977	4	Washer-Plastic
10	134-9090	2	Screw, HH Cap
11	134-0692	2	Support
12	134-0660	2	Pin-Unhooking
14	134-1205	2	Plug-Spirol
15	134-9083	2	Roller, Platform
16	134-2964	2	Ring-Snap
17	134-8073	4	Washer-Plain, Chamfered
18	134-0899	2	Bushing
19	134-9085	1	RH Arm Assy, Deck
19:1	134-9086	1	RH Arm, Deck
19:2	134-1187	2	Bushing
20	134-9087	1	LH Arm Assy, Deck
20:1	134-9088	1	LH Arm, Deck
20:2	134-1187	2	Bushing
22	134-8075	2	Nut-Hex
23	134-1035	2	Nut
24	134-0695	1	Spring
25	134-1023	1	Screw
26	134-1046	1	Washer
27	134-9084	1	Hook, Deck
28	134-3009	1	Nut
29	134-0710	1	Bushing
30	134-1136	1	Plug-Spirol
31	134-0641	2	Spring
32	134-8074	2	Screw-HH
33	134-9472	2	Tape, Non-Slip


Exhaust Manifold Assembly

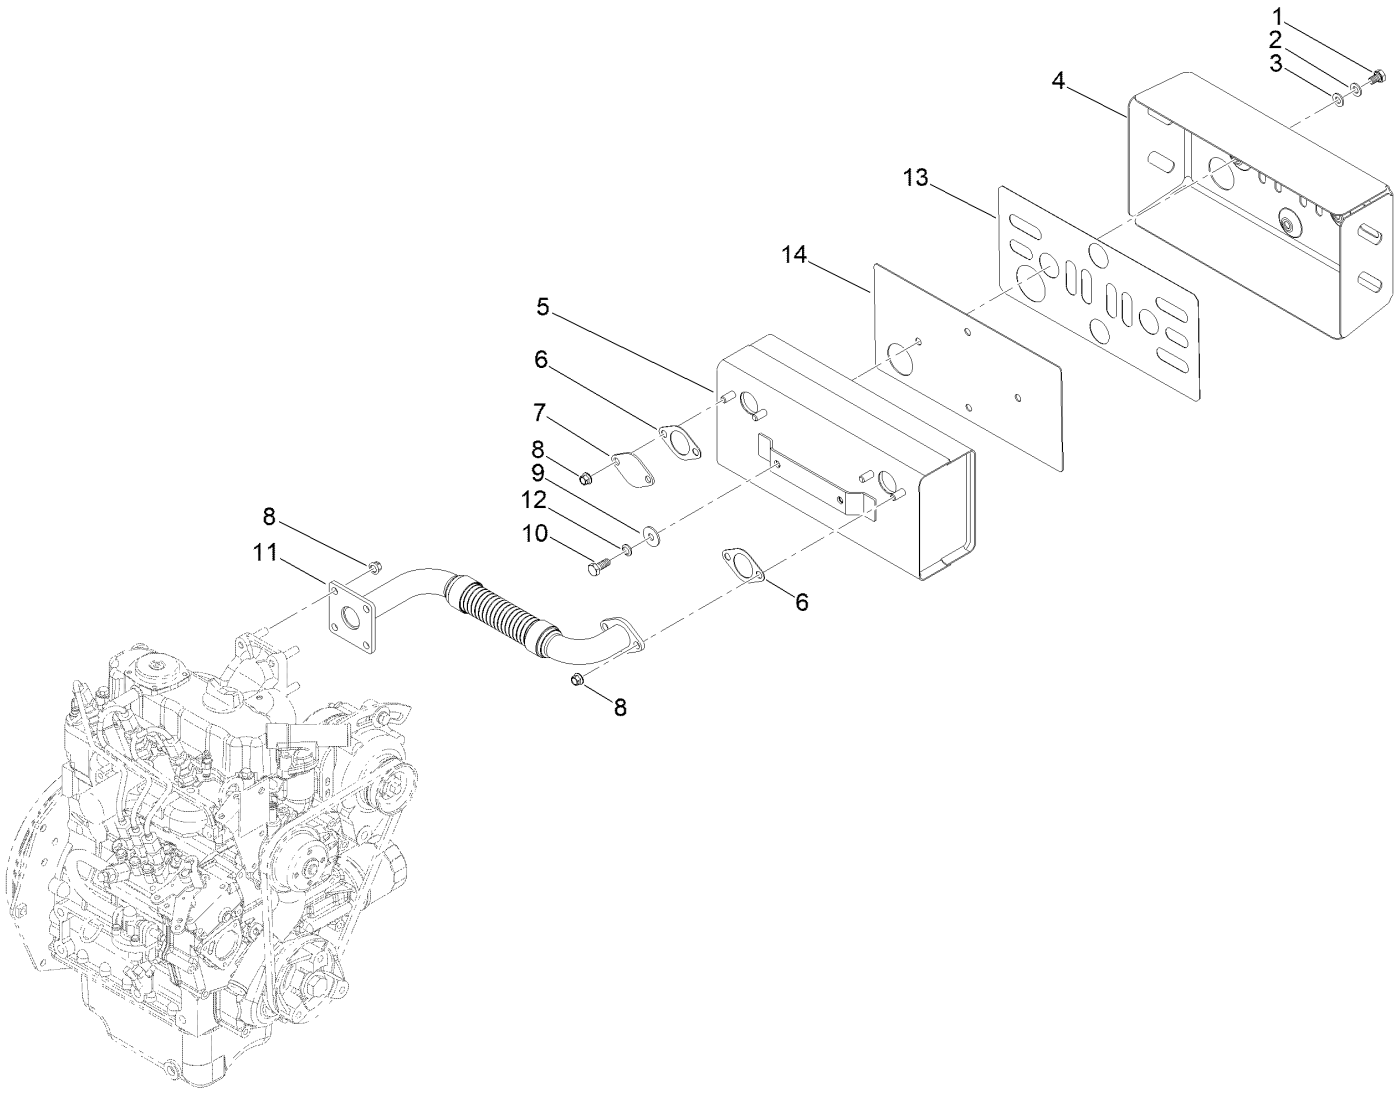

Exhaust Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9095	4	Screw
2	134-1054	4	Washer
3	134-1045	4	Washer
4	134-9098	1	Cover, Muffler
5	134-9096	1	Muffler
6	134-9093	2	Gasket, Muffler
7	134-9094	1	Flange, Muffler
8	134-1166	8	Nut
9	134-3126	2	Washer
10	134-1011	2	Screw
11	134-9097	1	Manifold, Exhaust
12	134-1054	2	Washer
13	134-9847	1	Tape, Muffler
14	134-9848	1	Plate, Spacer-Muffler


Engine and Air Filter Assembly

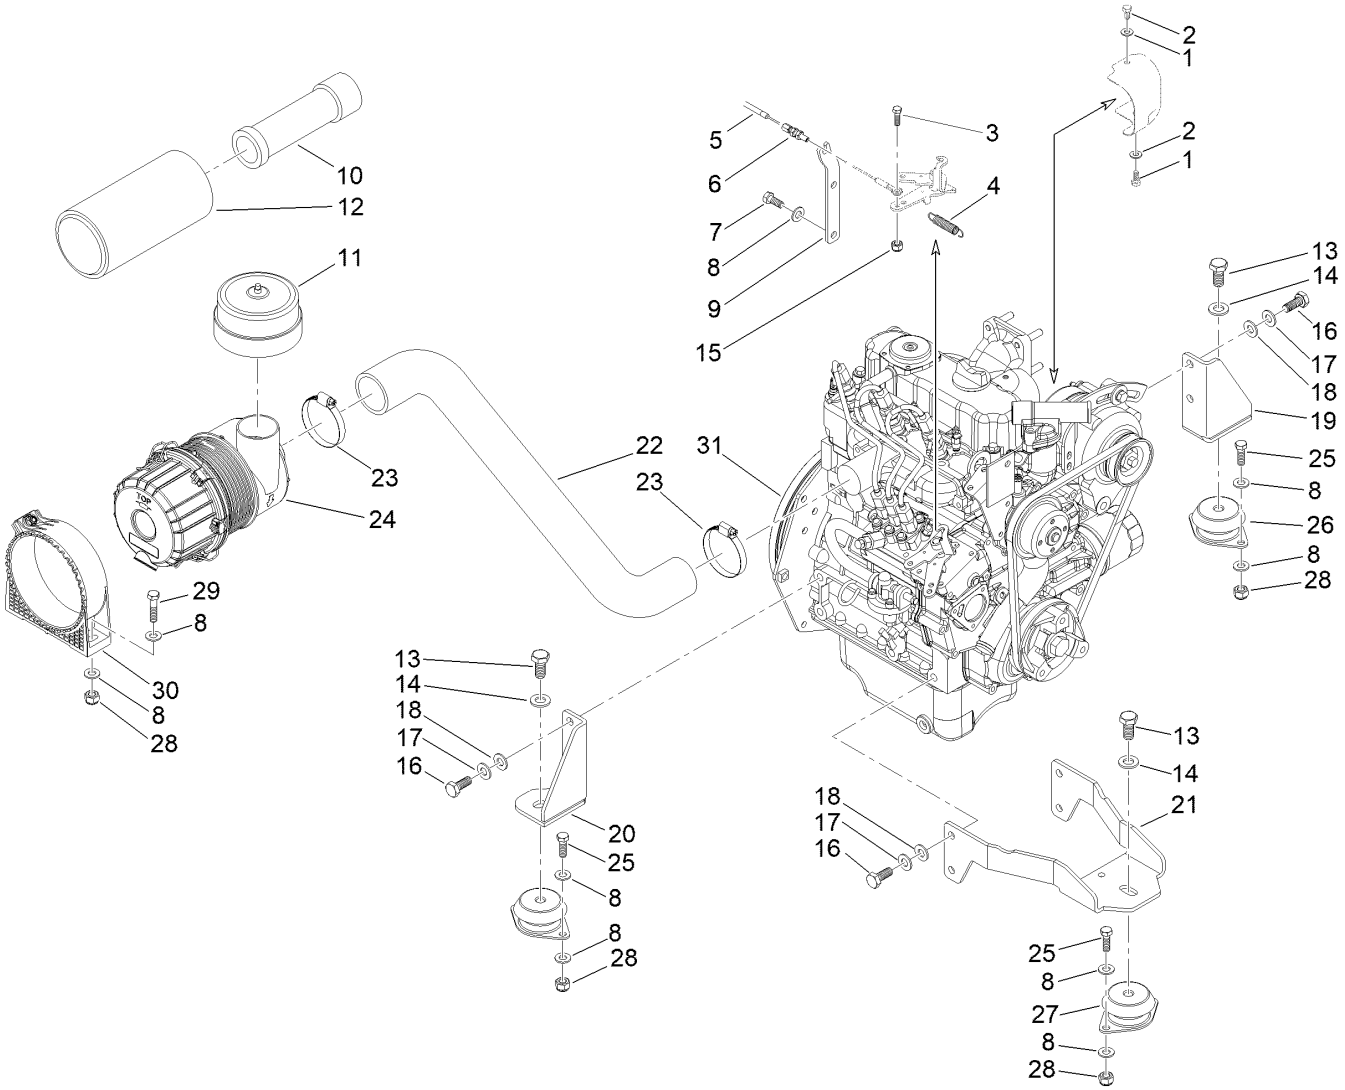

Engine and Air Filter Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9104	2	Screw-HH, Cap
2	134-1044	2	Washer
3	134-1008	1	Screw
4	134-9110	1	Spring
5	134-9163	1	Cable, Throttle
6	134-9111	1	Screw HH
7	134-1011	2	Screw
8	134-1045	18	Washer
9	134-9113	1	Bracket, Throttle Cable
10	134-0576	1	Element-Air Filter, Inner
11	134-0567	1	Prefilter-Air
12	134-0574	1	Cartridge-Filter
13	134-1020	3	Screw
14	134-1047	3	Washer
15	134-1042	1	Nut
16	134-2956	8	Screw
17	134-1051	8	Washer
18	134-1046	8	Washer
19	134-9105	1	Support-Front, Engine RH
20	134-9108	1	Support-Front, Engine LH
21	134-9112	1	Engine Support, Rear
22	134-9109	1	Hose, Engine Intake
23	134-1103	2	Clamp
24	134-0575	1	Filter-Air
25	134-1015	6	Screw
26	134-9103	2	Shock Absorber
27	134-1157	1	Shock Absorber
28	134-1038	8	Nut
29	134-1014	2	Screw
30	134-1177	1	Clamp
31	134-9670	1	Engine (Kubota D722 E4B)


Engine Fuel Tank and Water Expansion Tank Assembly

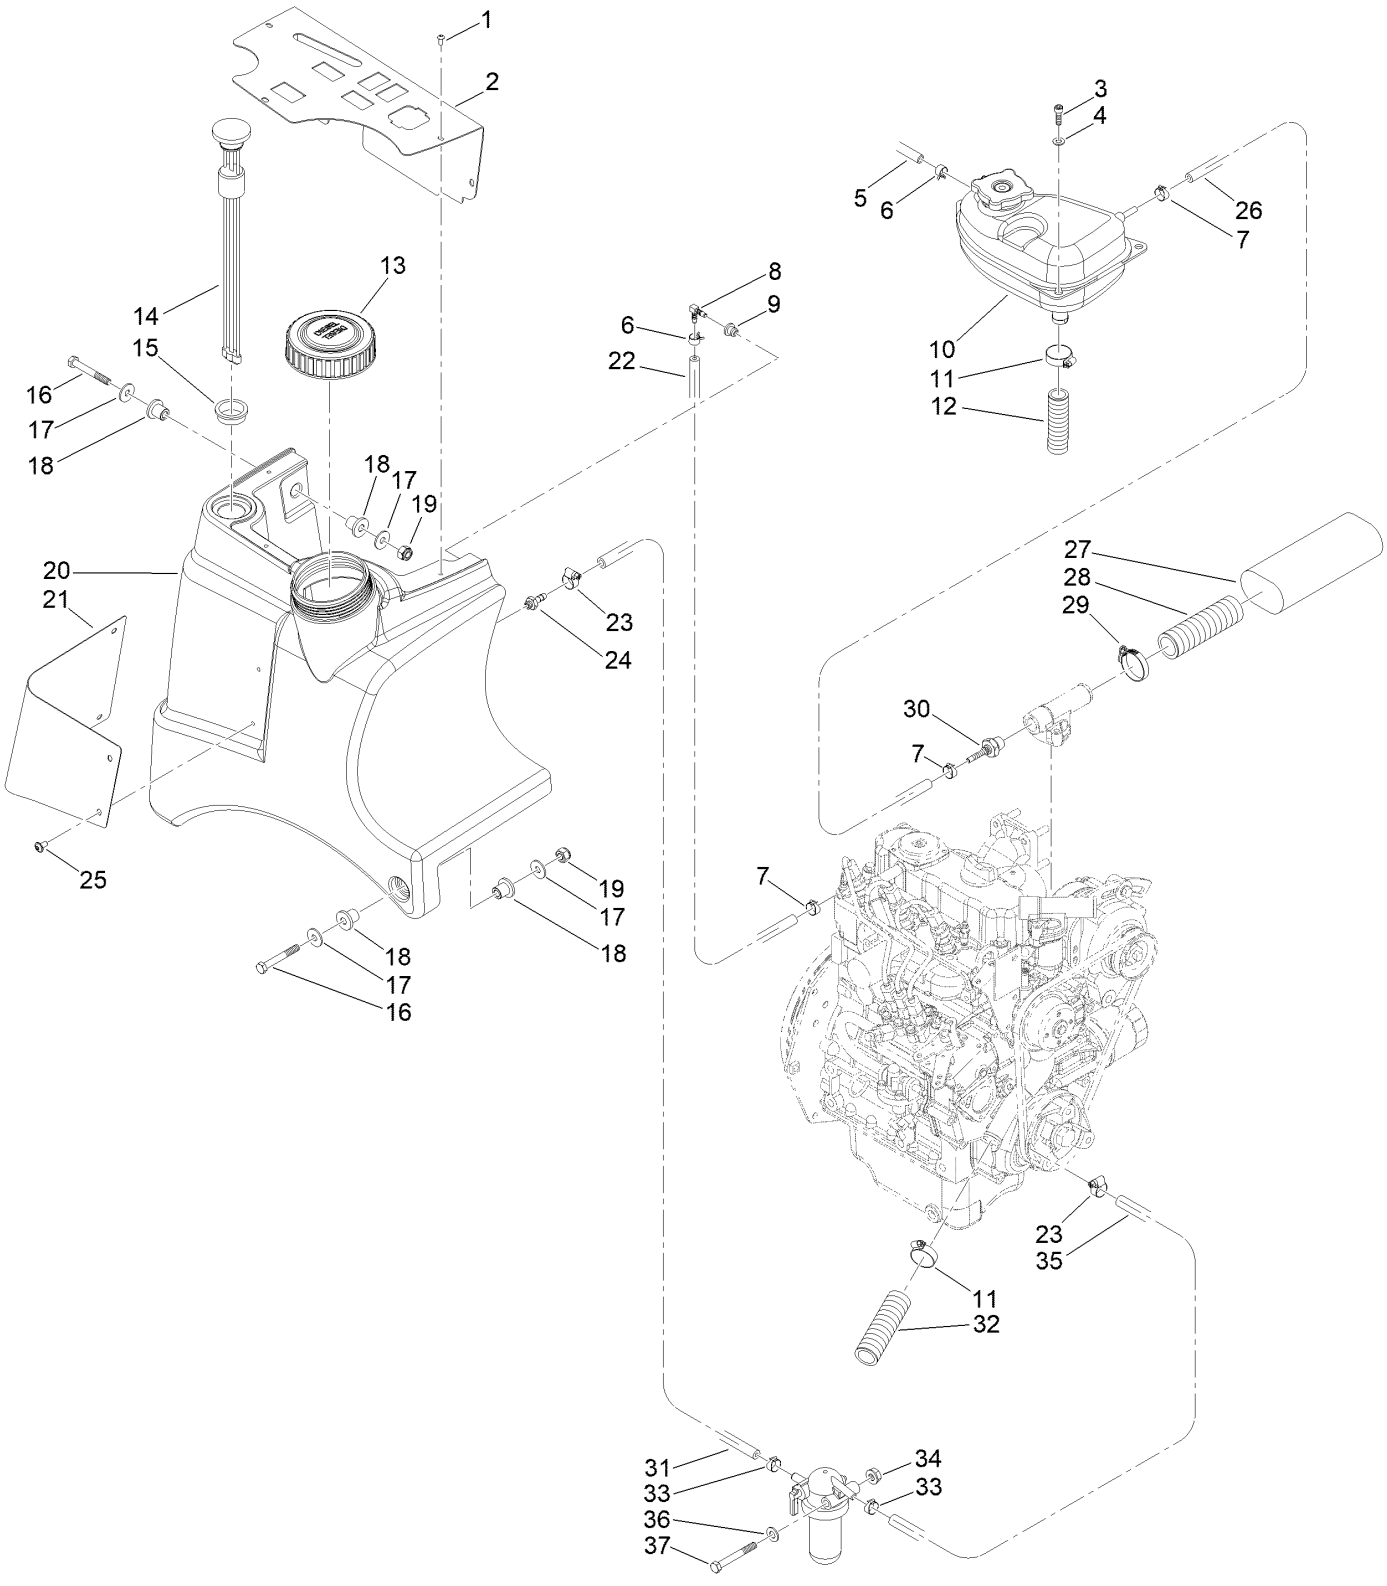

Engine Fuel Tank and Water Expansion Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9117	5	Screw-H-Sckt B Head Cap
2	134-9116	1	Dashboard, LH
3	134-1071	3	Screw
4	134-1044	3	Washer
5	134-2973	1	Pipe
6	134-1199	2	Clamp
7	134-1200	3	Clamp
8	134-9124	1	Fitting, 90 DEG
9	134-9125	1	Gasket, Fitting Ws5
10	134-9130	1	Water Expansion Tank
11	134-9320	2	Clamp
12	134-9268	1	Hose, Radiator
13	134-1988	1	Cap-Tank, Diesel
14	134-9118	1	Fuel Gauge
15	134-9119	1	Gasket, Fuel Gauge
16	134-1024	3	Screw
17	134-3126	6	Washer
18	134-9120	6	Bushing
19	134-1038	3	Nut
20	134-9128	1	Fuel Tank
21	134-9122	1	Cover, Fuel Tank
22	134-9129	1	Hose
23	134-8234	2	Clip-Worm
24	134-9121	1	Fitting,
25	134-1314	4	Screw
26	134-9115	1	Hose
27	134-9266	1	Hose Guard
28	134-9265	1	Hose, Radiator 25X1240
29	134-1277	1	Clamp
30	134-9114	1	Fitting-Taper
31	134-9127	1	Hose-Rubber
32	134-9267	1	Hose, Radiator
33	134-1203	2	Clamp
34	134-1082	1	Nut
35	134-9126	1	Hose
36	134-1045	1	Washer
37	134-2953	1	Screw


Main Frame Assembly

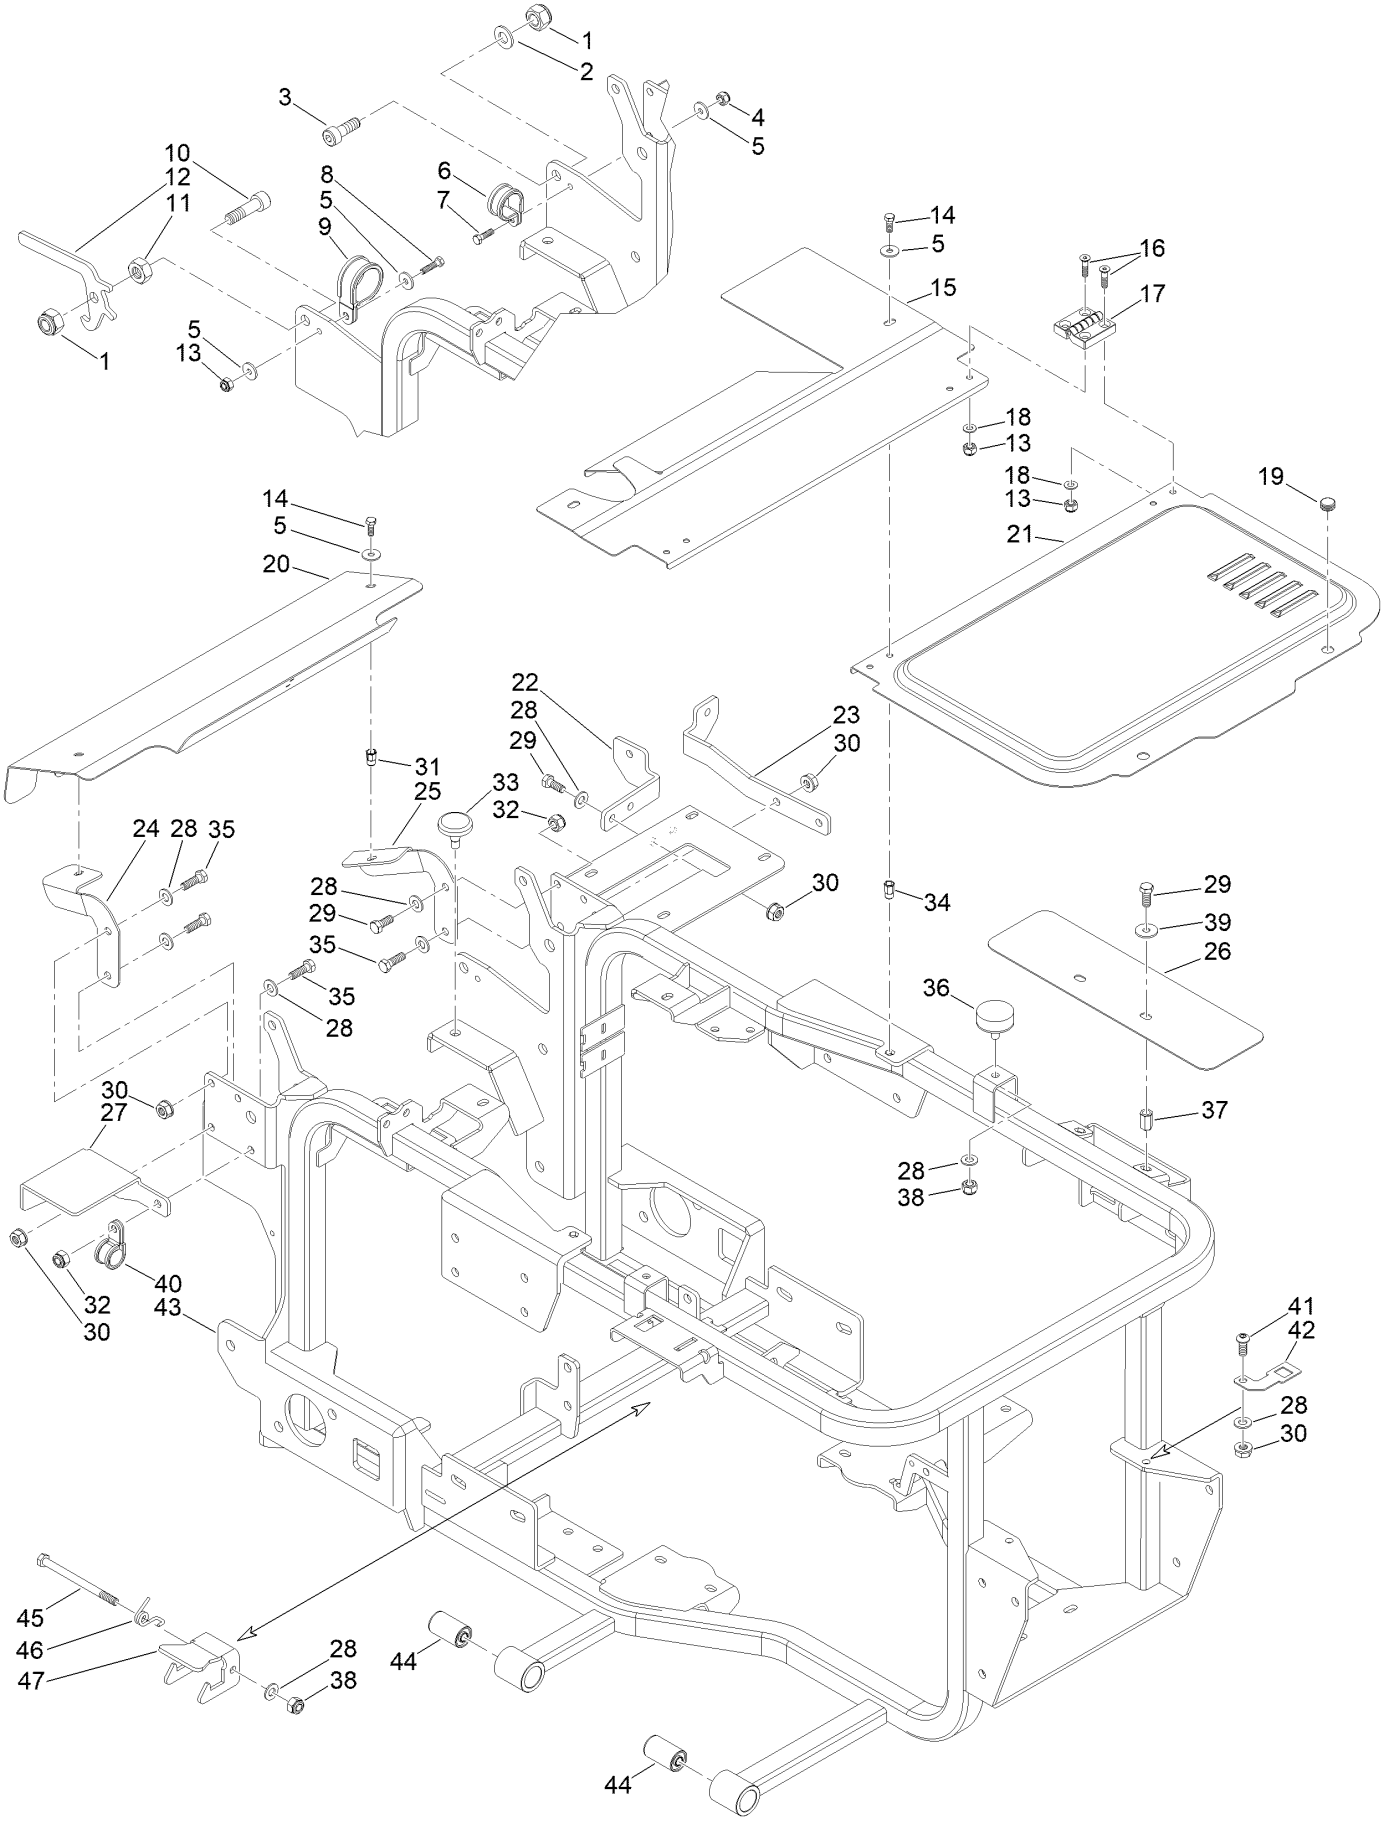

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-0561	2	Nut
2	134-1047	1	Washer
3	134-9146	1	Screw, H-Sckt Cap
4	134-1041	1	Nut
5	134-1234	7	Washer
6	134-1318	1	Clamp
7	134-1009	1	Screw
8	134-1028	1	Screw
9	134-1319	1	Clamp
10	134-9147	1	Screw, H-Sckt Cap
11	134-1035	1	Nut
12	134-9148	1	Hook, Platform
13	134-1042	5	Nut
14	134-1008	4	Screw
15	134-9135	1	Cover, Engine Box
16	134-9131	4	Screw, H-Sckt Csk
17	134-1147	2	Hinge-Plastic
18	134-1044	4	Washer
19	134-3007	1	Plug-Rubber
20	134-9138	1	Cover, Chute Box
21	134-9136	1	Bonnet, Engine Box
22	134-9143	1	Bracket, Fairing Side
23	134-9145	1	Bracket, Fairing Front
24	134-9139	1	Bracket, LH Chute Box
25	134-9140	1	Bracket, RH Chute Box
26	134-9141	1	Cover, Muffler Collector
27	134-9137	1	Bracket, Fuel Tank
28	134-1045	10	Washer
29	134-1011	5	Screw
30	134-1082	7	Nut
31	134-1257	2	Insert-Threaded
32	134-1038	2	Nut
33	134-9144	2	Plug, Shock-Absorber
34	134-1194	2	Insert-Threaded
35	134-1015	4	Screw
36	134-1338	2	Pad-Rubber
37	134-9193	2	Insert-Hex
38	134-1092	2	Nut
39	134-3126	2	Washer
40	134-1197	1	Clamp
41	134-9149	1	Screw, H-Sckt B Head
42	134-9150	1	Fuse Support
43	134-9170	1	Chassis, Main
44	134-9142	3	Shock Absorber
45	134-9132	1	Screw-HH
46	134-9133	1	Spring-Torsion
47	134-9134	1	Handle, Radiator


Central Bar and Rear Axle Frame Assembly

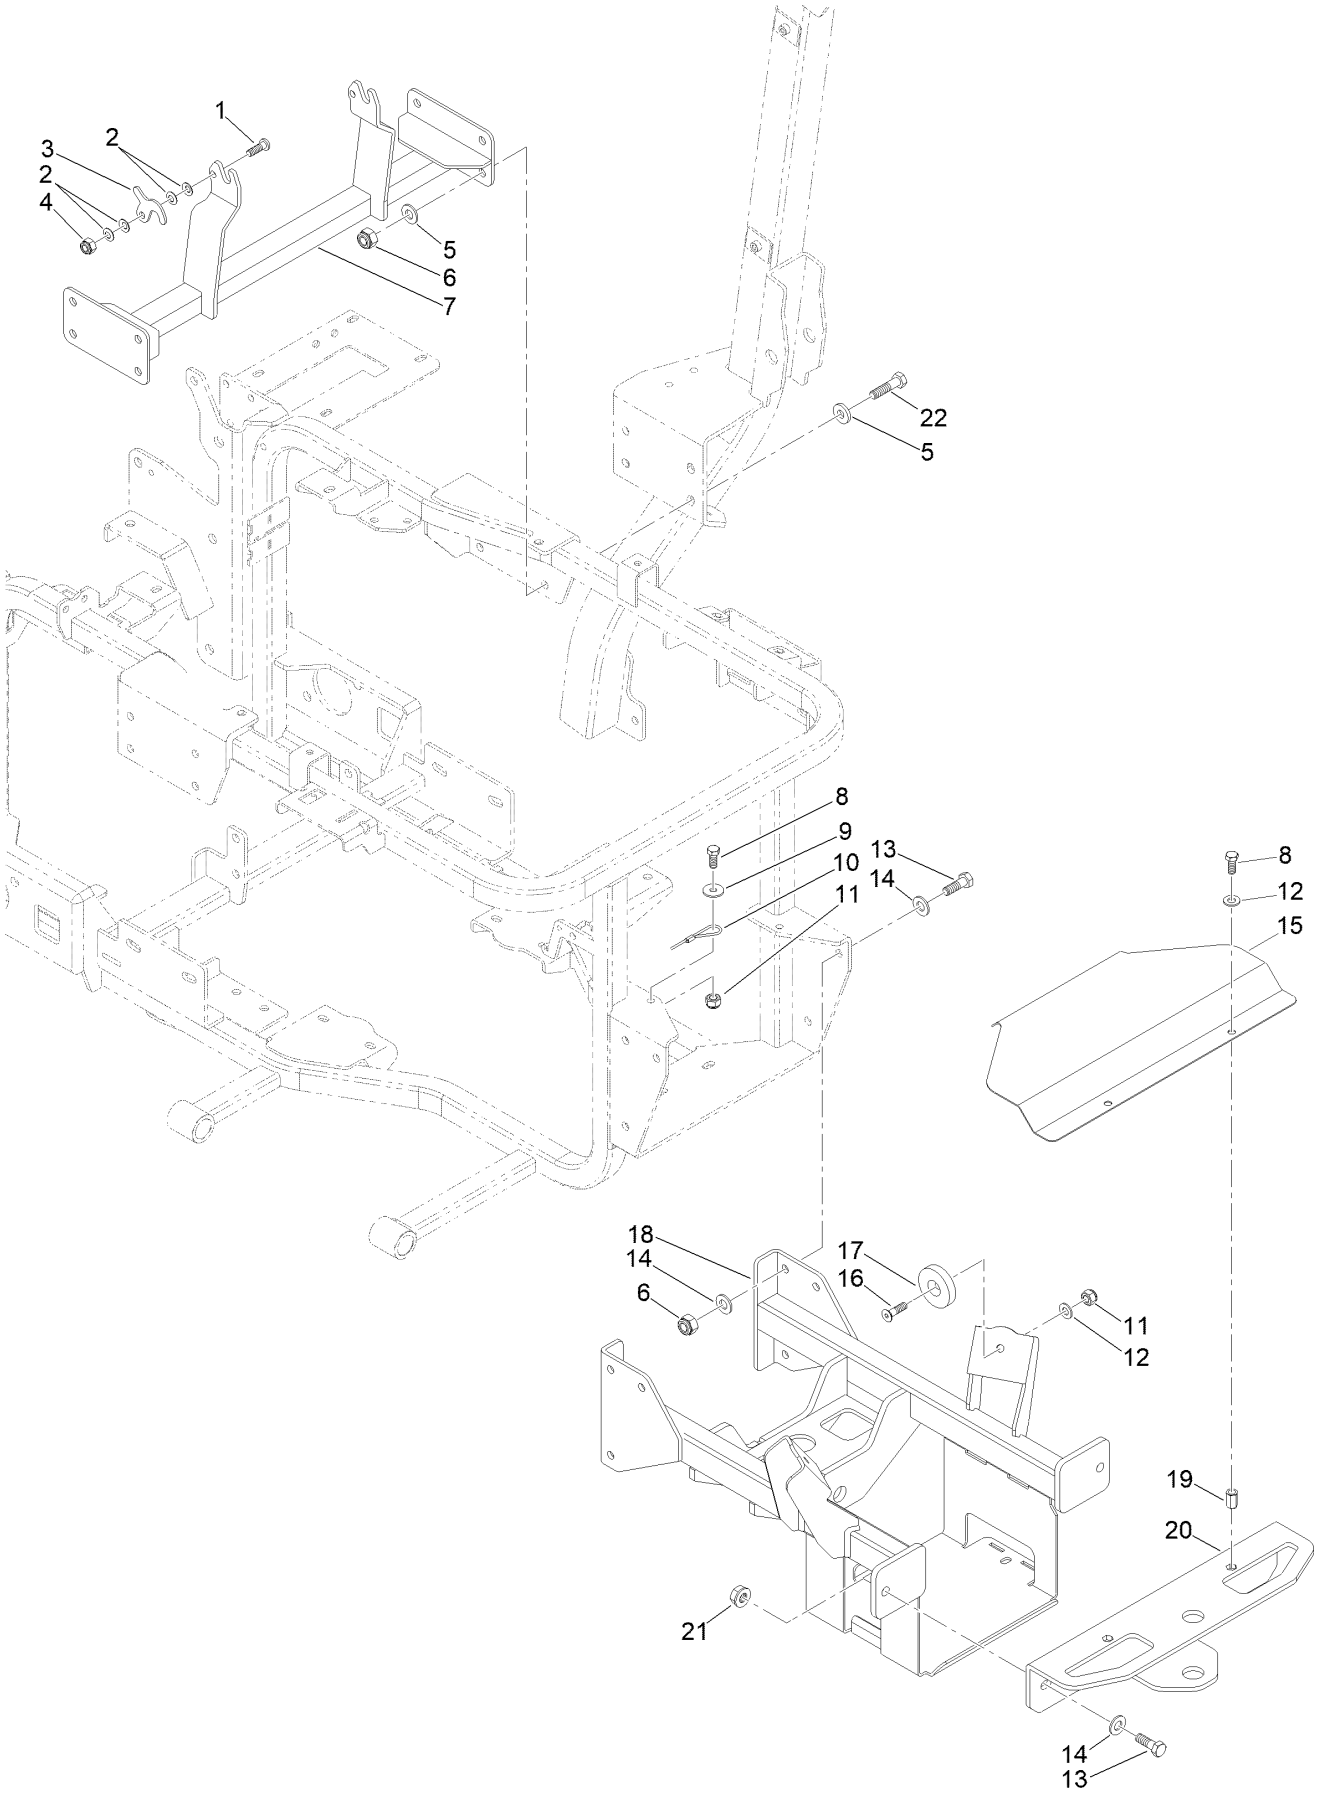

Central Bar and Rear Axle Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-1302	1	Screw
2	134-9164	4	Washer, Belleville
3	134-9155	2	Hook, Chute
4	134-1038	1	Nut
5	134-9408	16	Washer
6	134-1079	14	Nut
7	134-9154	1	Chassis, Central Bar
8	134-1011	3	Screw
9	134-3126	1	Washer
10	134-9264	1	Cable, Radiator
11	134-1092	2	Nut
12	134-1045	3	Washer
13	134-1023	8	Screw
14	134-1046	14	Washer
15	134-9153	1	Cover, Battery
16	134-1121	1	Screw
17	134-0759	2	Support
18	134-9151	1	Chassis, Rear Axle
19	134-9193	2	Insert-Hex
20	134-9152	1	Bumper
21	134-3009	2	Nut
22	134-1030	8	Screw


Operator Platform and Seat Assembly

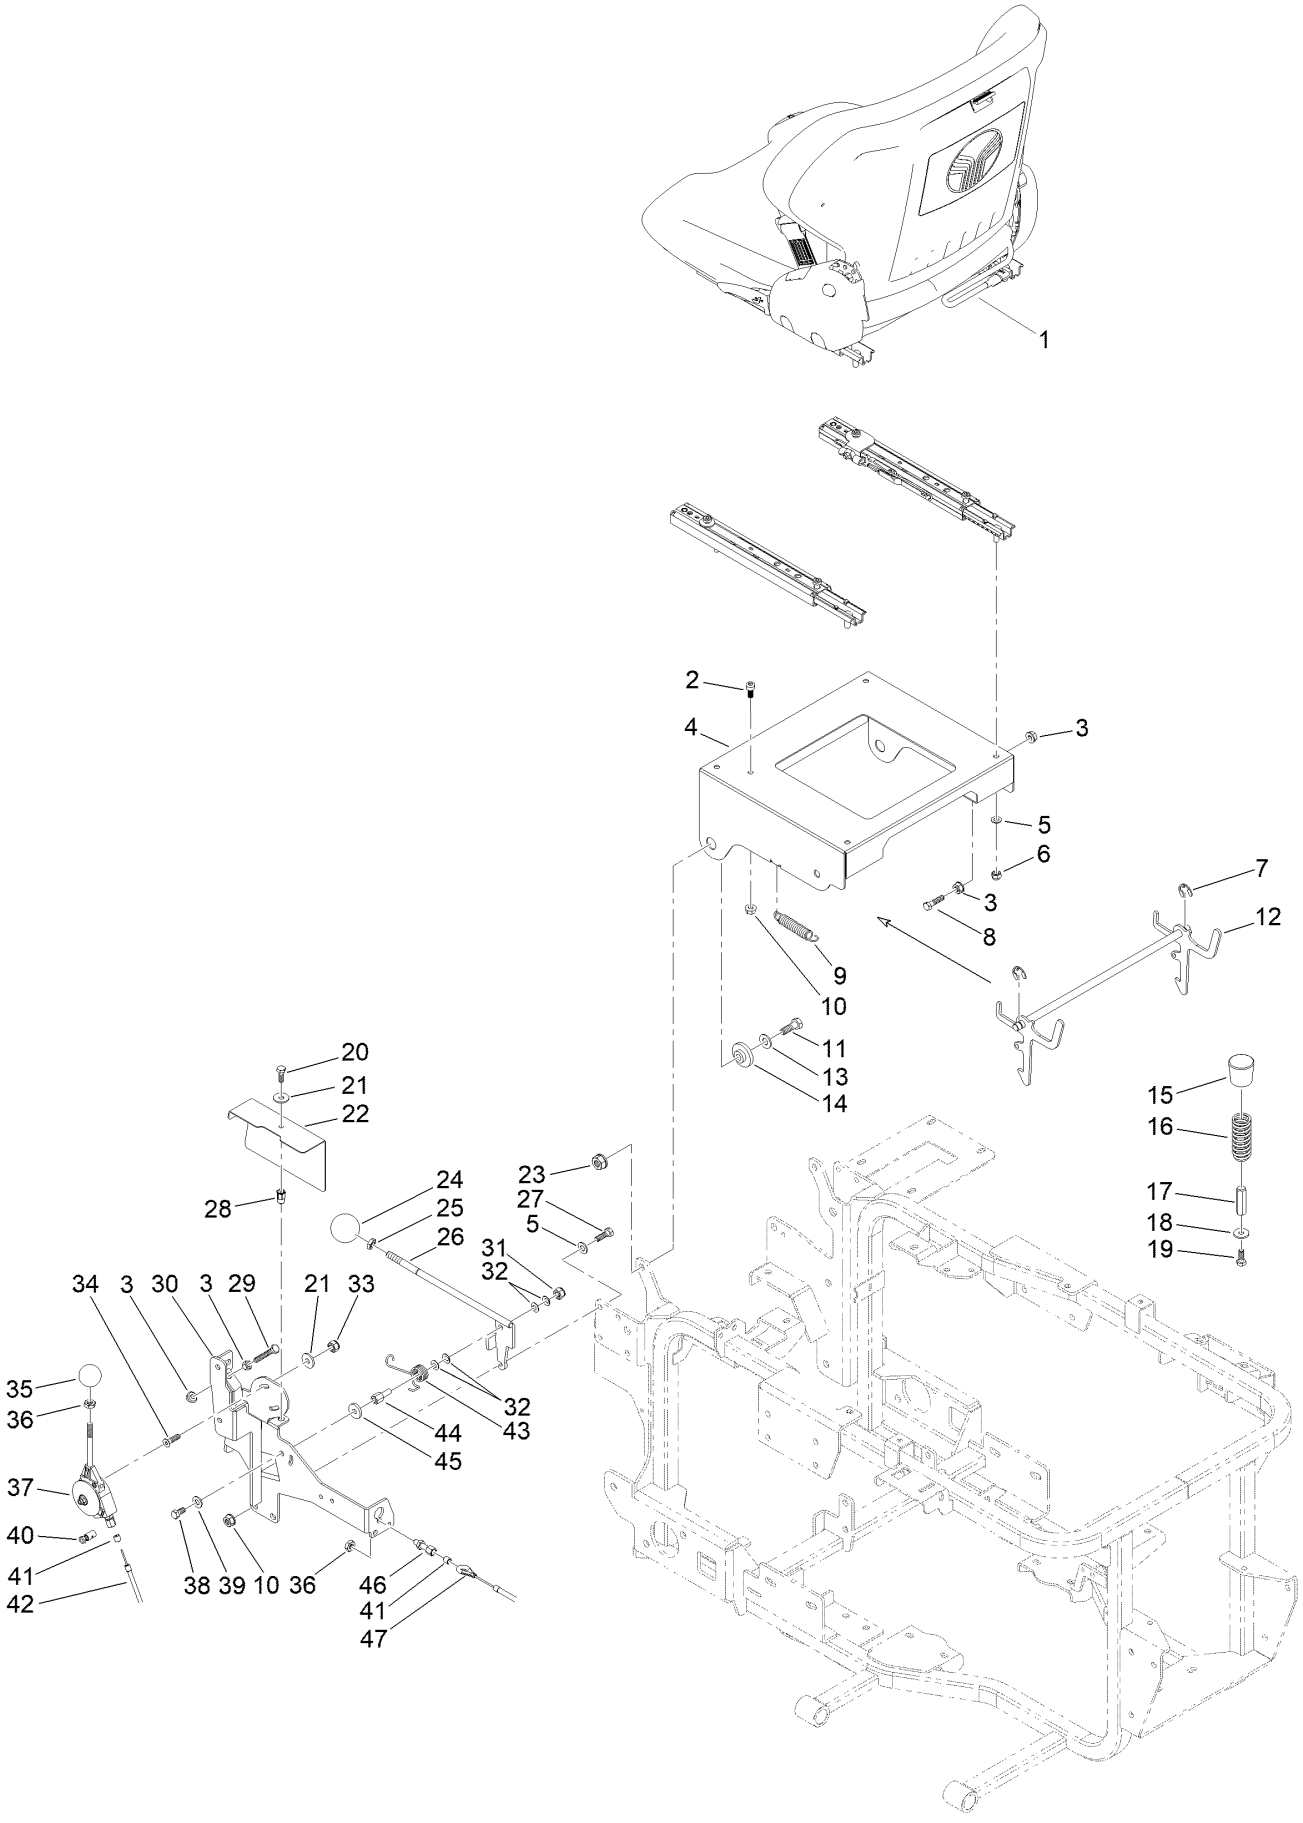

Operator Platform and Seat Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9171	1	Seat, S421
2	134-9172	1	Screw
3	134-1084	4	Nut
4	134-9159	1	Support, Seat
5	134-1045	6	Washer
6	134-1038	4	Nut
7	134-1099	2	Ring-Snap
8	134-1028	1	Screw
9	134-1353	1	Spring
10	134-1082	3	Nut
11	134-1023	2	Screw
12	134-9156	1	Hook, Seat
13	134-1051	2	Washer
14	134-0689	2	Bushing
15	134-9160	2	Plug, Rubber
16	134-9161	2	Spring-Compression
17	134-9162	2	Column - Hex
18	134-3126	2	Washer
19	134-1011	2	Screw
20	134-1008	1	Screw
21	134-1234	3	Washer
22	134-9157	1	Cover, Parking Brake Lever
23	134-3009	2	Nut
24	134-9166	1	Ball, Threaded Insert M10
25	134-1043	1	Nut
26	134-9169	1	Handle, Parking Brake
27	134-1015	2	Screw
28	134-1257	1	Insert-Threaded
29	134-9158	1	Screw, H-Sckt Csk
30	134-9165	1	Support, Trhottle/Parking Brake Devices
31	134-1092	1	Nut
32	134-9164	4	Washer, Belleville
33	134-1042	2	Nut
34	134-3111	2	Screw
35	134-1146	1	Ball
36	134-1078	2	Nut
37	134-0568	1	Lever-Throttle
38	134-1010	1	Screw
39	134-1054	1	Washer
40	134-8128	1	Cable-Clamp
41	134-8129	2	Cable-End, Nipple
42	134-9163	1	Cable, Throttle
43	134-9167	1	Spring, Parking Brake Handle
44	134-9168	1	Pivot, Parking Brake Handle
45	134-8037	1	Washer-Plain
46	134-9283	1	Register
47	134-9211	1	Cable, Parking-Brake


Gearbox Assembly No. 1

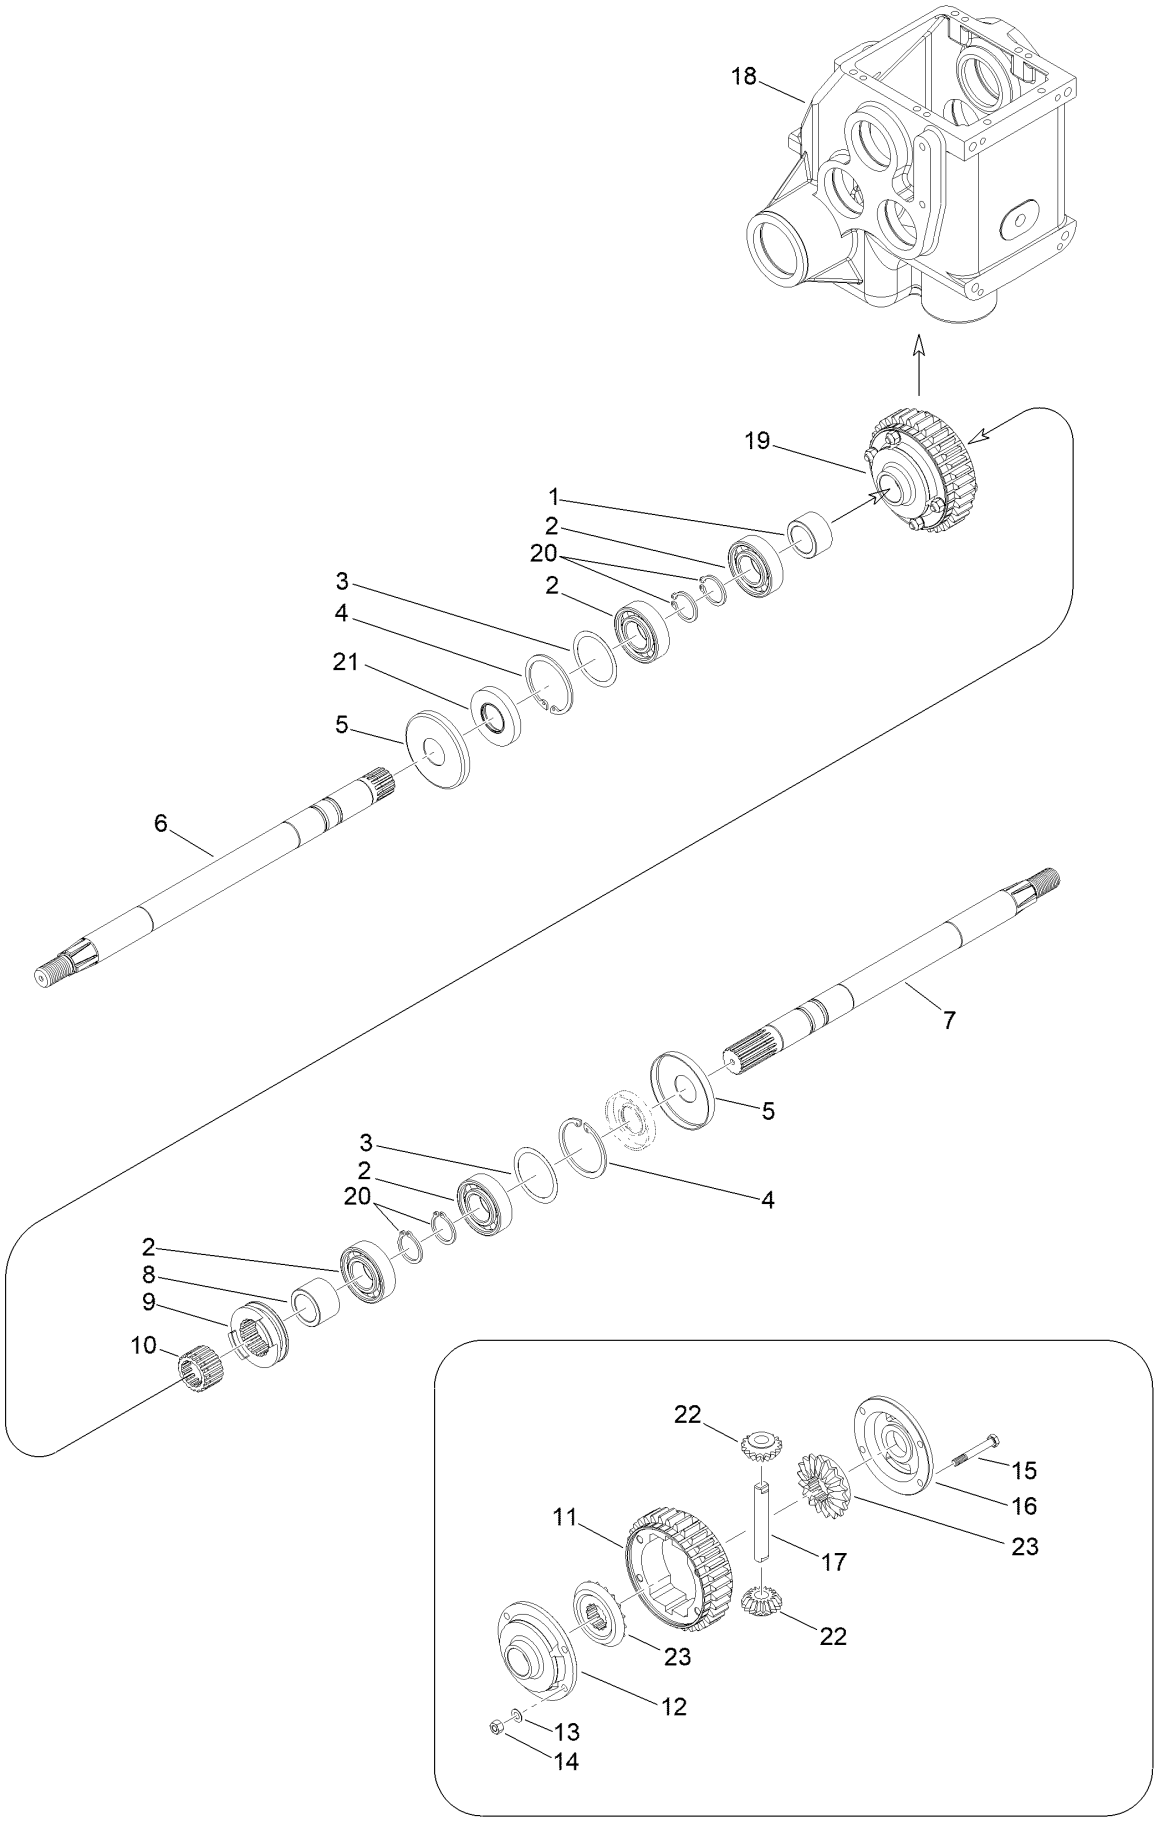

Gearbox Assembly No. 1 (continued)

Ref.	Part Number	Qty.	Description
1	134-9418	1	Spacer, Shaft
2	134-5172	4	Bearing
3	134-0996	2	Spacer
4	134-1057	2	Ring-Retaining, Int
5	134-7646	2	Cap, Gearbox
6	134-9419	1	Driveshaft, LH
7	134-9420	1	Driveshaft, RH
8	134-9421	1	Spacer
9	134-9422	1	Sleeve, Differential Lock
10	134-9423	1	Splined Bushing
11	134-9425	1	Spur Gear, Differential
12	134-9428	1	Cover, LH Differential Gear
13	134-3027	4	Washer-Wave
14	134-1039	4	Nut
15	134-9426	4	Screw-HH
16	134-9424	1	Cover, RH Differential Gear
17	134-9427	1	Pin, Satellite
18	134-9587	1	Gearbox
19	134-9589	1	Differential Gear, Assembly
20	134-9491	4	Retainer, Shaft
21	134-9492	1	Seal, Oil
22	134-9495	2	Gear, Satellite
23	134-9494	2	Gear, Planetary


Gearbox Assembly No. 2

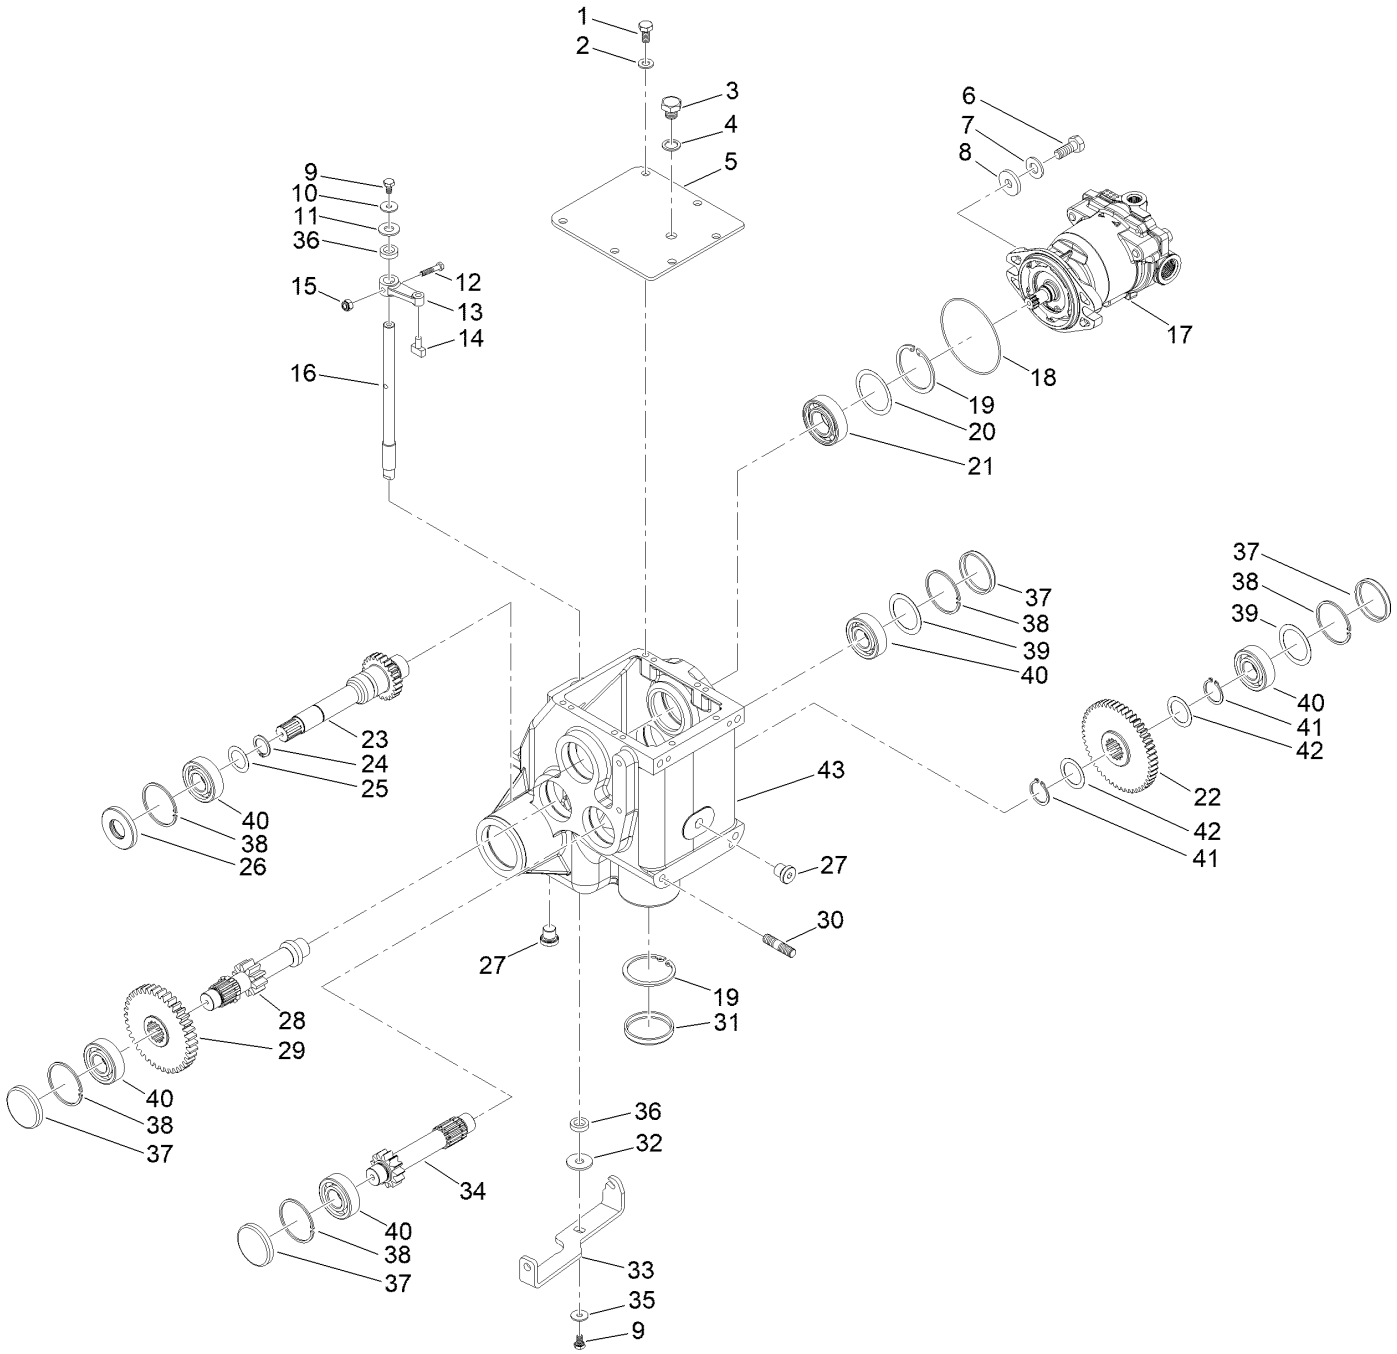

Gearbox Assembly No. 2 (continued)

Ref.	Part Number	Qty.	Description
1	134-1010	6	Screw
2	134-1045	6	Washer
3	134-9435	1	Plug-HH
4	134-1255	1	Washer
5	134-9434	1	Cover, Transmission Gearbox
6	134-1023	2	Screw
7	134-1051	2	Washer
8	134-1337	2	Washer
9	134-3008	2	Screw
10	134-1232	1	Washer
11	134-1047	1	Washer
12	134-9436	1	Screw-HH Cap
13	134-9437	1	Lever, Differential Lock
14	134-9438	1	Pad, Differential Lock
15	134-1094	1	Nut
16	134-9439	1	Shaft, Differential Lock
17	134-9310	1	Motor, Transmission
18	134-9429	1	O-Ring
19	134-1057	3	Ring-Retaining, Int
20	134-0996	1	Spacer
21	134-5172	1	Bearing
22	134-9432	1	Spur Gear, Secondary Shaft
23	134-9444	1	Shaft, Primary Transmission Gearbox
24	134-1060	1	Ring-Retaining, Int
25	134-1354	1	Spacer
26	134-9443	1	Oil Seal
27	134-7645	2	Plug, Gearbox
28	134-9446	1	Shaft, Tertiary Transmission Gearbox
29	134-9447	1	Spur Gear, Tertiary Shaft
30	134-9433	4	Stud
31	134-1238	1	Cap
32	134-9441	1	Washer
33	134-9442	1	Bracket, Differential Lock
34	134-9448	1	Shaft, Secondary Transmission Gearbox
35	134-1234	1	Washer
36	134-9588	2	Oil Seal
37	134-9496	4	Plug, Rca
38	134-9497	5	Retainer, Hub
39	134-9498	2	Shim
40	134-9499	5	Bearing, DIA 20 X 47 X 14
41	134-9586	3	Retainer, Shaft
42	134-9585	2	Shim,
43	134-9587	1	Gearbox

Transmission Assembly

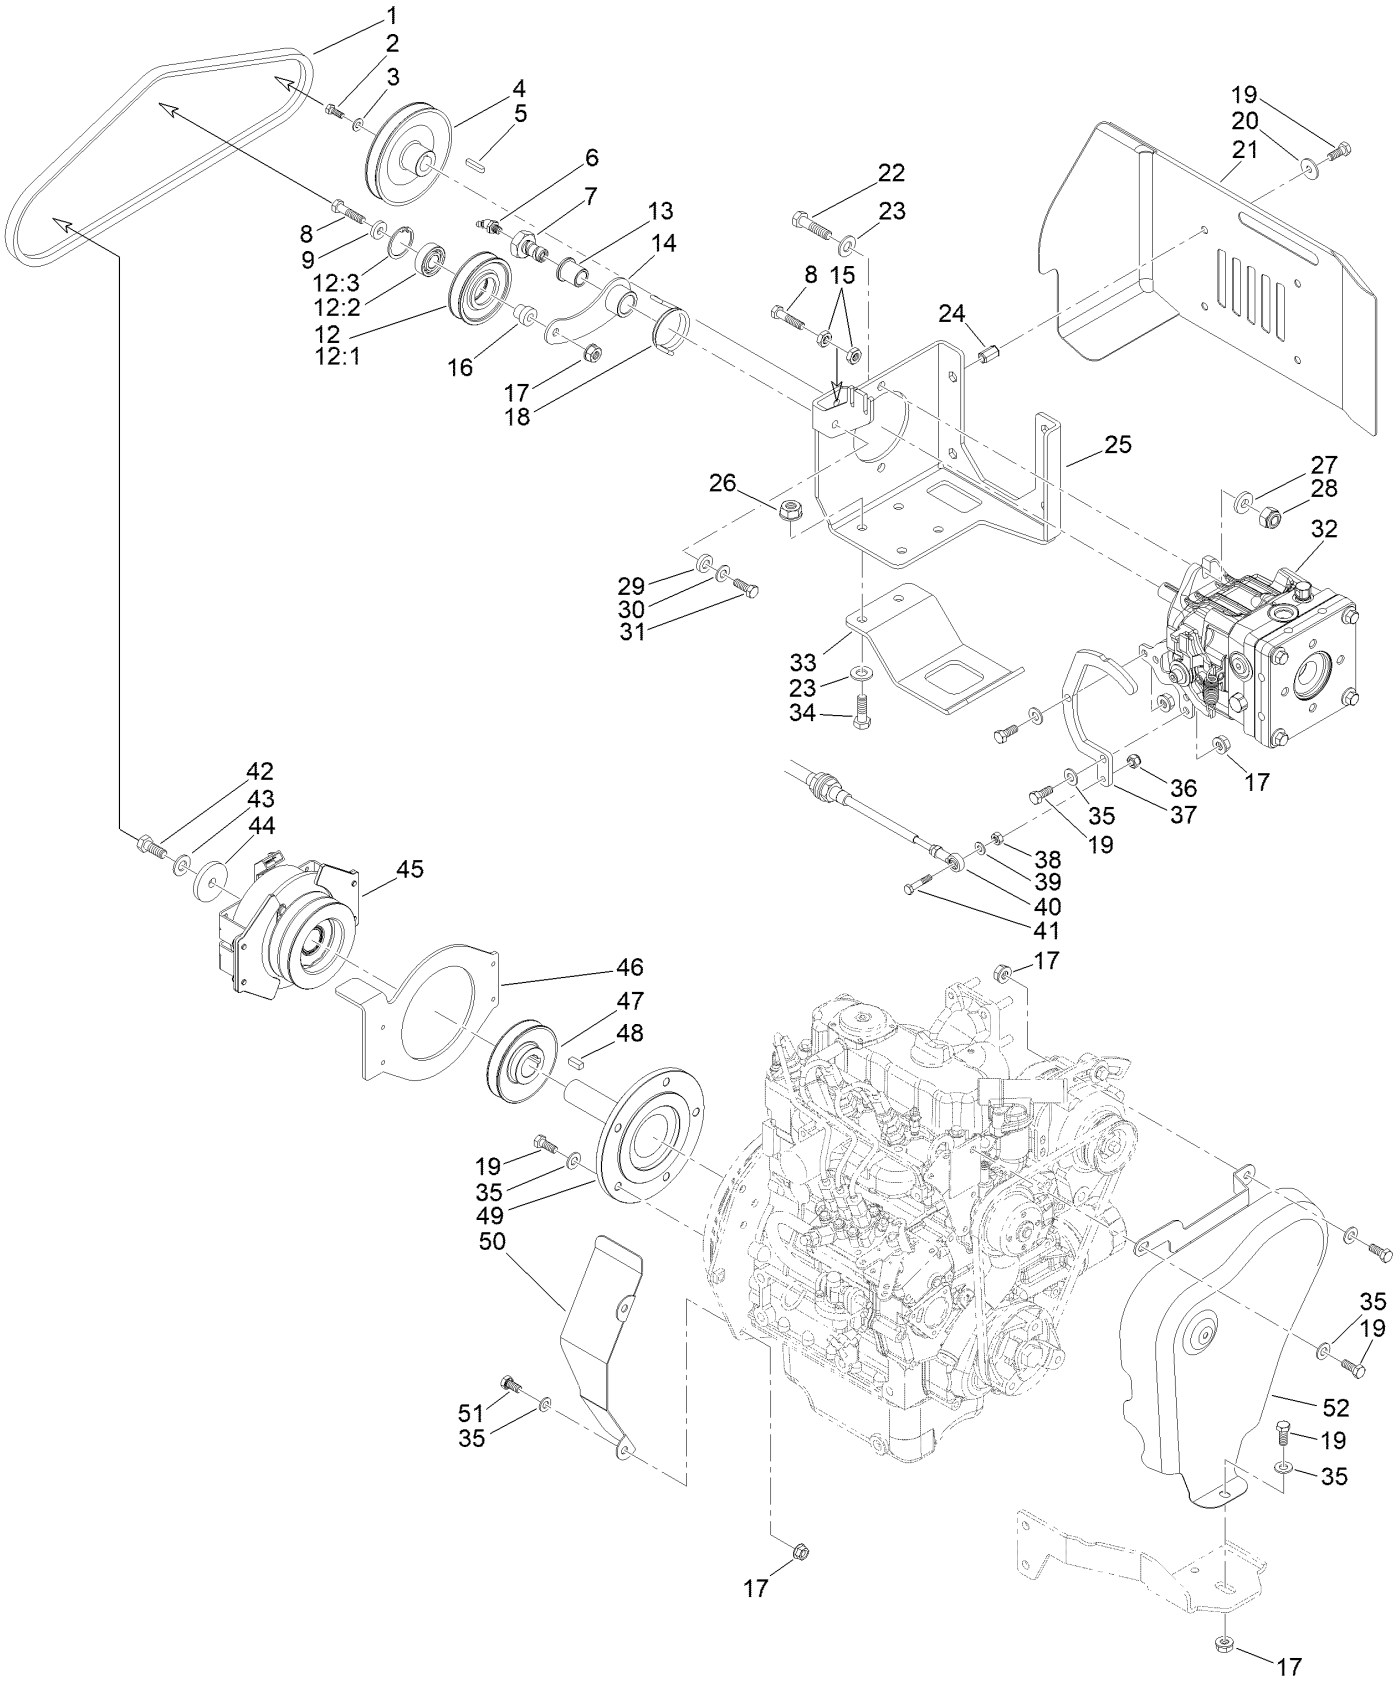


Transmission Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9185	1	Belt, Transmission Pump
2	134-1008	1	Screw
3	134-1235	1	Washer
4	134-9180	1	Pulley, Transmission Pump
5	134-9181	1	Key
6	134-1258	1	Fitting-Grease
7	134-9182	1	Pivot, Belt Tensioner
8	134-1014	2	Screw
9	134-0997	1	Washer
12	134-9178	1	Pulley Assy, Belt Tensioner
12:1		1	Pulley, Belt Tensioner ●
12:2	134-9176	1	Bearing
12:3	134-9175	1	Retainer
13	134-1264	1	Bushing
14	134-9194	1	Bracket,Transmission Pump Belt Tensioner
15	134-1078	2	Nut
16	134-9179	1	Bushing, Belt Tensioner
17	134-1082	7	Nut
18	134-9183	1	Spring-Torsion
19	134-1011	14	Screw
20	134-3126	4	Washer
21	134-9196	1	Cover, Transmission Pump
22	134-1030	2	Screw
23	134-1046	6	Washer
24	134-9193	4	Insert-Hex
25	134-9184	1	Support, Transmission Pump
26	134-3009	4	Nut
27	134-9408	2	Washer
28	134-1079	2	Nut
29	134-1355	1	Washer
30	134-1054	1	Washer
31	134-9186	1	Screw-HH
32	134-9306	1	Pump, Transmission
33	134-9187	1	Skid, Transmission Pipes
34	134-1023	4	Screw
35	134-1045	12	Washer
36	134-1042	1	Nut
37	134-9188	1	Bracket, Neutral Switch
38	134-1039	1	Nut
39	134-1044	1	Washer
40	134-9282	1	Cable, Transmission
41	134-9370	1	Screw-HH
42	134-2956	1	Screw
43	134-1051	1	Washer
44	134-9189	1	Washer
45	134-9173	1	Clutch, Gt1.5-GR15D
46	134-9174	1	Brake, Clutch
47	134-9191	1	Pulley, Engine
48	134-9192	1	Key
49	134-9190	1	Shaft, Engine
50	134-9197	1	Cover, Engine Flywheel
51	134-1010	2	Screw
52	134-9198	1	Cover, Engine Belt

● Not serviced separately


Transmission, PTO and Drive Shaft Assembly

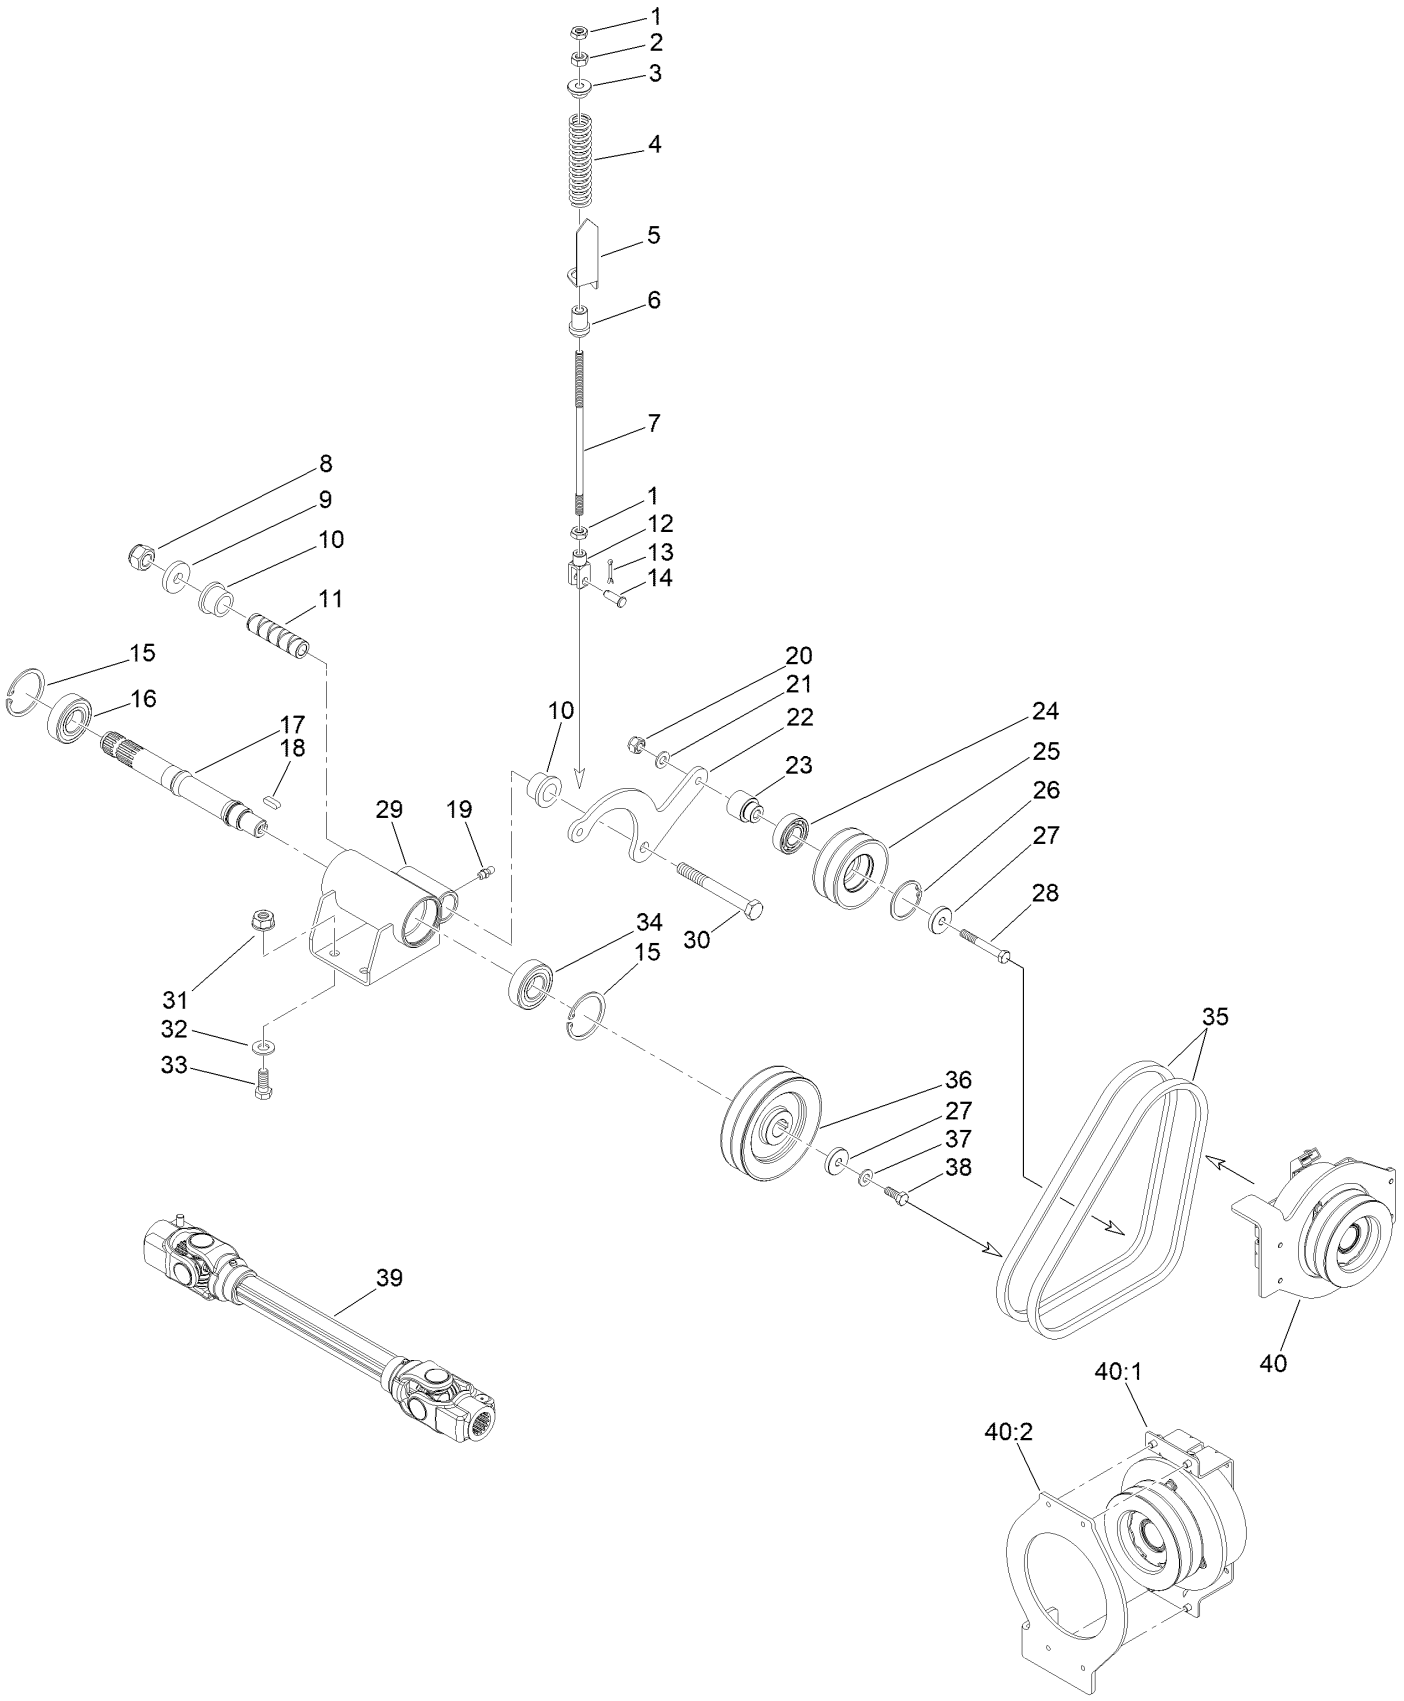

Transmission, PTO and Drive Shaft Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-1078	2	Nut
2	134-1034	1	Nut
3	134-1349	1	Guide-Spring
4	134-9028	1	Spring-Extension
5	134-9209	1	Indicator, PTO Belt Tensioner
6	134-0783	1	Pin-Guide, Nylon
7	134-9210	1	Rod, PTO Belt Tensioner
8	134-2969	1	Nut
9	134-0866	1	Washer
10	134-1249	2	Bushing
11	134-1351	1	Spacer
12	134-1271	1	Fork-Clevis, M8
13	134-1132	1	Pin-Spring
14	134-1236	1	Pin
15	134-1057	2	Ring-Retaining, Int
16	134-1105	1	Bearing
17	134-9204	1	Shaft, PTO
18	134-8267	1	Key
19	134-1065	1	Fitting-Grease
20	134-1038	1	Nut
21	134-1045	1	Washer
22	134-9199	1	Bracket, PTO Belt Tensioner
23	134-0784	1	Bushing
24	134-1107	1	Bearing
25	134-9200	1	Pulley, PTO Belt Tensioner
26	134-1058	1	Ring-Retaining, Int
27	134-1355	2	Washer
28	134-1024	1	Screw
29	134-9205	1	Hub, PTO
30	134-1075	1	Screw
31	134-3009	4	Nut
32	134-1046	4	Washer
33	134-1018	4	Screw
34	134-9201	1	Bearing
35	134-9206	2	Belt, PTO
36	134-9202	1	Pulley, PTO Shaft
37	134-1054	1	Washer
38	134-1011	1	Screw
39	134-9203	1	Shaft, Cardan Joint
40	134-9207	1	Clutch Assy
40:1	134-9173	1	Clutch, Gt1.5-GR15D
40:2	134-9174	1	Brake, Clutch


Parking Brakes Assembly

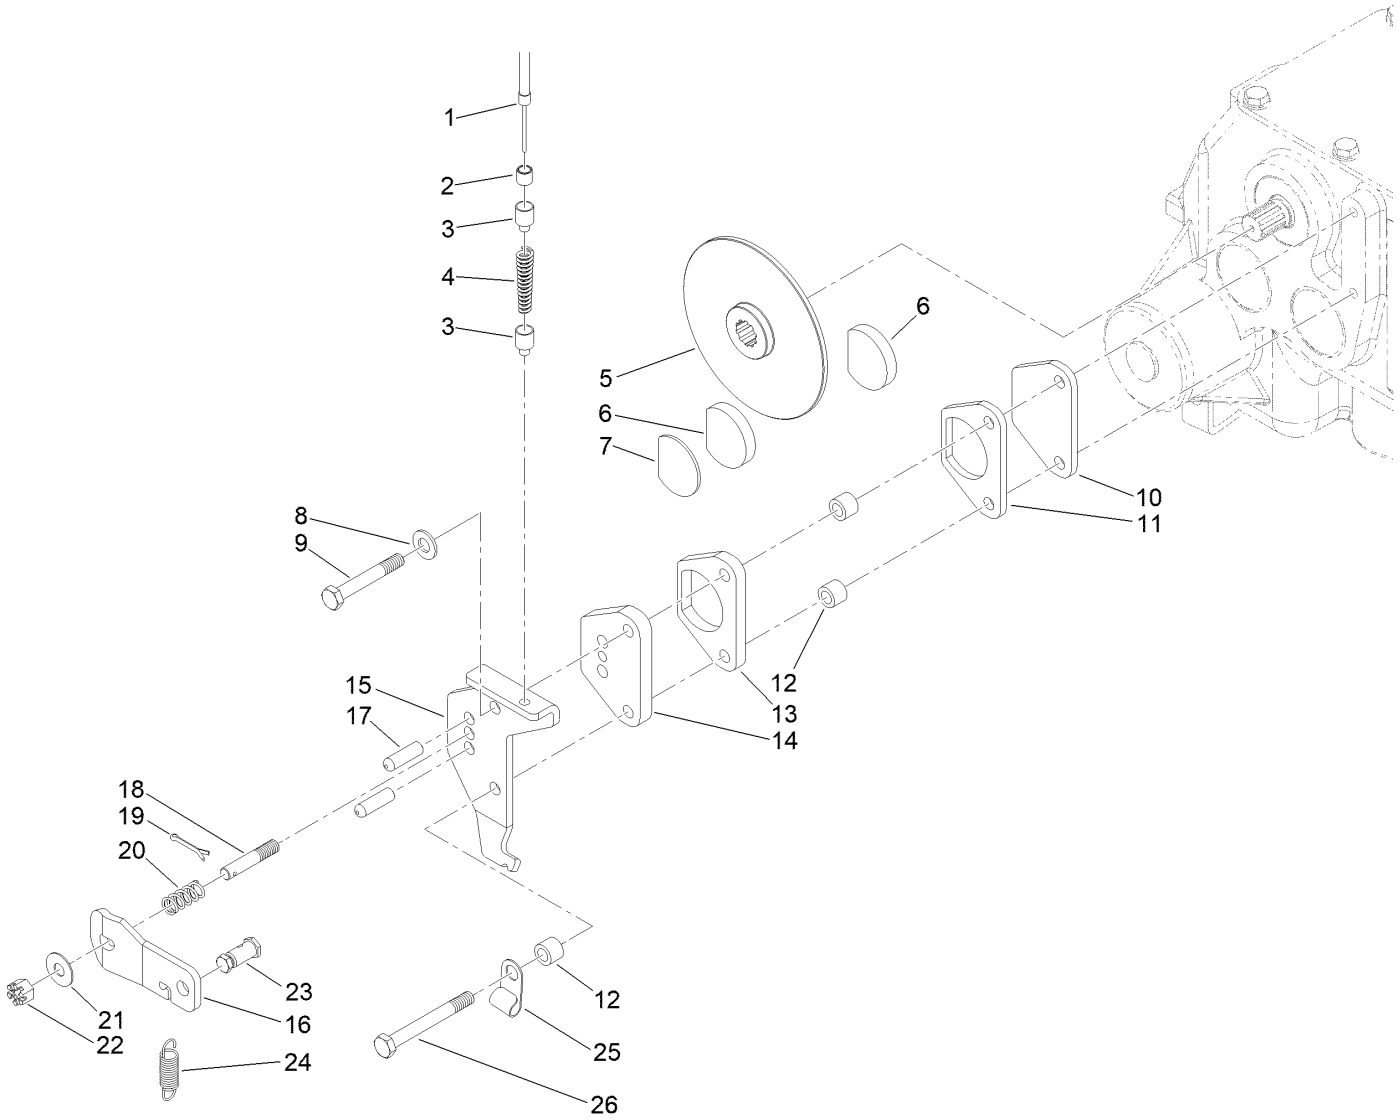

Parking Brakes Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9211	1	Cable, Parking-Brake
2	134-8129	1	Cable-End, Nipple
3	134-9212	2	Bushing, Parking Brake Cable
4	134-9213	1	Spring-Compression
5	134-9216	1	Disc, Parking Brake
6	134-9214	2	Pad, Parking Brake
7	134-9215	1	Shim, Parking Brake Pad
8	134-1045	1	Washer
9	134-2955	1	Screw
10	134-9217	1	Support, Pad
11	134-9218	1	Support, Pad
12	134-9219	3	Spacer
13	134-9220	1	Support, Pad
14	134-9221	1	Support, Pad
15	134-9222	1	Support, Parking Brake Lever
16	134-9223	1	Lever, Parking Brake
17	134-9231	2	Pin
18	134-9226	1	Stud, Parking Brake
19	134-9227	1	Pin
20	134-9228	1	Spring, Parking Brake Lever
21	134-9224	1	Shim
22	134-9225	1	Nut,
23	134-9229	1	Clamp, Parking Brake Cable
24	134-9230	1	Spring, Parking Brake Cable
25	134-1348	1	Grommet
26	134-3083	1	Screw


Axle and Front Wheels Assembly

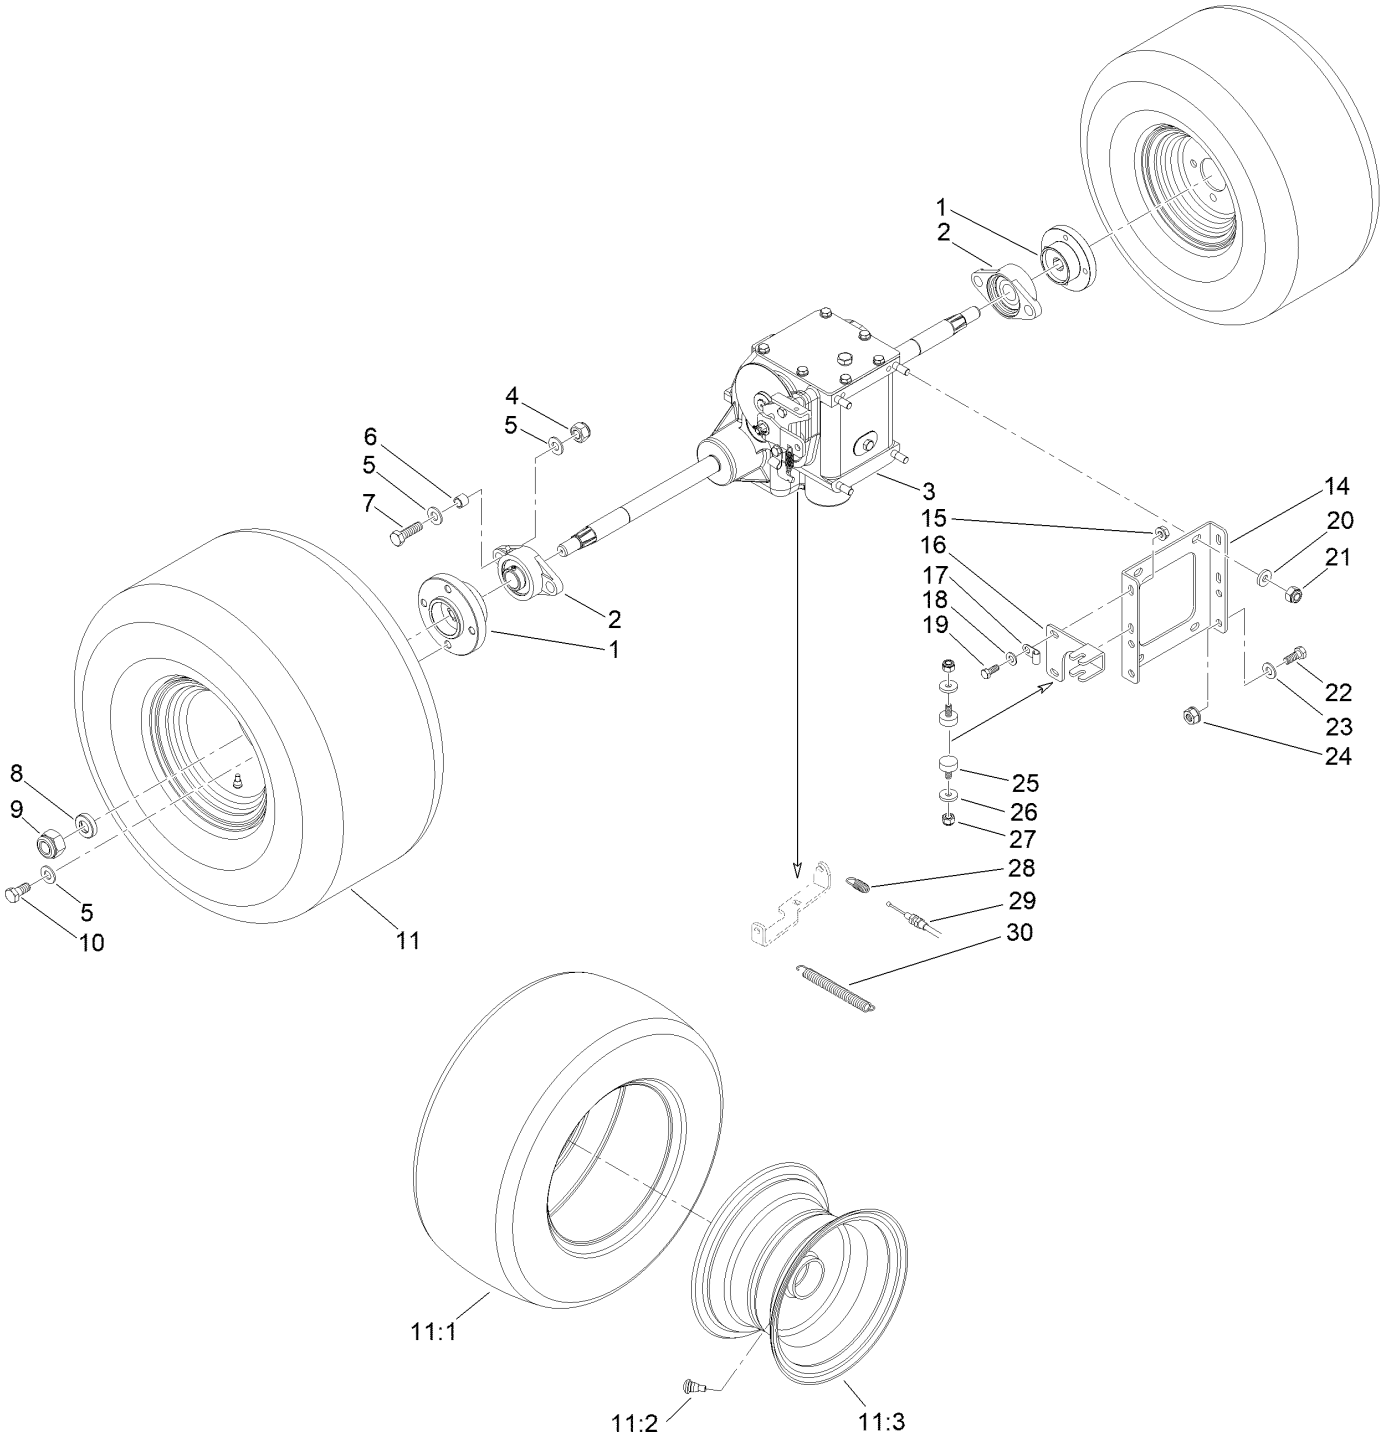

Axle and Front Wheels Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9241	2	Hub, Front Wheel
2	134-9242	2	Bearing
3	134-9237	1	Transmission Gearbox Assy
4	134-0561	2	Nut
5	134-1047	12	Washer
6	134-9244	2	Spacer
7	134-3011	2	Screw-HH
8	134-9243	2	Washer
9	134-9239	2	Nut-HH
10	134-1020	8	Screw
11	134-9238	2	Front Wheel ASM
11:1	134-9235	1	Tyre
11:2	134-1261	1	Valve-Tire
11:3	134-9236	1	Rim
14	134-9232	1	Support, Transmission Gearbox
15	134-1082	2	Nut
16	134-9245	1	Retainer, Clutch
17	134-1348	1	Grommet
18	134-1045	2	Washer
19	134-1011	2	Screw
20	134-9408	4	Washer
21	134-1079	4	Nut
22	134-1018	4	Screw
23	134-1046	4	Washer
24	134-3009	4	Nut
25	134-9233	2	Shock Absorber
26	134-8037	2	Washer-Plain
27	134-1092	2	Nut
28	134-9240	1	Spring, Diff Lock Cable
29	134-9288	1	Cable, Diff Lock
30	134-9234	1	Spring, Diff Lock Lever


Axle and Steering Rear Assembly

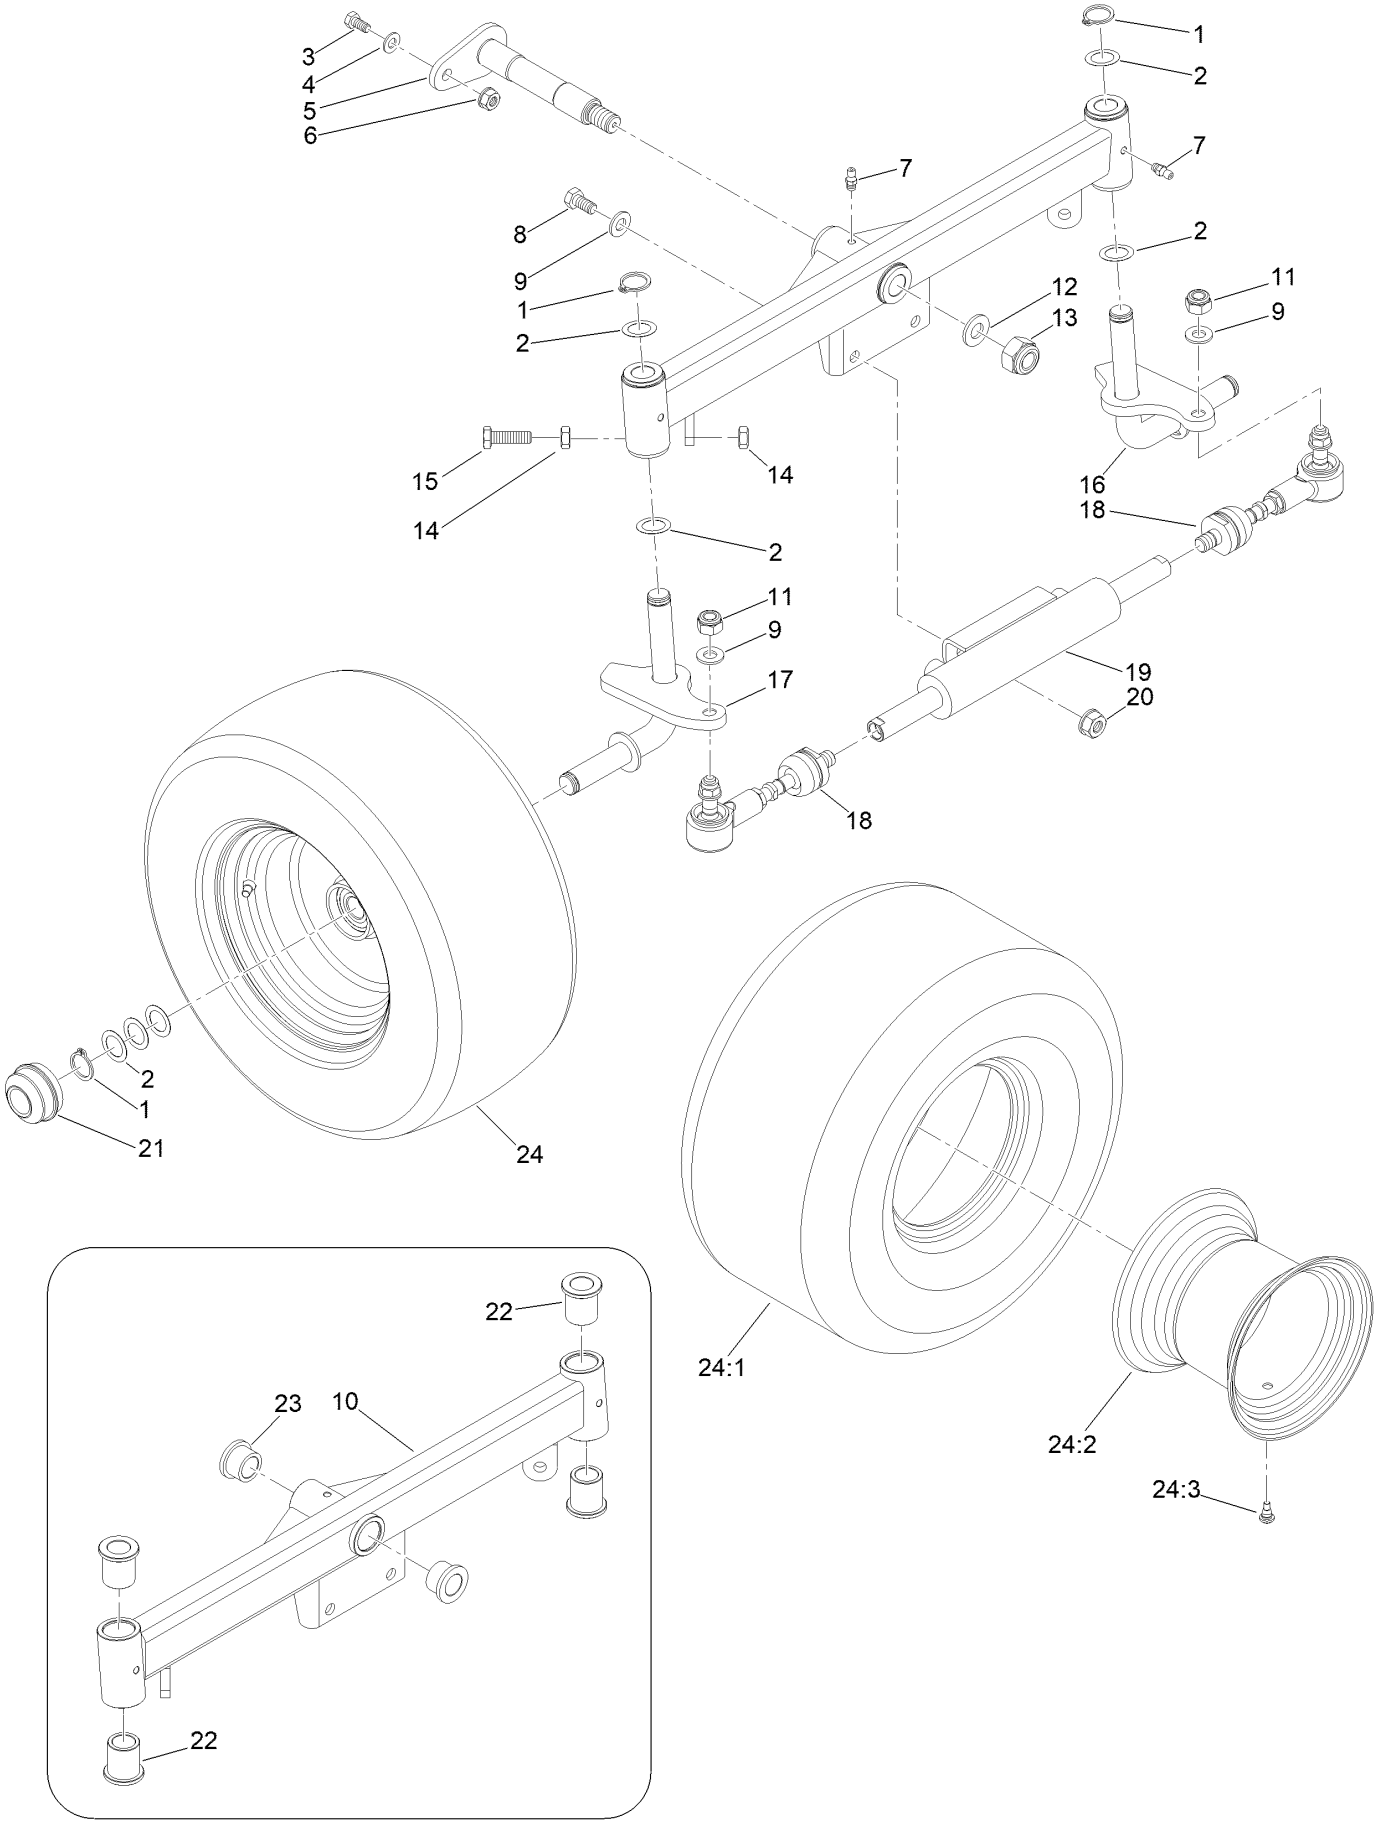

Axle and Steering Rear Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9250	4	Retainer
2	134-1354	7	Spacer
3	134-1015	1	Screw
4	134-1045	1	Washer
5	134-9254	1	Pivot, Rear Axle
6	134-1082	1	Nut
7	134-1065	3	Fitting-Grease
8	134-1017	2	Screw
9	134-1046	4	Washer
10	134-9246	1	Rear Axle
11	134-3110	2	Nut
12	134-1091	1	Nut
13	134-3012	1	Washer
14	134-9069	4	Nut
15	134-9252	2	Screw, HH
16	134-9259	1	Spindle, RH Rear Wheel
17	134-9258	1	Spindle, LH Rear Wheel
18	134-0860	2	Articulation
19	134-9345	1	Ram
20	134-3009	2	Nut
21	134-9251	2	Cover, Rear Wheel Hub
22	134-9255	4	Bushing
23	134-9256	2	Bushing
24	134-9249	2	Rear Wheel ASM
24:1	134-9247	1	Tyre
24:2	134-9248	1	Rim
24:3	134-1261	1	Valve-Tire


Cooling Water System Assembly

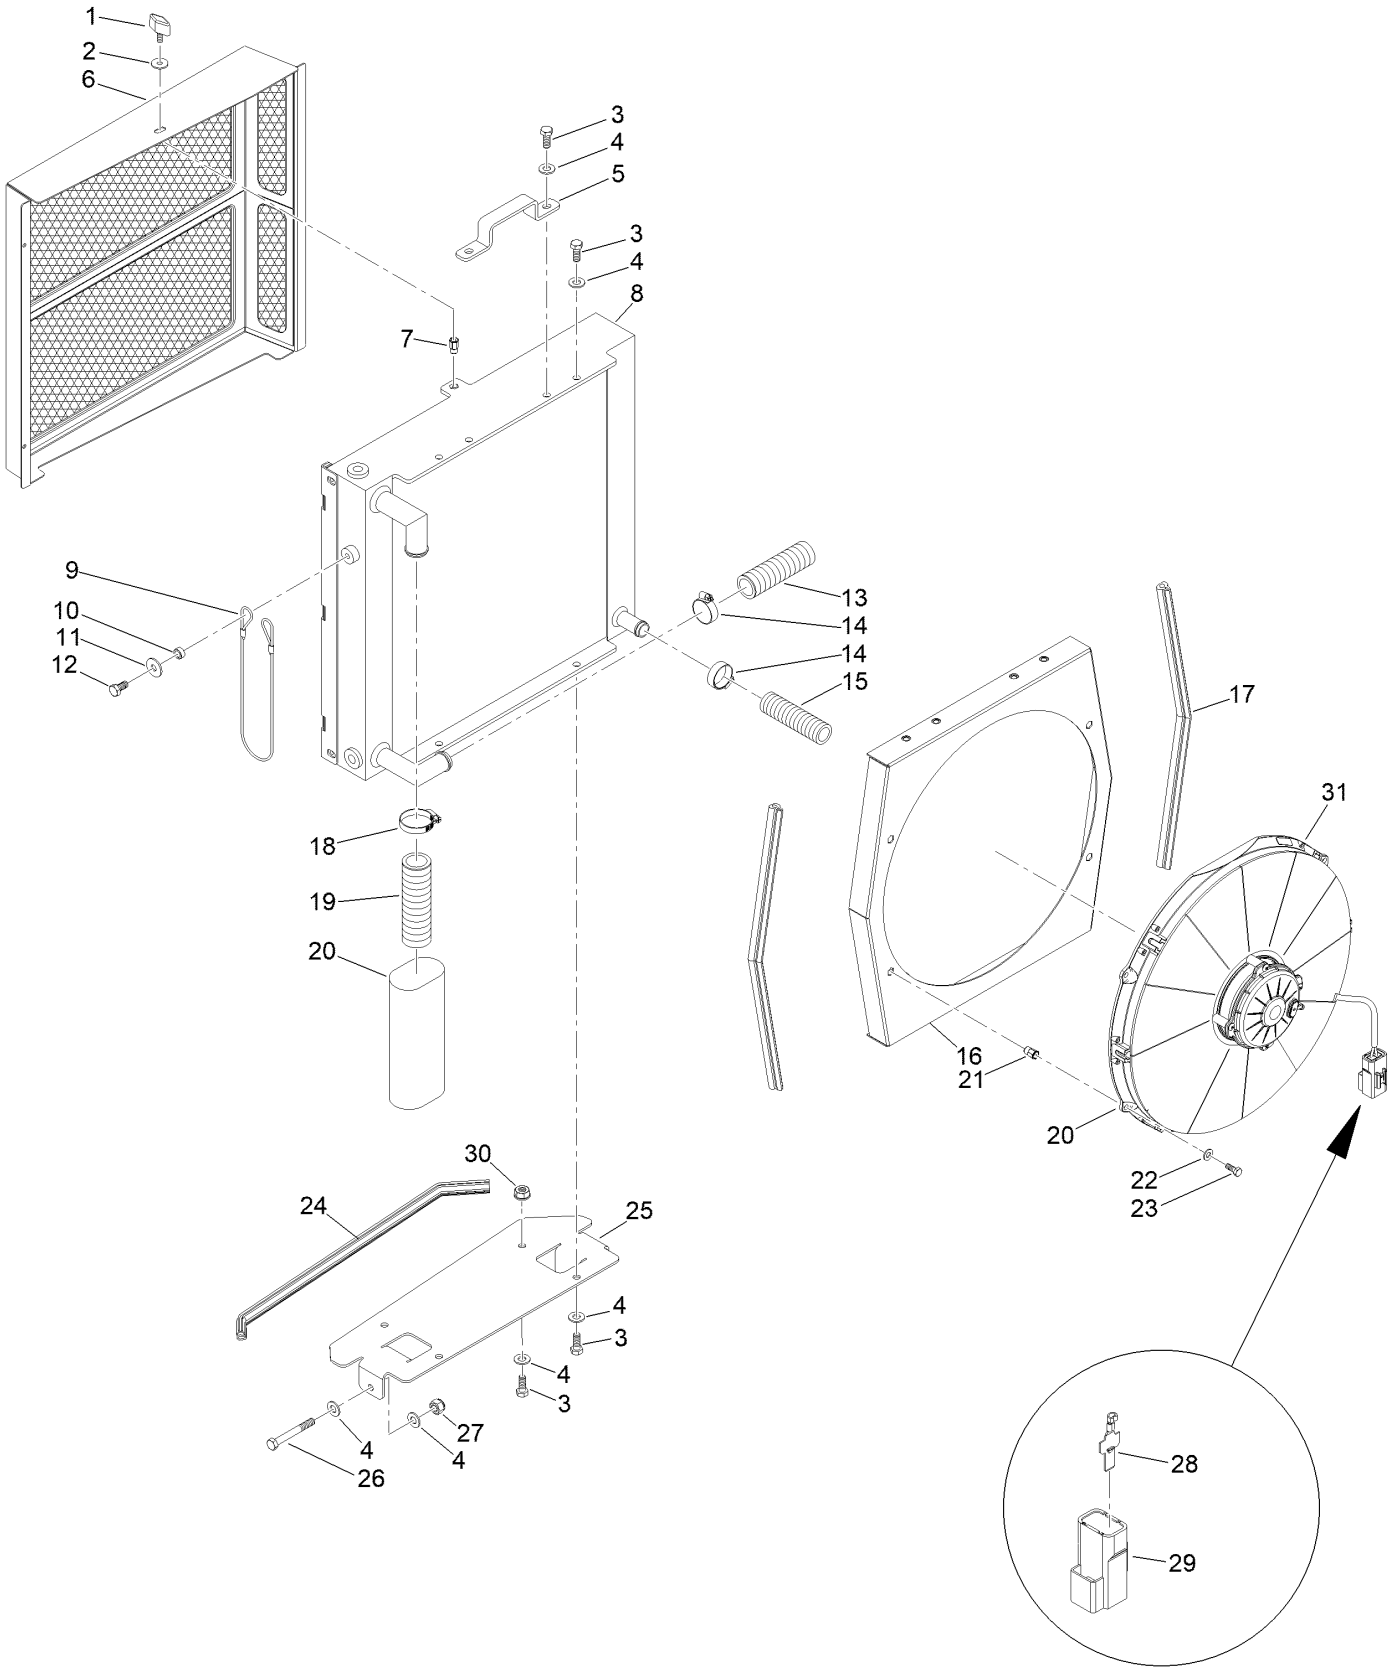

Cooling Water System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-1148	1	Knob
2	134-1234	1	Washer
3	134-1011	8	Screw
4	134-1045	12	Washer
5	134-9260	1	Bracket, Radiator Handle
6	134-9262	1	Grid, Radiator
7	134-1194	1	Insert-Threaded
8	134-9261	1	Radiator
9	134-9264	1	Cable, Radiator
10	134-9263	1	Spacer
11	134-3126	1	Washer
12	134-1010	1	Screw
13	134-9267	1	Hose, Radiator
14	134-9320	2	Clamp
15	134-9268	1	Hose, Radiator
16	134-9270	1	Conveyor, Radiator
17	134-9269	2	Gasket, MM 410
18	134-1277	1	Clamp
19	134-9265	1	Hose, Radiator 25X1240
20	134-9266	1	Hose Guard
21	134-1257	4	Insert-Threaded
22	134-1044	4	Washer
23	134-1008	4	Screw
24	134-9272	1	Gasket, MM 440
25	134-9273	1	Support, Radiator
26	134-2953	2	Screw
27	134-1038	2	Nut
28	134-8133	2	Connector-Terminal
29	134-8132	1	Connector-2Way
30	134-1082	2	Nut
31	134-9271	1	Fan, Radiator


Body and Pedals Assembly

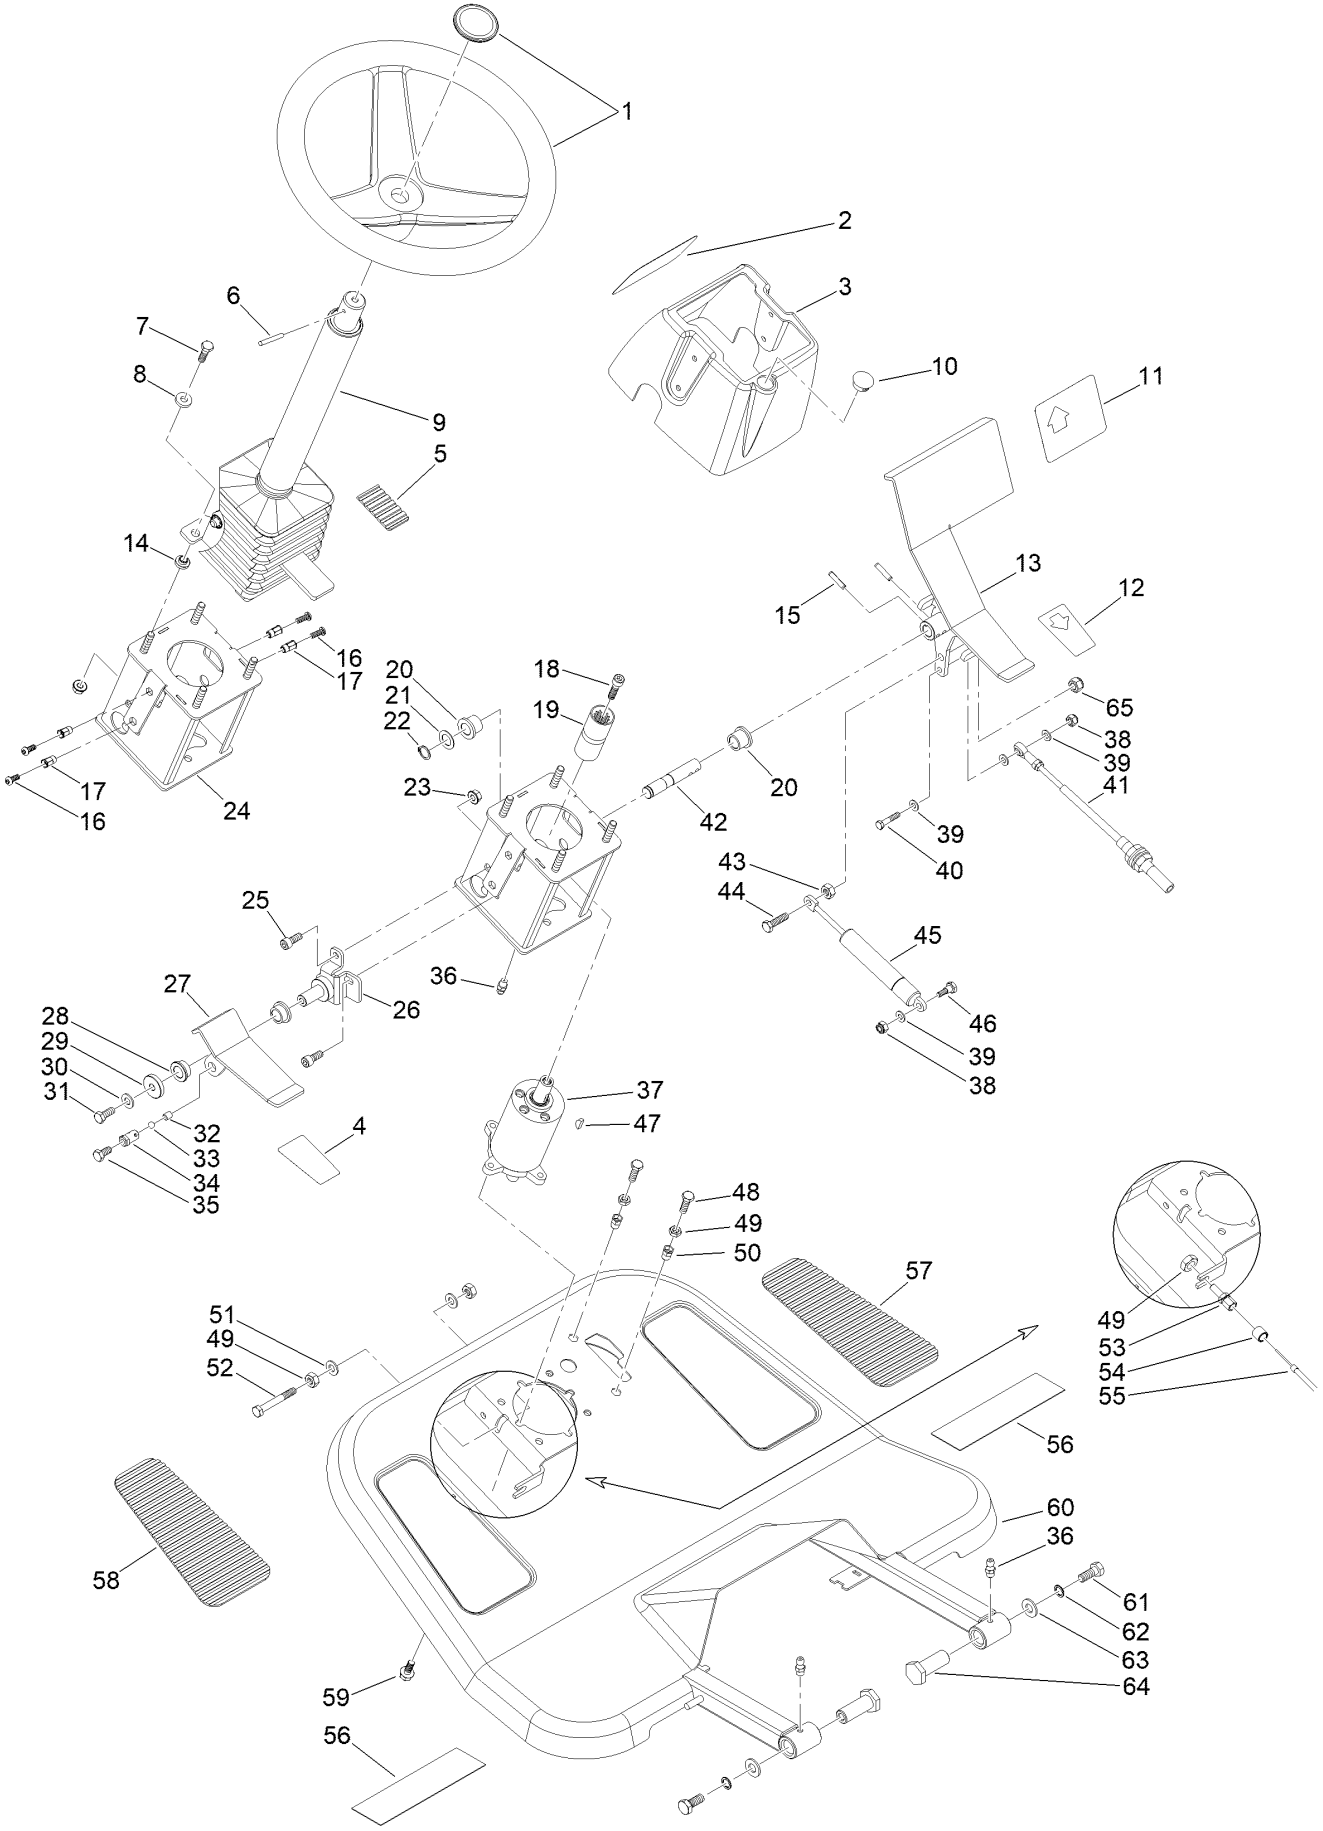

Body and Pedals Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-0958	1	Wheel-Steering
2	126-5060	1	Decal-Logo, Toro
3	134-9473	1	Shroud, Steering-Column
4	134-9474	1	Tape, Non-Slip
5	134-9475	1	Pad, Rubber
6	134-1135	1	Plug
7	134-1038	4	Nut
8	134-0997	4	Washer
9	134-9293	1	Steering Column
10	134-9476	1	Plug, Steering-Clmn
11	94-3307	1	Pad-Pedal, Traction
12	94-3308	1	Pad-Pedal, Traction
13	134-9275	1	Pedal, Transmission
14	134-9294	4	Bushing
15	134-9276	2	Pin
16	134-1303	4	Screw
17	134-1194	4	Insert-Threaded
18	134-1115	1	Screw
19	134-9477	1	Hub, Steering Valve
20	134-2954	2	Bushing
21	134-0861	1	Spacer
22	134-9274	1	Retainer
23	134-1082	2	Nut
24	134-9295	1	Support, Steering Column
25	134-1026	2	Screw
26	134-9277	1	Support, Diff Lock Pedal
27	134-9290	1	Pedal, Diff Lock
28	134-9278	2	Bushing
29	134-1355	1	Washer
30	134-1054	1	Washer
31	134-1011	1	Screw
32	134-9279	1	Stud
33	134-9280	1	Ball
34	134-9478	1	Clamp, Brake Cable
35	134-1010	1	Screw
36	134-1065	3	Fitting-Grease
37	134-9344	1	Steering Valve
38	134-1042	2	Nut
39	134-1044	4	Washer
40	134-9370	1	Screw-HH
41	134-9282	1	Cable, Transmission
42	134-9480	1	Shaft, Traction Pedal
43	134-9286	1	Nut
44	134-1012	1	Screw
45	134-0594	1	Absorber-Shock
46	134-0757	1	Pin
47	134-1272	1	Key-Shaft
48	134-1015	2	Screw
49	134-1078	5	Nut
50	134-1260	2	Insert-Threaded
51	134-1045	2	Washer
52	134-1024	1	Screw
53	134-9283	1	Register
54	134-8129	1	Cable-End, Nipple
55	134-9288	1	Cable, Diff Lock
56	134-9289	2	Grip Strip
57	134-9284	1	Footrest, Rubber RH
58	134-9281	1	Footrest, Rubber LH
59	134-9479	4	Screw-HHF
60	134-9287	1	Platform
61	134-1018	2	Screw
62	134-1051	2	Washer
63	134-1046	2	Washer
64	134-9285	2	Pivot, Platform
65	134-1038	1	Nut


Body Assembly

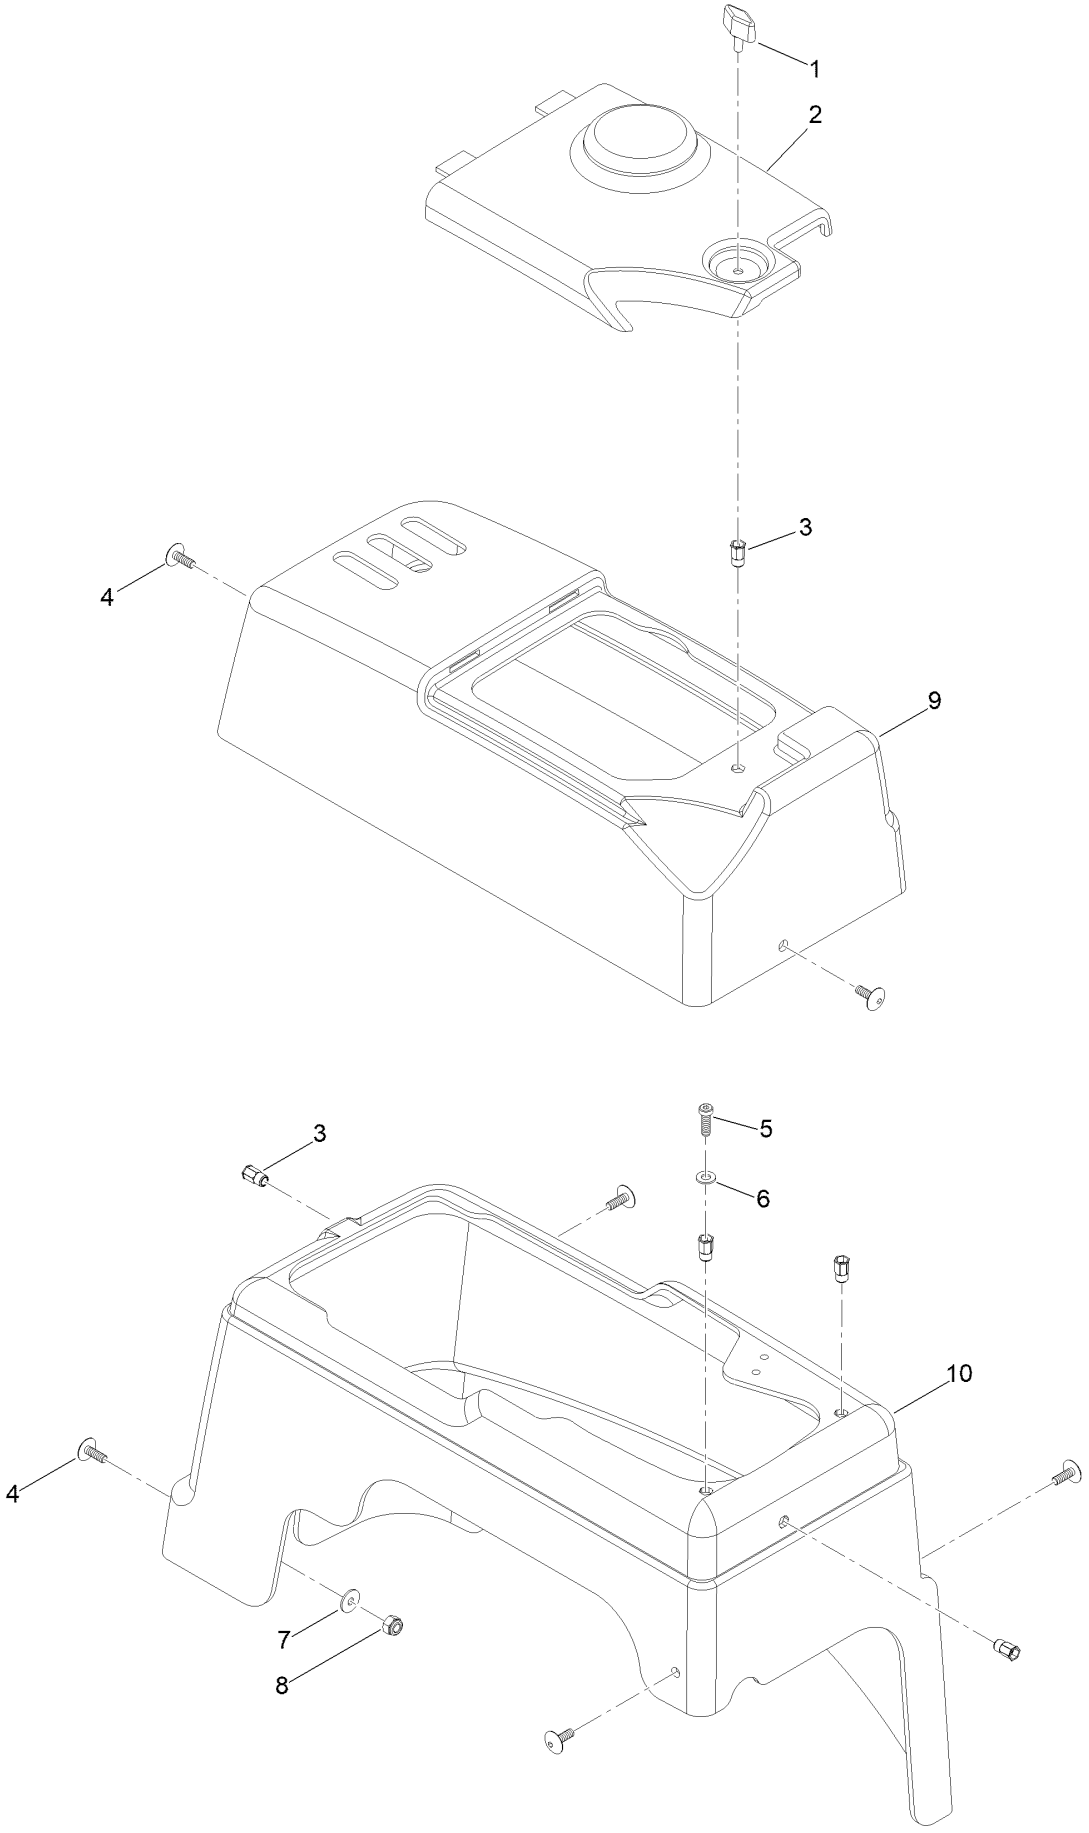

Body Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-1148	1	Knob
2	134-9297	1	Cover, RH Dashboard
3	134-1194	5	Insert-Threaded
4	134-1304	6	Screw
5	134-1071	3	Screw
6	134-1044	3	Washer
7	134-1234	4	Washer
8	134-1042	4	Nut
9	134-9298	1	Dashboard, RH
10	134-9299	1	Fairing


Hydraulic Assembly No. 1

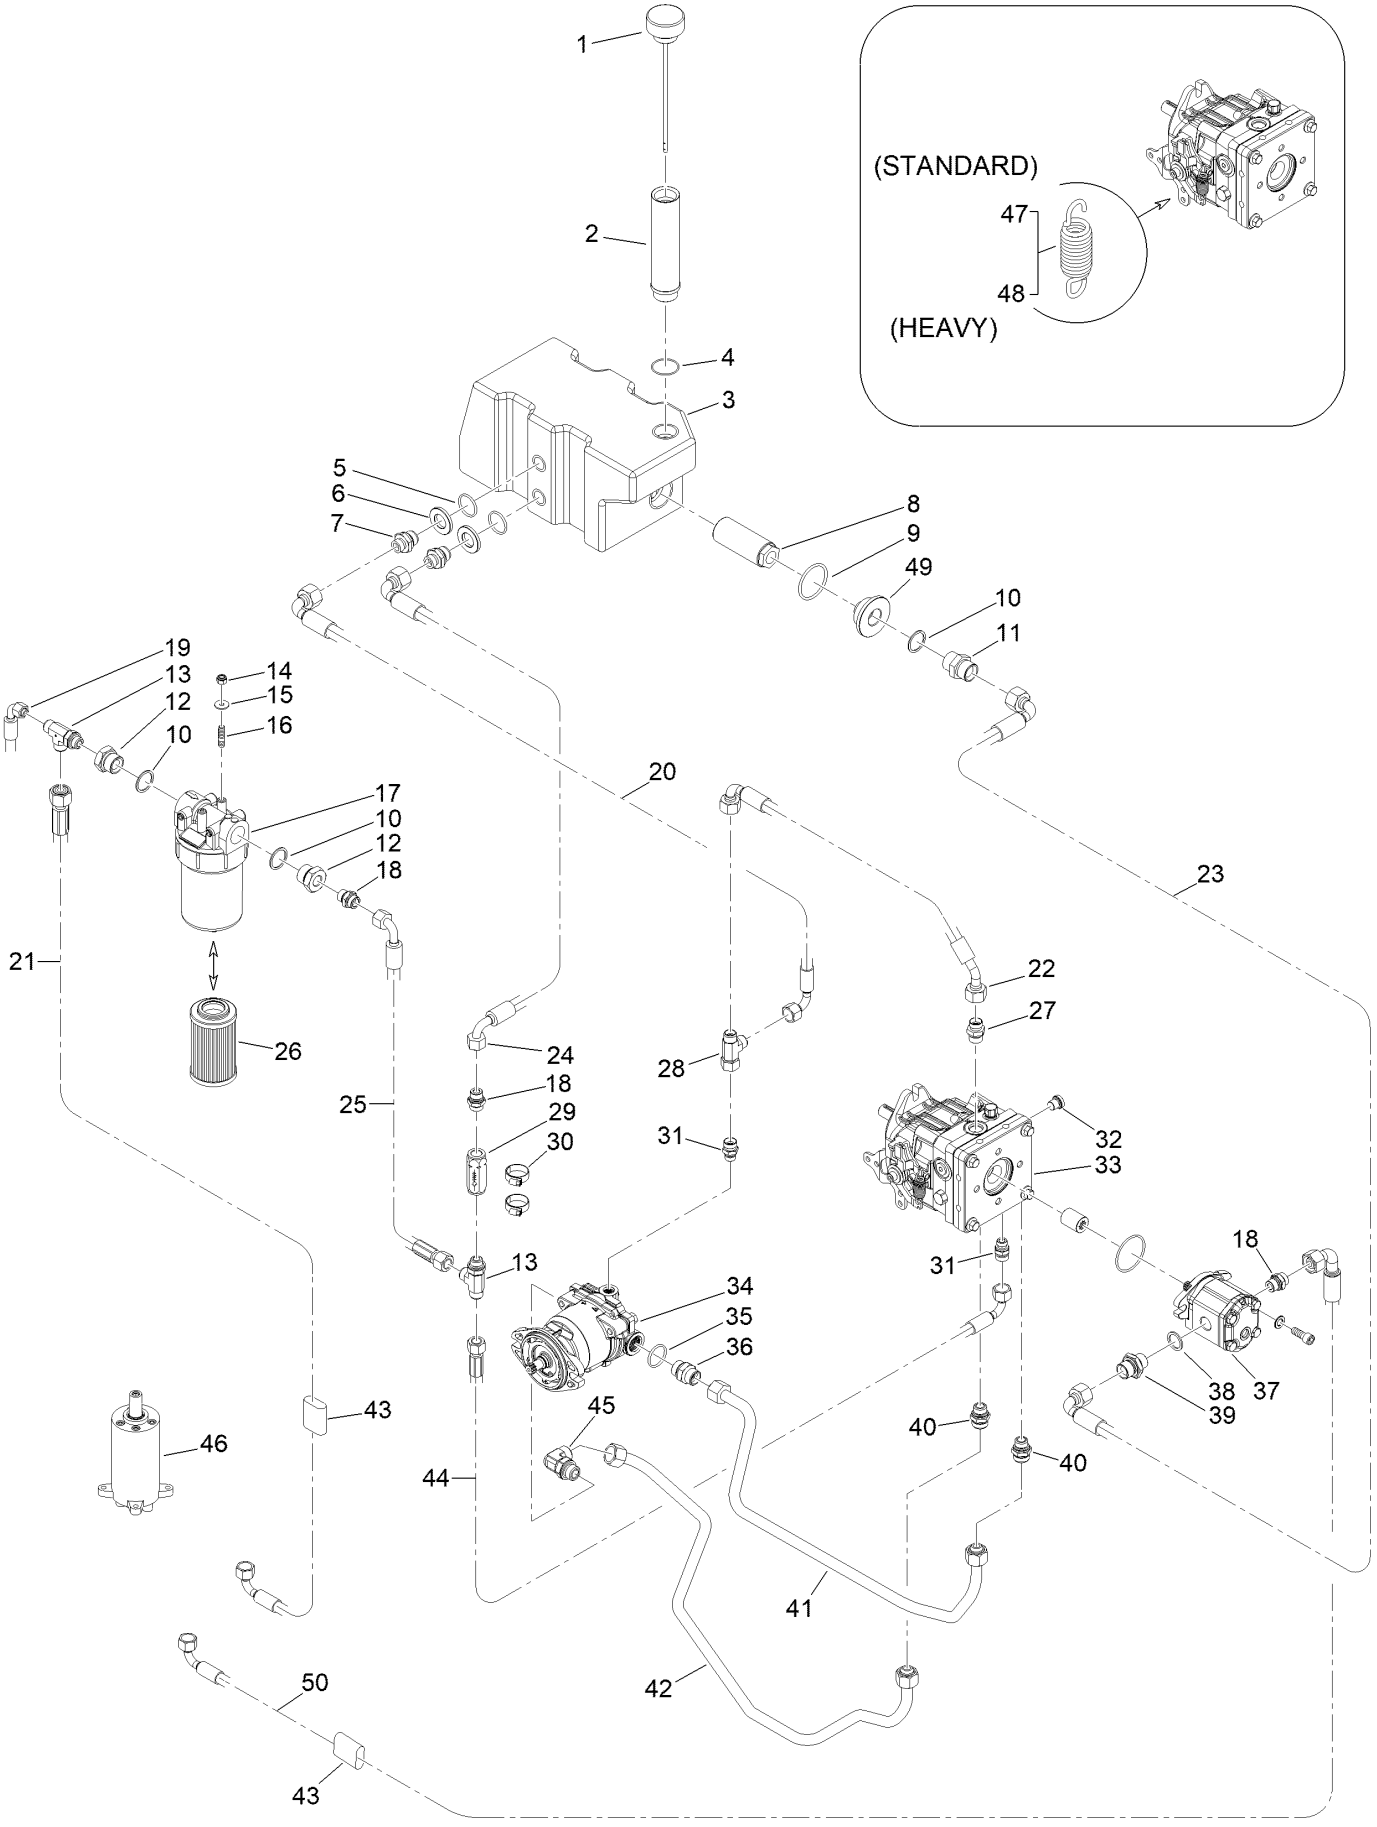

Hydraulic Assembly No. 1 (continued)

Ref.	Part Number	Qty.	Description
1	134-1210	1	Cap-Oil
2	134-0786	1	Filler-Tank, Oil
3	134-0635	1	Tank-Oil
4	134-8240	1	O-Ring
5	134-0569	2	O-Ring
6	134-0887	2	Washer
7	134-1267	2	Fitting
8	134-3123	1	Filter-Tank, Hydraulic
9	134-0617	1	O-Ring
10	134-1256	3	Washer
11	134-9302	1	Fitting, Nipple
12	134-1219	2	Fitting-Reducer
13	134-1218	2	Adaptor-90 DEG
14	134-1042	2	Nut
15	134-1234	2	Washer
16	134-9322	2	Stud
17	134-9321	1	Filter, Transmission Oil
18	134-1266	3	Fitting-Nipple
19	134-9338	1	Hose
20	134-9312	1	Hose
21	134-9315	1	Hose
22	134-9313	1	Hose
23	134-9317	1	Hose
24	134-9316	1	Hose
25	134-9311	1	Hose
26	134-9314	1	Filter Element, Transmission Oil Filter
27	134-9307	1	Fitting,Nipple
28	134-9300	1	Fitting-Tee
29	134-9319	1	Check-Valve
30	134-9320	2	Clamp
31	134-1268	2	Fitting-Nipple
32	134-9324	1	Plug {9/16-18 Unf L10 CE6]
33	134-9306	1	Pump, Transmission
34	134-9310	1	Motor, Transmission
35	134-1064	1	O-Ring
36	134-9301	1	Fitting, Nipple
37	134-9323	1	Gear Pump
38	134-1332	1	Washer
39	134-1216	1	Fitting
40	134-9303	2	Fitting, Nipple
41	134-9318	1	Pipe, Forward Gear
42	134-9305	1	Pipe, Reverse Gear
43	134-0985	2	Protector-Hose
44	134-9308	1	Hose
45	134-9309	1	Fitting
46	134-9344	1	Steering Valve
47	134-9326	1	Spring, Rtn Standard 51833
48	134-9325	1	Spring, Rtn Heavy 51605
49	134-0820	1	Support-Filter, Oil
50	134-9304	1	Hose


Hydraulic Assembly No. 2

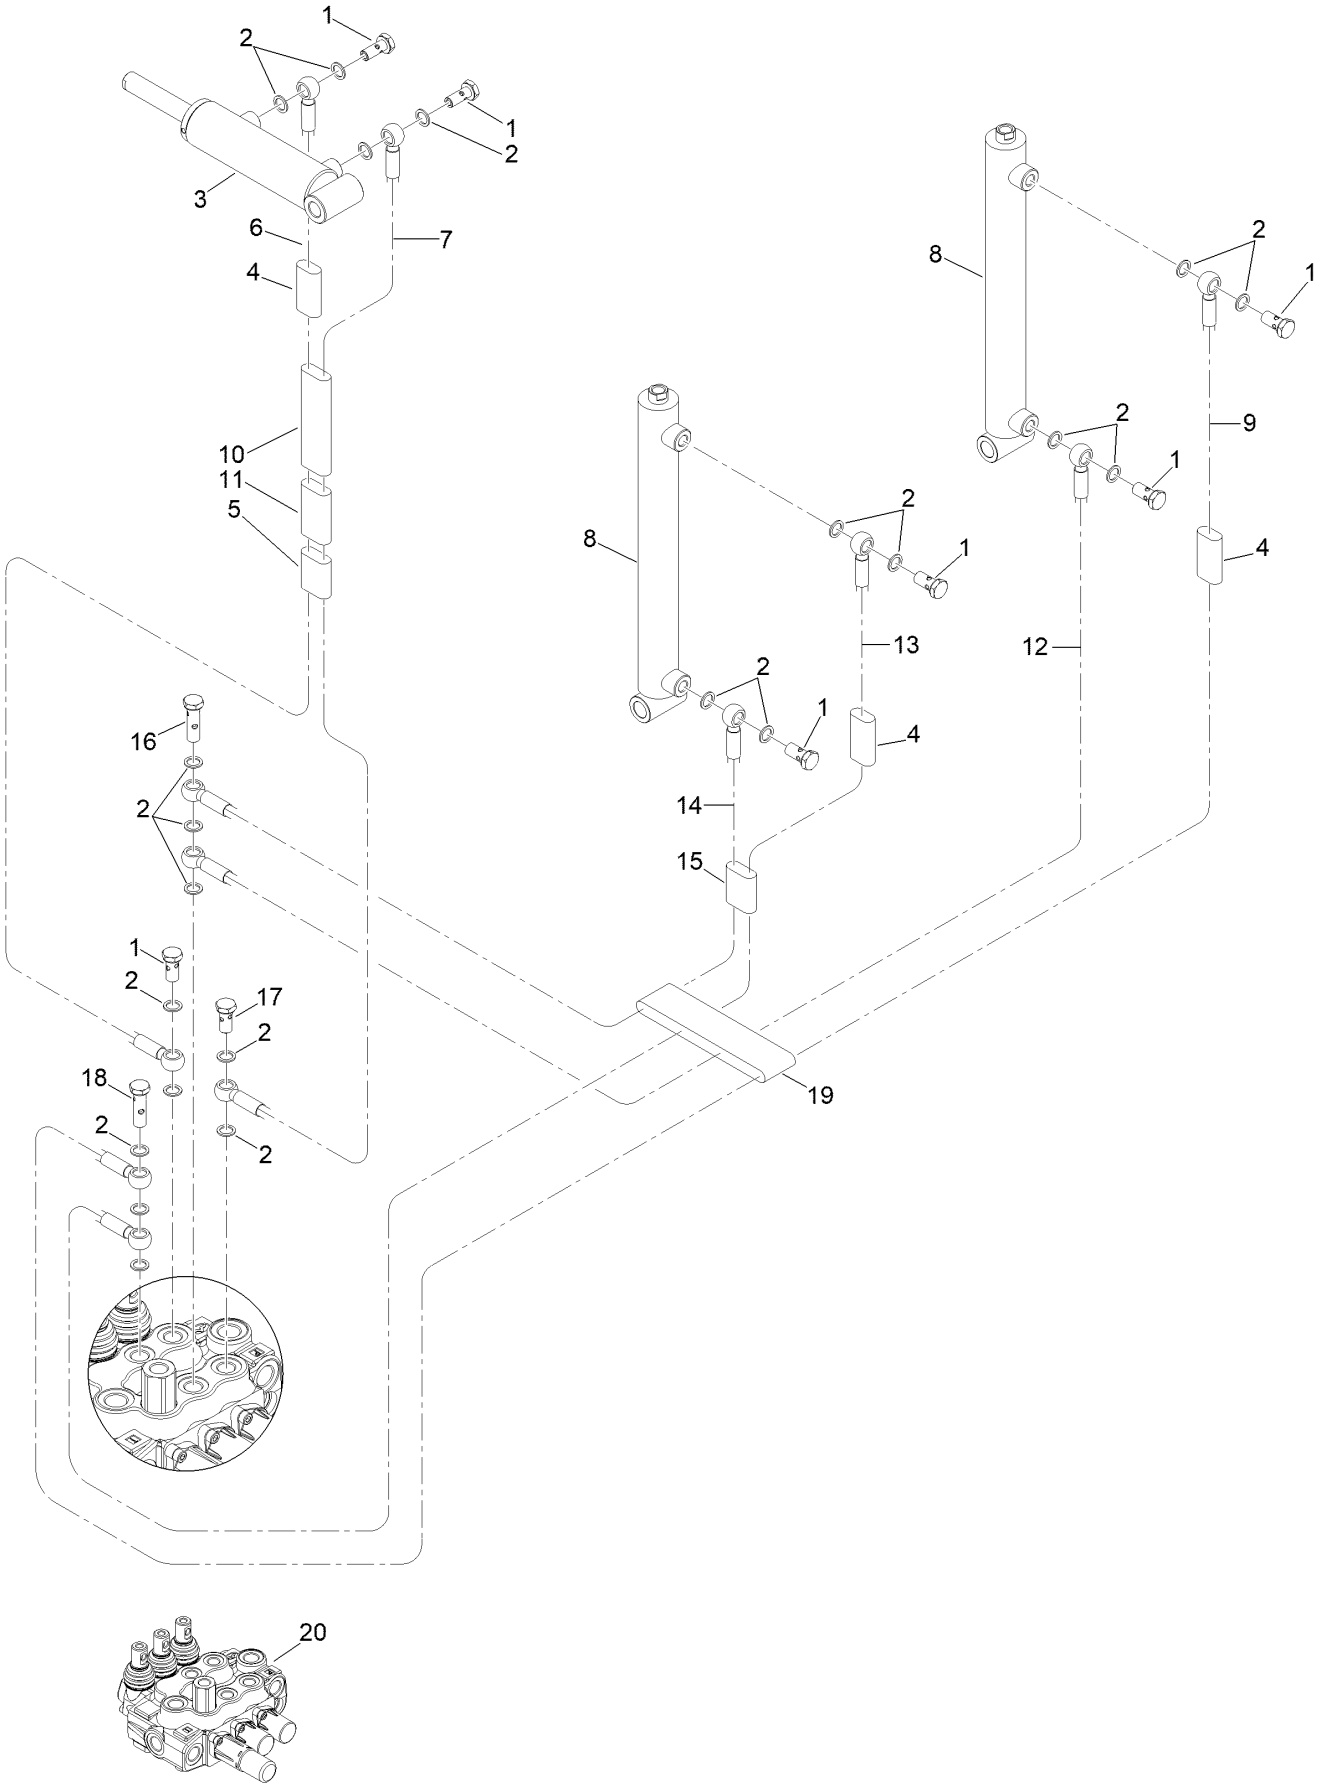

Hydraulic Assembly No. 2 (continued)

Ref.	Part Number	Qty.	Description
1	134-1102	7	Screw
2	134-1255	21	Washer
3	134-9392	1	Ram, Dual Acting
4	134-0988	3	Protector-Hose
5	134-0985	3	Protector-Hose
6	134-9336	1	Hose
7	134-9335	1	Hose
8	134-0811	2	Cylinder
9	134-9331	1	Hose
10	134-9327	1	Hose Guard
11	134-9328	1	Hose Guard
12	134-9334	1	Hose
13	134-9332	1	Hose
14	134-9333	1	Hose
15	134-9330	1	Hose Guard
16	134-3055	1	Screw
17	134-3050	1	Screw
18	134-1245	1	Screw
19	134-9329	1	Hose Guard
20	134-3054	1	Valve-Lift


Hydraulic Assembly No. 3

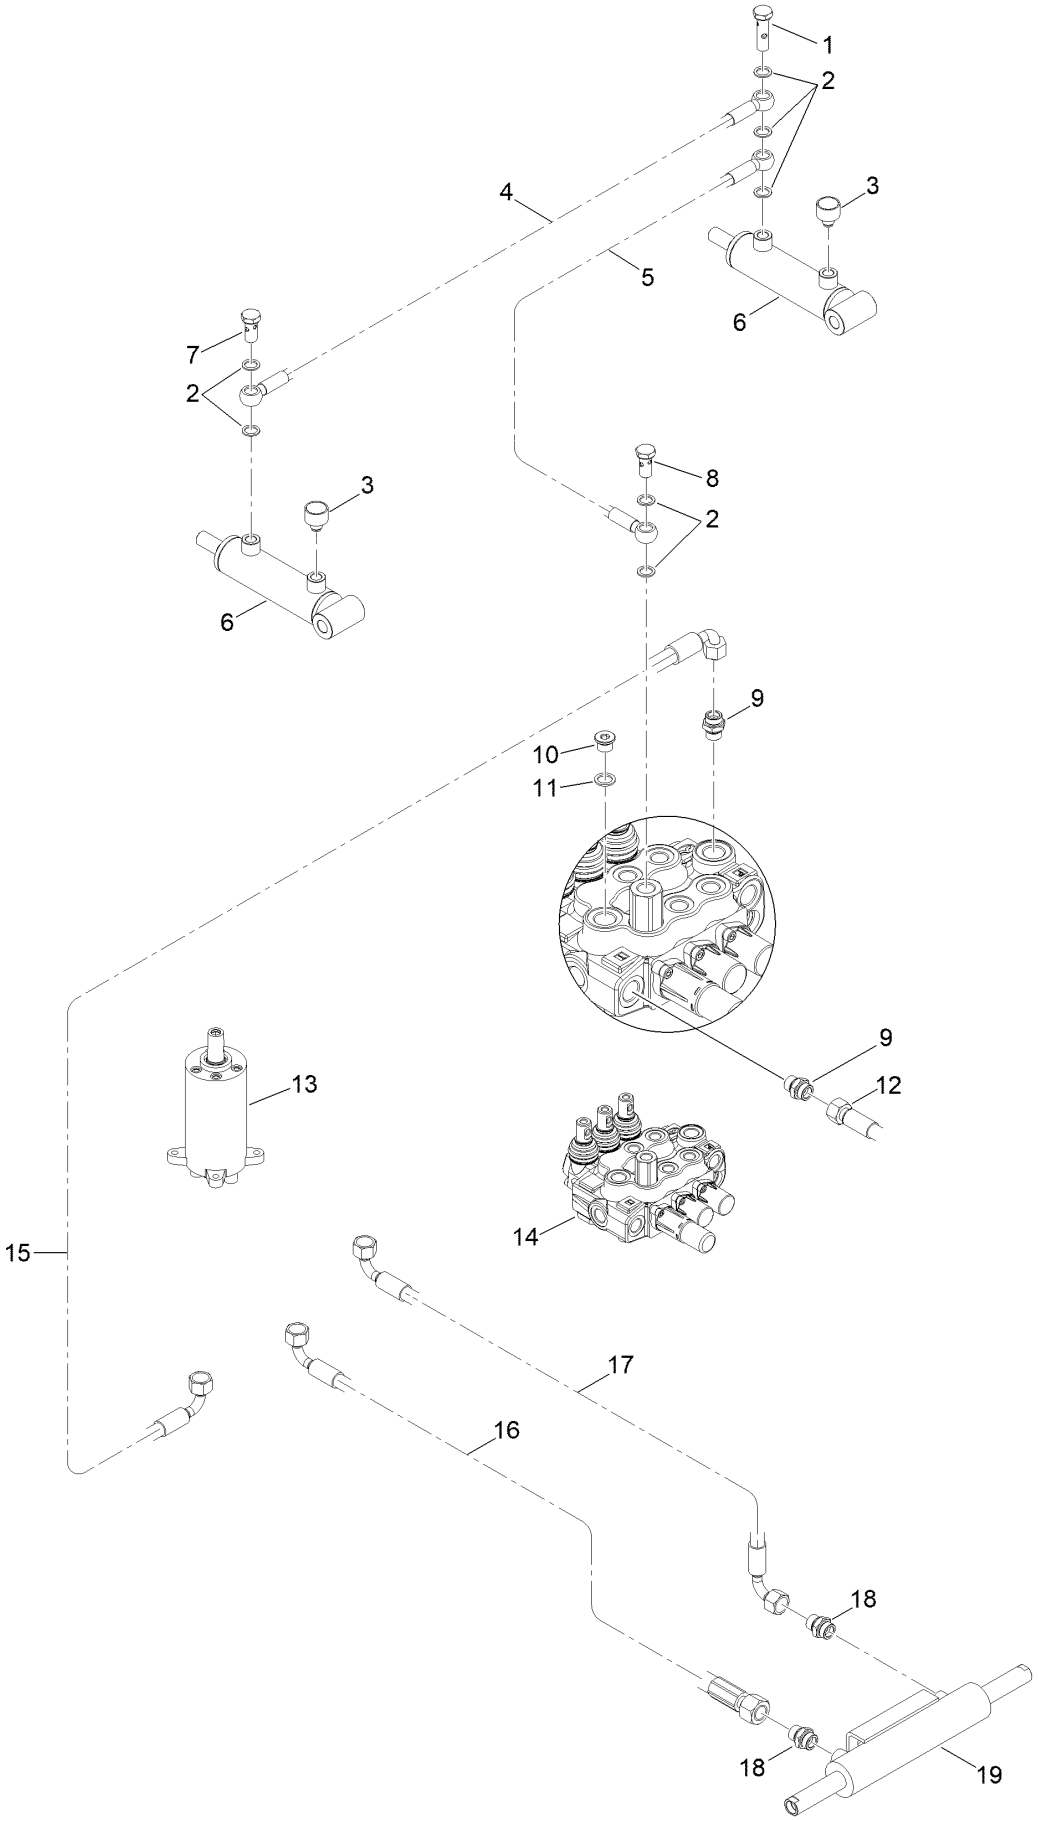

Hydraulic Assembly No. 3 (continued)

Ref.	Part Number	Qty.	Description
1	134-1245	1	Screw
2	134-1255	7	Washer
3	134-1153	2	Cap-Breather
4	134-9339	1	Hose
5	134-9340	1	Hose
6	134-9337	2	Ram
7	134-1102	1	Screw
8	134-7804	1	Fitting-Orifice
9	134-1266	2	Fitting-Nipple
10	134-9348	1	Plug
11	134-7633	1	Seal - 3/8In
12	134-9338	1	Hose
13	134-9344	1	Steering Valve
14	134-3054	1	Valve-Lift
15	134-9343	1	Hose
16	134-9342	1	Hose
17	134-9341	1	Hose
18	134-1270	2	Fitting-Nipple
19	134-9345	1	Ram


Hydraulic Assembly No. 4

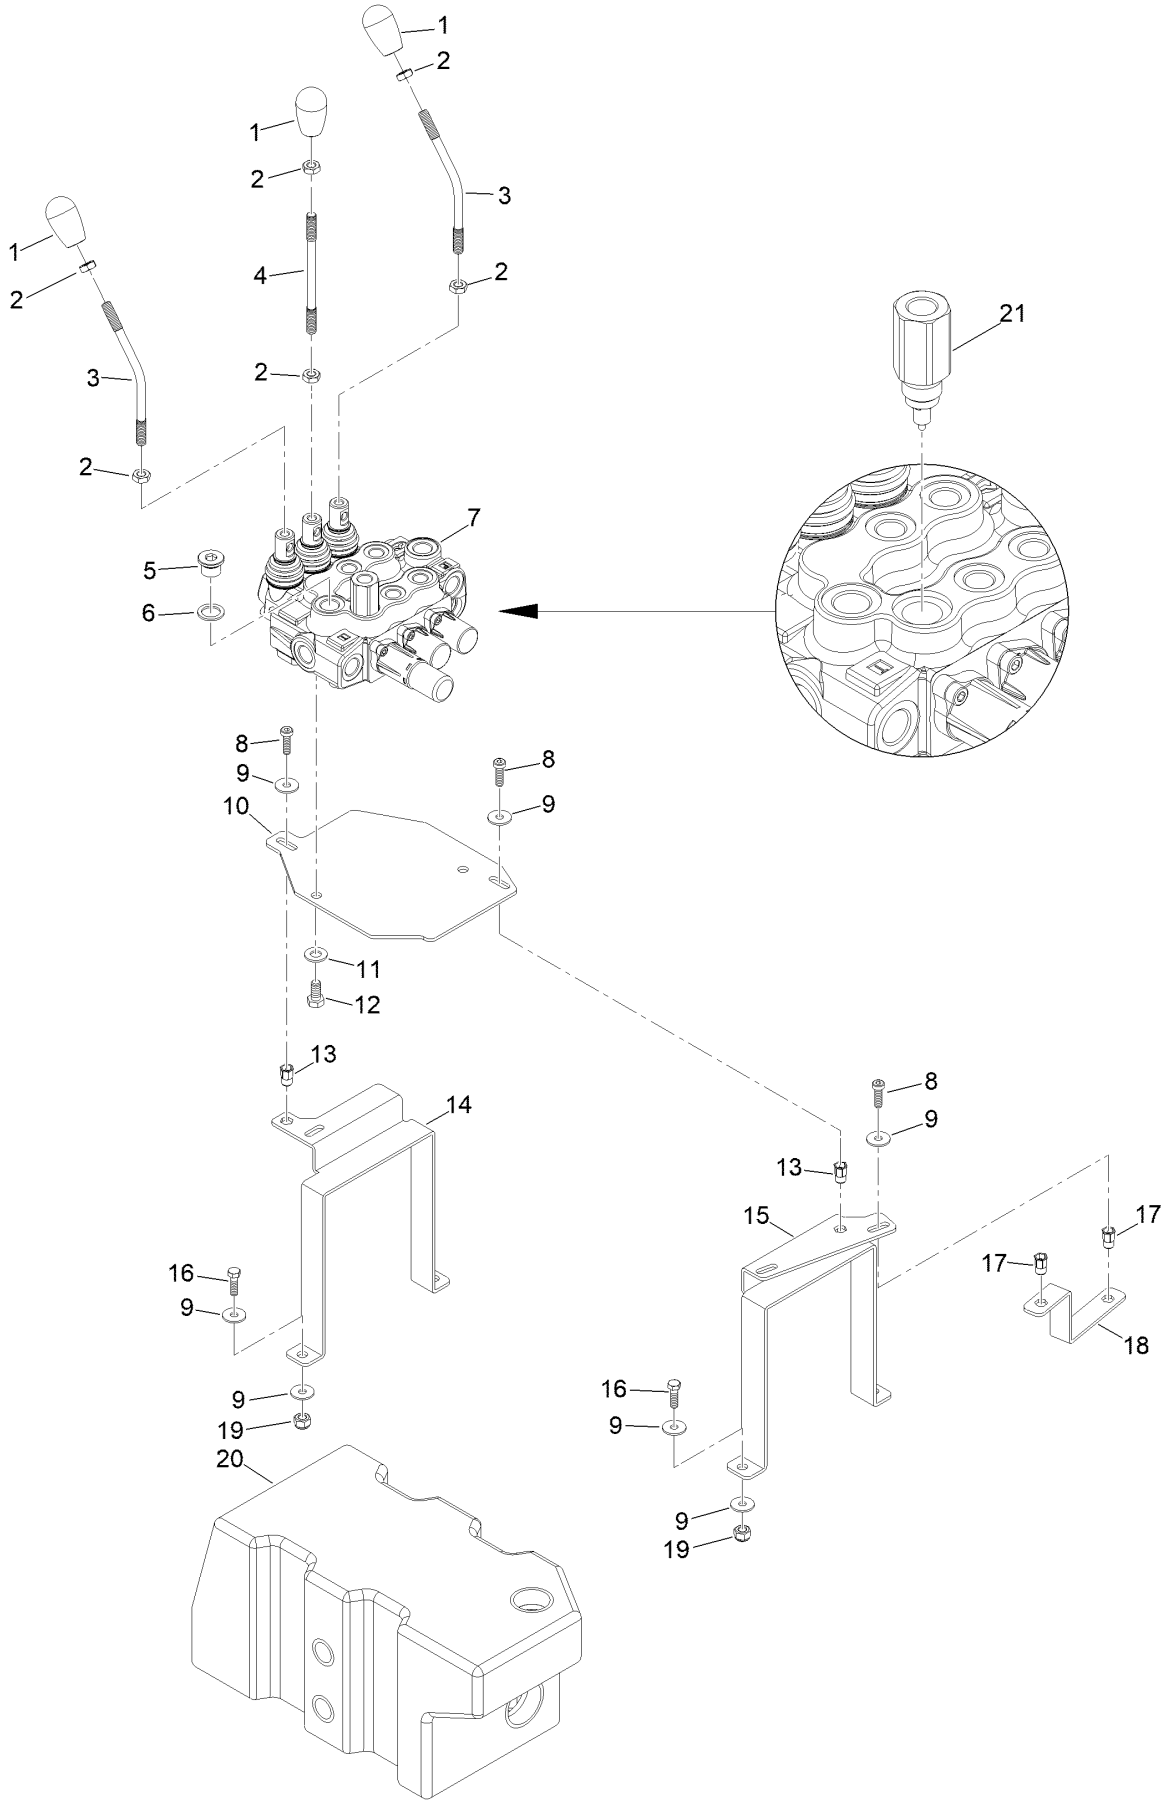

Hydraulic Assembly No. 4 (continued)

Ref.	Part Number	Qty.	Description
1	134-1179	3	Knob
2	134-1078	6	Nut
3	134-9346	2	Lever
4	134-9347	1	Lever
5	134-9348	1	Plug
6	134-7633	1	Seal - 3/8In
7	134-3054	1	Valve-Lift
8	134-1071	3	Screw
9	134-1234	11	Washer
10	134-9349	1	Plate, Lift Valve
11	134-1045	2	Washer
12	134-1010	2	Screw
13	134-1257	2	Insert-Threaded
14	134-0795	1	Clamp-Band
15	134-0794	1	Clamp-Band
16	134-1009	4	Screw
17	134-9350	2	Fitting
18	134-9351	1	Support, Water Expansion Tank
19	134-1042	4	Nut
20	134-0635	1	Tank-Oil
21	162-1266	1	Valve-Deck Lift


Hopper and Frame Assembly

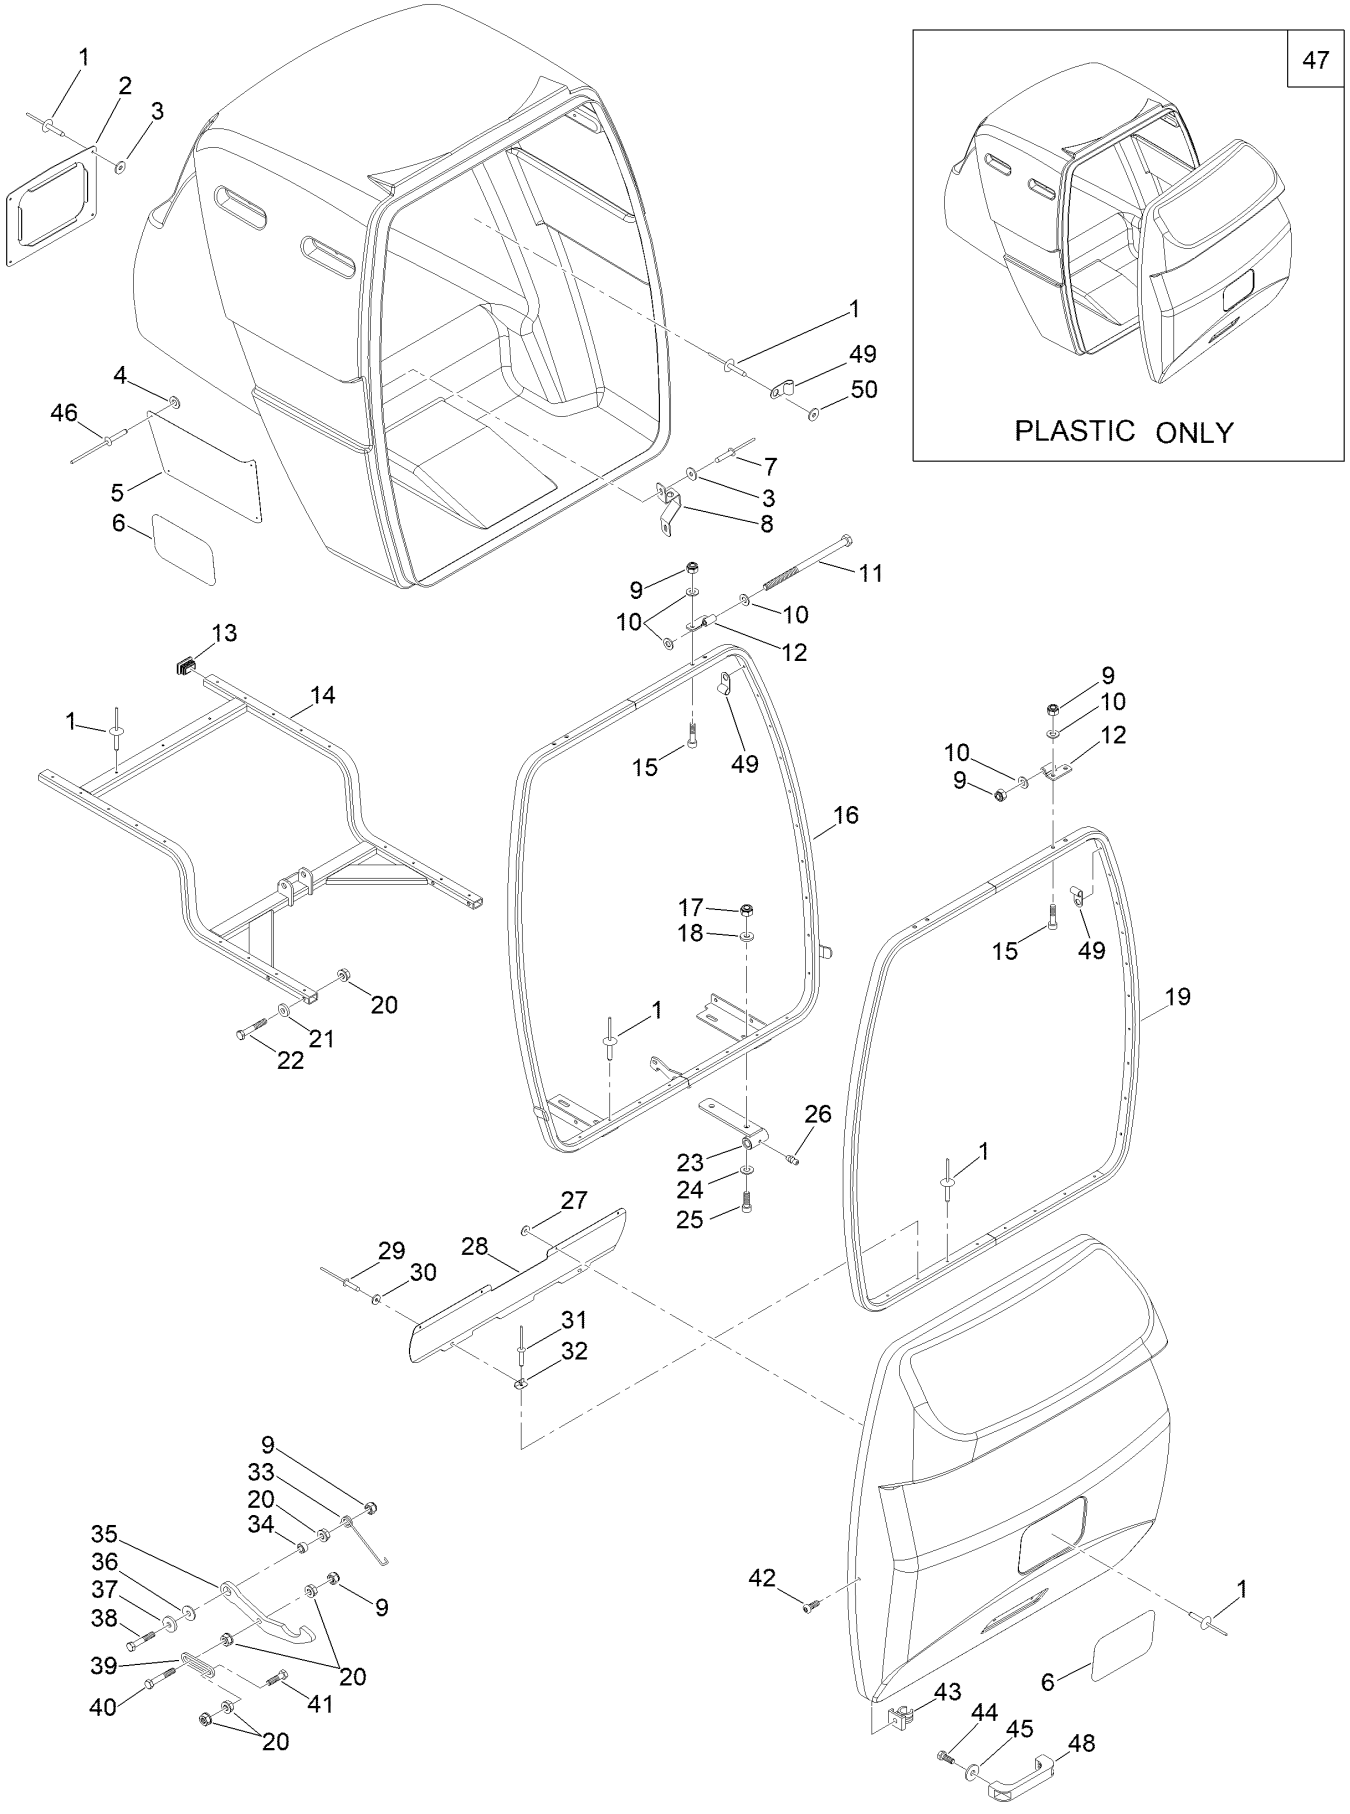

Hopper and Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-1273	97	Rivet
2	134-9359	1	Flange, Chute Coupling
3	134-1231	6	Washer
4	134-1050	8	Washer
5	134-3124	2	Plate-Logo, Hopper
6	134-0551	3	Decal-Toro Logo
7	134-1190	2	Rivet
8	134-0744	1	Bracket
9	134-1092	7	Nut
10	134-1045	7	Washer
11	134-1117	1	Screw
12	134-0758	4	Hinge
13	134-1181	2	Cap-Plastic, Black
14	134-9357	1	Chassis, Hopper
15	134-1122	4	Screw
16	134-9360	1	Frame, Hopper
17	134-1081	2	Nut
18	134-9408	2	Washer
19	134-9356	1	Frame, Hopper Door
20	134-1082	9	Nut
21	134-0997	4	Washer
22	134-8036	4	Screw-HH
23	134-9381	2	Frame, Hopper Body
24	134-1046	2	Washer
25	134-8233	2	Screw-HSH
26	134-1065	2	Fitting-Grease
27	134-1231	8	Washer
28	134-9486	1	Slide, Hopper Door
29	134-1204	2	Rivet
30	134-1053	2	Washer
31	134-1244	2	Rivet
32	134-0753	2	Bracket
33	134-0740	1	Spring
34	134-0687	1	Spacer
35	134-9353	1	Hook, Hopper Door
36	134-3126	1	Washer
37	134-8037	1	Washer-Plain
38	134-1029	1	Screw
39	134-9354	1	Screw-HH
40	134-9355	1	Ring, Hopper Hook
41	134-1012	1	Screw
42	134-1303	1	Screw
43	134-1160	1	Collar
44	134-1008	2	Screw
45	134-1234	2	Washer
46	134-1183	8	Rivet
47	134-9352	1	Hopper, Cut And Drilled
48	134-1140	1	Handle
49	134-1348	4	Grommet
50	134-1231	4	Washer


Hopper Parts Assembly

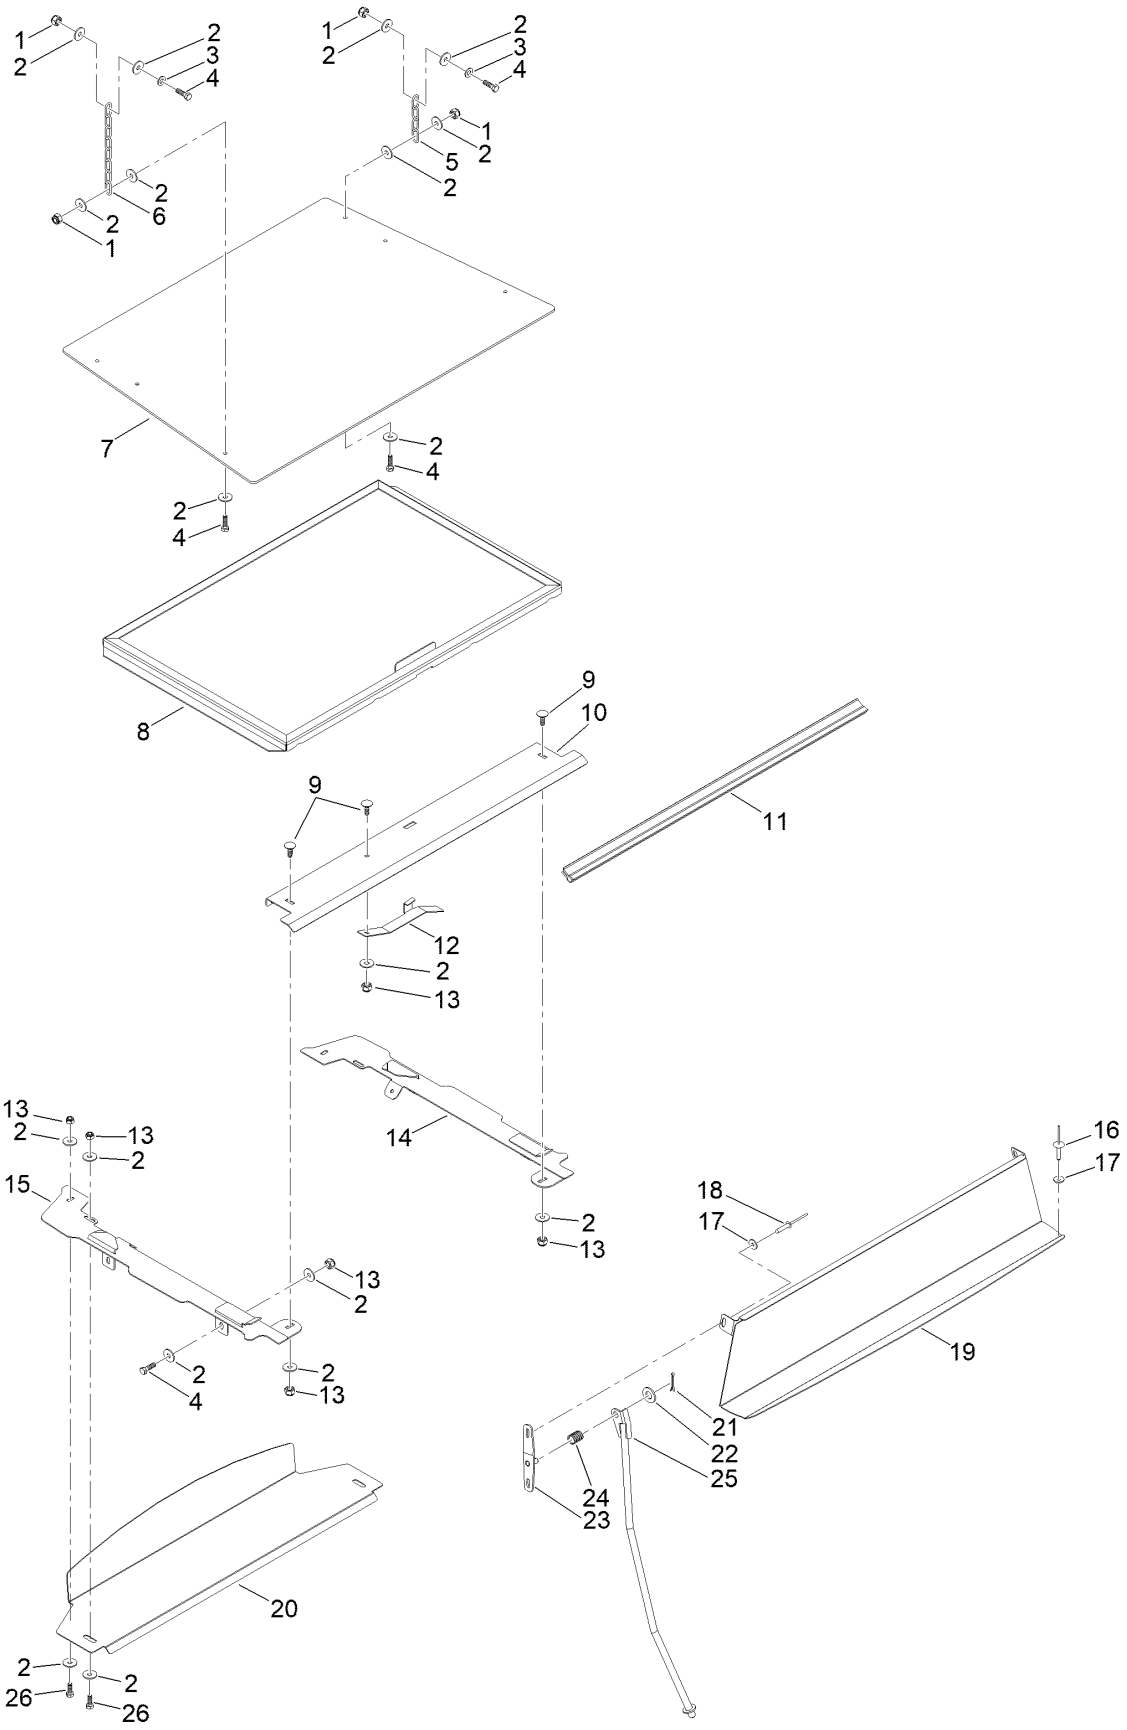

Hopper Parts Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-1042	4	Nut
2	134-1234	21	Washer
3	134-1044	2	Washer
4	134-1009	6	Screw
5	134-0869	2	Chain
6	134-0870	2	Chain
7	134-0871	1	Panel-Plastic, Grass Catcher
8	134-9364	1	Grid, Removable
9	134-1296	3	Screw
10	134-9362	1	Support, Removable Grid
11	134-9363	1	Gasket
12	134-9361	1	Handle, Hopper Grid
13	134-1041	7	Nut
14	134-9367	1	Slide, Removable Grid RH
15	134-9365	1	Slide, Grid LH
16	134-1273	3	Rivet
17	134-1231	5	Washer
18	134-1190	2	Rivet
19	134-9368	1	Grid, Door
20	134-9366	1	Plate, Hopper Grid
21	134-1129	1	Pin-Spring
22	134-1046	1	Washer
23	134-0741	1	Support
24	134-0727	1	Spring
25	134-0747	1	Rod
26	134-1008	2	Screw


Hopper Electrical Assembly

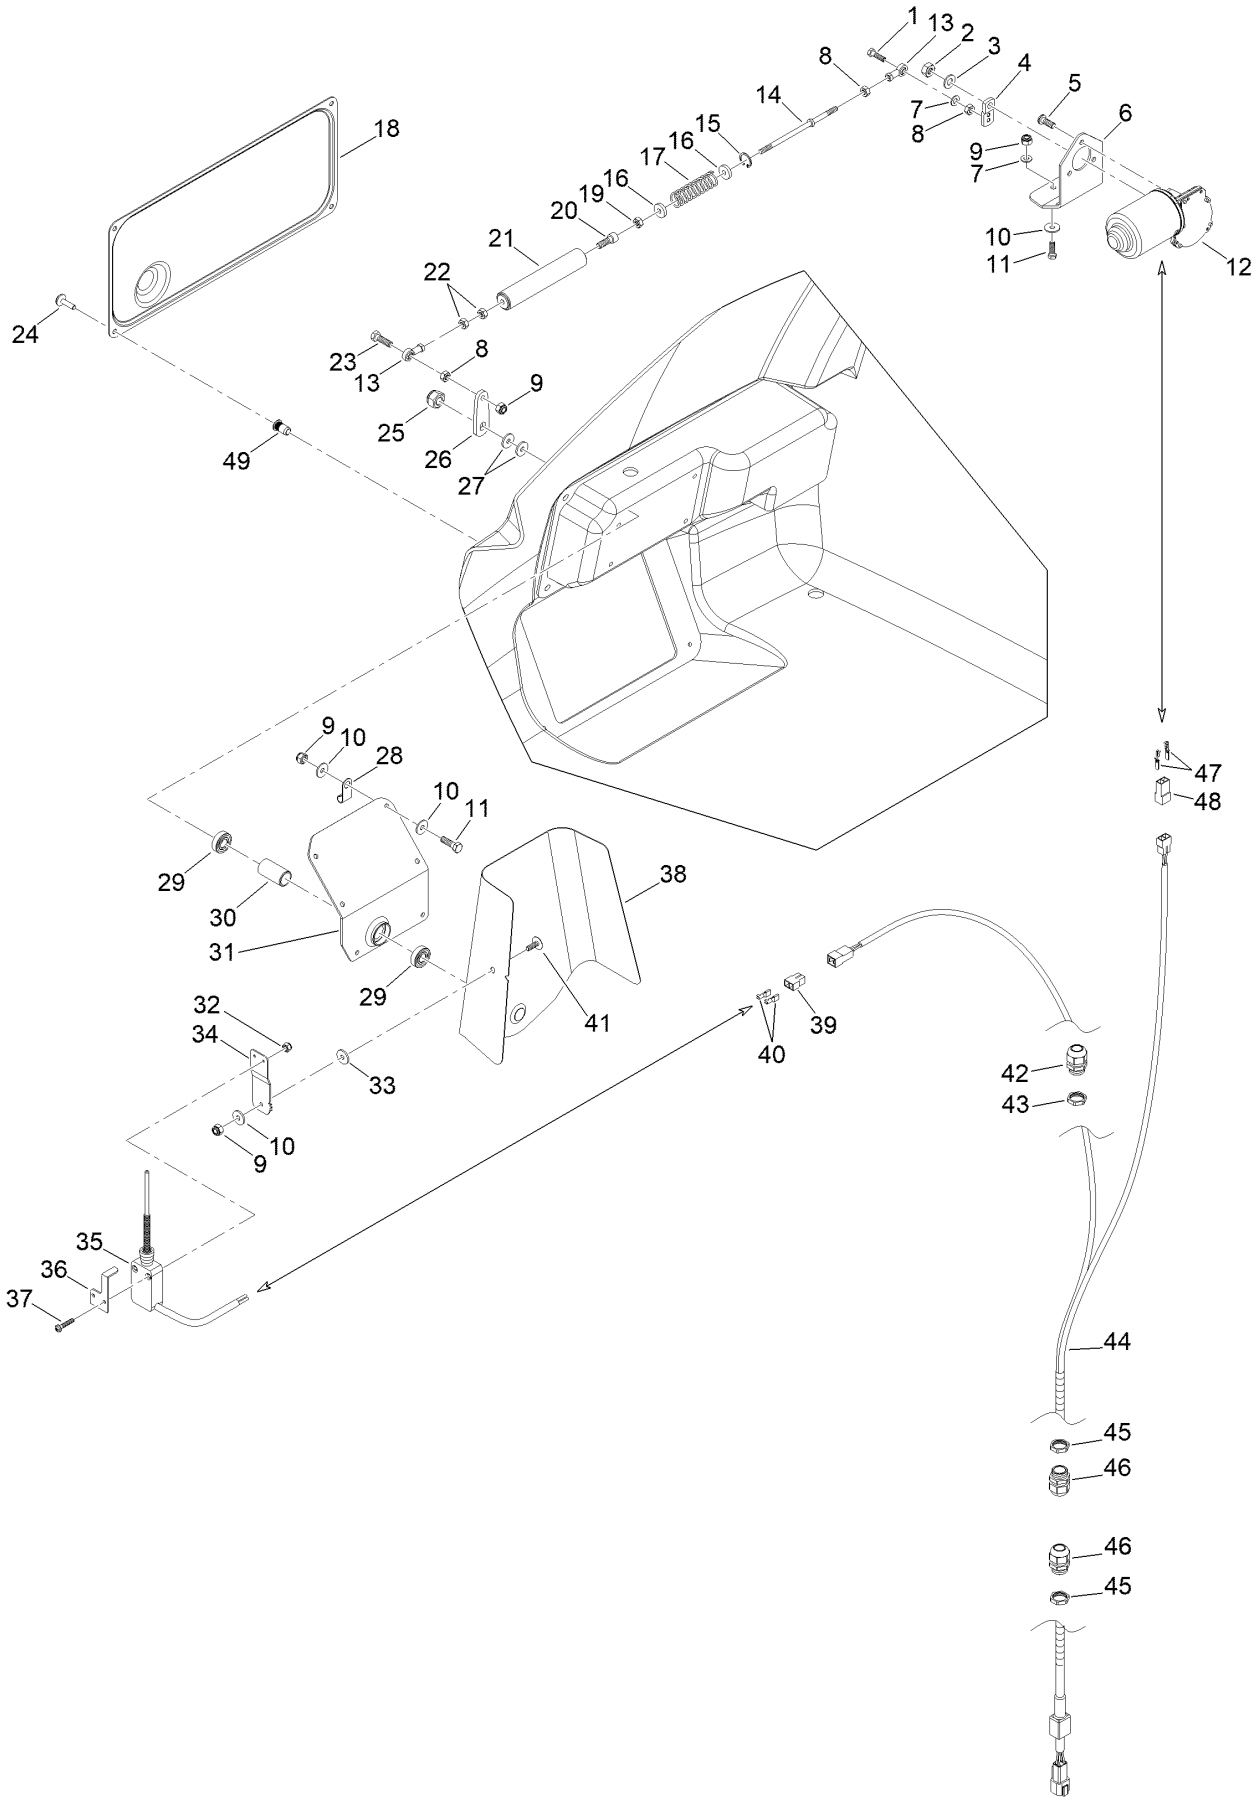

Hopper Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-9371	1	Screw
2	134-1078	1	Nut
3	134-1054	1	Washer
4	134-1003	1	Plate, Hopper-Spreader
5	134-1303	3	Screw
6	134-0766	1	Support-Engine
7	134-1044	4	Washer
8	134-1039	3	Nut
9	134-1041	11	Nut
10	134-1234	16	Washer
11	134-1009	9	Screw
12	134-0595	1	Baffle-Motor
13	134-0592	2	Head-Joint
14	134-9369	1	Shock Absorber, Grass Spreader
15	134-8039	1	Clip-Internal
16	134-0691	2	Washer
17	134-0926	1	Spring
18	134-0914	1	Cover
19	134-1042	1	Nut
20	134-1025	1	Screw
21	134-1002	1	Body
22	134-1080	1	Nut
23	134-9370	1	Screw-HH
24	134-8236	4	Screw-Flange
25	134-1081	1	Nut
26	134-0768	1	Lever-Hopper
27	134-0998	2	Spacer
28	134-1348	1	Grommet
29	134-1104	2	Bearing
30	134-0841	1	Spacer
31	134-0767	1	Support-Spreader
32	134-1040	2	Nut
33	134-1237	1	Washer-Belleville
34	134-0916	1	Support-Sensor, Catcher
35	134-9372	1	Microswitch, Hopper
36	134-0700	1	Bracket
37	134-1113	2	Screw
38	134-3103	1	Manifold
39	134-1288	1	Connector-Electric
40	134-1221	2	Cap-Cable End, Female
41	134-1304	1	Screw
42	134-1278	1	Fitting-Union
43	134-1292	1	Nut-Plastic
44	134-0601	1	Wiring-Catcher, Grass
45	134-9374	2	Nut
46	134-9373	2	Fitting, Cable
47	134-1225	2	Connector
48	134-1222	1	Connector-Electric
49	134-8237	4	Nutsert-Blind


Hopper Lift Frame Assembly

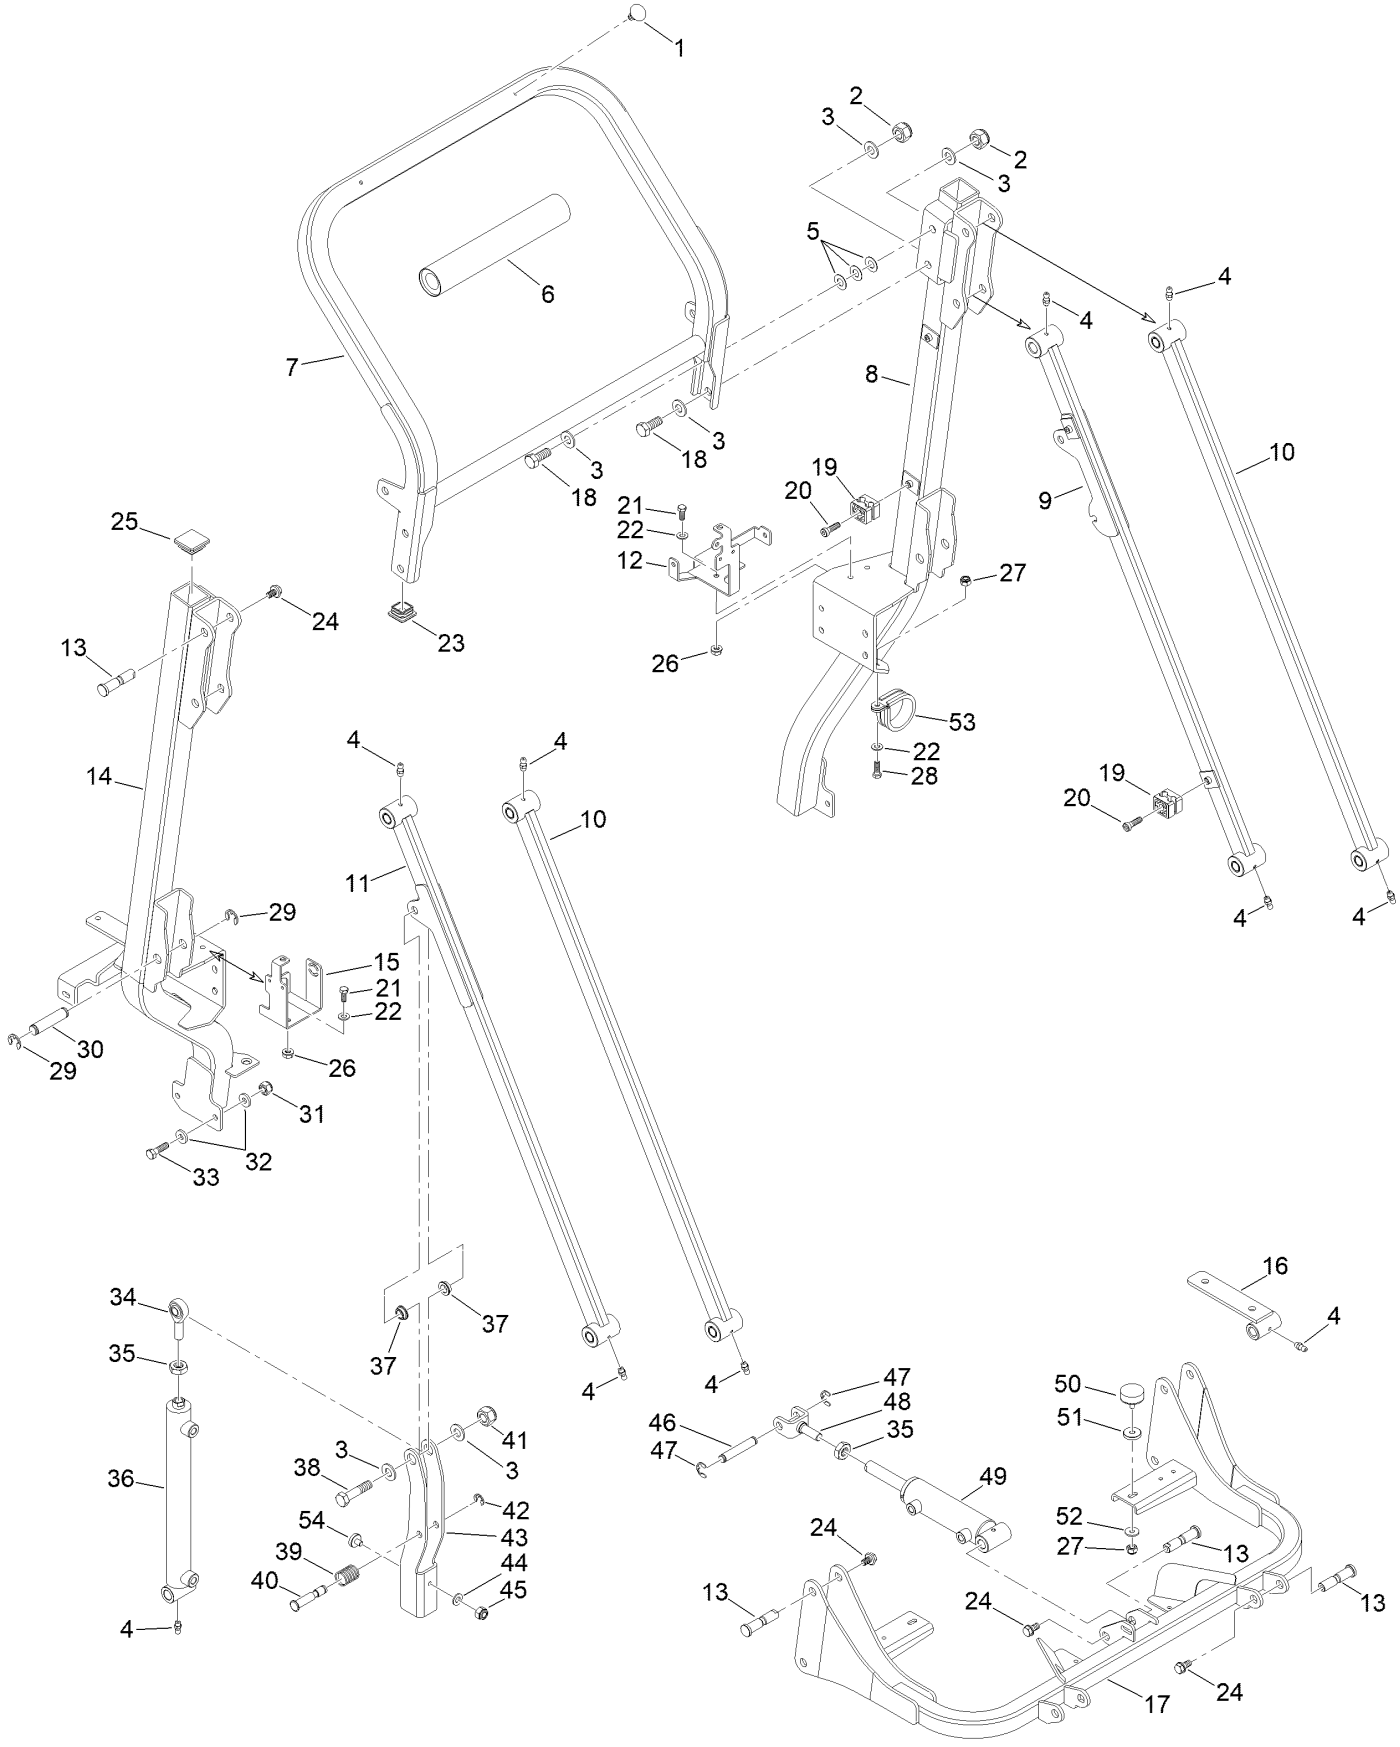

Hopper Lift Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-1162	2	Rivet-Plastic
2	134-1090	4	Nut
3	134-3012	12	Washer
4	134-1065	11	Fitting-Grease
5	134-9385	6	Shim
6	134-9384	1	Neck Protection
7	134-9391	1	Roll-Bar
8	134-9388	1	Pillar, Lifter RH
9	134-9382	1	Arm-Hopper
10	134-9376	2	Arm Assy, Upper
11	134-9383	1	Arm-Hopper
12	134-9394	1	Bracket, Engine Relays
13	134-9378	9	Pivot, Lifter
14	134-9389	1	Pillar, Lifter LH
15	134-9395	1	Bracket, Fan Relays
16	134-9381	2	Frame, Hopper Body
17	134-9380	1	Frame, Hopper Assy
18	134-9386	4	Screw-HH Cap
19	134-1330	4	Collar
20	134-1071	2	Screw
21	134-1011	4	Screw
22	134-1045	5	Washer
23	134-9387	2	Plug
24	134-1310	9	Screw
25	134-9390	1	Plug
26	134-1082	4	Nut
27	134-1092	3	Nut
28	134-1015	4	Screw
29	134-2964	2	Ring-Snap
30	134-0873	1	Pin
31	134-1079	2	Nut
32	134-9408	4	Washer
33	134-1019	2	Screw
34	134-1328	1	Joint-Ball
35	134-1036	2	Nut
36	134-0811	2	Cylinder
37	134-0761	2	Bushing
38	134-1072	2	Screw
39	134-0727	2	Spring
40	134-0776	2	Pin
41	134-1091	2	Nut
42	134-2966	2	Ring Snap
43	134-0909	2	Rod-Safety
44	134-3027	2	Washer-Wave
45	134-1042	2	Nut
46	134-9377	1	Pivot, Hopper Ram
47	134-1099	2	Ring-Snap
48	134-9379	1	Fork, Tilter Ram
49	134-9392	1	Ram, Dual Acting
50	134-1338	2	Pad-Rubber
51	134-1355	2	Washer
52	134-3126	2	Washer
53	134-9393	1	Clamp
54	134-1326	1	Magnet

Electric Equipment Assembly

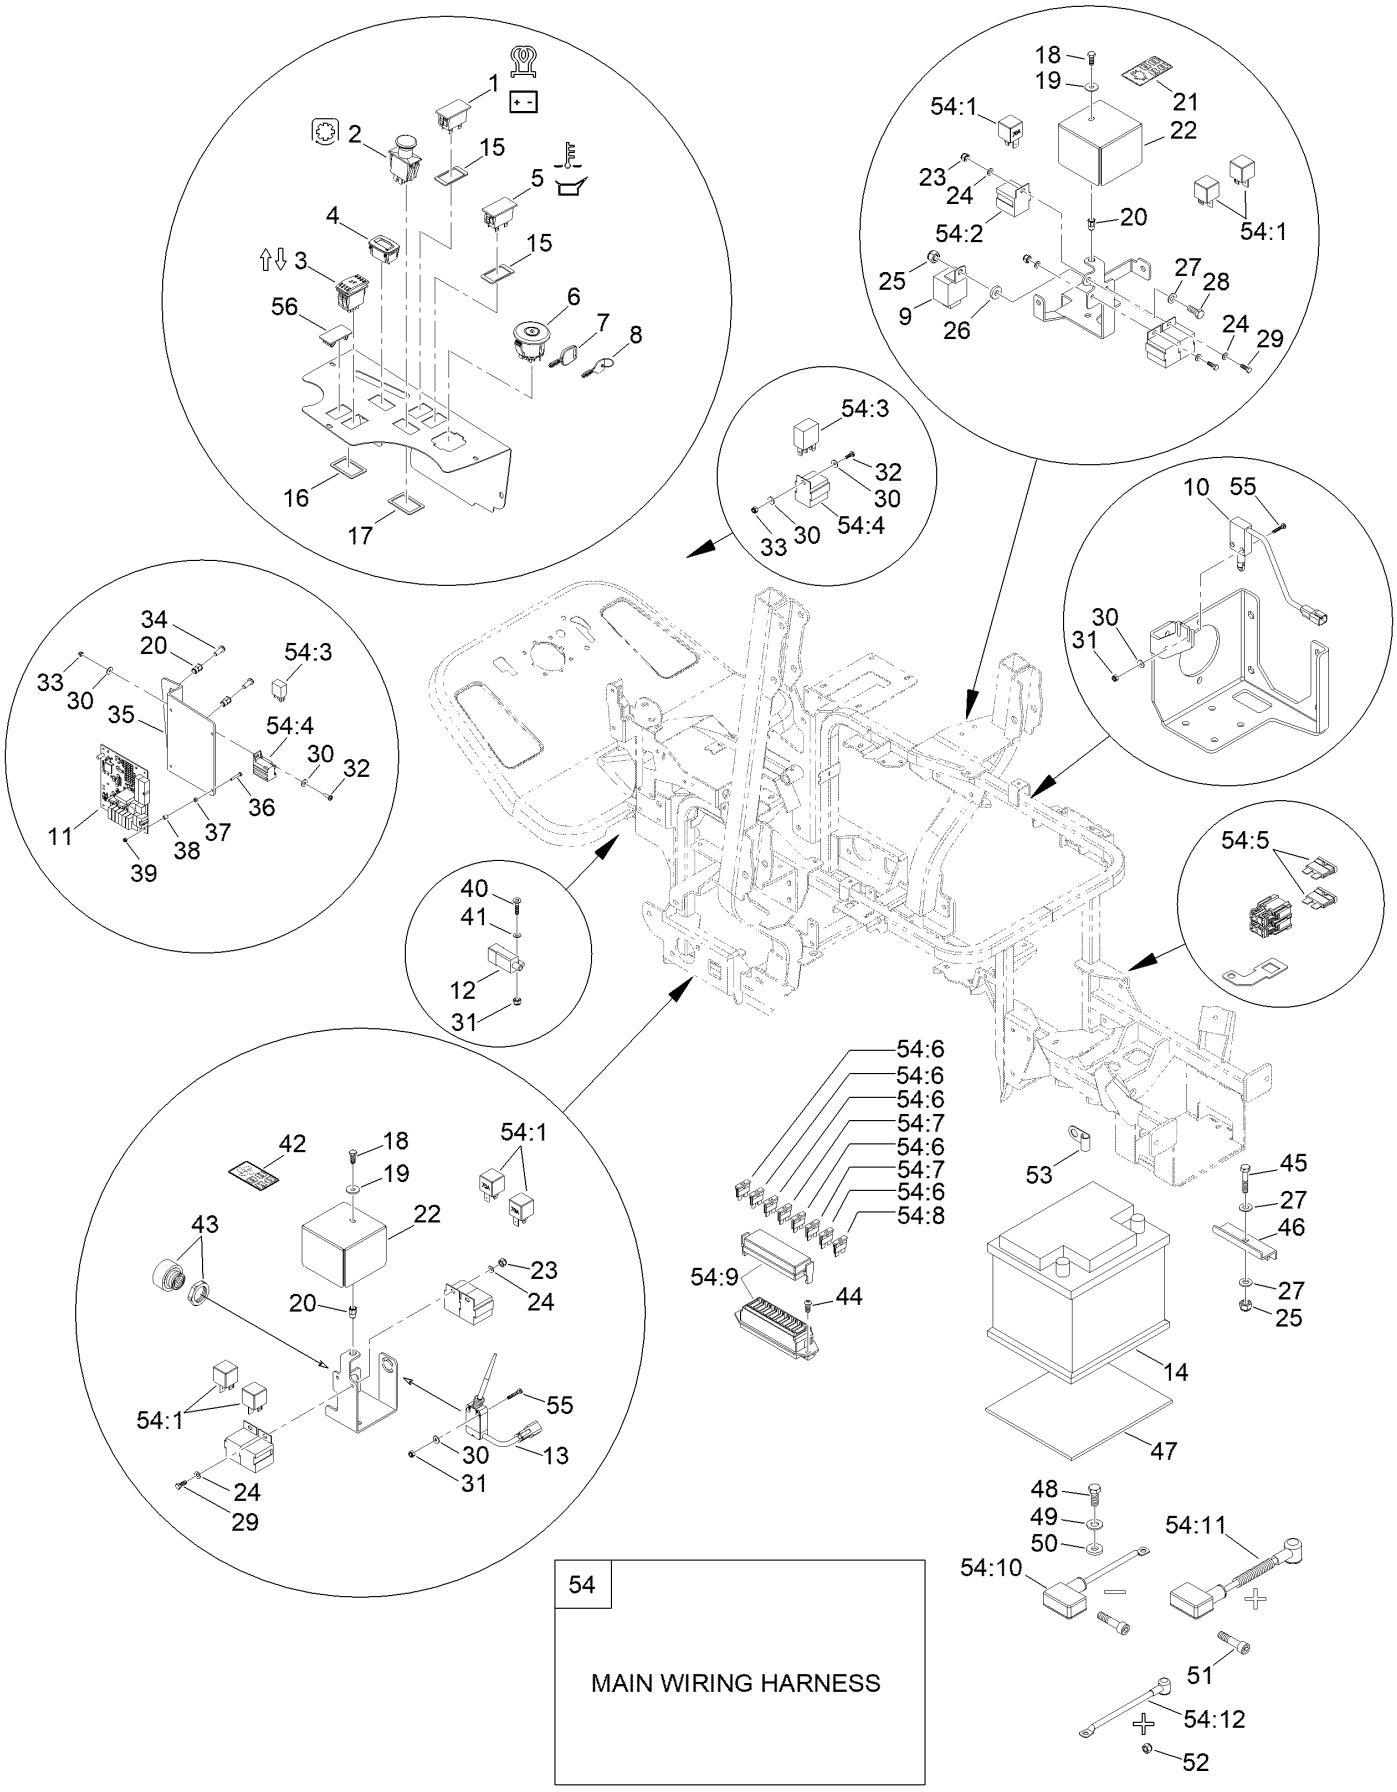


54


MAIN WIRING HARNESS


Electric Equipment Assembly (continued)

Ref.	Part Number	Qty.	Description
1	122-0334	1	Light-Indicator, Glow/Battery
2	93-9999	1	Switch-PTO
3	134-9411	1	Switch, HOC
4	134-9412	1	Hour Meter
5	134-9410	1	Lamp, Oil/Water
6	134-9413	1	Switch, Key
7	134-1286	1	Key-Ignition, Metal
8	134-1285	1	Key-Ignition, Plastic Cover
9	134-9403	1	Timer, Kubota
10	134-9409	1	Microswitch, Neutral
11	134-9417	1	Electric Board, Machine
12	134-9396	1	Microswitch, Parking Brake
13	134-9404	1	Microswitch, Lifted Hopper
14	134-9397	1	Battery
15	134-1284	2	Gasket
16	134-9415	1	Frame, Hour Meter
17	134-0981	1	Retainer-Switch
18	134-1008	2	Screw
19	134-1234	2	Washer
20	134-1257	4	Insert-Threaded
21	134-8801	1	Decal-Engine Relay
22	134-9400	2	Cover, Relays
23	134-1094	4	Nut
24	134-1049	8	Washer
25	134-1092	2	Nut
26	134-0997	1	Washer
27	134-1045	3	Washer
28	134-1011	1	Screw
29	134-9399	4	Screw-HH Cap
30	134-1053	8	Washer
31	134-1040	6	Nut
32	134-8247	2	Screw-Pan
33	134-1093	2	Nut
34	134-1311	2	Screw
35	134-9416	1	Support, Electric Board
36	134-1313	4	Screw
37	134-1167	4	Nut
38	134-1031	4	Bushing-Nylon
39	134-1085	4	Nut
40	134-1307	2	Screw
41	134-1052	2	Washer
42	134-8800	1	Decal-Relay Fan
43	134-9401	1	Buzzer
44	134-2987	2	Screw
45	134-1014	1	Screw
46	134-2998	1	Bracket-Clamp, Battery
47	134-0720	1	Bushing-Plastic
48	134-2956	1	Screw
49	134-1046	1	Washer
50	134-9408	1	Washer
51	134-1068	2	Screw
52	134-1042	1	Nut
53	134-1348	1	Grommet
54	134-9493	1	Main Wiring Harness, Plh600
54:1	134-2996	7	Relay
54:2	134-8250	3	Base-Relay 70A
54:3	134-8245	2	Relay
54:4	134-8246	2	Base-Relay, Minature
54:5	111-2898	2	Fuse-40A
54:6	134-2985	5	Fuse 15A
54:7	134-2983	2	Fuse 5A
54:8	134-2986	1	Fuse-Blade, 3 Amp
54:9	134-2988	1	Box-Fuse
54:10	134-9405	1	Cable, Battery Negative
54:11	134-9406	1	Cable, Battery Positive
54:12	134-9407	1	Cable, Alternator
55	134-1113	4	Screw
56	134-9972	1	Plug, Switch

Decals Assembly

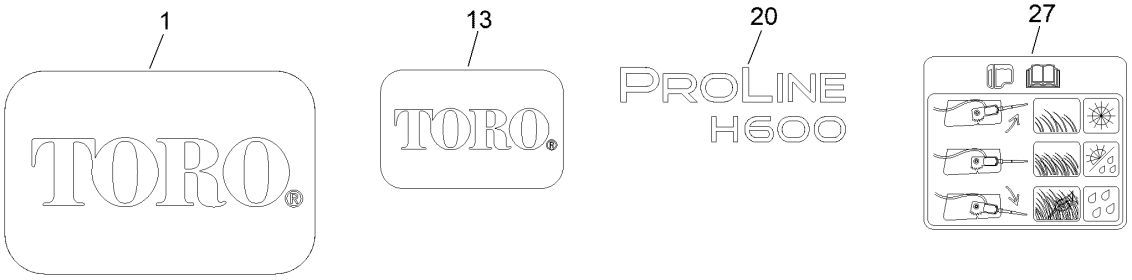

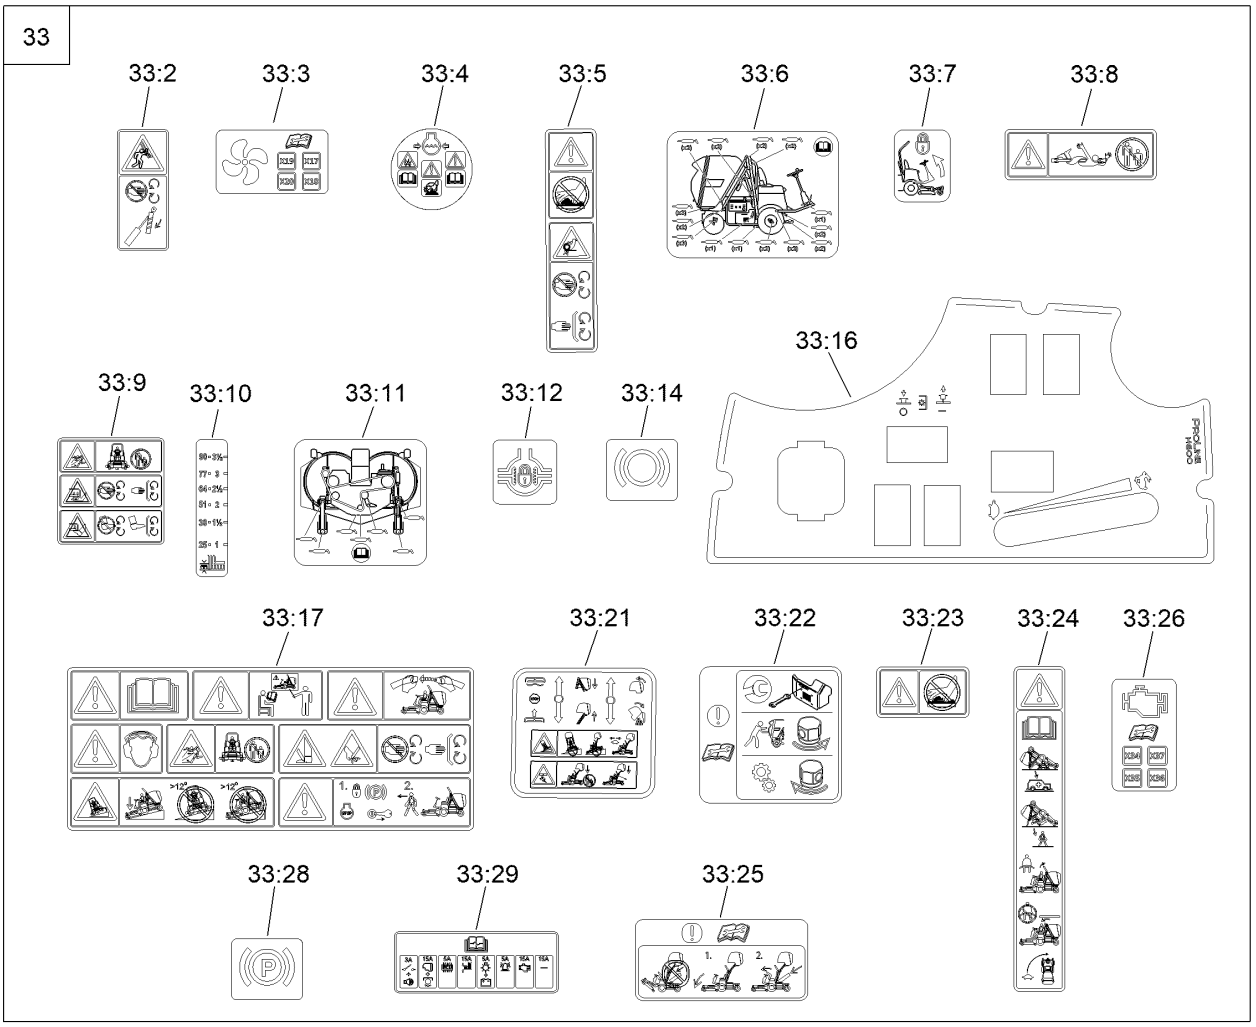


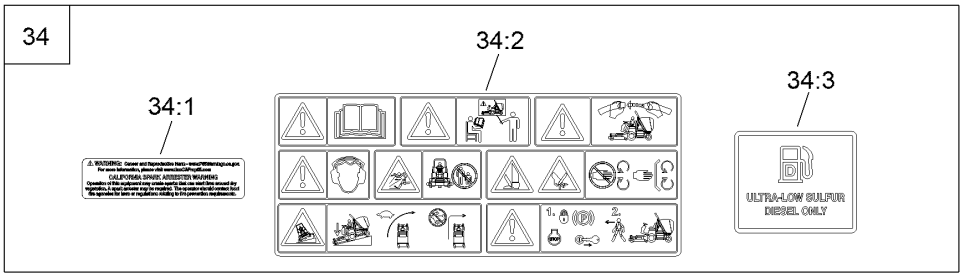

Decals Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-0551	3	Decal-Toro Logo
13	126-5060	1	Decal-Logo, Toro
20	134-8376	2	Decal-Proline H600
27	162-0010	1	Decal-Hopper Sensor
33	134-8895	1	Decal-Set, Plh600
33:2	134-8770	2	Decal-Warning Arm
33:3	134-8800	1	Decal-Relay Fan
33:4	117-3276	1	Decal-Danger
33:5	134-8768	1	Decal-Warning Engine
33:6	134-8775	1	Decal-Service
33:7	134-8782	1	Decal-Footplate Tilt
33:8	134-8816	1	Decal-Cardan Joint
33:9	134-8772	2	Decal-Warning Deck
33:10	134-8771	1	Decal-HOC
33:11	134-8780	1	Decal-Service
33:12	134-8817	1	Decal-Differential Lock
33:14	134-0547	1	Decal-Brake
33:16	134-8769	1	Decal-Control Panel
33:17	134-8866	1	Decal-Warning
33:21	134-8781	1	Decal-Controls Safety
33:22	134-8806	1	Decal-Hydrostatic Pump Bypass
33:23	134-8818	1	Decal-Hot Surface
33:24	134-0542	1	Decal-ROPS Warning
33:25	134-1359	1	Decal-Attention, Deck Service
33:26	134-8801	1	Decal-Engine Relay
33:28	134-0548	1	Decal-Parking Brake
33:29	134-8802	1	Decal-Fuse
34	134-4172	1	Ansi Decal Kit
34:1	133-8062	1	Decal-Spark Arrestor
34:2	134-1986	1	Decal-Warning
34:3	125-6135	1	Decal-Ultra-Low Diesel Only


Crankcase Assembly

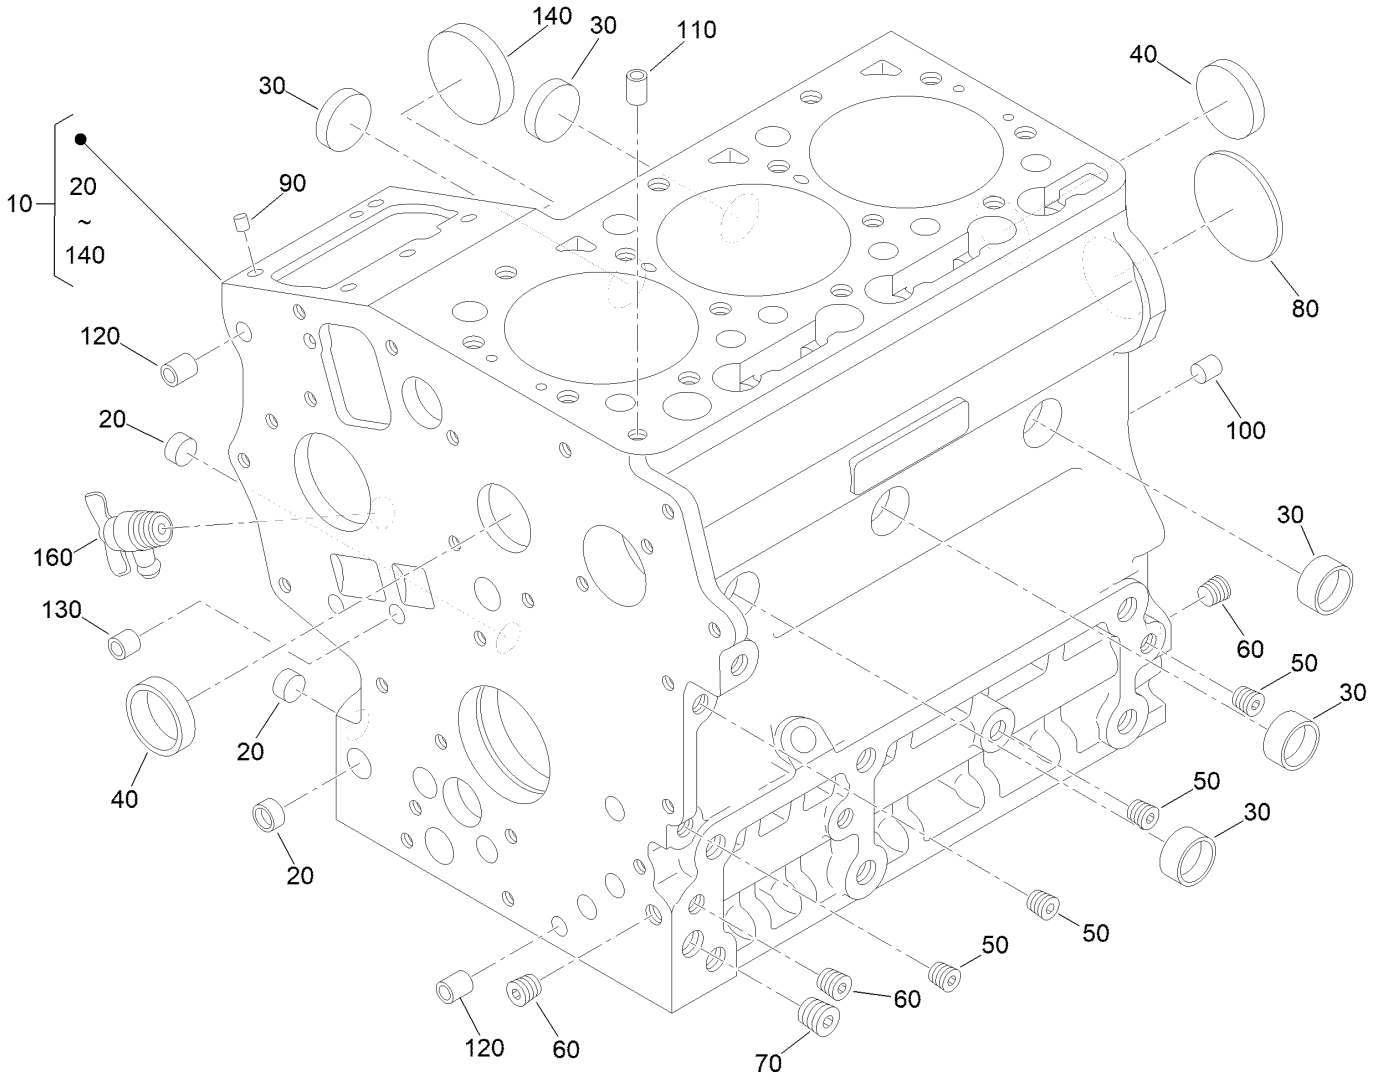

Crankcase Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9671	1	Crankcase,Comp
20	100-2019	3	Cap-Sealing
30	100-2020	5	Cap-Sealing
40	98-9398	2	Cap-Sealing
50	98-9687	5	Plug
60	98-7487	3	Plug
70	98-7488	1	Plug
80	100-1851	1	Plug-Expansion
90	98-9375	2	Pin-Straight
100	98-9377	2	Pin-Straight
110	98-7506	1	Pin-Pipe
120	100-2051	2	Pin-Pipe
130	100-2051	2	Pin-Pipe
140	100-1991	1	Cover-Fuel, Camshaft
160	120-3121	1	Draincock ASM


Oil Pan Assembly

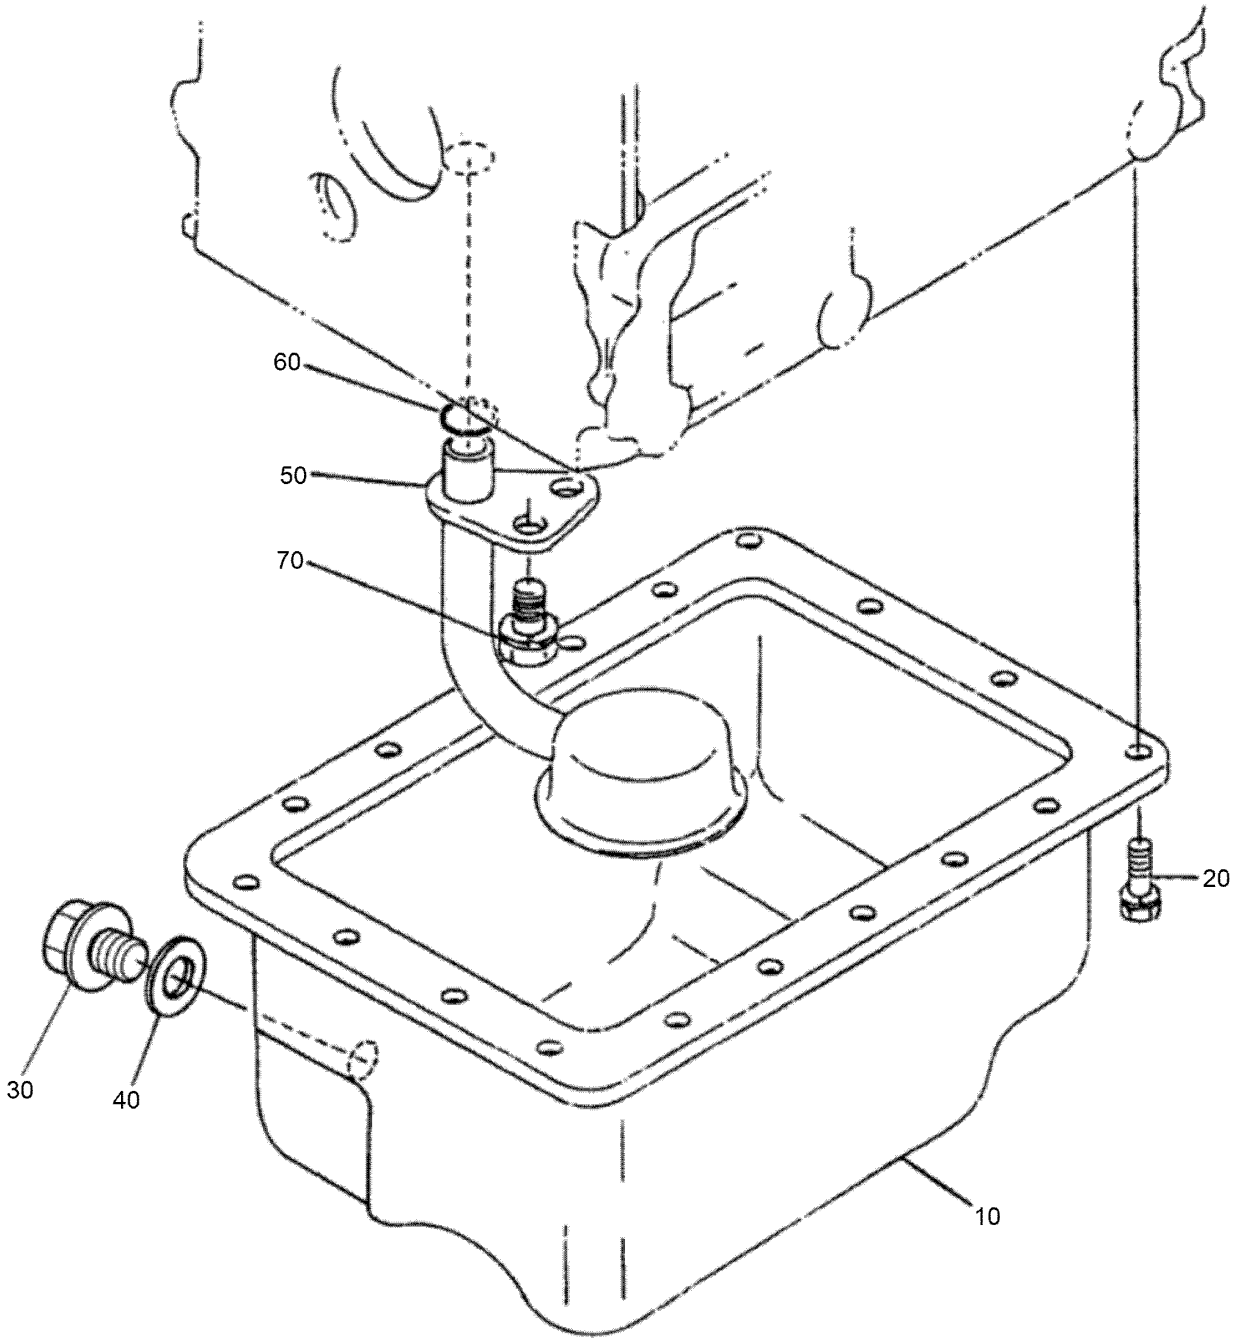

Oil Pan Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9672	1	Comp.Oil Pan
20	98-9350	18	Bolt
30	114-8151	1	Plug-Drain
40	98-7524	1	Gasket
50	100-2001	1	Strainer-Pickup, Oil
60	105-3776	1	O-Ring
70	AU126123A1	1	Bolt


Cylinder Head Assembly

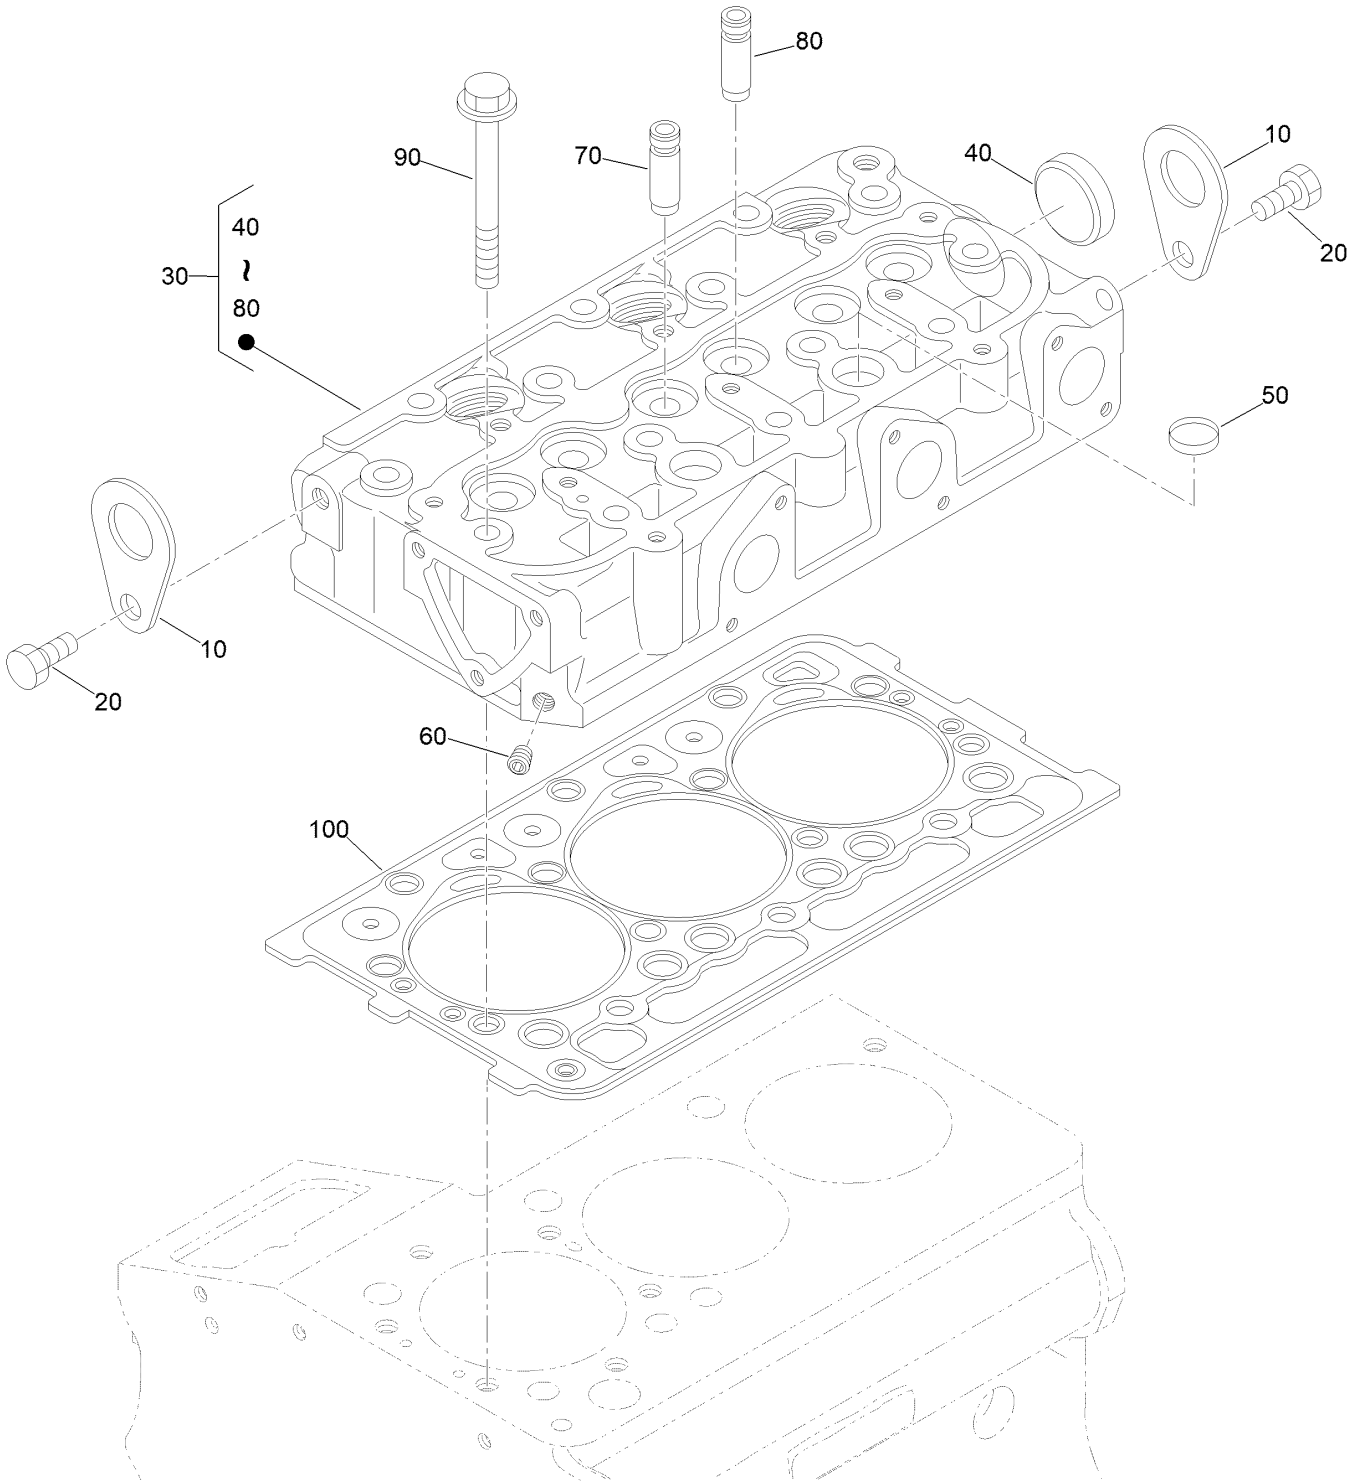

Cylinder Head Assembly (continued)

Ref.	Part Number	Qty.	Description
10	98-7531	2	Hook-Engine
20	134-9673	2	Bolt,Sems
30	130-1524	1	Cylinder Head ASM
40	105-3705	1	Cap-Sealing
50	98-9389	2	Cap-Sealing
60	98-9687	1	Plug
70	100-1882	3	Guide-Valve, Inlet
80	100-1883	3	Guide-Valve, Exhaust
90	134-9674	14	Bolt,Head(Cylinder)
100	130-1525	1	Gasket-Head, Cylinder


Gear Case Assembly

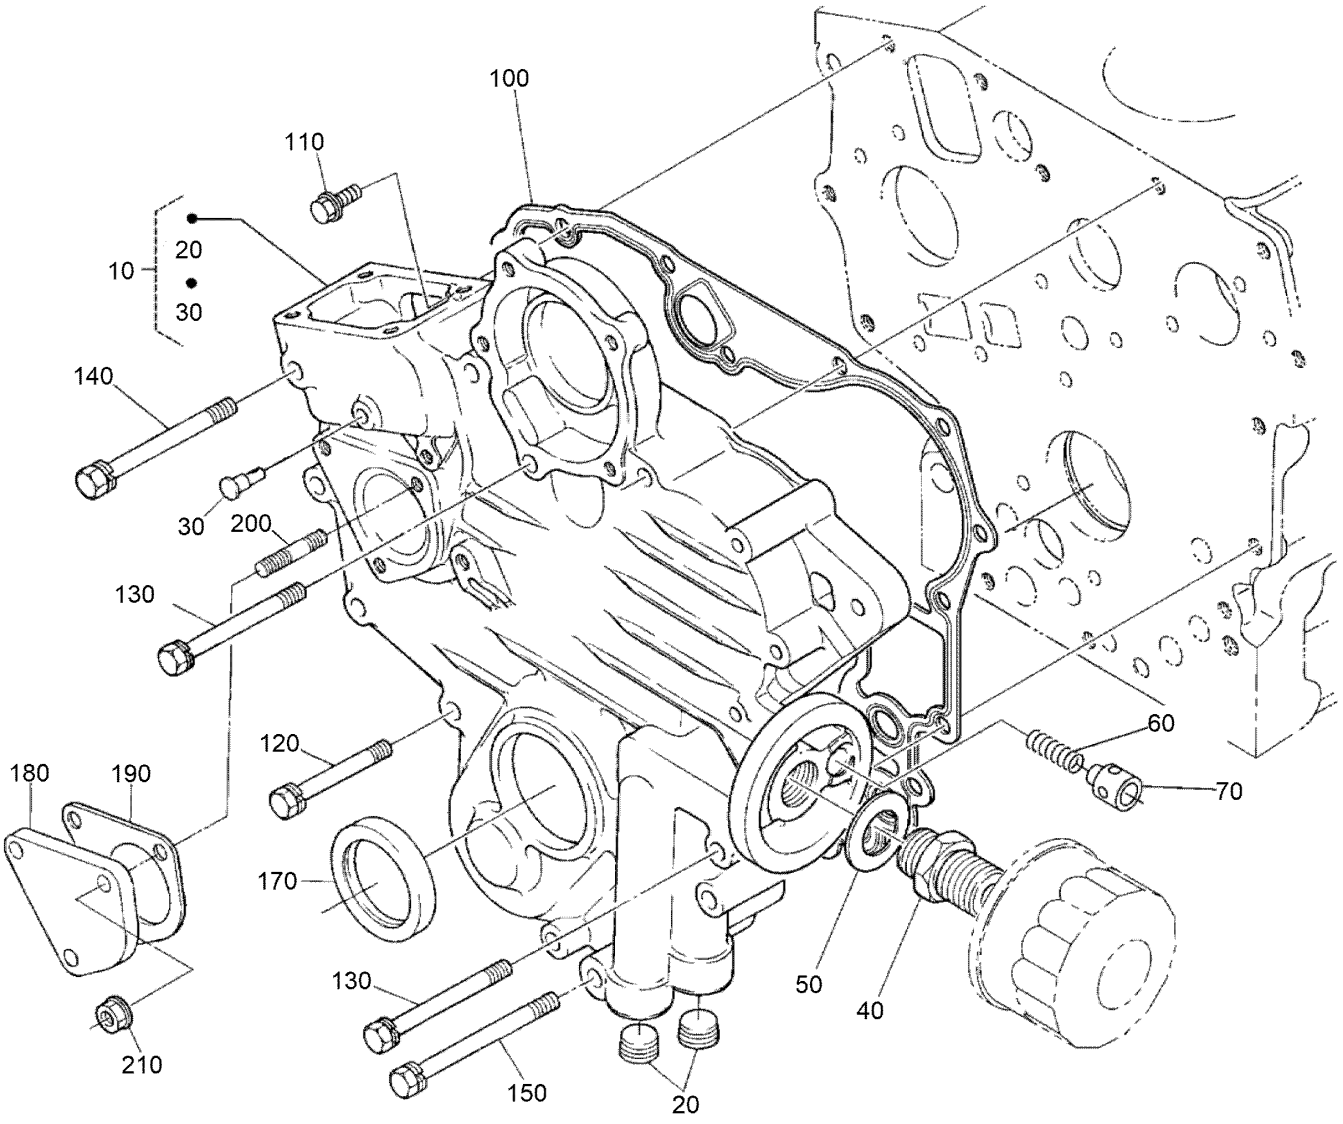

Gear Case Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9675	1	Comp.Case,Gear
20	98-7488	2	Plug
30	100-1910	1	Pin-Spring, Start
40	98-9388	1	Joint-Pipe
50	100-1926	1	Washer-Plain
60	132-4885	1	Spring
70	130-1510	1	Valve-Relief
100	134-9676	1	Gasket,Gear Case
110	127-0403	1	Bolt-Flange
120	125-9063	10	Bolt-Sems
130	100-1922	3	Bolt
140	134-9677	1	Bolt,Sems
150	100-1767	1	Bolt
170	132-4884	1	Seal, Oil
180	100-2060	1	Cover
190	100-2062	1	Gasket
200	98-7571	3	Stud
210	100-2203	3	Nut-Flange


Cylinder Head Cover Assembly

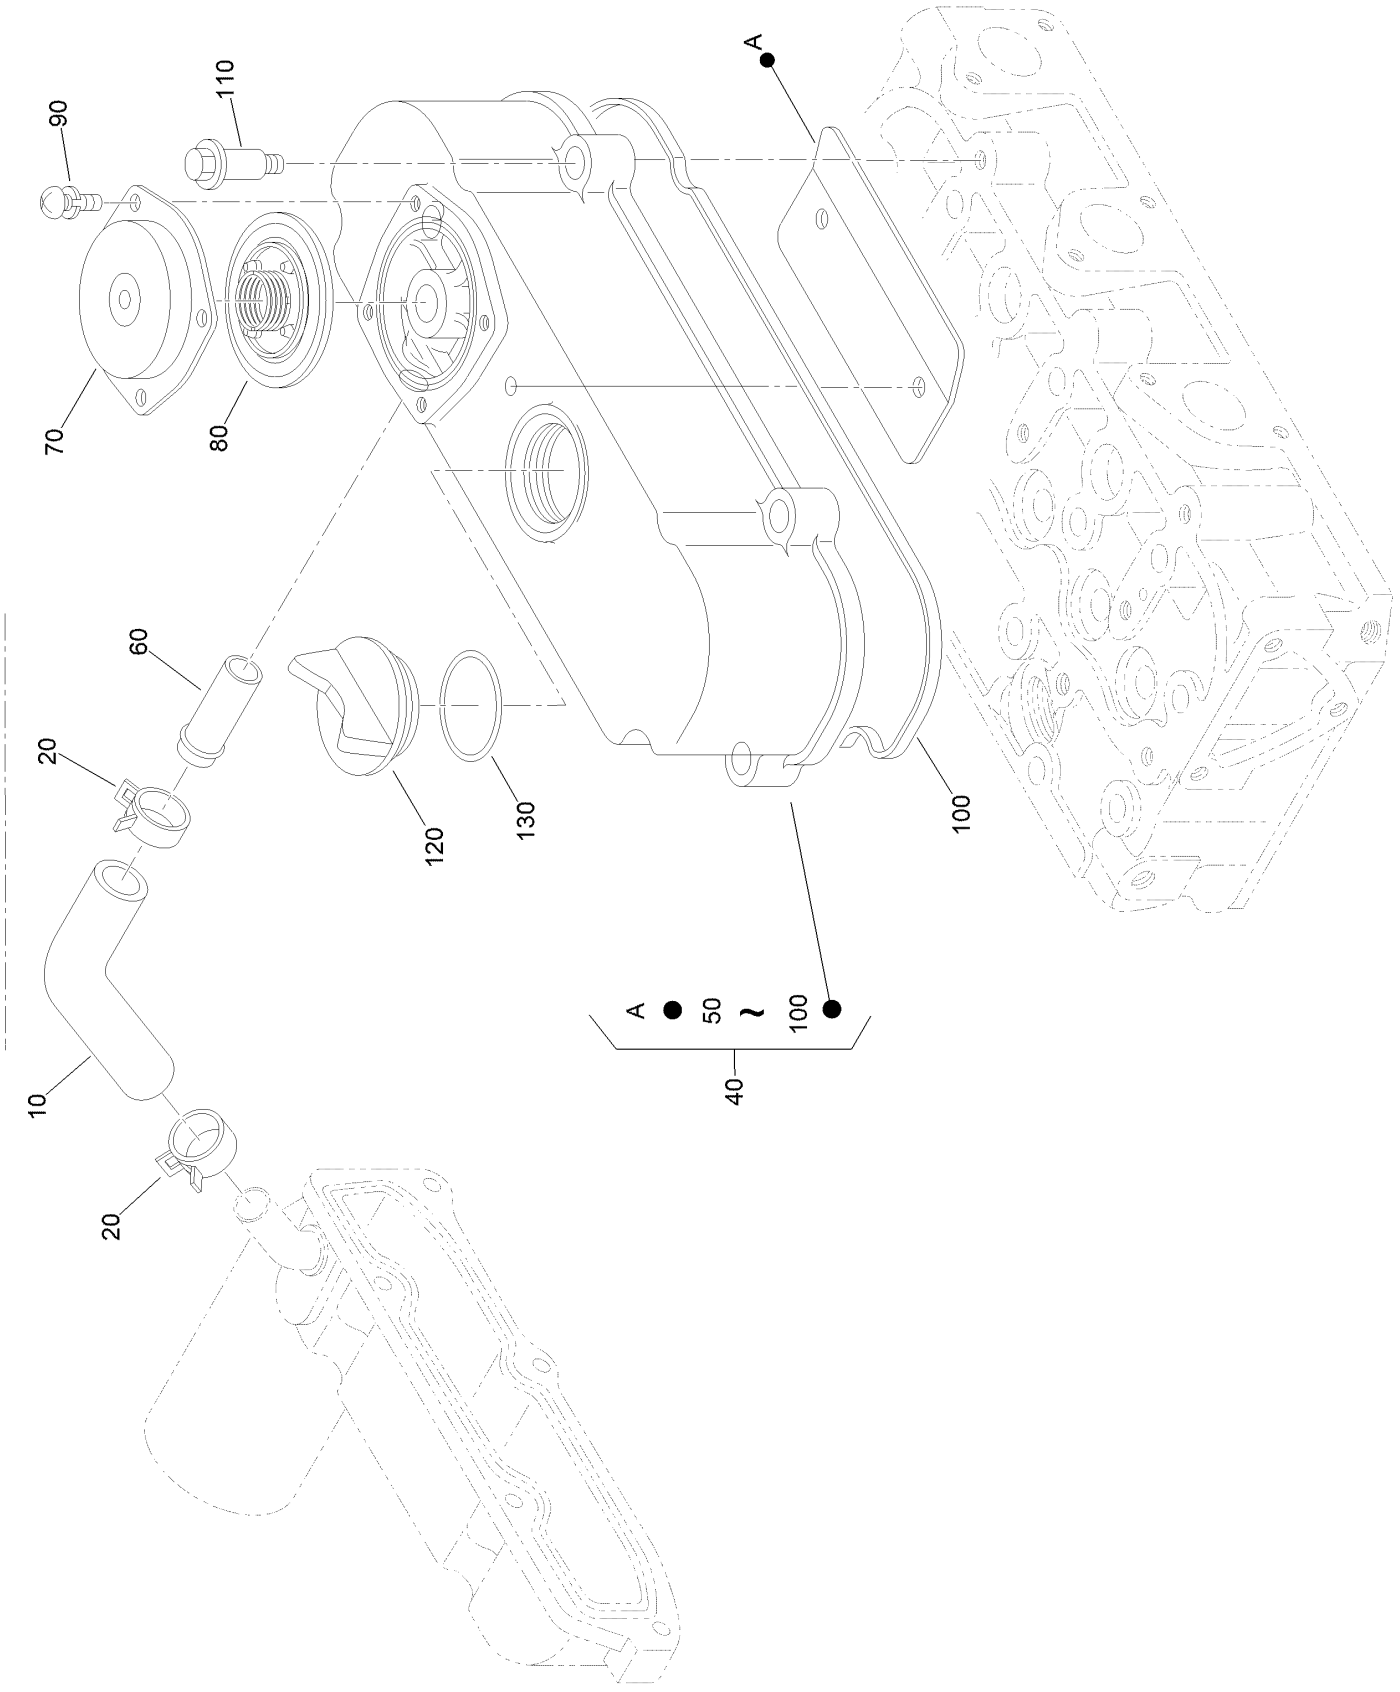

Cylinder Head Cover Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9678	1	Tube (Breather)
20	110-3712	2	Clamp-Hose
40	130-1489	1	Cover-Cylinder Head
50	130-1490	1	Cylinder Head ASM
60	98-9580	1	Pipe-Return, Water
70	110-3714	1	Cover-Breather
80	110-3715	1	Valve-Breather
90	98-9364	4	Screw (With Washer)
100	112-2807	1	Gasket-Cover, Head
110	108-7063	4	Bolt
120	107-9075	1	Plug-Filler, Oil
130	131-3834	1	O Ring


Engine Oil Filter Assembly

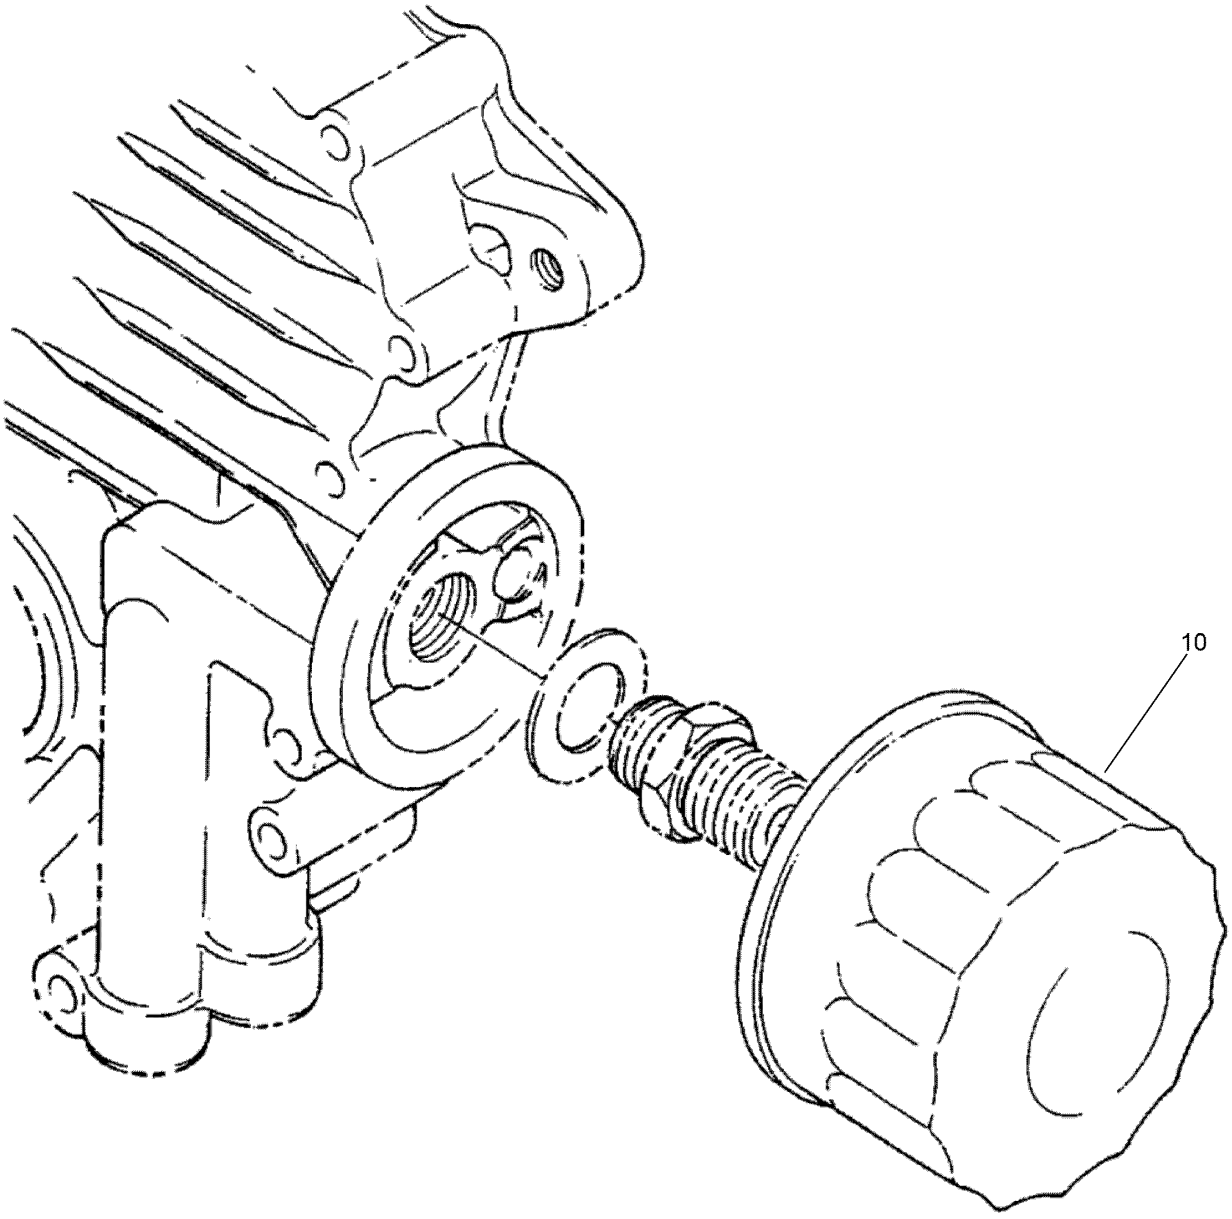

Engine Oil Filter Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
10	115-8189	1	Filter-Oil, Engine


Engine Oil Dipstick Assembly

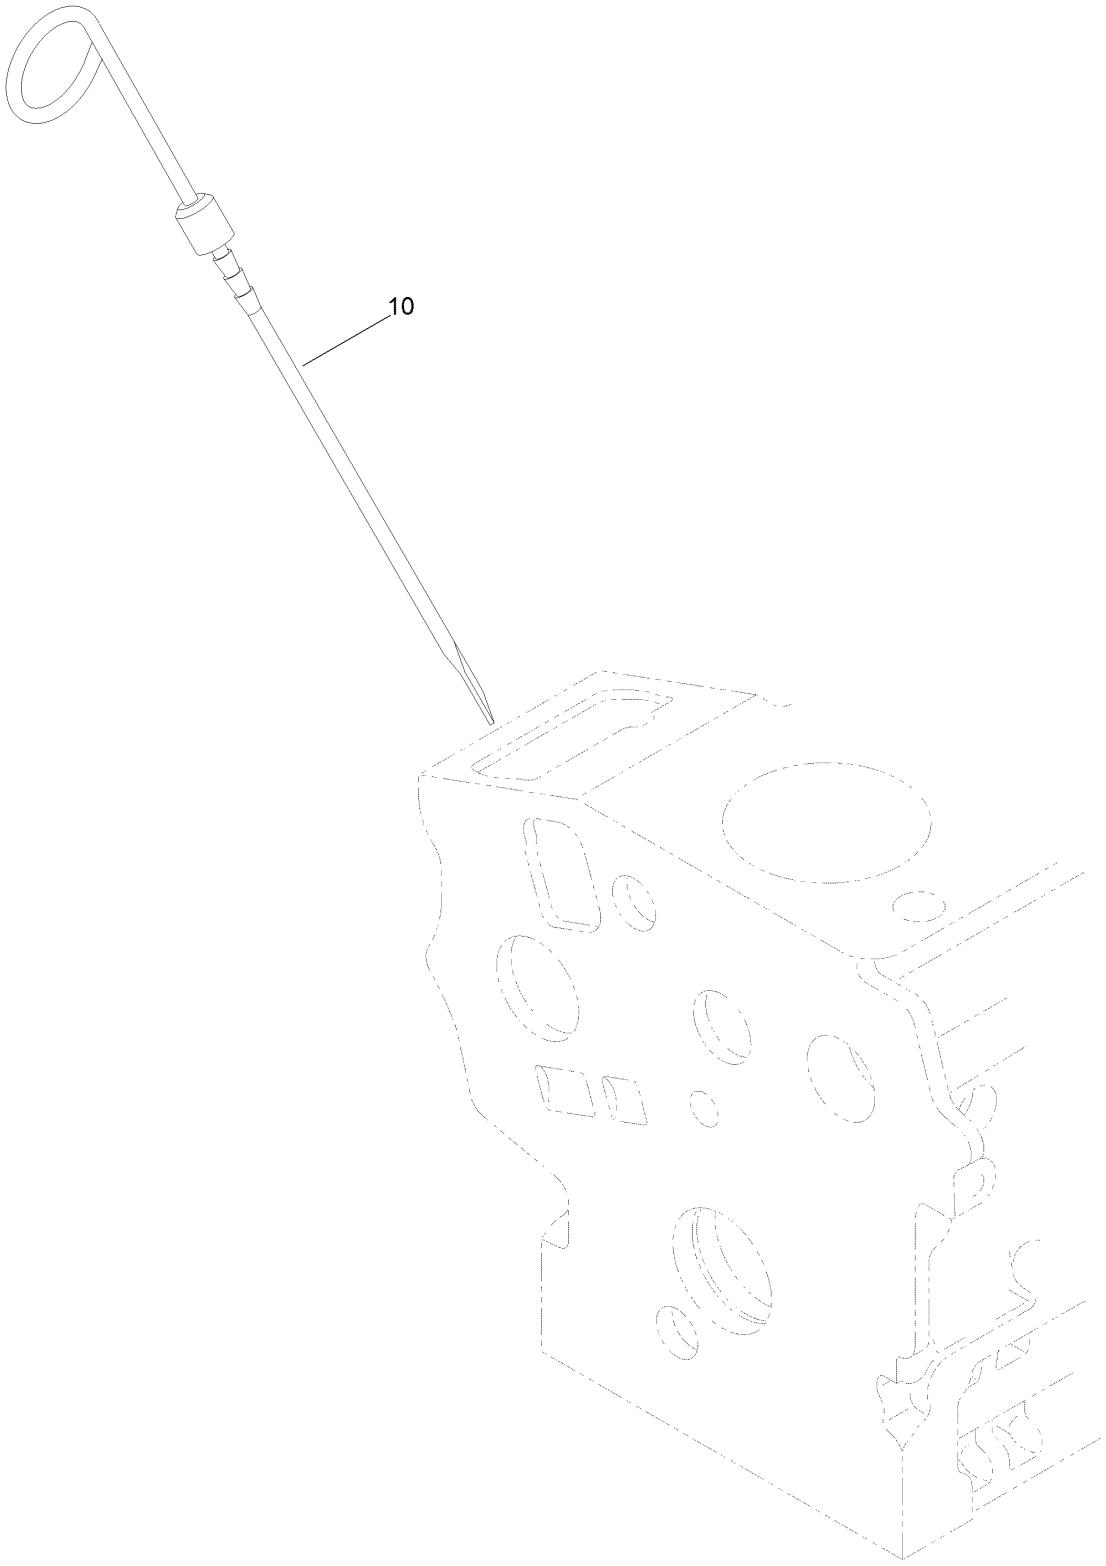

Engine Oil Dipstick Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
10	134-9680	1	Gauge,Oil


Oil Pump Assembly

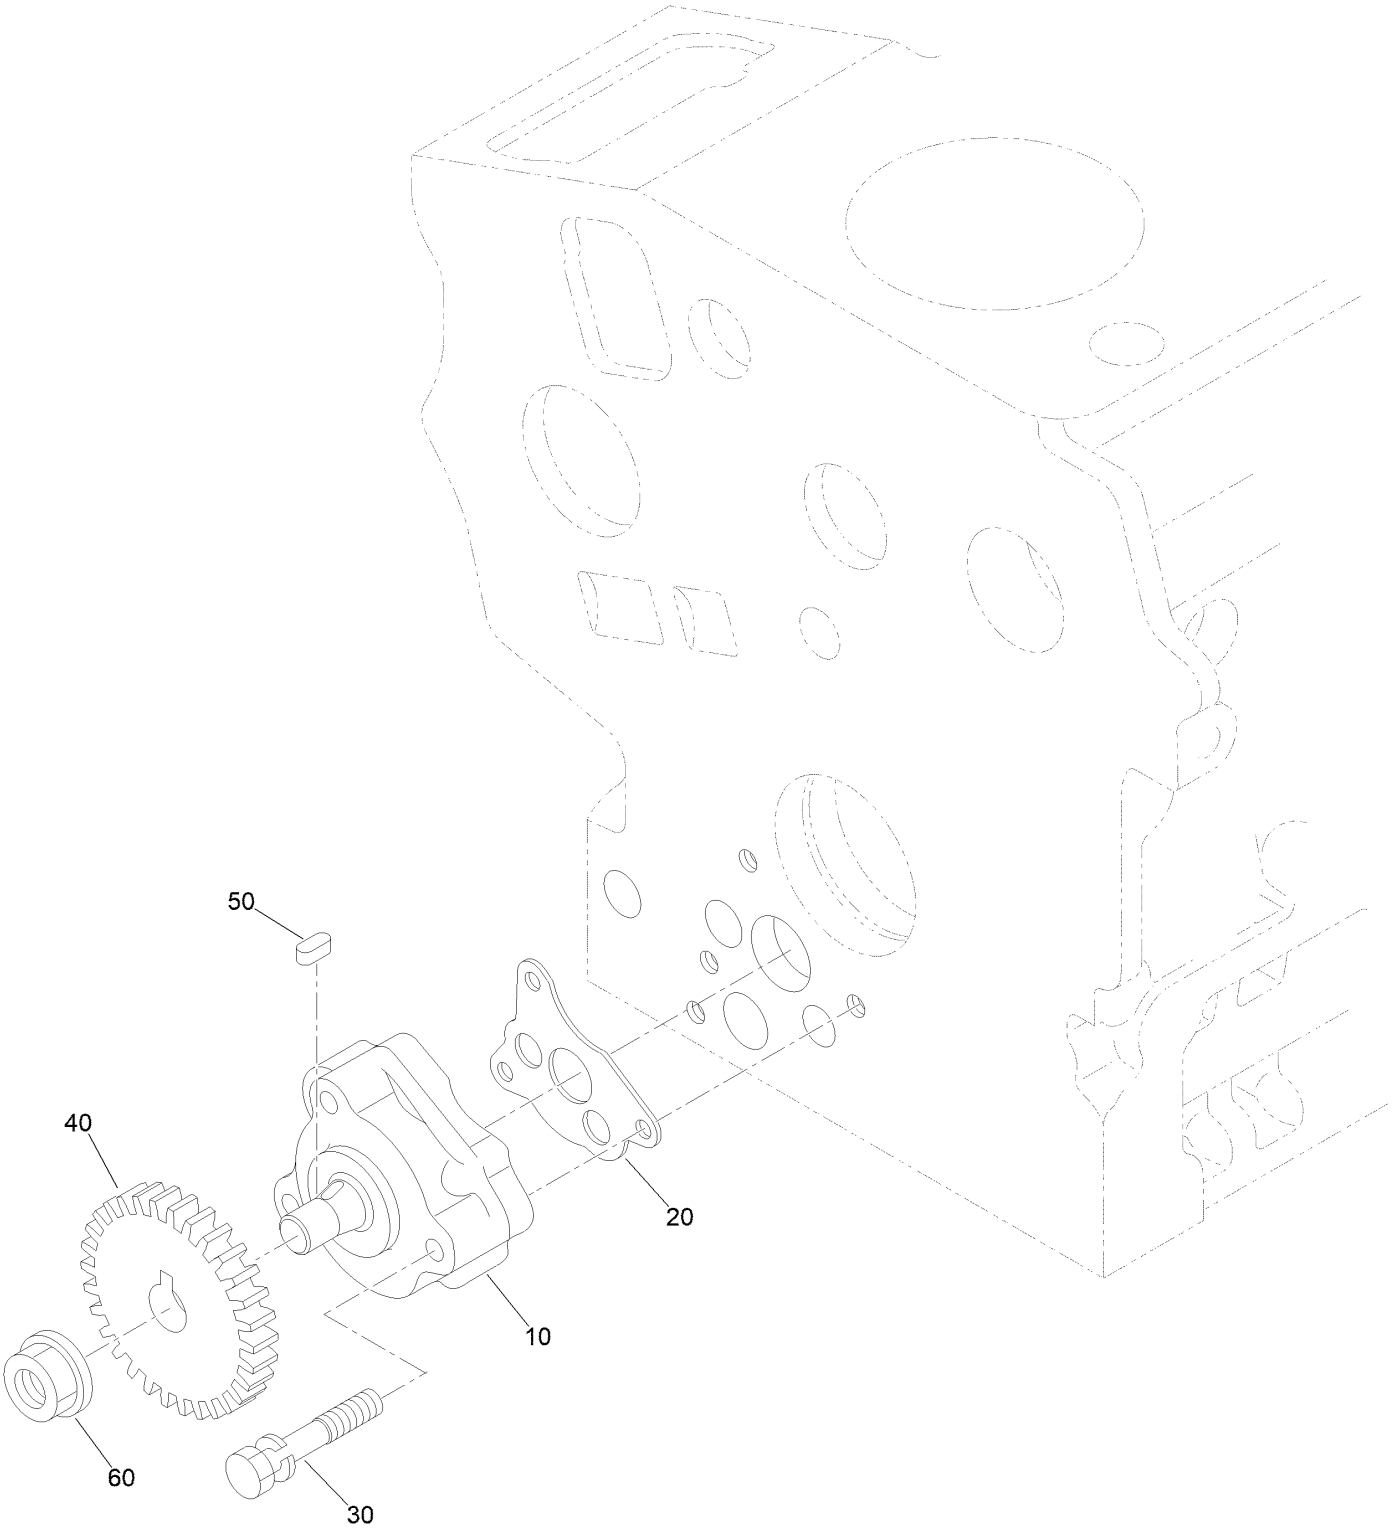

Oil Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
10	100-2002	1	Oil Pump ASM
20	100-2003	1	Gasket-Pump, Oil
30	100-1923	3	Bolt
40	130-1419	1	Gear-Drive, Oil Pump
50	98-7658	1	Key-Feather
60	120-5822	1	Nut-Flange


Main Bearing Case Assembly

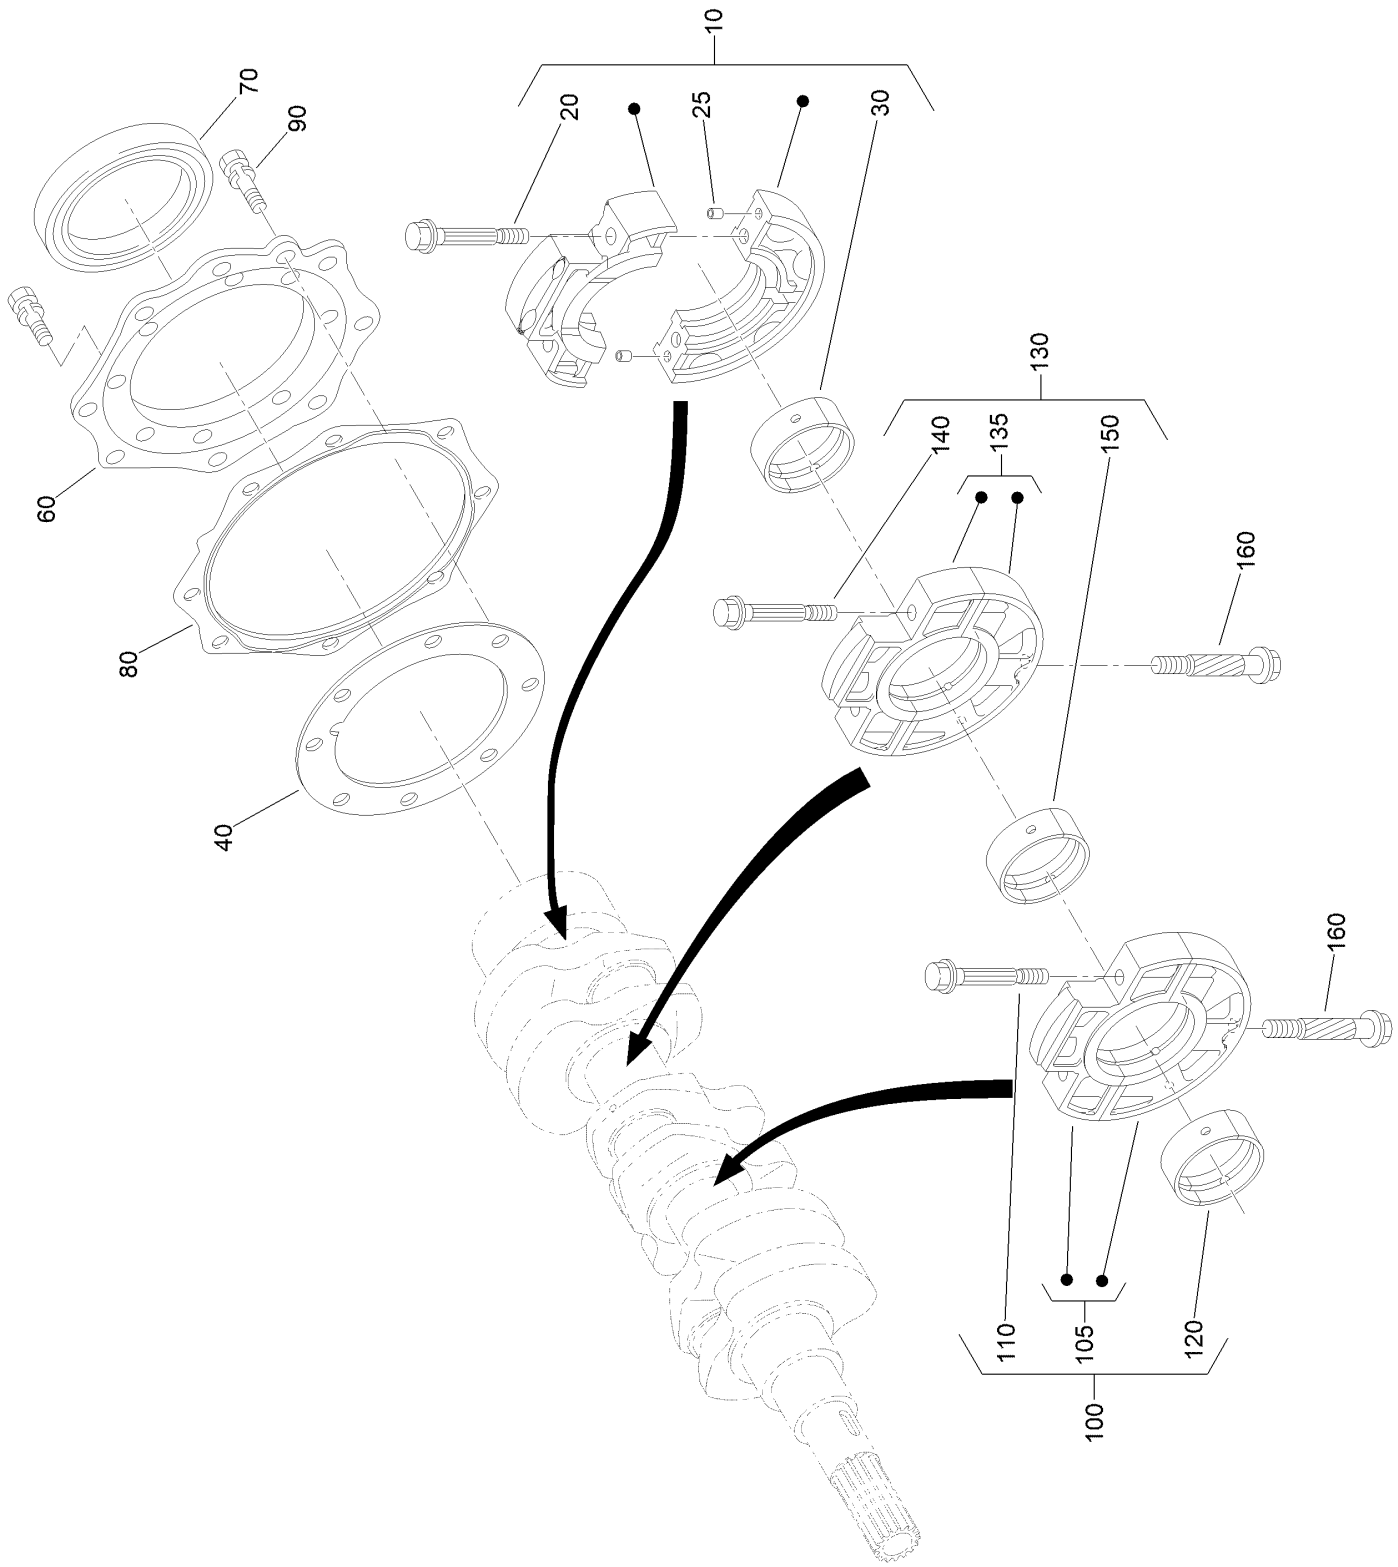

Main Bearing Case Assembly (continued)

Ref.	Part Number	Qty.	Description
10	125-9064	1	Wheel Bearing Case ASM
20	125-9065	2	Bolt-Flange
25	125-9082	2	Pin-Straight
30	100-2032	1	Crankshaft-Metal (STD Set)
30	134-9681	1	Metal,Crankshaft
30	130-1210	1	Metal-Crankshaft
40	100-1873	1	Gasket-Case, Bearing
60	112-8334	1	Cover-Case, Bearing
70	110-3724	1	Seal-Oil
80	100-1876	1	Gasket-Cover, Case
90	100-1750	16	Bolt
100	130-1177	1	Bearing Case ASM
105	100-1987	1	Main Bearing Case ASM
110	100-1757	2	Bolt-Case, Bearing
120	100-2033	1	Crankshaft-Metal (STD Set)
120	100-1945	1	Crankshaft-Metal (-0.2MM Set)
120	130-1217	1	Metal-Crankshaft
130	130-1299	1	Bearing Case ASM
135	100-2027	1	Main Bearing Case ASM
140	100-1757	2	Bolt-Case, Bearing
150	100-2033	1	Crankshaft-Metal (STD Set)
150	100-1945	1	Crankshaft-Metal (-0.2MM Set)
150	130-1217	1	Metal-Crankshaft
160	100-1874	2	Bolt-Case, Bearing


Camshaft and Idle Gear Shaft Assembly

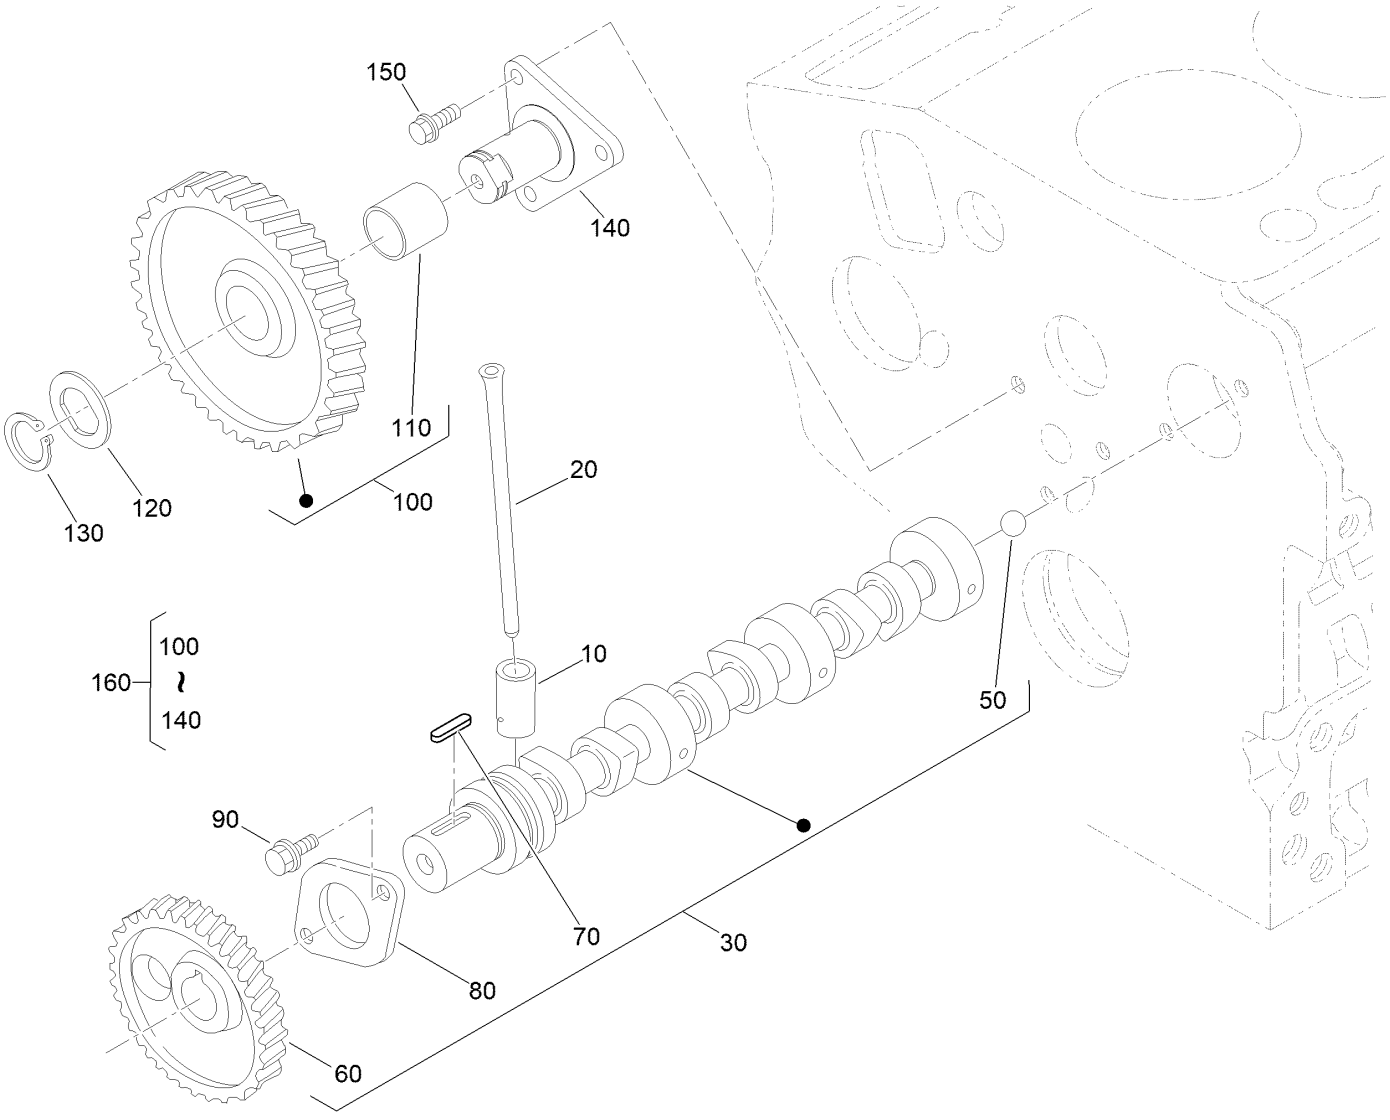

Camshaft and Idle Gear Shaft Assembly (continued)

Ref.	Part Number	Qty.	Description
10	110-3727	6	Tappet
20	100-1989	6	Rod-Push
30	134-9682	1	Camshaft,Assy
50	110-3729	1	Ball
60	130-1534	1	Gear-Cam
70	98-9378	1	Key-Feather
80	100-1887	1	Stopper-Camshaft
90	98-9350	2	Bolt
100	121-2421	1	Idle Gear ASM
110	121-2422	1	Bushing
120	100-1970	1	Collar-Gear, Idle
130	100-1969	1	Ring-Snap
140	100-1967	1	Shaft-Gear, Idle
150	100-1774	3	Bolt-Flange
160	100-2240	1	Idle Gear ASM


Piston and Crankshaft Assembly

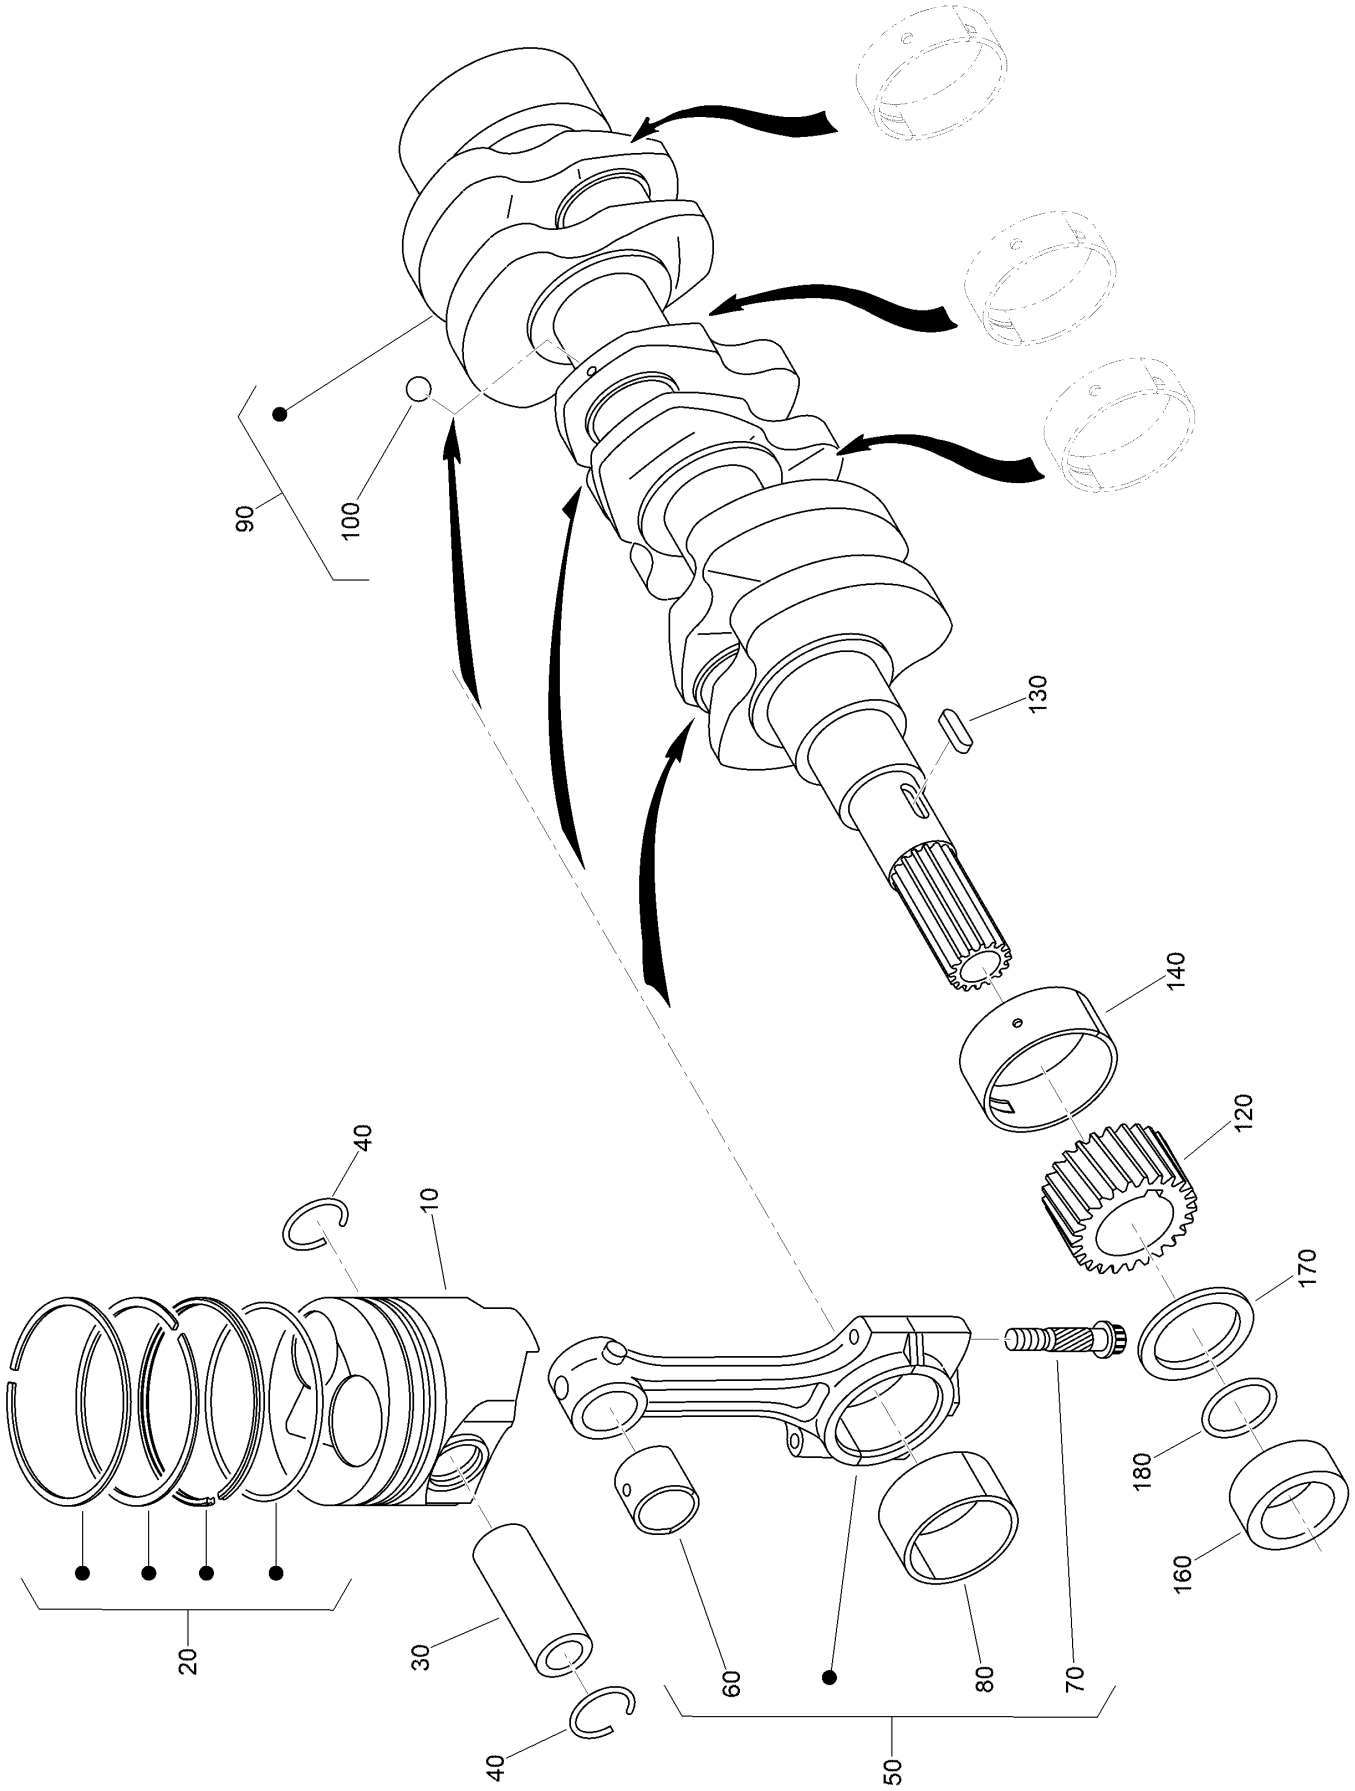

Piston and Crankshaft Assembly (continued)

Ref.	Part Number	Qty.	Description
10	130-1530	3	Piston
10	130-1531	3	Piston
20	130-1528	3	Piston Ring ASM
20	130-1529	3	Piston Ring ASM
30	110-3734	3	Pin-Piston
40	100-1835	6	Circlip-Internal
50	125-9070	3	Connecting Rod ASM
60	110-3736	3	Bushing-Pin, Piston
70	100-1999	6	Bolt-Rod, Connecting
80	100-2000	3	Metal-Crankpin (STD)
80	121-3849	3	Metal-Crankpin (-.20MM)
80	121-2420	3	Metal-Crankpin (-.40MM)
90	100-2160	1	Crankshaft
100	100-1791	3	Ball
120	100-1891	1	Gear-Crankshaft
130	100-1752	1	Key-Feather
140	130-1214	1	Metal-Crankshaft
140	130-1218	1	Metal-Crankshaft
140	130-1219	1	Metal-Crankshaft
160	100-1890	1	Collar-Crankshaft
170	100-1974	1	Slinger-Oil
180	100-2209	1	O-Ring


Flywheel Assembly

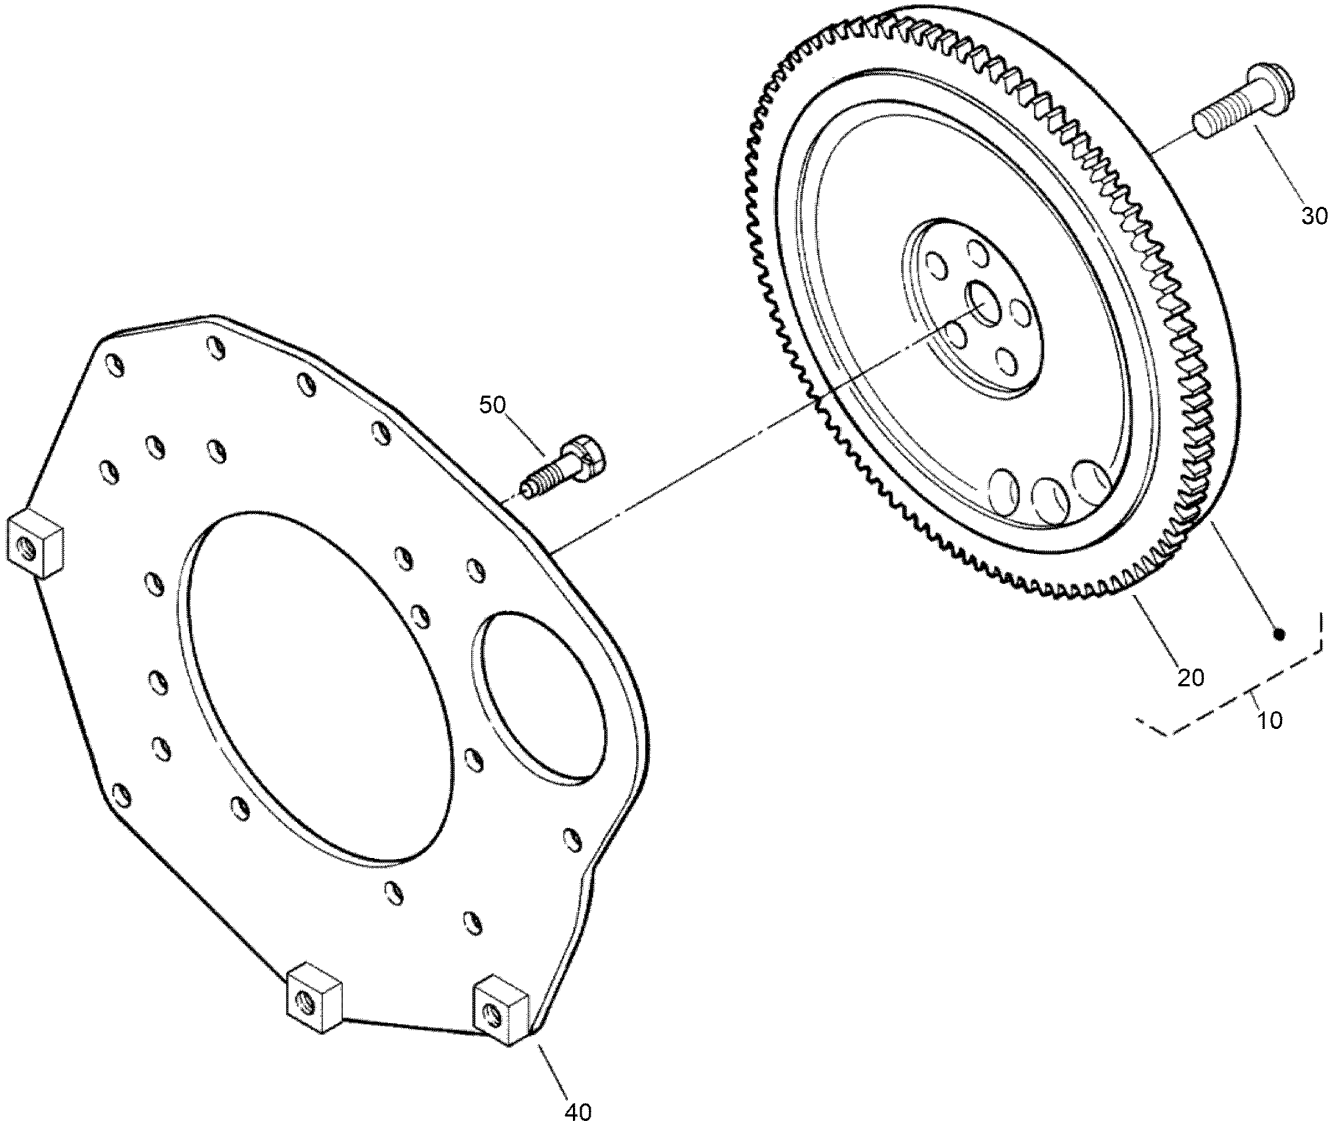

Flywheel Assembly (continued)

Ref.	Part Number	Qty.	Description
10	112-2815	1	Flywheel ASM
20	120-3129	1	Ring-Gear
30	100-1930	5	Bolt-Flywheel
40	100-2064	1	Plate, Rear End
50	134-9683	10	Bolt,Sems


Fuel Camshaft Assembly

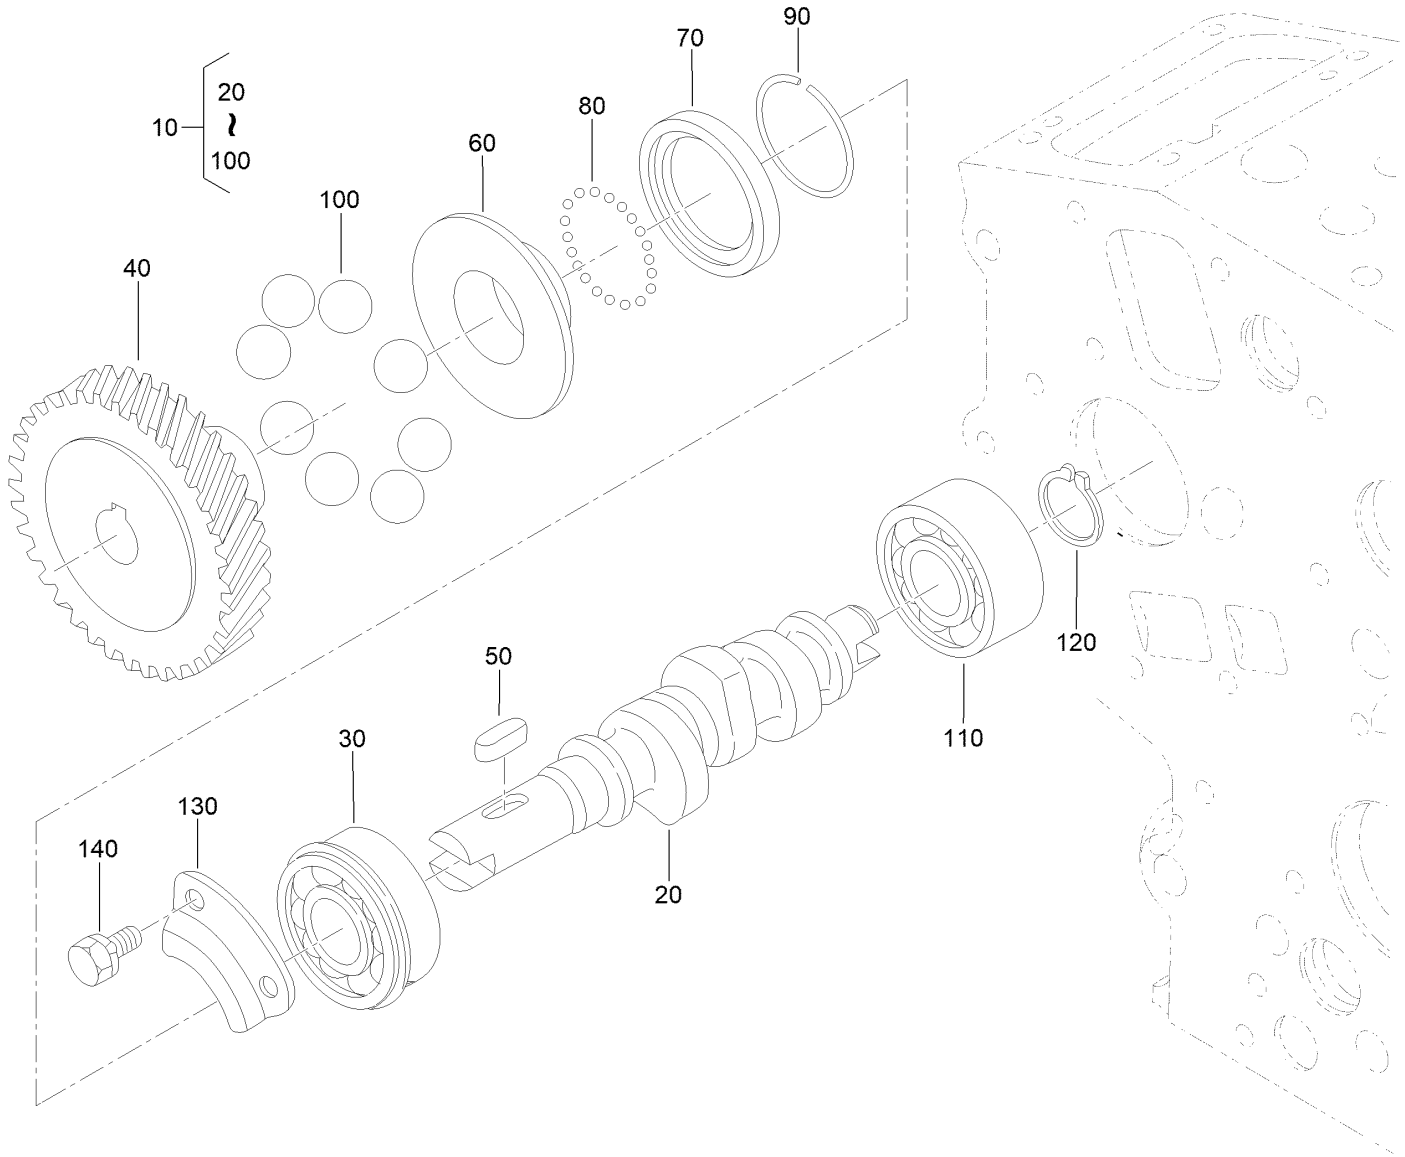

Fuel Camshaft Assembly (continued)

Ref.	Part Number	Qty.	Description
10	130-1527	1	Fuel Camshaft ASM
20	110-3756	1	Camshaft-Fuel
30	100-1795	1	Bearing-Ball
40	130-1521	1	Pump-Gear, Injection
50	100-1752	1	Key-Feather
60	112-8336	1	Sleeve-Governor
70	100-1904	1	Case-Ball, Governor
80	100-1790	32	Ball
90	100-1843	1	Circ-Clip
100	100-1793	8	Ball
110	110-3757	1	Bearing-Ball
120	100-1784	1	Circ-Clip, External
130	100-1888	1	Stopper-Fuel, Camshaft
140	98-9350	2	Bolt


Idle Apparatus Assembly

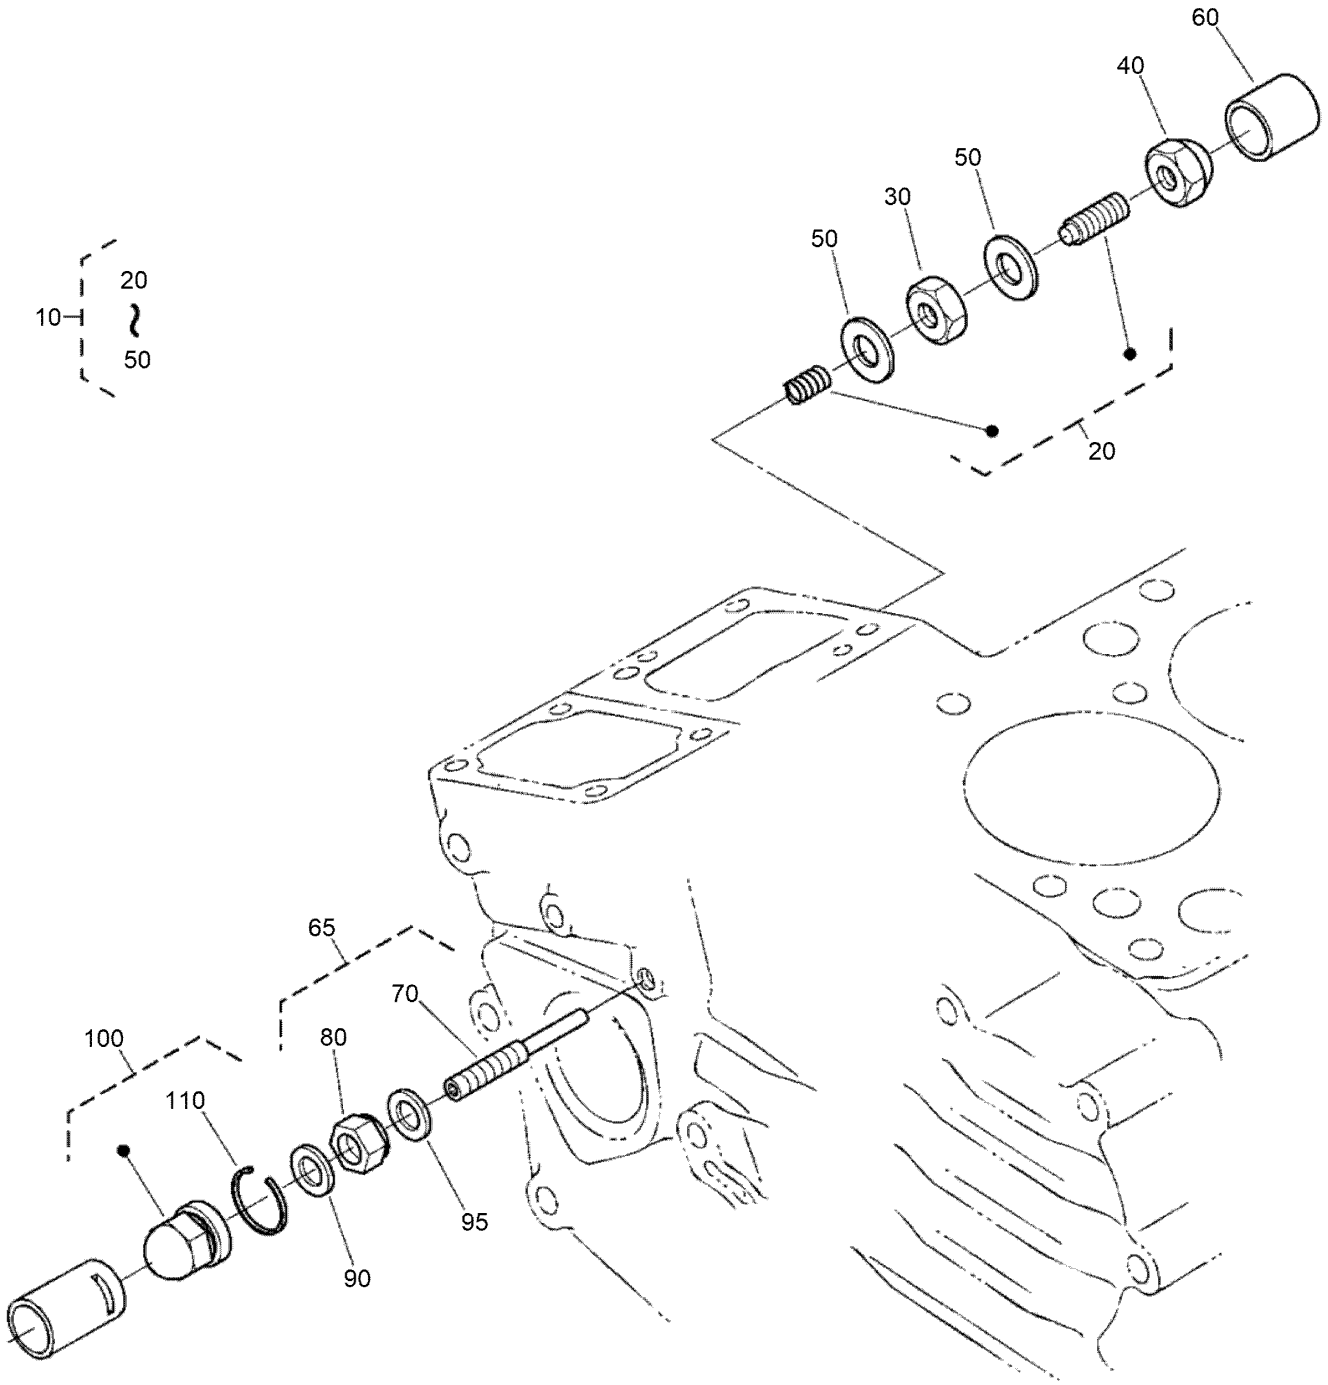

Idle Apparatus Assembly (continued)

Ref.	Part Number	Qty.	Description
10	100-1898	1	Idle Apparatus ASM
20	100-1899	1	Adjusting Bolt ASM
30	100-1846	1	Nut
40	100-1901	1	Nut-Cap
50	98-7428	2	Gasket
60	100-1902	1	Cap
65	134-9684	1	Bolt,Assy(Adjusting)
70	110-3758	1	Bolt-Adjusting
80	139-4548	1	Nut-Lock
90	98-7654	1	Gasket
95	98-7654	1	Gasket
100	134-9685	1	Nut,Cap,Assy
110	140-2472	1	Circlip-Int


Stop Solenoid Assembly

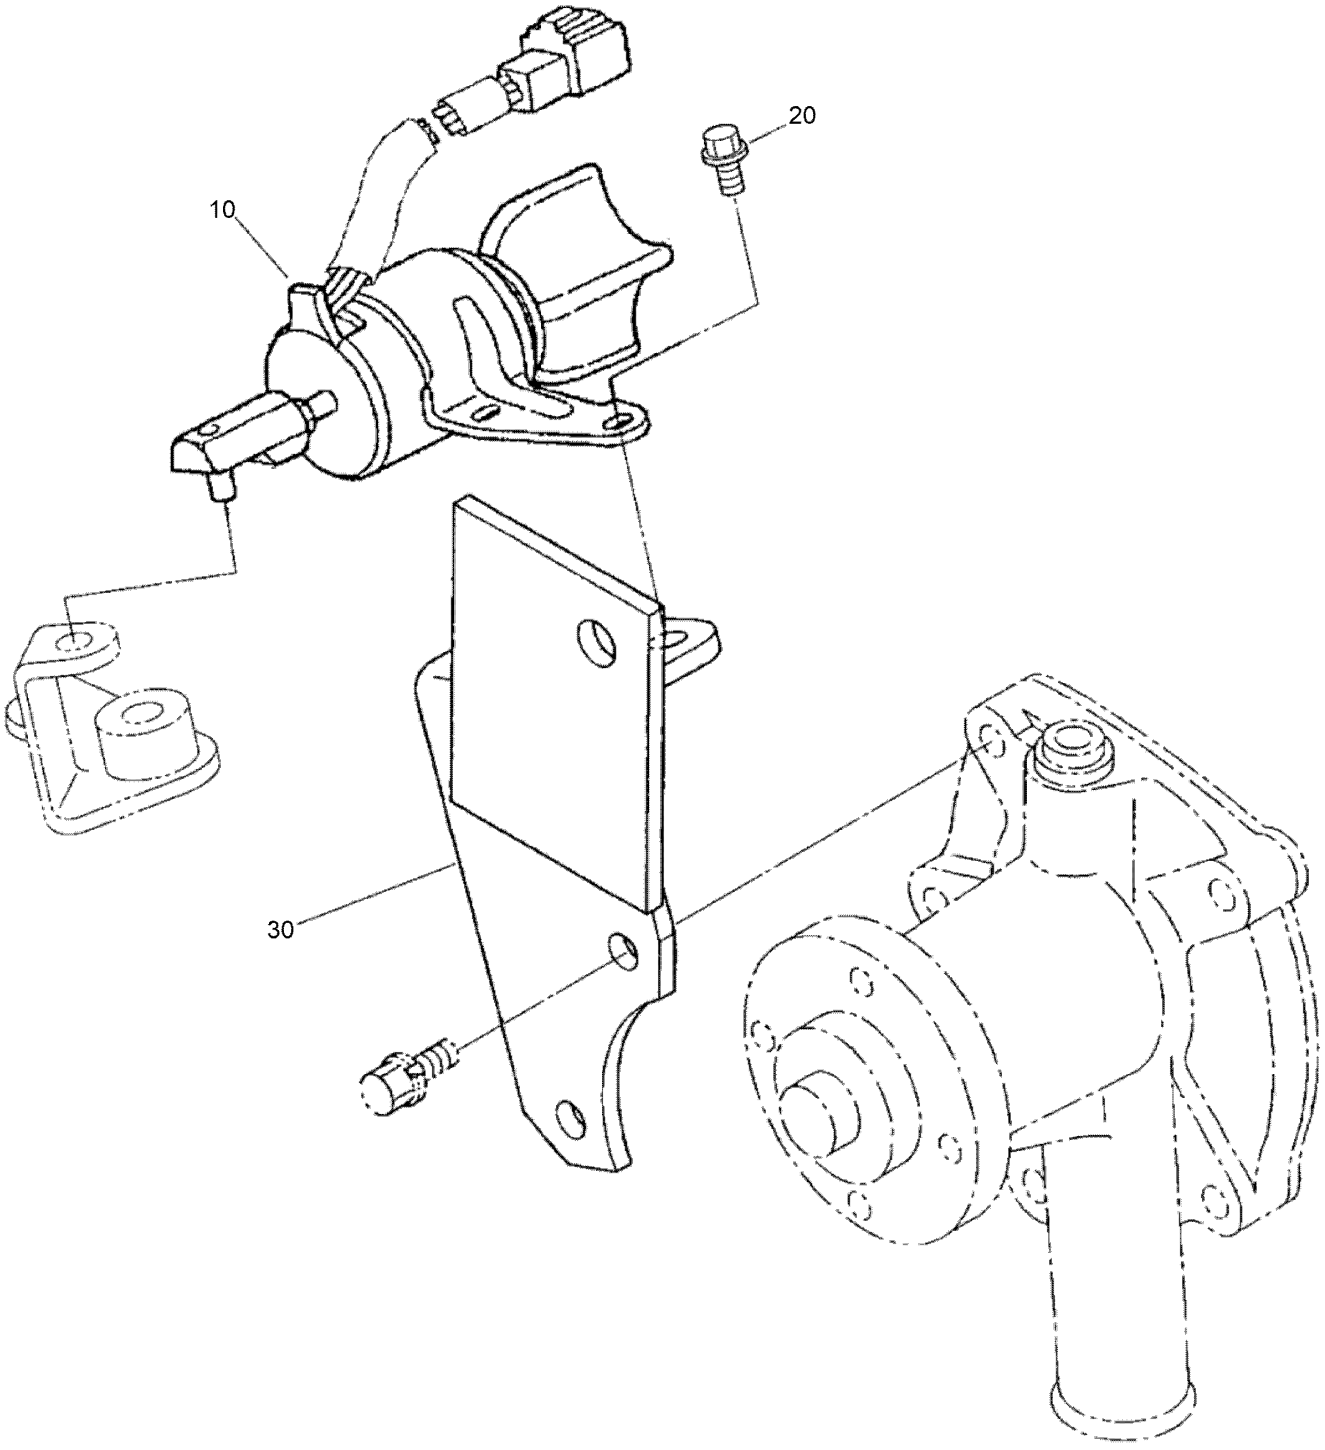

Stop Solenoid Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9686	1	Solenoid,Stop
20	100-1774	2	Bolt-Flange
30	134-9687	1	Comp.Support


Injection Pump Assembly

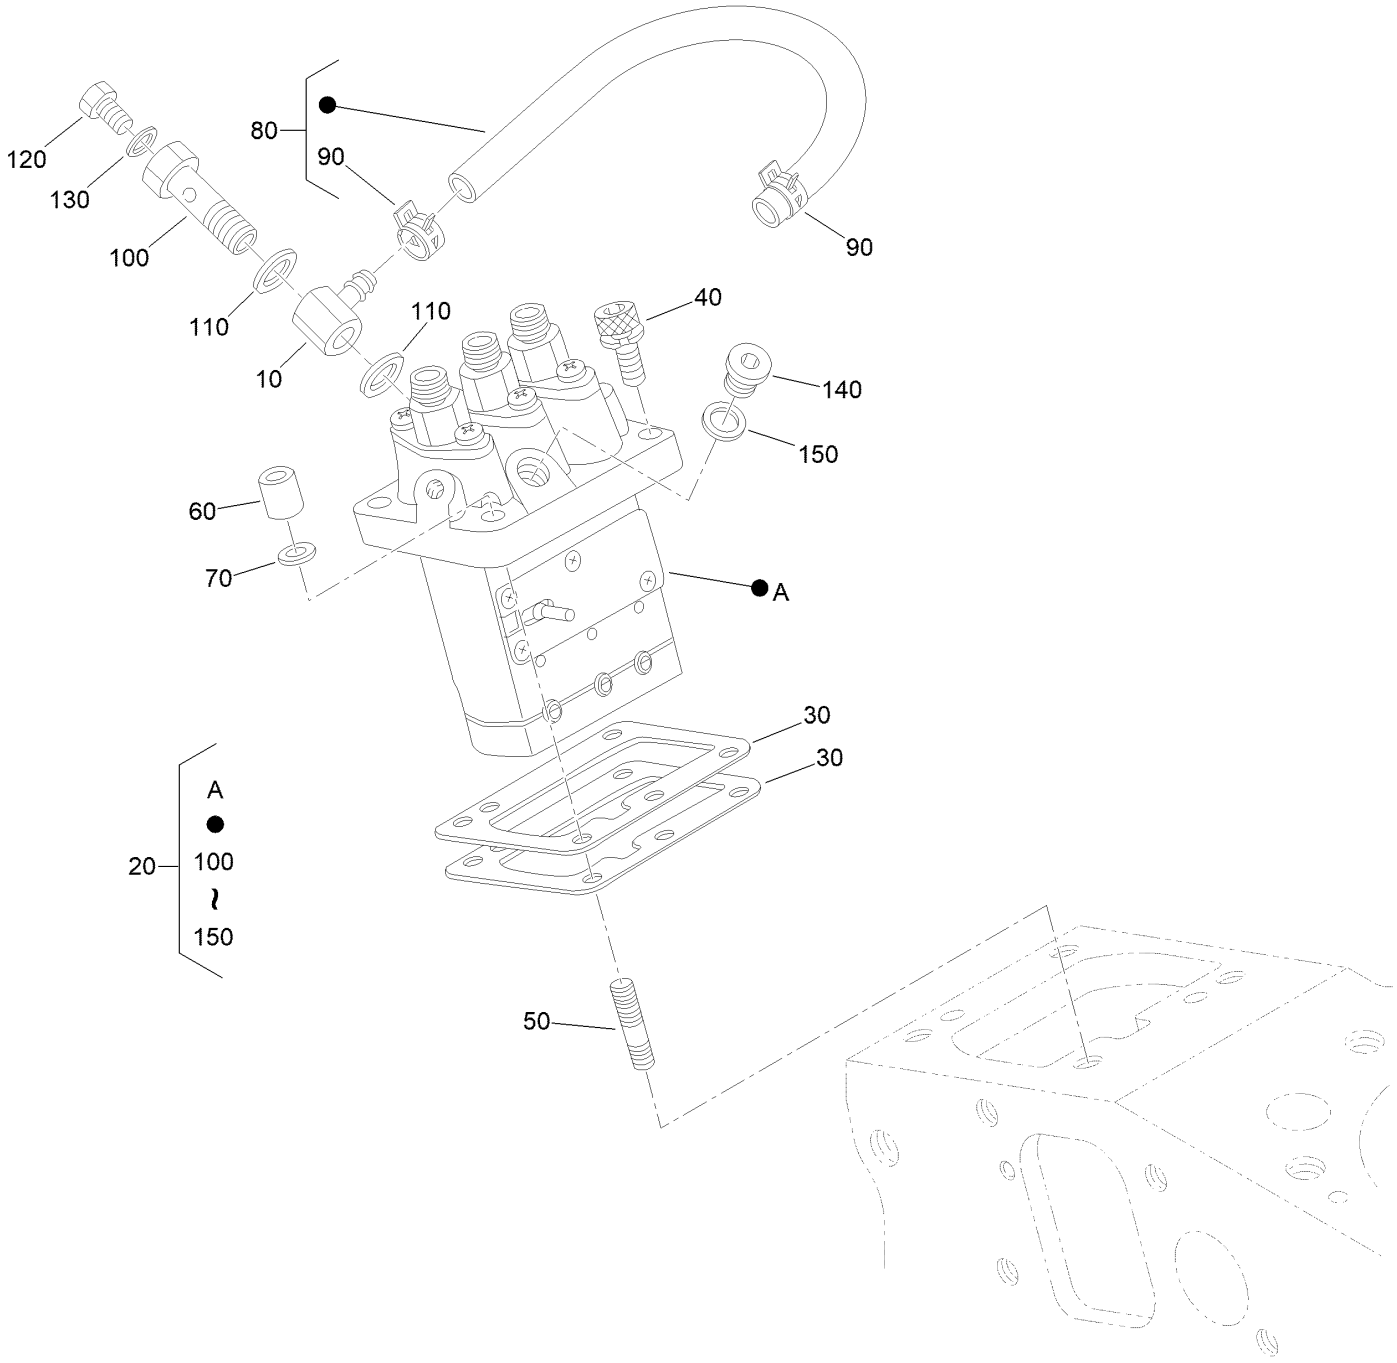

Injection Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9688	1	Joint,Eye
20	130-1223	1	Injection Pump ASM
30	115-3045	1	Shim-Injection (0.175MM)
30	98-9456	1	Shim-Injection (0.20MM)
30	98-9457	1	Shim-Injection (0.25MM)
30	98-9458	1	Shim-Injection (0.30MM)
30	115-3046	1	Shim-Injection (0.35MM)
40	117-7564	2	Bolt-Hex Soc HD
50	98-9438	2	Stud
60	98-9440	2	Nut-Cap
70	134-9689	2	Washer,Spring Lock
80	100-1842	1	Fuel Pipe ASM
90	100-2217	2	Clip-Pipe
100	100-1896	1	Screw-Hollow
110	98-9445	2	Gasket
120	98-9430	1	Screw
130	98-9446	1	Gasket
140	98-9466	1	Plug
150	98-9451	1	Gasket


Speed Control Plate Assembly

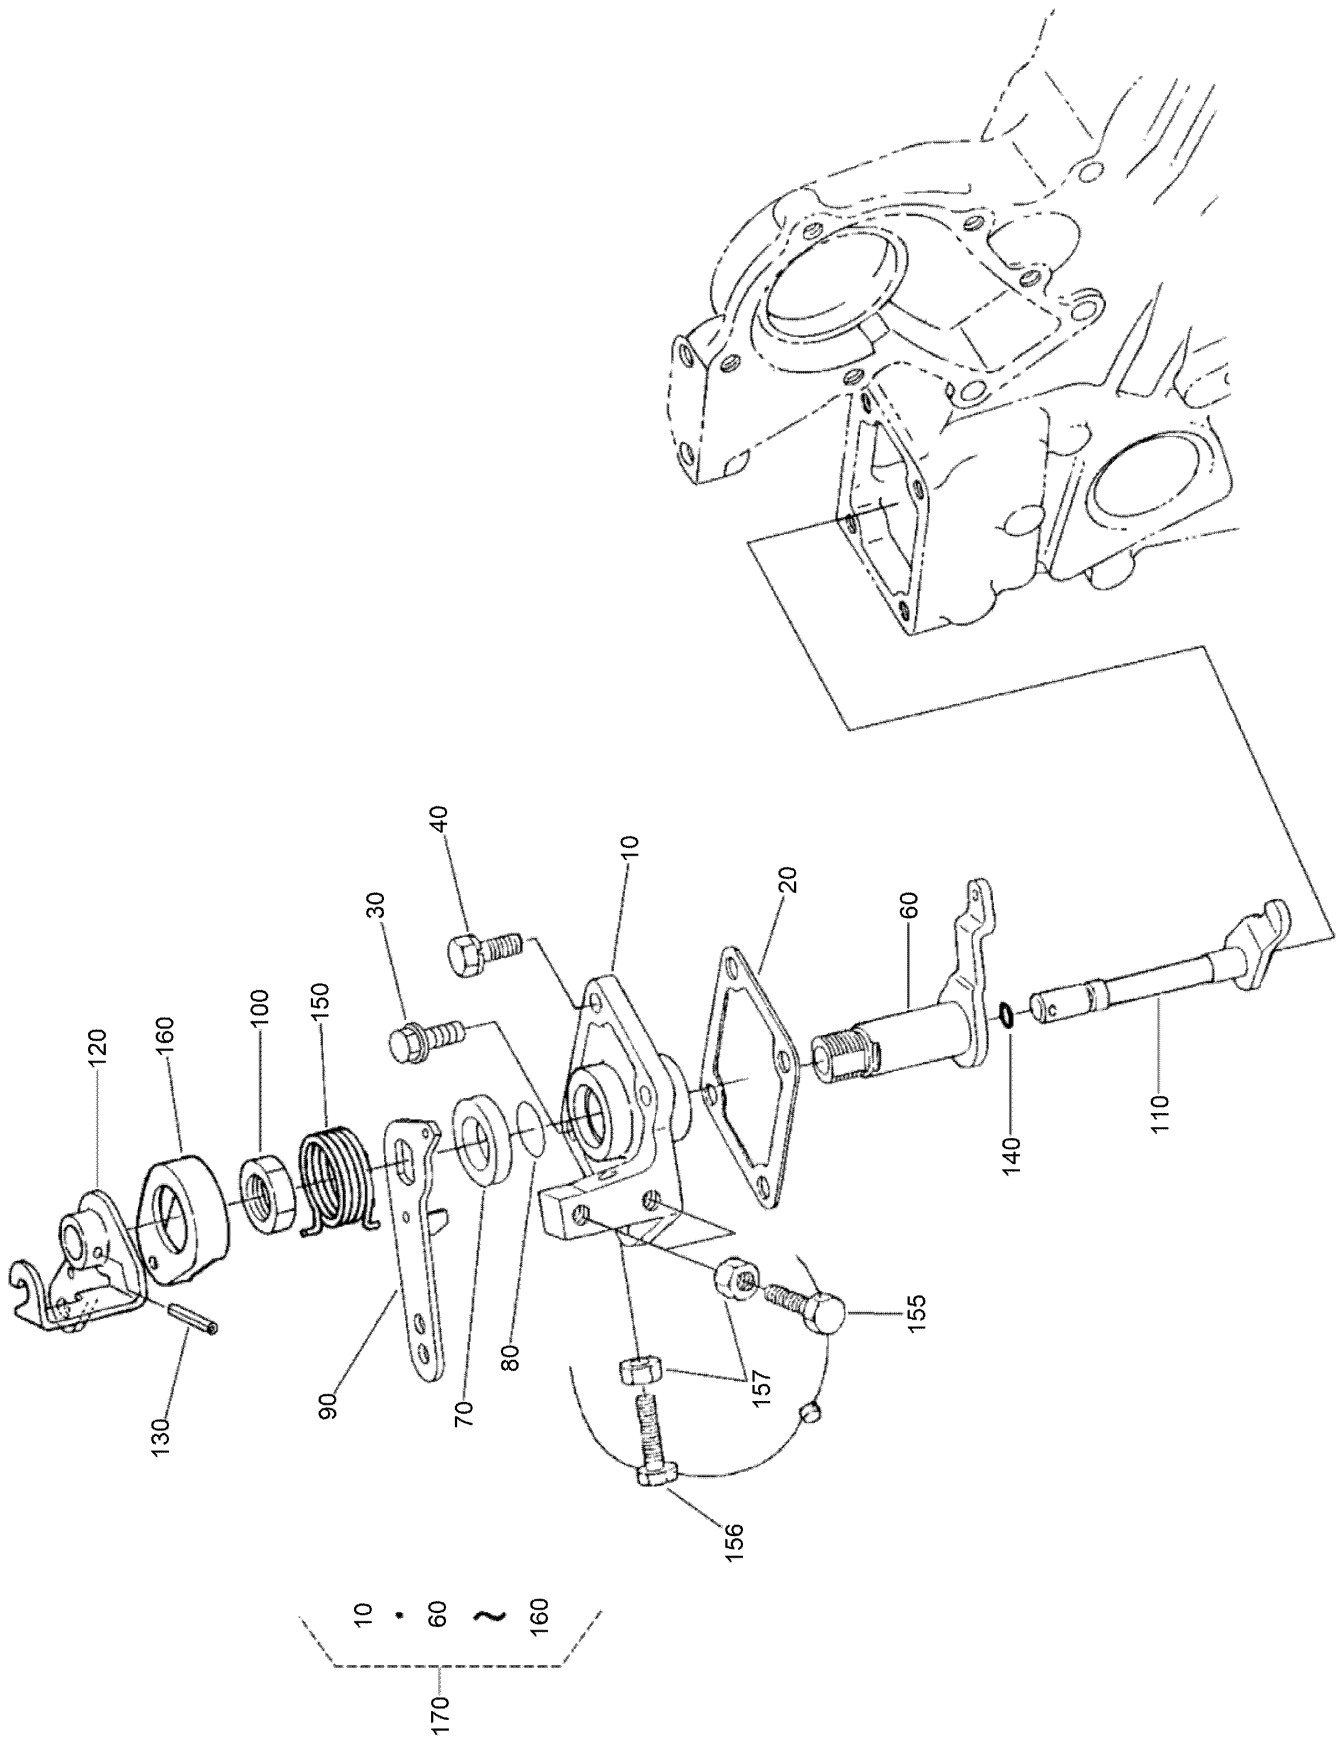

Speed Control Plate Assembly (continued)

Ref.	Part Number	Qty.	Description
10	110-3770	1	Plate-Control, Speed
20	100-1962	1	Gasket-Plate, Control
30	127-0403	2	Bolt-Flange
40	112-2507	2	Bolt
60	132-4906	1	Lever-Governor
70	110-3772	1	Collar
80	100-2208	1	O-Ring
90	110-3773	1	Lever-Control, Speed
100	110-3774	1	Nut-Control, Speed
110	112-2826	1	Shaft-Lever
120	134-9690	1	Lever(Engine Stop)
130	110-3777	1	Pin-Spring
140	100-2207	1	O-Ring
150	110-3778	1	Spring-Return
155	120-3133	2	Screw-Stopper
156	120-3134	1	Bolt
157	98-7572	3	Nut
160	110-3779	1	Cap
170	134-9691	1	Plate,Comp


Nozzle Holder and Glow Plug Assembly

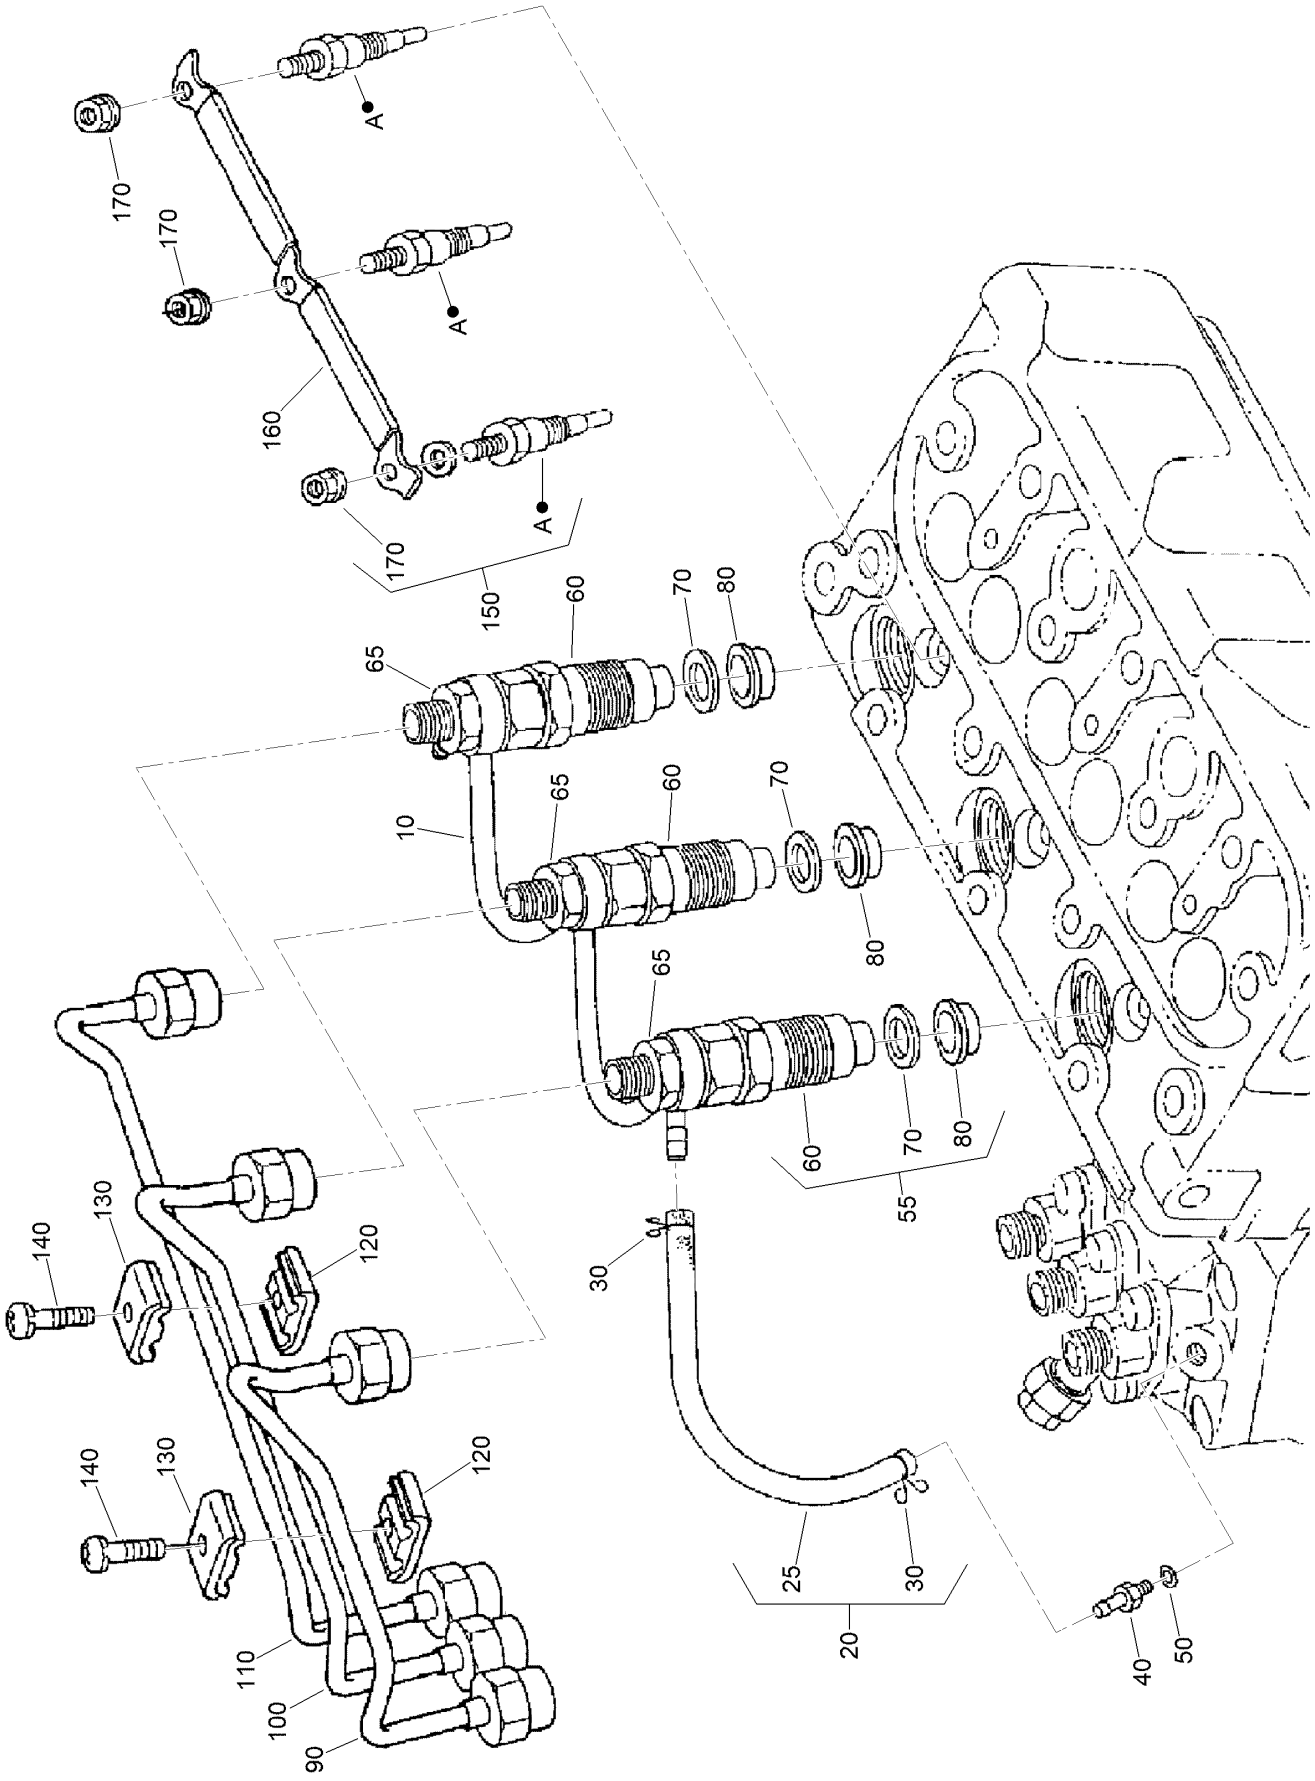

Nozzle Holder and Glow Plug Assembly (continued)

Ref.	Part Number	Qty.	Description
10	100-1960	1	Over Flow Pipe ASM
20	98-9420	1	Overflow Pipe ASM
25	112-0182	1	Pipe-Overflow
30	98-7671	2	Clip-Pipe
40	98-9431	1	Screw-Bleeder, Air
50	98-7654	1	Gasket
55	130-1305	3	Nozzle Holder Kit
60	130-1303	3	Nozzle Holder ASM
65	121-2411	3	Nut
70	98-7676	3	Gasket
80	98-7677	3	Seal-Heat
90	130-1414	1	Pipe-Injection
100	130-1415	1	Pipe-Injection
110	130-1416	1	Pipe-Injection
120	98-7682	2	Clamp-Pipe
130	98-7683	2	Clamp-Pipe
140	98-7684	2	Screw (W/Washer)
150	130-1411	3	Plug-Glow
160	100-2037	1	Cord-Plug, Glow
170	99-8377	3	Nut-Flange


Nozzle Holder Component Assembly

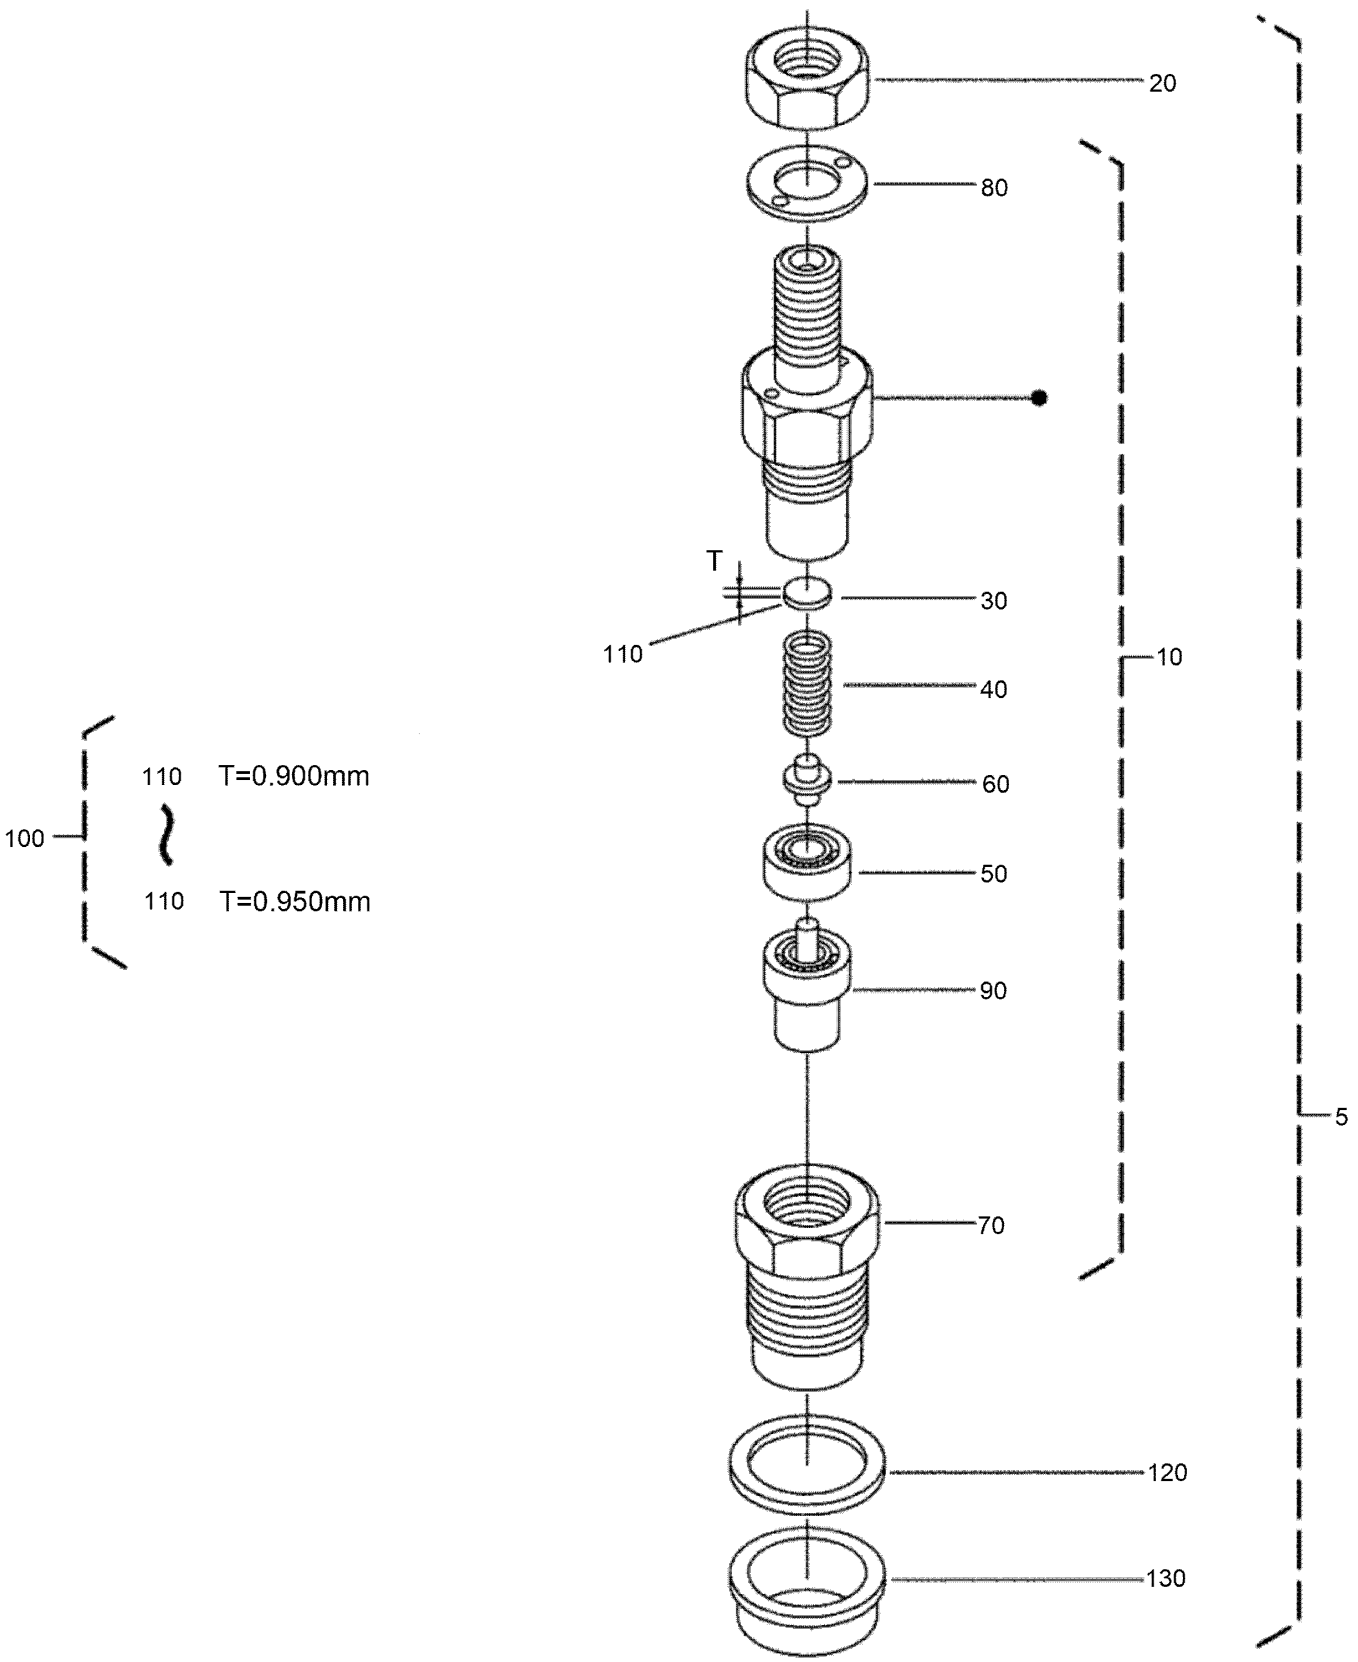

Nozzle Holder Component Assembly (continued)

Ref.	Part Number	Qty.	Description
5	130-1305	3	Nozzle Holder Kit
10	130-1303	3	Nozzle Holder ASM
20	121-2411	3	Nut
30	99-8302	3	Washer-Adjusting
40	99-8303	3	Spring-Nozzle
50	99-8304	3	Spacer-Distance
60	99-8305	3	Rod-Push
70	130-1304	3	Nut-Nozzle
80	99-8307	3	Washer-Plain
90	130-1497	3	Nozzle-Piece
100	98-9448	3	Adjusting Washer ASM
110	98-7642	3	Washer-Adjusting (0.900Mm)
110	98-7841	3	Washer-Adjusting (0.925Mm)
110	98-7842	3	Washer-Adjusting (0.950Mm)
110	98-7843	3	Washer-Adjusting (0.975Mm)
110	98-7844	3	Washer-Adjusting (1.000Mm)
110	98-7845	3	Washer-Adjusting (1.025Mm)
110	98-7846	3	Washer-Adjusting (1.050Mm)
110	98-7847	3	Washer-Adjusting (1.075MM)
110	98-7848	3	Washer-Adjusting (1.100MM)
110	98-7849	3	Washer-Adjusting (1.125MM)
110	98-7850	3	Washer-Adjusting (1.150MM)
110	98-7851	3	Washer-Adjusting (1.175MM)
110	98-7852	3	Washer-Adjusting (1.200MM)
110	98-7853	3	Washer-Adjusting (1.225MM)
110	98-7854	3	Washer-Adjusting (1.250MM)
110	98-7855	3	Washer-Adjusting (1.275MM)
110	98-7856	3	Washer-Adjusting 1.300MM)
110	98-7857	3	Washer-Adjusting (1.325MM)
110	98-7858	3	Washer-Adjusting (1.350MM)
110	98-7859	3	Washer-Adjusting (1.375MM)
110	98-7860	3	Washer-Adjusting (1.400MM)
110	134-9692	3	Washer,Adjusting
110	98-7862	3	Washer-Adjusting (1.450MM)
110	98-7863	3	Washer-Adjusting (1.475MM)
110	98-7864	3	Washer-Adjusting (1.500MM)
110	98-7865	3	Washer-Adjusting (1.525MM)
110	98-7866	3	Washer-Adjusting (1.550MM)
110	98-7867	3	Washer-Adjusting (1.575MM)
110	98-7868	3	Washer-Adjusting (1.600MM)
110	98-7869	3	Washer-Adjusting (1.625MM)
110	98-7870	3	Washer-Adjusting (1.650MM)
110	98-7871	3	Washer-Adjusting (1.675MM)
110	98-7872	3	Washer-Adjusting (1.700MM)
110	98-7873	3	Washer-Adjusting (1.725MM)
110	98-7874	3	Washer-Adjusting (1.750MM)
110	98-7875	3	Washer-Adjusting (1.775MM)
110	98-7876	3	Washer-Adjusting (1.800MM)
110	98-7877	3	Washer-Adjusting (1.825MM)
110	98-7878	3	Washer-Adjusting (1.850MM)
110	98-7879	3	Washer-Adjusting (1.875MM)
110	98-7880	3	Washer-Adjusting (1.900MM)
110	98-7881	3	Washer-Adjusting (1.925MM)
110	98-7882	3	Washer-Adjusting (1.950MM)
120	98-7676	3	Gasket
130	98-7677	3	Seal-Heat


Governor Fork Lever Assembly

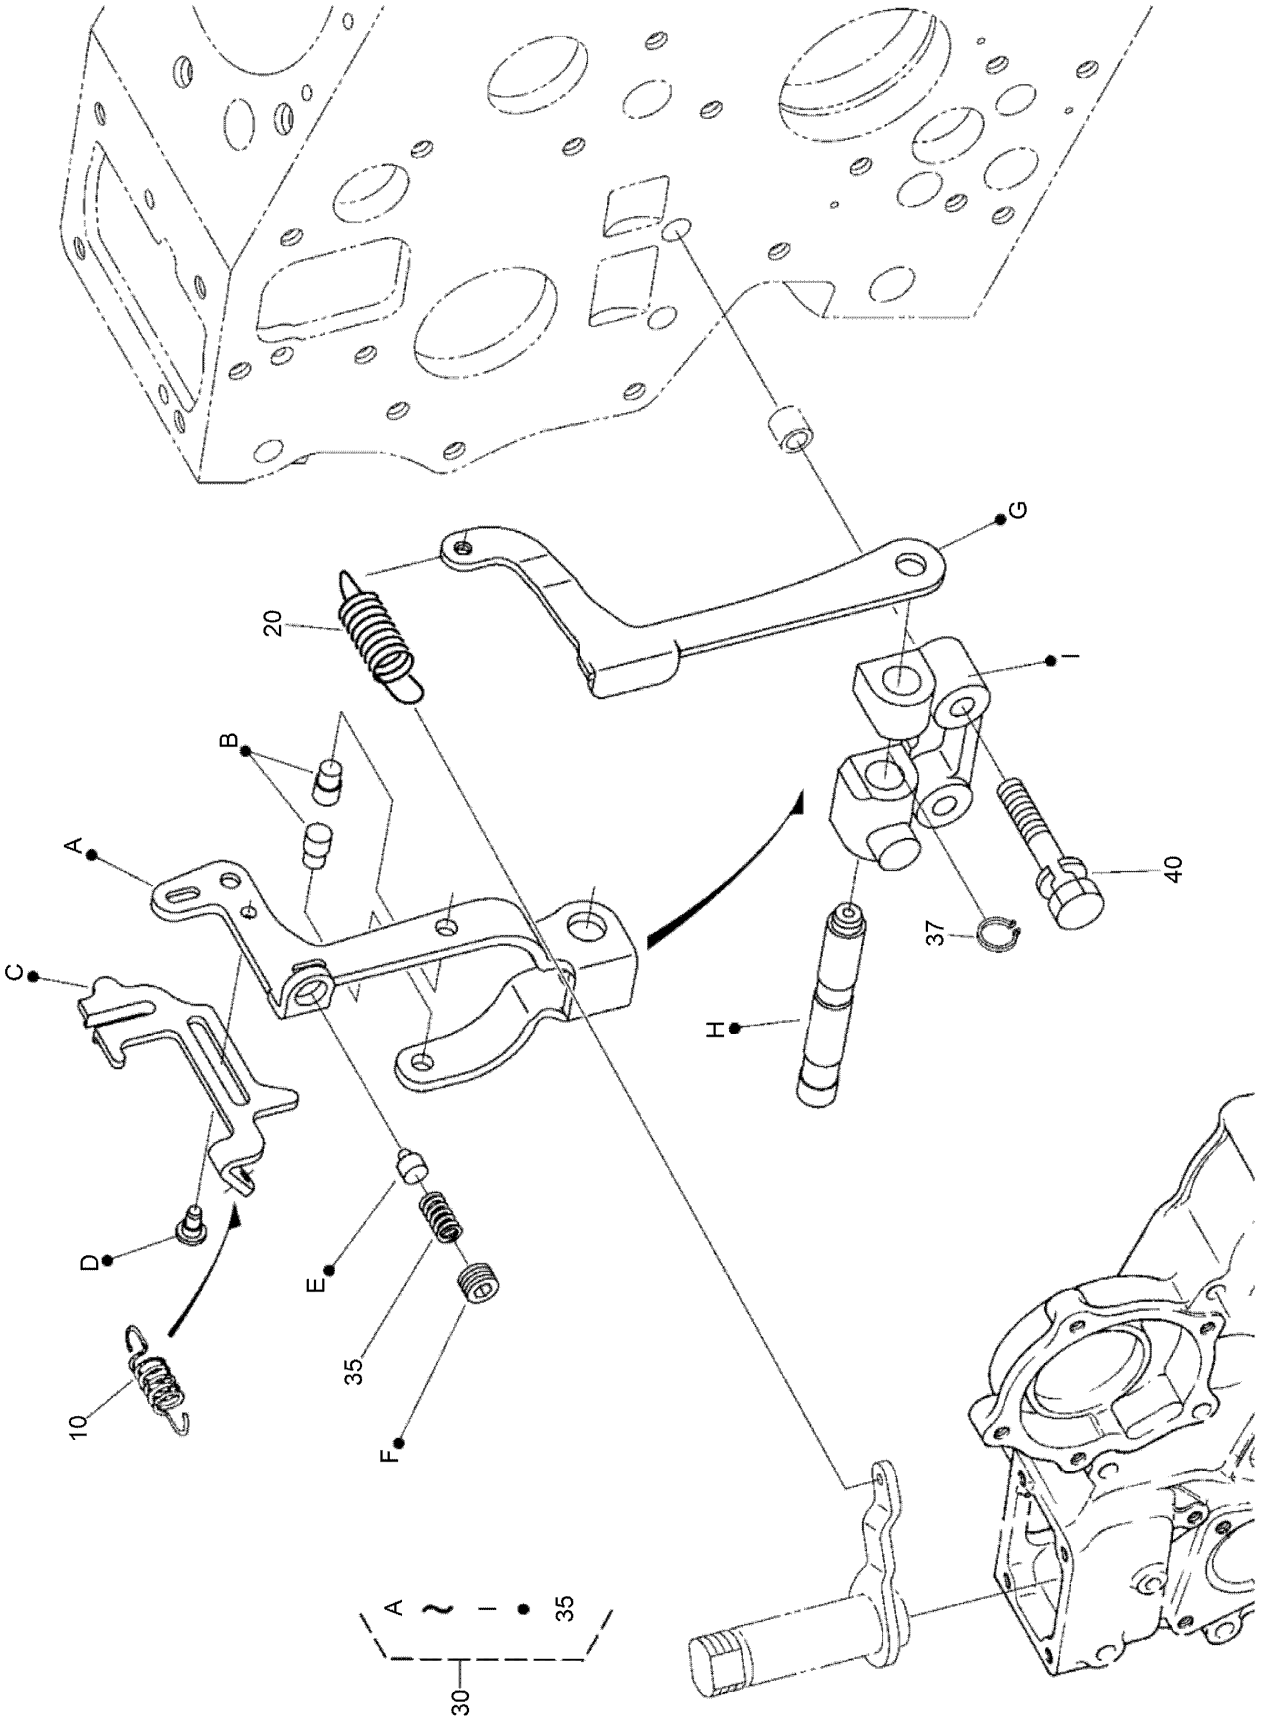

Governor Fork Lever Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9693	1	Spring(Start)
20	110-3767	1	Spring-Governor
30	130-1542	1	Fork Lever ASM
35	117-0313	1	Spring
37	134-9694	1	Cir-Clip,External
40	100-1763	2	Bolt


Fuel Filter Assembly

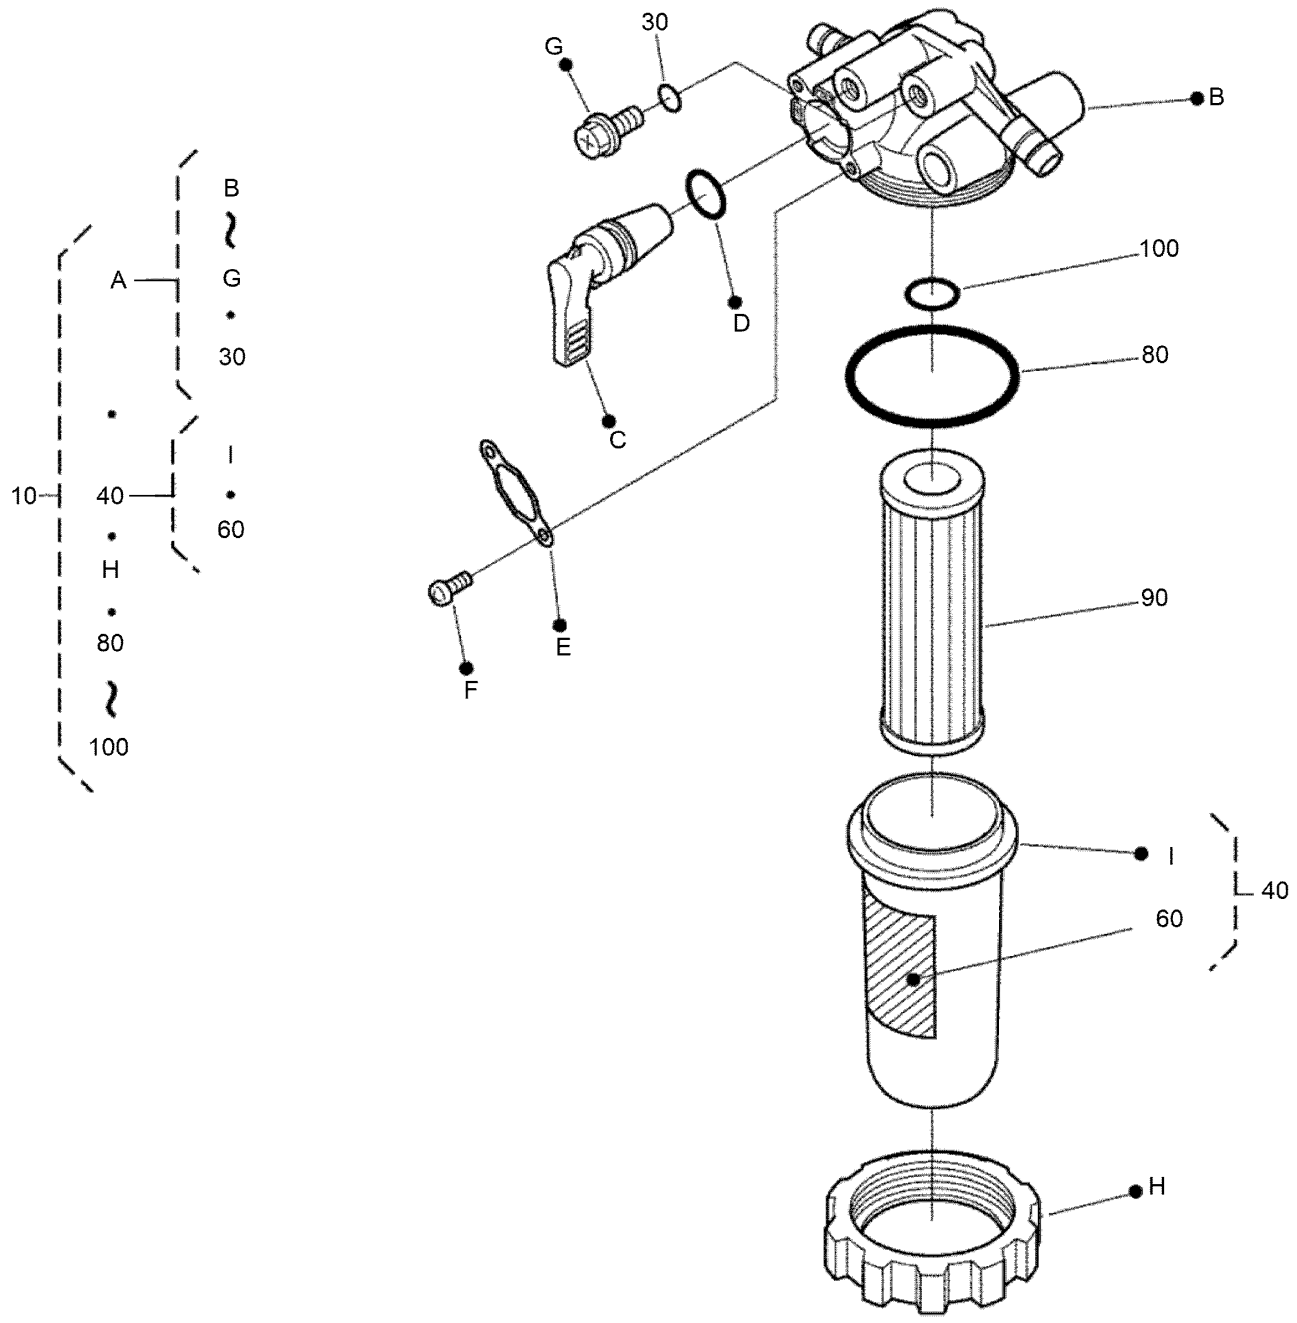

Fuel Filter Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9695	1	Filter,Assy(Fuel)
30	134-9696	2	O Ring
40	134-9697	1	Assy Cup,Filter
60	134-9698	1	Label,Fuel
80	134-9699	1	O-Ring
90	134-9485	1	Filter, Gasoline
100	134-9701	1	O-Ring


Mechanical Fuel Pump Assembly

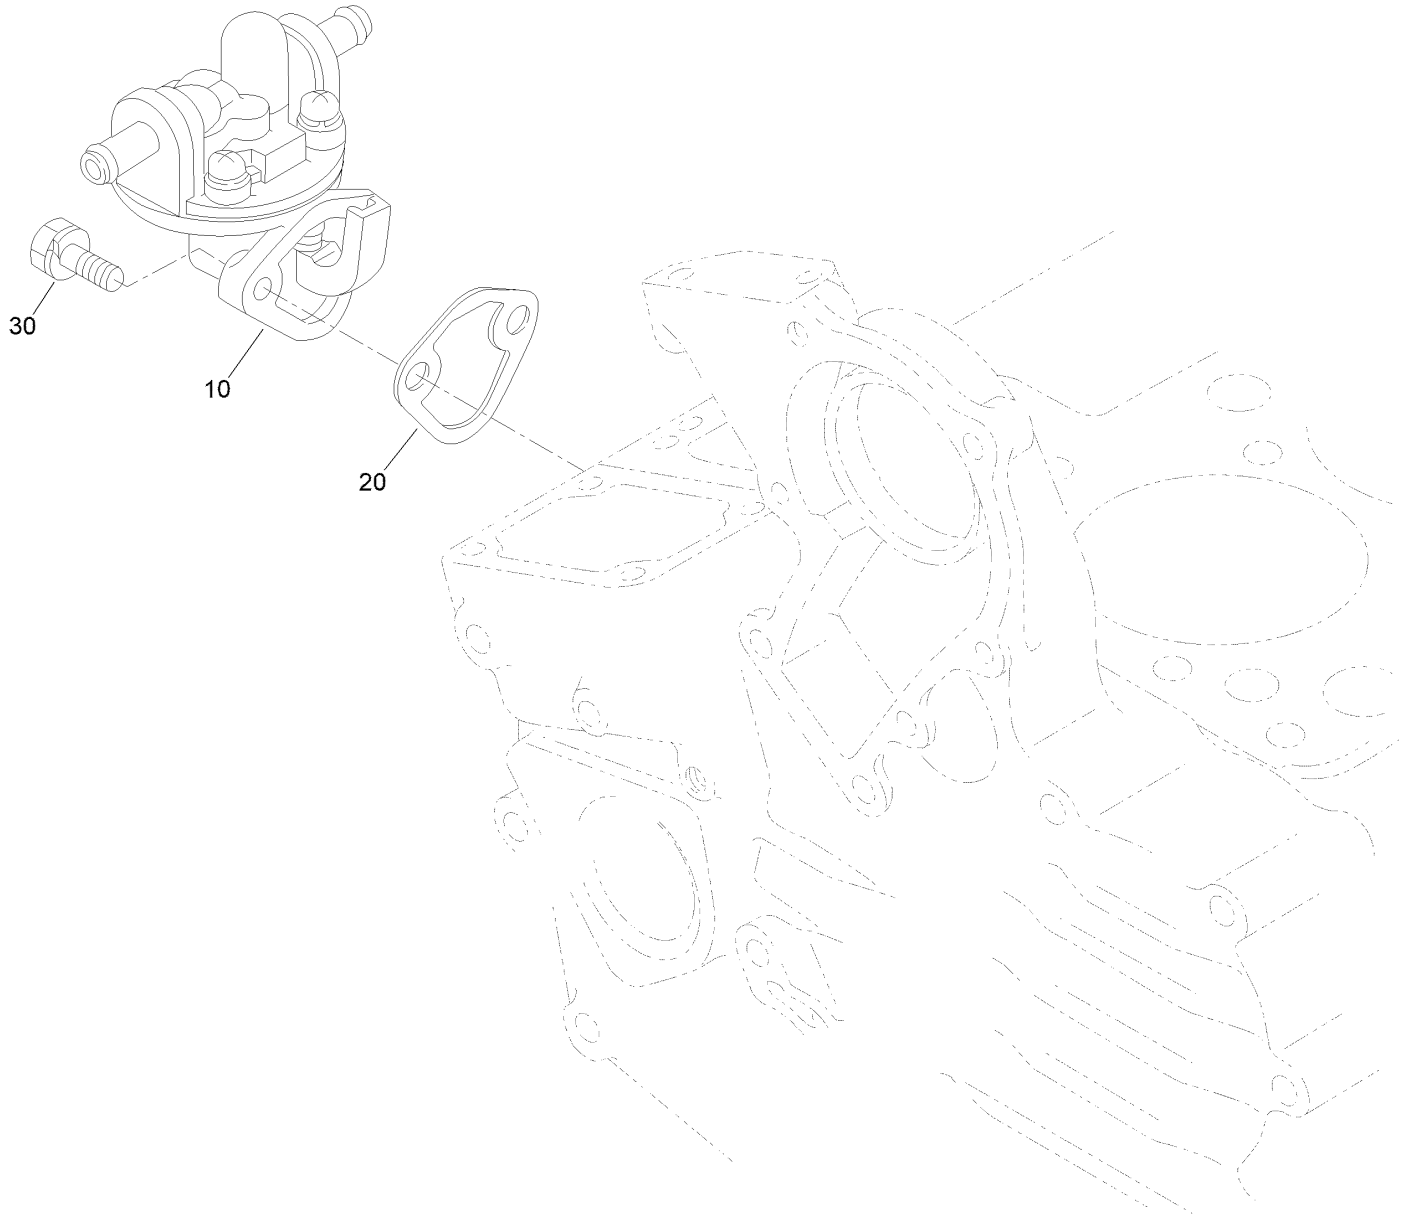

Mechanical Fuel Pump Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
10	100-2232	1	Fuel Pump ASM
20	98-9636	1	Gasket-Pump, Fuel
30	98-7692	2	Bolt

Alternator and Pulley Assembly

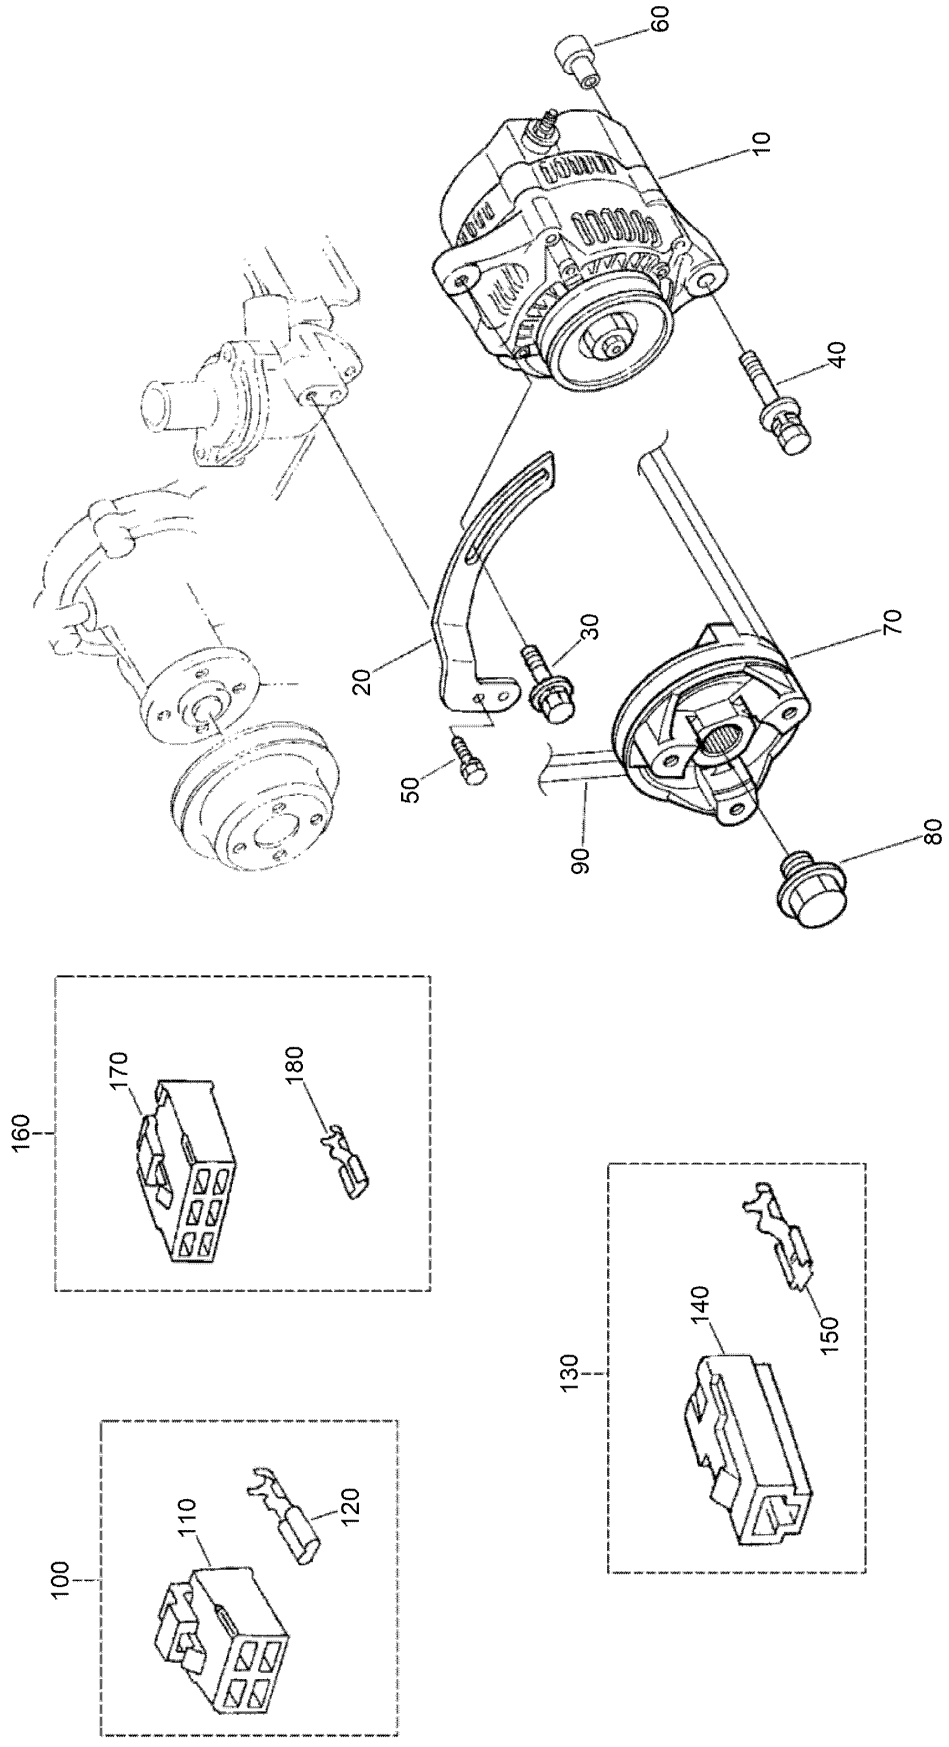


Alternator and Pulley Assembly (continued)

Ref.	Part Number	Qty.	Description
10	121-3811	1	Alternator ASM
20	134-9702	1	Stay,Dynamo
30	121-2413	1	Bolt
40	134-9703	1	Bolt,W Sems
50	98-7692	1	Bolt
60	110-3794	1	Collar
70	100-2039	1	Pulley-Drive, Fan
80	100-1978	1	Bolt
90	134-9484	1	Belt, Engine

Ref.	Part Number	Qty.	Description
100	130-1285	1	Coupler ASM
110	130-1174	1	Connector
120	98-9699	4	Terminal
130	130-1328	1	Terminal
140	130-1175	1	Connector
150	130-1176	1	Terminal
160	130-1290	1	Connector Coupler ASM
170	98-9697	1	Connector
180	98-9699	5	Terminal


Alternator Components Assembly

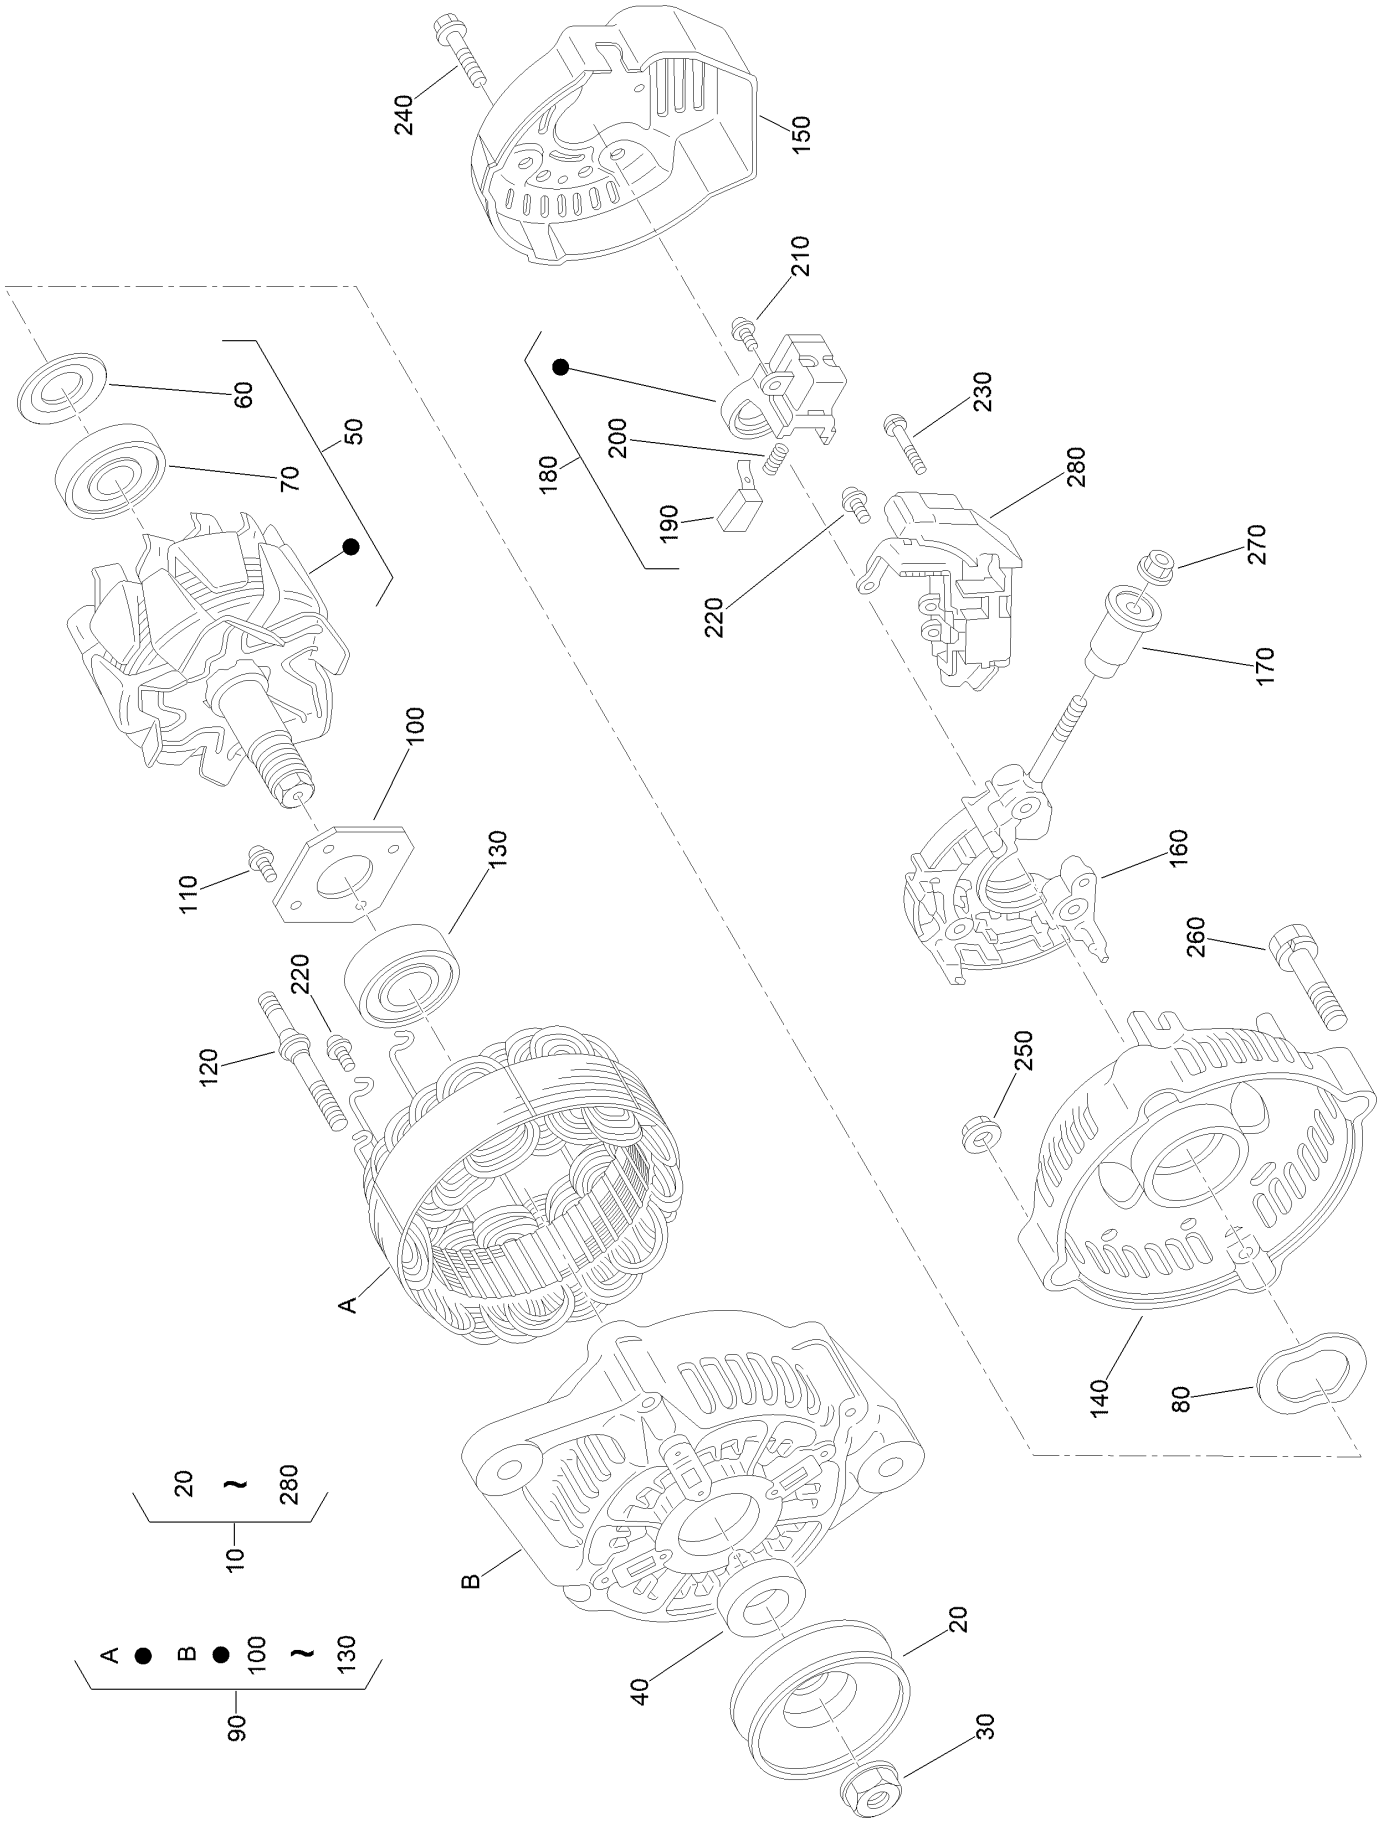

Alternator Components Assembly (continued)

Ref.	Part Number	Qty.	Description
10	121-3811	1	Alternator ASM
20	98-9453	1	Pulley-Dynamo
30	98-7708	1	Nut
40	98-7709	1	Collar
50	107-0136	1	Rotor ASM
60	98-7711	1	Cover-Bearing
70	107-0138	1	Bearing-Ball
80	98-7713	1	Washer-Thrust
90	107-0139	1	Drive End Frame ASM
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	133-2811	1	Bearing
140	121-3812	1	Frame-End
150	121-3813	1	Cover-End
160	121-3805	1	Rectifier ASM
170	117-0321	1	Insulation-Brush
180	107-0141	1	Brush Holder ASM
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	121-3809	1	Regulator ASM


Starter Installation Assembly

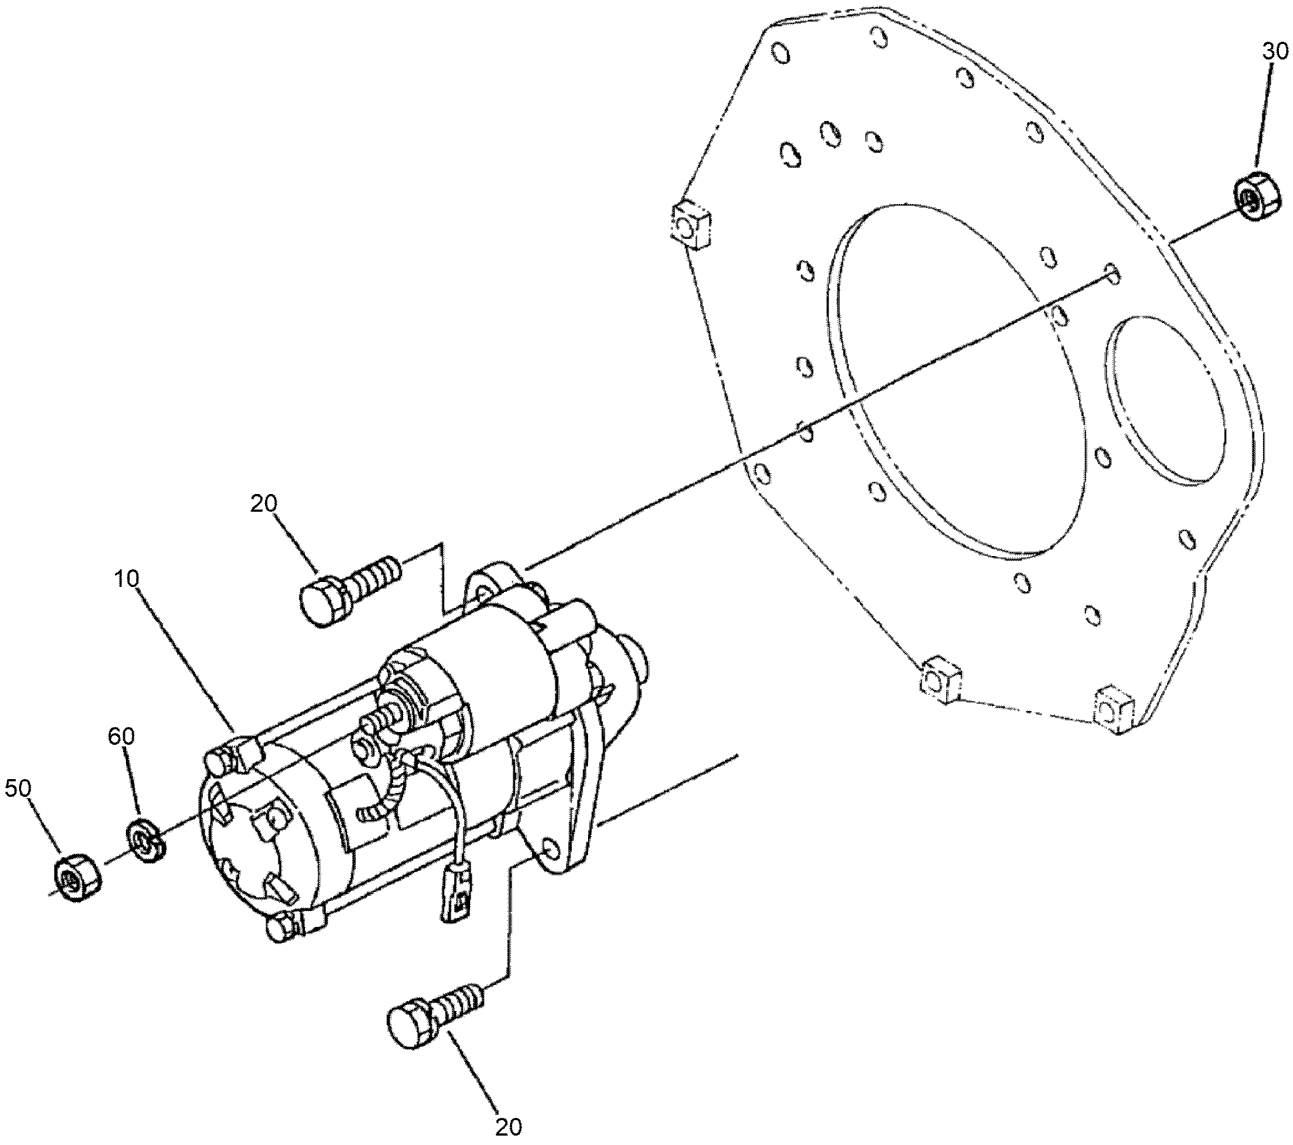

Starter Installation Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9705	1	Assy Starter
20	98-7697	2	Bolt
30	98-7534	2	Nut
50	98-7534	1	Nut
60	105-2893	1	Washer-Spring


Starter Component Assembly

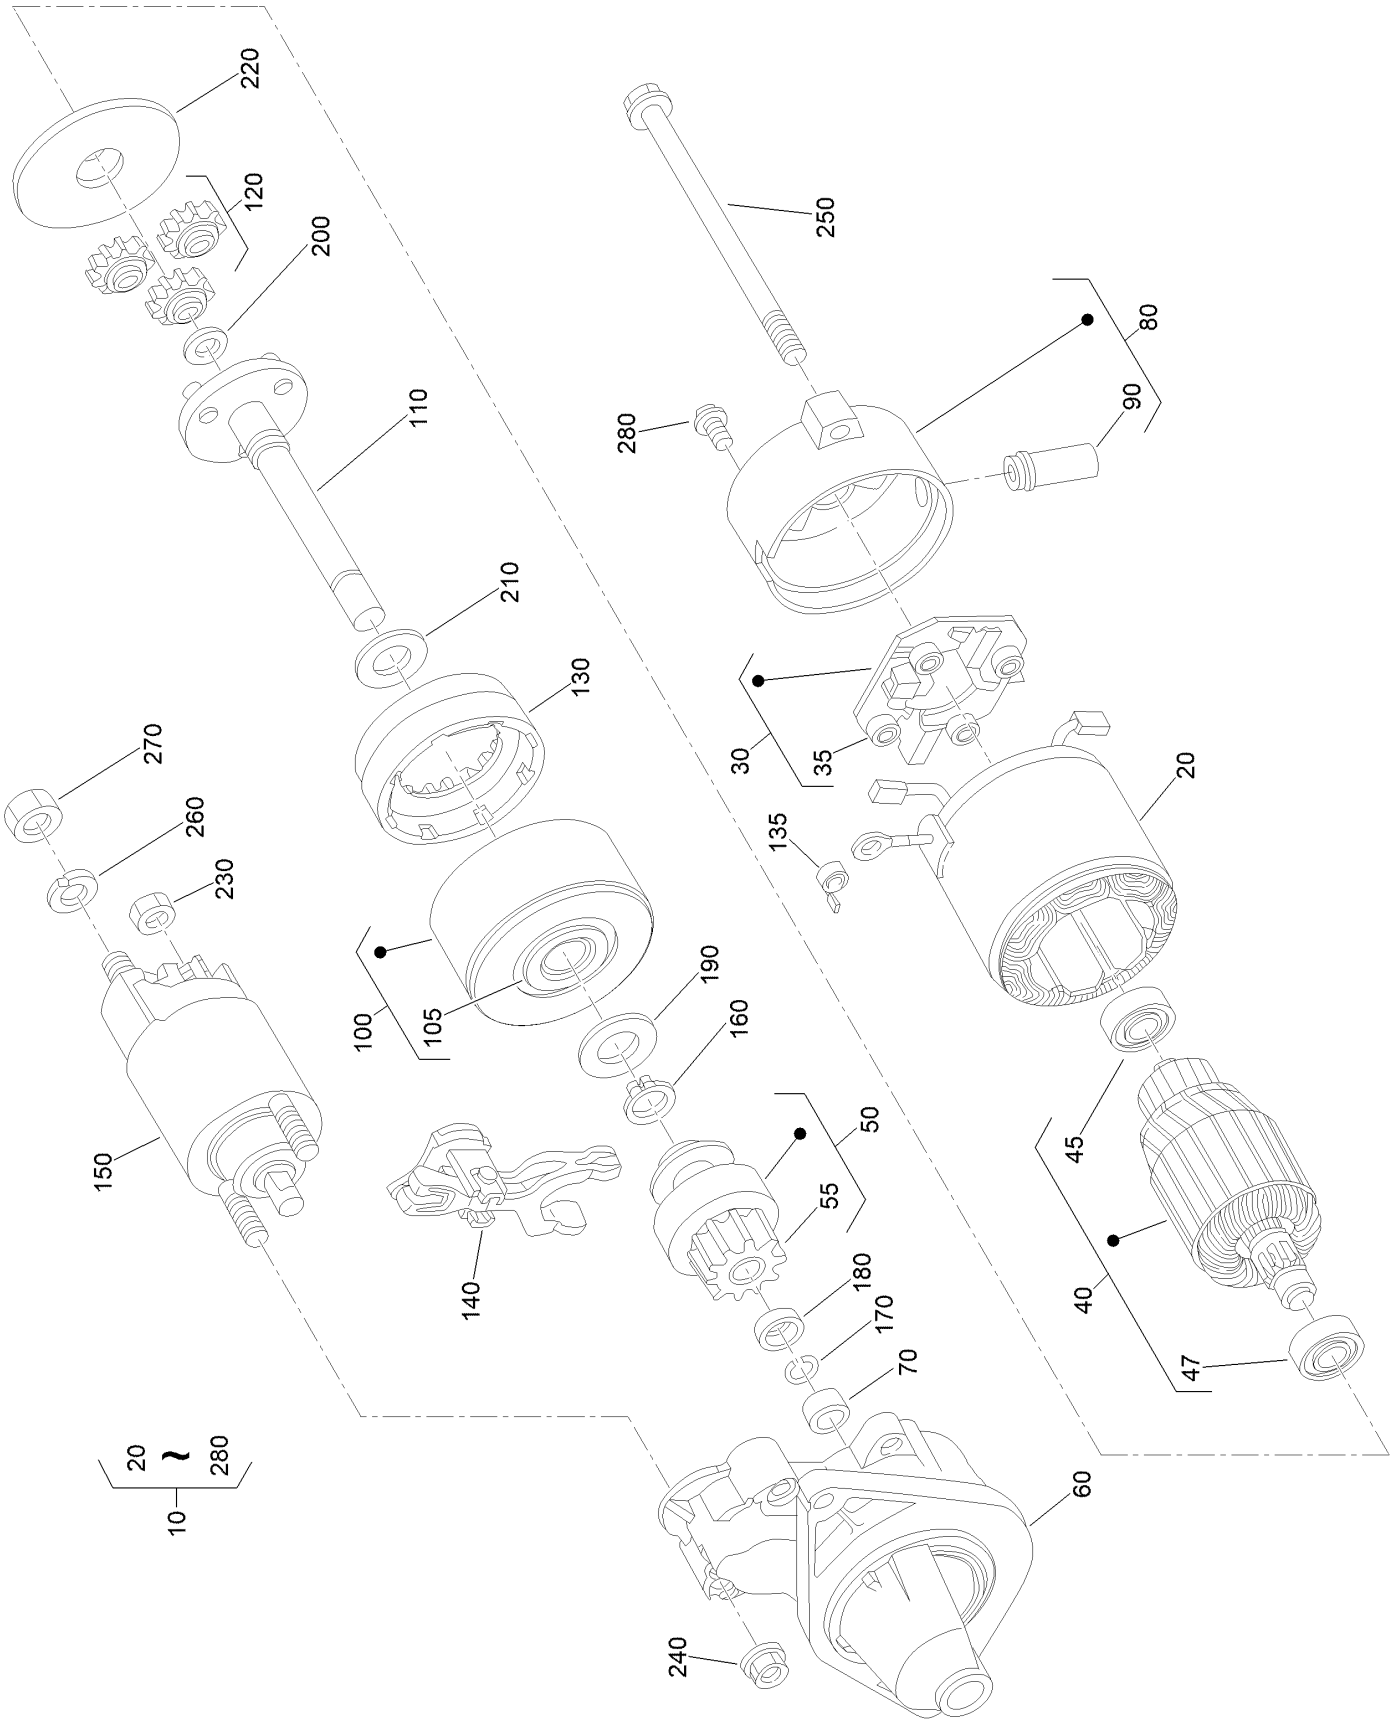

Starter Component Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9705	1	Assy Starter
20	100-2181	1	Starter Yoke ASM
30	100-2222	1	Holder ASM
35	127-0415	4	Spring-Brush
40	100-2182	1	Armature ASM
45	98-9412	1	Bearing-Ball
47	131-9580	1	Bearing - Ball
50	100-2185	1	Starter Clutch ASM
55	112-2833	1	Gear-Pinion
60	100-2180	1	Starter Housing ASM
70	100-2183	1	Bearing
80	100-2186	1	Frame ASM
90	100-2213	1	Cover
100	100-2223	1	Bearing ASM
105	127-0414	1	Bearing
110	100-2187	1	Starter Shaft ASM
120	100-2220	3	Gear
130	100-2221	1	Gear
135	98-7750	12	Spring-Brush
140	100-2218	1	Lever
150	134-9706	1	Assy Switch,Magnetic
160	100-2219	1	Ring-Snap
170	100-2212	1	Ring-Snap
180	100-2216	1	Collar
190	100-2224	1	Washer-Plain
200	100-2225	1	Washer-Plain
210	100-2226	1	Washer-Plain
220	100-2227	1	Plate
230	99-8371	1	Nut-Hex
240	100-1813	2	Nut
250	100-2210	2	Bolt-Through
260	100-2215	1	Washer-Spring
270	100-2171	1	Nut-Hex
280	100-2188	2	Screw


Oil Switch and Thermo Switch Assembly

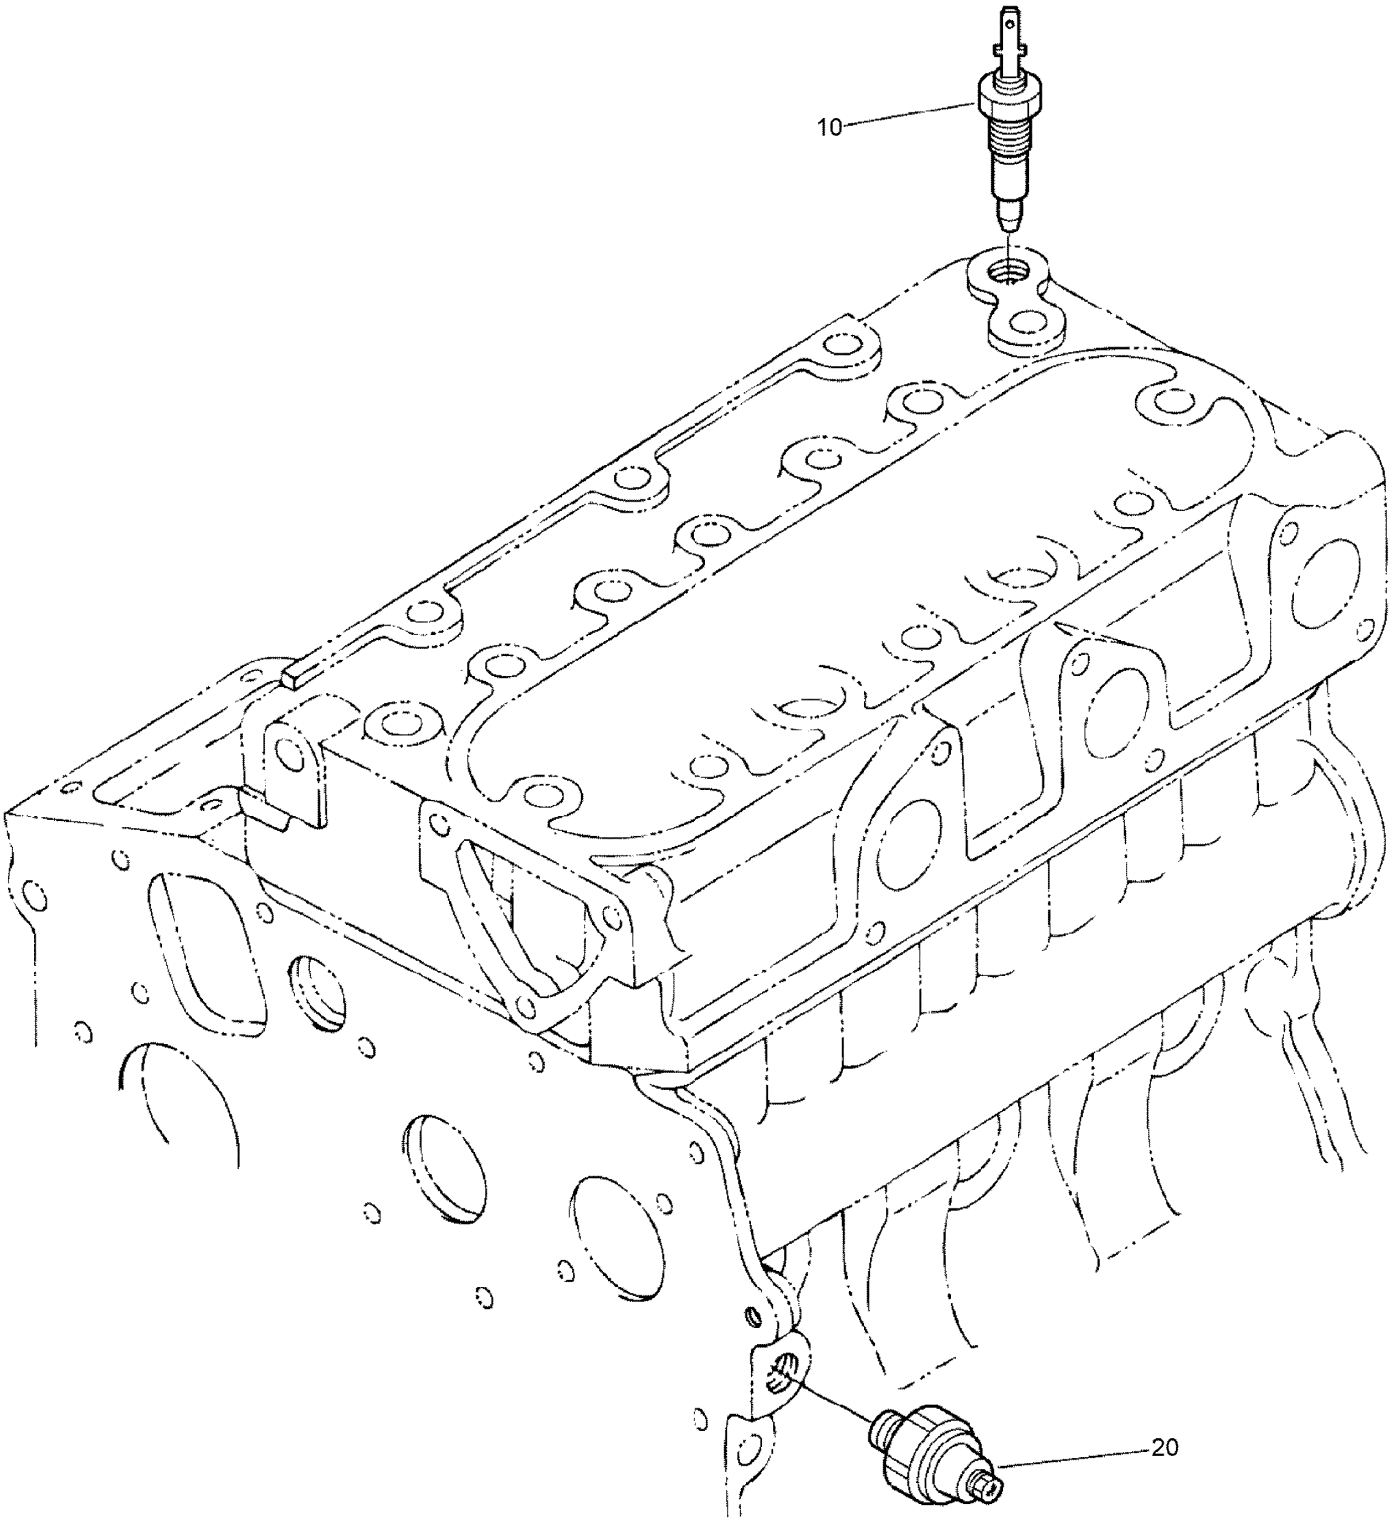

Oil Switch and Thermo Switch Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
10	100-1983	1	Thermo-Switch
20	98-7764	1	Switch-Oil


Water Flange and Thermostat Assembly

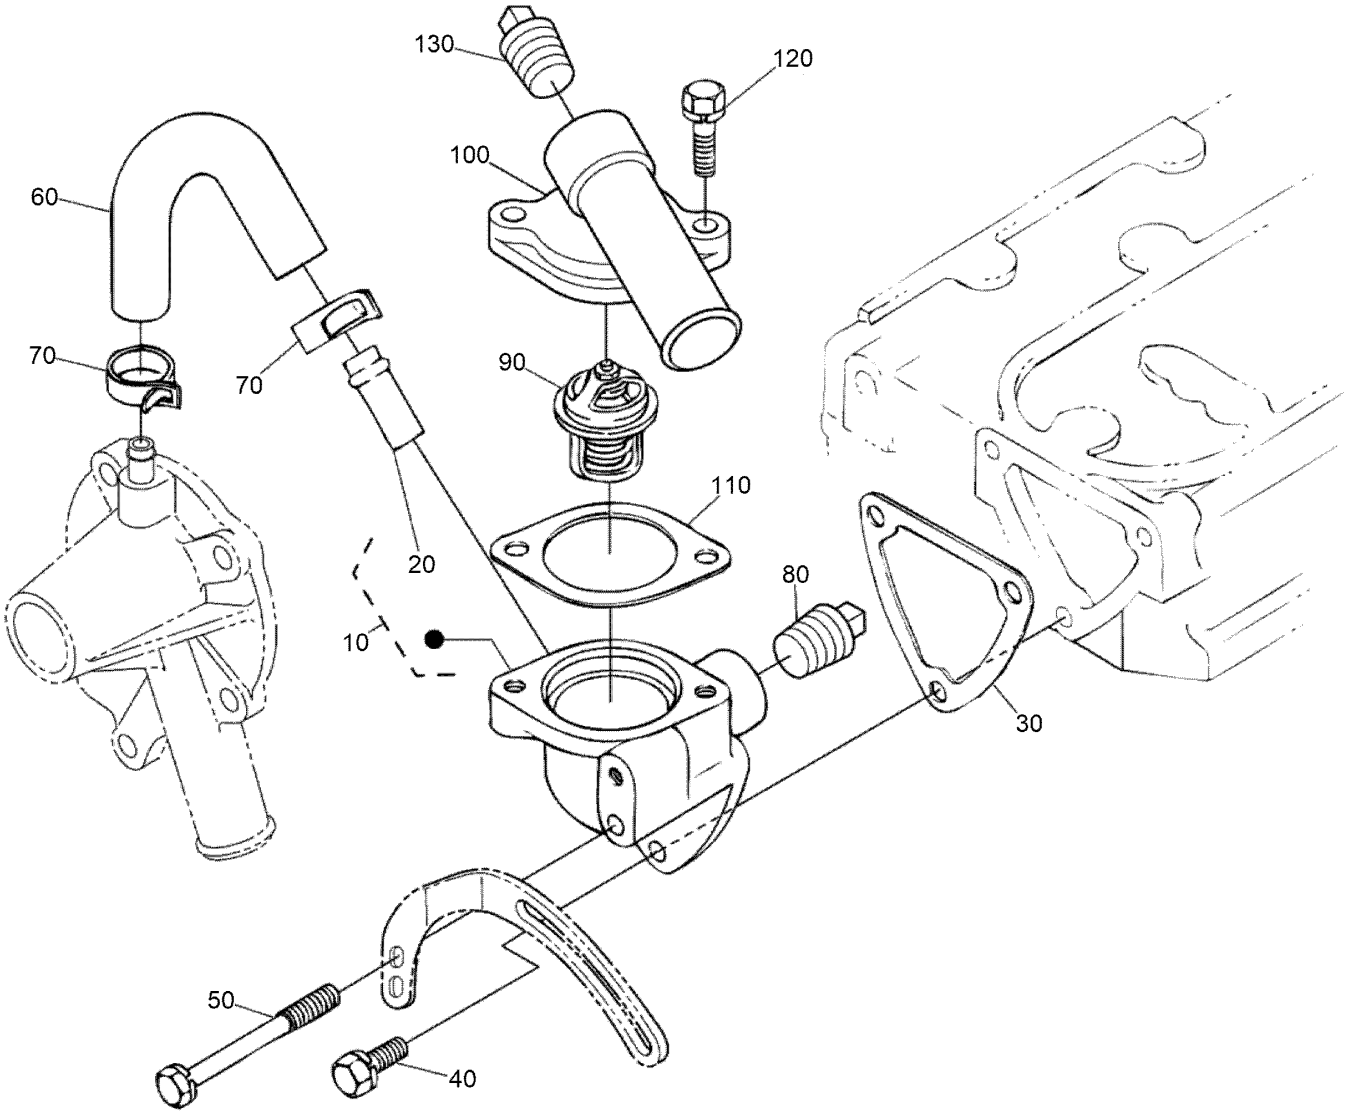

Water Flange and Thermostat Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9707	1	Flange,Water,Comp
20	98-9580	1	Pipe-Return, Water
30	110-3820	1	Gasket-Flange, Water
40	98-7692	2	Bolt
50	98-9437	1	Bolt
60	134-9708	1	Pipe,Water Return
70	98-9579	2	Band-Pipe
80	110-3821	1	Plug
90	100-2053	1	Thermostat ASM
100	134-9709	1	Cover,Thermostat
110	100-2157	1	Gasket-Thermostat
120	98-9354	2	Bolt
130	110-3821	1	Plug


Water Pump Assembly

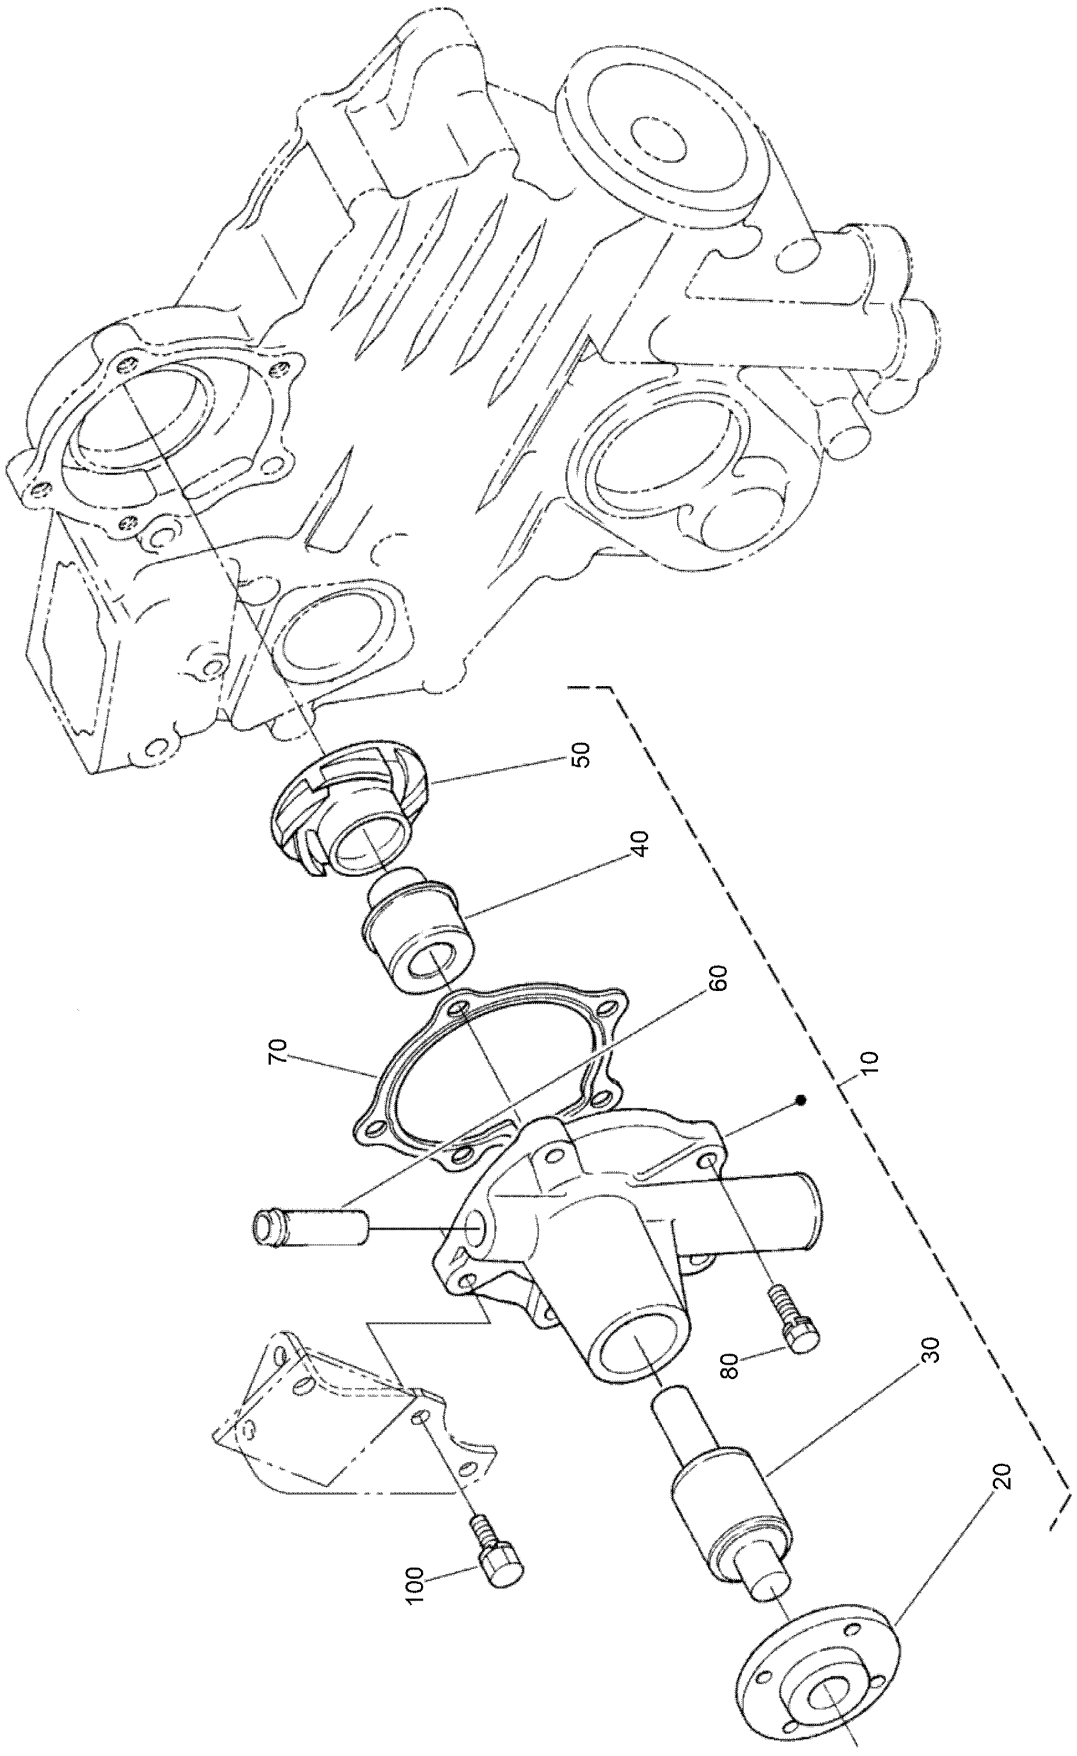

Water Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9710	1	Assy Pump,Water
20	125-9081	1	Flange-Pump, Water
30	100-1934	1	Bearing-Ball
40	134-9711	1	Assy Seal,Mechanical
50	134-9712	1	Impeller,Water Pump
60	100-1932	1	Pipe-Return, Water
70	117-0330	1	Gasket-Pump, Water
80	100-1750	2	Bolt
100	98-9353	2	Bolt


Water Pipe Assembly

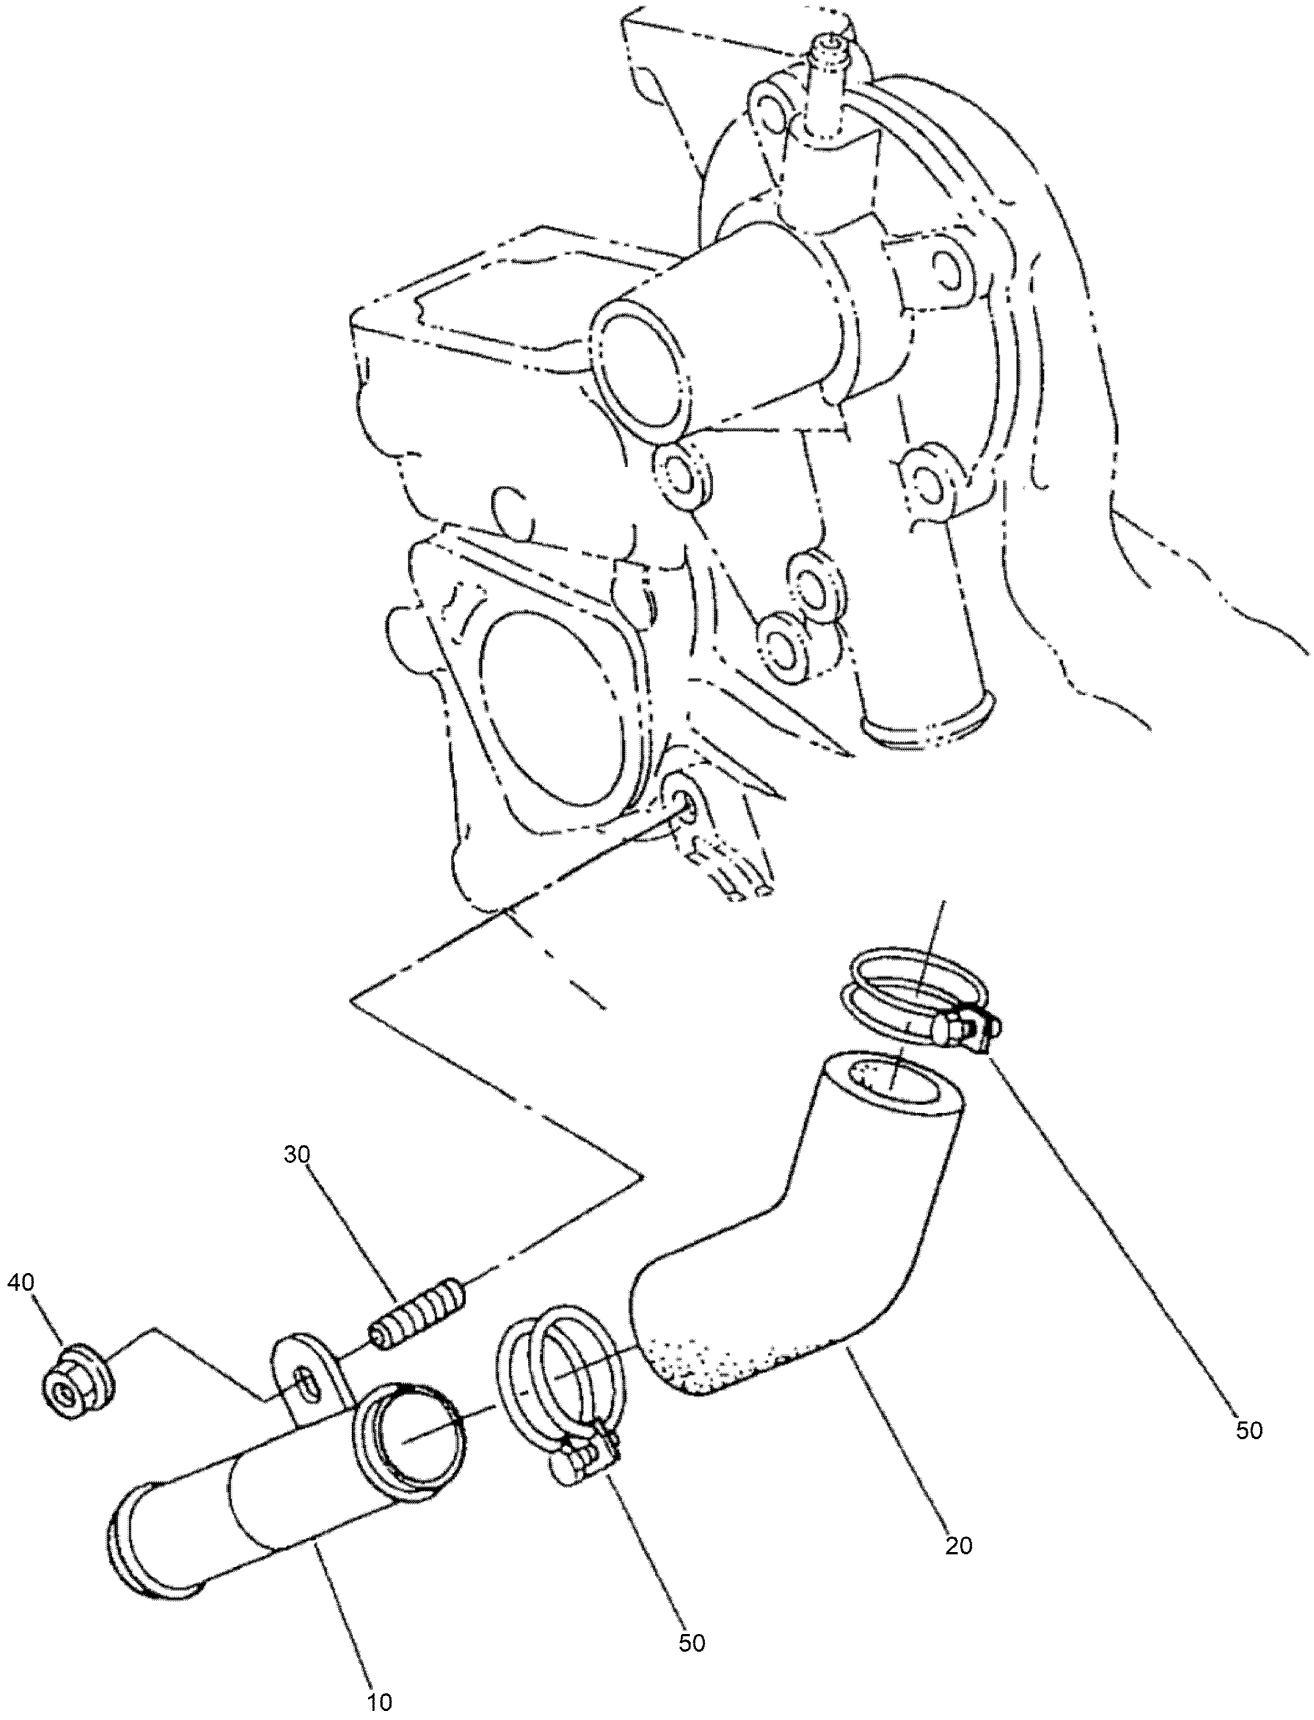

Water Pipe Assembly (continued)

Ref.	Part Number	Qty.	Description
10	100-1918	1	Pipe-Water
20	110-3827	1	Pipe-Water
30	100-1924	1	Stud
40	100-2203	1	Nut-Flange
50	110-3828	2	Band-Pipe


Fan Assembly

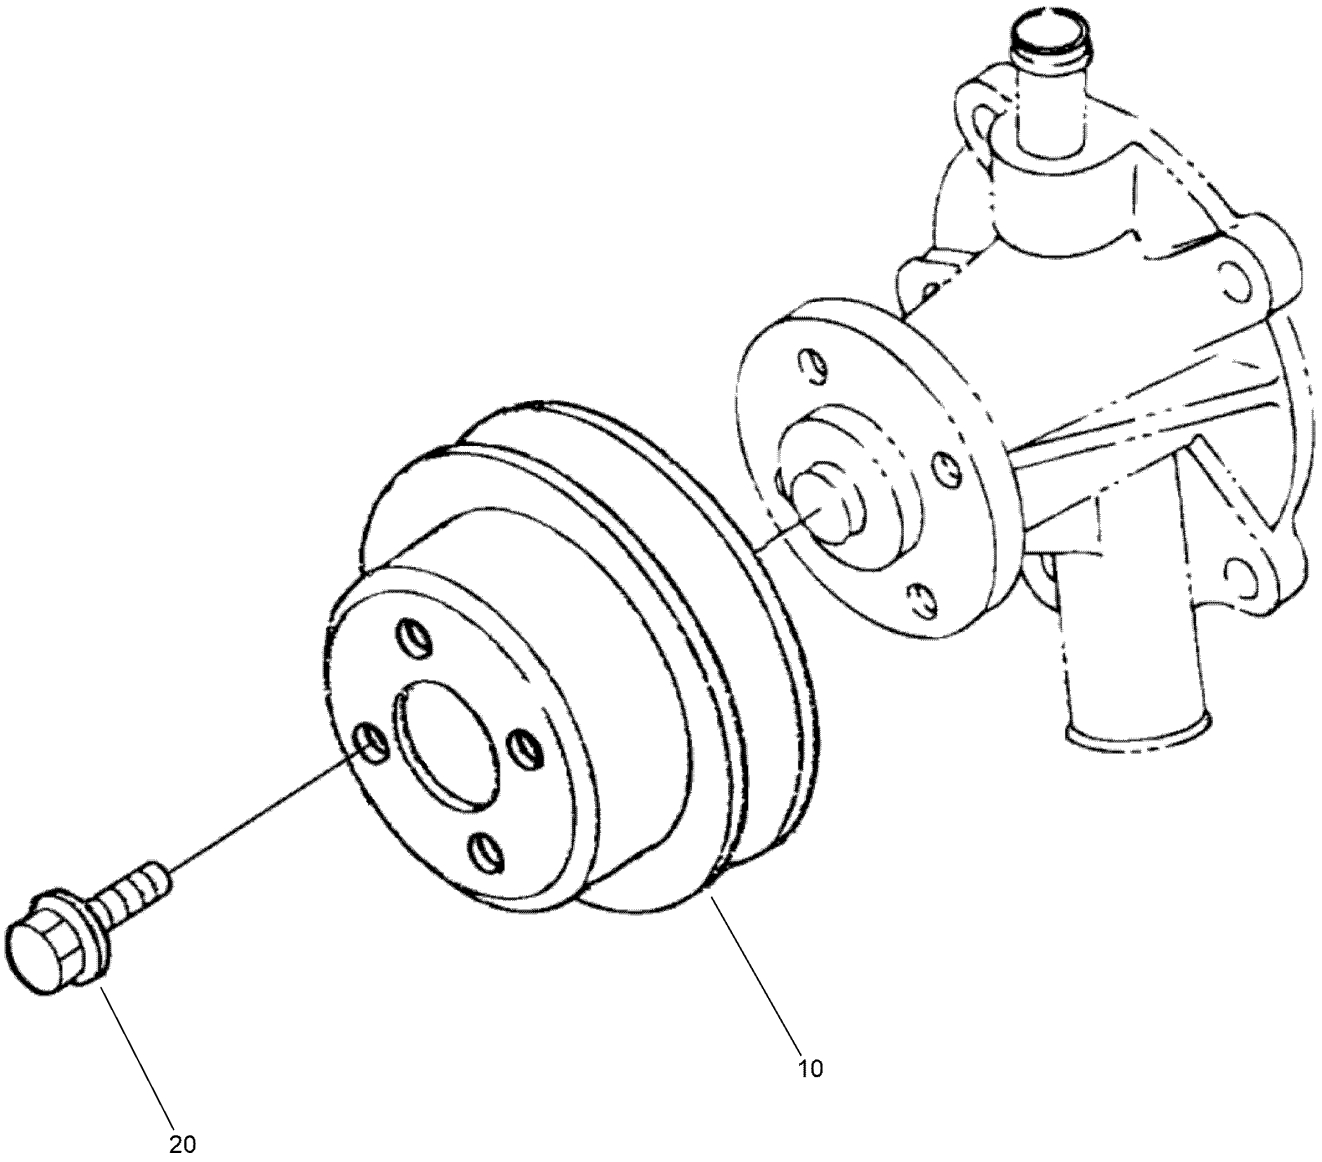

Fan Assembly (continued)

Ref.	Part Number	Qty.	Description
10	100-1921	1	Pulley-Fan
20	99-8363	4	Bolt-Flange


Valve and Rocker Arm Assembly

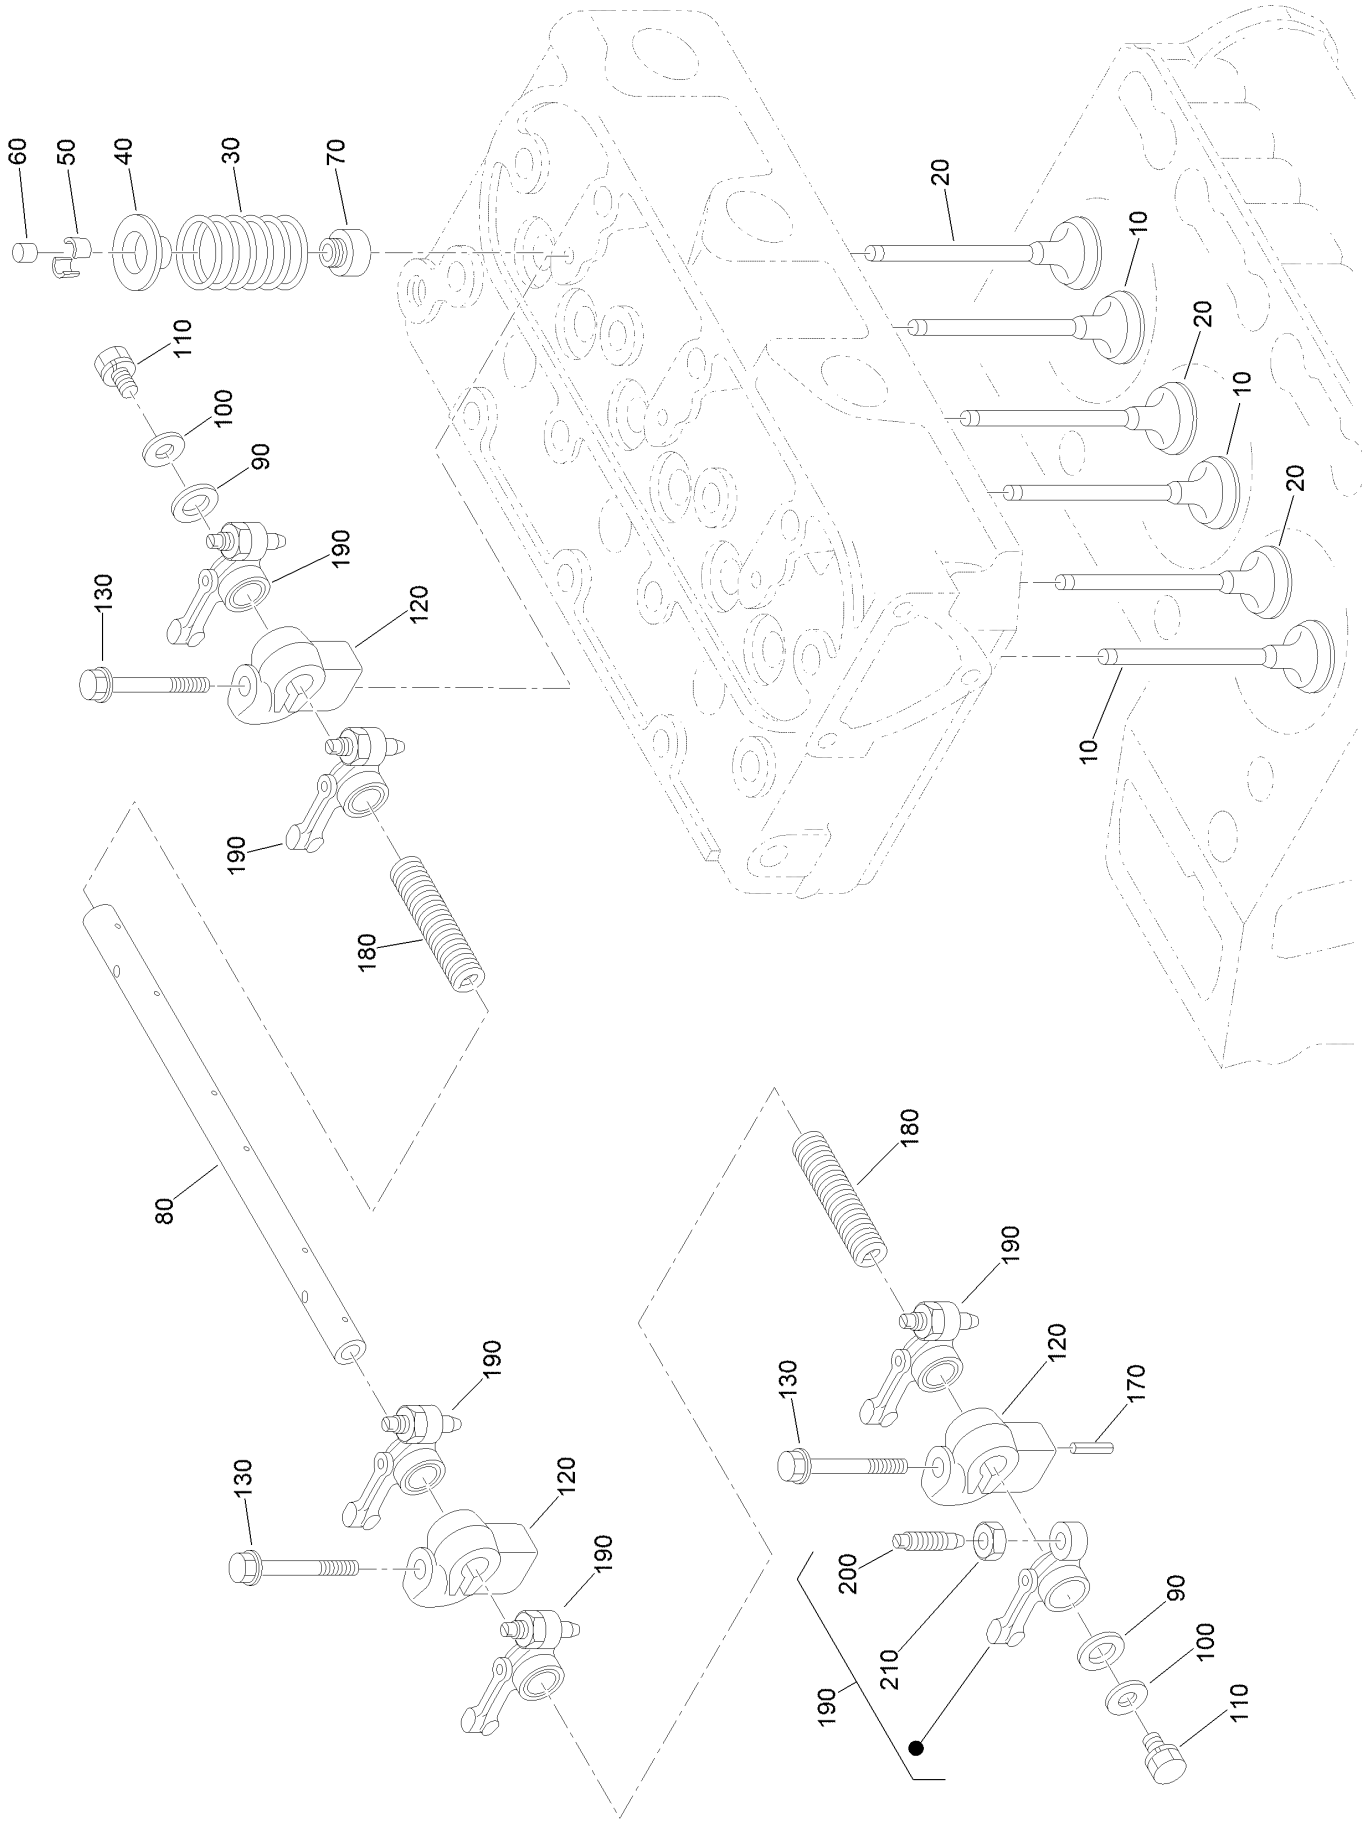

Valve and Rocker Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
10	130-1412	3	Valve-Intake
20	130-1413	3	Valve-Exhaust
30	100-1823	6	Spring-Valve
40	100-1825	6	Retainer-Spring, Valve
50	120-3136	6	Collet-Spring, Valve
60	100-2155	6	Cap-Valve
70	100-1797	6	Seal-Stem, Valve
80	130-1213	1	Shaft-Rocker Arm
90	100-2044	2	Washer
100	110-3832	2	Washer-Plain
110	100-1762	2	Bolt
120	112-2838	3	Bracket-Arm, Rocker
130	110-3834	3	Bolt-Flange
170	98-7602	1	Pin-Spring
180	130-1178	2	Spring-Rocker Arm
190	100-1884	6	Rocker Arm ASM
200	100-1885	6	Screw-Adjusting
210	100-1827	6	Nut


Inlet Manifold Assembly

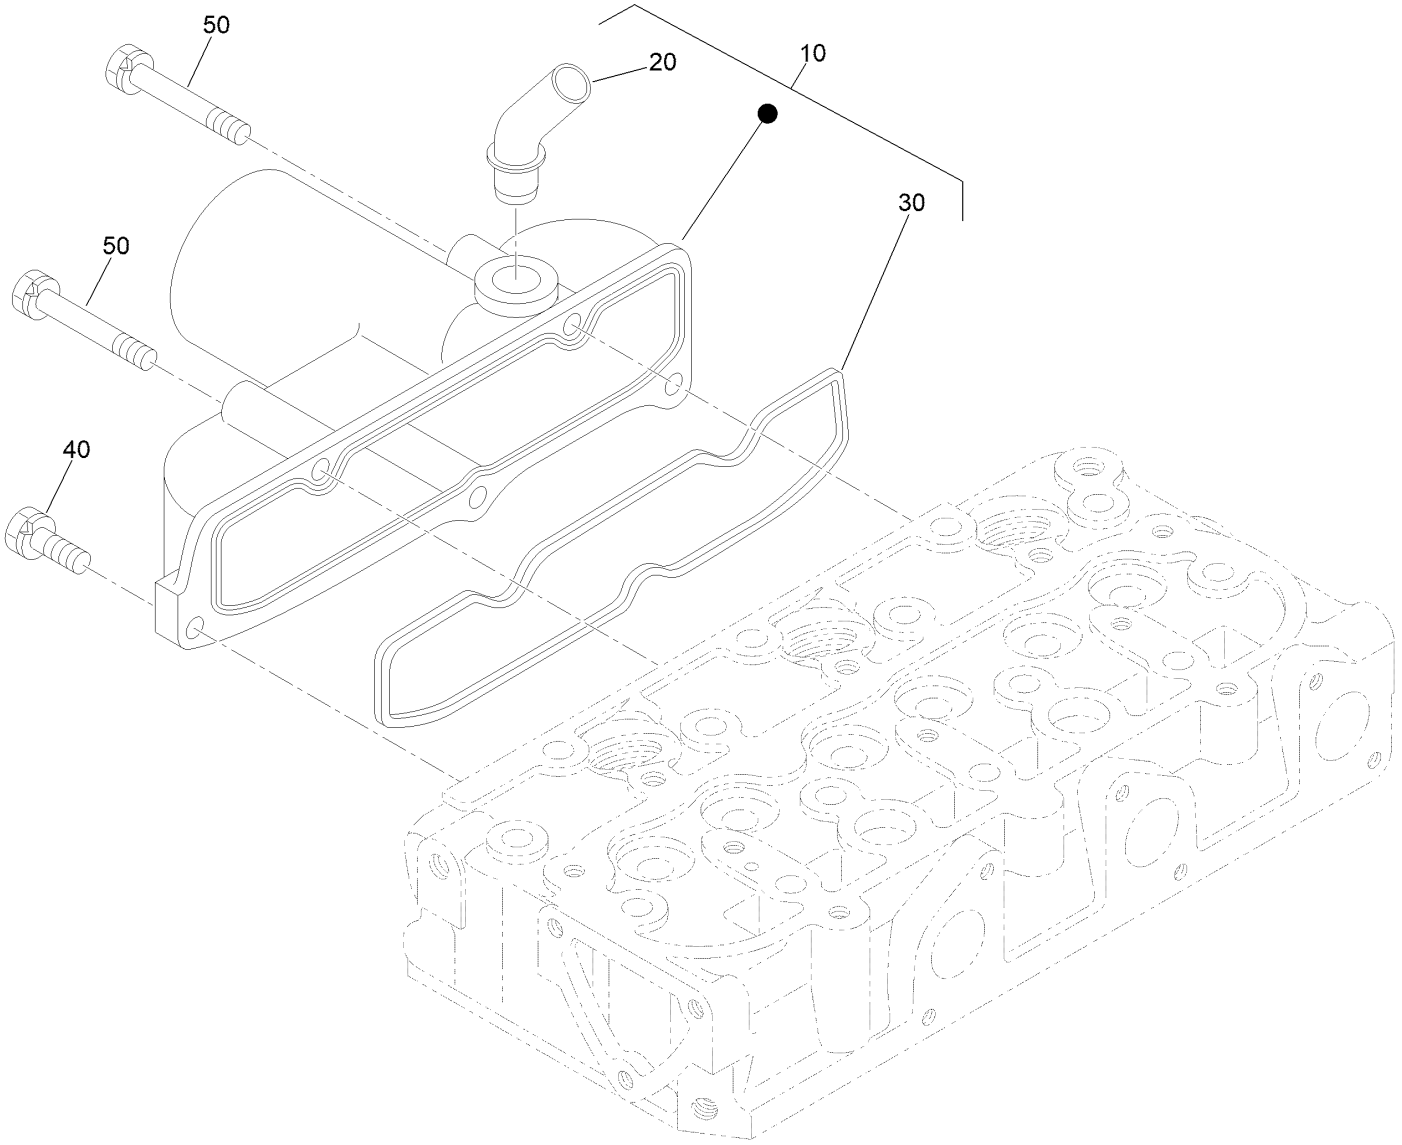

Inlet Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
10	112-2839	1	Intake Manifold ASM
20	110-3837	1	Pipe-Breather
30	100-1937	1	Gasket-Manifold, Intake
40	127-0403	2	Bolt-Flange
50	100-1765	3	Bolt


Exhaust Manifold Assembly

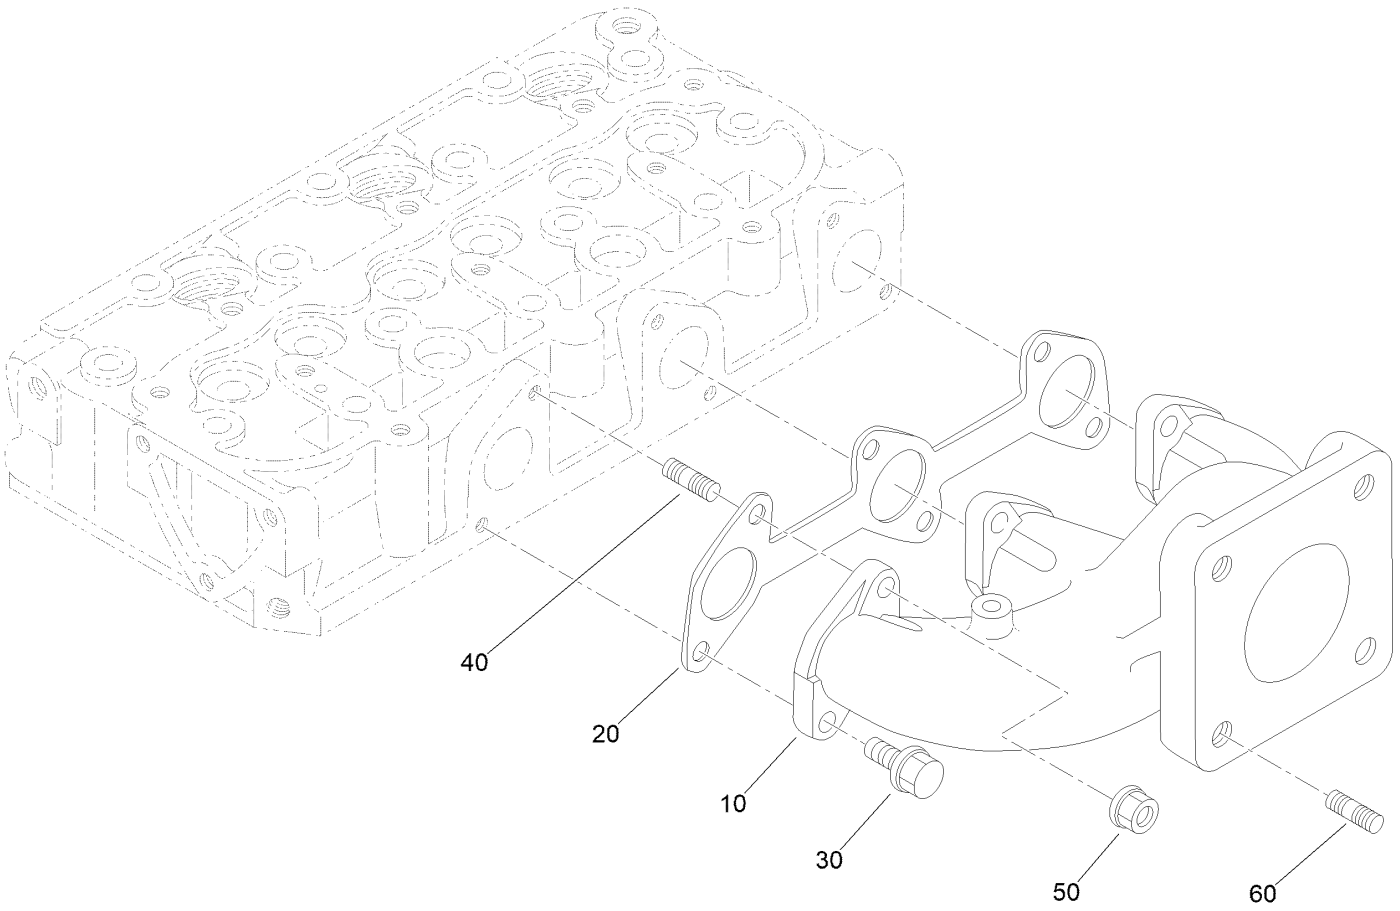

Exhaust Manifold Assembly (continued)

Ref.	Part Number	Qty.	Description
10	134-9713	1	Manifold,Exhaust
20	130-1384	1	Gasket-Manifold, Exhaust
30	134-9714	3	Bolt,Ubs
40	130-1156	3	Bolt-Stud
50	100-1778	3	Nut
60	98-7769	4	Stud


Accessories and Service Parts

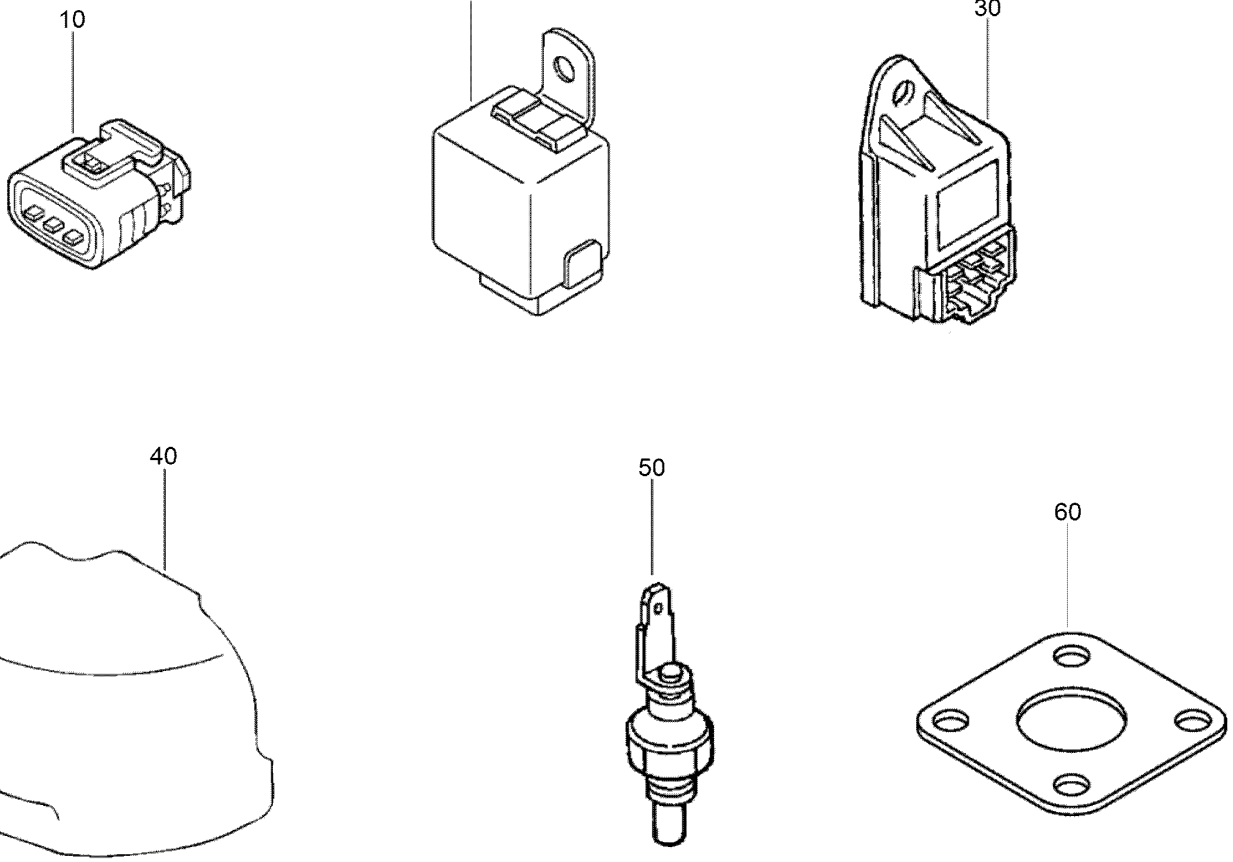

Accessories and Service Parts (continued)

Ref.	Part Number	Qty.	Description
10	130-1291	1	Connector ASM
20	134-9715	1	Timer
30	130-1211	1	Timer-Lamp, Glow
40	112-2517	1	Cover-Heat
50	134-9849	1	Sensor, Coolant-Temp
60	99-8343	1	Gasket-Muffler

Operator Manual and Miscellaneous Engine Parts

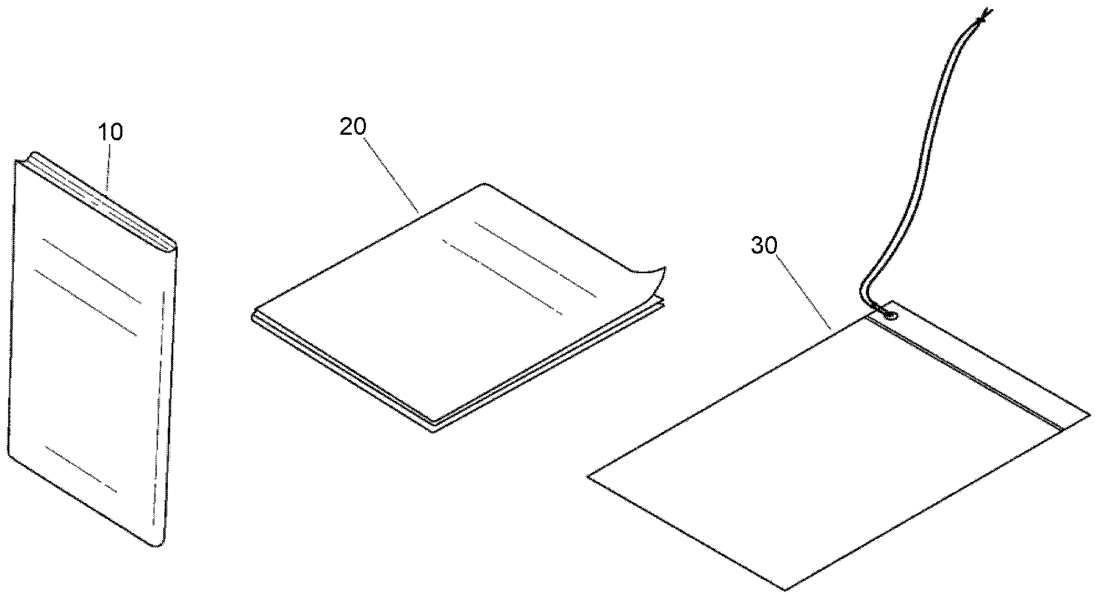

Operator Manual and Miscellaneous Engine Parts (continued)

Ref.	*Part Number*	*Qty.*	*Description*
10	134-9717	1	Manual,Op
20	134-9718	1	Manual,Inst
30	139-9687	1	Bag-Plastic

Attachments and Accessories

For 31040 ProLine H600 Rotary Mower

Product Name	Model/Part
LED Road Light Kit	31046
LED Flashing Beacon Kit	31047
Mulching Kit	31048

Notes:

Notes:

Notes:



Count on it.