Form Number 3350-858

Two-Bearing Conversion Kit

DFS Bagger for 200 Series Z Master®

Model No. 107-7652

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.


PROTOTYPE

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2003
All Rights Reserved

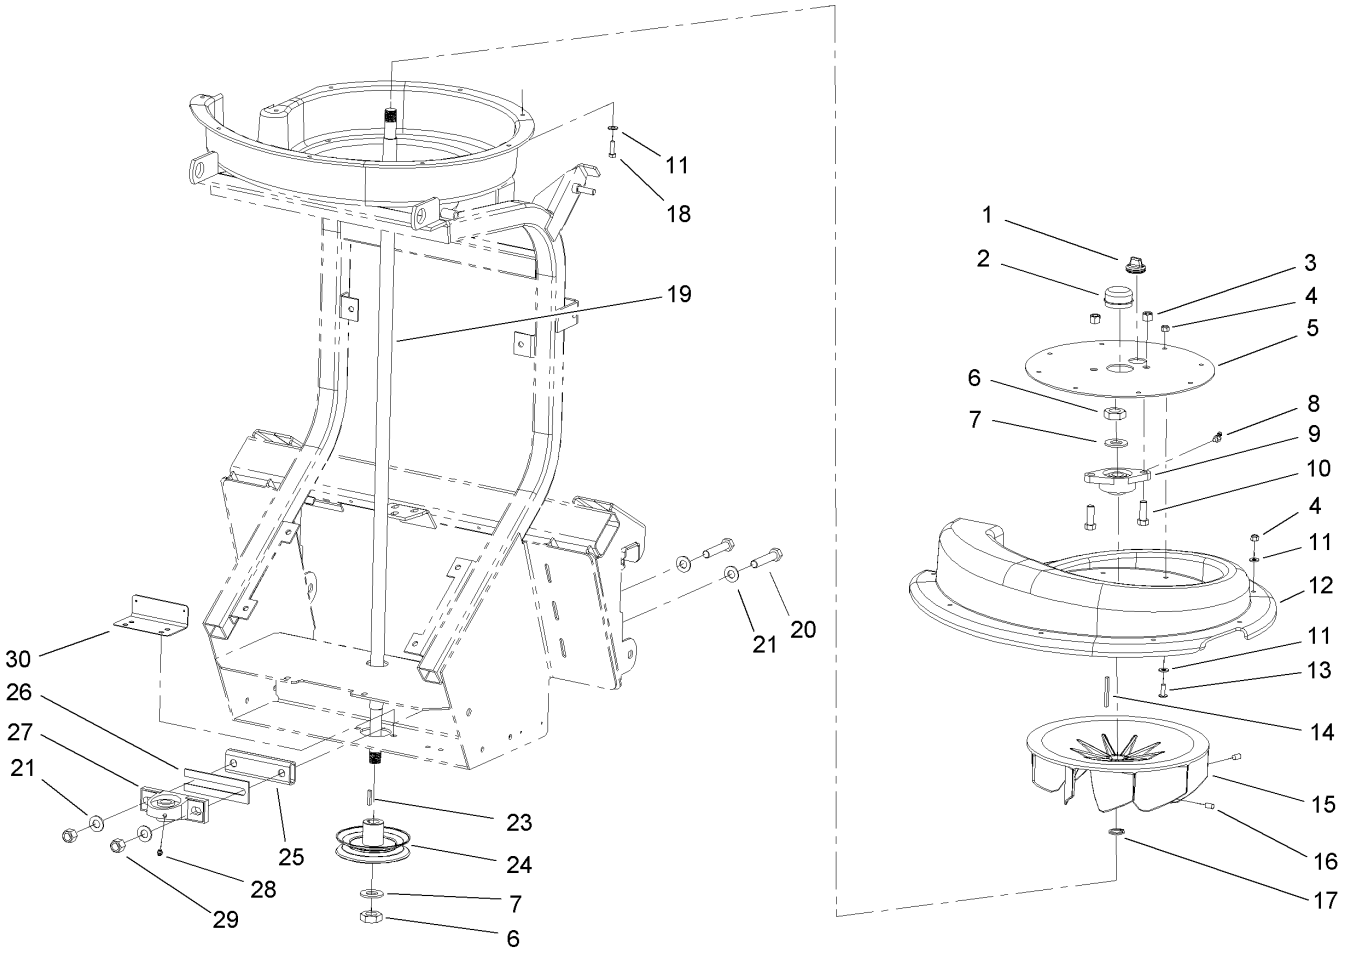

Two-Bearing Conversion Kit Assembly

Ref	Part No.	Qty.	Description
1	105-2438	1	Plug
2	106-7147	1	Cap-Grease
3	3296-48	2	Nut-Lock, NI
4	3296-42	17	Nut-Lock, NI
5	106-7128-03	1	Cover-Scroll
6	32146-20	2	Nut-Jam
7	7-4150	2	Washer
8	302-11	1	Fitting-Lube, 45 DEG
9	106-7126	1	Bearing-Flange
10	324-5	2	Screw-HH
11	3256-22	26	Washer-Flat
12	106-8950	1	Scroll-Top
13	9114604	8	Screw-Truss Head
14	105-9716	1	Key-Square
15	106-8951	1	Fan-Balancing
16	3246-4	2	Screw-Set
17	32151-33	1	Ring-Retaining, Ext
18	321-5	9	Screw-HH
19	106-7149	1	Shaft-Fan
20	325-10	2	Screw-HH
21	3256-26	4	Washer-Flat
23	5-1077	1	Key-Square
24	106-8976	1	Pulley-V
25	107-7653-03	1	Spacer

Ref	Part No.	Qty.	Description
26	106-8964-03	3	Spacer-Bearing (Use As Required To Tension Belt.)
27	106-7119	1	Bearing
28	302-55	1	Fitting-Grease
29	3296-23	2	Nut-Lock, NI
30	107-7654	1	Template, Base Frame

PROTOTYPE