Form Number 3350-902

Foam Marker Kit

For Multi-Pro® 5600 and 5700 Turf Sprayers and Workman® 200 Spray Systems

Model No. 41228 - 2400000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by **6:**1, the valve by **6:**2, and the wheel by **6:**3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y.** The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

PROTOTYPE

©The Toro Company - 2003
All Rights Reserved

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head
WH. . . . . wing head

Contents

Description	Page
Sprayer Tank Assembly	 3
Valve Assembly	 4
Solenoid Valve Assembly	 5
Frame and Compressor Assembly	 6
Electrical Component Assembly	 7


PROTOTYPE

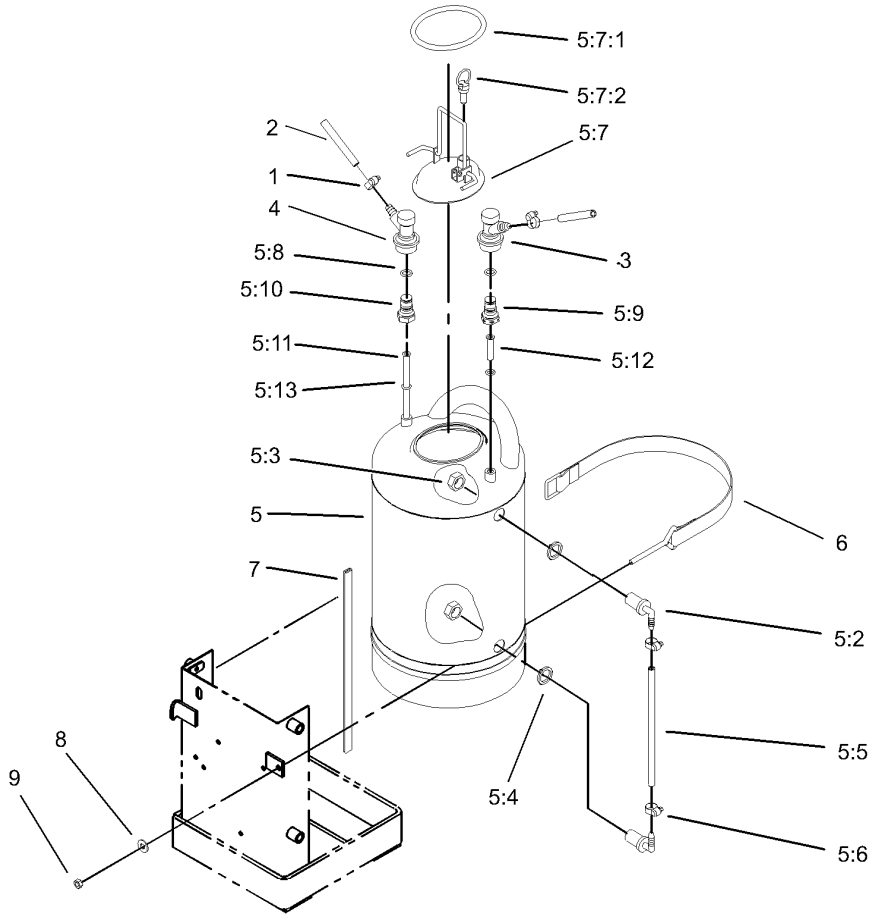

Sprayer Tank Assembly

Ref	Part No.	Qty.	Description
1	2412-108	2	Clamp-Worm
2	94-7258	2	Hose-Clear Vinyl
3	94-7193	1	Connector-Quick
4	94-7194	1	Connector-Quick
5	94-7253	1	Tank ASM
5:2	94-7254	2	Barb-Hose
5:3	94-7255	2	Nut-Fitting
5:4	94-7256	2	Washer
5:5	94-7257	1	Hose-Clear Vinyl
5:6	2412-108	2	Clamp-Worm
5:7	94-8545	1	Lid ASM
5:7:1	94-8544	1	Gasket-Lid
5:7:2	94-8546	1	Valve
5:8	94-8547	2	O-Ring
5:9	94-8548	1	Plug ASM
5:10	94-8549	1	Plug ASM
5:11	94-8550	1	Tube-Inlet
5:12	94-8551	1	Tube-Dip
5:13	94-8552	1	O-Ring
6	762035	1	Strap ASM
7	94-7259	2	Trim
8	3256-2	1	Washer-Flat
9	3296-56	1	Nut-Lock, NI


PROTOTYPE

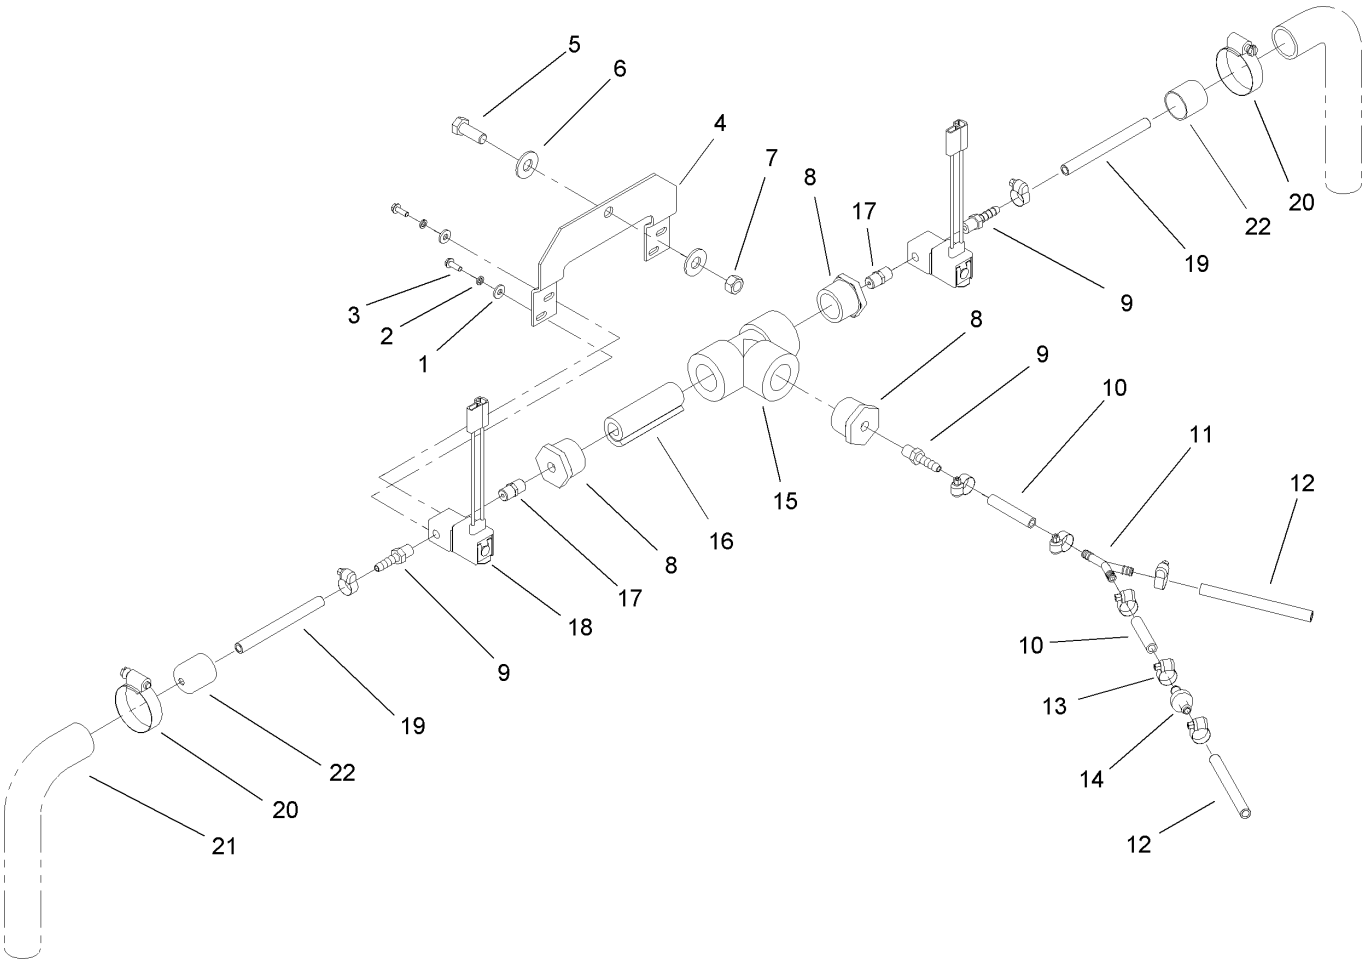

Valve Assembly

Ref	Part No.	Qty.	Description
1	3256-14	4	Washer-Flat
2	3253-17	4	Washer-Lock/sp
3	32144-87	4	Screw-Forming, Thread
4	94-7251	1	Bracket-Mixer
5	323-6	1	Screw-HH
6	3256-4	2	Washer-Flat
7	32153-2	1	Nut-Lock
8	94-7225	3	Plug
9	94-7220	3	Hose-Barb
10	94-7250	2	Hose-Clear Vinyl
11	94-7223	1	Hose-Barb
12	94-7247	2	Hose-Clear Vinyl
13	2412-108	8	Clamp-Worm
14	94-7196	1	Valve
15	41305	1	Tee
16	94-7227	1	Filter
17	94-7224	2	Nipple
18	94-7191	2	Solenoid Valve ASM
19	94-7248	2	Hose-Clear Vinyl
20	2412-111	2	Clamp
21	93-0611	2	Extension-Hose
22	94-7195	2	Cap


PROTOTYPE

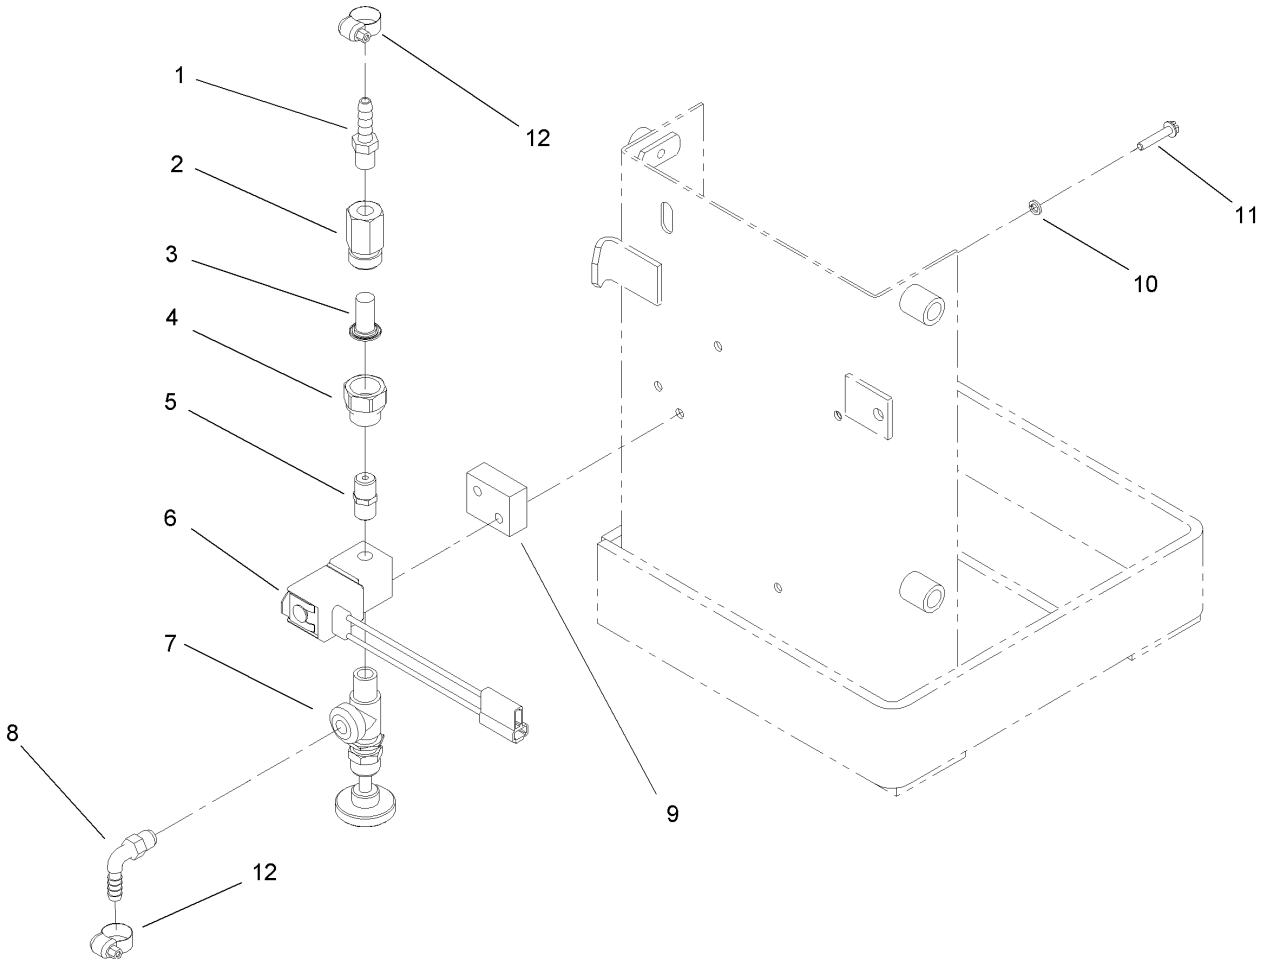

Solenoid Valve Assembly

Ref	Part No.	Qty.	Description
1	94-7220	1	Hose-Barb
2	94-7229	1	Body-Nozzle
3	94-7228	1	Strainer
4	94-7230	1	Adapter-Nozzle
5	94-7224	1	Nipple
6	94-7191	1	Solenoid Valve ASM
7	94-7226	1	Valve
8	94-7222	1	Barb-Hose
9	94-7269	1	Spacer-Valve
10	3253-17	2	Washer-Lock/sp
11	32105-29	2	Screw-SHWH
12	2412-108	2	Clamp-Worm

PROTOTYPE

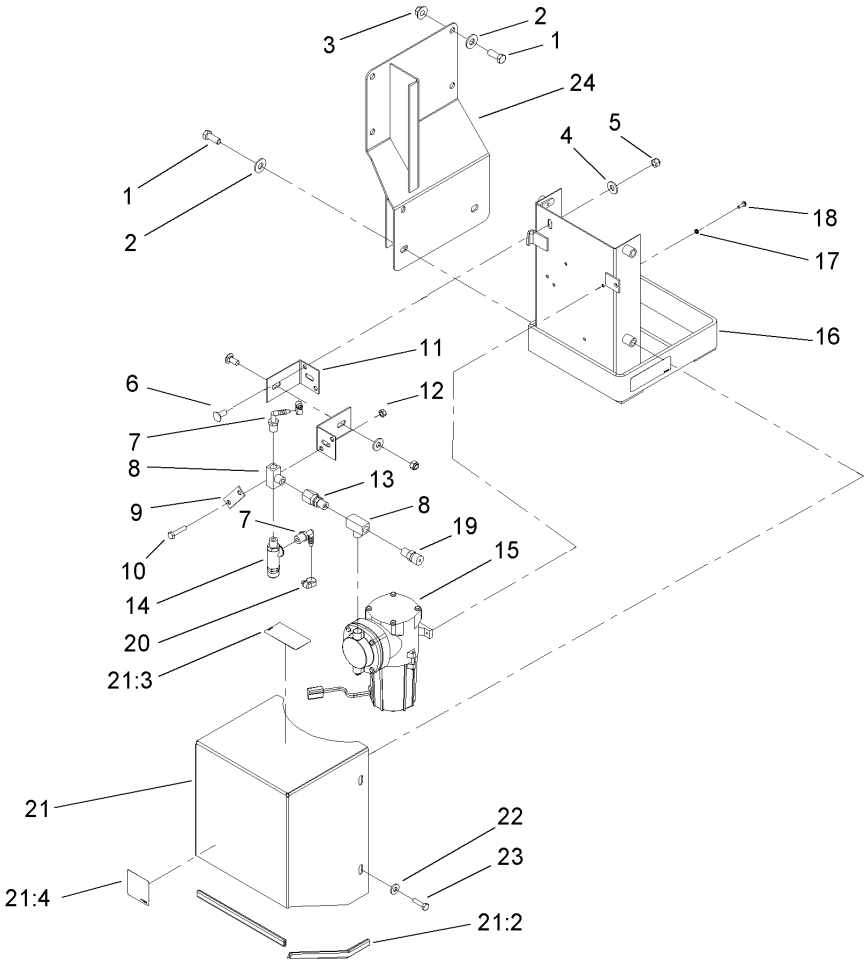


Frame and Compressor Assembly

Ref	Part No.	Qty.	Description
1	323-6	4	Screw-HH
2	3256-4	4	Washer-Flat
3	32128-43	2	Nut-Flange
4	3256-3	2	Washer-Flat
5	3296-29	2	Nut-Lock, NI
6	3230-23	2	Screw-CARR
7	94-7221	2	Barb-Hose
8	94-7219	2	Fitting-Tee
9	94-7268	1	Strap-Support
10	321-8	2	Screw-HH
11	94-7267-03	2	Bracket-Support
12	3296-56	2	Nut-Lock, NI
13	94-7199	1	Valve-Inline Check
14	94-7198	1	Valve-Side Outlet Relief
15	94-7200	1	Compressor ASM
16	94-7260-03	1	Tank Bracket ASM
17	3253-17	3	Washer-Lock/sp
18	32144-87	3	Screw-Forming, Thread
19	94-7197	1	Valve-Relief
20	2412-108	2	Clamp-Worm
21	106-1044	1	Cover ASM
21:2	106-1043	3	Trim-Strip
21:3	94-7275	1	Decal-Relief Valve
21:4	94-7287	1	Decal-Adjustment Valve

Ref	Part No.	Qty.	Description
22	3256-2	4	Washer-Flat
23	321-6	4	Screw-HH
24	106-1296-03	1	Foam Marker Bracket ASM

PROTOTYPE

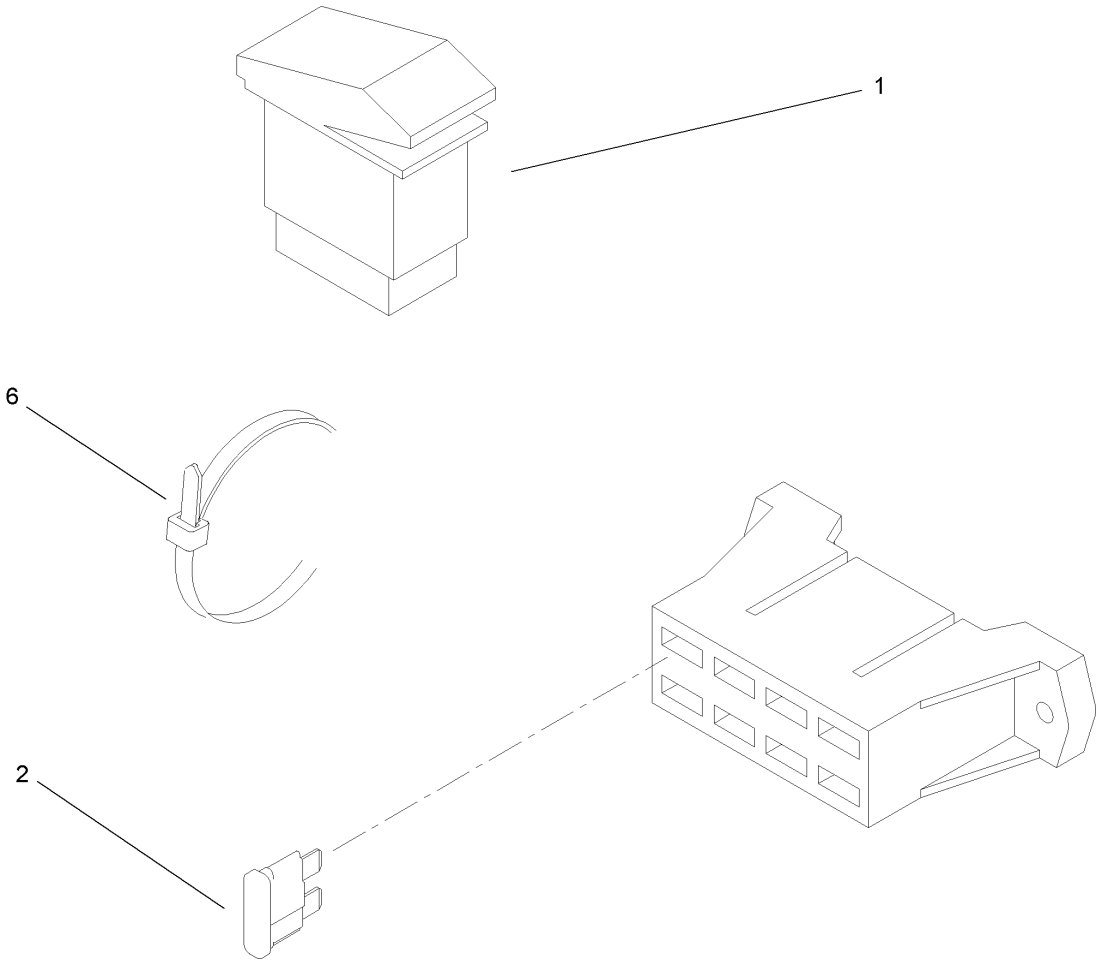

Electrical Component Assembly

Ref	Part No.	Qty.	Description
1	95-8999	2	Switch
2	109355	1	Fuse-15 Amp
6	3290-379	13	Tie-Cable

PROTOTYPE



PROTOTYPE