Form No. 3378-540 Rev E

TORO®

Count on it.

Parts Catalog

# Sand Pro® 2040Z Traction Unit

**Model No. 08706—Serial No. 314000001 and Up**

**Model No. 08706TC—Serial No. 314000001 and Up**

Register at www.Toro.com.
Original Instructions (EN)

CE

*3378-540* E

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Main Frame Assembly . . . . . 4
Tire and Caster Assembly . . . . . 5
Engine and Transmission Assembly . . . . . 6
LH Transmission Assembly No. 127-4142 . . . . . 8
RH Transmission Assembly No. 127-4141 . . . . . 10
Pump Idler Assembly No. 116-1255 . . . . . 12
Exhaust Assembly . . . . . 13
Fuel Tank and Emissions Recovery Assembly . . . . . 14
Engine Controls and Console Assembly . . . . . 15
Seat Assembly . . . . . 16
Seat Assembly No. 120-7886 . . . . . 17
Motion Control Assembly . . . . . 18
Brake Installation Assembly . . . . . 20
Lift Valve Installation Assembly . . . . . 21
Hydraulic Cylinder Assembly No. 125-6466 . . . . . 22
ROPS System Assembly . . . . . 23
Battery and Electrical System Assembly . . . . . 24
Hydraulic Tank Assembly . . . . . 26
Hydraulic Manifold Assembly No. 127-7858 . . . . . 28
Attachments and Accessories . . . . . 29

**© 2025—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**



**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

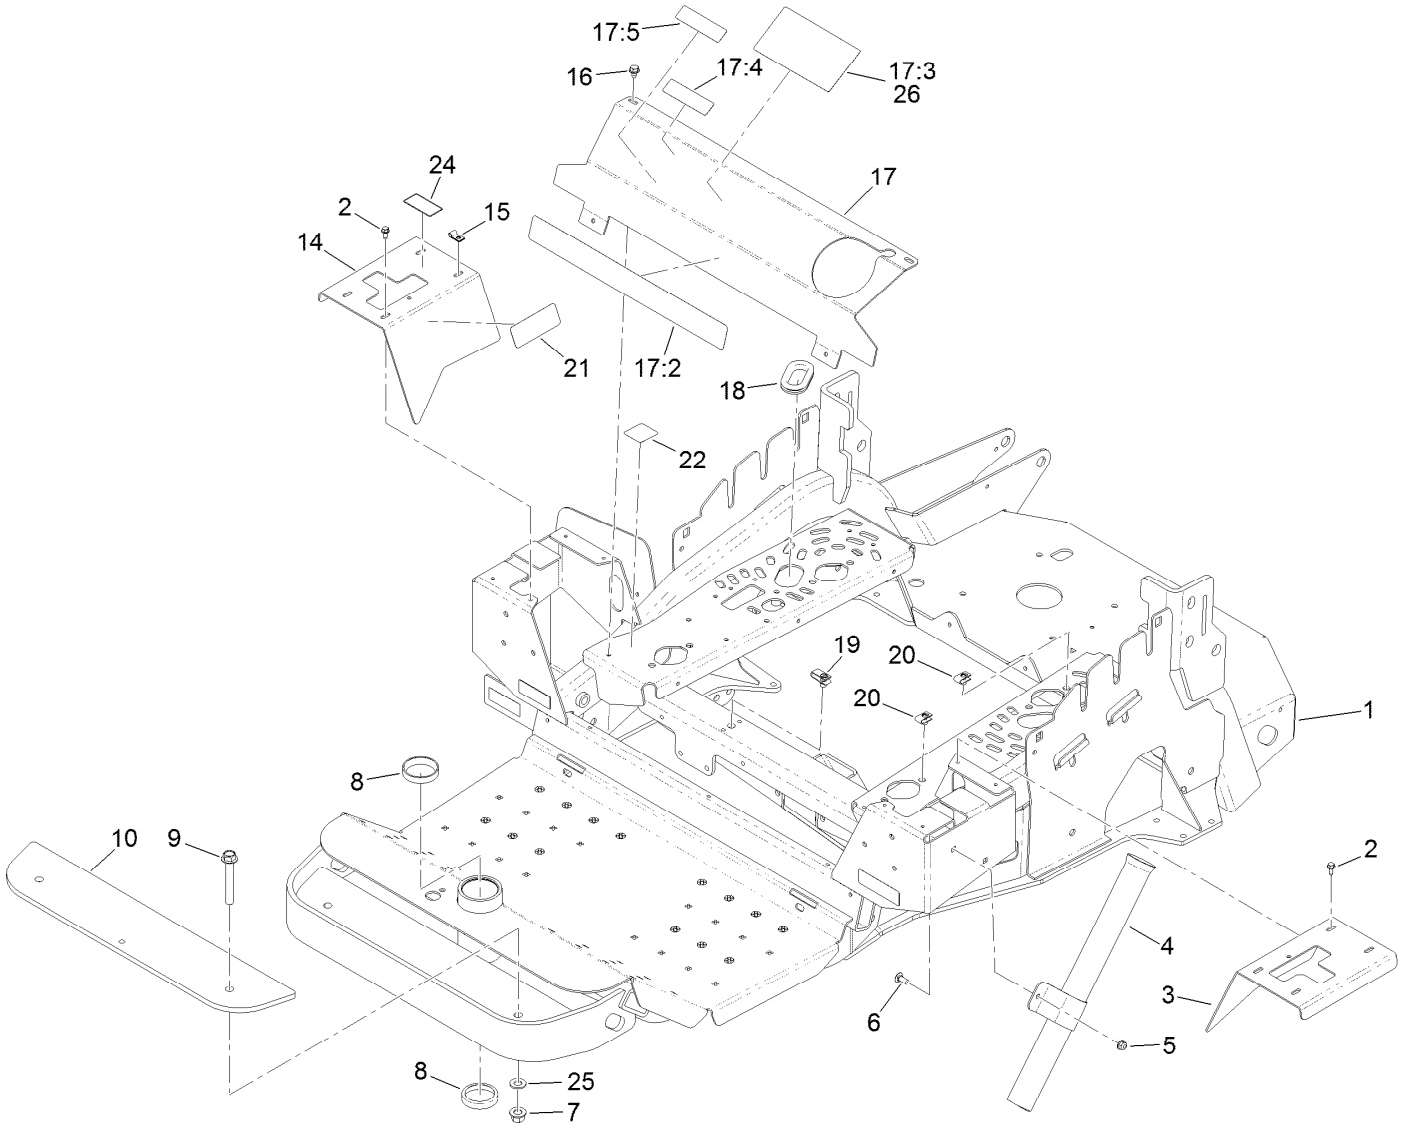


# Main Frame Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 125-2380-01 | 1 | Frame |
| 2 | 32144-10 | 8 | Screw-HWH |
| 3 | 125-2409-03 | 1 | Cover-Control, LH |
| 4 | 127-0353-03 | 1 | Holder-Rake |
| 5 | 104-8300 | 2 | Nut-HF, NI |
| 6 | 3230-23 | 2 | Bolt-CARR |
| 7 | 99-5107 | 2 | Nut-HF Nylock |
| 8 | 254-107 | 2 | Cup-Bearing, Tapered |
| 9 | 114-8419 | 2 | Screw-HHF |
| 10 | 125-5133-03 | 4 | Bumper-Weight |
| 14 | 125-2410-03 | 1 | Cover-Control, RH |
| 15 | 2412-72 | 1 | Clip-Closed, Insulated |
| 16 | 9266934 | 4 | Screw |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 17 | 127-7888 | 1 | Front Cover ASM |
| 17:2 | 127-4149 | 1 | Decal-Sand Pro 2040Z |
| 17:3 | 127-0363 | 1 | Decal-Danger |
| 17:4 | 117-2718 | 1 | Decal-Arrester, Spark |
| 17:5 | 127-7868 | 1 | Decal-Attachment Warning |
| 18 | 240-12 | 2 | Grommet-Rubber |
| 19 | 127-8408 | 2 | Nut-U |
| 20 | 115-7721 | 4 | Nut-Clip, U |
| 21 | 109-7232 | 2 | Decal-Motion Control |
| 22 | 116-5944 | 1 | Decal-Park Brake |
| 24 | 127-0365 | 1 | Decal-Attachment Control |
| 25 | 3256-26 | 2 | Washer-Flat |
| 26 | 130-1851 | 1 | Decal-Danger, CE |

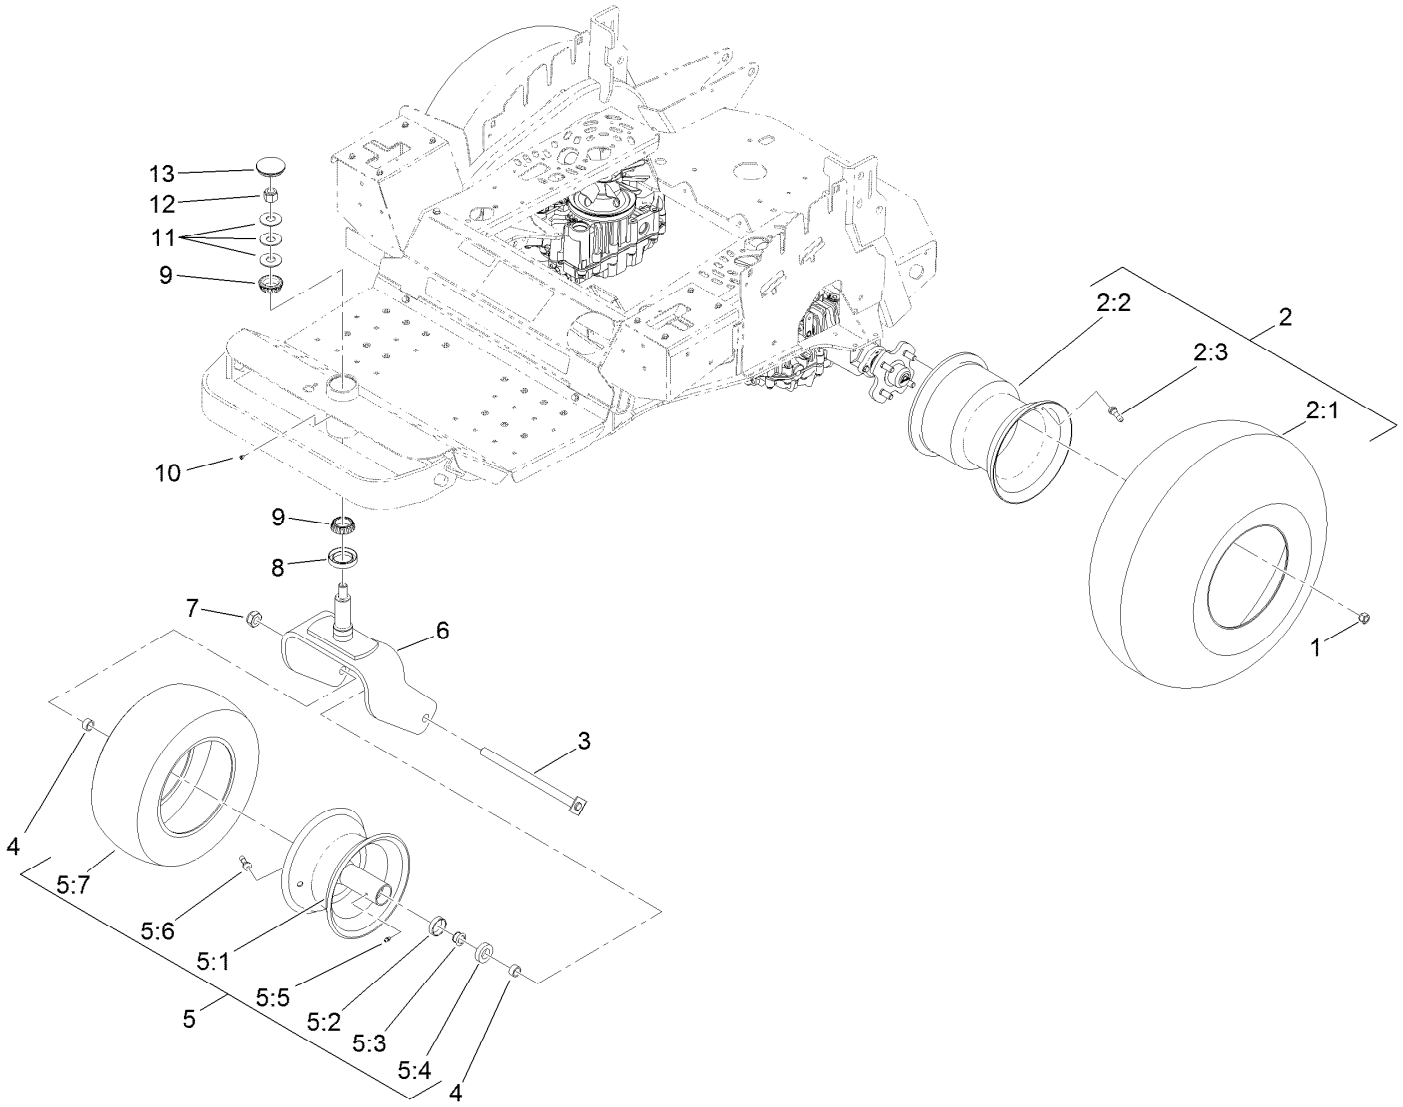


# Tire and Caster Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 242-50 | 8 | Nut-Lug |
| 2 | 121-8069 | 2 | Tire ASM |
| 2:1 | 125-6465 | 1 | Tire |
| 2:2 | 125-6464 | 1 | Rim |
| 2:3 | 232-27 | 1 | Stem-Valve |
| 3 | 5-3934 | 1 | Bolt-Caster |
| 4 | 74-3730 | 2 | Spacer-Spindle, Rear |
| 5 | 125-2406 | 1 | Tire ASM |
| 5:1 | 125-6405 | 1 | Rim ASM |
| 5:2 | 254-79 | 2 | Bearing-Roller, Cup |
| 5:3 | 254-78 | 2 | Bearing-Cone |
| 5:4 | 253-111 | 2 | Seal-Oil |
| 5:5 | 302-5 | 1 | Fitting-Grease |
| 5:6 | 232-27 | 1 | Stem-Valve |
| 5:7 | 125-6406 | 1 | Tire |
| 6 | 125-2382-01 | 1 | Caster |
| 7 | 3296-67 | 1 | Nut-Lock, NI |
| 8 | 69-2980 | 1 | Seal |
| 9 | 254-106 | 2 | Cone-Bearing, Tapered |
| 10 | 1-811010 | 1 | Plug |
| 11 | 108-9957 | 3 | Washer-Belleville |
| 12 | 3296-51 | 1 | Nut-Lock, NI |
| 13 | 108-9950 | 1 | Cap-Grease |

# Engine and Transmission Assembly

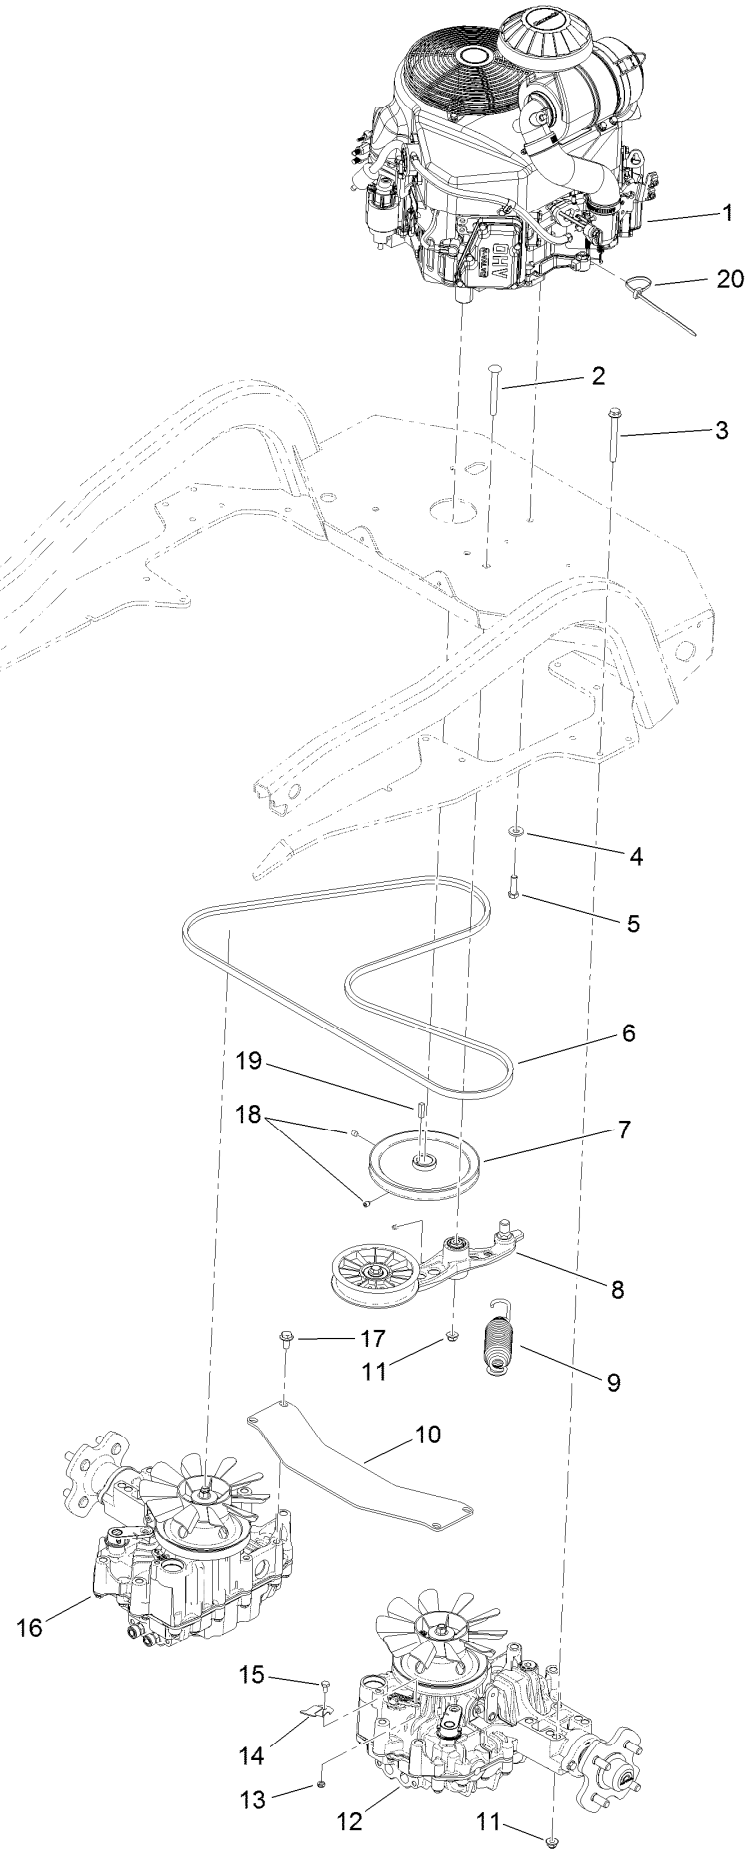

# Engine and Transmission Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Engine-Kawasaki, Fx481 ■● |
| 2 | 3231-41 | 1 | Bolt-Carriage |
| 3 | 116-4701 | 16 | Screw-HHF |
| 4 | 98-5975 | 4 | Washer-Belleville |
| 5 | 323-7 | 4 | Screw-HH |
| 6 | 120-5772 | 1 | Belt-V |
| 7 | 120-5779 | 1 | Pulley |
| 8 | 116-1255 | 1 | Pump Idler ASM |
| 9 | 127-0351 | 1 | Spring-Extension |
| 10 | 125-2435-03 | 1 | Crossmember-Hydro |
| 11 | 104-8301 | 17 | Nut-HF, NI |
| 12 | 127-4142 | 1 | LH Transmission ASM |
| 13 | 3296-56 | 2 | Nut-Lock, NI |
| 14 | 127-0390 | 2 | Lever-Valve, Tow |
| 15 | 321-2 | 2 | Screw-HH |
| 16 | 127-4141 | 1 | RH Transmission ASM |
| 17 | 93-2569 | 4 | Screw-HHF |
| 18 | 3246-3 | 2 | Screw-HSH |
| 19 | 1-807259 | 1 | Key |
| 20 | 3290-378 | 1 | Tie-Cable |

● Not serviced separately

■ Obtain parts from www.kawpower.com

# LH Transmission Assembly No. 127-4142

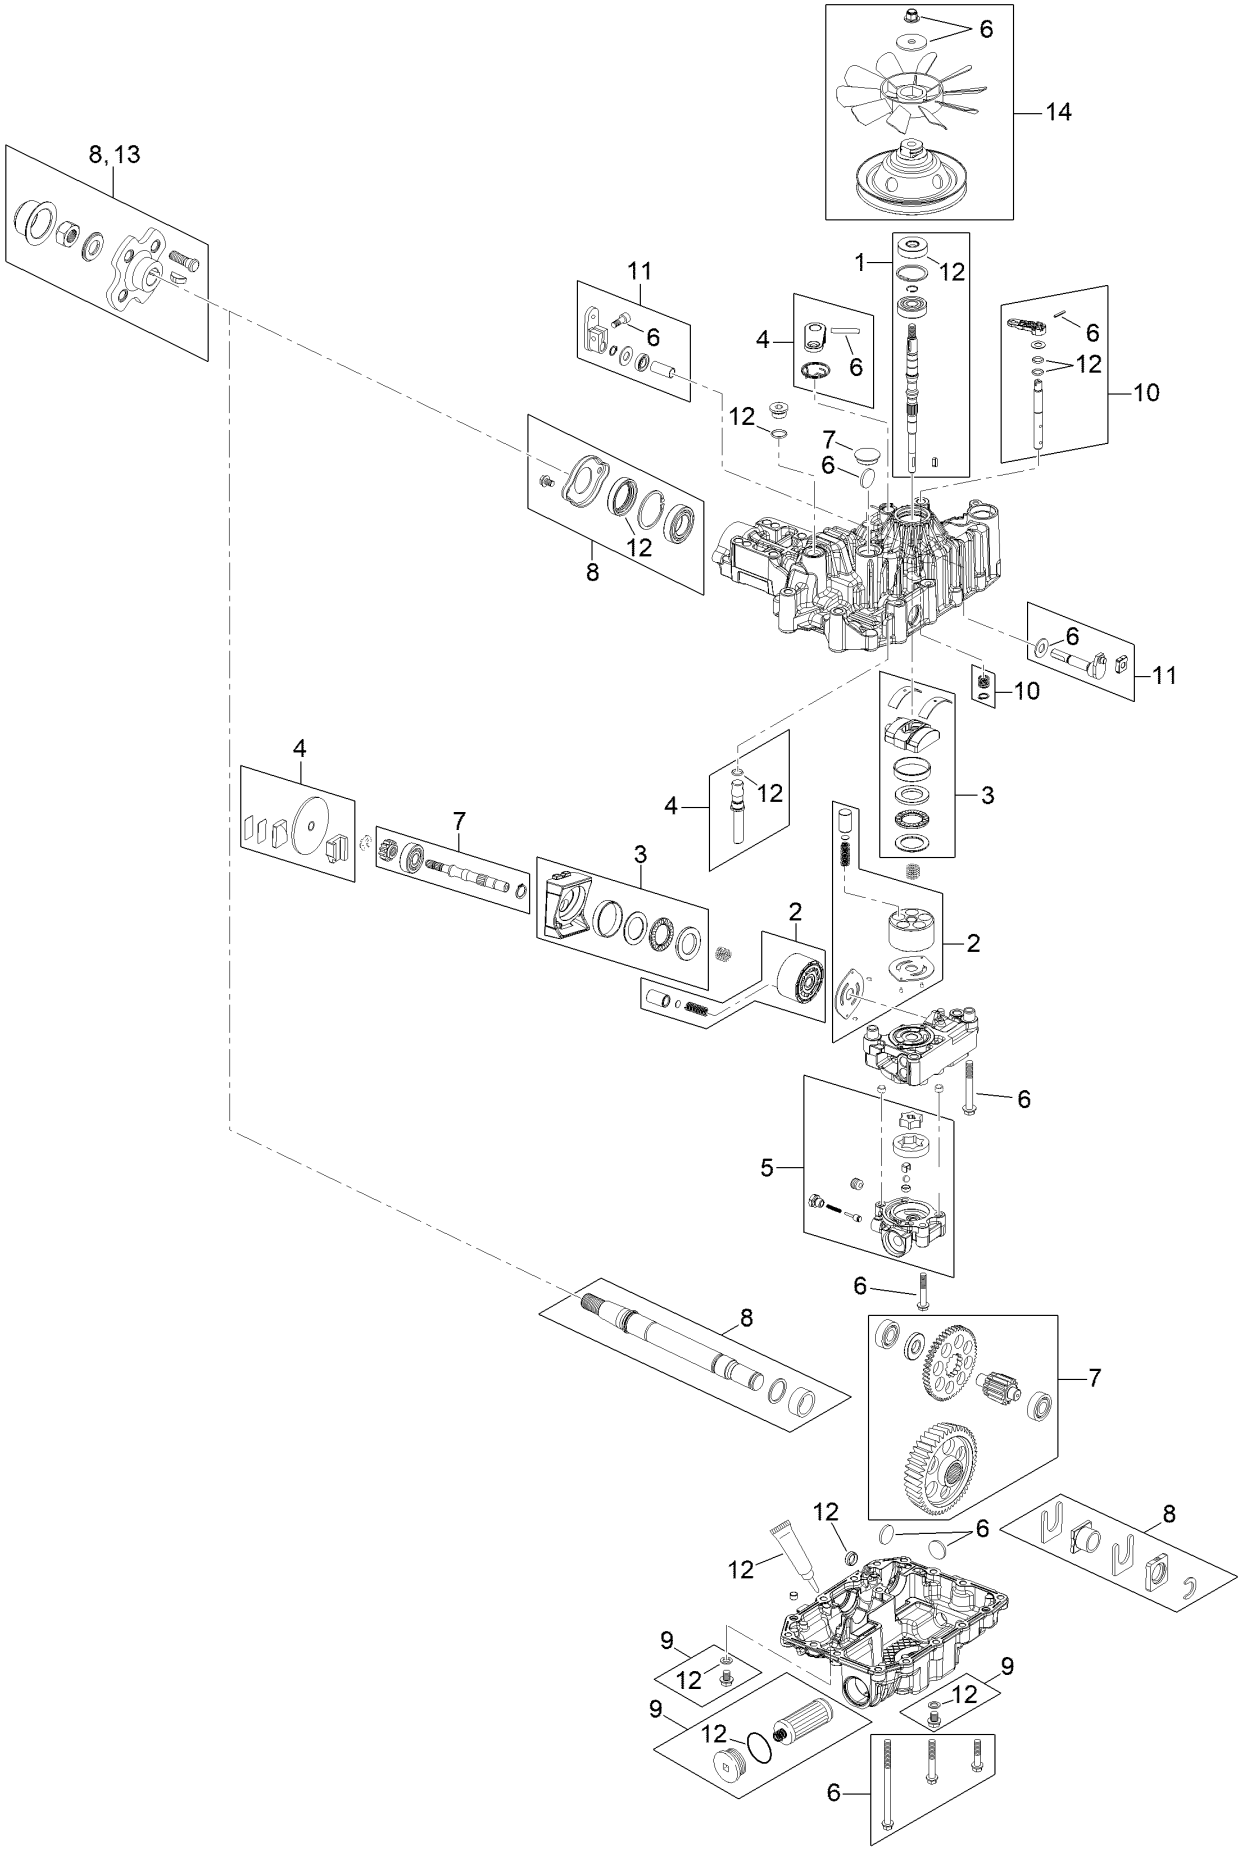

# LH Transmission Assembly No. 127-4142 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-0372 | 1 | Input Shaft Kit |
| 2 | 127-0373 | 1 | Pump/Motor Kit |
| 3 | 127-0374 | 1 | Thrust Bearing Kit |
| 4 | 130-2607 | 1 | Left Brake Kit |
| 5 | 127-0376 | 1 | LH Charge Pump Kit |
| 6 | 127-0378 | 1 | Fastener Kit |
| 7 | 127-0379 | 1 | Drive Gear Kit |
| 8 | 127-0380 | 1 | Axle Kit |
| 9 | 127-0381 | 1 | Inner Filter Kit |
| 10 | 127-0383 | 1 | Bypass Valve Kit |
| 11 | 127-0384 | 1 | LH Trunion Kit |
| 12 | 127-0386 | 1 | Seal Kit |
| 13 | 127-0387 | 1 | Axle Hub Kit |
| 14 | 127-0388 | 1 | Pulley/Fan Kit |

# RH Transmission Assembly No. 127-4141

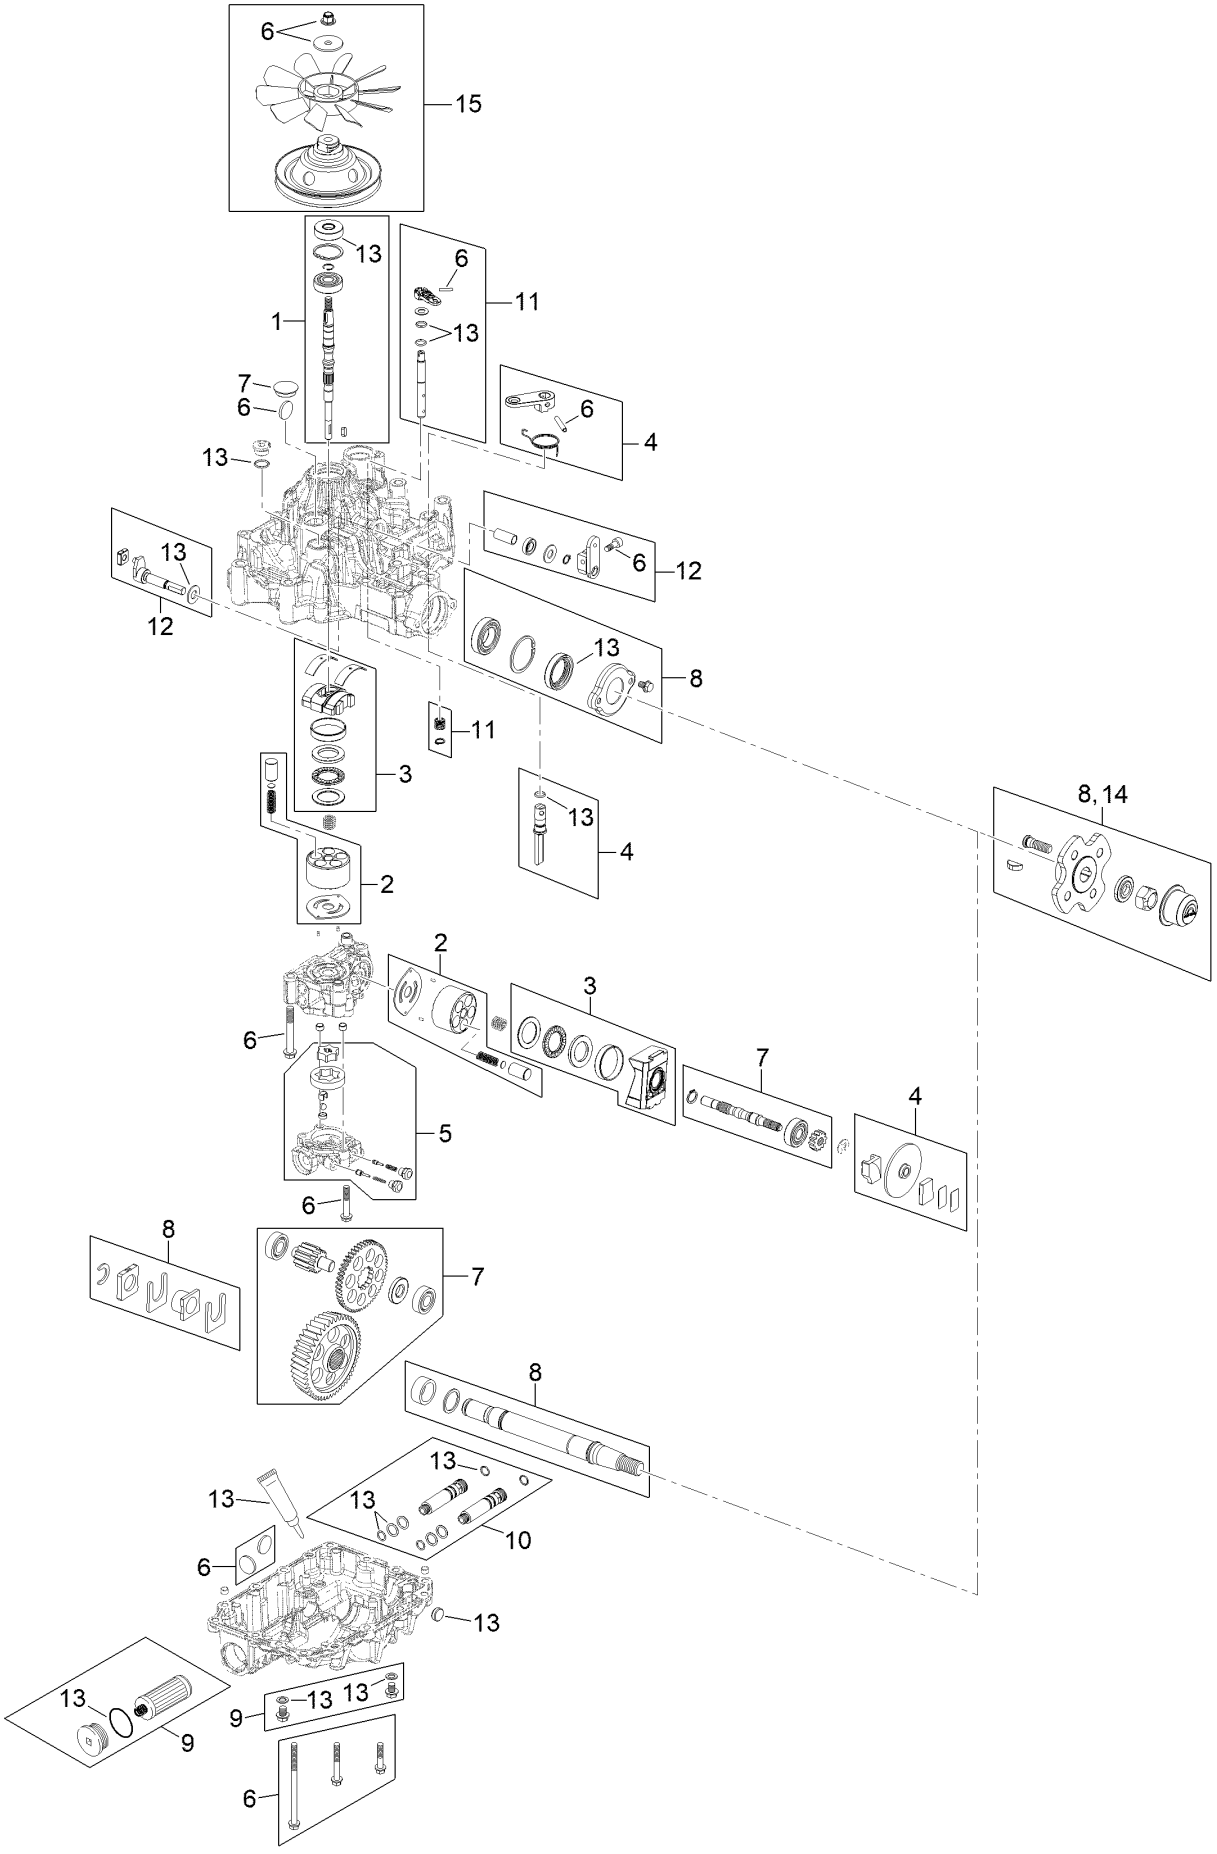

# RH Transmission Assembly No. 127-4141 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-0372 | 1 | Input Shaft Kit |
| 2 | 127-0373 | 1 | Pump/Motor Kit |
| 3 | 127-0374 | 1 | Thrust Bearing Kit |
| 4 | 127-0375 | 1 | Right Brake Kit |
| 5 | 127-0377 | 1 | RH Charge Pump Kit |
| 6 | 127-0378 | 1 | Fastener Kit |
| 7 | 127-0379 | 1 | Drive Gear Kit |
| 8 | 127-0380 | 1 | Axle Kit |
| 9 | 127-0381 | 1 | Inner Filter Kit |
| 10 | 127-0382 | 1 | Auxiliary Port Kit |
| 11 | 127-0383 | 1 | Bypass Valve Kit |
| 12 | 127-0385 | 1 | RH Trunion Kit |
| 13 | 127-0386 | 1 | Seal Kit |
| 14 | 127-0387 | 1 | Axle Hub Kit |
| 15 | 127-0388 | 1 | Pulley/Fan Kit |

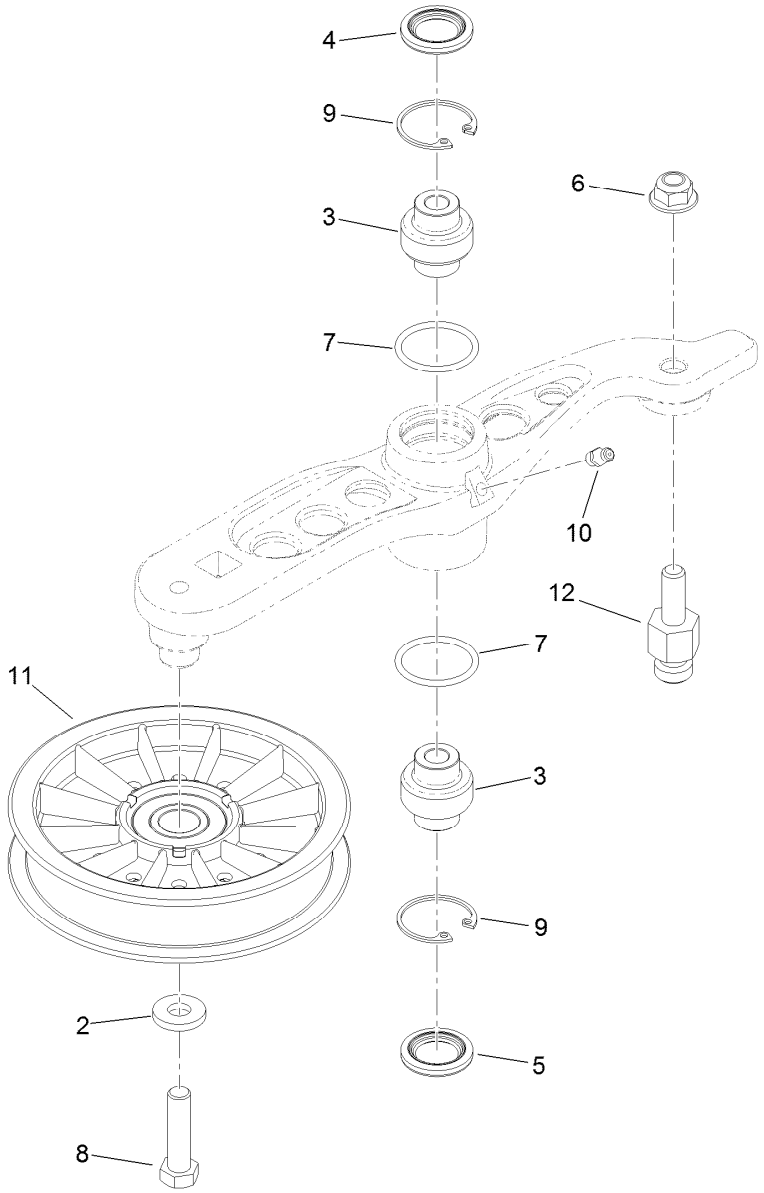


# Pump Idler Assembly No. 116-1255

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 2 | 43-0940 | 1 | Spacer |
| 3 | 103-3504 | 2 | Bearing-Spherical |
| 4 | 103-3505 | 1 | Seal-Lip, Double |
| 5 | 103-3506 | 1 | Seal-Lip, Single |
| 6 | 109-6658 | 1 | Nut-Flange, NI |
| 7 | 106-7159 | 2 | O-Ring |
| 8 | 323-8 | 1 | Screw-HH |
| 9 | 32120-10 | 2 | Ring-Snap |
| 10 | 302-19 | 1 | Fitting-Grease |
| 11 | 109-8076 | 1 | Pulley-Idler |
| 12 | 116-3467 | 1 | Pin-Spring, Anchor |

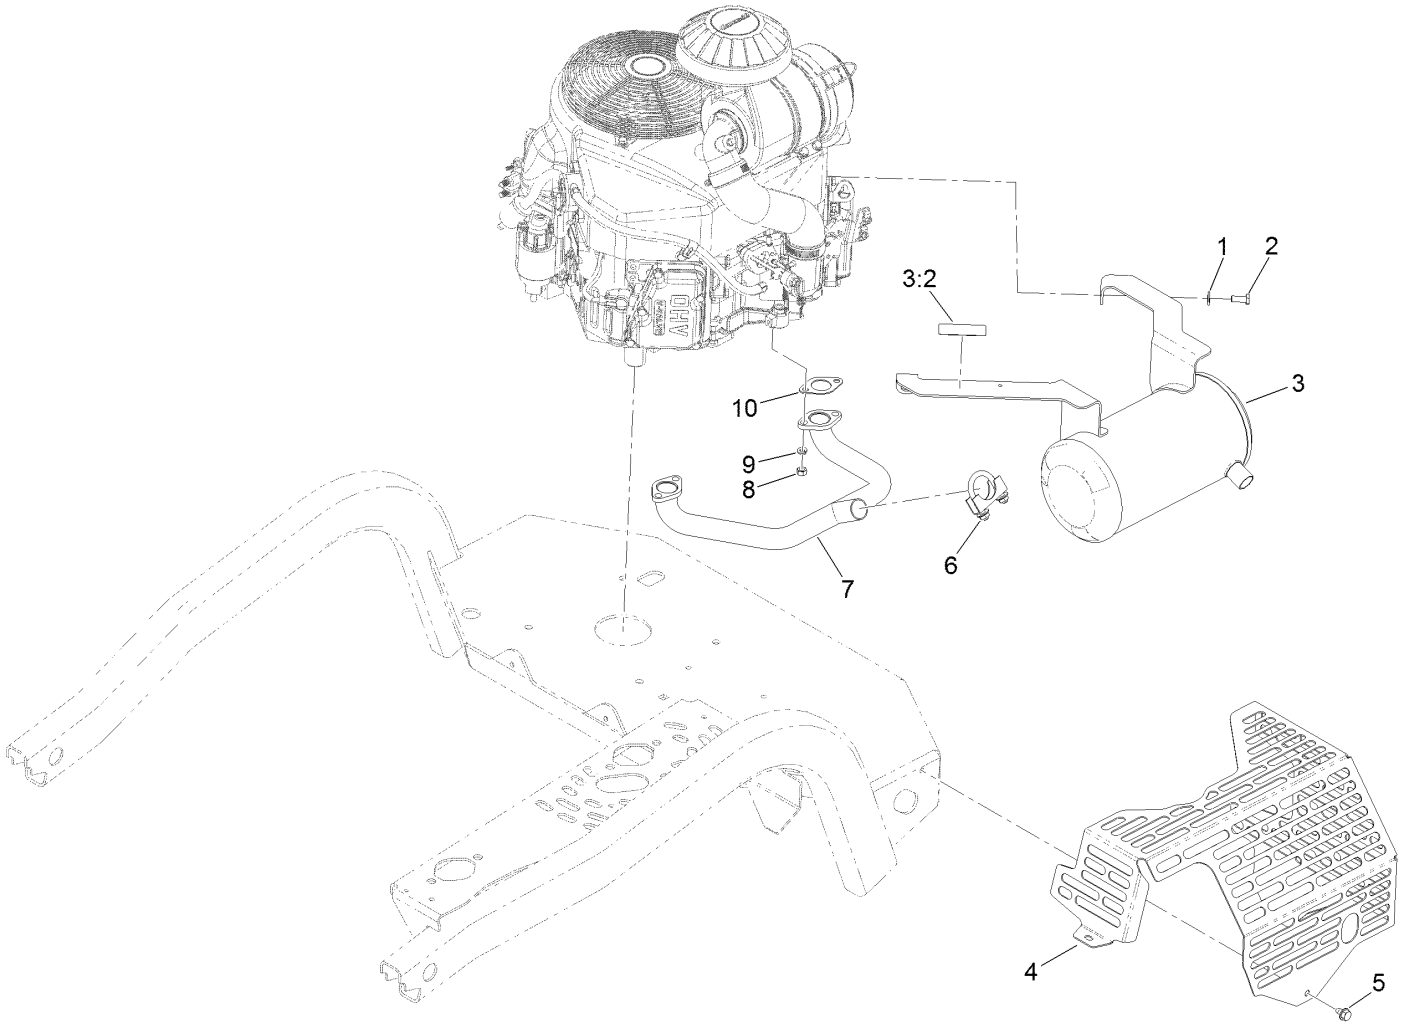


# Exhaust Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 1-303334 | 2 | Washer-Spring |
| 2 | 33114-020 | 2 | Screw-HH |
| 3 | 127-7889 | 1 | Muffler ASM |
| 3:2 | 127-0392 | 1 | Decal-Hot Surface |
| 4 | 127-0367-03 | 1 | Shield-Muffler |
| 5 | 9266934 | 2 | Screw |
| 6 | 104-4090 | 1 | Clamp-Muffler |
| 7 | 125-2401 | 1 | Manifold-Exhaust |
| 8 | 114-3549 | 4 | Nut |
| 9 | 114-3550 | 4 | Washer-Lock |
| 10 | 1-653313 | 2 | Gasket-Exhaust |

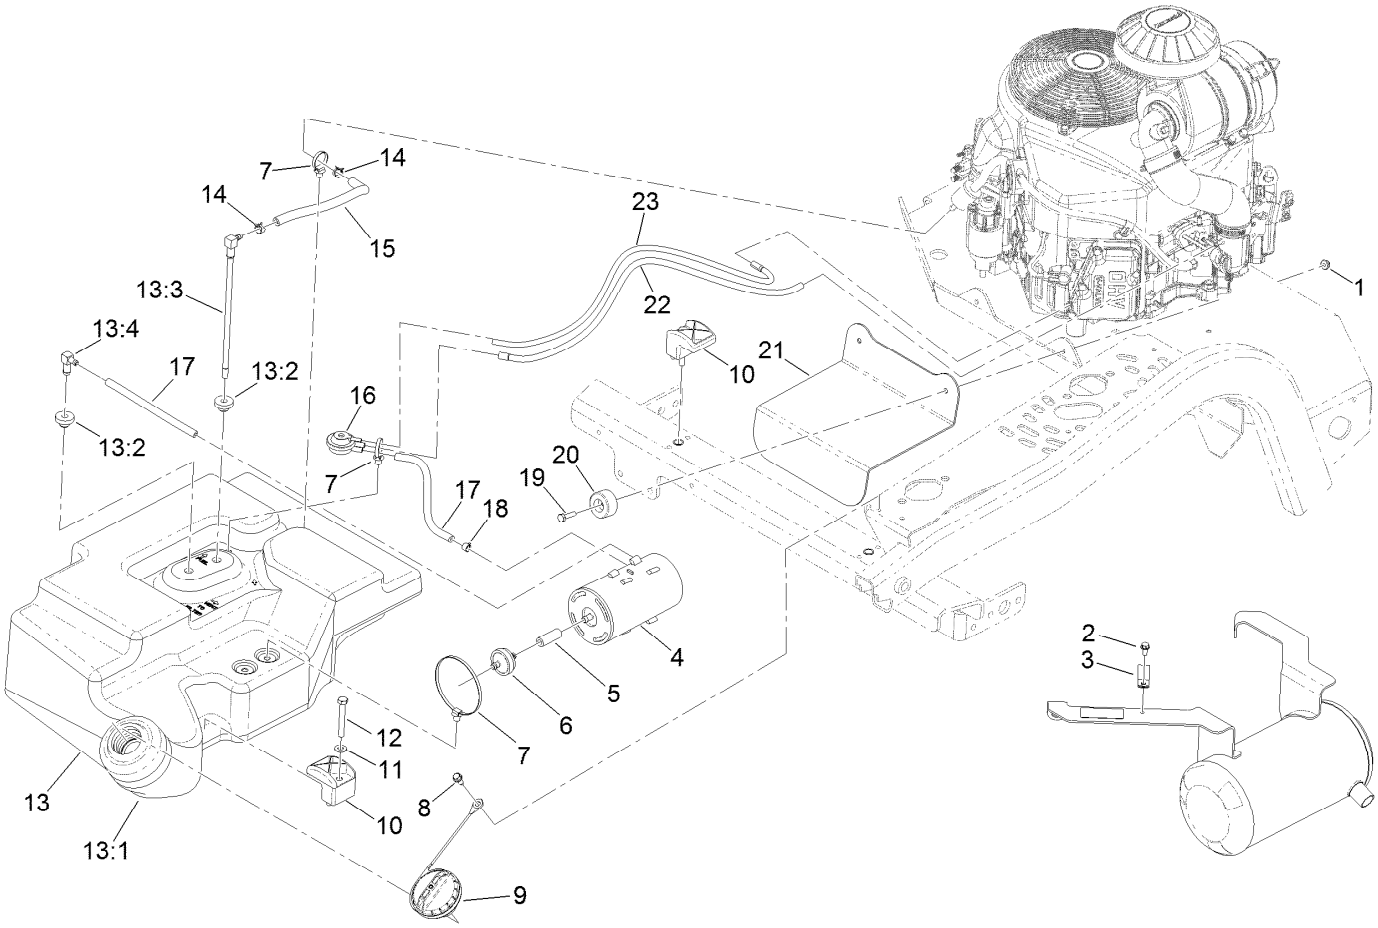


# Fuel Tank and Emissions Recovery Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-7201 | 2 | Nut-HF, NI |
| 2 | 32144-4 | 1 | Screw-HWH |
| 3 | 2412-105 | 1 | Clamp-Tube, Double |
| 4 | 115-2251 | 1 | Canister-Carbon |
| 5 | 106-5317 | 1 | Hose-Fuel |
| 6 | 115-7854 | 1 | Filter-Fuel, Inline |
| 7 | 32180-118 | 4 | Clip-Tie |
| 8 | 32144-10 | 1 | Screw-HWH |
| 9 | 117-1722 | 1 | Cap-Fuel |
| 10 | 107-4543 | 2 | Clamp |
| 11 | 3256-23 | 2 | Washer-Plain |
| 12 | 33114-060 | 2 | Screw-HH |
| 13 | 127-0397 | 1 | Fuel Tank ASM |
| 13:1 | 125-0236 | 1 | Tank-Fuel |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13:2 | 46-6560 | 2 | Bushing |
| 13:3 | 119-8584 | 1 | Fitting-Fuel (W/Line And Screen) |
| 13:4 | 116-2288 | 1 | Fitting-Elbow, 90 DEG |
| 14 | 2412-98 | 2 | Clamp-Hose |
| 15 | 110-3447 | 1 | Hose-Fuel |
| 16 | 116-2232 | 1 | Valve-Control, Vacuum |
| 17 | 68-3633 | 2 | Hose-Fuel |
| 18 | 2412-80 | 1 | Clamp-Hose |
| 19 | 321-6 | 2 | Screw-HH |
| 20 | 94-4548 | 2 | Bumper-Recessed |
| 21 | 125-6426-01 | 1 | Bracket-Mount, Tank |
| 22 | 125-6485 | 1 | Hose-Vent, Formed |
| 23 | 125-6484 | 1 | Hose-Vent, Formed |

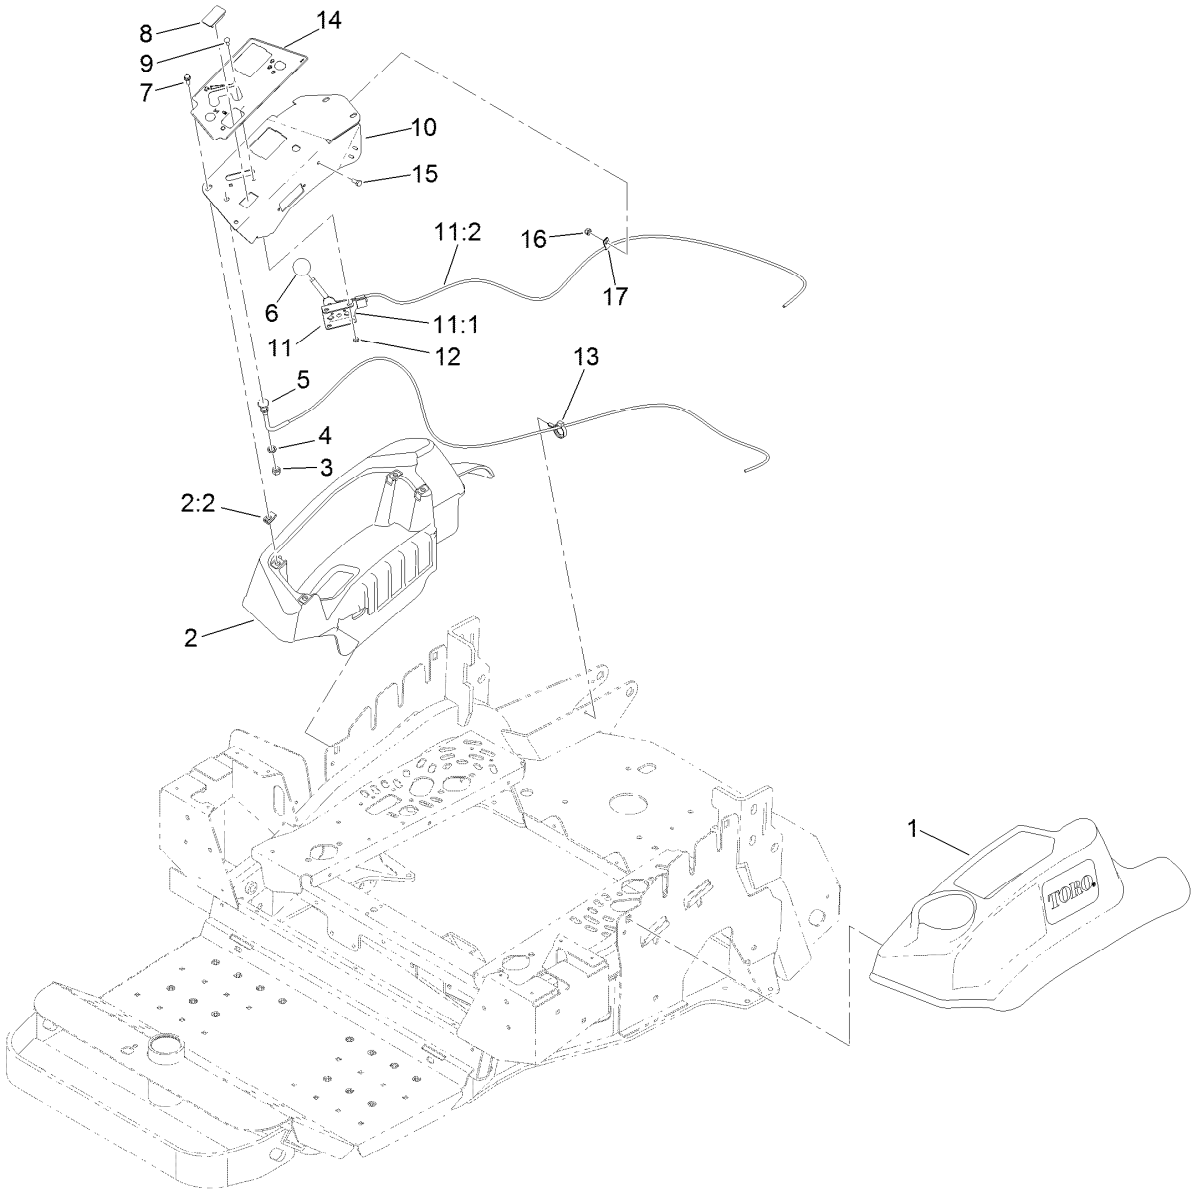


# Engine Controls and Console Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 119-2602 | 1 | Console-LH |
| 2 | 119-2603 | 1 | RH Console ASM |
| 2:2 | 107069 | 4 | Clip |
| 3 | 3219-3 | 1 | Nut-Hex |
| 4 | 3254-6 | 1 | Washer-Lock, Internal |
| 5 | 115-2753 | 1 | Control-Choke |
| 6 | 1-603175 | 1 | Knob-Ball |
| 7 | 32105-15 | 4 | Screw-HWH |
| 8 | 99-7420 | 1 | Plug-Hole |
| 9 | 3229-34 | 2 | Screw-CARR |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 10 | 125-0213-03 | 1 | Panel-Control |
| 11 | 110-5727 | 1 | Throttle Control ASM |
| 11:1 | 112-2334 | 1 | Lever-Throttle |
| 11:2 | 110-5728 | 1 | Cable-Throttle |
| 12 | 3296-2 | 2 | Nut-Lock, NI |
| 13 | 105-1853 | 1 | Clamp-Hose |
| 14 | 125-0214 | 1 | Decal-Panel, Control |
| 15 | 321-3 | 1 | Screw-HH |
| 16 | 3296-42 | 1 | Nut-Lock, NI |
| 17 | 2412-72 | 1 | Clip-Closed, Insulated |

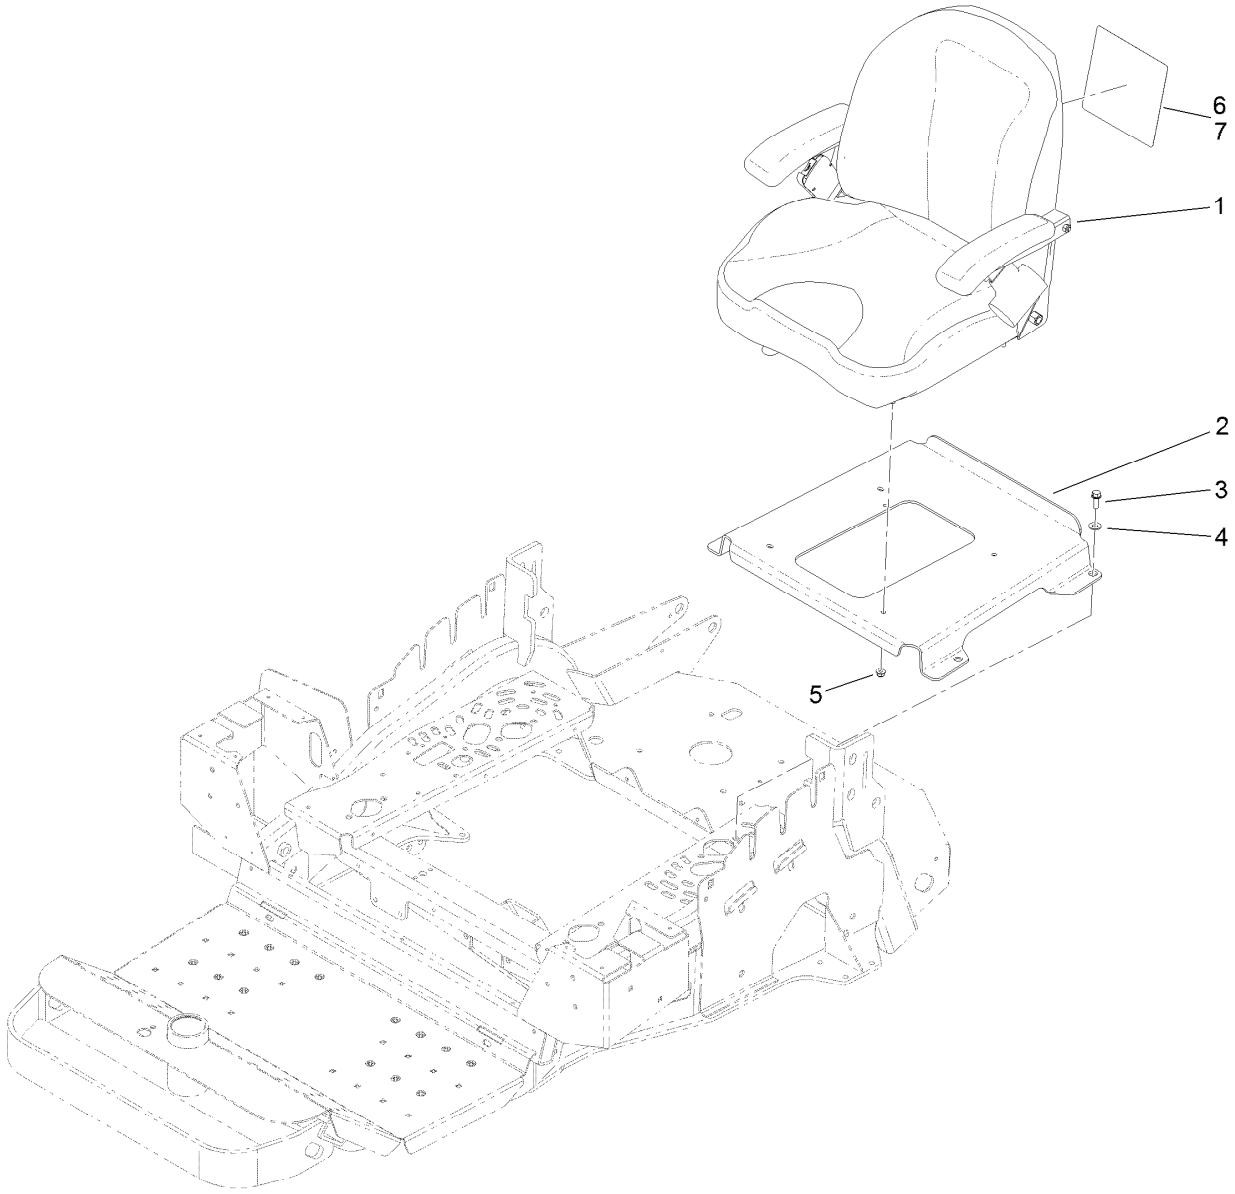


# Seat Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 120-7886 | 1 | Seat |
| 2 | 127-4118-03 | 1 | Plate-Support, Seat |
| 3 | 3234-29 | 4 | Screw-HHF |
| 4 | 3256-3 | 4 | Washer-Flat |
| 5 | 104-8300 | 4 | Nut-HF, NI |
| 6 | 127-0371 | 1 | Decal-Service |
| 7 | 130-2620 | 1 | Decal-Service, CE |

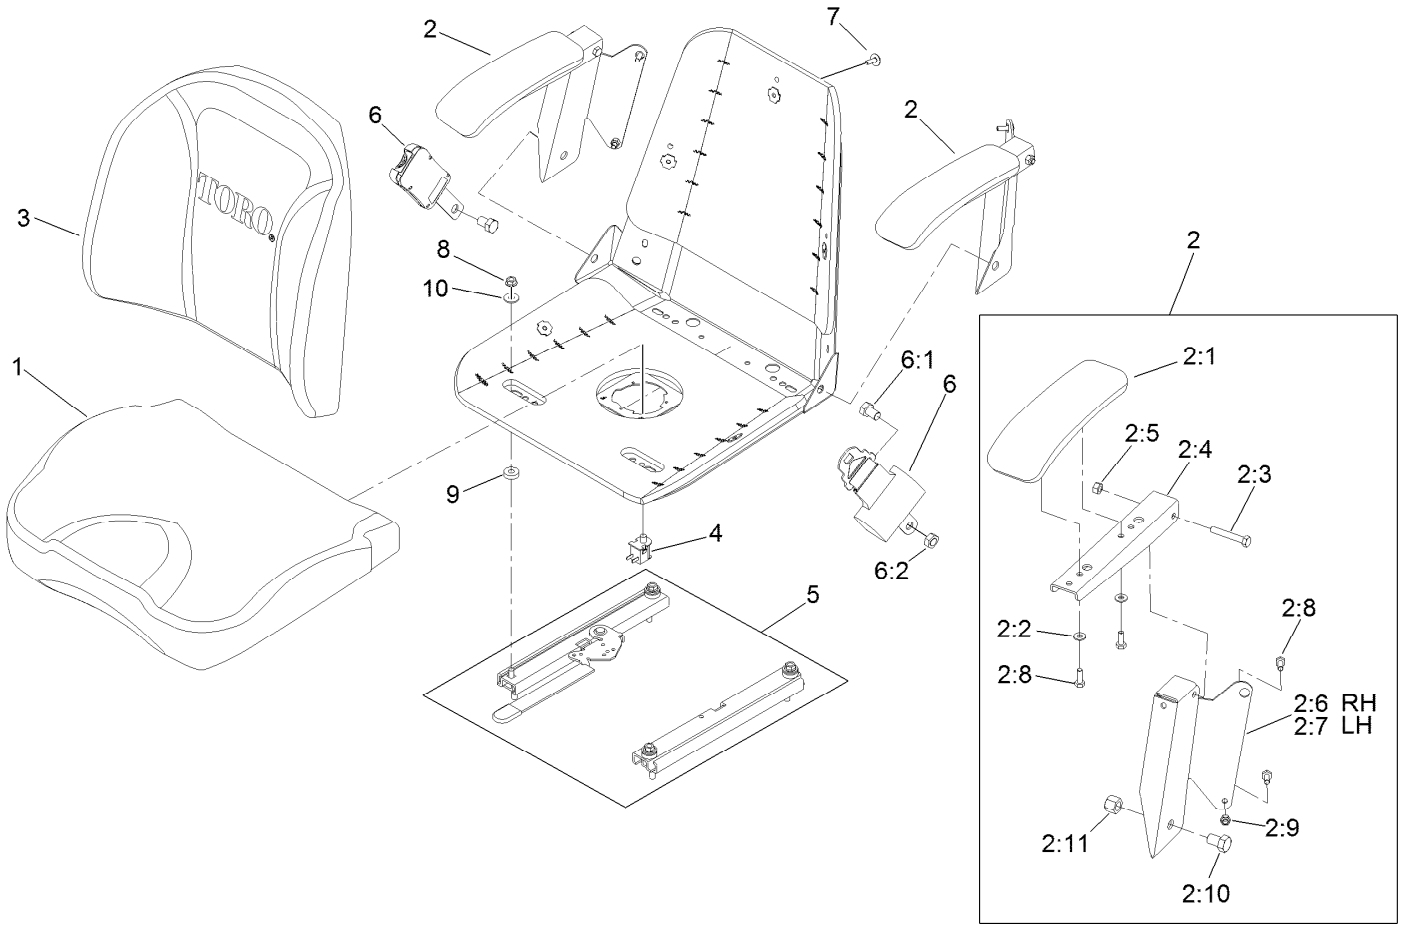


# Seat Assembly No. 120-7886

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 121-4751 | 1 | Cushion-Seat, Bottom |
| 2 | 110-5719 | 1 | Armrest Kit |
| 2:1 | 110-4163 | 2 | Cushion-Rest, Arm |
| 2:2 | 3256-22 | 4 | Washer-Flat |
| 2:3 | 322-10 | 2 | Screw-HH |
| 2:4 | 105-3623 | 2 | Channel-Armrest |
| 2:5 | 32153-3 | 2 | Nut-Hex, Side Deform |
| 2:6 | 105-3621 | 1 | Bracket-Armrest, RH |
| 2:7 | 105-3622 | 1 | Bracket-Armrest, LH |
| 2:8 | 321-30 | 8 | Screw-HH |
| 2:9 | 3296-42 | 4 | Nut-Lock, NI |
| 2:10 | 325-2 | 2 | Screw-HH |
| 2:11 | 3296-23 | 2 | Nut-Lock, NI |
| 3 | 121-4752 | 1 | Cushion-Seat, Back |
| 4 | 82-2190 | 1 | Switch-Bail |
| 5 | 121-4754 | 1 | Track-Seat |
| 6 | 116-2981 | 1 | Seat Belt Kit |
| 6:1 | 325-2 | 2 | Screw-HH |
| 6:2 | 3296-23 | 2 | Nut-Lock, NI |
| 7 | 103-8383 | 7 | Bolt-Seat |
| 8 | 32128-20 | 4 | Nut-HF |
| 9 | 26-4840 | 8 | Spacer-Pin, Mounting |
| 10 | 3256-3 | 6 | Washer-Flat |

# Motion Control Assembly

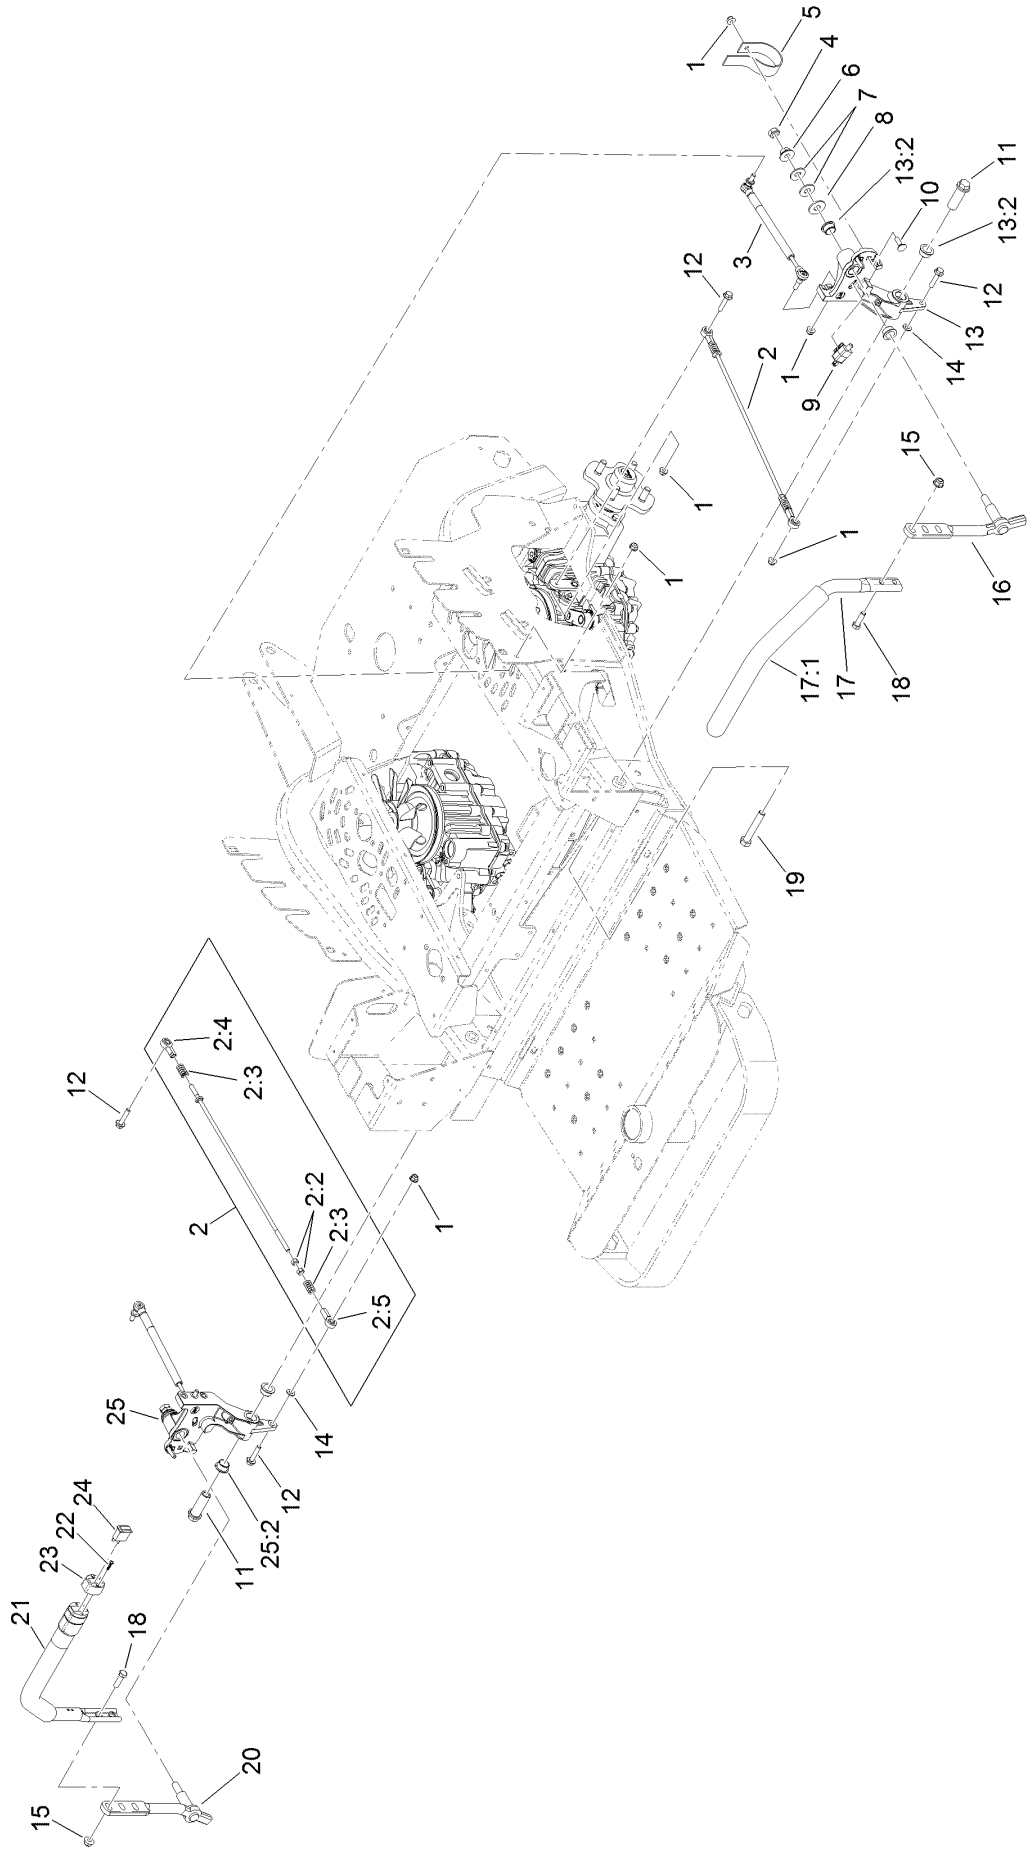

# Motion Control Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-8300 | 10 | Nut-HF, NI |
| 2 | 109-8107 | 2 | Pump Linkage Rear ASM |
| 2:2 | 3219-2 | 2 | Nut-Hex |
| 2:3 | 1-323245 | 2 | Spring-Compression |
| 2:4 | 1-633152 | 1 | Balljoint-LH |
| 2:5 | 1-543017 | 1 | Balljoint-RH |
| 3 | 116-0027 | 2 | Damper-Control, Motion |
| 4 | 3218-5 | 2 | Nut-Jam |
| 5 | 109-5575 | 2 | Spring-Leaf |
| 6 | 32128-56 | 2 | Nut-HF |
| 7 | 109-9505 | 4 | Washer-Spring |
| 8 | 3256-6 | 2 | Washer-Flat |
| 9 | 110-6765 | 2 | Switch |
| 10 | 3230-2 | 2 | Bolt-CARR |
| 11 | 109-5891 | 2 | Hub-Threaded |
| 12 | 115-1794 | 4 | Screw-HHF |
| 13 | 116-0881 | 1 | LH Motion Control And Bushing ASM |
| 13:2 | 109-8054 | 4 | Bushing-Flange |
| 14 | 3256-23 | 2 | Washer-Plain |
| 15 | 104-8301 | 4 | Nut-HF, NI |
| 16 | 116-0040 | 1 | Lever-Control Motion, LH |
| 17 | 109-6590 | 1 | LH Steering Handle ASM |
| 17:1 | 109-5668 | 1 | Grip-Lever, Control |
| 18 | 323-7 | 4 | Screw-HH |
| 19 | 325-12 | 2 | Screw-HH |
| 20 | 116-0039 | 1 | Lever-Control Motion, RH |
| 21 | 127-0350 | 1 | RH Steering Handle ASM |
| 22 | 94-4496 | 2 | Screw-PPH |
| 23 | 121-3399 | 1 | Cap-Switch |
| 24 | 121-6574 | 1 | Switch, Spst (On)-Off-(On) |
| 25 | 116-0880 | 1 | RH Motion Control And Bushing ASM |
| 25:2 | 109-8054 | 4 | Bushing-Flange |

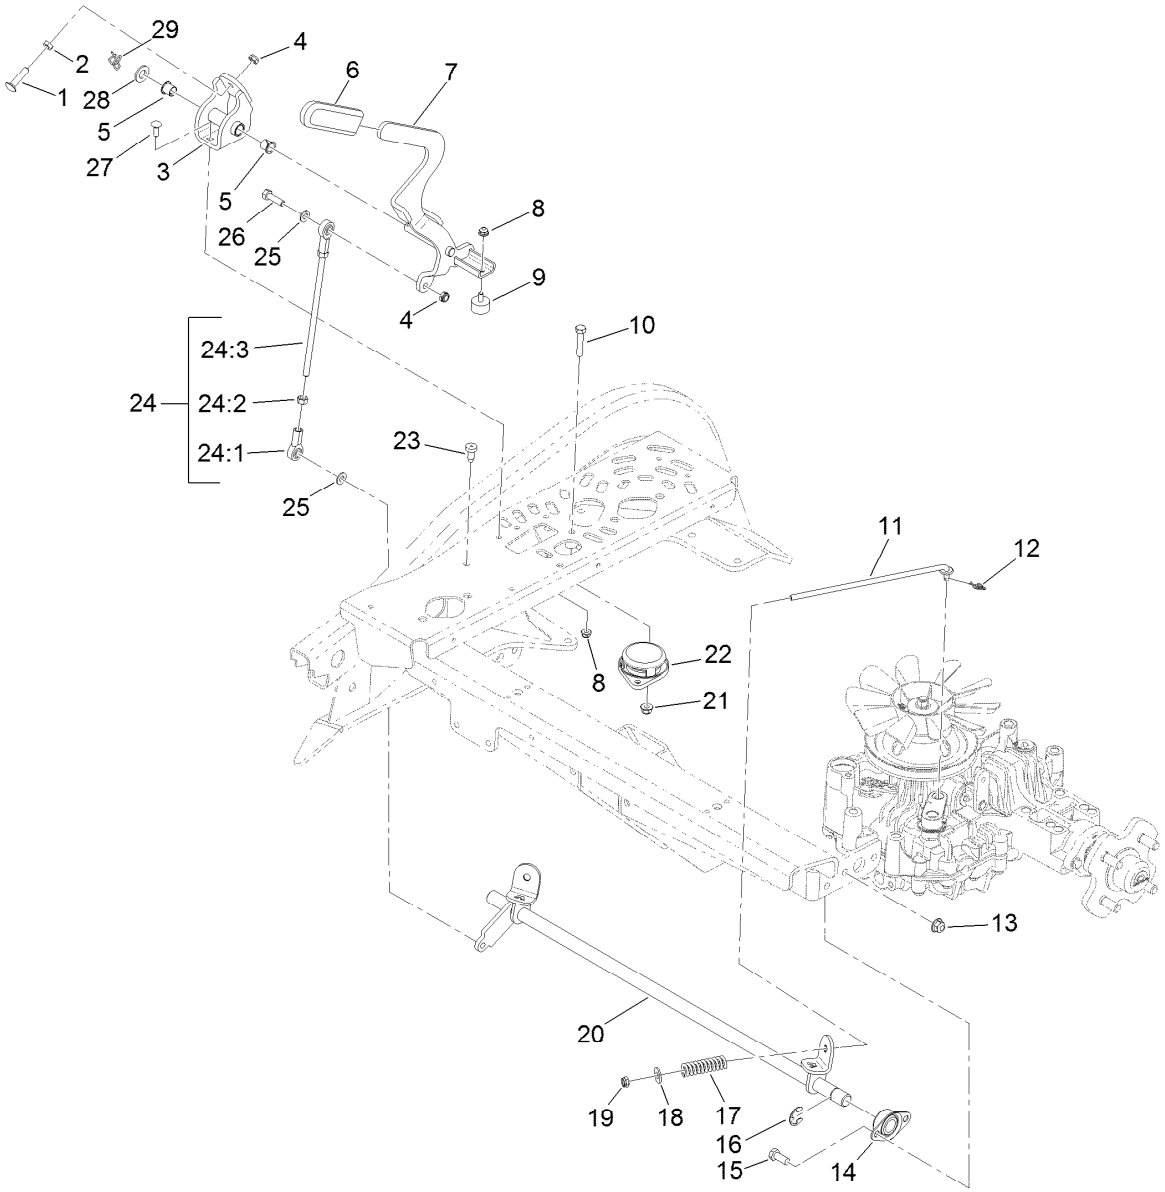


# Brake Installation Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 112-6950 | 1 | Screw-CARR |
| 2 | 3218-2 | 1 | Nut-Hex Jam |
| 3 | 121-8148-03 | 1 | Bracket-Handle, Brake |
| 4 | 3296-47 | 3 | Nut-Lock,NI |
| 5 | 256-257 | 2 | Bushing-Nyliner |
| 6 | 1-633268 | 1 | Grip-Lever |
| 7 | 125-0201-03 | 1 | Handle-Brake |
| 8 | 104-7201 | 3 | Nut-HF, NI |
| 9 | 240-14 | 1 | Bumper-Rubber |
| 10 | 322-8 | 2 | Screw-HH |
| 11 | 125-2351 | 2 | Rod |
| 12 | 116-6639 | 2 | Pin-Cotter, Locking |
| 13 | 104-8301 | 4 | Nut-HF, NI |
| 14 | 1-633102 | 2 | Bearing-Flange, Side |
| 15 | 323-5 | 4 | Screw-HH |
| 16 | 32151-48 | 1 | E-Ring |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 17 | 125-2352 | 2 | Spring-Compression |
| 18 | 3256-3 | 2 | Washer-Flat |
| 19 | 3296-20 | 2 | Nut-Lock, NI |
| 20 | 125-0209-03 | 1 | Shaft-Brake |
| 21 | 104-8300 | 2 | Nut-HF, NI |
| 22 | 92-6282 | 1 | Switch-Seat |
| 23 | 87-8460 | 1 | Bumper-Rubber |
| 24 | 125-0202 | 1 | Rod-Adjustment |
| 24:1 | 1-543017 | 2 | Balljoint-RH |
| 24:2 | 3219-2 | 2 | Nut-Hex |
| 24:3 | 127-7857 | 1 | Rod-Brake |
| 25 | 3256-23 | 3 | Washer-Plain |
| 26 | 322-16 | 2 | Screw-HH |
| 27 | 3229-1 | 2 | Screw-CARR |
| 28 | 106-9888 | 1 | Washer-Flat |
| 29 | 112-1491 | 1 | Pin-Cotter |

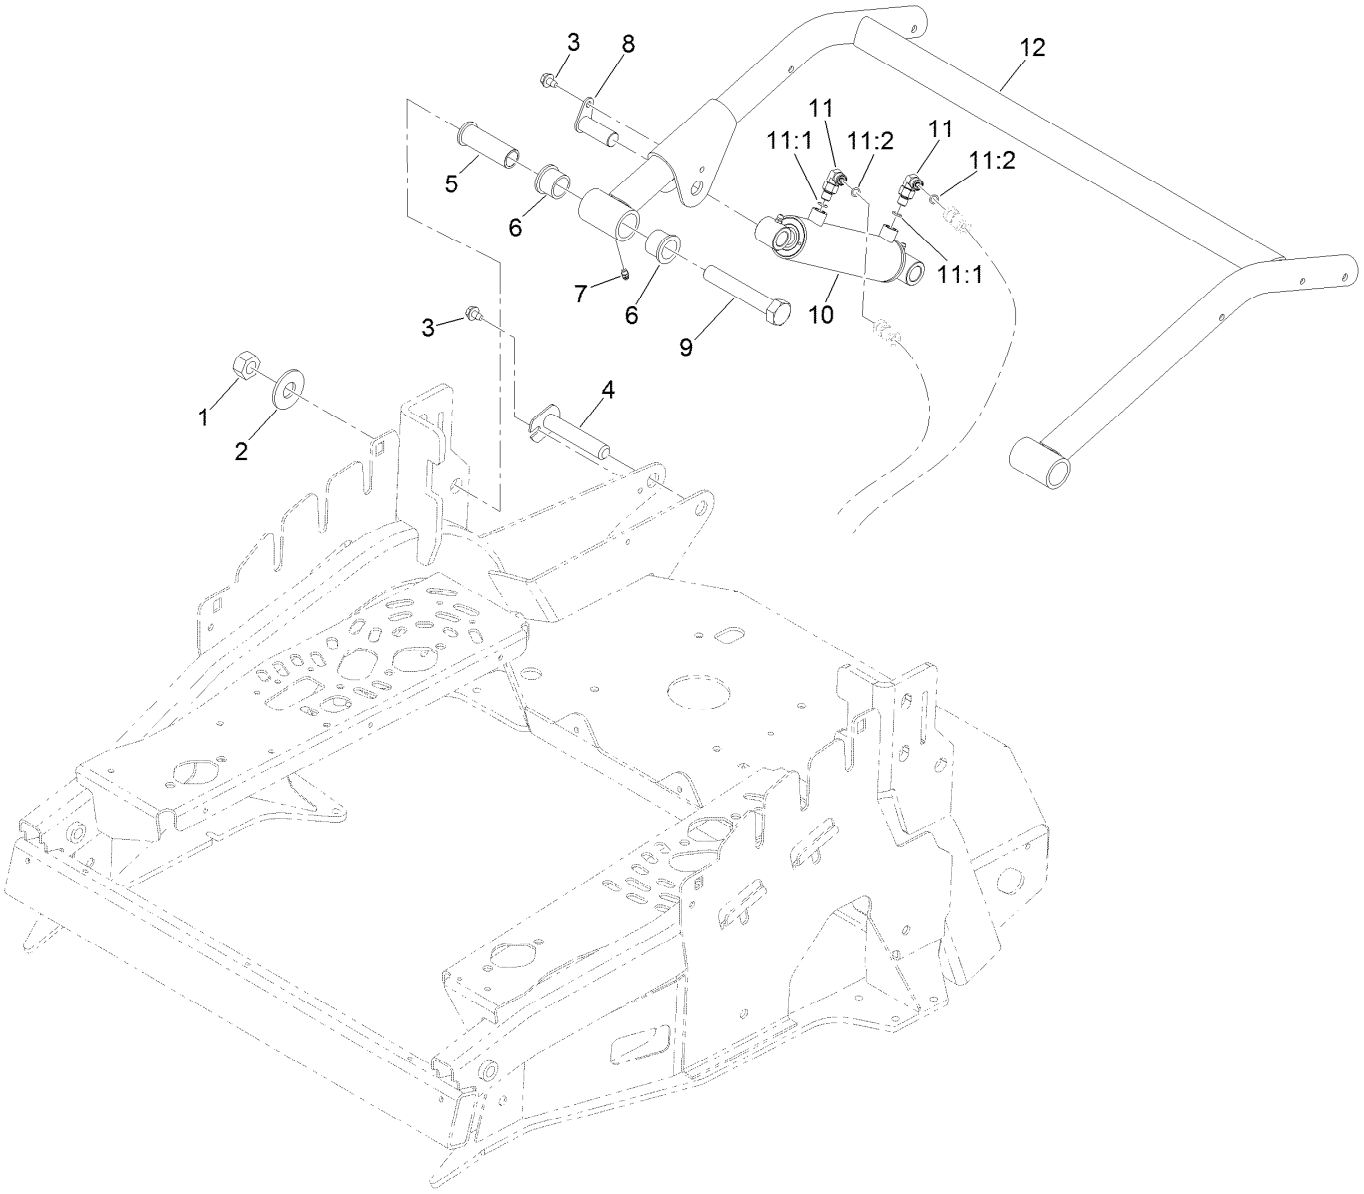


# Lift Valve Installation Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 120-7252 | 2 | Nut-Lock |
| 2 | 3256-8 | 2 | Washer-Flat |
| 3 | 9266934 | 2 | Screw |
| 4 | 120-3199 | 1 | Pin-Pivot |
| 5 | 125-2445 | 2 | Sleeve-Pivot |
| 6 | 94-8949 | 4 | Bushing-Flange |
| 7 | 302-5 | 2 | Fitting-Grease |
| 8 | 108-2905 | 1 | Pin ASM |
| 9 | 328-8 | 2 | Screw-HH |
| 10 | 125-6466 | 1 | HYD Cylinder ASM |
| 11 | 340-132 | 2 | Fitting-Elbow, 90 DEG |
| 11:1 | 237-78 | 1 | O-Ring |
| 11:2 | 237-21 | 1 | O-Ring |
| 12 | 125-2441-03 | 1 | Lift-Groomer |

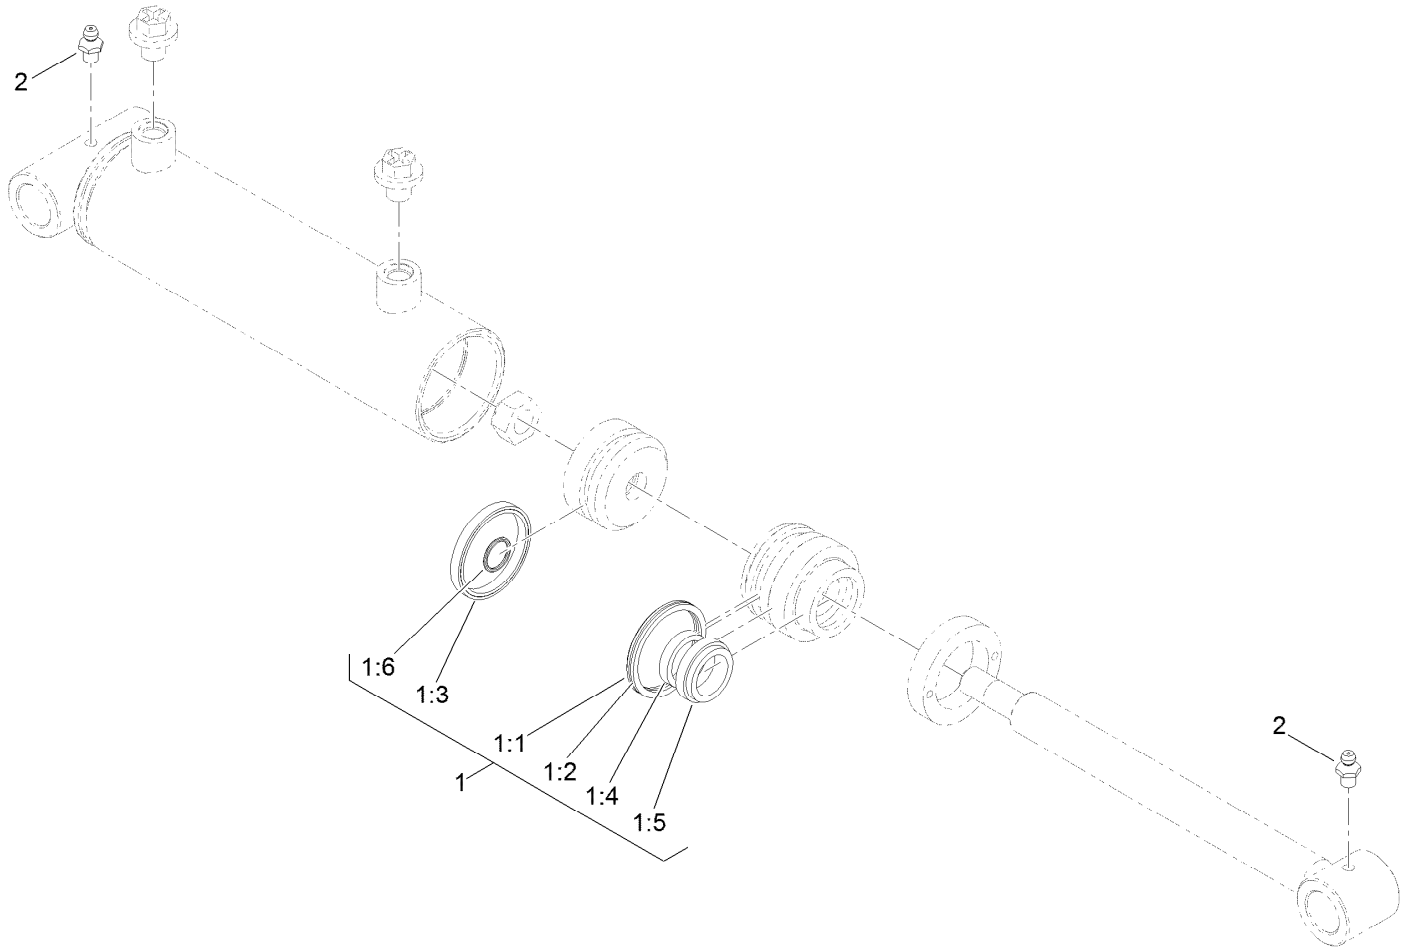


# Hydraulic Cylinder Assembly No. 125-6466

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 127-3880 | 1 | Seal Kit |
| 1:1 | | 1 | O-Ring ● |
| 1:2 | | 1 | Seal-Back Up ● |
| 1:3 | | 1 | Psp Seal ● |
| 1:4 | | 1 | Bt Seal ● |
| 1:5 | | 1 | Dust Seal ● |
| 1:6 | | 1 | O-Ring ● |
| 2 | 302-5 | 2 | Fitting-Grease |

● Not serviced separately

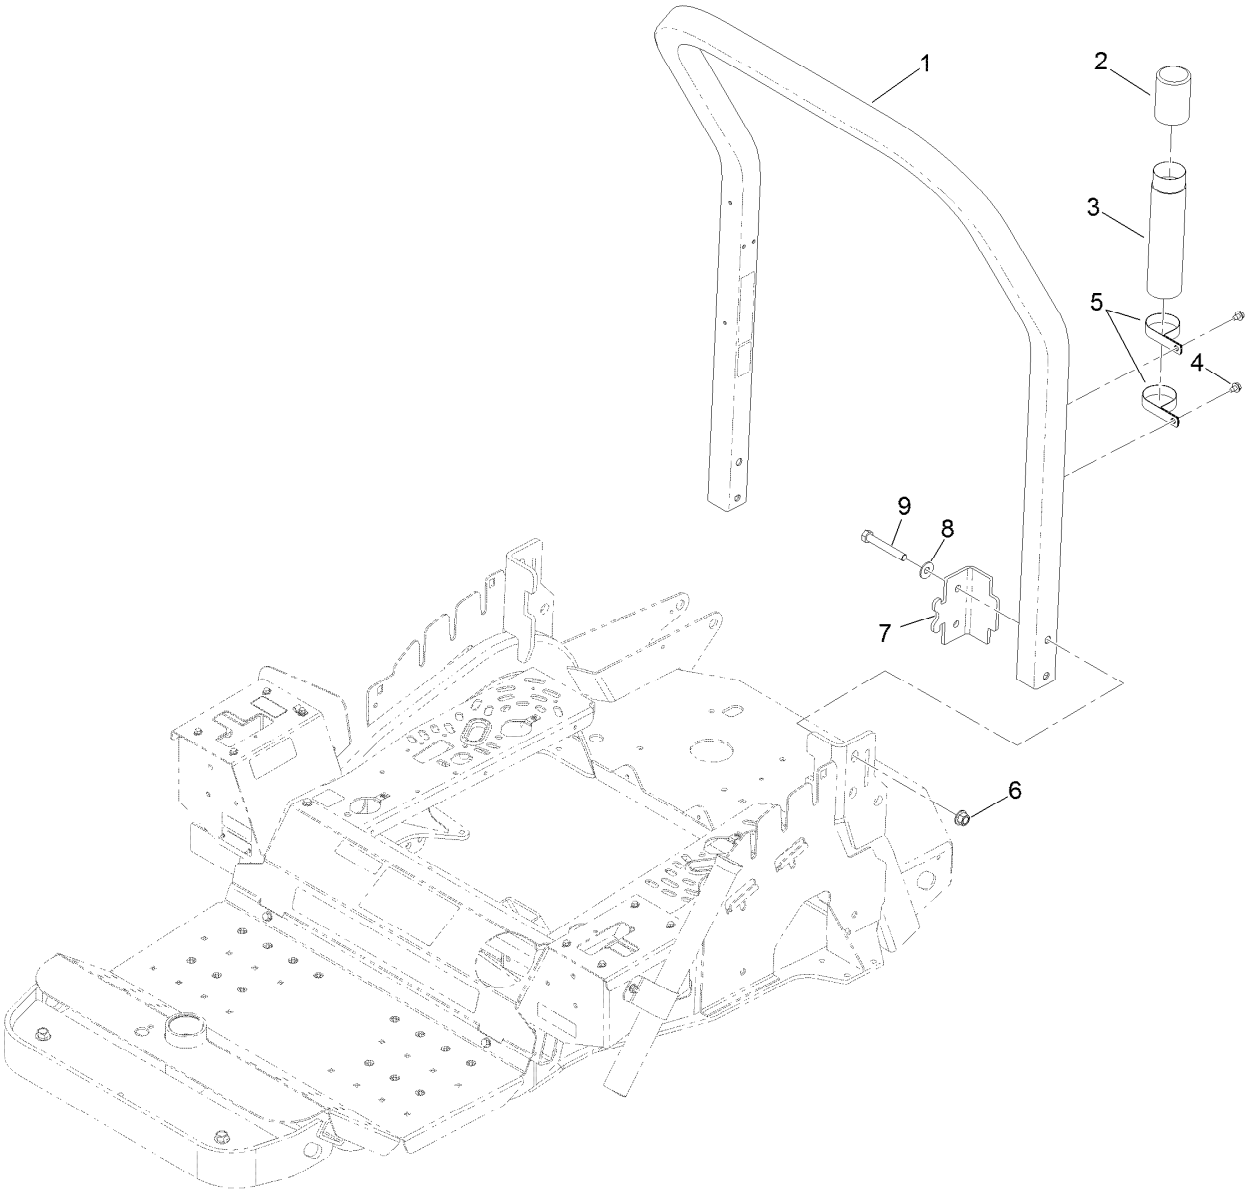


# ROPS System Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 127-0398 | 1 | ROPS ASM |
| 2 | 104-7048 | 1 | Cap-Housing |
| 3 | 104-7050 | 1 | Tube-Manual |
| 4 | 9266934 | 2 | Screw |
| 5 | 2412-133 | 2 | Clamp-R |
| 6 | 99-5107 | 4 | Nut-HF Nylock |
| 7 | 125-2398-01 | 2 | Bracket-ROPS |
| 8 | 109-9505 | 4 | Washer-Spring |
| 9 | 325-14 | 4 | Screw-HH |

# Battery and Electrical System Assembly

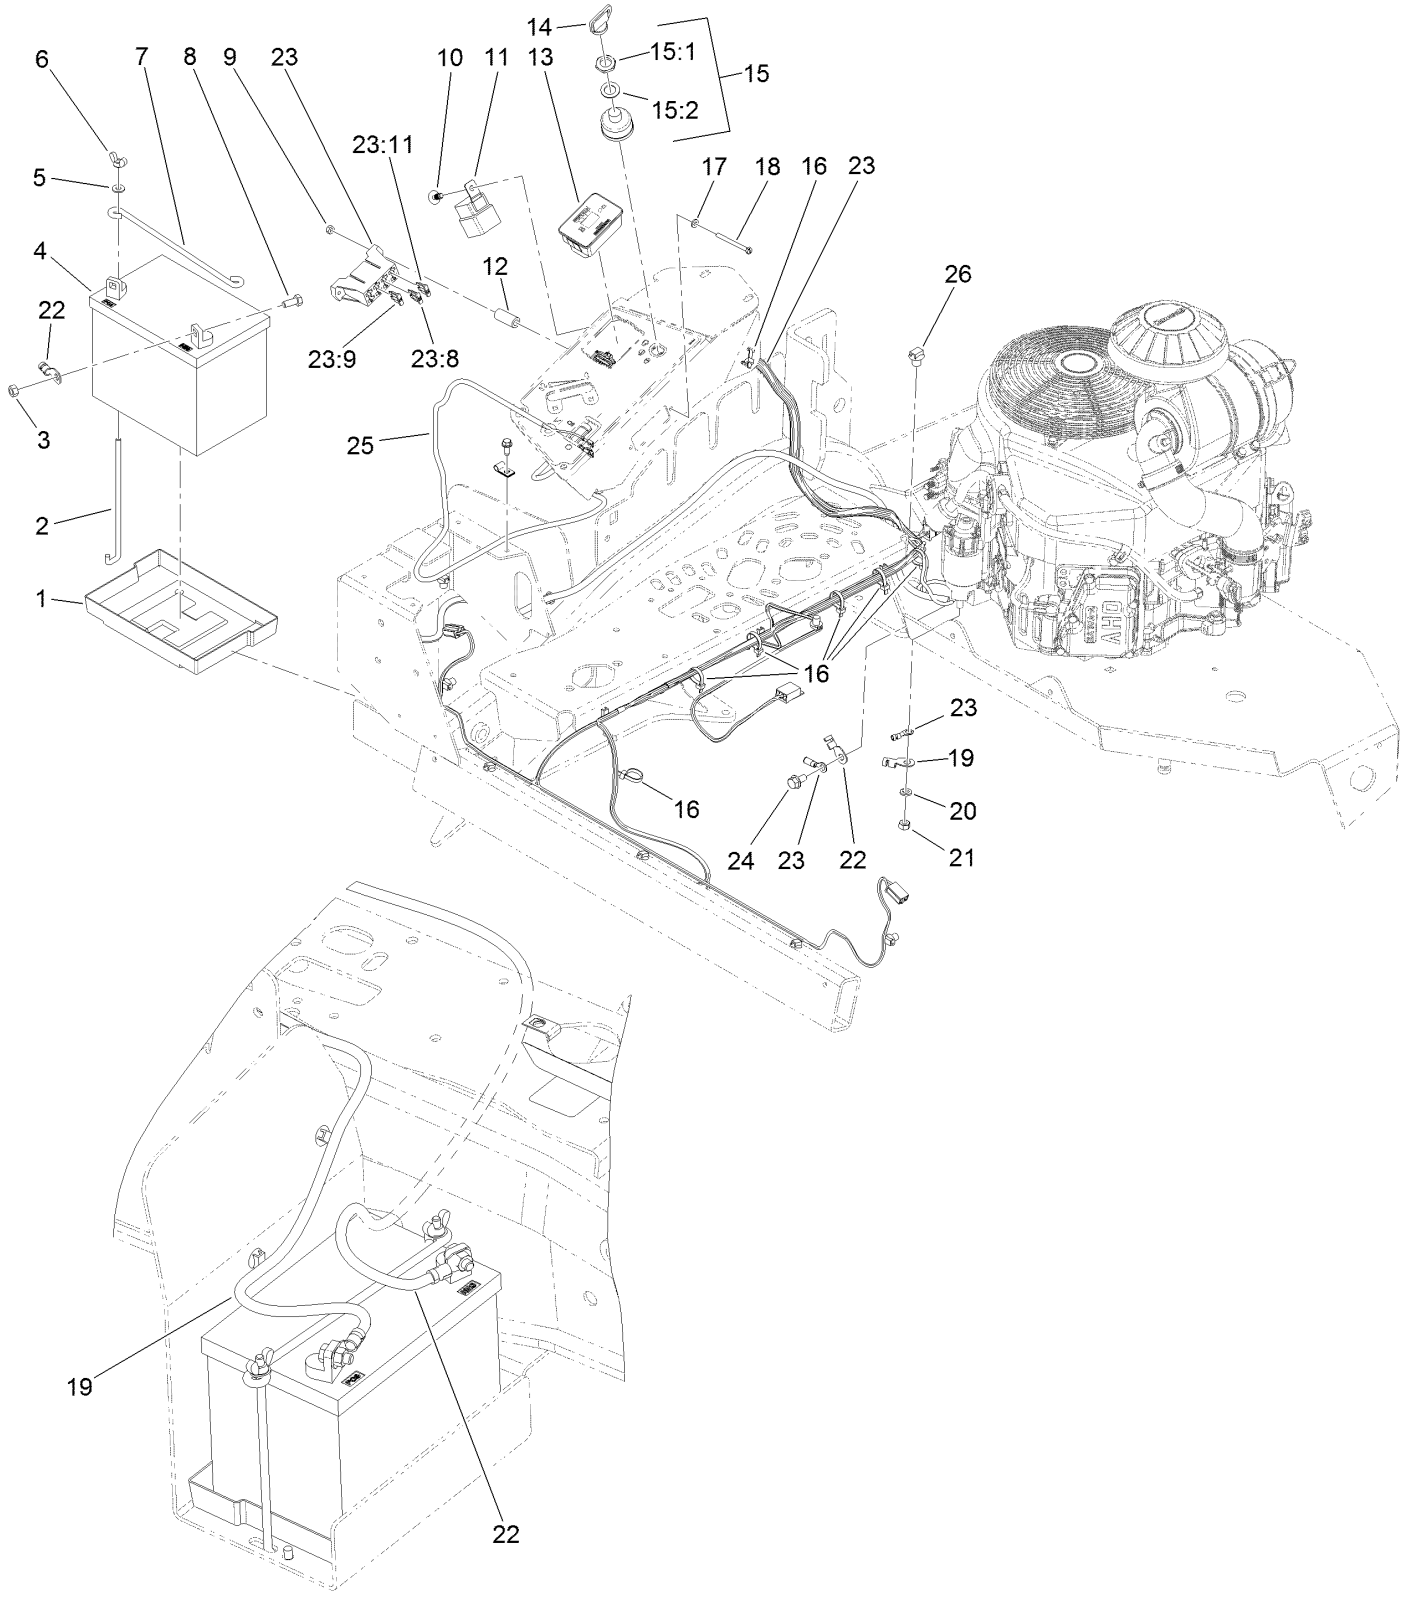


BATTERY CABLES

# Battery and Electrical System Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 106948 | 1 | Tray-Battery |
| 2 | 100-6435 | 2 | Post-Battery |
| 3 | 3217-6 | 2 | Nut-Hex |
| 4 | 99-7421 | 1 | Battery- Wet, 12V, 300 CCA |
| 5 | 3256-22 | 2 | Washer-Flat |
| 6 | 32103-22 | 2 | Nut-Wing |
| 7 | 100-6434 | 1 | Rod-Hold Down, Battery |
| 8 | 322-3 | 2 | Screw-HH |
| 9 | 3296-2 | 2 | Nut-Lock, NI |
| 10 | 104-0395 | 2 | Plug-Plastic |
| 11 | 99-7430 | 2 | Relay-Mini |
| 12 | 103-0384 | 2 | Spacer |
| 13 | 147-3651 | 1 | Module ASM |
| 14 | 63-8360 | 2 | Key-Ignition |
| 15 | 83-0020 | 1 | Switch-Ignition |
| 15:1 | 218-461 | 1 | Nut-HH |
| 15:2 | 3254-5 | 1 | Washer-Lock |
| 16 | 3290-379 | 7 | Tie-Cable |
| 17 | 120-9680 | 2 | Washer-Flat |
| 18 | 32105-14 | 2 | Screw-SHH |
| 19 | 122-0143 | 1 | Cable-Battery, Positive |
| 20 | 3253-4 | 1 | Washer-Lock |
| 21 | 3218-13 | 1 | Nut-Jam, Brass |
| 22 | 122-0085 | 1 | Cable-Battery, Negative |
| 23 | 121-6559 | 1 | Harness-Wire, 2040Z |
| 23:8 | 109102 | 1 | Fuse-Blade, 25 Amp |
| 23:9 | 218-578 | 1 | Fuse-Blade, 10 Amp |
| 23:11 | 109101 | 1 | Fuse-Blade, 20 Amp |
| 24 | 33104-016 | 1 | Screw-HHF |
| 25 | 121-8893 | 1 | Harness-Handle, Control |
| 26 | 32180-030 | 1 | Clip-Tie |

# Hydraulic Tank Assembly

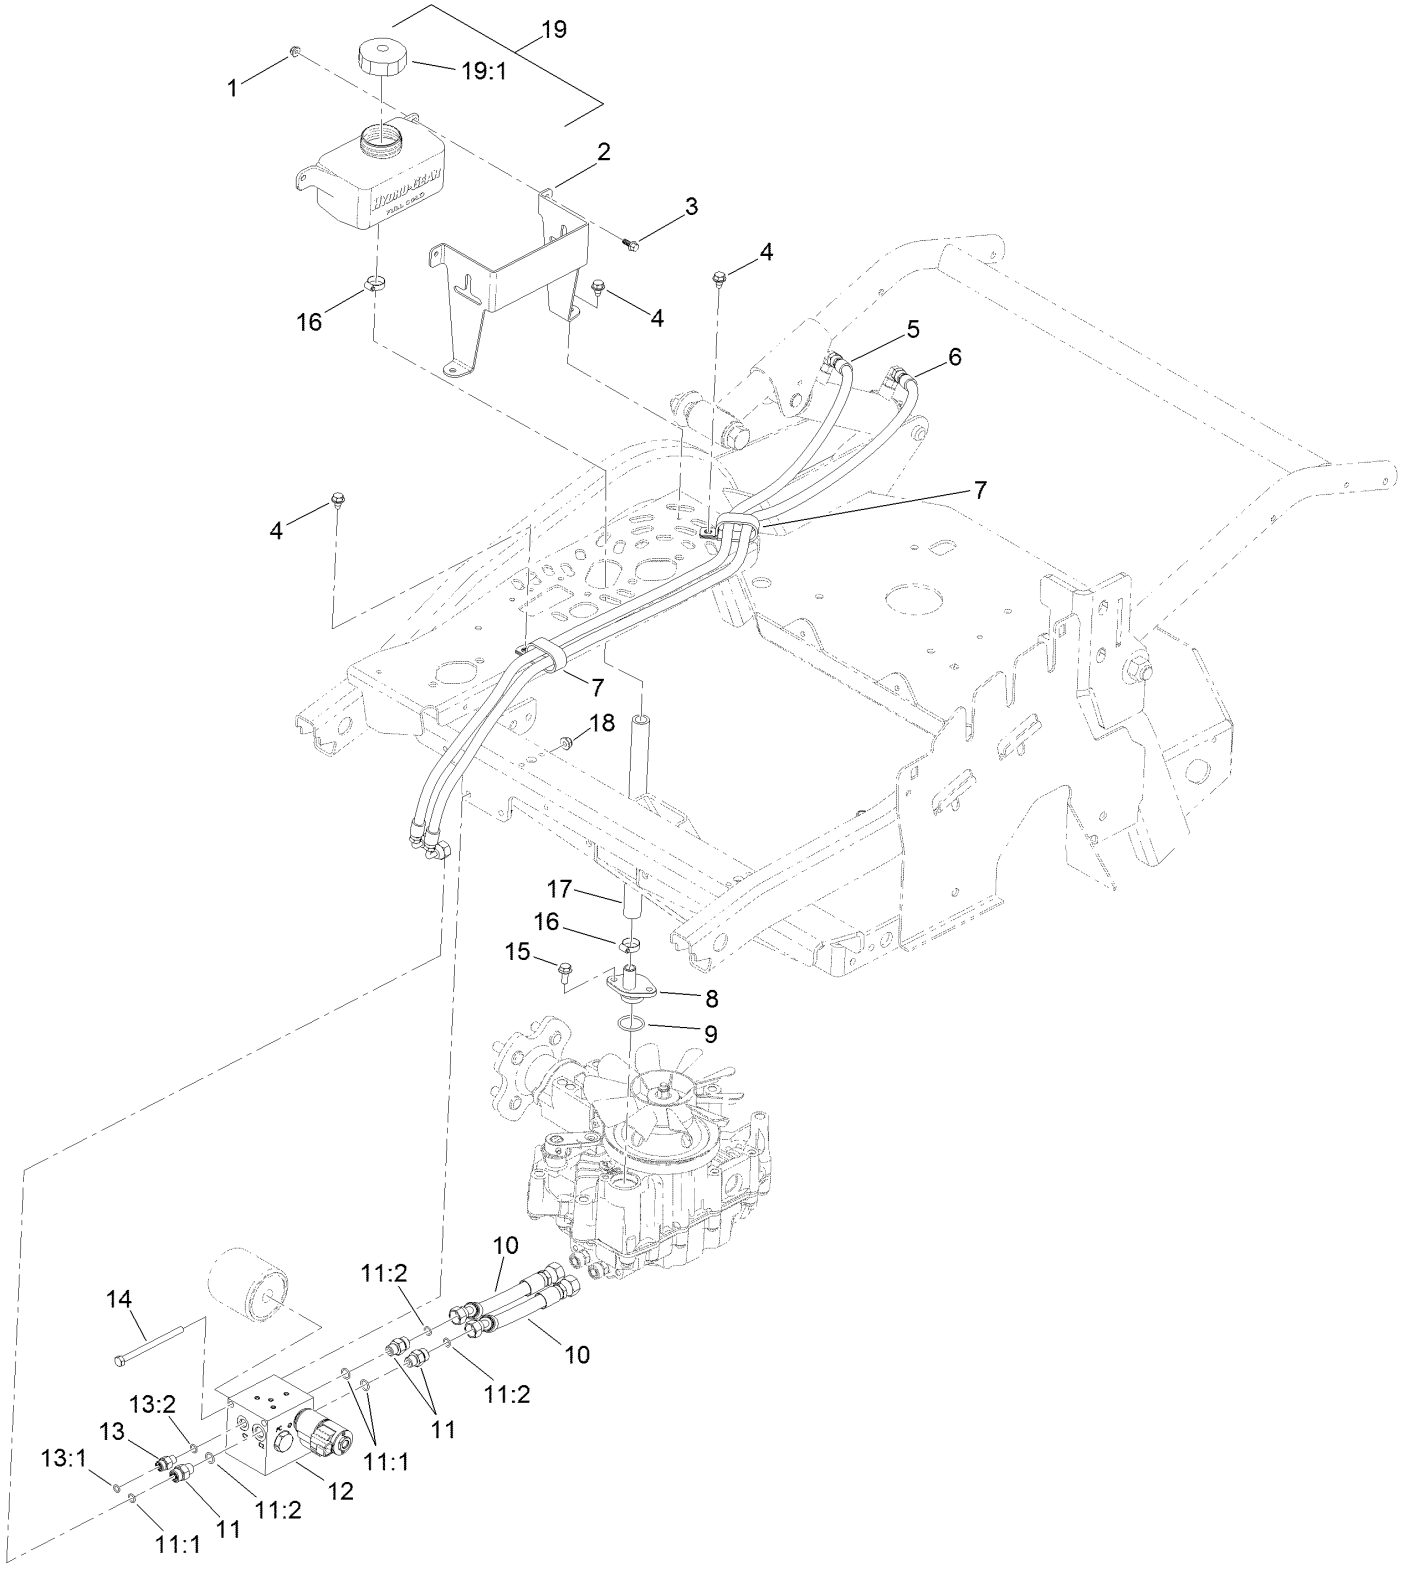

# Hydraulic Tank Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-7201 | 4 | Nut-HF, NI |
| 2 | 125-2438-03 | 2 | Bracket-Tank |
| 3 | 99-6810 | 4 | Screw-HHF |
| 4 | 9266934 | 6 | Screw |
| 5 | 125-5124 | 1 | HYD Hose ASM |
| 6 | 125-5125 | 1 | HYD Hose ASM |
| 7 | 2412-137 | 2 | Clamp-R, Double |
| 8 | 125-2449 | 2 | Fitting-Hydro |
| 9 | 130-2615 | 2 | O-Ring |
| 10 | 127-7877 | 2 | HYD Hose ASM |
| 11 | 340-2 | 3 | Fitting-Straight |
| 11:1 | 237-22 | 1 | O-Ring |
| 11:2 | 237-42 | 1 | O-Ring |
| 12 | 127-7858 | 1 | Hydraulic Manifold ASM (With Filter) |
| 13 | 340-92 | 1 | Fitting-Straight |
| 13:1 | 237-78 | 1 | O-Ring |
| 13:2 | 237-21 | 1 | O-Ring |
| 14 | 322-38 | 2 | Screw-HH |
| 15 | 98-7977 | 2 | Screw-HHF |
| 16 | 2412-141 | 4 | Clamp-Drive, Worm |
| 17 | 127-0368 | 2 | Hose-Push Lok |
| 18 | 104-8300 | 2 | Nut-HF, NI |
| 19 | 119-9908 | 2 | Hydraulic Reservoir ASM |
| 19:1 | 109-3320 | 1 | Cap-Reservoir, HYD |

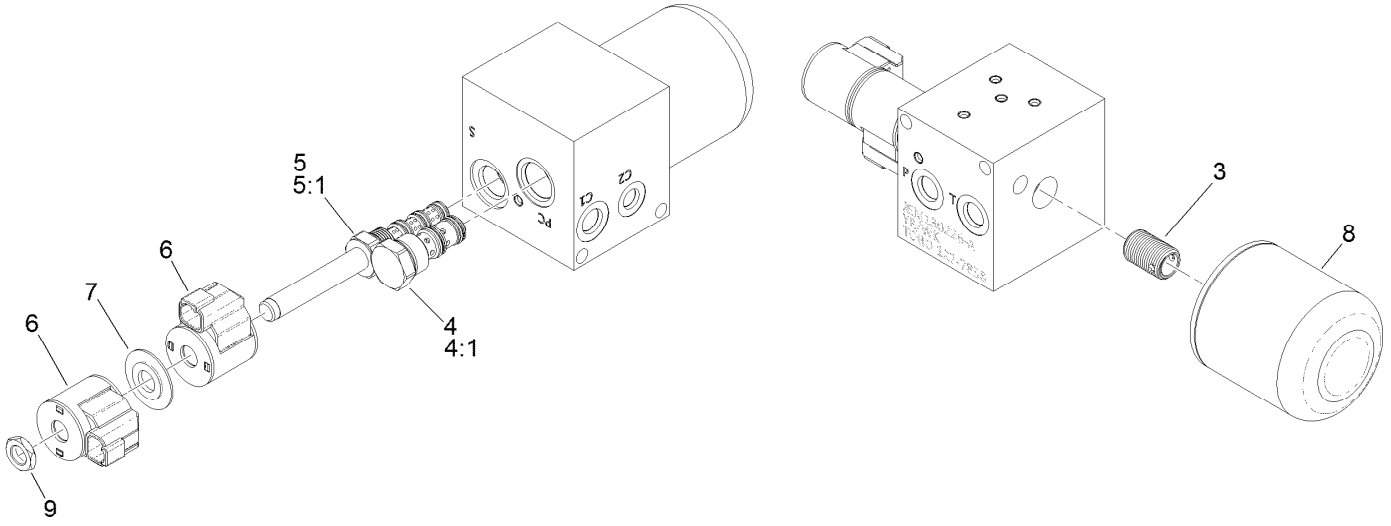


# Hydraulic Manifold Assembly No. 127-7858

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 3 | 127-3885 | 1 | Nipple-Filter |
| 4 | 127-3884 | 1 | Valve-Check |
| 4:1 | 105-9154 | 1 | Seal Kit |
| 5 | 127-3883 | 1 | Valve-Solenoid |
| 5:1 | 112-6520 | 1 | Seal Kit |
| 6 | 119-8036 | 2 | Coil |
| 7 | 127-3882 | 1 | Spacer-E Coil |
| 8 | 114-3494 | 1 | Element-Filter, 25 Micron |
| 9 | 110-2634 | 1 | Nut-Coil |

# Attachments and Accessories

## For 08706 — Sand Pro 2040Z Traction Unit

| Product Name | Model/Part |
|---|---|
| Flex Tooth Rake | 08716 |
| Nail Drag | 08717 |
| Finish Drag | 08718 |
| Broom Finishing Kit | 08719 |
| Speed Limiter Kit | 08720 |
| Light Kit | 08721 |
| 400 Hour Maintenance Kit | 08725 |
| Spark Arrestor Screen | 104-6540 |
| Premium Transmission/Hydraulic Tractor Fluid (55 Gallon Drum) | 108-1183 |
| Premium Transmission/Hydraulic Tractor Fluid (5 Gallon Pail) | 108-1184 |
| Premium All Purpose Grease (Tube) | 108-1190 |
| Bimini Folding Shade Assembly | 115-4510 |
| Fuel Stabilizer (4oz) | 117-0089 |
| Fuel Stabilizer (16oz) | 117-0090 |
| Oil Filter | 119-5852 |
| Fuel Filter | 121-4570 |
| Premium Engine Oil 10w30 (5 Gallon Pail) | 121-6393 |
| Air Filter Element | 125-6438 |
| Tire Assembly | 125-6462 |
| Seat Isolation Kit | 125-6469 |
| Rake Holder | 127-0353-03 |
| Bag Kit | 127-0359 |
| Rubber Trowel Kit | 130-2629 |
| Spark Plug | 92-2153 |
| Filter Minder Gauge | 99-4664 |

## Notes:

## Notes:

**Count on it.**