Form No. 3479-957 Rev A

TORO®

Count on it.

Parts Catalog

323 Compact Tool Carrier

Model No. 22318—Serial No. 420000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3479-957 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly 4
Hood and Screen Assembly 6
Thigh Support Assembly 8
Wheel and Tire Assembly 10
Hydraulic Motor Assembly No. 99-3052 12
Engine and Hydraulic Pump Assembly 14
Tandem Hydraulic Pump Assembly No. 108-4710 16
Fuel Tank and Air Filter Assembly 18
Air Cleaner Assembly No. 93-2190 20
Carbon Canister Assembly 22
Loader and Quick Attach Assembly 24
Electrical Component Assembly 26
Hydraulic Tank and Filter Assembly 28
Auxiliary Lever Handle Assembly 30
Auxiliary Valve and Selector Valve Assembly 32
Auxiliary Hydraulic Valve Assembly No. 99-3077 34
Hydraulic Selector Valve Assembly No. 99-3072 36
Four Spool Valve and Lever Assembly 38
Hydraulic Motor Assembly 40
Counterbalance Valve Assembly No. 99-3040 42
Hydraulic Cylinder Assembly 44
Hydraulic Cylinder Assembly No. 139-7706 46
Attachments and Accessories 48

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame Assembly

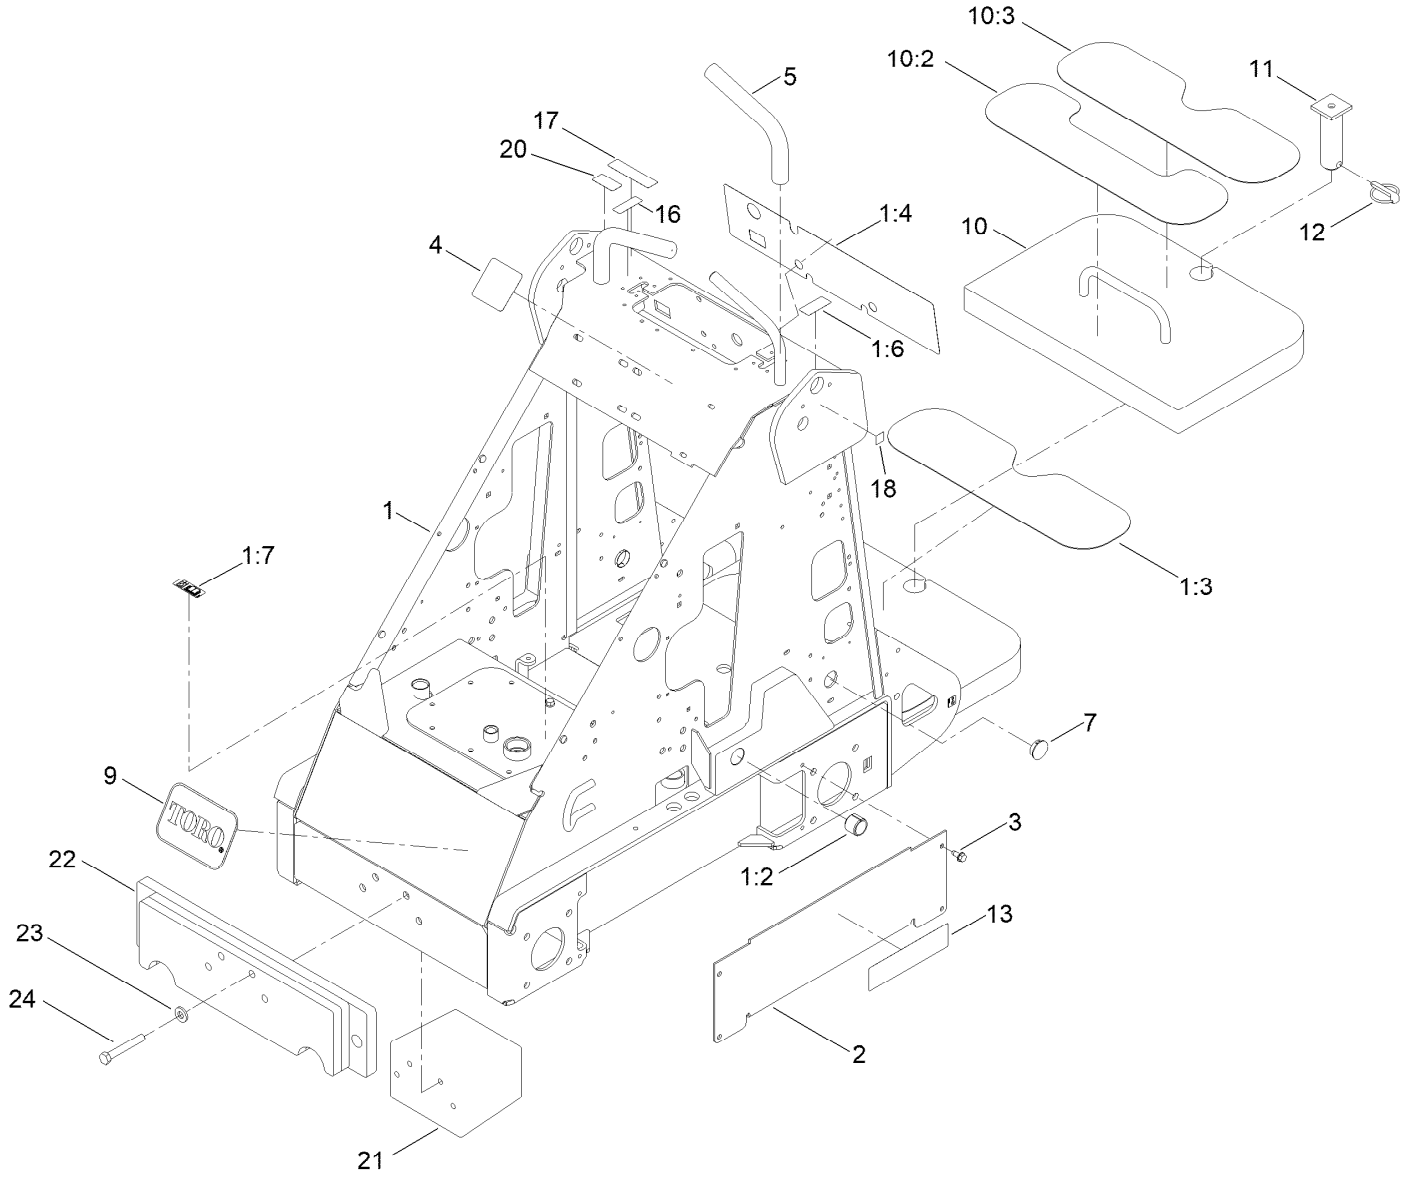

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-5257	1	Frame ASM
1:2	98-4871	2	Bushing-Tension
1:3	98-9947	2	Tread-Foot
1:4	161-9446	1	Decal-Console
1:6	98-8219	1	Decal-Throttle
1:7	93-6686	1	Decal-Oil, HYD
2	106-8178-01	2	Cover-Hose
3	32144-70	8	Screw-HWHTF
4	108-9716	1	Decal-Selector, Speed
5	98-4845	2	Grip-Cushion
7	94-1402	2	Plug-Hole
9	62-5550	1	Decal
10	112-4947	1	Counterweight ASM
10:2	98-9947	1	Tread-Foot
10:3	112-4948	1	Tread
11	99-8638	1	Pin
12	99-9978	1	Pin-Lynch
13	105-8429	2	Decal
16	94-2551	1	Decal-Choke
17	133-8062	1	Decal-Spark Arrestor
18	93-9084	6	Decal-Point, Lift
20	98-4387	1	Decal-Protection, Ear
21	139-7704	1	Weight-Front, Counter
22	144-7148-05	1	Weight-Counter [blk Txt]
23	HDW01729	4	Washer,1/2,F436 Hard,F/W,YZN
24	325-14	4	Screw-HH


Hood and Screen Assembly

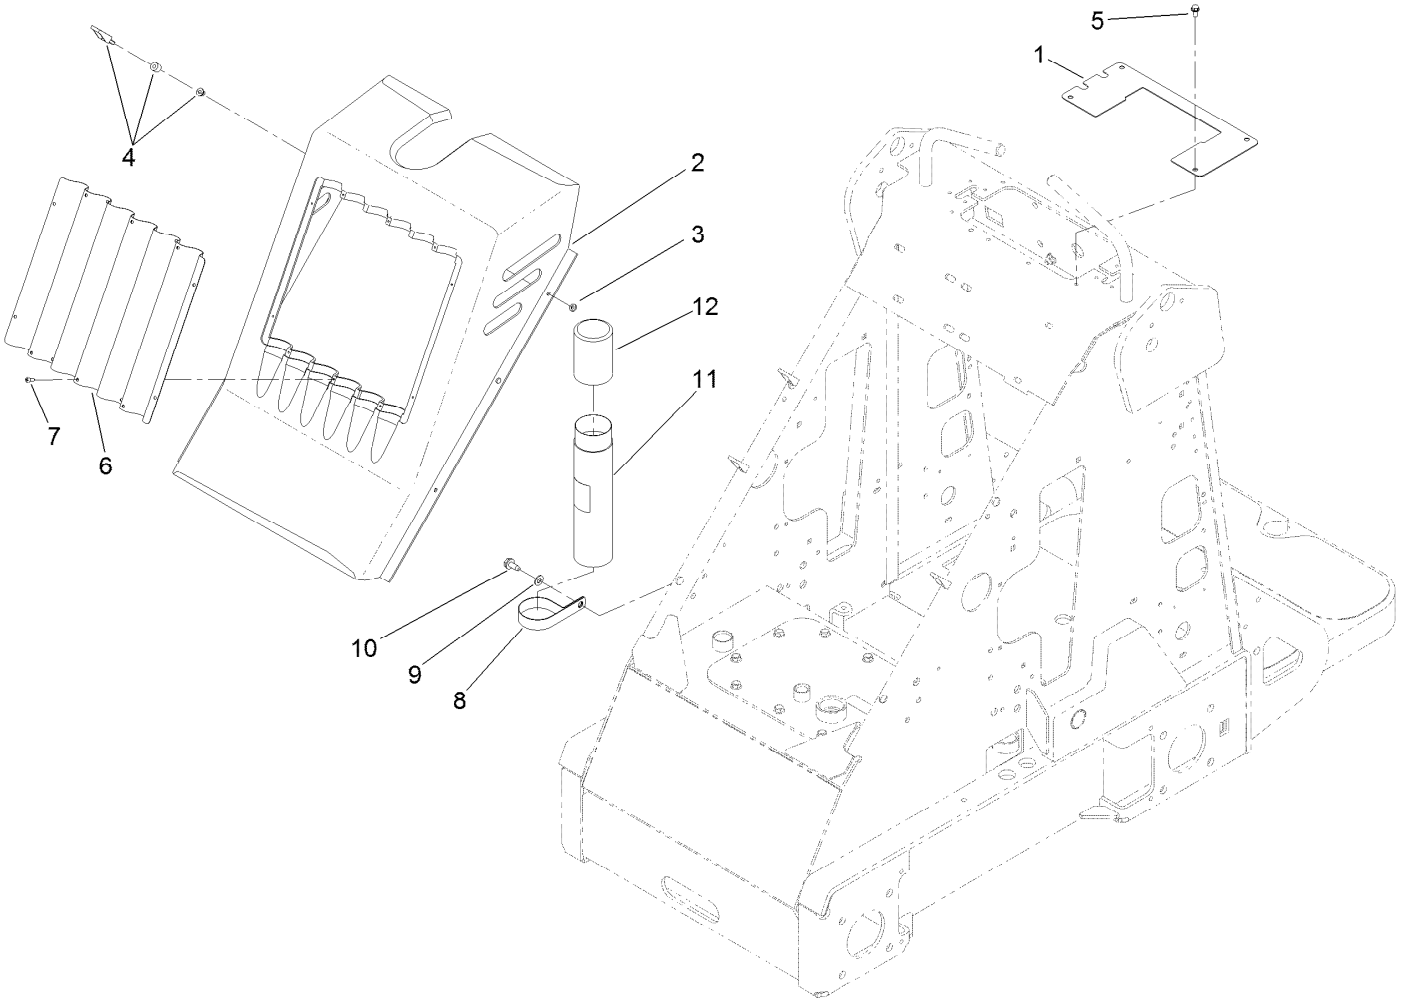

Hood and Screen Assembly (continued)

Ref.	Part Number	Qty.	Description
1	108-9731-05	1	Plate-Cover
2	99-3164	1	Cover-Hood
3	99-3058	4	Washer
4	74-5950	4	Latch-Swell
5	32144-4	4	Screw-HWH
6	99-3147-05	1	Grille - Screen
7	32144-111	10	Screw-PPH
8	2412-133	1	Clamp-R
9	3256-23	1	Washer-Plain
10	32144-70	1	Screw-HWHTF
11	104-7050	1	Tube-Manual
12	104-7048	1	Cap-Housing


Thigh Support Assembly

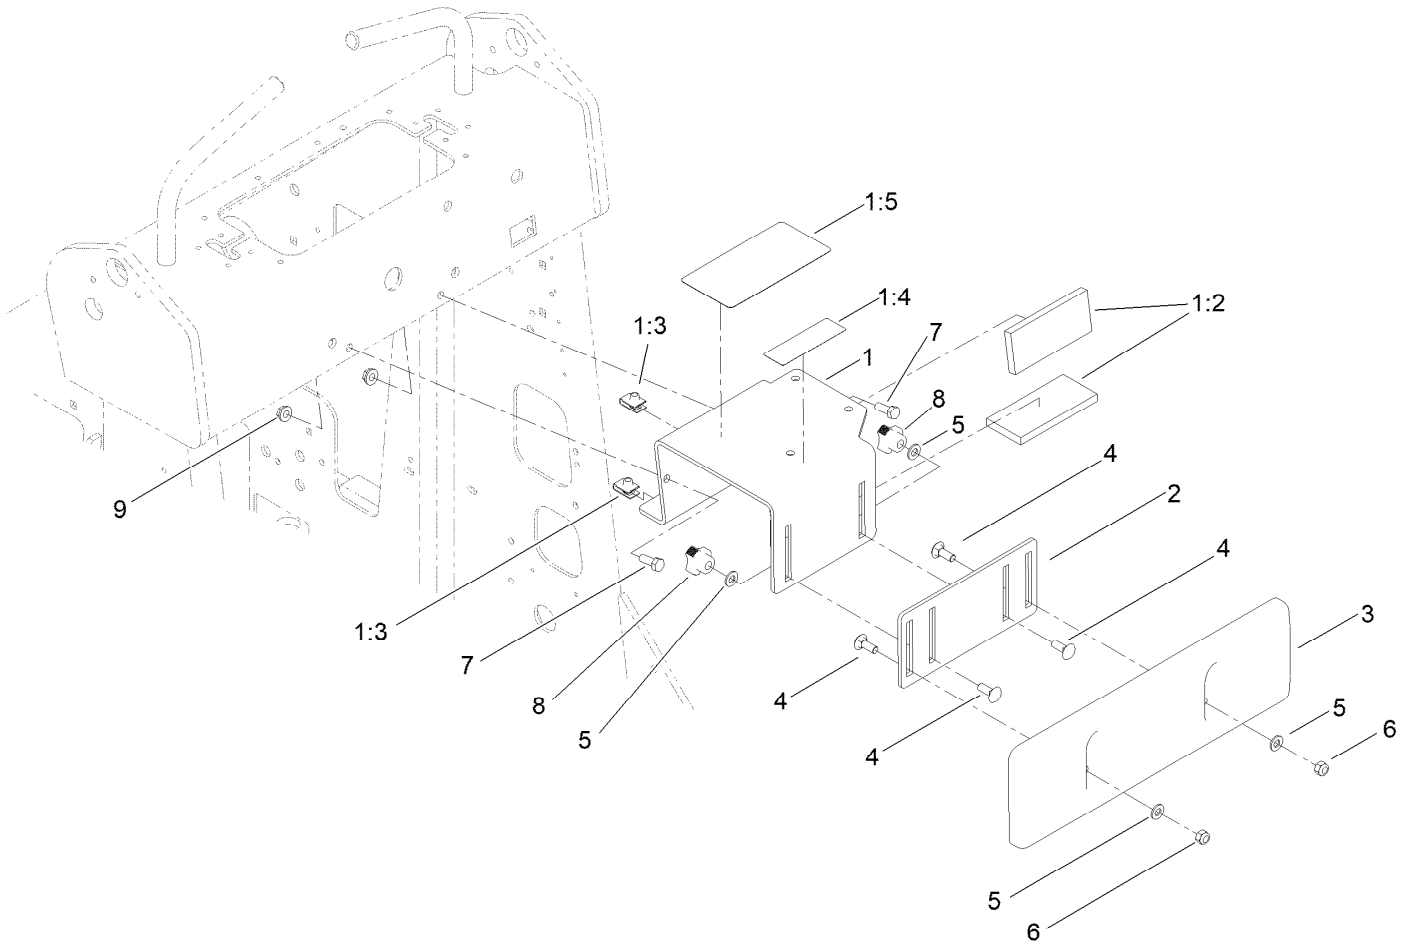

Thigh Support Assembly (continued)

Ref.	Part Number	Qty.	Description
1	117-1813	1	Thigh Support Bracket ASM
1:2	117-1798	2	Pad-Foam
1:3	115-7721	2	Nut-Clip, U
1:4	104-6108	1	Decal-Manual
1:5	139-8815	1	Decal-Service Tx323
2	105-0337-05	1	Plate - Adjusting,Thigh Support
3	105-0333	1	Support-Thigh
4	3230-16	4	Screw-CARR
5	3256-70	4	Washer-Flat
6	3296-72	2	Nut-Lock, NI
7	322-4	2	Screw-HH
8	104-6156	2	Knob-Adjustment
9	32128-20	2	Nut-HF


Wheel and Tire Assembly

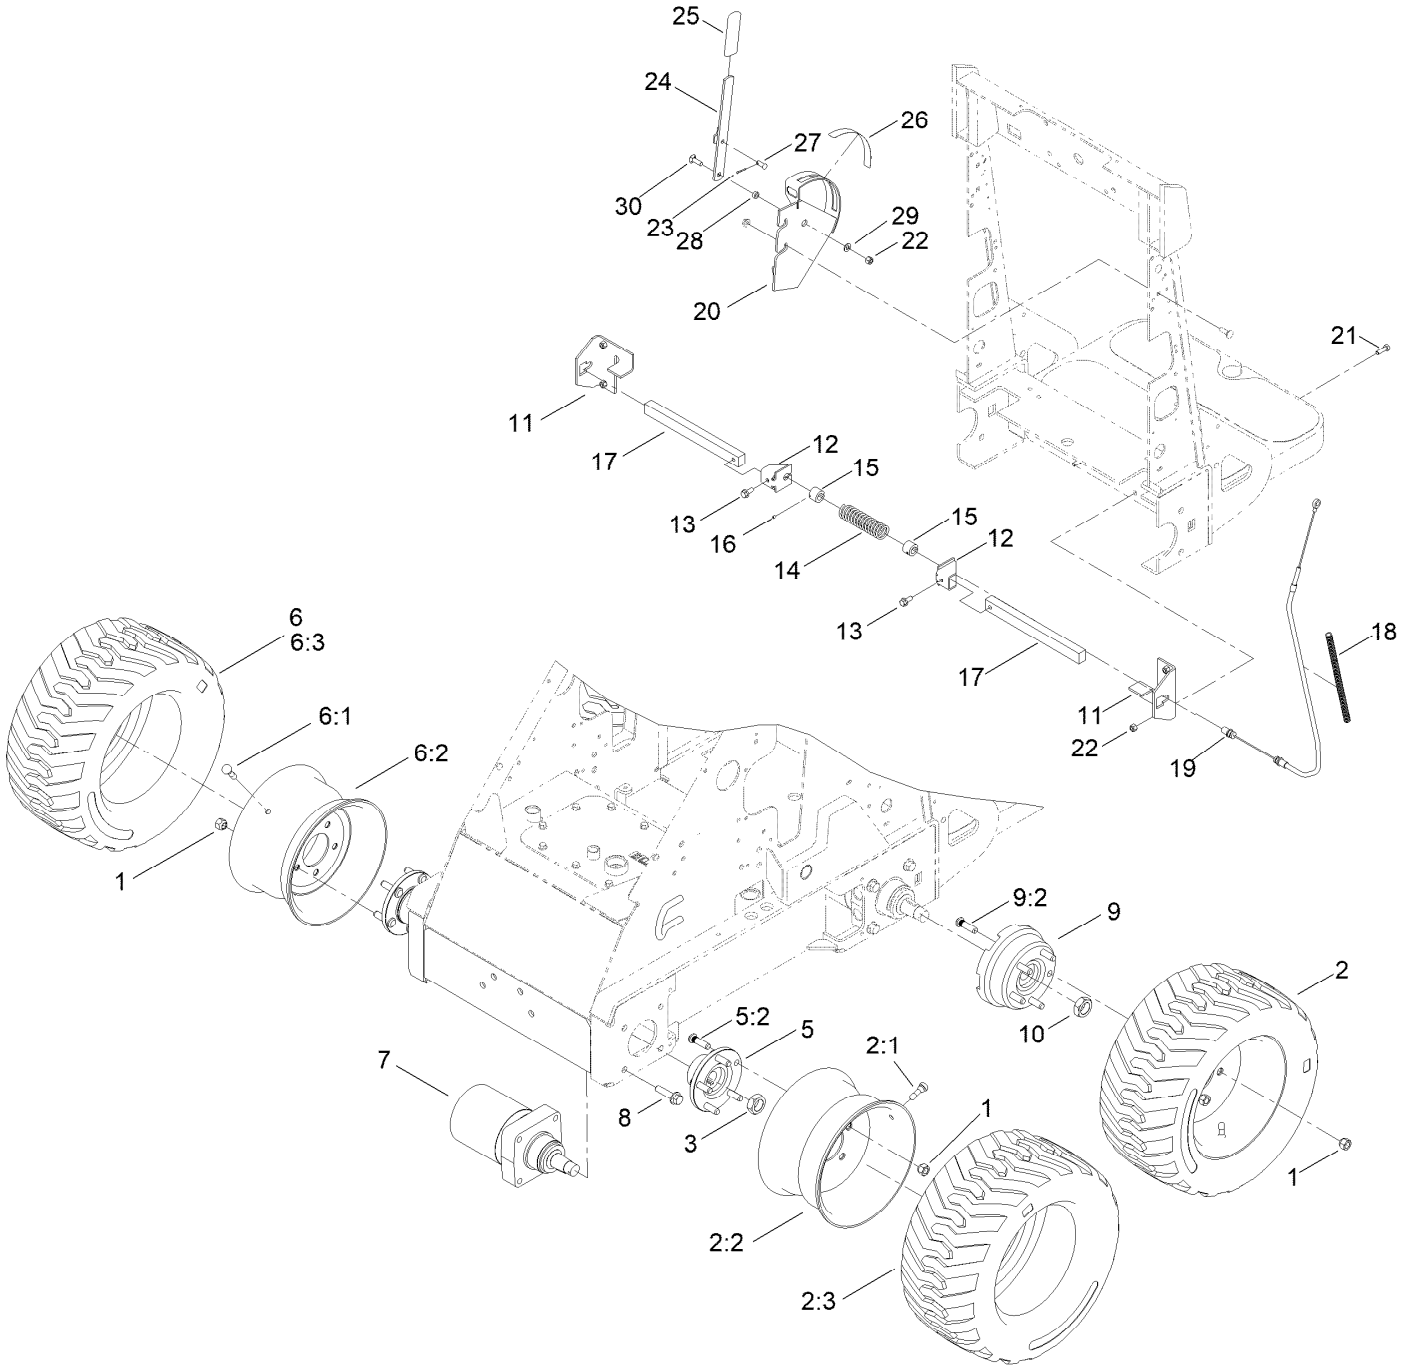

Wheel and Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-2564	20	Nut-Lug
2	144-2575	2	Tire And Wheel ASM, LH
2:1	232-27	1	Stem-Valve
2:2	144-2572	1	Wheel-10X6.00, 5 Bolt
2:3	144-2573	1	Tire-18X8.50-10
3	106-8159	4	Nut-Hex Jam Lck
5	99-3064	2	Hub ASM
5:2	10-6830	5	Stud-Type, Drive
6	144-2574	2	Tire And Wheel ASM, RH
6:1	232-27	1	Stem-Valve
6:2	144-2572	1	Wheel-10X6.00, 5 Bolt
6:3	144-2573	1	Tire-18X8.50-10
7	99-3052	4	HYD Motor ASM
8	3234-27	16	Screw-HHF
9	105-4056	2	Wheel Hub ASM
9:2	10-6830	5	Stud-Type, Drive
10	106-8159	2	Nut-Hex Jam Lck
11	161-9463-0P	2	Bracket-Brake
12	161-9462-0P	2	Bracket-Cable
13	100-1668	2	Screw-HHF
14	100-1678-03	1	Spring
15	100-6274	2	Tube-Guide
16	3245-20	2	Screw-Set
17	100-1674-0P	2	Bar-Brake
18	100-4697	1	Tube-Convoluted
19	100-1679	1	Cable
20	105-8414-05	1	Plate ASM, Welded
21	322-5	4	Screw-HH
22	3296-29	5	Nut-Lock, NI
23	3272-6	1	Pin-Cotter
24	100-1684-05	1	Lever Wa
25	62-9130	1	Grip-Handle
26	100-1692	1	Decal-Brake
27	283-62	1	Pin-Clevis
28	100-1683	1	Hub-Lever
29	3256-23	1	Washer-Plain
30	3230-22	1	Screw-CARR

Hydraulic Motor Assembly No. 99-3052

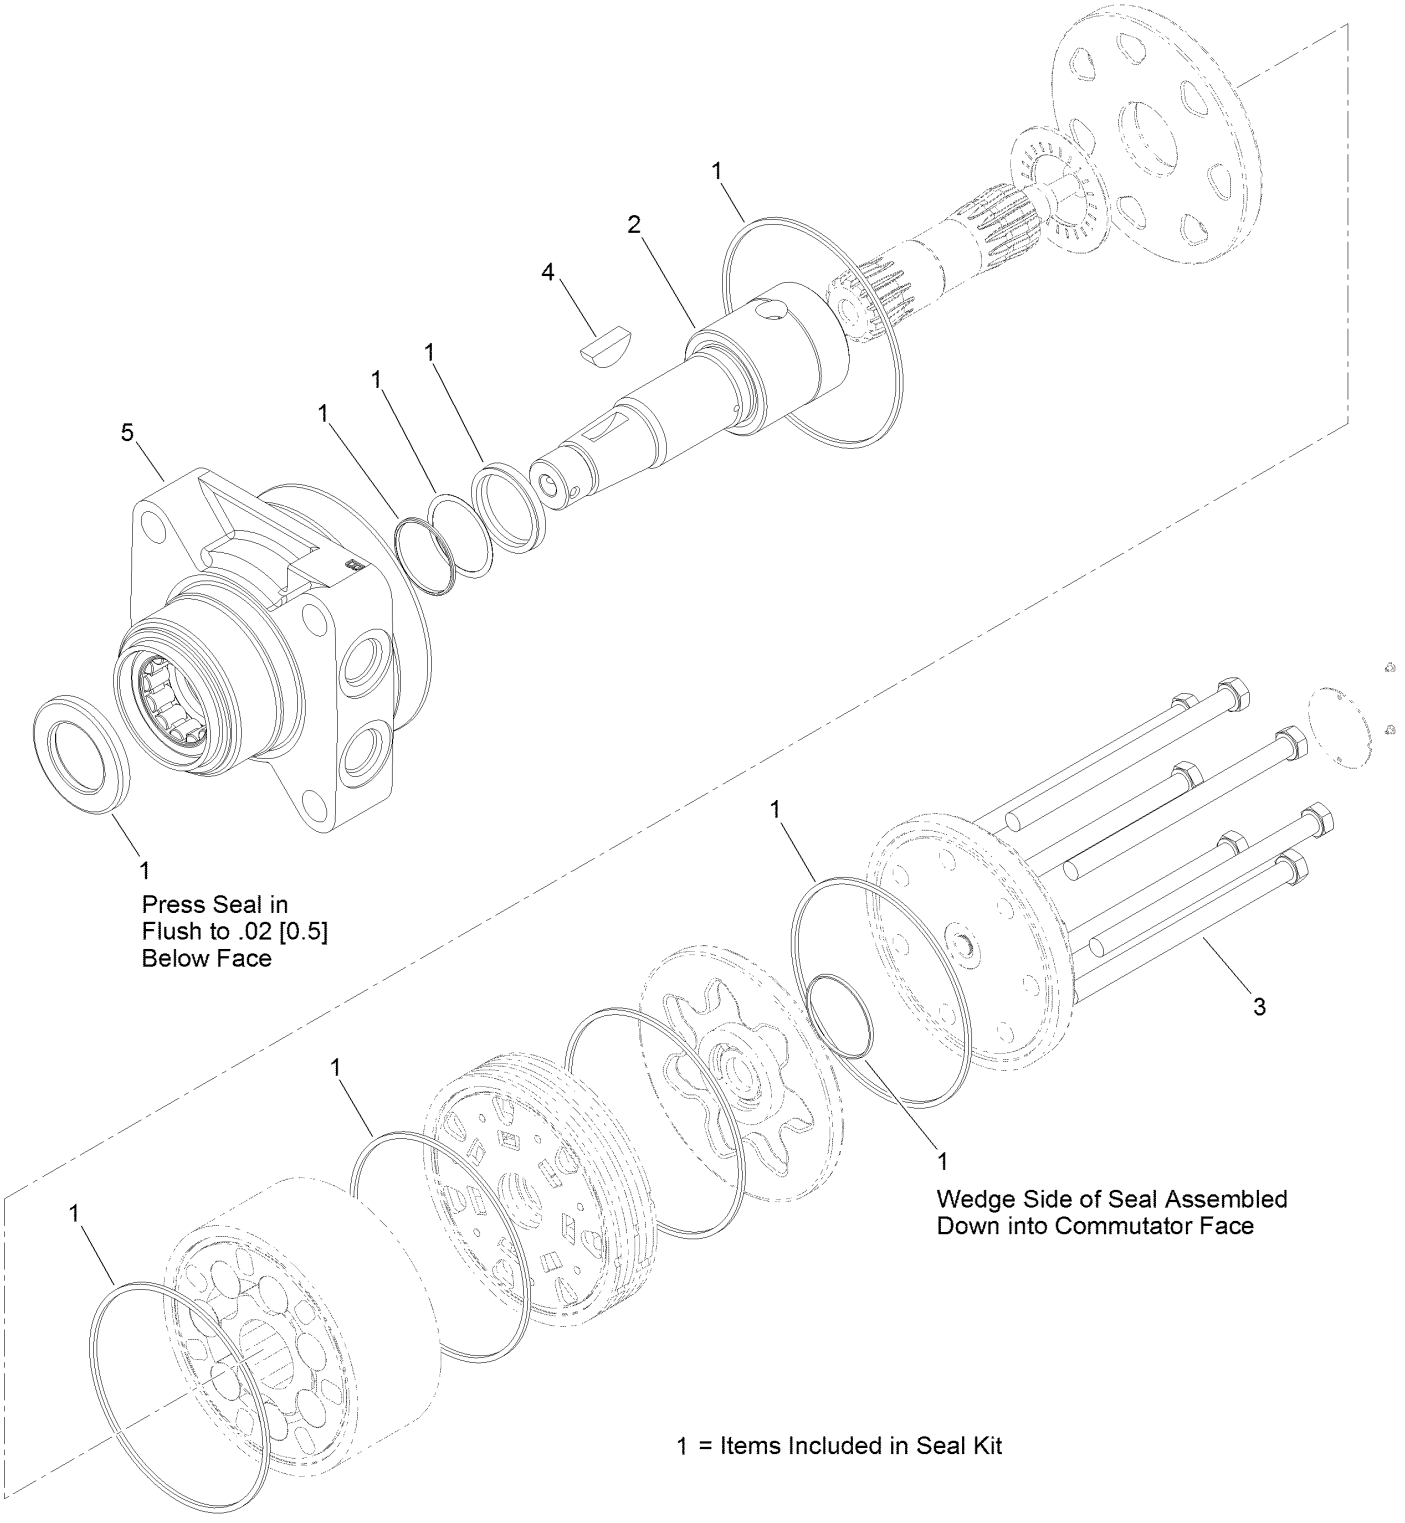


1 = Items Included in Seal Kit

Hydraulic Motor Assembly No. 99-3052 (continued)

Ref.	Part Number	Qty.	Description
1	100-6131	1	Seal Kit
2	99-3090	1	Shaft-Coupling
3	99-3091	7	Screw-Cap, HH
4	3257-42	1	Key-Woodruff
5	120-5392	1	Motor Housing ASM


Engine and Hydraulic Pump Assembly

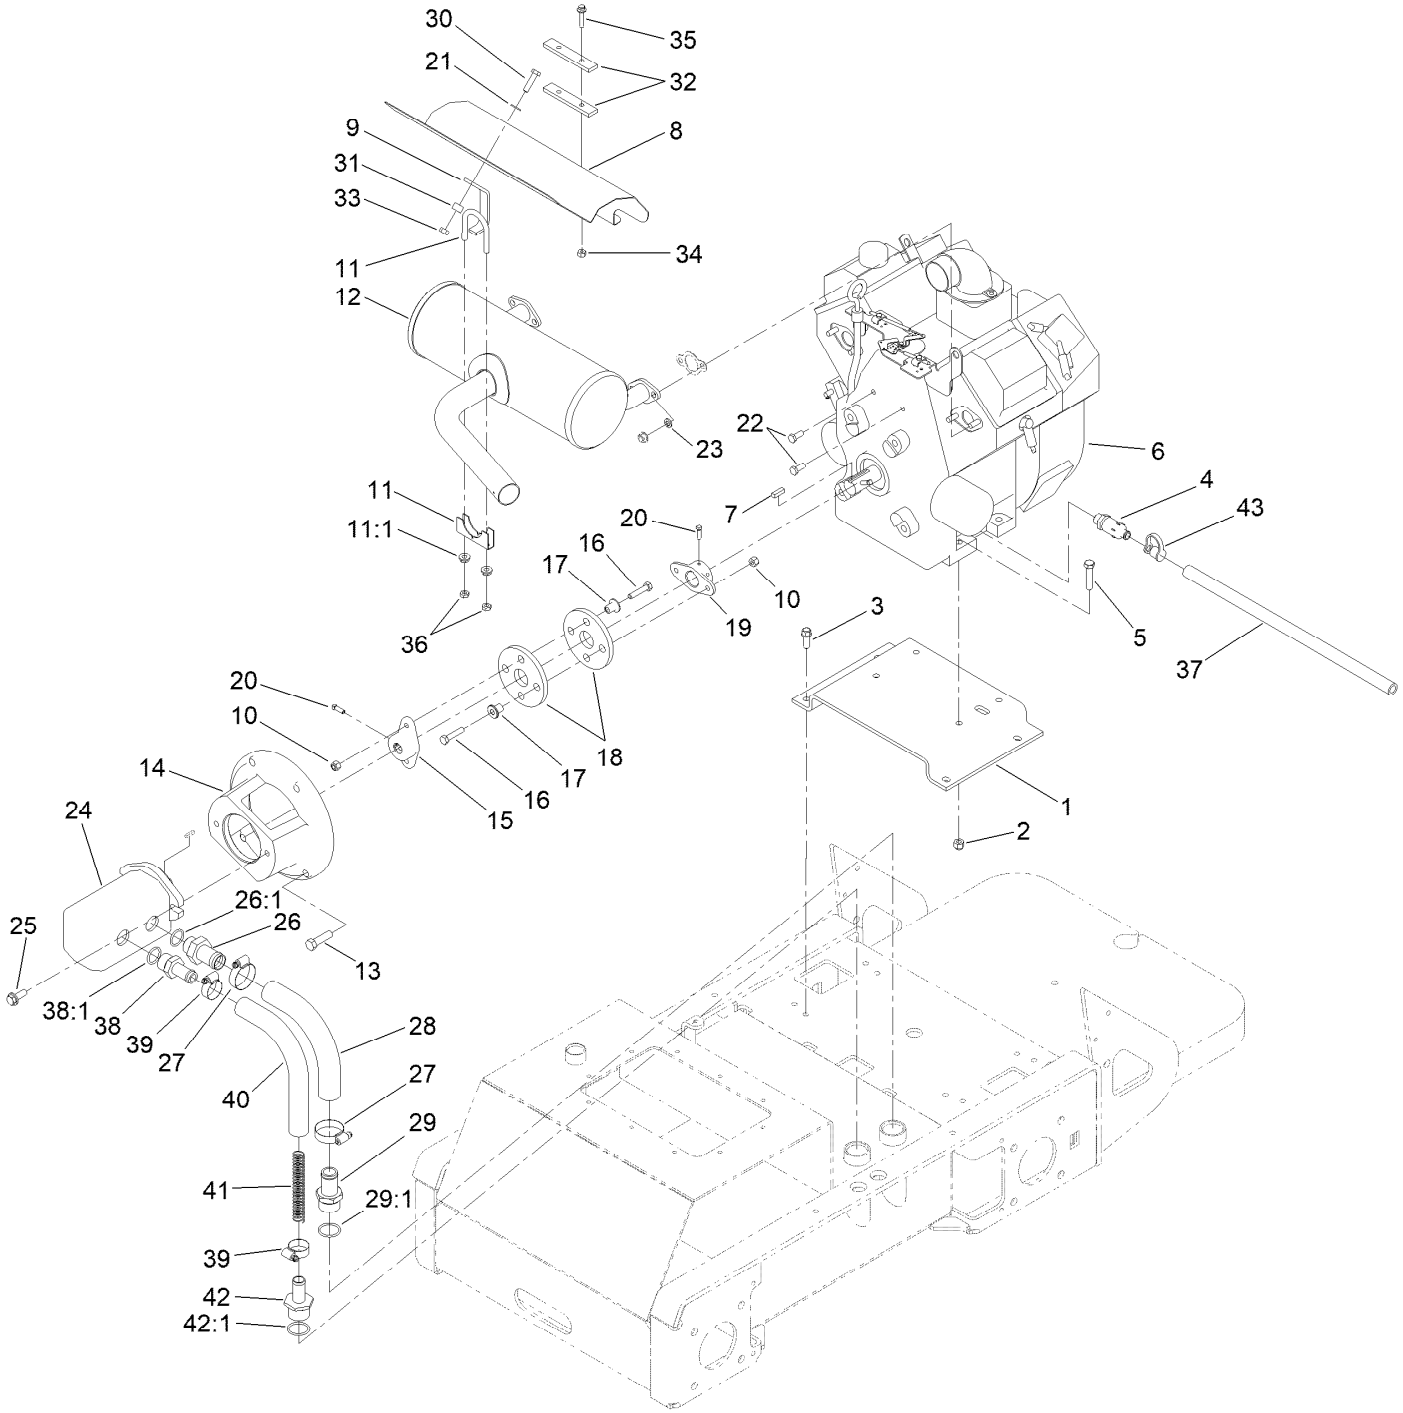

Engine and Hydraulic Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
1	98-4666-03	1	Mount-Engine
2	3296-39	4	Nut-Lock, NI
3	95-1726	4	Screw-Taptite
4	92-6877	1	Valve-Drain, Oil
5	323-9	4	Screw-HH
6	133-8076SP	1	Engine-Kohler, Ch680-3136
7	10-7070	1	Key-Square
8	99-3115-03	1	Shield-Muffler
9	99-3138-03	1	Support-Shield
10	3296-29	4	Nut-Lock, NI
11	2112-9	1	Clamp
11:1	32128-20	2	Nut-HF
12	105-8381	1	Muffler
13	324-6	4	Screw-HH
14	98-2751-0P	1	Mount-Pump
15	98-4701	1	Hub-Pump
16	322-7	4	Screw-HH
17	71-4411	4	Spacer
18	115-4523	2	Coupling-Rubber
19	110-5236	1	Hub-Engine
20	3241-6	4	Screw-SQH
21	3256-23	1	Washer-Plain
22	33114-020	2	Screw-HH
23	3253-4	4	Washer-Lock
24	108-4710	1	HYD Pump ASM
25	66-9300	2	Screw-HHF
26	99-3017	1	Fitting
26:1	237-81	1	O-Ring
27	2412-111	2	Clamp-Hose, W/Liner
28	99-3046	1	Hose-Suction, Formed
29	354-78	1	Fitting-STR
29:1	237-146	1	O-Ring
30	322-6	1	Screw-HH
31	98-4695	1	Spacer
32	99-3116-03	2	Spacer-Bar
33	32152-1	1	Nut-Lock
34	32152-4	2	Nut-Lock, Cone
35	3234-21	2	Screw-HHF
36	3218-2	2	Nut-Hex Jam
37	98-4667	1	Hose
38	354-73	1	Fitting
38:1	237-81	1	O-Ring
39	2412-129	2	Clamp-Hose
40	98-2713	1	Hose-Suction, HYD
41	99-5349	1	Spring-Compression
42	99-6932	1	Fitting-STR
42:1	237-117	1	O-Ring
43	354-79	1	Cap-Dust


Tandem Hydraulic Pump Assembly No. 108-4710

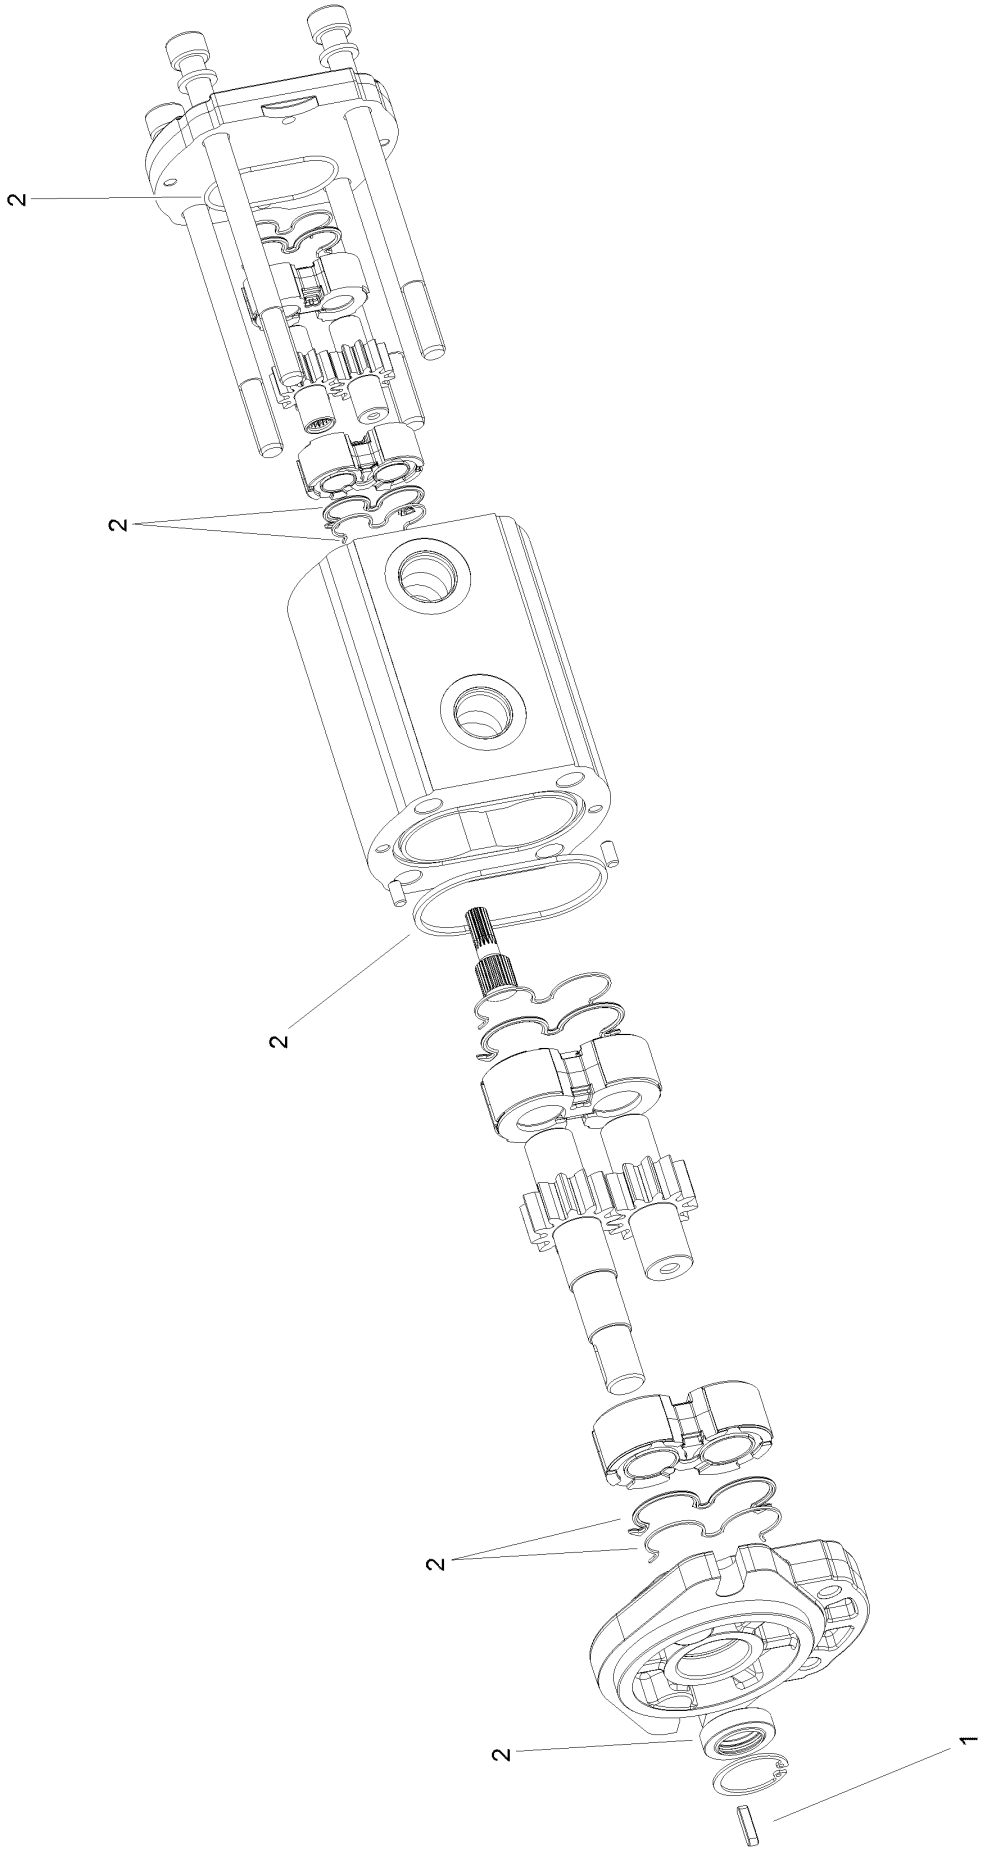

Tandem Hydraulic Pump Assembly No. 108-4710 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	98-4700	1	Key-Square
2	99-1353	1	Seal Kit


Fuel Tank and Air Filter Assembly

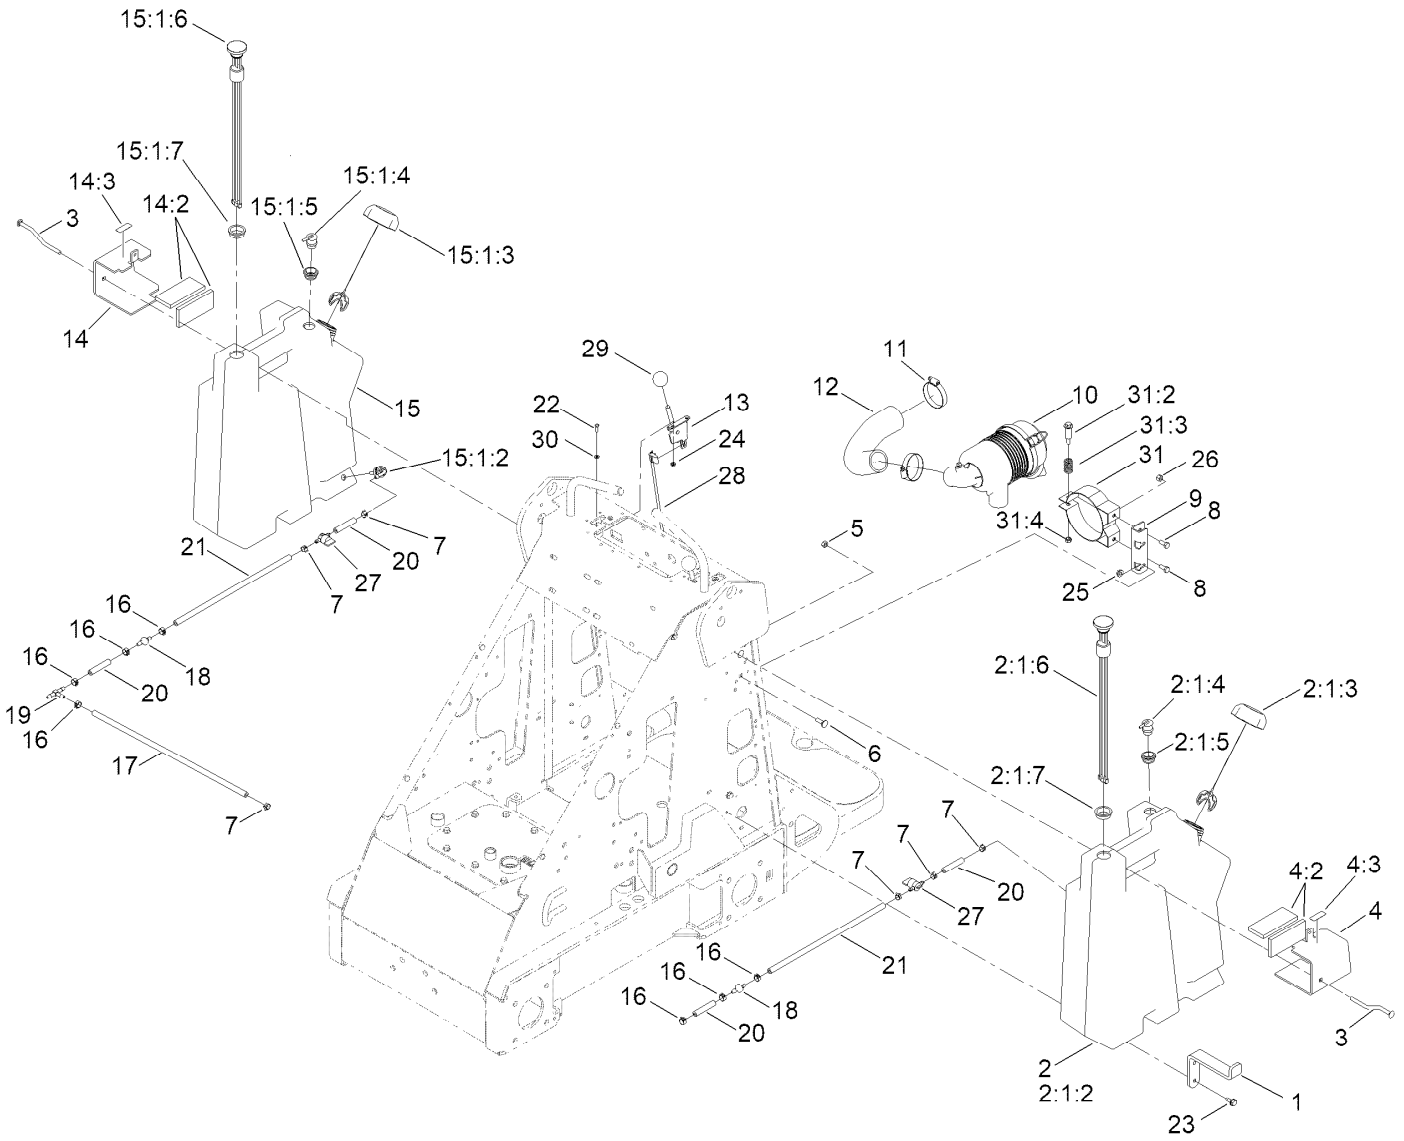

Fuel Tank and Air Filter Assembly (continued)

Ref.	Part Number	Qty.	Description
1	117-1777-05	2	Mount-Tank, Bottom
2	140-7236	1	Tank-Fuel, LH
2:1:2	103-2605	1	Fitting-Fuel, Bulkhead
2:1:3	115-7788	1	Cap-Fuel
2:1:4	114-0285	1	Valve-Rollover
2:1:5	114-0284	1	Grommet
2:1:6	104-5603	1	Gauge-Level, Fuel
2:1:7	95-8972	1	Grommet
3	98-4657	2	Bolt-Mount
4	164-1401	1	LH Tank Mount ASM
4:2	117-1798	2	Pad-Foam
4:3	161-7268	1	Decal-No Smoking
5	32153-3	2	Nut-Hex, Side Deform
6	3230-2	2	Bolt-CARR
7	2412-98	7	Clamp-Hose
8	322-3	2	Screw-HH
9	99-3080-03	1	Mount-Cleaner, Air
10	93-2190	1	Air Cleaner ASM
11	2412-42	2	Clamp-Hose
12	161-9455	1	Hose - Air
13	108-9730	2	Lever-Control
14	164-1402	1	RH Tank Mount ASM
14:2	117-1798	2	Pad-Foam
14:3	161-7268	1	Decal-No Smoking
15	140-7235	1	Tank-Fuel,RH
15:1:2	103-2605	1	Fitting-Fuel, Bulkhead
15:1:3	115-7788	1	Cap-Fuel
15:1:4	114-0285	1	Valve-Rollover
15:1:5	114-0284	1	Grommet
15:1:6	104-5603	1	Gauge-Level, Fuel
15:1:7	95-8972	1	Grommet
16	92-2379	7	Clamp-Hose
17	110-5701	1	Hose-Fuel
18	99-5000	2	Valve-Check, Fuel
19	99-5005	1	Fitting-Tee, Barbed
20	109-0304	4	Hose-Fuel
21	109-0296	2	Hose-Fuel
22	3290-134	4	Screw
23	32144-70	4	Screw-HWHTF
24	32149-7	4	Nut-Keps
25	32128-20	2	Nut-HF
26	3296-29	2	Nut-Lock, NI
27	1-603770	2	Valve-Fuel
28	108-4718	2	Cable-Control
29	233-42	2	Knob
30	3256-51	4	Washer-Flat
31	93-2191	1	Air Cleaner Mounting Band ASM
31:2	94-3653	1	Bolt
31:3	94-3654	1	Spring
31:4	33024-00	1	Nut-Lock, NI


Air Cleaner Assembly No. 93-2190

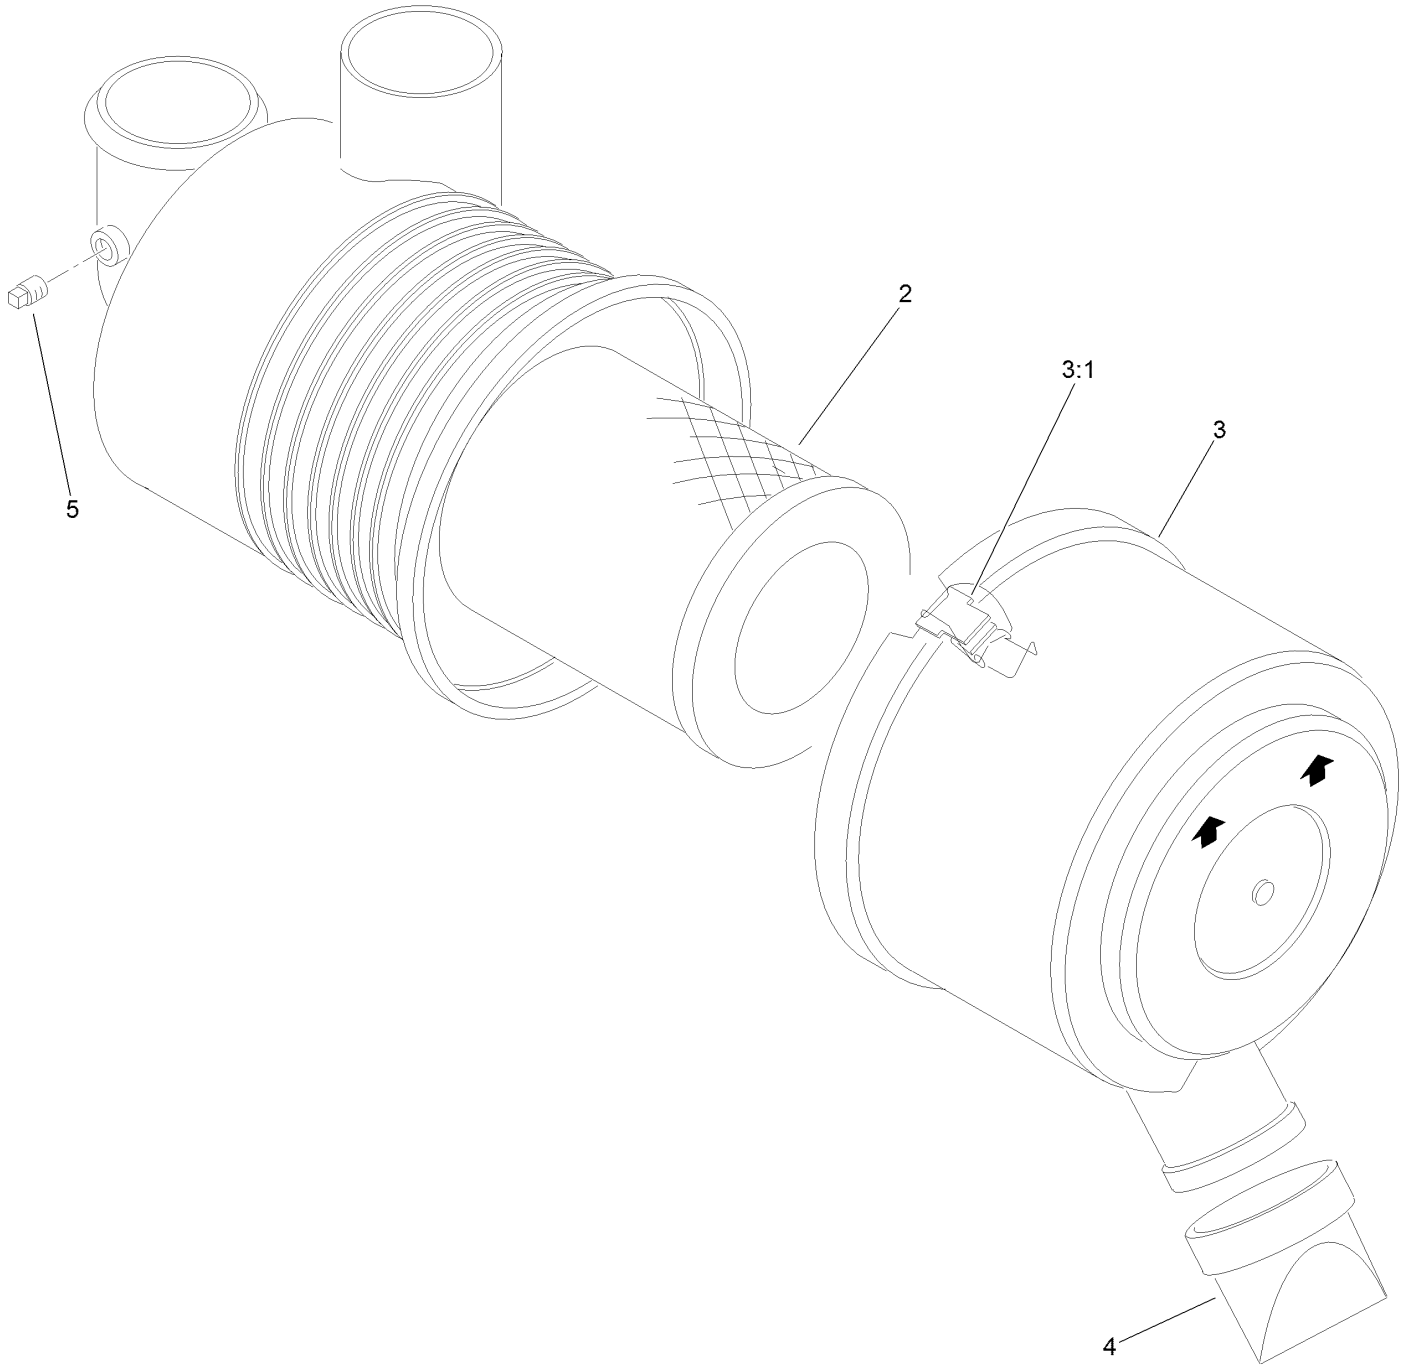

Air Cleaner Assembly No. 93-2190 (continued)

Ref.	Part Number	Qty.	Description
2	108-3811	1	Filter-Air V-Twin HD
3	94-3652	1	Cover ASM
3:1	1-643283	2	Latch-Cleaner, Air
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe


Carbon Canister Assembly

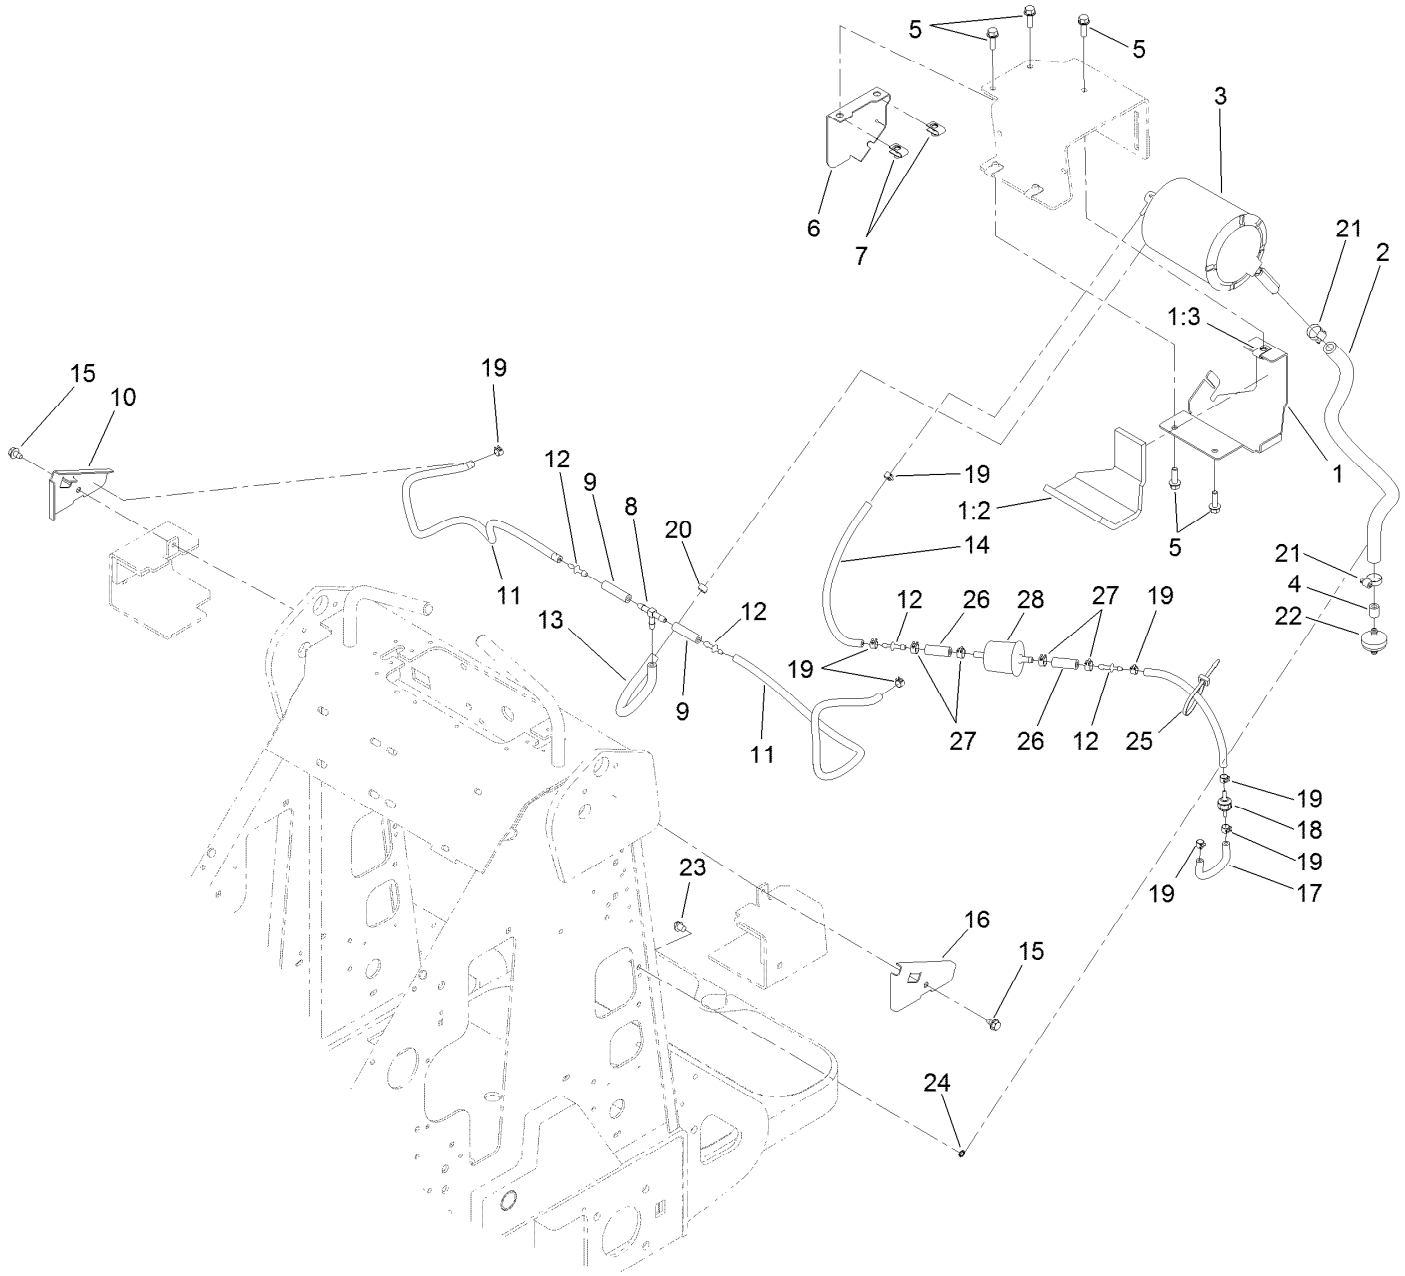

Carbon Canister Assembly (continued)

Ref.	Part Number	Qty.	Description
1	117-1821	1	Canister Mount ASM
1:2	117-1799	1	Pad-Foam
1:3	115-7721	1	Nut-Clip, U
2	106-5709	1	Hose-Vent
3	116-1442	1	Canister-Carbon, 1200Cc
4	117-1789	1	Hose-Fuel
5	3234-29	5	Screw-HHF
6	117-1785-05	1	Cover - Canister [blk-Txt]
7	115-7721	2	Nut-Clip, U
8	99-5005	1	Fitting-Tee, Barbed
9	99-9415	2	Hose-Fuel
10	117-1792-05	1	Plate-Hose Retainer R.H.
11	119-6074	2	Hose-Fuel
12	106-8150	4	Fitting-Straight
13	109-0294	1	Hose-Fuel
14	51-3217	2	Hose-Fuel
15	9266934	2	Screw
16	117-1791-05	1	Plate-Hose Retainer L.H.
17	115-4736	1	Hose-Fuel
18	133-8499	1	Valve-Check, Vacuum
19	2412-146	8	Clamp-Hose
20	2412-98	1	Clamp-Hose
21	2412-36	2	Clamp-Hose
22	115-7854	1	Filter-Fuel, Inline
23	32180-030	1	Clip-Tie
24	3254-8	1	Washer-Lock
25	3290-378	1	Tie-Cable
26	106-5317	2	Hose-Fuel
27	92-2379	4	Clamp-Hose
28	120-2235	1	Filter-Fuel


Loader and Quick Attach Assembly

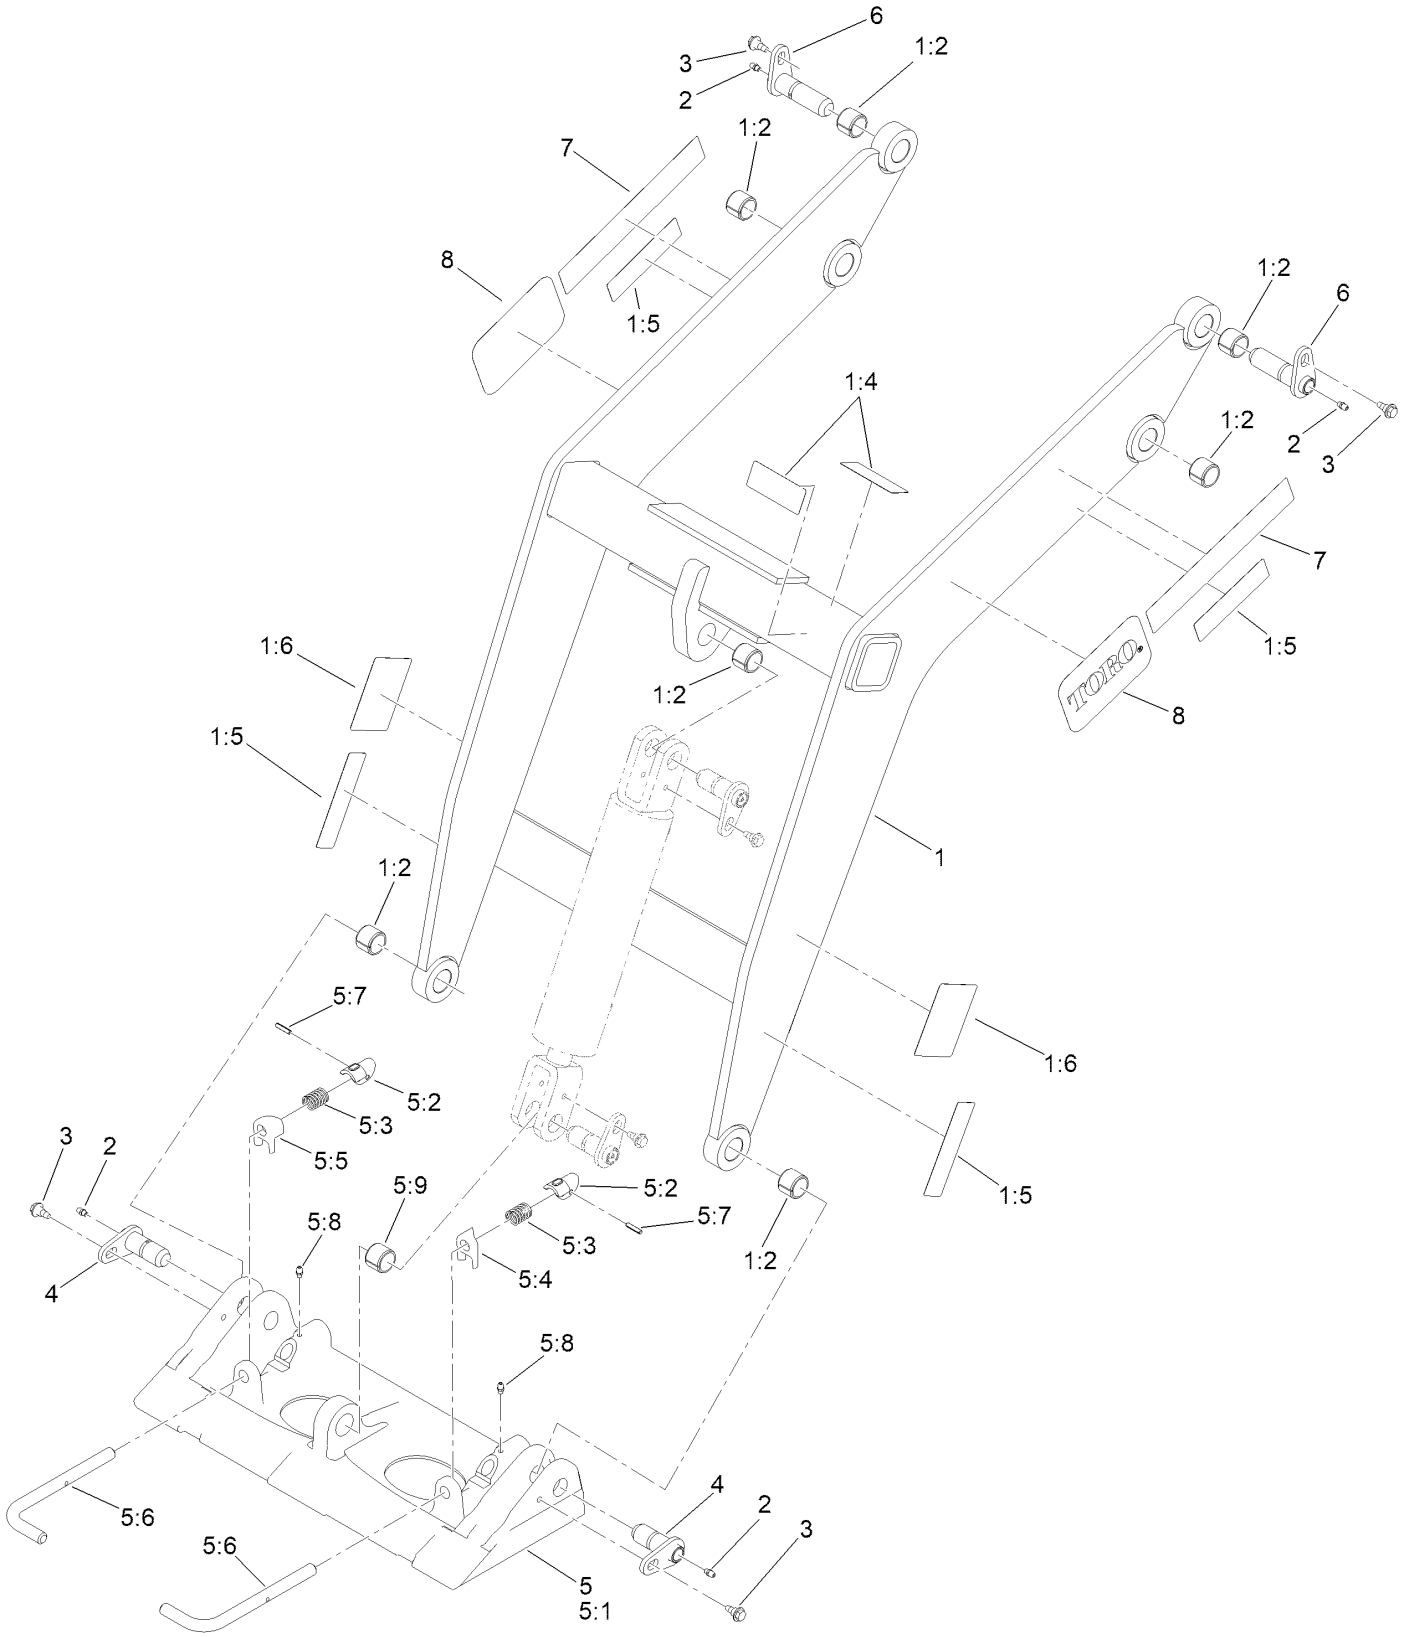

Loader and Quick Attach Assembly (continued)

Ref.	Part Number	Qty.	Description
1	106-8155	1	Loader ASM
1:2	98-4871	7	Bushing-Tension
1:4	130-2837	2	Decal-Warning, No Rider
1:5	130-2836	4	Decal-Warning, Crushing
1:6	139-7708	2	Decal-Warning, Bucket
2	302-5	4	Fitting-Grease
3	99-5105	4	Screw-Shoulder
4	112-2609	2	Pin-Pivot
5	132-8418	1	Quick Attach ASM
5:1	130-7708-05	1	Mount-Qtach, [blk-Txt]
5:2	105-0246	2	Cam
5:3	98-4694	2	Spring-Compression
5:4	104-5909	1	Stop-RH
5:5	104-5903	1	Stop-LH
5:6	132-8419	2	Pin-Locking
5:7	3285-1	2	Pin-Grooved
5:8	302-5	2	Fitting-Grease
5:9	98-4871	1	Bushing-Tension
6	120-5363	2	Pin-Pivot
7	117-9980	2	Decal
8	93-7340	2	Decal

Electrical Component Assembly

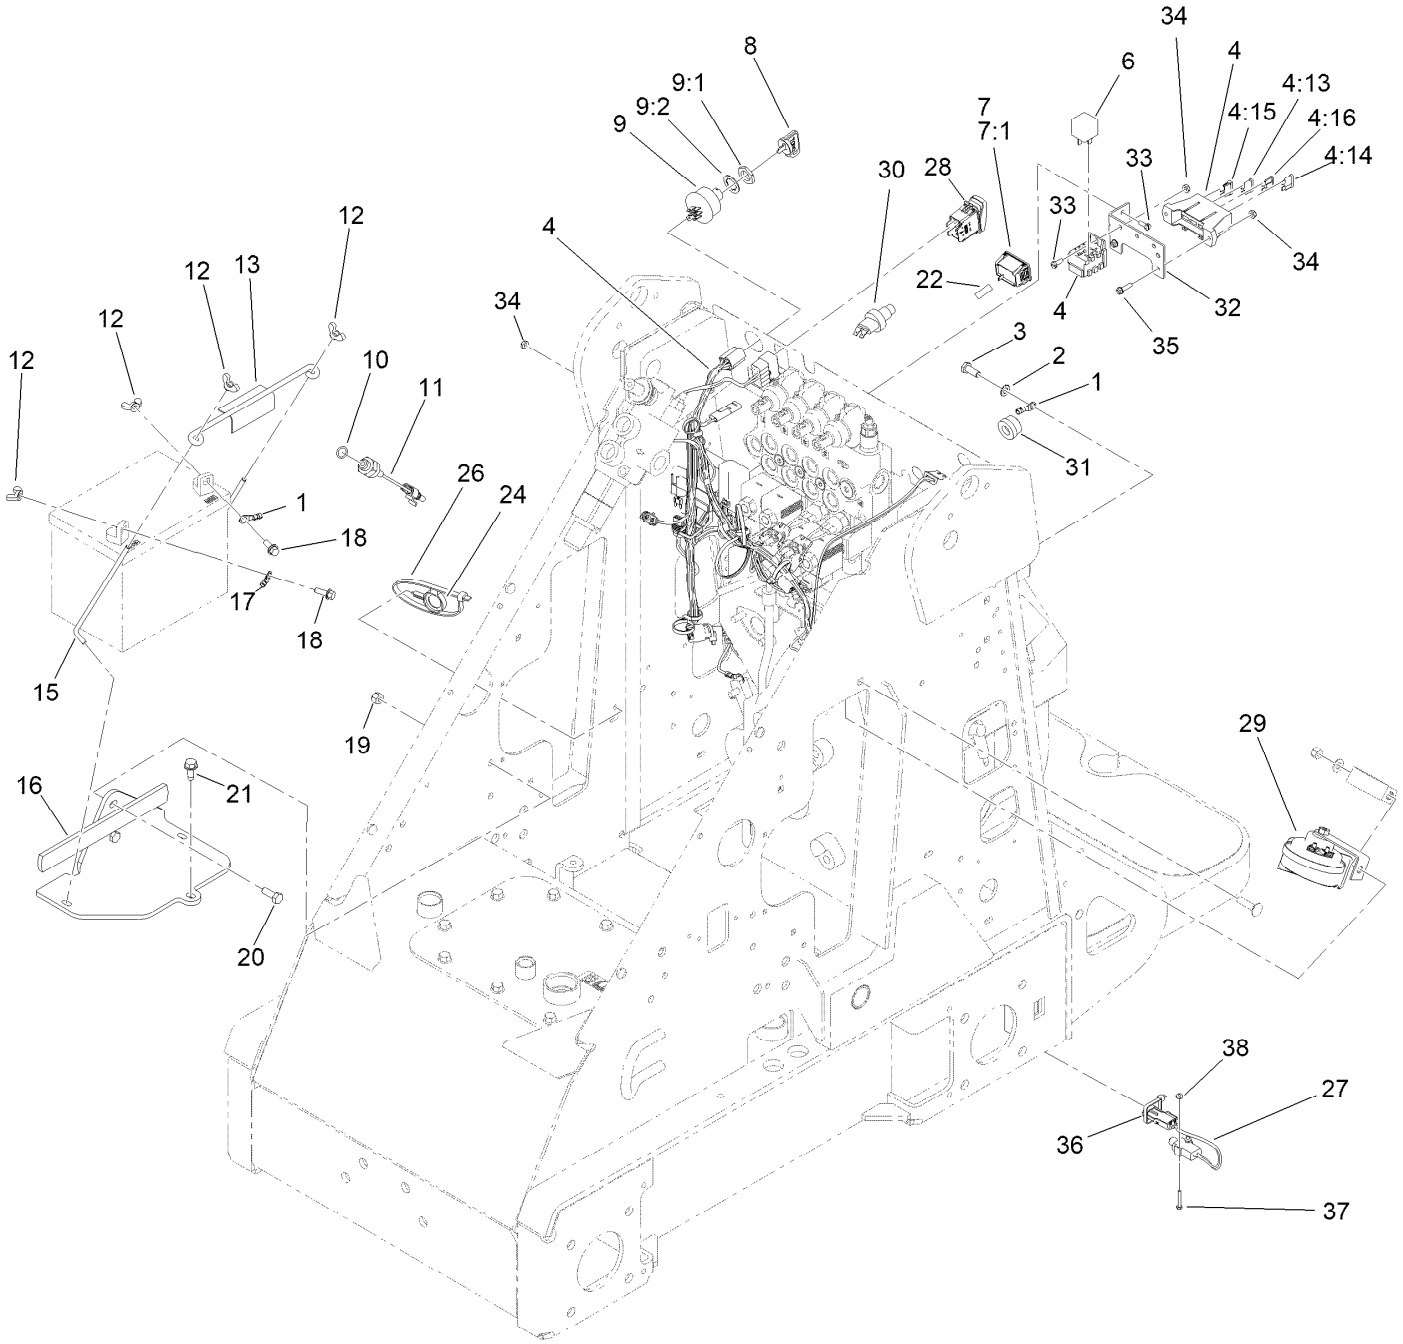


Electrical Component Assembly (continued)

Ref.	Part Number	Qty.	Description
1	111075	1	Wire ASM
2	3255-8	1	Washer-Lock
3	33114-020	1	Screw-HH
4	122-4032	1	Harness-Wire, Main
4:13	94-6710	1	Fuse-2 Amp
4:14	218-578	1	Fuse-Blade, 10 Amp
4:15	109355	1	Fuse-Blade, 15 Amp
4:16	109102	1	Fuse-Blade, 25 Amp
6	98-7249	2	Relay
7	105-4067	1	Hourmeter-Inductive
7:1	104-4234	1	Clip-Mounting
8	63-8360	2	Key-Ignition
9	104-2541	1	Ignition Switch ASM
9:1	218-461	1	Nut-HH
9:2	3254-5	1	Washer-Lock
10	237-42	1	O-Ring
11	72-4310	1	Switch-Ball
12	32103-22	4	Nut-Wing
13	113010	1	Holddown-Battery
15	99-5027	2	Retainer-Battery
16	99-3060-03	1	Battery Mount ASM
17	100-1712	1	Cable-Positive
18	3234-4	2	Screw-HHF
19	3296-29	2	Nut-Lock, NI
20	322-4	2	Screw-HH
21	32144-70	1	Screw-HWHTF
22	104-7408	1	Wire-Hourmeter
24	32180-030	1	Clip-Tie
26	3334-945	1	Tie-Cable
27	99-3410	1	Switch
28	122-2542	1	Switch-Rocker, On-None-(On)
29	116749	1	Horn
30	112-3324	1	Switch-Horn
31	112-3313	1	Nut-Weatherproof
32	161-9473-0P	1	Bracket-Relay
33	32105-8	3	Screw-SHH
34	3296-12	5	Nut-Lock, NI
35	32105-13	2	Screw-HWH
36	3290-378	1	Tie-Cable
37	32105-9	2	Screw-HH
38	3296-9	2	Nut-Hex
99	3290-381	5	Tie-Cable ●

● Not illustrated

Hydraulic Tank and Filter Assembly

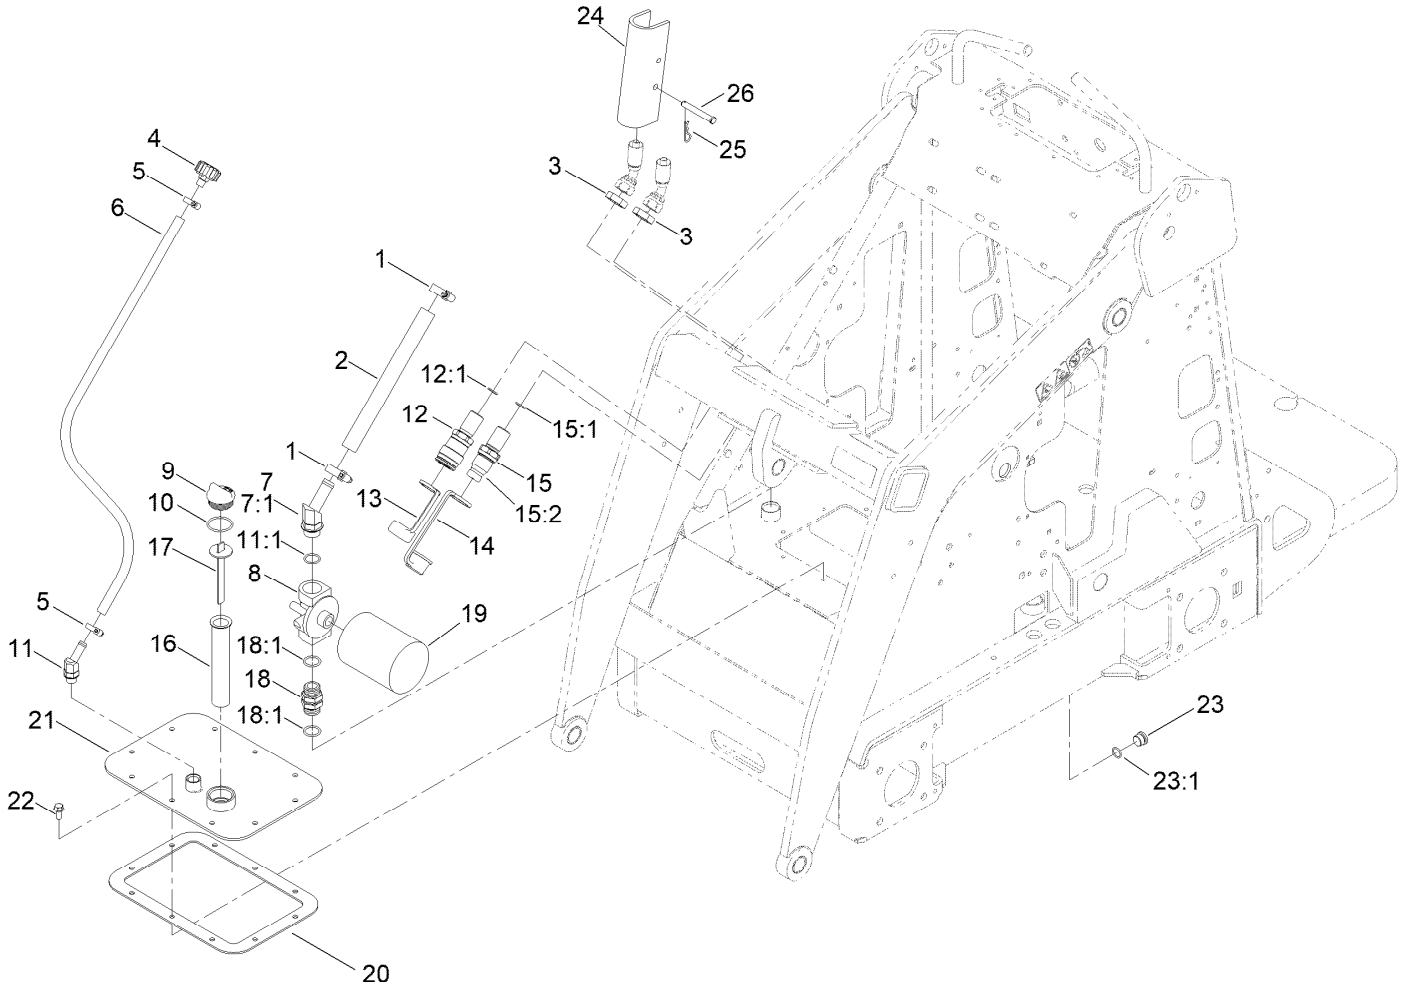


Hydraulic Tank and Filter Assembly (continued)

Ref.	Part Number	Qty.	Description
1	2412-129	2	Clamp-Hose
2	98-4745	1	Hose-HYD, Suction, Hi
3	340-74	2	Nut-Lock, Bulkhead
4	68-6150	1	Breather
5	2412-36	2	Clamp-Hose
6	98-2708	1	Hose-Vent
7	354-127	1	Fitting-Elbow45
7:1	237-81	1	O-Ring
8	92-5821	1	Head-Filter
9	93-7498	1	Plug-Plastic
10	237-101	1	O-Ring
11	354-126	1	Fitting-Elbow, 45
11:1	237-79	1	O-Ring
12	105-8394	1	Bulkhead Coupler ASM
12:1	237-65	1	O-Ring
13	100-8816	1	Cap-Dust, Coupler
14	100-8815	1	Cap-Dust, Nipple
15	105-8395	1	Bulkhead Nipple ASM
15:1	237-65	1	O-Ring
15:2	100-6120	1	Seal Kit ●
16	61-2790	1	Filter-Screen
17	100-2097	1	Dipstick-Oil
18	98-9906	1	Fitting-Thread, Straight
18:1	237-81	2	O-Ring
19	54-0110	1	Filter-Oil, Transmission
20	98-9927	1	Gasket-Cover
21	100-1713-01	1	Cover
22	98-9940	10	Screw-HHF
23	353-988	1	Plug-Hex
23:1	237-79	1	O-Ring
24	98-4675-01	2	Lock-Cylinder
25	3290-467	2	Pin-Hair
26	283-52	2	Pin-Clevis

● Not illustrated


Auxiliary Lever Handle Assembly

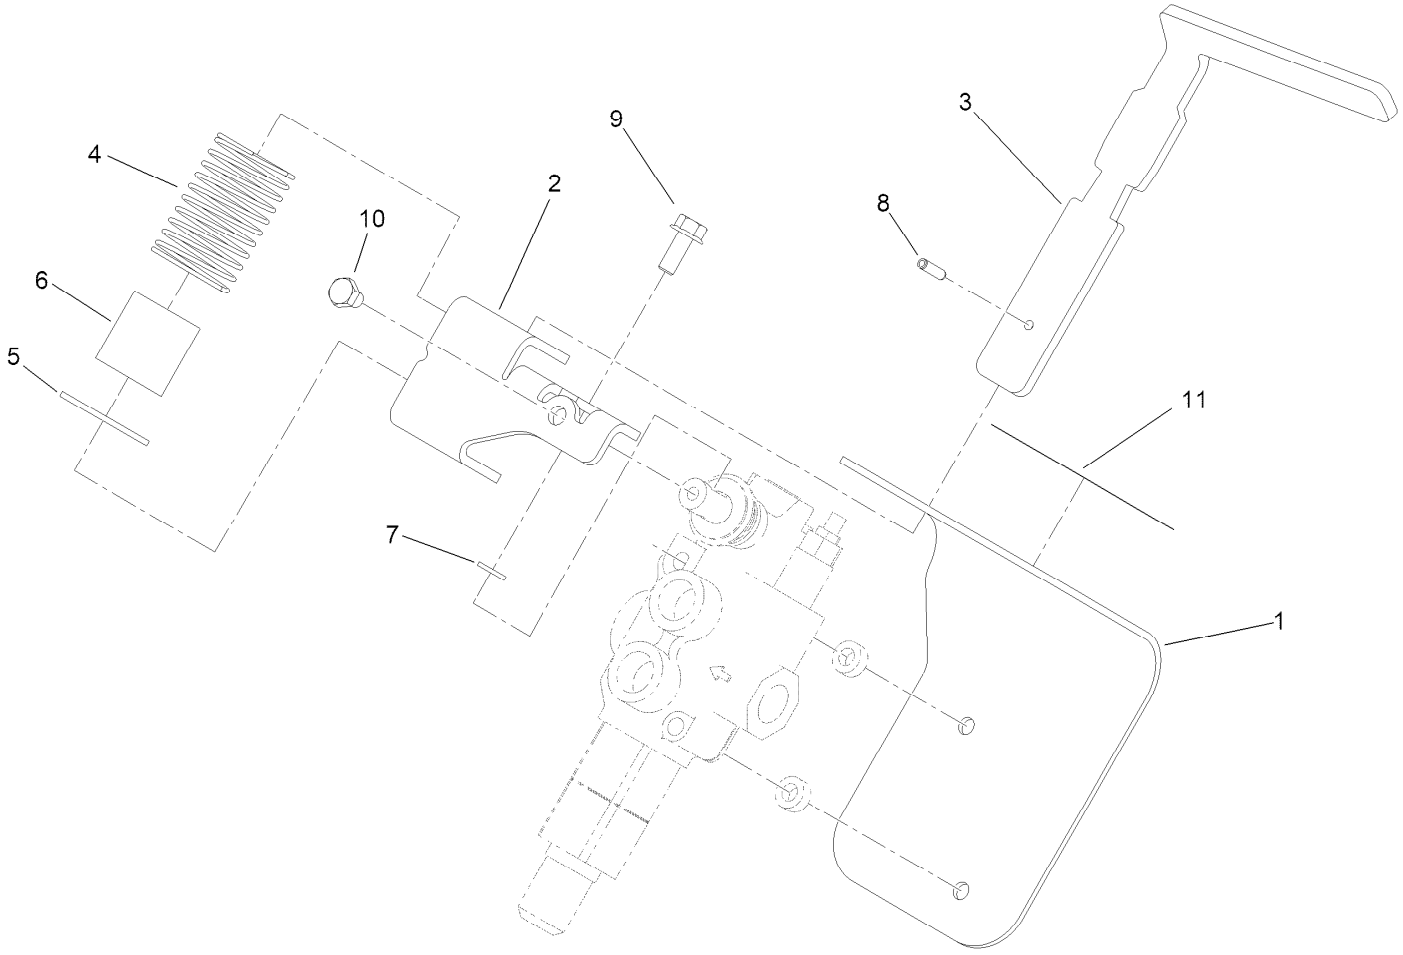

Auxiliary Lever Handle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	110-0121-05	1	Bracket-Aux
2	114-1263-05	1	Mount-Lever, Aux
3	110-0123	1	Handle-Lever, Auxiliary
4	110-0124	1	Spring
5	110-0125	1	Retainer-Spring, Auxiliary
6	110-0160	1	Tube-Spring
7	3253-4	1	Washer-Lock
8	32121-3	1	Pin-Spring
9	33104-020	1	Screw-HHF
10	33114-010	1	Screw-HH
11	108-4723	1	Decal-Auxiliary, CE


Auxiliary Valve and Selector Valve Assembly

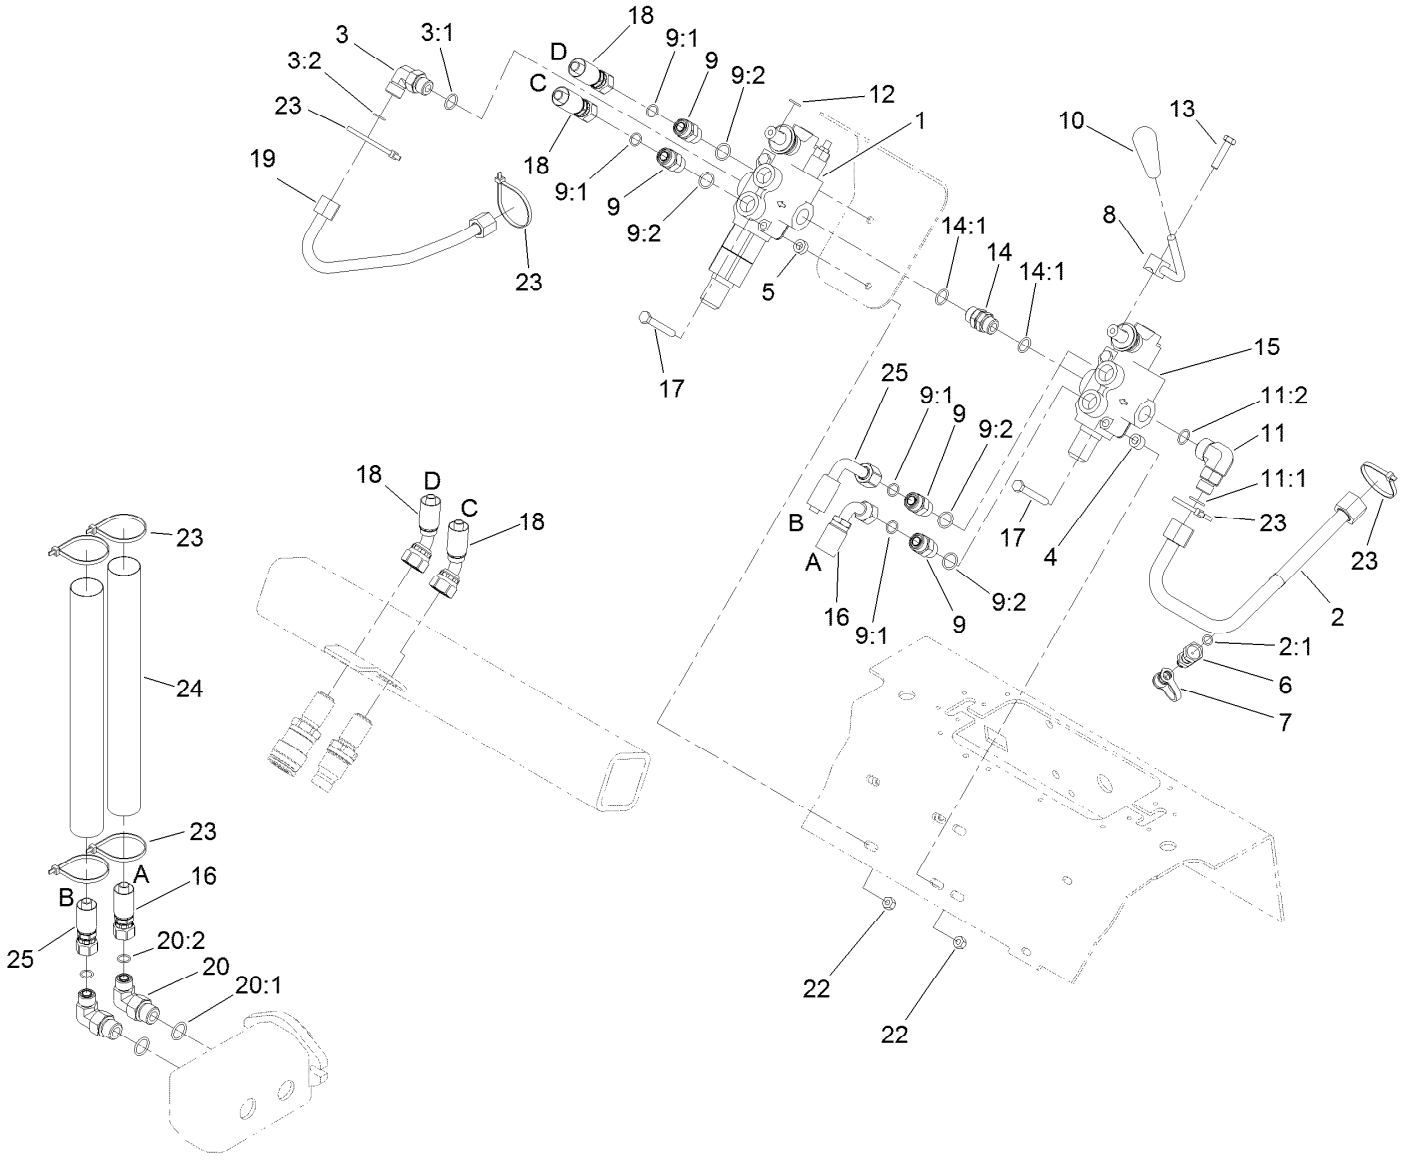

Auxiliary Valve and Selector Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
1	99-3077	1	Valve-HYD, Auxiliary
2	108-4716	1	HYD Tube ASM
2:1	237-22	1	O-Ring
3	340-98	1	Fitting-Elbow, 90 DEG
3:1	237-79	1	O-Ring
3:2	237-30	1	O-Ring
4	98-4695	2	Spacer
5	100-2085	2	Spacer
6	86-5480	1	Nipple-Test
7	354-79	1	Cap-Dust
8	108-9709-03	1	Lever-Control
9	340-4	4	Fitting-Straight
9:1	237-30	1	O-Ring
9:2	237-79	1	O-Ring
10	98-0152	1	Knob-Tapered
11	340-153	1	Fitting-Elbow, 90 DEG
11:1	237-79	1	O-Ring
11:2	237-151	1	O-Ring
12	3253-4	1	Washer-Lock
13	33114-035	1	Screw-HH
14	95-3209	1	Fitting-Thread, Straight
14:1	237-79	2	O-Ring
15	99-3072	1	Valve-Selector, HYD
16	98-4747	1	Hose-HYD
17	322-12	4	Screw-HH
18	100-8817	2	Hose-HYD
19	105-7879	1	Tube-HYD
20	340-105	2	Fitting-Elbow, 90 DEG
20:1	237-80	1	O-Ring
20:2	237-30	1	O-Ring
22	119-4041	4	Nut-HF
23	3290-379	8	Tie-Cable
24	108-9715	2	Sleeve-Thermal
25	99-3008	1	Hose-HYD


Auxiliary Hydraulic Valve Assembly No. 99-3077

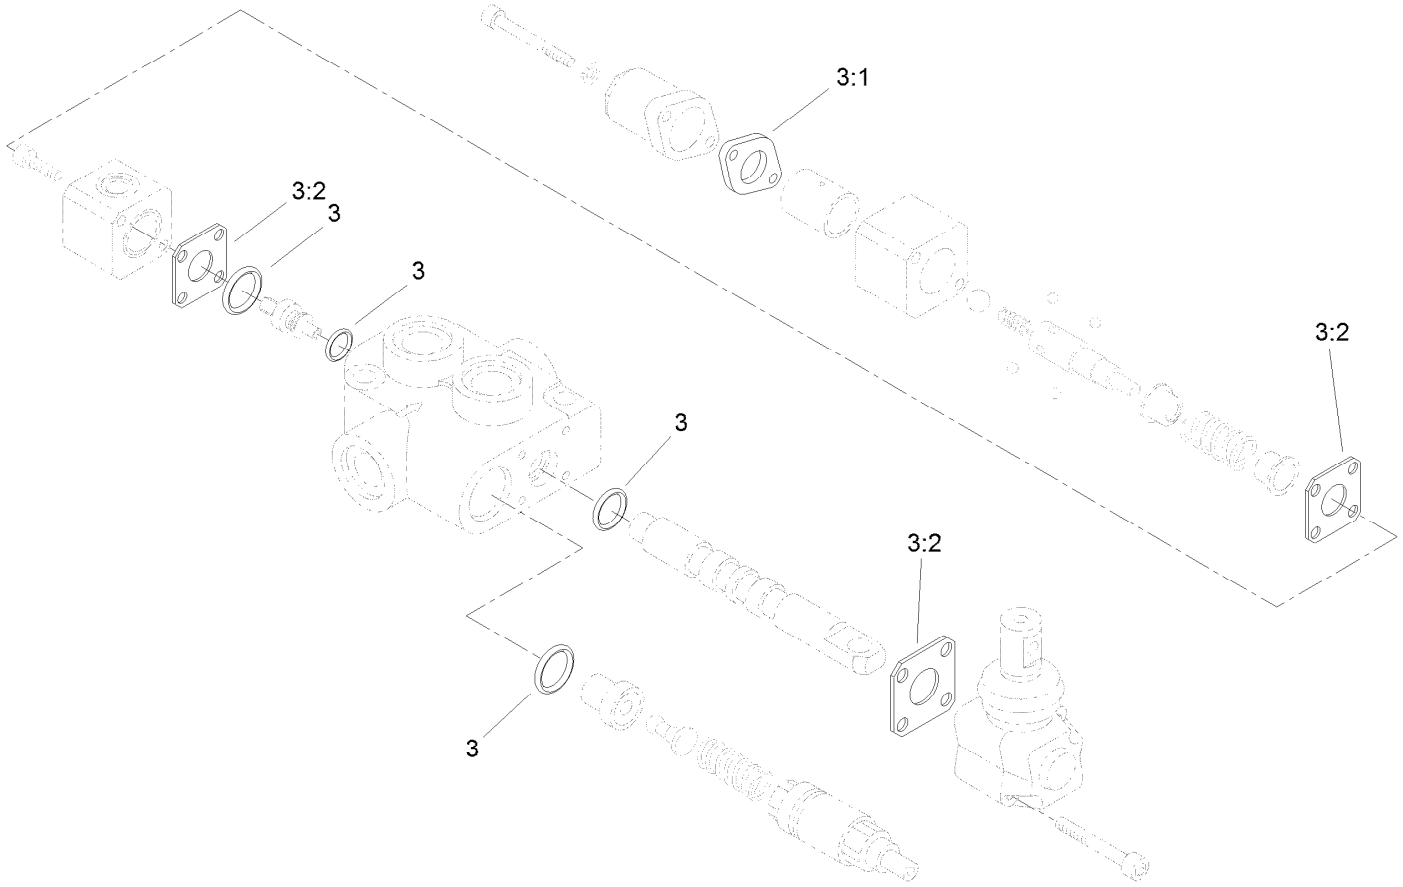

Auxiliary Hydraulic Valve Assembly No. 99-3077 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
3	99-4390	1	Seal Kit
3:1	99-3074	4	Gasket
3:2	99-3075	8	Gasket


Hydraulic Selector Valve Assembly No. 99-3072

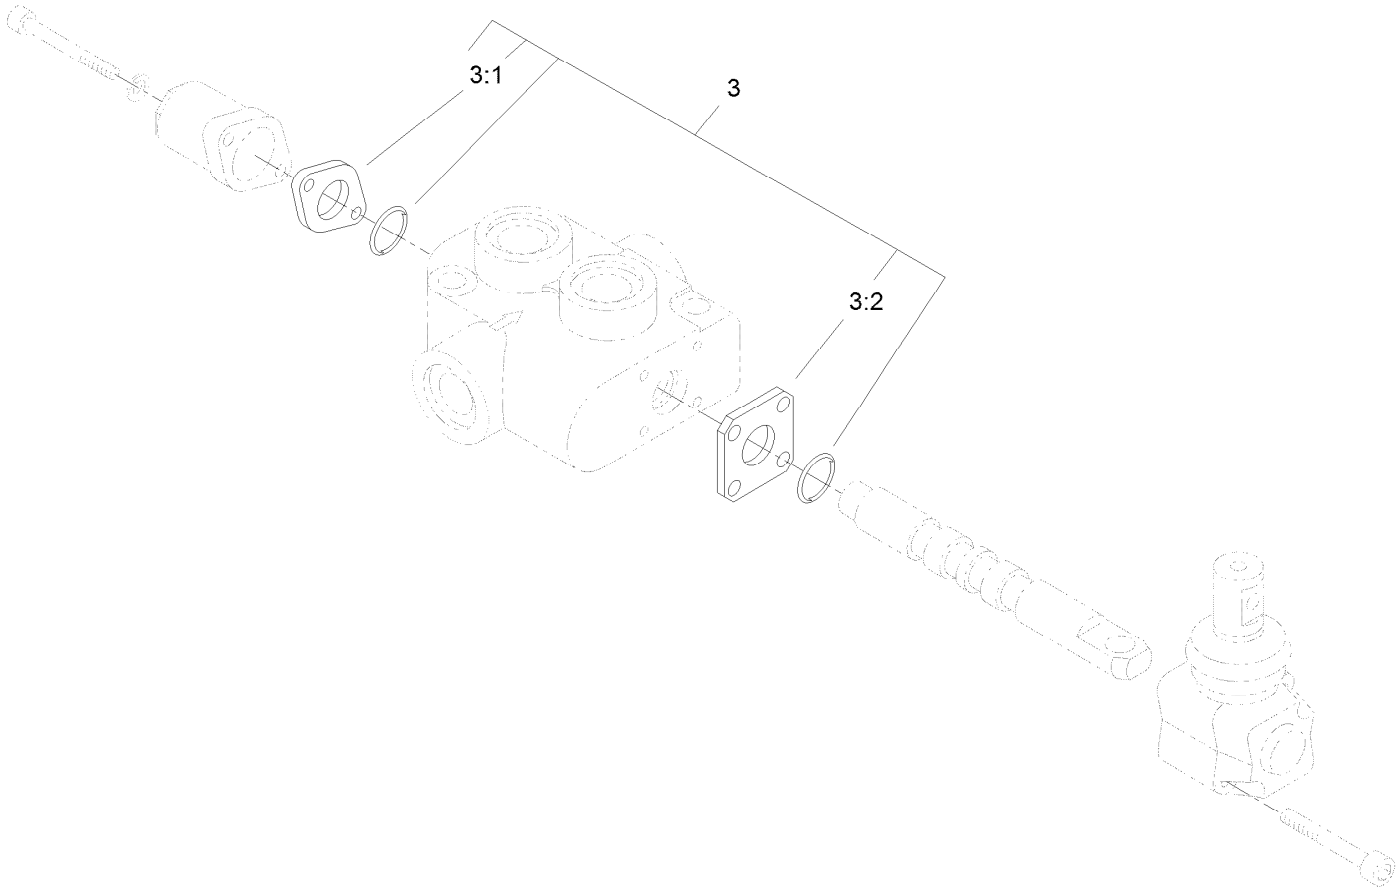

Hydraulic Selector Valve Assembly No. 99-3072 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
3	99-4390	1	Seal Kit
3:1	99-3074	4	Gasket
3:2	99-3075	8	Gasket

Four Spool Valve and Lever Assembly

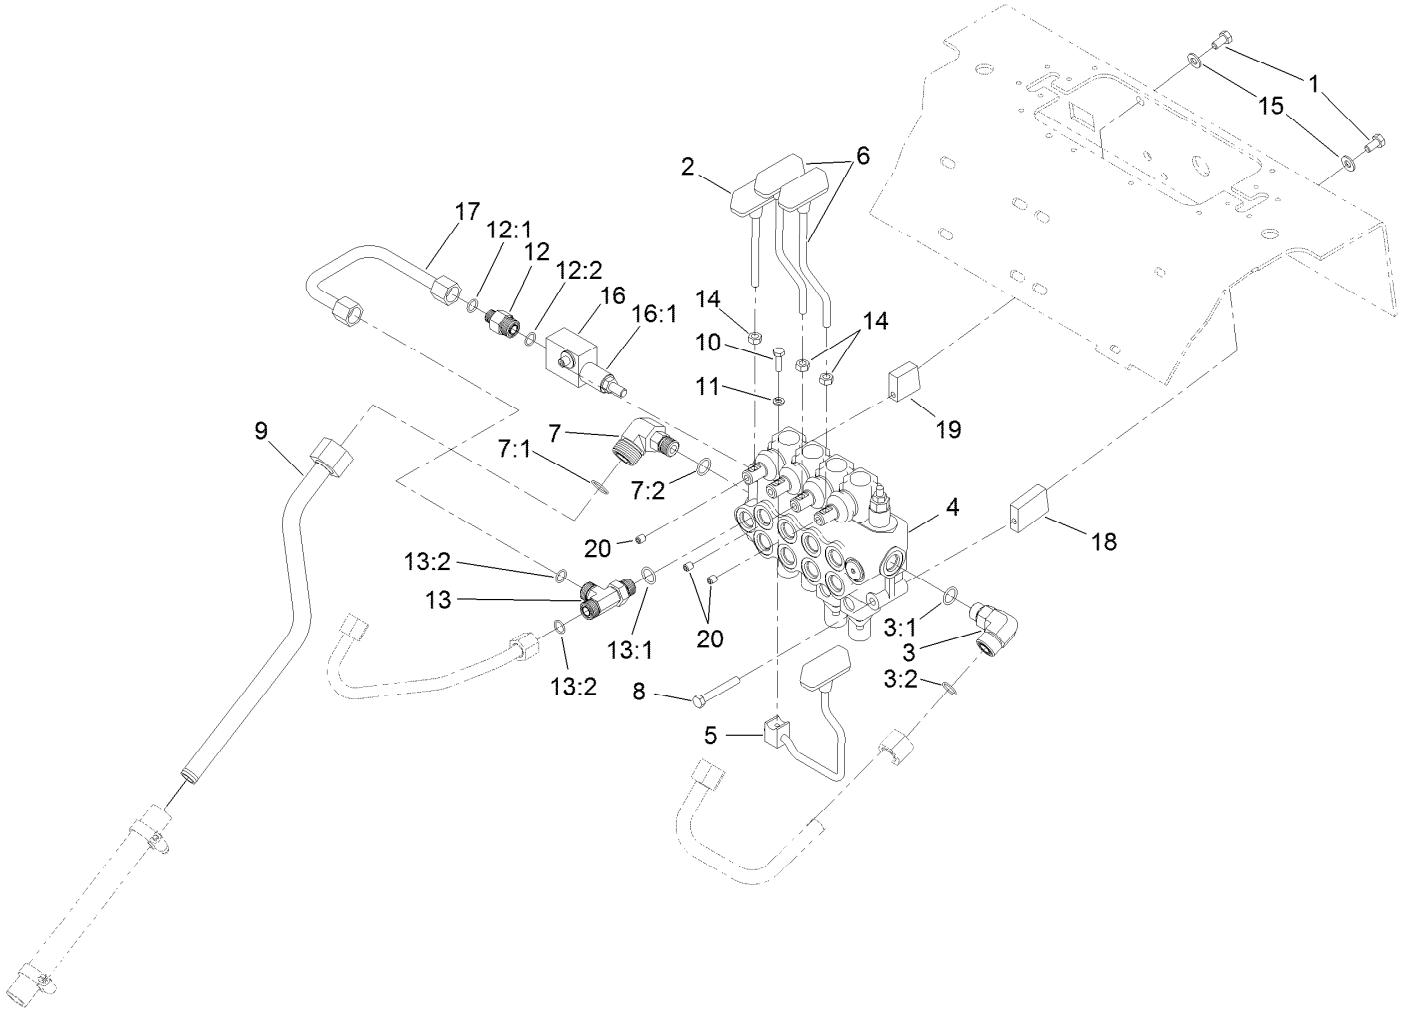


Four Spool Valve and Lever Assembly (continued)

Ref.	Part Number	Qty.	Description
1	322-2	3	Screw-HH
2	105-7881	1	Lever-Cylinder
3	340-153	1	Fitting-Elbow, 90 DEG
3:1	237-79	1	O-Ring
3:2	237-151	1	O-Ring
4	161-9435	1	Valve-Loader, Spool Lock
5	106-8165	1	Lever-Control
6	104-5733	2	Lever-Drive
7	92-5696	1	Fitting-Elbow, 90 DEG
7:1	237-58	1	O-Ring
7:2	237-79	1	O-Ring
8	322-11	3	Screw-HH
9	106-8177	1	Tube-Tank, HYD
10	321-5	1	Screw-HH
11	3253-3	1	Washer-Lock
12	340-5	1	Fitting-Straight
12:1	237-42	1	O-Ring
12:2	237-30	1	O-Ring
13	340-109	1	Fitting-Tee
13:1	237-79	1	O-Ring
13:2	237-30	2	O-Ring
14	33014-00	3	Nut-Hex
15	33094-00	3	Washer-Plain
16	105-7882	1	Relief Valve ASM
16:1	105-8358	1	Cartridge-Valve, Relief
16:2	105-8357	1	Seal Kit ●
17	108-4717	1	Tube-HYD
18	108-4728	2	Spacer V
19	105-7870	1	Spacer-Upper V
20	105-4068	3	Screw-Set,Cphs

● Not illustrated


Hydraulic Motor Assembly

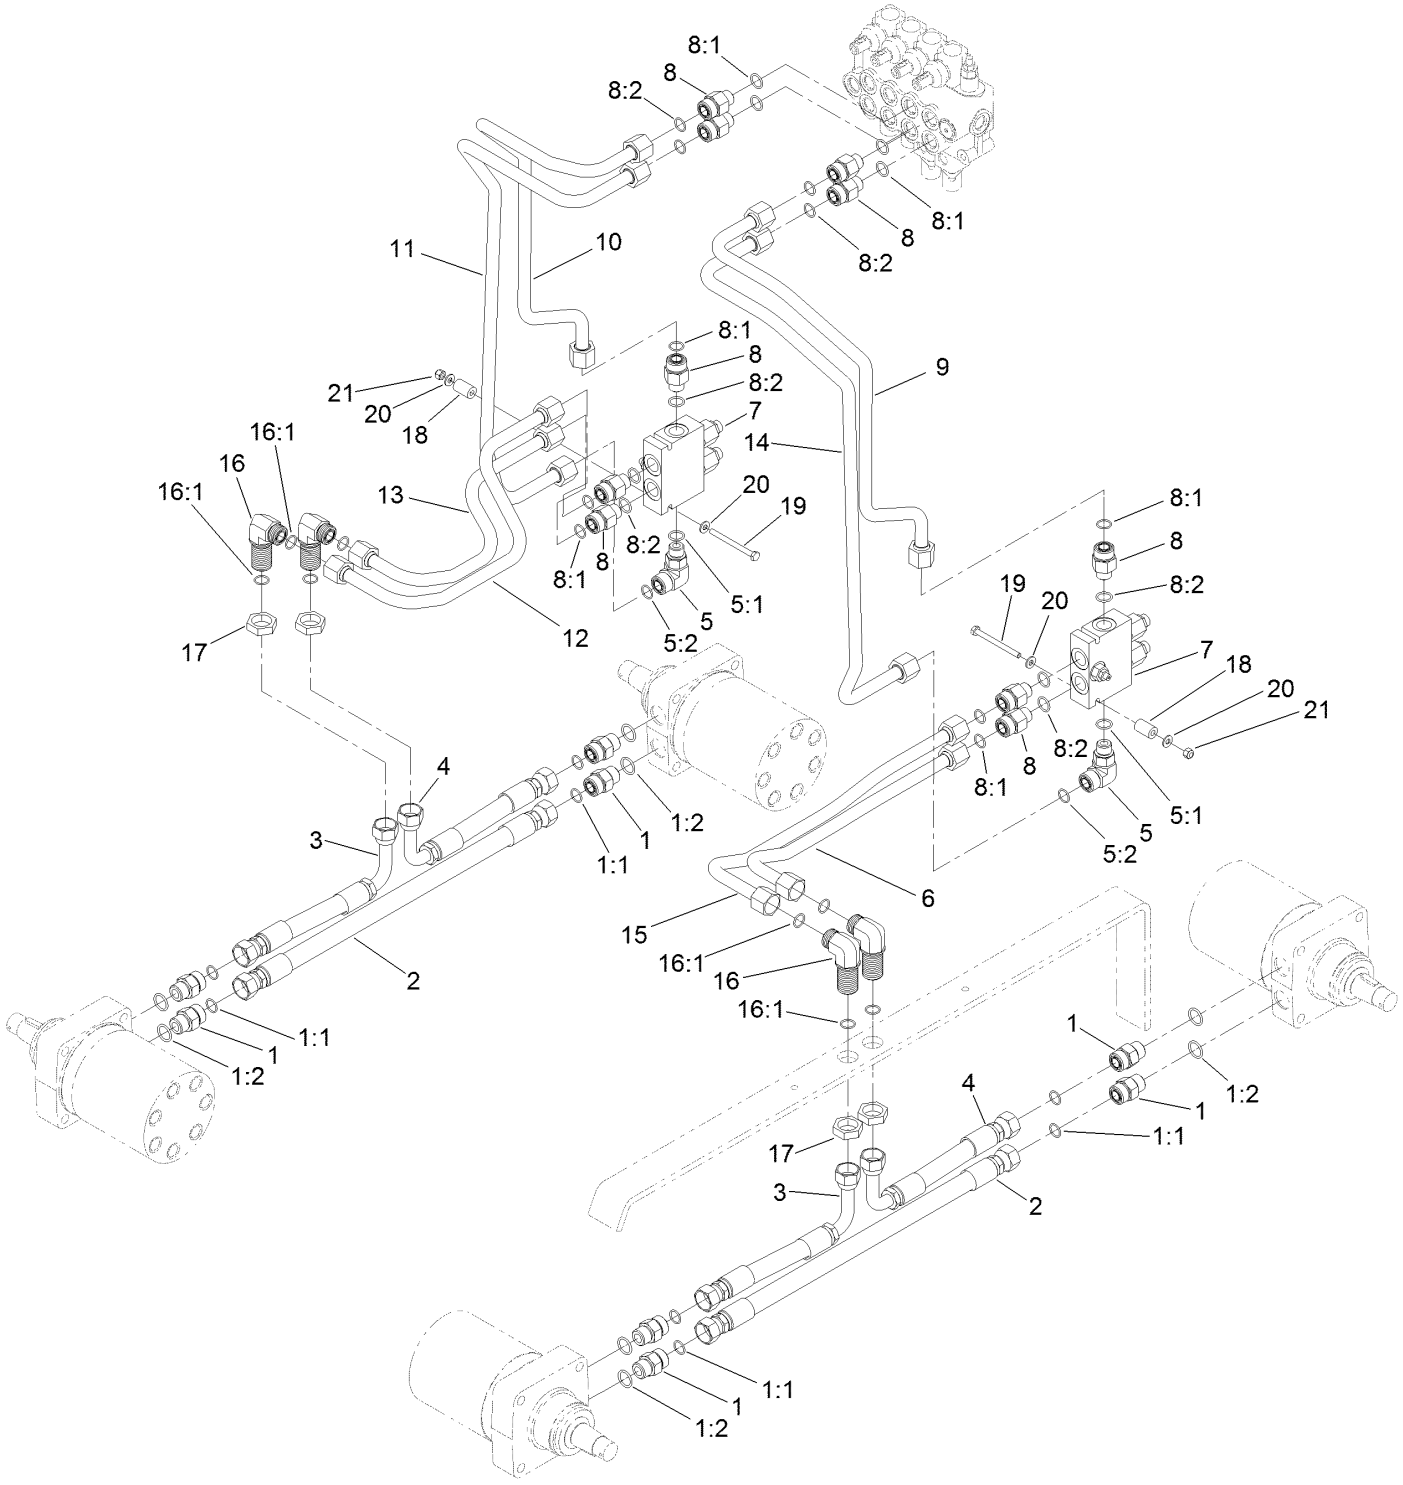

Hydraulic Motor Assembly (continued)

Ref.	Part Number	Qty.	Description
1	340-7	8	Fitting-Straight
1:1	237-65	1	O-Ring
1:2	237-80	1	O-Ring
2	99-3012	2	Hose-HYD
3	99-3010	2	Hose-HYD
4	99-3011	2	Hose-HYD
5	340-153	2	Fitting-Elbow, 90 DEG
5:1	237-79	1	O-Ring
5:2	237-151	1	O-Ring
6	99-3022	1	Tube-HYD
7	99-3040	2	HYD Counterbalance Valve ASM
8	340-155	10	Fitting-Straight
8:1	237-79	1	O-Ring
8:2	237-151	1	O-Ring
9	108-9729	1	Tube-HYD
10	108-9727	1	Tube-HYD
11	108-9726	1	Tube-HYD
12	99-3025	1	Tube-HYD
13	99-3028	1	Tube-HYD
14	108-9725	1	Tube-HYD
15	99-3026	1	Tube-HYD
16	340-72	4	Fitting-Bulkhead, 90 DEG
16:1	237-65	2	O-Ring
17	340-74	4	Nut-Lock, Bulkhead
18	99-3057	2	Spacer-Valve
19	321-23	2	Screw-HH
20	3256-22	4	Washer-Flat
21	3296-42	2	Nut-Lock, NI


Counterbalance Valve Assembly No. 99-3040

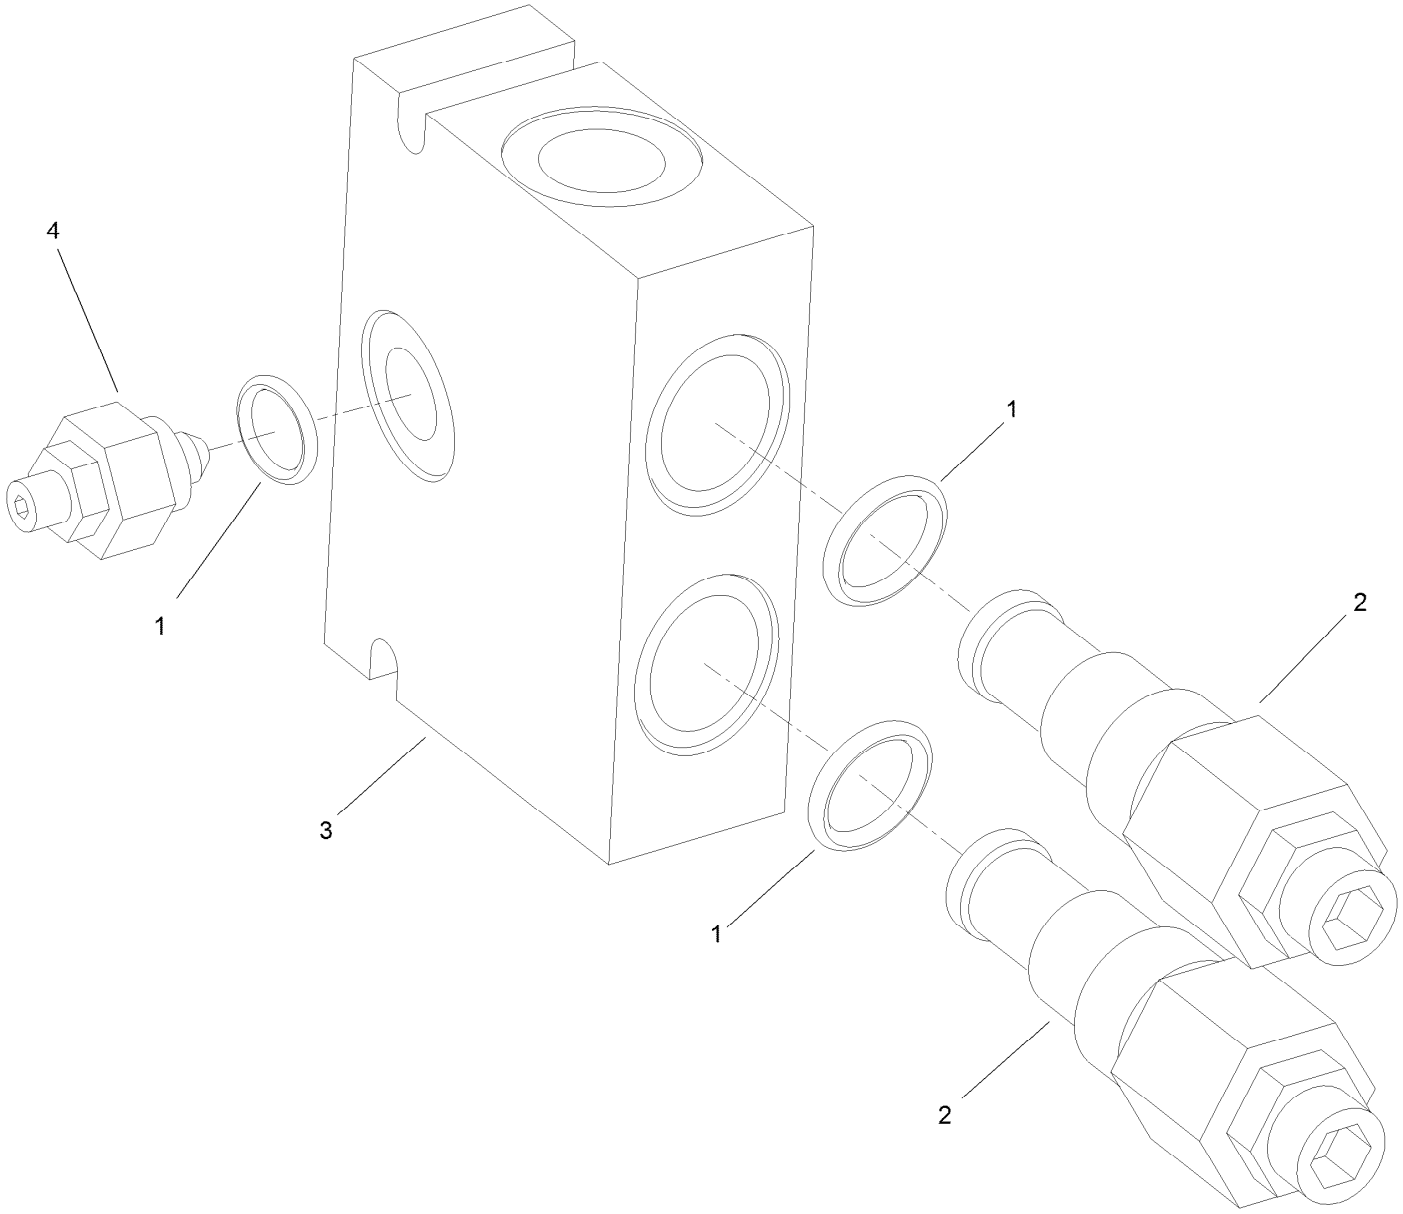

Counterbalance Valve Assembly No. 99-3040 (continued)

Ref.	Part Number	Qty.	Description
1	105-4099	1	Seal Kit
2	99-3271	2	Valve-Cartridge
3	100-8864	1	Manifold ASM
4	100-8865	1	Needle Valve ASM


Hydraulic Cylinder Assembly

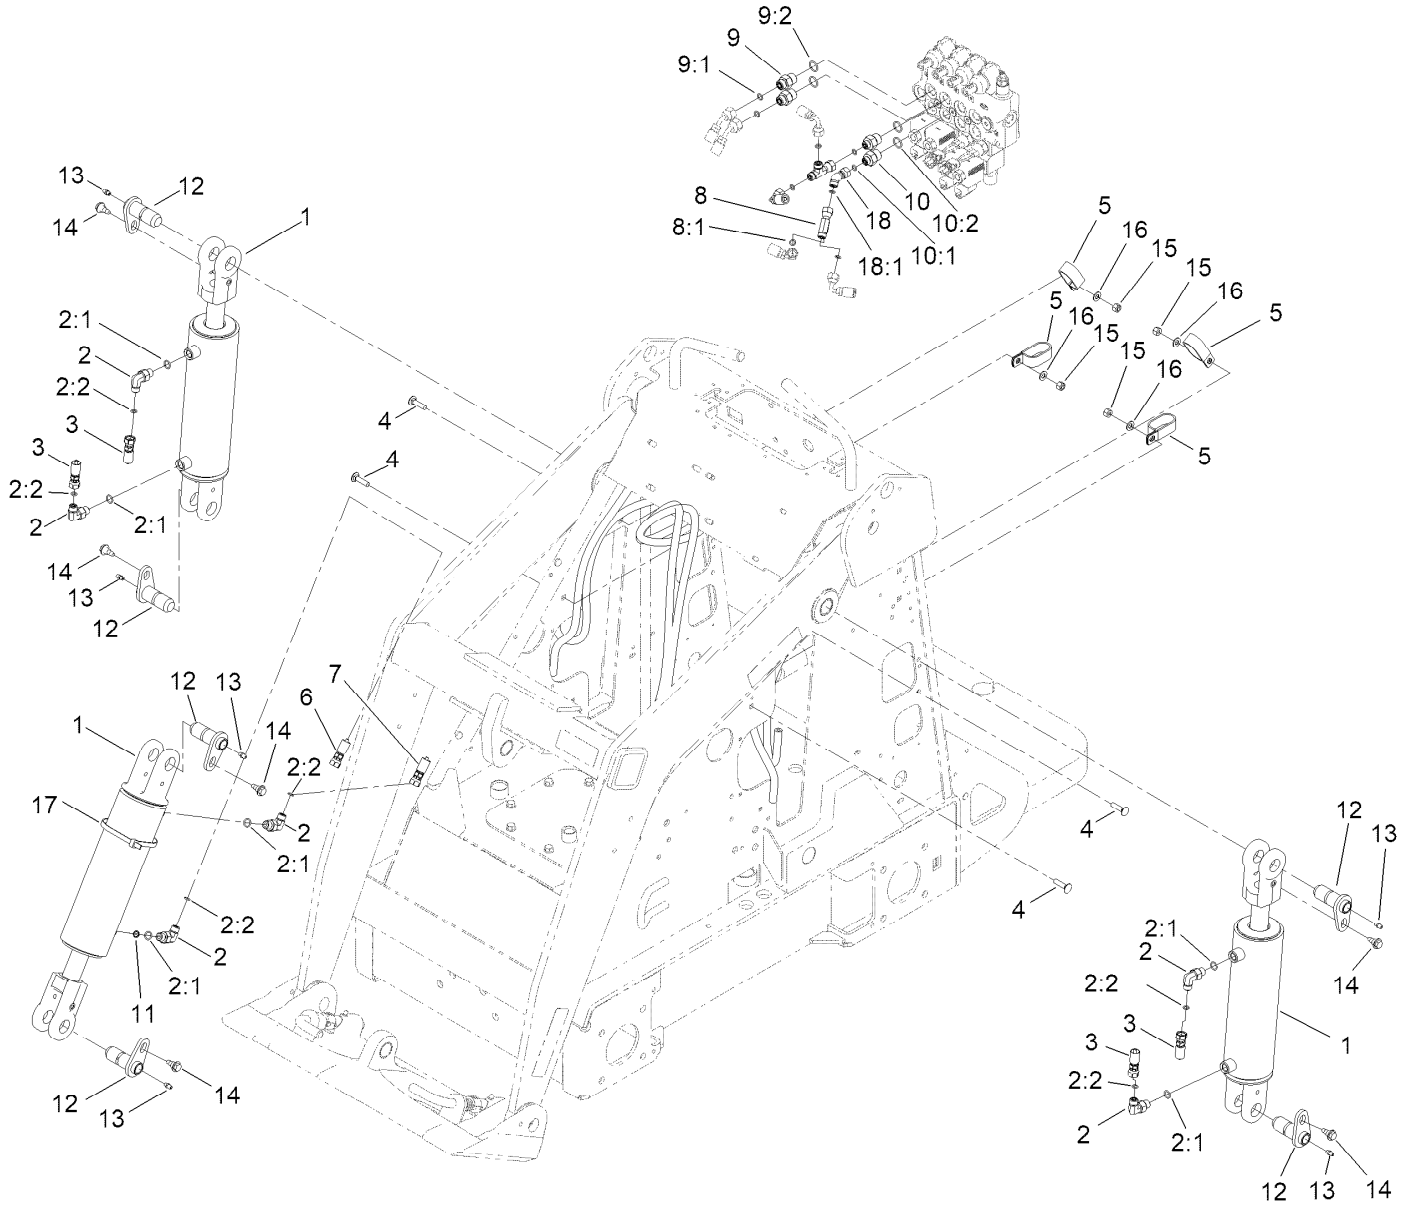

Hydraulic Cylinder Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-7706	3	Cylinder-Hydraulic
2	340-82	6	Fitting-Elbow, 90 DEG
2:1	237-42	1	O-Ring
2:2	237-21	1	O-Ring
3	98-4725	4	Hose-HYD
4	3230-3	4	Screw-CARR
5	2412-137	4	Clamp-R, Double
6	98-4726	1	Hose-HYD
7	98-4727	1	Hose-HYD
8	340-151	2	Fitting-Tee
8:1	237-21	2	O-Ring
9	340-3	2	Fitting-Straight
9:1	237-22	1	O-Ring
9:2	237-79	1	O-Ring
10	340-133	2	Fitting-STR
10:1	237-79	1	O-Ring
10:2	237-21	1	O-Ring
11	108-4714	1	Orifice-Port Insert, One Way
12	112-2609	6	Pin-Pivot
13	302-5	6	Fitting-Grease
14	99-5105	6	Screw-Shoulder
15	3296-29	4	Nut-Lock, NI
16	3256-23	4	Washer-Plain
17	3334-945	1	Tie-Cable
18	163-8862	1	Fitting-HYD, 45 DEG
18:1	237-21	1	O-Ring

Hydraulic Cylinder Assembly No. 139-7706

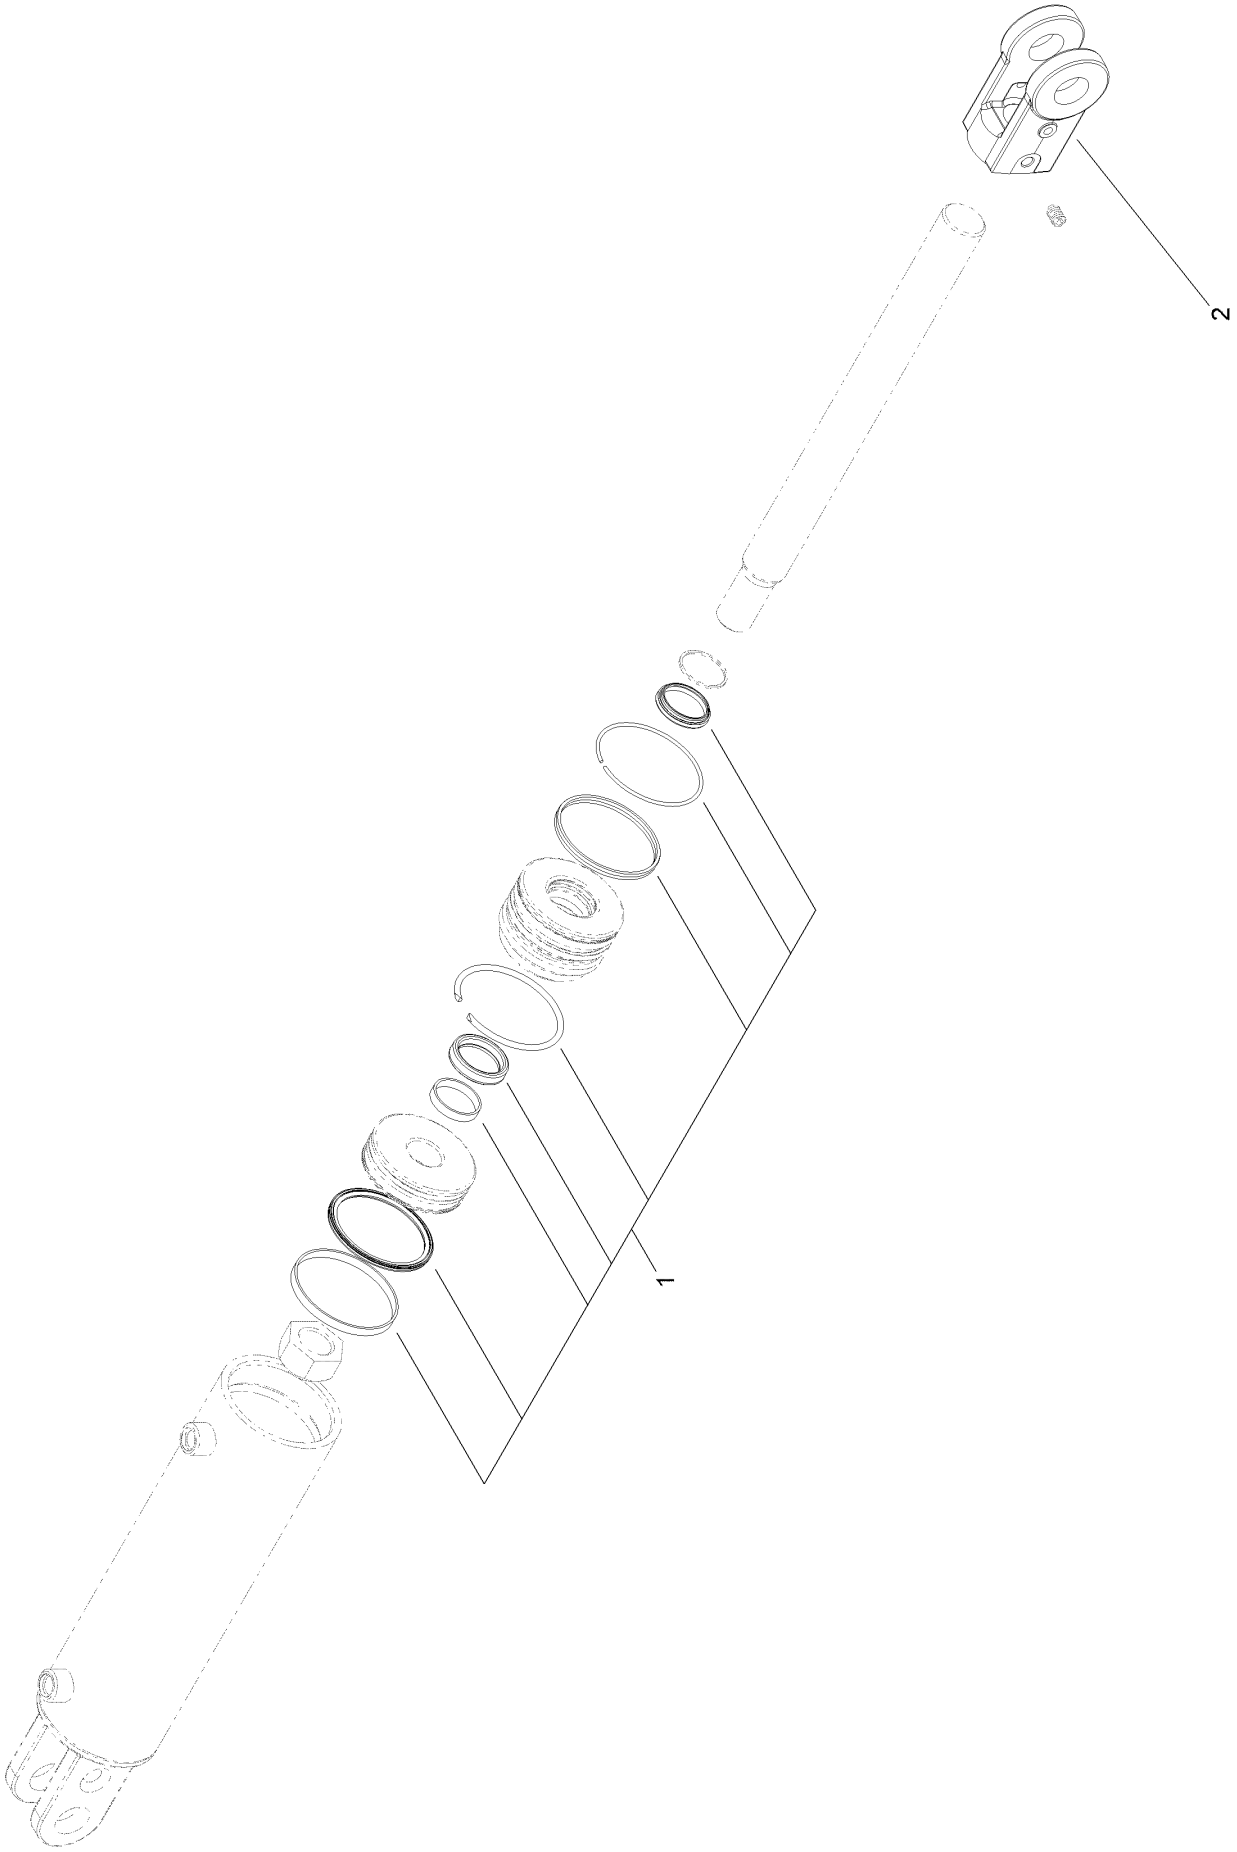

Hydraulic Cylinder Assembly No. 139-7706 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	139-7713	1	Seal Kit
2	163-8918	1	Rod-Clevis

Attachments and Accessories

For 22318 — 323 Compact Tool Carrier

Product Name	Model/Part
Tire Chain Kit	100-4140
Helmet-Face Shield	100-4143
Narrow Tire ASM	104-0572
Tube-Tire (18 x 8.50-10)	105-4070
Rubber Foot Mat	105-5805
Tube-Tire	107-2491
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Premium Engine Oil 15w40 (55 Gallon Drum)	121-6394
Premium Engine Oil 15w40 (5 Gallon Pail)	121-6395
PX Hydraulic Fluid (5 Gal)	133-8086
PX Hydraulic Fluid (55 Gal)	133-8087
Oil-30/10W-30 Synthetic (Quart)	138-6053
PX Hydraulic Fluid-4 Pack (Gallon)	138-9460
Spare Tire Kit Assembly	144-0105
Tire And Wheel ASM, RH	144-2574
Tire And Wheel ASM, LH	144-2575
Light Kit ASM	144-7101
Tire And Wheel ASM	147-6040
Adjustable Forks	22341
CE Conversion Kit	22366
4 Cubic Foot Standard Bucket	22409
Loose Materials Bucket	22410
48in Hydraulic Blade	22414
Bore Drive Head	22420
Rod and Reamer	22421
Multi-Purpose Tool	22423
Direct Drive Power Box Rake	22426
Stump Grinder	22429
Tree Forks	22438
Cement Bowl	22442
40in Tiller	22445
High-Torque Trencher Head	22473
High-Speed Trencher Head	22474
4-in-1 Bucket	22478
Narrow Bucket	22520
Grapple Rake	22577
Floor Scraper	22673
Auger Head	22805
Universal Swivel Auger Head	22806
18in Auger Bit	22814
24in Auger Bit	22815
12in Auger Bit Extension	22818
24in Auger Bit Extension	22819
6in Full-Flight Auger Bit	22820
9in Full-Flight Auger Bit	22821

Attachments and Accessories (continued)

12in Full-Flight Auger Bit 22822
15in Full-Flight Auger Bit 22823
Vibratory Plow 22911
Soil Cultivator 23102
Concrete Breaker 23135
Leveler 23165
30in Standard Bucket 23174
30in Pallet Fork 23175
30in Grapple 23176
Tube 232-37
10W30 4-Cycle Engine Oil (32oz Bottle) 38280
Spark Arrestor 98-9099
Hydraulic Relief Valve Kit 99-4360

Notes:

Notes:



Count on it.