Form Number 3351-332

Greensmaster® 500

Model No. 04130 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Transmission Case Assembly	3
Clutch Shaft Assembly	4
Drum Assembly	5
Engine Component Assembly	6
Handle Installation Assembly	7
Handle Assembly	8
Roller Assembly No. 88-8900	9
Basket and Yoke Assembly	10
Transmission Assembly	11
Clutch Shaft Assembly	12
Differential Case and Shaft Assembly	13
Cutting Unit Frame Assembly	14
Bedknife, Reel, and Roller Assembly	16
Guard and Bedknife Assembly	17
Bearing Housing Assembly for Roller Assembly No. 39-9590	18
Real and Bearing Assembly No. 4-2219	19
Special Tools	20
Crankcase Assembly	21
Camshaft and Valve Assembly	22
Ignition Assembly	23
Governor Assembly	24
Carburetor Assembly	25
Air Cleaner and Muffler Assembly	26
Fuel Tank Assembly	27
Engine Decals	28

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HS	hex
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PPH	phillips pan head
PRH	phillips round head
PTH	phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head
WH	wing head

Footnotes

❶ Not illustrated


❷ Not serviced separately

❸ Obtain these tiems directly from OTC 2013 4th St. Owatonna, MN 55060 1-800-533-0492 (in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

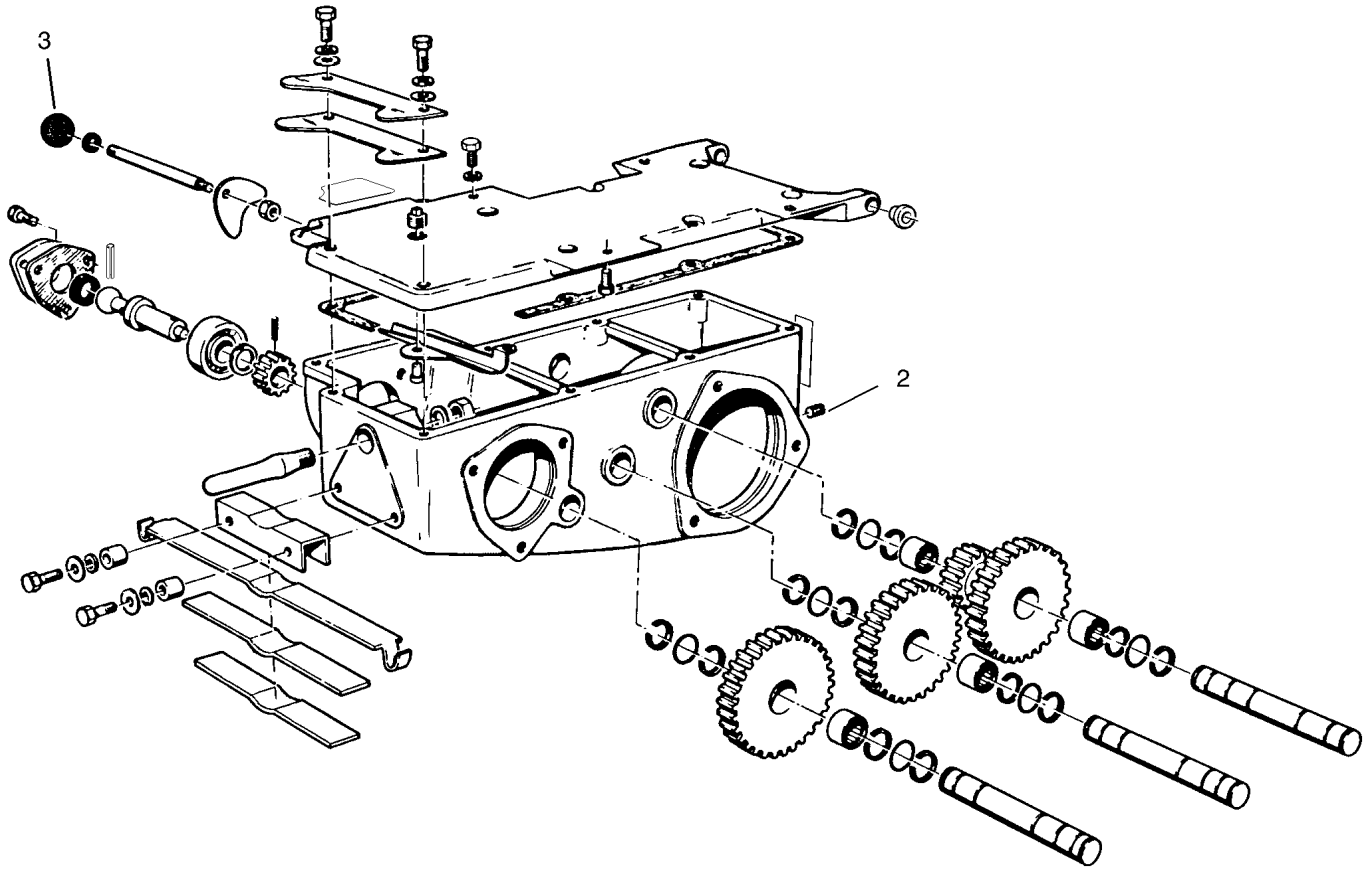


Transmission Case Assembly

Ref	Part No.	Qty.	Description
2	281-1	1	Plug-Pipe, SQH
3	3-0631	1	Ball-Grip

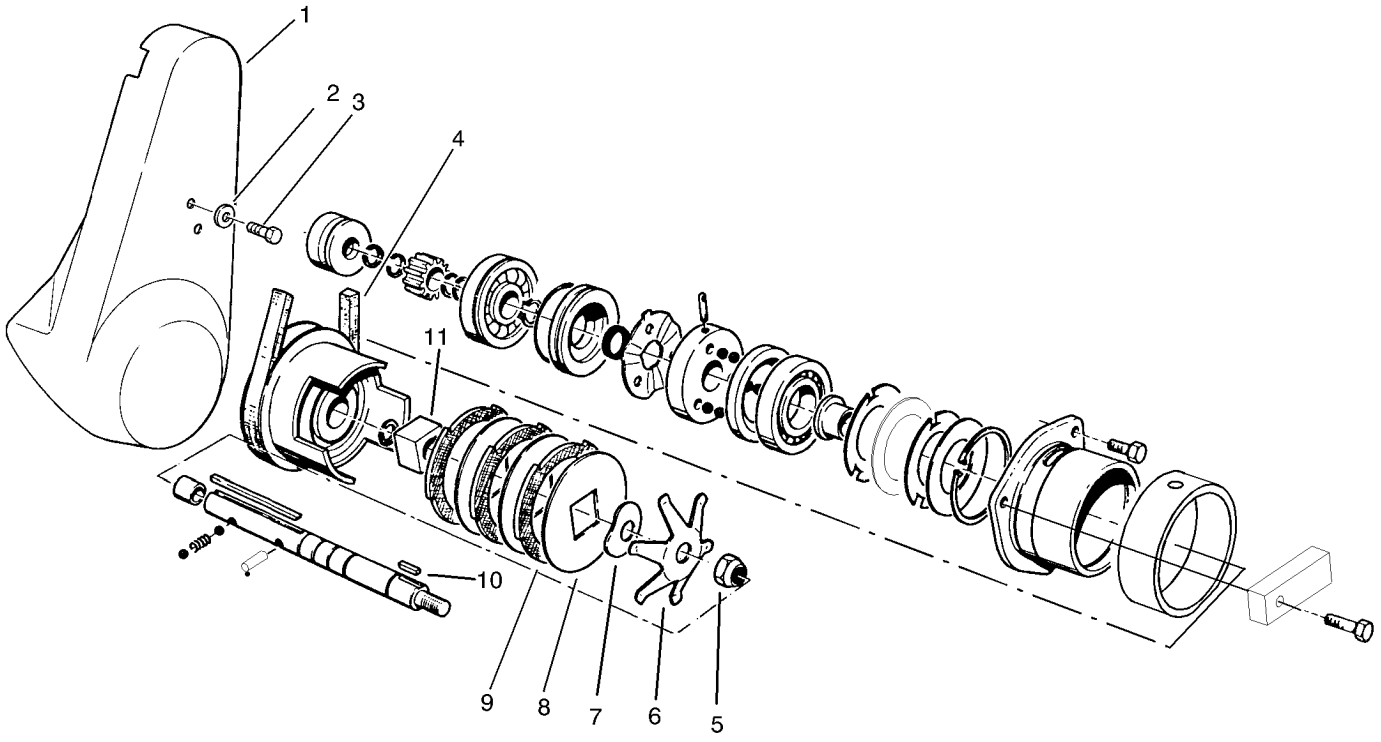


Clutch Shaft Assembly

Ref	Part No.	Qty.	Description
1	88-8740	1	Guard-Belt
2	3253-3	2	Washer-Lock
3	32144-10	2	Screw-HWH
4	95-1811	1	V-Belt
5	3296-6	1	Nut-Lock
6	3-0478	1	Spring-Clutch
7	3290-211	1	Washer-Spring
8	3-0477	3	Plate-Clutch
9	99-5902	3	Disc-Clutch
10	3-6801	1	Key
11	3-0472	1	Driver-Clutch

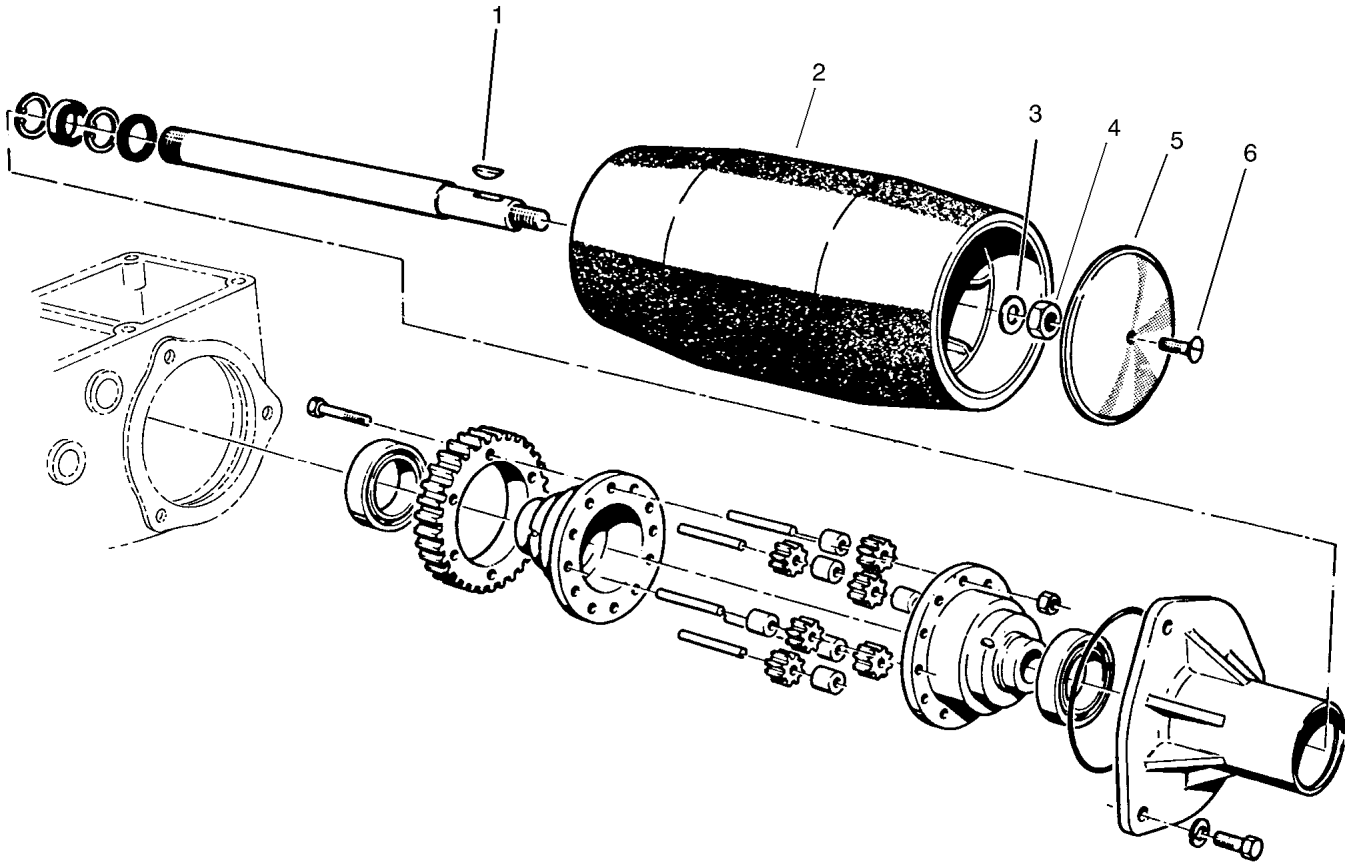

Drum Assembly


Ref	Part No.	Qty.	Description
1	3257-23	2	Key-Woodruff
2	3-0492	2	Roller ASM
3	3256-26	2	Washer-Flat
4	3296-19	2	Nut-Hex
5	3-8347	2	Cap-Hub
6	32108-50	2	Screw

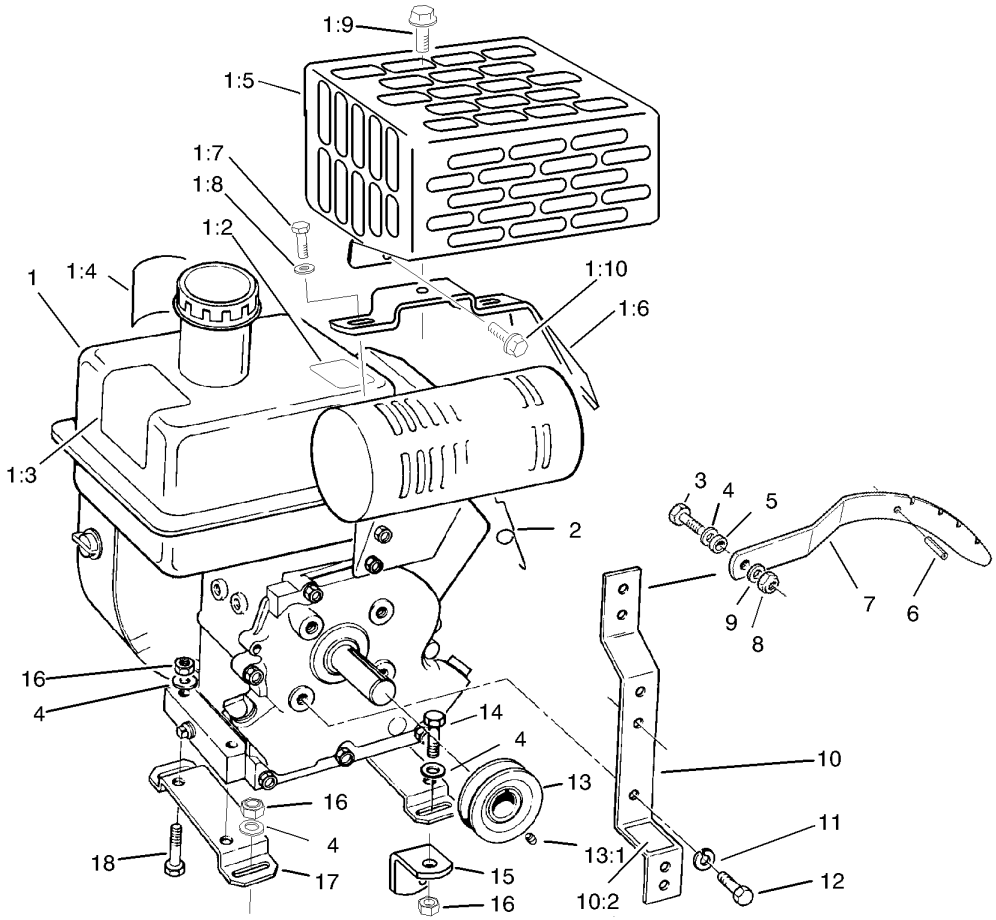

Engine Component Assembly


Ref	Part No.	Qty.	Description
1	108-3157	1	Engine ASM
1:2	105-5309	1	Decal-Surface, Hot
1:2	83-2560	1	Decal-Surface, Hot
1:3	92-4813	1	Decal-Danger
1:3	93-7348	1	Decal-Danger
1:4	93-9886	1	Decal-Fuel
1:5	98-3432-03	1	Guard-Muffler
1:6	98-3421	1	Bracket-Guard, Muffler
1:7	33113-012	2	Screw-HH
1:8	3256-22	2	Washer-Flat
1:9	46-6810	1	Screw And Washer ASM
2	88-8690	1	Wire-Throttle
3	322-16	1	Screw-HH
4	3256-23	9	Washer-Flat
5	88-9080	1	Spacer
6	32121-11	1	Pin-Roll
7	88-8680	1	Handle
8	3296-47	1	Nut-Lock, NI
9	3-3287	1	Spacer-Latch, Handle
10	95-7283	1	Bracket-Pivot
10:2	93-9356	1	Decal-Warning, Belt
11	3253-31	2	Washer-Lock/sp
12	33114-020	2	Screw-HH
13	244-58	1	Pulley

Ref	Part No.	Qty.	Description
13:1	3245-32	1	Screw-HS
14	322-5	4	Screw-HH
15	95-7280	1	Bracket-Spring
16	32153-3	8	Nut-Lock, Side
17	88-8650-01	2	Mount-Motor
18	322-17	4	Screw-HH

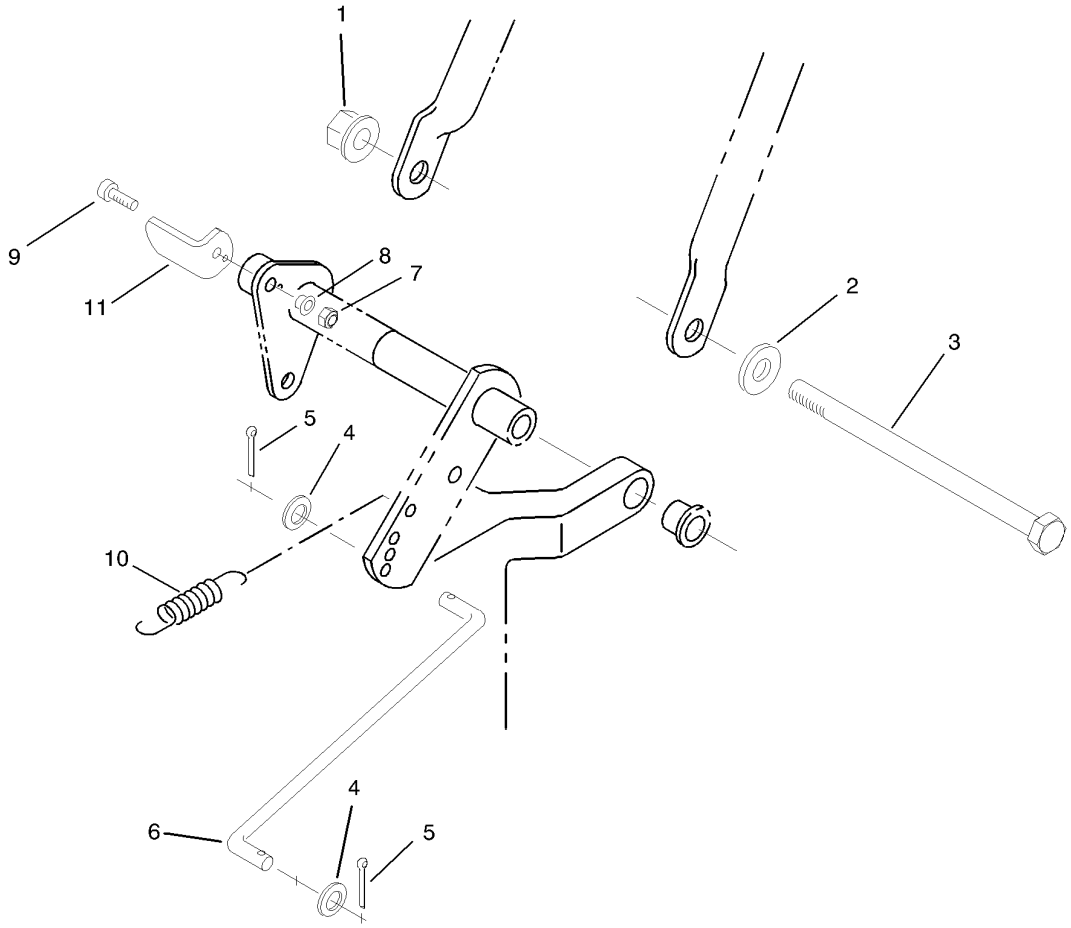

Handle Installation Assembly


Ref	Part No.	Qty.	Description
1	32128-19	1	Nut-HF
2	3256-24	1	Washer-Flat
3	323-30	1	Screw-HH
4	3256-14	2	Washer-Flat
5	3272-1	2	Pin-Cotter
6	98-3433	1	Rod-Clutch
7	3296-1	1	Nut-Lock
8	3-0526	1	Retainer
9	3250-17	1	Screw-PPH
10	71-5470-03	1	Spring-Brake
11	98-3437	1	Stop-Throttle

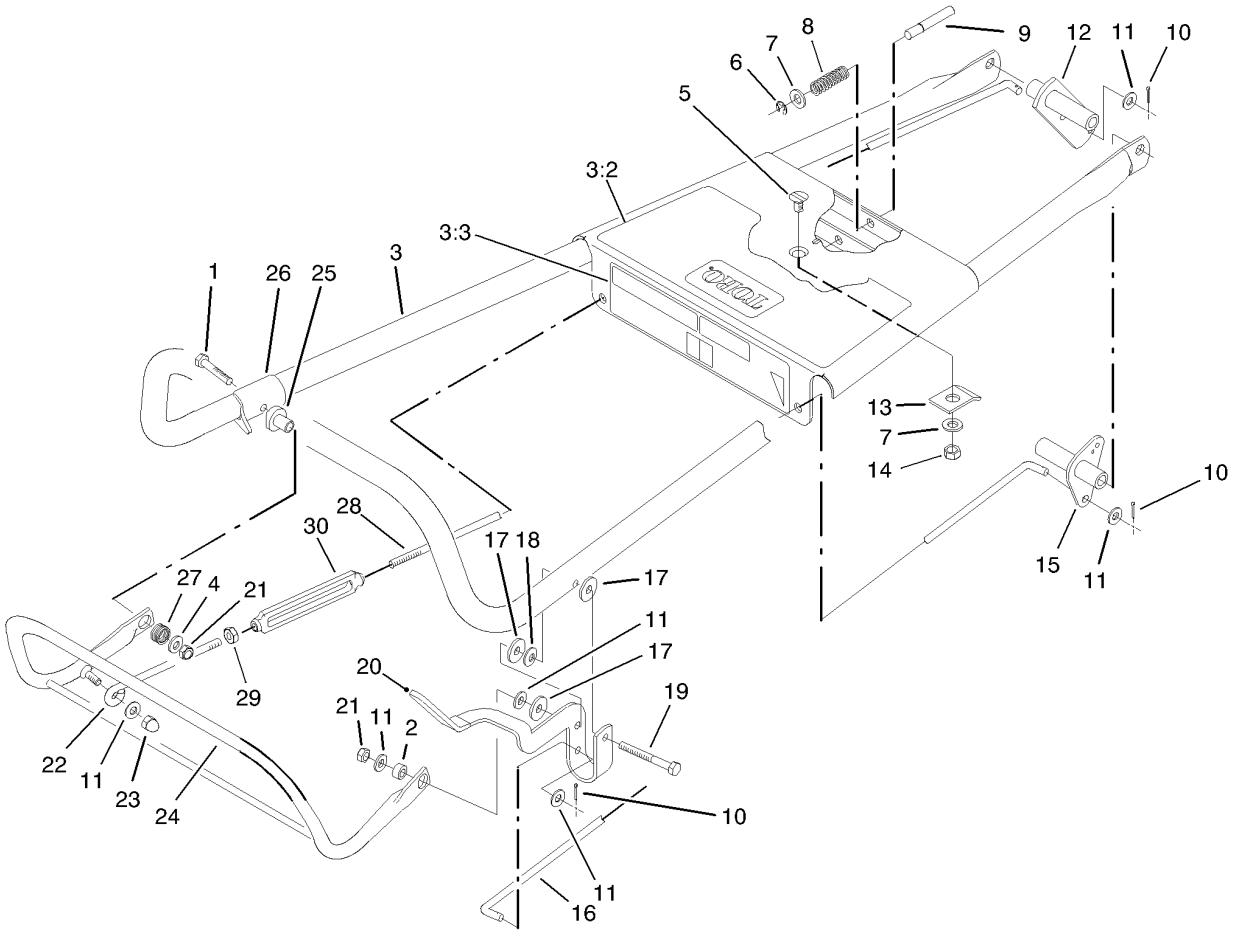

Handle Assembly


Ref	Part No.	Qty.	Description
1	321-15	1	Screw-HH
2	98-3425	1	Spacer
3	99-2302	1	Handle ASM
3:2	95-7266	1	Decal-Handle
3:3	95-7298	1	Decal-Control
4	3256-67	1	Washer-Flat
5	57-4910	1	Screw-Special
6	32120-35	1	E-Ring
7	3256-23	2	Washer-Flat
8	5-0776	1	Spring
9	5-0765	1	Pin
10	3272-1	3	Pin-Cotter
11	3256-22	6	Washer-Flat
12	98-3401-01	1	Clutch-Bellcrank
13	98-3403	1	Tab
14	3296-47	1	Nut-Lock, NI
15	98-3405-01	1	Crank-Throttle
16	3-3422	1	Rod-Control
17	66-2921	3	Washer-Friction
18	3290-436	1	Washer-Belleville
19	321-14	1	Screw-HH
20	98-3408	1	Lever-Throttle
21	3296-56	2	Nut-Lock, NI
22	99-3711	1	Rod-Clutch Control, Upper

Ref	Part No.	Qty.	Description
23	32111-14	1	Nut-Cap
24	98-3415-03	1	Bail ASM
25	49-1631	1	Spacer-Support
26	99-8073	1	Latch
27	85-6750	1	Spring-Control
28	99-3712	1	Rod-Clutch Control, Lower
29	3217-5	1	Nut-Hex
30	99-8080	1	Body-Turnbuckle

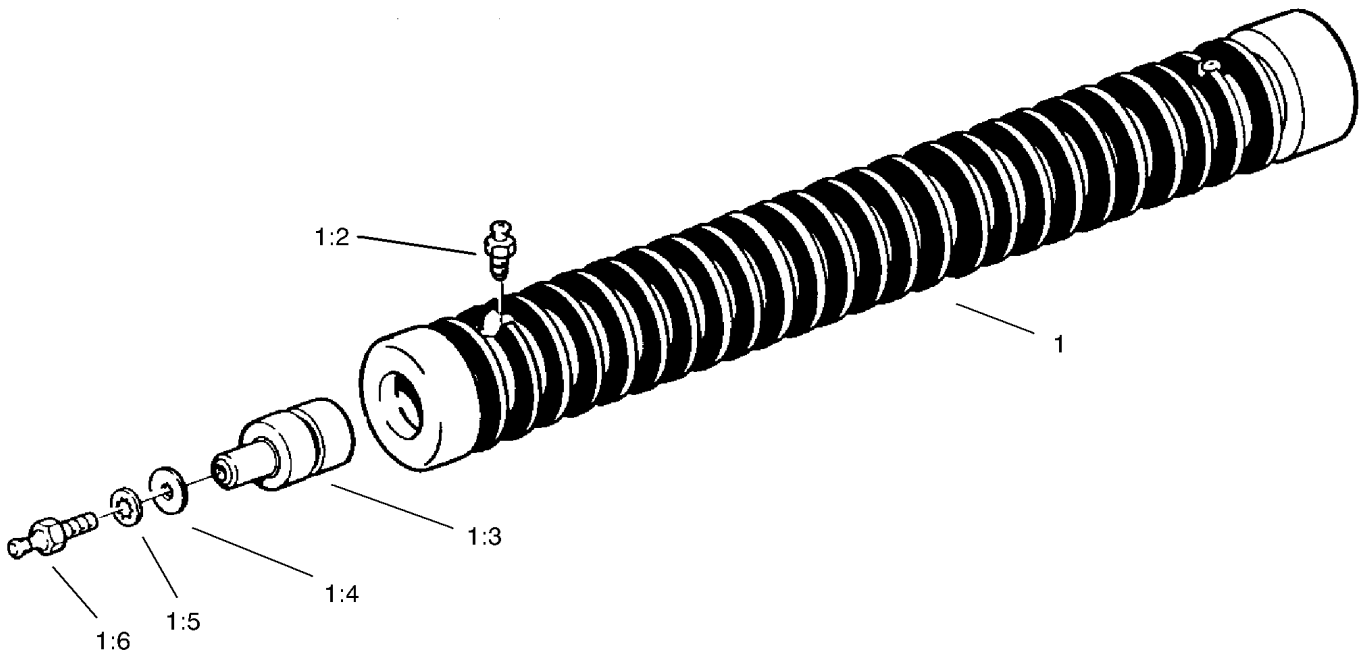

Roller Assembly No. 88-8900


Ref	Part No.	Qty.	Description
1	88-8900	1	Wiehle Roller ASM
1:2	302-5	2	Fitting-Grease, Straight
1:3	88-8890	2	Bearing-Wiehle Roller
1:4	3256-24	2	Washer-Flat
1:5	3254-6	2	Washer-Lock, Internal
1:6	94-2958	2	Stud-Ball

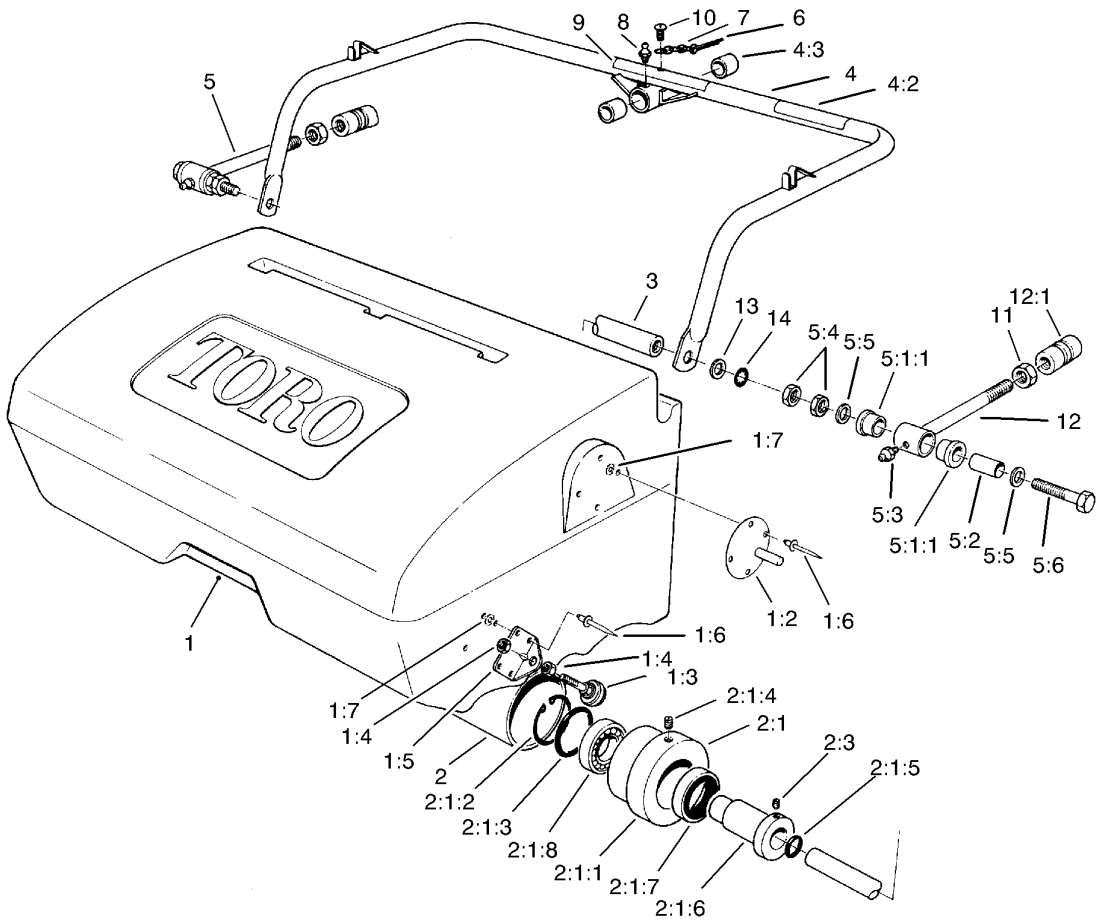

Basket and Yoke Assembly

Ref	Part No.	Qty.	Description
1	88-8770	1	Grass Basket ASM
1:2	88-8910	2	Pivot
1:3	32141-36	2	Screw-Adjustment, Level
1:4	3218-2	4	Nut-Jam
1:5	5-3464	2	Bracket-Adjusting
1:6	3269-4	16	Rivet-Pop
1:7	3256-51	16	Washer-Flat
2	5-1382	1	Front Roller ASM
❷2:1		2	Bearing/housing ASM
2:1:1	5-1384	1	Housing-Bearing
2:1:2	32151-13	1	Ring-Retaining
2:1:3	237-68	1	O-Ring
2:1:4	285-17	1	Plug-Pipe
2:1:5	237-69	1	O-Ring
2:1:6	11-3050	1	Sleeve
2:1:7	253-118	1	Seal-Oil
2:1:8	251-205	1	Bearing-Ball
2:3	3245-35	2	Screw-HS
3	5-1390	1	Roller-Shaft, Yoke
4	99-4264	1	Yoke ASM
4:2	93-6688	1	Decal-Danger, Europe
4:3	3-2156	2	Bushing
5	3-4510	2	Pull Arm ASM
❶❷5:1		1	Pull Arm And Bushing ASM


Ref	Part No.	Qty.	Description
5:1:1	3-1506	2	Bushing
5:2	3-3436	1	Sleeve
5:3	302-5	1	Fitting-Grease, Straight
5:4	3220-3	2	Nut-Jam
5:5	3256-24	2	Washer-Flat
5:6	8-5770	1	Capscrew-Special
6	3272-50	1	Pin-Cotter
7	3-0696	1	Yoke-Chain
8	302-5	1	Fitting-Grease, Straight
9	3-1828-01	1	Plate-Wear
10	32104-81	1	Screw-Head, Pan
11	3220-3	2	Nut-Jam
12	99-1460	2	Ball Joint Receiver ASM
12:1	99-1461	1	Sleeve-Joint, Ball
13	3256-24	2	Washer-Flat
14	3254-6	2	Washer-Lock, Internal

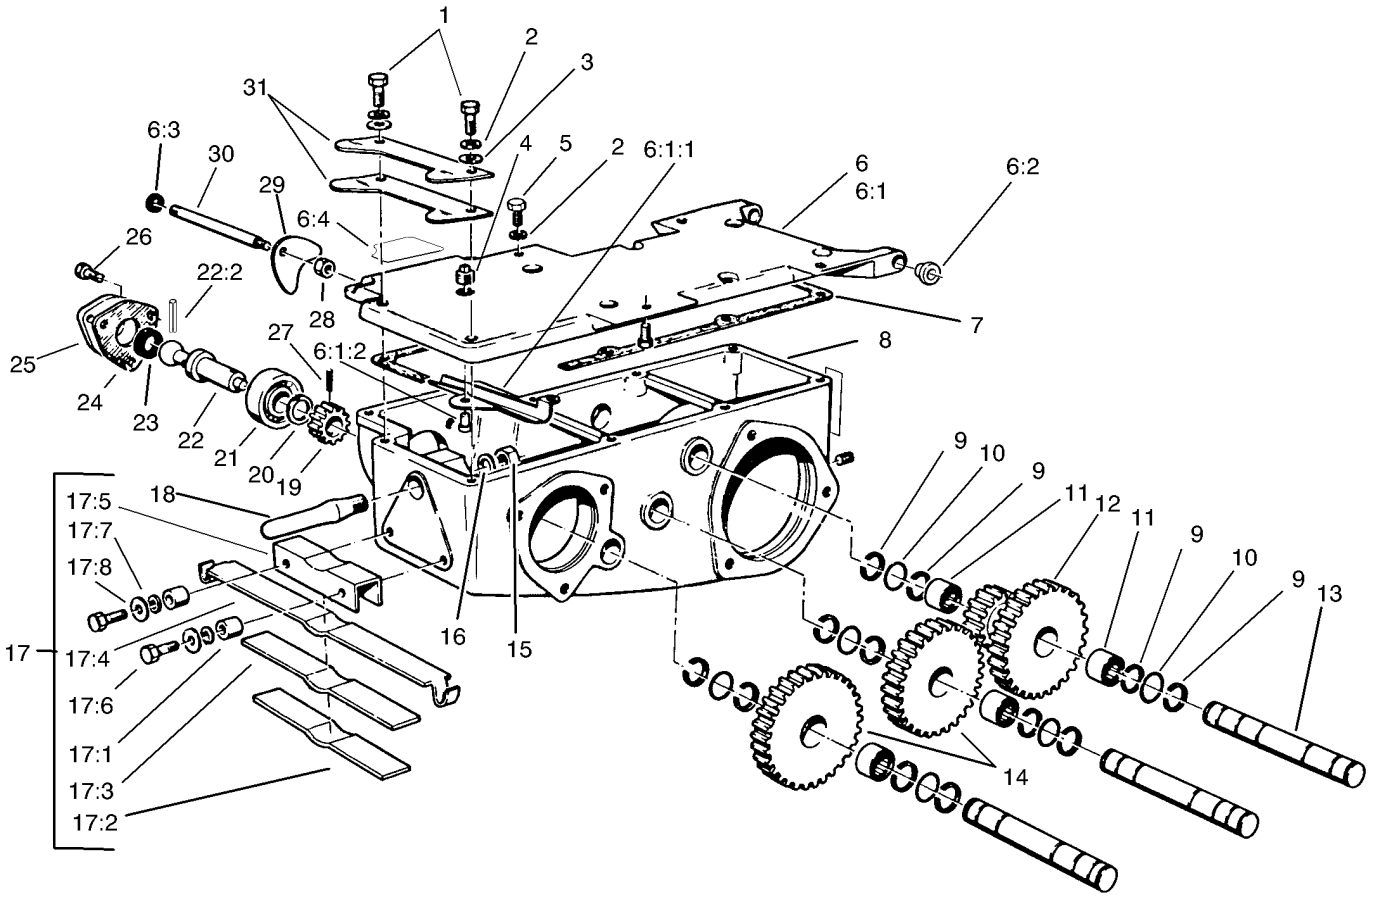

Transmission Assembly

Ref	Part No.	Qty.	Description
1	321-11	2	Screw-HH
2	3253-3	10	Washer-Lock
3	3256-2	2	Washer-Flat
4	281-3	1	Plug-Pipe, SQH
5	321-8	8	Screw-HH
6	98-3412	1	Cover ASM
❷6:1		1	Cover ASM
6:1:1	3-1716	1	Pan-Drip, Oil
6:1:2	3295-2	2	Rivet-Tubular
6:2	3-1776	2	Bushing
6:3	253-88	1	Seal-Oil
6:4	95-7271	1	Decal-Clutch
7	3-0485	1	Gasket-Transmission
8	3-4371	1	Case ASM
9	32120-63	12	Ring-Snap
10	237-22	6	O-Ring
11	252-49	4	Bearing-Needle
12	3-0457	1	Gear-Intermediate
13	3-0455	3	Shaft-Idler
14	3-0456	2	Gear-Idler
15	3296-28	1	Nut-Lock, NI
16	3256-26	1	Washer-Flat
❷17		1	Lift Spring ASM
17:1	3-2074	2	Spacer


Ref	Part No.	Qty.	Description
17:2	3-2075	1	Leaf-Lower
17:3	99-6899	1	Leaf-Center
17:4	92-4995	1	Leaf-Main
17:5	92-4992	1	Bracket-Spring, Lift
17:6	322-8	2	Screw-HH
17:7	3254-2	2	Washer-Lock, Int
17:8	3256-23	2	Washer-Flat
18	95-1810	1	Pivot-Yoke
19	3-0592	1	Clutch-Reel, Male
20	3-4494	1	Washer-Thrust
21	251-163	1	Bearing-Ball
22	2-4779	1	Universal Driver And Pin ASM
22:2	32121-25	1	Pin-Roll
23	253-59	1	Seal-Oil
24	3-2072	1	Seal-Bearing
25	95-1807	1	Cover-Bearing
26	32140-40	3	Screw-HH
27	32121-4	1	Pin-Roll, Slotted
28	32152-5	1	Nut-Lock, Cone
29	3-0488	1	Fork-Shift
30	3-0486	1	Rod-Clutch, Reel
31	3-1830	2	Spring-Flat

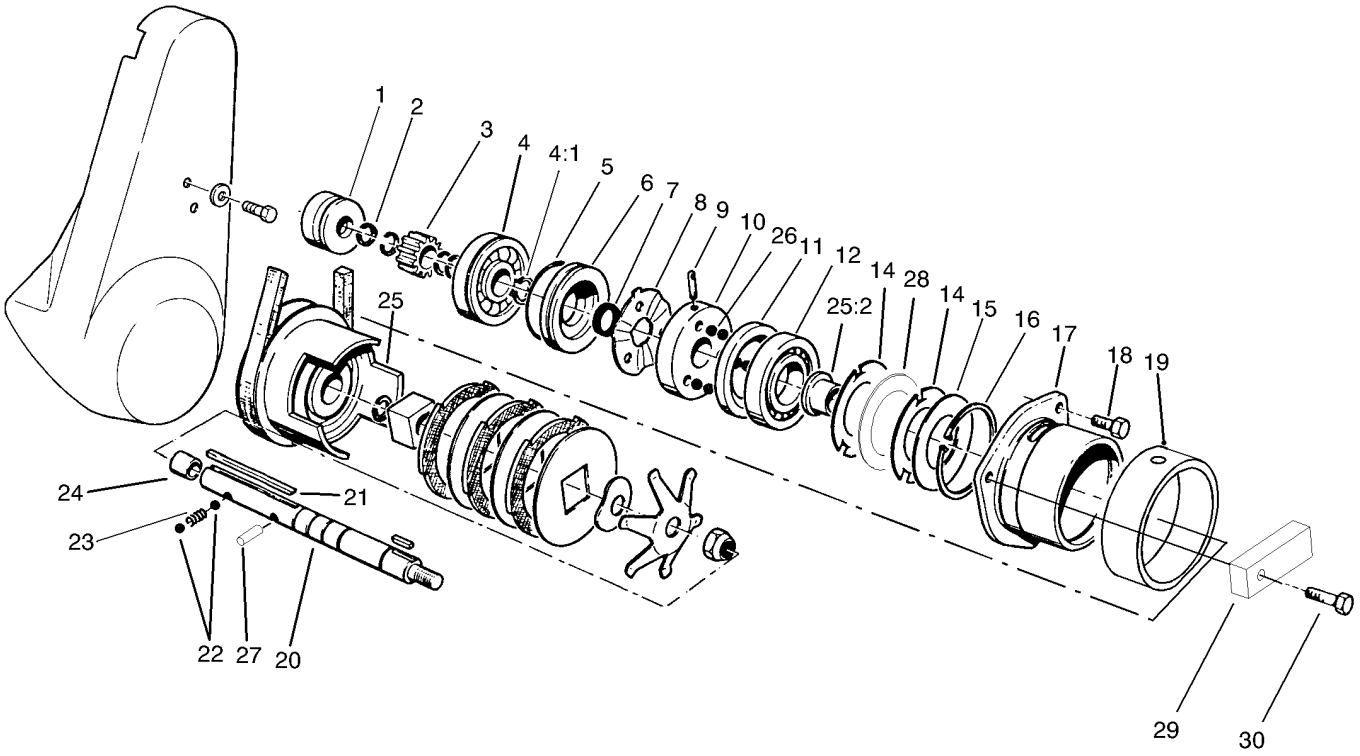

Clutch Shaft Assembly


Ref	Part No.	Qty.	Description
1	3-0465	1	Clutch-Female
2	32120-64	5	Ring-Snap, External
3	88-8700	1	Gear-Pinion
4	251-139	1	Bearing-Ball
4:1	251-149	1	Ring-Snap
5	237-38	1	O-Ring
6	3-1545	1	Spacer-Clutch
7	253-83	1	Seal-Oil
8	98-3410	1	Cam-Clutch
9	95-6082	1	Pin-Clutch
10	3-0470	1	Actuator-Clutch
11	3-0471	1	Plate-Backing, Clutch
12	251-140	1	Bearing-Ball
14	3290-264	2	Washer-Wave
15	3-0481	1	Washer-Clutch
16	32120-65	1	Ring-Snap
17	5-1423	1	Housing-Clutch
18	3274-15	2	Screw-HSH
19	98-3400	1	Sleeve-Clutch
20	95-7293	1	Shaft-Clutch
21	88-8730	1	Key-Clutch Shaft
22	255-5	2	Ball-Steel
23	3-0460	1	Spring-Detent
24	256-112	1	Bushing

Ref	Part No.	Qty.	Description
25	105-5368	1	Pulley ASM
25:2	3-4066	1	Bushing
26	255-8	6	Ball-Steel
27	32121-45	1	Pin-Spring
28	88-9030	1	Washer-Special
29	100-3396	1	Stop-Clutch Lever
30	321-8	1	Screw-HH

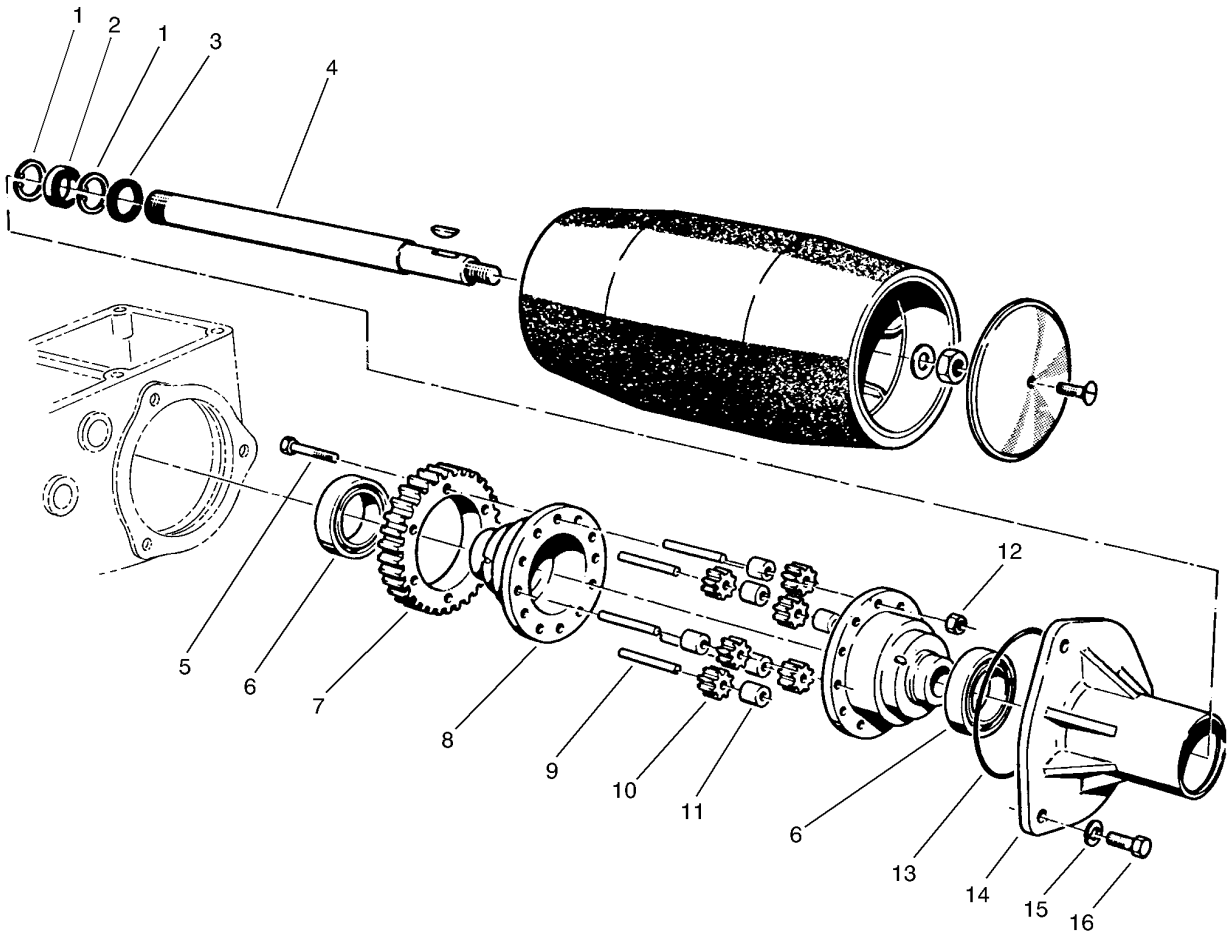

Differential Case and Shaft Assembly


Ref	Part No.	Qty.	Description
1	32120-62	4	Ring-Retaining
2	251-137	2	Bearing-Ball
3	253-82	2	Seal-Oil
4	105-5381	2	Axle
5	3273-23	6	Screw-HS
6	251-138	2	Bearing-Ball
7	3-0454	1	Gear-Ring
8	3-0450	2	Case-Differential
9	3-0452	6	Shaft-Gear, Differential
10	105-5380	6	Gear-Differential
11	3-0453	6	Spacer-Gear, Differential
12	3296-27	6	Nut-Lock NI
13	237-33	2	O-Ring
14	3-0596	2	Housing-Axle
15	3253-4	6	Washer-Lock
16	322-4	6	Screw-HH

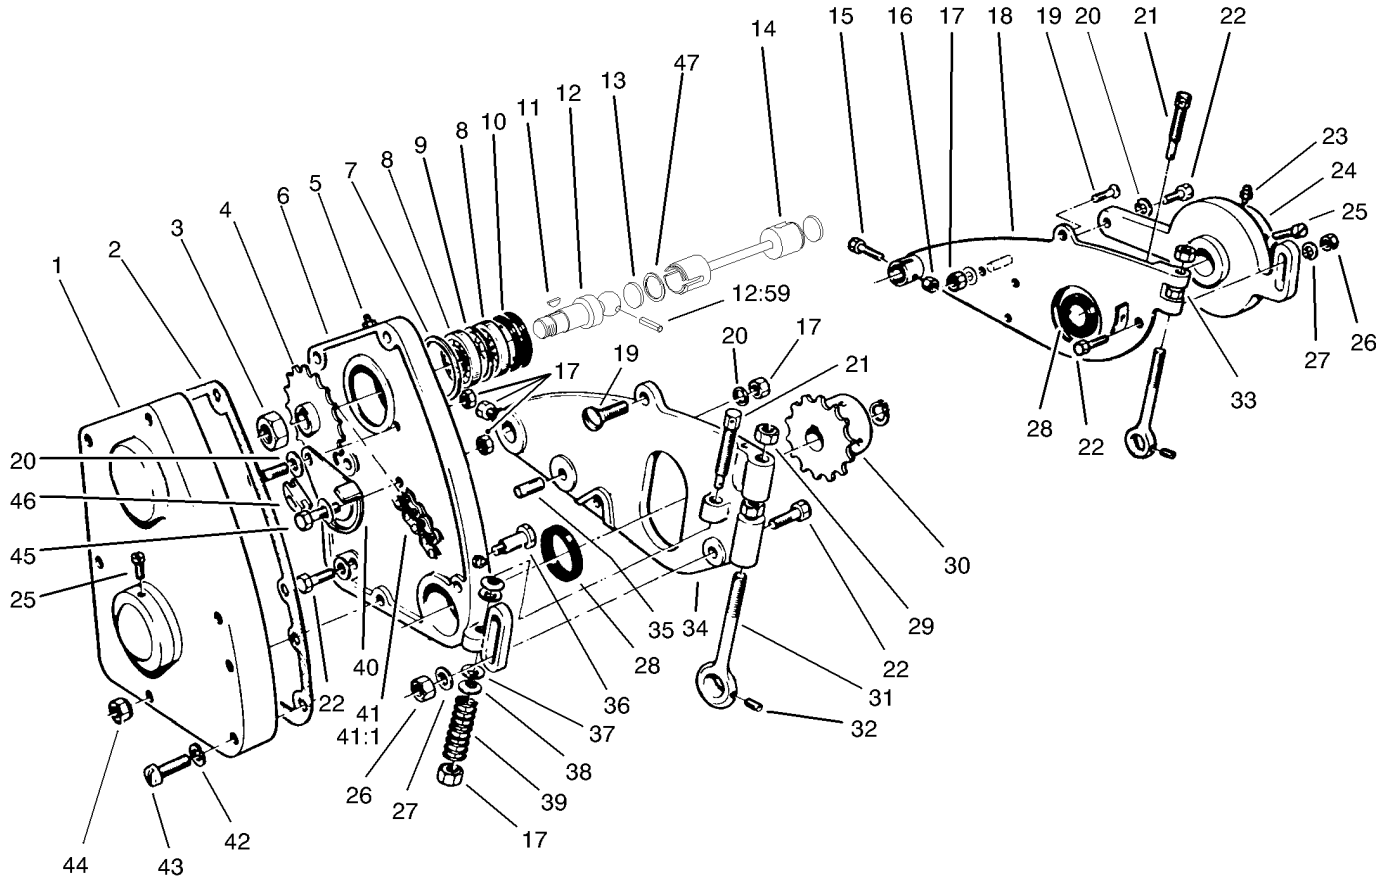

Cutting Unit Frame Assembly


Ref	Part No.	Qty.	Description
1	3-2964-01	1	Cover-Drive, Reel
2	92-4991	1	Gasket-Cover, Reel
3	3296-33	1	Nut-Lock, NI
4	88-8930	1	Sprocket
5	302-5	1	Fitting-Grease, Straight
6	3-5786-01	1	Bracket-Reel, RH
7	32120-42	1	Ring-Retaining
8	251-6	2	Bearing-Ball
9	3-3428	1	Washer
10	253-59	2	Seal-Oil
11	3-2804	1	Key-Woodruff
12	2-0039	1	Universal Driver ASM
12:59	32121-25	1	Pin-Roll
13	3-1852	2	Pad
14	3-0584-01	1	Universal Shaft ASM
15	321-9	2	Screw-HH
16	32153-4	2	Nut-Lock
17	3296-13	6	Nut-Lock NI
18	3-5783-01	1	Plate-Side, LH
19	3290-141	6	Screw-HSFH
20	3256-22	4	Washer-Flat
21	3-5793	2	Screw-Adjustment, Reel
22	329-13	4	Screw-HH
23	302-14	2	Vent

Ref	Part No.	Qty.	Description
24	3-6524-01	1	Bracket-Reel
25	3274-26	2	Screw-HSH
26	3296-3	2	Nut-Lock
27	3-5792	2	Washer
28	99-4268	2	Seal-Oil
29	3296-45	2	Nut-Lock, NI
30	3-5802	1	Sprocket-Reel
31	3-5785	2	Screw-Adjustment, Roller
32	3245-7	2	Screw-HS
33	3217-9	2	Nut-Hex
34	3-5784-01	1	Plate-Side, RH
35	3-5797	2	Spacer
36	95-1826	2	Bolt-Special
37	3-0566	4	Washer-Concave
38	3-0565	4	Washer-Convex
39	3-5787	2	Spring-Compression
40	3-0463	1	Idler Arm-Chain
41	88-8920	1	Chain-Roller
41:1	2710-31	1	Link-Connecting #35
42	3253-17	5	Washer-Lock / Sp
43	32105-5	5	Screw
44	3-3554	2	Nut-Special
45	329-3	2	Screw-HH
46	3-0554	1	Shoe-Idler, Chain

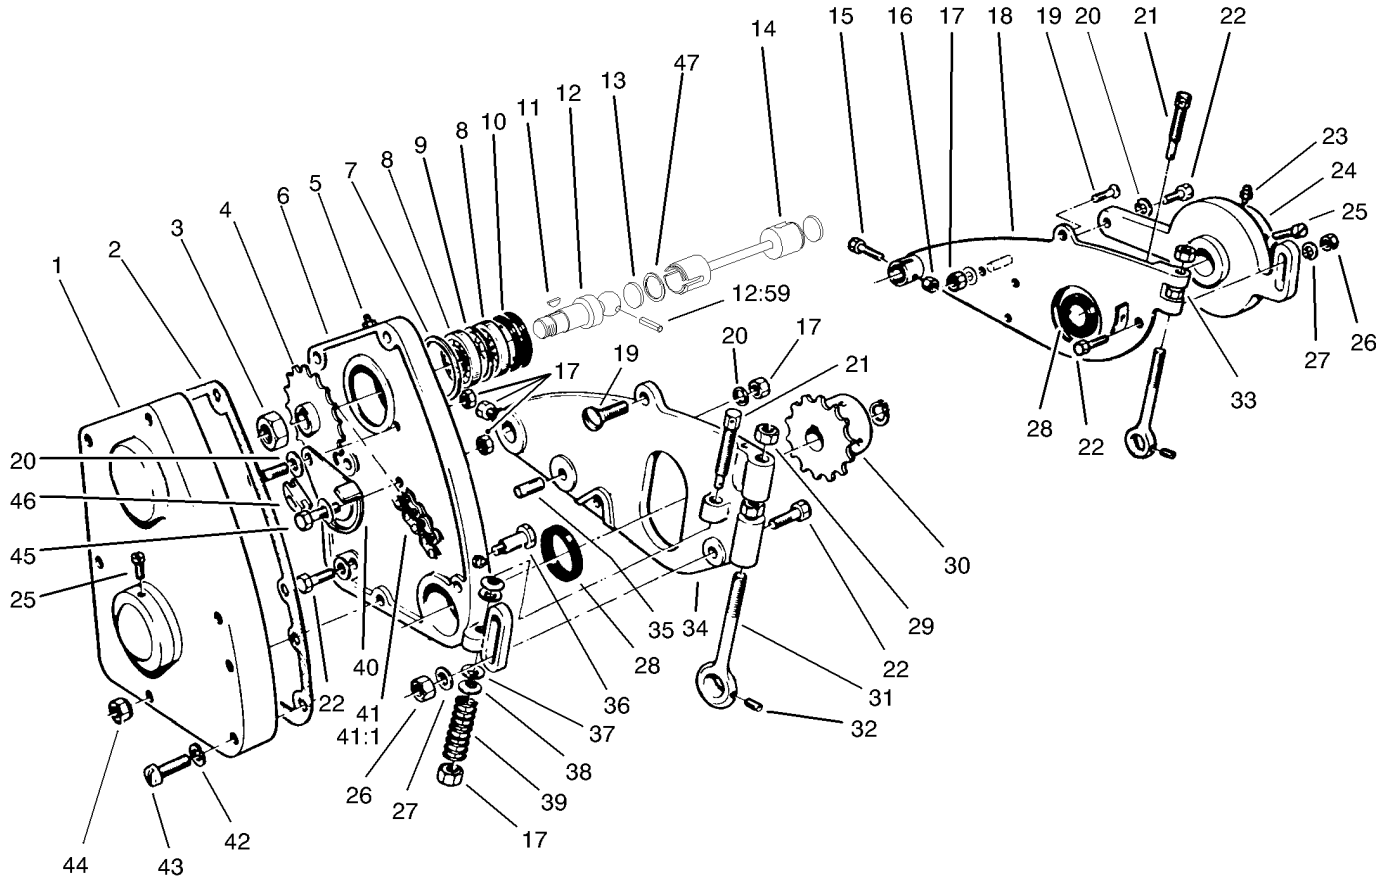


Cutting Unit Frame Assembly (continued)

Ref	Part No.	Qty.	Description
47	32120-69	1	Ring-Snap

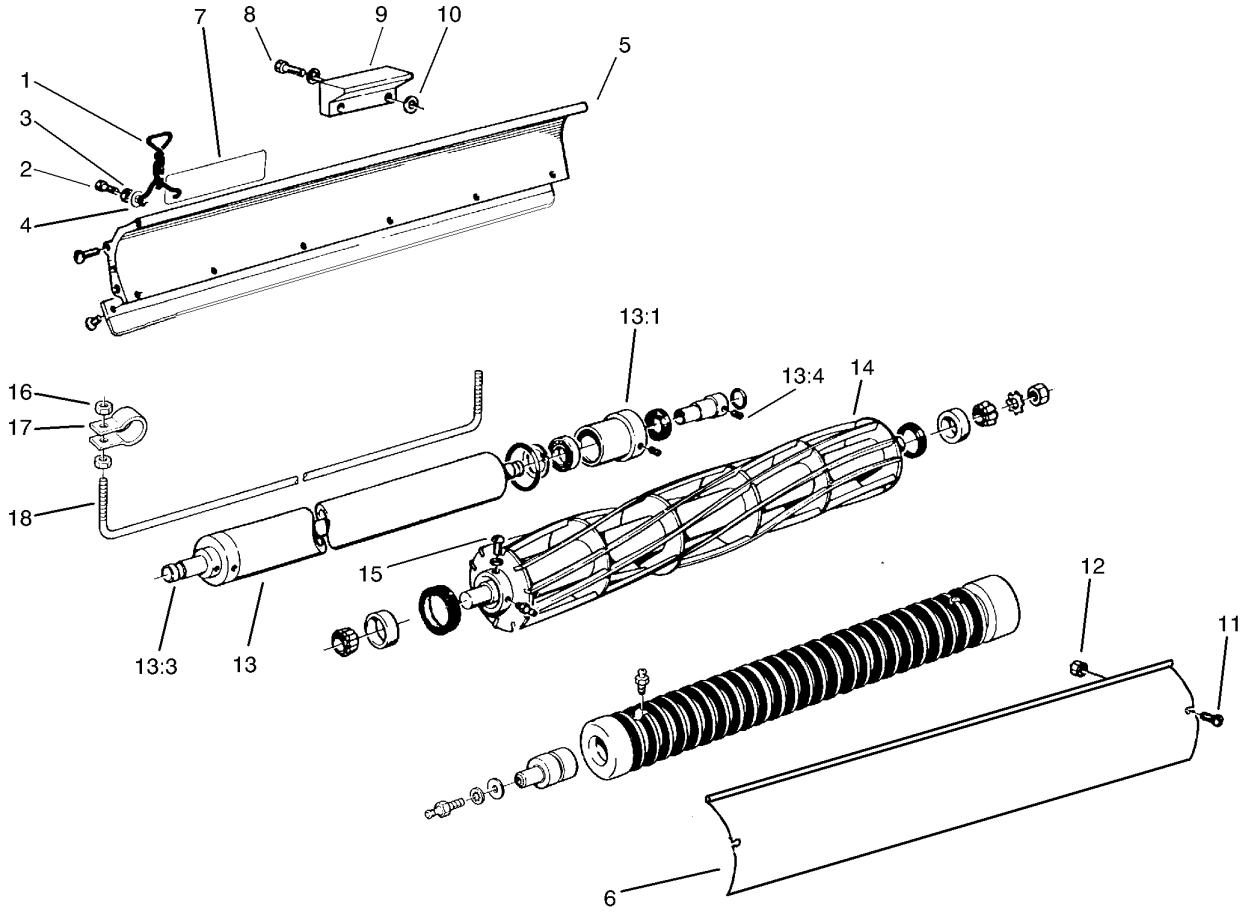


Bedknife, Reel, and Roller Assembly

Ref	Part No.	Qty.	Description
1	92-4994	2	Chain-Lift, Reel
2	321-2	4	Screw-HH
3	3253-3	6	Washer-Lock
4	3-0988	2	Bail-Lift
❷5		1	Guard And Bedknife ASM
6	3-2057-01	1	Grass Shield ASM
7	93-6688	1	Decal-Danger, Europe
8	321-8	2	Screw-HH
9	3-4981-01	1	Weight
10	3256-22	4	Washer-Flat
11	3258-61	2	Screw
12	3296-13	2	Nut-Lock NI
13	39-9590	1	Roller ASM
❷13:1		2	Bearing/housing ASM
13:3	5-1422	1	Shaft-Roller, Rear
13:4	3245-35	2	Screw-HS
14	4-2219	1	Reel ASM
15	3274-29	4	Screw-HSFH
16	32149-2	4	Nut-Keps
17	88-9010	2	Bracket-Scraper
18	88-9020	1	Rod-Scraper

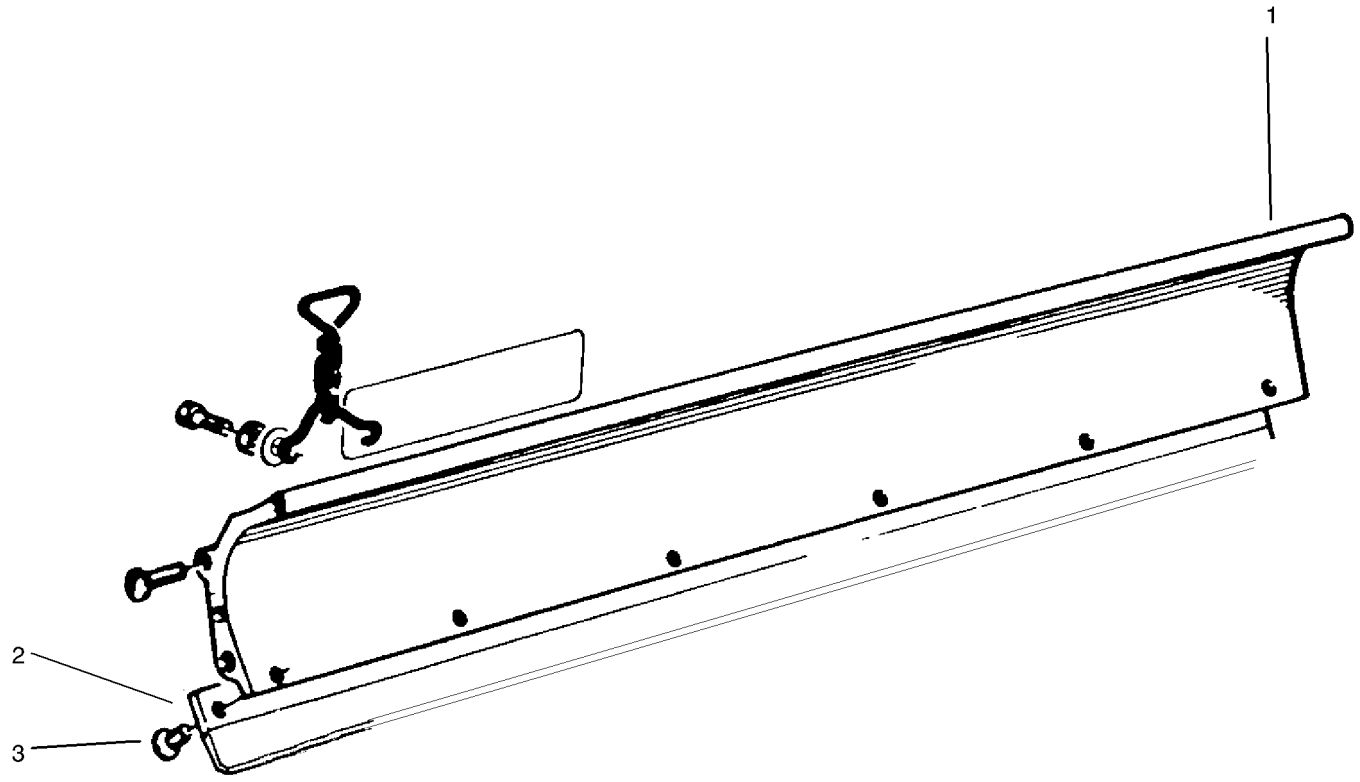


Guard and Bedknife Assembly

Ref	Part No.	Qty.	Description
1	3-0601-01	1	Guard
2	88-8990	1	Bedknife-Machined
2	88-9000	1	Bedknife-Tournament
2	95-3147	1	Bedknife-Micro Cut
3	57-4910	6	Screw-Special

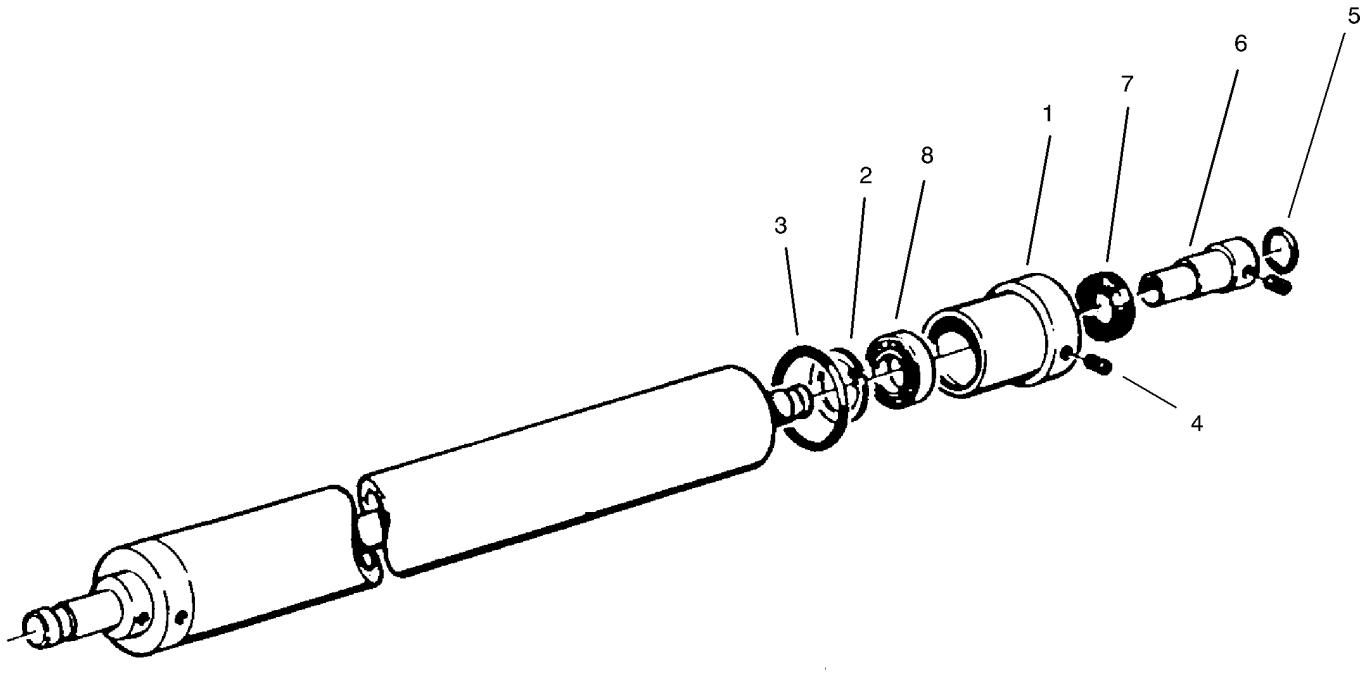


Bearing Housing Assembly for Roller Assembly No. 39-9590


Ref	Part No.	Qty.	Description
1	5-1384	1	Housing-Bearing
2	32151-13	1	Ring-Retaining
3	237-68	1	O-Ring
4	285-17	1	Plug-Pipe
5	237-69	1	O-Ring
6	11-3050	1	Sleeve
7	253-118	1	Seal-Oil
8	251-205	1	Bearing-Ball

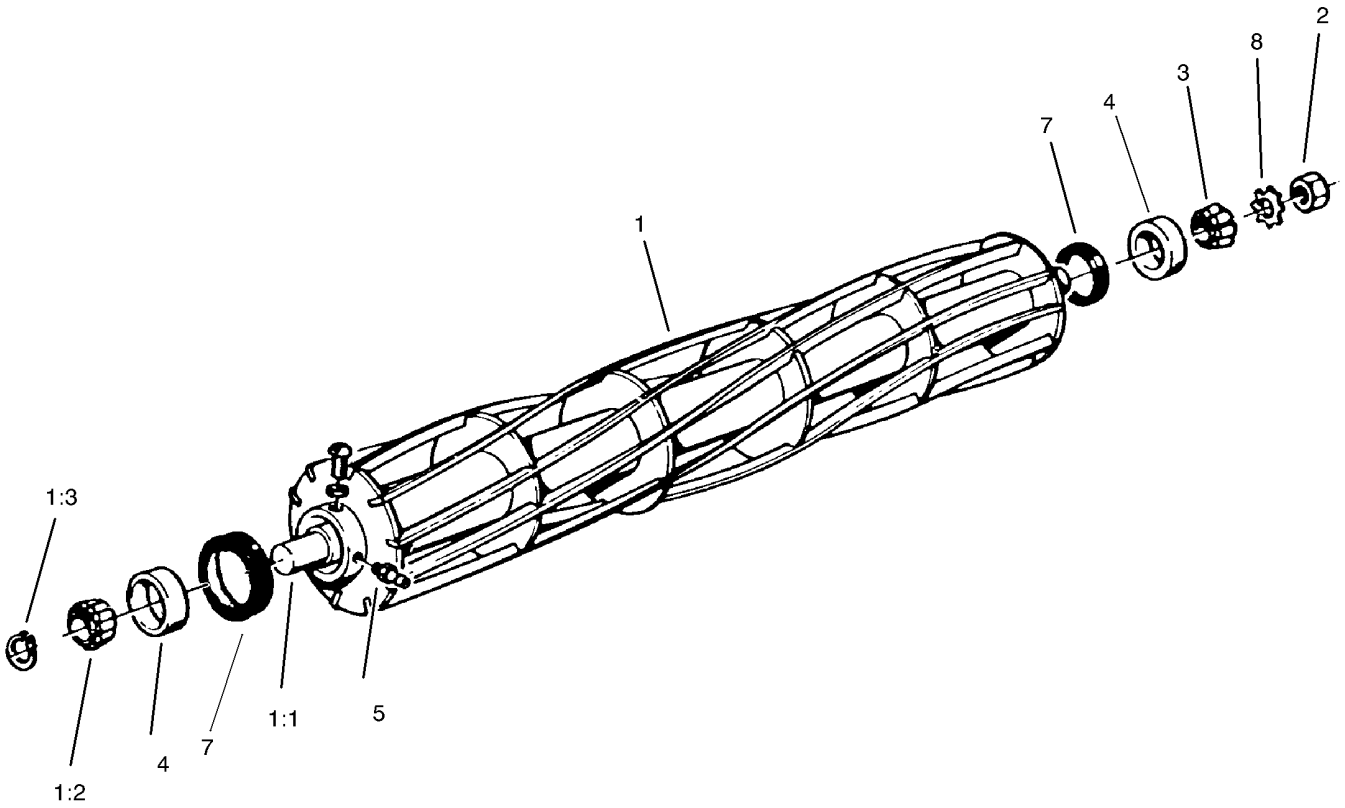



Real and Bearing Assembly No. 4-2219

Ref	Part No.	Qty.	Description
❷1		1	Reel Shaft ASM
1:1	5-1393	1	Shaft-Reel
1:3	32151-12	1	Ring-Retaining
1:2	254-68	1	Cone-Bearing, Roller
2	254-86	1	Locknut
3	254-68	1	Cone-Bearing, Roller
4	254-67	2	Cup-Bearing, Roller
5	302-5	2	Fitting-Grease, Straight
7	253-120	2	Seal-Oil
8	254-87	1	Washer-Lock

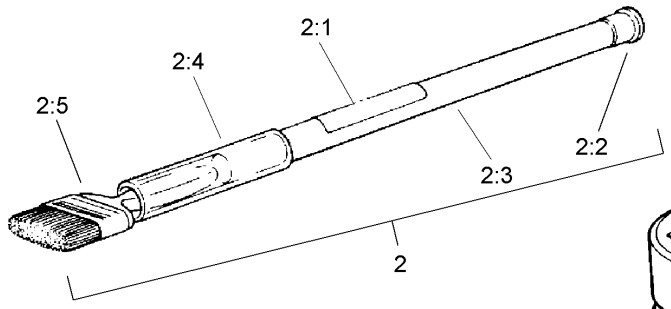


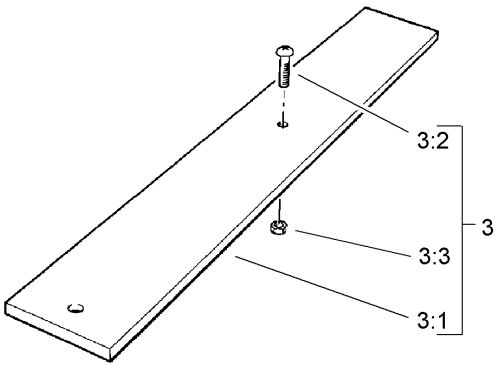


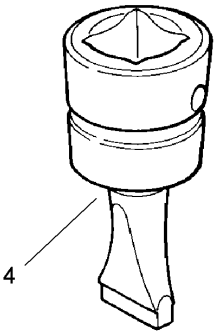

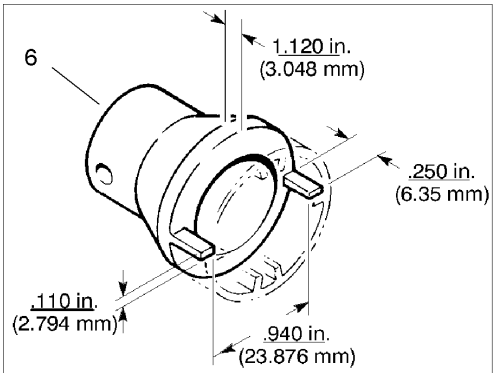


Pinion Removal Tool
Note: Modify part #3-1826 by removing material as indicated to achieve final dimensions for reel bearing adjustment socket.

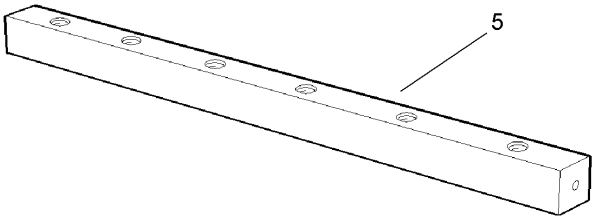

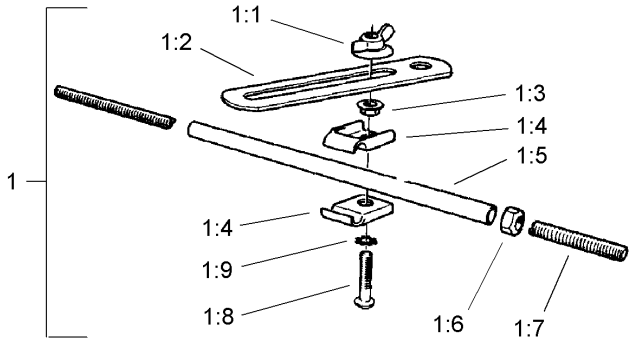

Special Tools


Ref	Part No.	Qty.	Description
❸1	TOR200120	1	Alignment Tool Assembly
❷1:1		1	Nut-Wing
❷1:2		1	Bracket-Alignment
1:3	32128-20	1	Nut-HF
1:4	3-6657	2	Clip-Skid
❷1:5		1	Tube
1:6	3219-2	1	Nut-Hex
❷1:7		1	Rod
1:8	32122-35	1	Screw-Head, Truss
1:9	3255-8	1	Washer-Lock
❸2	TOR299100	1	Backlapping Brush Assembly
2:1	12-9140	1	Decal
2:2	2410-18	1	Plug
2:3	29-9080	1	Handle
2:4	29-9090	1	Hose-Handle
2:5	36-4310	1	Brush
❸3	TOR138199	1	Guage Bar Assembly
3:1	65-8320	1	Bar-Height Of Cut
3:2	32122-2	1	Screw-Head, Round
3:3	3219-14	1	Nut-Hex
❸4	TOR510880	1	Tool-Bedknife Screw
❸5	TOR31397	1	Bar-Grinding, Bed Knife
❸6	TOR31826	1	Socket-Adjustment, Reel Bearing

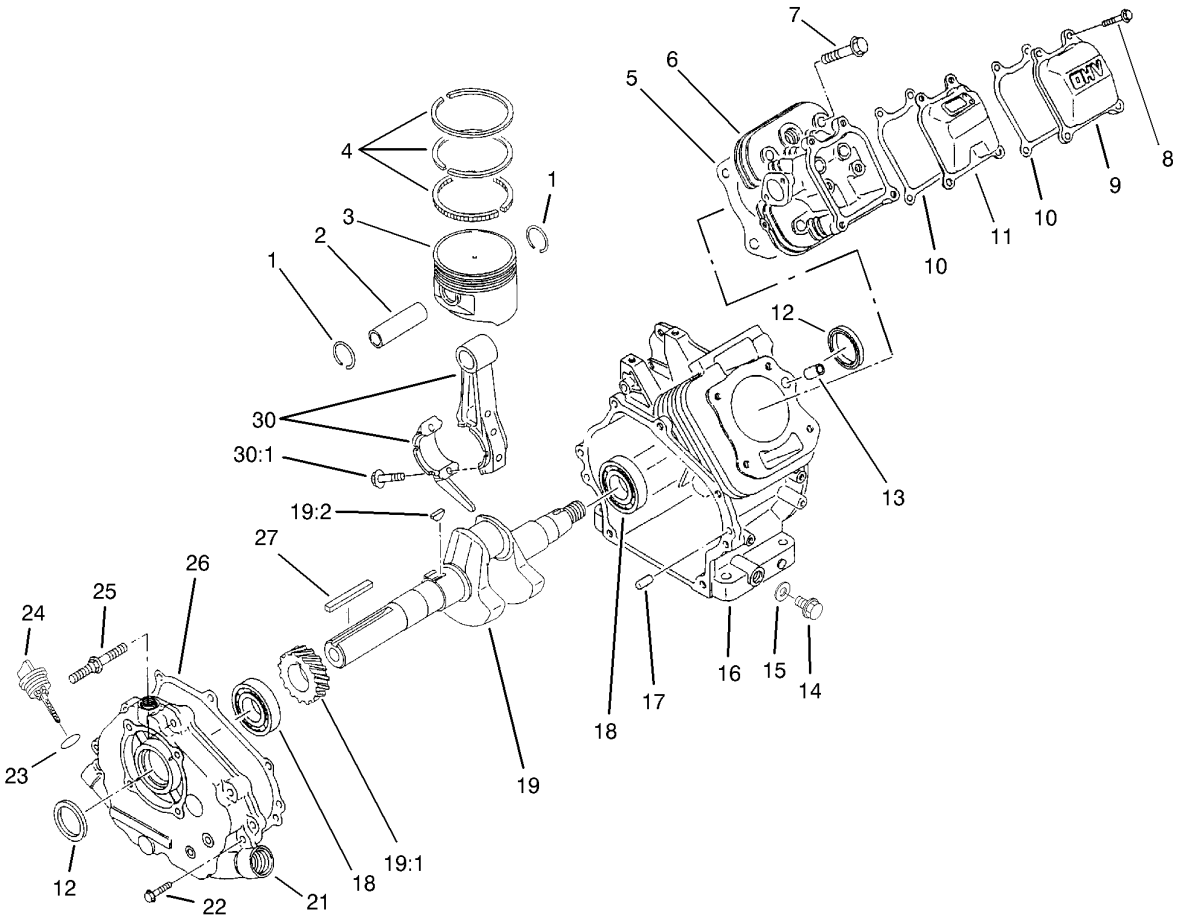

Crankcase Assembly


Ref	Part No.	Qty.	Description
1	93-8500	2	Ring-Retaining
2	93-8501	1	Pin-Piston
3	93-8502	1	Piston
3	94-6836	1	Piston-0.5 O/s
4	93-8503	1	Set-Ring, Piston
4	94-6837	1	Set-Ring, Piston (.05mm)
5	93-8504	1	Gasket-Head
6	93-8505	1	Head-Cylinder
7	93-8506	4	Bolt-Flanged
8	94-6838	4	Bolt-Flanged
9	93-8508	1	Case-Rocker
10	93-8509	2	Gasket-Rocker
11	93-8510	1	Breather
12	93-8511	2	Seal-Oil
13	93-8512	2	Pin
14	93-8513	2	Plug-Drain
15	93-8514	2	Gasket-Plug, Drain
16	93-8515	1	Crankcase
17	93-8516	2	Pin
18	93-8517	2	Bearing-Ball
19	93-8696	1	Crankshaft ASM
19:1	94-9043	1	Gear-Helical
19:2	93-8526	1	Key
21	93-8697	1	Cover-Crankcase

Ref	Part No.	Qty.	Description
22	93-8521	7	Bolt-Flanged
23	94-9041	2	O-Ring
24	93-8523	2	Cap-Filter, Oil
25	93-8524	1	Stud
26	93-8525	1	Gasket-Crankcase
27	93-8526	1	Key
30	93-8528	1	Connecting Rod ASM
30:1	93-8527	2	Bolt-Rod

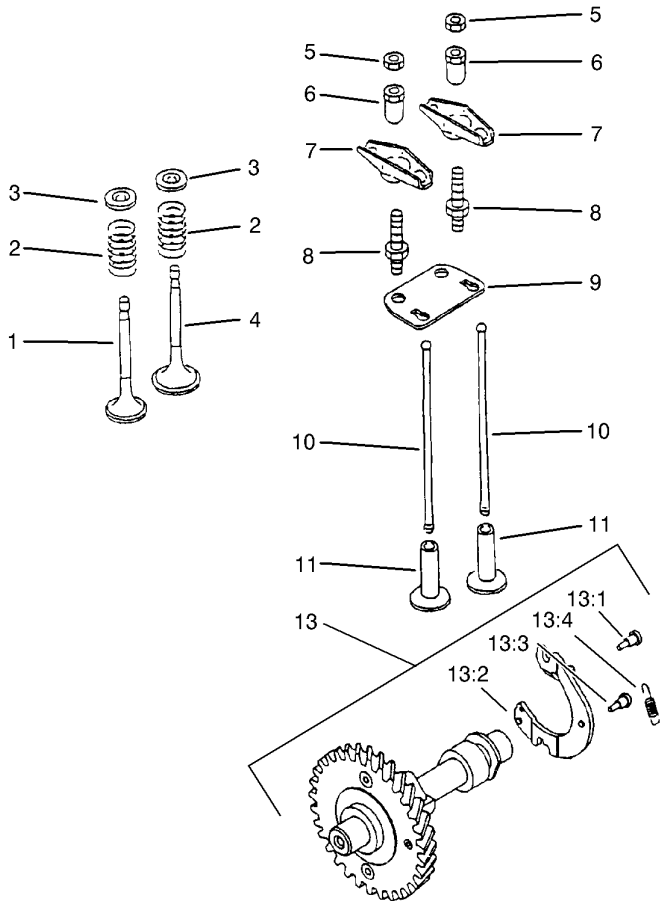

Camshaft and Valve Assembly


Ref	Part No.	Qty.	Description
1	93-8529	1	Valve-Exhaust
2	93-8530	2	Spring-Valve
3	93-8531	2	Retainer-Spring
4	93-8532	1	Valve-Intake
5	93-8533	2	Nut
6	93-8534	2	Nut
7	93-8535	2	Arm-Rocker
8	93-8536	2	Bolt
9	93-8537	1	Guide
10	93-8538	2	Rod-Push
11	93-8539	2	Tappet
13	93-8699	1	Camshaft ASM
13:1	93-8540	2	Pin
13:2	93-8543	1	Decompressor
13:3	93-8542	1	Pin
13:4	93-8541	1	Spring

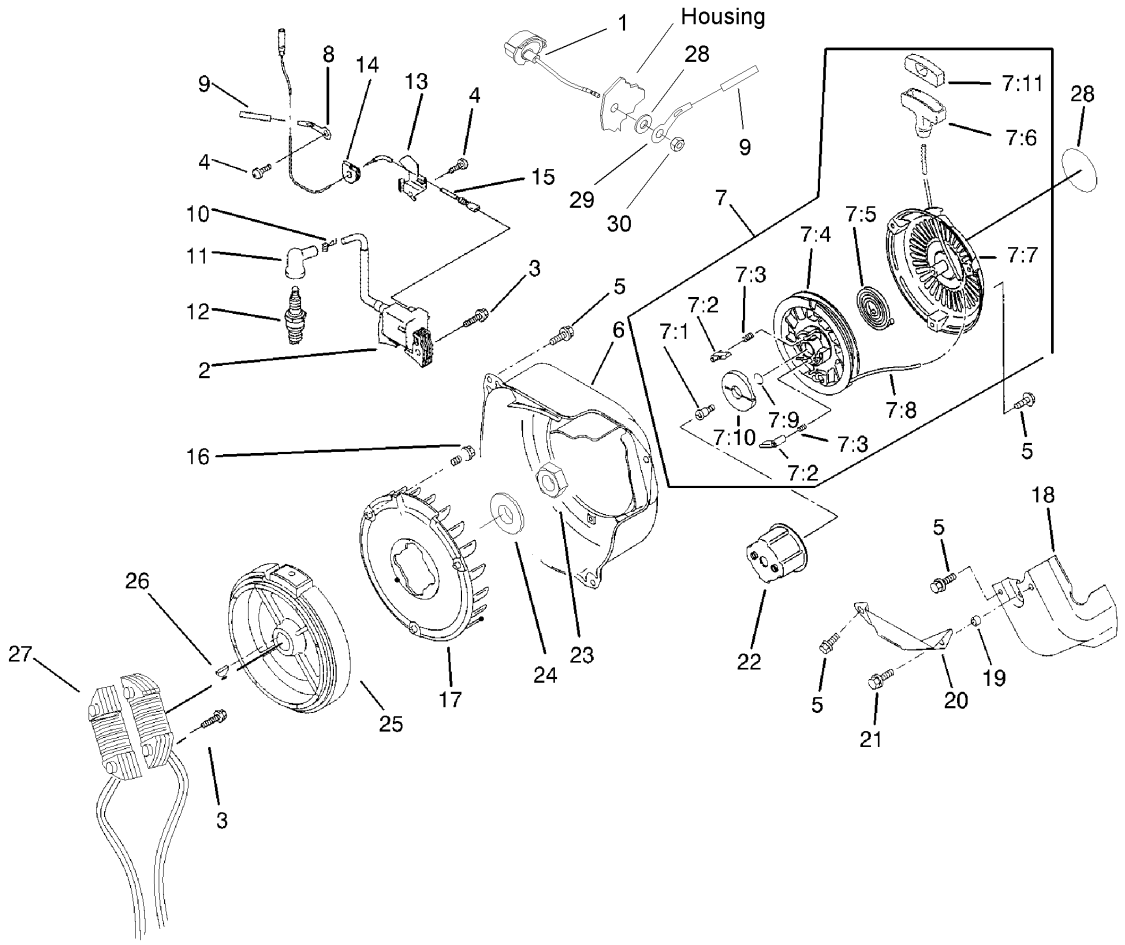

Ignition Assembly

Ref	Part No.	Qty.	Description
1	107-7606	1	Sealed Switch ASM
2	94-9031	1	Ignition Coil ASM
3	93-8548	6	Bolt-Flanged
4	93-8549	1	Screw
5	93-8550	10	Bolt-Flanged
6	107-7607	1	Housing-Fan
7	93-8552	1	Recoil Starter ASM
7:1	93-8553	1	Screw
7:2	93-8554	2	Pawl-Recoil
7:3	93-8555	2	Spring-Return
7:4	93-8556	1	Reel-Recoil
7:5	93-8557	1	Spring
7:6	94-9045	1	Grip-Starter, Recoil
7:7	94-9046	1	Case-Recoil
7:8	93-8560	1	Rope
7:9	93-8561	1	Ring-Retaining
7:10	93-8562	1	Guide-Pawl
7:11	94-9044	1	Cap-Grip
8	94-9039	1	Clamp
9	94-9040	2	Tube
10	94-9049	1	Spring-Terminal
11	93-8585	1	Cap-Plug, Spark
12	93-8584	1	Spark Plug
13	93-8583	1	Clamp


Ref	Part No.	Qty.	Description
14	107-7608	1	Grommet
15	94-9038	1	Wire-Lead
16	94-6840	3	Bolt-Flanged
17	93-8572	1	Fan
18	93-8563	1	Shroud-Engine
19	93-8564	1	Collar
20	93-8565	1	Shroud-Engine
21	93-8566	1	Bolt-Flanged
22	93-8567	1	Pulley-Recoil
23	93-8568	1	Nut
24	93-8569	1	Washer
25	99-6237	1	Flywheel ASM
26	93-8571	1	Key
27	99-4267	1	Coil-Lighting
28	33094-00	1	Washer-Flat
29	107-7609	1	Clamp
30	33014-00	1	Nut-Hex

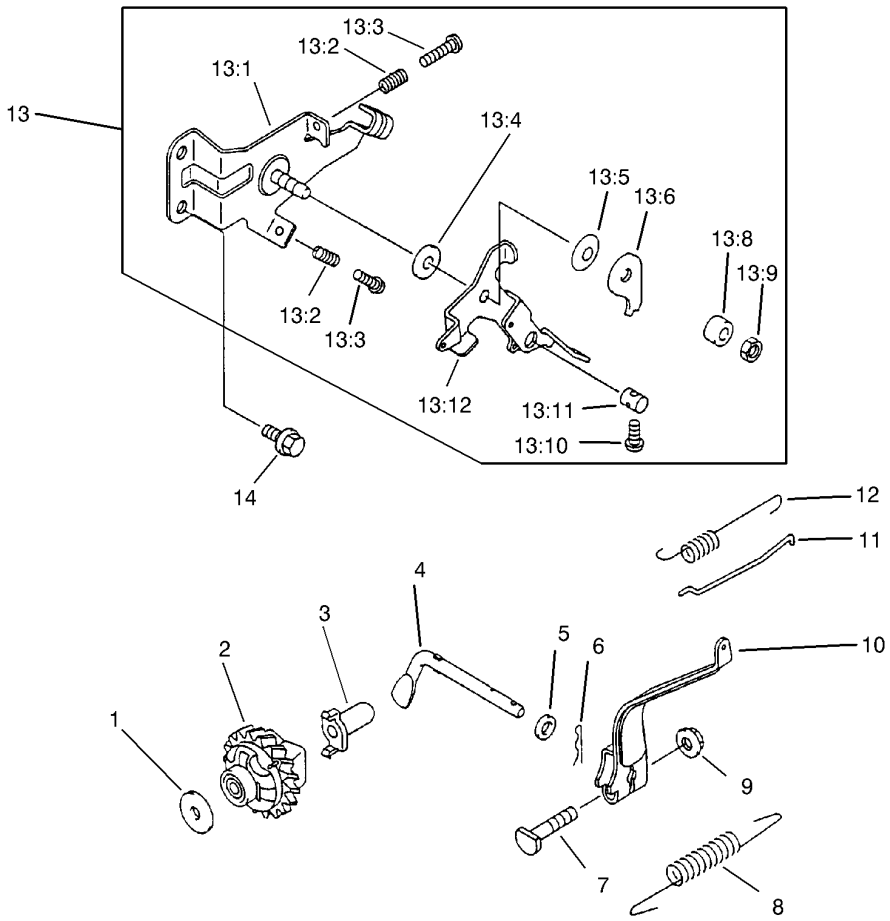

Governor Assembly

Ref	Part No.	Qty.	Description
1	94-6842	1	Washer
2	94-6841	1	Governor ASM
3	93-8610	1	Sleeve
4	93-8609	1	Arm-Pivot
5	93-8608	1	Washer
6	93-8607	1	Pin-Snap
7	93-8606	1	Bolt
8	94-9030	1	Spring-Governor
9	93-8631	1	Nut
10	93-8603	1	Arm-Governor
11	93-8602	1	Rod-Governor
12	93-8601	1	Spring
13	93-8599	1	Control ASM
13:1	93-8587	1	Bracket
13:2	93-8588	2	Spring
13:3	93-8589	2	Bolt
13:4	93-8590	1	Washer
13:5	93-8591	1	Spring
13:6	93-8592	1	Plate
13:8	93-8594	1	Spacer
13:9	93-8595	1	Nut
13:10	93-8596	1	Screw-Head, Pan
13:11	93-8597	1	Nut
13:12	93-8598	1	Lever


Ref	Part No.	Qty.	Description
14	93-8600	2	Bolt-Flanged

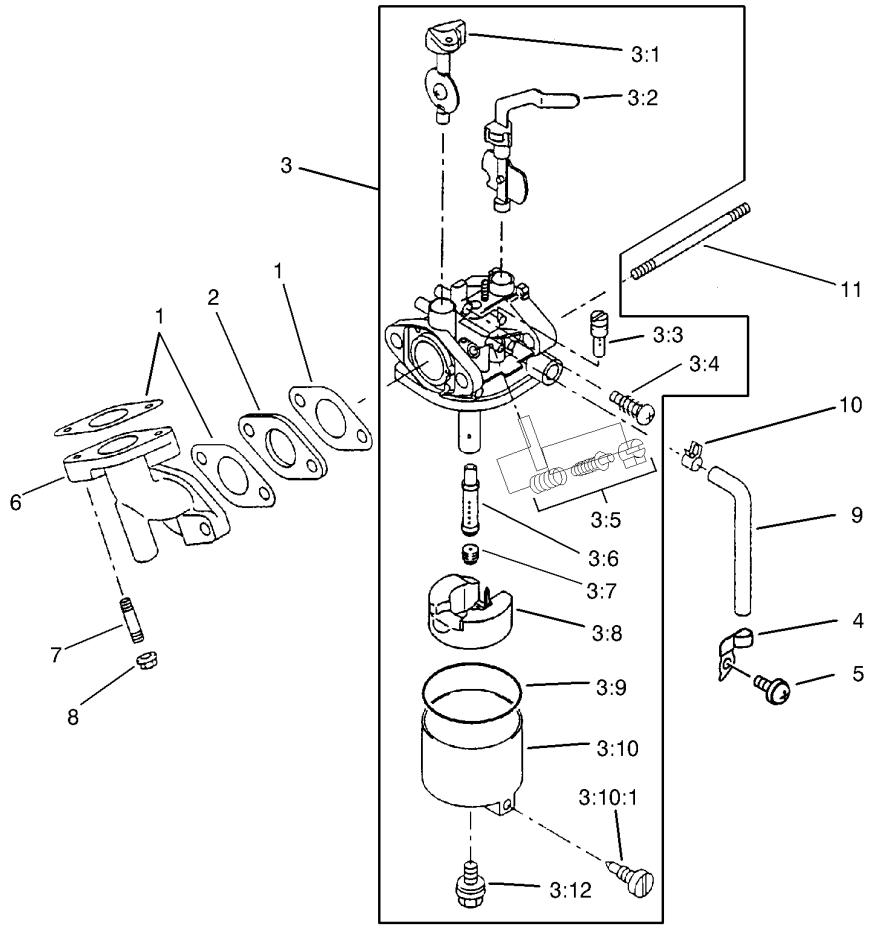

Carburetor Assembly


Ref	Part No.	Qty.	Description
1	93-8613	3	Gasket
2	94-9048	1	Insulator
3	94-9032	1	Carburetor ASM
3:1	94-9033	1	Throttle Valve ASM
3:2	93-8617	1	Valve-Choke
3:3	94-9037	1	Jet-Pilot, #40
3:4	93-8619	1	Screw ASM
3:5	94-9034	1	Limiter
3:6	94-9035	1	Nozzle-Main
3:7	94-9036	1	Jet-Main, #65
3:7	98-8736	1	Jet-Main, #60 High Alt
3:7	98-8735	1	Jet-Main, #62 High Alt
3:8	94-6844	1	Float ASM
3:9	93-8624	1	Gasket
3:10	93-8625	1	Float Chamber ASM
3:10:1	93-8626	1	Screw ASM
3:12	93-8627	1	Bolt
4	94-6846	1	Clamp
5	94-6845	1	Screw
6	93-8633	1	Pipe-Intake
7	93-8632	2	Bolt-Stud
8	93-8631	2	Nut
9	93-8630	1	Tube
10	93-8629	1	Clamp

Ref	Part No.	Qty.	Description
11	93-8628	1	Bolt-Stud

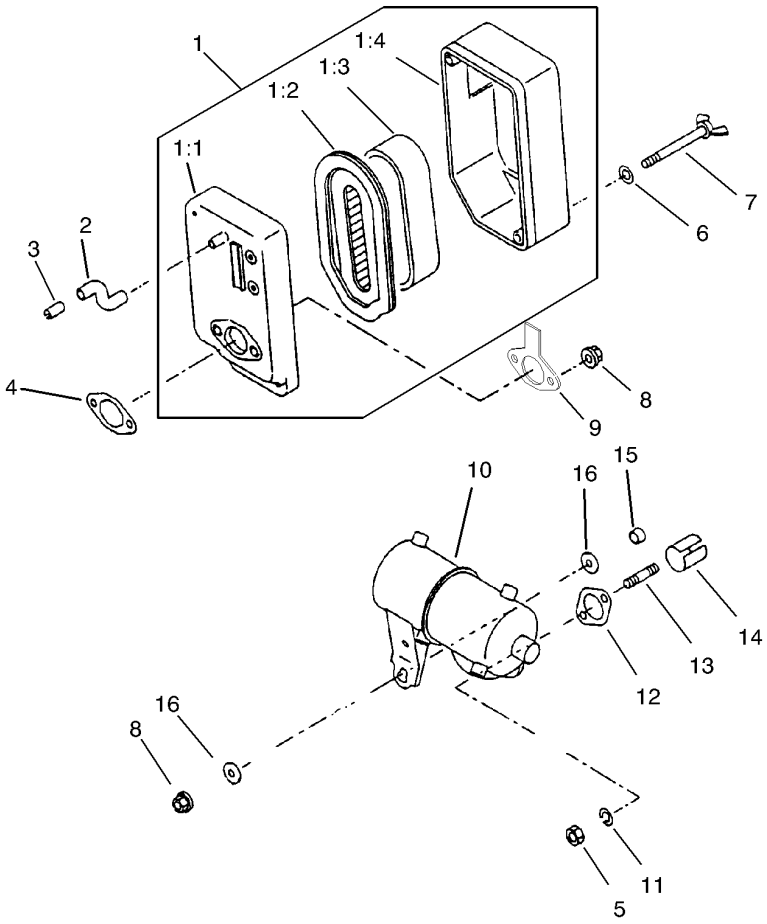

Air Cleaner and Muffler Assembly


Ref	Part No.	Qty.	Description
1	93-8634	1	Air Filter ASM
1:1	93-8635	1	Case Filter ASM
1:2	93-8636	1	Element-Filter, Air
1:3	93-8637	1	Element-Filter, Air
1:4	93-8638	1	Cap-Filter, Air
2	93-8659	1	Tube
3	93-8658	1	Pipe
4	93-8657	1	Gasket-Filter, Air
5	93-8656	2	Nut-Hex
6	93-8639	2	Washer
7	93-8640	2	Bolt
8	93-8631	3	Nut
9	93-8642	1	Plate-Filter, Air
10	98-3427	1	Muffler
11	93-8655	2	Washer-Spring
12	93-8654	1	Gasket-Muffler
13	94-6848	2	Bolt-Stud
14	93-8652	1	Pipe-Exhaust
15	93-8651	1	Collar
16	93-8650	2	Washer

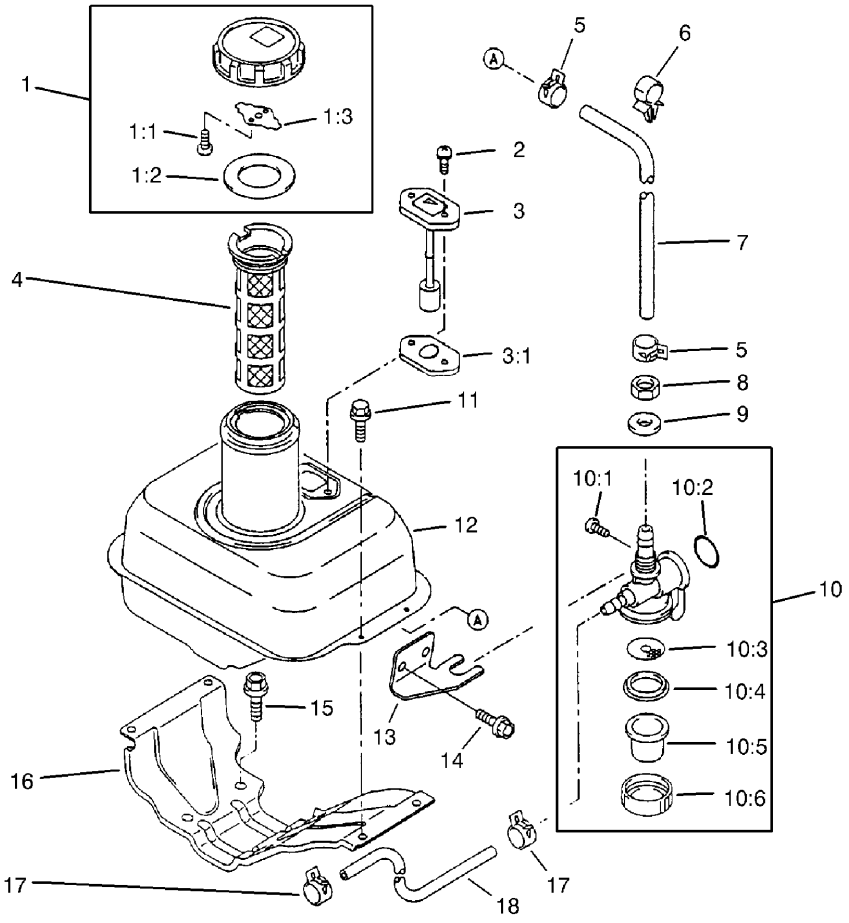

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	93-8660	1	Fuel Cap ASM
1:1	93-8661	2	Screw
1:2	93-8662	1	Gasket
1:3	93-8663	1	Spring
2	93-8686	2	Screw
3	93-8685	1	Gauge-Fuel
3:1	104-2384	1	Gasket-Gauge, Fuel
4	94-6826	1	Filter-Fuel
5	93-8664	2	Clamp
6	93-8665	1	Clamp
7	93-8666	1	Tube
8	94-9042	1	Nut
9	93-8668	1	Washer
10	93-8669	1	TAP ASM
10:1	93-8670	1	Screw
10:2	93-8671	1	O-Ring
10:3	94-6849	1	Filter-TAP
10:4	93-8673	1	Gasket
10:5	93-8674	1	Cup-TAP
10:6	93-8675	1	Nut
11	94-6838	4	Bolt-Flanged
12	104-2382	1	Tank-Fuel
13	93-8681	1	Bracket
14	93-8680	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
15	94-6825	4	Bolt-Flanged
16	104-2383	1	Bracket-Tank
17	93-8676	2	Clamp
18	93-8677	1	Tube

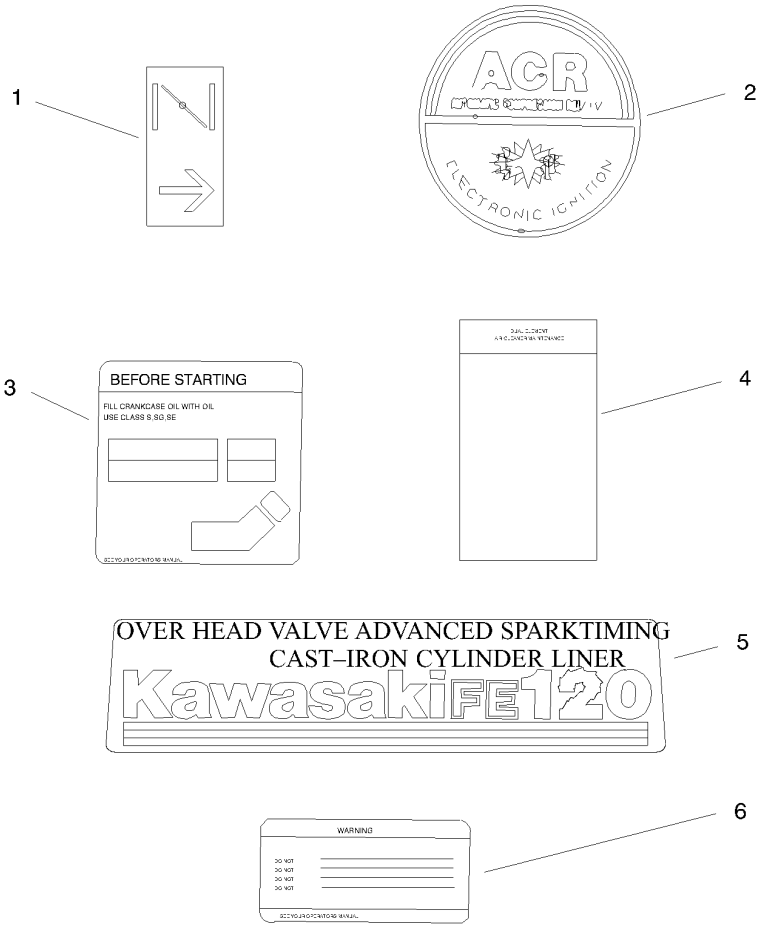

Engine Decals

Ref	Part No.	Qty.	Description
1	93-8687	1	Decal-Choke
2	94-9027	1	Label-Recoil
3	93-8689	1	Decal-Instructions
4	93-8690	1	Decal-Maintenance
5	94-9028	1	Label-Kawasaki
6	93-8692	1	Decal-Warning

Attachments and Accessories

For 04130 - Greensmaster 500

Product Name	Model/Part
Light Kit	04058
11-Blade Reel Mower	04215
Wiehle Roller Kit, Rear Cutting Unit	100-1556
Brush Kit	22949
Sectional Roller Kit	4-7319
Skid Kit	47299
Full Roller Kit	47309
Bedknife	88-8990
Bedknife-Micro Cut	95-3147
Spark Arrester Kit	98-3426
Jet-Main, #62 High Altitude	98-8735
Jet-Main, #60 High Altitude	98-8736

NOTES

NOTES


TORO®