Form Number 3351-345

# Backlap/Reel Speed Kit
## Greensmaster® 3150/3200/3250-D

**Model No. 04498**

# Parts Catalog

**Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2003
All Rights Reserved

# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

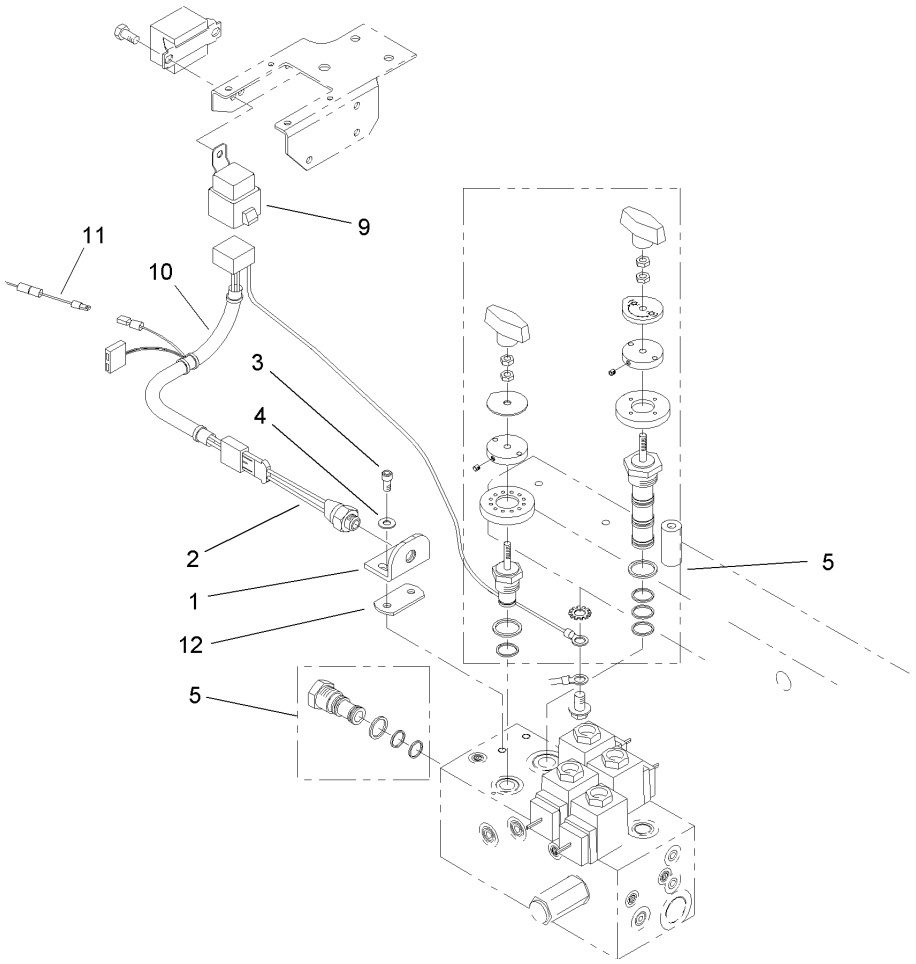
AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head
WH. . . . . wing head

# Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ See following pages

# Contents

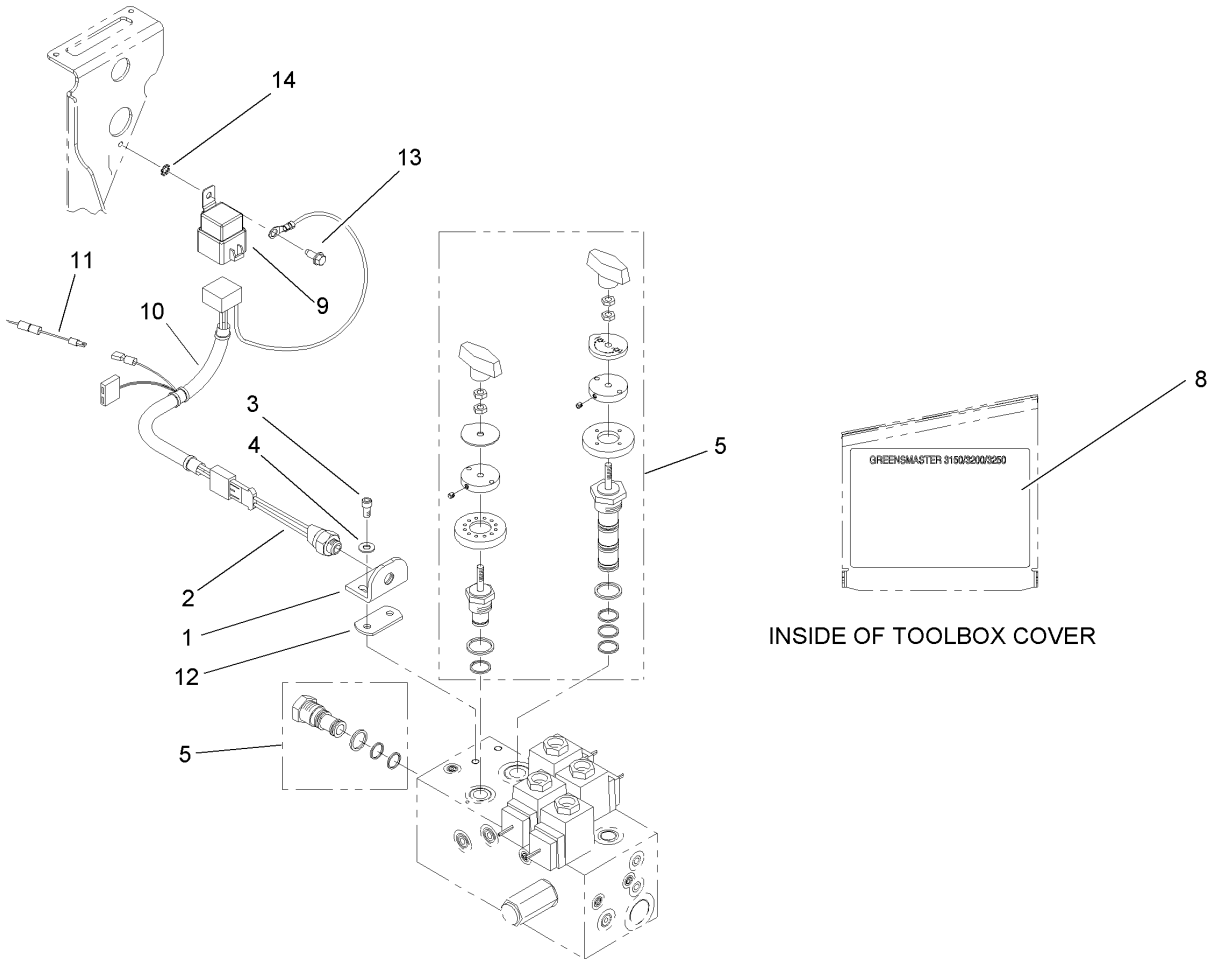

| Description | Page |
|---|---|
| Greensmaster 3250 Backlap Kit Assembly | . . . . . 3 |
| Greensmaster 3150 Backlap Kit Assembly | . . . . . 4 |
| Valve Kit Assembly | . . . . . 5 |
| Backlap Brush Assembly No. 29-9100 | . . . . . 6 |




# Greensmaster 3250 Backlap Kit Assembly

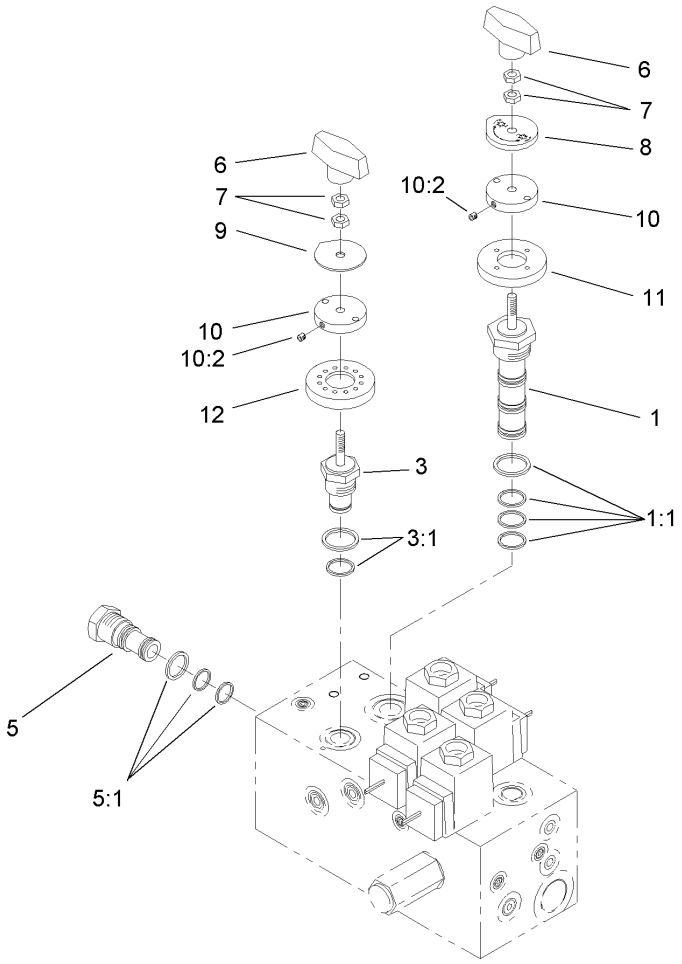
| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 94-1357 | 1 | Bracket-Backlap |
| 2 | 72-4320 | 1 | Switch-Ball, N.o. |
| 3 | 3274-15 | 2 | Screw-HSH |
| 4 | 3256-22 | 2 | Washer-Flat |
| ❷❸5 | | 1 | Valve Kit |
| ❶❸7 | 29-9100 | 1 | Brush And Handle ASM |
| 9 | 70-1480 | 1 | Relay |
| 10 | 95-2905 | 1 | Backlap Harness Kit |
| 11 | 95-2906 | 1 | Wire-Jumper |
| 12 | 107-2572 | 1 | Plate-Spacer |

| | | | |
|---|---|---|---|



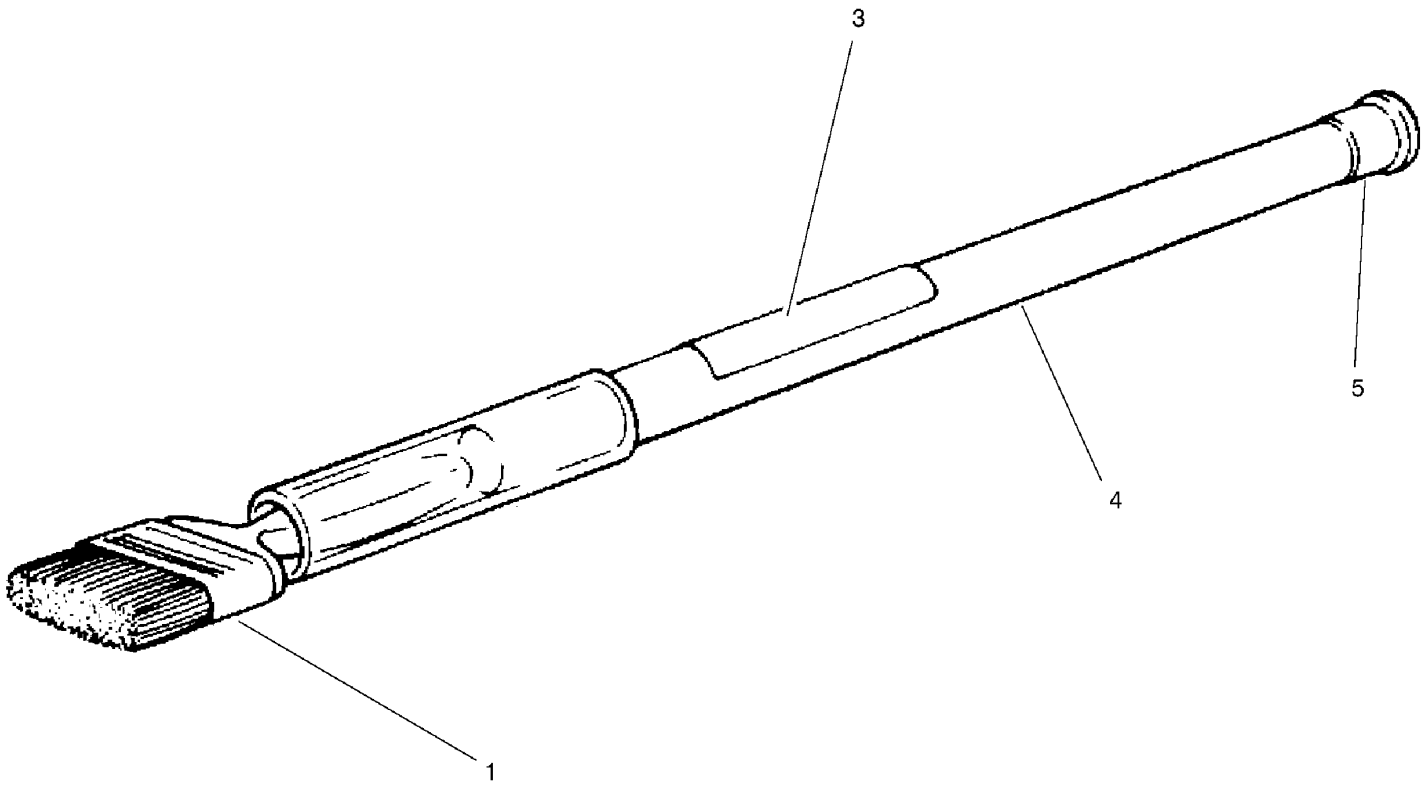

# Greensmaster 3150 Backlap Kit Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 94-1357 | 1 | Bracket-Backlap |
| 2 | 72-4320 | 1 | Switch-Ball, N.o. |
| 3 | 3274-15 | 2 | Screw-HSH |
| 4 | 3256-22 | 2 | Washer-Flat |
| ❸5 | 107-2585 | 1 | Valve Kit |
| ❶❸7 | 29-9100 | 1 | Brush And Handle ASM |
| 8 | 105-8324 | 1 | Decal-Backlap Instructions |
| 9 | 70-1480 | 1 | Relay |
| 10 | 95-2905 | 1 | Backlap Harness Kit |
| 11 | 95-2906 | 1 | Wire-Jumper |
| 12 | 107-2572 | 1 | Plate-Spacer |
| 13 | 32144-10 | 1 | Screw-HWH |
| 14 | 3255-7 | 1 | Washer-Lock |




# Valve Kit Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 94-3657 | 1 | Spool ASM |
| 1:1 | 106-1091 | 1 | Seal Kit |
| 3 | 94-8175 | 1 | Control-Flow, Rotary |
| 3:1 | 106-1090 | 1 | Seal Kit |
| 5 | 95-5634 | 1 | Cartridge-Logic, Spool |
| 5:1 | 95-5641 | 1 | Seal Kit |
| 6 | 94-5020 | 2 | Knob ASM |
| 7 | 3218-1 | 4 | Nut-Jam |
| 8 | 99-3543 | 1 | Plate-Indicator |
| 9 | 94-5026 | 1 | Plate-Indicator |
| 10 | 107-2596 | 2 | Plate-Detent |
| 10:2 | 3245-36 | 1 | Screw-HSH |
| 11 | 94-5021 | 1 | Plate-Locating |
| 12 | 94-5025 | 1 | Plate-Locating |




# Backlap Brush Assembly No. 29-9100

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 36-4310 | 1 | Brush |
| 3 | 12-9140 | 1 | Decal-Body, Front |
| 4 | 29-9080 | 1 | Handle |
| 5 | 2410-18 | 1 | Cap-Plastic |

# NOTES


TORO®