Form No. 3481-770 Rev A

TORO®

Count on it.

Parts Catalog

52in Z Master® 4000 Series Riding Mower

Model No. 74010—Serial No. 420600000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3481-770 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame and Roll-Over Protection System Assembly 4
Roll-Over Protection System Assembly No. 139-8062 6
Hydro Assembly 8
LH Transaxle Assembly No. 138-6076 10
RH Transaxle Assembly No. 138-6077 12
Throttle, Choke Cable and Guard Assembly 14
Muffler Guard Assembly 16
Fuel System Assembly 18
Fuel Tank Assembly No. 163-4138 20
Seat Mounting Assembly 22
Seat Assembly No. 144-2632 24
Motion Control Assembly 26
Left and Right Control Arm Assembly 28
Caster Wheel Assembly 30
Caster and Wheel Assembly 32
Rear Wheel Assembly 34
Electrical Assembly 36
Wire Harness Assembly No. 147-2363 38
Deck Lift Assembly 40
Deck Strut Assembly No. 161-6805 42
Engine, Clutch and Muffler Assembly 44
Decal Assembly 46
Deck Assembly 48
Deck Decal Assembly No. 163-4181SP 50
Spindle Assembly No. 137-9780 52
Deflector Assembly No. 144-2635 54
Idler Arm Assembly No. 139-1087 56
Attachments and Accessories 58

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Frame and Roll-Over Protection System Assembly

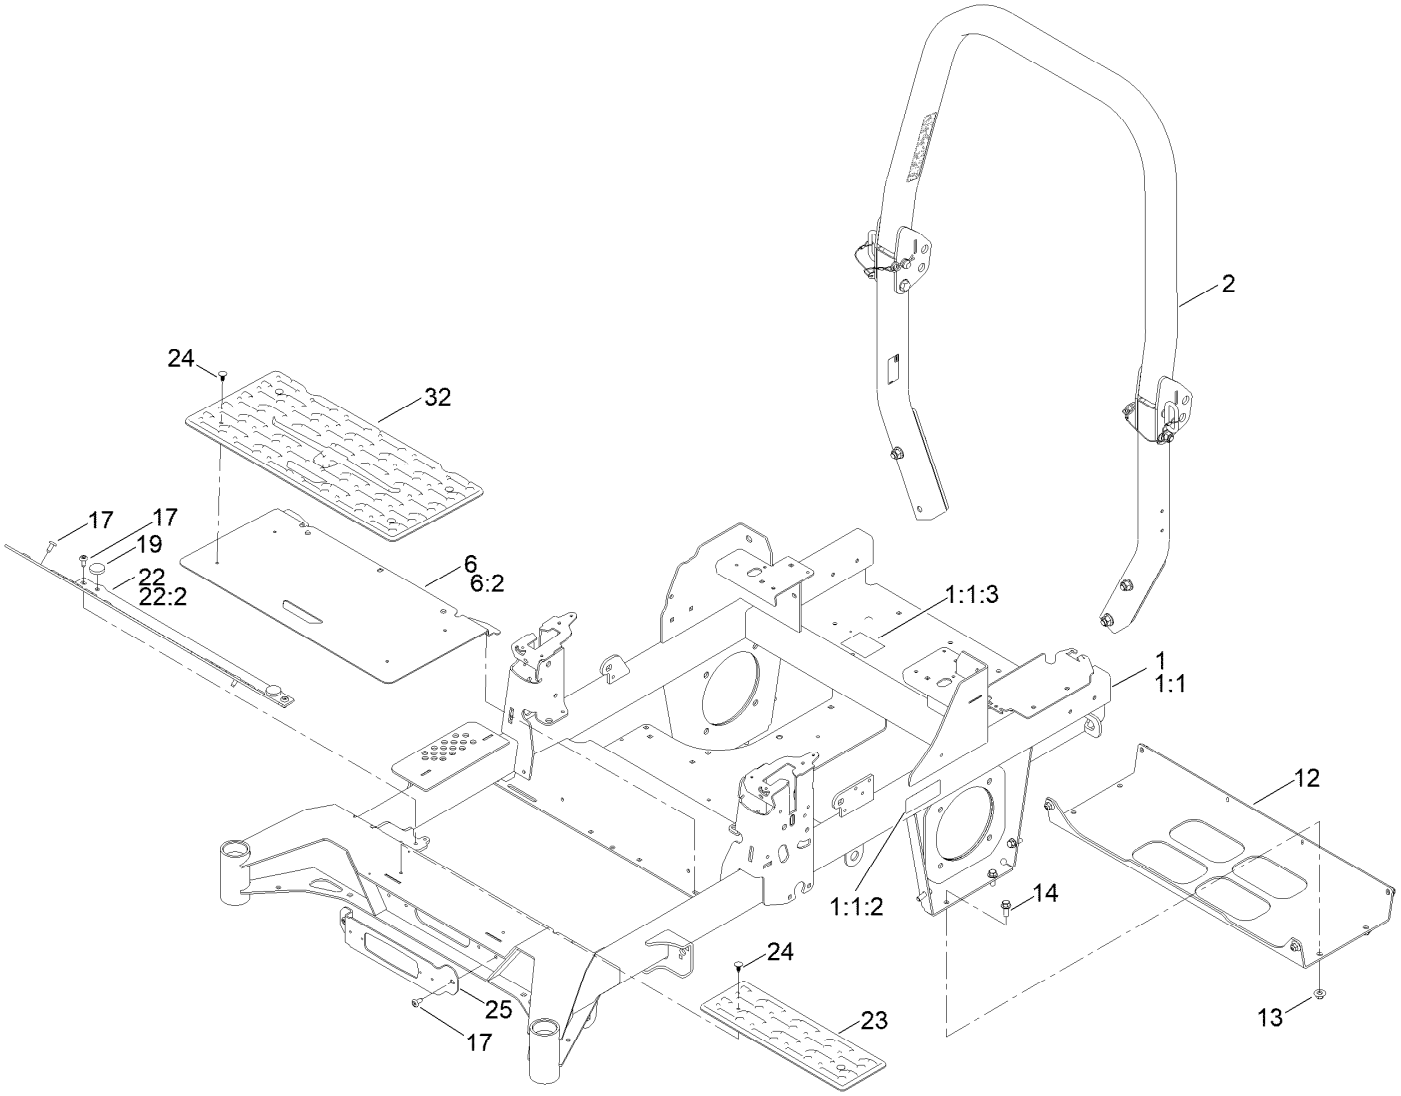


Frame and Roll-Over Protection System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-4123SP	1	Frame ASM-48/52
1:1		1	Frame ASM-48/52 ●
1:1:2	126-4363	2	Decal-Warning
1:1:3	144-2687	1	Decal, Belt Routing
2	139-8062	1	ASM-ROPS
6	138-6098	1	Floor Pan ASM
6:2	109-9233	2	Bumper-Push-In, Rubber
12	139-6717-01	1	Plate-Hydro
13	109-6658	8	Nut-Flange, NI
14	3234-42	8	Screw-HHF
17	138-9753	6	Screw
19	109-9233	2	Bumper-Push-In, Rubber
22	140-4995	1	Toeboard
22:2	126-8383	1	Decal-Danger
23	140-4992	1	Step
24	117-2382	6	Plug-Plastic
25	140-4994-01	1	Bracket-Light
32	140-7950	1	Floormat-Fixed Seat

● Not serviced separately

Roll-Over Protection System Assembly
No. 139-8062

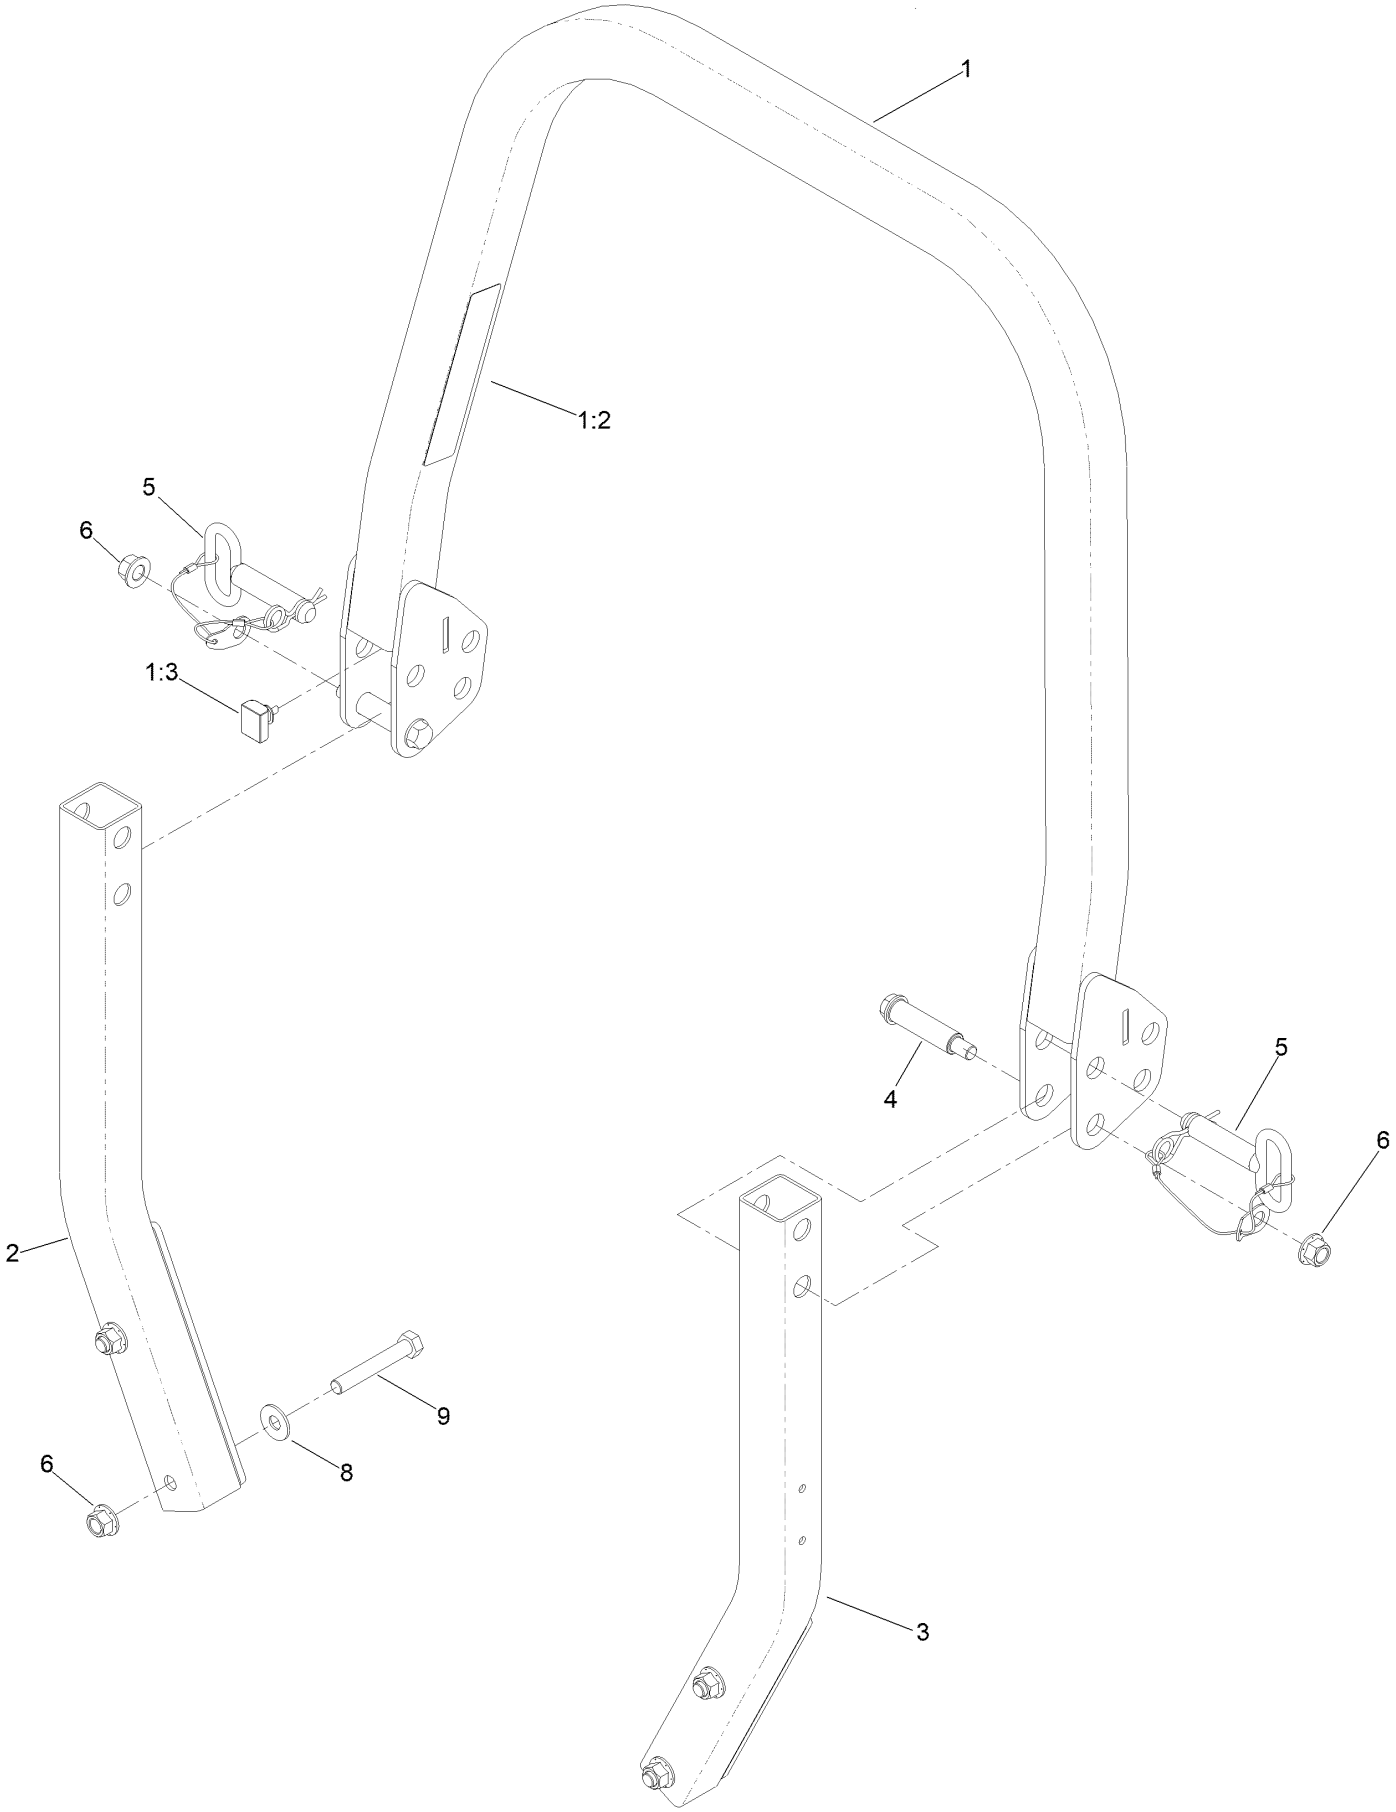


Roll-Over Protection System Assembly No. 139-8062 (continued)

Ref.	Part Number	Qty.	Description
1		1	Upper ROPS ASM ●
1:2	107-3069	1	Decal-Warning
1:3	109-5337	2	Bumper-ROPS
2		1	RH Lower ROPS ASM ●
3		1	LH Lower ROPS ASM ●
4	161-4505	2	Bolt-Shoulder
5	161-4477	2	ROPS Pin ASM
6	139-1689	6	Nut-HF
8	109-9505	4	Washer-Spring
9	325-13	4	Screw-HH

● Not serviced separately


Hydro Assembly

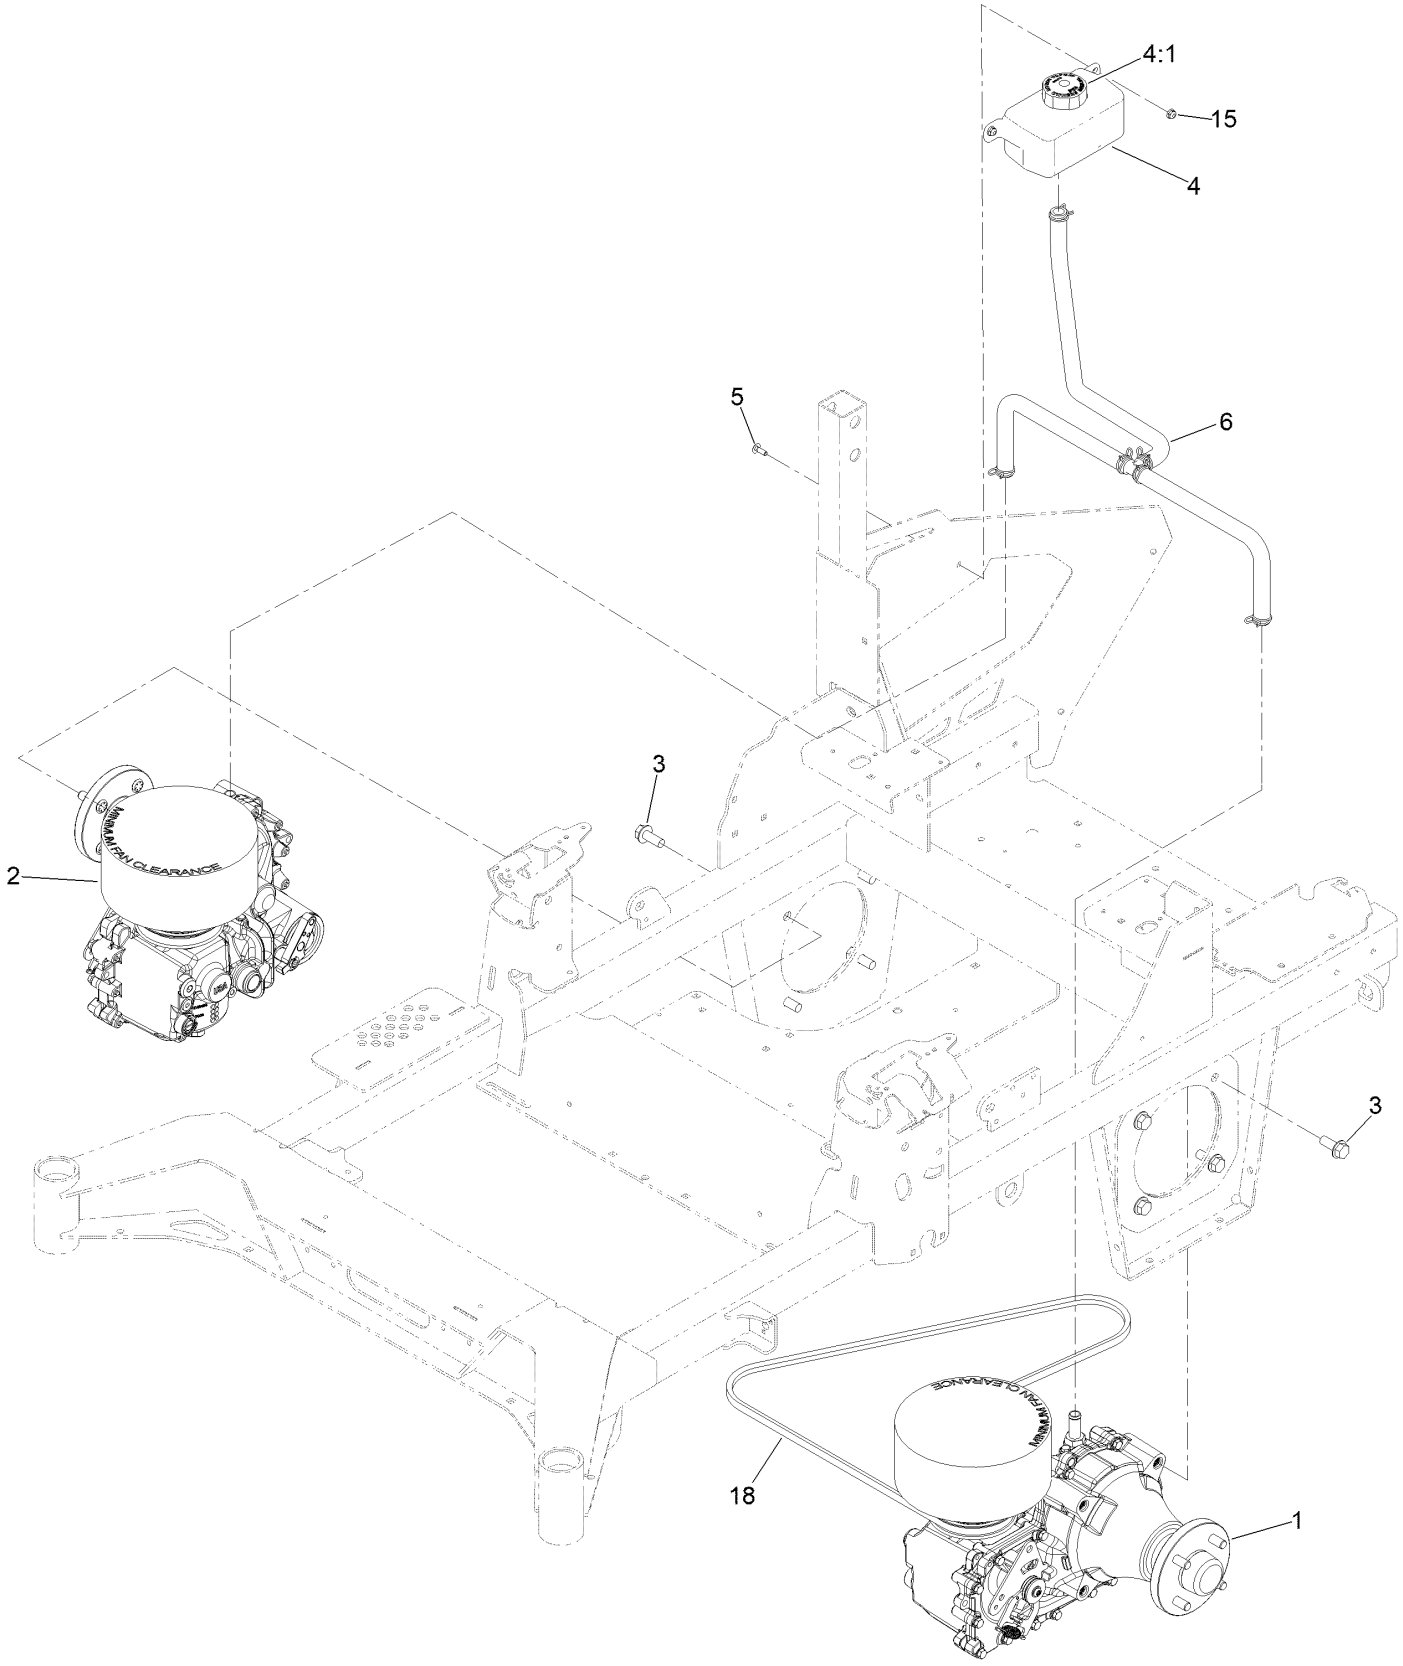

Hydro Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-6076	1	LH Transaxle ASM
2	138-6077	1	RH Transaxle ASM
3	3234-38	8	Screw-HHF
4	119-9908	1	Hydraulic Reservoir ASM
4:1	109-3320	1	Cap-Reservoir, HYD
5	3229-28	2	Screw-CARR
6	140-1225	1	ASM-Hose, Hydraulic
15	104-7201	2	Nut-HF, NI
18	140-7994	1	Belt-V


LH Transaxle Assembly No. 138-6076

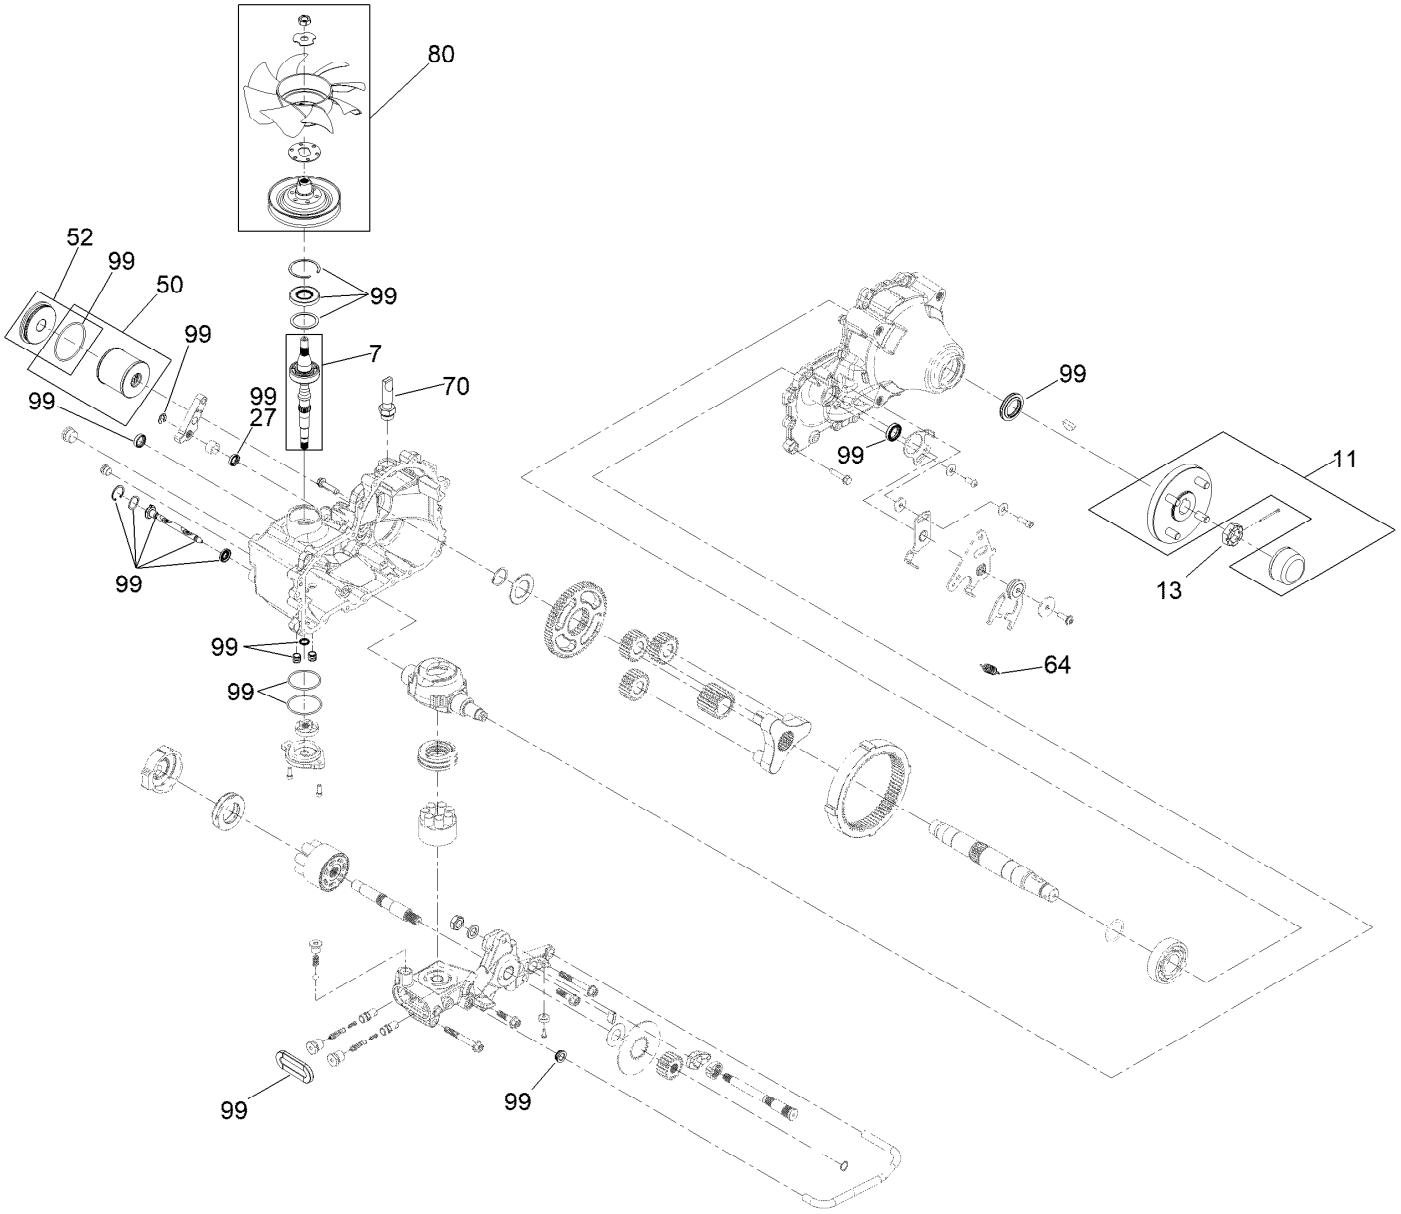

LH Transaxle Assembly No. 138-6076 (continued)

Ref.	Part Number	Qty.	Description
7	147-1672	1	Kit, Input Shaft
11	144-6594	1	Hub-4 Bolt
13	144-6595	1	Nut, Slotted
27	145-3678	1	Seal, Lip-Brake
50	144-6603	1	Kit, Filter
52	144-6604	1	Kit, Filter Plug
64	125-4684	1	Spring-Extension
70	144-6601	1	Fitting-5/8 Beaded, 7/8 SAE
80	144-6602	1	Kit, Fan And Pulley
99	145-3683	1	Kit-Overhaul Seal


RH Transaxle Assembly No. 138-6077

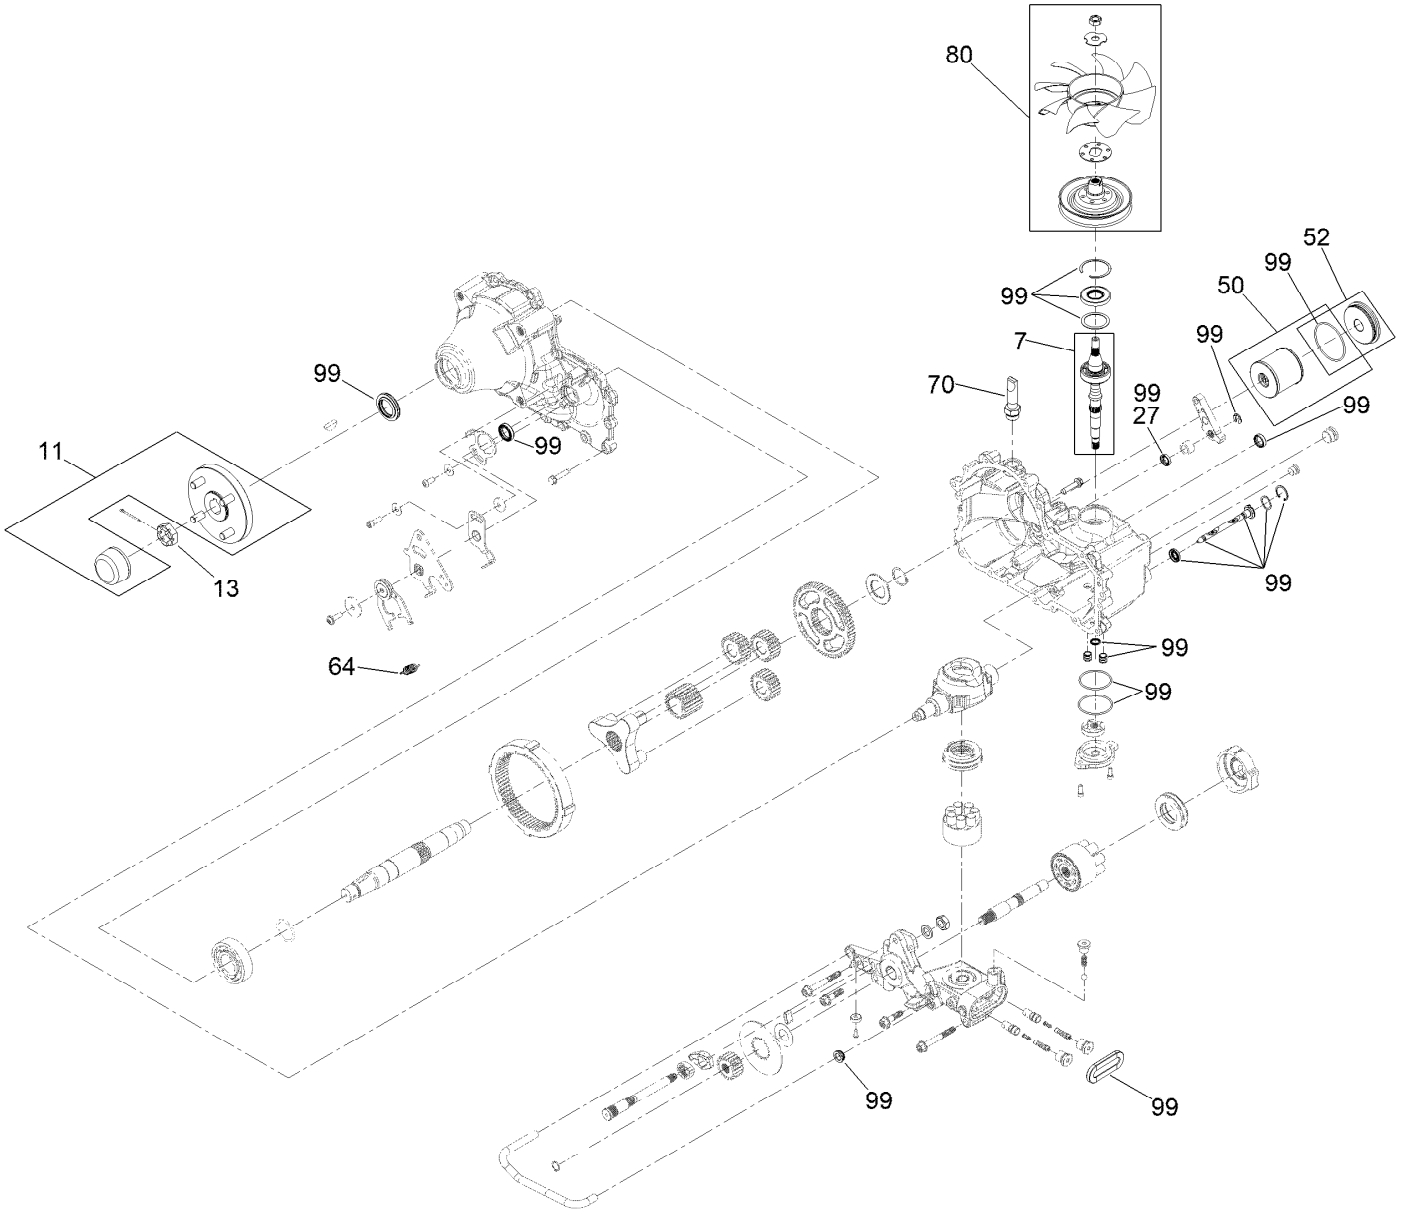

RH Transaxle Assembly No. 138-6077 (continued)

Ref.	Part Number	Qty.	Description
7	147-1672	1	Kit, Input Shaft
11	144-6594	1	Hub-4 Bolt
13	144-6595	1	Nut, Slotted
27	145-3678	1	Seal, Lip-Brake
50	144-6603	1	Kit, Filter
52	144-6604	1	Kit, Filter Plug
64	125-4684	1	Spring-Extension
70	144-6601	1	Fitting-5/8 Beaded, 7/8 SAE
80	144-6602	1	Kit, Fan And Pulley
99	145-3683	1	Kit-Overhaul Seal

Throttle, Choke Cable and Guard Assembly

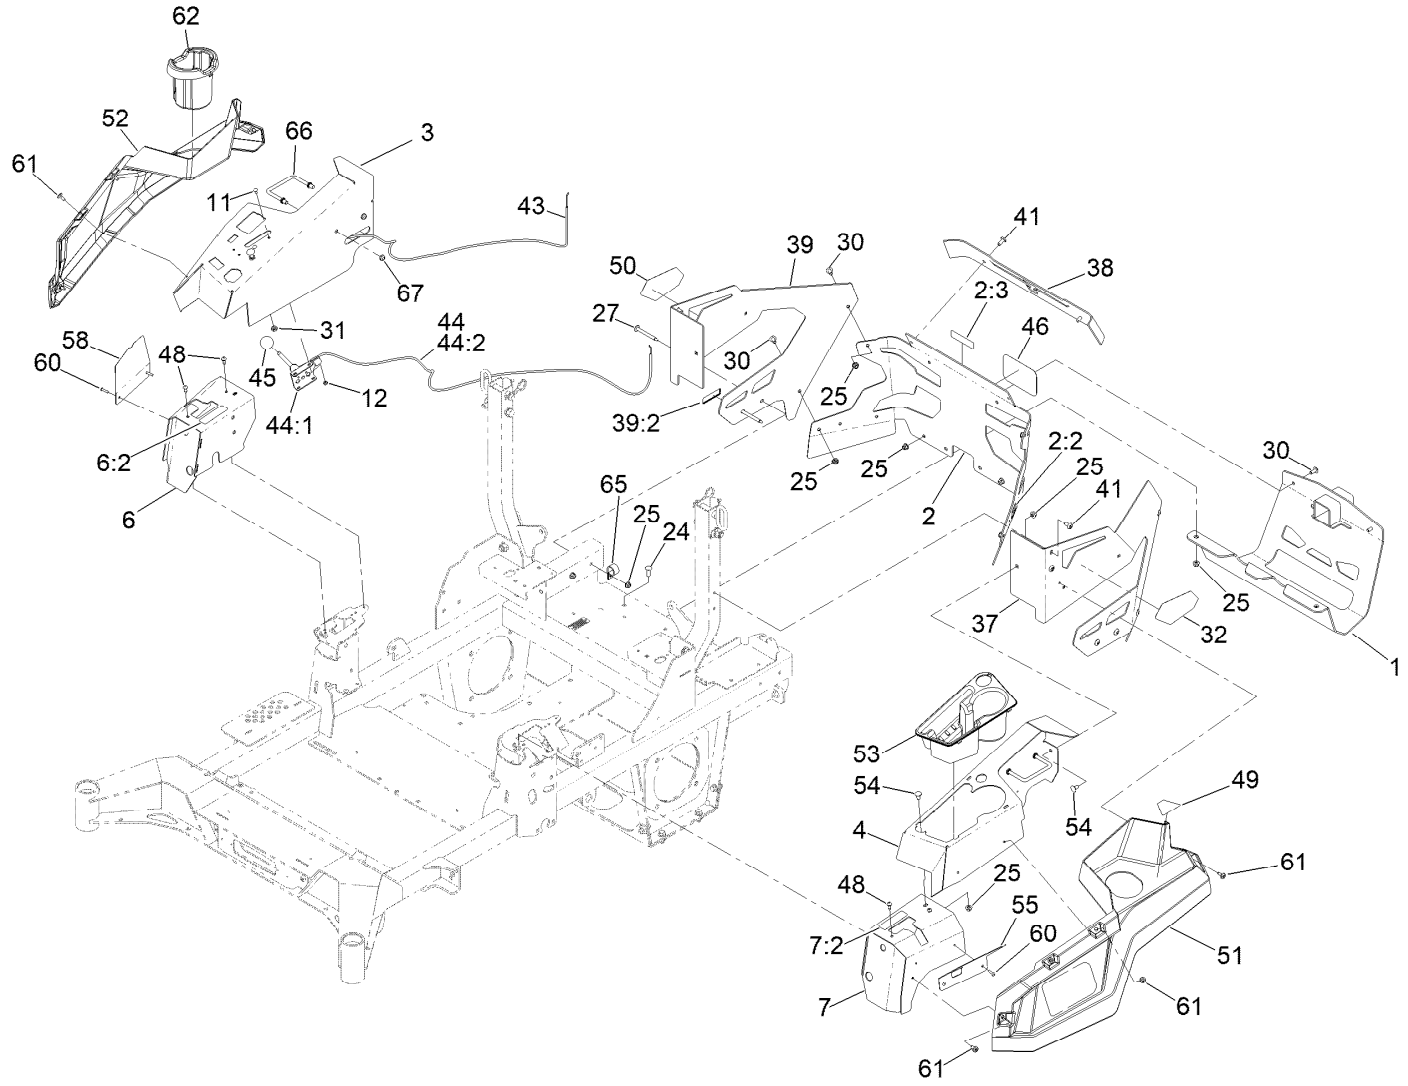


Throttle, Choke Cable and Guard Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Muffler Guard ASM ●
2	161-6769	1	Rear Guard ASM
2:2	106-5517	2	Decal-Warning
2:3	161-6763	1	Decal-Hitch
3	144-6551-01	1	Console-RH
4	145-1287-01	1	Console-LH
6	140-4867	1	RH Cover ASM
6:2	99-8936	1	Decal-Control, Motion
7	140-4866	1	LH Cover ASM
7:2	99-8936	1	Decal-Control, Motion
11	1-807513	2	Bolt-CARR
12	3296-2	2	Nut-Lock, NI
24	3230-22	2	Screw-CARR
25	119-4041	16	Nut-HF
27	126-6267	4	Screw-TTH
30	126-6268	6	Screw-TTH
31	3220-3	1	Nut-HJ
32	139-1149	1	Decal - 4000 Series, LH
37	145-6964-01	1	Guard-Rear, LH
38	140-1221-01	1	Guard-Rear, Top
39	145-7012	1	RH Rear Guard ASM
39:2	133-8062	1	Decal-Spark Arrestor
41	138-9753	6	Screw
43	144-2647	1	Cable-Choke Control
44	110-5727	1	Throttle Control ASM
44:1	112-2334	1	Lever-Throttle
44:2	110-5728	1	Cable-Throttle
45	1-603175	1	Knob-Ball
46	105-8278	1	Decal
48	87-6620	4	Screw-Tph Thd Form
49	126-9939	1	Decal-Fill, Fuel
50	140-7987	1	Decal-4000 Series, RH
51	140-7979	1	Side Pod, LH
52	140-7980	1	Side Pod, RH
53	140-7968	1	Cup Holder
54	3230-18	4	Screw-CARR
55	140-7996-03	1	Plate-Cover, LH Front
58	140-7998-03	1	Plate-Cover, RH Front
60	130-8451	4	Rivet-Trifold
61	120-7950	8	Screw-Torx
62	140-8019	1	Cupholder-RH
65	110-0824	1	R-Clamp
66	144-2642	2	Rod-Support, Pod
67	3296-59	4	Nut-Lock, NI

● Not serviced separately

Muffler Guard Assembly

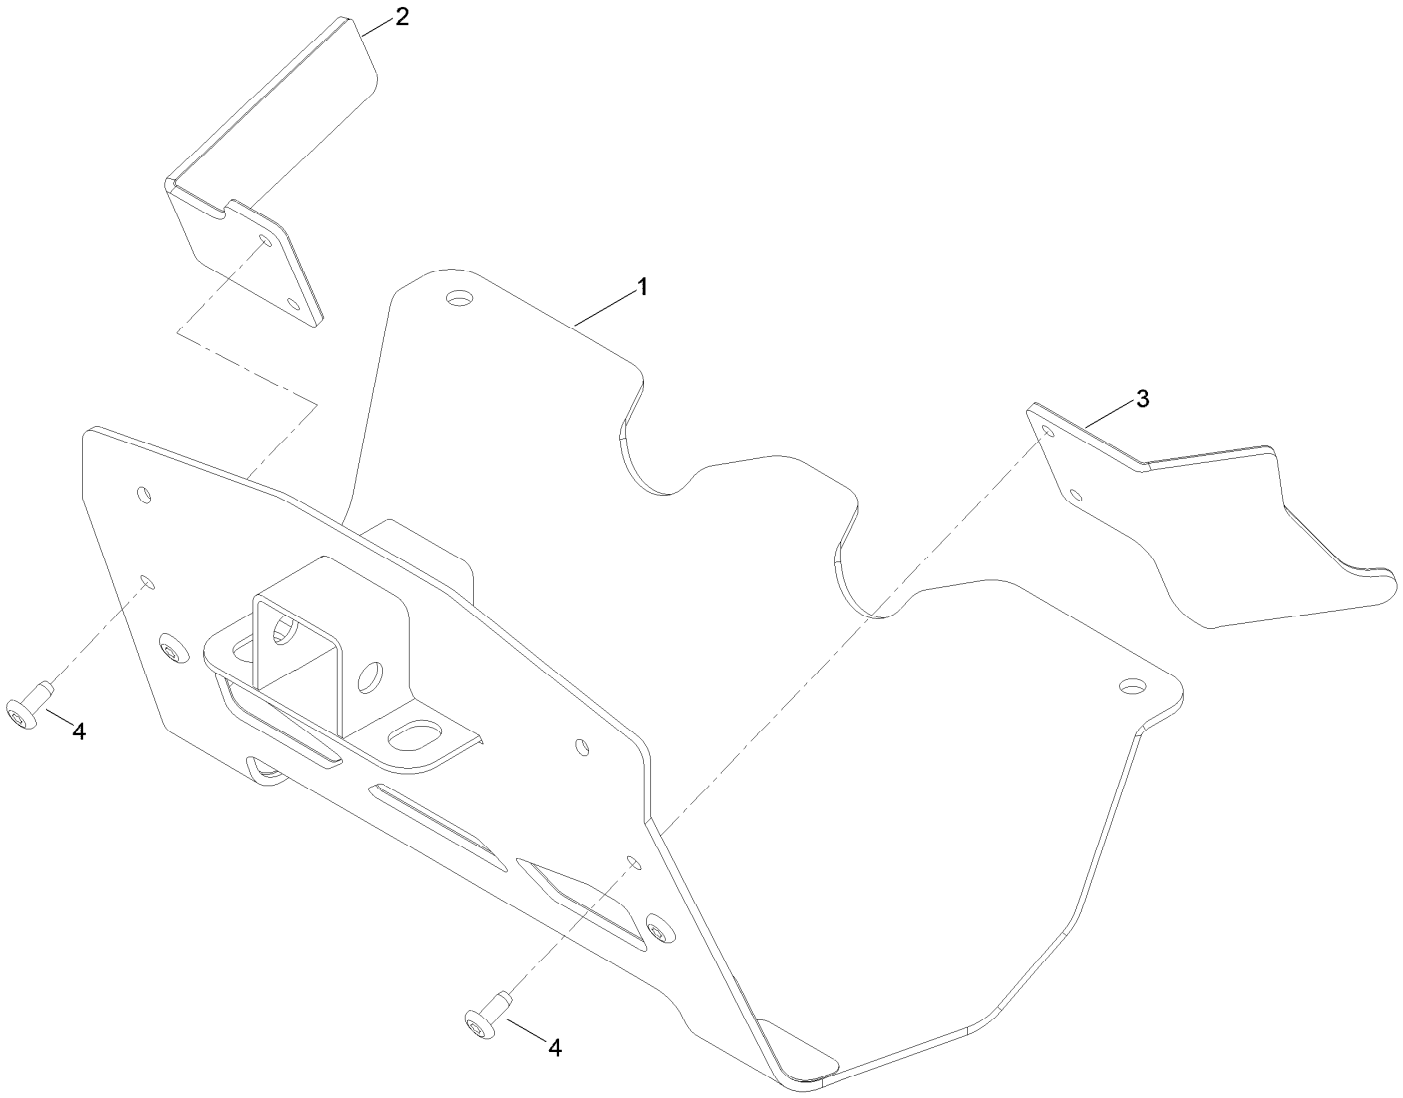


Muffler Guard Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-7461	1	Rear Muffler Guard ASM
1:2	163-7460	1	Tape-Heat ●
2	163-7464	1	LH Exhaust Guard ASM
2:2	163-7463	1	Tape-Heat ●
3	163-7467	1	RH Exhaust Guard ASM
3:2	163-7466	1	Tape-Heat ●
4	138-9753	4	Screw

● Not illustrated


Fuel System Assembly

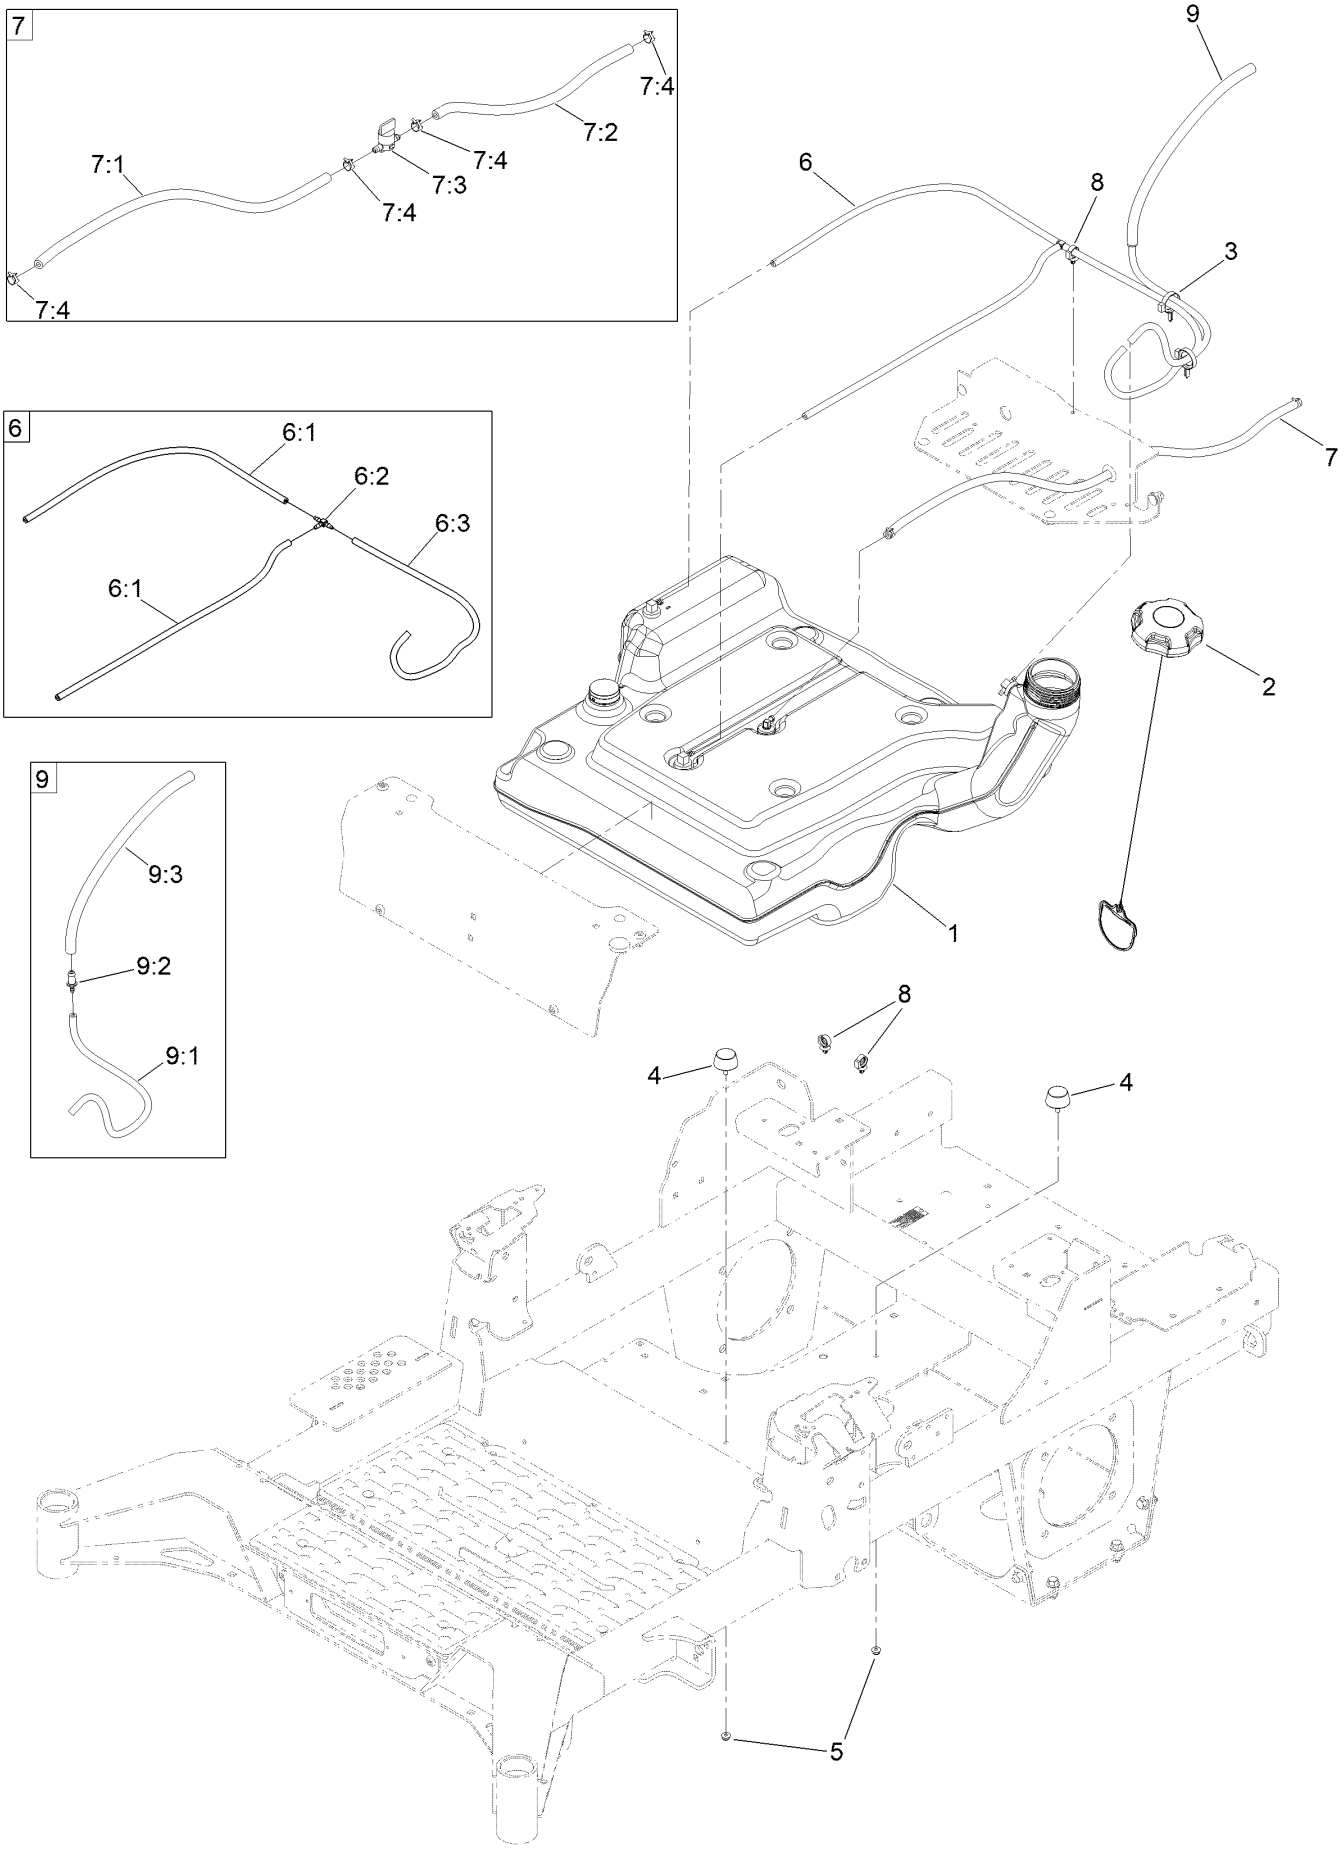

Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-4138	1	Fuel Tank ASM
2	137-4119	1	Cap-Fuel, Ratcheting
3	104-2490	2	Clamp-Hose
4	131-8834	2	Bumper
5	104-7201	2	Nut-HF, NI
6	139-8067	1	Vent Hose ASM
6:1	138-3152	2	Hose-Fuel
6:2	120-2234	1	Fitting-Tee
6:3	140-4956	1	Hose-Fuel
7	139-8068	1	Fuel Hose ASM
7:1	109-0298	1	Line-Fuel
7:2	114-3766	1	Hose-Fuel
7:3	1-603770	1	Valve-Fuel
7:4	2412-98	4	Clamp-Hose
8	126-5523	3	Clip
9	140-4957	1	ASM-Fuel Vent
9:1	138-3152	1	Hose-Fuel
9:2	116-4630	1	Fitting-Orifice, Straight
9:3	116-4344	1	Hose-Fuel


Fuel Tank Assembly No. 163-4138

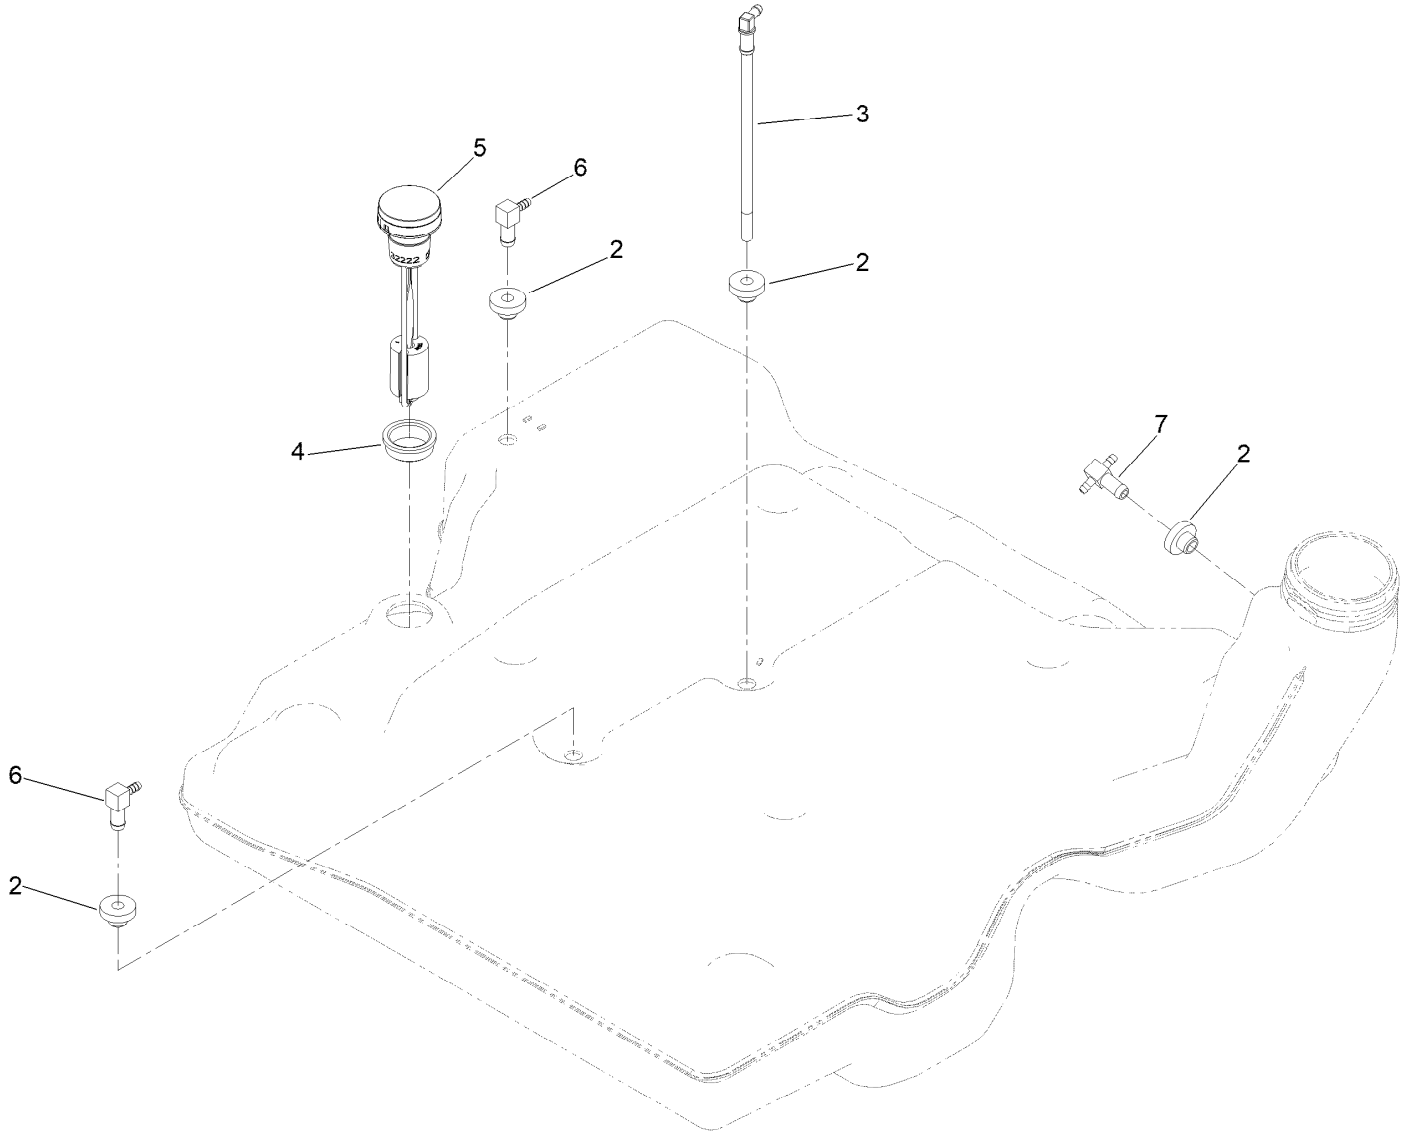

Fuel Tank Assembly No. 163-4138 (continued)

Ref.	Part Number	Qty.	Description
2	46-6560	4	Bushing
3	161-6744	1	Fuel Pickup With Filter ASM
4	133-9269	1	Grommet-Fuel
5	139-8058	1	Gauge-Fuel
6	163-7304	2	Fitting-Elbow, 90
7	163-7303	1	Fitting-Tee


Seat Mounting Assembly

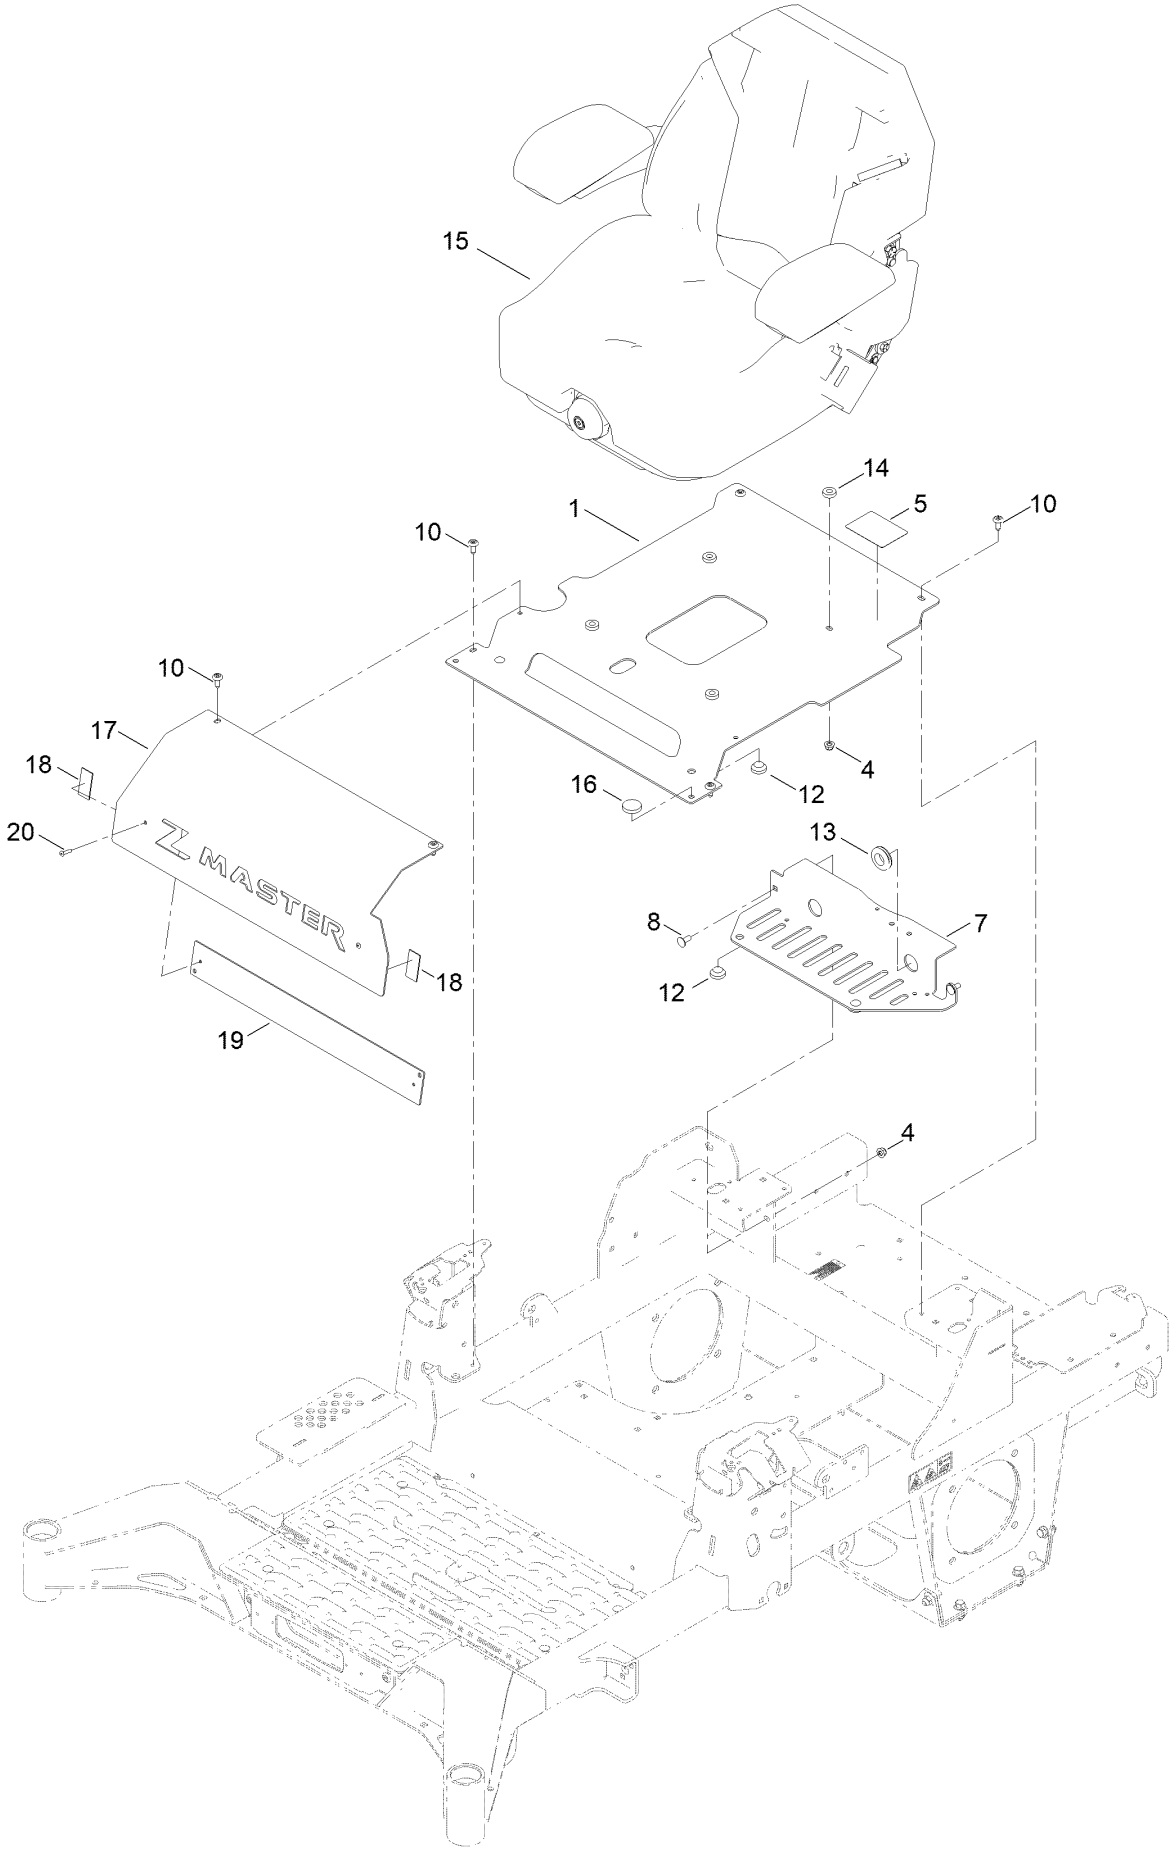

Seat Mounting Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-1165-03	1	Pan-Seat [black]
4	119-4041	6	Nut-HF
5	144-2669	1	Decal-Service Aid
7	147-2436-03	1	Plate-Tank Retainer, Rear
8	137-3061	2	Bolt-CARR
10	138-9753	6	Screw
12	135-0505	4	Bumper-Seat
13	1-543286	1	Grommet
14	5-0652	4	Spacer
15	144-2632	1	Seat ASM-Suspension
16	109-9233	1	Bumper-Push-In, Rubber
17	147-4987-03	1	Plate-Tank Retainer, Front
18	130-0733	2	Pad-Rubber
19	147-4954-01	1	Plate-Backer
20	130-8451	2	Rivet-Trifold


Seat Assembly No. 144-2632

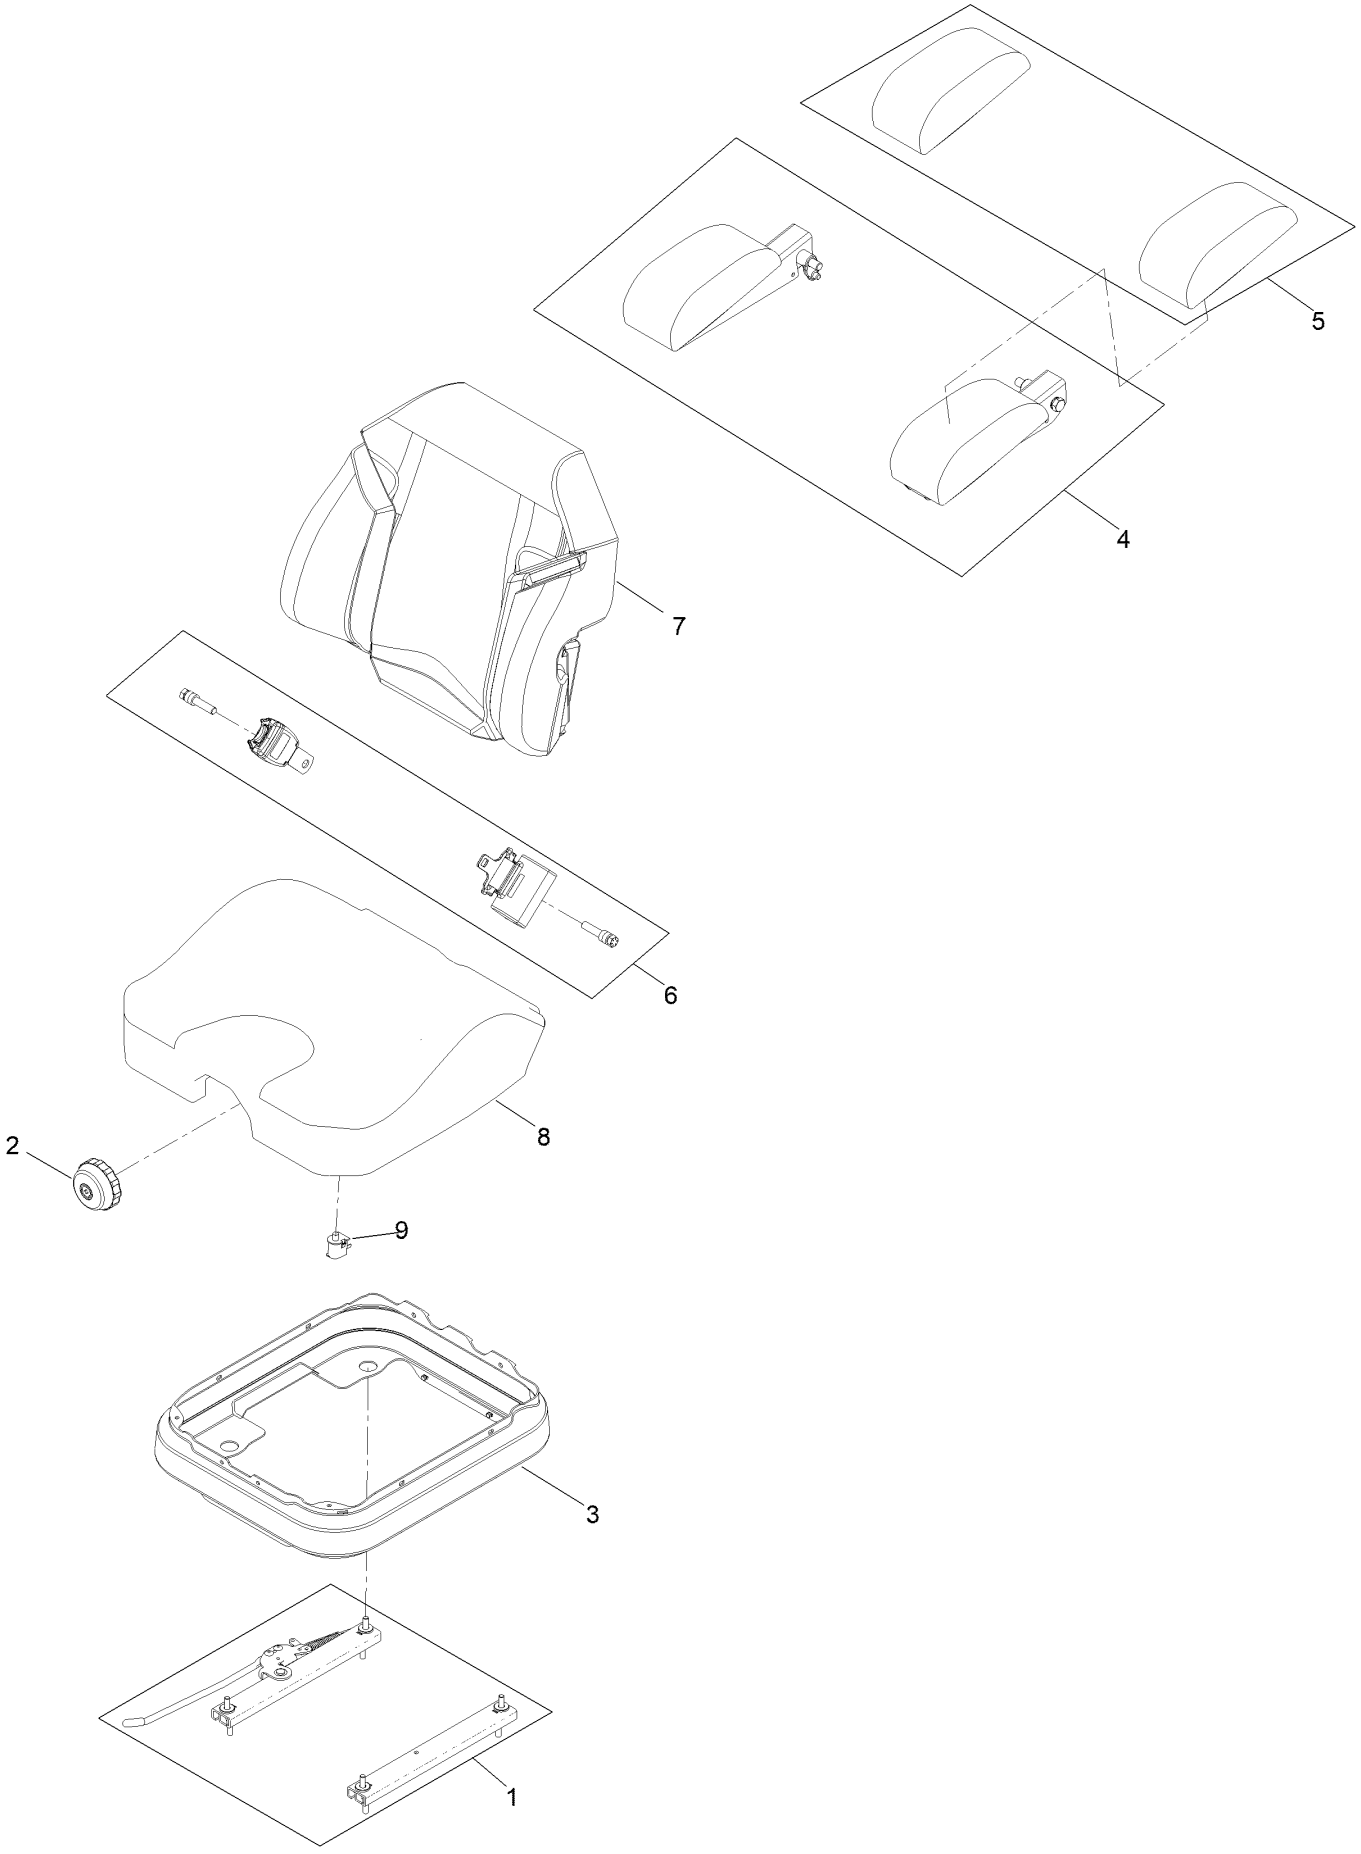

Seat Assembly No. 144-2632 (continued)

Ref.	Part Number	Qty.	Description
1	140-8012	1	Seat Track Set
2	116-8911	1	Knob-Adjuster
3	126-8559	1	Bellows-Seat
4	145-3641	1	Armrest Kit
5	145-3642	1	Pads-Armrest
6	126-8560	1	Kit-Seat Belt
7	145-3643	1	Cover-Back, Seat
8	145-3659	1	Cover-Bottom, Seat
9	82-2190	1	Switch-Bail


Motion Control Assembly

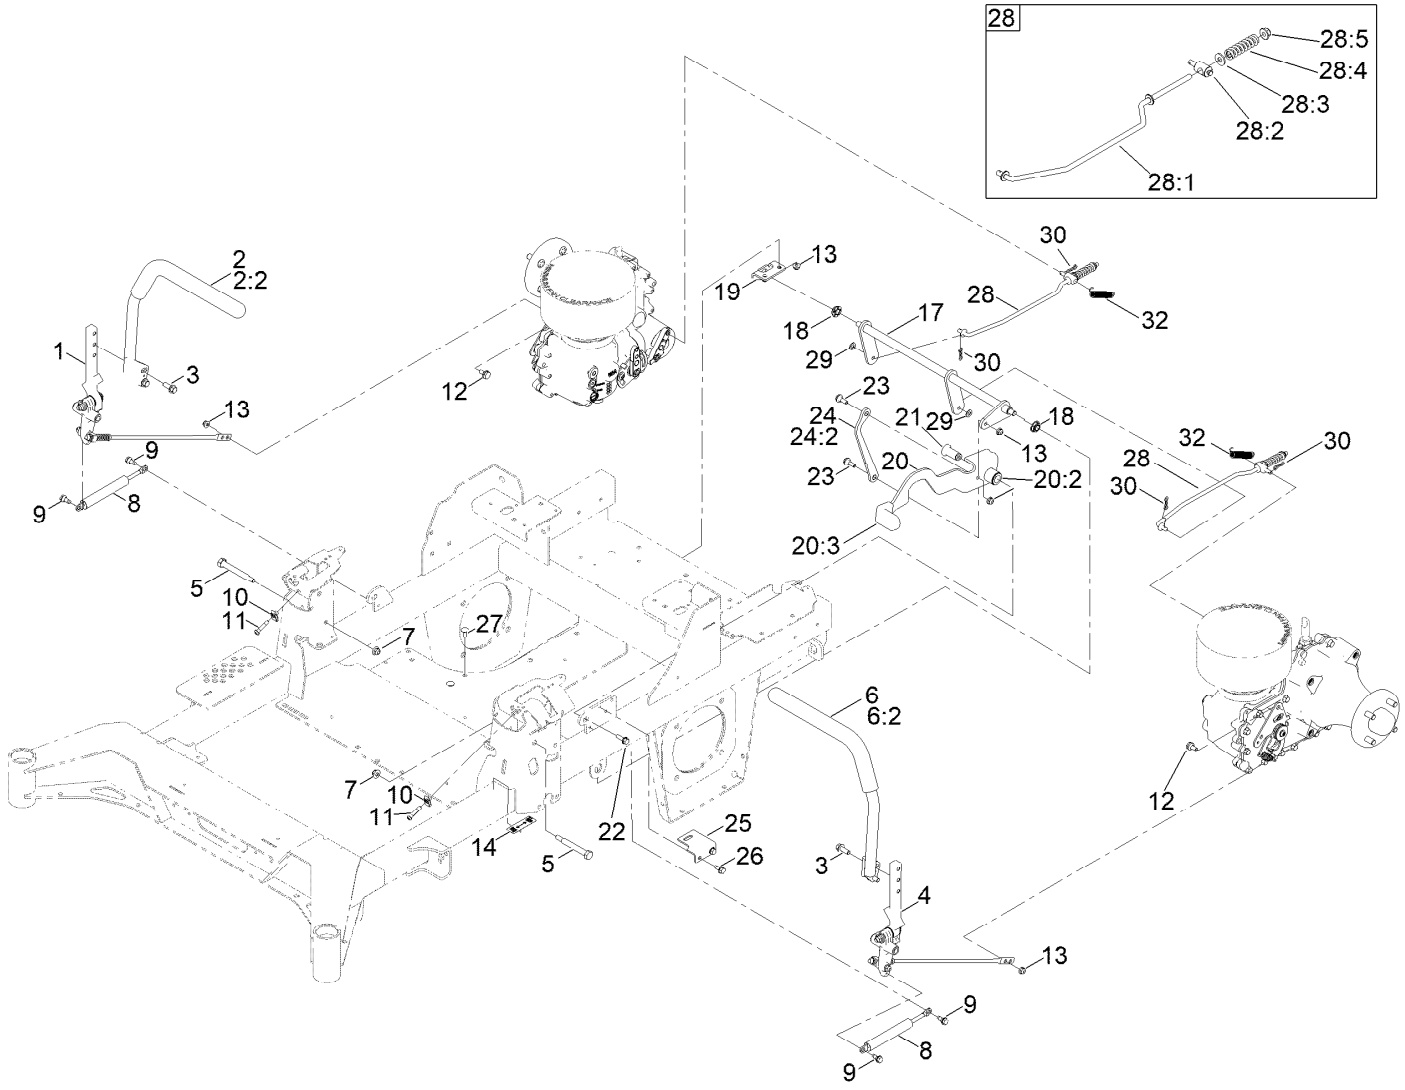

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-5046	1	Motion Control ASM-RH
2	147-2390	1	RH Handle ASM
2:2	109-5668	1	Grip-Lever, Control
3	110-5052	4	Screw-HHF
4	147-5047	1	Motion Control ASM-LH
5	115-5099	2	Bolt-Pivot
6	147-2391	1	LH Handle ASM
6:2	109-5668	1	Grip-Lever, Control
7	119-4042	2	Nut-HF, NI
8	142-6851	2	Damper
9	126-4424	4	Screw-Shoulder
10	112-3306	2	Nut
11	126-4299	2	Screw-HSBH
12	37-8771	2	Bolt-Shoulder, HF
13	119-4041	6	Nut-HF
14	115-9625	1	Decal-Brake, Parking
17	144-2658	1	Brake ASM
18	126-5820	2	Bearing-Spherical
19	139-6742	1	Bracket-Brake
20	139-6726	1	Brake Lever ASM W/Grip
20:2	109-8054	2	Bushing-Flange
20:3	132-4749	1	Grip-Lever
21	139-6743	1	Pivot-Handle
22	3234-29	1	Screw-HHF
23	116-2670	2	Screw-Shoulder
24	144-6566	1	Brake Link ASM
24:2	116-4976	2	Bushing-Sleeve
25	139-6745	1	Plate-Switch
26	32144-70	2	Screw-HWHTF
27	137-3061	2	Bolt-CARR
28	144-0352	1	RH Brake Rod ASM
28:1	140-4950	1	Rod-Brake, RH
28:2	139-6741	1	Fitting-Rod
28:3	3256-3	1	Washer-Flat
28:4	144-2645	1	Spring-Compression
28:5	119-4042	1	Nut-HF, NI
29	3256-45	2	Washer-Flat
30	119-1415	4	Pin-Cotter, Locking
32	109-7124	2	Spring-Extension


Left and Right Control Arm Assembly

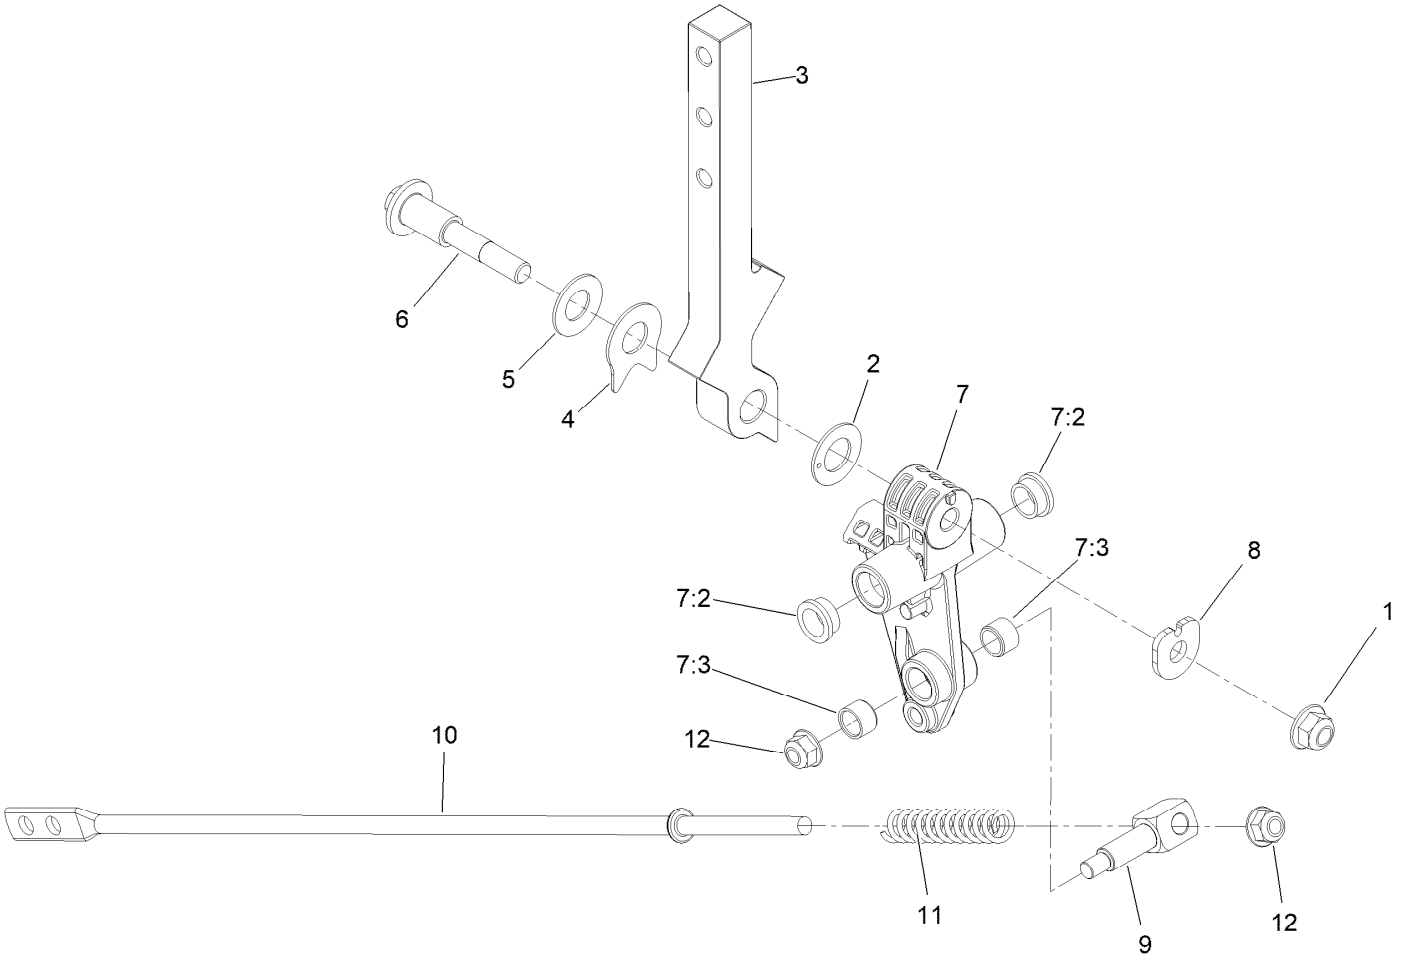

Left and Right Control Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	119-4042	1	Nut-HF, NI
2	126-7296	1	Washer-Friction
3	147-2389	1	Arm-Control
4	142-8478	1	Spacer, Anti-Rotation
5	119-8925	1	Washer-Belleville
6	117-1198	1	Bolt-Pivot
7	145-5798	1	ASM-Control Arm
7:2	126-8909	2	Bushing
7:3	1-413152	2	Bushing-Sleeve
8	147-5048	1	Spacer-Actuator
9	126-5434	1	Swivel
10	140-4949	1	Link-Control
11	126-8195	1	Spring-Return, Neutral
12	119-4041	2	Nut-HF

Caster Wheel Assembly

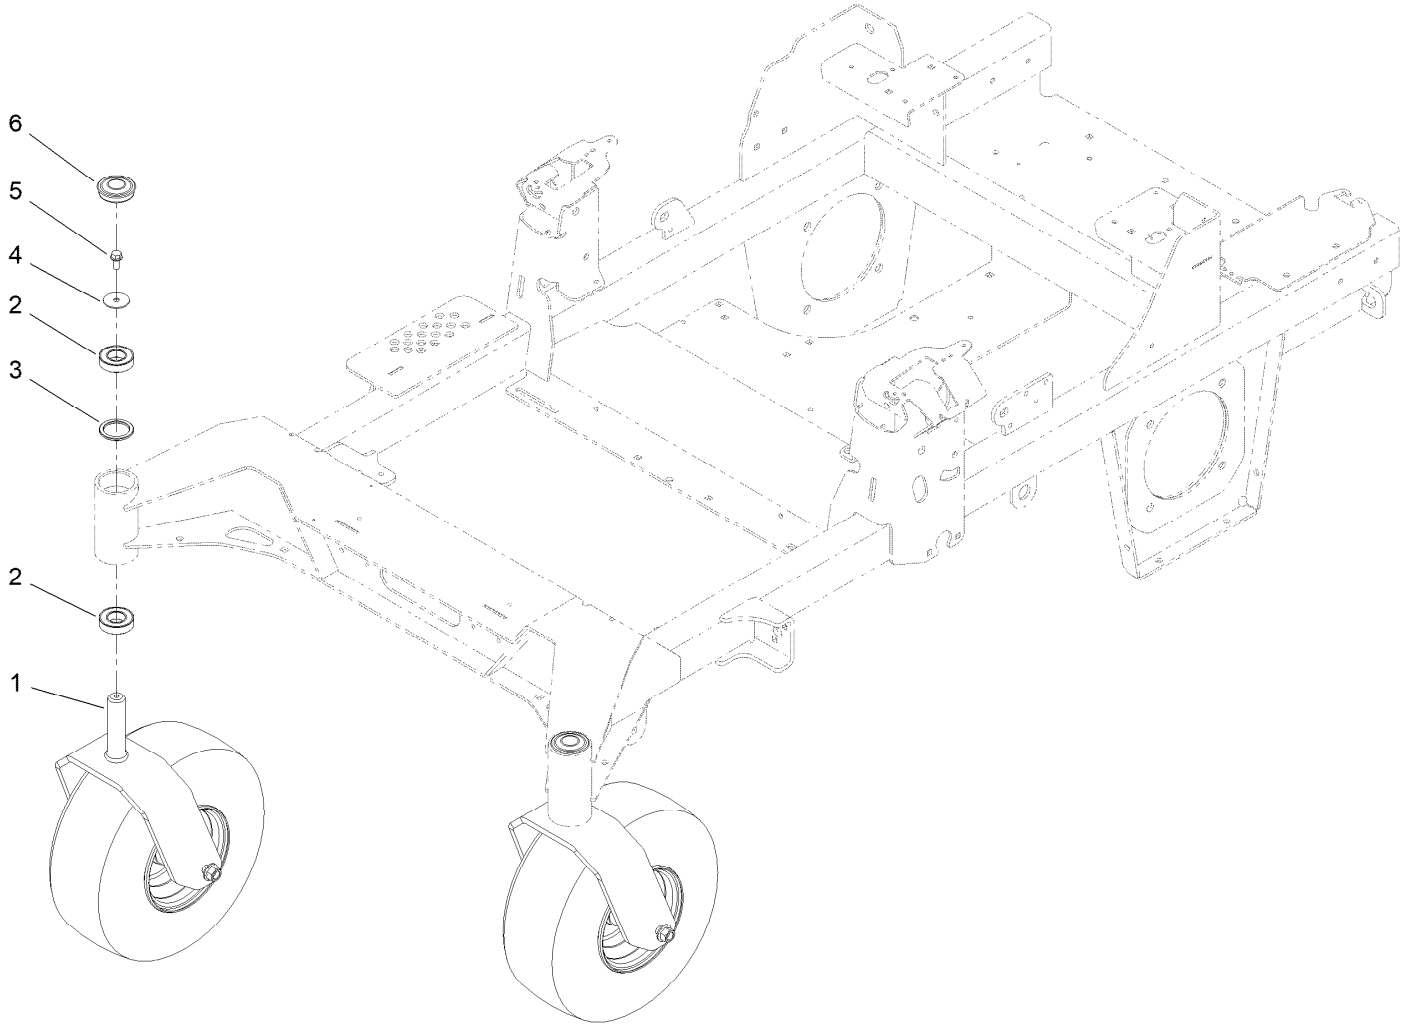


Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1		2	Front Caster W/ Fork ASM ●
2	109-3678	4	Bearing-Ball
3	145-3660	2	Spacer-Bearing
4	3256-68	2	Washer-Flat
5	100-1668	2	Screw-HHF
6	144-0375	2	Cap-Grease

● Not serviced separately

Caster and Wheel Assembly

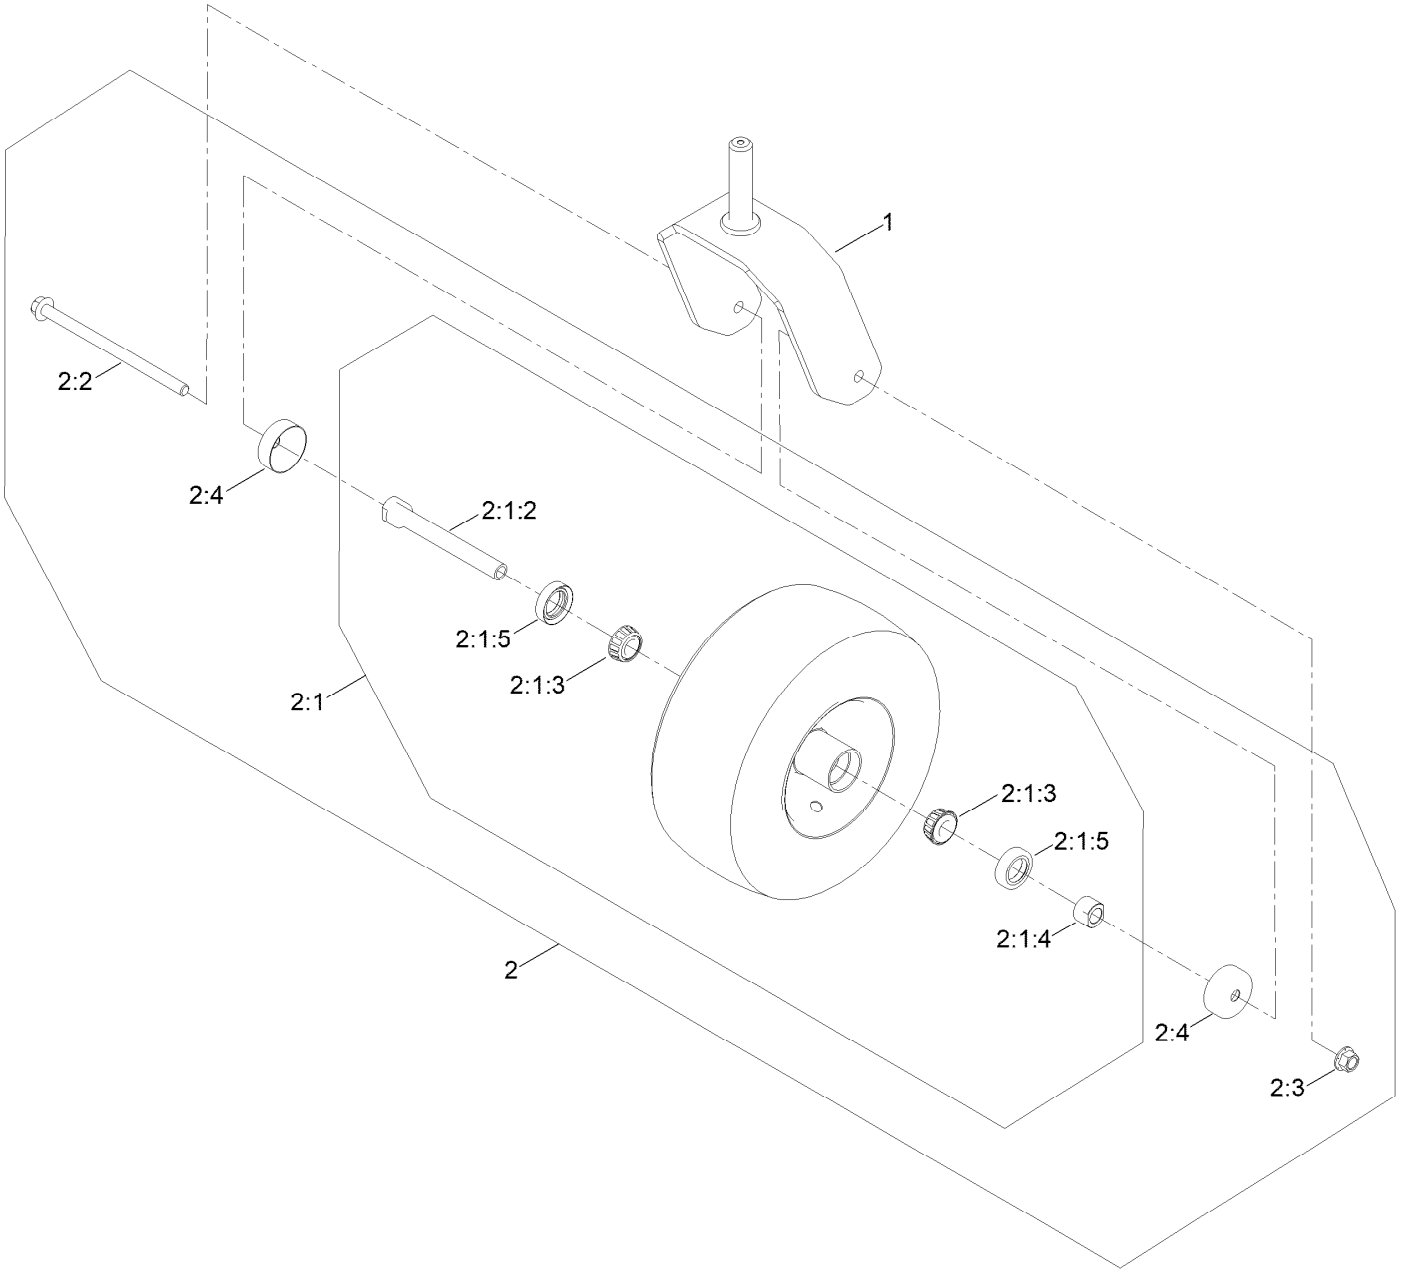


Caster and Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	142-7827-01	1	Fork-Caster
2	140-4896	1	Semi Pneumatic ASM 13X6.50-6
2:1		1	Wheel And Bearings ASM ●
2:1:2	126-7796	1	Caster Axle ASM
2:1:3	1-633585	2	Bearing-Cone, Taper
2:1:4	103-3051	1	Spacer-Nut
2:1:5	103-0063	2	Seal-Caster
2:2	126-5389	1	Screw-HHF
2:3	139-1689	1	Nut-HF
2:4	103-2768	2	Guard-Seal

● Not serviced separately


Rear Wheel Assembly

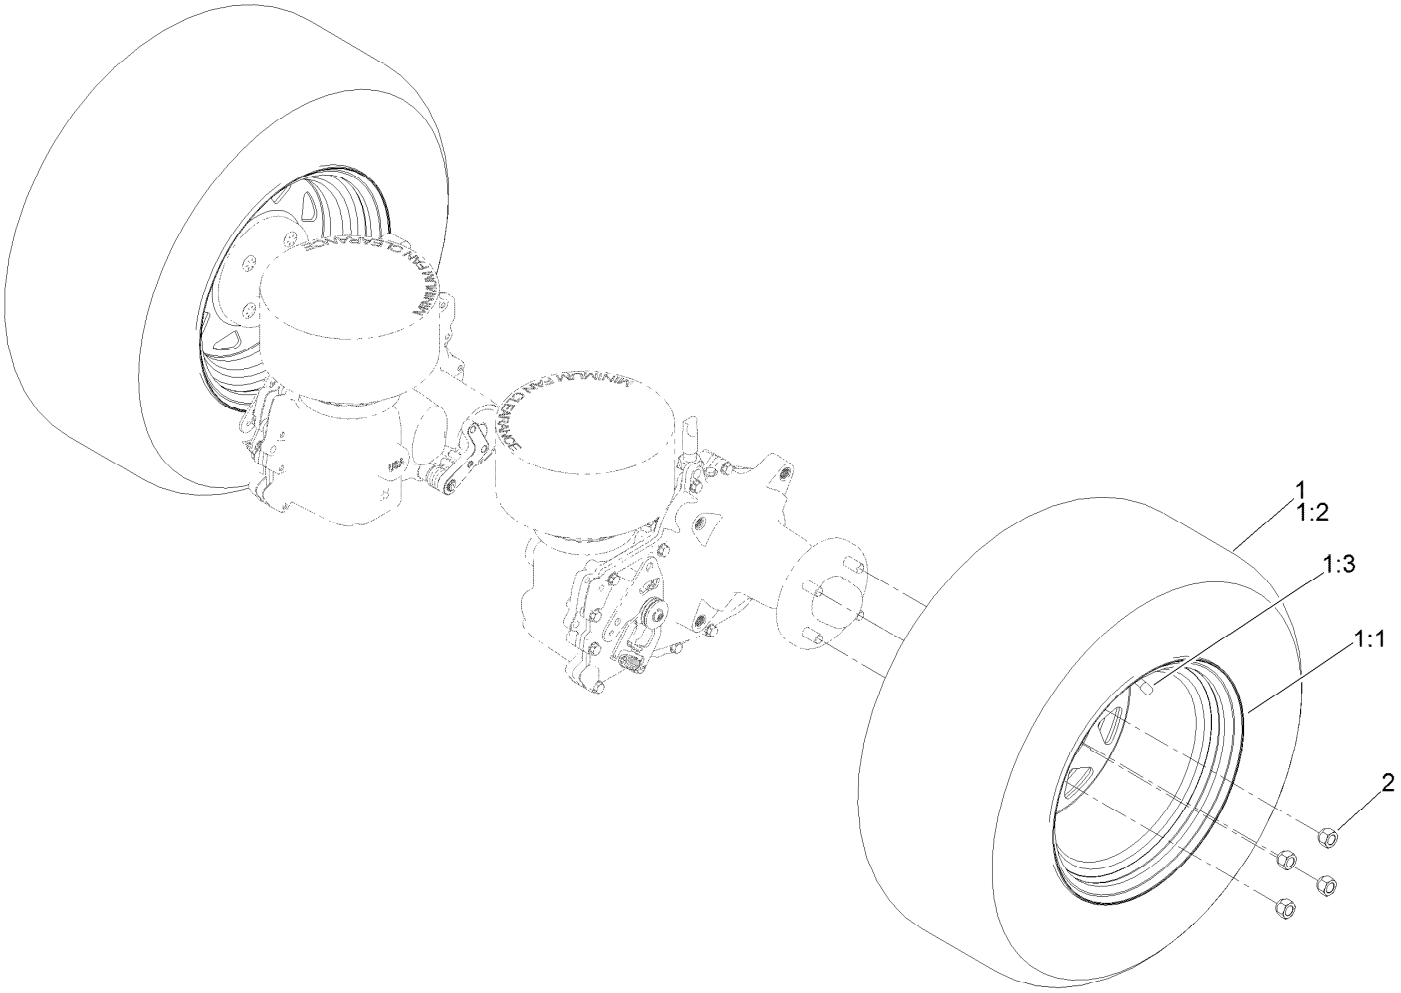

Rear Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-7959	2	Wheel And Tire ASM
1:1	140-7969	1	Wheel
1:2	140-7974	1	Tire
1:3	232-27	1	Stem-Valve
2	139-2564	8	Nut-Lug


Electrical Assembly

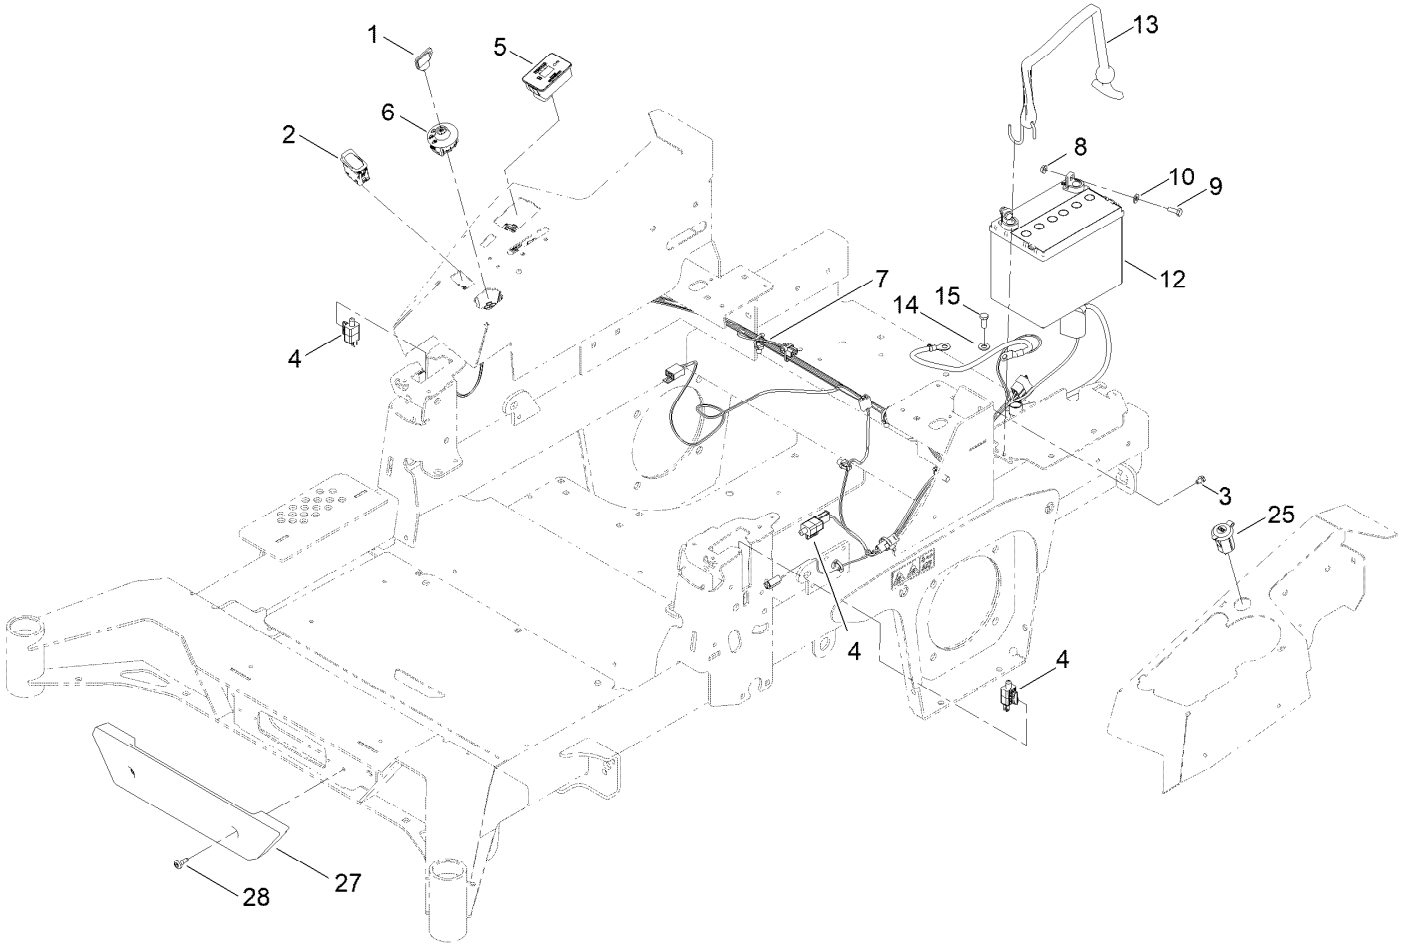

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	1-603511	1	Keys-Ignition (Spare Pair)
1	63-8360	1	Key-Ignition
2	139-6368	1	Switch-Rocker, On-None-On
3	99-8445	1	Screw-HWH
4	110-6765	3	Switch
5	116-5609	1	Module ASM
6	137-4100	1	Switch-Ignition
7	147-2363	1	Harness-Wire, Zmaster
8	32128-33	2	Nut-HF
9	321-4	2	Screw-HH
10	3256-22	2	Washer-Flat
12	104-8162	1	Battery
13	142-8697	1	Strap, Bungee
14	33094-00	1	Washer-Plain
15	33114-020	1	Screw-HH
25	140-7955	1	Port-Power, USB
27	147-7852	1	Bumper-Front
28	135-2015	2	Screw-Shoulder


Wire Harness Assembly No. 147-2363

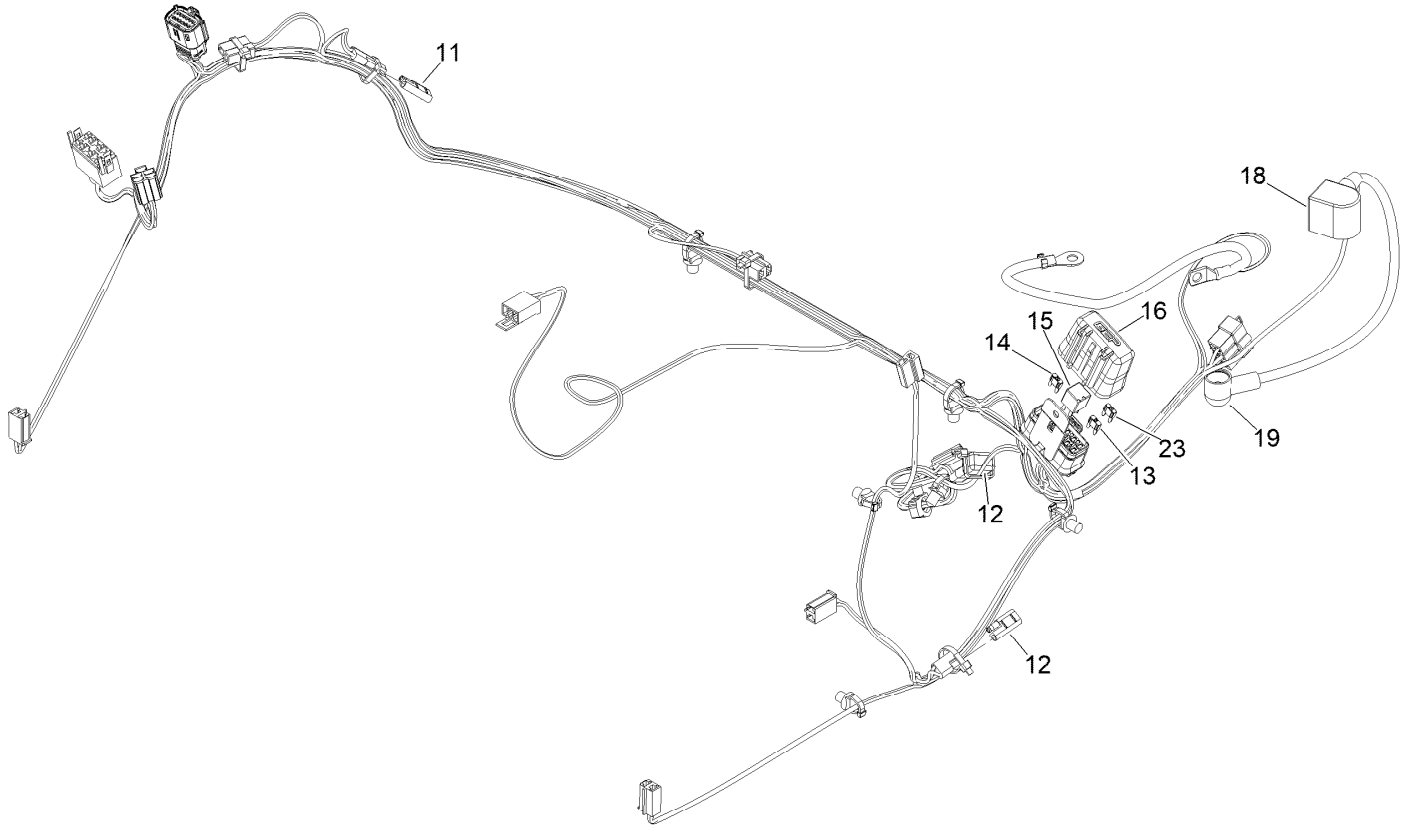

Wire Harness Assembly No. 147-2363 (continued)

Ref.	Part Number	Qty.	Description
11	116-0053	2	Cap-Plug
12	103-3895	1	Diode
13	121-8867	1	Fuse-Mini Blade, 15 Amp
14	121-8868	1	Fuse-Mini Blade, 20 Amp
15	126-3991	1	Relay-Micro
16	32180-176	1	Cover-Block, Fuse
18	126-8876	1	Insulator-Battery
19	1-543393	1	Insulator-Solenoid
23	121-8869	1	Fuse-Mini Blade, 25 Amp


Deck Lift Assembly

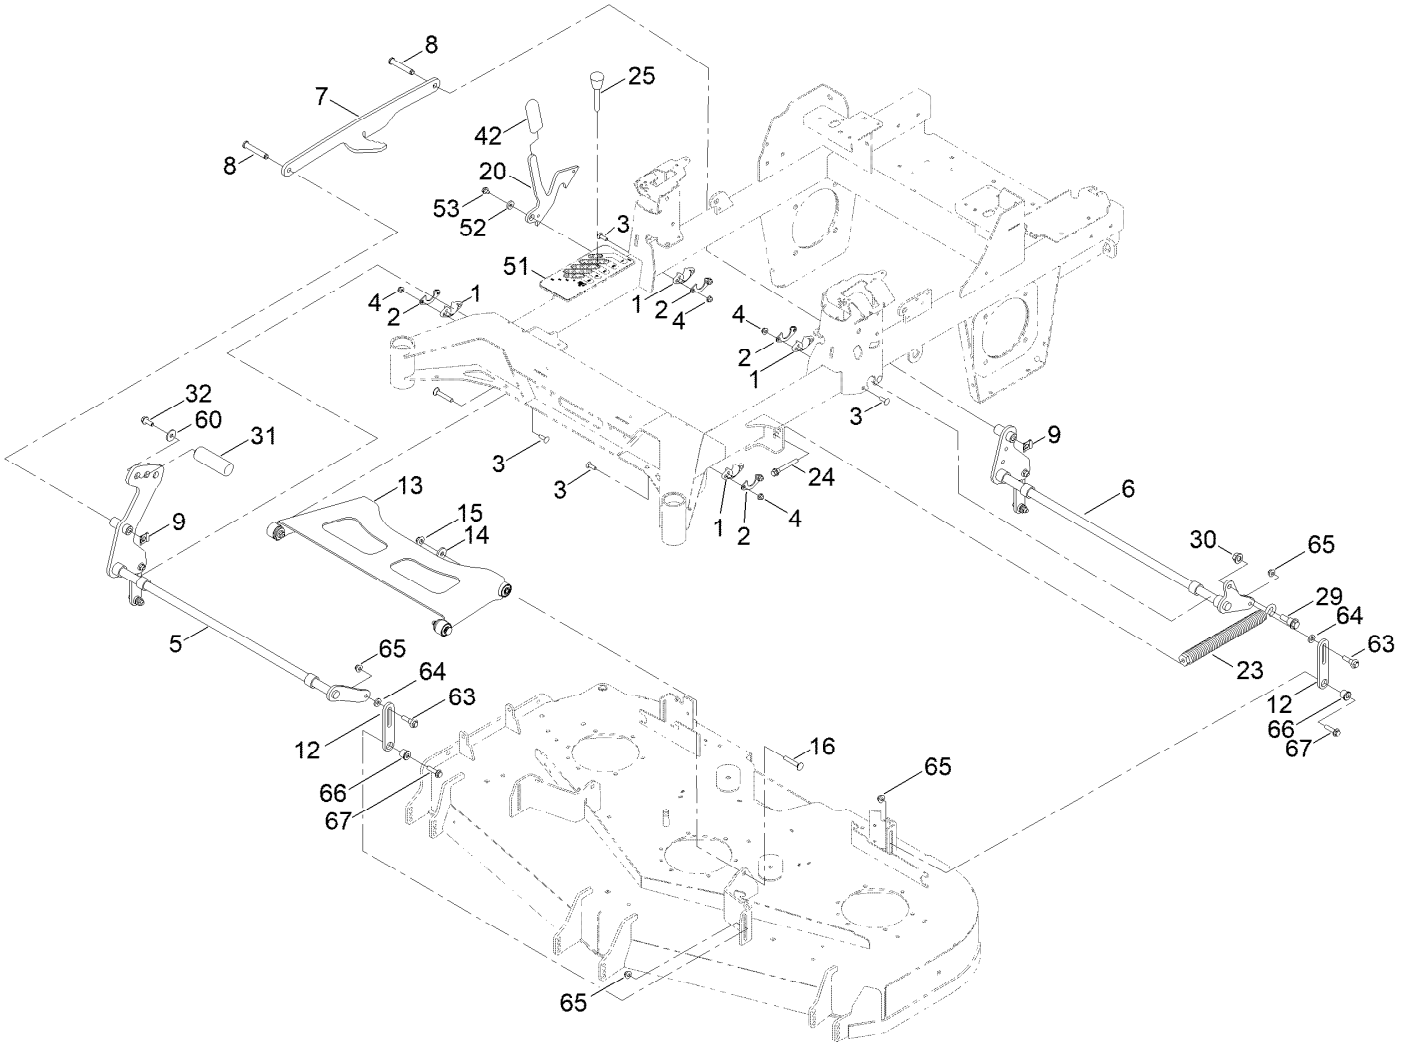

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-5872	4	Bearing-Flange
2	116-2887	4	Gusset-Lift, Deck
3	3230-22	8	Screw-CARR
4	119-4041	8	Nut-HF
5	139-8050-03	1	Front Deck Lift Shaft ASM
6	140-4975-03	1	Shaft-Lift, Deck
7	126-4639-03	1	Link-HOC
8	126-9181	2	Pin-Clevis
9	138-8491	2	Clip-Pin
12	161-9818-03	4	Link-Lift, Deck
13	161-6805	1	ASM-Deck Strut W/Bushings
14	1-373034	2	Washer
15	109-6658	2	Nut-Flange, NI
16	3231-7	2	Screw-CARR
20	145-8475-03	1	Plate-Transport Lock
23	116-0886	1	Spring-Extension
24	92-7674	1	Bolt-Shoulder
25	126-5401	1	Pin-HOC
29	116-0780	1	Screw-Shoulder, HHF
30	139-1689	1	Nut-HF
31	147-7949	1	Pedal-Foot Lift
32	3234-42	1	Screw-HHF
42	132-4749	1	Grip-Lever
51	139-6699	1	Decal-HOC
52	104-7658	1	Spacer
53	9266934	1	Screw
60	2844	1	Washer
63	130-0742	4	Bolt-Shoulder
64	43-0940	4	Spacer
65	119-4042	8	Nut-HF, NI
66	161-9819	4	Bushing-Deck Lift
67	3234-18	4	Screw-HHF


Deck Strut Assembly No. 161-6805

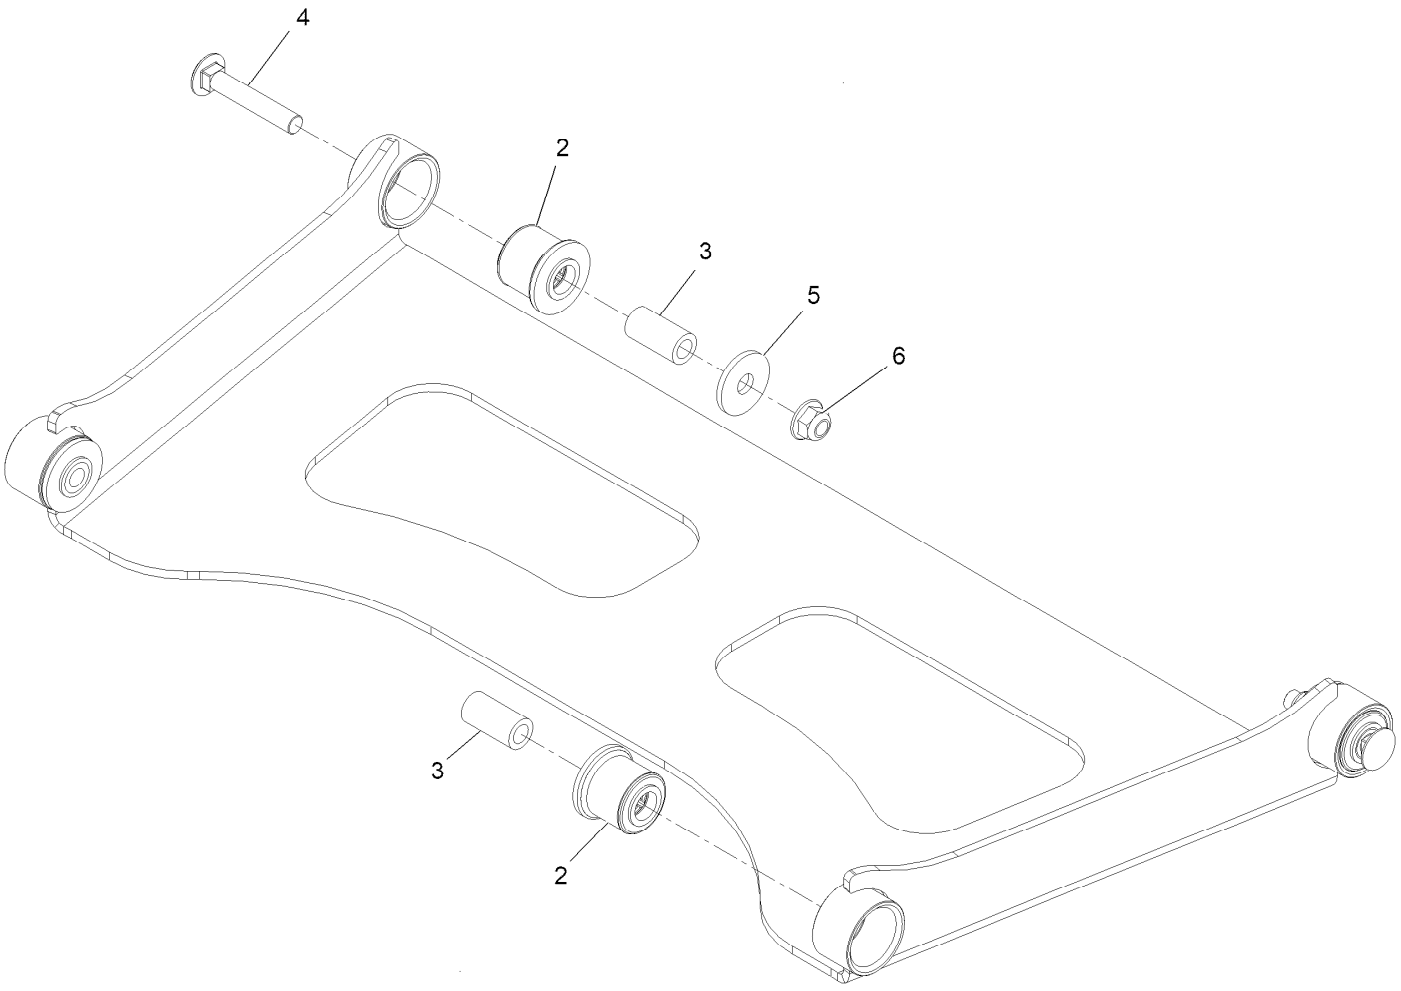

Deck Strut Assembly No. 161-6805 (continued)

Ref.	Part Number	Qty.	Description
2	126-8360	4	Bushing-Rubber, Suspension
3	108-6544	4	Spacer
4	3231-7	2	Bolt-Carriage 3/8-16 X 2 1/4
5	2844	2	Washer
6	119-4042	2	Nut-HF, NI

Engine, Clutch and Muffler Assembly

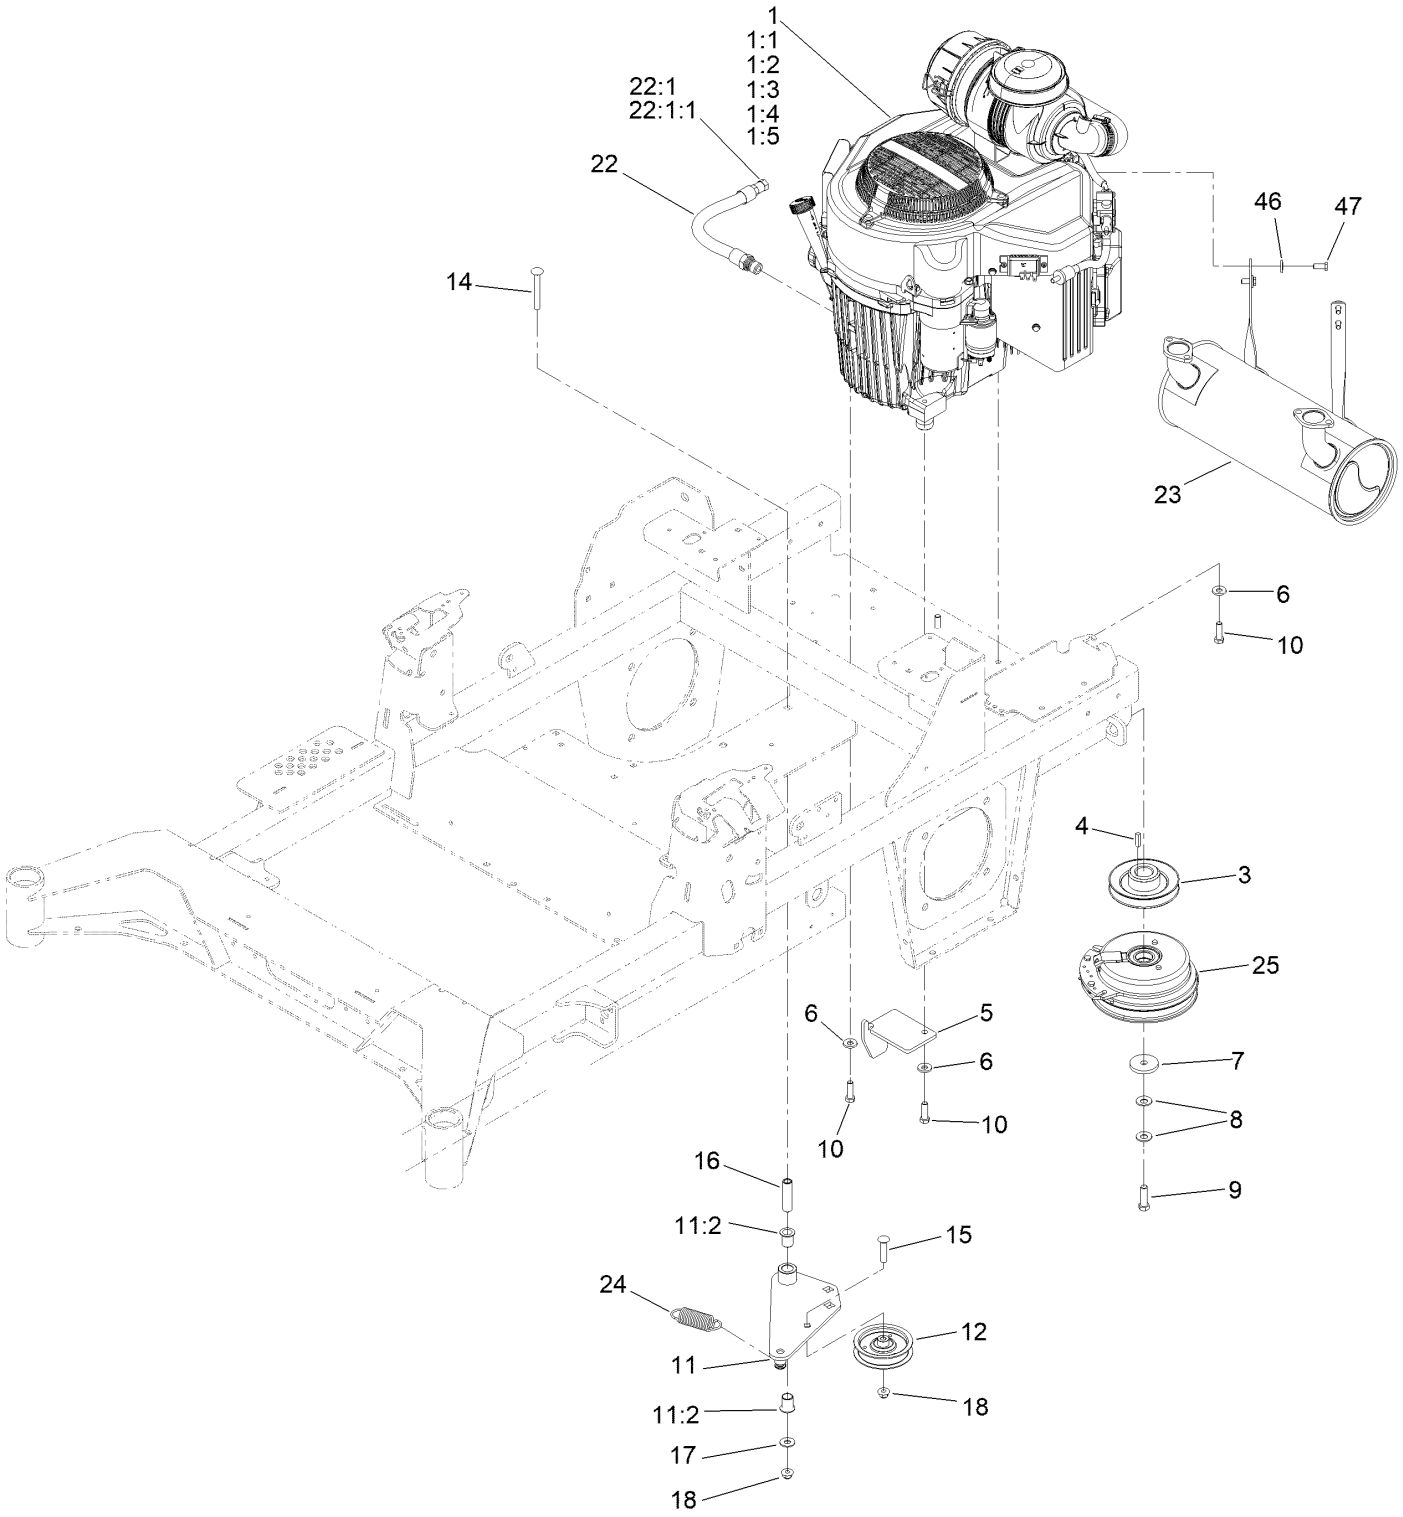


Engine, Clutch and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fx921V-_s25-R ■▲
1:1	KW10761	1	Filter-Oil Kaw
1:2	119-5944	1	Element-Filter, Air (Outer)
1:3	119-5945	1	Element-Filter, Air (Inner)
1:4	142-6949	1	Filter-Fuel
1:5	KW10676	2	Spark Plug
3	139-6702	1	Sheave, W/Hub
4	1-807259	1	Key
5	140-1190	1	Anchor-Clutch
6	98-5975	4	Washer-Belleville
7	109-6919	1	Washer-Plain
8	1-603610	2	Washer-Spring
9	109-9761	1	Screw-HH
10	323-7	4	Screw-HH
11	144-2671	1	Idler Arm ASM
11:2	138-2573	2	Bushing-Flange
12	140-4964	1	Pulley-Idler, Flat
14	3231-42	1	Screw-CARR
15	3231-29	1	Screw-CARR
16	139-6690	1	Bushing, Idler Pivot
17	3256-4	1	Washer-Flat
18	119-4042	2	Nut-HF, NI
22	116-4924	1	Engine Oil Drain Hose ASM
22:1	353-508	1	Plug-HH ●
22:1:1	237-42	1	O-Ring
23	140-8002	1	Muffler
24	1-653331	1	Spring-Idler
25	116-1604	1	Clutch
46	1-303334	4	Washer-Spring
47	33114-020	4	Screw-HH

● Torque to 24-26 ft-lb
▲ Obtain parts from www.kawpower.com
■ Not serviced separately


Decal Assembly

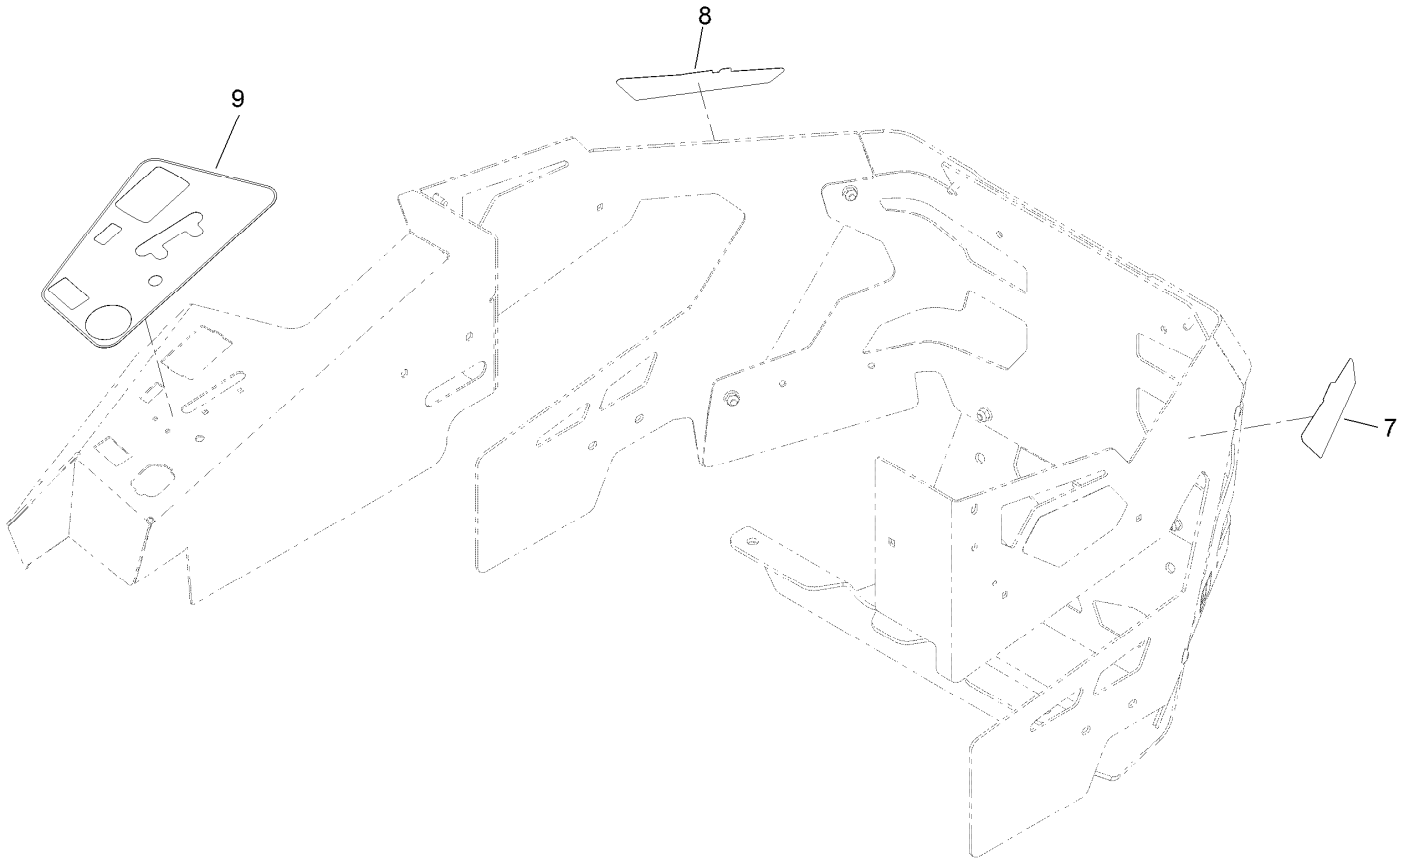

Decal Assembly (continued)

Ref.	Part Number	Qty.	Description
7	144-0444	1	Decal - HDX Pro
8	144-0445	1	Decal - HDX Pro
9	144-0405	1	Decal-Panel, Control


Deck Assembly

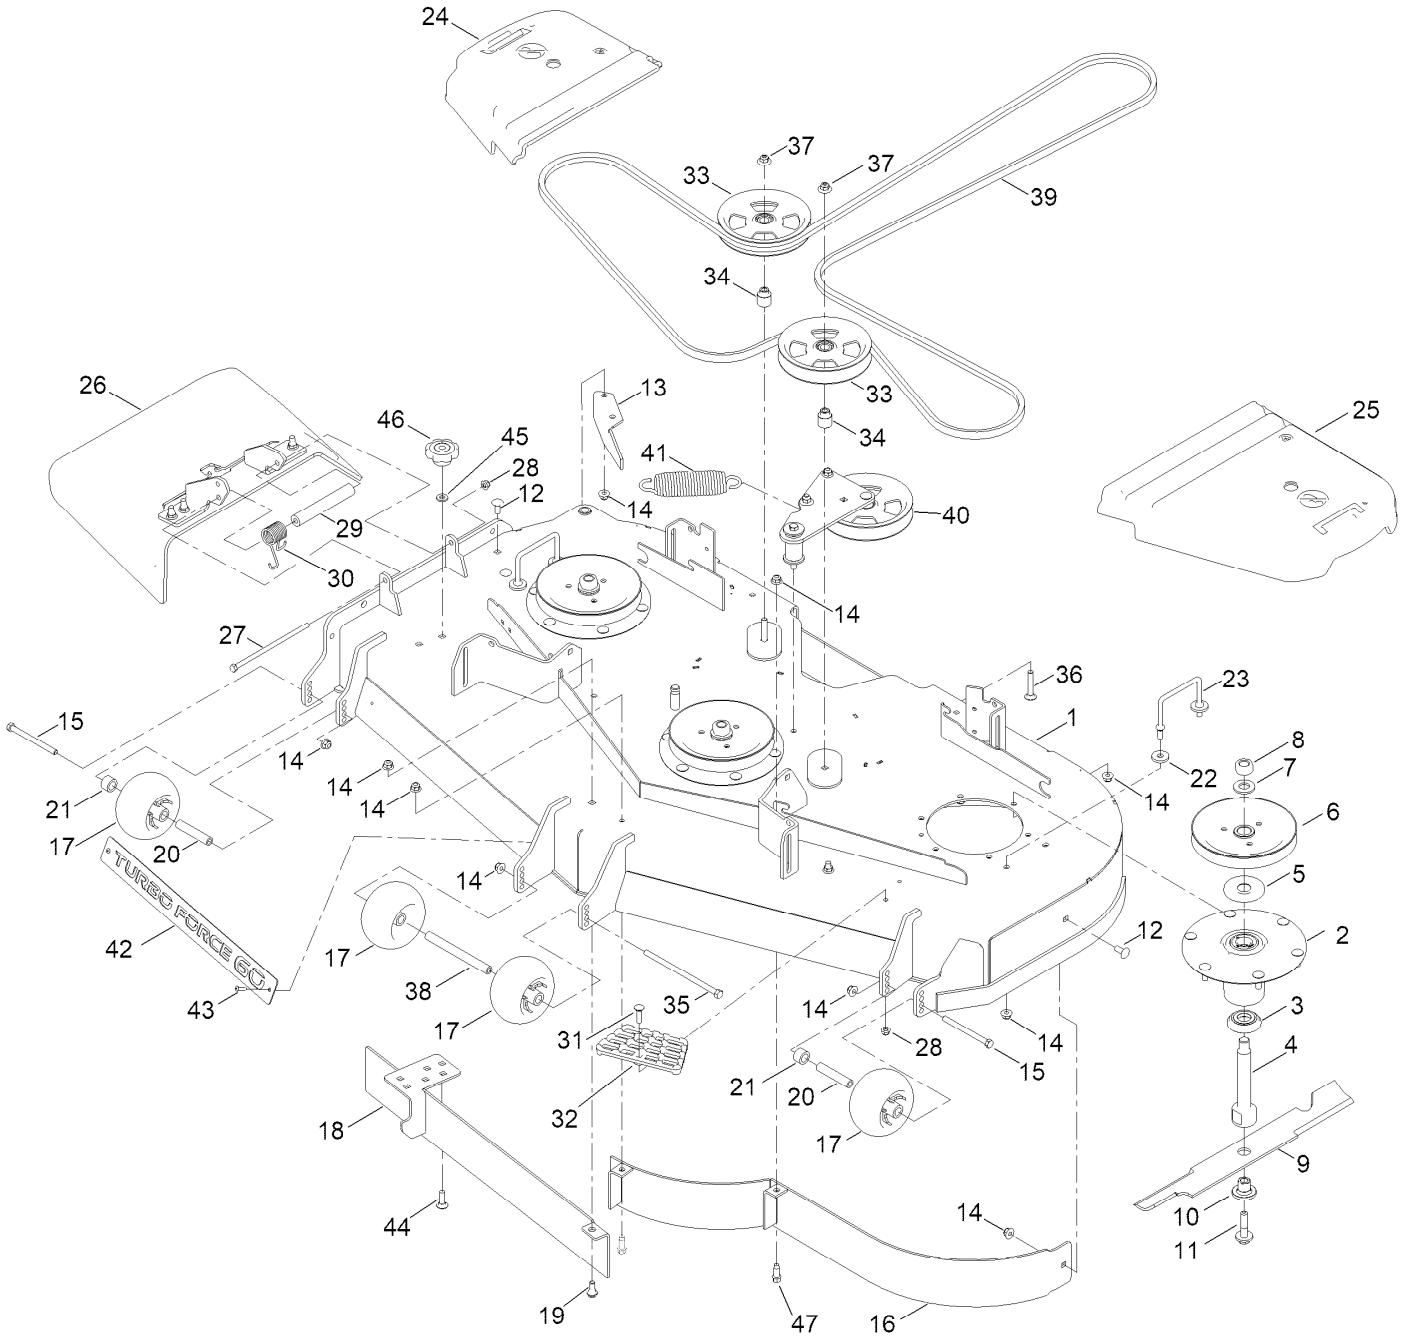

Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-4181SP	1	Deck ASM W/Decals
2	137-9780	3	Spindle ASM
3	119-4042	32	Nut-HF, NI
4	137-9784	3	Guard-Bottom
5	138-6045	3	Shaft-Spindle
6	103-1330	3	Guard-Bearing, Top
7	138-6058	3	Sheave-Blade Drive 6.50
8	103-2802	3	Washer
9	116-7306	3	Nut-Hex
10	140-1242	3	Blade-Flow, High
11	137-9787	3	Bushing-Hex
12	109-9220	3	Screw-Sems
13	109-6982	2	Wireform-Cover
14	3231-27	4	Screw-CARR
15	107-8541-01	1	Baffle-Discharge
16	323-23	2	Screw-HH
17	115-7461-01	1	Baffle
18	145-3640-01	1	Baffle
19	1-603299	4	Roller-Scalp, Anti
20	117-7813	1	RH Belt Cover ASM
2	117-3824	1	Plug-Plastic
21	117-7814	1	LH Belt Cover ASM
2	117-3824	1	Plug-Plastic
22	144-2635	1	Rubber Deflector ASM
23	322-50	1	Screw-HH
24	105-4622	1	Spacer
25	119-4041	2	Nut-HF
26	108-4052	1	Spring-Torsion
27	3230-3	1	Screw-CARR
28	126-4781-03	1	Step-Deck
29	139-8061	2	Bushing, Idler
30	132-9425	1	Pulley-Idler, Flat
31	132-9424	1	Pulley-Idler, Flat
32	3231-7	2	Screw-CARR
33	109-6658	2	Nut-Flange, NI
34	161-6360	1	Screw-HF
35	98-5967	1	Spacer-Wheel
36	139-1087	1	Idler Arm ASM
37	133-2129	2	Tube-Shafting
38	133-2128	2	Tube-Spacer
39	163-7383	1	Belt-5V
40	116-6317	1	Spring-Extension
41	94-7582	1	Bolt-Shoulder
42	147-4975-03	1	Plate-Turbo Force
43	130-8451	2	Rivet-Trifold
44	3231-25	1	Bolt-CARR
45	100-4852	1	Washer-Hardened
46	109-1092	1	Knob
47	92-1624	2	Screw-HWH Thd Form

Deck Decal Assembly No. 163-4181SP

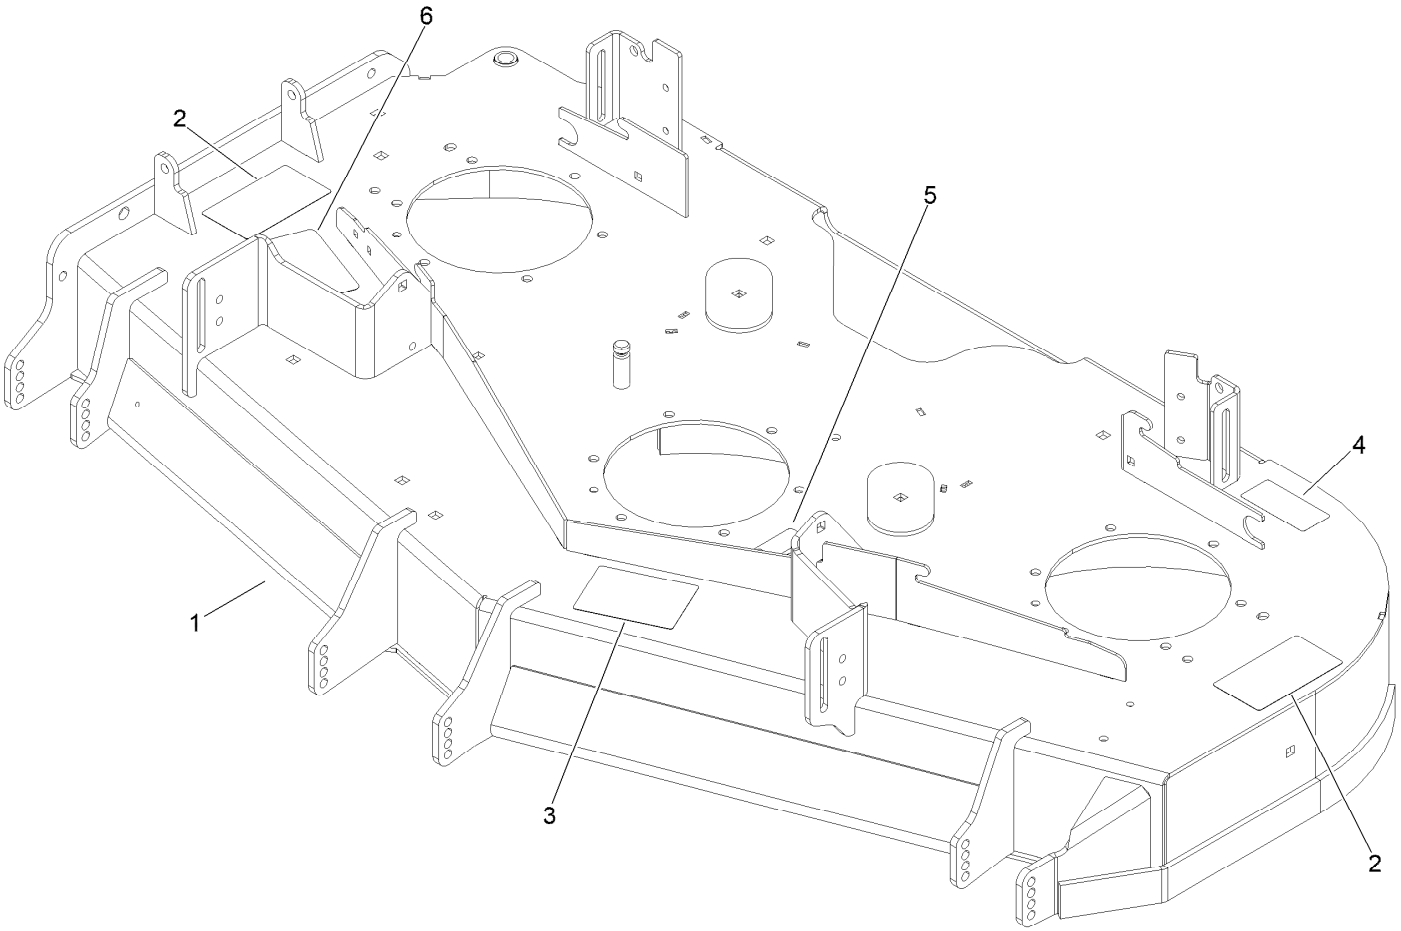


Deck Decal Assembly No. 163-4181SP (continued)

Ref.	Part Number	Qty.	Description
1		1	Deck ASM W/Decals ●
2	161-6620	2	Decal-Danger, Deck
3	127-0326	1	Decal-Scalp, Anti
4	116-8283	1	Decal-Torque, Bolt
5	109-6035	1	Decal-Routing, Belt
6	145-8411	1	Decal-Adjustable Baffle

● Not serviced separately


Spindle Assembly No. 137-9780

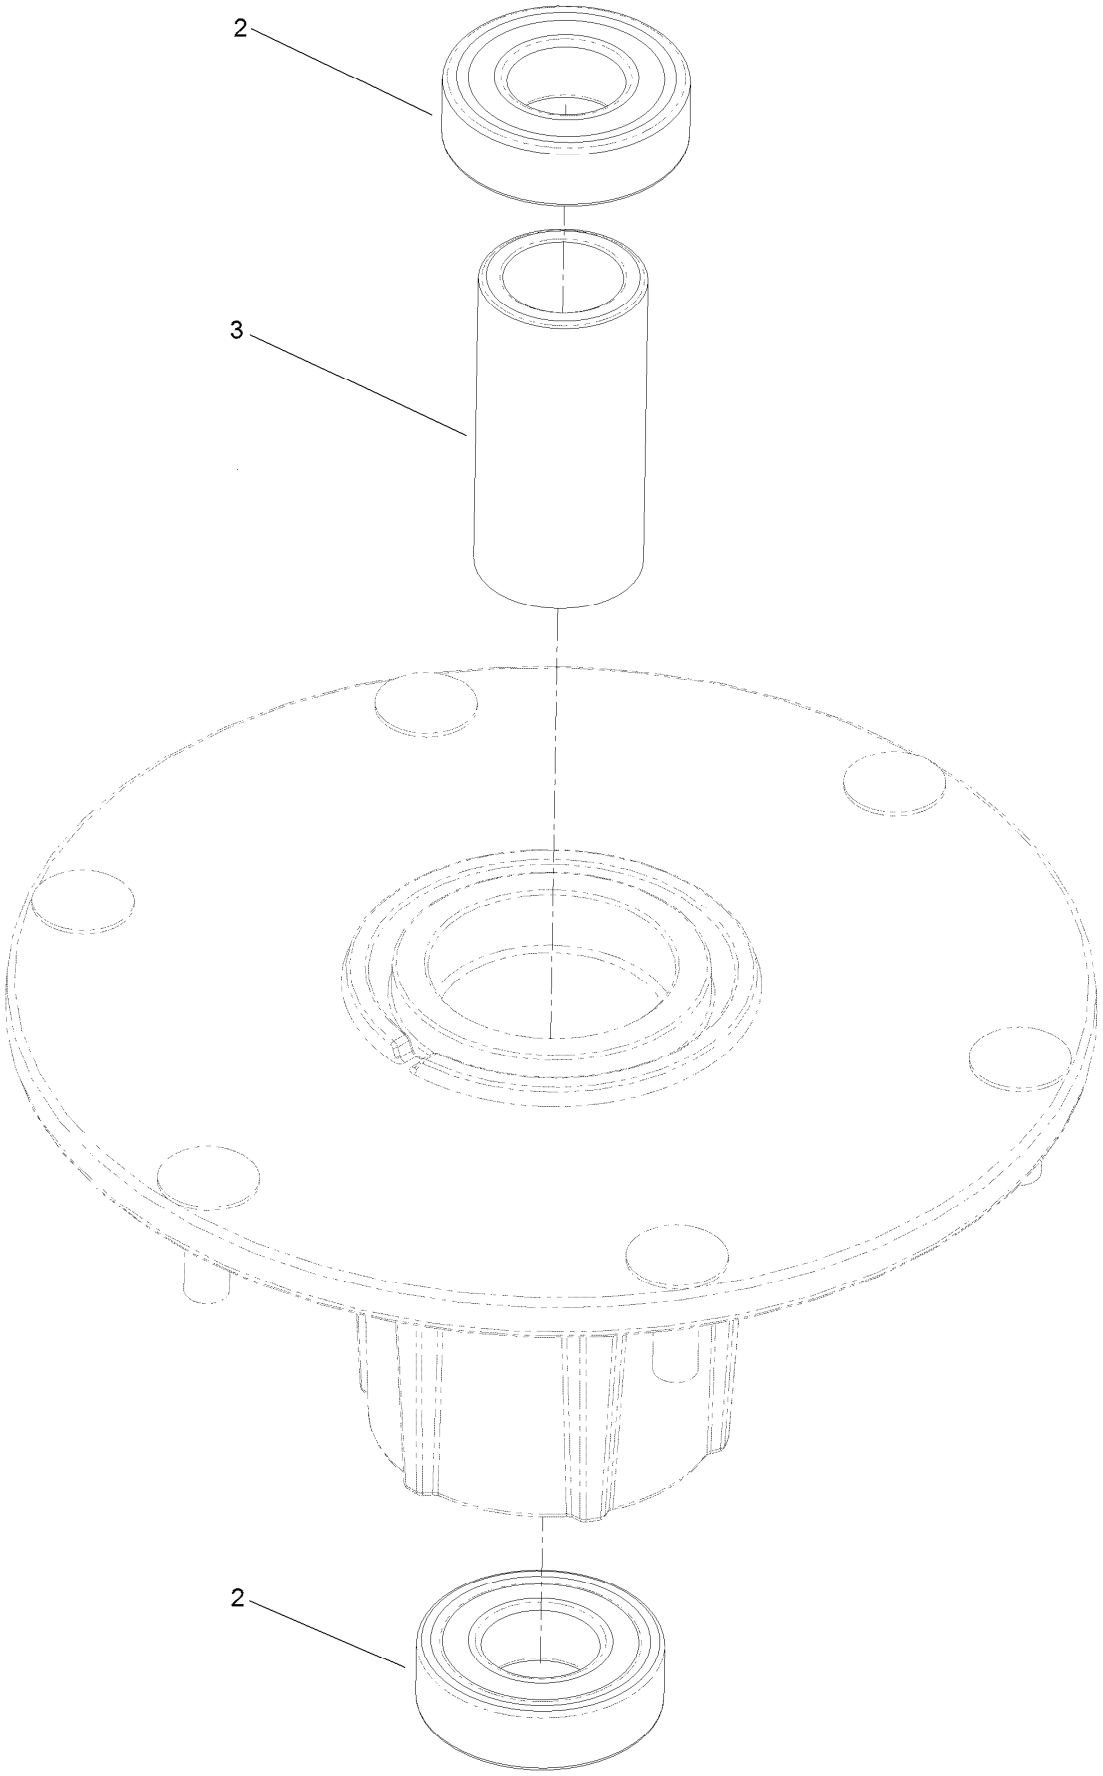

Spindle Assembly No. 137-9780 (continued)

Ref.	Part Number	Qty.	Description
2	116-0720	2	Bearing-Ball
3	138-6042	1	Spacer-Bearing


Deflector Assembly No. 144-2635

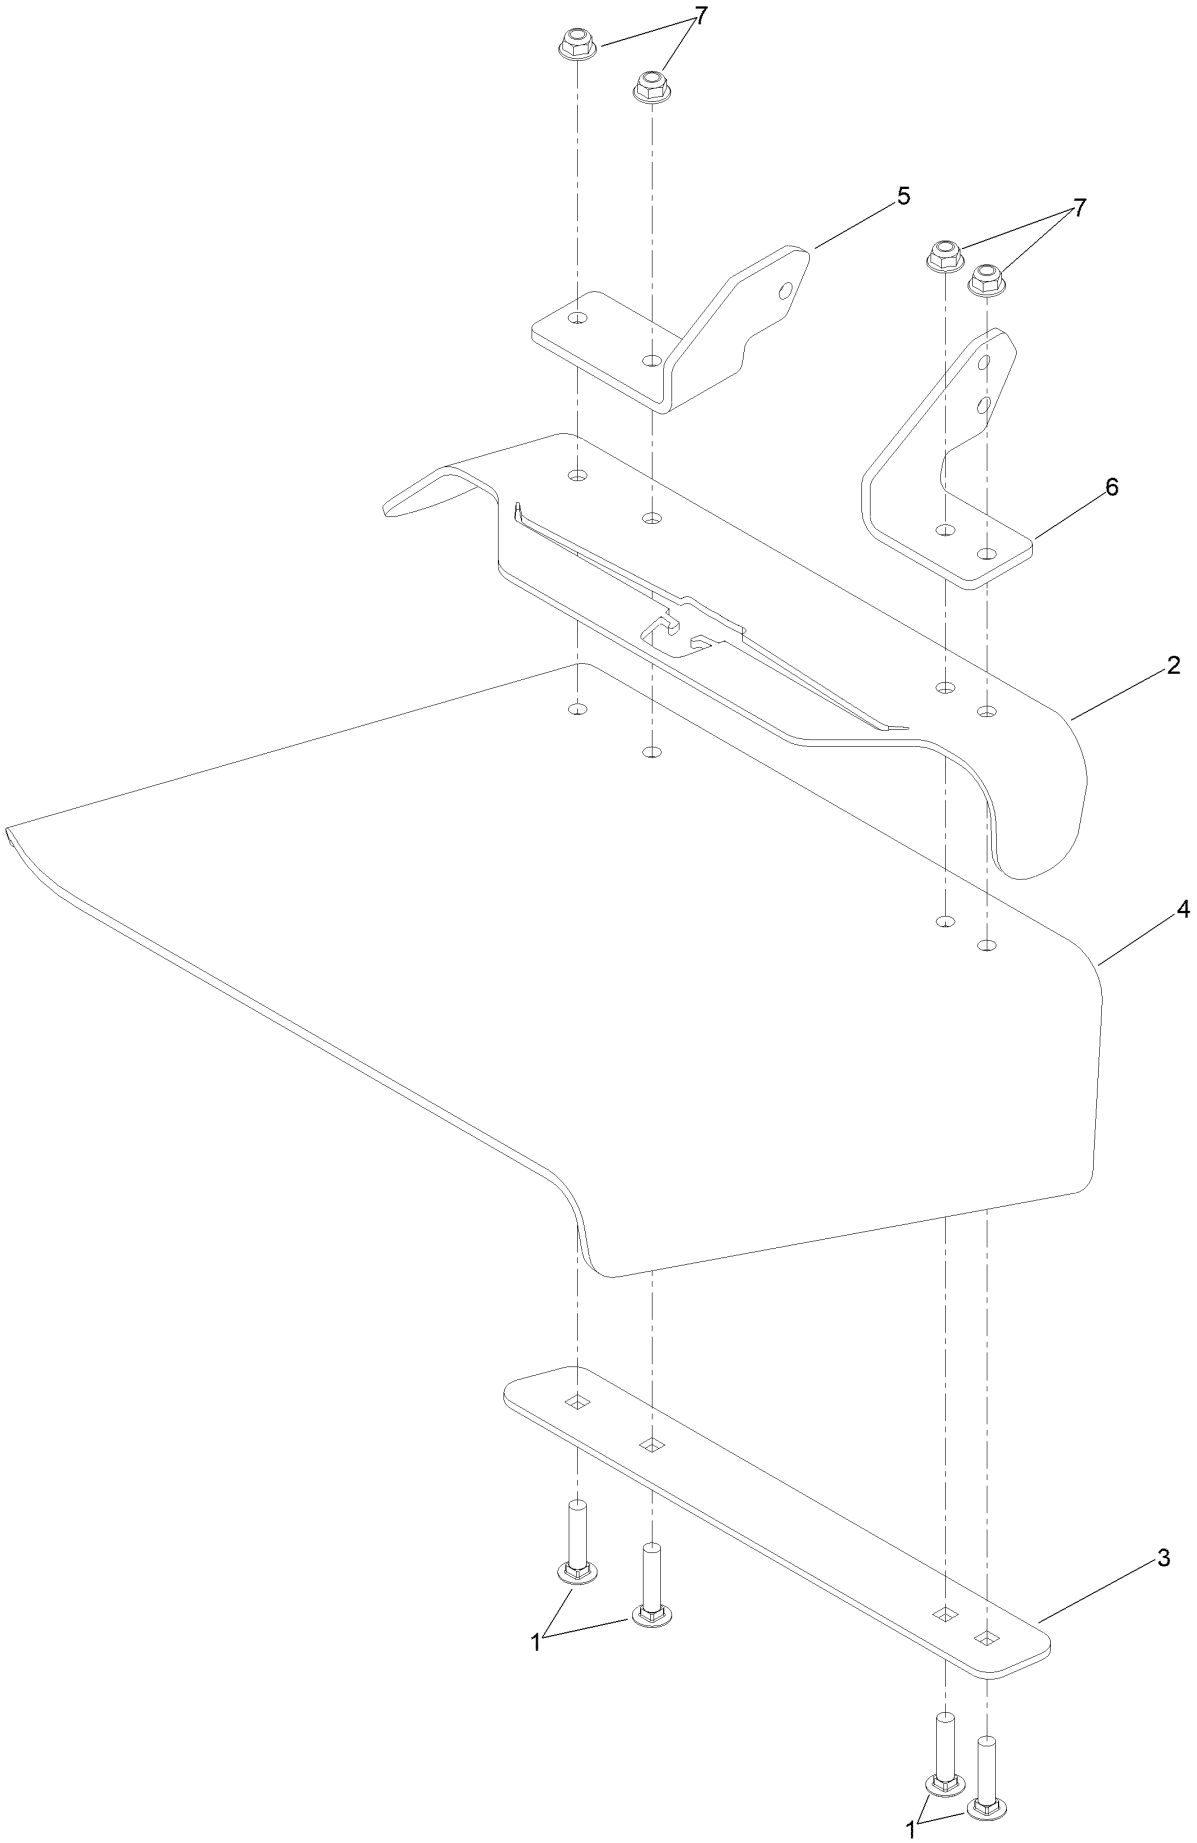

Deflector Assembly No. 144-2635 (continued)

Ref.	Part Number	Qty.	Description
1	3231-5	4	Screw-CARR
2	161-9815-01	1	Plate-Deflector Mount
3	106-3248-03	1	Strap-Discharge
4	161-3464	1	Deflector-Deck, Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	119-4042	4	Nut-HF, NI

Idler Arm Assembly No. 139-1087

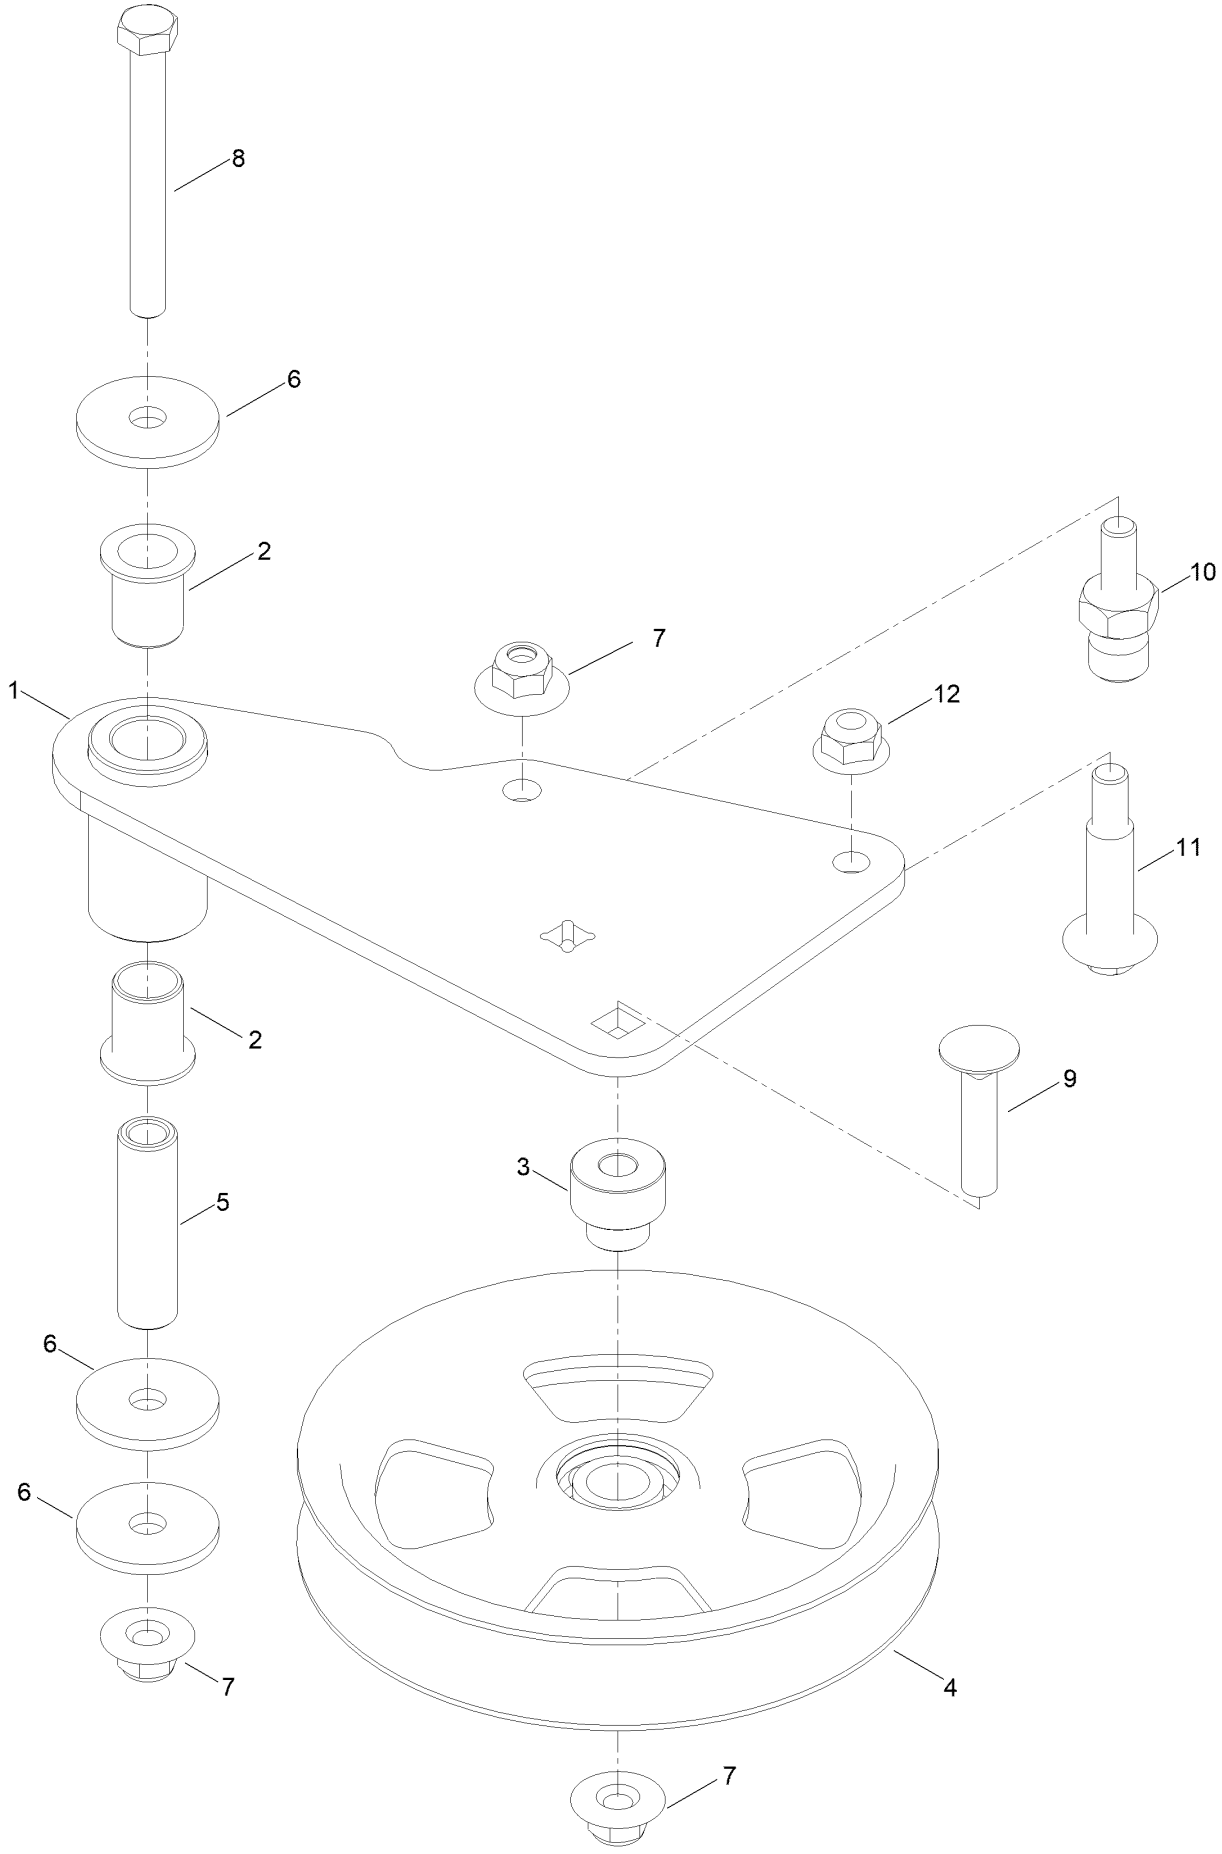

Idler Arm Assembly No. 139-1087 (continued)

Ref.	Part Number	Qty.	Description
1	139-1086	1	Idler Arm ASM
2	138-2573	2	Bushing-Flange
3	139-8060	1	Bushing, Idler
4	132-9424	1	Pulley-Idler, Flat
5	139-6690	1	Bushing, Idler Pivot
6	1-213069	3	Washer
7	109-6658	3	Nut-Flange, NI
8	323-15	1	Screw-HH
9	3231-5	1	Screw-CARR
10	132-4729	1	Anchor-Spring, Short
11	136-9028	1	Bolt-Shoulder, HWH
12	119-4042	1	Nut-HF, NI

Attachments and Accessories

For 74010 — 52in Z Master 4000 Series Riding Mower

Product Name	Model/Part
HYPR-OIL 500 (quart)	114-4713
HYPR-OIL 500 (gallon)	114-4714
HYPR-OIL 500-5 (5 gallon)	114-4715
Spark Arrestor	117-3281
Jack Kit With Adapter, Zero-Turn-Radius Side-Discharge or Rear-Discharge Riding Mower	126-7282
Jack Kit Adapter, Zero-Turn-Radius Side-Discharge or Rear-Discharge Riding Mower	126-7283
Striper Kit	126-7882
Jack Kit	127-6666
Tweel-Turf Tire	139-3649
Recycler Kit	139-6653
Blade-18.00 High Flow	140-1242
Blade-18.00 Medium Flow	140-4856
Blade-18.00 Low Flow	140-4857
Blade-18.00 Atomic	140-4858
Blade-18.00 Recycler	140-4859
6 Pack-Blade, 18.00 High Flow	140-4882
6 Pack-Blade, 18.00 Med Flow	140-4883
6 Pack-Blade, 18.00 Low Flow	140-4884
6 Pack-Blade, 18.00 Atomic	140-4885
6 Pack-Blade, 18.00 Recycler	140-4886
Trimmer Mount	144-2665
Jack Mount Kit	144-2676
Hardtop Sun Canopy	144-3719
52" Chute Gate Kit [4000]	144-6571
Handle Extension Kit	145-3615
Asm-Voodoo Trac 24x10.5-12	147-5030
Blade-18.00 High Flow	147-6251
6 Pack-blade, 18.00 High Flow	147-6255
13x6.5n6 Caster Tweel Asm	147-6294
Bucket Mount Kit, Z Master 2000 or 4000 Series Riding Mower	147-6345
Universal Mount Kit, Z Master 2000 or 4000 Series Riding Mower	147-6346
Electric Deck Lift Kit	147-7867
2in Reciever Hitch Kit	161-2810
Actuator Replacement Kit,412200557 Below	161-3549
Electric Deck Lift Actuator Replacement Kit, SN 412200557 Below	161-3550
Fuel Pickup with Screen Kit	161-6806
Front Light Kit	163-7395
Bagger Kit, Z Master 2000 / 4000	78439
Z 4000 52in Completion Kit	78465

Notes:



Count on it.