Form No. 3443-475 Rev D

TORO®

Count on it.

Parts Catalog

# Multi Pro® 1750

## Turf Sprayer

**Model No. 41188—Serial No. 407900000 and Up**

Register at www.Toro.com.
Original Instructions (EN)

CE

*3443-475* D

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents


Roll-Over Protection System and Seat Assembly . . . . . 5
Frame Assembly. . . . . 6
Rear Drive Assembly . . . . . 7
Case Assembly Transaxle Assembly No. 120-7610. . . . . 9
Center Plate Assembly Transaxle Assembly No. 120-7610 . . . . . 10
Main Shaft Assembly Transaxle Assembly No. 120-7610 . . . . . 11
Reduction Shaft Assembly Transaxle Assembly No. 120-7610 . . . . . 12
Reverse Shaft Assembly Transaxle Assembly No. 120-7610. . . . . 13
Main Shift Assembly Transaxle Assembly No. 120-7610. . . . . 14
Counter Shaft Assembly Transaxle Assembly No. 120-7610 . . . . . 15
Differential Gear Assembly Transaxle Assembly No. 120-7610 . . . . . 16
Differential Carrier Assembly Transaxle Assembly No. 120-7610 . . . . . 17
Differential Lock Assembly Transaxle Assembly No. 120-7610 . . . . . 18
Axle Shaft Assembly Transaxle Assembly No. 120-7610 . . . . . 19
Brake Caliper Assembly No. 127-7424. . . . . 20
Brake Hydraulic Assembly . . . . . 21
Master Cylinder Assembly No. 104-6782. . . . . 22
Front Suspension Assembly. . . . . 23
Hydraulic Cylinder Assembly No. 125-0720 . . . . . 26
Pedal Assembly . . . . . 27
Parking Brake Lever and Cable Assembly . . . . . 28
Control Console Mount Assembly . . . . . 29
Gear Shift and Drift Lock Control Assembly . . . . . 30
Shift Assembly No. 106-7887. . . . . 31
Control Console Mount Assembly . . . . . 32
Hood, Dash and Headlight Assembly . . . . . 33
Seat Base and Front Fender Assembly . . . . . 34
Hydraulic Steering Assembly . . . . . 35
Hydraulic Pump Assembly No. 121-6545. . . . . 37
Steering Valve Assembly No. 138-6100. . . . . 38
Boom Lift Hydraulic Assembly . . . . . 39
Hydraulic Cylinder Assembly No. 117-0701. . . . . 40
On-Off Boom Lift Valve Assembly No. 136-2400 . . . . . 41
Engine Mounting Assembly . . . . . 42
Pump Assembly No. 137-4231 . . . . . 44
Exhaust Assembly . . . . . 45
Fuel Tank, Filter and Line Assembly . . . . . 46
Fuel Tank Assembly No. 115-9048 . . . . . 47
Driveshaft Connection Assembly. . . . . 48
Driveshaft Assembly No. 119-6040. . . . . 49
Clutch and Bell Housing Assembly . . . . . 50
Spray Tank Assembly . . . . . 51
Tank Assembly No. 121-6491 . . . . . 52
Spray Tank Lid Assembly No. 138-6283 . . . . . 53
Filter Assembly No. 130-7096 . . . . . 54
Spray Tank Valve Assembly . . . . . 55
Flow Meter Assembly No. 138-6128. . . . . 56
Agitation Manifold Valve Assembly . . . . . 57
Regulating Valve Body Assembly No. 127-9804. . . . . 58
Actuator On/Off Assembly No. 140-7377. . . . . 59
Regulating Actuator Assembly No. 144-6163 . . . . . 60
Manifold Valve Kit No. 131-0253 . . . . . 61
Manifold Valve Kit No. 131-7256 . . . . . 62
Section Manifold Assembly. . . . . 63



**© 2026—The Toro® Company**
**8111 Lyndale Avenue South**
**Bloomington, MN 55420**






**Contact us at www.Toro.com.**
**Printed in the USA.**
**All Rights Reserved**

# Contents (continued)


On/Off Manifold Valve Kit No. 127-9803 . . . . . 64
Hose Assembly . . . . . 65
Main Wiring Harness and Battery Assembly . . . . . 67
Center Boom Mount Assembly . . . . . 68
RH Single Body Turret Assembly No. 108-3726 . . . . . 70
Double Turret Body Assembly No. 108-3727 . . . . . 71
LH Single Turret Body Assembly No. 108-3725 . . . . . 72
Boom Pivot Mount Assembly . . . . . 73
Boom Pivot Assembly . . . . . 74
Left and Right Hand Boom Assembly . . . . . 75
Attachments and Accessories . . . . . 76

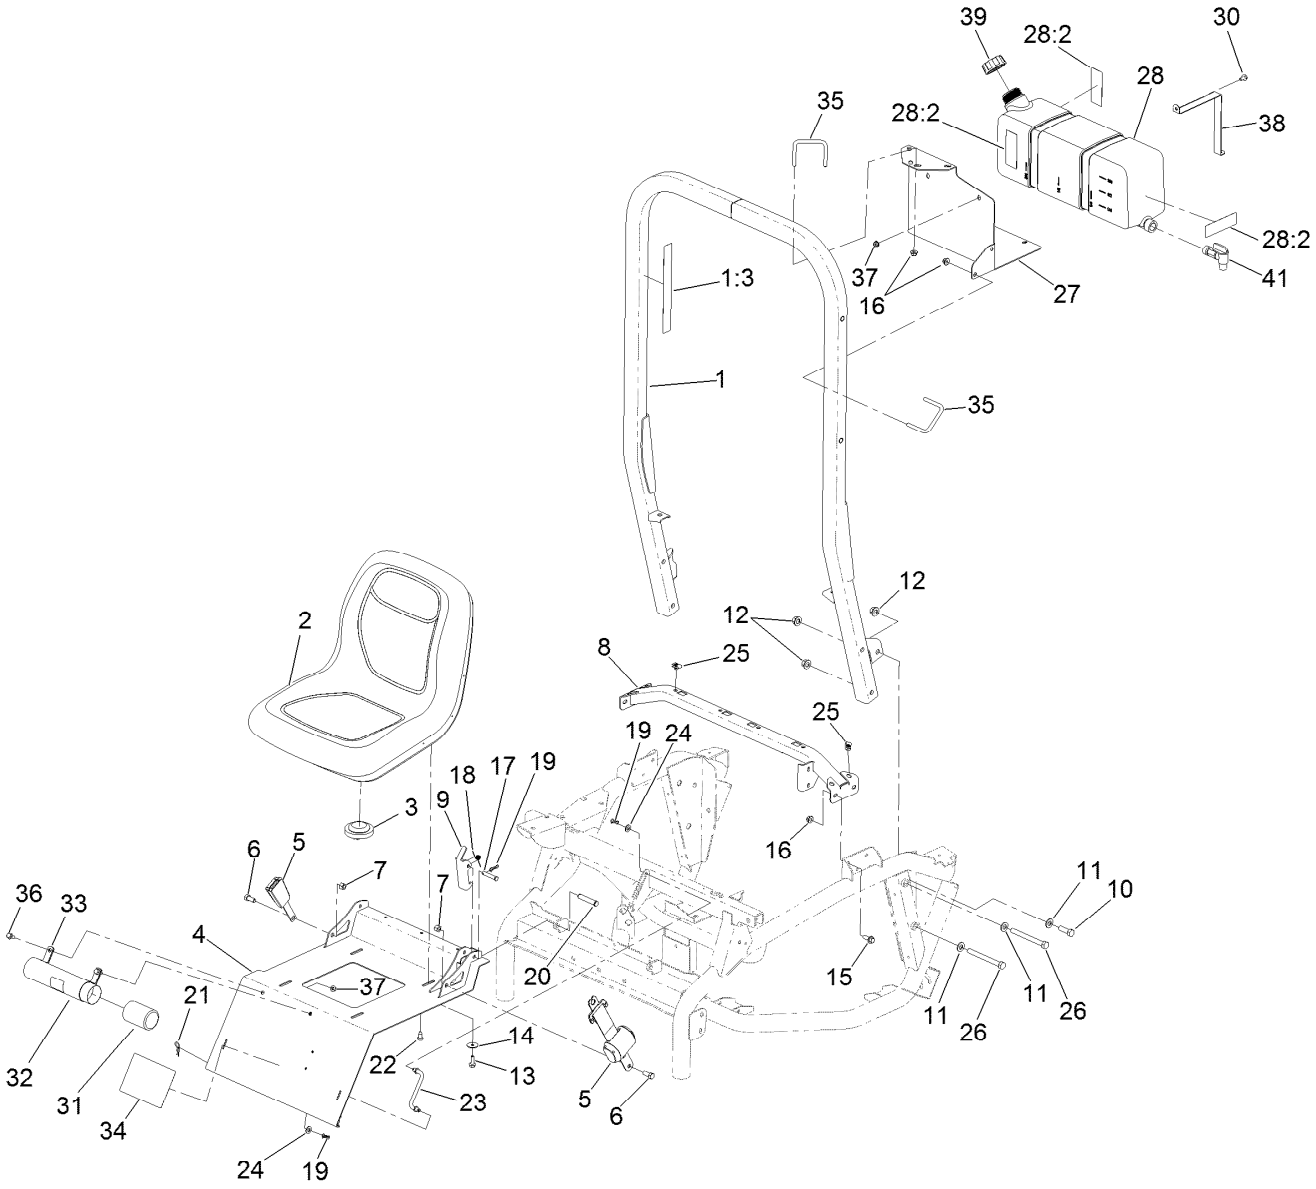


# Roll-Over Protection System and Seat Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-3918 | 1 | ROPS ASM |
| 1:3 | 127-3939 | 1 | Decal-ROPS |
| 2 | 112-2923 | 1 | Seat ASM |
| 3 | 100-3524 | 1 | Switch-Seat |
| 4 | 125-0872-03 | 1 | Plate-Seat |
| 5 | 110-0413 | 1 | Seatbelt-Retractable |
| 6 | 3212-4 | 2 | Screw-HH |
| 7 | 3296-7 | 2 | Nut-Lock |
| 8 | 125-0910-03 | 1 | Crossmember-Seat |
| 9 | 125-0916 | 1 | Latch-Seat |
| 10 | 325-6 | 2 | Screw-HH |
| 11 | 3256-26 | 6 | Washer-Flat |
| 12 | 99-5107 | 6 | Nut-HF Nylock |
| 13 | 33104-025 | 4 | Screw-HHF |
| 14 | 3256-57 | 4 | Washer-Flat |
| 15 | 3234-42 | 4 | Screw-HHF |
| 16 | 104-8301 | 8 | Nut-HF, NI |
| 17 | 283-82 | 1 | Pin-Clevis |
| 18 | 104-4821 | 1 | Spring-Torsion |
| 19 | 119-1415 | 3 | Pin-Cotter, Locking |
| 20 | 100-6541 | 2 | Pin-Clevis |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 21 | 3290-467 | 2 | Pin-Hair |
| 22 | 87-8460 | 3 | Bumper-Rubber |
| 23 | 125-0909 | 1 | Rod-Prop, Seat |
| 24 | 3256-24 | 2 | Washer-Plain |
| 25 | 94-2413 | 3 | Nut-U |
| 26 | 325-19 | 4 | Screw-HH |
| 27 | 131-5797-03 | 1 | Mount-Tank, Eye Wash |
| 28 | 132-7745 | 1 | Fresh Water Tank ASM |
| 28:2 | 120-0616 | 3 | Decal-Water, Fresh |
| 30 | 3234-7 | 4 | Screw-HHF |
| 31 | 104-7048 | 1 | Cap-Housing |
| 32 | 104-7050 | 1 | Tube-Manual |
| 33 | 2412-133 | 2 | Clamp-R |
| 34 | 133-0382 | 1 | Decal-Service/Maintenance |
| 35 | 119-6727 | 2 | U-Bolt |
| 36 | 3234-47 | 2 | Screw-HHF |
| 37 | 104-8300 | 6 | Nut-HF, NI |
| 38 | 132-7628-03 | 2 | Band-Tank, Eye Wash |
| 39 | 137-4291 | 1 | Cap-Tank, Fresh Water |
| 41 | 100-7011 | 1 | Spigot-90 DEG |

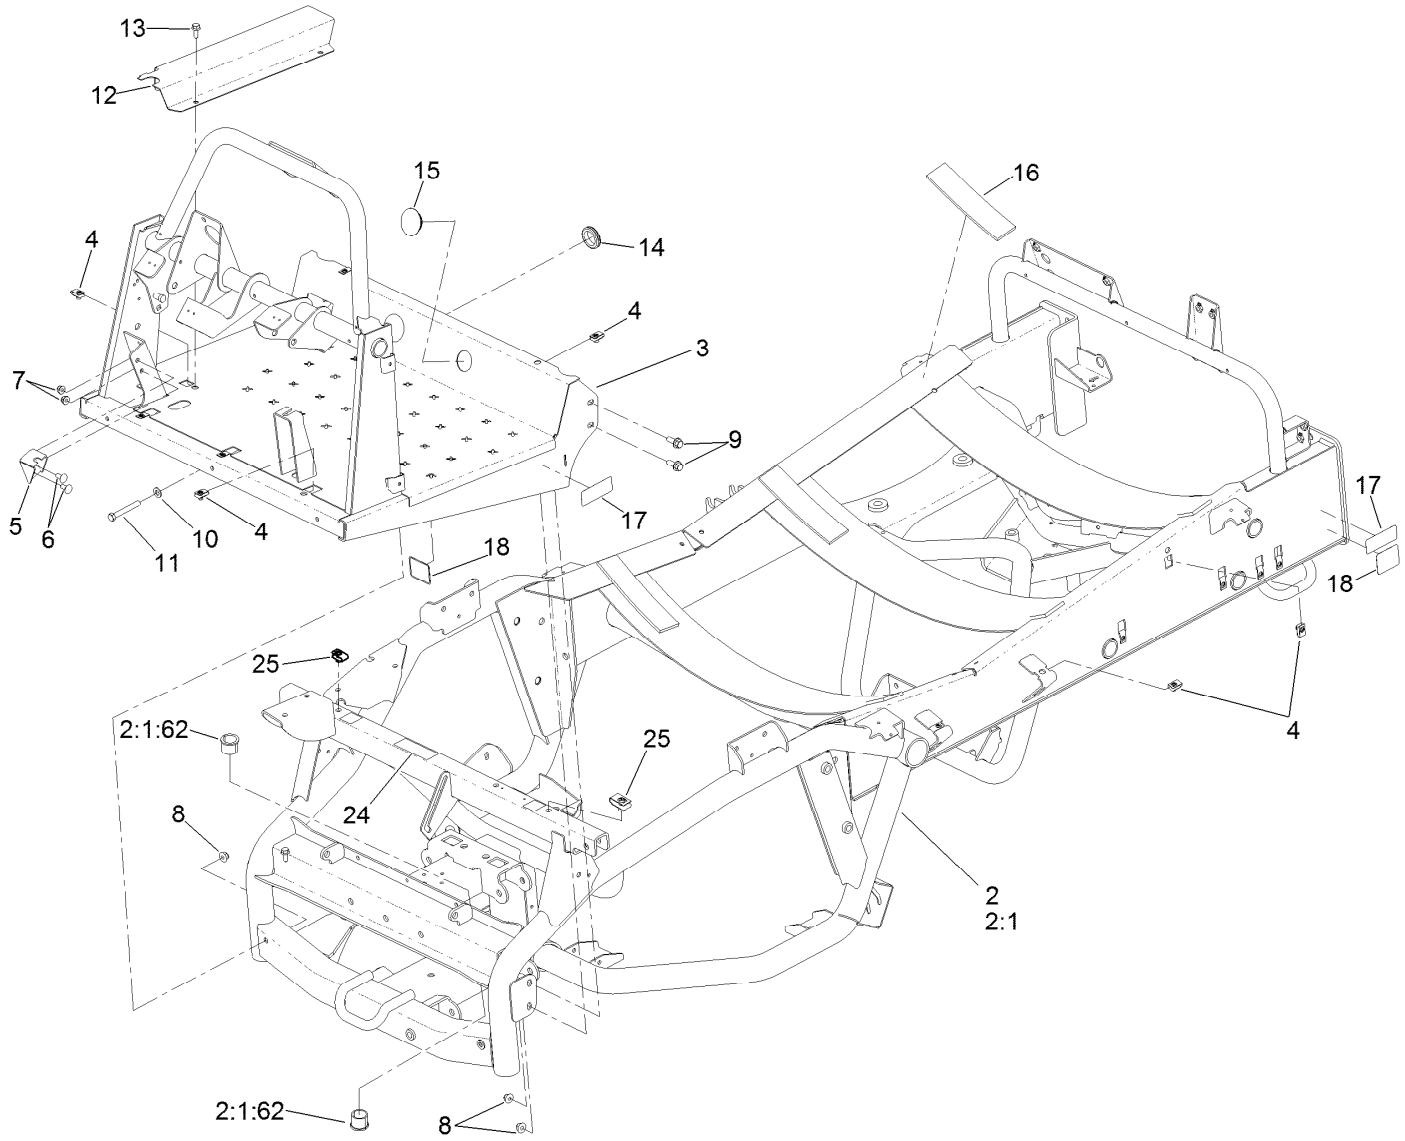


# Frame Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 121-6501-03 | 1 | Frame ASM |
| 2:1 | | 1 | Frame ● |
| 2:1:62 | 104-0015 | 2 | Bushing-Flange |
| 3 | 125-0812-03 | 1 | Platform |
| 4 | 94-2413 | 19 | Nut-U |
| 5 | 106-2421 | 1 | Bracket-Mount, Cable |
| 6 | 3230-23 | 2 | Bolt-CARR |
| 7 | 104-8300 | 2 | Nut-HF, NI |
| 8 | 104-8301 | 6 | Nut-HF, NI |
| 9 | 3234-42 | 4 | Screw-HHF |
| 10 | 3256-24 | 2 | Washer-Plain |
| 11 | 323-13 | 2 | Screw-HH |
| 12 | 125-0871-03 | 1 | Cover-Hose |
| 13 | 3234-47 | 2 | Screw-HHF |
| 14 | 240-3 | 2 | Grommet-Rubber |
| 15 | 121-3397 | 2 | Plug-Grommet |
| 16 | 125-8094 | 6 | Pad-Tank |
| 17 | 106-9206 | 4 | Decal-Torque, Wheel |
| 18 | 125-6694 | 3 | Decal-Tie Down |
| 24 | 133-8062 | 1 | Decal-Spark Arrestor |
| 25 | 115-7721 | 2 | Nut-Clip, U |


● Not serviced separately

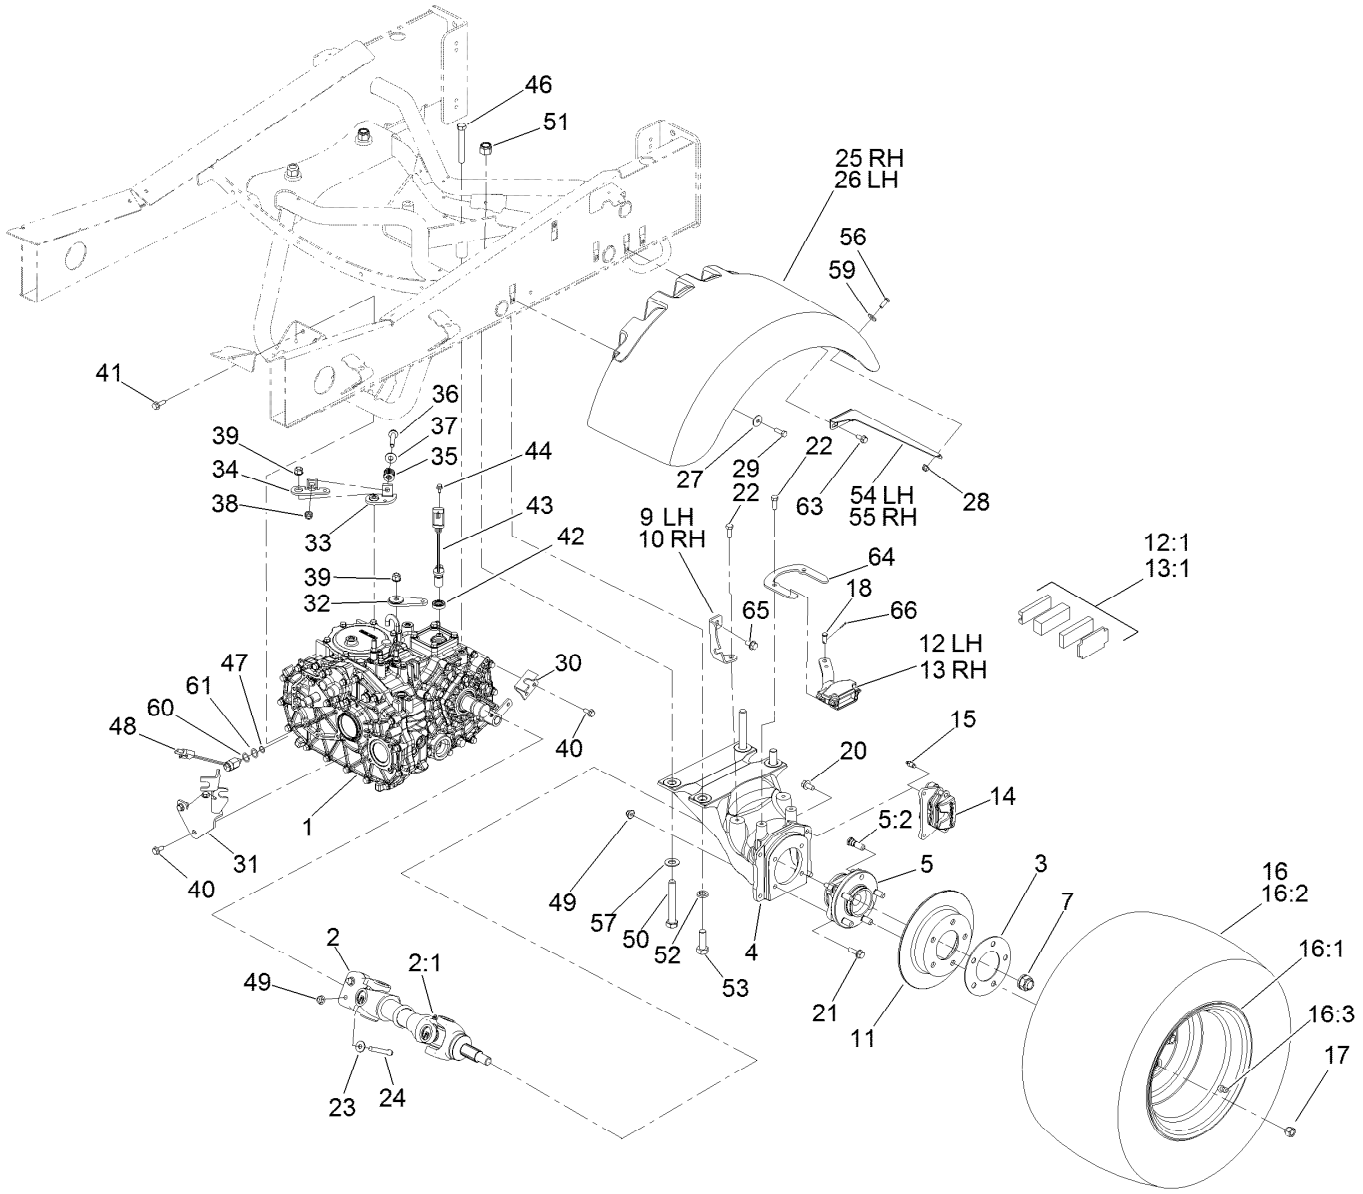


# Rear Drive Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 120-7610 | 1 | Transaxle ASM |
| 2 | 138-5600 | 1 | Driveshaft ASM |
| 2:1 | 302-5 | 2 | Fitting-Grease |
| 3 | 144-6172-03 | 2 | Spacer-Wheel |
| 4 | 131-4311 | 2 | Axle-Housing |
| 5 | 121-9751 | 2 | Hub-Bearing, Wheel |
| 5:2 | 121-9752 | 5 | Stud-Wheel |
| 7 | 115-2164 | 2 | Nut-Spindle |
| 9 | 131-4362-03 | 1 | Bracket-Cable, LH |
| 10 | 131-4346-03 | 1 | Bracket-Cable, RH |
| 11 | 114-8351 | 2 | Rotor-Brake |
| 12 | 114-8365 | 1 | Caliper-Mechanical, LH |
| 12:1 | 115-7847 | 1 | Parking Brake Pad Kit |
| 13 | 114-8366 | 1 | Caliper-Mechanical, RH |
| 13:1 | 115-7847 | 1 | Parking Brake Pad Kit |
| 14 | 127-7424 | 2 | Brake Caliper ASM |
| 15 | 119-9509 | 2 | Screw-Bleed |
| 16 | 117-4838 | 2 | Tire And Wheel ASM |
| 16:1 | 114-8259 | 1 | Wheel |
| 16:2 | 110-5132 | 1 | Tire |
| 16:3 | 232-27 | 1 | Stem-Valve |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 17 | 242-50 | 10 | Nut-Lug |
| 18 | 283-85 | 2 | Pin-Clevis |
| 20 | 3234-1 | 4 | Screw-HHF |
| 21 | 3234-24 | 8 | Screw-HHF |
| 22 | 323-6 | 6 | Screw-HH |
| 23 | 80-6990 | 4 | Washer-Hardened |
| 24 | 98-2939 | 4 | Screw-Cap |
| 25 | 112-6805 | 1 | Fender-RH |
| 26 | 112-6806 | 1 | Fender-LH |
| 27 | 3256-82 | 6 | Washer-Flat |
| 28 | 104-8300 | 2 | Nut-HF, NI |
| 29 | 322-5 | 6 | Screw-HH |
| 30 | 87-4470 | 1 | Bracket-Lock, Differential |
| 31 | 107-8749-0P | 1 | Bracket-Cable, Welded |
| 32 | 87-7960 | 1 | Lever-Shift |
| 33 | 87-7970 | 1 | Arm-Shift |
| 34 | 87-8250 | 1 | Plate-Arm, Shift |
| 35 | 87-6910 | 1 | Spring-Compression |
| 36 | 66-9302 | 1 | Screw-HHF Lock |
| 37 | 3256-4 | 1 | Washer-Flat |
| 38 | 3290-357 | 1 | Nut-HSF |

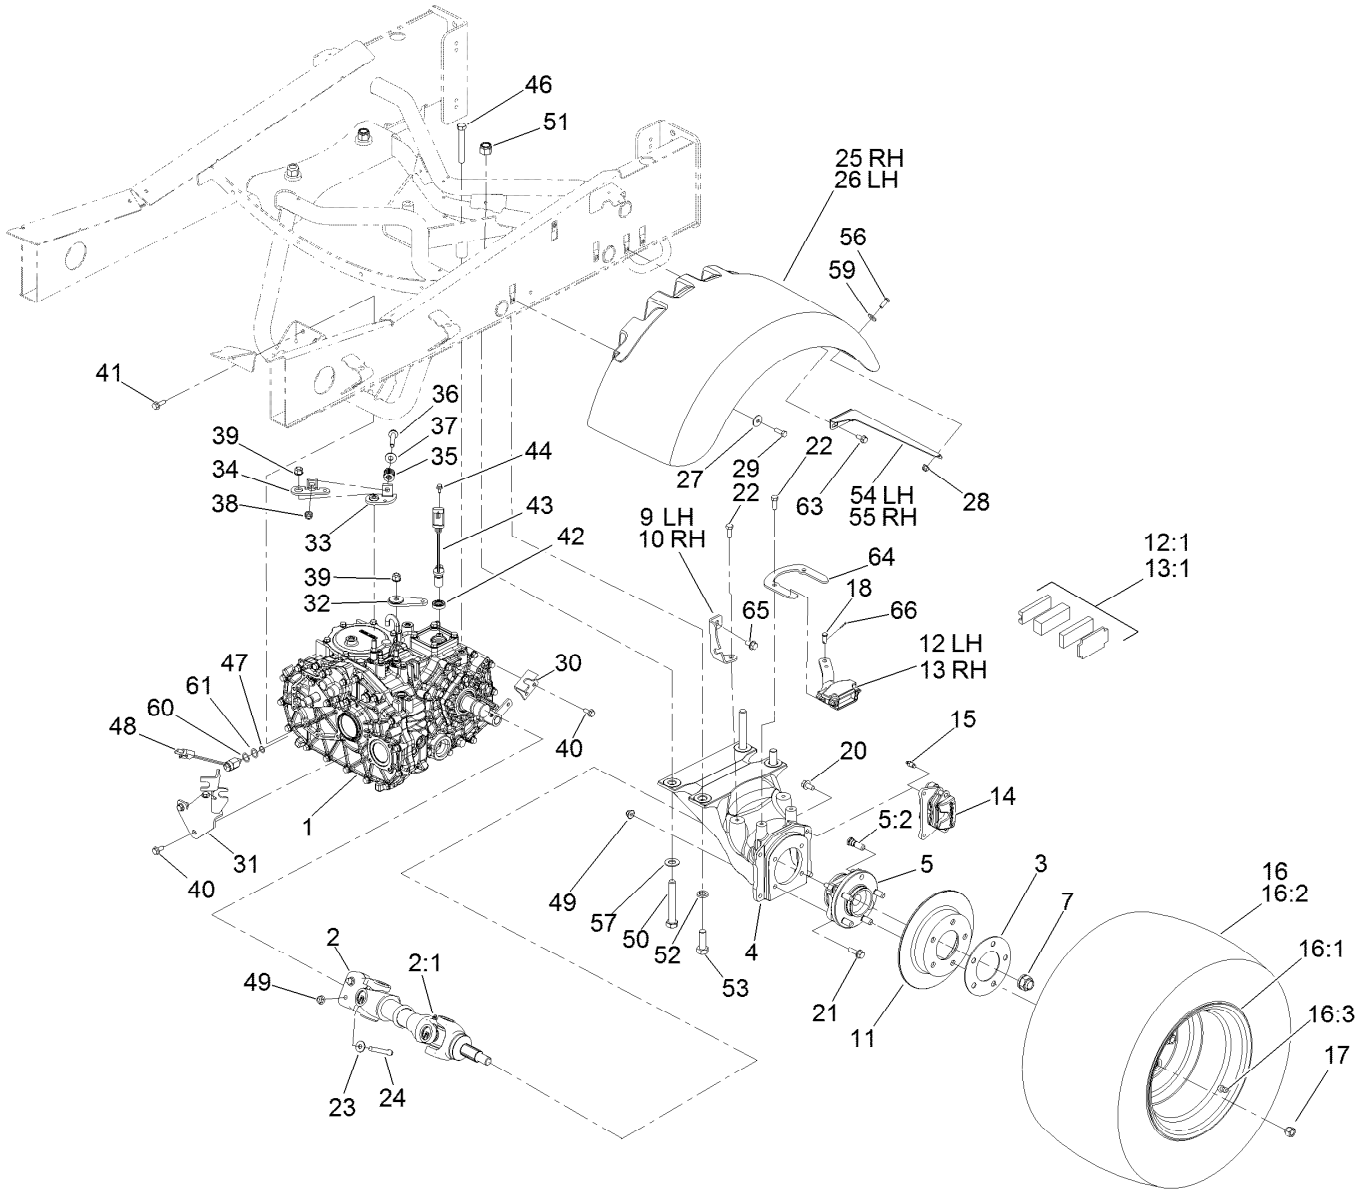


# Rear Drive Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 39 | 103-9511 | 2 | Nut-Flg |
| 40 | 98-7977 | 5 | Screw-HHF |
| 41 | 33104-025 | 4 | Screw-HHF |
| 42 | 92-3735 | 1 | Seal-Sensor, Oil |
| 43 | 120-4800 | 1 | Sensor-Geartooth |
| 44 | 33103-012 | 1 | Screw-HHF |
| 46 | 33116-090 | 2 | Screw-HH |
| 47 | 237-30 | 1 | O-Ring |
| 48 | 87-6710 | 1 | Switch-Transmission |
| 49 | 104-8301 | 12 | Nut-HF, NI |
| 50 | 327-29 | 4 | Screw-HH |
| 51 | 127-3958 | 4 | Nut-Lock, NI |
| 52 | 3253-23 | 4 | Washer-Lock |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 53 | 327-5 | 4 | Screw-HH |
| 54 | 125-7959-03 | 1 | Bracket-Fender |
| 55 | 125-7960-03 | 1 | Bracket-Fender |
| 56 | 3274-32 | 2 | Screw-HSBH |
| 57 | 3256-27 | 4 | Washer-Flat |
| 59 | 3256-71 | 2 | Washer-Flat |
| 60 | 125-8106 | 1 | Shim |
| 61 | 125-8107 | 1 | Shim |
| 63 | 3234-47 | 4 | Screw-HHF |
| 64 | 131-4257-0P | 2 | Support-Park Brake |
| 65 | 110-9380 | 2 | Screw-HWH |
| 66 | 3272-6 | 2 | Pin-Cotter |

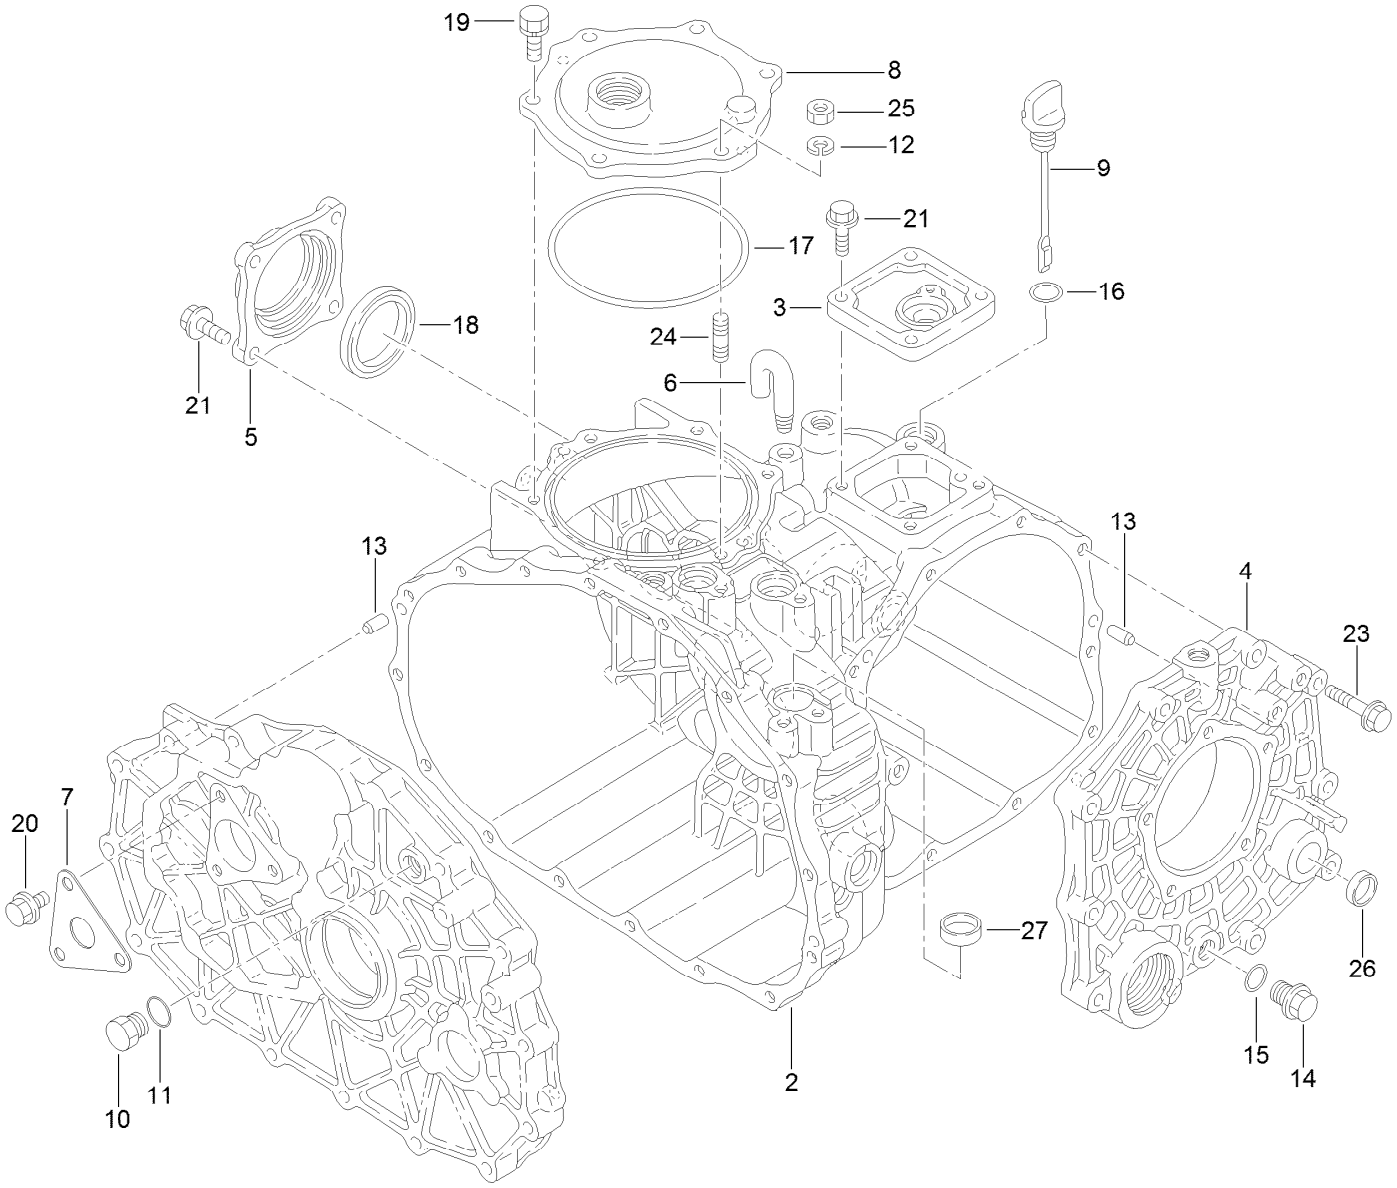


# Case Assembly
# Transaxle Assembly No. 120-7610


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 92-0651 | 1 | Case-Transmission |
| 3 | 92-3736 | 1 | Cover ASM |
| 4 | 92-0653 | 1 | Cover-Side |
| 5 | 92-0655 | 1 | Cover-Seal, Axle |
| 6 | 127-3925 | 1 | Breather |
| 7 | 100-8594 | 1 | Cover-Shaft, Input |
| 8 | 100-8595 | 1 | Cover-PTO |
| 9 | 92-0662 | 1 | Cap-Oil |
| 10 | 100-6924 | 1 | Plug |
| 11 | 100-6925 | 1 | Packing |
| 12 | 92-0762 | 1 | Washer-Spring |
| 13 | 92-0765 | 4 | Pin-Parallel |
| 14 | 92-0773 | 1 | Plug-Drain |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 15 | 92-0787 | 1 | O-Ring |
| 16 | 92-0788 | 1 | O-Ring |
| 17 | 92-0790 | 1 | O-Ring |
| 18 | 92-0793 | 1 | Seal-Oil |
| 19 | 92-0796 | 5 | Bolt |
| 20 | 100-6928 | 3 | Bolt |
| 21 | 33114-025 | 8 | Screw-HH |
| 23 | 33114-040 | 10 | Screw-HH |
| 24 | 92-0804 | 1 | Stud |
| 25 | 48-7930 | 1 | Nut |
| 26 | 100-6926 | 1 | Cap-Sealing |
| 27 | 100-6927 | 1 | Cap-Sealing |

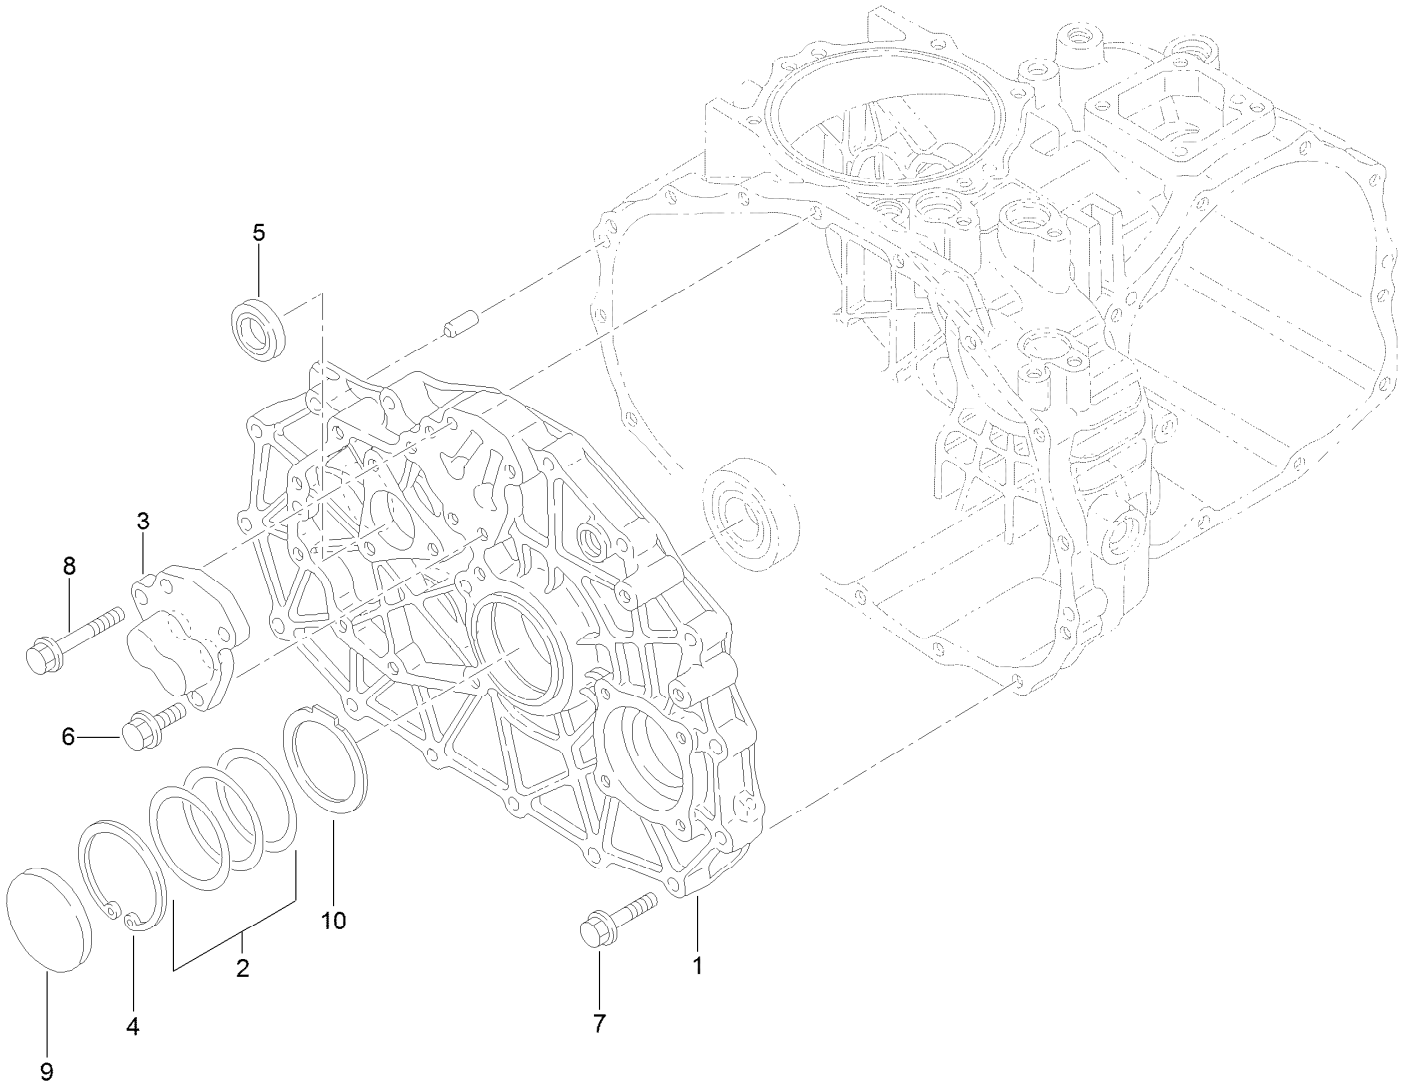



# Center Plate Assembly
# Transaxle Assembly No. 120-7610

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 100-4461 | 1 | Plate-Center |
| 2 | 100-4460 | 1 | Shim-Set |
| 3 | 92-0706 | 1 | Shaft-Fork |
| 4 | 92-0759 | 1 | Ring-Snap |
| 5 | 92-0791 | 1 | Seal-Oil |
| 6 | 33114-025 | 3 | Screw-HH |
| 7 | 33114-040 | 15 | Screw-HH |
| 8 | 48-7560 | 1 | Bolt-HH |
| 9 | 92-0807 | 1 | Cap-Sealing |
| 10 | 100-4465 | 1 | Shim (W/Tab) |

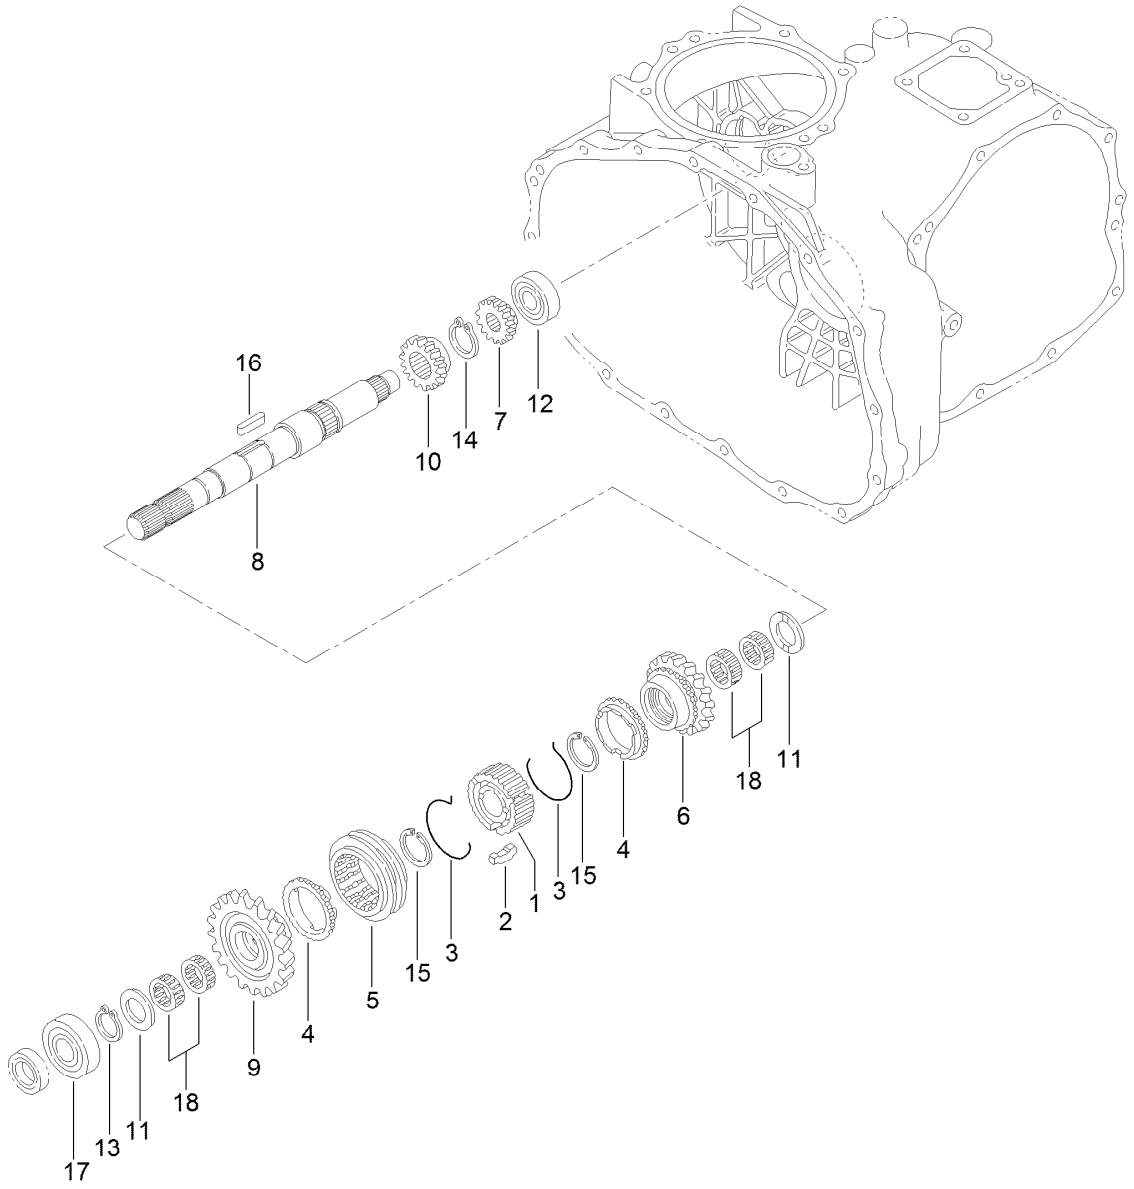


# Main Shaft Assembly
# Transaxle Assembly No. 120-7610


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 92-0664 | 1 | Hub-Synchro |
| 2 | 92-0665 | 3 | Key-Synchro |
| 3 | 92-0666 | 2 | Spring-Synchro |
| 4 | 92-0667 | 2 | Ring-Synchro |
| 5 | 92-0668 | 1 | Shifter-Synchro |
| 6 | 127-3926 | 1 | Gear-Main, 23T |
| 7 | 92-0673 | 1 | Gear-Main, 14 Tooth |
| 8 | 100-8596 | 1 | Shaft-Main |
| 9 | 108-3694 | 1 | Gear-Main, 36T |
| 10 | 100-8598 | 1 | Gear-Main, 20 Tooth |
| 11 | 92-0740 | 2 | Washer-Thrust |
| 12 | 92-0650 | 1 | Bearing |
| 13 | 92-0753 | 1 | Ring-Snap |
| 14 | 92-0754 | 1 | Ring-Snap |
| 15 | 92-0763 | 2 | Ring-Snap |
| 16 | 92-0772 | 1 | Key |
| 17 | 251-8 | 1 | Bearing-Ball |
| 18 | 92-0781 | 4 | Bearing-Needle |

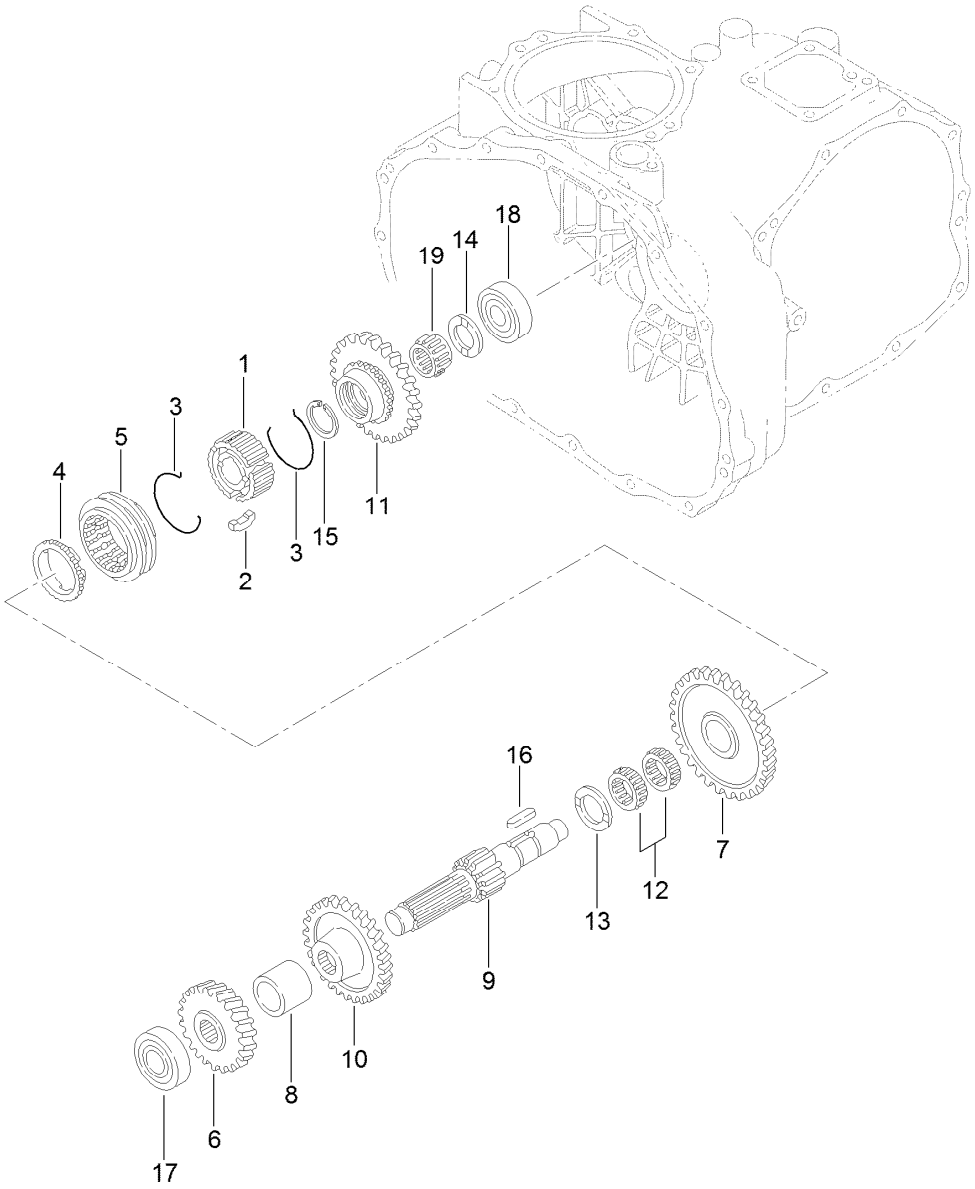


# Reduction Shaft Assembly
# Transaxle Assembly No. 120-7610


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 92-0664 | 1 | Hub-Synchro |
| 2 | 92-0665 | 3 | Key-Synchro |
| 3 | 92-0666 | 2 | Spring-Synchro |
| 4 | 92-0667 | 1 | Ring-Synchro |
| 5 | 92-0668 | 1 | Shifter-Synchro |
| 6 | 100-8599 | 1 | Gear-Red, 25 Tooth |
| 7 | 108-3697 | 1 | Gear-Reduction, 47T |
| 8 | 100-8601 | 1 | Collar |
| 9 | 127-3927 | 1 | Shaft-Reduction |
| 10 | 127-3928 | 1 | Gear-Reduction, 31T |

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 11 | 92-0819 | 1 | Gear-Reduction, 40 Tooth |
| 12 | 92-0681 | 2 | Bearing-Needle |
| 13 | 92-0682 | 1 | Washer-Thrust |
| 14 | 92-0740 | 1 | Washer-Thrust |
| 15 | 92-0763 | 1 | Ring-Snap |
| 16 | 92-0772 | 1 | Key |
| 17 | 105-7985 | 1 | Bearing |
| 18 | 92-0778 | 1 | Bearing |
| 19 | 92-0782 | 1 | Bearing-Needle |

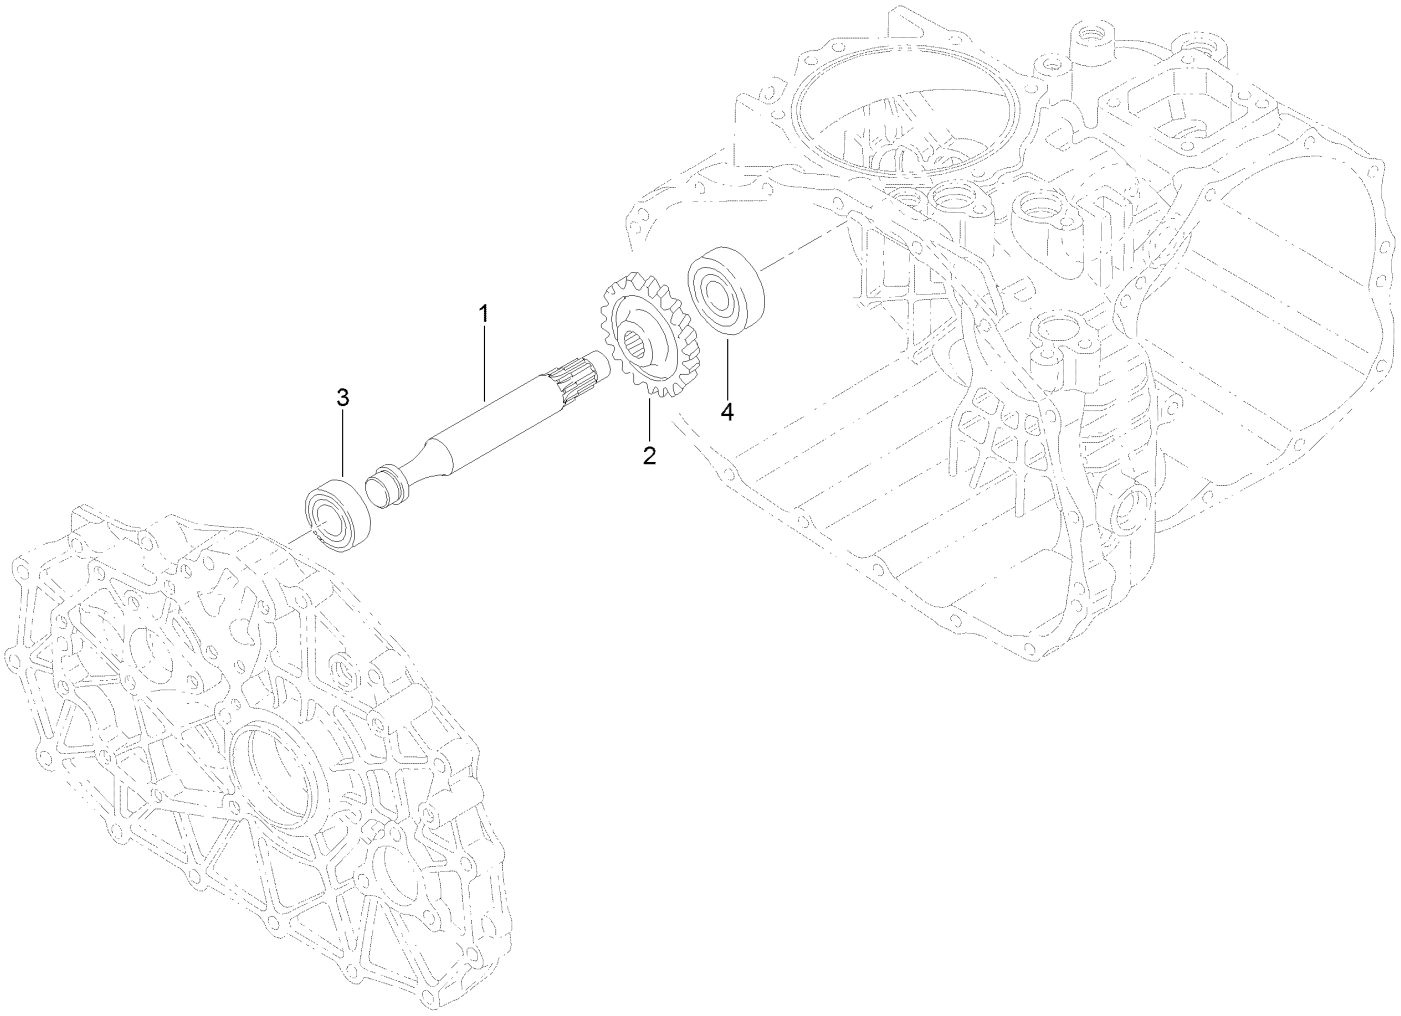


# Reverse Shaft Assembly
# Transaxle Assembly No. 120-7610


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 100-8602 | 1 | Shaft-Idler, Reverse |
| 2 | 92-0684 | 1 | Gear-Reverse, 33 Tooth |
| 3 | 251-346 | 1 | Bearing-Ball |
| 4 | 92-0778 | 1 | Bearing |

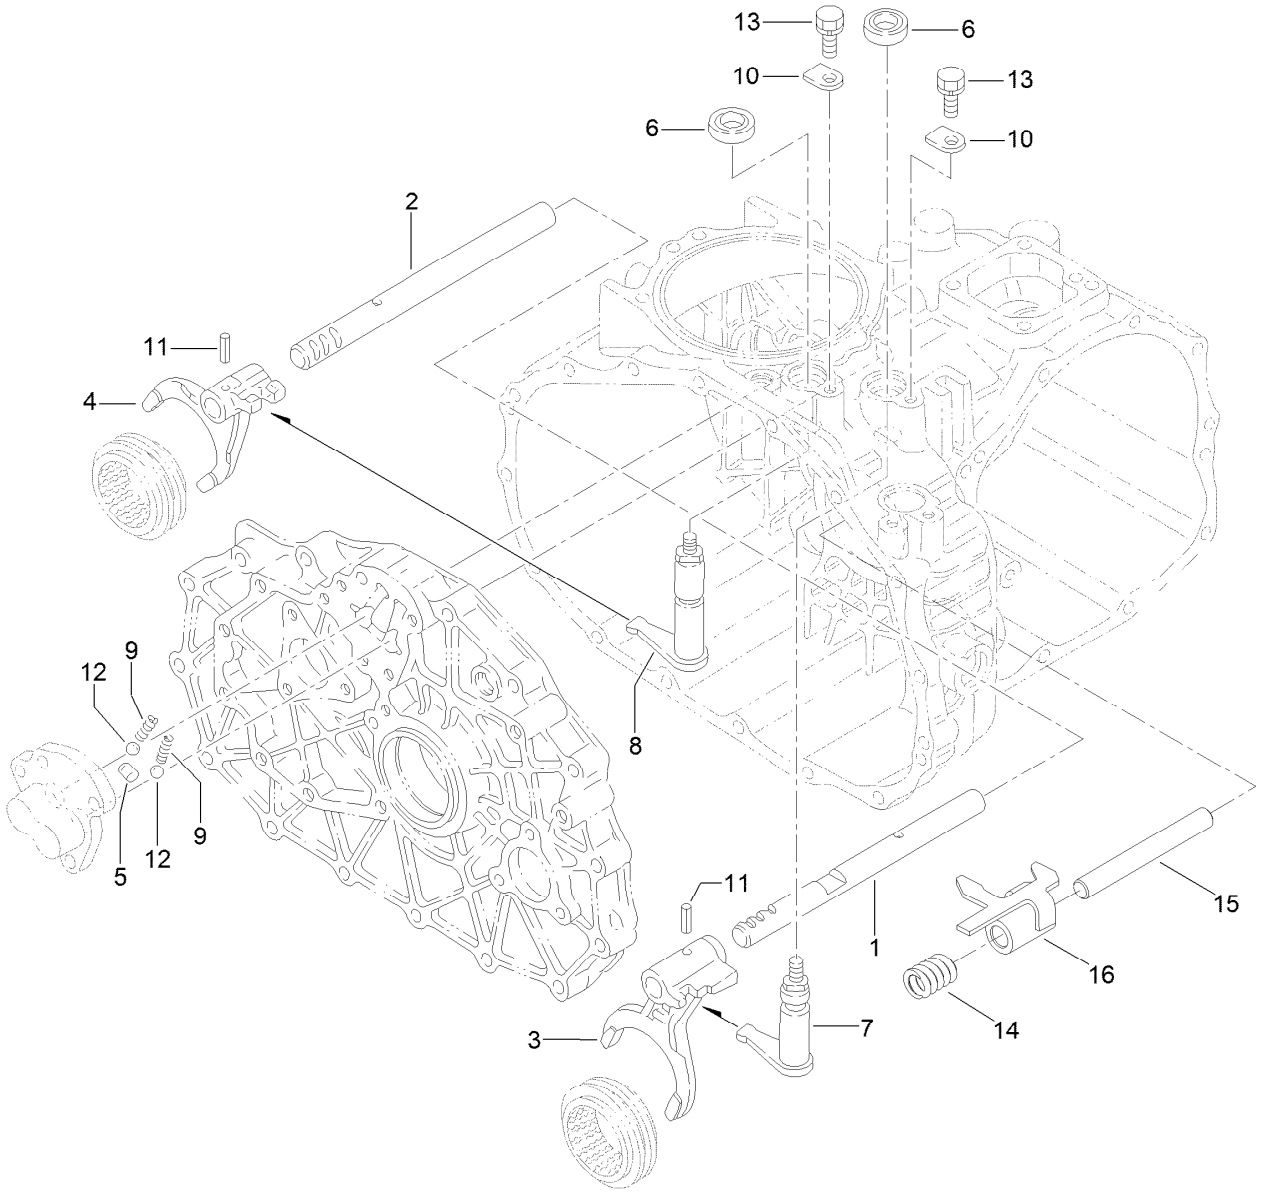


# Main Shift Assembly
# Transaxle Assembly No. 120-7610


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 92-0698 | 1 | Shaft-Fork |
| 2 | 92-0699 | 1 | Shaft-Fork |
| 3 | 92-0700 | 1 | Fork-Shift |
| 4 | 92-0701 | 1 | Fork-Shift |
| 5 | 92-0705 | 1 | Lock-Spindle |
| 6 | 92-0729 | 2 | Seal-Oil |
| 7 | 127-3929 | 1 | Arm-Shift |
| 8 | 127-3930 | 1 | Arm-Shift |
| 9 | 92-0731 | 2 | Spring |
| 10 | 92-0732 | 2 | Plate-Keeper |
| 11 | 92-0769 | 2 | Pin-Roll |
| 12 | 92-0785 | 2 | Ball-Steel |
| 13 | 33114-016 | 2 | Screw-HH |
| 14 | 127-3931 | 1 | Spring-Switch ● |
| 15 | 127-3932 | 1 | Shaft-Switch ● |
| 16 | 127-3933 | 1 | Plate-Switch ● |

● Not illustrated

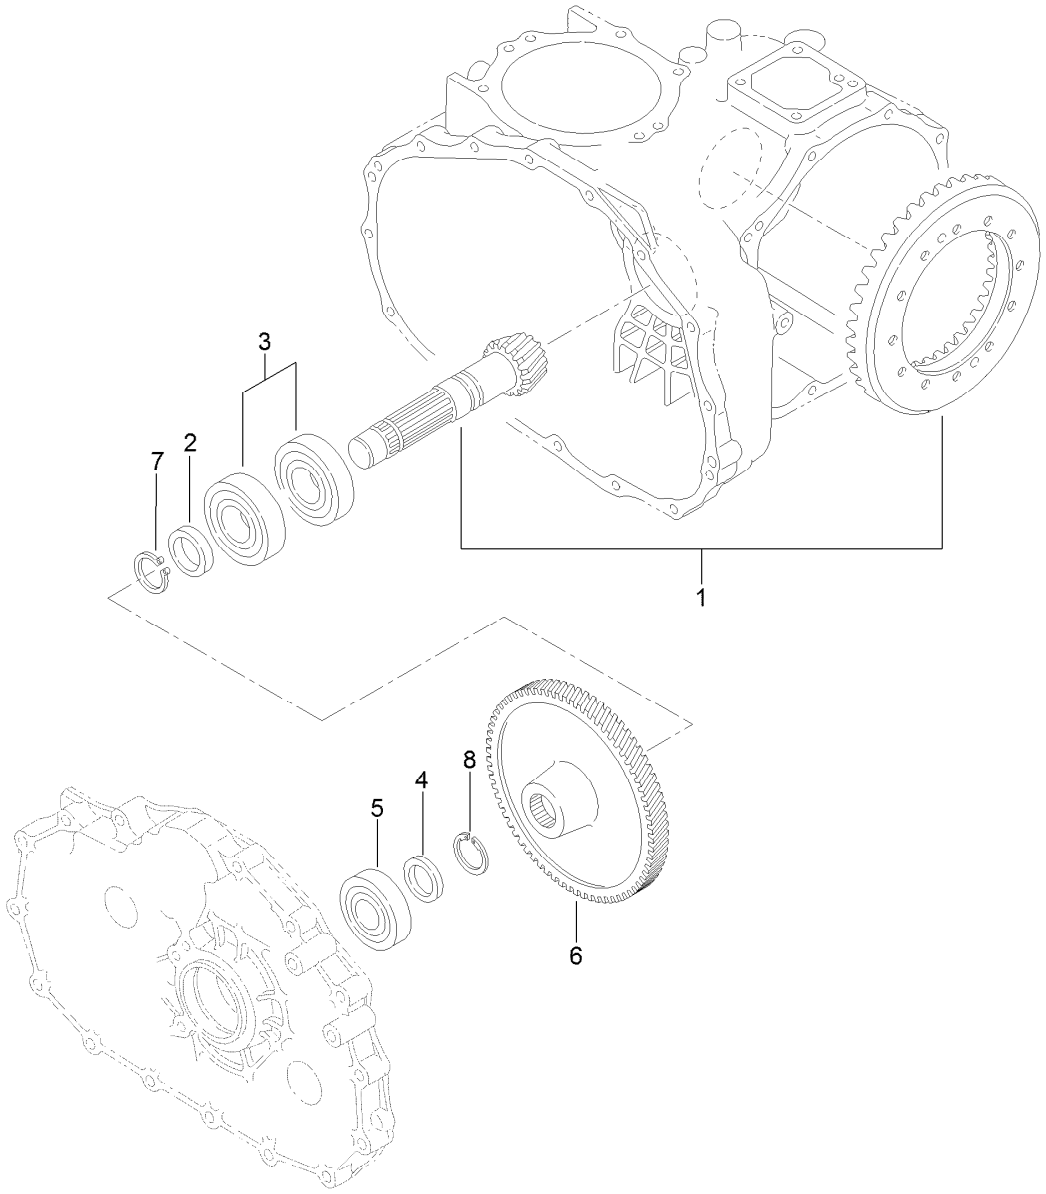



# Counter Shaft Assembly
# Transaxle Assembly No. 120-7610

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 92-0710 | 1 | Gear-Ring |
| 2 | 92-0713 | 1 | Collar |
| 3 | 92-0714 | 2 | Bearing |
| 4 | 92-0716 | 1 | Collar |
| 5 | 92-0712 | 1 | Bearing-Ball |
| 6 | 100-8603 | 1 | Gear-Count |
| 7 | 92-0755 | 1 | Ring-Snap |
| 8 | 92-0764 | 1 | Ring-Snap |

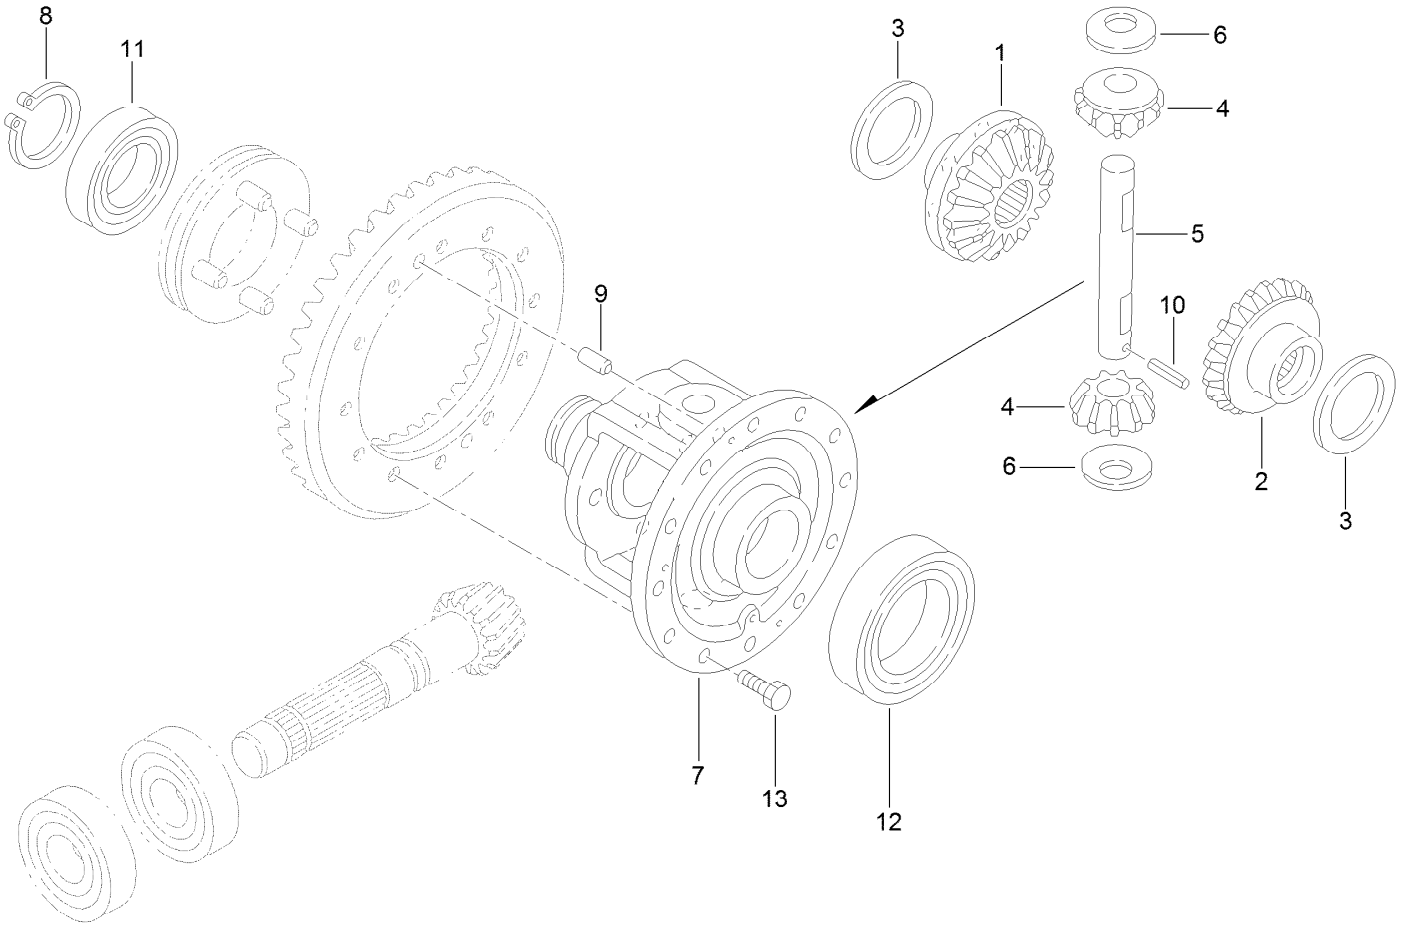



# Differential Gear Assembly
# Transaxle Assembly No. 120-7610

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 92-0745 | 1 | Gear-Side, LH |
| 2 | 92-0746 | 1 | Gear-Side, RH |
| 3 | 92-0747 | 2 | Side-Gear, Left Inner |
| 4 | 92-0748 | 2 | Pinion-Differential |
| 5 | 92-0749 | 1 | Shaft-Pinion |
| 6 | 92-0750 | 2 | Washer |
| 7 | 92-0720 | 1 | Case-Differential |
| 8 | 92-0756 | 1 | Ring-Snap |
| 9 | 92-0765 | 2 | Pin-Parallel |
| 10 | 92-0768 | 1 | Pin-Roll, Spring |
| 11 | 92-0775 | 1 | Bearing |
| 12 | 92-0776 | 1 | Bearing |
| 13 | 92-0803 | 12 | Bolt |

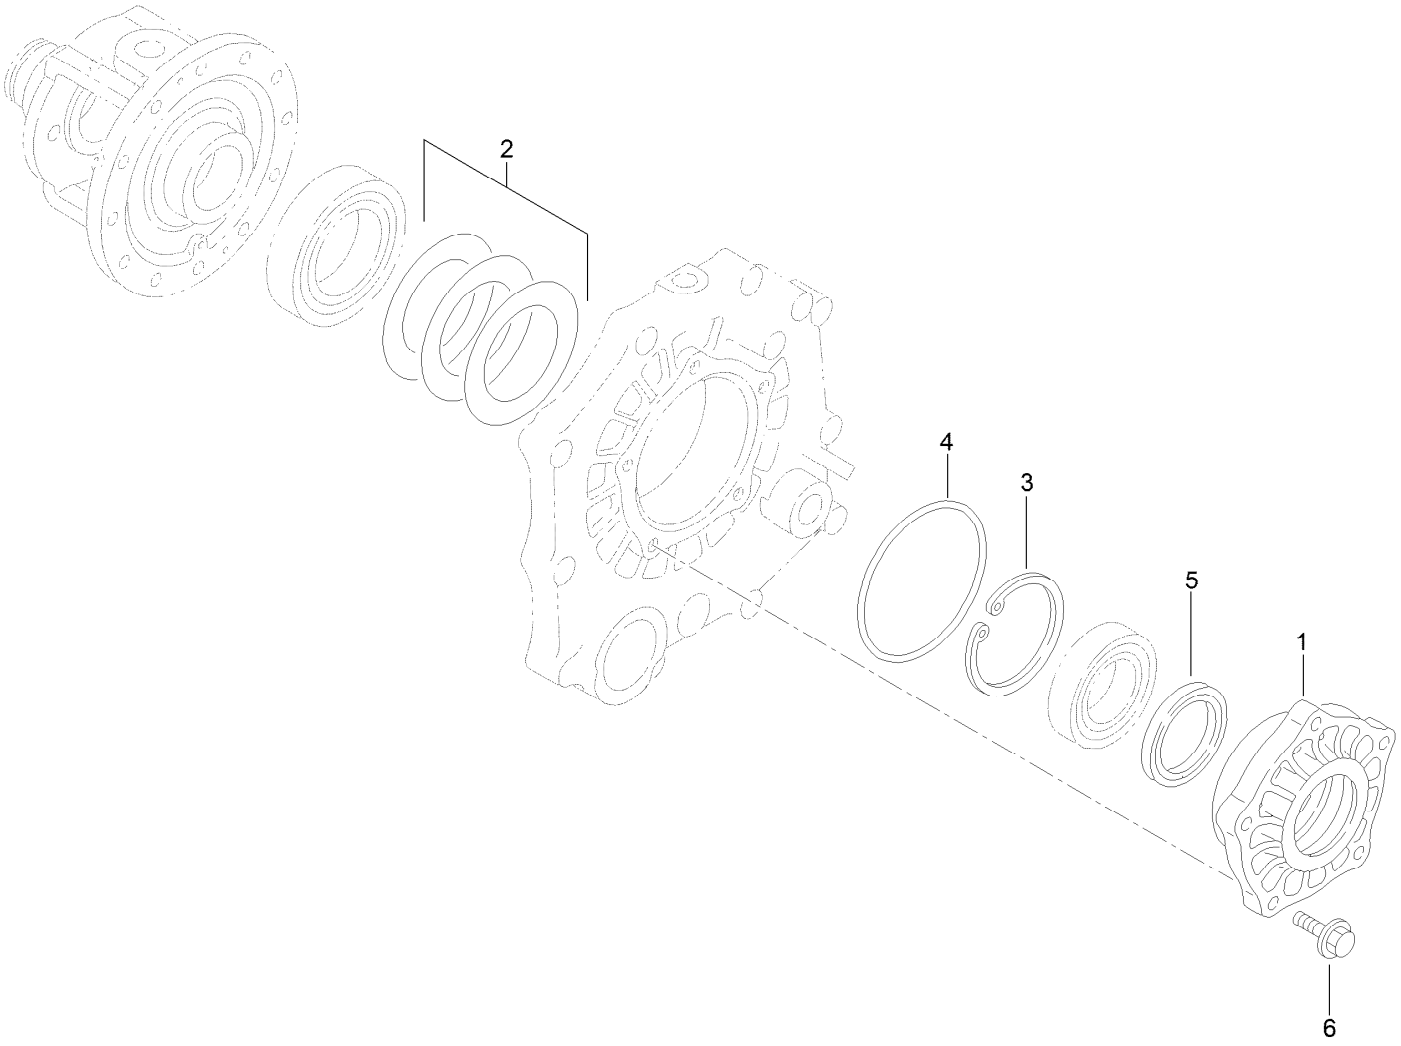



# Differential Carrier Assembly
# Transaxle Assembly No. 120-7610

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 92-0654 | 1 | Carrier-Differential |
| 2 | 92-0809 | 1 | Set-Shim |
| 3 | 92-0760 | 1 | Ring-Snap |
| 4 | 92-0789 | 1 | O-Ring |
| 5 | 92-0793 | 1 | Seal-Oil |
| 6 | 48-7730 | 5 | Screw-Cap, HH |

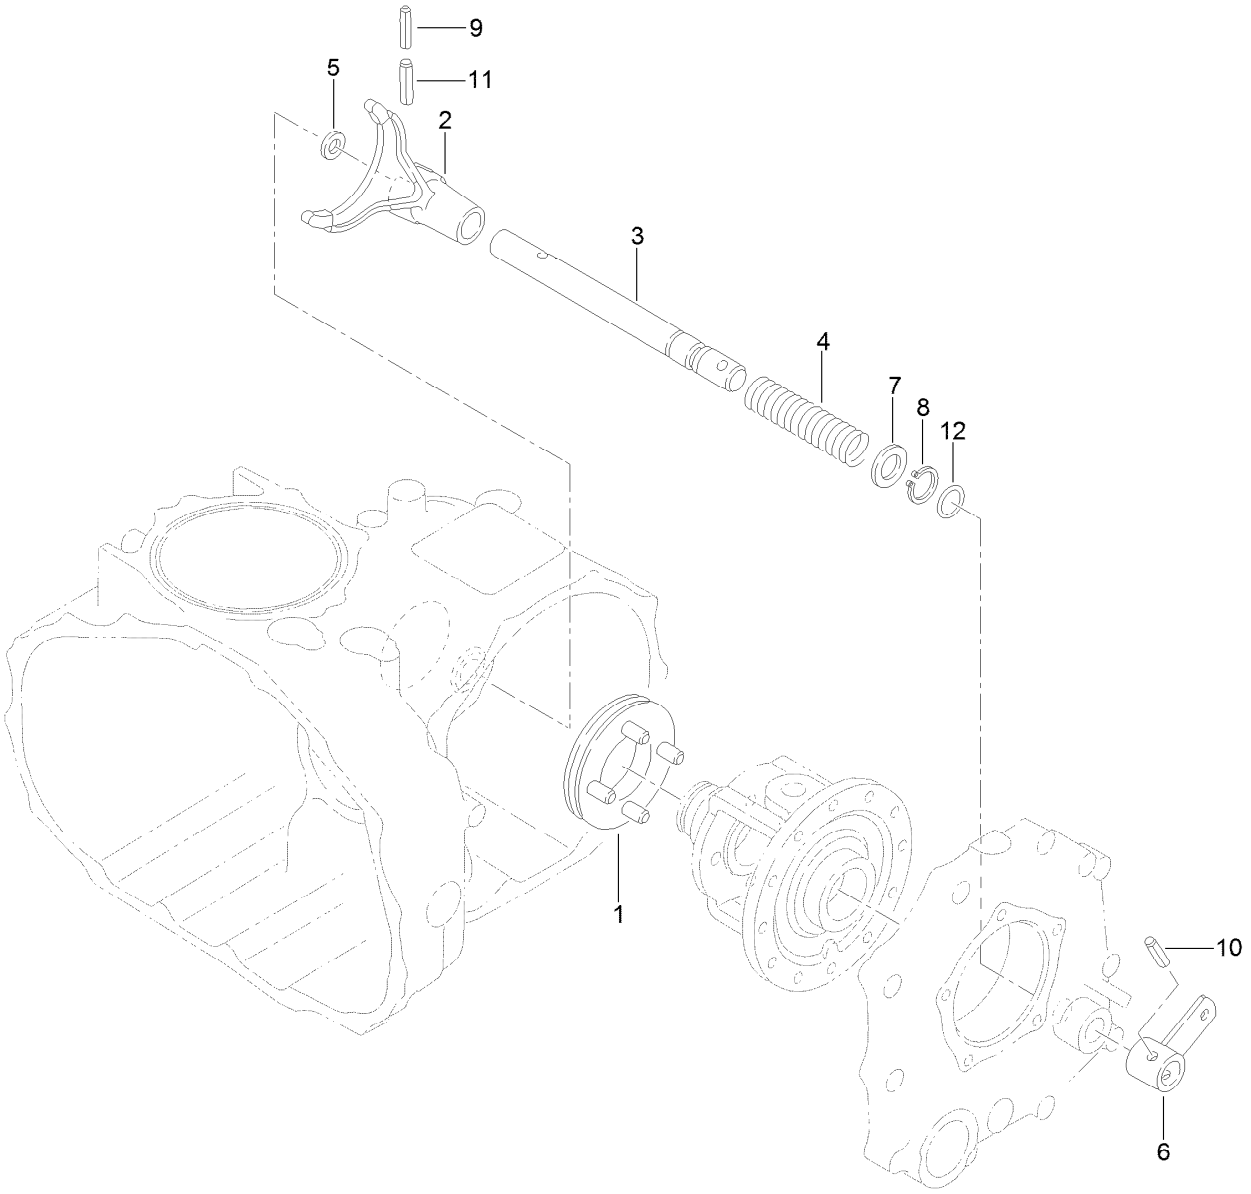



# Differential Lock Assembly
# Transaxle Assembly No. 120-7610

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 92-0730 | 1 | Slider-Differential, Lock |
| 2 | 92-0721 | 1 | Fork-Lock, Differential |
| 3 | 92-0722 | 1 | Shaft-Fork, Lock Differential |
| 4 | 92-0723 | 1 | Spring-Lock, Differential |
| 5 | 92-0744 | 1 | Washer |
| 6 | 92-0724 | 1 | Arm-Lock, Differential |
| 7 | 92-0733 | 1 | Washer |
| 8 | 92-0753 | 1 | Ring-Snap |
| 9 | 92-0768 | 1 | Pin-Roll, Spring |
| 10 | 92-0770 | 1 | Pin-Roll, Spring |
| 11 | 92-0771 | 1 | Pin-Roll, Spring |
| 12 | 92-0787 | 1 | O-Ring |

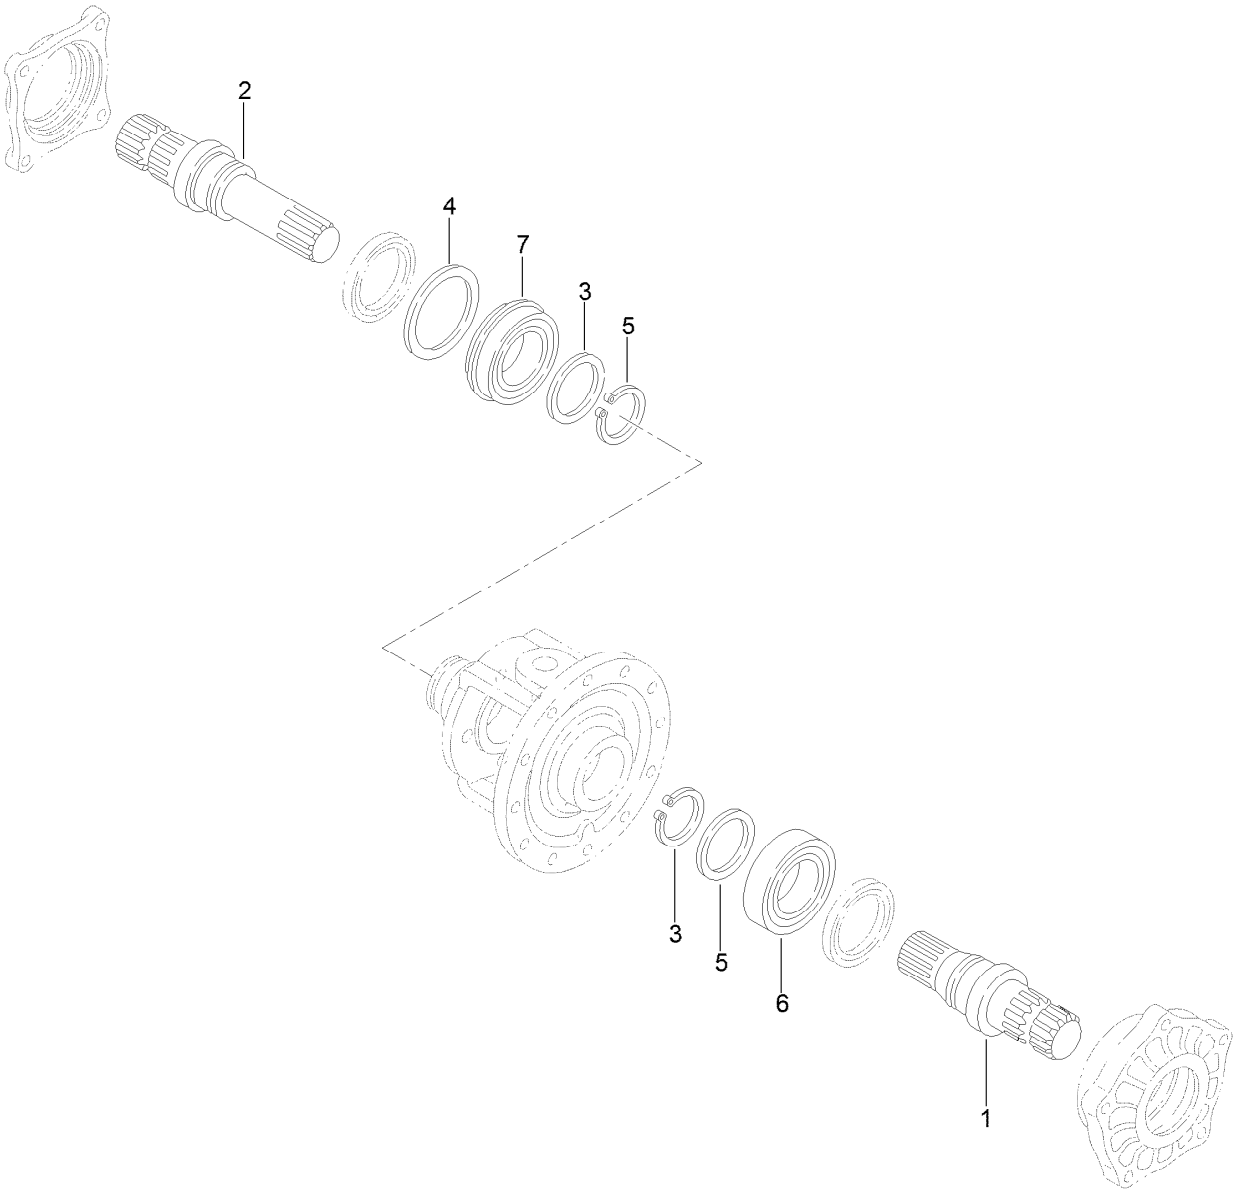



# Axle Shaft Assembly
# Transaxle Assembly No. 120-7610

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 92-0725 | 1 | Shaft-Axle, Left |
| 2 | 92-0726 | 1 | Shaft-Axle, Right |
| 3 | 92-0727 | 2 | Washer |
| 4 | 92-0728 | 1 | Washer |
| 5 | 92-0756 | 2 | Ring-Snap |
| 6 | 92-0775 | 1 | Bearing |
| 7 | 92-0780 | 1 | Bearing |

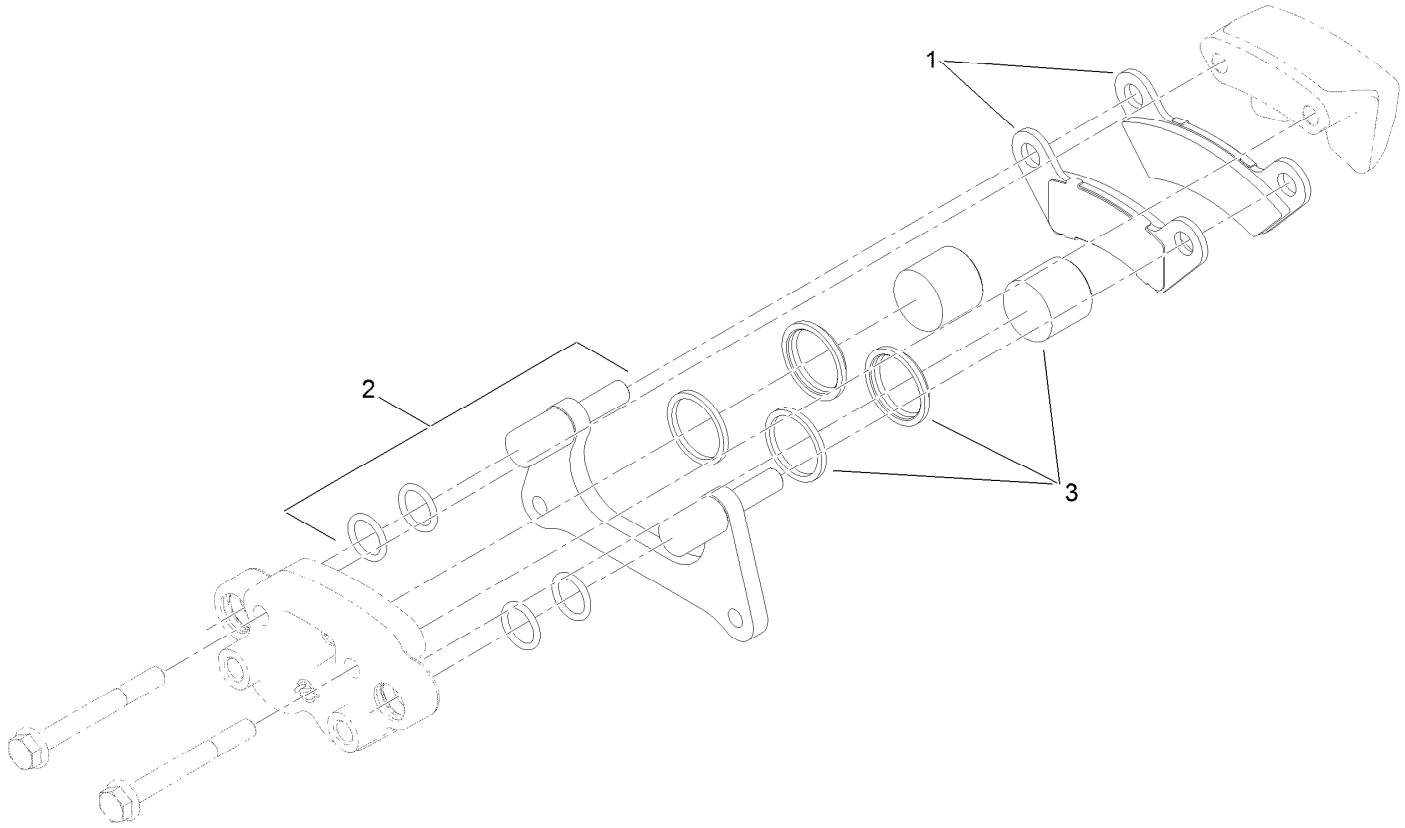


# Brake Caliper Assembly No. 127-7424


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 133-0628 | 1 | Brake Pad Kit |
| 2 | 119-9511 | 1 | Bracket Kit |
| 3 | 133-0614 | 1 | Piston Kit |

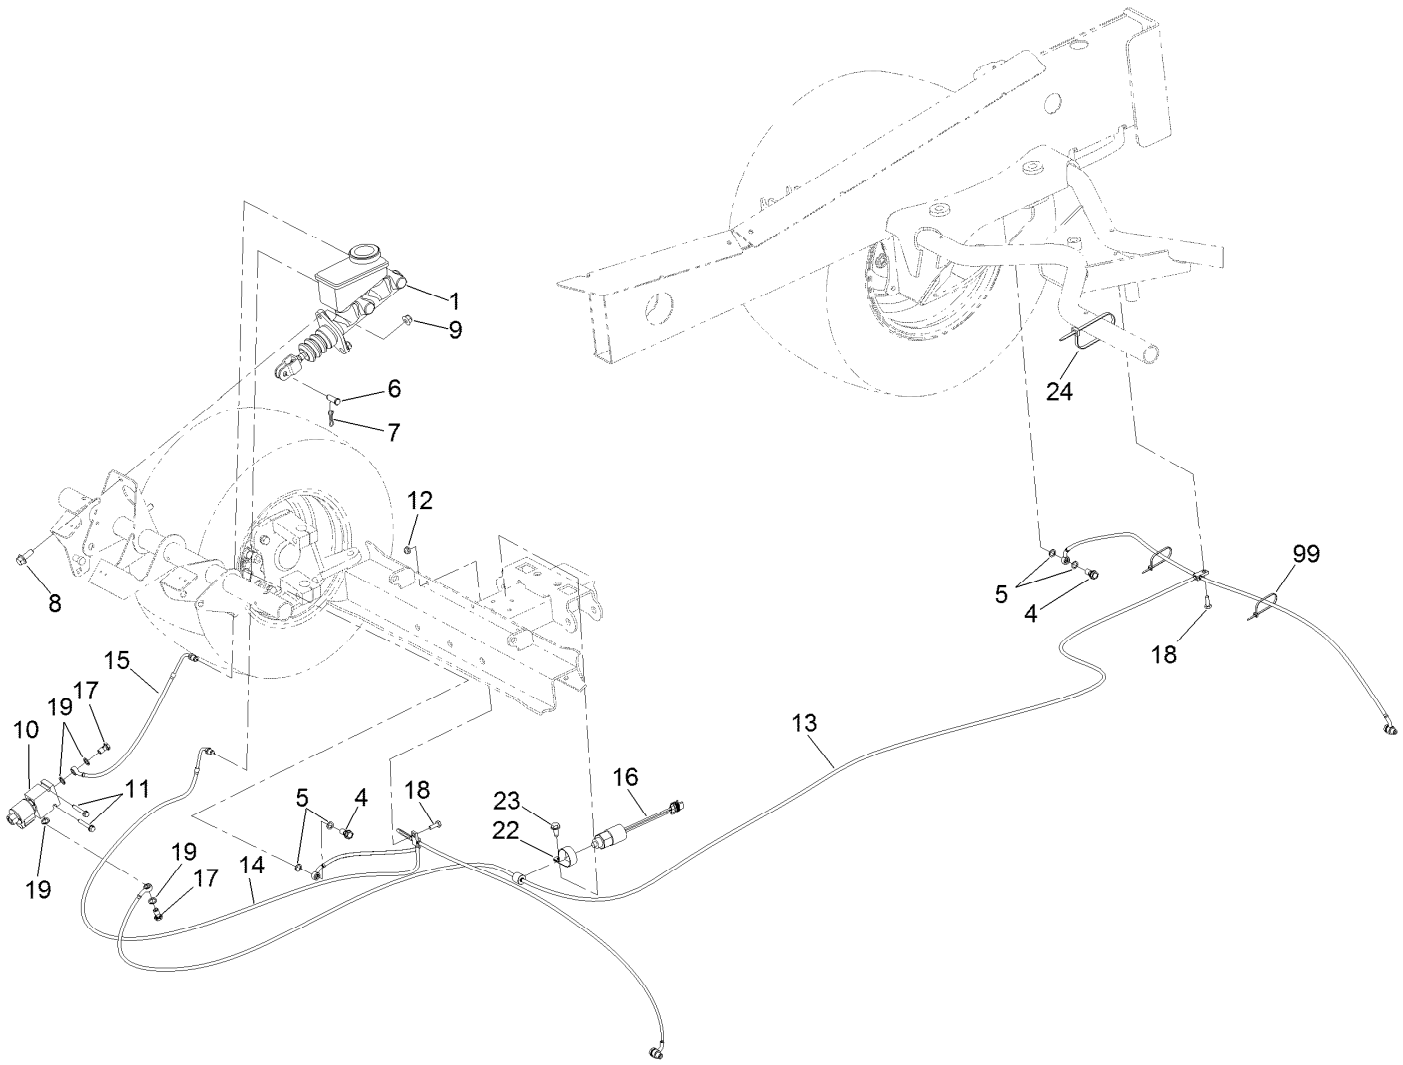


# Brake Hydraulic Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 104-6782 | 1 | Master Cylinder ASM |
| 4 | 120-4875 | 4 | Bolt-Flange, Banjo |
| 5 | 115-2341 | 8 | Washer-Banjo |
| 6 | 283-2 | 1 | Pin-Clevis |
| 7 | 119-1415 | 1 | Pin-Cotter, Locking |
| 8 | 3234-11 | 2 | Screw-HHF |
| 9 | 104-8301 | 2 | Nut-HF, NI |
| 10 | 125-0900 | 1 | Valve-Brake Hold |
| 11 | 94-2691 | 2 | Screw-HWH Taptite |
| 12 | 104-7201 | 1 | Nut-HF, NI |
| 13 | 125-7998 | 1 | Line-Brake, Rear |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 14 | 125-7999 | 1 | Line-Brake, Front |
| 15 | 125-8000 | 1 | Line-Brake, Solenoid |
| 16 | 130-7148 | 1 | Switch-Pressure |
| 17 | 125-8005 | 2 | Bolt-Banjo |
| 18 | 321-4 | 2 | Screw-HH |
| 19 | 127-3914 | 4 | Washer-Banjo |
| 22 | 2412-74 | 1 | R-Clamp |
| 23 | 32104-32 | 1 | Screw-HWH |
| 24 | 3290-378 | 3 | Tie-Cable |
| 99 | 3290-379 | 6 | Tie-Cable |

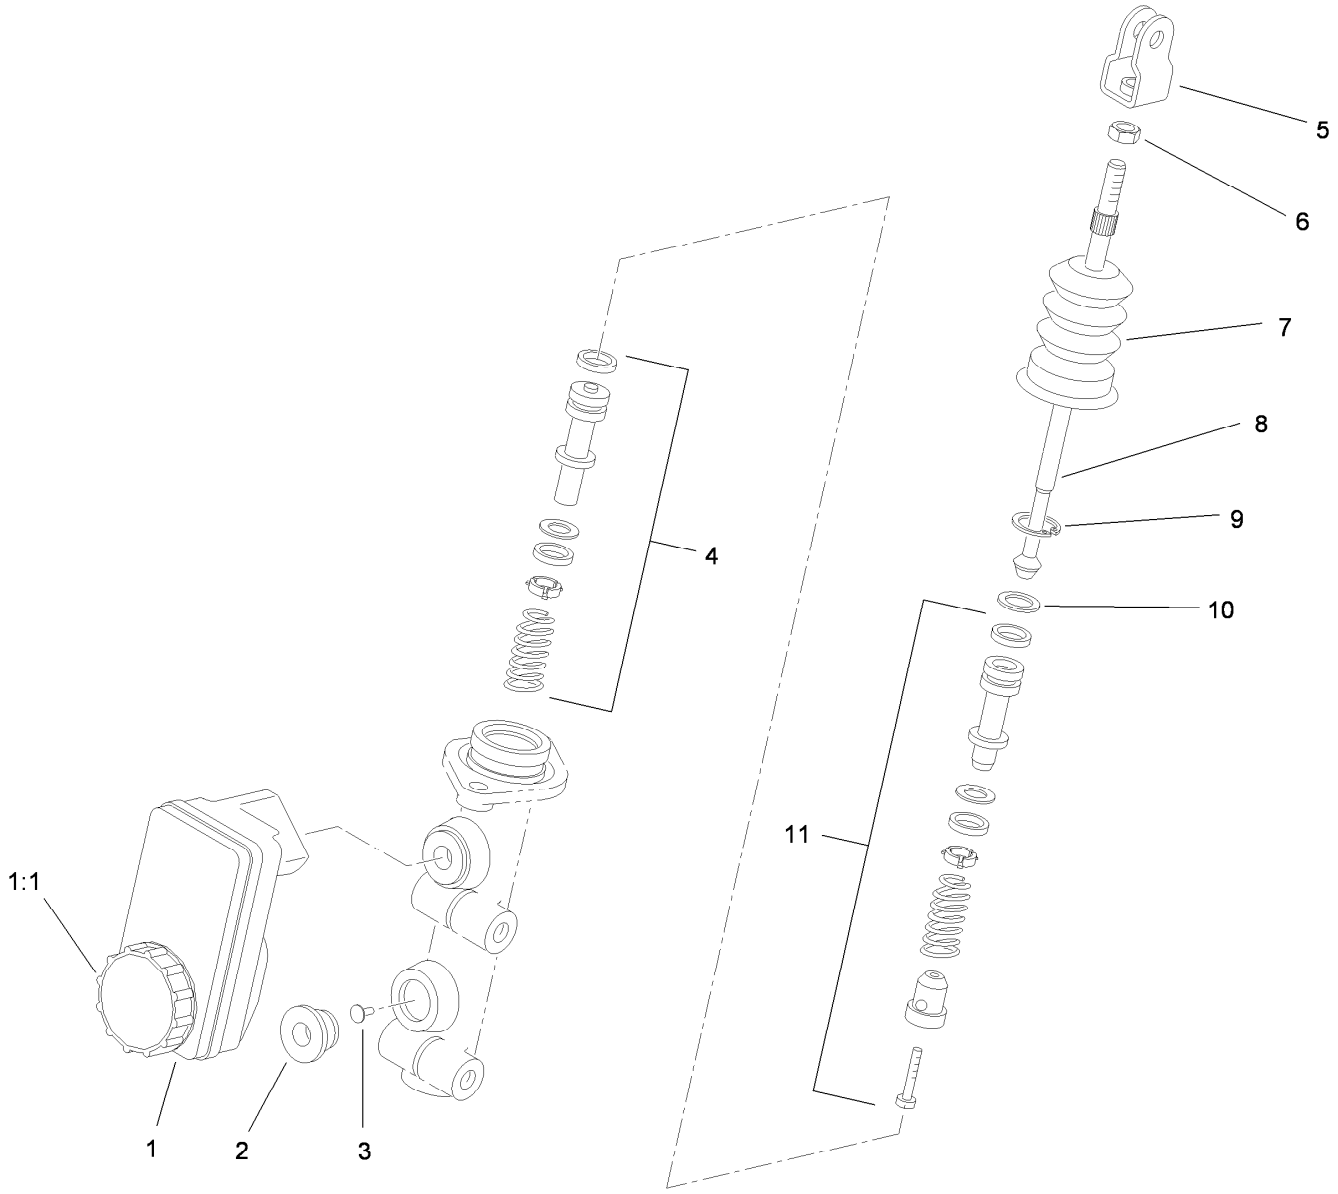


# Master Cylinder Assembly No. 104-6782

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 104-6845 | 1 | Reservoir ASM |
| 1:1 | 92-4112 | 1 | Cap ASM |
| 2 | 93-8971 | 2 | Seal-Port, Flange |
| 3 | 92-4103 | 1 | Pin-Stop |
| 4 | 92-4102 | 1 | Secondary Piston ASM |
| 5 | 92-4110 | 1 | Clevis |
| 6 | 21-0360 | 1 | Nut-Hex |
| 7 | 94-5209 | 1 | Cover-Dust |
| 8 | 94-5210 | 1 | Rod-Push |
| 9 | 92-4109 | 1 | Ring-Snap |
| 10 | 92-4108 | 1 | Retainer-Washer |
| 11 | 92-4101 | 1 | Primary Piston ASM |

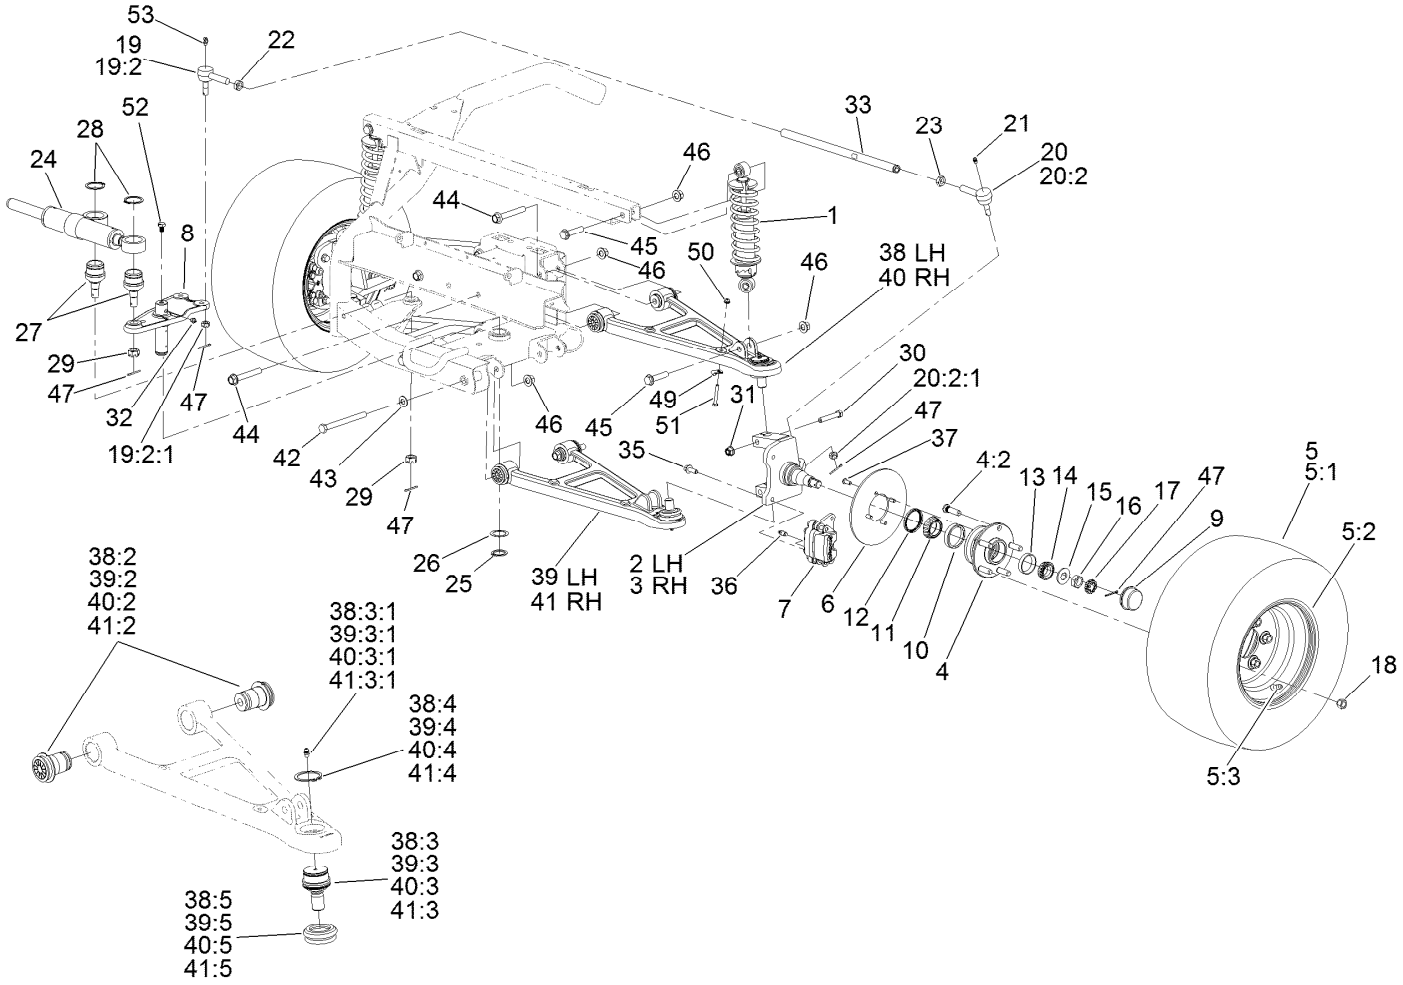



# Front Suspension Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 137-4287 | 2 | Coil Over Shock ASM |
| 2 | 125-0730-03 | 1 | Spindle-LH |
| 3 | 125-0723-03 | 1 | Spindle-RH |
| 4 | 117-8071 | 2 | Hub ASM |
| 4:2 | 10-6830 | 5 | Stud-Type, Drive |
| 5 | 125-0763 | 2 | Tire And Wheel ASM |
| 5:1 | 120-7639 | 1 | Tire |
| 5:2 | 125-0764 | 1 | Wheel |
| 5:3 | 232-27 | 1 | Stem-Valve |
| 6 | 136-6295 | 2 | Rotor-Brake |
| 7 | 127-7424 | 2 | Brake Caliper ASM |
| 8 | 137-1602 | 1 | Pitman Arm (Mach) |
| 9 | 241-119 | 2 | Cap-Dust |
| 10 | 254-107 | 2 | Cup-Bearing, Tapered |
| 11 | 254-106 | 2 | Cone-Bearing, Tapered |
| 12 | 108-7019 | 2 | Seal-Shaft |
| 13 | 254-72 | 2 | Bearing-Cup, Tapered |
| 14 | 254-94 | 2 | Bearing-Cone, Tapered |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 15 | 93-0309 | 2 | Washer-Tab |
| 16 | 3220-7 | 2 | Nut-Jam |
| 17 | 93-0307 | 2 | Nut-Lock, Retainer |
| 18 | 242-50 | 10 | Nut-Lug |
| 19 | 112772-03 | 2 | Joint-Ball, RH |
| 19:2 | | 1 | Socket-Balljoint ● |
| 19:2:1 | 915031 | 1 | Nut |
| 20 | 112771-03 | 2 | Joint-Ball, LH |
| 20:2 | | 1 | Socket-Balljoint ● |
| 20:2:1 | 915031 | 1 | Nut |
| 21 | 302-5 | 2 | Fitting-Grease |
| 22 | 3220-11 | 2 | Nut-Jam |
| 23 | 3218-21 | 2 | Nut-Jam LH |
| 24 | 125-0720 | 1 | Cylinder-Hydraulic, Steering |
| 25 | 32151-77 | 1 | Ring-Retaining, External |
| 26 | 76-2980 | 1 | Washer-Thrust |
| 27 | 117-9875 | 2 | Joint-Ball |
| 28 | 32151-104 | 2 | Ring-Retaining, External |

● Not serviced separately

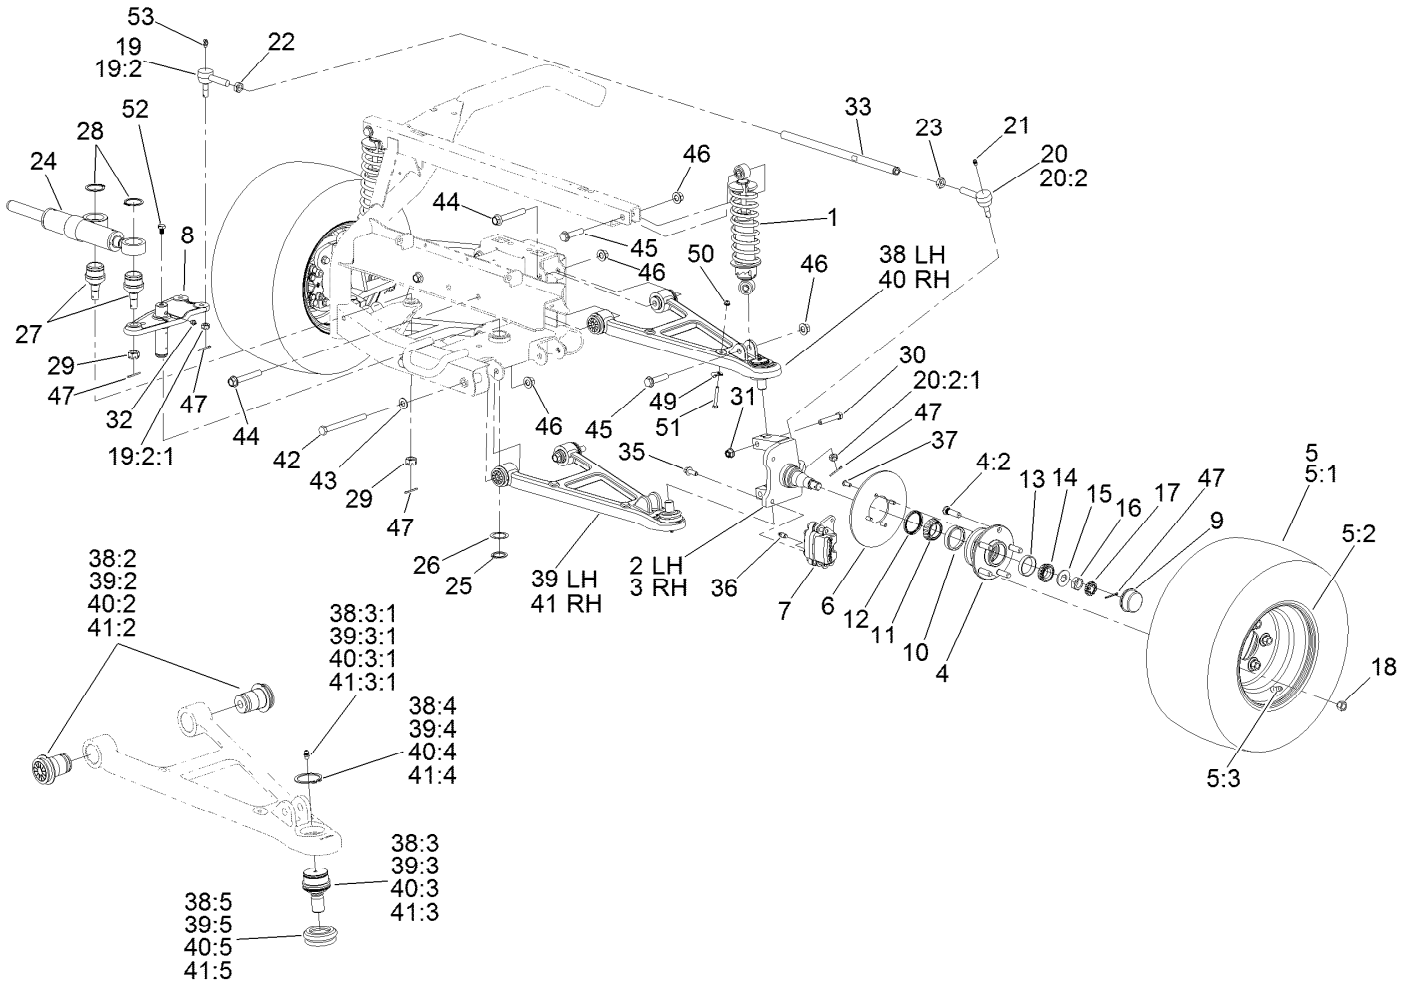



# Front Suspension Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 29 | 32136-2 | 2 | Nut-SHH |
| 30 | 324-10 | 4 | Screw-HH |
| 31 | 114-8417 | 4 | Nut-HF, NI |
| 32 | 302-52 | 1 | Fitting-Grease |
| 33 | 115-7654 | 2 | Tie Rod |
| 35 | 3234-11 | 4 | Screw-HHF |
| 36 | 119-9509 | 2 | Screw-Bleed |
| 37 | 3274-55 | 8 | Screw-HSBH |
| 38 | 125-8021 | 1 | LH Upper Control Arm ASM |
| 38:2 | 87-1450 | 2 | Bushing-Flange |
| 38:3 | 115-2165 | 1 | Ball Joint |
| 38:3:1 | 302-5 | 1 | Fitting-Grease |
| 38:4 | 32151-104 | 1 | Ring-Retaining, External |
| 38:5 | 87-2420 | 1 | Seal-Joint, Ball |
| 39 | 125-8022 | 1 | LH Lower Control Arm ASM |
| 39:2 | 87-1450 | 2 | Bushing-Flange |
| 39:3 | 115-2165 | 1 | Ball Joint |
| 39:3:1 | 302-5 | 1 | Fitting-Grease |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 39:4 | 32151-104 | 1 | Ring-Retaining, External |
| 39:5 | 87-2420 | 1 | Seal-Joint, Ball |
| 40 | 125-8023 | 1 | RH Upper Control Arm ASM |
| 40:2 | 87-1450 | 2 | Bushing-Flange |
| 40:3 | 115-2165 | 1 | Ball Joint |
| 40:3:1 | 302-5 | 1 | Fitting-Grease |
| 40:4 | 32151-104 | 1 | Ring-Retaining, External |
| 40:5 | 87-2420 | 1 | Seal-Joint, Ball |
| 41 | 125-8024 | 1 | RH Lower Control Arm ASM |
| 41:2 | 87-1450 | 2 | Bushing-Flange |
| 41:3 | 115-2165 | 1 | Ball Joint |
| 41:3:1 | 302-5 | 1 | Fitting-Grease |
| 41:4 | 32151-104 | 1 | Ring-Retaining, External |
| 41:5 | 87-2420 | 1 | Seal-Joint, Ball |
| 42 | 325-22 | 2 | Screw-HH |
| 43 | 3256-26 | 2 | Washer-Flat |
| 44 | 114-8419 | 6 | Screw-HHF |
| 45 | 3234-46 | 4 | Screw-HHF |


● Not serviced separately

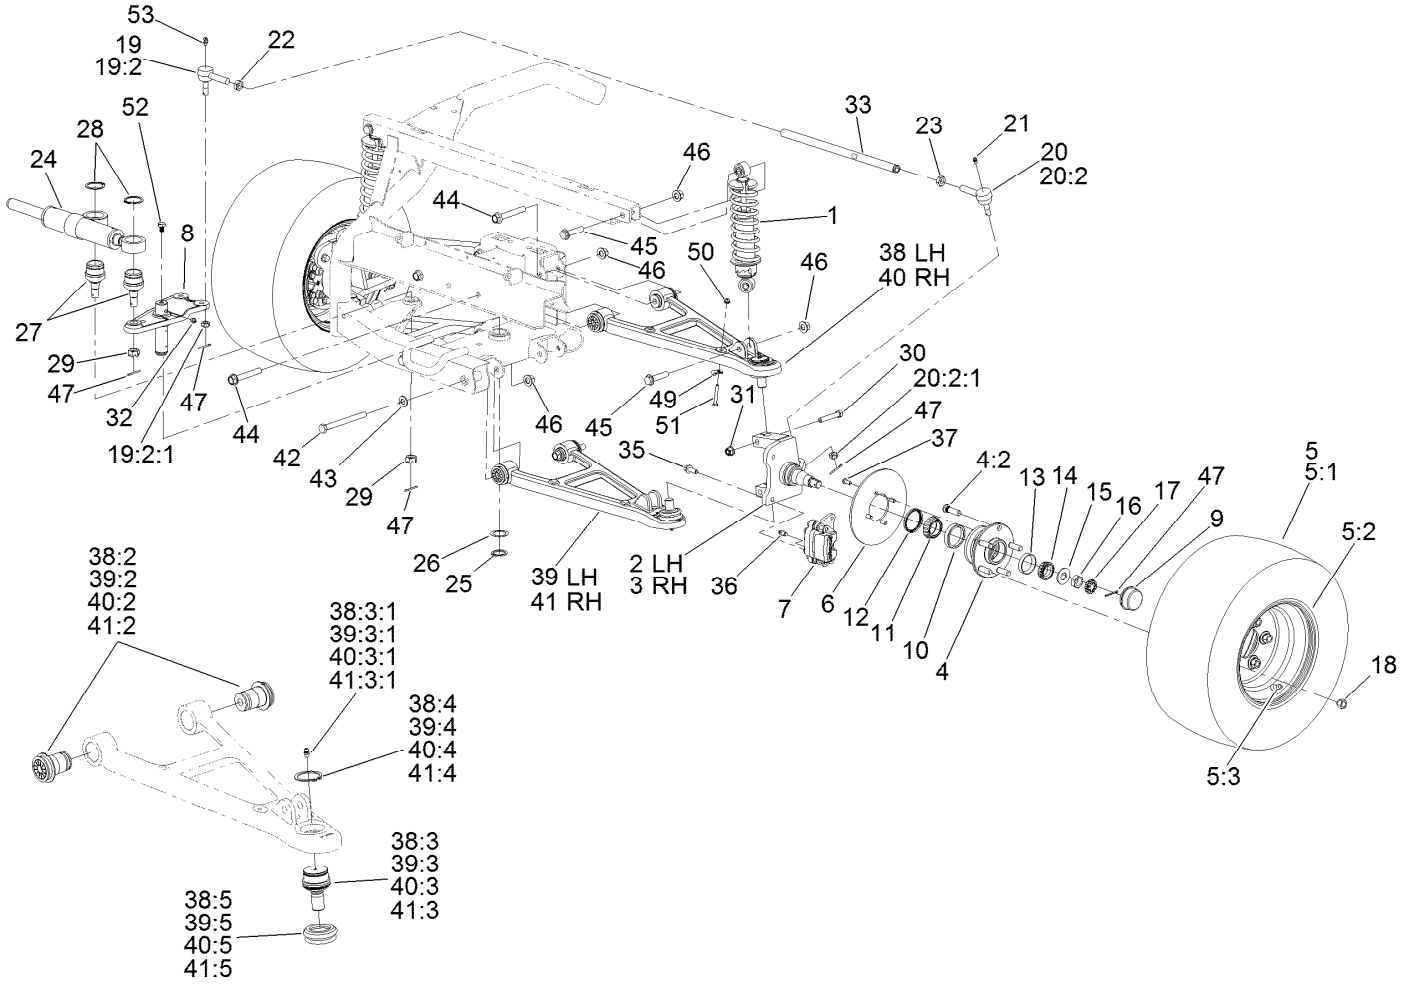


# Front Suspension Assembly (continued)


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 46 | 99-5107 | 12 | Nut-HF Nylock |
| 47 | 3272-12 | 8 | Pin-Cotter |
| 49 | 2412-72 | 2 | Clip-Closed, Insulated |
| 50 | 104-7201 | 2 | Nut-HF, NI |
| 51 | 321-11 | 2 | Screw-HH |
| 52 | 302-60 | 2 | Fitting-Grease |
| 53 | 138-6279 | 1 | Screw-Cap, HH |

● Not serviced separately

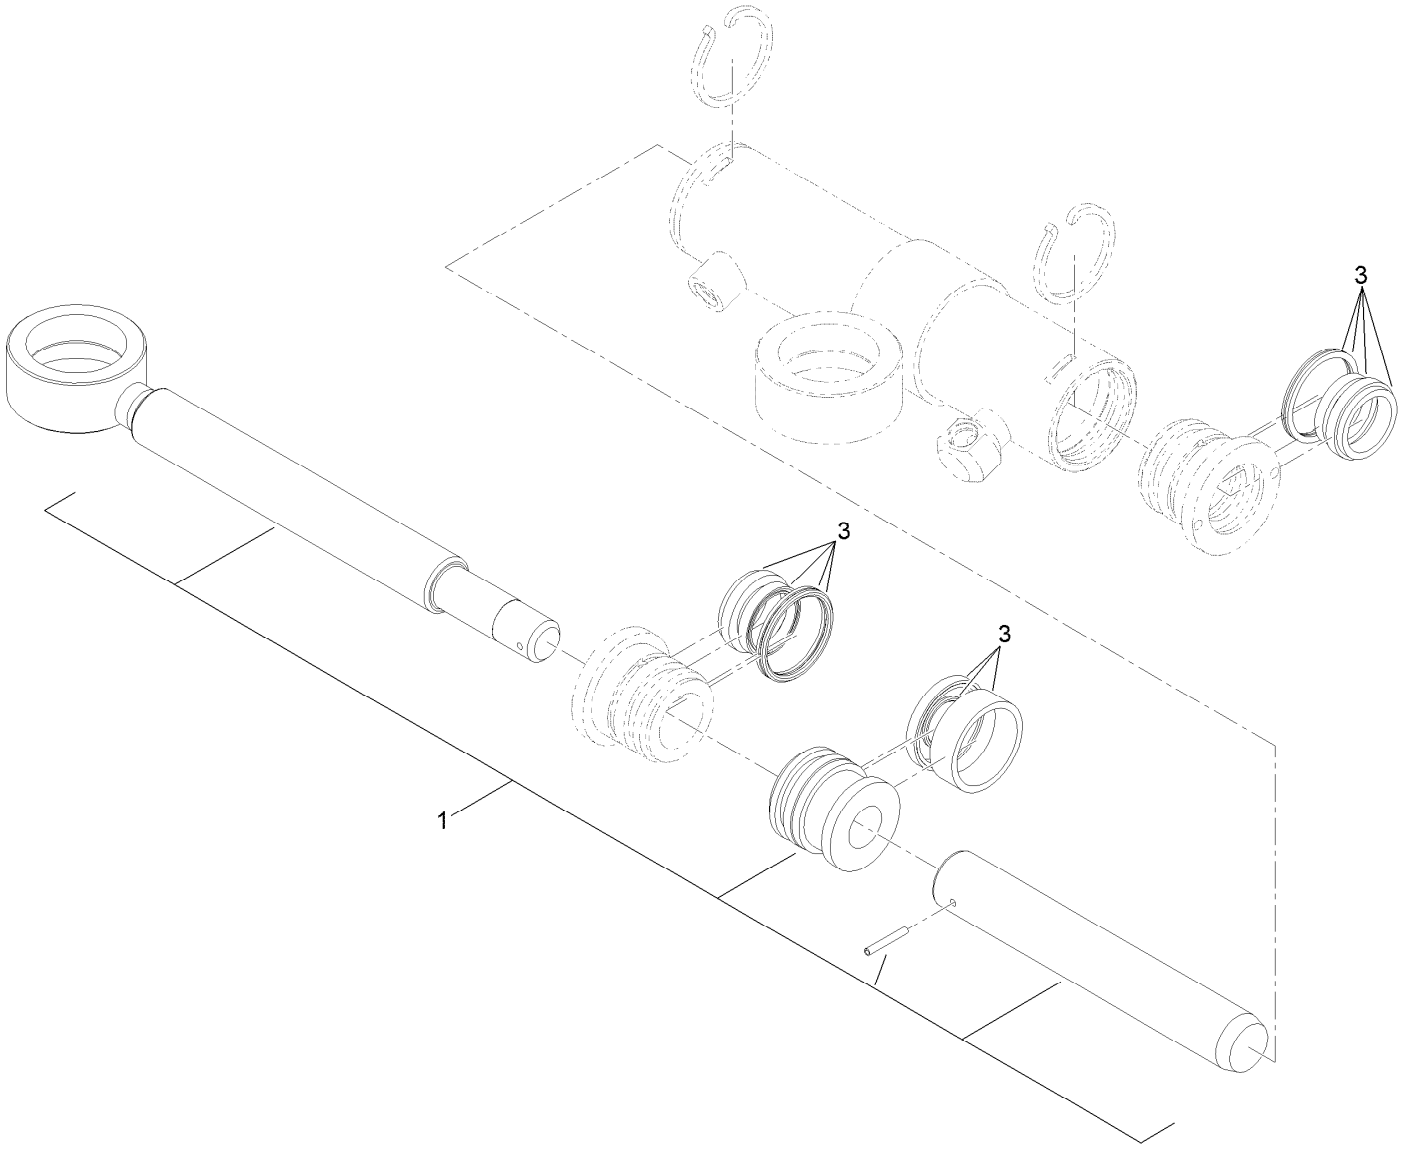


# Hydraulic Cylinder Assembly No. 125-0720


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 125-0722 | 1 | Rod-Cylinder |
| 3 | 115-2160 | 1 | Cylinder Repair Kit |

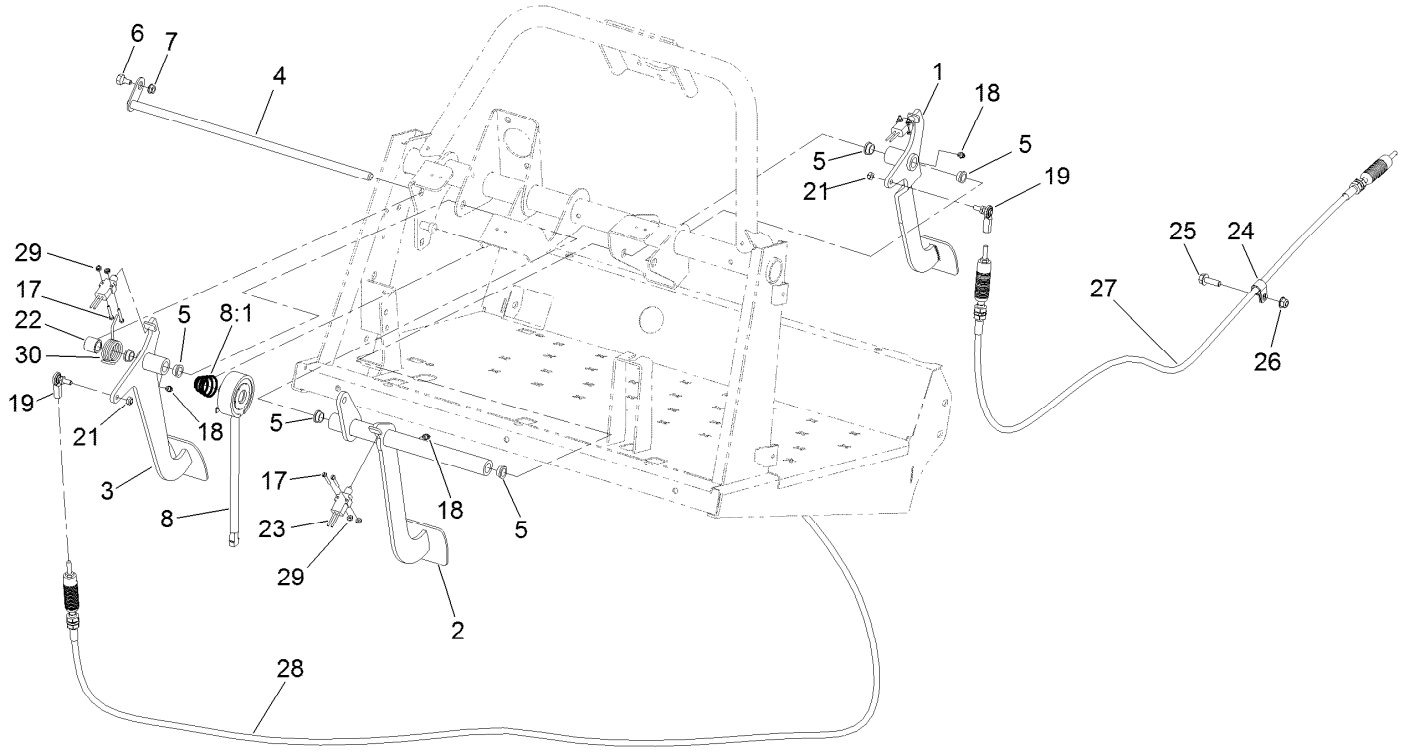


# Pedal Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 125-0702-03 | 1 | Pedal |
| 2 | 125-0700-03 | 1 | Pedal |
| 3 | 125-0701-03 | 1 | Pedal |
| 4 | 125-0825 | 1 | Pivot |
| 5 | 256-156 | 6 | Bushing-Flange |
| 6 | 63-3410 | 1 | Screw-Shoulder |
| 7 | 32128-33 | 1 | Nut-HF |
| 8 | 99-8090 | 1 | Magnet ASM |
| 8:1 | 93-6601 | 1 | Spring-Compression |
| 17 | 32105-9 | 6 | Screw-HH |
| 18 | 302-5 | 3 | Fitting-Grease |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 19 | 110-2554 | 2 | Rod End-Spherical |
| 21 | 3296-13 | 2 | Nut-Lock, NI |
| 22 | 99-2079 | 1 | Spacer |
| 23 | 99-3410 | 3 | Switch |
| 24 | 2412-93 | 1 | Clamp-R |
| 25 | 3234-17 | 1 | Screw-HHF |
| 26 | 104-8300 | 1 | Nut-HF, NI |
| 27 | 125-0957 | 1 | Cable-Clutch |
| 28 | 125-0958 | 1 | Cable-Accelerator |
| 29 | 3296-9 | 6 | Nut-Hex |
| 30 | 130-7060 | 1 | Spring-Torsion, LH |

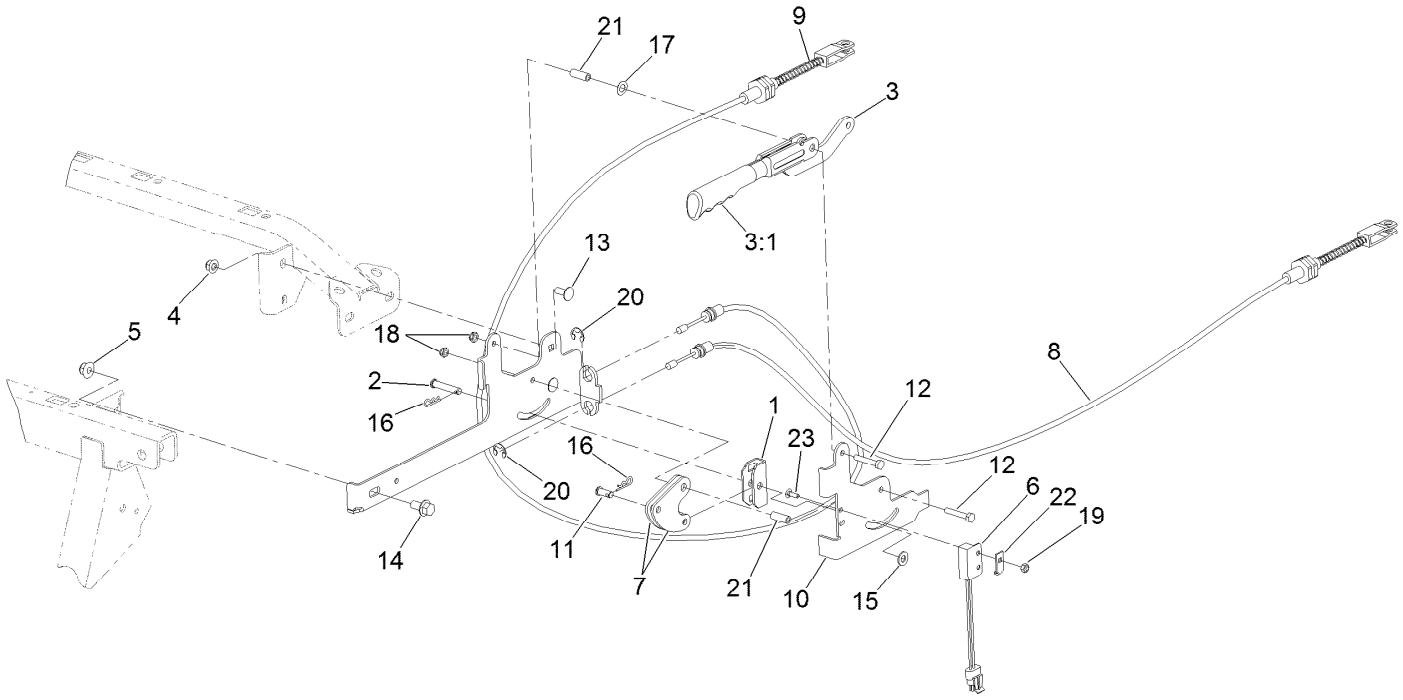


# Parking Brake Lever and Cable Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 87-3480 | 1 | Bracket-Equalizer, Cable |
| 2 | 94-3829 | 1 | Pin-Clevis |
| 3 | 127-8863 | 1 | Lever-Brake, Park |
| 3:1 | 127-8864 | 1 | Grip-Handle |
| 4 | 104-8300 | 2 | Nut-HF, NI |
| 5 | 104-8301 | 1 | Nut-HF, NI |
| 6 | 105-0023 | 1 | Sensor, Switch-Proximity |
| 7 | 106-7814 | 2 | Bellcrank |
| 8 | 136-2444 | 1 | Cable-Parking Brake, LH |
| 9 | 136-2445 | 1 | Cable-Parking Brake, RH |
| 10 | 136-2353-0P | 1 | Parking Brake ASM [primed] |
| 11 | 283-62 | 1 | Pin-Clevis |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 12 | 321-9 | 2 | Screw-HH |
| 13 | 3230-23 | 2 | Bolt-CARR |
| 14 | 3234-1 | 1 | Screw-HHF |
| 15 | 3256-23 | 1 | Washer-Plain |
| 16 | 3290-307 | 2 | Pin-Cotter |
| 17 | 3290-477 | 1 | Washer-Curved |
| 18 | 3296-56 | 2 | Nut-Lock, NI |
| 19 | 3296-2 | 1 | Nut-Lock, NI |
| 20 | 32120-47 | 2 | Ring-Retaining, External |
| 21 | 114402 | 2 | Spacer |
| 22 | 100-4872 | 1 | Plate-Switch, Neutral |
| 23 | 3229-34 | 1 | Screw-CARR |

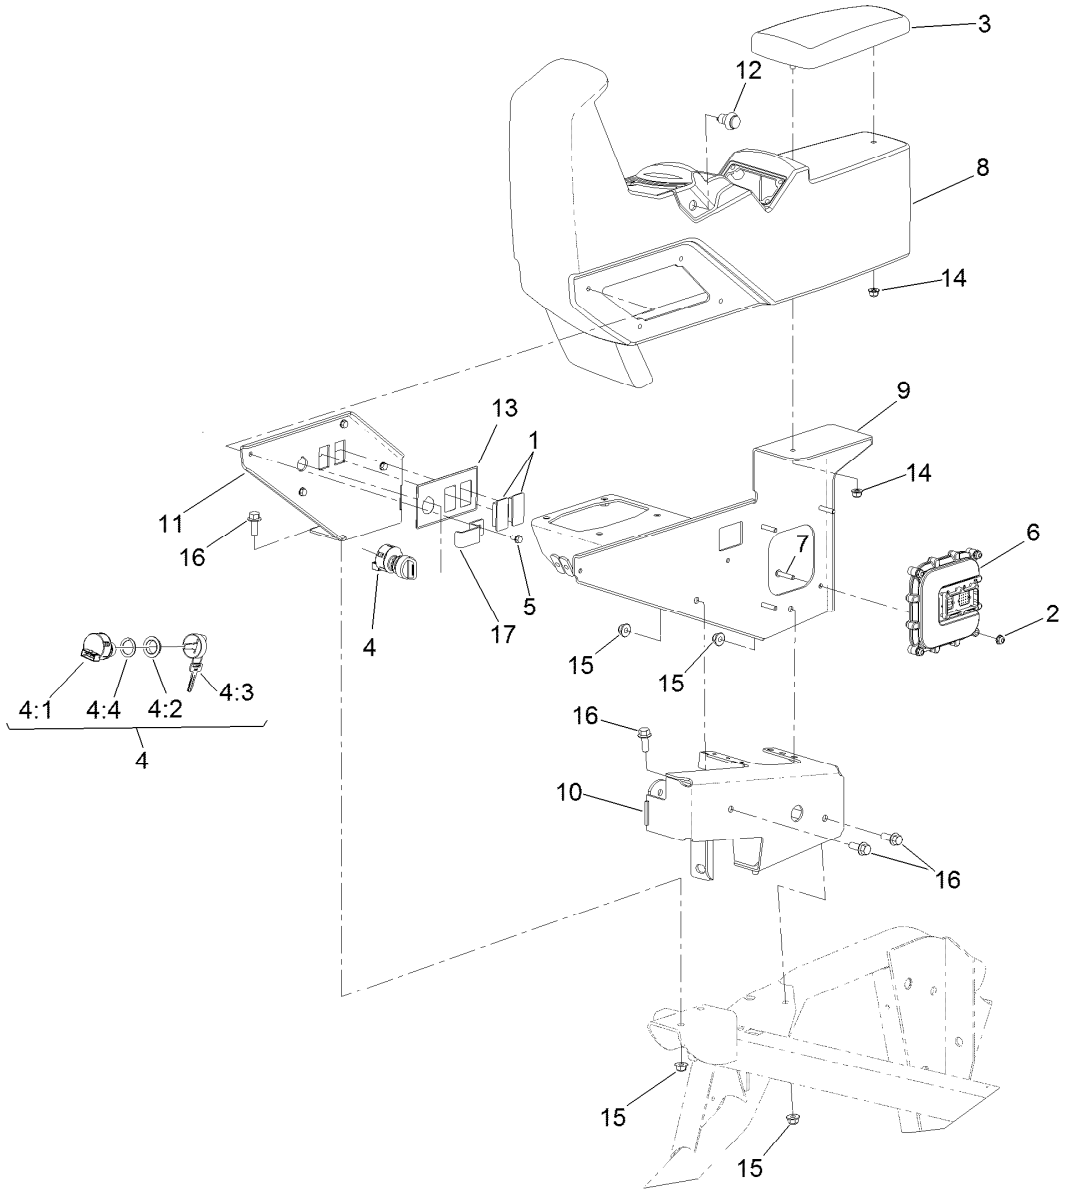



# Control Console Mount Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 99-7420 | 2 | Plug-Hole |
| 2 | 104-7201 | 4 | Nut-HF, NI |
| 3 | 108-7602 | 1 | Rest-Arm |
| 4 | 110-2580 | 1 | Switch-Key, Supervisor |
| 4:1 | | 1 | Switch-Key ● |
| 4:2 | 108-8660 | 1 | Nut-Mounting |
| 4:3 | 110-5221 | 1 | Set-Key, Supervisor |
| 4:4 | 108-8659 | 1 | Washer-Backup |
| 5 | 93-6083 | 4 | Screw-HWH |
| 6 | 115-1900 | 1 | Controller |
| 7 | 120-0834 | 4 | Screw-HSBH |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 8 | 125-0791 | 1 | Console-Control, Spray |
| 9 | 125-4108-0P | 1 | Console-Mount ASM [primed] |
| 10 | 125-4188-0P | 1 | Shifter-Mount [primed] |
| 11 | 125-4191-03 | 1 | Console Mount ASM |
| 12 | 125-7996 | 1 | Switch-Pb, Momentary |
| 13 | 125-8114 | 1 | Decal-Control Panel |
| 14 | 104-8300 | 2 | Nut-HF, NI |
| 15 | 104-8301 | 6 | Nut-HF, NI |
| 16 | 3234-11 | 6 | Screw-HHF |
| 17 | 136-2309 | 1 | Bracket-Mount, Radio |


● Not serviced separately

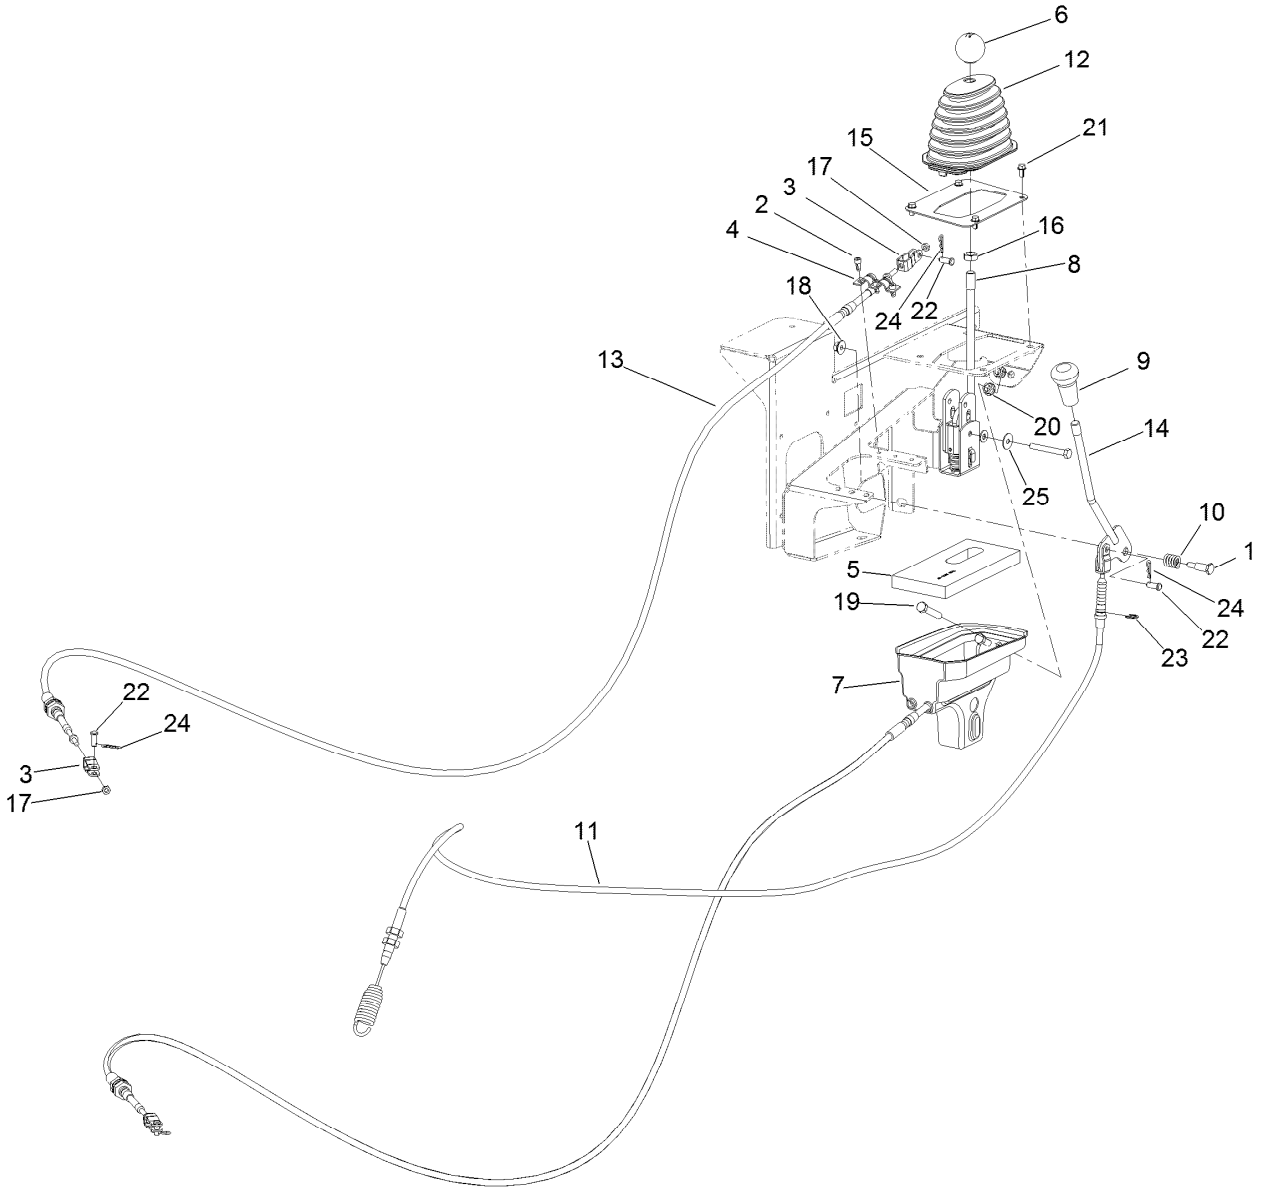


# Gear Shift and Drift Lock Control Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 63-2650 | 1 | Screw-Shoulder |
| 2 | 65-5220 | 3 | Screw-HSH, Thread Forming |
| 3 | 87-2310 | 4 | Clevis-Cable |
| 4 | 87-4960 | 1 | Clamp-Cable |
| 5 | 87-6570 | 1 | Seal-Boot, Lower |
| 6 | 87-6720 | 1 | Knob-Shift |
| 7 | 106-2376 | 1 | Boot-Shift, Lower |
| 8 | 106-7887 | 1 | Shift ASM |
| 9 | 106-7952 | 1 | Knob |
| 10 | 136-7121 | 1 | Spring-Compression |
| 11 | 115-2287 | 1 | Cable-Lock, Differential |
| 12 | 117-8063 | 1 | Boot-Shift |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 125-0880 | 2 | Cable-Shift |
| 14 | 125-0894 | 1 | Handle-Difflock |
| 15 | 125-8030-03 | 1 | Cover-Shifter |
| 16 | 3218-18 | 1 | Nut-Jam |
| 17 | 3220-1 | 4 | Nut-Jam |
| 18 | 32128-13 | 1 | Nut-HF |
| 19 | 323-10 | 2 | Screw-HH |
| 20 | 3290-357 | 2 | Nut-HSF |
| 21 | 93-6083 | 4 | Screw-HWH |
| 22 | 283-62 | 5 | Pin-Clevis |
| 23 | 32120-47 | 1 | Ring-Retaining, External |
| 24 | 3290-307 | 5 | Pin-Cotter |
| 25 | 108-4925 | 1 | Washer |

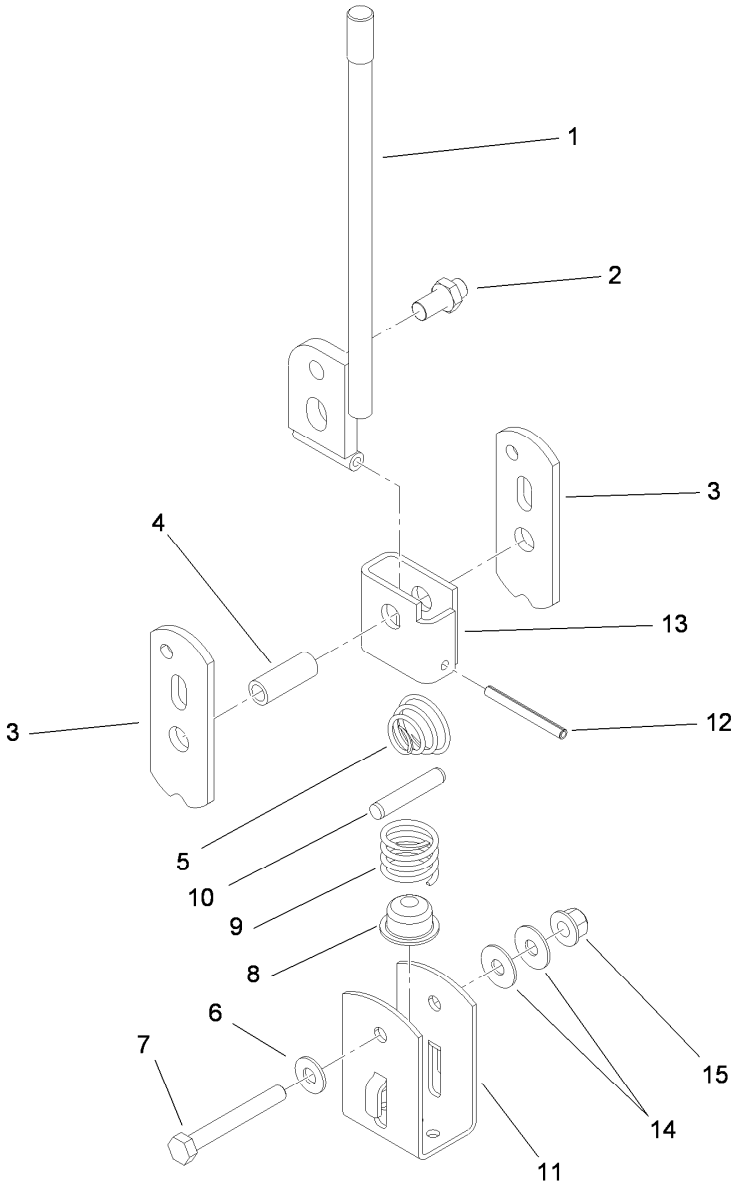


# Shift Assembly No. 106-7887


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 131-3469 | 1 | Lever-Shift |
| 2 | 87-3650 | 1 | Pin-Shift |
| 3 | 87-3540 | 2 | Link-Shift |
| 4 | 87-2520 | 1 | Tube-Pivot |
| 5 | 87-2900 | 1 | Spring-Compression |
| 6 | 87-8640 | 1 | Washer-Flat |
| 7 | 322-12 | 1 | Screw-HH |
| 8 | 87-3530 | 1 | Button-Shifter |
| 9 | 87-3660 | 1 | Spring-Compression |
| 10 | 3290-507 | 1 | Pin-Dowel |
| 11 | 87-3520 | 1 | Clevis |
| 12 | 32121-48 | 1 | Pin-Spring |
| 13 | 87-6040 | 1 | Bracket-Shifter |
| 14 | 3290-456 | 2 | Washer-Belleville |
| 15 | 104-8300 | 1 | Nut-HF, NI |

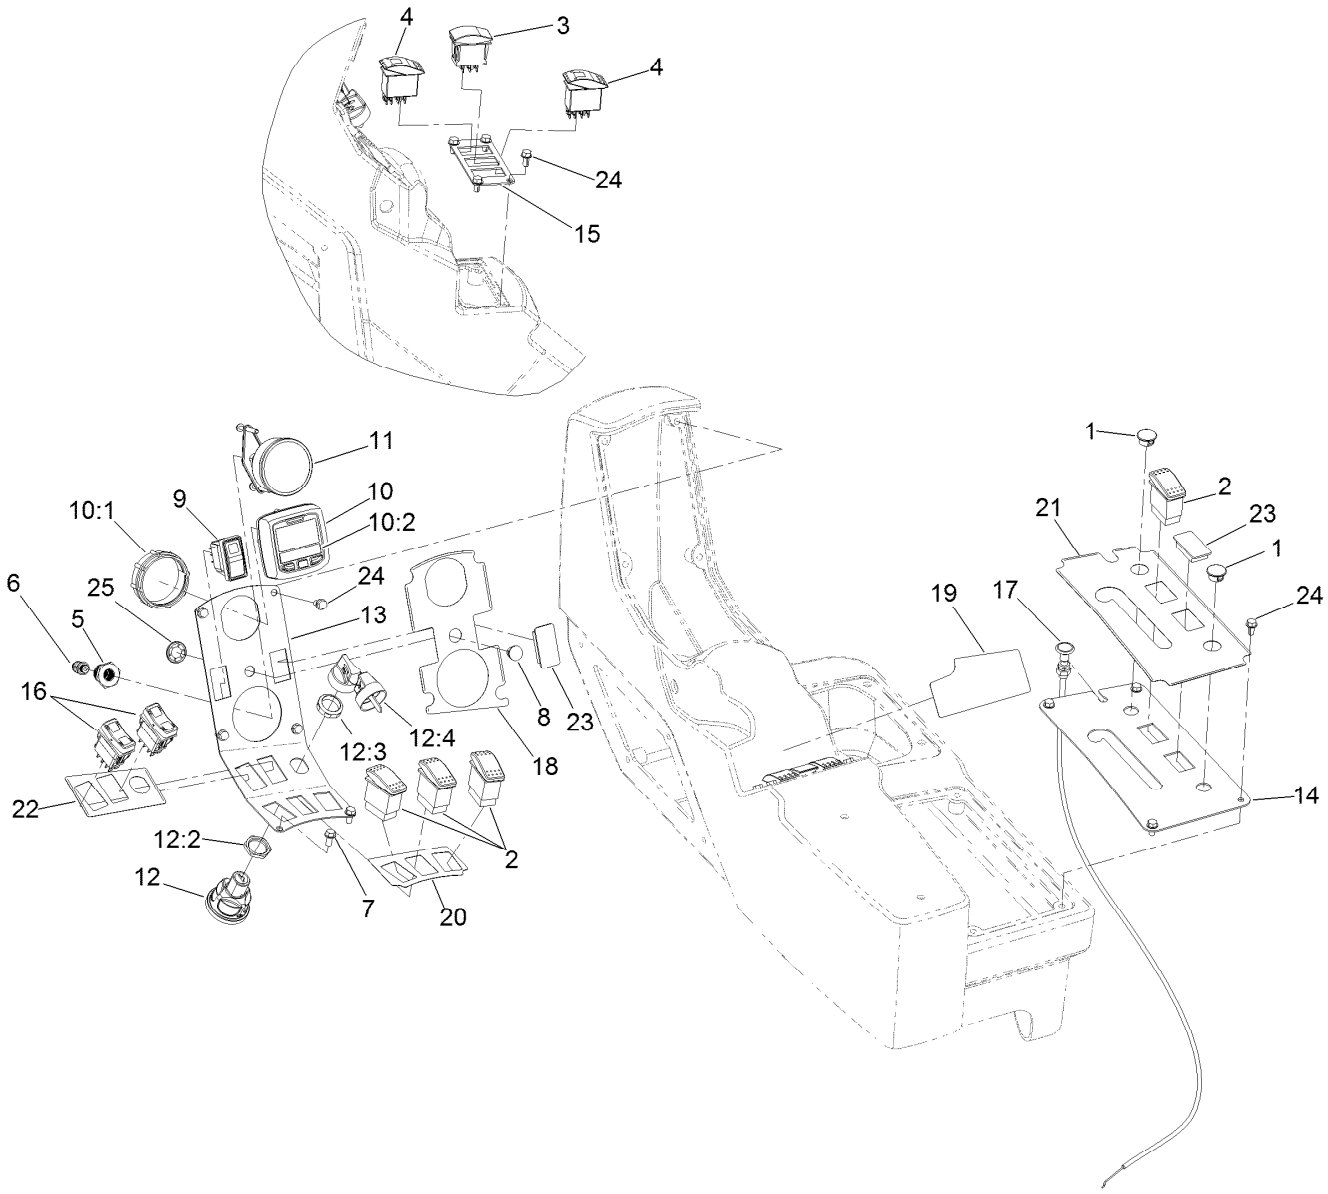


# Control Console Mount Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 94-5627 | 2 | Plug-Dome |
| 2 | 95-8999 | 4 | Switch-Rocker, On-None-On |
| 3 | 100-1535 | 1 | Switch-Rocker, (On)-Off-(On) |
| 4 | 100-8490 | 2 | Switch-Rocker, On-None-On |
| 5 | 100-8665 | 1 | Reducer-Gauge, Pressure |
| 6 | 100-8667 | 1 | Coupler-Reducer |
| 7 | 46-8093 | 1 | Screw-Plastite |
| 8 | 119-5329 | 1 | Plug-Hole |
| 9 | 120-0695 | 1 | Switch-Rocker, On-Off-(On) |
| 10 | 120-6310 | 1 | LCD Display ASM Kantrak 1700 |
| 10:1 | 120-4630 | 1 | Nut-Display |
| 10:2 | 120-6311 | 1 | Decal-Display |
| 11 | 120-8546 | 1 | Gauge-Pressure |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 12 | 121-5159 | 1 | Switch-Ignition |
| 12:2 | 121-5160 | 1 | Nut-Hex |
| 12:3 | 121-5161 | 1 | Nut-Face |
| 12:4 | 121-5162 | 1 | Set-Key, Ignition |
| 13 | 127-9733-03 | 1 | Panel-Switches |
| 14 | 125-0896-03 | 1 | Panel-Cover |
| 15 | 125-0898-03 | 1 | Panel-Switches |
| 16 | 125-0899 | 2 | Switch-Rocker |
| 17 | 125-8047 | 1 | Choke-Control |
| 18 | 125-4125 | 1 | Decal-Control Panel, Upper |
| 19 | 130-8293 | 1 | Decal-Control Panel, Rear |
| 20 | 125-4129 | 1 | Decal-Control Panel, Spray |
| 21 | 137-4289 | 1 | Decal-Control Panel |
| 22 | 125-4128 | 1 | Decal-Switch Panel, Center |
| 23 | 99-7420 | 2 | Plug-Hole |
| 24 | 93-6083 | 13 | Screw-HWH |
| 25 | 1-323142 | 1 | Nut-Push |

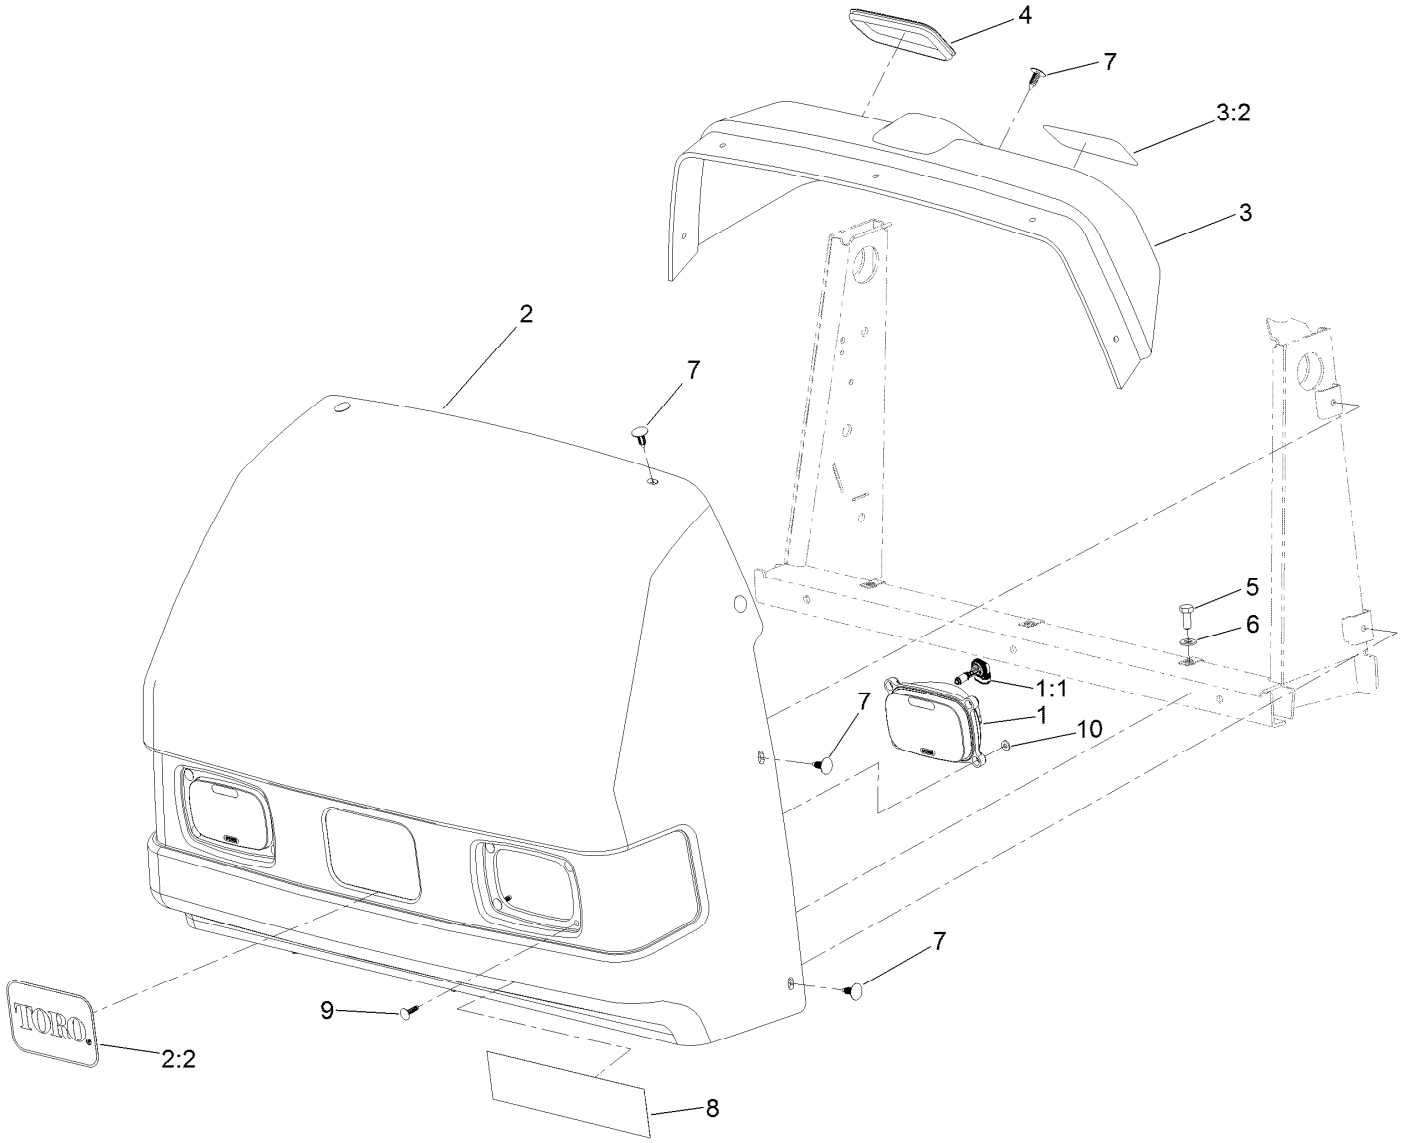



# Hood, Dash and Headlight Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 125-0672 | 2 | Headlight ASM |
| 1:1 | 125-0673 | 1 | Halogen-Bulb |
| 2 | 127-3982 | 1 | Hood |
| 2:2 | 67-1300 | 1 | Decal |
| 3 | 125-0939 | 1 | Dash |
| 3:2 | 127-3941 | 1 | Decal-Warning |
| 4 | 125-8059 | 1 | Cover- Reservoir, Brake |
| 5 | 322-3 | 3 | Screw-HH |
| 6 | 3256-23 | 3 | Washer-Plain |
| 7 | 117-2382 | 10 | Plug-Plastic |
| 8 | 127-3944 | 1 | Decal |
| 9 | 125-8067 | 8 | Plug-Plastic |
| 10 | 3256-21 | 8 | Washer-Flat |

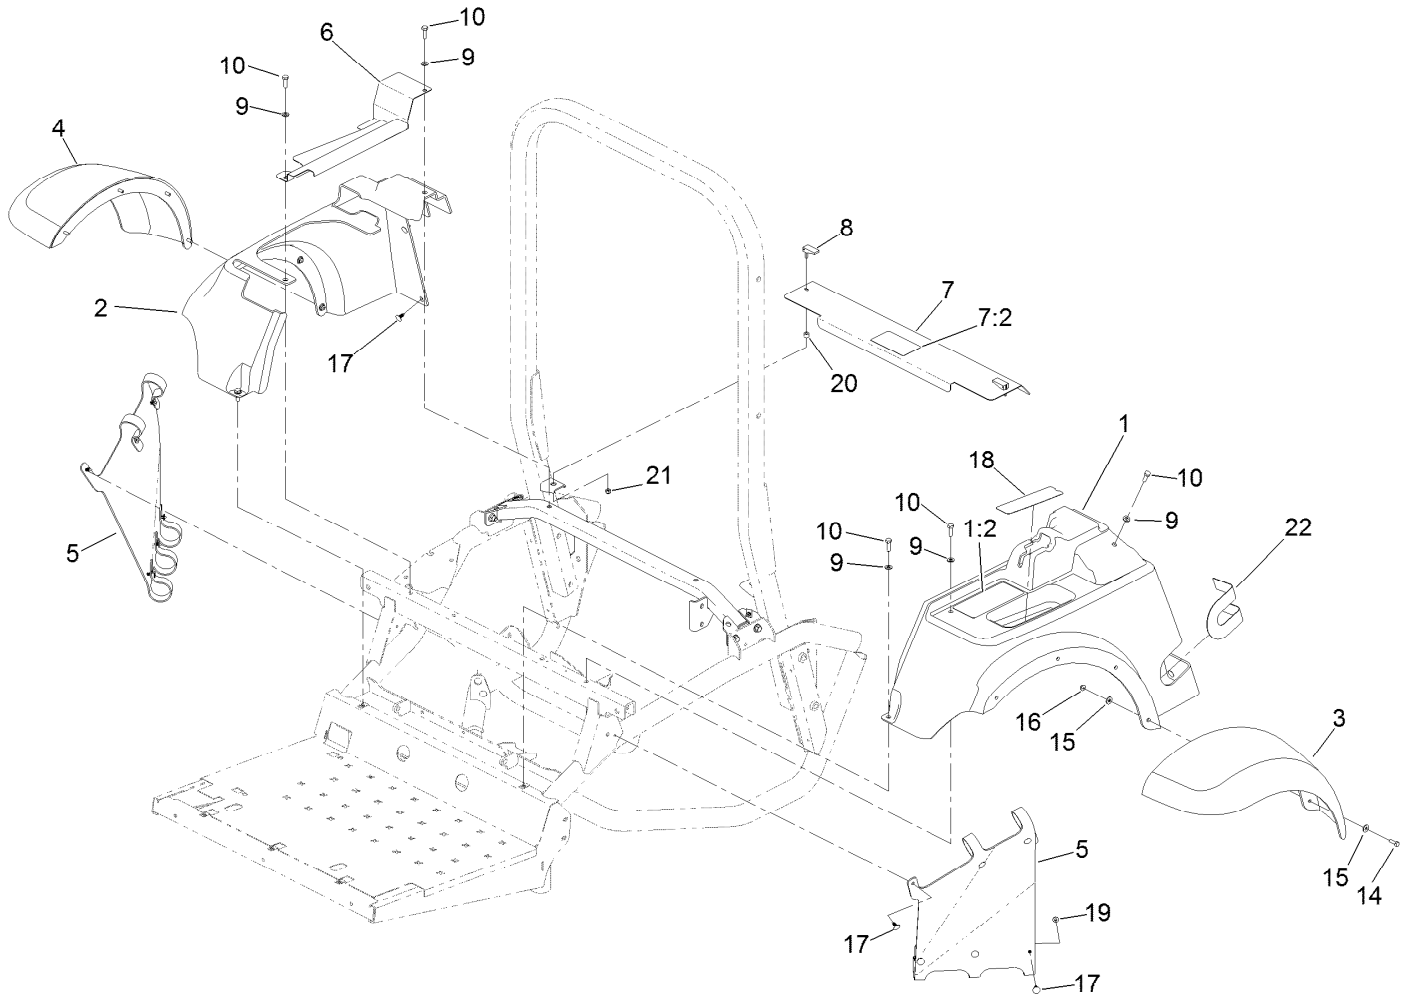


# Seat Base and Front Fender Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-3980 | 1 | LH Seatbase ASM |
| 1:2 | 127-3935 | 1 | Decal-Start-Up/Shut-Down |
| 2 | 125-0803 | 1 | Seatbase-RH |
| 3 | 125-0902 | 1 | Fender-LH |
| 4 | 125-0903 | 1 | Fender-RH |
| 5 | 125-0935 | 2 | Shroud-Fender, Inner |
| 6 | 125-8088-01 | 1 | Cover-Console, Bottom |
| 7 | 127-3979 | 1 | Cover-Engine |
| 7:2 | 127-3937 | 1 | Decal-Warning, Engine Cover |
| 8 | 106-6777 | 2 | Handle-Latch, Swell |
| 9 | 3256-23 | 7 | Washer-Plain |
| 10 | 322-5 | 7 | Screw-HH |
| 14 | 321-5 | 8 | Screw-HH |
| 15 | 3256-2 | 16 | Washer-Flat |
| 16 | 104-7201 | 8 | Nut-HF, NI |
| 17 | 117-2382 | 16 | Plug-Plastic |
| 18 | 125-8093 | 1 | Pad-Pocket |
| 19 | 3256-16 | 10 | Washer-Flat |
| 20 | 106-6778 | 2 | Bushing-Latch, Swell |
| 21 | 1-804254 | 2 | Nut-Lock, HH |
| 22 | 131-5822 | 1 | Guard-Rubber |

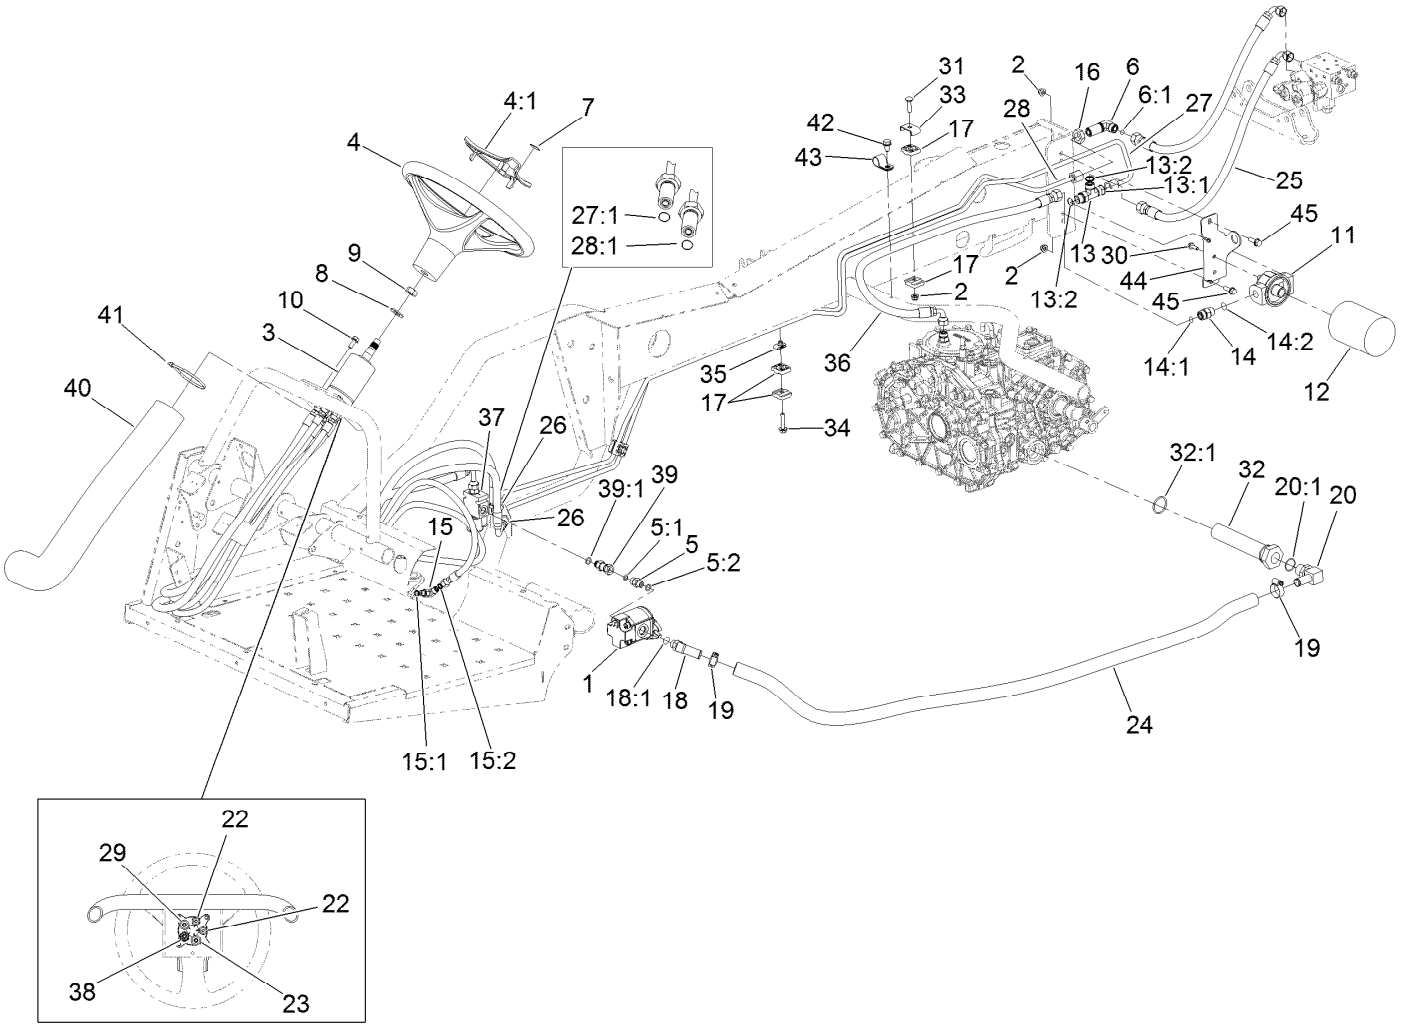


# Hydraulic Steering Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 121-6545 | 1 | HYD Pump ASM |
| 2 | 104-8300 | 4 | Nut-HF, NI |
| 3 | 138-6100 | 1 | Steering Control Unit |
| 4 | 98-1471 | 1 | Wheel-Steering |
| 4:1 | 98-1468 | 1 | Cover-Wheel, Steering |
| 5 | 340-2 | 3 | Fitting-Straight |
| 5:1 | 237-22 | 1 | O-Ring |
| 5:2 | 237-42 | 1 | O-Ring |
| 6 | 93-9151 | 1 | Fitting-HYD |
| 6:1 | 237-30 | 2 | O-Ring |
| 7 | 98-1459 | 1 | Decal |
| 8 | 3256-27 | 1 | Washer-Flat |
| 9 | 3296-33 | 1 | Nut-Lock, NI |
| 10 | 33104-020 | 4 | Screw-HHF |
| 11 | 87-8780 | 1 | Head-Filter |
| 12 | 54-0110 | 1 | Filter-Oil, Transmission |
| 13 | 340-109 | 1 | Fitting-Tee |
| 13:1 | 237-79 | 1 | O-Ring |
| 13:2 | 237-30 | 2 | O-Ring |
| 14 | 340-4 | 1 | Fitting-Straight |
| 14:1 | 237-30 | 1 | O-Ring |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 14:2 | 237-79 | 1 | O-Ring |
| 15 | 340-132 | 2 | Fitting-Elbow, 90 DEG |
| 15:1 | 237-78 | 1 | O-Ring |
| 15:2 | 237-21 | 1 | O-Ring |
| 16 | 340-127 | 1 | Nut-Bulkhead |
| 17 | 56-7973 | 6 | Clamp-Tube |
| 18 | 93-6848 | 1 | Fitting-Elbow 45 |
| 18:1 | 237-79 | 1 | O-Ring |
| 19 | 2412-129 | 2 | Clamp-Hose |
| 20 | 353-987 | 1 | Fitting-Elbow, 90 |
| 20:1 | 237-81 | 1 | O-Ring |
| 22 | 108-5675 | 2 | Hydraulic Hose ASM |
| 23 | 127-3987 | 1 | Hose ASM |
| 24 | 125-0952 | 1 | Hose-Suction |
| 25 | 125-0949 | 2 | Hydraulic Hose ASM |
| 26 | 340-70 | 2 | Nut-Lock |
| 27 | 125-4058 | 1 | Hydraulic Tube ASM |
| 27:1 | 237-22 | 1 | O-Ring |
| 28 | 125-4059 | 1 | Hydraulic Tube ASM |
| 28:1 | 237-22 | 1 | O-Ring |
| 29 | 114-7702 | 1 | Hose-HYD |

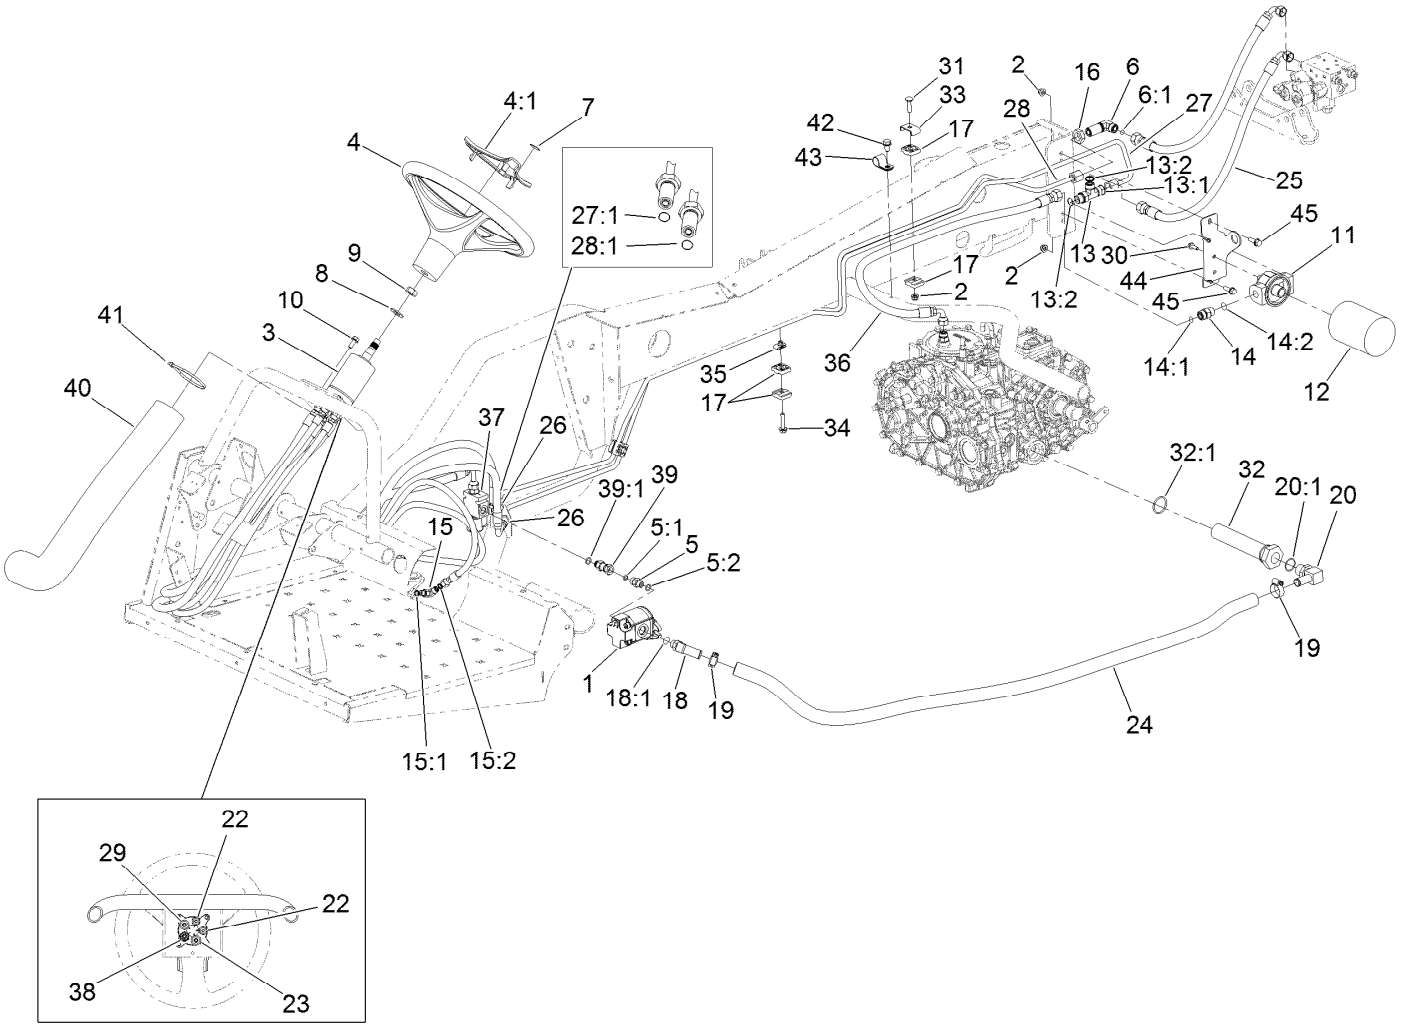


# Hydraulic Steering Assembly (continued)


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 30 | 3234-4 | 2 | Screw-HHF |
| 31 | 3230-3 | 2 | Screw-CARR |
| 32 | 87-3990 | 1 | Strainer-Transaxle |
| 32:1 | 237-101 | 1 | O-Ring |
| 33 | 119-1418 | 2 | Plate-Clamp, Short |
| 34 | 115-1794 | 1 | Screw-HHF |
| 35 | 94-2413 | 1 | Nut-U |
| 36 | 94-5961 | 1 | Hose |
| 37 | 127-3965 | 1 | Soleniod Valve ASM |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 38 | 120-2061 | 1 | Hose-HYD |
| 39 | 104-3779 | 1 | Connector-Swivel, Straight |
| 39:1 | 237-42 | 1 | O-Ring |
| 40 | 106-6713 | 1 | Cover-Lines, Steering |
| 41 | 3290-379 | 4 | Tie-Cable |
| 42 | 32144-15 | 1 | Screw-HHFTF |
| 43 | 2412-81 | 1 | Clamp-R |
| 44 | 136-2313-03 | 1 | Mount-Filter |
| 45 | 3234-29 | 2 | Screw-HHF |

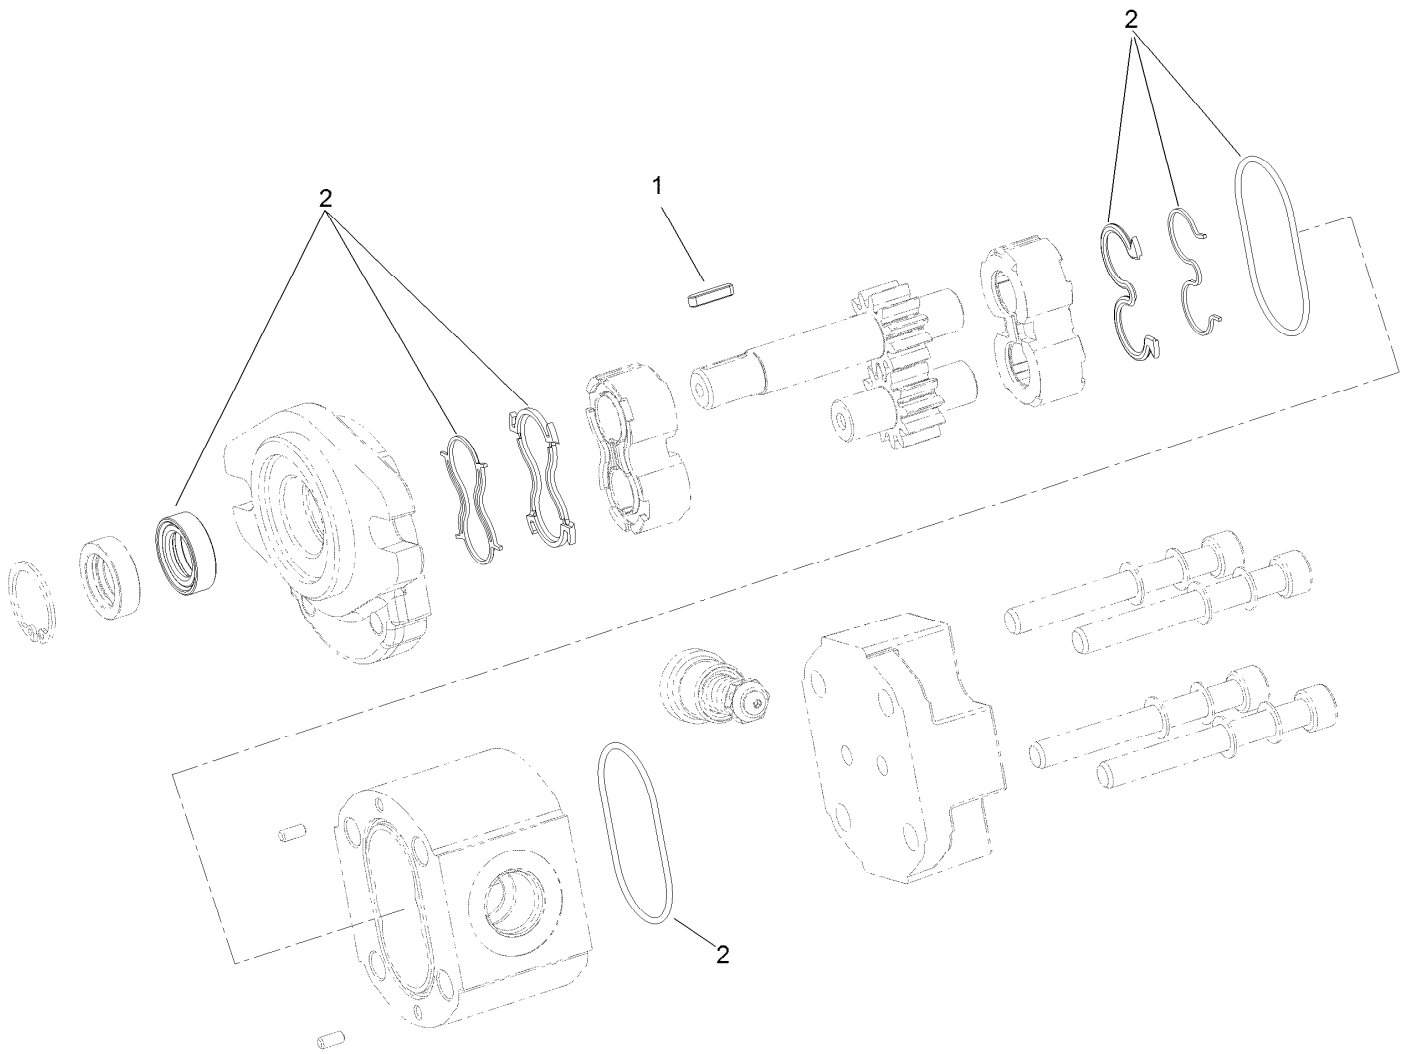


# Hydraulic Pump Assembly No. 121-6545


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 125-8147 | 1 | Key, Square |
| 2 | 125-8148 | 1 | Seal Kit |

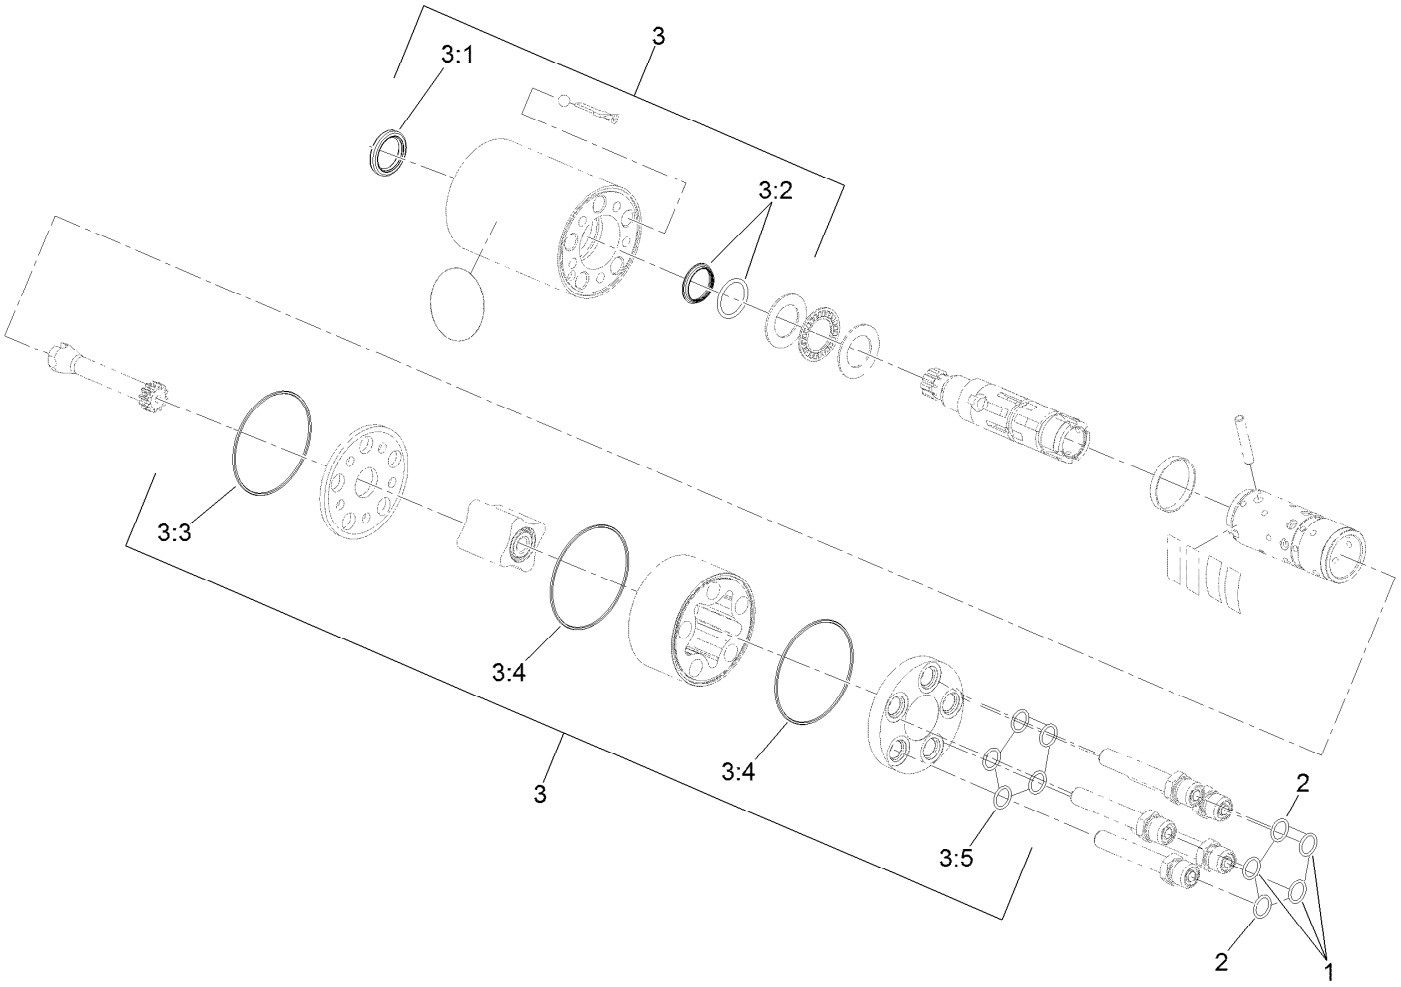


# Steering Valve Assembly No. 138-6100

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 237-21 | 3 | O-Ring |
| 2 | 237-22 | 2 | O-Ring |
| 3 | 106-6716 | 1 | Seal Kit |
| 3:1 | | 1 | Ring-Seal, Dust ● |
| 3:2 | | 1 | Seal-Shaft ● |
| 3:3 | | 1 | O-Ring ● |
| 3:4 | | 2 | O-Ring ● |
| 3:5 | | 5 | O-Ring ● |


● Not serviced separately

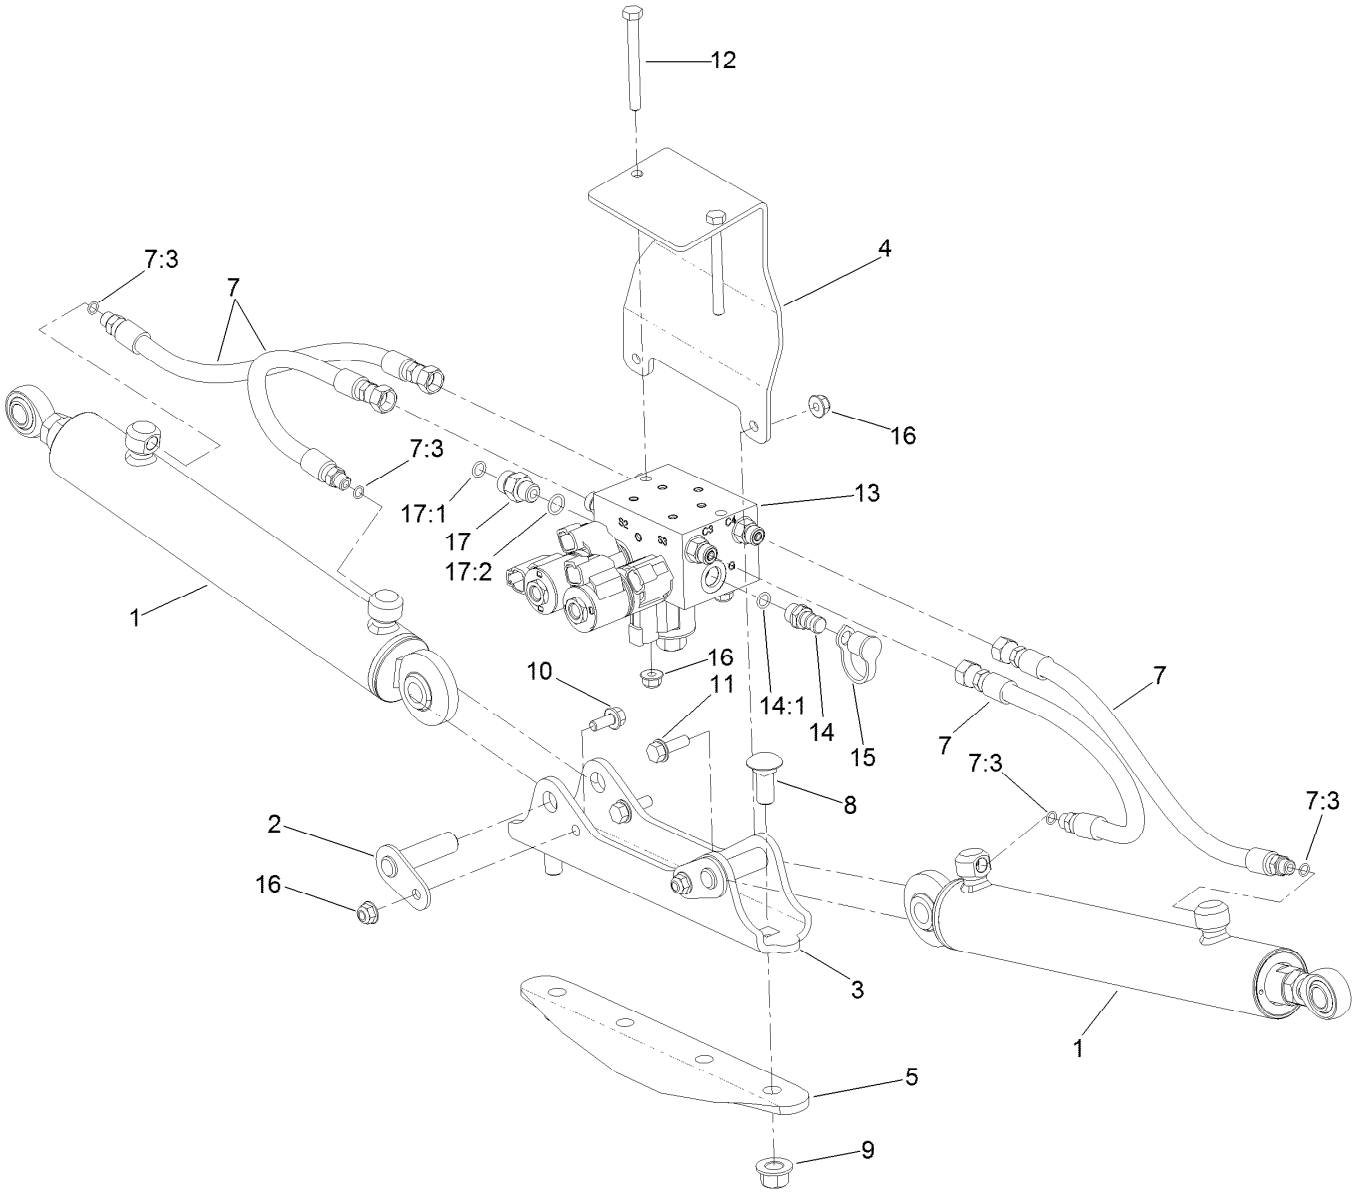


# Boom Lift Hydraulic Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 117-0701 | 2 | Hydraulic Cylinder ASM |
| 2 | 112-7884 | 2 | Pin-Pivot |
| 3 | 119-4856-03 | 1 | Plate-Mount, Cylinders |
| 4 | 130-8201-03 | 1 | Mount-Valve |
| 5 | 131-0297-03 | 1 | Plate-Stiffener, Boom |
| 7 | 119-4859 | 4 | Hose ASM |
| 7:3 | 237-78 | 1 | O-Ring |
| 8 | 110-5067 | 2 | Screw-CARR |
| 9 | 99-5107 | 2 | Nut-HF Nylock |
| 10 | 110-5053 | 2 | Screw-HHF |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 11 | 3234-29 | 2 | Screw-HHF |
| 12 | 322-14 | 2 | Screw-HH |
| 13 | 136-2400 | 1 | On-Off Boom Lift Valve ASM |
| 14 | 59-7410 | 1 | Fitting-Diagnostic |
| 14:1 | 237-42 | 1 | O-Ring |
| 15 | 354-79 | 1 | Cap-Dust |
| 16 | 104-8300 | 6 | Nut-HF, NI |
| 17 | 340-2 | 2 | Fitting-Straight |
| 17:1 | 237-22 | 1 | O-Ring |
| 17:2 | 237-42 | 1 | O-Ring |

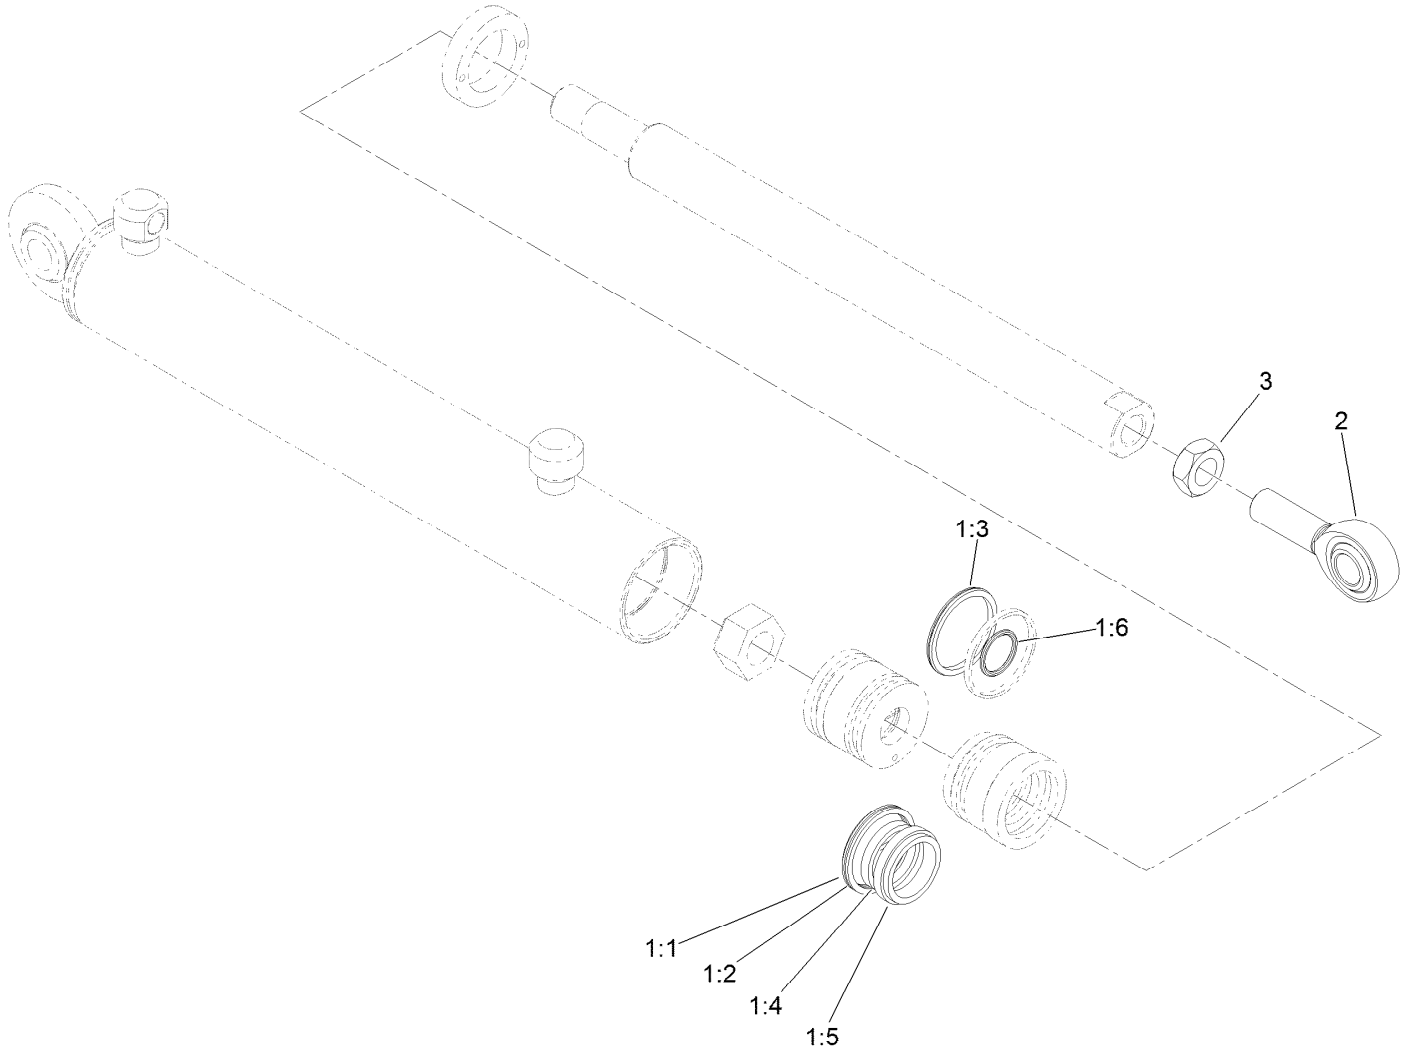



# Hydraulic Cylinder Assembly No. 117-0701

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 119-8026 | 1 | Seal Kit ● |
| 1:1 | | 1 | O-Ring ■ |
| 1:2 | | 1 | Ring-Backup ■ |
| 1:3 | | 1 | Bp Seal ■ |
| 1:4 | | 1 | Bs Seal ■ |
| 1:5 | | 1 | Dust Seal ■ |
| 1:6 | | 1 | O-Ring ■ |
| 2 | 119-8027 | 1 | Rod End |
| 3 | 3220-6 | 1 | Nut-Jam |

● Not illustrated


■ Not serviced separately

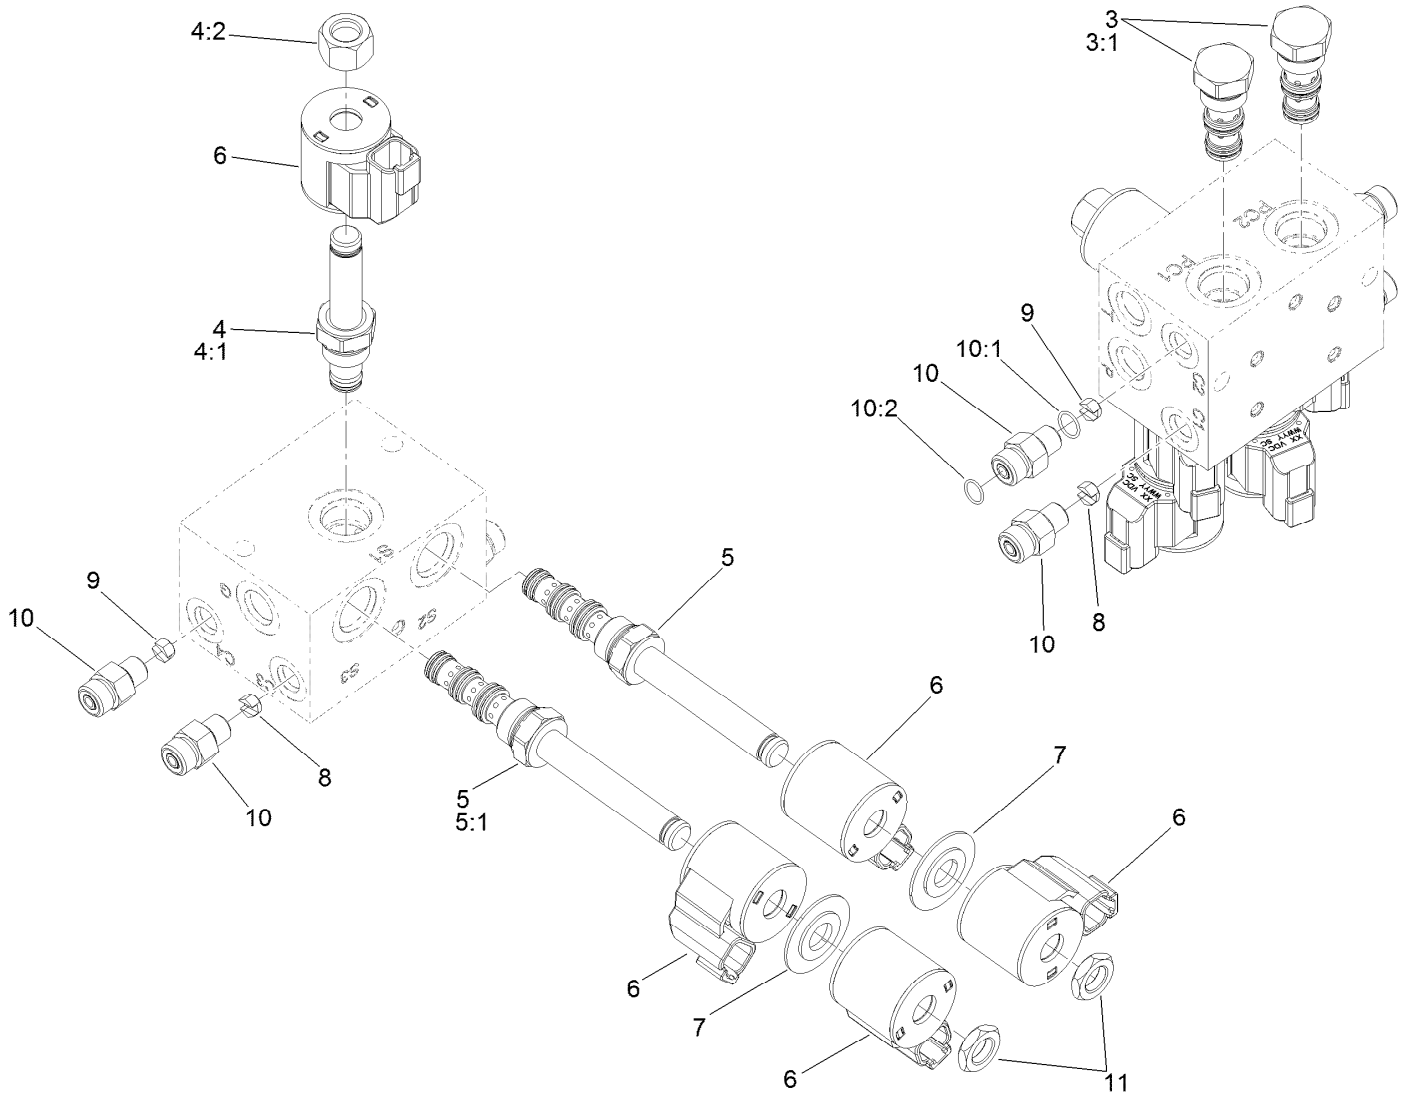


# On-Off Boom Lift Valve Assembly No. 136-2400

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 3 | 136-2430 | 2 | Valve-Check, Po |
| 3:1 | 120-0886 | 1 | Seal Kit |
| 4 | 107-7517 | 1 | Valve-Solenoid |
| 4:1 | 105-9156 | 1 | Seal Kit |
| 4:2 | 107-7812 | 1 | Nut-Solenoid |
| 5 | 120-2587 | 2 | Valve-Solenoid |
| 5:1 | 112-6520 | 1 | Seal Kit ● |
| 6 | 119-8036 | 5 | Coil |
| 7 | 120-2586 | 2 | Spacer-Coil |
| 8 | 110-8903 | 2 | Orifice-Control, Flow (0.055) |
| 9 | 125-8849 | 2 | Orifice-Flow Control |
| 10 | 340-92 | 4 | Fitting-Straight |
| 10:1 | 237-78 | 1 | O-Ring |
| 10:2 | 237-21 | 1 | O-Ring |
| 11 | 110-2634 | 2 | Nut-Coil |

● Not illustrated

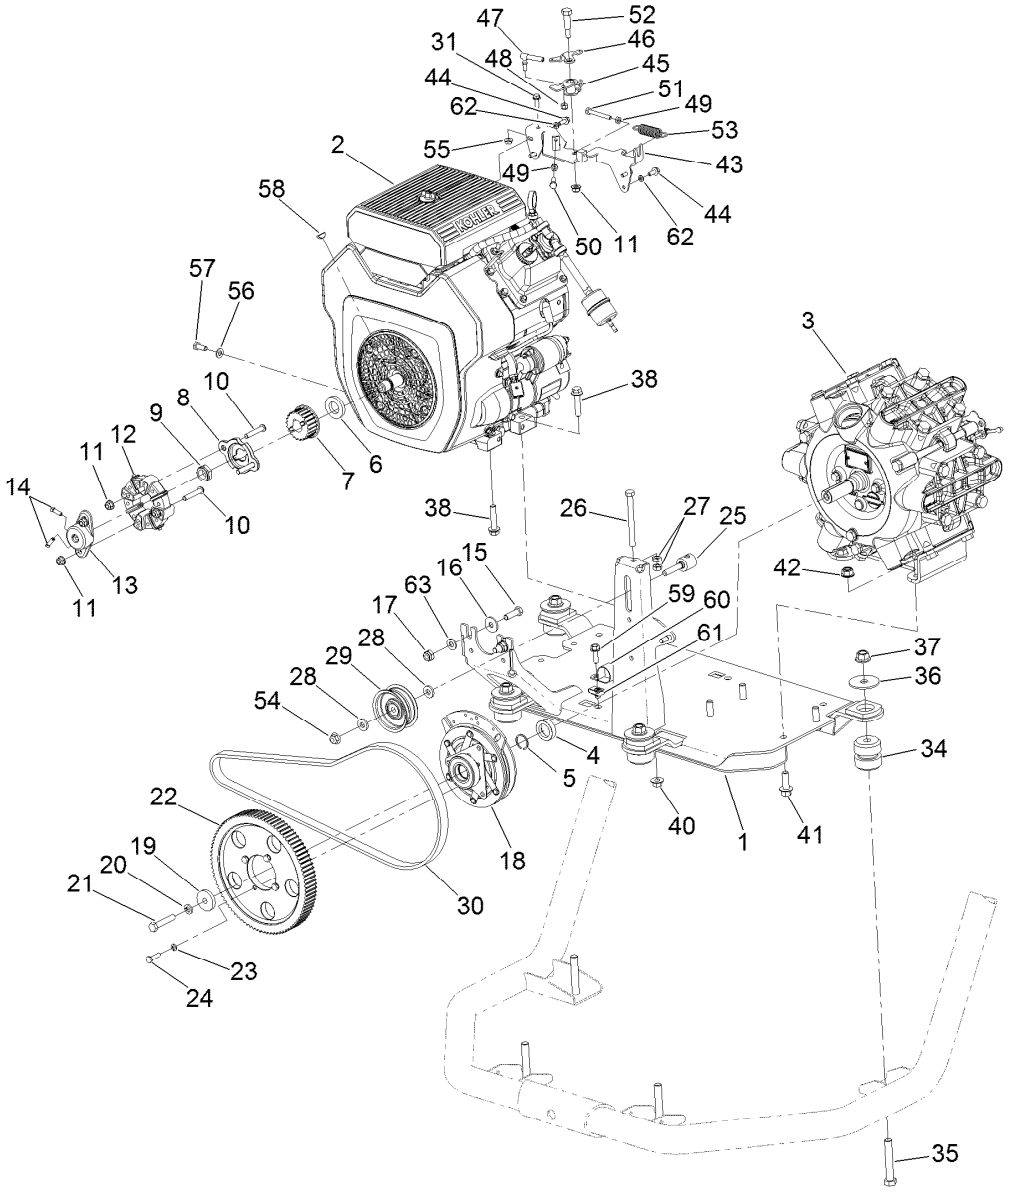



# Engine Mounting Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 121-6511-03 | 1 | Mount-Engine |
| 2 | 164-1035 | 1 | Engine-Rehlko ● |
| 3 | 137-4231 | 1 | Pump ASM |
| 4 | 108-3301 | 1 | Retainer-Spacer |
| 5 | 108-3302 | 1 | Ring-Snap |
| 6 | 104-1105 | 1 | Spacer-Support, Deck |
| 7 | 125-8017 | 1 | Sprocket-22 Tooth |
| 8 | 125-4092 | 1 | Adaptor-Sprocket, Flanged |
| 9 | 3296-15 | 1 | Nut-Lock, NI |
| 10 | 125-7977 | 4 | Screw-HSBH |
| 11 | 104-8300 | 5 | Nut-HF, NI |
| 12 | 119-0652 | 1 | Coupler-Rubber |
| 13 | 115-2169 | 1 | Hub-Pump |
| 14 | 3241-6 | 2 | Screw-SQH |
| 15 | 323-7 | 2 | Screw-HH |
| 16 | 52-2861 | 2 | Washer |
| 17 | 3296-44 | 2 | Nut-Lock, NI |
| 18 | 120-7625 | 1 | Clutch-Electric |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 19 | 125-0604 | 1 | Spacer-Clutch |
| 20 | 3253-5 | 1 | Washer-Lock |
| 21 | 3211-46 | 1 | Screw-HH |
| 22 | 125-7982 | 1 | Sprocket-90 Tooth |
| 23 | 3253-3 | 4 | Washer-Lock |
| 24 | 321-6 | 4 | Screw-HH |
| 25 | 125-0605 | 1 | Shaft-Idler |
| 26 | 107-4026 | 1 | Screw-HH |
| 27 | 3217-7 | 2 | Nut-Hex |
| 28 | 43-0940 | 2 | Spacer |
| 29 | 1-633167 | 1 | Sheave-Idler |
| 30 | 125-0765 | 1 | Belt-Synchronous |
| 31 | 115-5103 | 1 | Screw-HHF |
| 34 | 106-7865 | 4 | Mount-Engine |
| 35 | 325-12 | 4 | Screw-HH |
| 36 | 41985 | 4 | Washer-Special |
| 37 | 99-5107 | 4 | Nut-HF Nylock |
| 38 | 3234-19 | 4 | Screw-HHF |

● www.engines.rehlko.com

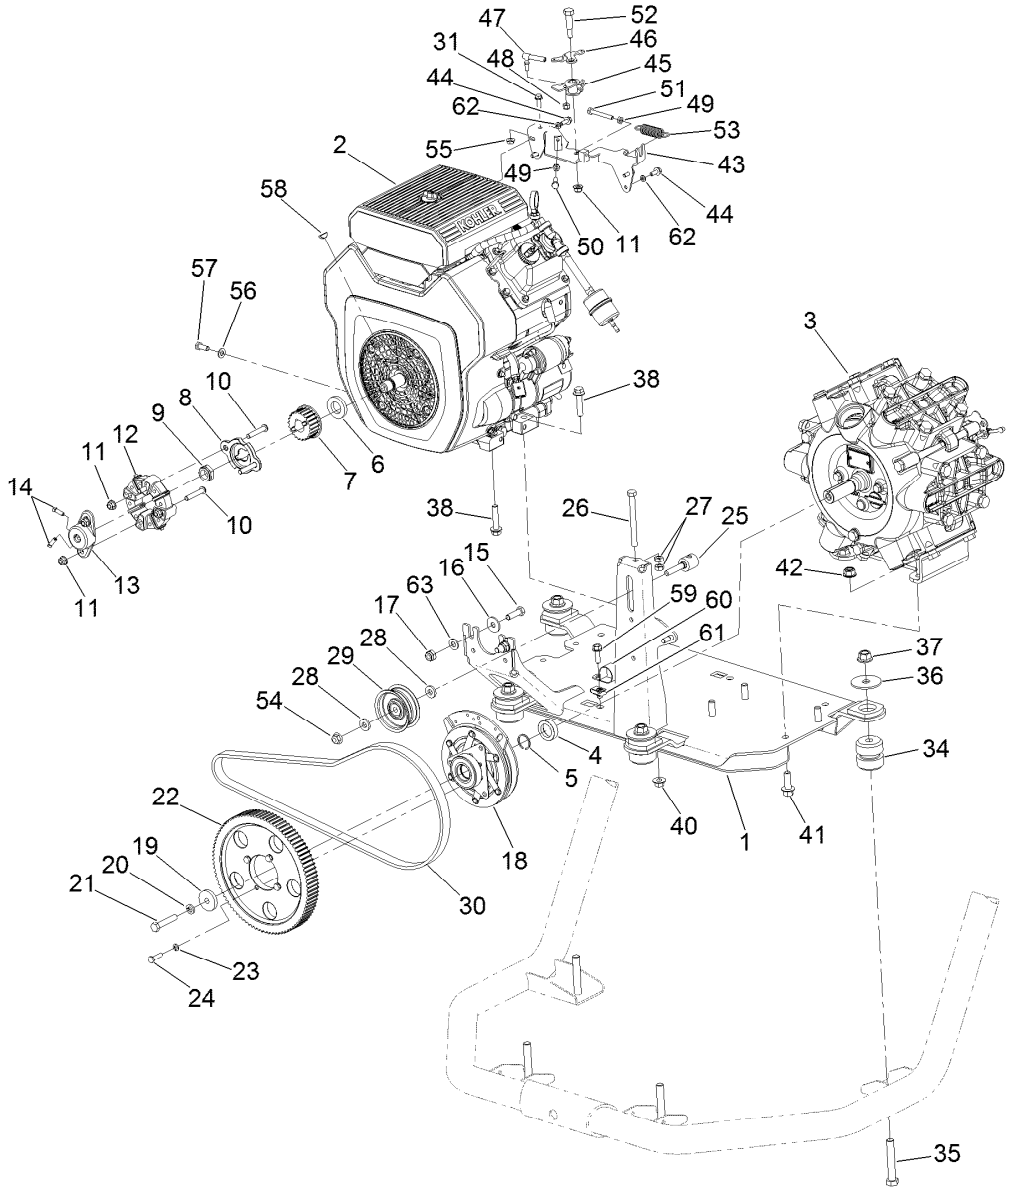



# Engine Mounting Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 40 | 32128-43 | 4 | Nut-Flange |
| 41 | 3234-15 | 4 | Screw-HHF |
| 42 | 114-8417 | 4 | Nut-HF, NI |
| 43 | 87-7780 | 1 | Bracket-Throttle |
| 44 | 33103-016 | 4 | Screw-HHF |
| 45 | 87-7800 | 1 | Lever-Throttle |
| 46 | 87-7790 | 1 | Lever-Choke |
| 47 | 18-1720 | 1 | Ball Joint |
| 48 | 3296-3 | 1 | Nut-Lock |
| 49 | 3220-1 | 2 | Nut-Jam |
| 50 | 329-6 | 1 | Screw-HH |
| 51 | 108-3660 | 1 | Screw-TAP |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 52 | 7-0030 | 1 | Screw-Shoulder, HH |
| 53 | 67-1450 | 1 | Spring-Idler |
| 54 | 104-8301 | 1 | Nut-HF, NI |
| 55 | 32128-33 | 1 | Nut-HF |
| 56 | 3256-23 | 1 | Washer-Plain |
| 57 | 33114-020 | 1 | Screw-HH |
| 58 | 3257-5 | 1 | Key-Woodruff |
| 59 | 3234-17 | 1 | Screw-HHF |
| 60 | 2412-126 | 1 | R-Clamp |
| 61 | 115-7721 | 1 | Nut-Clip, U |
| 62 | 48-8020 | 4 | Washer-Spring |
| 63 | 3256-24 | 2 | Washer-Plain |


● www.engines.rehlko.com

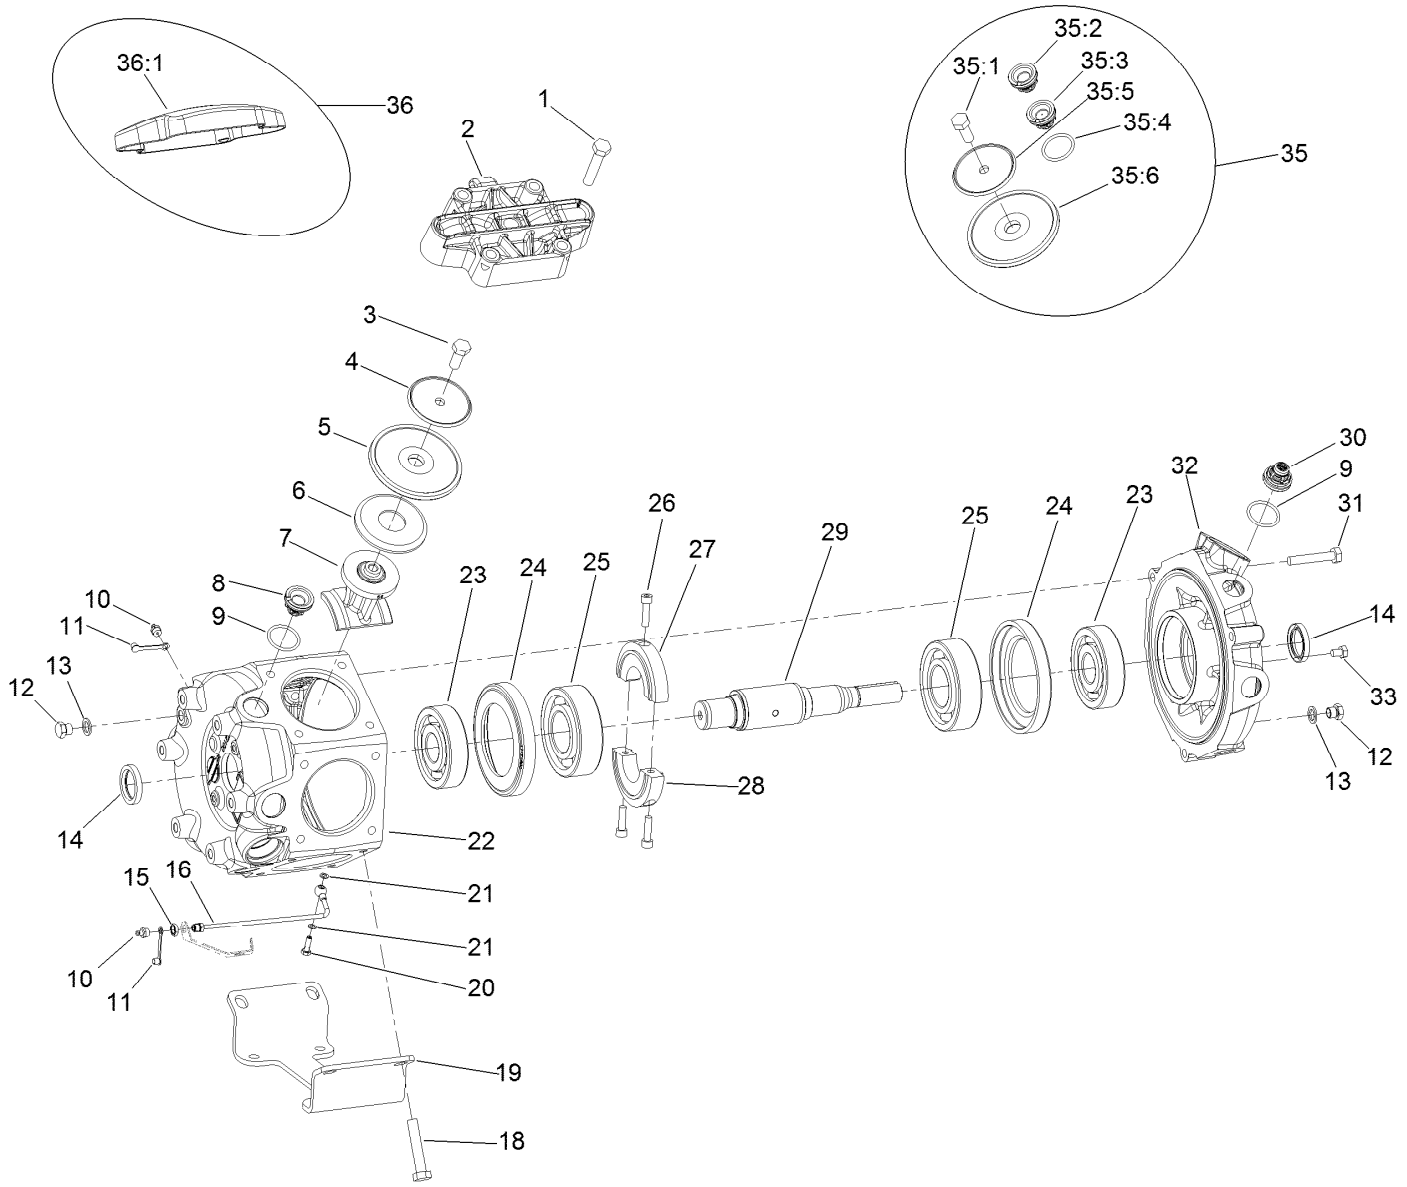


# Pump Assembly No. 137-4231

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 120-0773 | 20 | Bolt-Hex |
| 2 | 133-2824 | 6 | Cover-Pump, Hardened |
| 3 | 120-0777 | 6 | Bolt-Hex |
| 4 | 120-0778 | 6 | Disc-Diaphragm |
| 5 | 120-0779 | 6 | Diaphragm |
| 6 | 120-0780 | 6 | Disc-Backing, Diaphragm |
| 7 | 125-8141 | 6 | Rod-Connectiing |
| 8 | 99-0861 | 10 | Valve-Pump |
| 9 | 100-6651 | 12 | O-Ring |
| 10 | 133-2879 | 2 | Nipple-Grease |
| 11 | 133-2880 | 2 | Cap-Grease Nipple, Yellow |
| 12 | 120-0785 | 2 | Plug |
| 13 | 120-0786 | 2 | Seal |
| 14 | 120-0783 | 2 | Seal-Oil |
| 15 | 133-2878 | 1 | Nut |
| 16 | 133-2877 | 1 | Tube-Banjo, Long |
| 18 | 120-0774 | 4 | Bolt-Hex |
| 19 | 120-0787 | 1 | Foot-Pump |
| 20 | 133-2830 | 1 | Bolt-Banjo |
| 21 | 136-2251 | 2 | Gasket |
| 22 | 133-2821 | 1 | Housing-Pump, Main |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 23 | 120-0788 | 2 | Bearing-Ball |
| 24 | 133-2820 | 2 | Spacer-Metal |
| 25 | 120-0791 | 2 | Bearing-Ball |
| 26 | 125-8146 | 3 | Bolt-Allen |
| 27 | 133-2828 | 1 | Counter Weight |
| 28 | 133-2829 | 1 | Counter Weight |
| 29 | 133-2826 | 1 | Shaft - Crank |
| 30 | 120-0793 | 2 | Valve W/Hole |
| 31 | 120-0794 | 3 | Bolt-Hex |
| 32 | 133-2822 | 1 | Housing-Pump, Front |
| 33 | 120-0784 | 4 | Bolt-Hex |
| 35 | 120-0796 | 1 | Pump Kit |
| 35:1 | 120-0777 | 6 | Bolt-Hex |
| 35:2 | 99-0861 | 10 | Valve-Pump |
| 35:3 | 120-0793 | 2 | Valve W/Hole |
| 35:4 | 100-6651 | 12 | O-Ring |
| 35:5 | 120-0778 | 6 | Disc-Diaphragm |
| 35:6 | 120-0779 | 6 | Diaphragm |
| 36 | 133-2898 | 1 | Pump Head Kit |
| 36:1 | 133-2824 | 6 | Cover-Pump, Hardened |

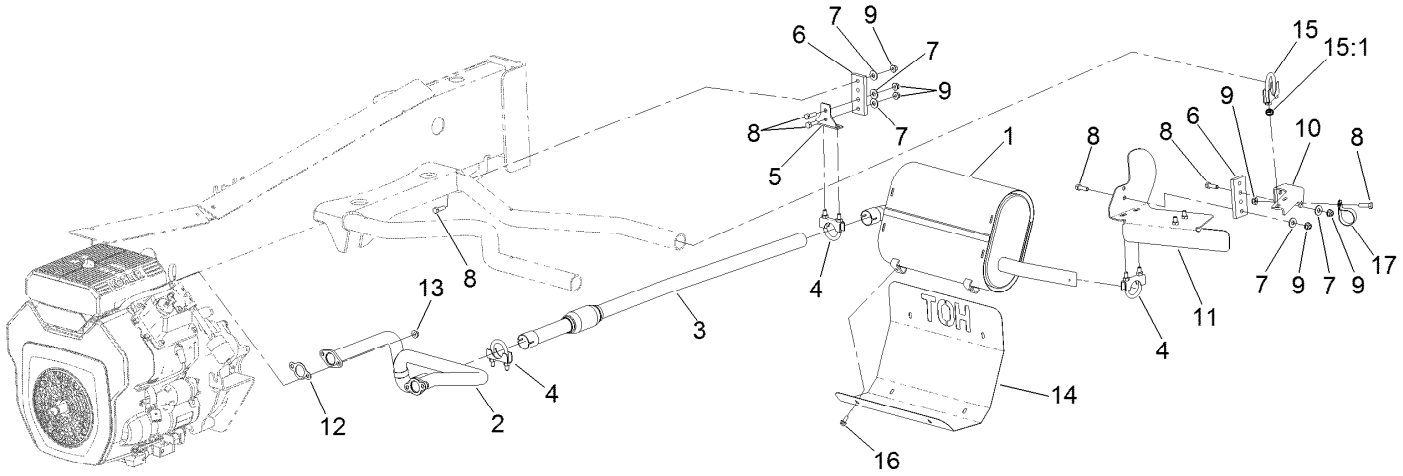


# Exhaust Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 127-9736 | 1 | Muffler-Venturi |
| 2 | 127-9734 | 1 | Manifold-Exhaust |
| 3 | 127-9735 | 1 | Pipe-Exhaust |
| 4 | 2112-11 | 4 | Clamp-Muffler |
| 5 | 130-7101 | 1 | Bracket-Hanger, Tailpipe |
| 6 | 117-0744 | 2 | Hanger-Muffler |
| 7 | 3256-3 | 7 | Washer-Flat |
| 8 | 322-5 | 8 | Screw-HH |
| 9 | 104-8300 | 8 | Nut-HF, NI |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 10 | 131-3286-03 | 1 | Mount-Muffler |
| 11 | 130-7143 | 1 | Sheild-Muffler |
| 12 | 110-6697 | 2 | Gasket-Exhaust |
| 13 | 92-6780 | 4 | Nut-HF |
| 14 | 127-9787 | 1 | Shield-Heat, Muffler |
| 15 | 2112-9 | 1 | Clamp |
| 15:1 | 32128-20 | 2 | Nut-HF |
| 16 | 3234-13 | 6 | Screw-HHF |
| 17 | 2412-74 | 1 | R-Clamp |

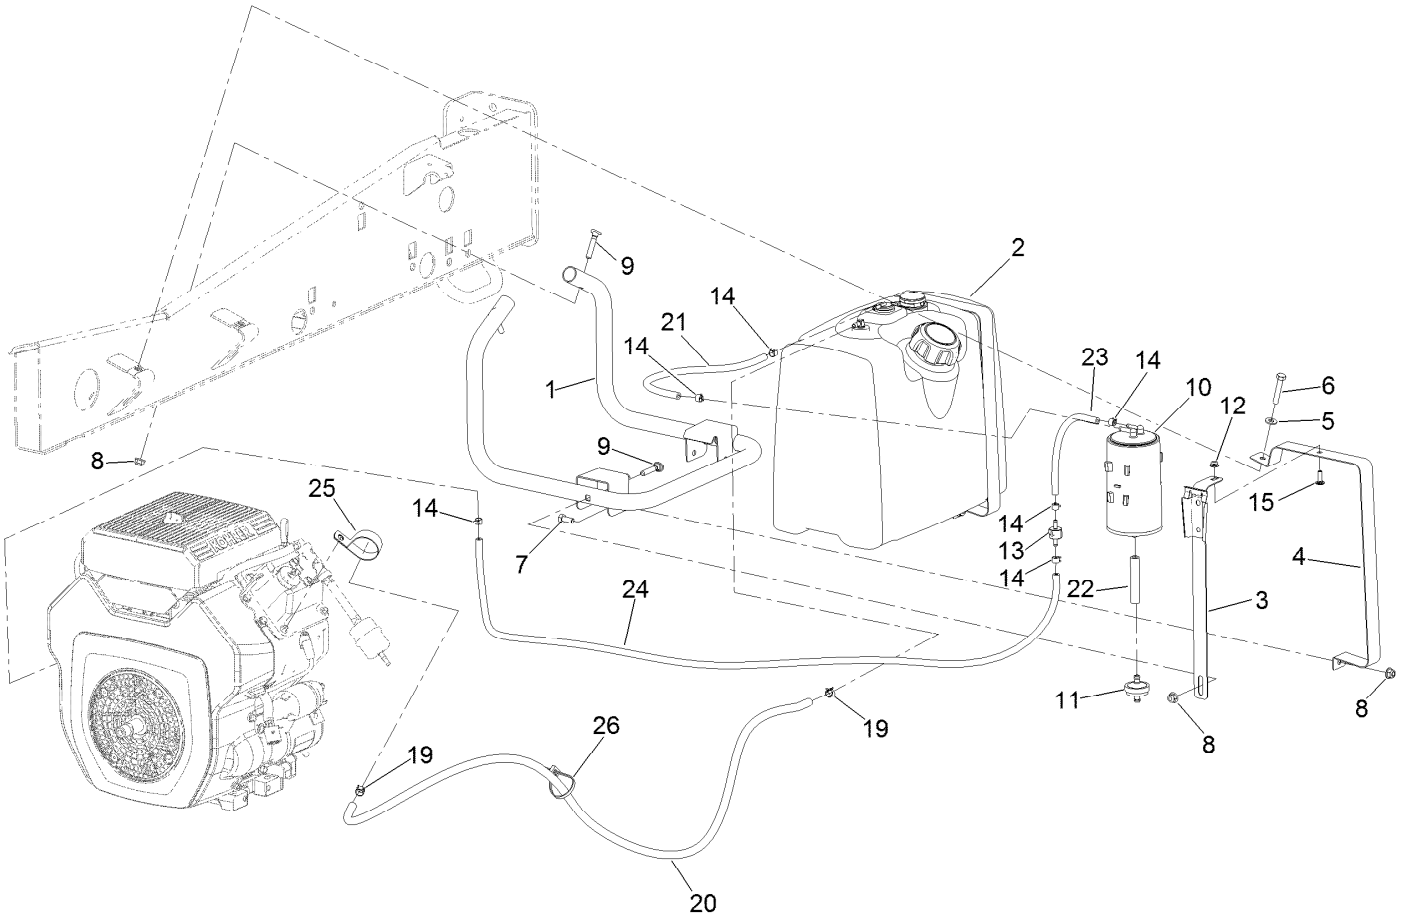


# Fuel Tank, Filter and Line Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 125-0850-03 | 1 | Tube-Mount, Fuel Tank |
| 2 | 115-9048 | 1 | Fuel Tank ASM |
| 3 | 125-8129-03 | 1 | Strap-Cannister, Carbon |
| 4 | 125-0853 | 2 | Strap-Fuel Tank |
| 5 | 33094-00 | 2 | Washer-Plain |
| 6 | 322-41 | 2 | Bolt-Hex,TAP |
| 7 | 322-3 | 2 | Screw-HH |
| 8 | 104-8300 | 5 | Nut-HF, NI |
| 9 | 17-9420 | 3 | Screw-Handle |
| 10 | 127-8685 | 1 | Canister-Carbon |
| 11 | 115-7854 | 1 | Filter-Fuel, Inline |
| 12 | 104-7201 | 1 | Nut-HF, NI |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 133-8499 | 1 | Valve-Check, Vacuum |
| 14 | 2412-80 | 6 | Clamp-Hose |
| 15 | 1-807512 | 1 | Bolt-CARR |
| 19 | 2412-98 | 2 | Clamp-Hose |
| 20 | 110-3372 | 1 | Hose-Fuel |
| 21 | 112-7048 | 1 | Hose-Fuel |
| 22 | 110-0047 | 1 | Hose-Fuel |
| 23 | 115-7871 | 1 | Hose-Fuel |
| 24 | 119-6073 | 1 | Hose-Fuel |
| 25 | 2412-147 | 1 | Clamp-R |
| 26 | 3290-378 | 1 | Tie-Cable |

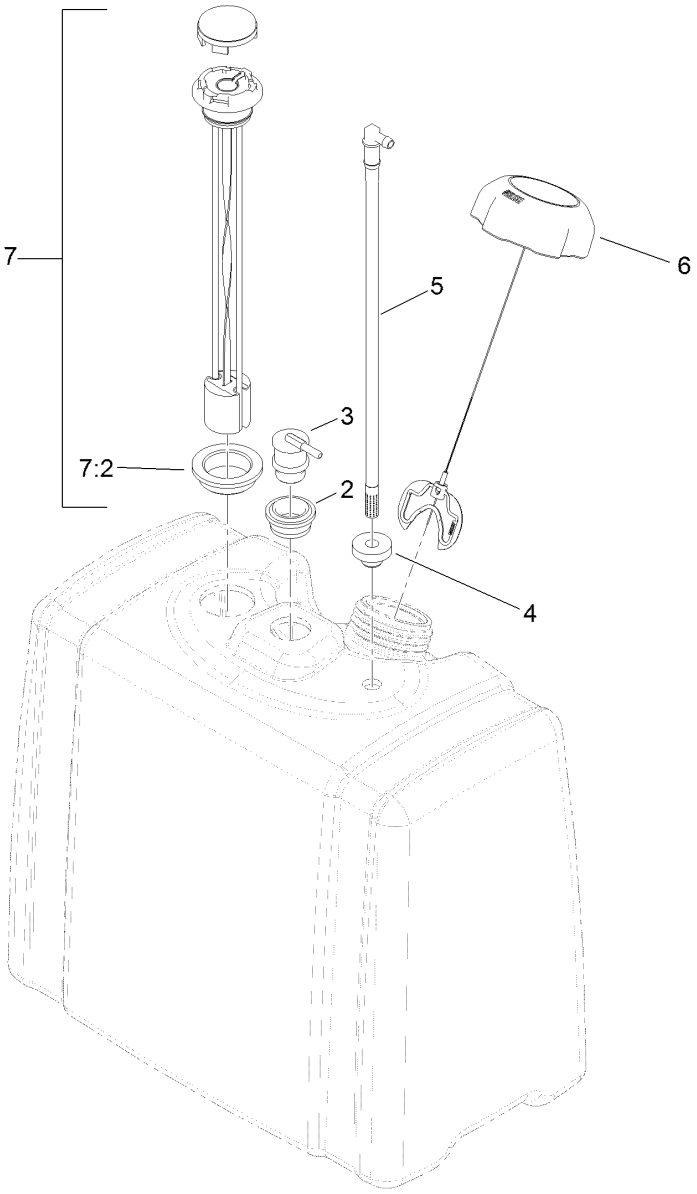


# Fuel Tank Assembly No. 115-9048


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 2 | 114-0284 | 1 | Grommet |
| 3 | 114-0285 | 1 | Valve-Rollover |
| 4 | 46-6560 | 1 | Bushing |
| 5 | 115-9044 | 1 | Pipe-Stand |
| 6 | 137-4127 | 1 | Cap-Fuel |
| 7 | 119-0509 | 1 | Gauge ASM |
| 7:2 | 119-0508 | 1 | Seal |

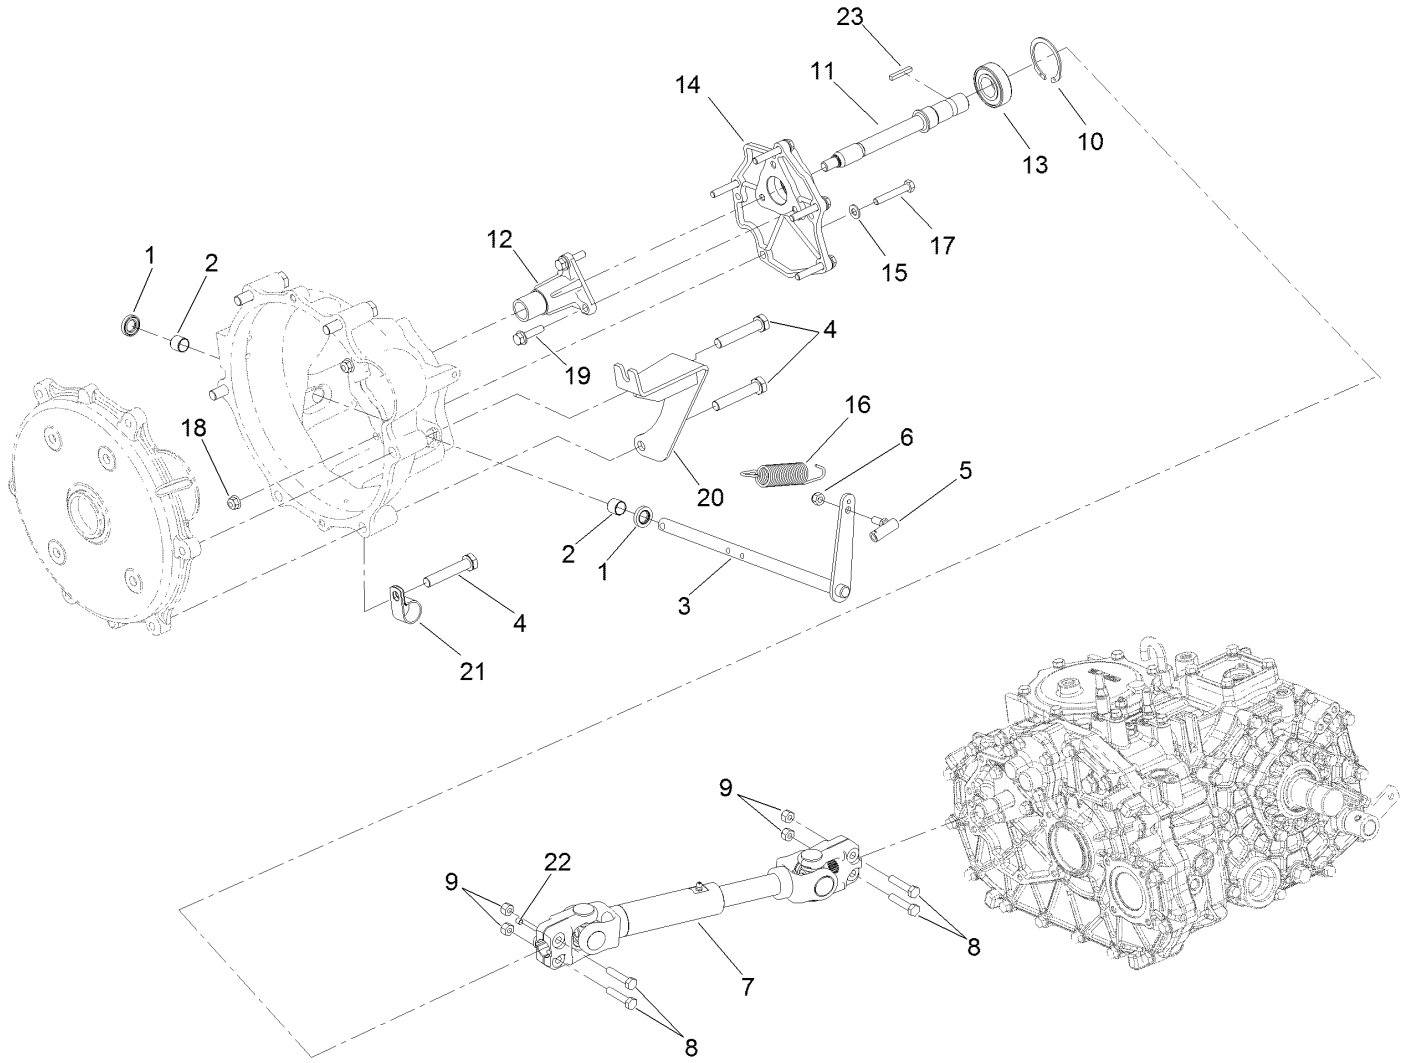


# Driveshaft Connection Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 87-1920 | 2 | Seal-Oil |
| 2 | 87-3770 | 2 | Bushing-Housing, Bell |
| 3 | 115-2311 | 1 | Lever-Clutch |
| 4 | 107-7983 | 6 | Screw-HH |
| 5 | 2411-33 | 1 | Balljoint-RH (W/Grommet) |
| 6 | 3296-4 | 1 | Nut-Lock |
| 7 | 119-6040 | 1 | Driveshaft ASM |
| 8 | 322-8 | 4 | Screw-HH |
| 9 | 3296-29 | 4 | Nut-Lock, NI |
| 10 | 32151-71 | 1 | Ring-Retaining, Internal |
| 11 | 125-0797 | 1 | Shaft-Output |
| 12 | 87-5320 | 1 | Release-Guide |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 251-82 | 1 | Bearing-Ball |
| 14 | 125-0820 | 1 | Cover-Bearing Support |
| 15 | 3256-23 | 5 | Washer-Plain |
| 16 | 68-9950 | 1 | Spring-Traction |
| 17 | 322-10 | 5 | Screw-HH |
| 18 | 104-8300 | 5 | Nut-HF, NI |
| 19 | 119-4036 | 3 | Screw-HHF |
| 20 | 125-8063-0P | 1 | Bracket ASM - Clutch Cable |
| 21 | 2412-82 | 1 | Clamp-R |
| 22 | 3245-32 | 1 | Screw-HSH |
| 23 | 92-0049 | 1 | Key-Square |

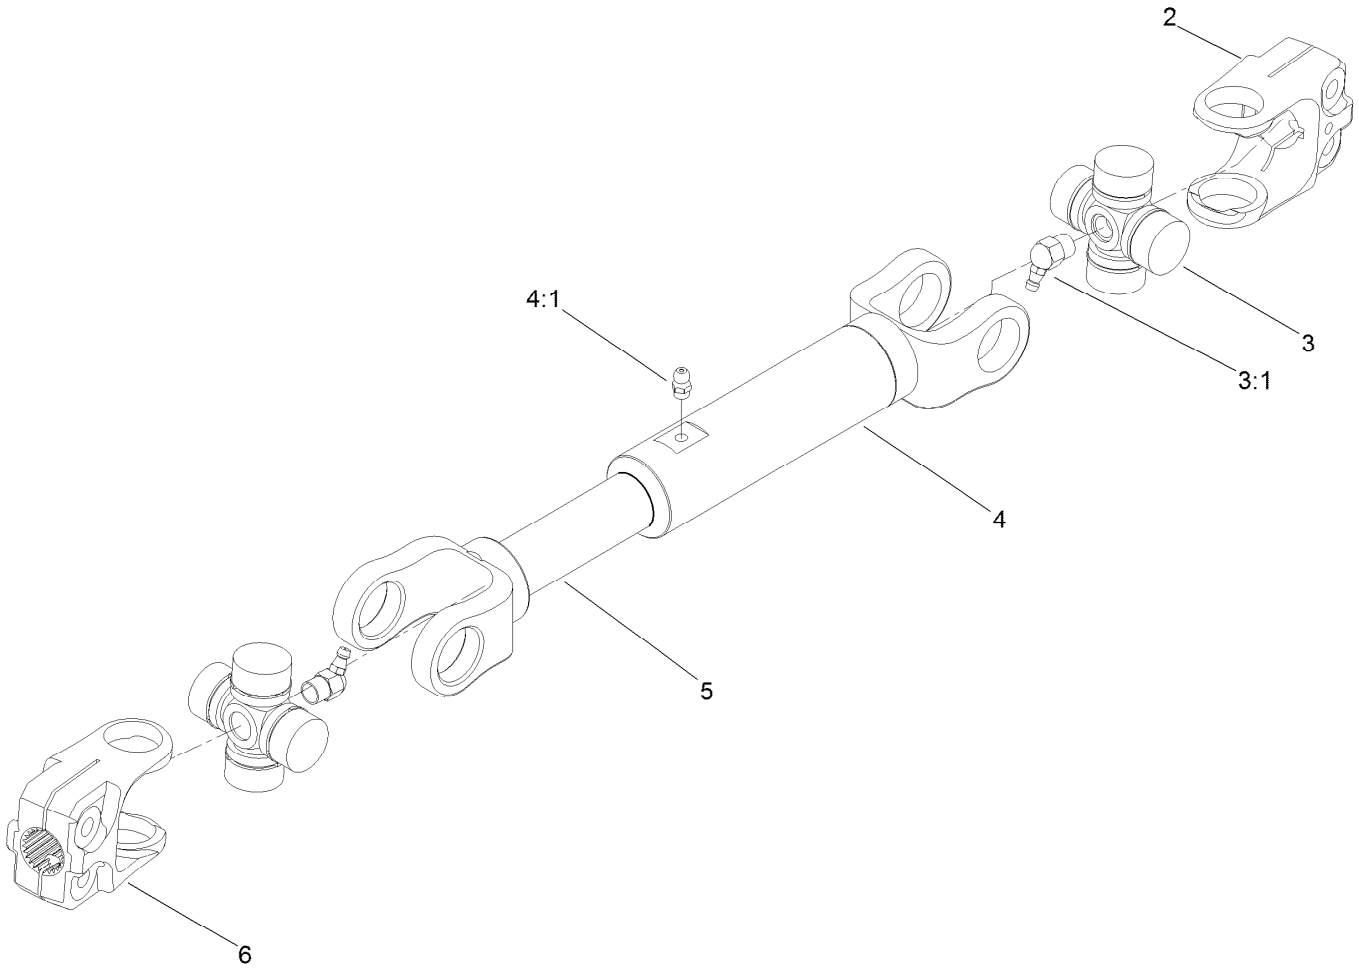


# Driveshaft Assembly No. 119-6040


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 2 | 100-8633 | 1 | Yoke-Keyed |
| 3 | 54-9180 | 2 | U-Joint Kit |
| 3:1 | 62-3820 | 1 | Fitting-Grease |
| 4 | 110-4706 | 1 | Tube-Yoke, Slip |
| 4:1 | 302-58 | 1 | Fitting-Straight |
| 5 | 110-4705 | 1 | Shaft-Yoke, Slip |
| 6 | 100-8632 | 1 | Yoke-Splined |

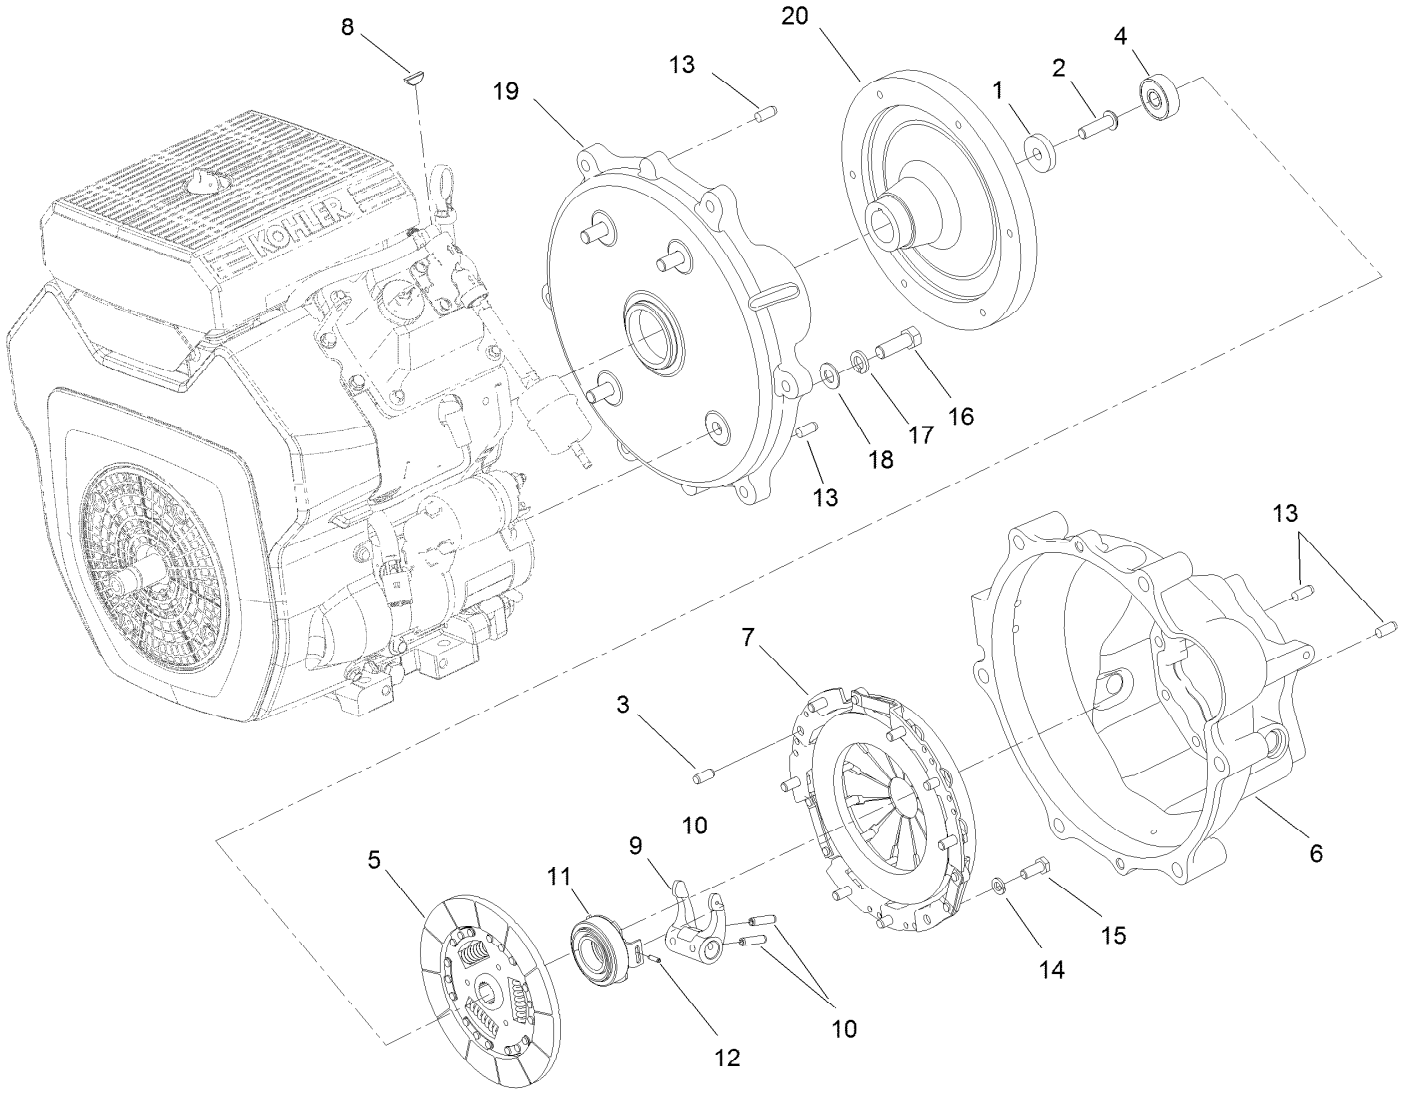


# Clutch and Bell Housing Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 87-6080 | 1 | Washer |
| 2 | 3274-63 | 1 | Screw-HSBH |
| 3 | 42-7160 | 3 | Pin |
| 4 | 87-6460 | 1 | Bearing-Ball (W/Seal) |
| 5 | 98-2959 | 1 | Disc-Clutch |
| 6 | 104-9249 | 1 | Housing-Bell |
| 7 | 98-2958 | 1 | Cover-Clutch |
| 8 | 3257-5 | 1 | Key-Woodruff |
| 9 | 87-5300 | 1 | Fork-Clutch |
| 10 | 32121-24 | 2 | Pin-Spring |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 11 | 110-2538 | 1 | Bearing-Release, Clutch |
| 12 | 32121-7 | 1 | Pin-Roll, Slotted |
| 13 | 87-1910 | 4 | Pin-Dowel |
| 14 | 3253-4 | 6 | Washer-Lock |
| 15 | 33114-020 | 6 | Screw-HH |
| 16 | 324-5 | 4 | Screw-HH |
| 17 | 3253-6 | 4 | Washer-Lock |
| 18 | 3256-25 | 4 | Washer-Flat |
| 19 | 107-7991 | 1 | Adapter-Clutch |
| 20 | 87-6480 | 1 | Flywheel |

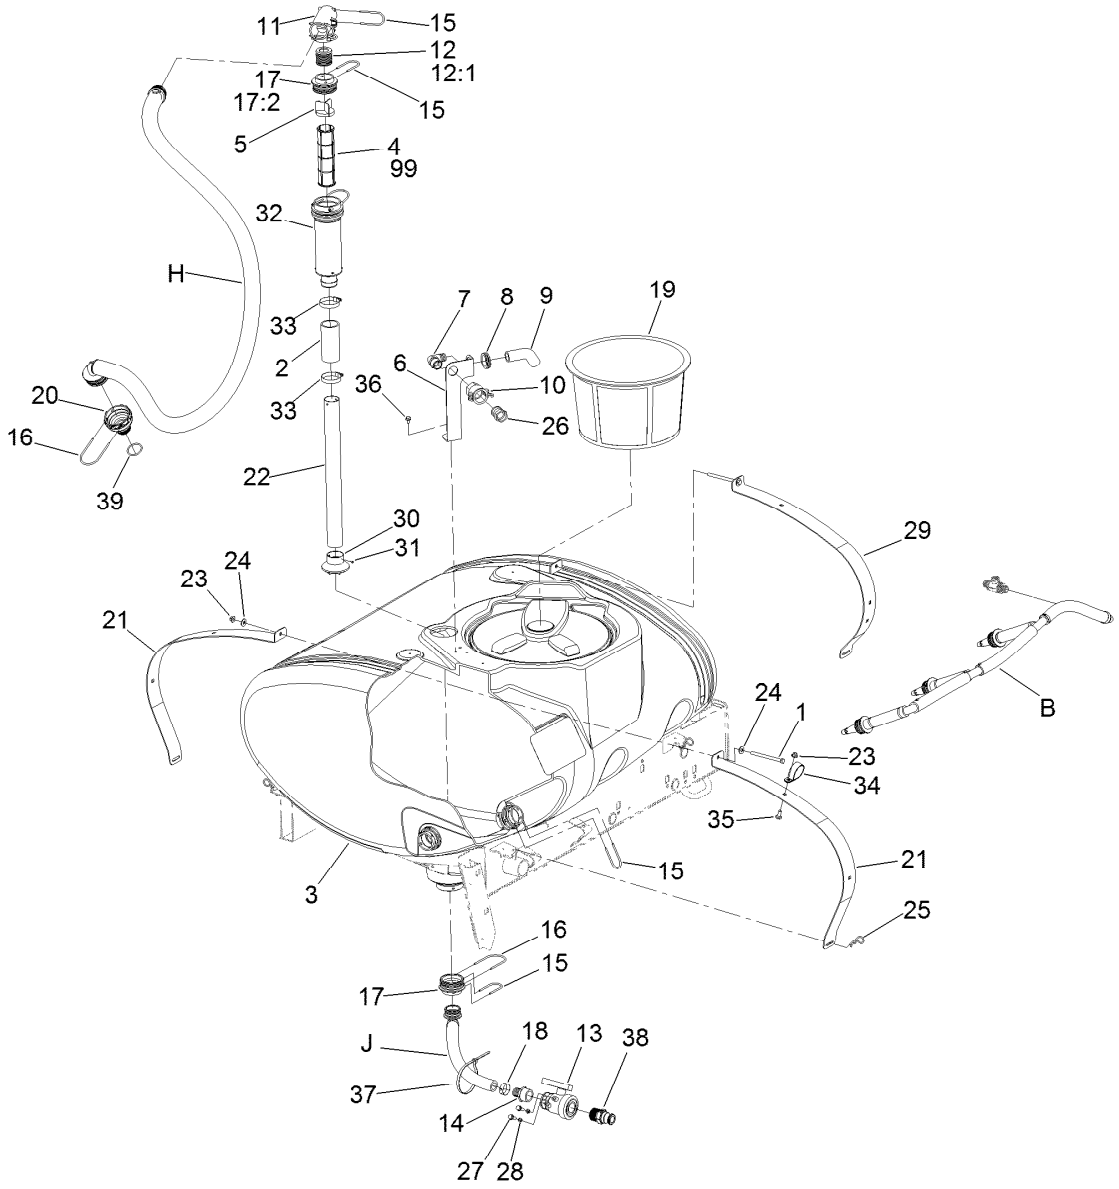


# Spray Tank Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 323-59 | 2 | Bolt-Cap |
| 2 | 100-8649 | 1 | Hose-Suction |
| 3 | 121-6491 | 1 | Tank ASM |
| 4 | 100-8642 | 1 | Screen-Suction |
| 5 | 100-8641 | 1 | Vane-Screen |
| 6 | 110-5082-03 | 1 | Bracket-Anti Siphon |
| 7 | 41140 | 1 | Elbow |
| 8 | 110-5090 | 1 | Grommet |
| 9 | 110-5088 | 1 | Hose-Fill |
| 10 | 100-6779 | 1 | Coupling-Female |
| 11 | 100-6704 | 1 | Tee |
| 12 | 106-4947 | 1 | Connector |
| 12:1 | 100-8637 | 2 | O-Ring |
| 13 | 108-0069 | 1 | Valve-Ball |
| 14 | 110-5224 | 1 | Fitting-Barbed, Straight |
| 15 | 100-8635 | 8 | Fork |
| 16 | 117-7996 | 2 | Fork |
| 17 | 117-7928 | 2 | Adapter ASM |
| 17:2 | 100-6989 | 1 | O-Ring |
| 18 | 2412-34 | 1 | Clamp-Hose |
| 19 | 119-9419 | 1 | Basket-Filter |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 20 | 133-2883 | 1 | Fitting |
| 21 | 121-6477-03 | 2 | Band-Tank |
| 22 | 125-7997 | 1 | Tube-Suction |
| 23 | 104-8301 | 3 | Nut-HF, NI |
| 24 | 3256-4 | 4 | Washer-Flat |
| 25 | 3290-343 | 4 | Pin-Hair |
| 26 | 41316 | 1 | Adapter-Quick |
| 27 | 3234-29 | 2 | Screw-HHF |
| 28 | 3296-47 | 2 | Nut-Lock,NI |
| 29 | 125-0987-03 | 2 | Band-Tank, Rear |
| 30 | 100-6714 | 1 | Foot-Tube, Suction |
| 31 | 108-3270 | 1 | Screw-TAP |
| 32 | 130-7096 | 1 | Filter ASM |
| 33 | 2412-130 | 2 | Clamp-Hose |
| 34 | 114-9566 | 1 | Clamp-R |
| 35 | 3231-2 | 1 | Bolt-CARR |
| 36 | 3234-30 | 1 | Screw-HHF |
| 37 | 1-809066 | 1 | Cable Tie-Plastic |
| 38 | 132-7787 | 1 | Coupler-Quick |
| 39 | 133-2884 | 1 | O-Ring |
| 99 | 133-0385 | 2 | Screen-Teejet, 50 Mesh |

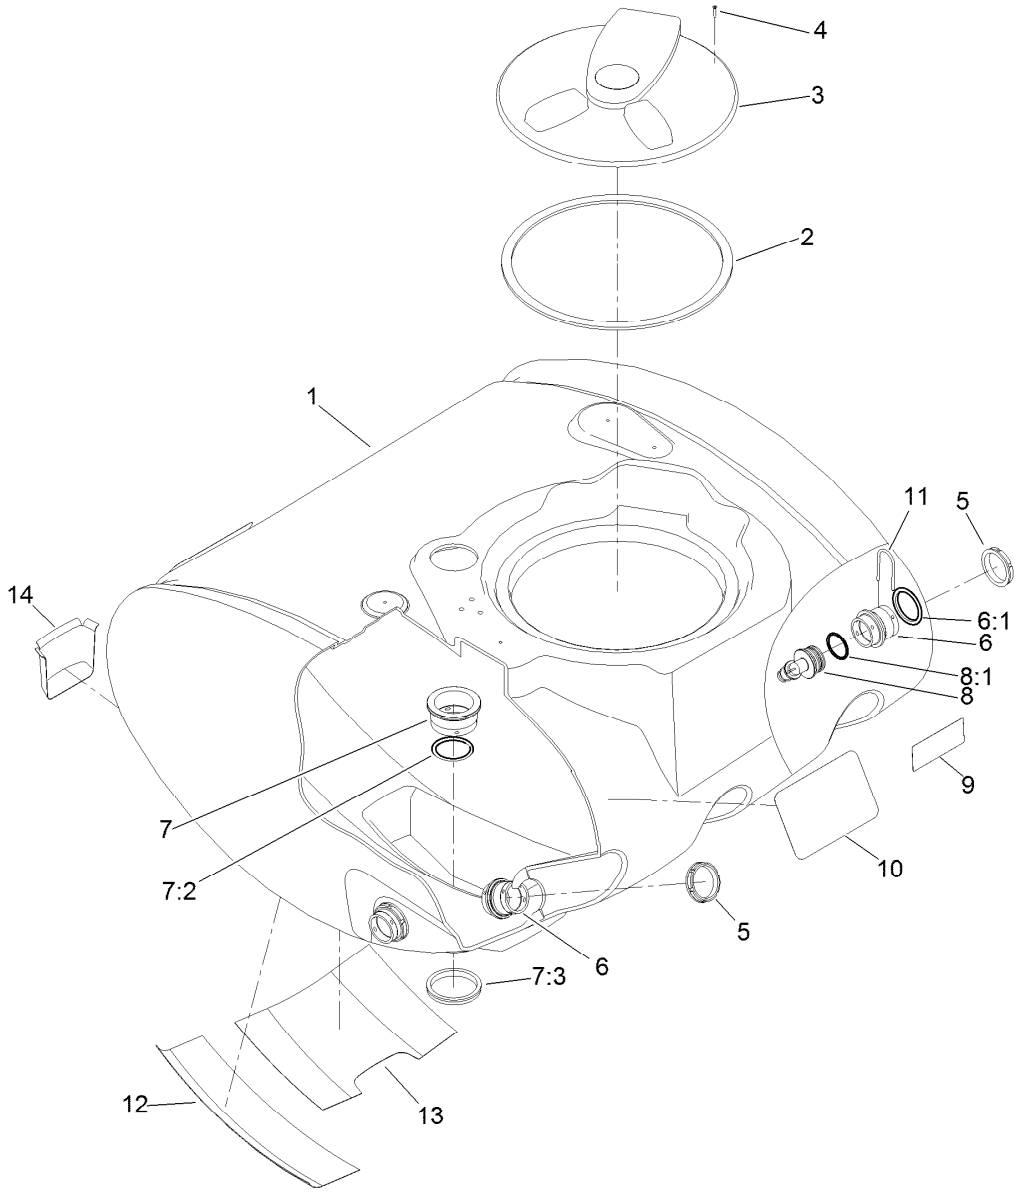



# Tank Assembly No. 121-6491

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 121-6490 | 1 | Tank-175 Gallon |
| 2 | 119-9378 | 1 | Gasket-Lid, Tank |
| 3 | 138-6283 | 1 | Lid ASM - Sprayer Tank |
| 4 | 107-8635 | 8 | Screw-PFH |
| 5 | 100-7051 | 4 | Nut-Bulkhead |
| 6 | 108-3358 | 5 | Fitting-Bulkhead |
| 6:1 | 107-2864 | 1 | Gasket-Bulkhead |
| 7 | 117-7851 | 1 | Bulkhead ASM |
| 7:2 | 100-8646 | 1 | Gasket-Bulkhead |
| 7:3 | 100-8647 | 1 | Nut-Bulkhead |
| 8 | 106-4933 | 2 | Hosebarb ASM |
| 8:1 | 100-8637 | 1 | O-Ring |
| 9 | 120-0622 | 1 | Decal-Warning |
| 10 | 121-6486 | 2 | Decal-Tank |
| 11 | 100-8635 | 2 | Fork |
| 12 | 125-7967 | 1 | Heat Tape-Shield, Front |
| 13 | 125-7968 | 1 | Heat Tape-Shield, Side |
| 14 | 125-7969 | 1 | Heat Tape-Shield, Sump |

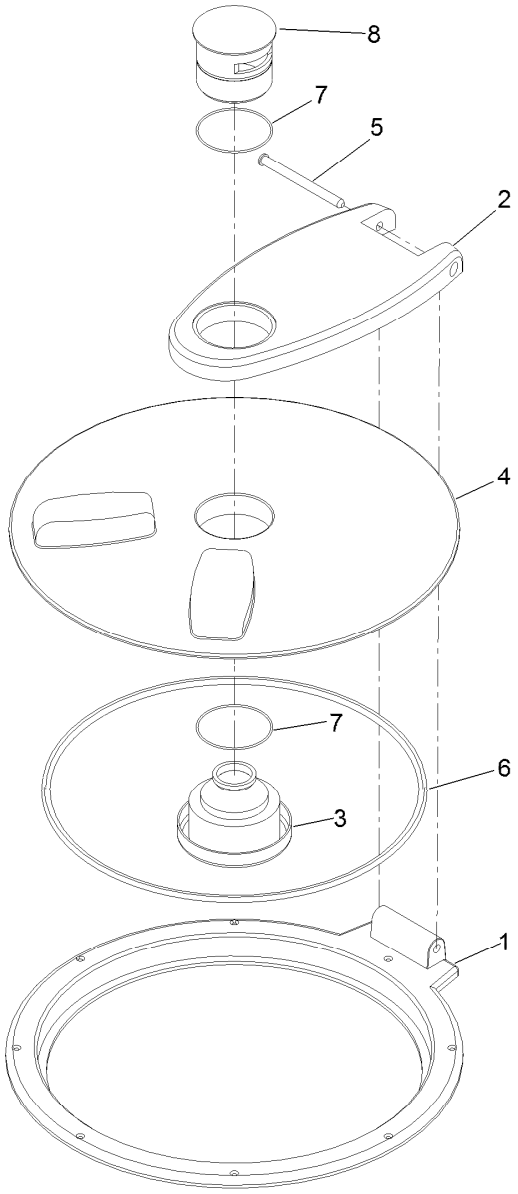



# Spray Tank Lid Assembly No. 138-6283

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 119-9381 | 1 | Ring-Lid |
| 2 | 119-9382 | 1 | Arm-Lid |
| 3 | 119-9383 | 1 | Vent-Lid |
| 4 | 119-9384 | 1 | Cover-Lid |
| 5 | 119-9385 | 1 | Pin-Pivot |
| 6 | 138-6281 | 1 | Seal - Tank Lid |
| 7 | 119-9386 | 2 | O-Ring |
| 8 | 119-9387 | 1 | Cap-Lid |

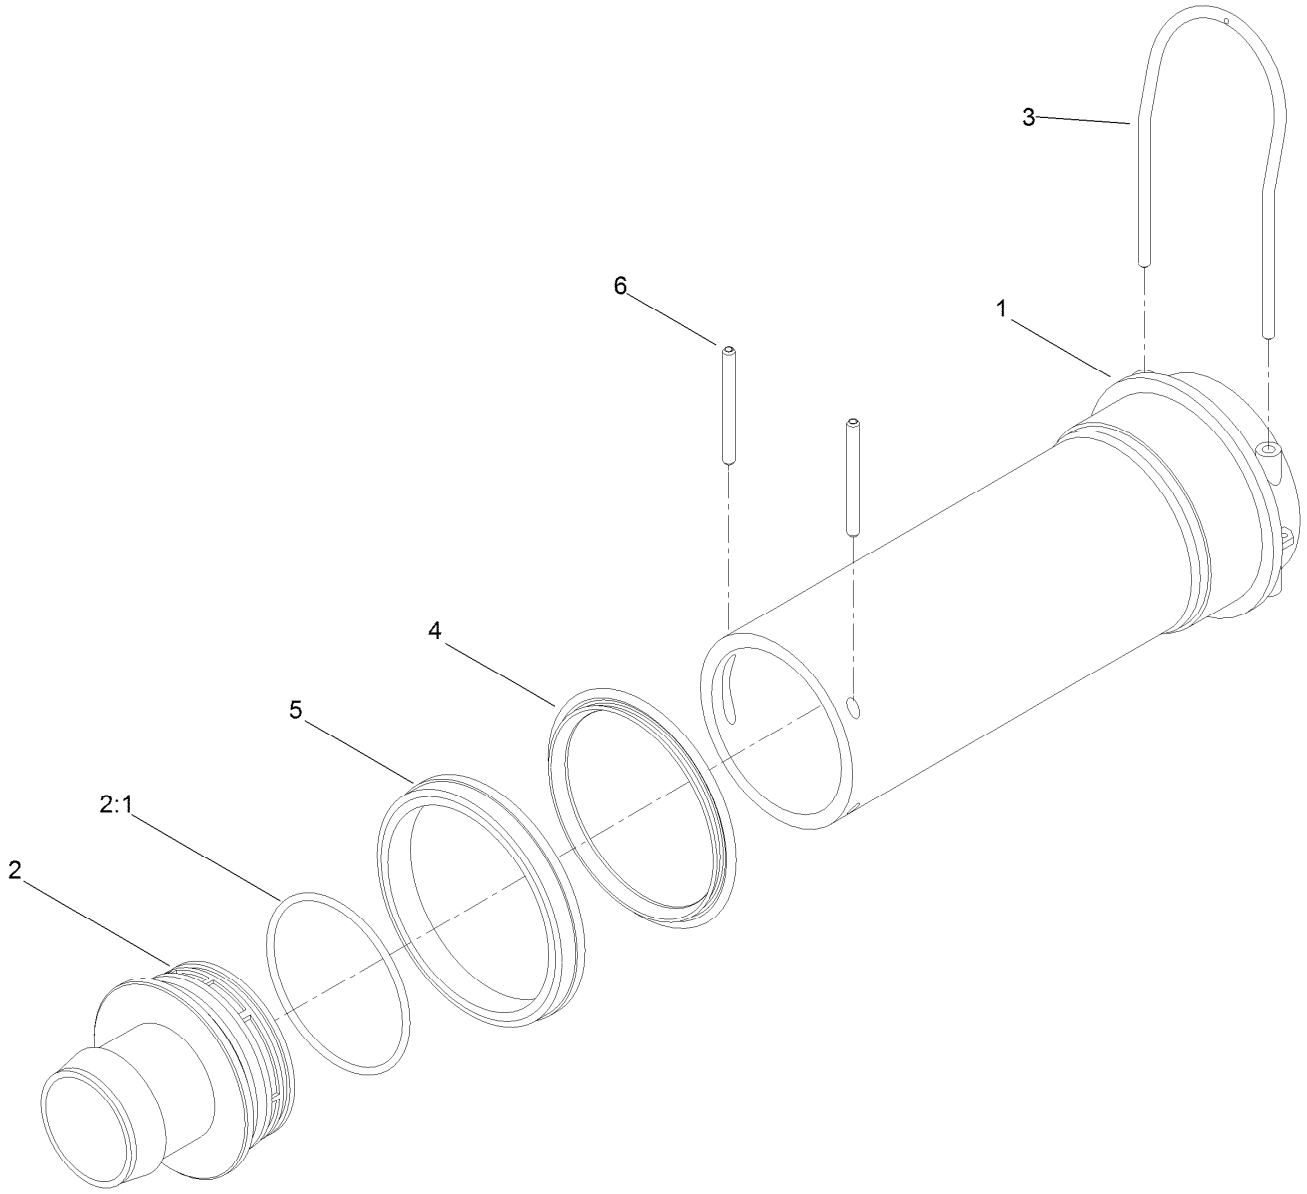


# Filter Assembly No. 130-7096

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 100-8643 | 1 | Housing-Filter |
| 2 | 106-4942 | 1 | Hosebarb-Straight |
| 2:1 | 100-6989 | 1 | O-Ring |
| 3 | 100-8636 | 1 | Fork-Special |
| 4 | 100-8646 | 1 | Gasket-Bulkhead |
| 5 | 100-8647 | 1 | Nut-Bulkhead |
| 6 | 100-8644 | 2 | Pin-Expansion |

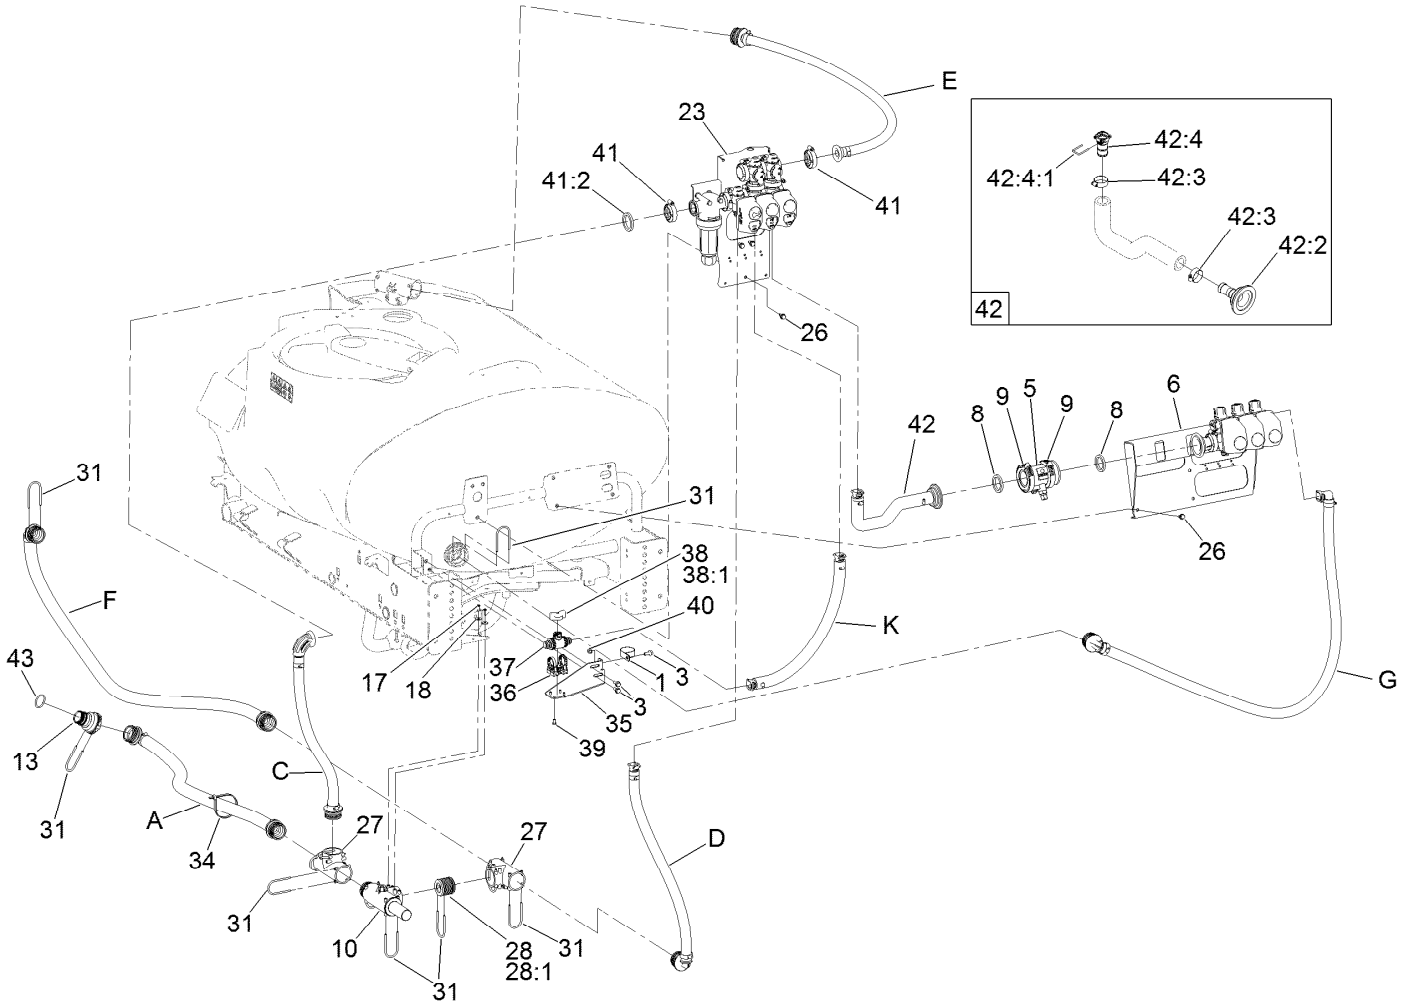



# Spray Tank Valve Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 2412-147 | 1 | Clamp-R |
| 3 | 3234-47 | 3 | Screw-HHF |
| 5 | 138-6128 | 1 | Flow Meter ASM |
| 6 | | 1 | Manifold ASM-Section Valve, Mp1750 ● |
| 8 | 104-9090 | 2 | Gasket |
| 9 | 104-9089 | 2 | Clamp-Screw, Worm |
| 10 | 117-7874 | 1 | Relief Valve ASM |
| 13 | 133-2881 | 1 | Fitting |
| 17 | 32144-32 | 2 | Screw-PPH |
| 18 | 3256-61 | 2 | Washer-Flat |
| 23 | | 1 | Manifold ASM-Agitation, Mp1750 ● |
| 26 | 32104-32 | 7 | Screw-HWH |
| 27 | 100-6704 | 2 | Tee |
| 28 | 106-4947 | 1 | Connector |
| 28:1 | 100-8637 | 2 | O-Ring |
| 31 | 100-8635 | 12 | Fork |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 34 | 3334-945 | 3 | Tie-Cable |
| 35 | 132-4318-03 | 1 | Mount-Bracket, Agitation |
| 36 | 132-4302 | 1 | Mount-Valve |
| 37 | 131-0249 | 1 | On/Off 2-Way Valve Kit |
| 38 | 131-0264 | 1 | Agitation Throttling Handle Kit |
| 38:1 | 131-0263 | 1 | Screw-Handle |
| 39 | 33113-012 | 4 | Screw-HH |
| 40 | 104-8300 | 1 | Nut-HF, NI |
| 41 | 127-9829 | 2 | Clamp/Gasket Kit |
| 41:2 | 127-1145 | 1 | Gasket-Flange |
| 42 | 132-4343 | 1 | Master Hose ASM |
| 42:2 | 107-8704 | 1 | Hosebarb |
| 42:3 | 2412-34 | 2 | Clamp-Hose |
| 42:4 | 127-9806 | 1 | Fitting Kit |
| 42:4:1 | 133-0398 | 1 | Pin-Fork |
| 43 | 133-2882 | 1 | O-Ring |

● Not serviced separately

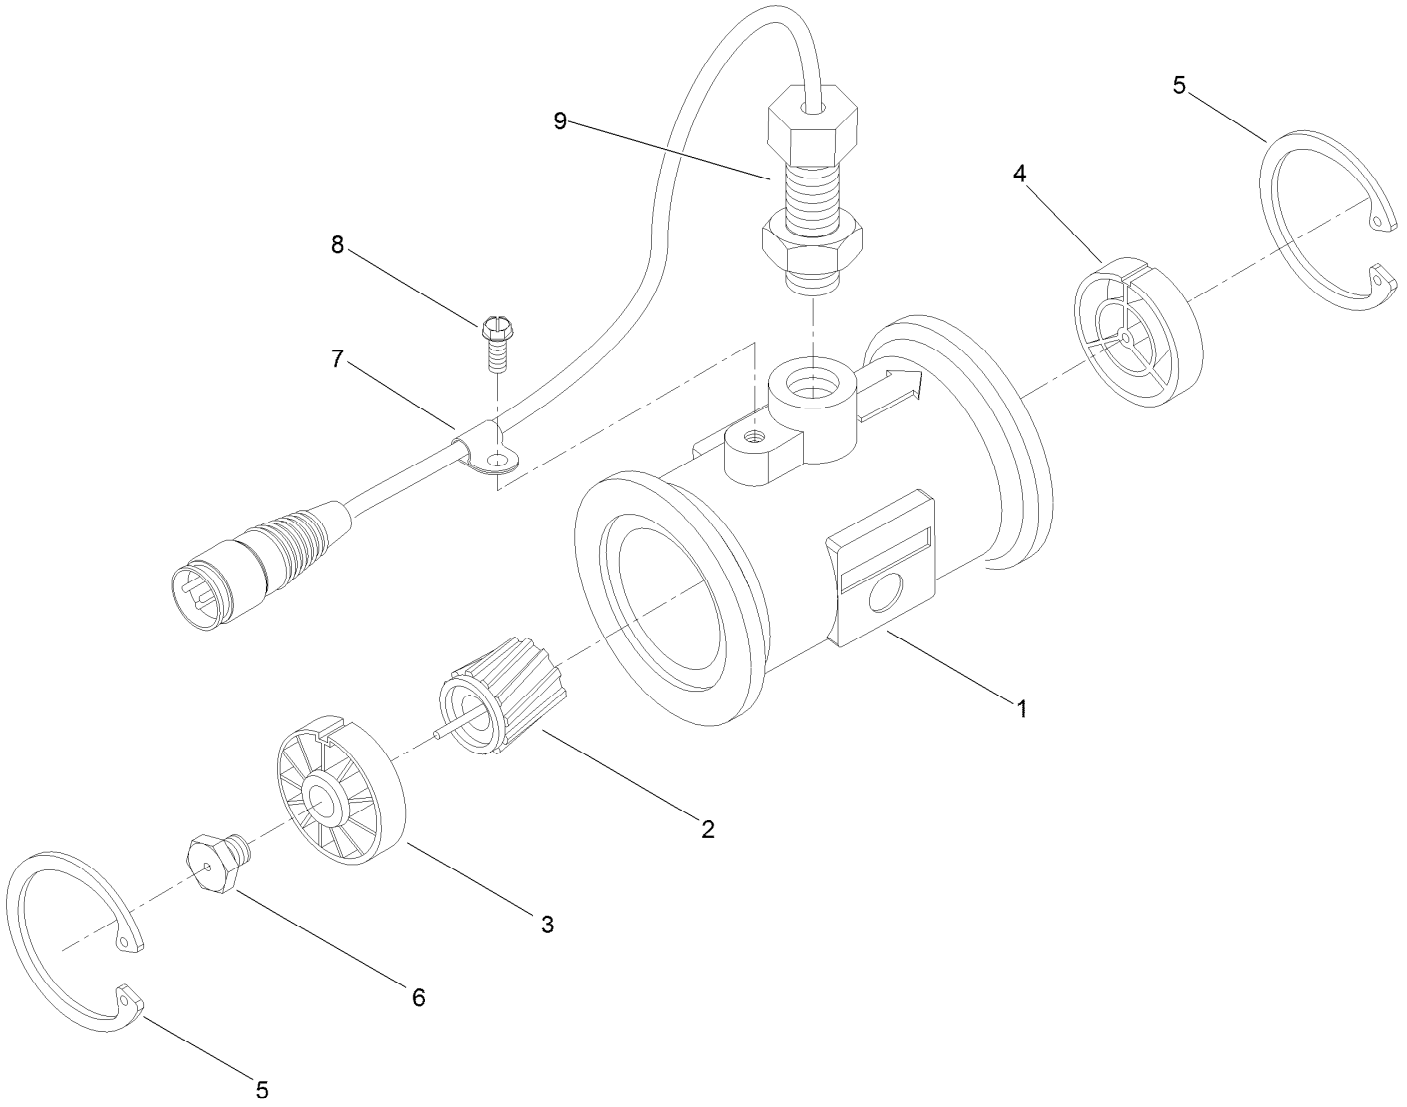


# Flow Meter Assembly No. 138-6128


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 106-1042 | 1 | Body-Meter, Flow |
| 2 | 104-9059 | 1 | Rotor / Magnet ASM |
| 3 | 104-9060 | 1 | Upstream Hub And Bearing ASM |
| 4 | 104-9061 | 1 | Downstream Hub ASM |
| 5 | 104-9062 | 2 | Ring-Retaining, Internal |
| 6 | 42480 | 1 | Stud-Turbine (W / Bearing) |
| 7 | 104-9063 | 1 | Clamp-Cable |
| 8 | 104-9064 | 1 | Screw-HWHTF |
| 9 | 138-6129 | 1 | Sensor-Meter, Flow |

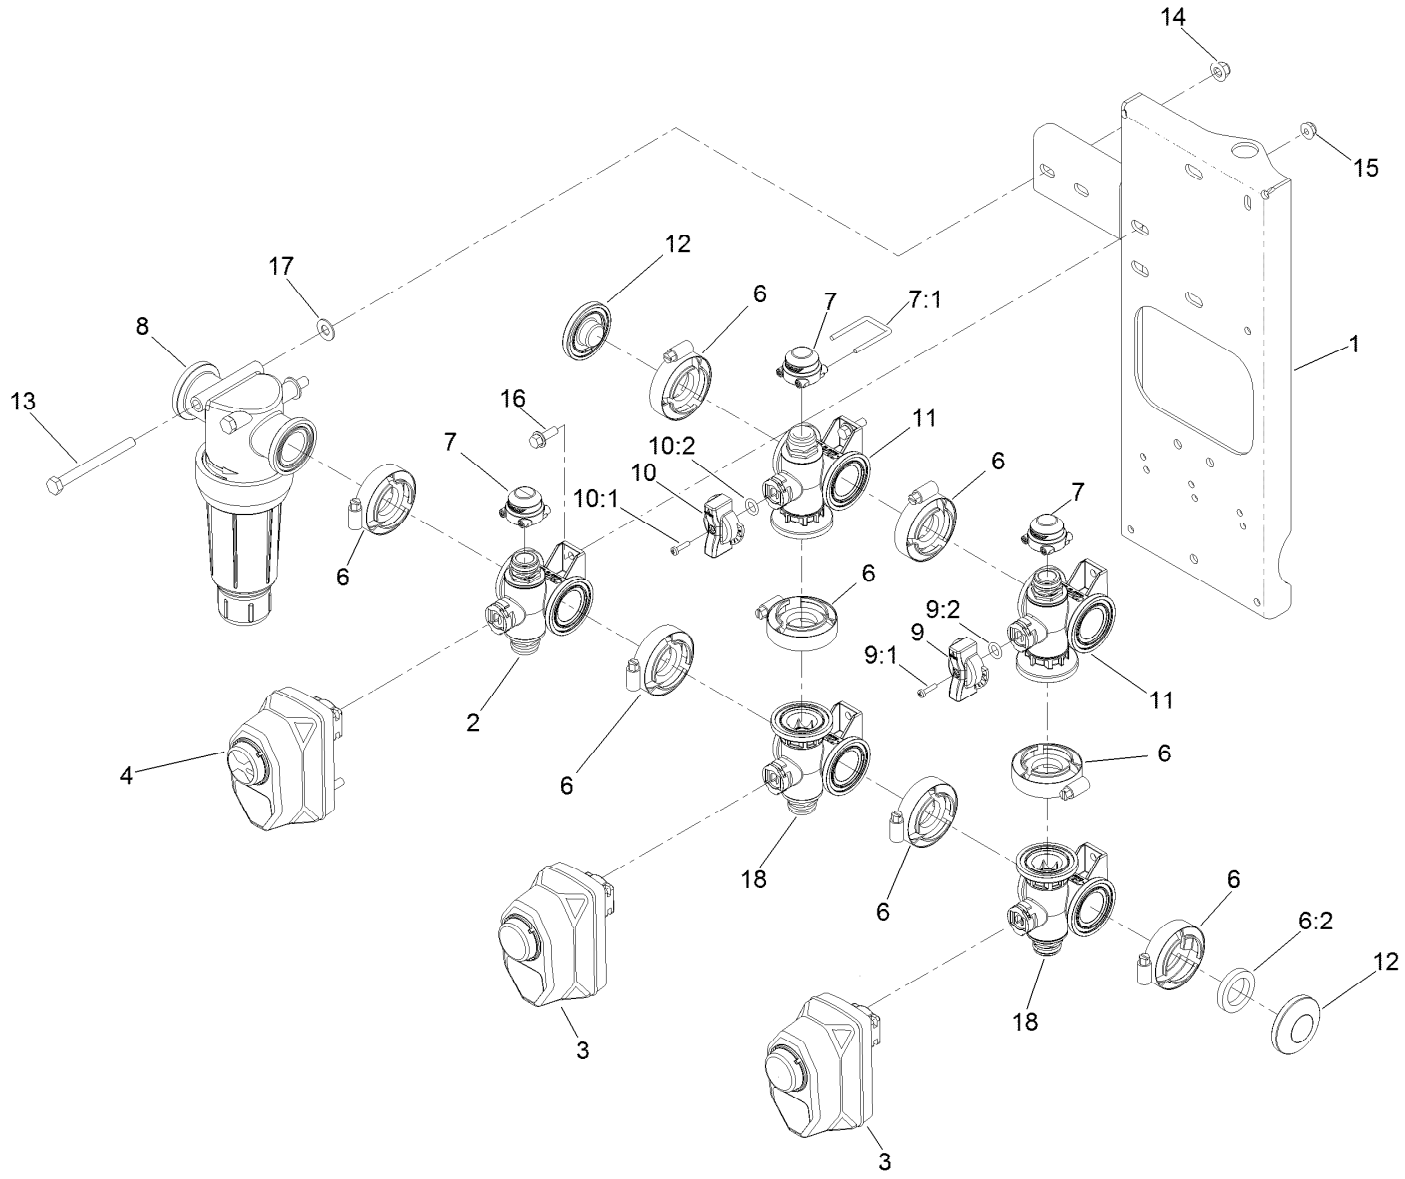


# Agitation Manifold Valve Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 137-4288 | 1 | Mount-Valve |
| 2 | 127-9804 | 1 | Regulating Valve Body ASM |
| 3 | 140-7377 | 2 | Kit-Actuator Pi, On/Off |
| 4 | 144-6163 | 1 | Kit-Actuator Regulating Pi |
| 6 | 127-9829 | 8 | Clamp/Gasket Kit |
| 6:2 | 127-1145 | 1 | Gasket-Flange |
| 7 | 127-9811 | 3 | Fitting-Cap, Female |
| 7:1 | 133-0398 | 1 | Pin-Fork |
| 8 | 131-3791 | 1 | Filter-Pressure |
| 9 | 131-0266 | 1 | Master Regulating Handle Kit |
| 9:1 | 131-0263 | 1 | Screw-Handle |
| 9:2 | 127-1197 | 1 | O-Ring-Stem |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 10 | 131-0265 | 1 | Agitation Regulating Handle Kit |
| 10:1 | 131-0263 | 1 | Screw-Handle |
| 10:2 | 127-1197 | 1 | O-Ring-Stem |
| 11 | 131-0253 | 2 | Manifold Valve Kit |
| 12 | 127-9815 | 2 | Fitting-Cap |
| 13 | 322-22 | 2 | Screw-HH |
| 14 | 104-8300 | 2 | Nut-HF, NI |
| 15 | 104-7201 | 6 | Nut-HF, NI |
| 16 | 3234-4 | 6 | Screw-HHF |
| 17 | 107-0279 | 2 | Washer |
| 18 | 131-7256 | 2 | Manifold Valve Kit |

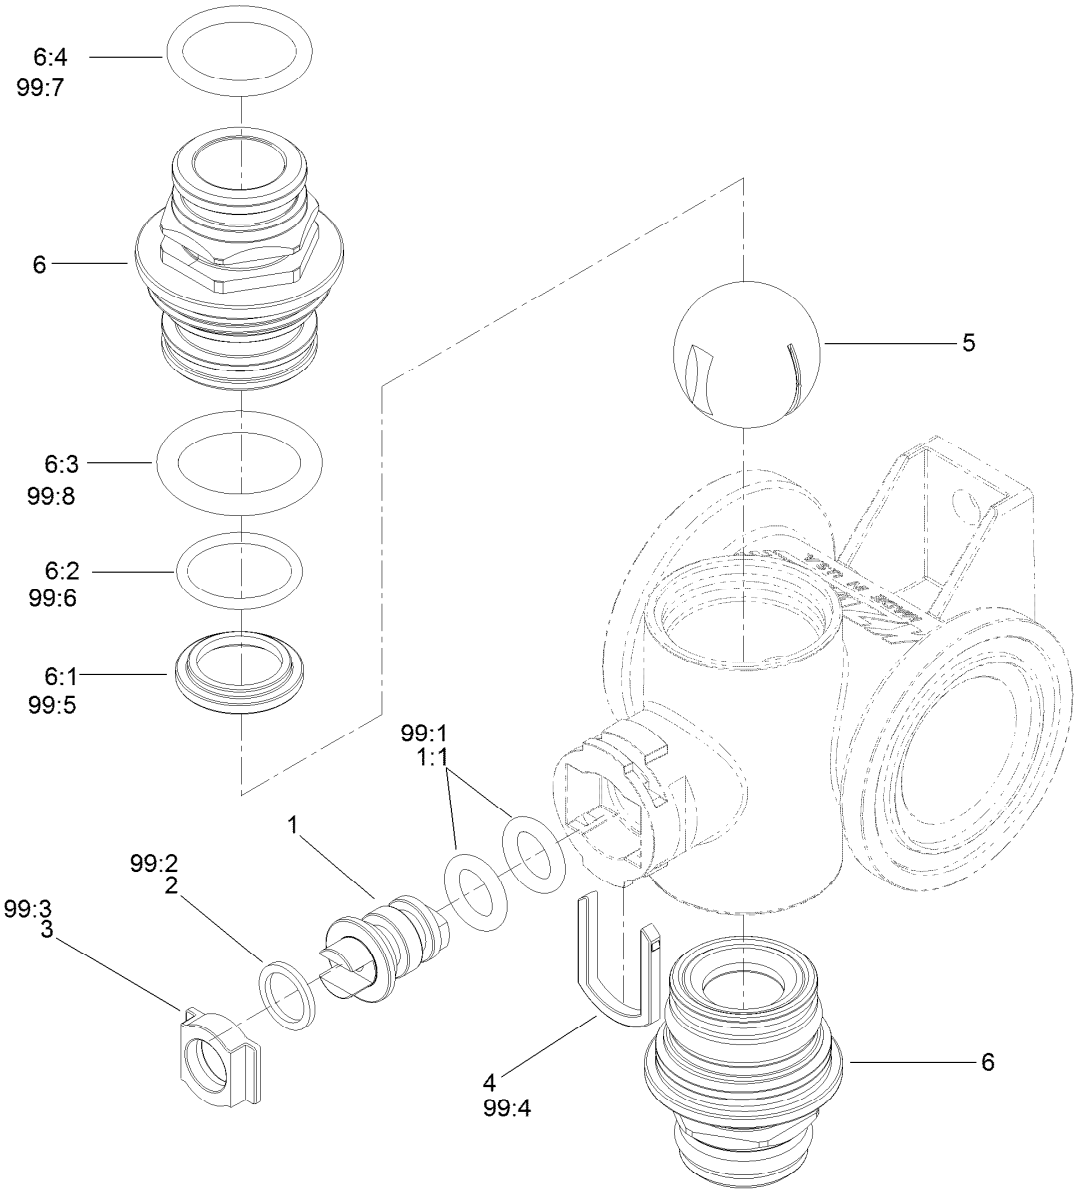



# Regulating Valve Body Assembly No. 127-9804

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 130-8248 | 1 | Vavle Stem Kit |
| 1:1 | 127-1197 | 2 | O-Ring-Stem |
| 2 | 127-1196 | 1 | Washer-Stem, Valve |
| 3 | 127-1195 | 1 | Seat-Stem, Valve |
| 4 | 127-1190 | 1 | Fork-Stem, Valve |
| 5 | 127-1113 | 1 | Ball-V |
| 6 | 130-7317 | 2 | Endcap Kit |
| 6:1 | 127-1192 | 1 | Seat-Ball |
| 6:2 | 127-1188 | 1 | O-Ring, Seat (Ball) |
| 6:3 | 127-1189 | 1 | O-Ring, Endcap |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 6:4 | 127-1187 | 1 | O-Ring, Endcap |
| 99 | 130-7304 | 1 | Valve Repair Kit ● |
| 99:1 | 127-1197 | 2 | O-Ring-Stem |
| 99:2 | 127-1196 | 2 | Washer-Stem, Valve |
| 99:3 | 127-1195 | 1 | Seat-Stem, Valve |
| 99:4 | 127-1190 | 1 | Fork-Stem, Valve |
| 99:5 | 127-1192 | 2 | Seat-Ball |
| 99:6 | 127-1188 | 2 | O-Ring, Seat (Ball) |
| 99:7 | 127-1187 | 2 | O-Ring, Endcap |
| 99:8 | 127-1189 | 2 | O-Ring, Endcap |

● Not illustrated

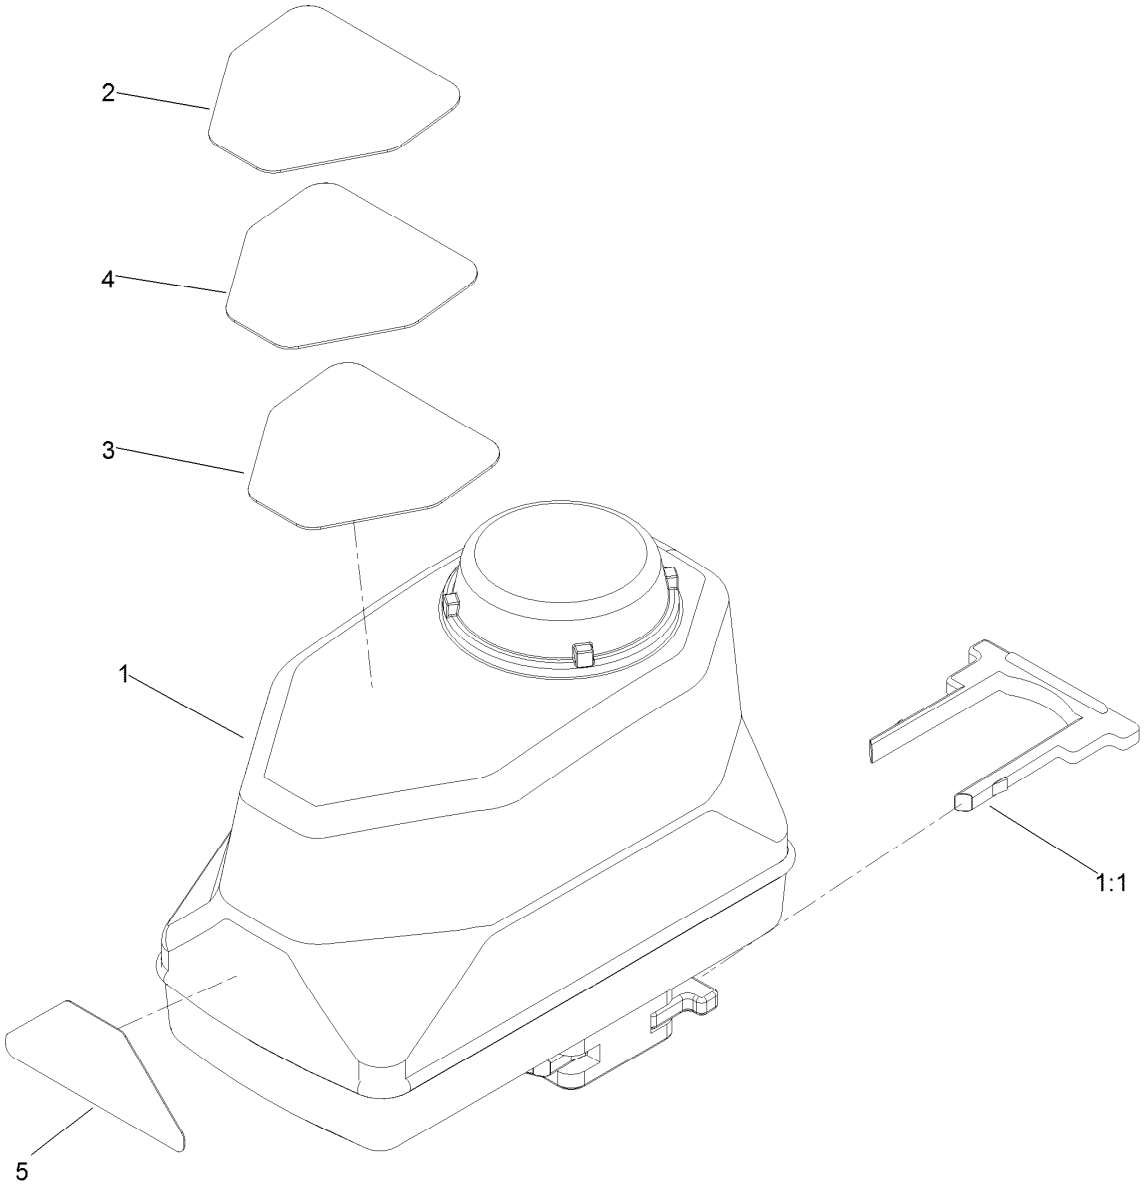


# Actuator On/Off Assembly No. 140-7377


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 140-7315 | 1 | Actuator - On/Off |
| 1:1 | 130-7301 | 1 | Hairpin-Actuator |
| 2 | 127-6979 | 1 | Decal-Valve, Agitation |
| 3 | 127-6981 | 1 | Decal-Valve, On/Off |
| 4 | 127-6982 | 1 | Decal-Valve, Master Boom |
| 5 | 127-6976 | 1 | Decal-Valve, Bypass Adjust |

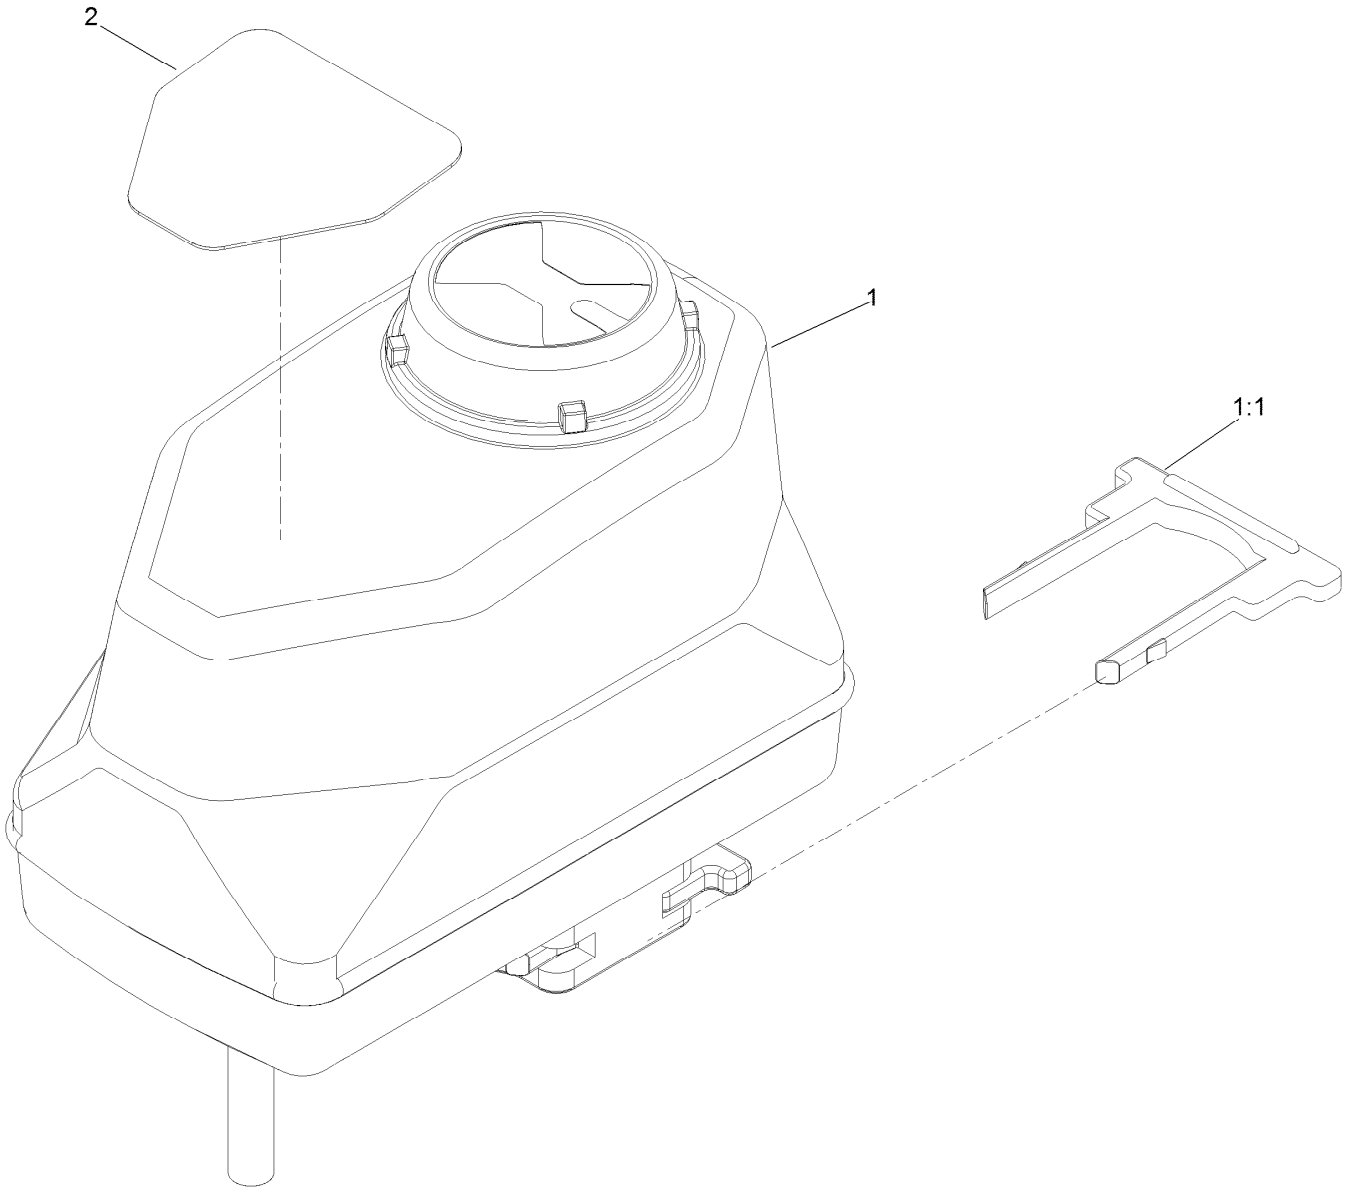


# Regulating Actuator Assembly No. 144-6163

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | | 1 | Actuator-Regulating Pi ● |
| 1:1 | 130-7301 | 1 | Hairpin-Actuator |
| 2 | 127-6984 | 1 | Decal-Valve, Regulating |

● Not serviced separately

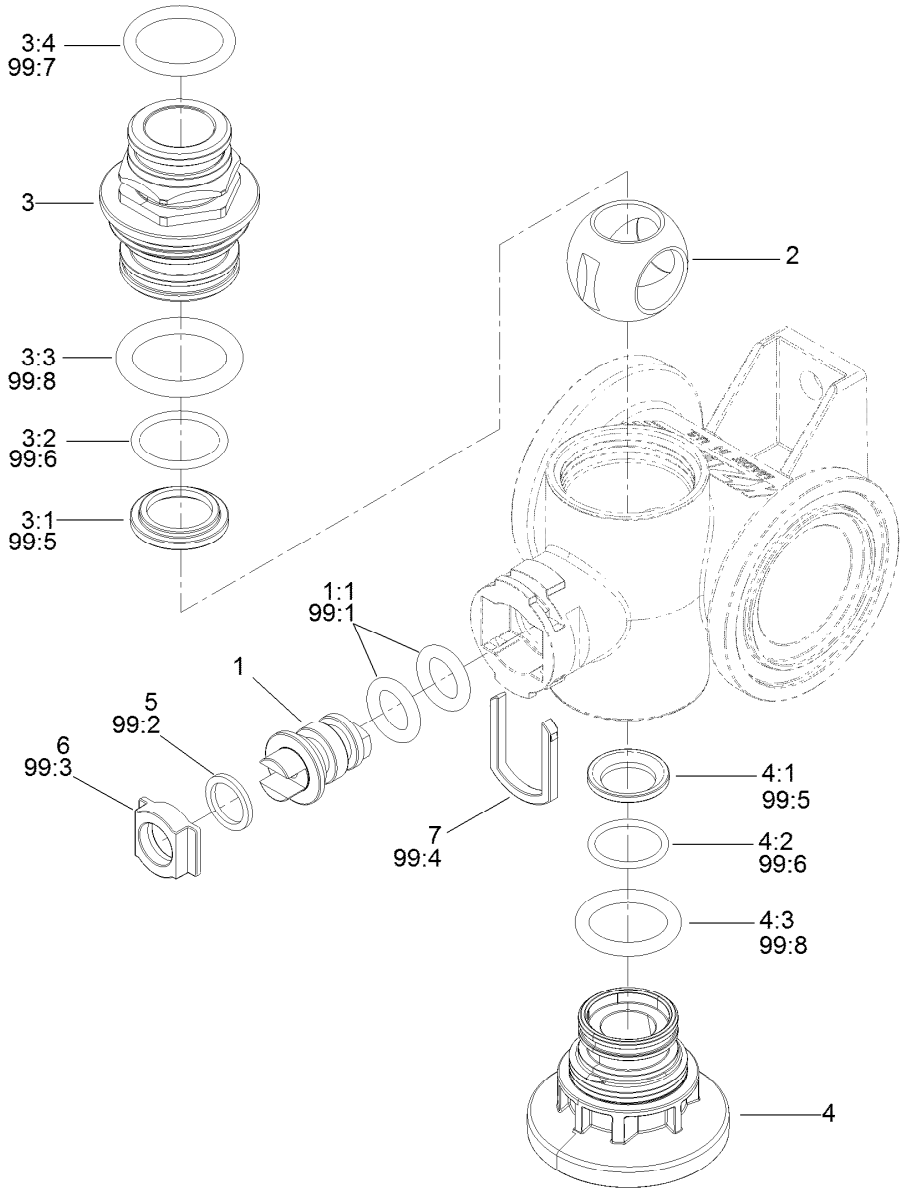



# Manifold Valve Kit No. 131-0253

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 130-8248 | 1 | Vavle Stem Kit |
| 1:1 | 127-1197 | 2 | O-Ring-Stem |
| 2 | 127-1113 | 1 | Ball-V |
| 3 | 130-7317 | 1 | Endcap Kit |
| 3:1 | 127-1192 | 1 | Seat-Ball |
| 3:2 | 127-1188 | 1 | O-Ring, Seat (Ball) |
| 3:3 | 127-1189 | 1 | O-Ring, Endcap |
| 3:4 | 127-1187 | 1 | O-Ring, Endcap |
| 4 | 130-8249 | 1 | Endcap Kit |
| 4:1 | 127-1192 | 1 | Seat-Ball |
| 4:2 | 127-1188 | 1 | O-Ring, Seat (Ball) |
| 4:3 | 127-1189 | 1 | O-Ring, Endcap |

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 5 | 127-1196 | 1 | Washer-Stem, Valve |
| 6 | 127-1195 | 1 | Seat-Stem, Valve |
| 7 | 127-1190 | 1 | Fork-Stem, Valve |
| 99 | 130-7304 | 1 | Valve Repair Kit ● |
| 99:1 | 127-1197 | 2 | O-Ring-Stem |
| 99:2 | 127-1196 | 2 | Washer-Stem, Valve |
| 99:3 | 127-1195 | 1 | Seat-Stem, Valve |
| 99:4 | 127-1190 | 1 | Fork-Stem, Valve |
| 99:5 | 127-1192 | 2 | Seat-Ball |
| 99:6 | 127-1188 | 2 | O-Ring, Seat (Ball) |
| 99:7 | 127-1187 | 2 | O-Ring, Endcap |
| 99:8 | 127-1189 | 2 | O-Ring, Endcap |

● Not illustrated

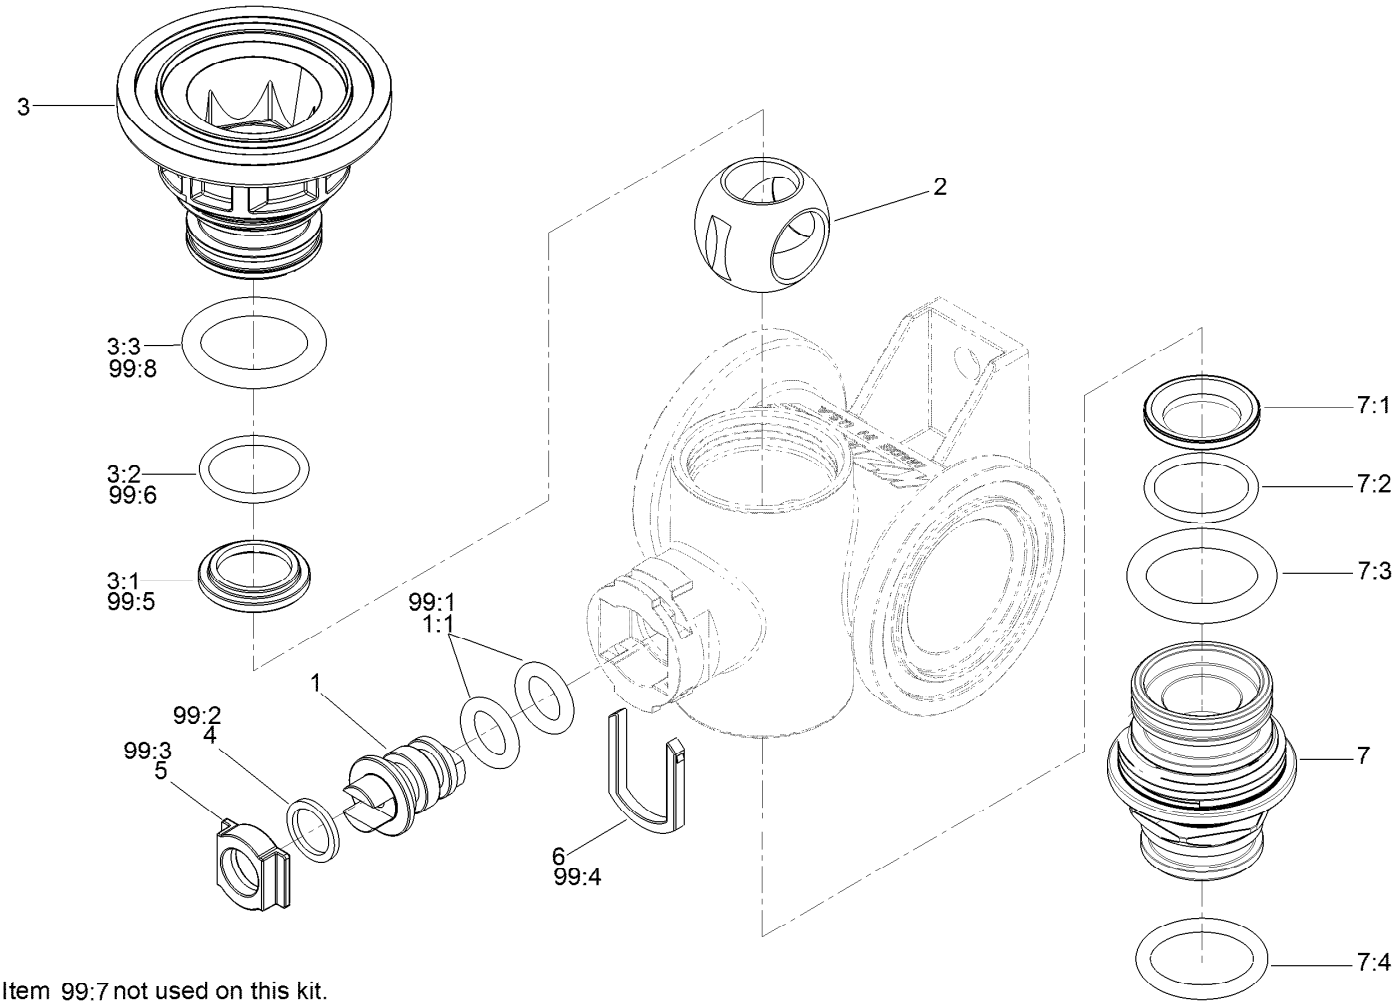



Item 99:7 not used on this kit.

# Manifold Valve Kit No. 131-7256

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 130-8248 | 1 | Vavle Stem Kit |
| 1:1 | 127-1197 | 2 | O-Ring-Stem |
| 2 | 127-1194 | 1 | Ball-Valve, 3Way |
| 3 | 130-8249 | 1 | Endcap Kit |
| 3:1 | 127-1192 | 1 | Seat-Ball |
| 3:2 | 127-1188 | 1 | O-Ring, Seat (Ball) |
| 3:3 | 127-1189 | 1 | O-Ring, Endcap |
| 4 | 127-1196 | 1 | Washer-Stem, Valve |
| 5 | 127-1195 | 1 | Seat-Stem, Valve |
| 6 | 127-1190 | 1 | Fork-Stem, Valve |
| 7 | 130-7317 | 1 | Endcap Kit |
| 7:1 | 127-1192 | 1 | Seat-Ball |


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 7:2 | 127-1188 | 1 | O-Ring, Seat (Ball) |
| 7:3 | 127-1189 | 1 | O-Ring, Endcap |
| 7:4 | 127-1187 | 1 | O-Ring, Endcap |
| 99 | 130-7304 | 1 | Valve Repair Kit ● |
| 99:1 | 127-1197 | 2 | O-Ring-Stem |
| 99:2 | 127-1196 | 2 | Washer-Stem, Valve |
| 99:3 | 127-1195 | 1 | Seat-Stem, Valve |
| 99:4 | 127-1190 | 1 | Fork-Stem, Valve |
| 99:5 | 127-1192 | 2 | Seat-Ball |
| 99:6 | 127-1188 | 2 | O-Ring, Seat (Ball) |
| 99:7 | 127-1187 | 2 | O-Ring, Endcap |
| 99:8 | 127-1189 | 2 | O-Ring, Endcap |

● Not illustrated

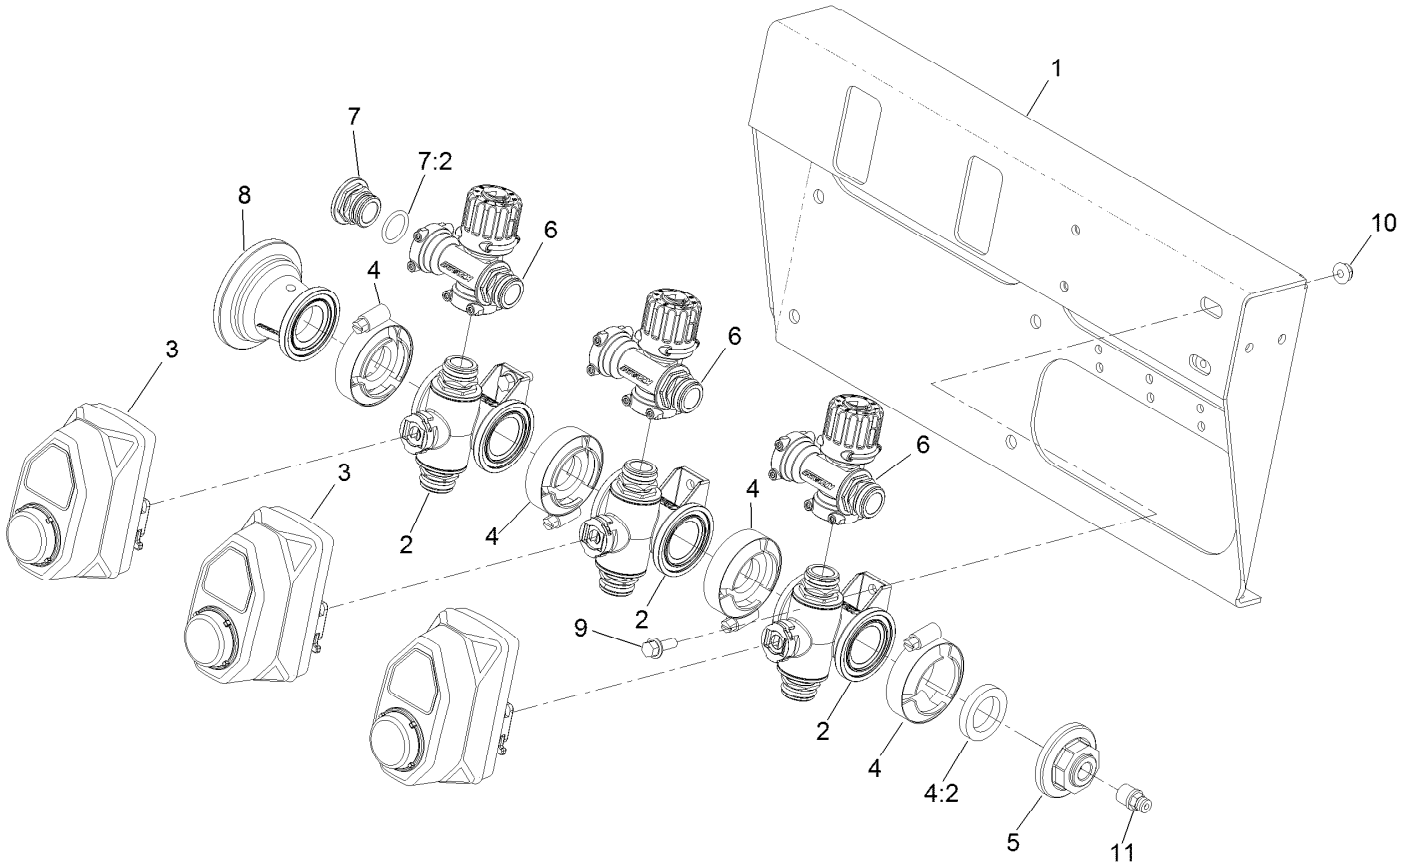


# Section Manifold Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 131-0240 | 1 | Mount-Valve, Boom |
| 2 | 127-9803 | 3 | On/Off Manifold Valve Kit |
| 3 | 140-7377 | 3 | Kit-Actuator Pi, On/Off |
| 4 | 127-9829 | 4 | Clamp/Gasket Kit |
| 4:2 | 127-1145 | 1 | Gasket-Flange |
| 5 | 127-1185 | 1 | Fitting-Cap, Port |
| 6 | 127-9805 | 3 | Bypass Valve ASM |
| 7 | 127-9810 | 1 | Male Cap Fitting Kit |
| 7:2 | 127-1187 | 1 | O-Ring, Endcap |
| 8 | 127-1144 | 1 | Fitting-Adapter |
| 9 | 3234-4 | 4 | Screw-HHF |
| 10 | 104-7201 | 4 | Nut-HF, NI |
| 11 | 131-3709 | 1 | Coupler |

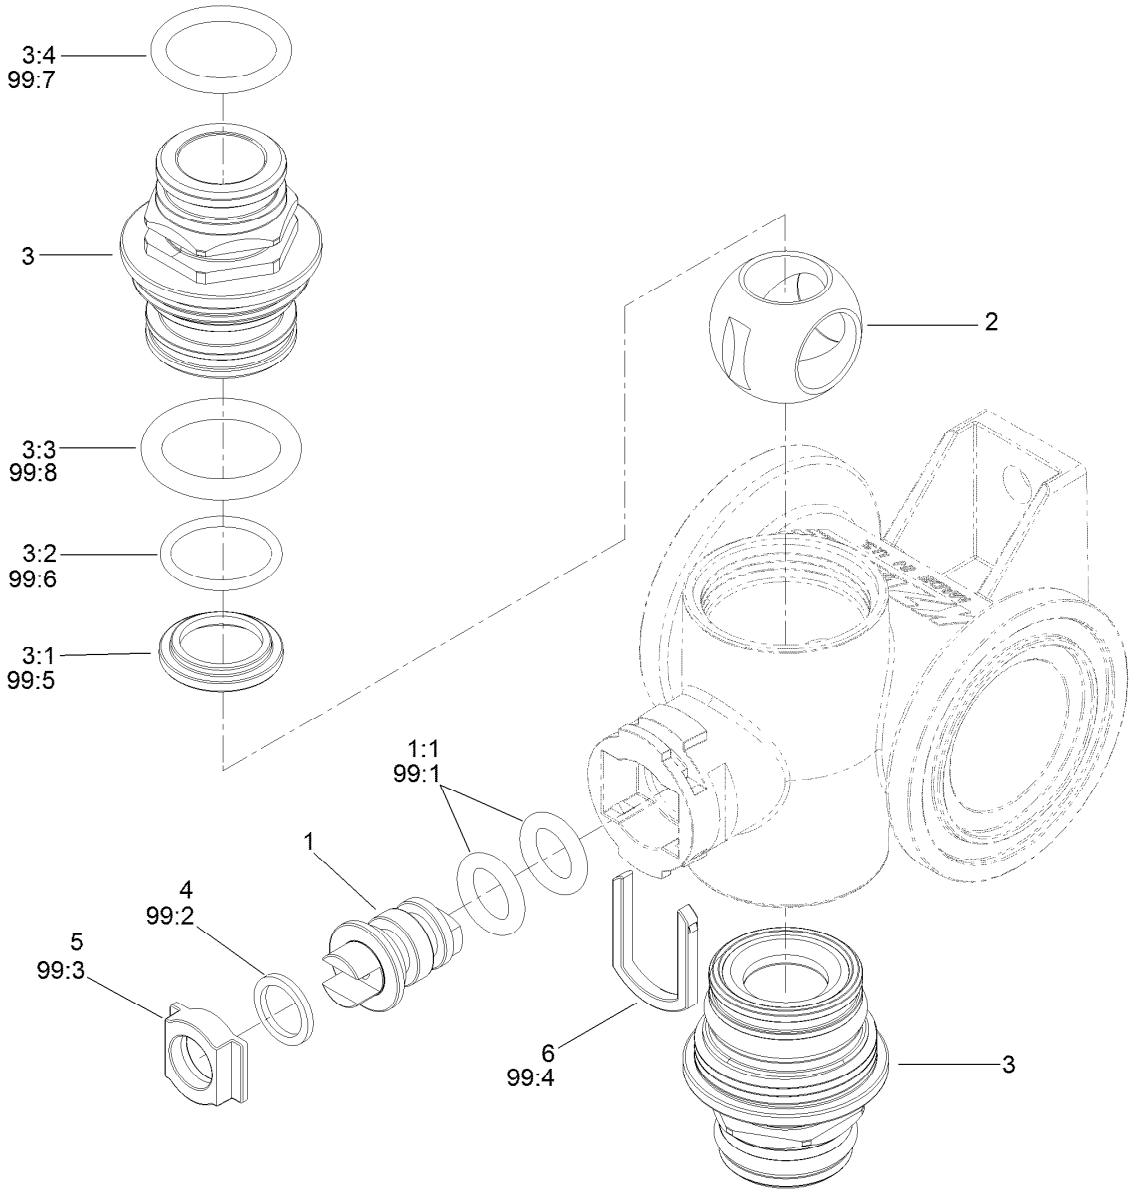



# On/Off Manifold Valve Kit No. 127-9803

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 130-8248 | 1 | Vavle Stem Kit |
| 1:1 | 127-1197 | 2 | O-Ring-Stem |
| 2 | 127-1194 | 1 | Ball-Valve, 3Way |
| 3 | 130-7317 | 2 | Endcap Kit |
| 3:1 | 127-1192 | 1 | Seat-Ball |
| 3:2 | 127-1188 | 1 | O-Ring, Seat (Ball) |
| 3:3 | 127-1189 | 1 | O-Ring, Endcap |
| 3:4 | 127-1187 | 1 | O-Ring, Endcap |
| 4 | 127-1196 | 1 | Washer-Stem, Valve |
| 5 | 127-1195 | 1 | Seat-Stem, Valve |

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 6 | 127-1190 | 1 | Fork-Stem, Valve |
| 99 | 130-7304 | 1 | Valve Repair Kit ● |
| 99:1 | 127-1197 | 2 | O-Ring-Stem |
| 99:2 | 127-1196 | 2 | Washer-Stem, Valve |
| 99:3 | 127-1195 | 1 | Seat-Stem, Valve |
| 99:4 | 127-1190 | 1 | Fork-Stem, Valve |
| 99:5 | 127-1192 | 2 | Seat-Ball |
| 99:6 | 127-1188 | 2 | O-Ring, Seat (Ball) |
| 99:7 | 127-1187 | 2 | O-Ring, Endcap |
| 99:8 | 127-1189 | 2 | O-Ring, Endcap |

● Not illustrated

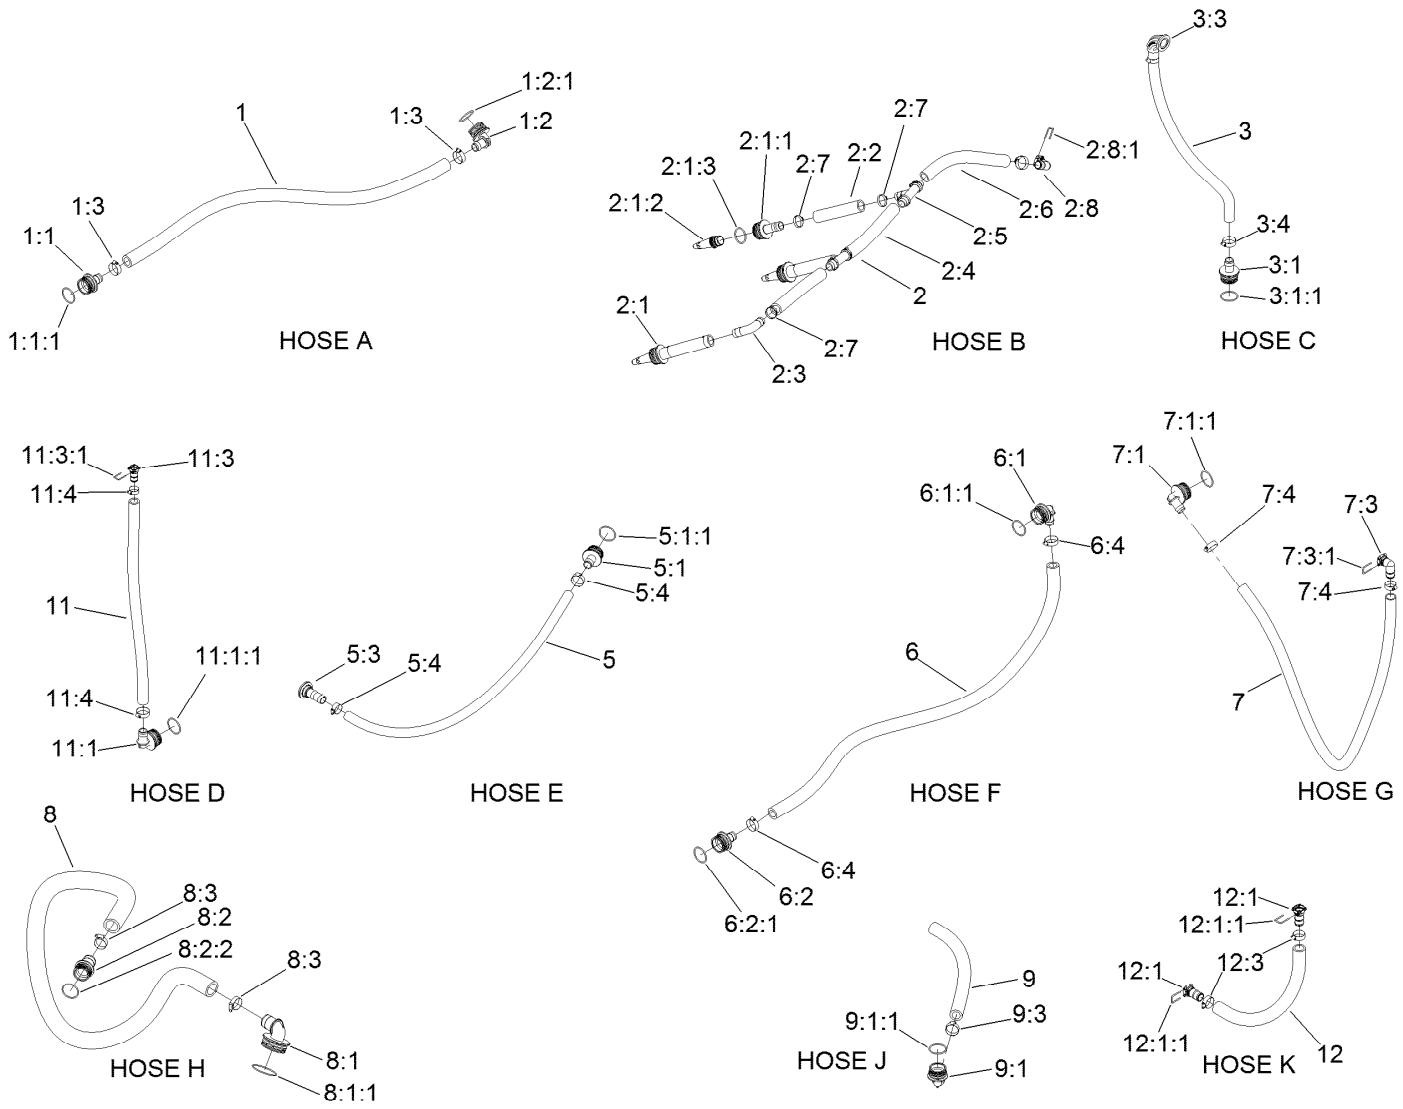



Reference **Spray Tank Assembly** page and **Spray Tank Valve Assembly** page for hose locations and orientation

# Hose Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 121-6539 | 1 | Main Supply Hose ASM |
| 1:1 | 106-4932 | 1 | Hosebarb-Straight |
| 1:1:1 | 100-8637 | 1 | O-Ring |
| 1:2 | 106-4933 | 1 | Hosebarb ASM |
| 1:2:1 | 100-8637 | 1 | O-Ring |
| 1:3 | 2412-34 | 2 | Clamp-Hose |
| 2 | 139-3094 | 1 | Hose-Agitation, ASM |
| 2:1 | 131-3731 | 3 | Agitation Nozzle ASM |
| 2:1:1 | 131-3732 | 1 | Fitting-Barb |
| 2:1:2 | 120-8579 | 1 | Nozzle-Agitation |
| 2:1:3 | 121-4996 | 1 | O-Ring |
| 2:2 | 125-0665 | 3 | Nozzle-Hose, Agitation |
| 2:3 | 117-7867 | 1 | Elbow-Hosebarb |
| 2:4 | 125-0664 | 2 | Tee-Hose, Agitation |
| 2:5 | 117-7866 | 2 | Tee-Hosebarb |
| 2:6 | 132-4311 | 1 | Hose-Agitation |
| 2:7 | 2412-34 | 12 | Clamp-Hose |
| 2:8 | 131-0213 | 1 | 90 DEG Barb Fitting Kit |
| 2:8:1 | 133-0398 | 1 | Pin-Fork |
| 3 | 132-4314 | 1 | Hose-Supply |
| 3:1 | 106-4932 | 1 | Hosebarb-Straight |

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 3:1:1 | 100-8637 | 1 | O-Ring |
| 3:3 | 131-0241 | 1 | Fitting-Elb 90 |
| 3:4 | 2412-34 | 2 | Clamp-Hose |
| 5 | 132-4313 | 1 | Hose Agitation, Bypass |
| 5:1 | 106-4932 | 1 | Hosebarb-Straight |
| 5:1:1 | 100-8637 | 1 | O-Ring |
| 5:3 | 127-1142 | 1 | Fitting-STR |
| 5:4 | 2412-34 | 2 | Clamp-Hose |
| 6 | 125-0601 | 1 | Regulating Hose ASM |
| 6:1 | 106-4933 | 1 | Hosebarb ASM |
| 6:1:1 | 100-8637 | 1 | O-Ring |
| 6:2 | 106-4932 | 1 | Hosebarb-Straight |
| 6:2:1 | 100-8637 | 1 | O-Ring |
| 6:4 | 2412-34 | 2 | Clamp-Hose |
| 7 | 132-4315 | 1 | Hose-Bypass |
| 7:1 | 106-4933 | 1 | Hosebarb ASM |
| 7:1:1 | 100-8637 | 1 | O-Ring |
| 7:3 | 131-0213 | 1 | 90 DEG Barb Fitting Kit |
| 7:3:1 | 133-0398 | 1 | Pin-Fork |
| 7:4 | 2412-34 | 2 | Clamp-Hose |
| 8 | 125-0603 | 1 | Top Suction Hose ASM |

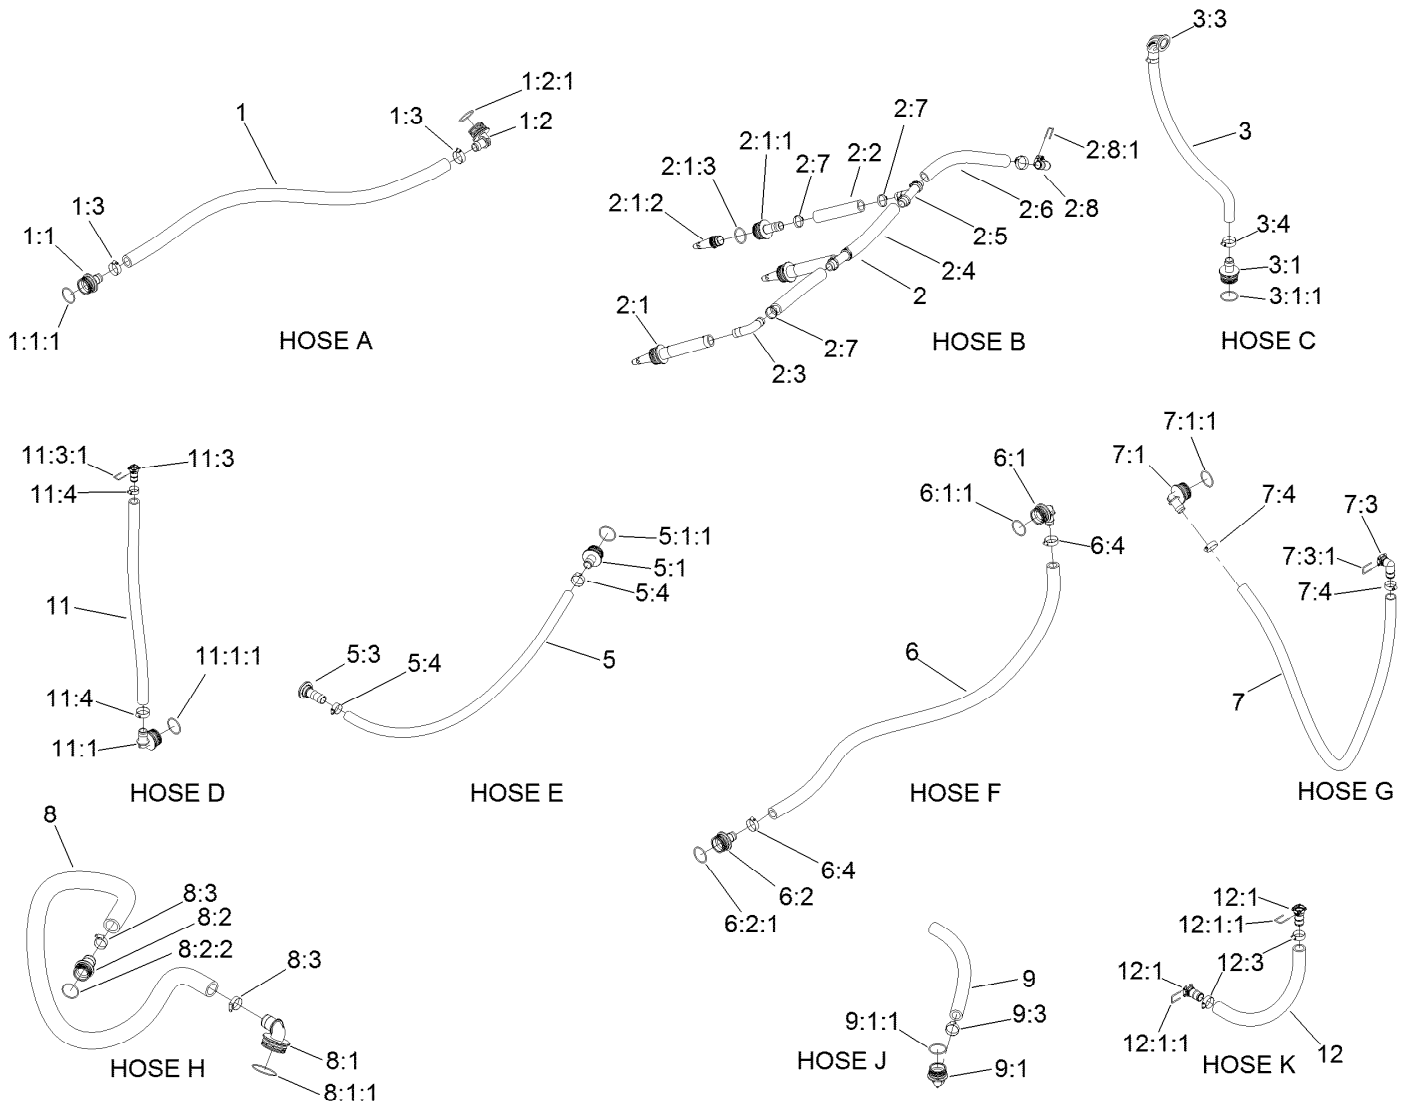



Reference **Spray Tank Assembly** page and **Spray Tank Valve Assembly** page for hose locations and orientation

# Hose Assembly (continued)

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 8:1 | 106-4952 | 1 | Hosebarb-90 DEG |
| 8:1:1 | 100-6989 | 1 | O-Ring |
| 8:2 | 117-7982 | 1 | Hosebarb ASM |
| 8:2:2 | 100-8637 | 1 | O-Ring |
| 8:3 | 41327 | 2 | Clamp-Hose |
| 9 | 125-0647 | 1 | Drain Hose ASM |
| 9:1 | 106-4933 | 1 | Hosebarb ASM |
| 9:1:1 | 100-8637 | 1 | O-Ring |
| 9:3 | 2412-34 | 1 | Clamp-Hose |
| 11 | 132-4316 | 1 | Hose-Regulating |


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 11:1 | 106-4933 | 1 | Hosebarb ASM |
| 11:1:1 | 100-8637 | 1 | O-Ring |
| 11:3 | 127-9806 | 1 | Fitting Kit |
| 11:3:1 | 133-0398 | 1 | Pin-Fork |
| 11:4 | 2412-34 | 2 | Clamp-Hose |
| 12 | 132-4319 | 1 | Hose-Regulating |
| 12:1 | 127-9806 | 2 | Fitting Kit |
| 12:1:1 | 133-0398 | 1 | Pin-Fork |
| 12:3 | 2412-34 | 2 | Clamp-Hose |

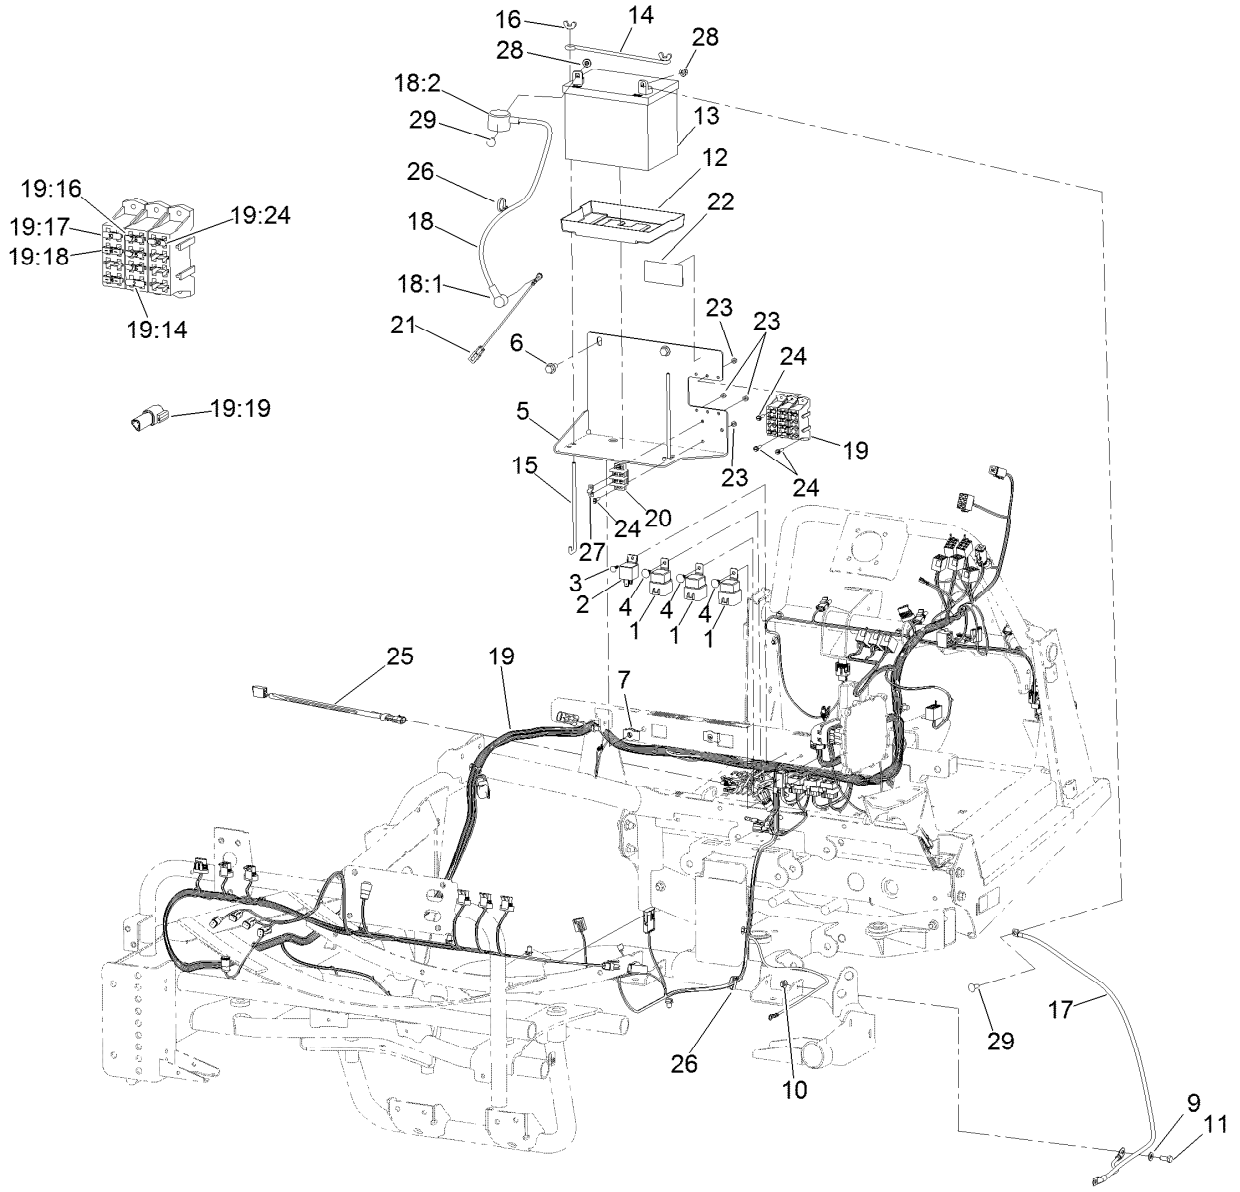


# Main Wiring Harness and Battery Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 99-7430 | 3 | Relay-Mini |
| 2 | 99-7435 | 1 | Relay |
| 3 | 125-8067 | 1 | Plug-Plastic |
| 4 | 117-2382 | 3 | Plug-Plastic |
| 5 | 125-0908-0P | 1 | Base - Battery |
| 6 | 3234-1 | 2 | Screw-HHF |
| 7 | 105-4886 | 2 | Nut-Tinnerman |
| 9 | 3256-23 | 1 | Washer-Plain |
| 10 | 32128-25 | 1 | Nut-HF |
| 11 | 322-3 | 1 | Screw-HH |
| 12 | 106948 | 1 | Tray-Battery |
| 13 | 104-8162 | 1 | Battery |
| 14 | 100-6434 | 1 | Rod-Hold Down, Battery |
| 15 | 100-6435 | 2 | Post-Battery |
| 16 | 32103-22 | 2 | Nut-Wing |
| 17 | 122-0137 | 1 | Cable-Battery, Negative |
| 18 | 109-7621 | 1 | Positive Battery Cable ASM |
| 18:1 | 1-543393 | 1 | Insulator-Solenoid |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 18:2 | 109-2407 | 1 | Insulator-Battery |
| 19 | 122-1438 | 1 | Harness-Wire, Mp1750 |
| 19:14 | 94-6710 | 1 | Fuse-2 Amp |
| 19:16 | 114241 | 3 | Fuse-Blade, 7.5 Amp |
| 19:17 | 218-578 | 1 | Fuse-Blade, 10 Amp |
| 19:18 | 109355 | 3 | Fuse-Blade, 15 Amp |
| 19:19 | 32180-043 | 2 | Resistor-120 Ohm |
| 19:24 | 109103 | 1 | Fuse-Blade, 30 Amp |
| 20 | 42862 | 1 | Block-Terminal, Ground |
| 21 | 108-9455 | 1 | Harness-Wire, Fusible Link |
| 22 | 144-6007 | 1 | Decal - Fuse Block |
| 23 | 3296-2 | 5 | Nut-Lock, NI |
| 24 | 32105-13 | 5 | Screw-HWH |
| 25 | 108-8657 | 1 | Harness-Wire, Seat |
| 26 | 3290-379 | 2 | Tie-Cable |
| 27 | 42863 | 1 | Strip-Jumper |
| 28 | 104-8300 | 2 | Nut-HF, NI |
| 29 | 3230-1 | 2 | Bolt-CARR |

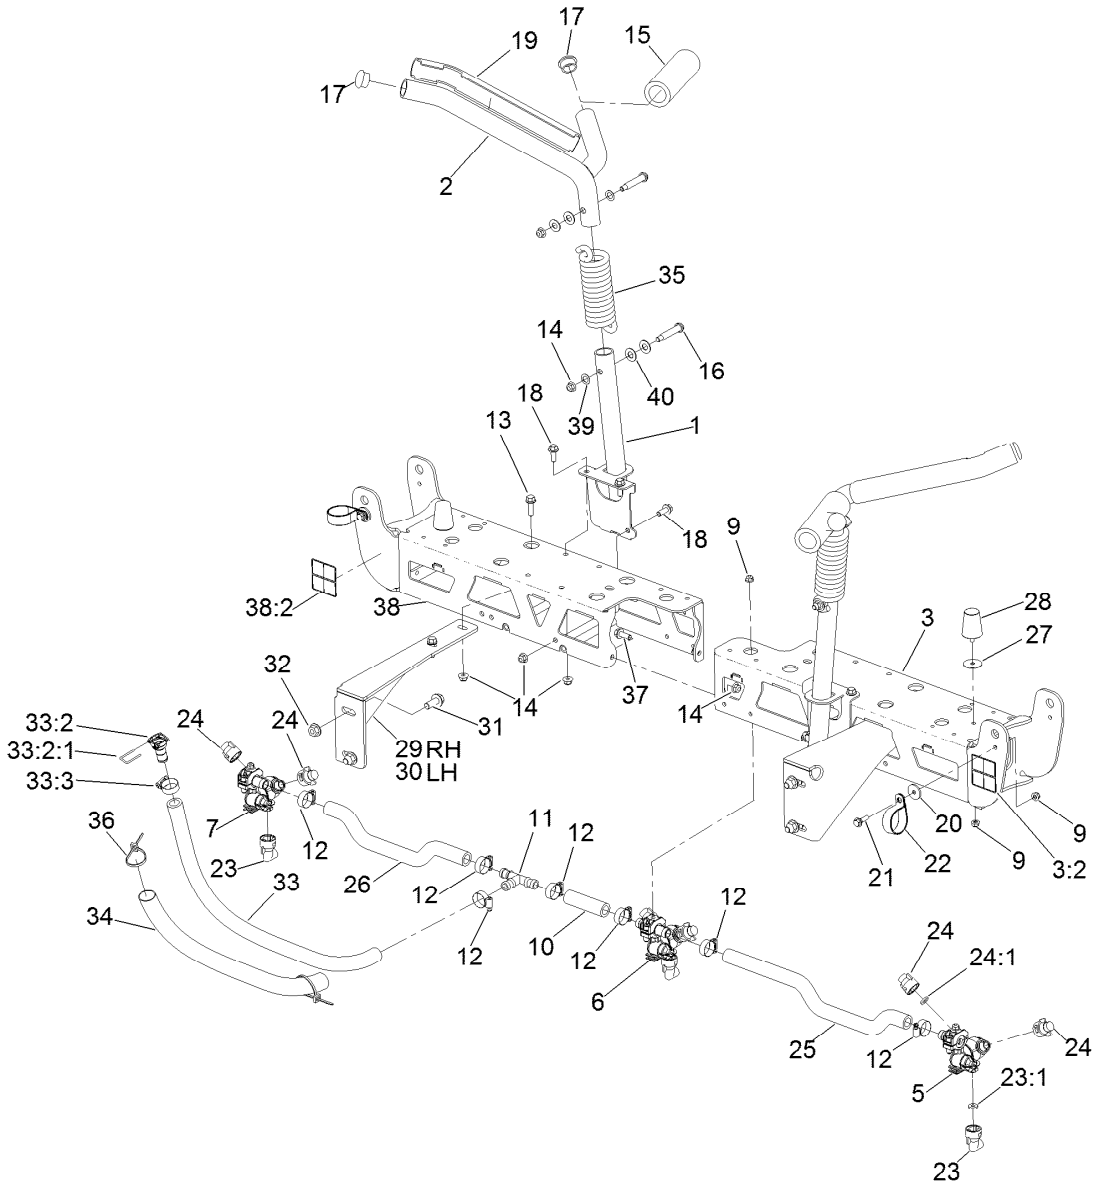


# Center Boom Mount Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 140-7338-03 | 2 | Craddle ASM-Lower [black] |
| 2 | 140-7337-03 | 2 | Craddle ASM-Upper |
| 3 | 136-0381 | 1 | Boom-LH |
| 3:2 | 120-0617 | 2 | Decal-Warning, Pinch, Crush |
| 5 | 108-3725 | 1 | LH Single Body Turret ASM |
| 6 | 108-3727 | 1 | Double Turret Body ASM |
| 7 | 108-3726 | 1 | RH Single Body Turret ASM |
| 9 | 104-8300 | 7 | Nut-HF, NI |
| 10 | 108-3717 | 1 | Hose-Boom |
| 11 | 108-3439 | 1 | Tee |
| 12 | 2412-129 | 7 | Clamp-Hose |
| 13 | 110-5050 | 4 | Screw-HHF |
| 14 | 104-8301 | 16 | Nut-HF, NI |
| 15 | 108-3457 | 2 | Spacer |
| 16 | 127-1510 | 4 | Screw-Shoulder |
| 17 | 108-3489 | 4 | Cap-Tube |
| 18 | 110-5052 | 6 | Screw-HHF |
| 19 | 108-3495 | 2 | Cover-Slide |
| 20 | 108-3743 | 2 | Washer |
| 21 | 108-3744 | 2 | Screw-Shoulder |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 22 | 114-9566 | 2 | Clamp-R |
| 23 | 95-9186 | 3 | Cap |
| 23:1 | 40998 | 1 | Seat-Gasket |
| 24 | 95-9187 | 6 | Cap-Blank |
| 24:1 | 40998 | 1 | Seat-Gasket |
| 25 | 108-3735 | 1 | Hose-Boom, Center (LH) |
| 26 | 108-3718 | 1 | Hose-Boom, Center (RH) |
| 27 | 3256-68 | 2 | Washer-Flat |
| 28 | 110-5070 | 2 | Bumper |
| 29 | 130-8244-03 | 1 | Mount-Boom, RH |
| 30 | 130-8245-03 | 1 | Mount-Boom, LH |
| 31 | 110-5057 | 4 | Capscrew-HHF |
| 32 | 108-3745 | 4 | Nut-HHF, Whiz |
| 33 | 132-4323 | 1 | Hose-Boom, Center |
| 33:2 | 127-9807 | 1 | Straight Fitting Kit |
| 33:2:1 | 133-0398 | 1 | Pin-Fork |
| 33:3 | 2412-129 | 1 | Clamp-Hose |
| 34 | 127-3923 | 1 | Conduit-Convoluted |
| 35 | 140-7363 | 2 | Spring-Extension |
| 36 | 3290-378 | 2 | Tie-Cable |
| 37 | 3234-42 | 2 | Screw-HHF |

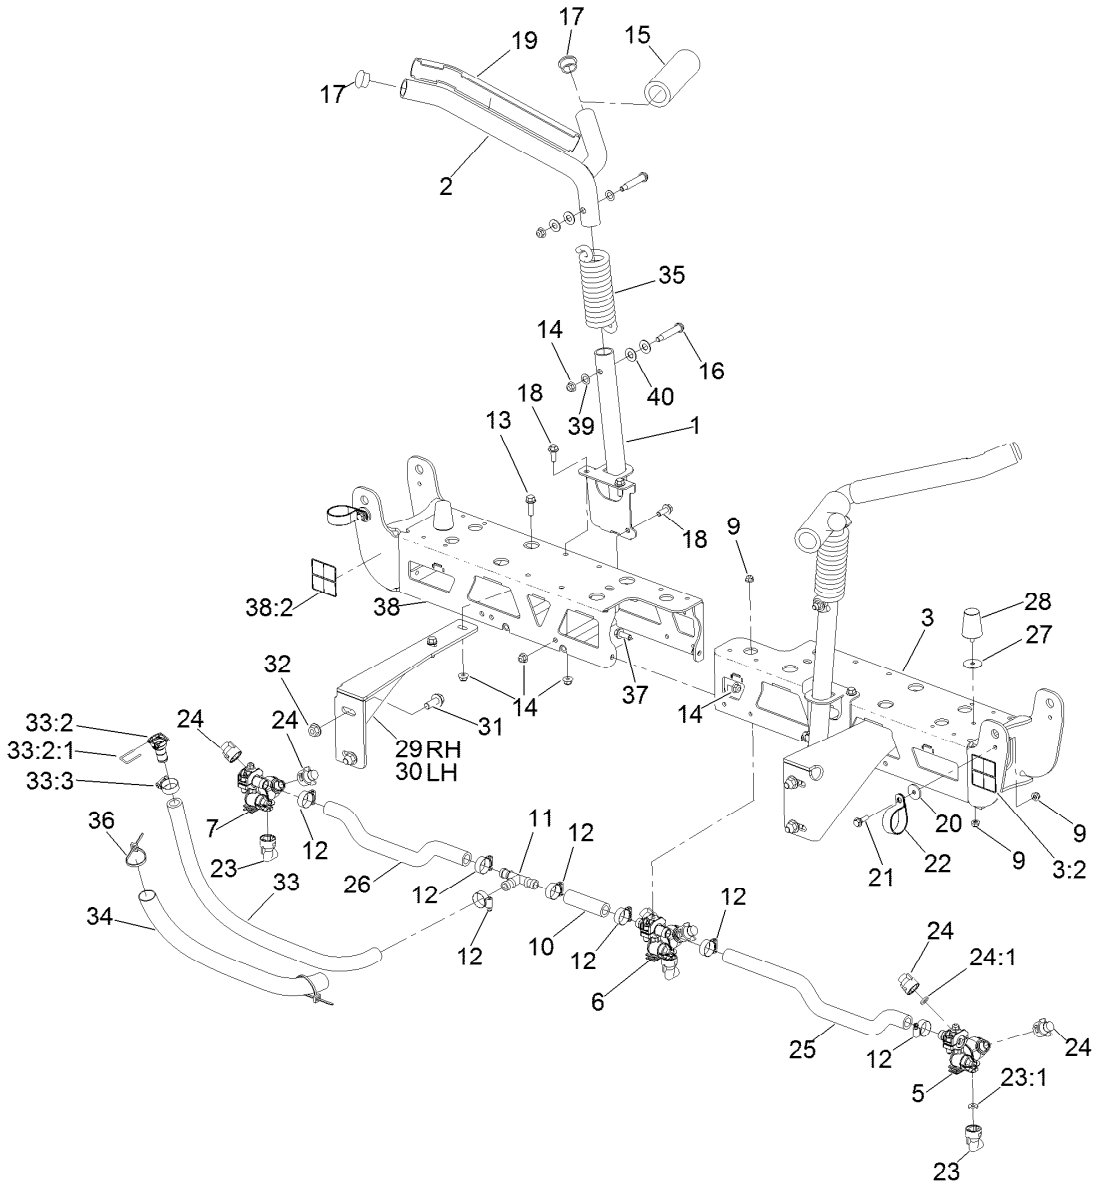


# Center Boom Mount Assembly (continued)


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 38 | 136-0382 | 1 | Boom-RH |
| 38:2 | 120-0617 | 2 | Decal-Warning, Pinch, Crush |
| 39 | 98-1629 | 4 | Washer |
| 40 | 110-6894 | 8 | Washer-Pivot |

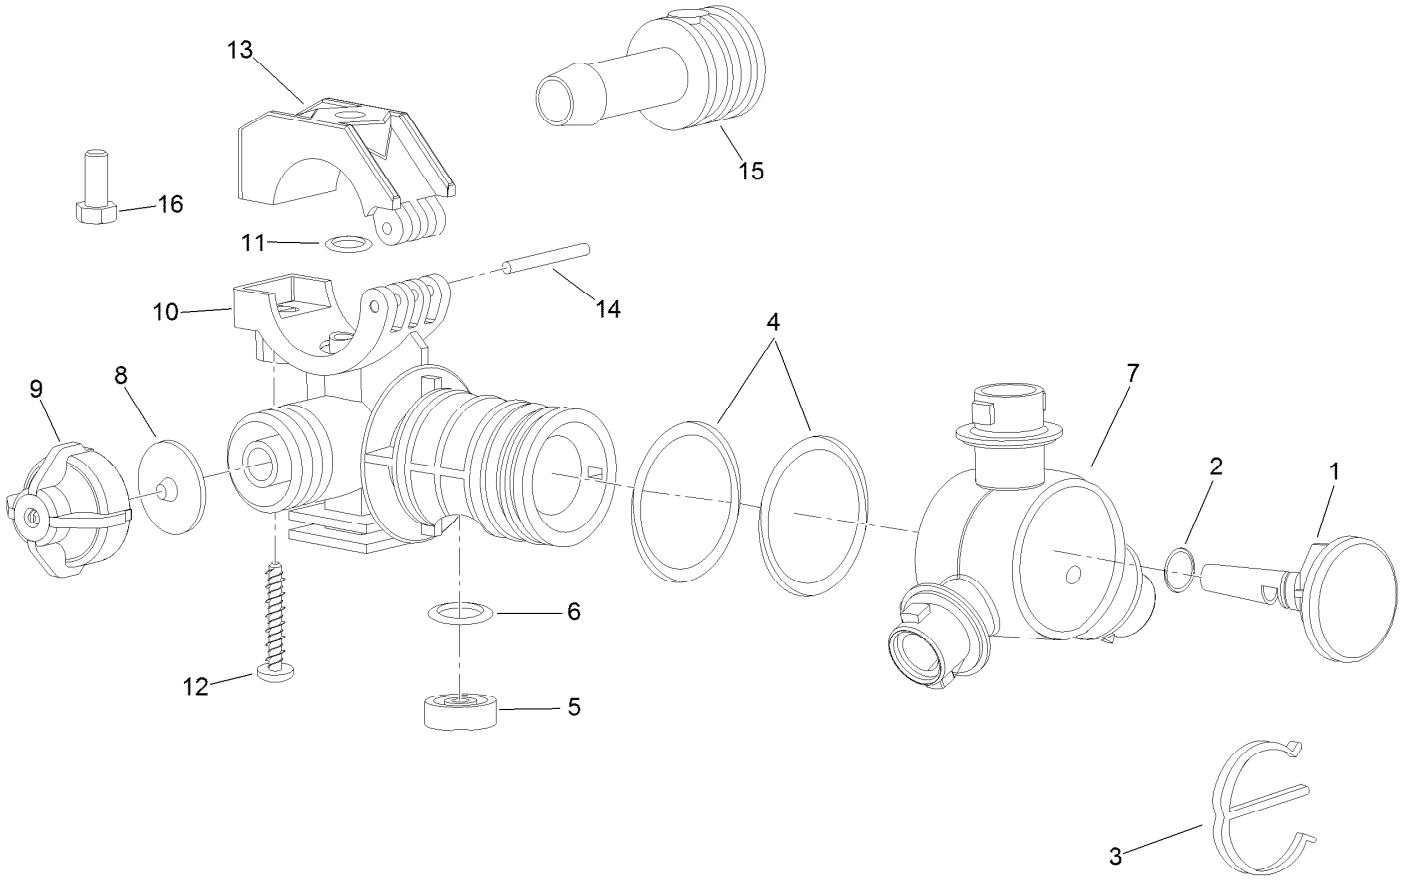


# RH Single Body Turret Assembly No. 108-3726

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 95-9200 | 1 | Plug |
| 2 | 95-9198 | 1 | O-Ring |
| 3 | 95-9197 | 1 | E-Clip |
| 4 | 95-9199 | 2 | O-Ring |
| 5 | 108-3264 | 1 | Seal-Viton |
| 6 | 108-3265 | 1 | O-Ring-Viton |
| 7 | 95-9196 | 1 | Turret |
| 8 | 41003 | 1 | Diaphragm |


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 9 | 95-9193 | 1 | Cap-Diaphram |
| 10 | 95-9192 | 1 | Body-Split Eyelet |
| 11 | 95-9191 | 1 | O-Ring |
| 12 | 99-0811 | 1 | Screw-Clamp |
| 13 | 99-0812 | 1 | Clamp-Upper |
| 14 | 99-0814 | 1 | Pin-Pivot |
| 15 | 95-9201 | 1 | Shank-Hose |
| 16 | 322-3 | 1 | Screw-HH |

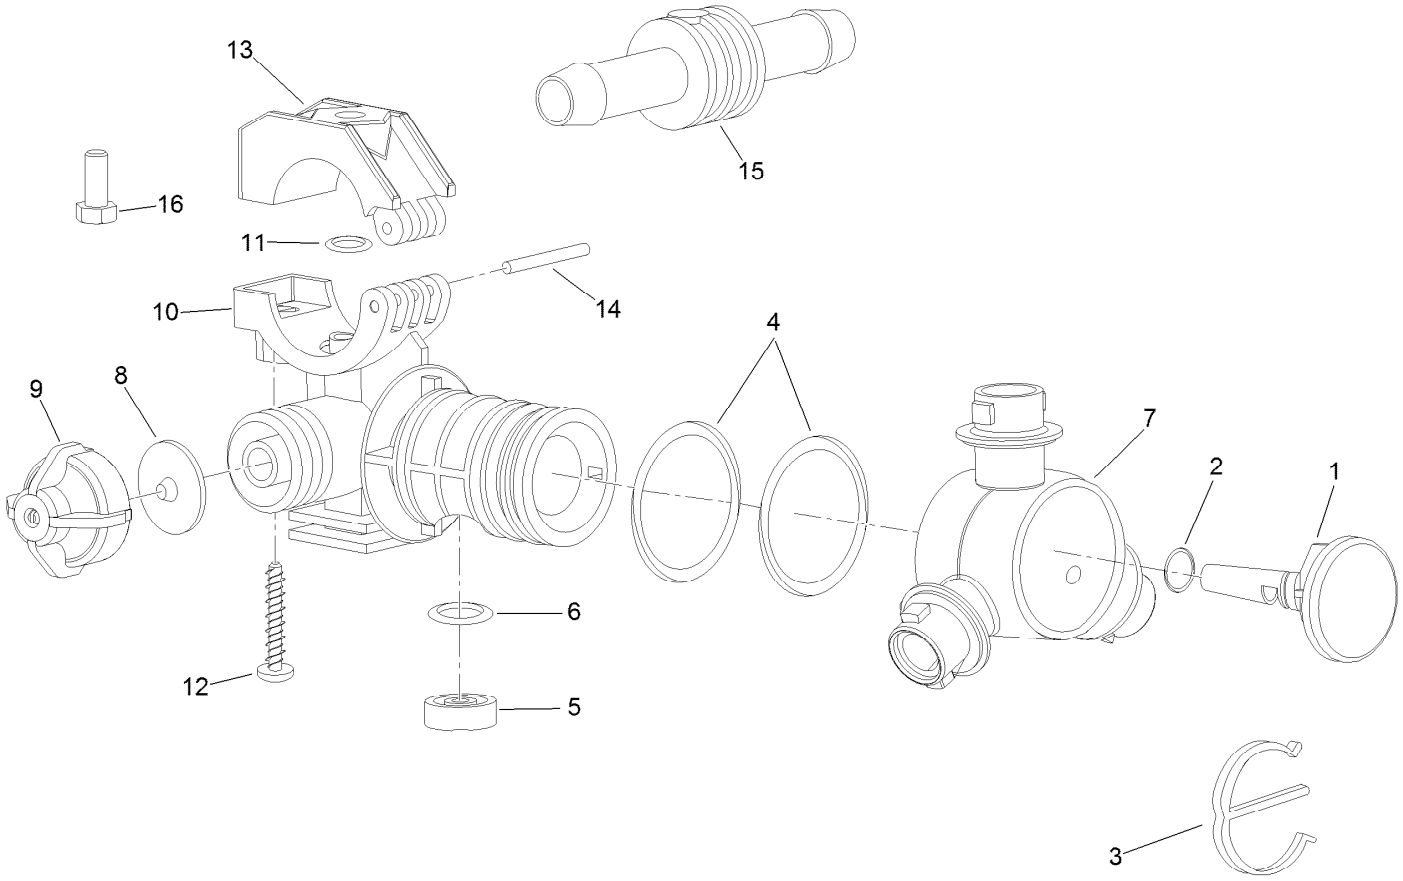


# Double Turret Body Assembly No. 108-3727


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 95-9200 | 1 | Plug |
| 2 | 95-9198 | 1 | O-Ring |
| 3 | 95-9197 | 1 | E-Clip |
| 4 | 95-9199 | 2 | O-Ring |
| 5 | 108-3264 | 1 | Seal-Viton |
| 6 | 108-3265 | 1 | O-Ring-Viton |
| 7 | 95-9196 | 1 | Turret |
| 8 | 41003 | 1 | Diaphragm |

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 9 | 95-9193 | 1 | Cap-Diaphram |
| 10 | 95-9192 | 1 | Body-Split Eyelet |
| 11 | 95-9191 | 1 | O-Ring |
| 12 | 99-0811 | 1 | Screw-Clamp |
| 13 | 99-0812 | 1 | Clamp-Upper |
| 14 | 99-0814 | 1 | Pin-Pivot |
| 15 | 95-9202 | 1 | Shank-Hose |
| 16 | 322-3 | 1 | Screw-HH |

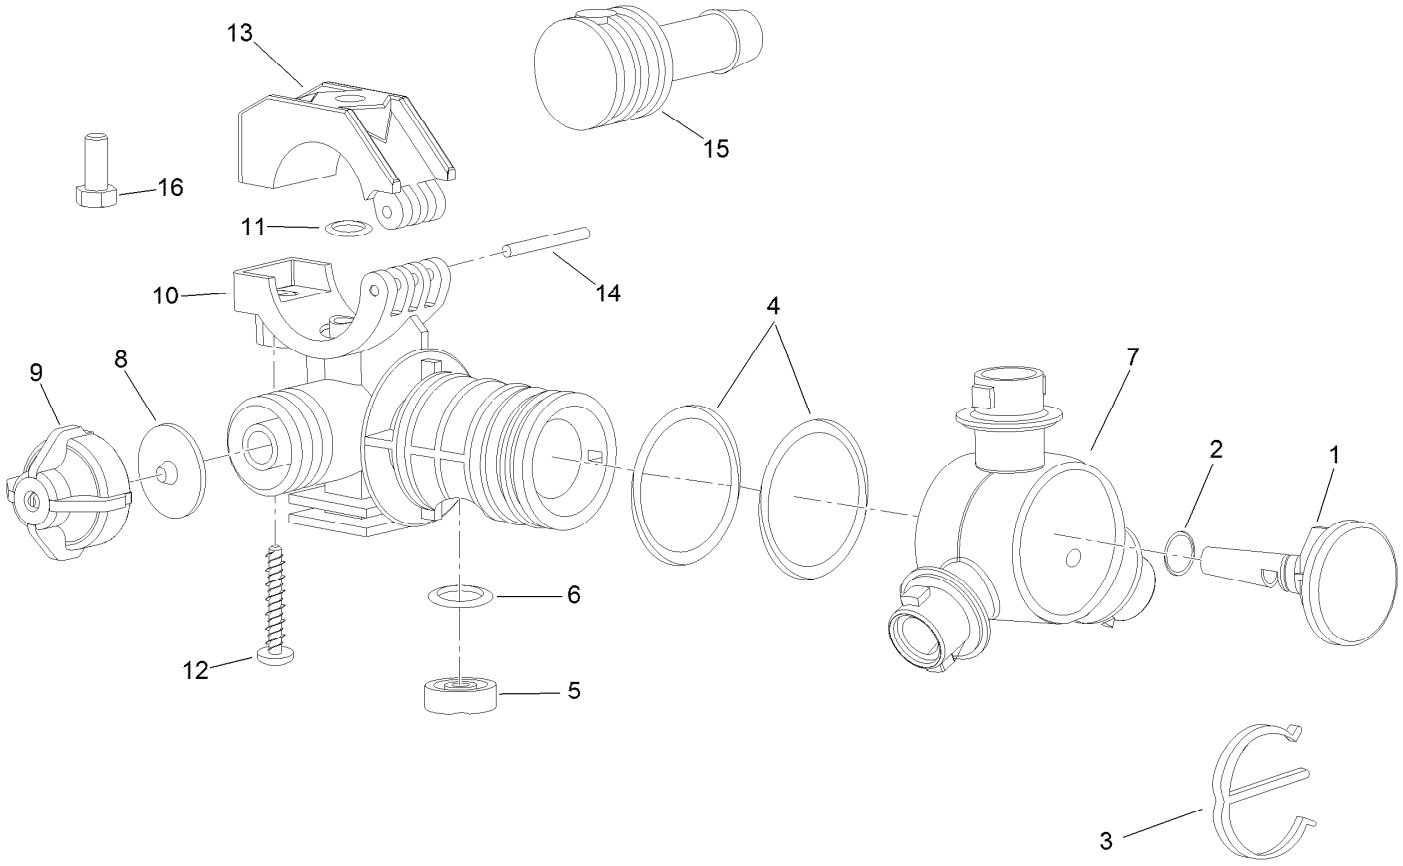


# LH Single Turret Body Assembly No. 108-3725


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 95-9200 | 1 | Plug |
| 2 | 95-9198 | 1 | O-Ring |
| 3 | 95-9197 | 1 | E-Clip |
| 4 | 95-9199 | 2 | O-Ring |
| 5 | 108-3264 | 1 | Seal-Viton |
| 6 | 108-3265 | 1 | O-Ring-Viton |
| 7 | 95-9196 | 1 | Turret |
| 8 | 41003 | 1 | Diaphragm |
| 9 | 95-9193 | 1 | Cap-Diaphram |
| 10 | 95-9192 | 1 | Body-Split Eyelet |
| 11 | 95-9191 | 1 | O-Ring |
| 12 | 99-0811 | 1 | Screw-Clamp |
| 13 | 99-0812 | 1 | Clamp-Upper |
| 14 | 99-0814 | 1 | Pin-Pivot |
| 15 | 95-9201 | 1 | Shank-Hose |
| 16 | 322-3 | 1 | Screw-HH |

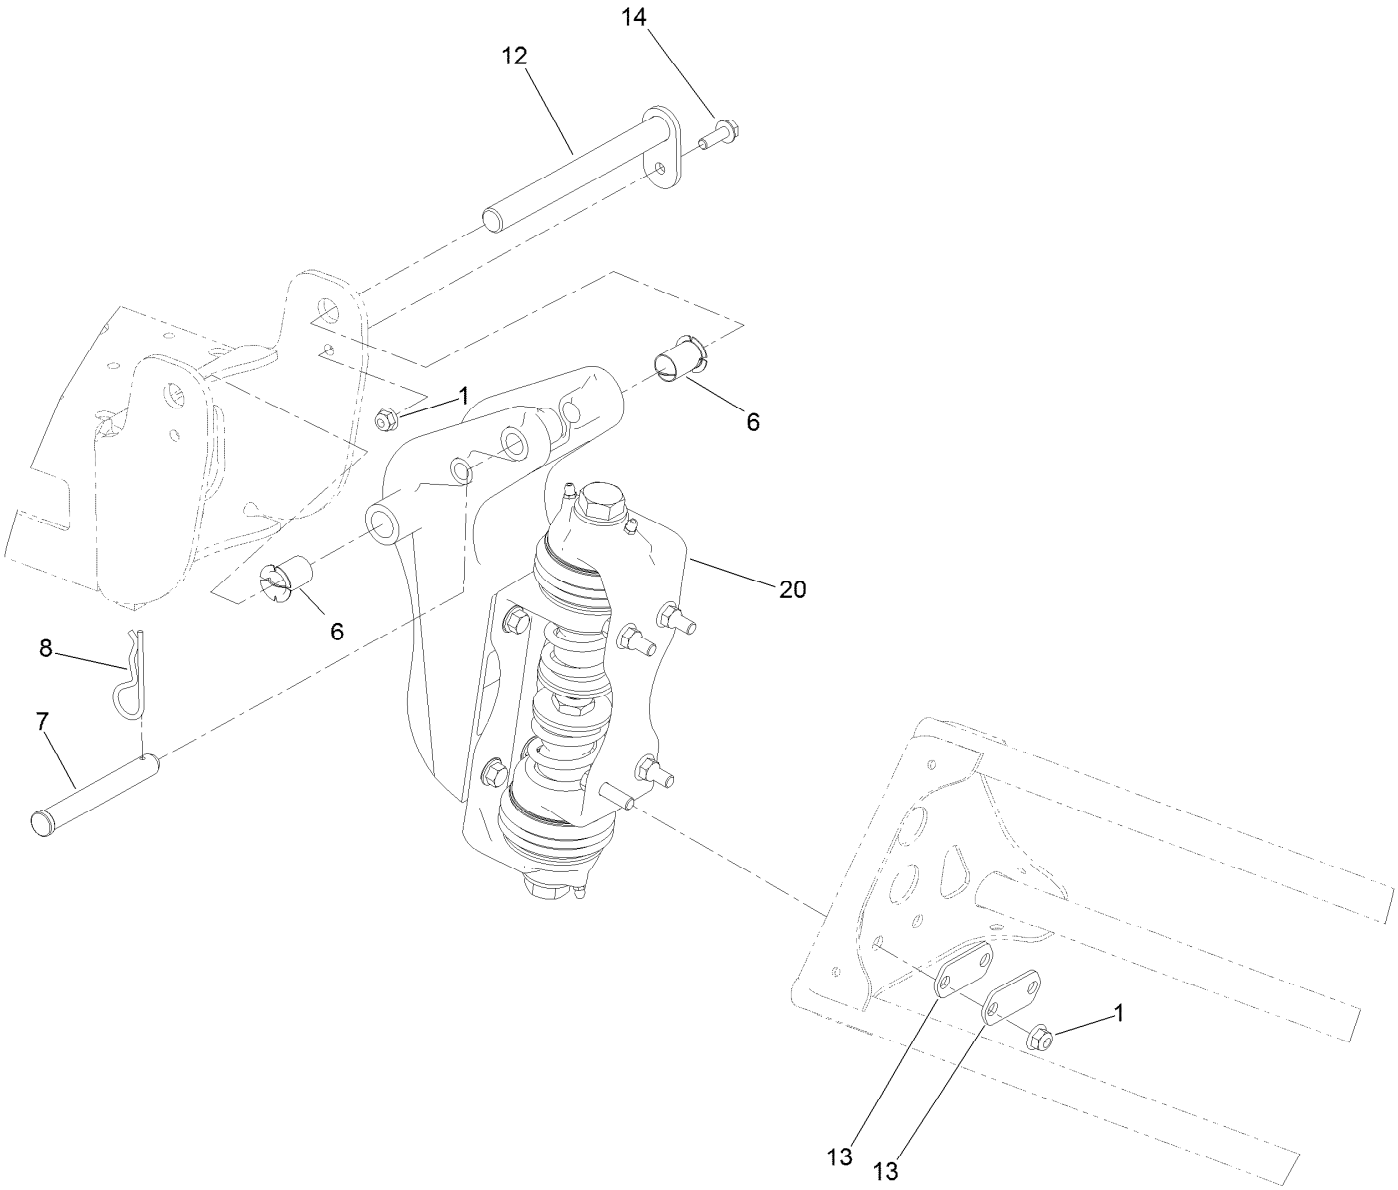


# Boom Pivot Mount Assembly


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 104-8300 | 2 | Nut-HF, NI |
| 6 | 100-8541 | 4 | Bushing-A Arm |
| 7 | 108-3436 | 2 | Pin-Clevis |
| 8 | 3290-468 | 2 | Pin-Cotter |
| 12 | 108-3419 | 2 | Pivot Pin ASM |
| 13 | 108-3605 | 8 | Plate-Backing |
| 14 | 108-3748 | 2 | Screw-HHF |
| 20 | | 2 | Pivot Bracket Assembly ● |

● Not serviced separately

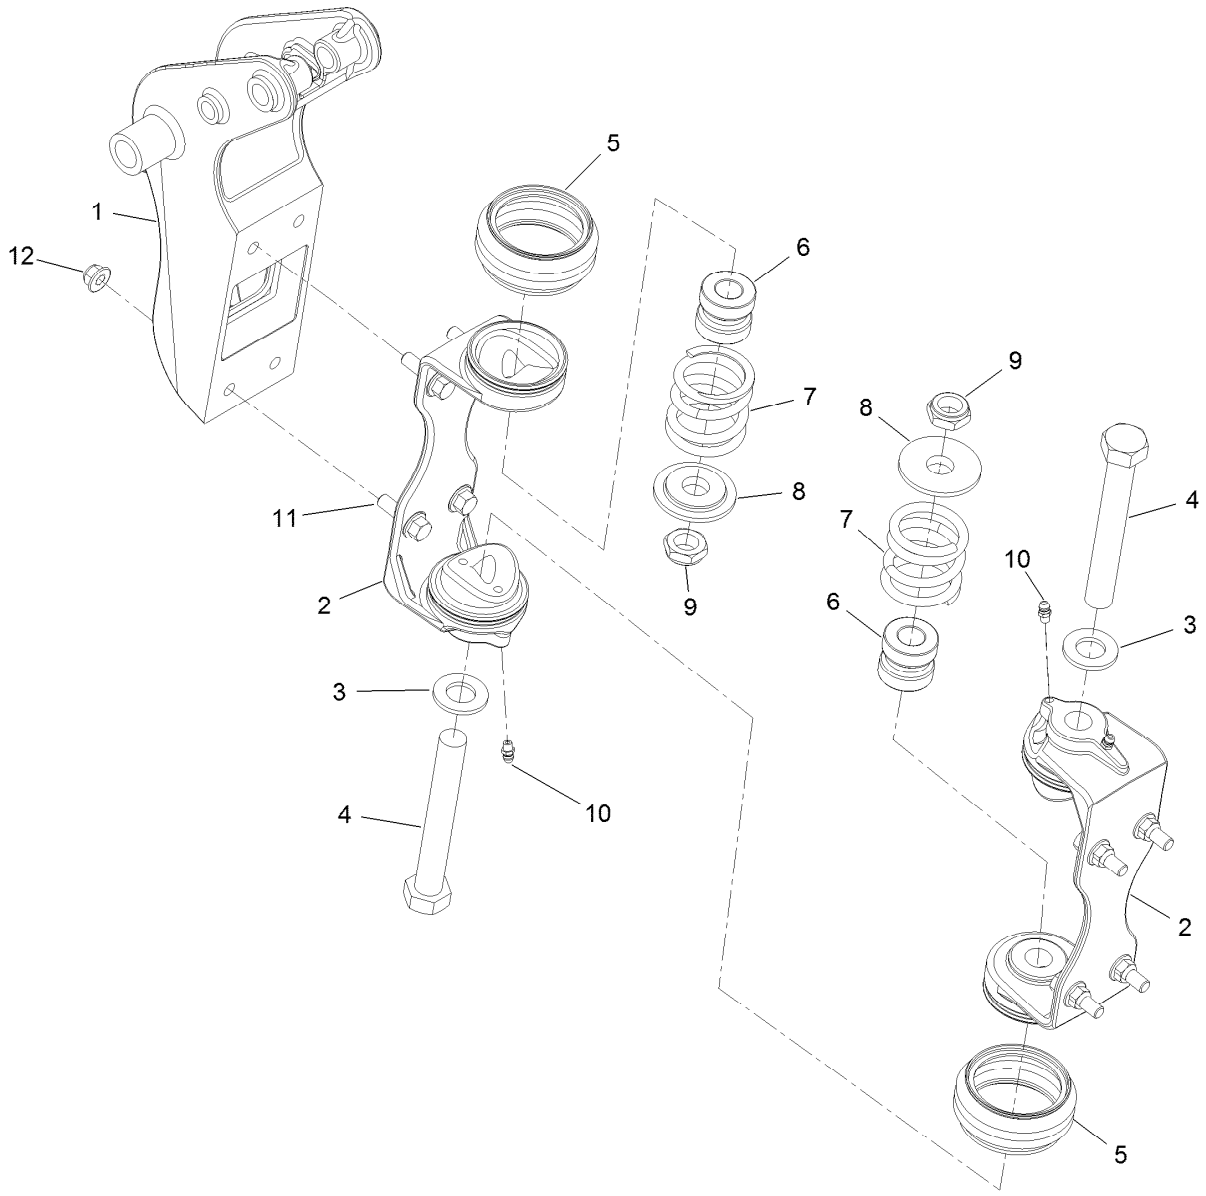


# Boom Pivot Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 137-1673 | 1 | Bracket-Pivot |
| 2 | 137-1674 | 2 | Hinge |
| 3 | 110-5054 | 2 | Washer-Flat |
| 4 | 108-3738 | 2 | Screw-HH |
| 5 | 108-3459 | 2 | Boot-Hinge |
| 6 | 120-8541 | 2 | Dampener-Hinge |
| 7 | 108-3440 | 2 | Spring-Breakaway, Boom |
| 8 | 108-3444 | 2 | Retainer-Spring |
| 9 | 3296-15 | 2 | Nut-Lock, NI |
| 10 | 302-5 | 4 | Fitting-Grease |
| 11 | 110-5050 | 8 | Screw-HHF |
| 12 | 104-8301 | 8 | Nut-HF, NI |

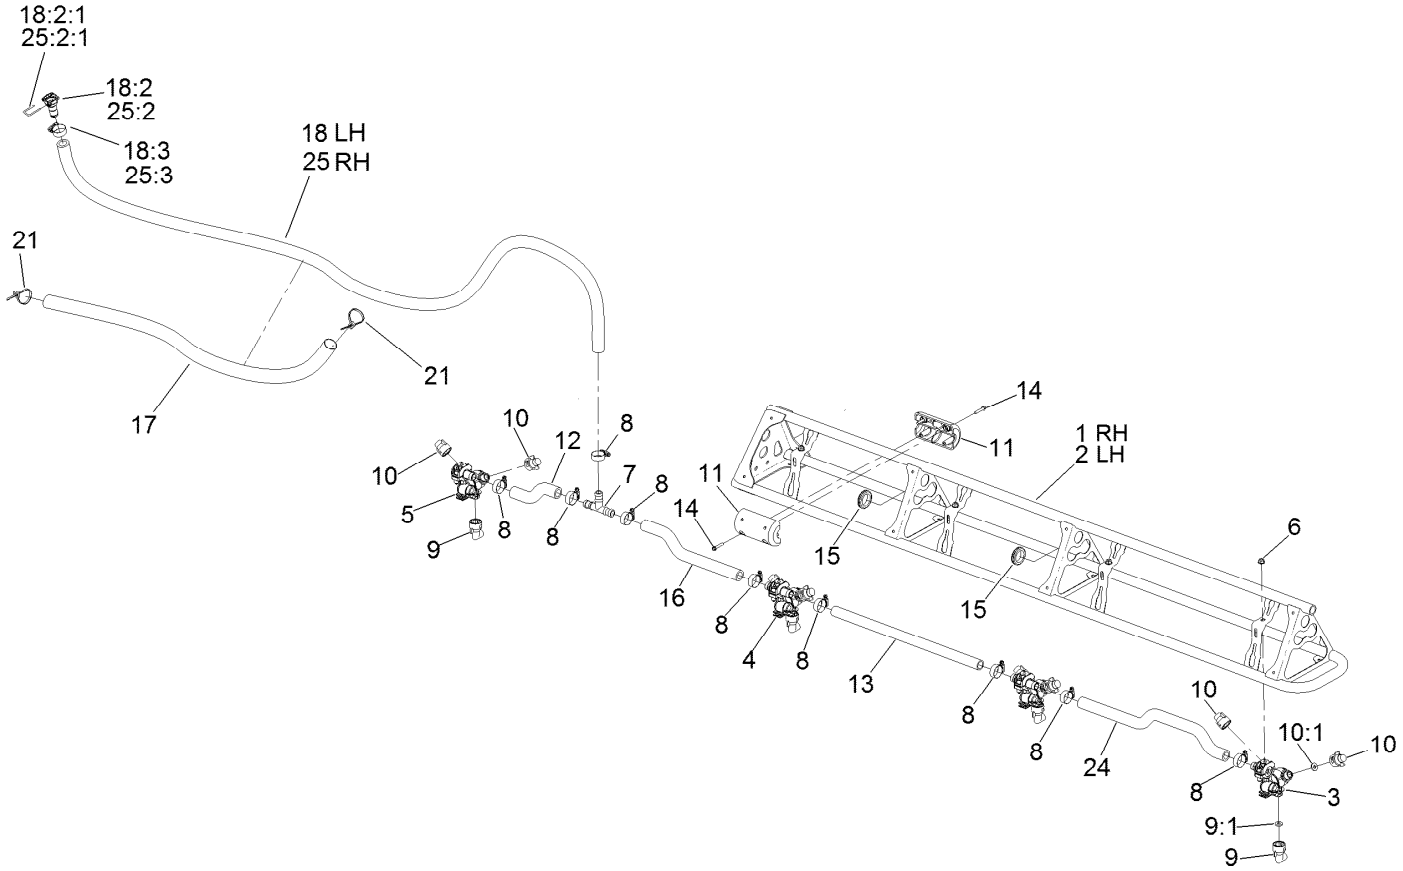


# Left and Right Hand Boom Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 108-3524-03 | 1 | Boom-RH |
| 2 | 108-3525-03 | 1 | Boom-LH |
| 3 | 108-3725 | 2 | LH Single Body Turret ASM |
| 4 | 108-3727 | 4 | Double Turret Body ASM |
| 5 | 108-3726 | 2 | RH Single Body Turret ASM |
| 6 | 104-8300 | 8 | Nut-HF, NI |
| 7 | 108-3439 | 2 | Tee |
| 8 | 2412-129 | 18 | Clamp-Hose |
| 9 | 95-9186 | 8 | Cap |
| 9:1 | 40998 | 1 | Seat-Gasket |
| 10 | 95-9187 | 16 | Cap-Blank |
| 10:1 | 40998 | 1 | Seat-Gasket |
| 11 | 119-9368 | 4 | Block Slide |
| 12 | 136-0437 | 2 | Hose-Formed |
| 13 | 40506 | 2 | Hose-Jumper |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 14 | 119-9369 | 8 | Screw-HHF |
| 15 | 240-3 | 4 | Grommet-Rubber |
| 16 | 136-0436 | 2 | Hose-Formed |
| 17 | 107-8650 | 2 | Conduit-Convoluted |
| 18 | 132-4322 | 1 | Hose-Boom |
| 18:2 | 127-9807 | 1 | Straight Fitting Kit |
| 18:2:1 | 133-0398 | 1 | Pin-Fork |
| 18:3 | 2412-129 | 1 | Clamp-Hose |
| 21 | 3290-378 | 6 | Tie-Cable |
| 24 | 108-3735 | 2 | Hose-Boom, Center (LH) |
| 25 | 132-4324 | 1 | Hose-Boom |
| 25:2 | 127-9807 | 1 | Straight Fitting Kit |
| 25:2:1 | 133-0398 | 1 | Pin-Fork |
| 25:3 | 2412-129 | 1 | Clamp-Hose |

# Attachments and Accessories

## For 41188 — Multi Pro 1750 Turf Sprayer

| Product Name | Model/Part |
|---|---|
| Premium ATF (Drum) | 108-1185 |
| Premium ATF (Pail) | 108-1186 |
| Premium All Purpose Grease (Tube) | 108-1190 |
| License Plate Kit | 120-8506 |
| Covered Boom Spring Upgrade Kit | 120-8508 |
| Premium Engine Oil 10w30 (55 Gallon Drum) | 121-6392 |
| Premium Engine Oil 10w30 (5 Gallon Pail) | 121-6393 |
| Lance Suction Assembly | 127-9826 |
| Sonic Boom Finish Kit | 130-8227 |
| Pump Head Kit | 133-2898 |
| Finishing Kit, Foam Marker for Multi Pro 1750 Turf Sprayer | 136-0457 |
| Universal Sunshade | 30349 |
| Rear Work Light Kit | 41010 |
| Single Nozzle Kit | 41023 |
| Hand Spray Wand Kit | 41118 |
| EU Compliance Kit | 41155 |
| Pro Foam Concentrate (4 x 1 Gallon) | 41157 |
| Chemical Pre-Mix Kit | 41158 |
| Electric Hose Reel Kit | 41159 |
| Nozzalert - Mp Nozzle Flow System | 41166 |
| CE Kit | 41202 |
| Tank Clean Rinse Kit | 41208 |
| Ultra Sonic Boom Leveling Kit | 41219 |
| Foam Marker Kit | 41249 |
| Drift Reduction Boom Shroud Kit | 41602 |
| Pro-Foam | 41607 |
| GSM RTK Correction Modem Kit, GeoLink Precision Spray System | 41625 |
| X25 GeoLink Precision Spray System Kit, Serial Number 315000001 and After Multi Pro 1750 or 5800 Turf Sprayer | 41630 |
| X25 GeoLink Precision Spray System Finishing Kit, Serial Number 315000001 and After Multi Pro 1750 Turf Sprayer | 41631 |
| Geolink Lte Precision Spray System | 41633 |
| Geolink - GSM | 41634 |
| TNL Reference Antenna Kit, MR-2 | 41635 |
| CL-55 CDMA Modem Kit | 41638 |
| Clutch Assembly, Right | 41639 |
| Geolink Finish Kit, Mp 1750 | 41674 |
| Spark Arrestor Screen | 94-8157 |

## Notes:

## Notes:

## Notes:




**Count on it.**