Form Number 3350-629 Rev A

LAWN-BOY®

Gold Series® Lawnmower

Model No. 10654 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© Lawn-Boy Inc. - 2004
All Rights Reserved

Contents

Description	Page
Deck, Side Chute, and Rear Door Assembly	3
Rear Axle and Low Wheel Assembly	4
Front Axle Assembly	5
Engine and Blade Assembly	6
HP 2 Bail Handle Assembly	7
Rear Bag Assembly	8
Cylinder Barrel Assembly Honda Model No. Gcv160a sta1	9
Oil Pan Assembly Honda Model No. Gcv160a sta1	10
Crankshaft Assembly Honda Model No. Gcv160a sta1	11
Piston and Connecting Rod Assembly Honda Model No. Gcv160a sta1	12
Camshaft Pulley Assembly Honda Model No. Gcv160a sta1	13
Recoil Starter Assembly Honda Model No. Gcv160a sta1	14
Fan Cover Assembly Honda Model No. Gcv160a sta1	15
Carburetor Assembly Honda Model No. Gcv160a sta1	16
Air Cleaner Assembly Honda Model No. Gcv160a sta1	17
Muffler Assembly Honda Model No. Gcv160a sta1	18
Flywheel Assembly Honda Model No. Gcv160a sta1	19
Control Assembly Honda Model No. Gcv160a sta1	20
Choke Base Assembly Honda Model No. Gcv160a sta1	21
Top Cover Assembly Honda Model No. Gcv160a sta1	22
Label Assembly Honda Model No. Gcv160a sta1	23

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head
WH. . . . . wing head

Footnotes

❶ Not serviced separately


❷ Obtain parts from your local Honda dealer.

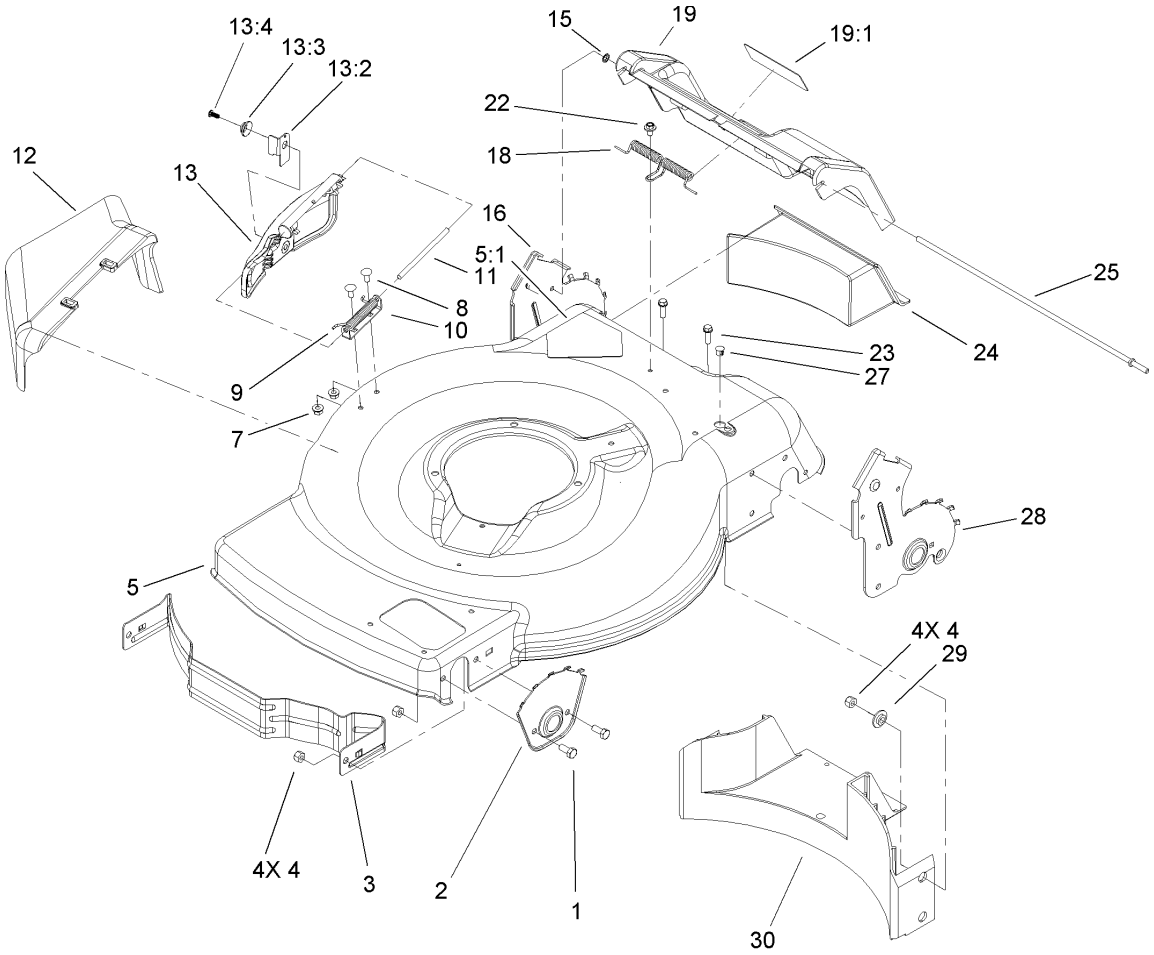

Deck, Side Chute, and Rear Door Assembly


Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-Hoc, Front
3	104-8694-03	1	Baffle-Front
4	3296-29	8	Nut-Lock, NI
5	106-8343	1	Housing ASM
5:1	105-6838	1	Decal-Danger
7	32128-32	2	Nut-HHF
8	3229-11	2	Screw-CARR
9	99-5293	1	Spring-Torsion
10	99-5292	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Side Discharge
13	106-8394	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Pushnut
16	107-0790	1	RH Rear HOC Plate ASM
18	105-3032	1	Spring-Door, Rear
19	106-8389	1	Door ASM-Service
19:1	106-8388	1	Decal-Warning, Door
22	46-6810	1	Screw And Washer ASM
23	46-8091	2	Screw-HWH
24	105-1842	1	Plug-Discharge, Rear

Ref	Part No.	Qty.	Description
25	105-1827	1	Rod-Pivot, Rear Door
27	104-9369	1	Plug-Dome
28	107-0783	1	LH Rear HOC Plate ASM
29	105-3006	4	Washer-Stepped
30	105-3047	1	Baffle-Rear

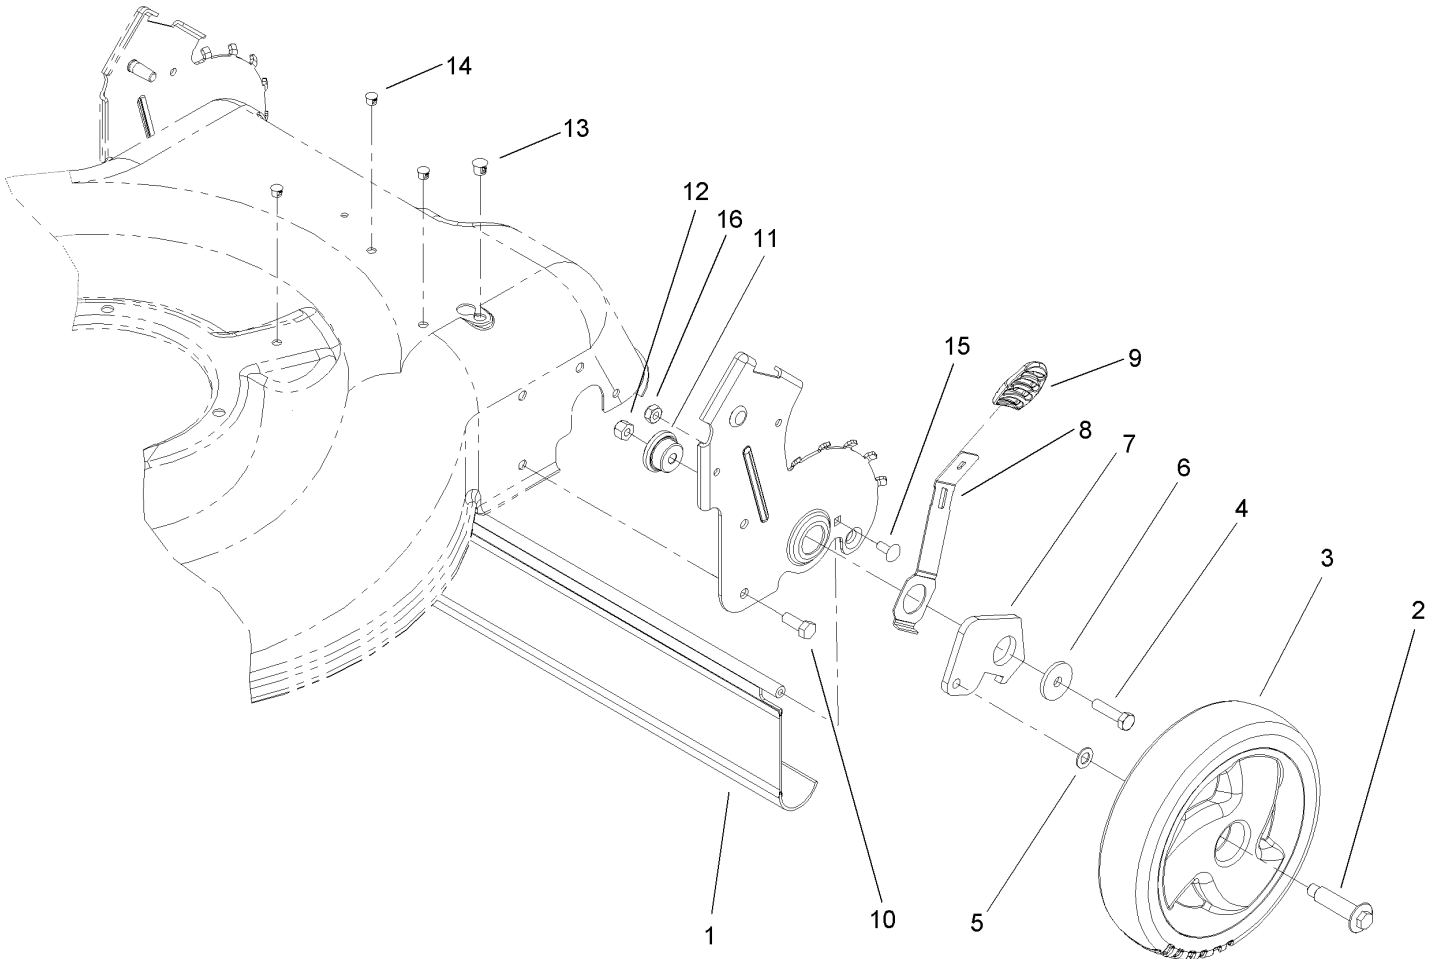


Rear Axle and Low Wheel Assembly

Ref	Part No.	Qty.	Description
1	105-1843	1	Shield-Trailing
2	614650	2	Bolt-Shoulder
3	107-1916	2	8in Wheel ASM
4	322-6	2	Screw-HH
5	40-1940	2	Washer
6	105-3048	2	Washer-Flat
7	105-1819	2	Arm-Pivot, Rear
8	105-1809	2	Arm-Spring
9	107-1904	2	Knob-Lever, HOC
10	322-4	4	Screw-HH
11	105-1818	2	Bushing-Mount, HOC
12	3296-29	2	Nut-Lock, NI
13	104-9368	1	Plug-Dome
14	104-9373	3	Plug-Dome
15	3229-11	2	Screw-CARR
16	3296-16	2	Nut-Lock, NI

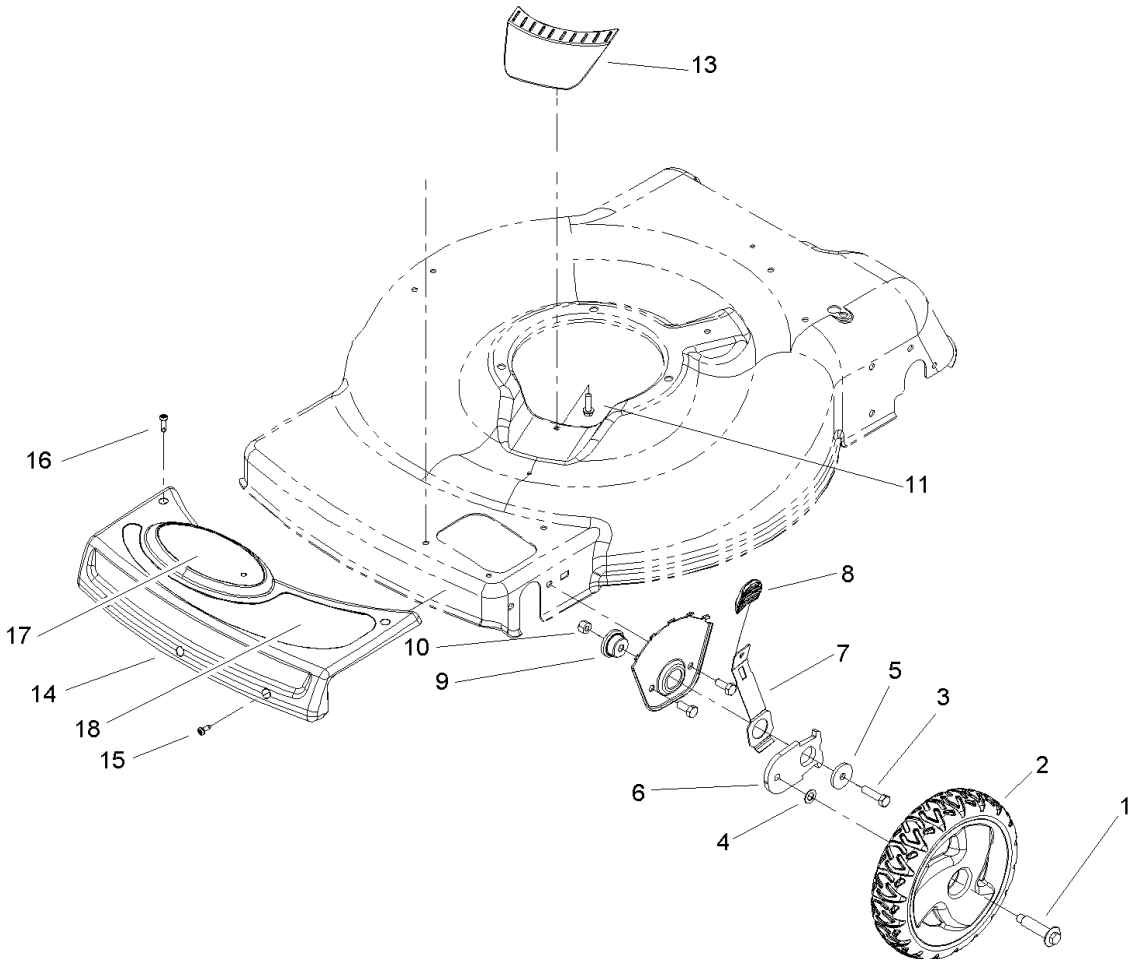


Front Axle Assembly

Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-1916	2	8in Wheel ASM
3	322-6	2	Screw-HH
4	40-1940	2	Washer
5	105-3048	2	Washer-Flat
6	105-1807	2	Arm-Pivot, Front
7	105-1809	2	Arm-Spring
8	107-1904	2	Knob-Lever, HOC
9	105-1818	2	Bushing-Mount, HOC
10	3296-29	2	Nut-Lock, NI
11	46-8091	1	Screw-HWH
13	105-3005	1	Cover-Belt Opening
14	107-1908	1	Bumper-Wpm
15	105-6849	3	Screw-Thread Forming
16	105-6828	2	Screw
17	107-3764	1	Decal-Housing
18	107-3763	1	Decal-Housing

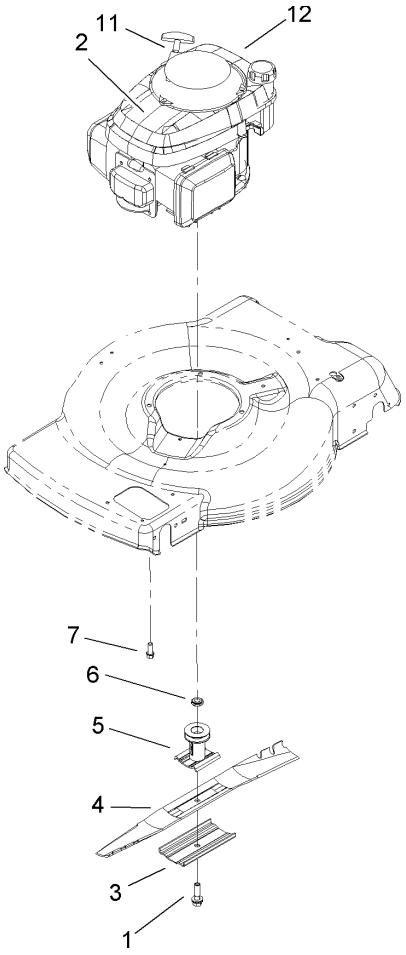


Engine and Blade Assembly

Ref	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade
2	107-3760	1	Decal-Recoil
3	105-3029-03	1	Support-Blade
4	104-8697-03	1	Blade-22 Inch
5	106-3987	1	Blade Driver ASM
6	106-3999	1	Spacer-Driver
7	95-1726	3	Screw-Taptite
11	92-1701	1	Stop-Rope
❶12		1	Engine-Honda Model No.gcv 160a Sta1

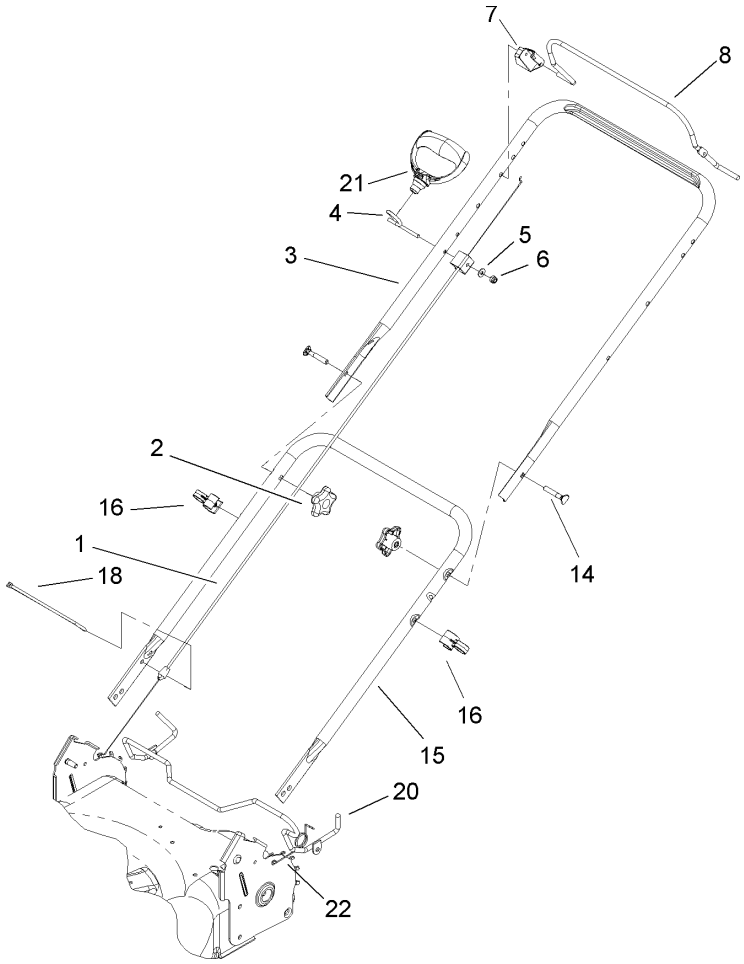


HP 2 Bail Handle Assembly

Ref	Part No.	Qty.	Description
1	107-1903	1	Cable-Brake, Hp
2	106-4161	2	Knob-Handle
3	104-8680-05	1	Handle-Upper
4	107-1935	1	Guide-Rope
5	3256-1	1	Washer-Flat
6	3296-73	1	Nut-Lock, NI
7	107-0757	1	Stop-Pivot
8	106-3991	1	Bail-Brake
14	92-2260	2	Screw-Handle
15	107-0784-05	1	Handle-Lower
16	106-6805	1	Guide-Cable
18	614249	1	Strap-Tie
20	107-0768	1	Release Lever ASM
21	106-8345	1	Handle-Recoil
22	107-7472	1	Spring-Torsion

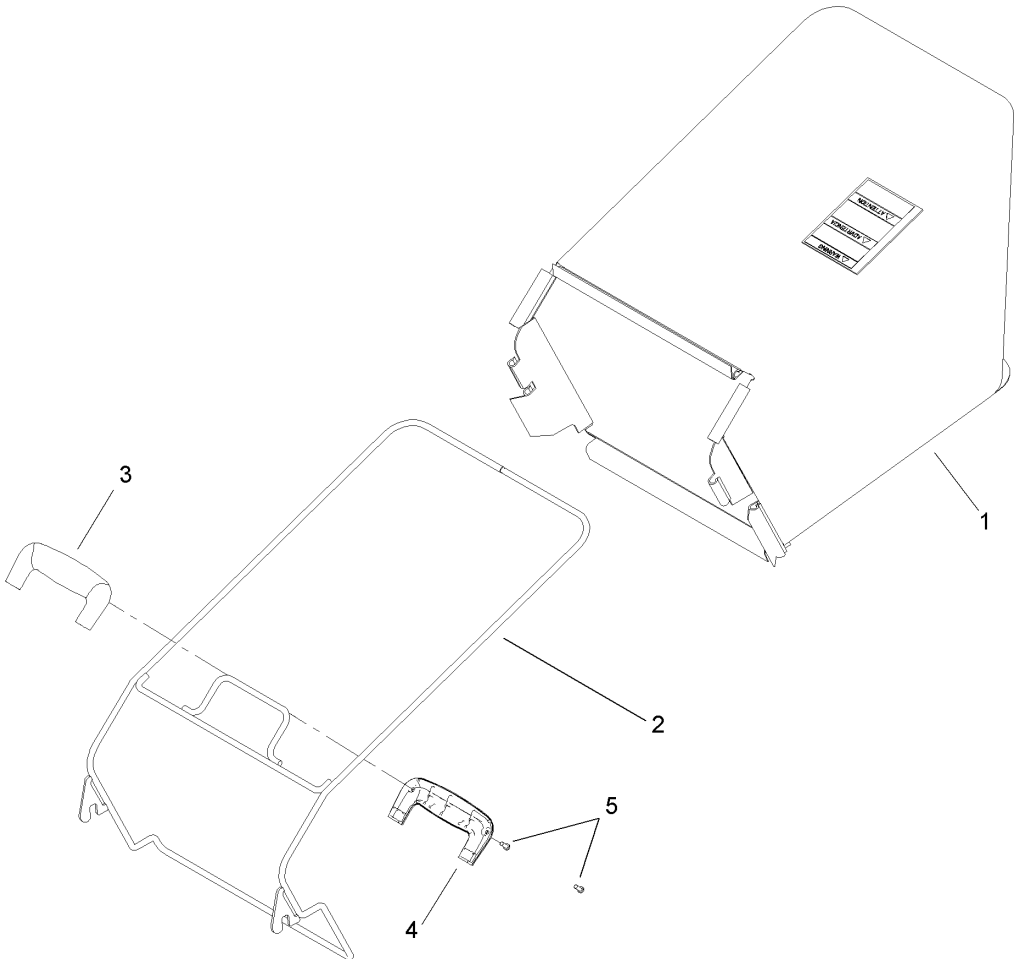

Rear Bag Assembly


Ref	Part No.	Qty.	Description
1	106-8392	1	Grass Bag ASM
2	105-6831-03	1	Brace Bag Frame ASM
3	107-1905	1	Handle-Bag, Top
4	107-1906	1	Handle-Bag, Bottom
5	32144-111	2	Screw-PPH

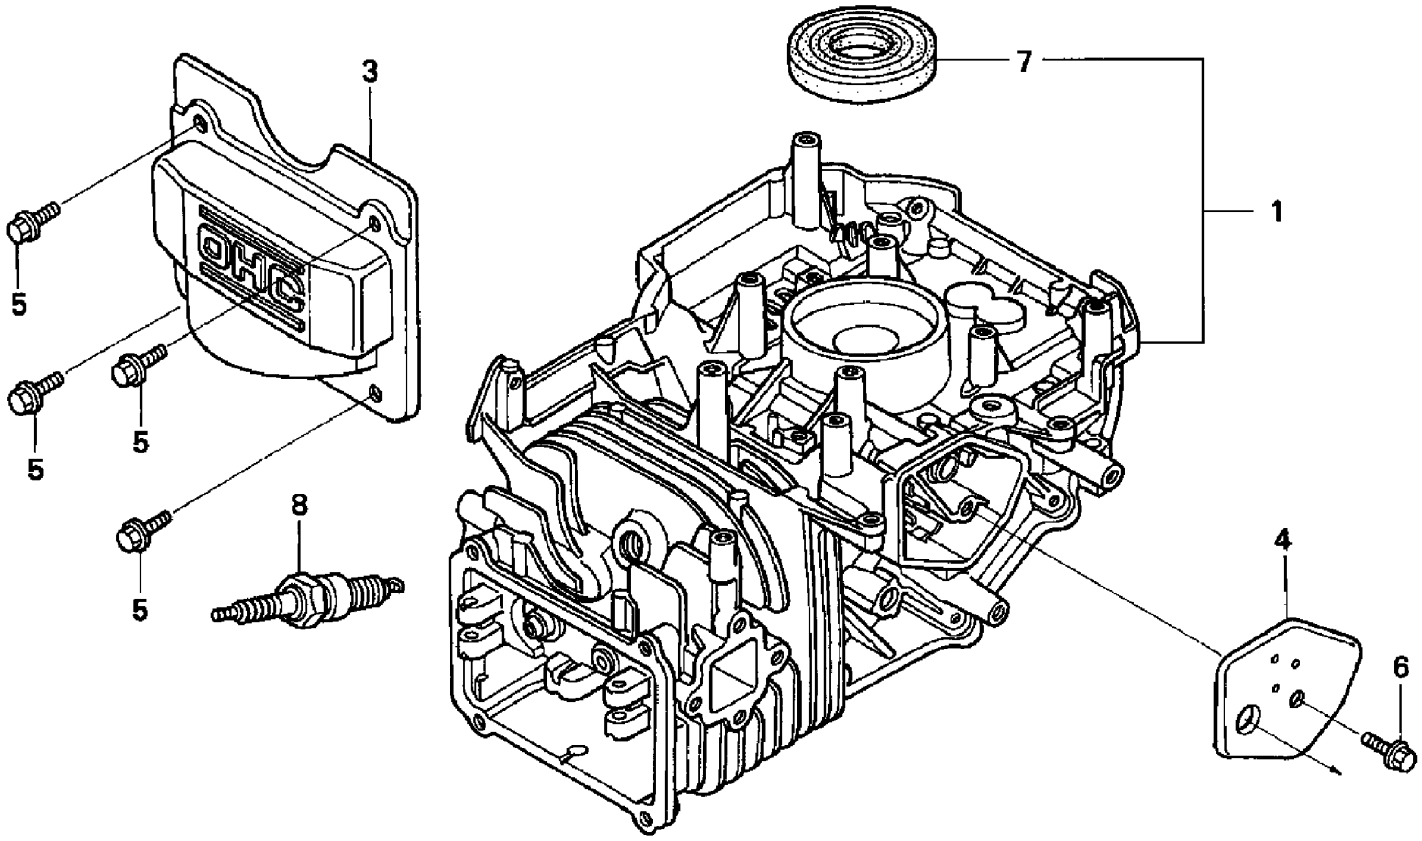

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Cylinder Barrel Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❷1	12000-ZL8-415	1	Cylinder ASM (.010)
❷3	12311-ZL8-000	1	Cover, Head
❷4	12355-ZL8-000	1	Cover, Breather (Breather Valve Asm.)
❷5	90013-883-000	4	Bolt-Flange (6x12) (Ct200)
❷6	90014-952-000	1	Bolt, Flange (6x14)
❷7	91201-ZL8-003	1	Oil Seal (25.4x62x6)
❷8	98079-56846	1	Spark Plug (Bpr6es) (Ngk)

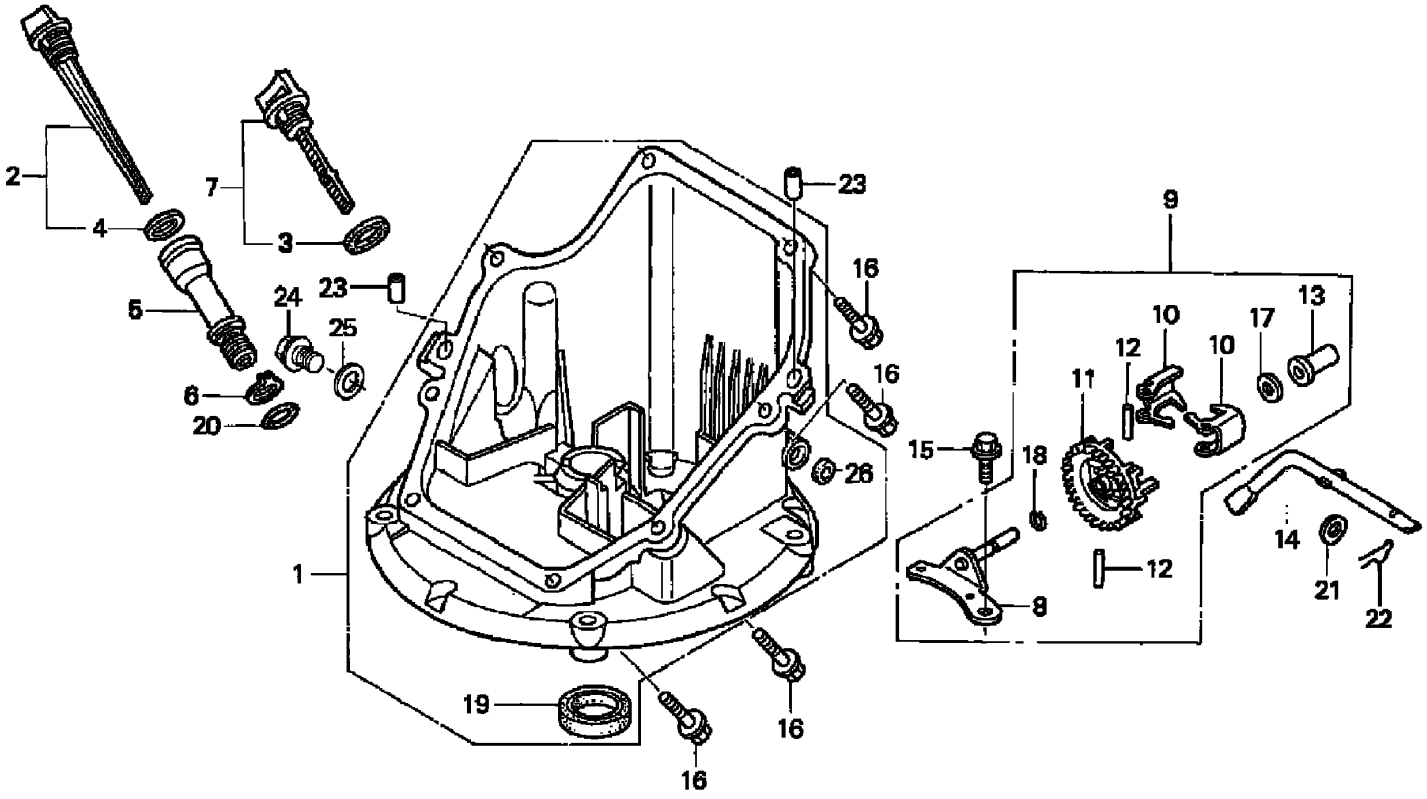


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL

Oil Pan Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❷1	11300-ZM0-811	1	Pan Asm., Oil
❷2	15650-ZM0-801	1	Dipstick-Oil
❷4	15625-ZE6-000	1	Gasket, Oil Filler Cap
❷5	15631-ZM0-000	1	Extension-Oil Filler
❷6	15639-ZM0-000	1	Washer, Extension Lock
❷8	16508-ZM0-010	1	Shaft, Governor Holder
❷9	16510-ZM0-010	1	Governor Asm.
❷10	16511-ZL8-000	2	Weight, Governor
❷11	16512-ZM0-000	1	Holder, Governor Weight
❷12	16513-ZE1-000	2	Pin, Governor Weight
❷13	16531-ZE1-000	1	Slider, Governor
❷14	16541-ZM0-000	1	Shaft, Governor Arm
❷15	90014-952-000	1	Bolt, Flange (6x14)


Ref	Part No.	Qty.	Description
❷16	90121-952-000	8	Bolt, Flange (6x25)
❷17	90451-ZE1-000	1	Washer, Thrust (6mm)
❷18	90602-ZE1-000	1	Clip-Governor Holder
❷19	91202-ZL8-003	1	Oil Seal (28x41.25x6)
❷20	91356-MA6-005	1	O-Ring
❷21	94101-06800	1	Washer
❷22	94251-08000	1	Pin, Lock (8mm)
❷23	94301-08200	2	Pin, Dowel (8x20)

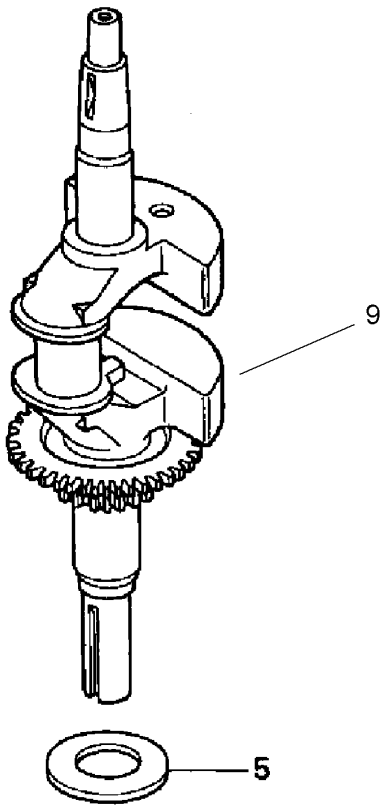

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Crankshaft Assembly
Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description
❷5	90402-ZL8-000	1	Washer, Thrust
❷9	13310-Z0L-V70	1	Crankshaft

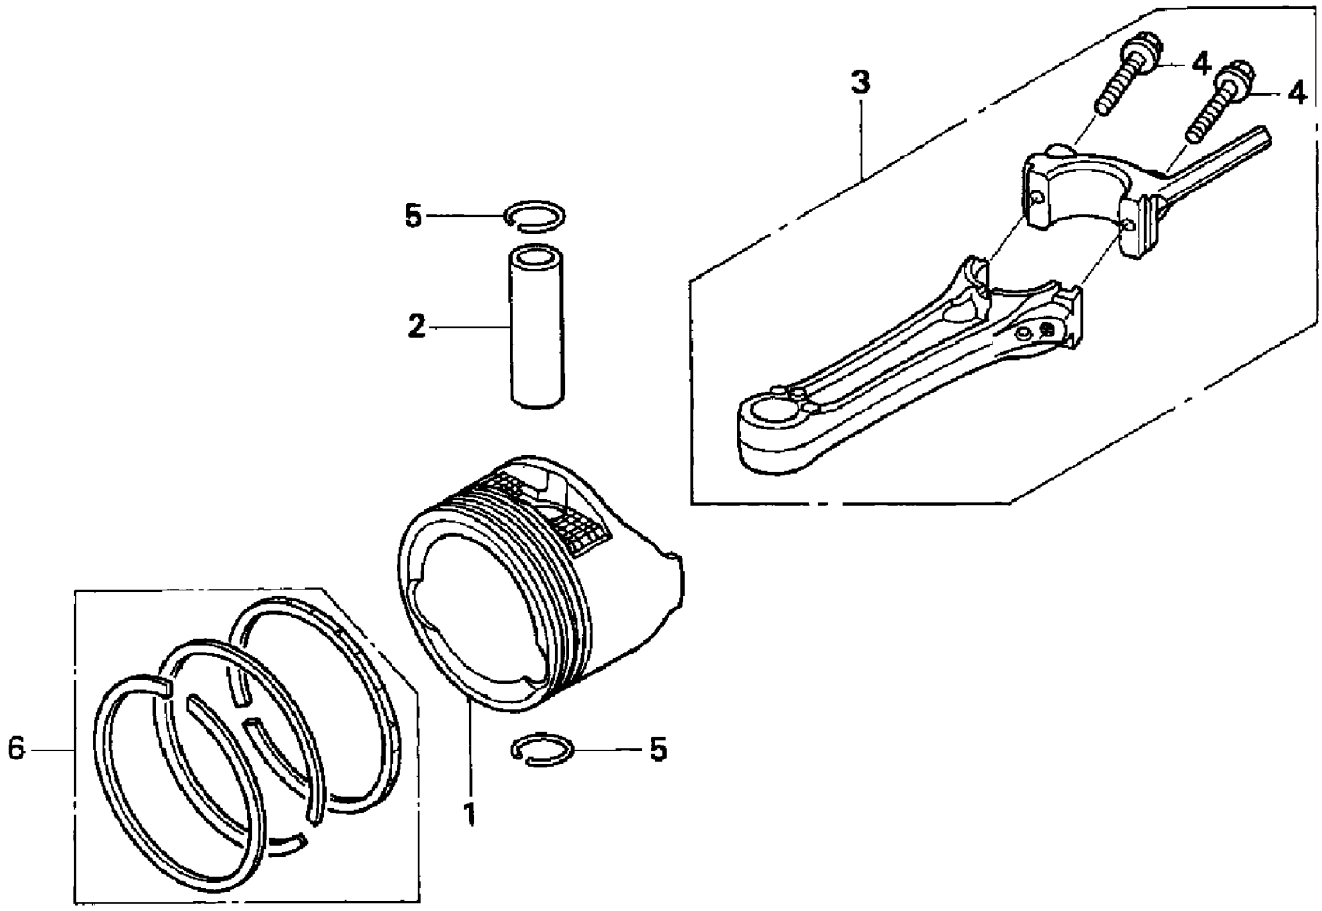

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Piston and Connecting Rod Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❷1	13101-ZL8-000	1	Piston
❷2	13111-ZE0-000	1	Pin, Piston
❷3	13200-ZL8-000	1	Rod Asm., Connecting
❷4	90001-ZE1-000	2	Bolt, Connecting Rod
❷5	90551-ZE0-000	2	Clip, Piston Pin (13mm)
❷6	13010-ZL8-003	1	Ring Set, Piston (Riken)
❷	13010-ZL8-024	1	Ring Set, Piston (Teikoku)

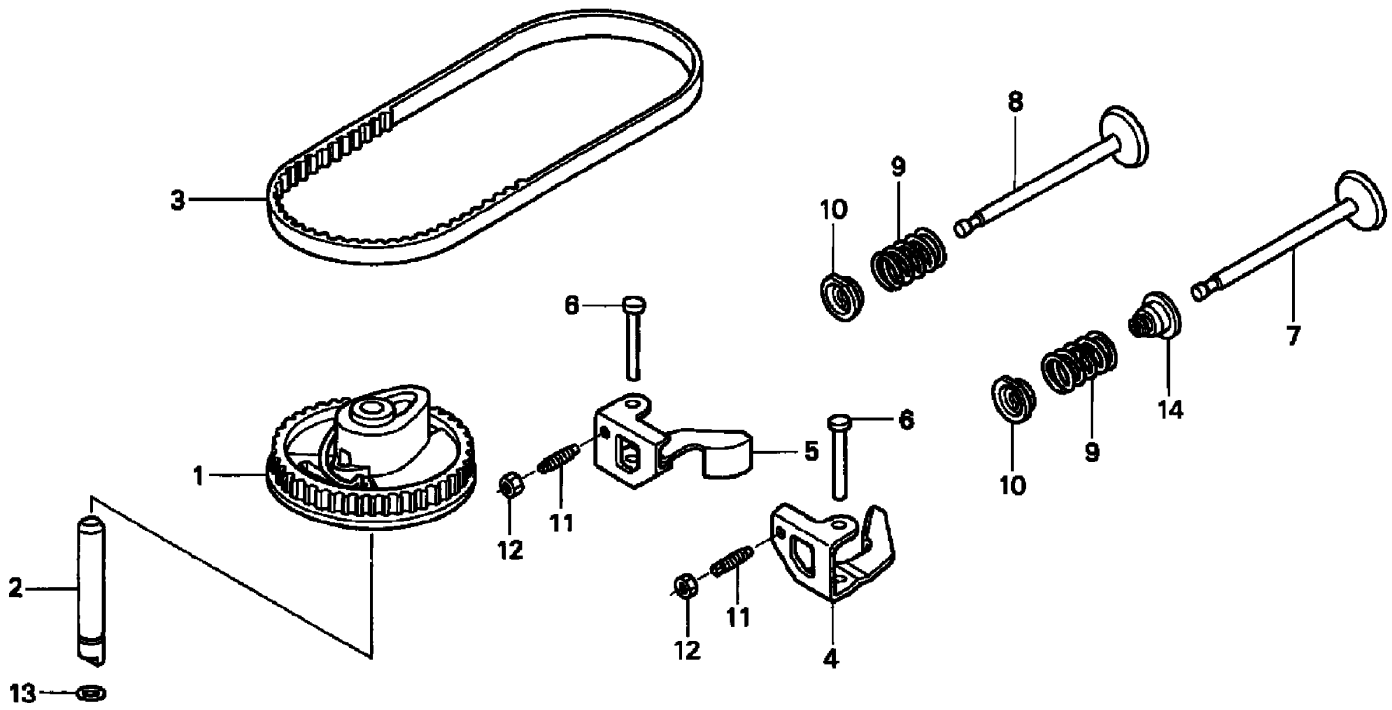



PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Camshaft Pulley Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❷1	14320-ZL8-010	1	Pulley, Camshaft
❷2	14324-ZL8-000	1	Shaft, Cam Pulley
❷3	14400-Z0J-014	1	Belt, Timing (84hu7 G-
❷4	14431-ZOJ-000	1	Arm-In. Valve Rocker
❷5	14441-Z0J-000	1	Arm, Ex. Valve Rocker
❷6	14461-ZL8-000	2	Shaft, Rocker Arm
❷7	14711-ZL8-000	1	Valve, In.
❷8	14721-ZL8-000	1	Valve, Ex.
❷9	14751-ZL8-000	2	Spring, Valve
❷10	14771-ZOJ-000	2	Retainer-Valve Spring
❷11	90012-333-000	2	Screw, Tappet Adj.
❷12	90206-001-000	2	Nut, Tappet Adj.
❷13	91301-ZM0-V31	1	O-Ring (6.8x1.9)

Ref	Part No.	Qty.	Description
❷14	12209-ZM0-003	1	Seal, Valve Stem

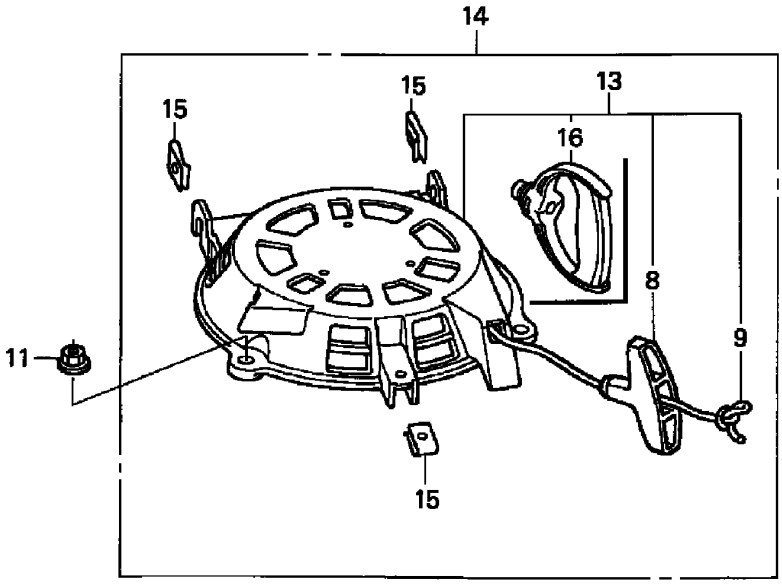


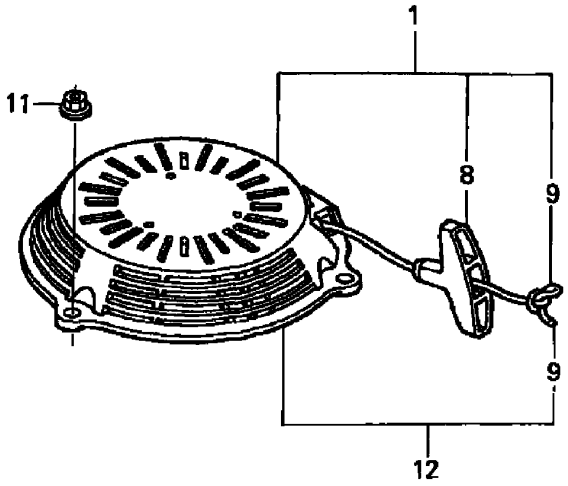

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Recoil Starter Assembly
Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description
❷9	28462-Z0L-V71	1	Rope, Recoil Starter
❷11	90201-ZM0-000	3	Nut, Flange (6mm)
❷13	28400-Z0L-V70	1	Starter Asm., Recoil
❷15	66871-KY2-700	3	Nut, Cowl (Upper)
❷16	28461-Z0L-V71	1	Knob, Recoil Starter

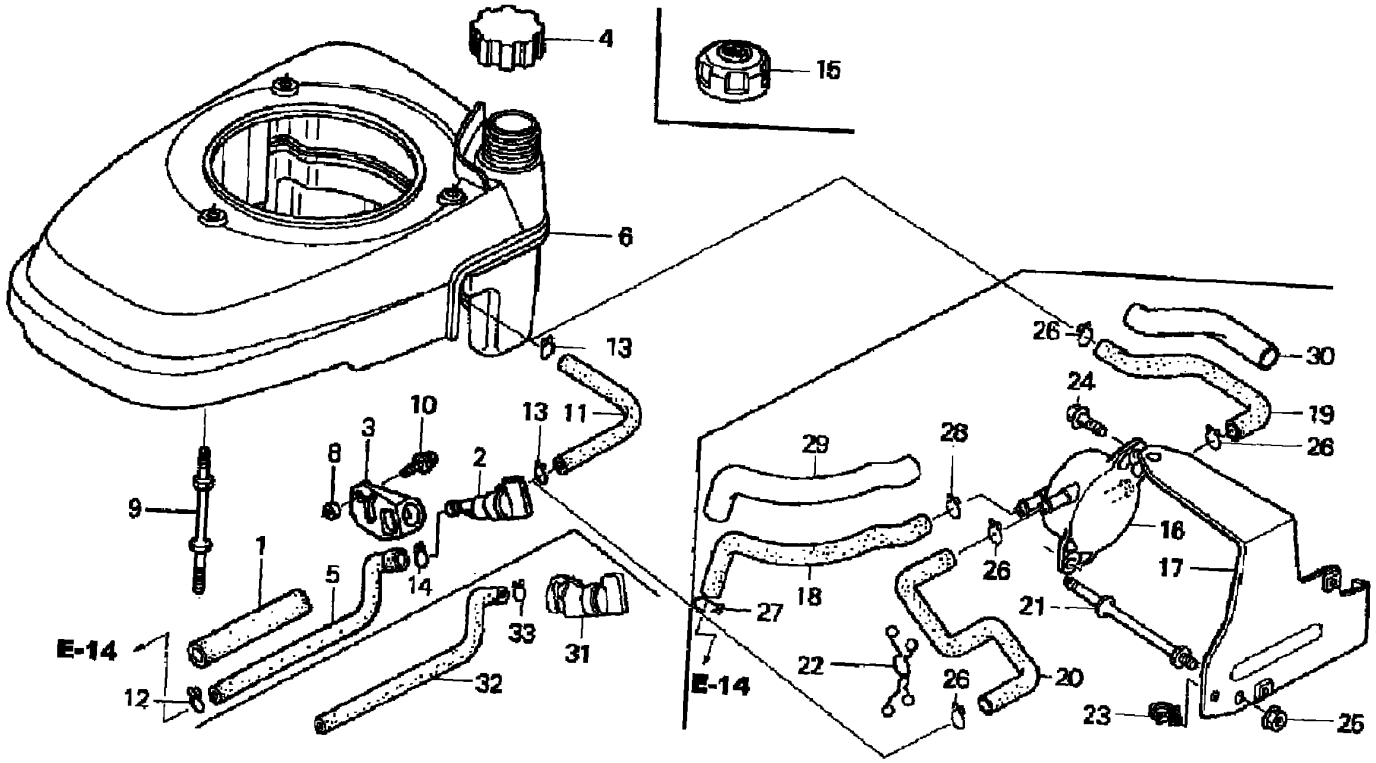

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Fan Cover Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❷1	16854-ZH8-000	1	Rubber-Supporter (107mm)
❷2	16950-ZG9-M03	1	Petcock Asm.
❷3	16956-ZG9-M00	1	Bracket, Petcock
❷4	17620-ZL8-013	1	Cap Asm., Fuel Tank
❷5	17702-ZM0-000	1	Tube, Fuel
❷6	19610-Z0L-800ZA	1	Cover-Fan
❷8	91501-ZOL-800	1	Collar-Fuel Petcock
❷9	90043-ZL8-000	3	Bolt, Stud
❷10	93891-05010-08	1	Screw-Washer (5x10)
❷11	17701-Z0L-000	1	Tube, Fuel Tank
❷12	95002-02080	1	Clip-Tube (B8)
❷13	95002-02100	2	Clip, Tube (B10)
❷14	95002-50000	1	Clip, Tube (C9)

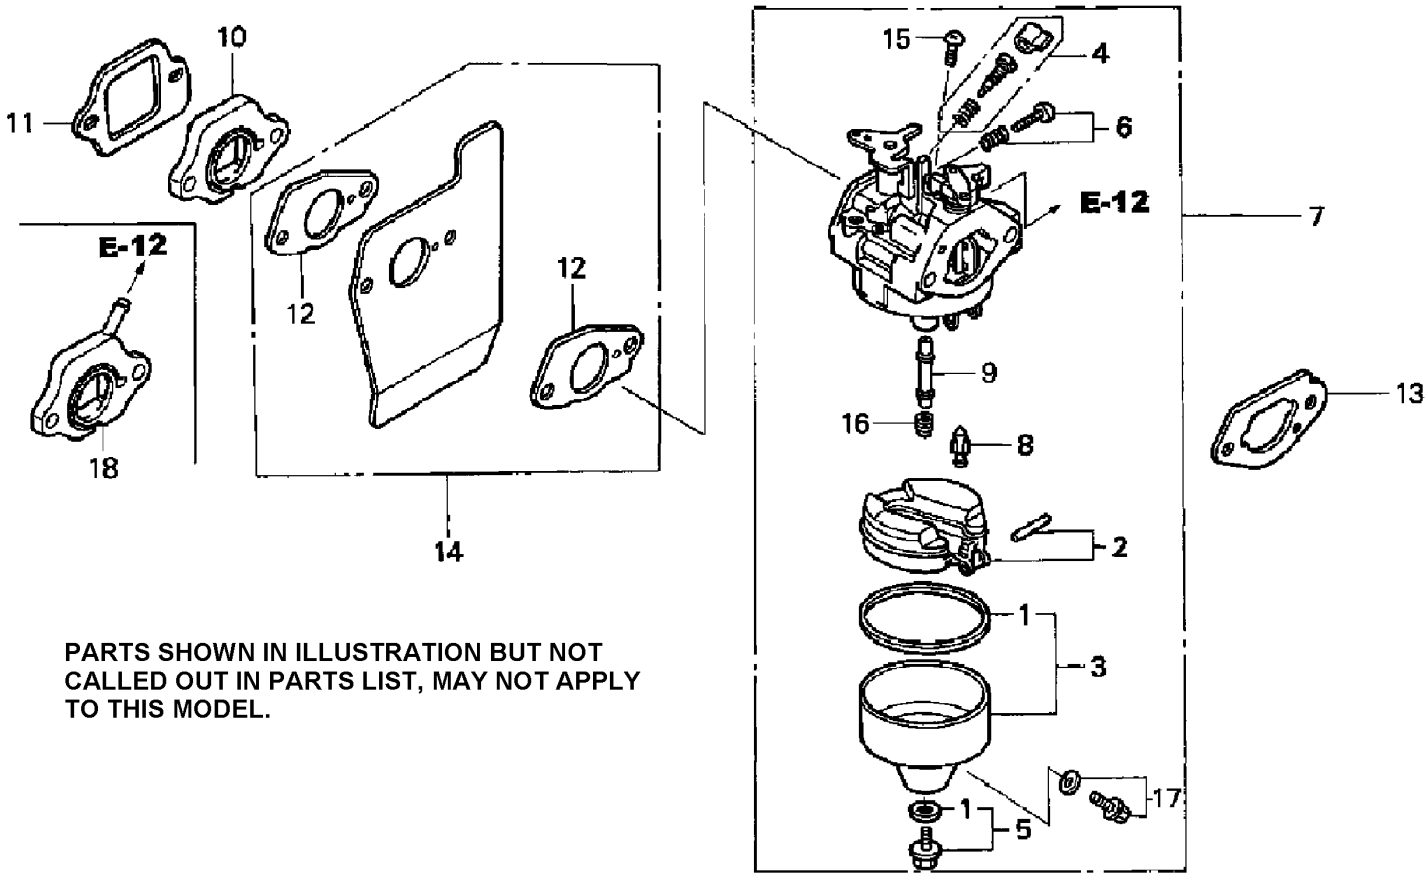


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Carburetor Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❷1	16010-883-015	1	Gasket Set
❷2	16013-ZL1-003	1	Float Set
❷3	16015-887-782	1	Chamber Set, Float
❷5	16028-ZE0-005	1	Screw Set B
❷7	16100-Z0L-801	1	Carburetor Asm. (Bb62g A)
❷8	16155-ZM0-003	1	Valve, Float
❷9	16166-ZM0-003	1	Nozzle, Main
❷10	16211-ZL8-000	1	Insulator, Carburetor
❷11	16212-ZL8-000	1	Gasket, Insulator
❷12	16221-883-800	2	Gasket, Carburetor
❷13	16228-ZL8-000	1	Gasket, Carburetor (Choke Side)
❷14	19650-ZM0-000	1	Guide, Air
❷15	93550-05006-0H	1	Screw-Pan


Ref	Part No.	Qty.	Description
❷16	99101-124-0600	1	Jet, Main (#60)
❷	99101-124-0620	1	Jet, Main (#62)
❷	99101-124-0650	1	Jet, Main (#65)
❷17	16024-ZE1-811	1	Screw Set-Drain

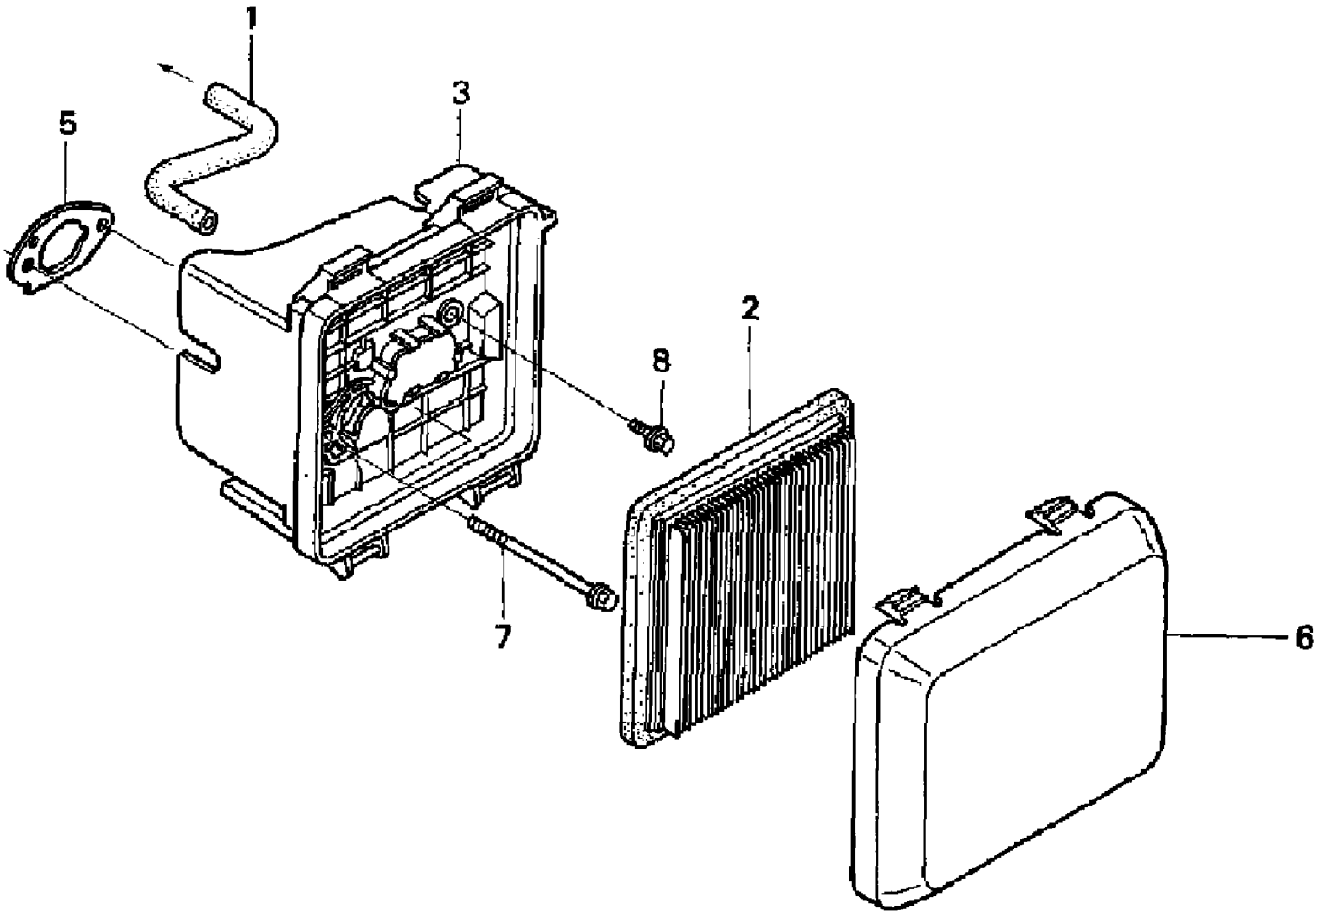

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Air Cleaner Assembly
Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description
❷1	15721-ZM0-000	1	Tube, Breather
❷2	17211-ZL8-003	1	Element-Air Cleaner
❷3	17220-ZM0-000	1	Case Asm., Air Cleaner
❷5	17228-ZM0-000	1	Gasket, Air Cleaner
❷6	17231-Z0L-020	1	Cover, Air Cleaner
❷9	90003-ZM0-000	2	Bolt, Flange (6x86) (Ct200)
❷8	95701-06014	1	Bolt-Flange

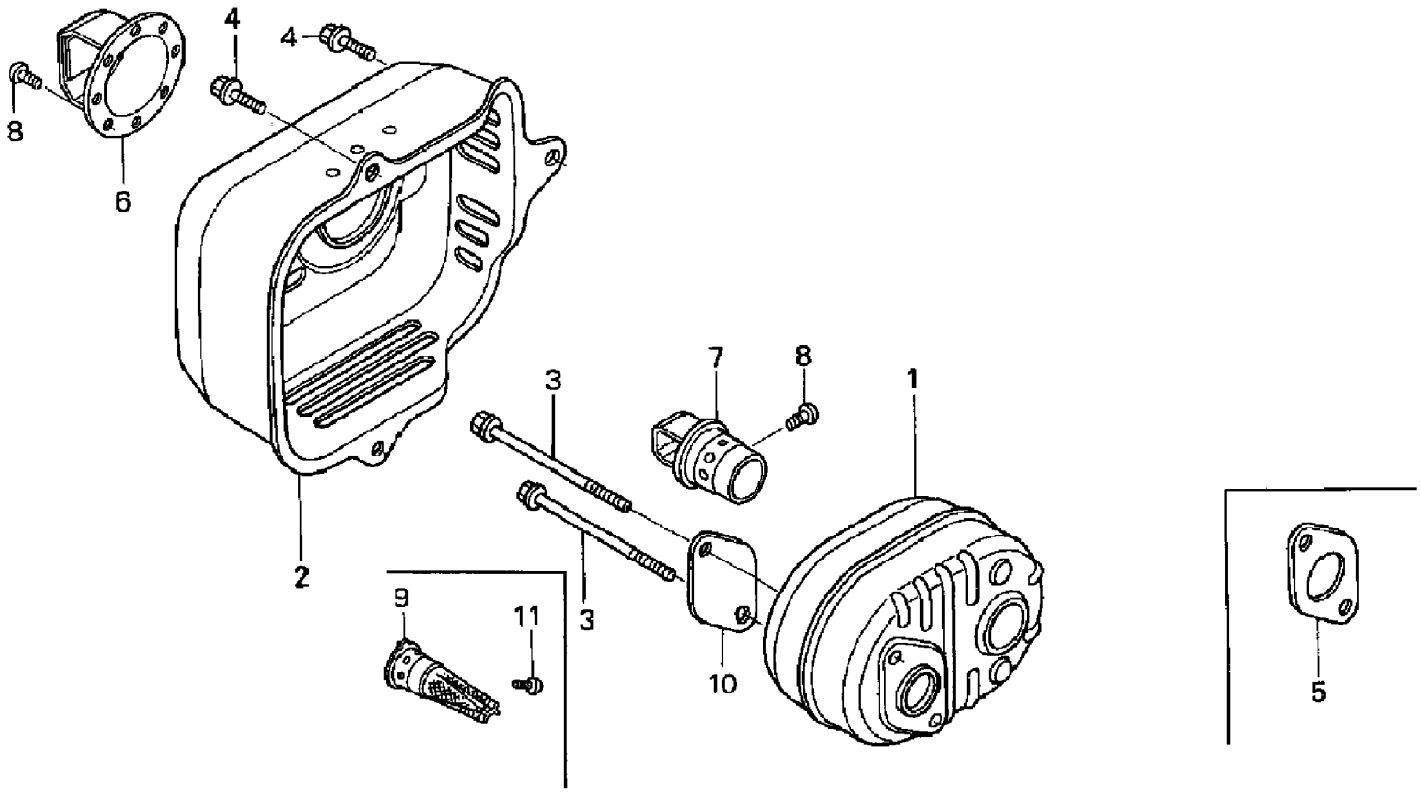

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Muffler Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❷1	18310-ZM0-000	1	Muffler
❷2	18321-Z0L-J00	1	Protector, Muffler (Cbu)
❷3	90004-ZL8-000	2	Bolt, Flange (6x79) (Ct200)
❷4	90013-883-000	3	Bolt-Flange (6x12) (Ct200)
❷5	18381-ZL8-305	1	Gasket, Muffler
❷9	A8350-ZL8-000	1	Arrester-Spark
❷10	18356-ZL8-000	1	Plate, Arrester Number
❷11	90055-ZE1-000	1	Screw-Tapping (4x6)

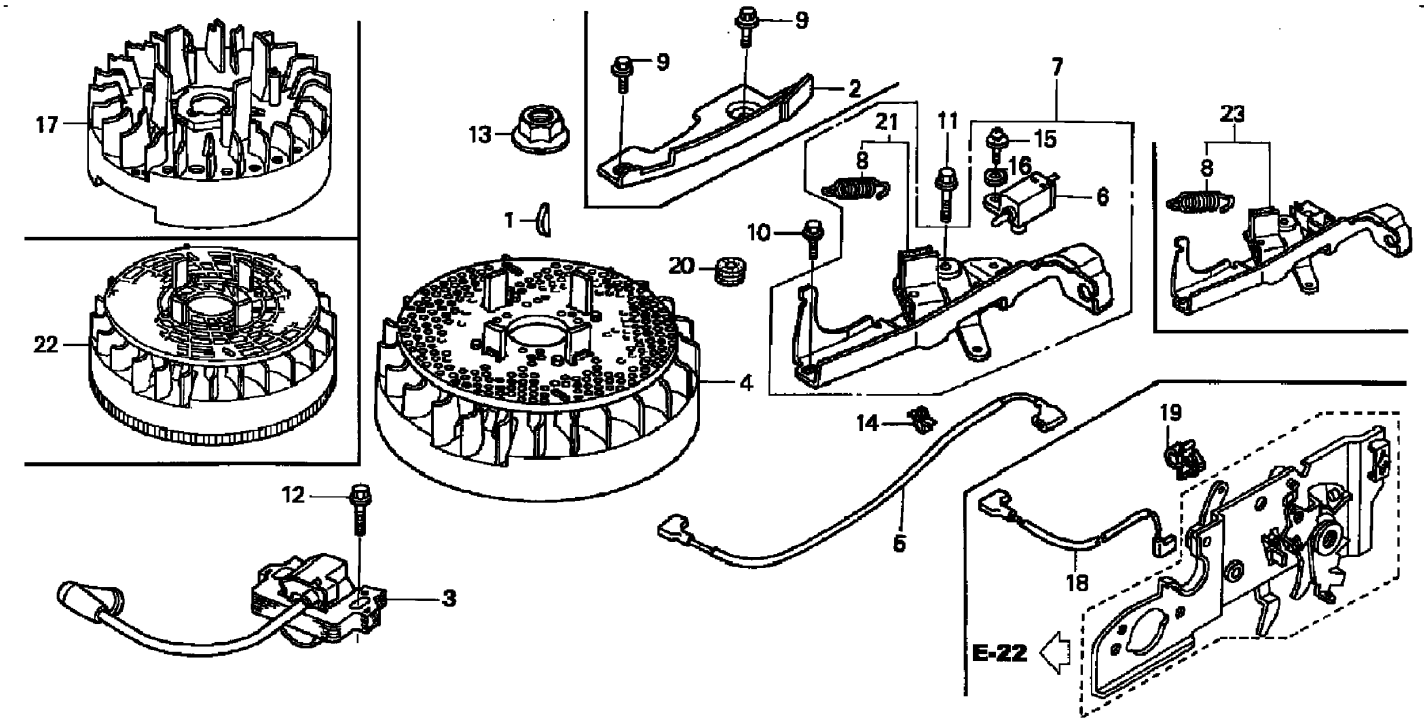


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Flywheel Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❷1	13331-357-000	1	Key, Special Woodruff (25x18)
❷3	30500-Z0J-003	1	Coil Asm., Ignition
❷4	31105-Z0L-010	1	Flywheel ASM
❷5	32195-ZM0-800	1	Wire-Stop Switch
❷6	35120-ZM0-003	1	Engine Stop Switch ASM
❷8	75113-ZM0-000	1	Spring, Brake Lever
❷10	90014-952-000	1	Bolt, Flange (6x14)
❷11	90018-ZE1-000	1	Bolt-Flange
❷12	90022-888-010	1	Bolt, Flange (6x20) (Ct200)
❷13	90201-878-003	1	Nut, Special (14mm)
❷14	90681-959-003	1	Clip, Cable (A)
❷15	93892-04012-00	1	Screw-Washer
❷16	94103-04000	1	Washer-Plain
❷20	11344-MB0-000	1	Grommet A-Rr Cover


Ref	Part No.	Qty.	Description
❷21	75110-Z0L-800	1	Brake Sub ASM

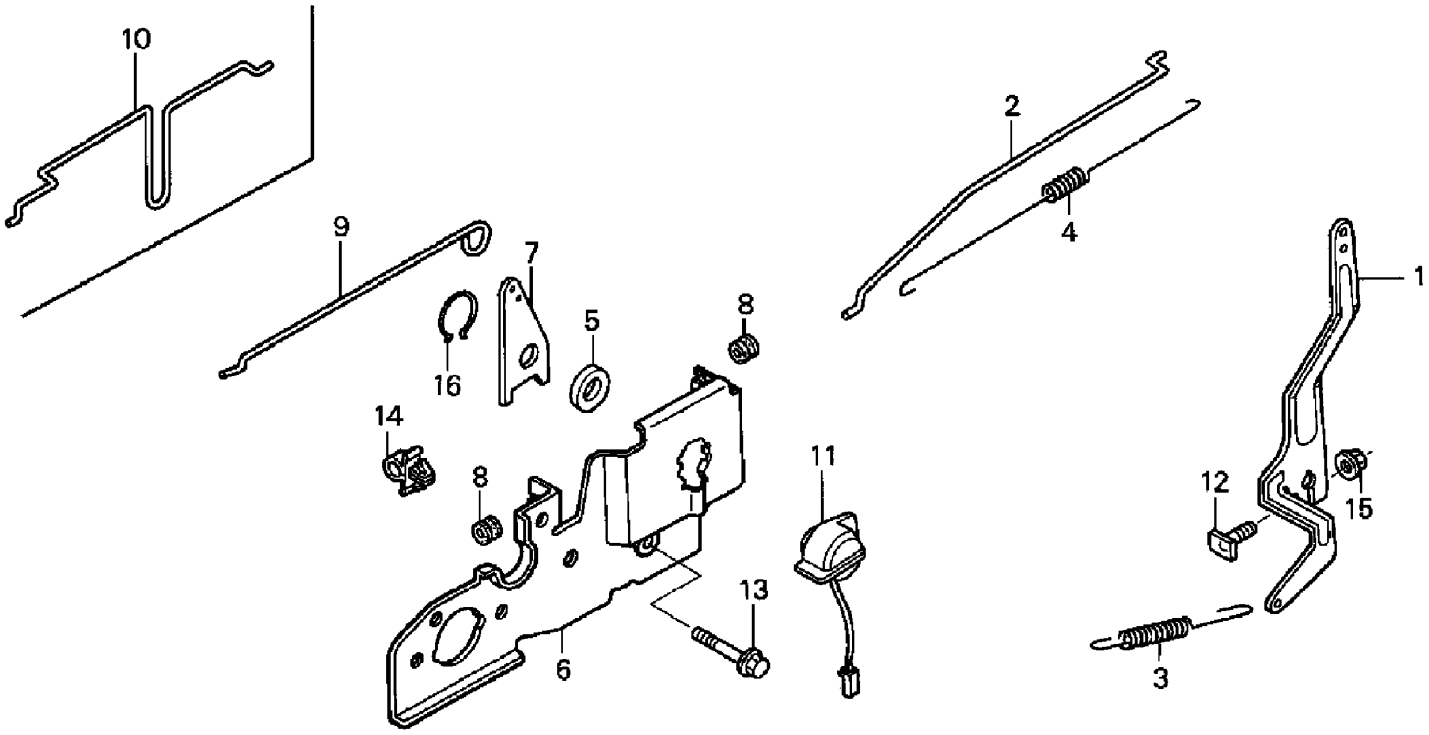

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Control Assembly
Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description
❷1	16551-ZM0-010	1	Arm, Governor
❷2	16555-Z0L-800	1	Rod, Governor
❷3	16561-Z0L-000	1	Spring, Governor
❷4	16562-ZM0-000	1	Spring, Throttle Return
❷6	16580-Z0L-810	1	Base, Control
❷12	90015-ZE5-010	1	Bolt-Governor Arm
❷13	90016-ZE8-000	1	Bolt, Flange (6x45)
❷15	94050-06000	1	Nut-Flange (6mm)

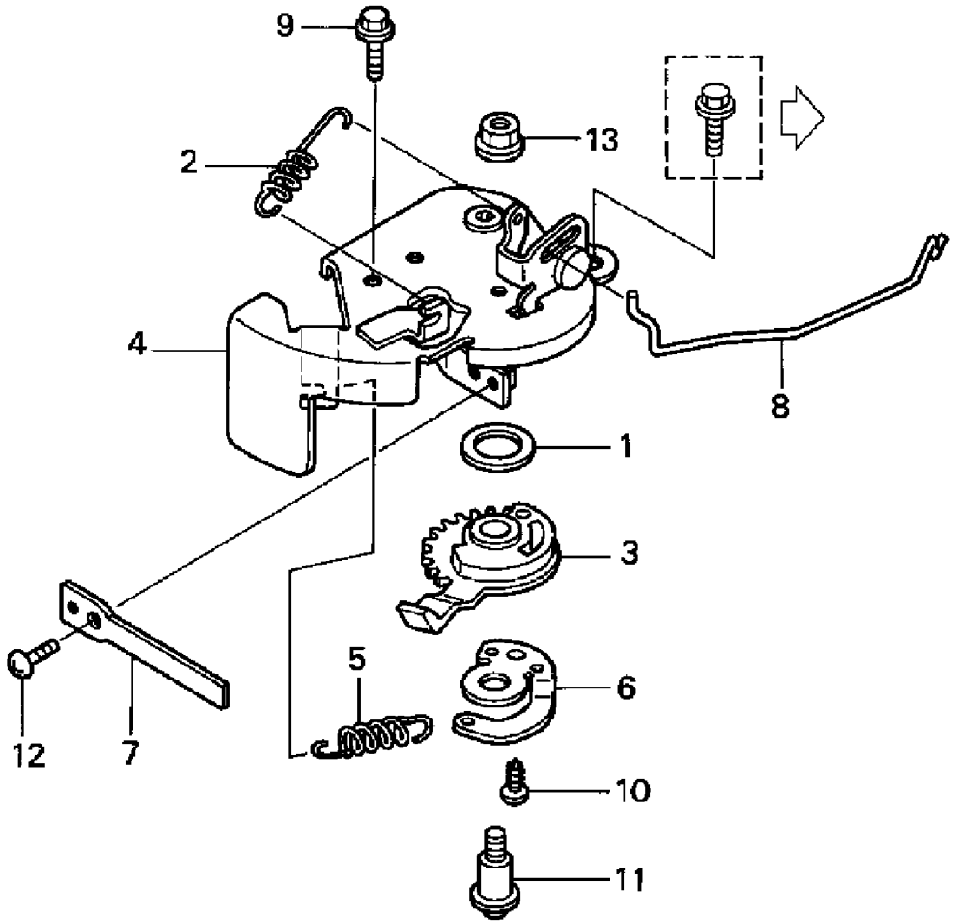

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Choke Base Assembly
Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description
❷1	16251-Z0L-800	1	Seal, Choke Lever
❷2	16592-ZJ1-000	1	Spring, Cable Return
❷3	16612-Z0L-800	1	Lever, Choke
❷4	16613-Z0L-800	1	Base, Choke
❷5	16614-Z0L-800	1	Spring, Choke Lever
❷6	16616-Z0L-800	1	Hook, Choke Spring
❷7	16619-Z0L-800	1	Plate, Choke
❷8	16632-Z0L-800	1	Rod, Stop
❷9	90029-888-000	1	Bolt, Flange (6x16)
❷10	90102-SP1-003	1	Screw, Tapping (4x8) (Po)
❷11	90141-KT8-000	1	Screw, Pan (5x19)
❷12	93500-04008-0H	1	Screw, Pan (4x8)
❷13	94050-05000	1	Nut, Flange (5mm)

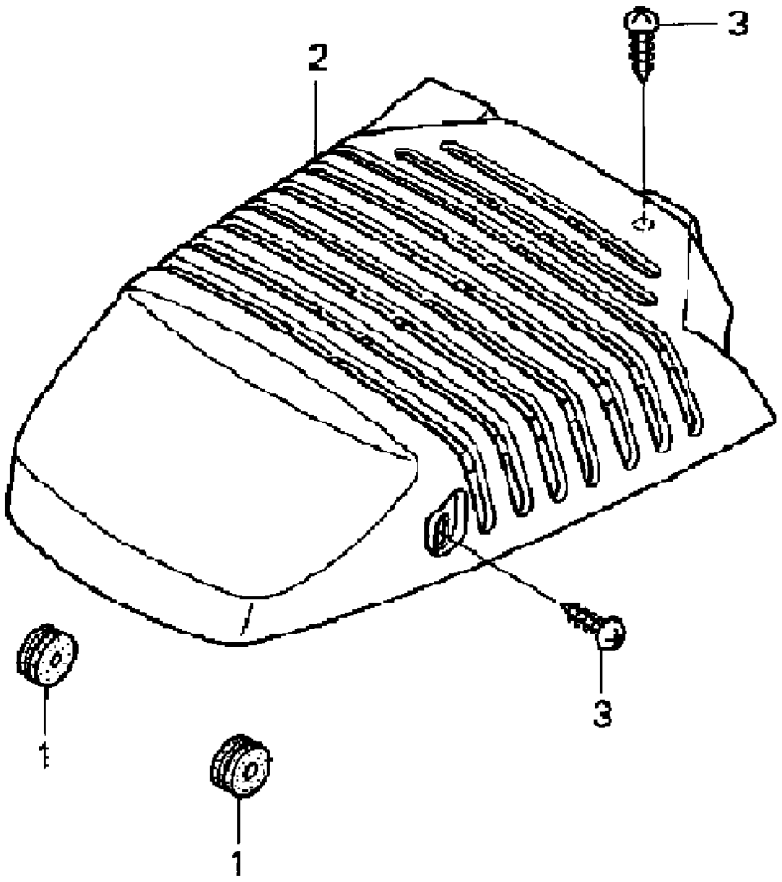

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Top Cover Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❷1	16613-883-610	2	Grommet, Choke Rod
❷2	19721-Z0L-000ZA	1	Cover, Top *nh1* (Black)
❷3	90137-SH3-000	3	Screw, Tapping (4x16)

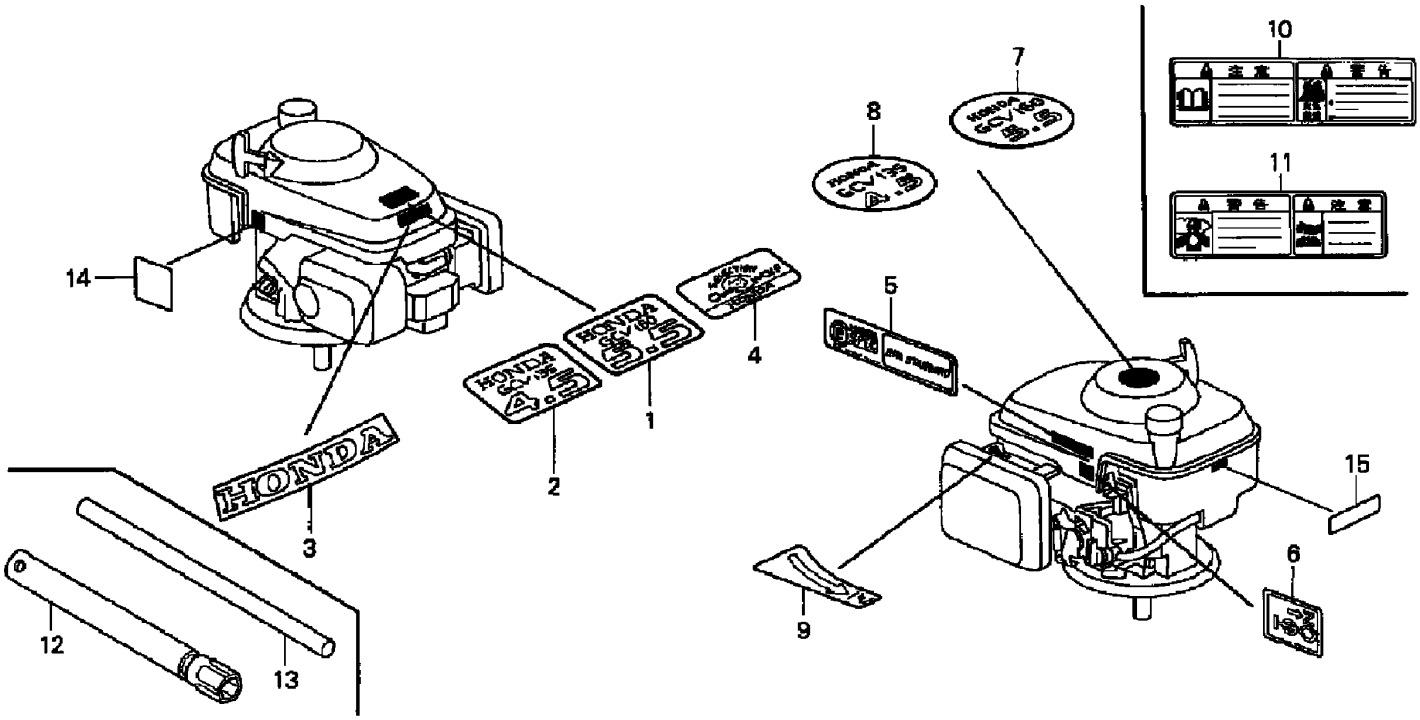

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Label Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❷9	87528-Z0L-800	1	Mark, Choke Indication
❷14	87594-VG3-010	1	Mark-Oil Caution

LAWN-BOY®