Form No. 3481-365 Rev B

TORO®

Count on it.

Parts Catalog

TimeCutter® 34in

Riding Mower

Model No. 77301—Serial No. 420302844 and Up

Register at www.Toro.com.
Original Instructions (EN)

3481-365 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly 4
Deck Lift Assembly 6
Tire and Caster Assembly 8
Traction Drive Assembly 10
LH Hydro Transmission Assembly No. 139-7450 12
RH Hydro Transmission Assembly No. 139-7451 14
Brake Assembly 16
Tire Assembly 18
Seat Pan Assembly 20
Seat Assembly No. 147-5157 22
Motion Control Assembly 24
Engine and Muffler Assembly 26
Air Assembly 28
Alternator Assembly 30
Controls Assembly 32
Crankshaft and Piston Assembly 34
Cylinder Block Assembly 36
Exhaust Assembly 38
Flywheel Assembly 40
Head Exhaust Assembly 42
Housing Assembly 44
Lubrication Service Assembly 46
Sump Assembly 48
Carburetor and Fuel Assembly 50
Fuel and Body Styling Assembly 52
Electrical Assembly 54
34 Inch Deck and Decal Assembly 56
Model Specific Assembly 58
Clutch Assembly 60
Attachments and Accessories 62

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame Assembly

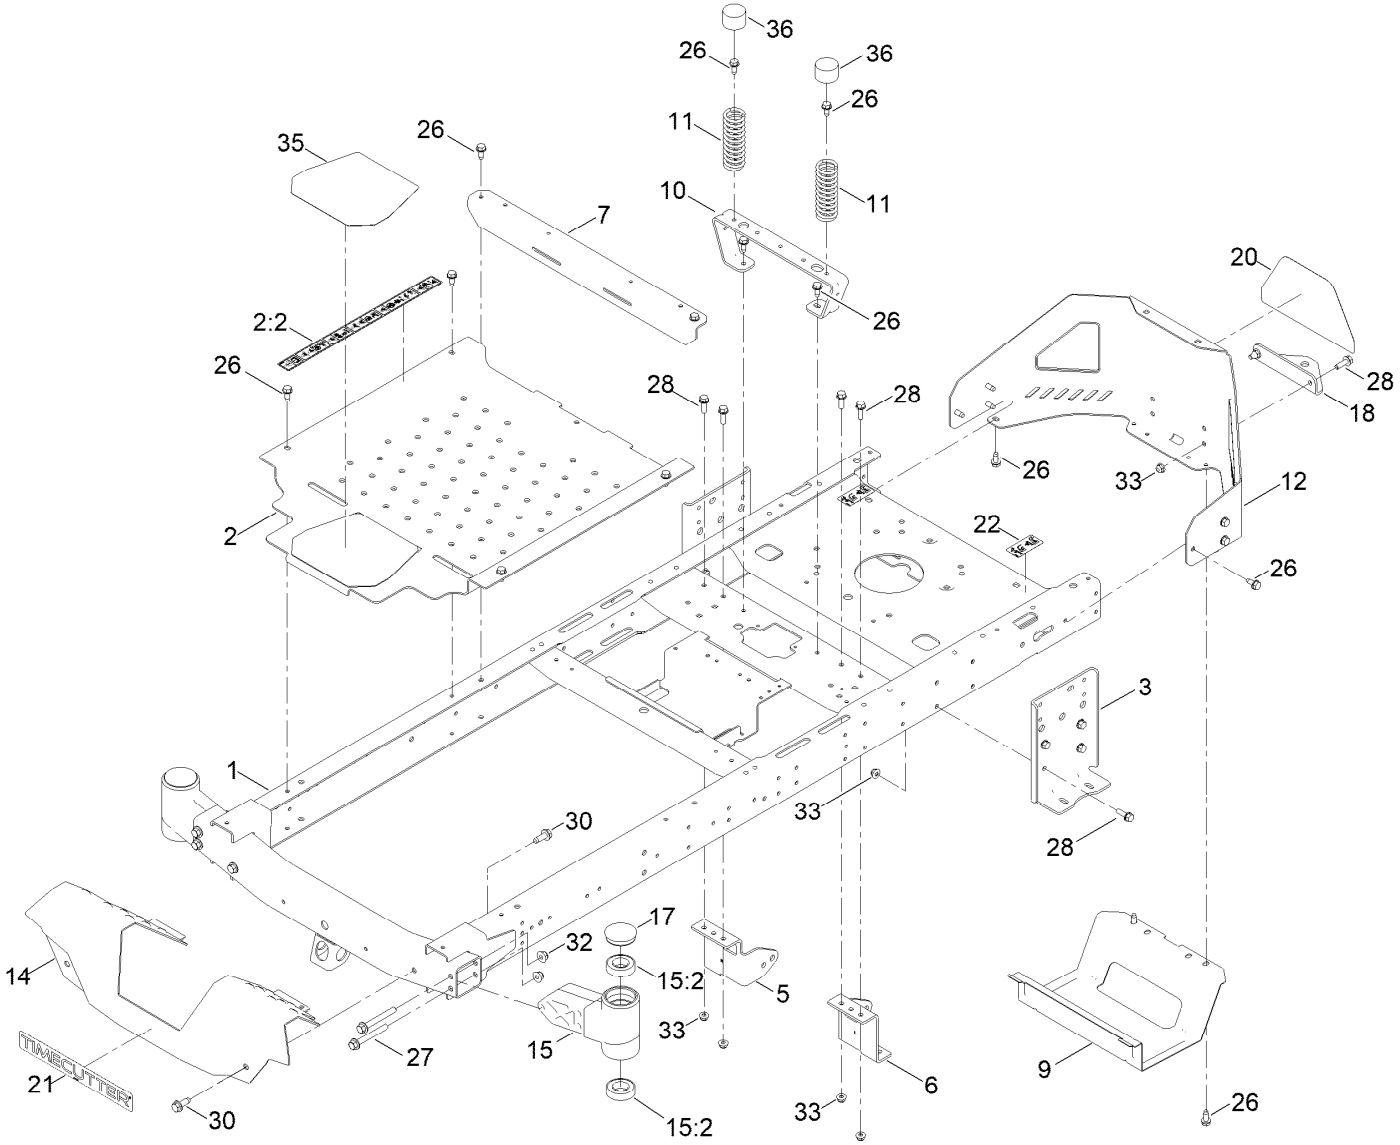

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	137-9820-01	1	Frame Assembly
2	140-5045	1	Pan-Floor ASM
2:2	144-5288	1	Decal-Warning
3	138-7520-01	2	Plate-Mount, Hydro
5	137-7020-01	1	Mount-Hydro, Front (Right)
6	139-3211-01	1	Mount-Hydro, Front (Left)
7	138-9791-01	1	Brace-Cross
9	138-0867-03	1	Guard-Muffler
10	138-6036-03	1	Support-Seat
11	138-2548	2	Spring-Compression
12	138-9820-03	1	Guard-Engine
14	138-9827-01	1	Footrest
15	163-6006	2	Axle-Stub
15:2	109-3678	2	Bearing-Ball
17	138-7200	2	Cap-Grease
18	117-1232-03	1	Bracket-Hitch
20	139-5890	1	Decal-Timecutter
21	139-2387	1	Decal-Timecutter
22	121-2989	2	Decal-Bypass
26	138-9753	20	Screw
27	139-2429	4	Screw-HHF
28	3234-29	14	Screw-HHF
30	139-2428	4	Screw-HWH
32	139-2430	4	Nut-HF, NI
33	119-4041	14	Nut-HF
35	139-3220	1	Tread-Step
36	701178	2	Cap-Protector


Deck Lift Assembly

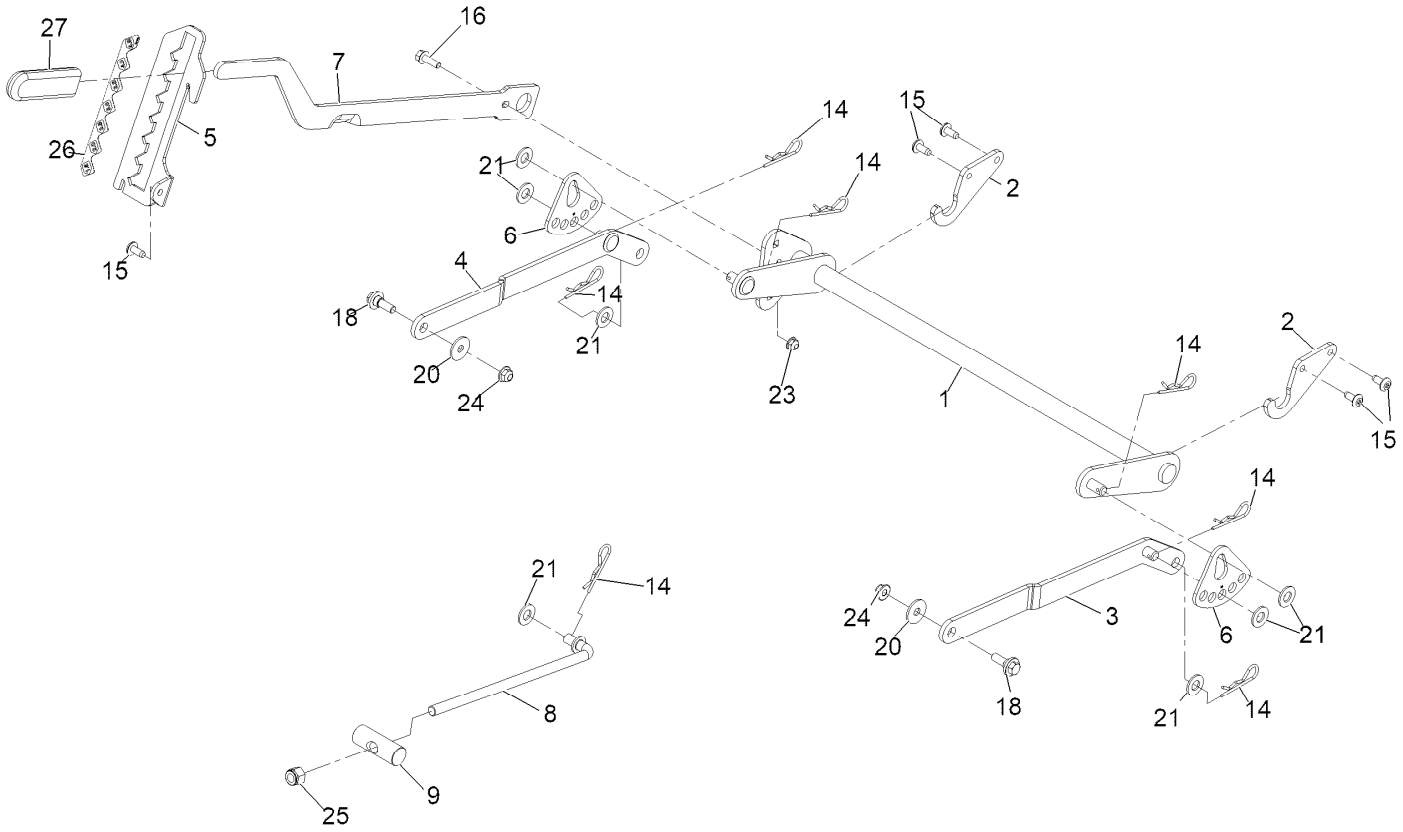

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	137-7093-03	1	Deck Lift ASM
2	138-6021	2	Bracket-Pivot, Decklift
3	137-9844	1	LH Arm ASM
4	137-9846	1	RH Arm ASM
5	139-2350-01	1	Bracket-HOC
6	138-2564	2	Plate-Adjustment, HOC
7	137-7087-03	1	Lever-Lift
8	138-6050	1	Rod-Mount, Deck
9	119-8810	1	Pin-Pivot
14	1-806005	7	Hairpin-Cotter
15	138-9753	5	Screw-Button Head 5/16-18 X 3/4 Tf
16	3234-29	1	Screw-HH Flg 5/16-18 X 1
18	137-9847	2	Screw-Shoulder 3/8-16 X .88
20	93-8806	2	Washer-Hardened
21	3256-26	7	Washer-1/2 SAE
23	119-4041	1	Nut-HF
24	119-4042	2	Nut-HF, NI
25	3296-19	1	Nut-Nyloc 1/2-20
26	139-2392	1	Decal-HOC
27	1-633268	1	Grip-Lever


Tire and Caster Assembly

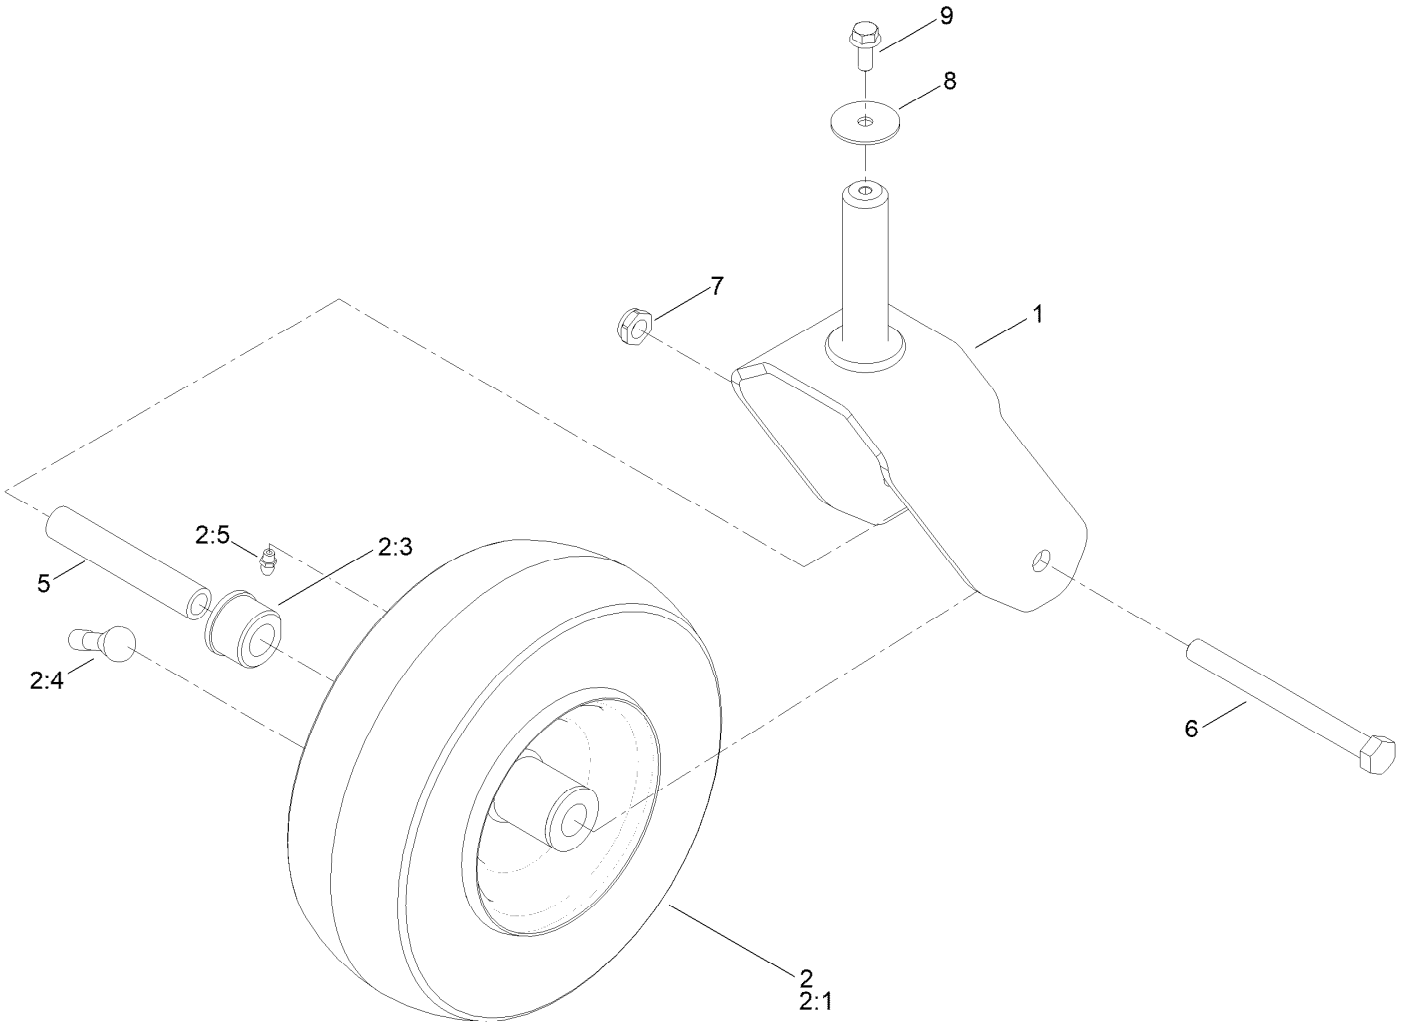

Tire and Caster Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-3274-01	2	Fork ASM
2	147-2935	2	Tire ASM
2:1	147-2936	1	Tire
2:3	114-1640	2	Bushing-Flange
2:4	232-27	1	Stem-Valve
2:5	302-5	1	Fitting-Grease
5	138-7240	2	Bushing-Spanner
6	325-22	2	Screw-HH
7	3296-45	2	Nut-Hex
8	3256-68	2	Washer-Flat
9	3234-47	2	Screw-HHF


Traction Drive Assembly

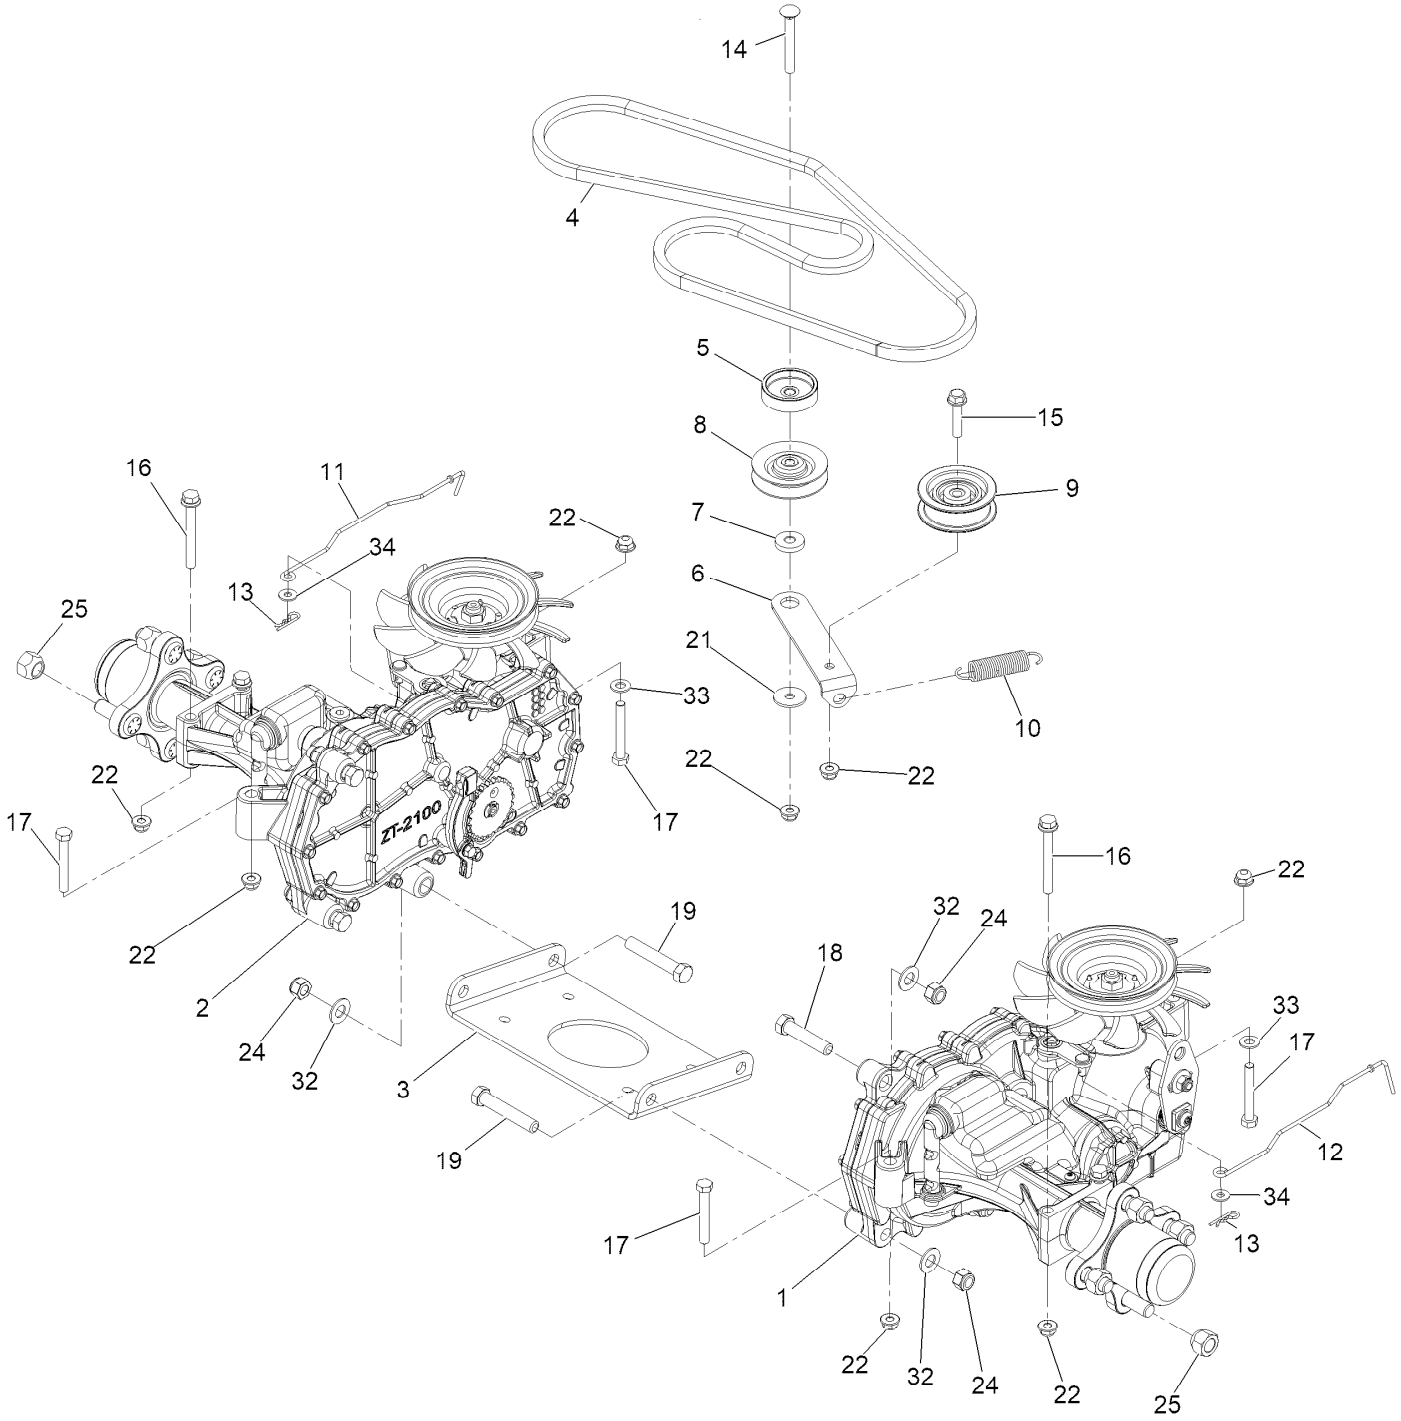

Traction Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-7450	1	LH Hydro Transaxle ASM
2	139-7451	1	RH Hydro Transaxle ASM
3	138-2571-03	1	Crossplate-Hydro
4	139-2399	1	V-Belt
5	138-9809	1	Spacer
6	138-7276	1	Arm-Idler
7	138-7277	1	Spacer-Arm, Idler
8	68-0030	1	Idler
9	138-7597	1	Pulley-Idler, Flat
10	137-7040	1	Spring-Return, Pedal
11	138-7245	1	Rod-Bypass, RH
12	138-7243	1	Rod-Bypass, LH
13	3290-307	2	Pin-Cotter
14	3230-8	1	Bolt-Carriage 5/16-18 X 2 1/2
15	115-1794	1	Screw-Hex Flange 5/16-18 X 1 1/2
16	138-7590	4	Screw-HHF
17	322-11	4	Screw-HH 5/16-18 X 2 1/4
18	324-8	2	Screw-HH
19	324-10	4	Screw-HH 7/16-14 X 2 1/2
21	5-4460	1	Washer-Pivot
22	119-4041	10	Nut-HF
24	3296-48	6	Nut-Nyloc 7/16-14
25	139-2564	8	Nut-Lug
32	3256-25	6	Washer-7/16 SAE
33	3256-23	2	Washer-5/16 SAE
34	119-8952	2	Washer-Spcl

LH Hydro Transmission Assembly No. 139-7450

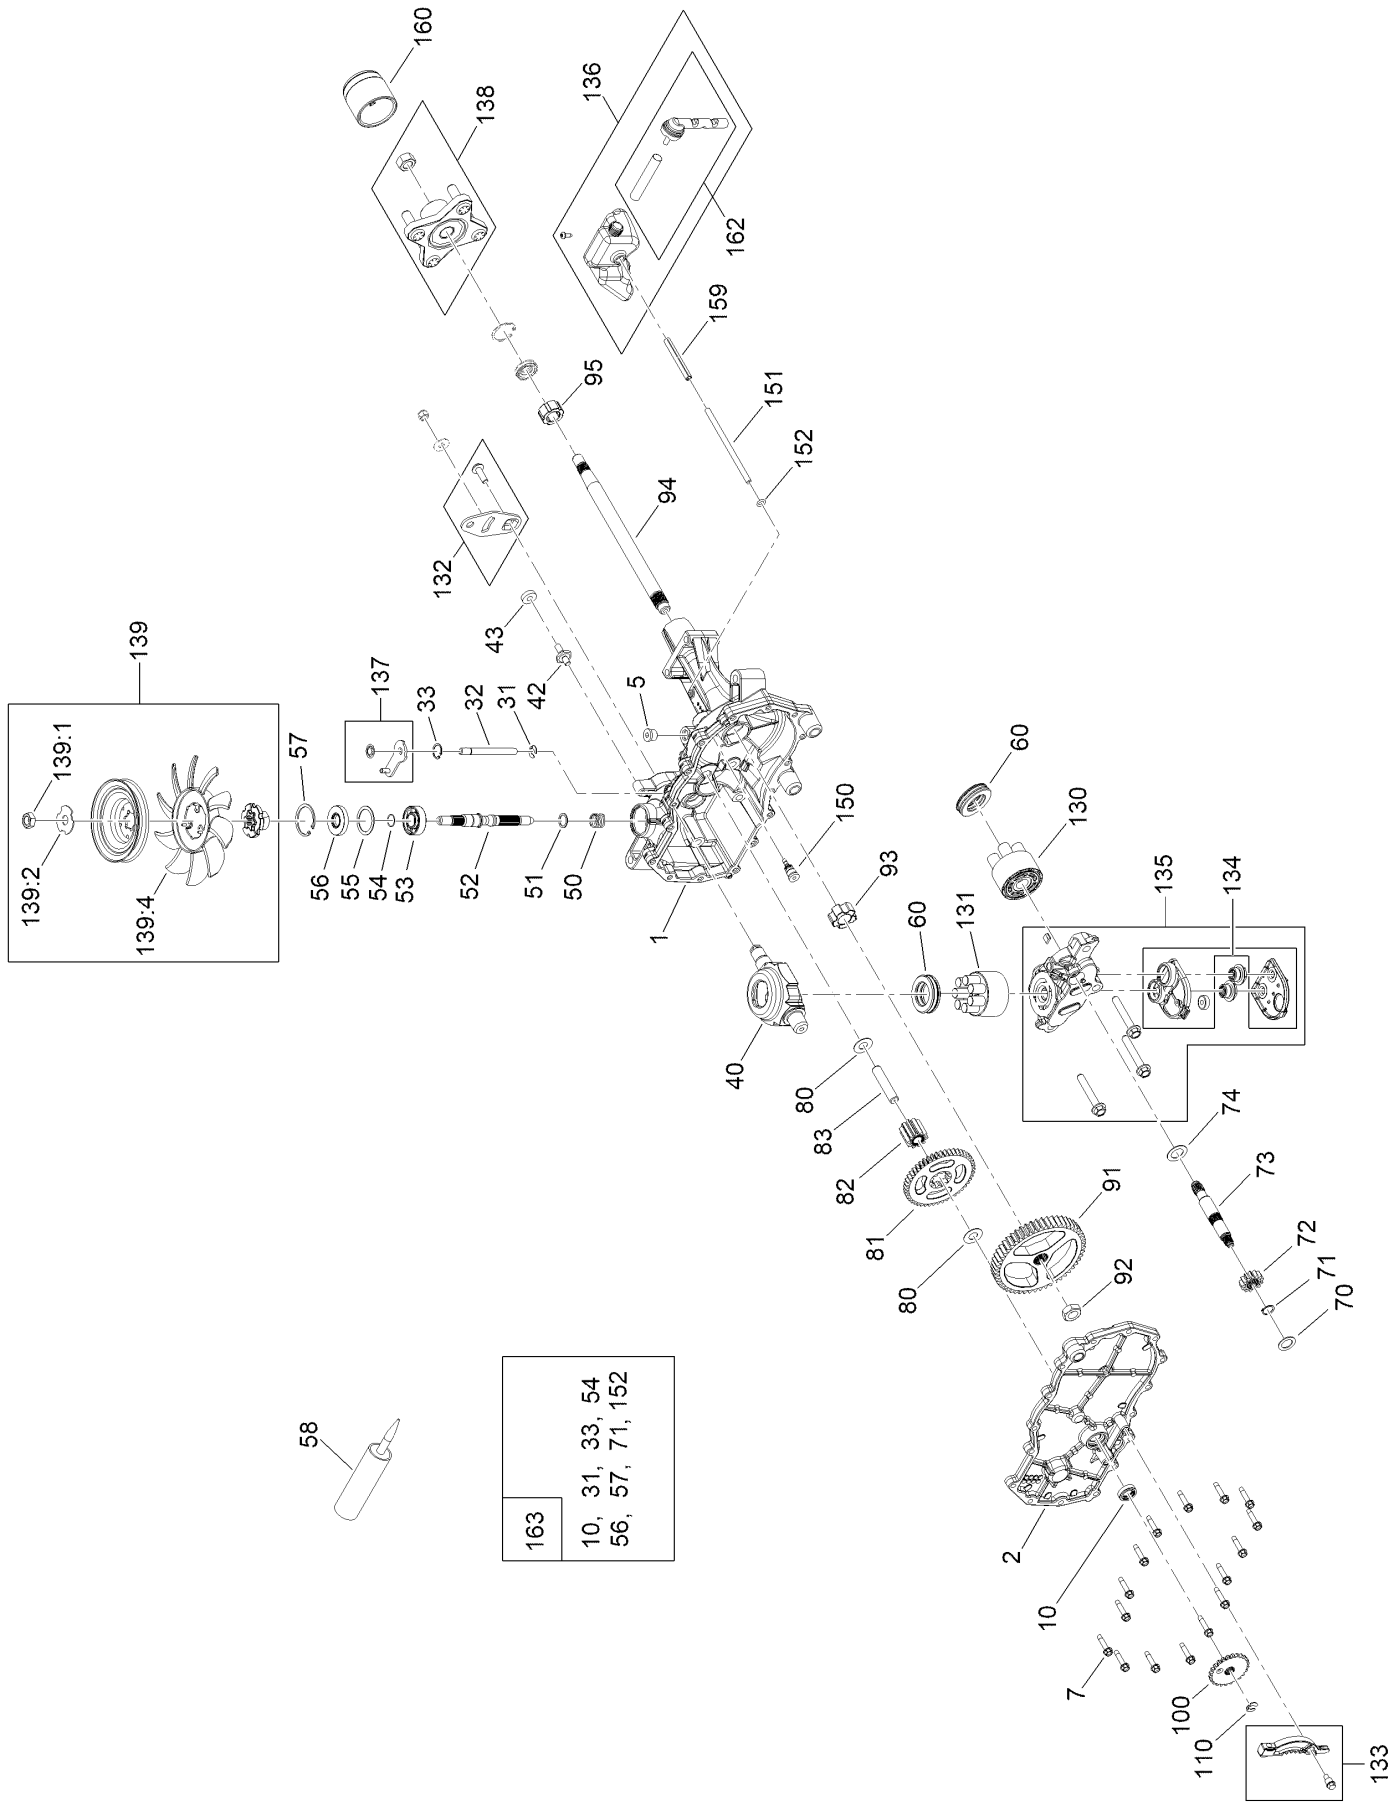


LH Hydro Transmission Assembly No. 139-7450 (continued)

Ref.	Part Number	Qty.	Description
1	120-5532	1	Main Housing ASM
2	120-5534	1	Housing Side Kit
5	104-2189	1	Plug-Thread, Straight
7	117-5359	16	Screw-HHF
10	104-2147	1	Sealant, Silicone - Non-Flammable ●
31	106-8677	1	Ring-Retaining, External
32	106-8678	1	Rod-Bypass
33	106-8679	1	Ring-Retaining, Internal
40	104-5304	1	Swashplate-Trunnion
42	104-2116	1	Stud
43	112-9853	1	Puck-Friction
50	133-1793	1	Spring-Block
51	120-5538	1	Washer
52	104-5306	1	Shaft-Input
53	104-5311	1	Bearing-Ball
54	104-5307	1	Ring-Retaining
55	104-5308	1	Spacer
56	104-5310	1	Seal-Lip
57	104-5309	1	Ring-Retaining
58	104-2147	1	Sealant, Silicone - Non-Flammable
60	94-6922	2	Bearing-Thrust
70	104-5339	1	Washer-Flat
71	104-5340	1	Ring-Retaining
72	104-5316	1	Gear-Pinnion, 13T
73	106-8683	1	Shaft-Motor
74	104-5360	1	Washer
80	94-1933	1	Washer
81	104-5317	1	Gear-10T/48T
82	104-5318	1	Gear-Jackshaft, 10T
83	104-5329	1	Pin-Jackshaft
91	120-5539	1	Gear-Bull
92	104-2142	1	Nut-HJ
93	115-8314	1	Bushing-Inboard
94	120-5540	1	Shaft-Axle
95	120-5541	1	Bearing-Sleeve
100	106-8694	1	Disc-Brake, Cog
110	106-8677	1	Ring-Retaining, External
130	103-2666	1	Cylinder Block Kit
131	110-8561	1	Pump Block ASM
132	117-5362	1	Control Arm Kit
133	106-8688	1	Brake Arm Kit
134	112-9861	1	Center Section Filter Kit
135	114-1634	1	Filter Kit
136	121-5730	1	RH Expansion Tank Kit
137	120-5549	1	Bypass Kit
138	121-5731	1	Hub Kit
139	135-7349	1	Fan And Pulley Kit
139:1	116-9714	1	Nut-HJ
139:2	116-9708	1	Washer-Slotted
139:4	135-7364	1	Fan 7.0 X 10 Blade
150	104-5349	1	Fitting-SAE
151	115-8302	1	Hose
152	104-5361	1	O-Ring
159	121-5728	1	Case-Tube
160	125-0041	1	Cap-Axle
162	139-3278	1	Breather ASM Kit
163	120-7103	1	Seal And Ring Kit

● Not illustrated

RH Hydro Transmission Assembly No. 139-7451

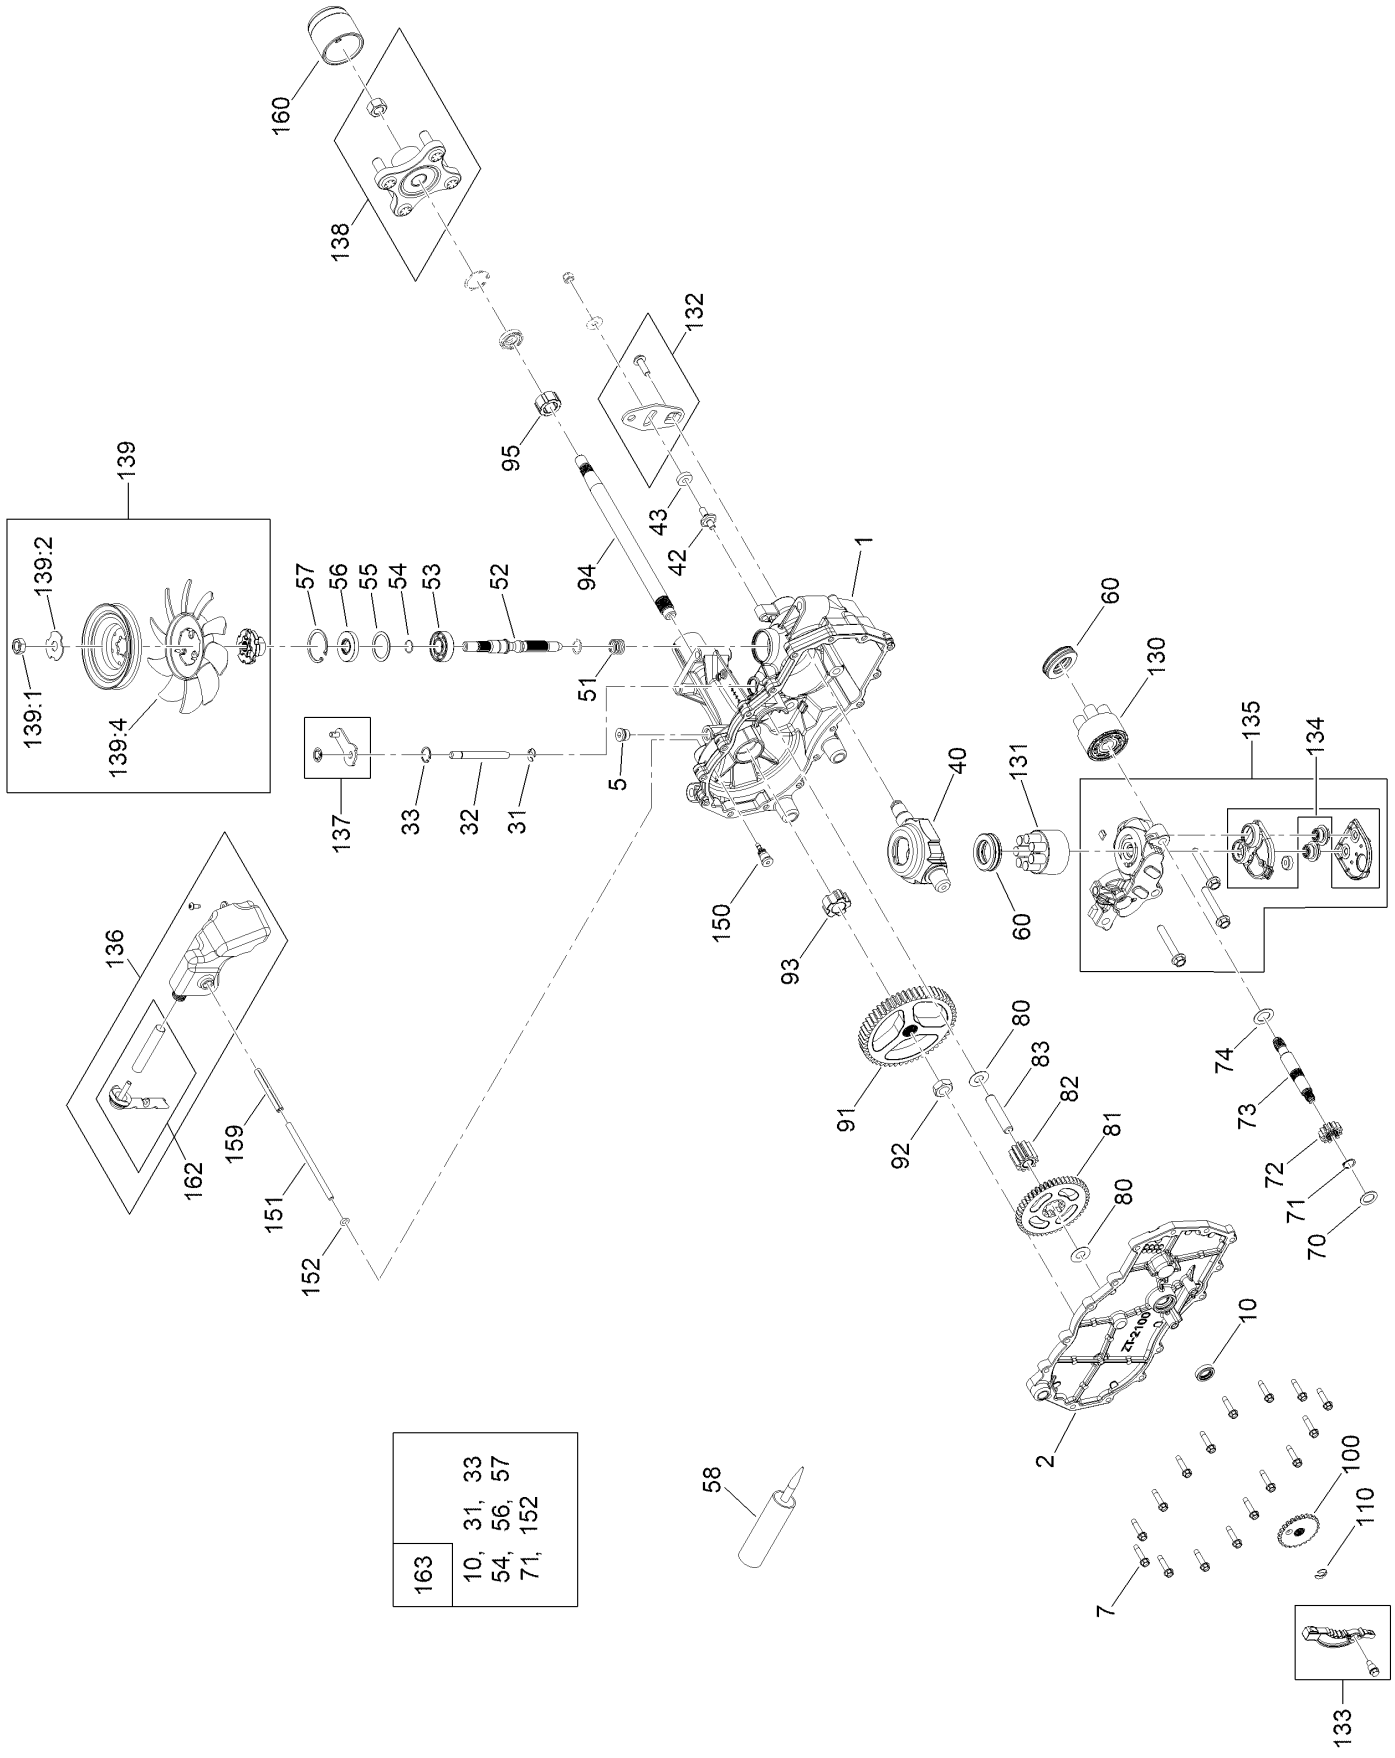


RH Hydro Transmission Assembly No. 139-7451 (continued)

Ref.	Part Number	Qty.	Description
1	120-5531	1	Main Housing ASM
2	120-5533	1	Housing Side Kit
5	104-2189	1	Plug-Thread, Straight
7	117-5359	16	Screw-HHF
10	104-2147	1	Sealant, Silicone - Non-Flammable ●
31	106-8677	2	Ring-Retaining, External
32	106-8678	1	Rod-Bypass
33	106-8679	1	Ring-Retaining, Internal
40	104-5304	1	Swashplate-Trunnion
42	104-2116	1	Stud
43	112-9853	1	Puck-Friction
51	133-1793	1	Spring-Block
51	120-5538	1	Washer
52	104-5306	1	Shaft-Input
53	104-5311	1	Bearing-Ball
54	104-5307	1	Ring-Retaining
55	104-5308	1	Spacer
56	104-5310	1	Seal-Lip
57	104-5309	1	Ring-Retaining
58	104-2147	1	Sealant, Silicone - Non-Flammable
60	94-6922	2	Bearing-Thrust
70	104-5339	1	Washer-Flat
71	104-5340	1	Ring-Retaining
72	104-5316	1	Gear-Pinnion, 13T
73	106-8683	1	Shaft-Motor
74	104-5360	1	Washer
80	94-1933	1	Washer
81	104-5317	1	Gear-10T/48T
82	104-5318	1	Gear-Jackshaft, 10T
83	104-5329	1	Pin-Jackshaft
91	120-5539	1	Gear-Bull
92	104-2142	1	Nut-HJ
93	115-8314	1	Bushing-Inboard
94	120-5540	1	Shaft-Axle
95	120-5541	1	Bearing-Sleeve
100	106-8694	1	Disc-Brake, Cog
110	106-8677	1	Ring-Retaining, External
130	103-2666	1	Cylinder Block Kit
131	110-8561	1	Pump Block ASM
132	117-5362	1	Control Arm Kit
133	106-8688	1	Brake Arm Kit
134	112-9862	1	Center Section Filter Kit
135	114-1634	1	Filter Kit
136	121-5735	1	LH Expansion Tank Kit
137	107-2489	1	Bypass Arm Kit
138	121-5731	1	Hub Kit
139	135-7349	1	Fan And Pulley Kit
139:1	116-9714	1	Nut-HJ
139:2	116-9708	1	Washer-Slotted
139:4	135-7364	1	Fan 7.0 X 10 Blade
150	104-5349	1	Fitting-SAE
151	115-8302	1	Hose
152	104-5361	1	O-Ring
159	121-5728	1	Case-Tube
160	125-0041	1	Cap-Axle
162	139-3278	1	Breather ASM Kit
163	120-7103	1	Seal And Ring Kit

● Not illustrated


Brake Assembly

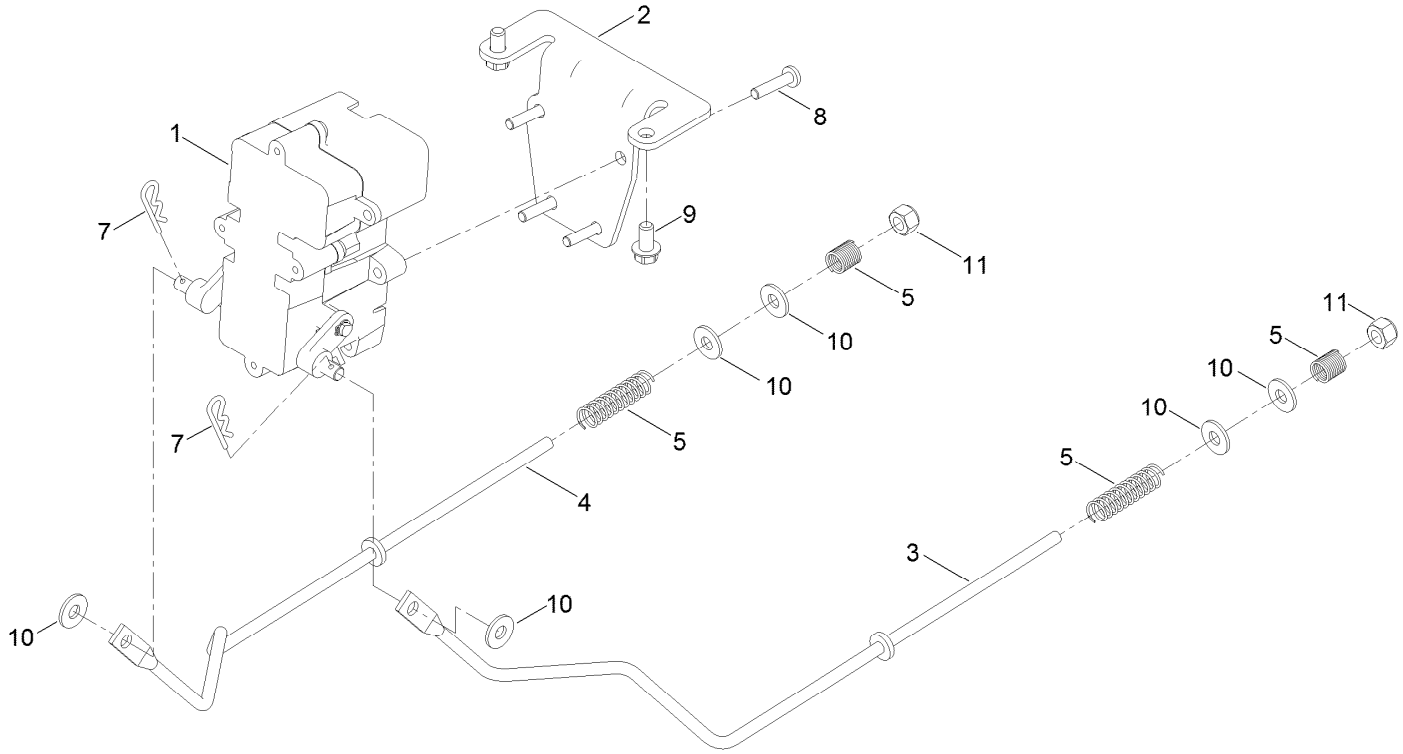

Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-2514	1	Brake Box ASM
2	133-9284-03	1	Bracket-Mount, Brake
3	138-2591	1	Rod-Brake, LH
4	138-2592	1	Rod-Brake, RH
5	117-1169	4	Spring-Compression
7	3290-307	2	Pin-Cotter
8	32144-36	4	Screw-PPH
9	32144-4	2	Screw-HWH
10	119-8952	6	Washer-Spcl
11	3296-42	2	Nut-Lock, NI


Tire Assembly

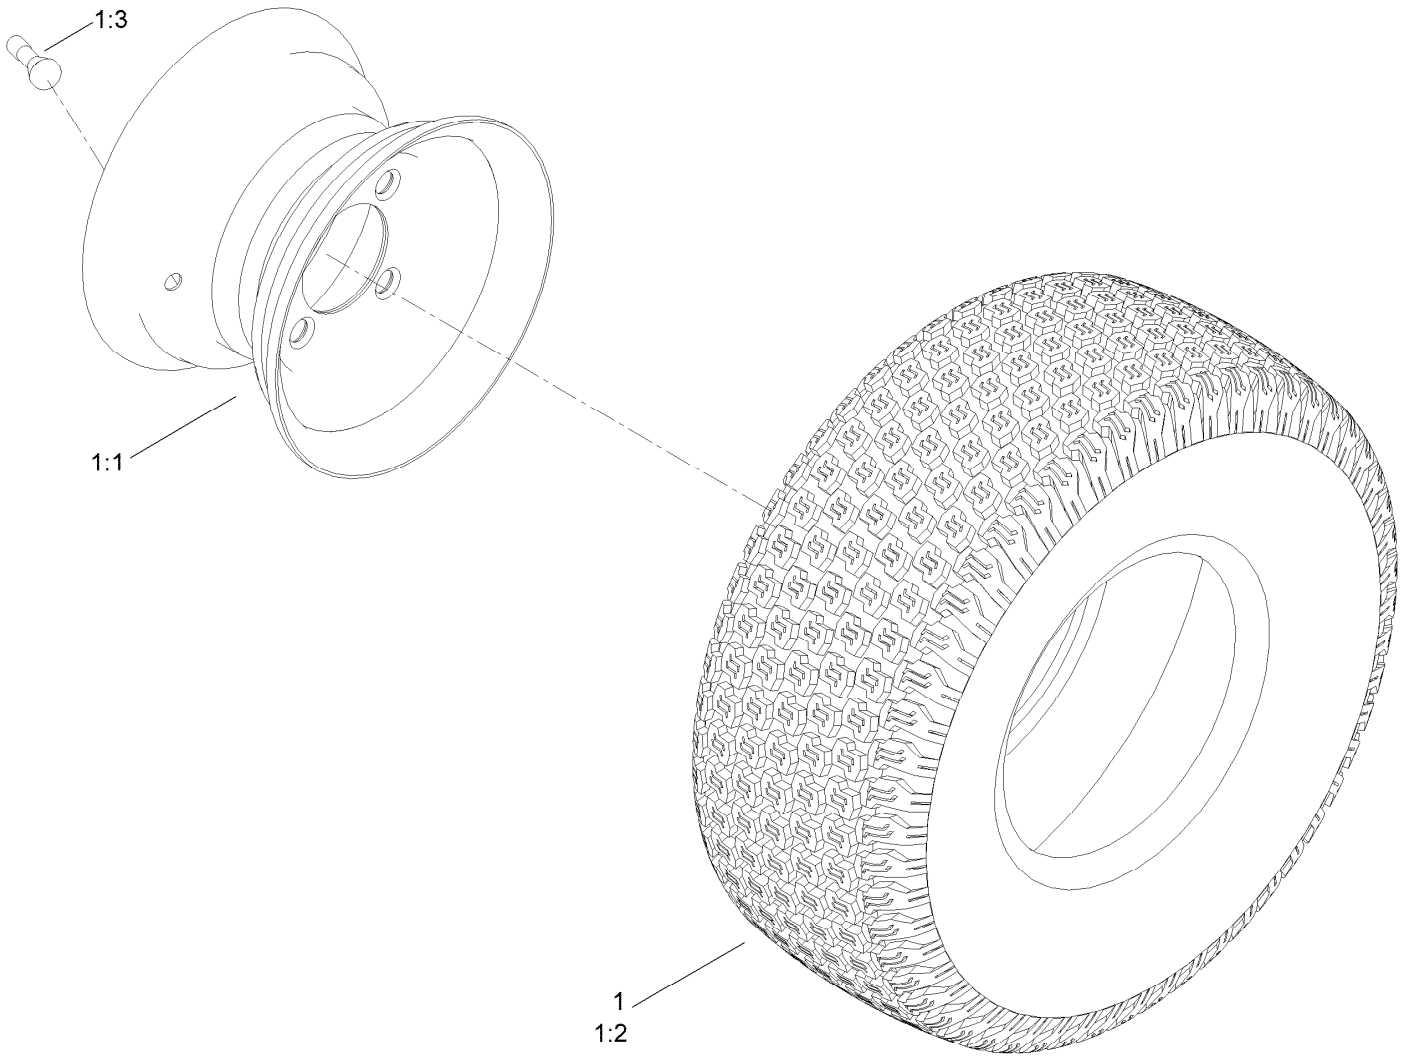

Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-5021	2	Tire ASM
1:1	140-5022	1	Wheel
1:2	140-5129	1	Tire
1:3	232-27	1	Stem-Valve


Seat Pan Assembly

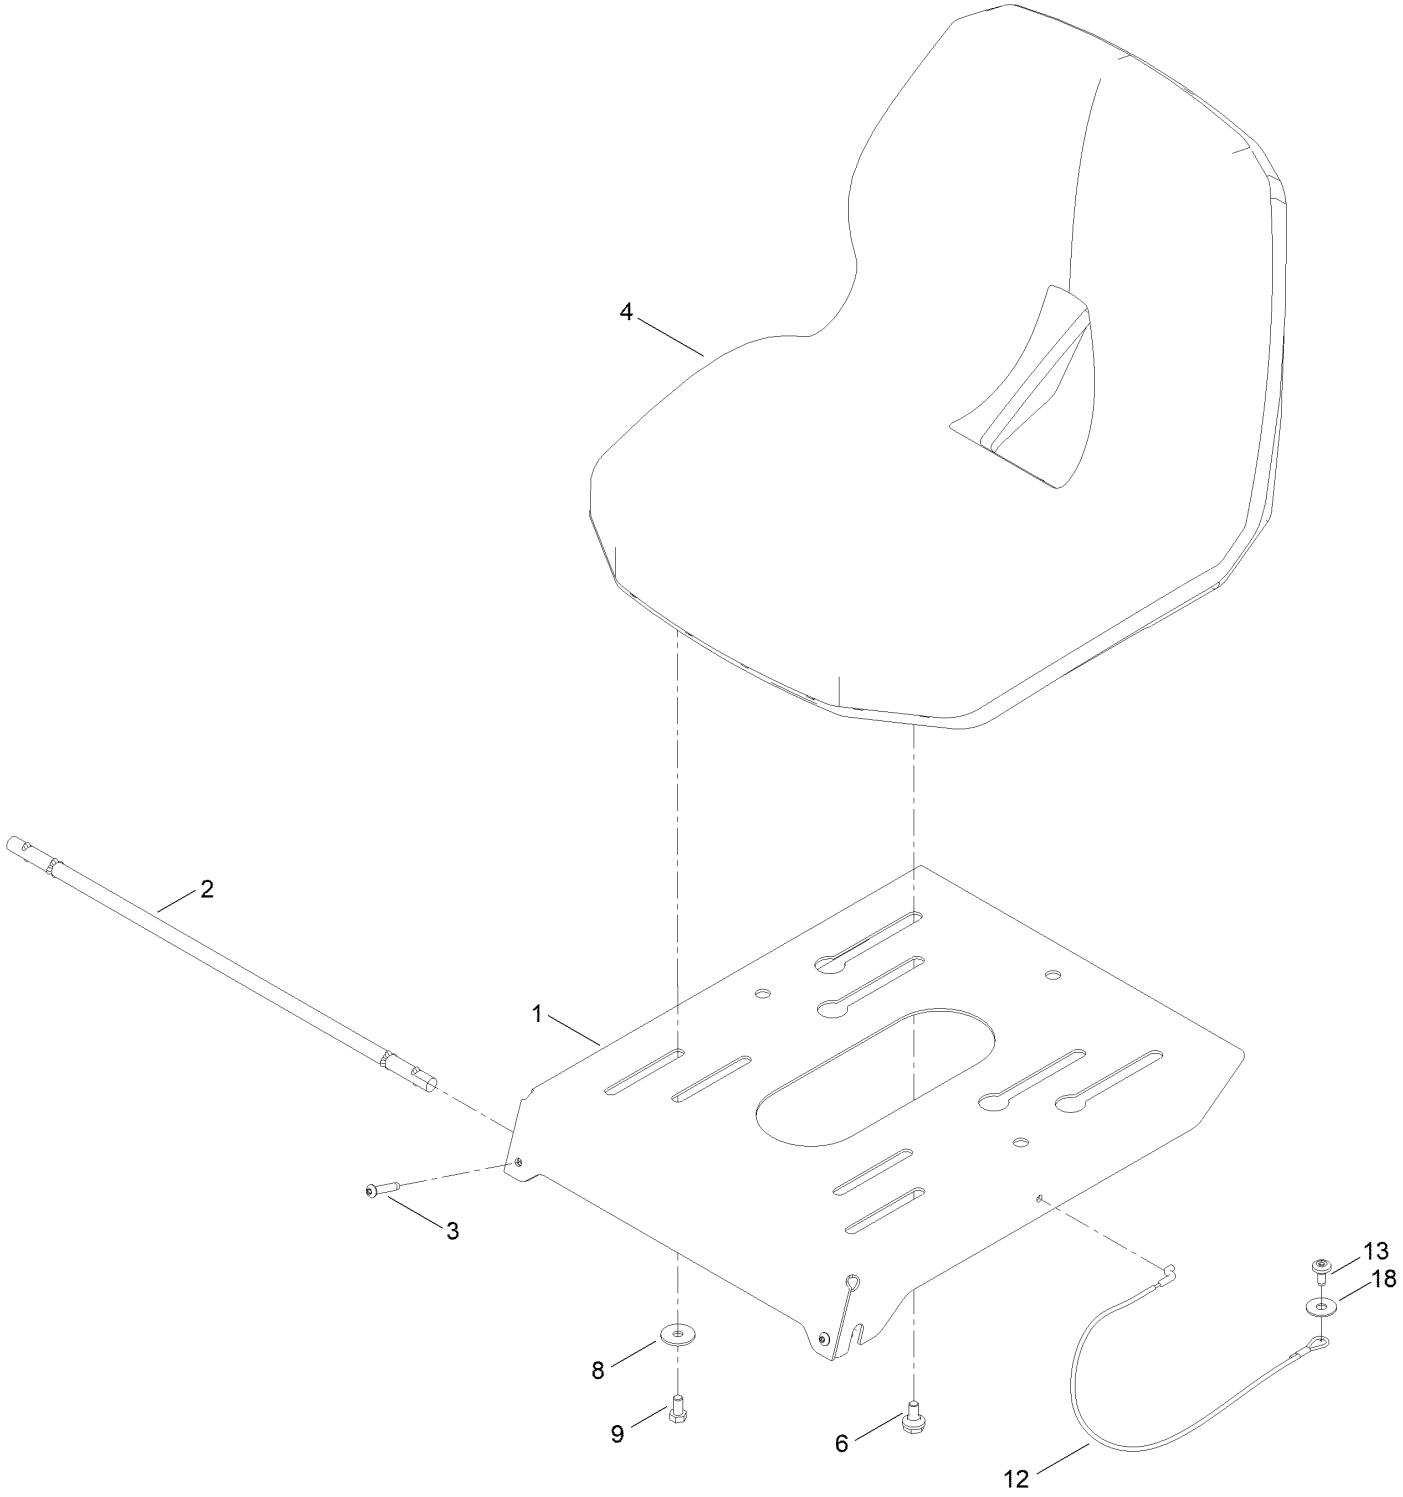


Seat Pan Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-9781-03	1	Pan-Seat
2	138-7555	1	Rod-Pivot
3	108-0035	2	Screw
4	147-5157	1	Seat-16 In
6	37-8771	2	Bolt-Shoulder, HF
8	5-4460	2	Washer-Pivot
9	322-2	2	Screw-HH
12	139-2398	1	Cable-Lanyard
13	120-7950	1	Screw-Torx
18	147-5287	1	Washer-Flat

Seat Assembly No. 147-5157

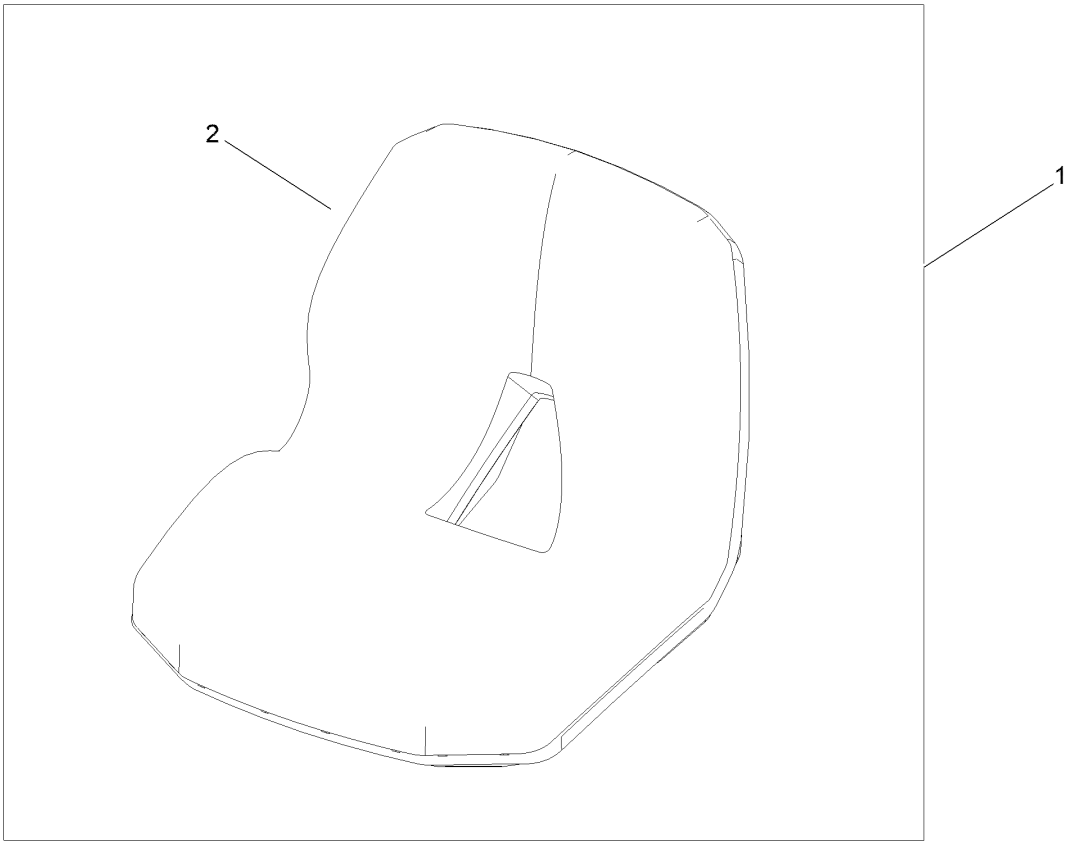


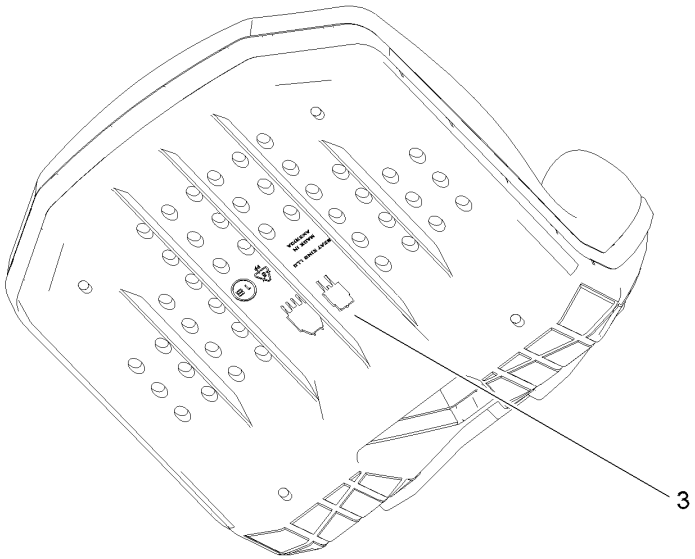

Seat Assembly No. 147-5157 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	139-5891	1	Seat-16 In
2	147-2983	1	Cover-Seat
3	82-2190	1	Switch-Bail

Motion Control Assembly

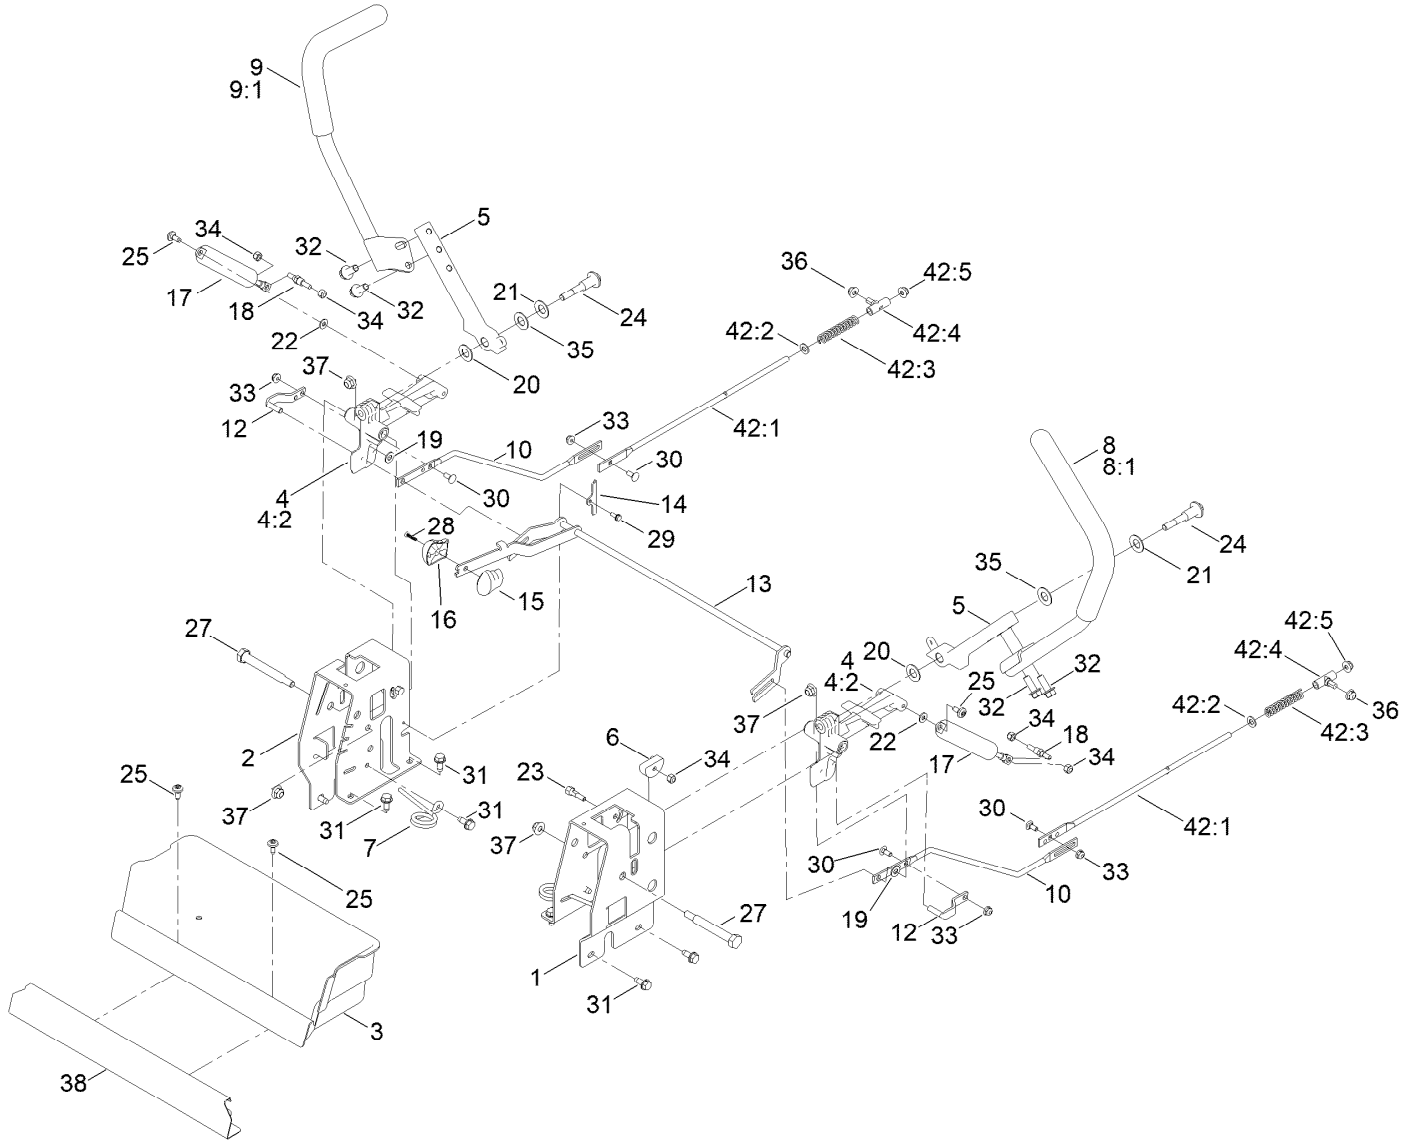


Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-6075-03	1	Plate-Control Box, LH
2	163-6076-03	1	Plate-Control Box, RH
3	145-0421	1	Box-Storage
4	119-3470	2	Actuator Arm ASM
4:2	256-156	2	Bushing-Flange
5	133-9299-05	2	Arm-Control
6	139-5803	2	Eccentric
7	138-7539	2	Spring-Torsion
8	133-7055	1	Handle-Control, LH
8:1	121-0726	1	Grip
9	133-7057	1	Handle-Control, RH
9:1	121-0726	1	Grip
10	138-2580	2	Rod-Hydro, Front
12	121-1753	2	Pin-Rod, Hydro
13	138-9750	1	Speed Control ASM
14	138-7541	2	Plate-Retainer
15	132-9368	1	Knob-RH
16	132-9369	1	Knob-LH
17	132-6853	2	Damper-Non Cavitating
18	138-7215	2	Stud-Damper
19	93-6079	2	Spacer-Nylon
20	120-2273	2	Washer-Flat
21	119-8925	2	Washer-Belleville
22	119-8952	2	Washer-Spcl
23	139-5811	2	Bolt-Pivot, Eccentric
24	117-1198	2	Bolt-Pivot
25	120-7950	4	Screw-Torx
27	115-5099	2	Bolt-Pivot
28	94-4496	1	Screw-PPH
29	32144-1	2	Screw-Taptite
30	3229-11	4	Screw-CARR
31	138-9753	10	Screw
32	3234-42	4	Screw-HHF
33	104-7201	4	Nut-HF, NI
34	3296-42	6	Nut-Lock, NI
35	117-1240	2	Washer
36	119-4041	2	Nut-HF
37	119-4042	4	Nut-HF, NI
38	139-3280-01	1	Plate-Kick
42		2	Rod Hydro ASM ●■
42:1	144-1818	1	Rod-Hydro, Rear
42:2	120-9683	1	Washer-Plain
42:3	138-7252	1	Spring-Compression
42:4	138-7218	1	Mount-Rod, Hydro
42:5	119-4041	1	Nut-HF

● Not illustrated

■ Not serviced separately


Engine and Muffler Assembly

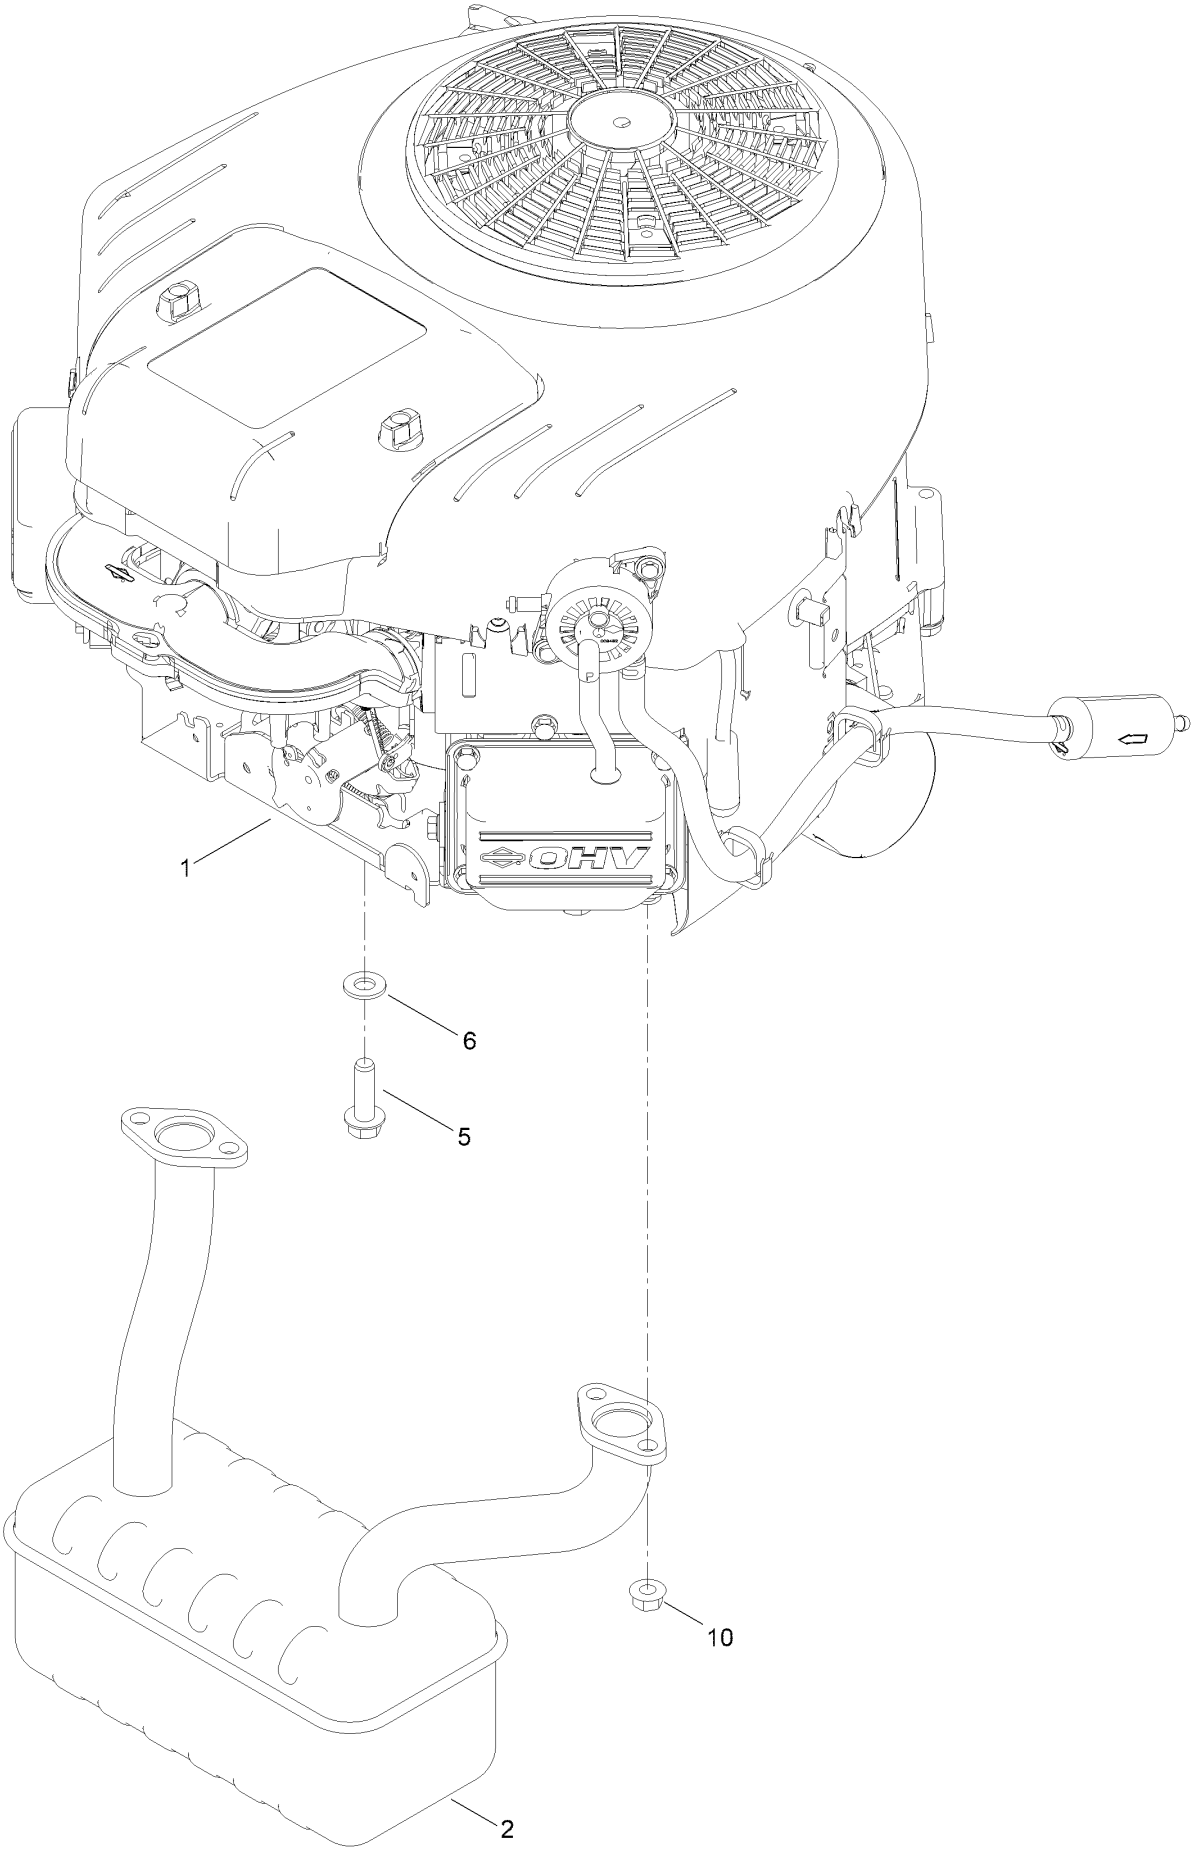



Engine and Muffler Assembly (continued)


Ref.	Part Number	Qty.	Description
1	163-8021	1	Engine - B&s Exi
2	145-6318	1	Muffler
5	32144-109	4	Screw-Thd
6	3256-24	3	Washer-Plain
10	33004-00	4	Nut-HF

Air Assembly

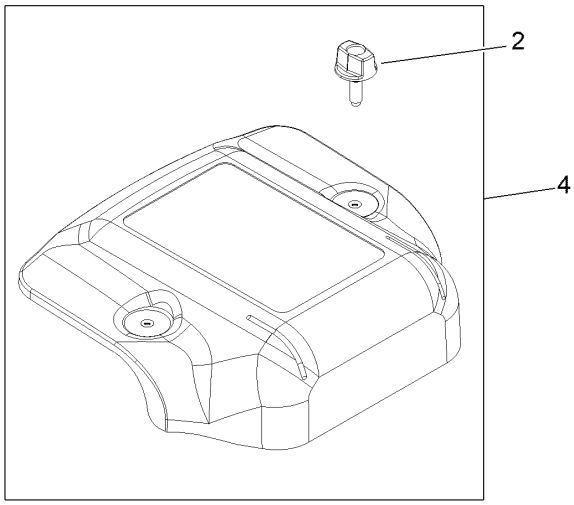

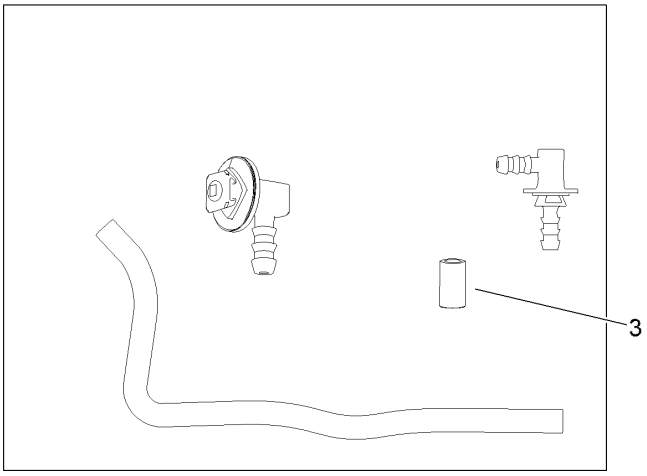

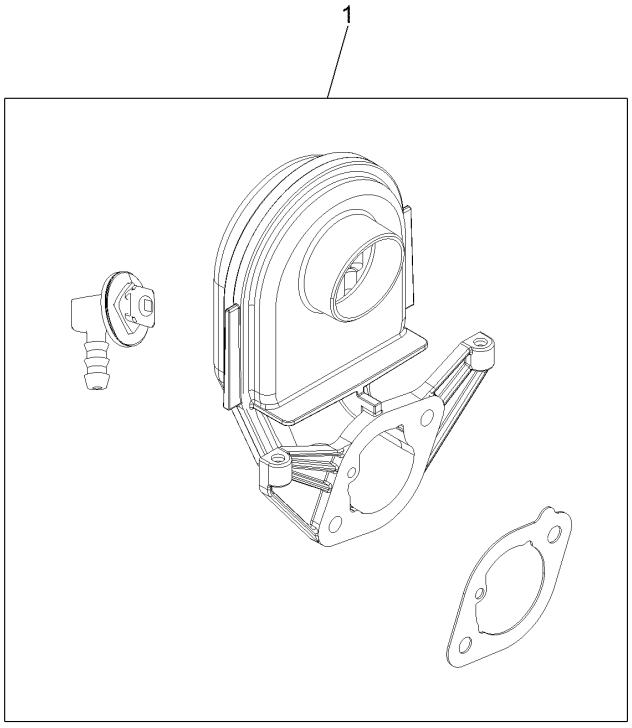


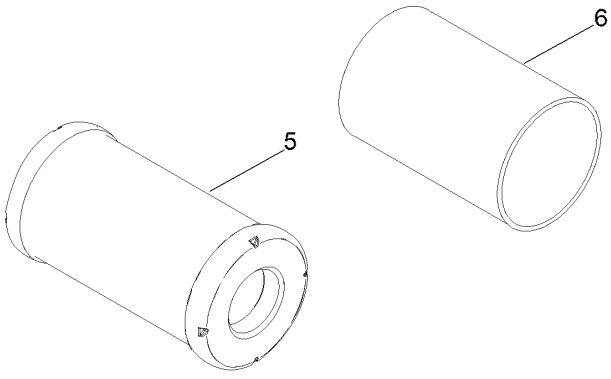

Air Assembly (continued)

Ref.	Part Number	Qty.	Description
1	594205	1	Elbow, Intake
2	591660	1	Knob-Air Cleaner Cover
3	799159	1	Cap-Connector
4	591658	1	Cover-Air Cleaner
5	84012892	1	Filter-A/C Cartridge
6	797704-BS	1	Filter-Pre Cleaner


Alternator Assembly

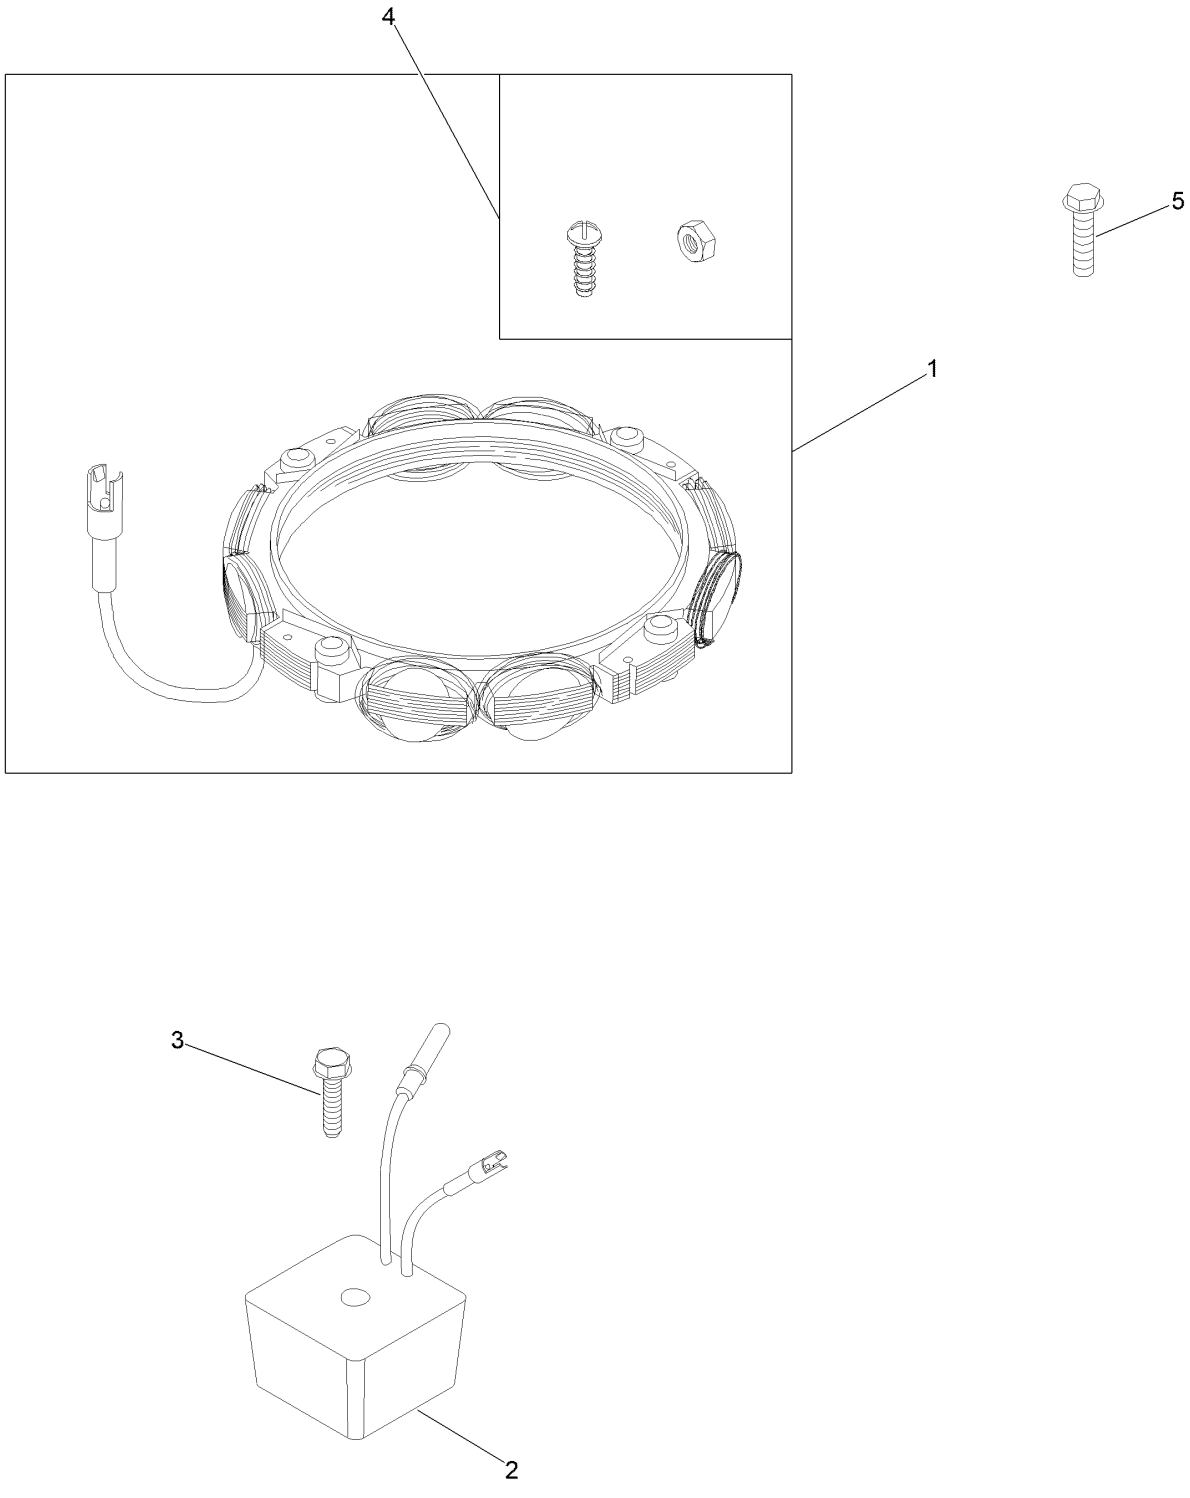

Alternator Assembly (continued)

Ref.	Part Number	Qty.	Description
1	84012661	1	Alternator
2	794360	1	Regulator
3	691129	2	Screw
4	698516	1	Screw And Washer Kit
5	691183	4	Screw


Controls Assembly

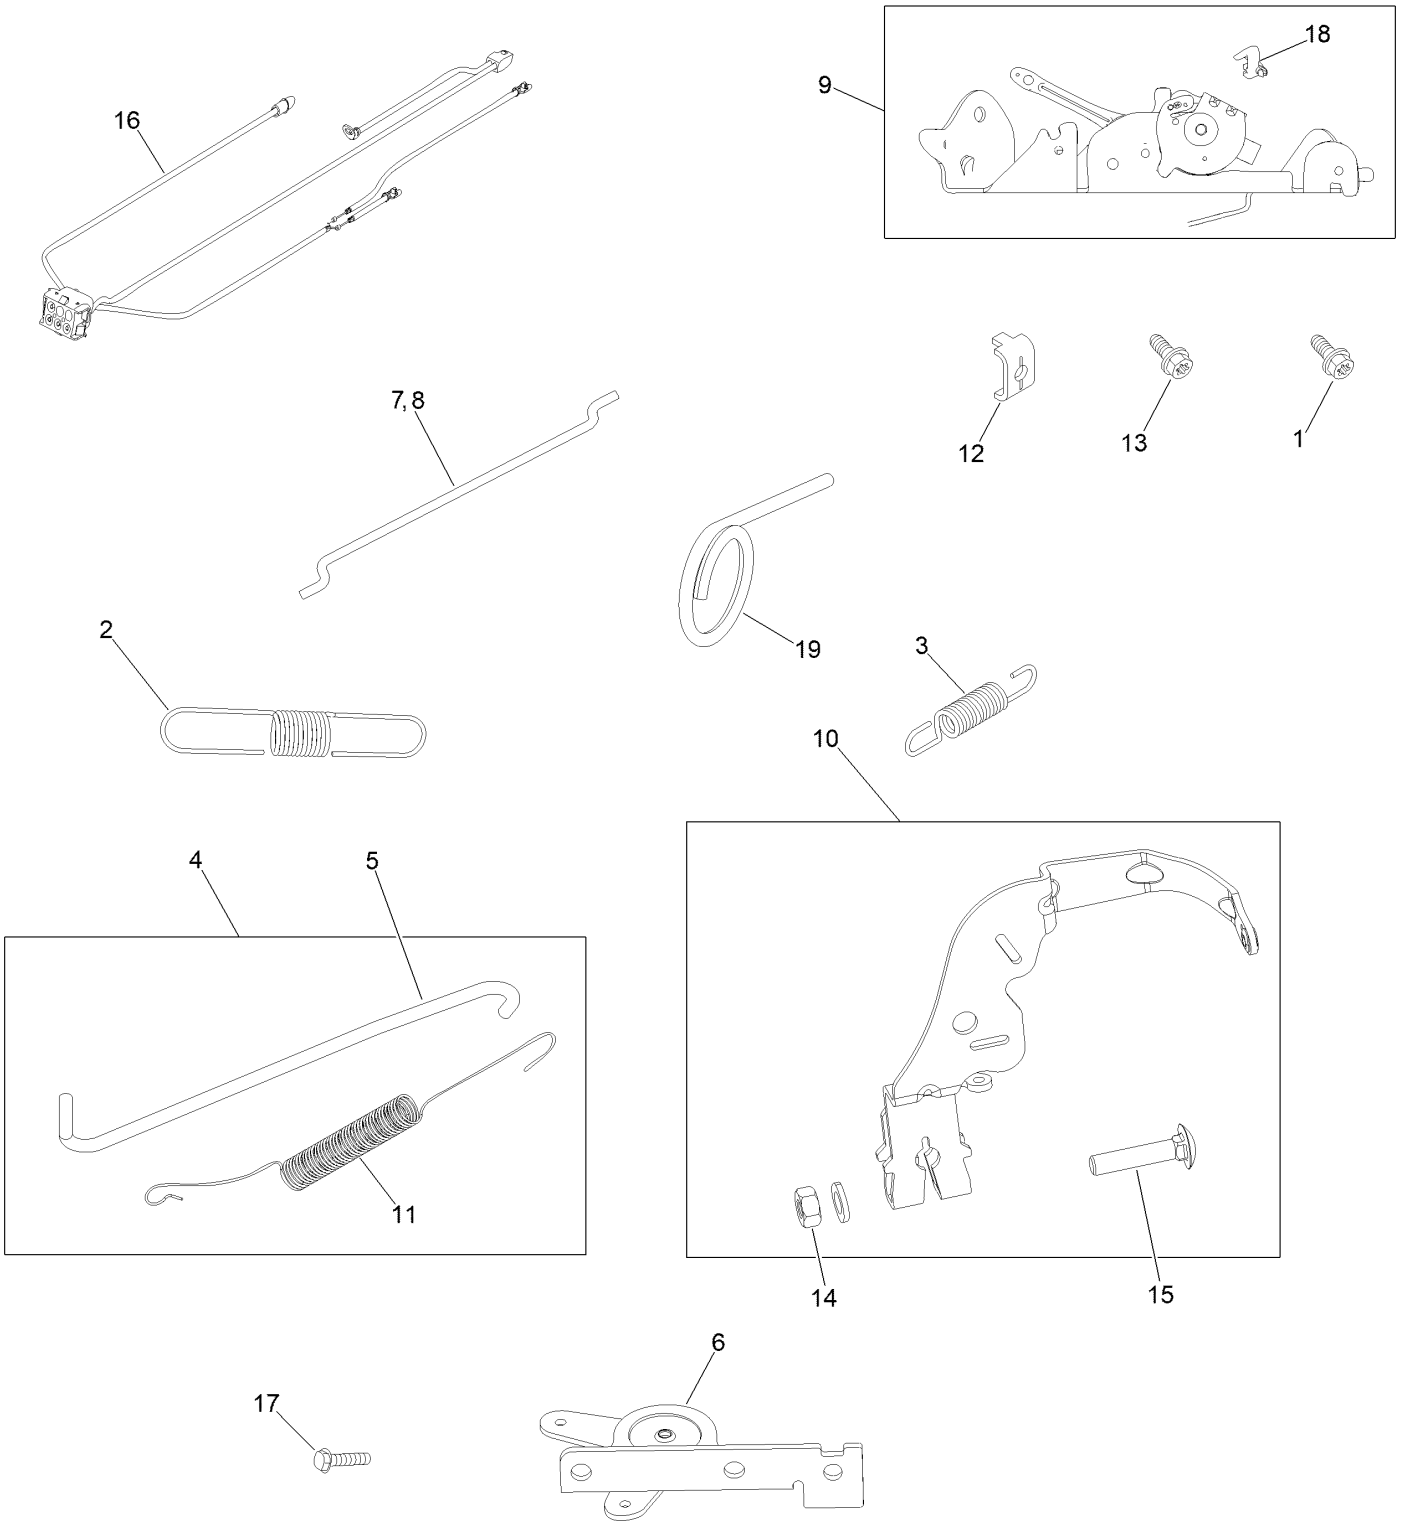

Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
1	691108	1	Screw
2	799171	1	Spring, Governor
3	593724	1	Spring, Governed Idle
4	597778	1	Link, Throttle
5	84001913	1	Link, Throttle
6	691021	1	Bracket-Control, Choke
7	796229	1	Link, Choke
8	691022	1	Link-Choke
9	592555	1	Bracket, Control
10	593857	1	Lever, Governor Control
11	597550	1	Spring, Governor Link
12	691024	1	Clamp-Casing
13	792629	1	Screw
14	691029	1	Nut
15	690311	1	Bolt
16	591392	1	Harness, Wiring
17	695239	2	Screw
18	592556	1	Retainer, Link
19	595801-BS	1	Pin, Speed Setting


Crankshaft and Piston Assembly

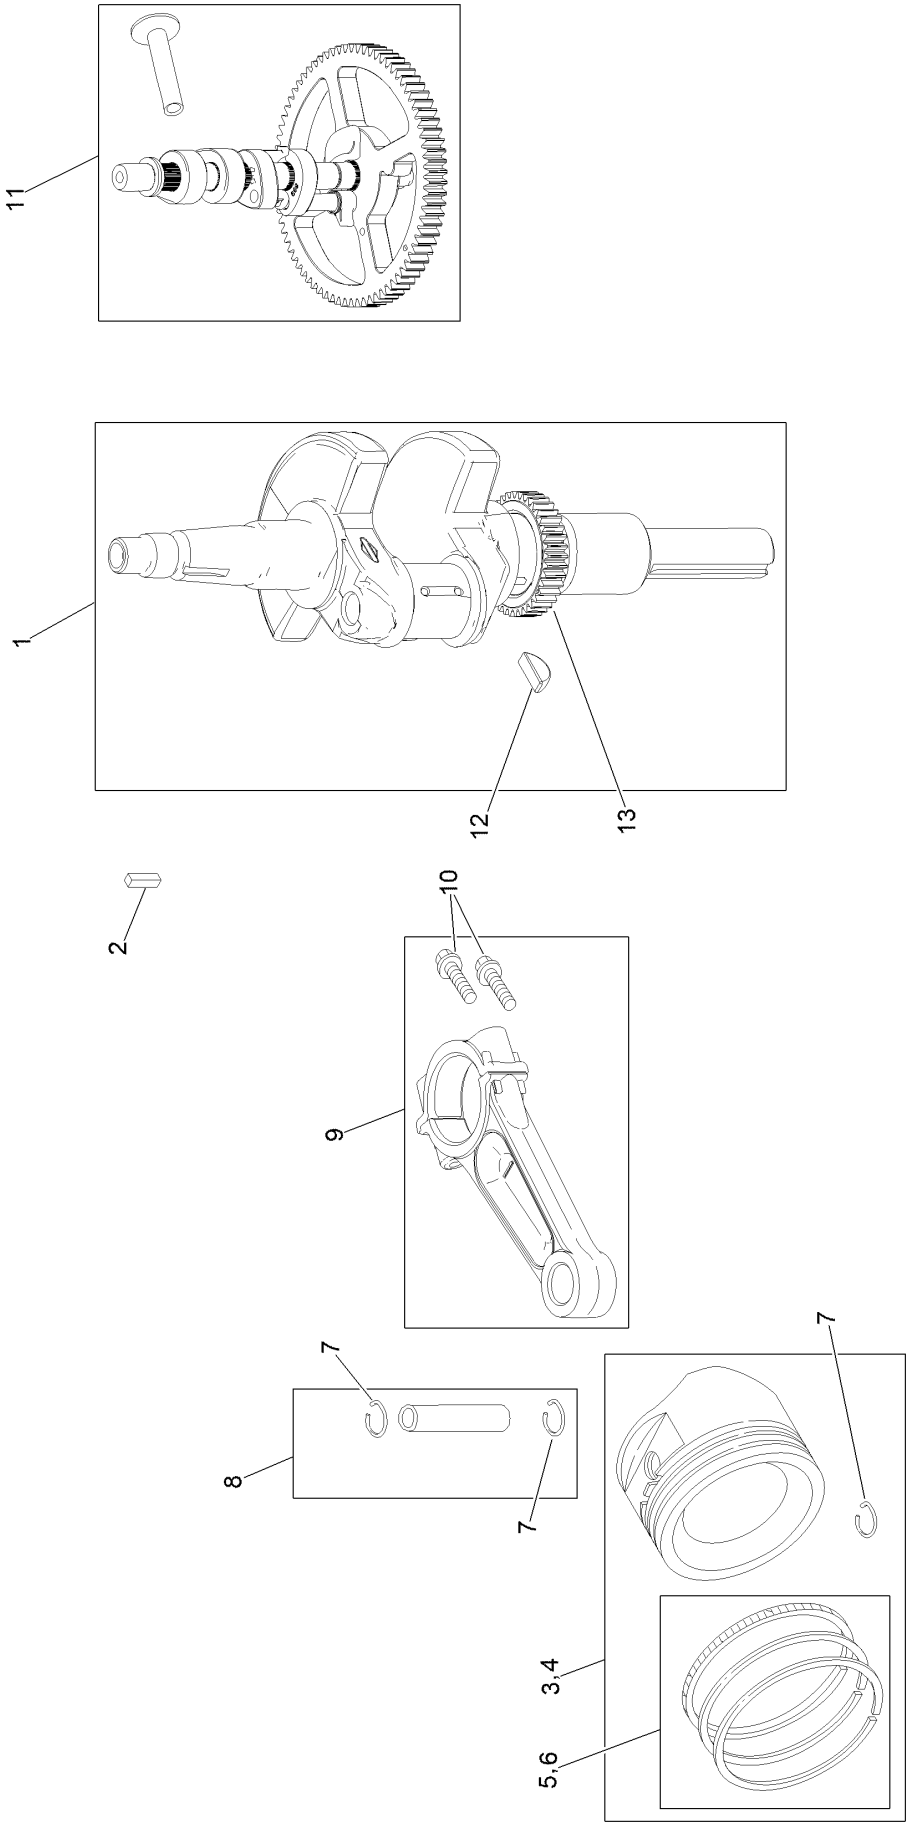

Crankshaft and Piston Assembly (continued)

Ref.	Part Number	Qty.	Description
1	595726	1	Crankshaft
2	222698s	1	Key-Flywheel
3	793560	2	Piston Assembly
4	793563	1	Piston Assembly (.020" Oversize)
5	792026	2	Ring Set (STD)
6	792073	1	Ring Set (.020 O S)
7	690975	1	Lock-Pin, Piston
8	593650	1	Pin, Piston
9	84007297	2	Rod, Connecting
10	690976	4	Screw
11	797242	1	Camshaft
12	690979	1	Key-Timing
13	690980	1	Gear-Timing


Cylinder Block Assembly

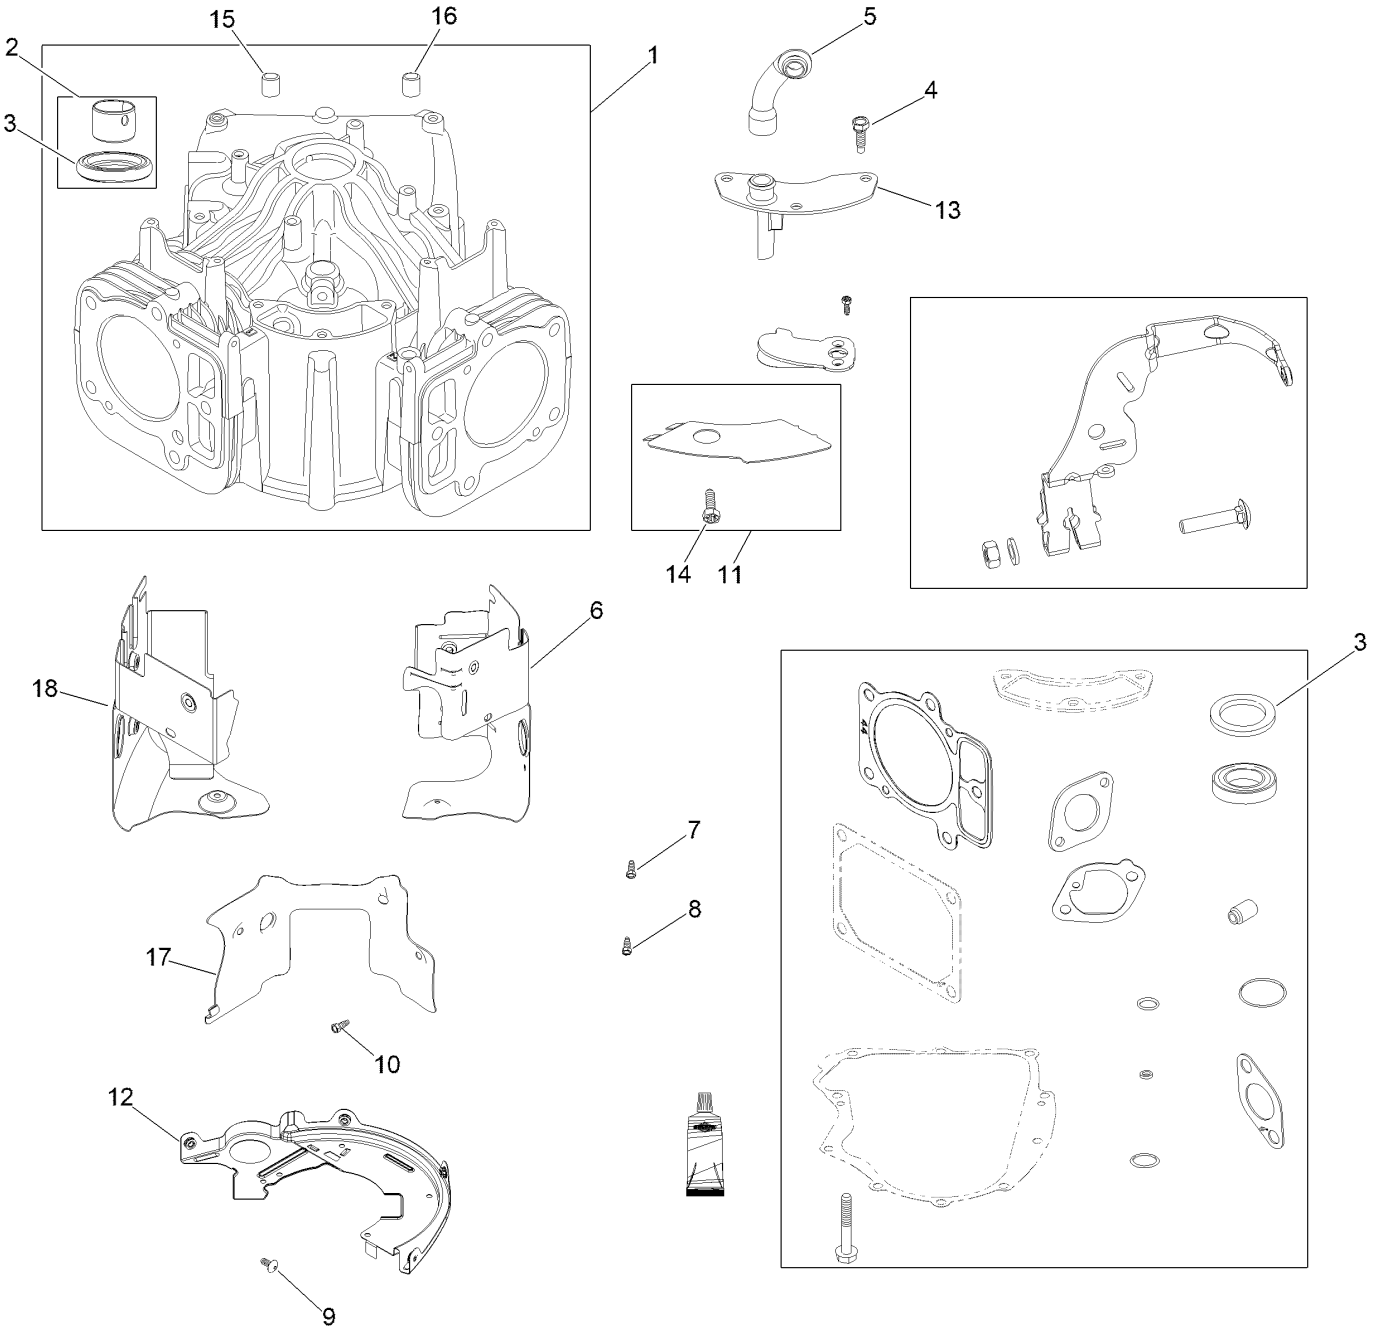

Cylinder Block Assembly (continued)

Ref.	Part Number	Qty.	Description
1	594970	1	Cylinder ASM
2	797673	1	Bushing/Seal Kit
3	391086s	1	Seal-Oil
4	691108	3	Screw
5	594163	1	Tube, Breather
6	84007347	1	Shield-Cylinder
7	691003	2	Screw
8	691108	3	Screw
9	594937	4	Screw
10	691003	1	Screw
11	594325	1	Plate-Baffle
12	594902	1	Plate-Back
13	594164	1	Cover-Breather Passage
14	594326	1	Screw
15	690959	6	Pin-Locating
16	594988	1	Pin-Locating
17	591667	1	Cover-Air Guide
18	84002166	1	Shield, Cylinder (B&s 84002166)


Exhaust Assembly

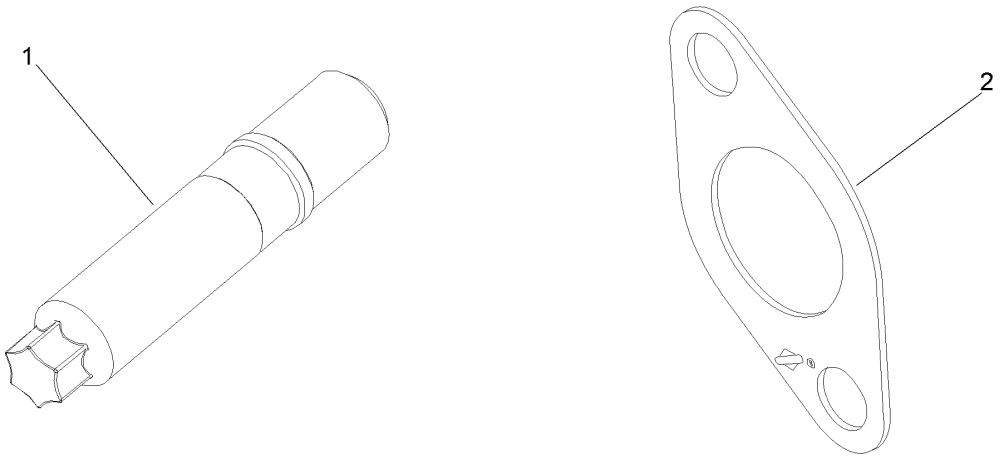

Exhaust Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	591756	4	Stud
2	690970	2	Gasket-Exhaust


Flywheel Assembly

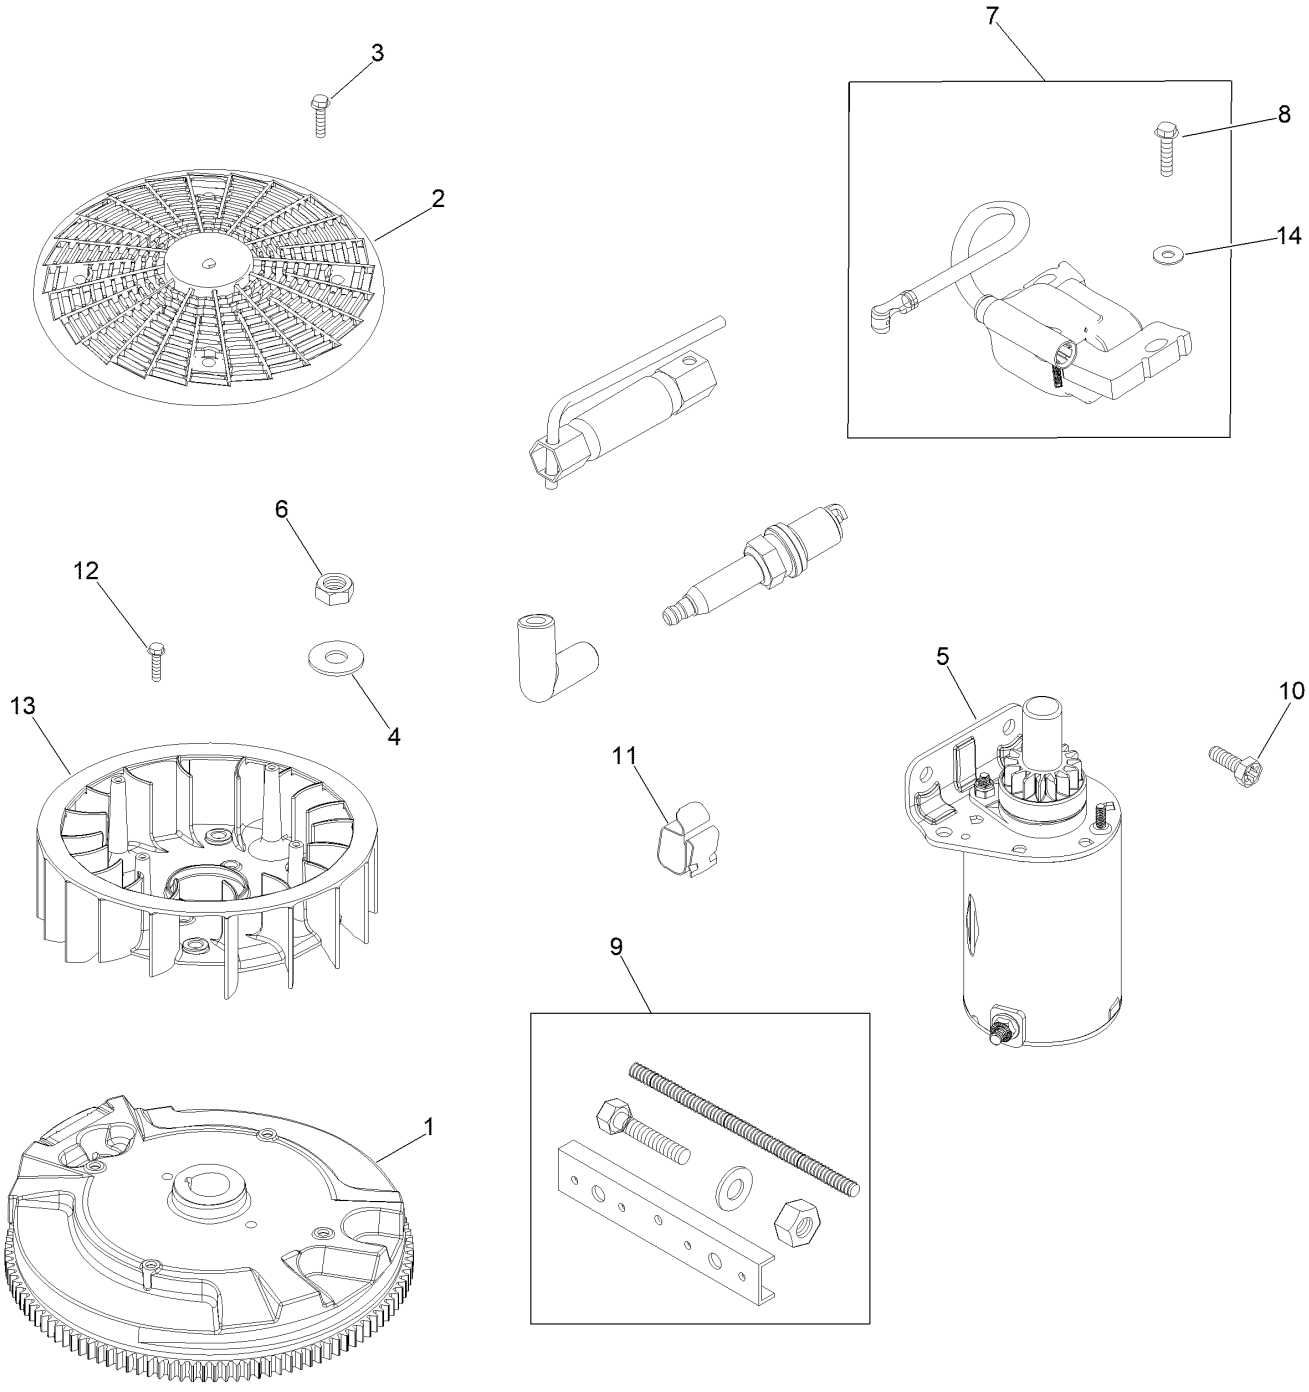

Flywheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	594169	1	Flywheel
2	494439	1	Screen-Rotating
3	698425	4	Screw
4	691056	1	Washer
5	590476	1	Motor-Starter
6	691059	1	Nut
7	84012885	2	Armature, Magneto
8	691061	4	Screw
9	19621	1	Puller, Flywheel
10	591909	2	Screw
11	593826	1	Clip, Wire
12	593638	4	Screw
13	593640	1	Fan, Flywheel
14	690272	4	Washer


Head Exhaust Assembly

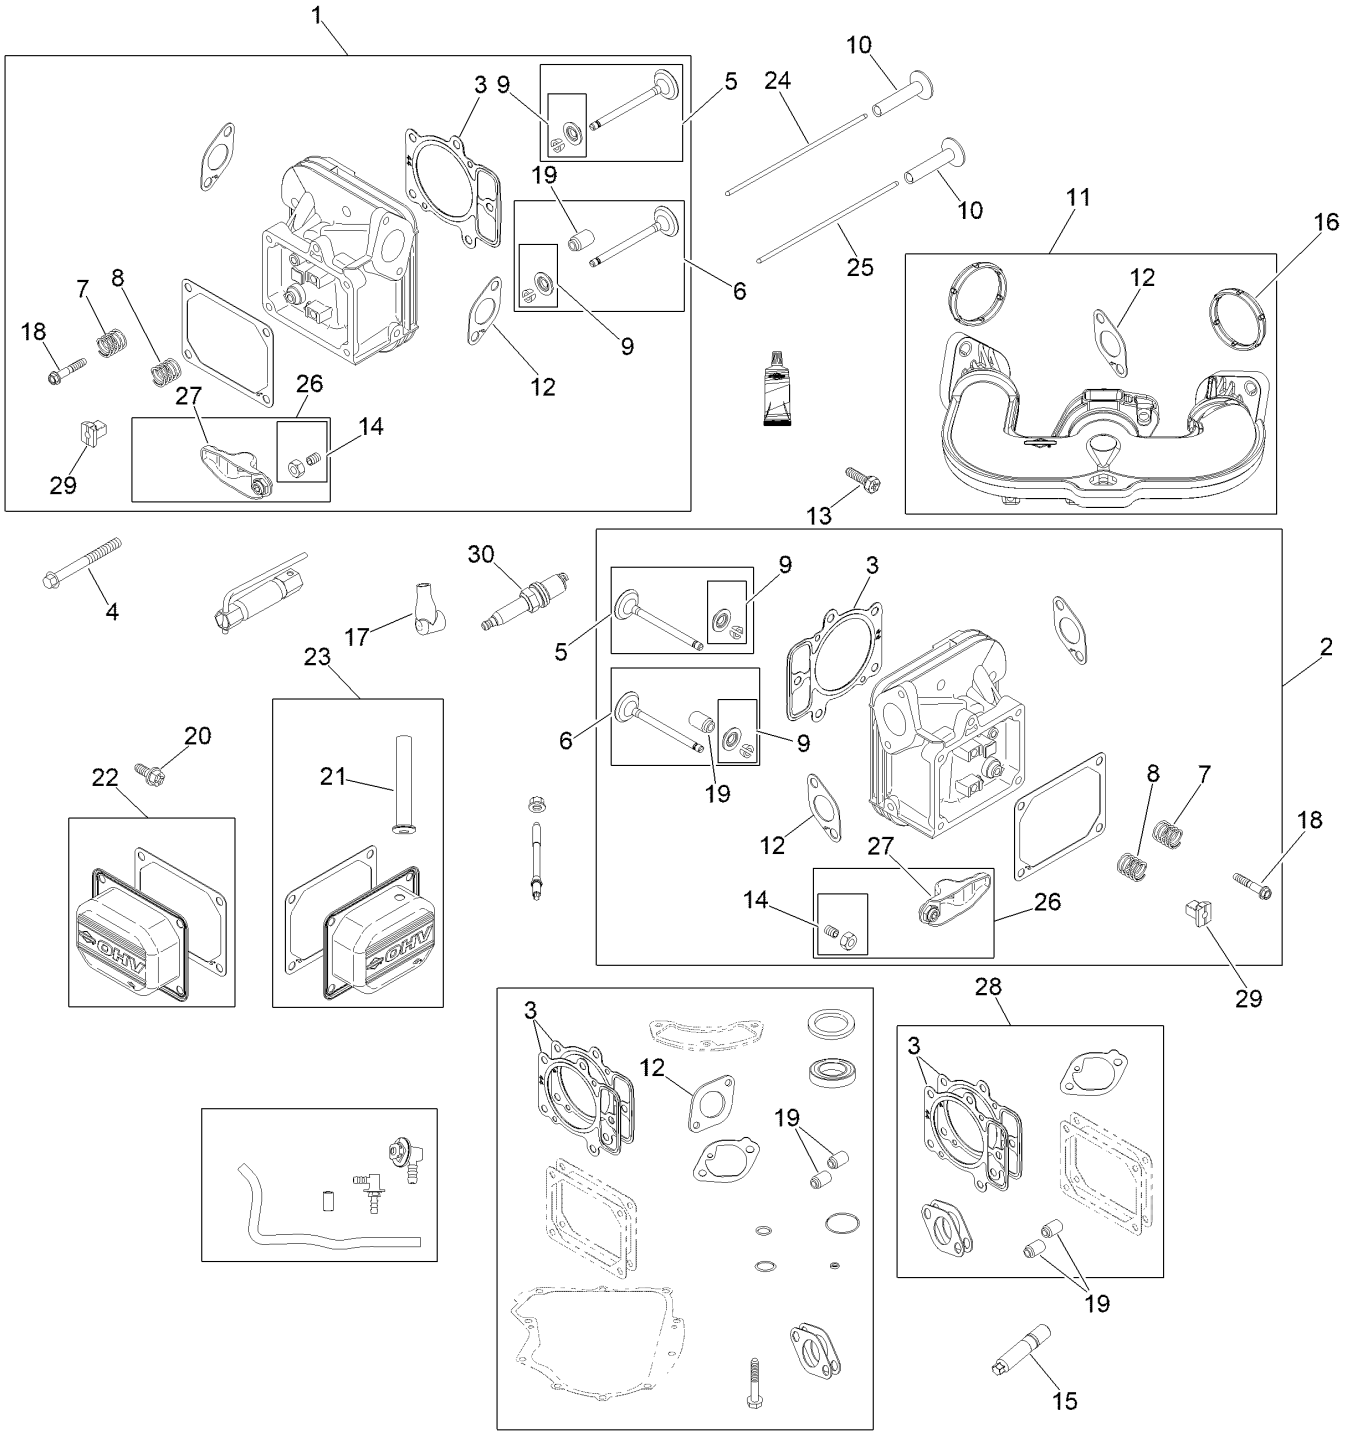

Head Exhaust Assembly (continued)

Ref.	Part Number	Qty.	Description
1	84001918	1	Head, Cylinder
2	84001919	1	Head, Cylinder
3	693997	2	Gasket-Head, Cylinder
4	592244	10	Screw-HH
5	84013571	2	Valve, Exhaust
6	84013572	2	Valve, Intake
7	694865	2	Spring-Valve
8	694865	2	Spring-Valve
9	84012308	4	Retainer Valve
10	690977	4	Tappet-Valve
11	594206	1	Manifold, Intake
12	594204	1	Gasket, Intake
13	699816	4	Screw
14	690083	4	Adjuster-Arm, Rocker
15	591756	1	Stud
16	594209	2	Seal, O-Ring
17	692076	2	Boot-Spark Plug
18	697890	4	Screw
19	794086	2	Seal, Valve
20	691127	8	Screw
21	593641	1	Hose, Vacuum
22	499600	1	Cover-Arm, Rocker
23	84003848	1	Cover, Rocker
24	597785	2	Rod-Push
25	690982	2	Rod-Push (Aluminum)
26	690972	4	Arm-Rocker
27	84012342	4	Arm-Rocker
28	84001916	1	Valve Gasket Set
29	791959	4	Pivot-Arm, Rocker
30	790267	2	Plug-Spark


Housing Assembly

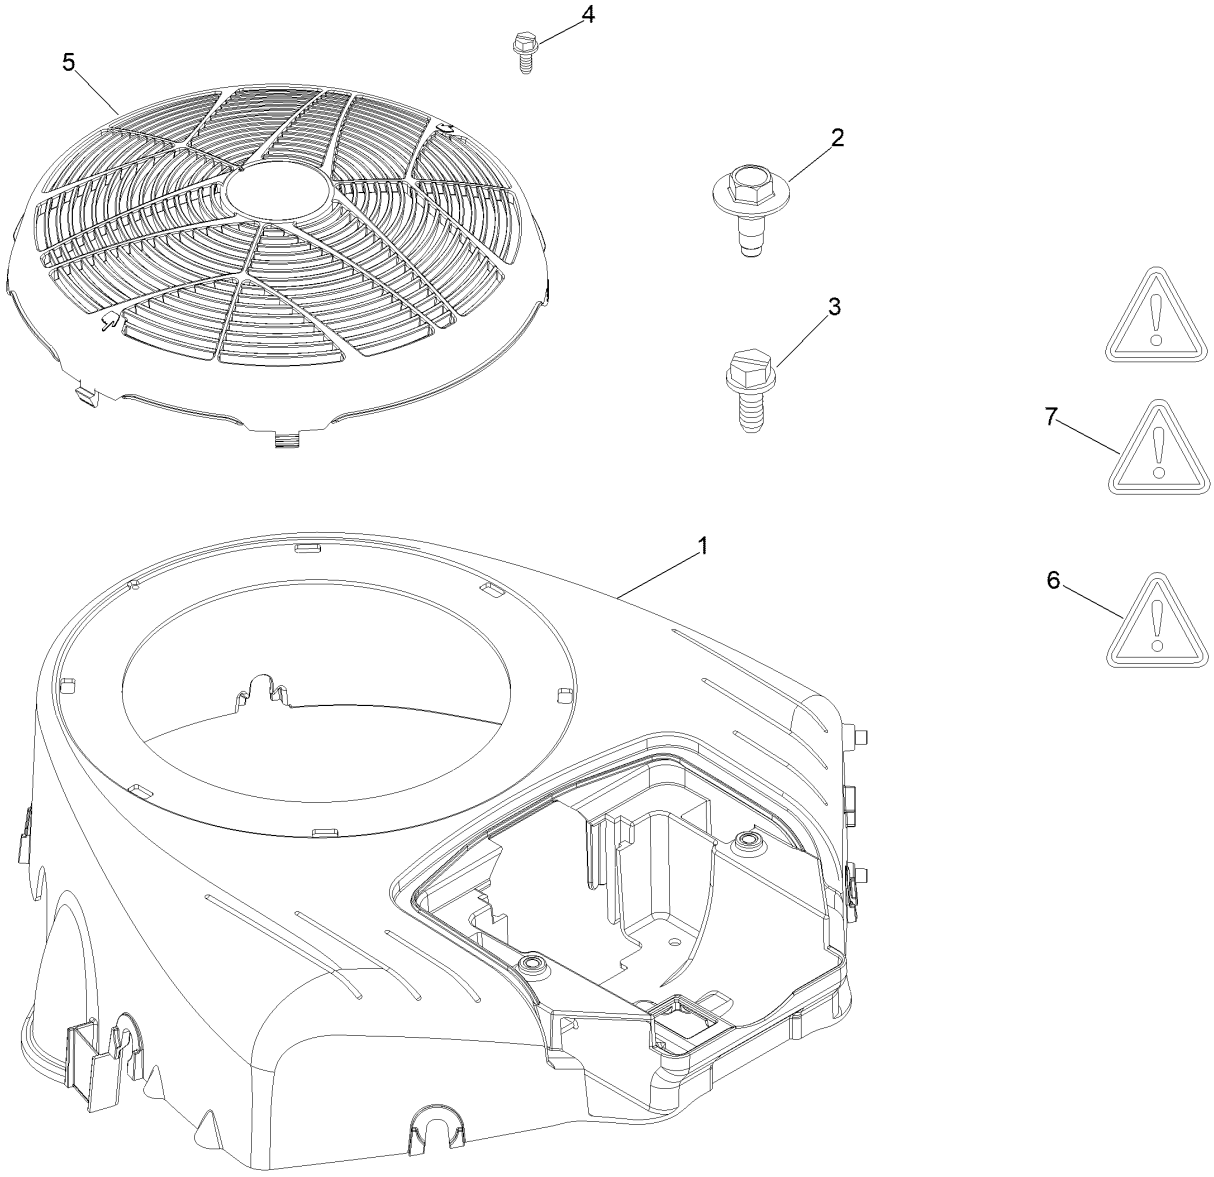

Housing Assembly (continued)

Ref.	Part Number	Qty.	Description
1	591656	1	Housing, Blower
2	594618	6	Screw
3	790690	2	Screw
4	799359	1	Screw
5	797420YP	1	Guard, Debris Screen
6	797669	1	Label, Warning
7	278911GS	1	Label, Warning


Lubrication Service Assembly

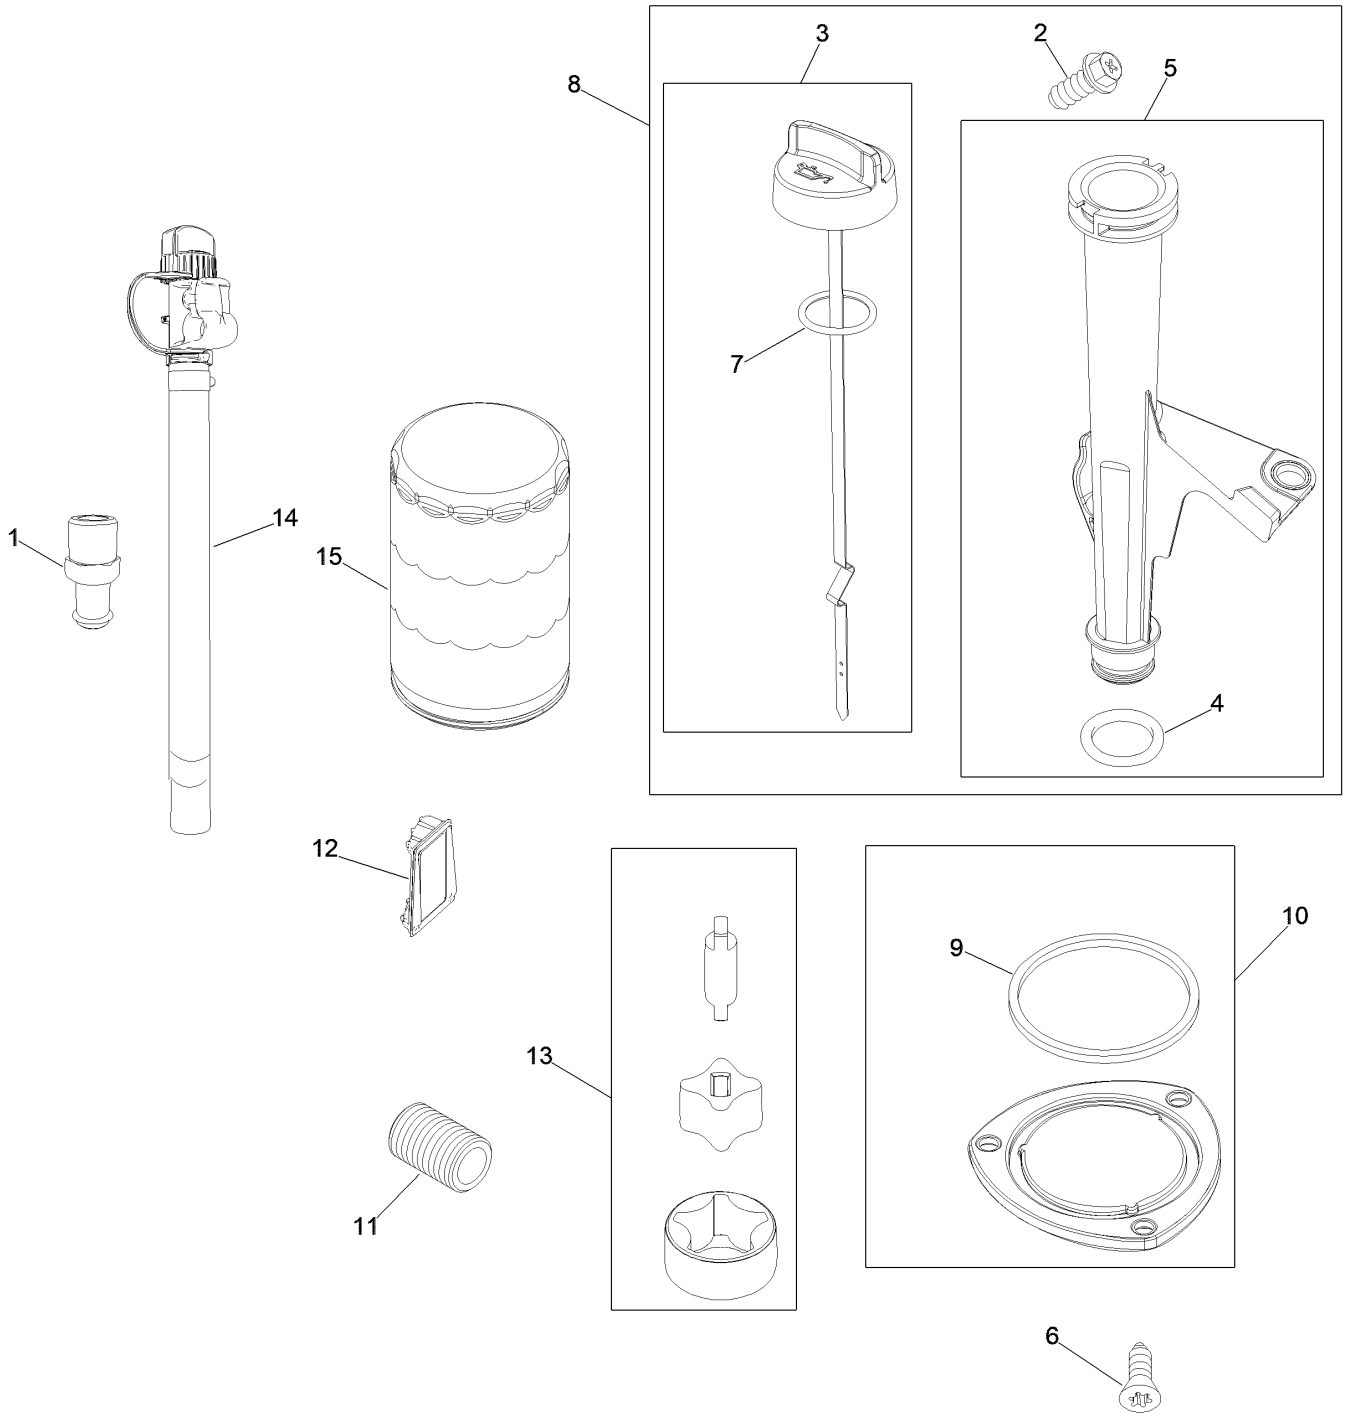

Lubrication Service Assembly (continued)

Ref.	Part Number	Qty.	Description
1	796532	1	Fitting-Oil Drain
2	594937	1	Screw
3	594528	1	Dipstick
4	691032	1	Seal-O Ring
5	597129	1	Tube, Dipstick
6	796208	3	Screw
7	691031	1	Seal-O Ring
8	597130	1	Dipstick/Tube ASM
9	796222	1	Seal, O-Ring
10	796221	1	Cover, Oil Pump
11	690954	1	Nipple-Filter, Oil
12	796214	1	Screen, Oil Pump
13	796220	1	Pump, Oil
14	593635	1	Oil Drain Hose ASM
15	696854	1	Filteroil


Sump Assembly

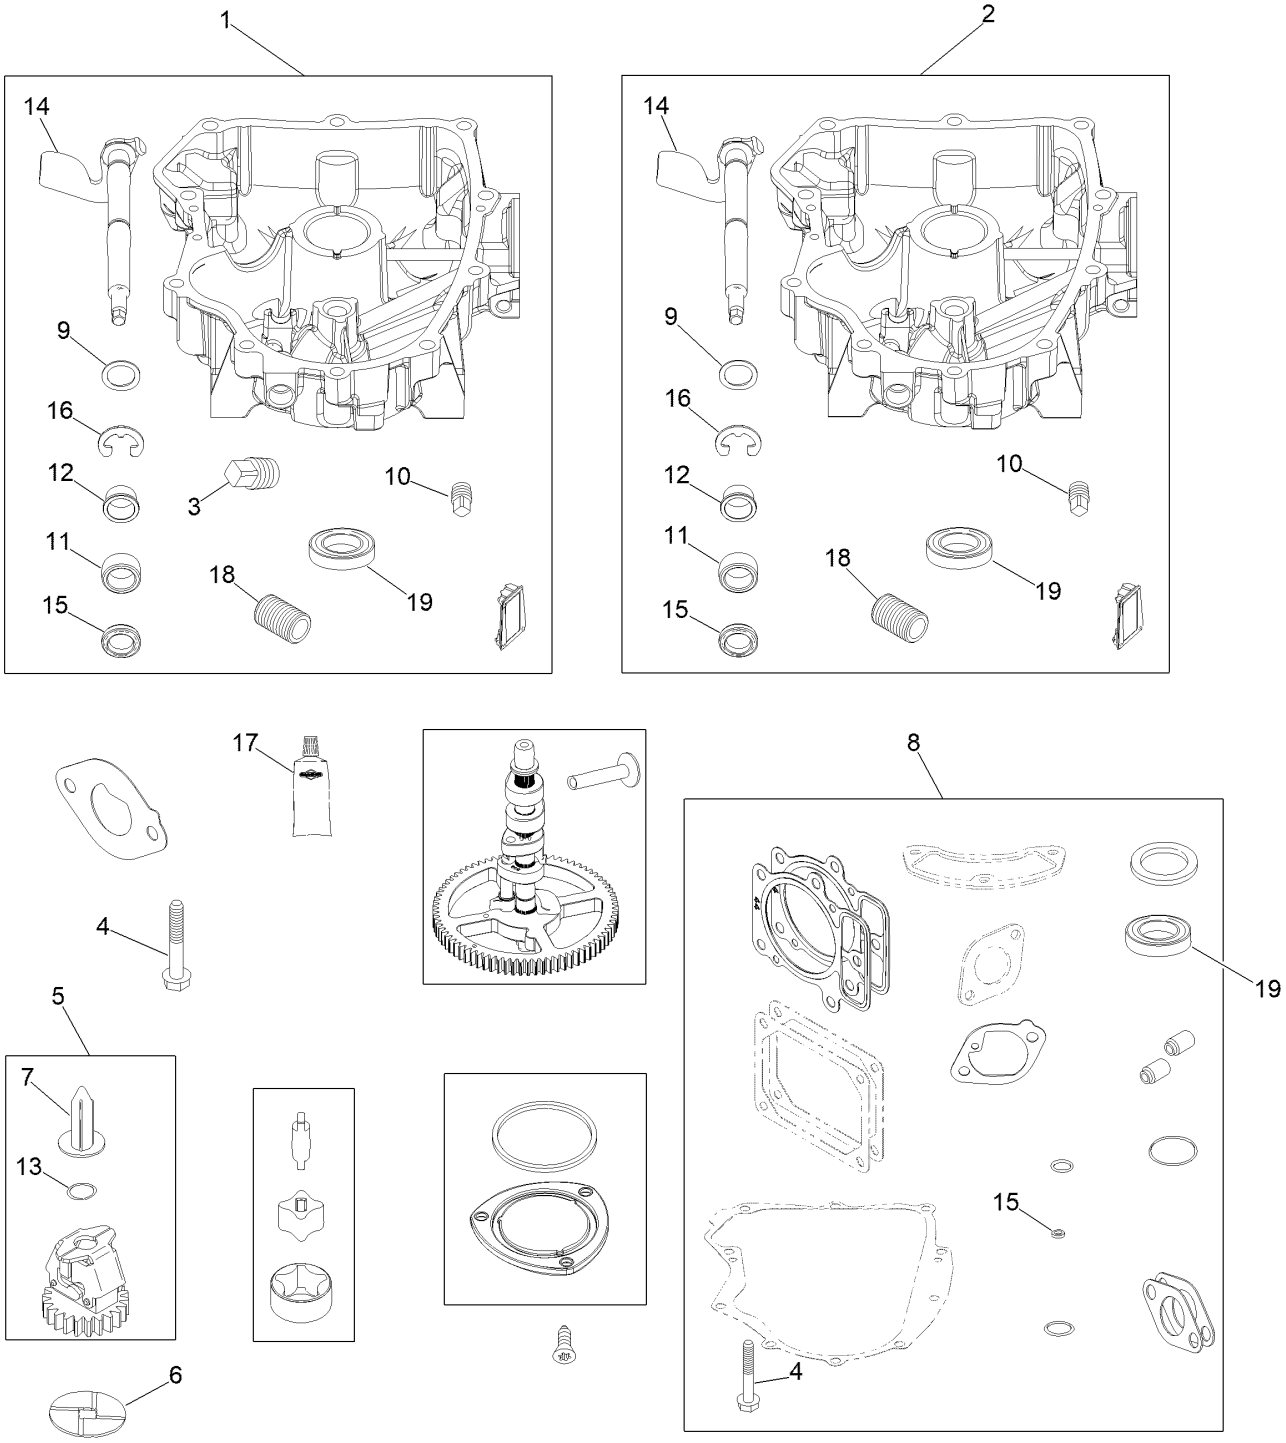

Sump Assembly (continued)

Ref.	Part Number	Qty.	Description
1	594974	1	Sump-Engine (Before 22051200)
2	84007140	1	Sump-Engine (After 22051100)
3	690946	1	Plug-Drain, Oil (Before 22051200)
4	694966	10	Screw
5	793338	1	Gear-Governor
6	799772	1	Washer
7	841026	1	Cup, Governor
8	84001915	1	Engine Gasket Set
9	690442	1	Washer
10	794903	1	Oil Drain Plug
11	796638	1	Bushing, Governor Crank
12	690553	2	Bushing-Crank, Governor
13	698290	1	Retainer-Shaft, Governor
14	691045	1	Crank-Governor
15	790574	1	Seal-Shaft, Governor
16	690328	2	Retainer-E Ring
17	100106-BS	1	Sealant, Liquid
18	690954	1	Nipple-Filter, Oil
19	795387	1	Seal, Oil


Carburetor and Fuel Assembly

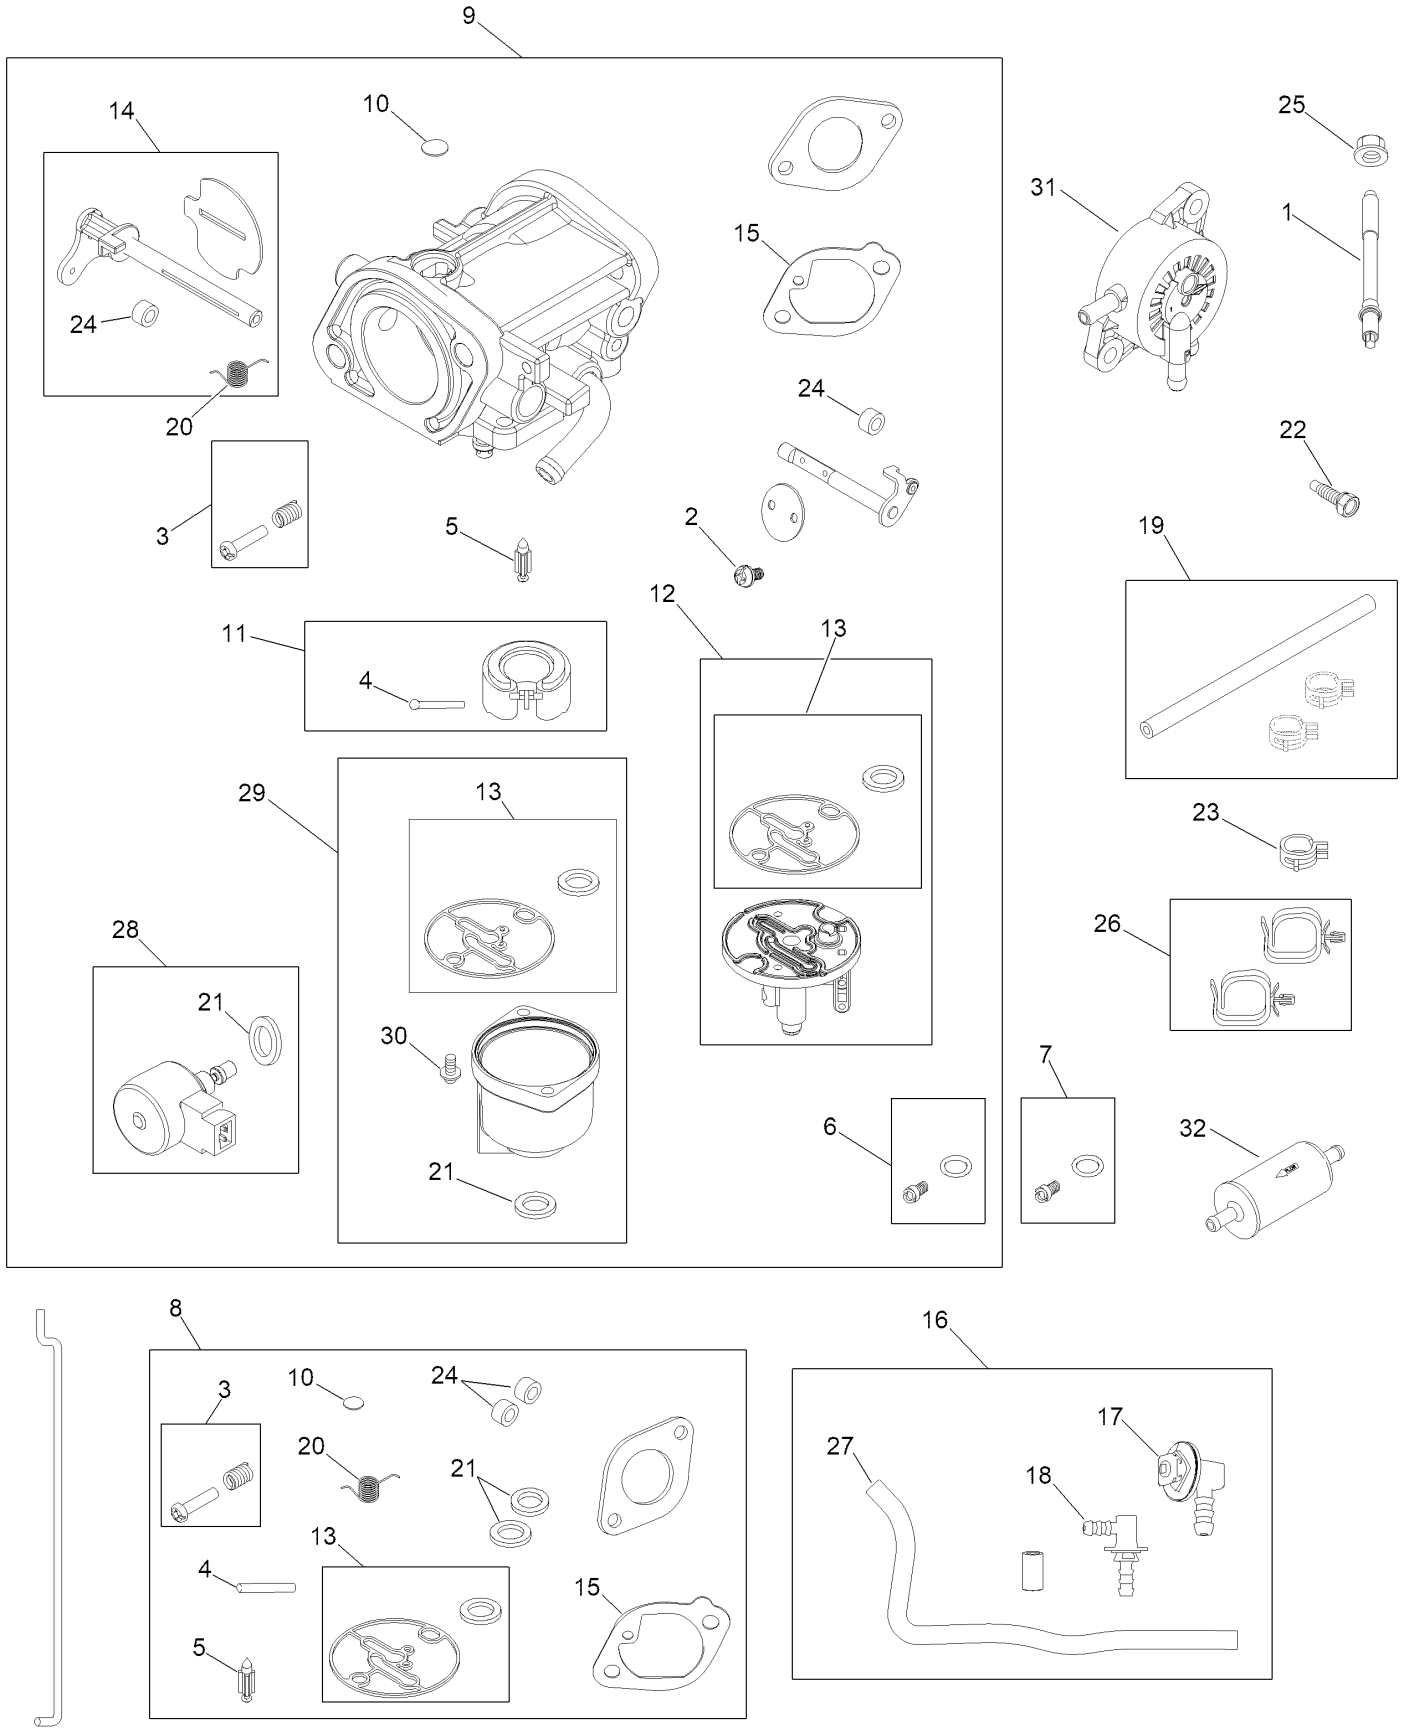

Carburetor and Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	690951	2	Stud
2	690718	2	Screw
3	695408	1	Idle Speed Kit
4	694918	1	Pin-Hinge, Float
5	698537	1	Valve-Needle, Float
6	842585	1	Jet-Main
7	791502	1	Jet-Main
8	84001917	1	Carburetor Overhaul Kit
9	594207	1	Carburetor
10	699810	1	Plug-Welch
11	694914	1	Carburetor Float ASM
12	591701	1	Tube-Fuel Transfer
13	698781	1	Gasket-Bowl, Float
14	594211	1	Choke Shaft Kit
15	594203	1	Gasket-Intake
16	799158	1	Connector-Hose
17	845141	1	Connector-Hose
18	594428	1	Connector-Hose
19	791766	1	Line-Fuel
20	799771	1	Spring, Choke Return
21	695410	1	Washer-Sealing
22	797409	2	Screw
23	691038	2	Clamp-Hose
24	699813	1	Seal-Shaft, Throttle
25	690958	2	Nut
26	691010	2	Clip
27	799160	1	Hose-Vacuum
28	596039	1	Solenoid-Fuel
29	591699	1	Bowl-Float
30	695407	2	Screw
31	597338	1	Pump, Fuel
32	845125	1	Filter, Fuel

Fuel and Body Styling Assembly

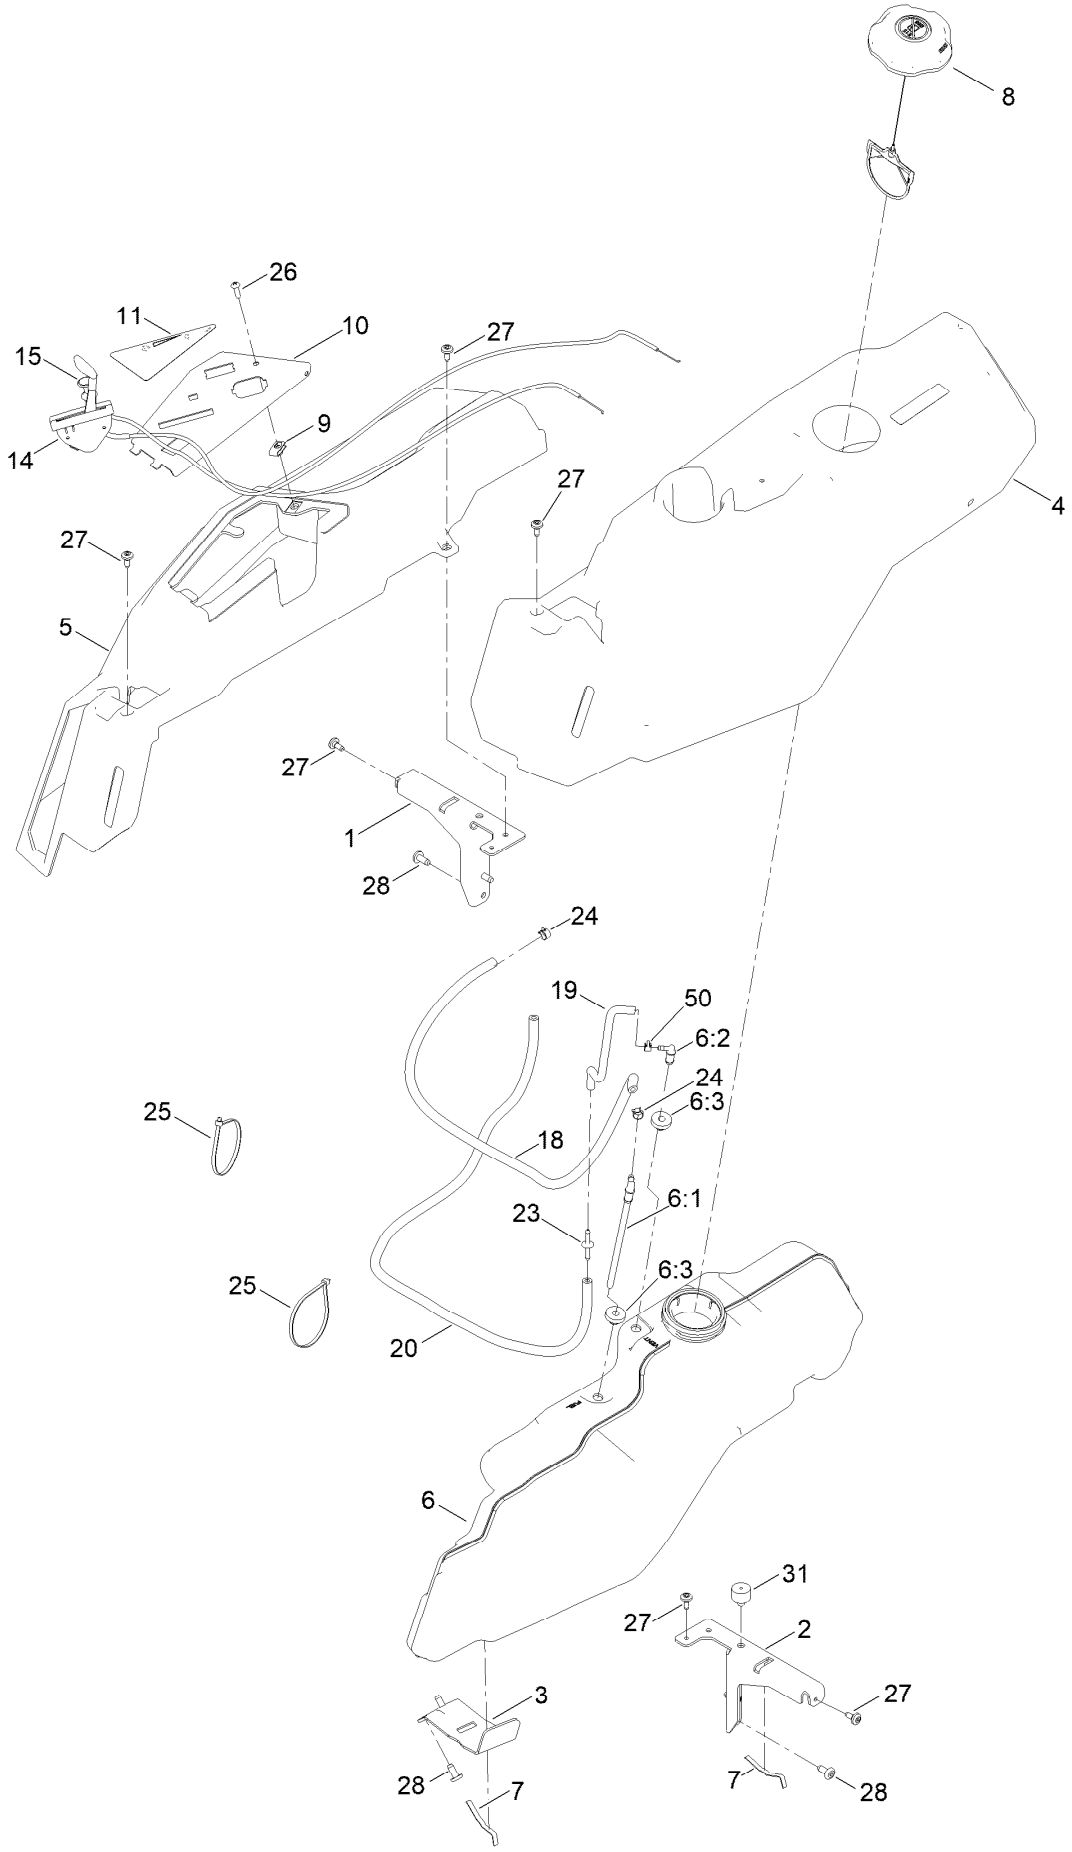


Fuel and Body Styling Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-6070-03	1	Support-Pod, RH
2	138-6071-03	1	Support-Pod, LH
3	139-3271-03	1	Support-Tank, Fuel
4	138-6074	1	Pod-LH
5	138-6075	1	Pod-RH
6	144-5304	1	Tank-Fuel ASM
6:1	139-1091	1	Connector-Elbow, 90 DEG
6:2	144-5302	1	Fitting-Elbow 90
6:3	46-6560	2	Bushing
7	609830	2	Spring
8	137-4119	1	Cap-Fuel, Ratcheting
9	107069	1	Clip
10	139-2380-03	1	Panel - Control
11	139-2391	1	Decal-Panel, Control
14	147-7698	1	Cable-Throttle
15	139-2402	1	Cable-Choke
18	109-0307	1	Hose-Fuel
19	136-6345	1	Hose-Fuel
20	110-3958	1	Hose-Fuel ●
23	144-1983	1	Adapter Orifice
24	2412-98	2	Clamp-Hose
25	3290-379	2	Tie-Cable
26	3258-166	1	Screw-PRH
27	120-7950	6	Screw-Torx
28	138-9753	6	Screw
31	120-7893	1	Bumper-Grommet
50	2412-80	1	Clamp-Hose

● Not illustrated


Electrical Assembly

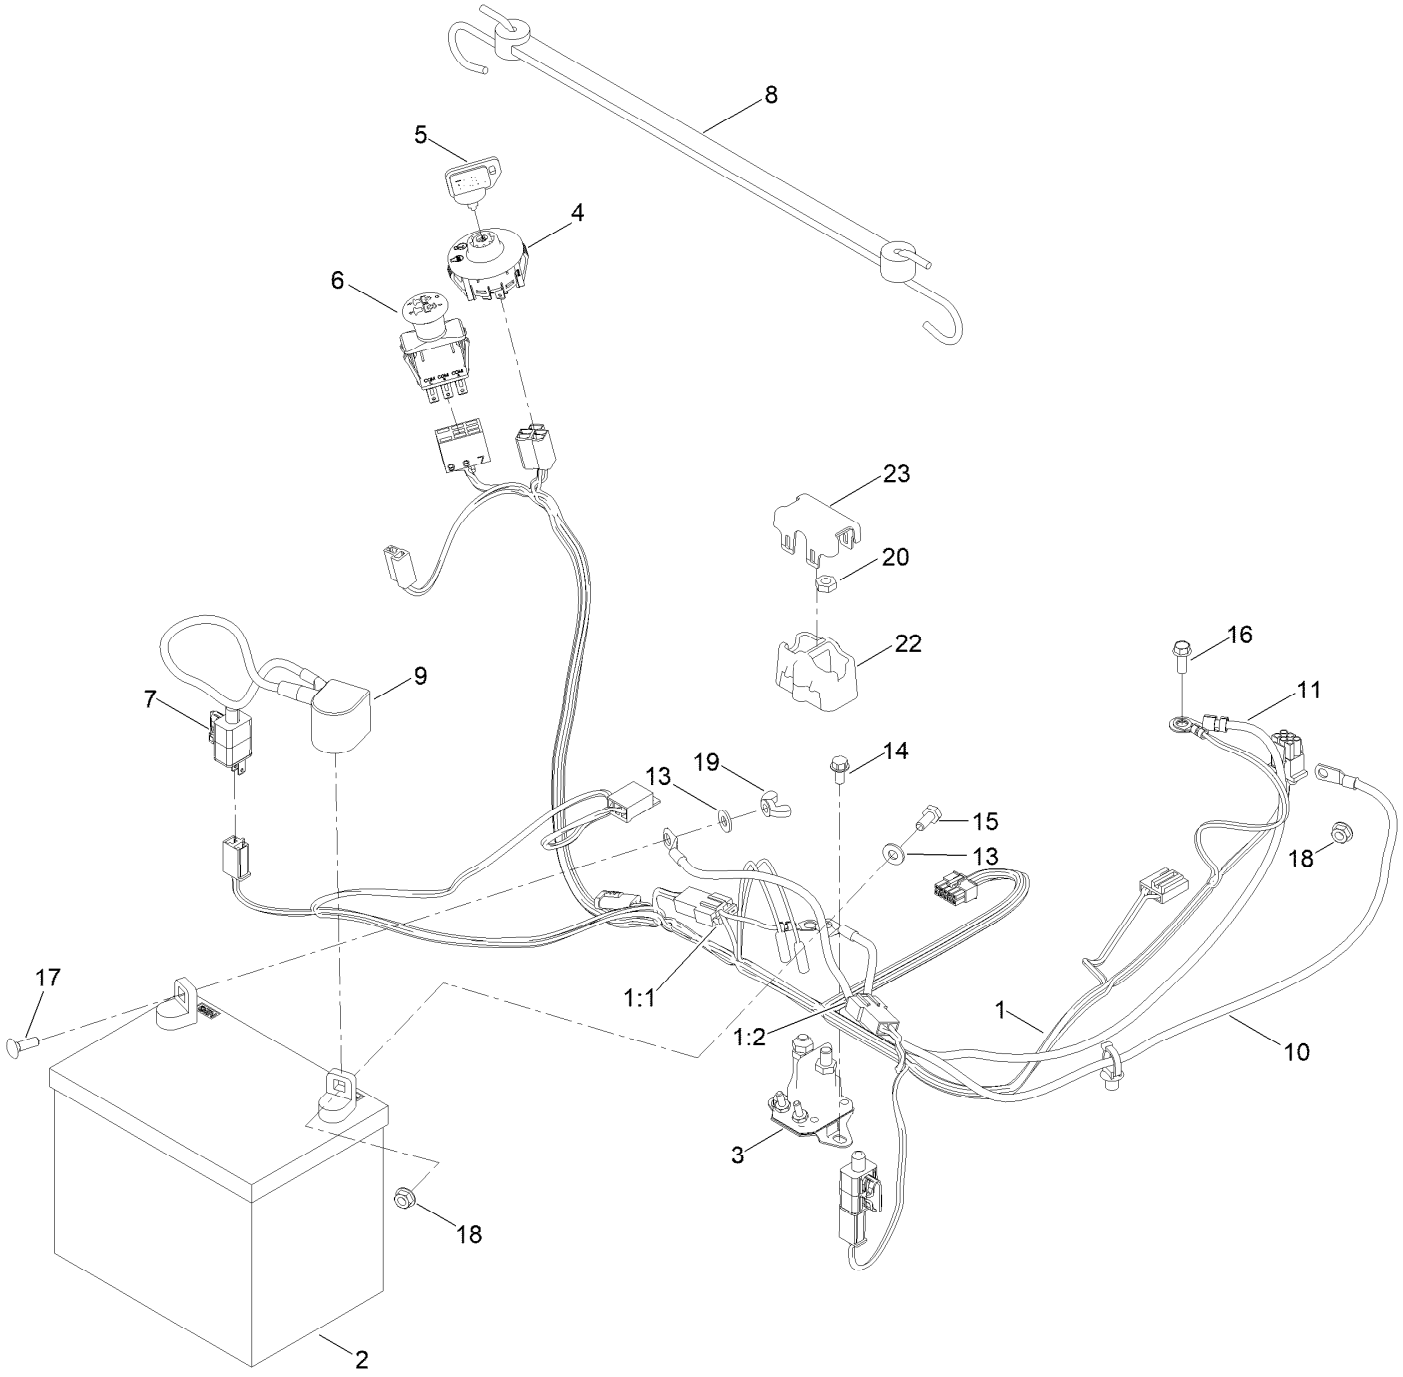

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-2521	1	Harness-Wire
1:1	109355	1	Fuse-Blade, 15 Amp
1:2	109102	1	Fuse-Blade, 25 Amp
2	105-1692	1	Battery- Dry, 12V, 230 CCA
3	117-1197	1	Solenoid
4	137-4100	1	Switch-Ignition
5	63-8360	1	Key-Ignition
6	103-5221	1	Switch-PTO
7	110-6765	2	Switch
8	139-2381	1	Strap-Rubber
9	140-2713	1	Cable-Battery, Pos
10	139-2431	1	Cable-Battery, Red (8 Gauge)
11	121-5726	1	Cable-Battery, Black
13	3256-22	2	Washer-Flat
14	32144-4	2	Screw-HWH
15	321-3	1	Screw-HH
16	32144-85	1	Screw-HWH Thd Form
17	3229-1	1	Screw-CARR
18	32128-33	2	Nut-HF
19	32103-22	1	Nut-Wing
20	3220-2	2	Nut-Hex Jam
22	140-2080	1	Cover-Solenoid
23	140-2081	1	Cap-Solenoid


34 Inch Deck and Decal Assembly

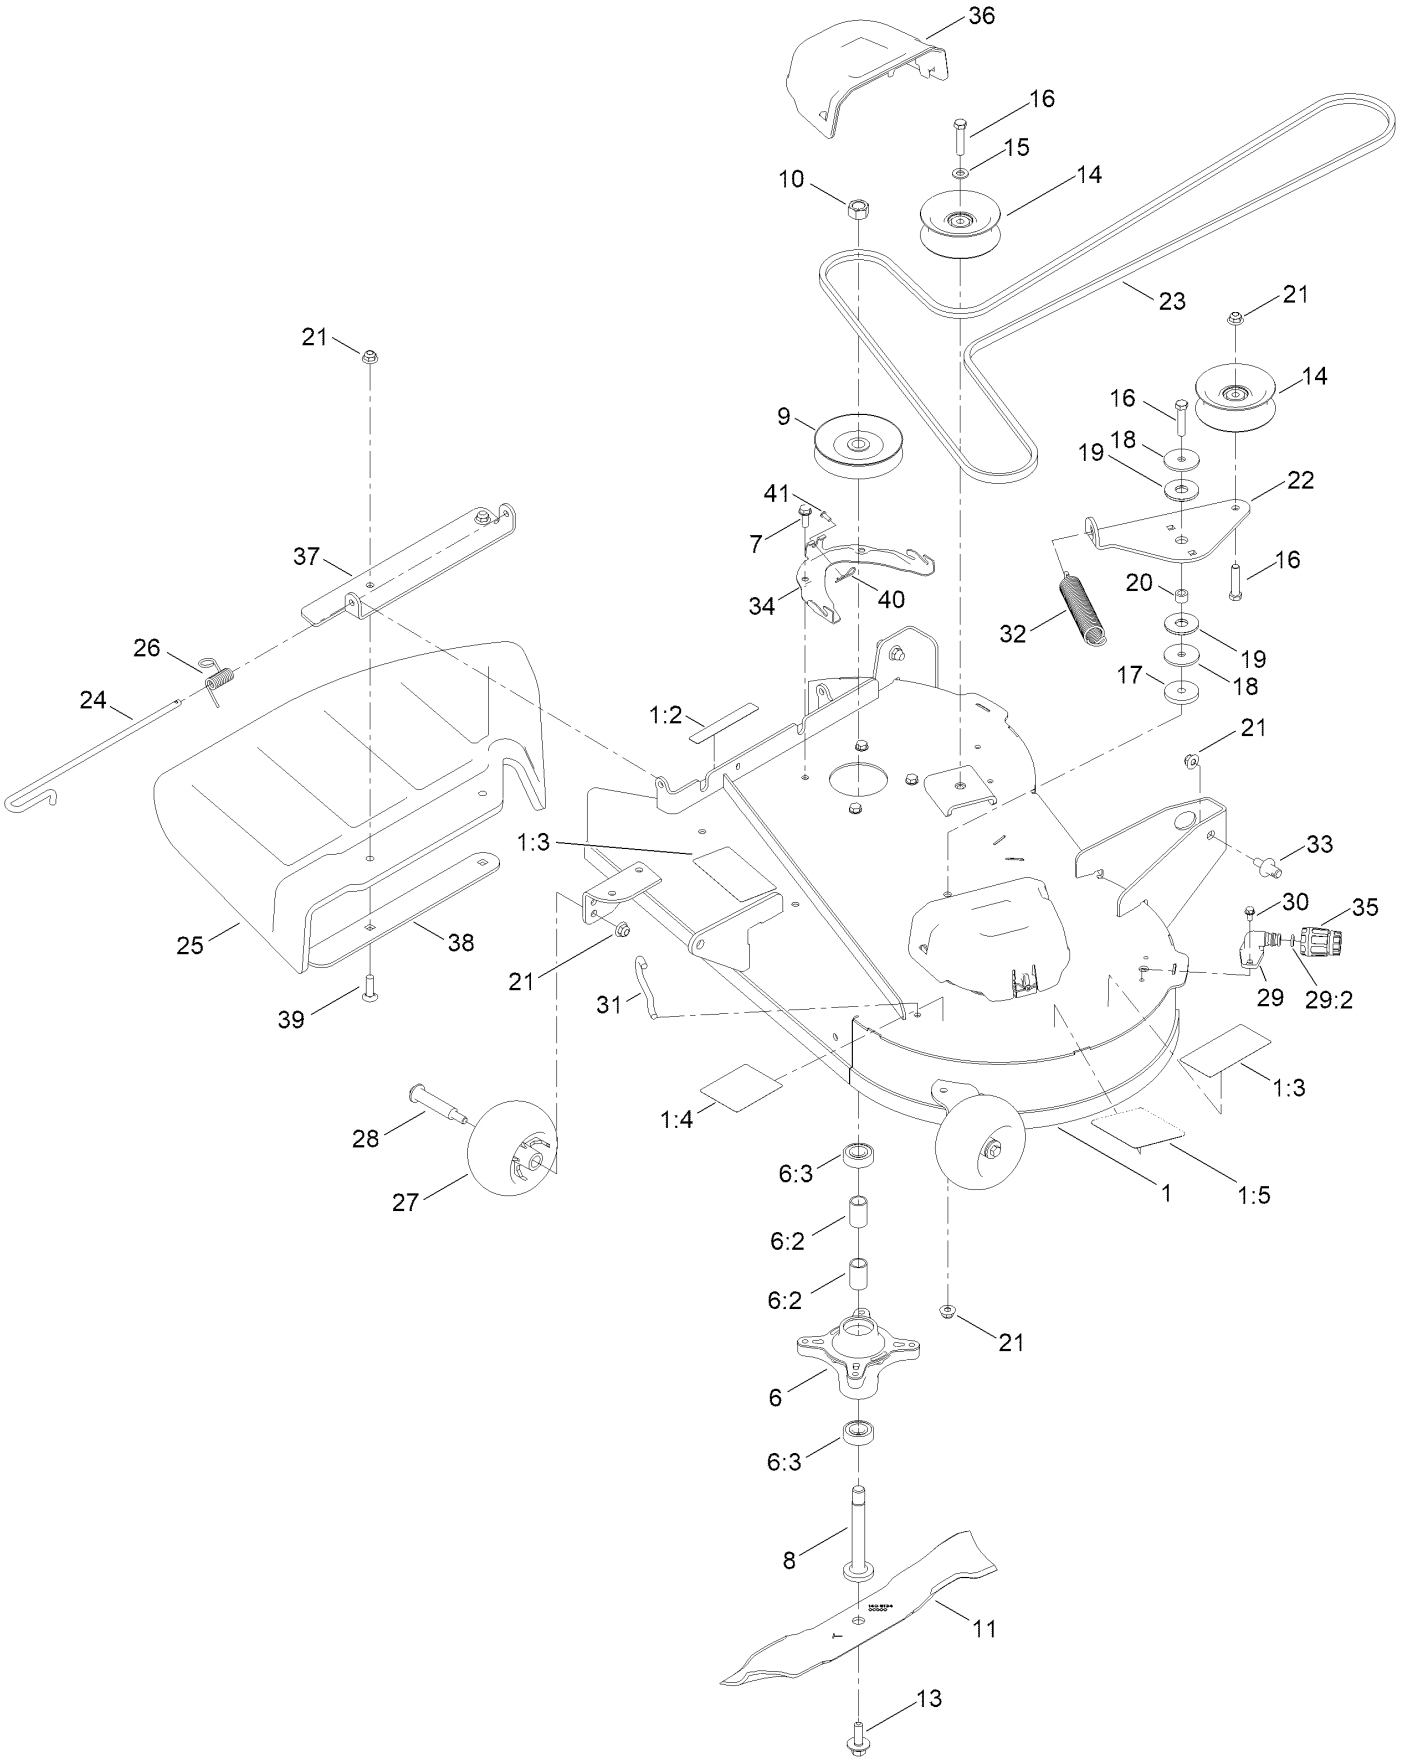


34 Inch Deck and Decal Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-5140	1	34 Inch Deck And Decal ASM
1:2	130-0731	1	Decal-Danger
1:3	132-0872	2	Decal-Danger, Deck
1:4	105-7015	1	Decal-Routing, Belt
1:5	140-5144	1	Decal-Deck
6	139-3214	2	Spindle ASM
6:2	120-7935	2	Spacer
6:3	138-9770	2	Bearing-Ball
7	32144-41	8	Screw-Taptite
8	117-7268	2	Shaft-Spindle
9	127-0098	2	Pulley ASM
10	3219-6	2	Nut-Hex
11	140-5134-03	2	Blade 17.50 [black]
13	145-0411	2	Bolt-Blade, Sems
14	132-9420	2	Pulley-Idler, Flat
15	3256-24	1	Washer-Plain
16	323-9	3	Screw-HH
17	110-9981	1	Washer-Plain
18	139-1726	2	Washer-Rebound
19	114-0463	2	Washer-Friction, Composite
20	115-4986	1	Spacer
21	119-4042	8	Nut-HF, NI
22	138-7262	1	Arm-Idler (Mty/Wdm)
23	140-5141	1	Belt-V
24	138-7231	1	Pin-Chute
25	140-3548	1	Deflector-Rubber
26	138-7232	1	Spring-Torsion
27	1-603299	2	Roller-Scalp, Anti
28	112-3977	2	Bolt-Shoulder
29	133-9289	1	Fitting-Washout
29:2	133-9290	1	O-Ring
30	32144-4	2	Screw-HWH
31	138-7267	1	Hook-Spring, Return
32	138-7265	1	Spring Extension
33	139-5871	2	Pin-Deck
34	139-3272-03	2	Bracket-Cover, Belt
35	95-3270	1	Connector-Hose
36	144-1905	2	Cover-Belt
37	144-1956-03	1	Bracket-Deflector, Top
38	144-1957-03	1	Plate-Deflector, Bottom
39	3231-28	2	Screw-CARR
40	144-1944	2	Pin-Hair
41	94-6961	2	Screw

Model Specific Assembly

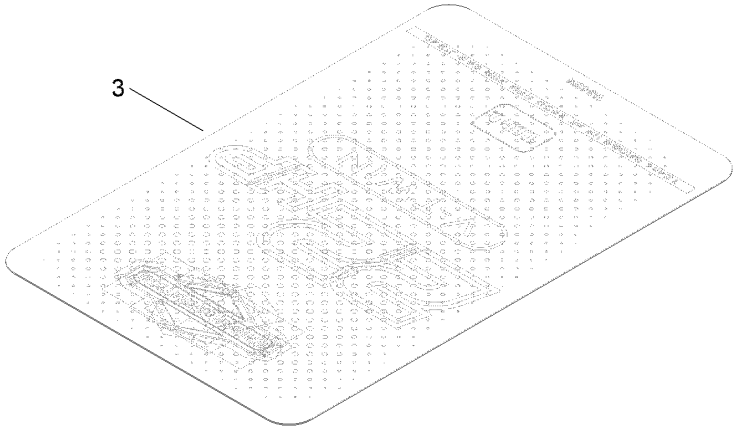


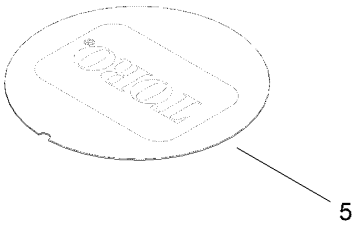

Model Specific Assembly (continued)

Ref.	Part Number	Qty.	Description
3	163-6084	1	Decal-Engine
5	163-6083	1	Decal-Toro Logo

Clutch Assembly

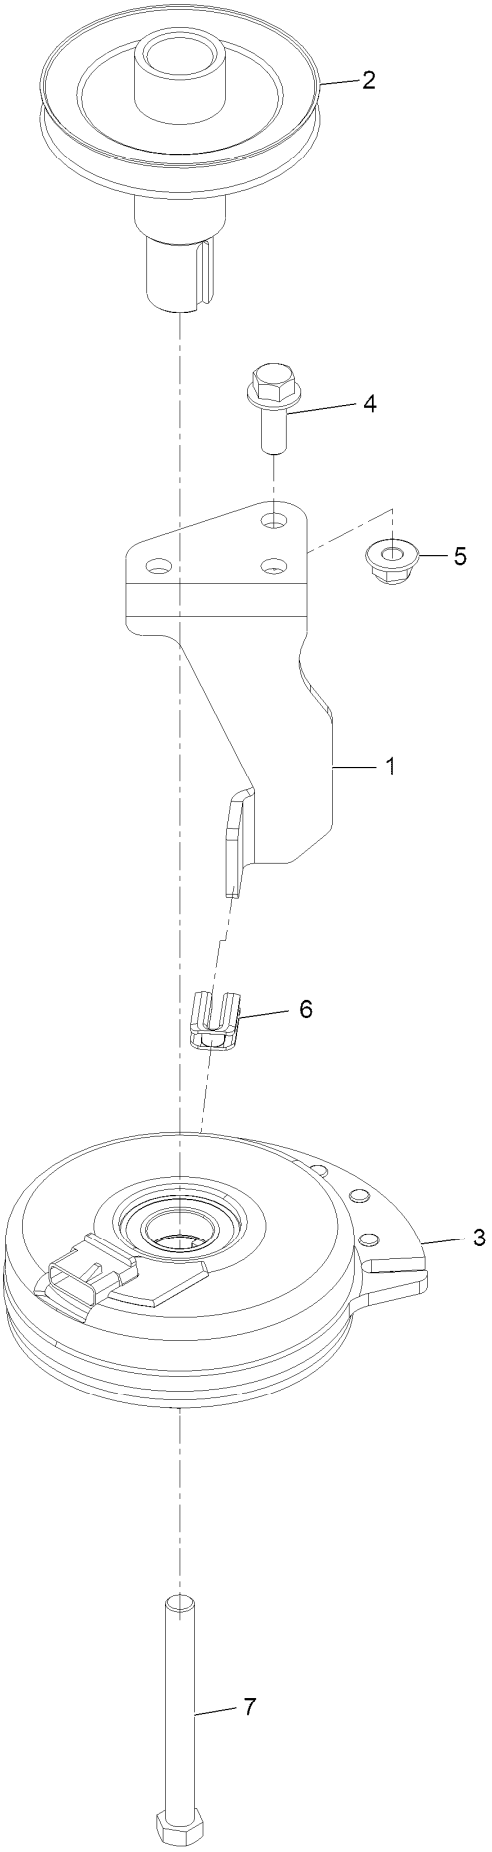

Clutch Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-7275	1	Stop-Clutch (Narrow)
2	138-9792	1	Pulley-Engine
3	117-7468	1	Clutch-Electric
4	3234-42	1	Screw HHF 3/8-16 X 1
5	119-4042	1	Nut-HF, NI
6	120-2217	1	Isolator-Clutch
7	3212-16	1	Screw-HH 7/16-20 X 4

Attachments and Accessories

For 77301 — TimeCutter 34in Riding Mower

Product Name	Model/Part
Hourmeter Kit	116-5461
Seat Cover W/O Arm Rest - TC 18in	117-0096
Jack Kit	127-6666
Fuel Stabilizer .05 oz	130-2393
4-Cycle Fuel, Snow And Lawn 32oz Can	131-3823
Toro Premium Fuel Treatment 12oz Bottle	131-6572
Front Weight Kit	140-2050
Assist Bar Kit	140-2052
Sunshade Kit	140-2054
LED Light Kit	140-2056
Deluxe Seat Kit	140-2057
Armrest Kit	140-2058
Jack Mount Kit	140-2711
34in Recycling Kit	140-3536
34in Bagging Enhancement Kit	140-8369
34in Striping Kit	140-8374
Deck Footlift Assist Kit	161-4527
Floormat Kit	161-4528
Caster Wheel Kit	161-4530
10W30 4-Cycle Engine Oil (32oz Bottle)	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903
Storage Cover	490-7516
34in Residential Z Fab Bagger Gen 2	79417
ROPS Kit	79485
Slope Sensor Kit	79486

Notes:



Count on it.