Form No. 3464-665 Rev E

TORO®

Count on it.

Parts Catalog

TimeCutter® MyRIDE® 50in

Zero Turn Riding Mower

Model No. 77502—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3464-665 E

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly 4
Decklift Assembly 6
Caster Wheel Assembly 8
Traction Drive Assembly 10
LH Transaxle Assembly No. 139-7470 12
RH Transaxle Assembly No. 139-7471 14
Brake Assembly 16
Tire Assembly 18
Motion Control Assembly 20
Engine and Muffler Assembly 22
Fuel Pod Assembly 24
Electrical Assembly 26
50in Deck and Decal Assembly 28
Frame Decal Assembly 30
Seat Pan Assembly 32
Seat Assembly No. 147-8731 34
Clutch Assembly 36
Attachments and Accessories 38

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Frame Assembly

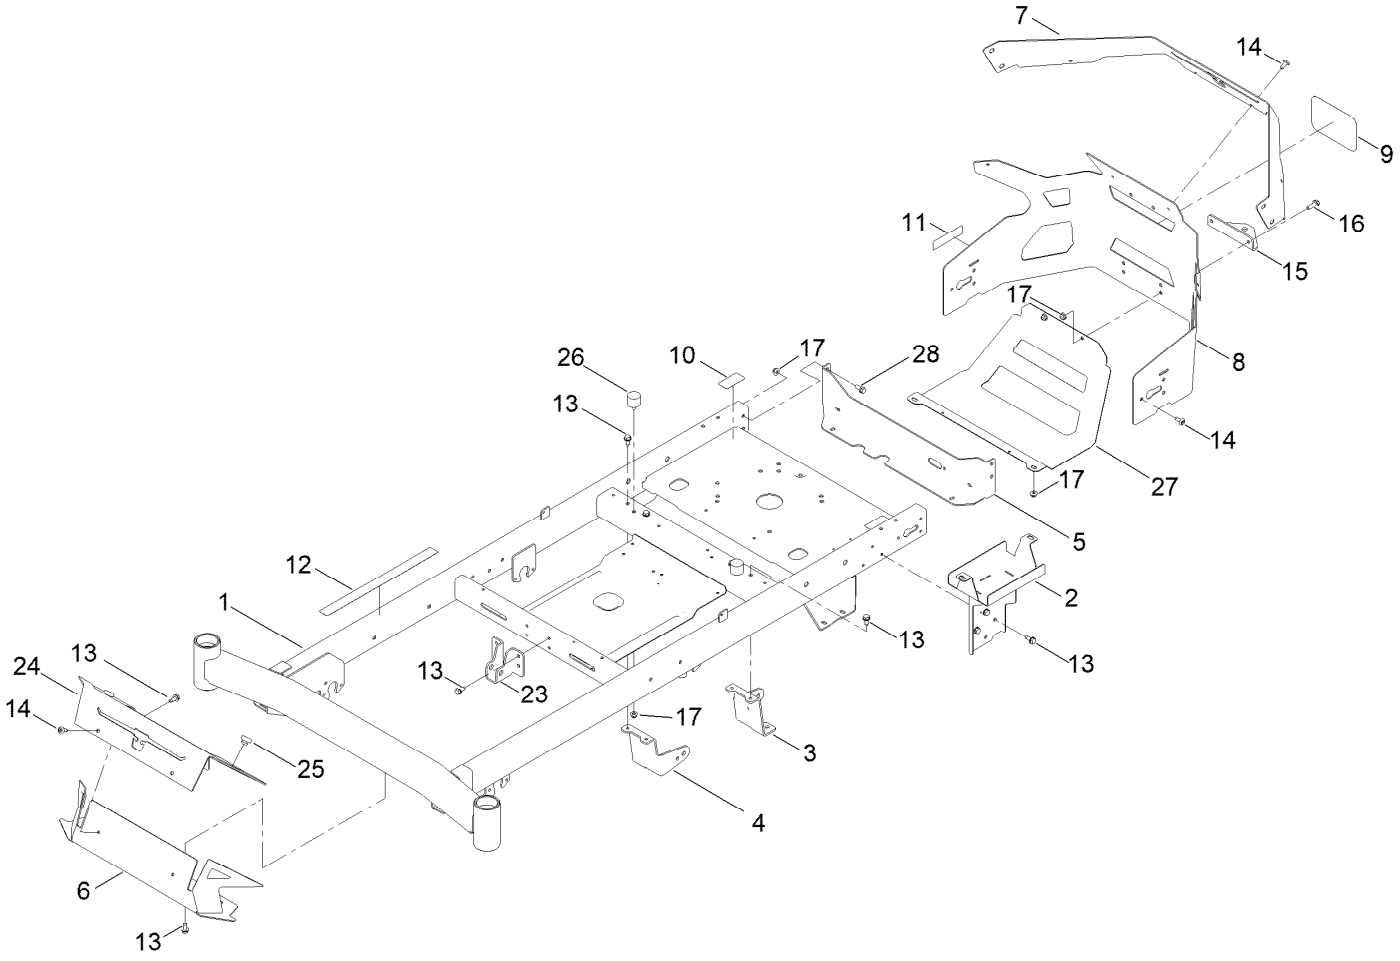

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-8723	1	*obs* Service ASM-Frame, Tc
2	145-6283-01	1	Wa-Battery Mount
3	145-6306-01	1	Mount-Drive, LH
4	145-6307-01	1	Mount-Drive, RH
5	147-8709-03	1	Plate-Mount
6	147-2966-03	1	Footrest-Top
7	147-2995-01	1	Plate-Rear Cladding Tc
8	147-2994-03	1	Guard-Engine Tc
9	99-4693	1	Decal
10	161-6207	2	Decal-Bypass
11	142-5864	1	Decal-Spark Arrester
12	144-5288	1	Decal-Warning
13	32144-70	15	Screw-HWHTF
14	138-9753	12	Screw
15	117-1232-03	1	Bracket-Hitch
16	139-2596	2	Screw-HHF
17	119-4041	10	Nut-HF
23	145-6323-01	1	Bracket-Mount Damper, Lower
24	147-2850-01	1	Plate-Kick, Mr
25	140-3460	2	Bumper-Rubber
26	137-4803	2	Bumper-Rubber
27	147-7717-03	1	Guard-Muffler [black]
28	139-2598	4	Screw-HHF

Decklift Assembly

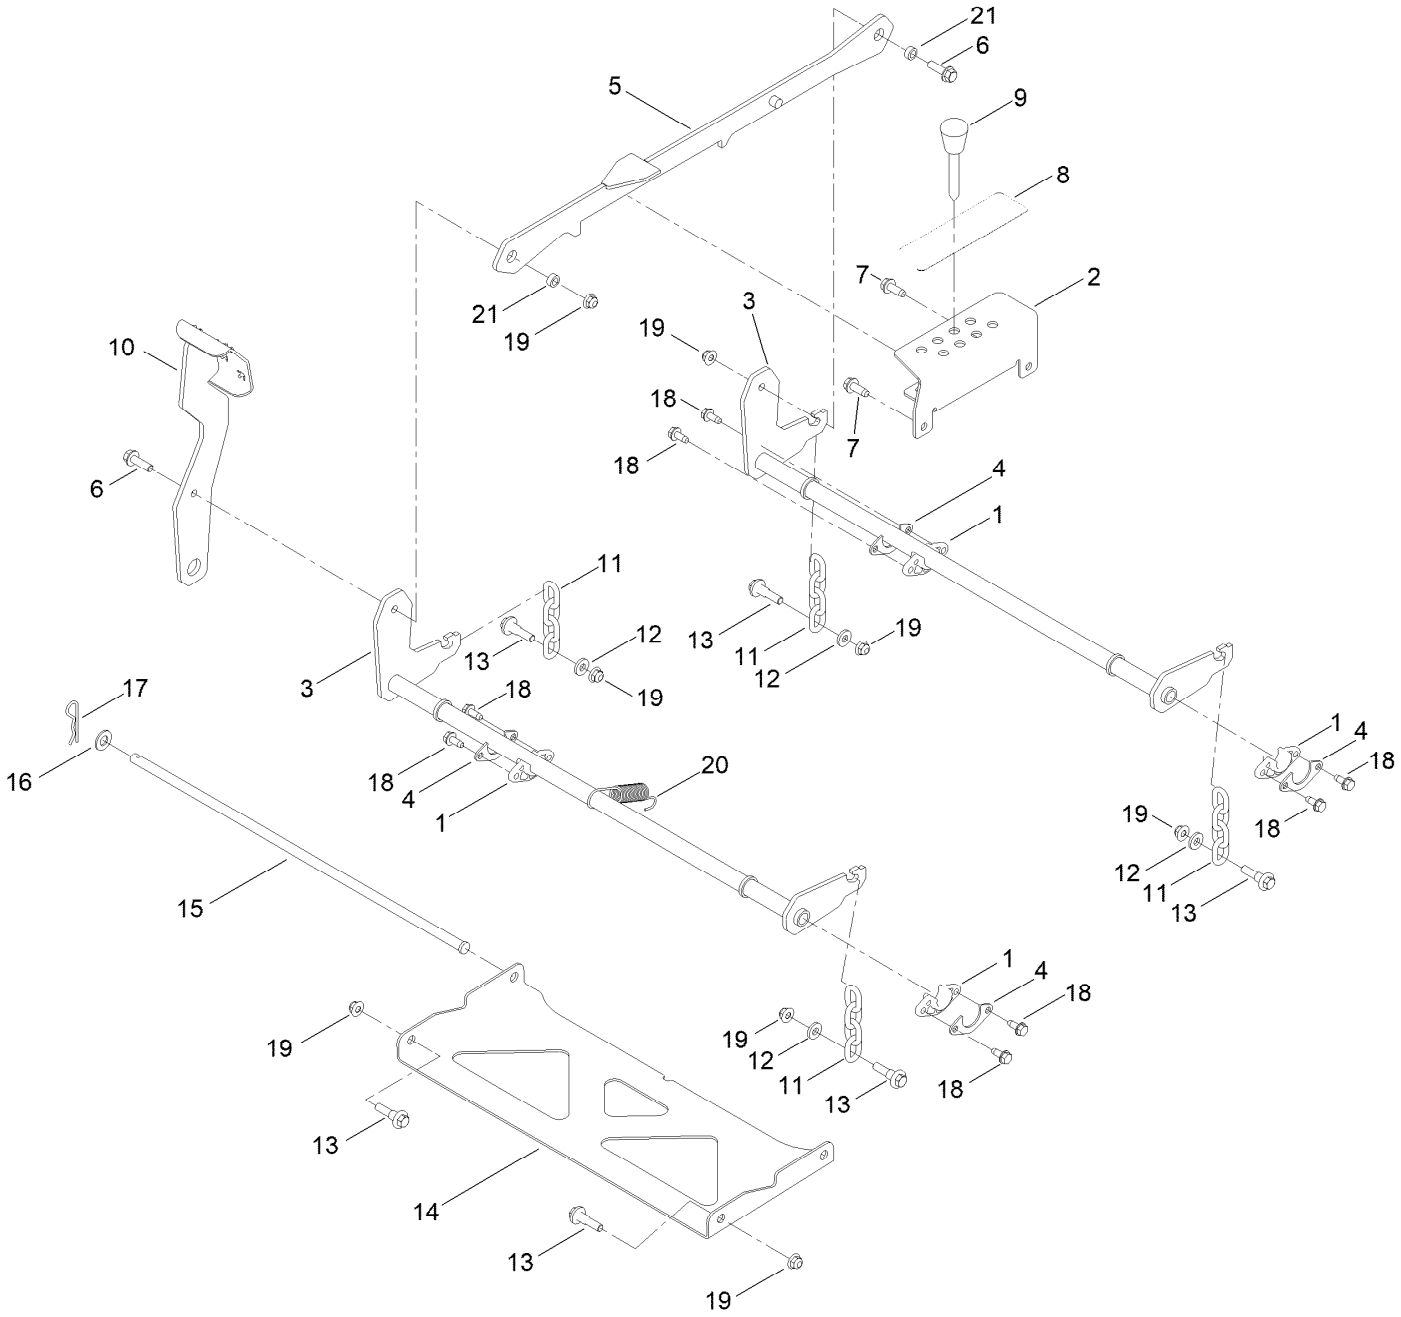

Decklift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-5872	4	Bearing-Flange
2	145-6257-01	1	Bracket-HOC
3	145-4645-01	2	Pivot ASM-Decklift [red]
4	138-7204	4	Gusset-Deck Lift
5	145-0557-01	1	Link ASM-HOC [red]
6	119-4061	2	Screw-HHF
7	139-2428	2	Screw-HWH
8	147-2866	1	Decal-HOC, Tc
9	140-2146	1	HOC Pin ASM
10	145-6278-01	1	Pedal ASM [red]
11	138-7205	4	Chain-Decklift, 4-Link
12	138-7207	4	Spacer-Hub, Blower
13	130-0742	6	Bolt-Shoulder
14	145-6248-03	1	Pan-Deck Pivot
15	145-6288	1	Pin-Deck
16	139-2611	1	Washer-Flat
17	139-2562	1	Pin-Hair
18	32144-70	8	Screw-HWHTF
19	119-4042	8	Nut-HF, NI
20	138-7206	1	Spring-Extension
21	140-2093	2	Spacer

Caster Wheel Assembly

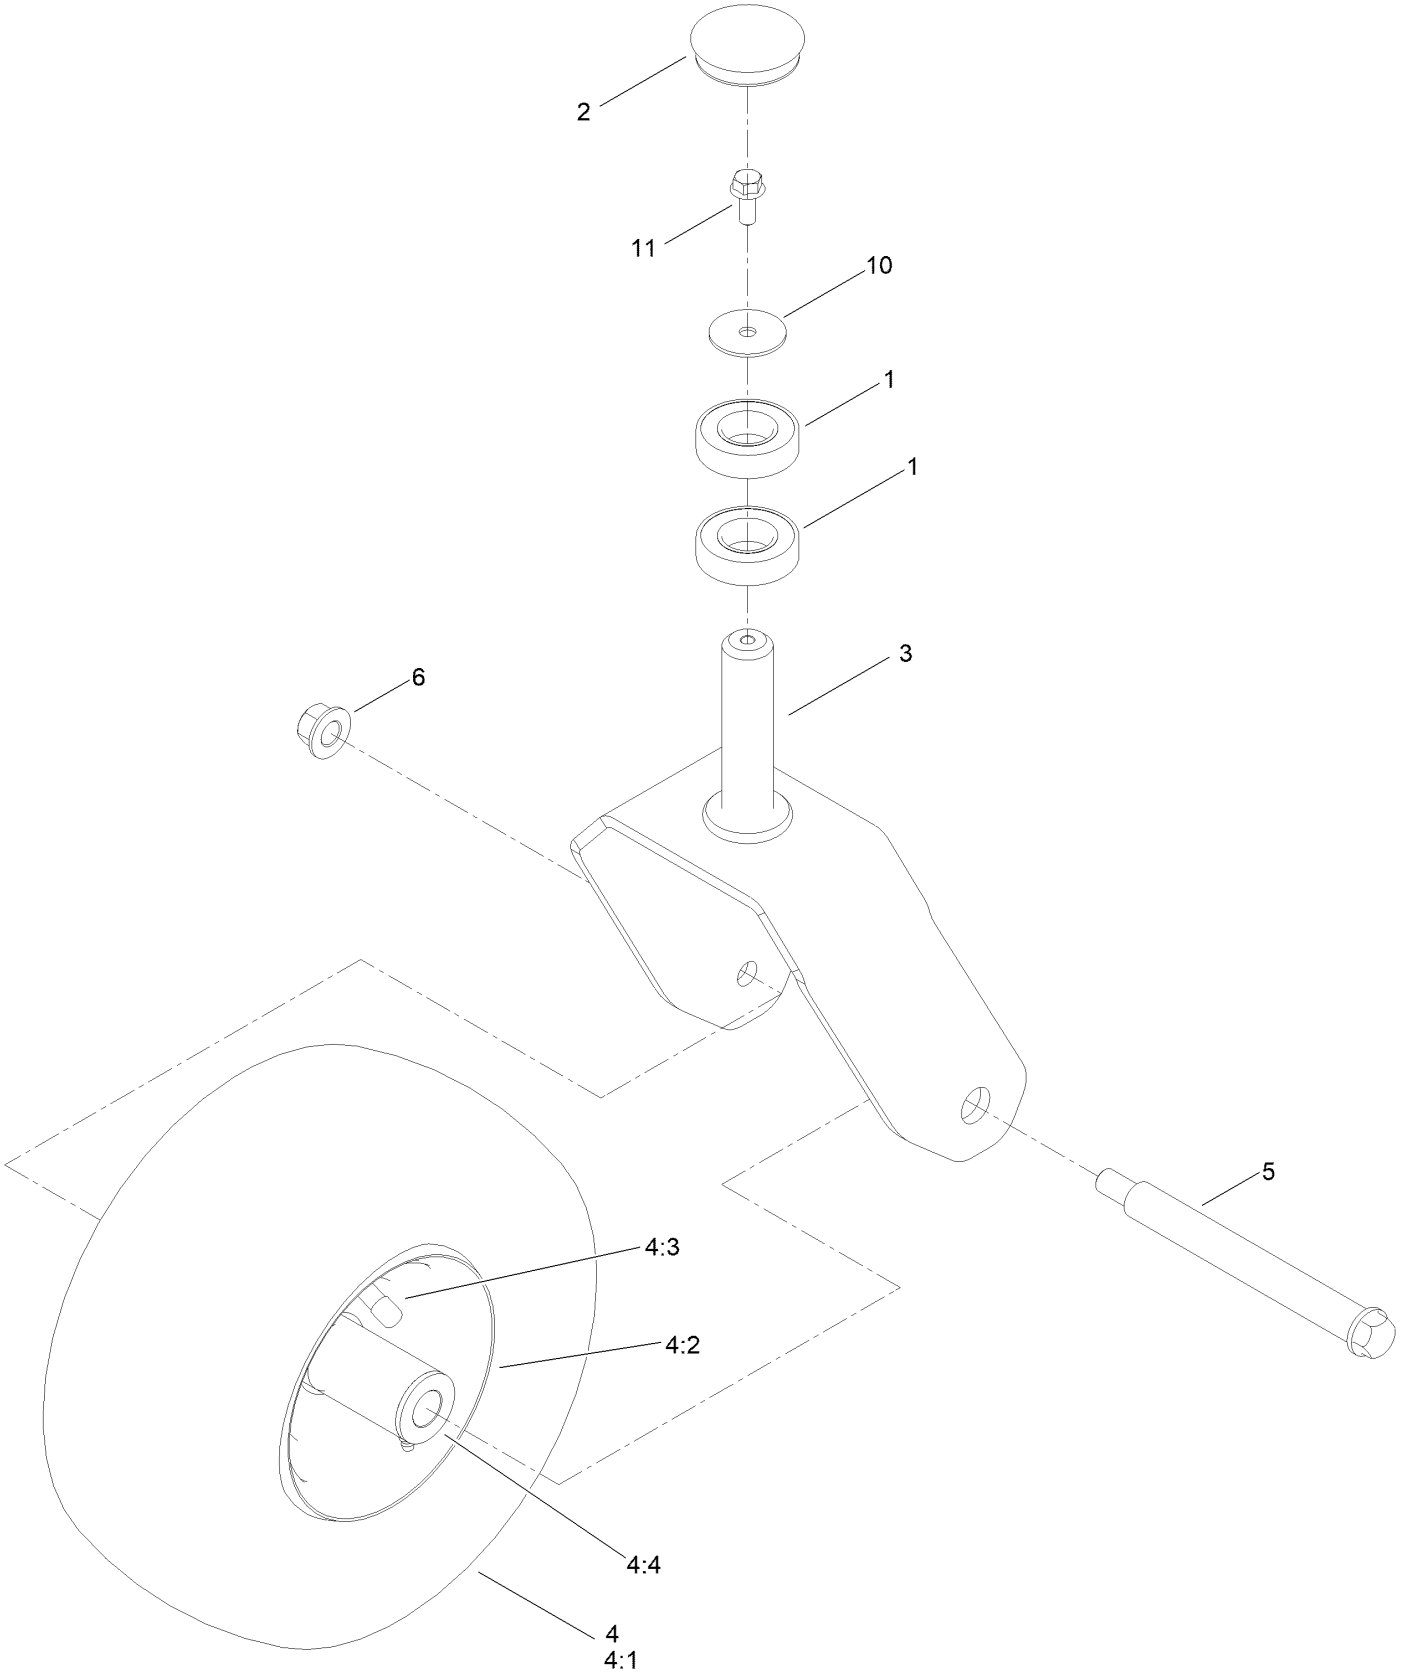

Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	109-3678	4	Bearing-Ball
2	144-0375	2	Cap-Grease
3	145-4674-01	2	Fork
4	145-4692	2	Wheel ASM - Caster 12X6-5
4:1	145-4672	1	Tire 12X6-5
4:2	145-4673	1	Wheel (W/ Zerk And Bushings)
4:3	232-27	1	Stem-Valve
4:4	114-1640	2	Bushing-Flange
5	145-4649	2	Screw-Shoulder HHF
6	99-5107	2	Nut-HF Nylock
10	115-1151	2	Washer-Flat
11	100-1668	2	Screw-HHF

Traction Drive Assembly

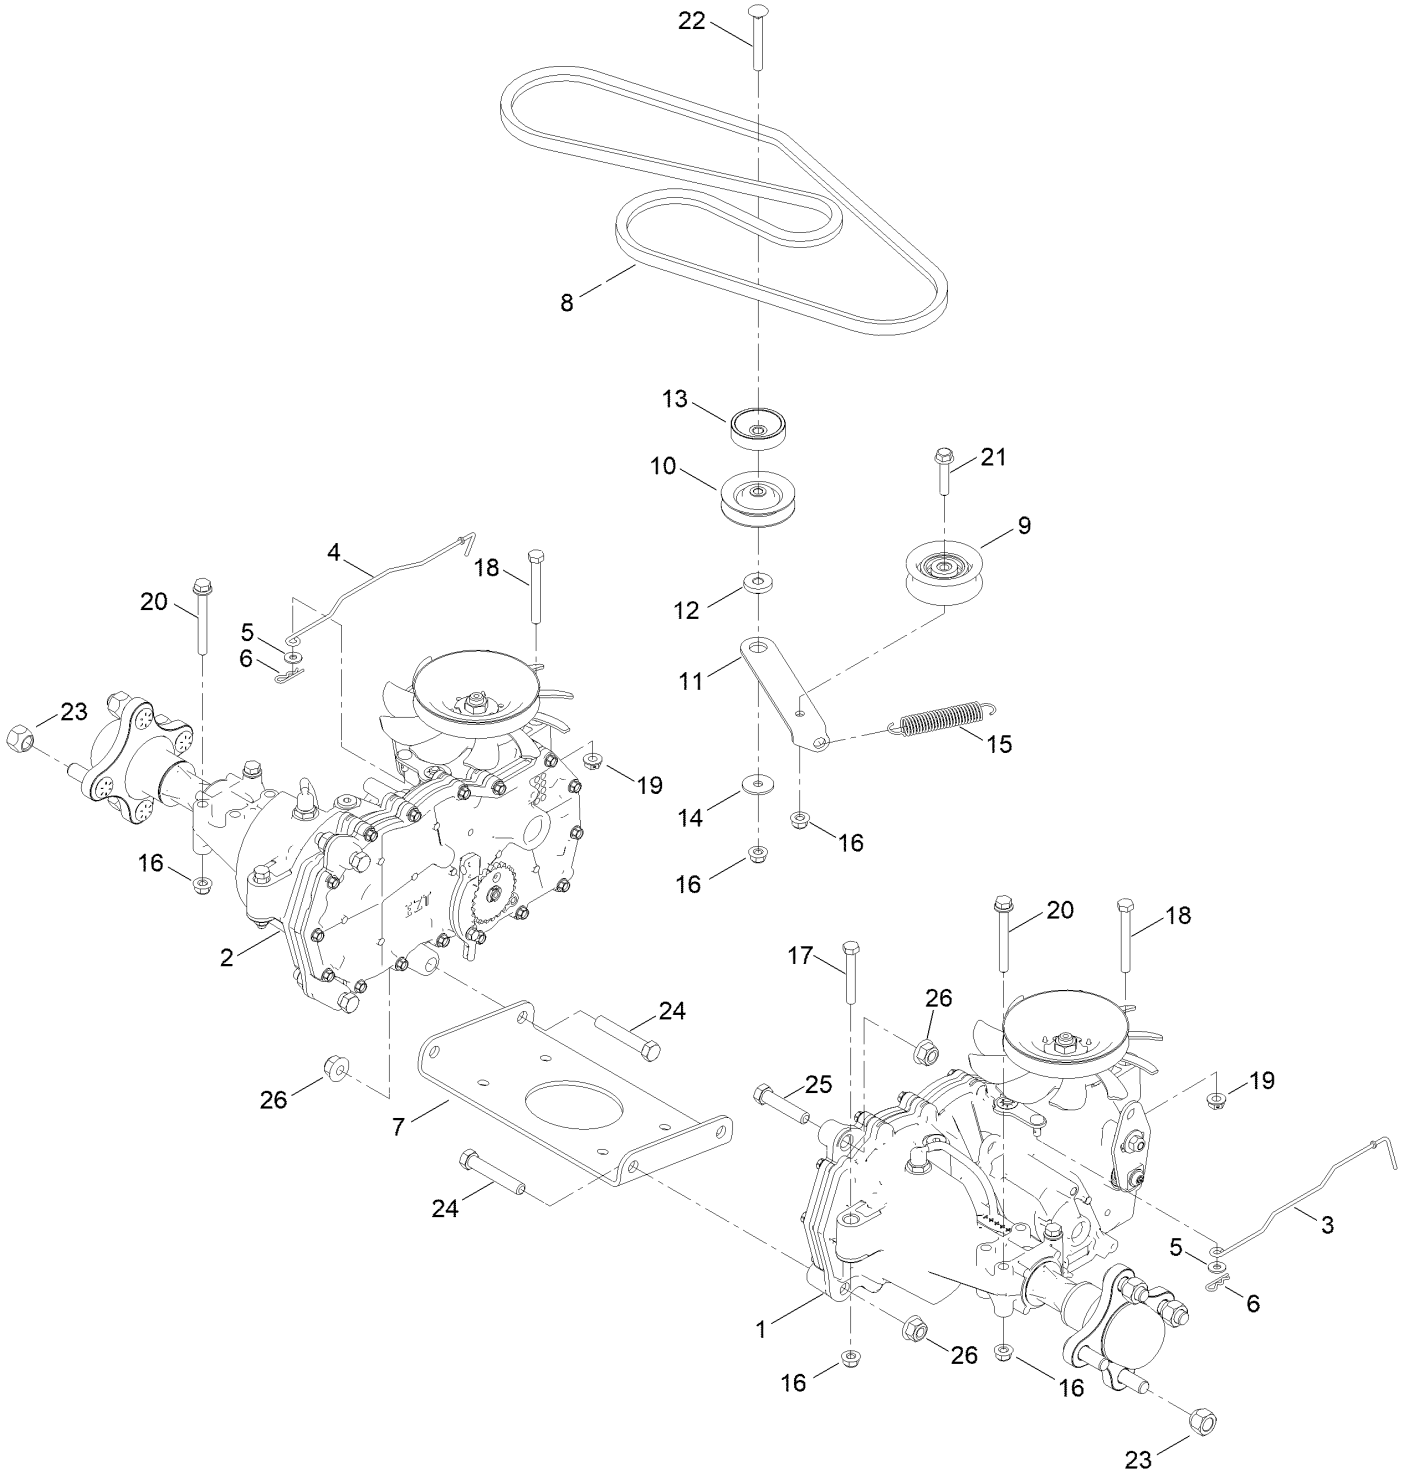

Traction Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-7470	1	LH Hydro Transaxle ASM
2	139-7471	1	RH Hydro Transaxle ASM
3	147-2988	1	Rod-Bypass, LH
4	147-2989	1	Rod-Bypass, RH
5	119-8952	2	Washer-Spcl
6	3290-307	2	Pin-Cotter
7	145-6390-03	1	Plate-Cross Hydro
8	145-6361	1	V-Belt (A Sec 63.8 El)
9	138-7597	1	Pulley-Idler, Flat
10	68-0030	1	Idler
11	147-2925	1	Arm-Idler
12	138-7277	1	Spacer-Arm, Idler
13	138-9809	1	Spacer
14	5-4460	1	Washer-Pivot
15	137-7040	1	Spring-Return, Pedal
16	104-8300	8	Nut-HF, NI
17	322-11	2	Screw-HH
18	145-6388	2	Screw-HH Spcl
19	139-2574	2	Nut-HF
20	138-7590	4	Screw-HHF
21	115-1794	1	Screw-HHF
22	3230-8	1	Screw-CARR
23	242-50	8	Nut-Lug
24	324-10	4	Screw-HH
25	324-8	2	Screw-HH
26	114-8417	6	Nut-HF, NI

LH Transaxle Assembly No. 139-7470

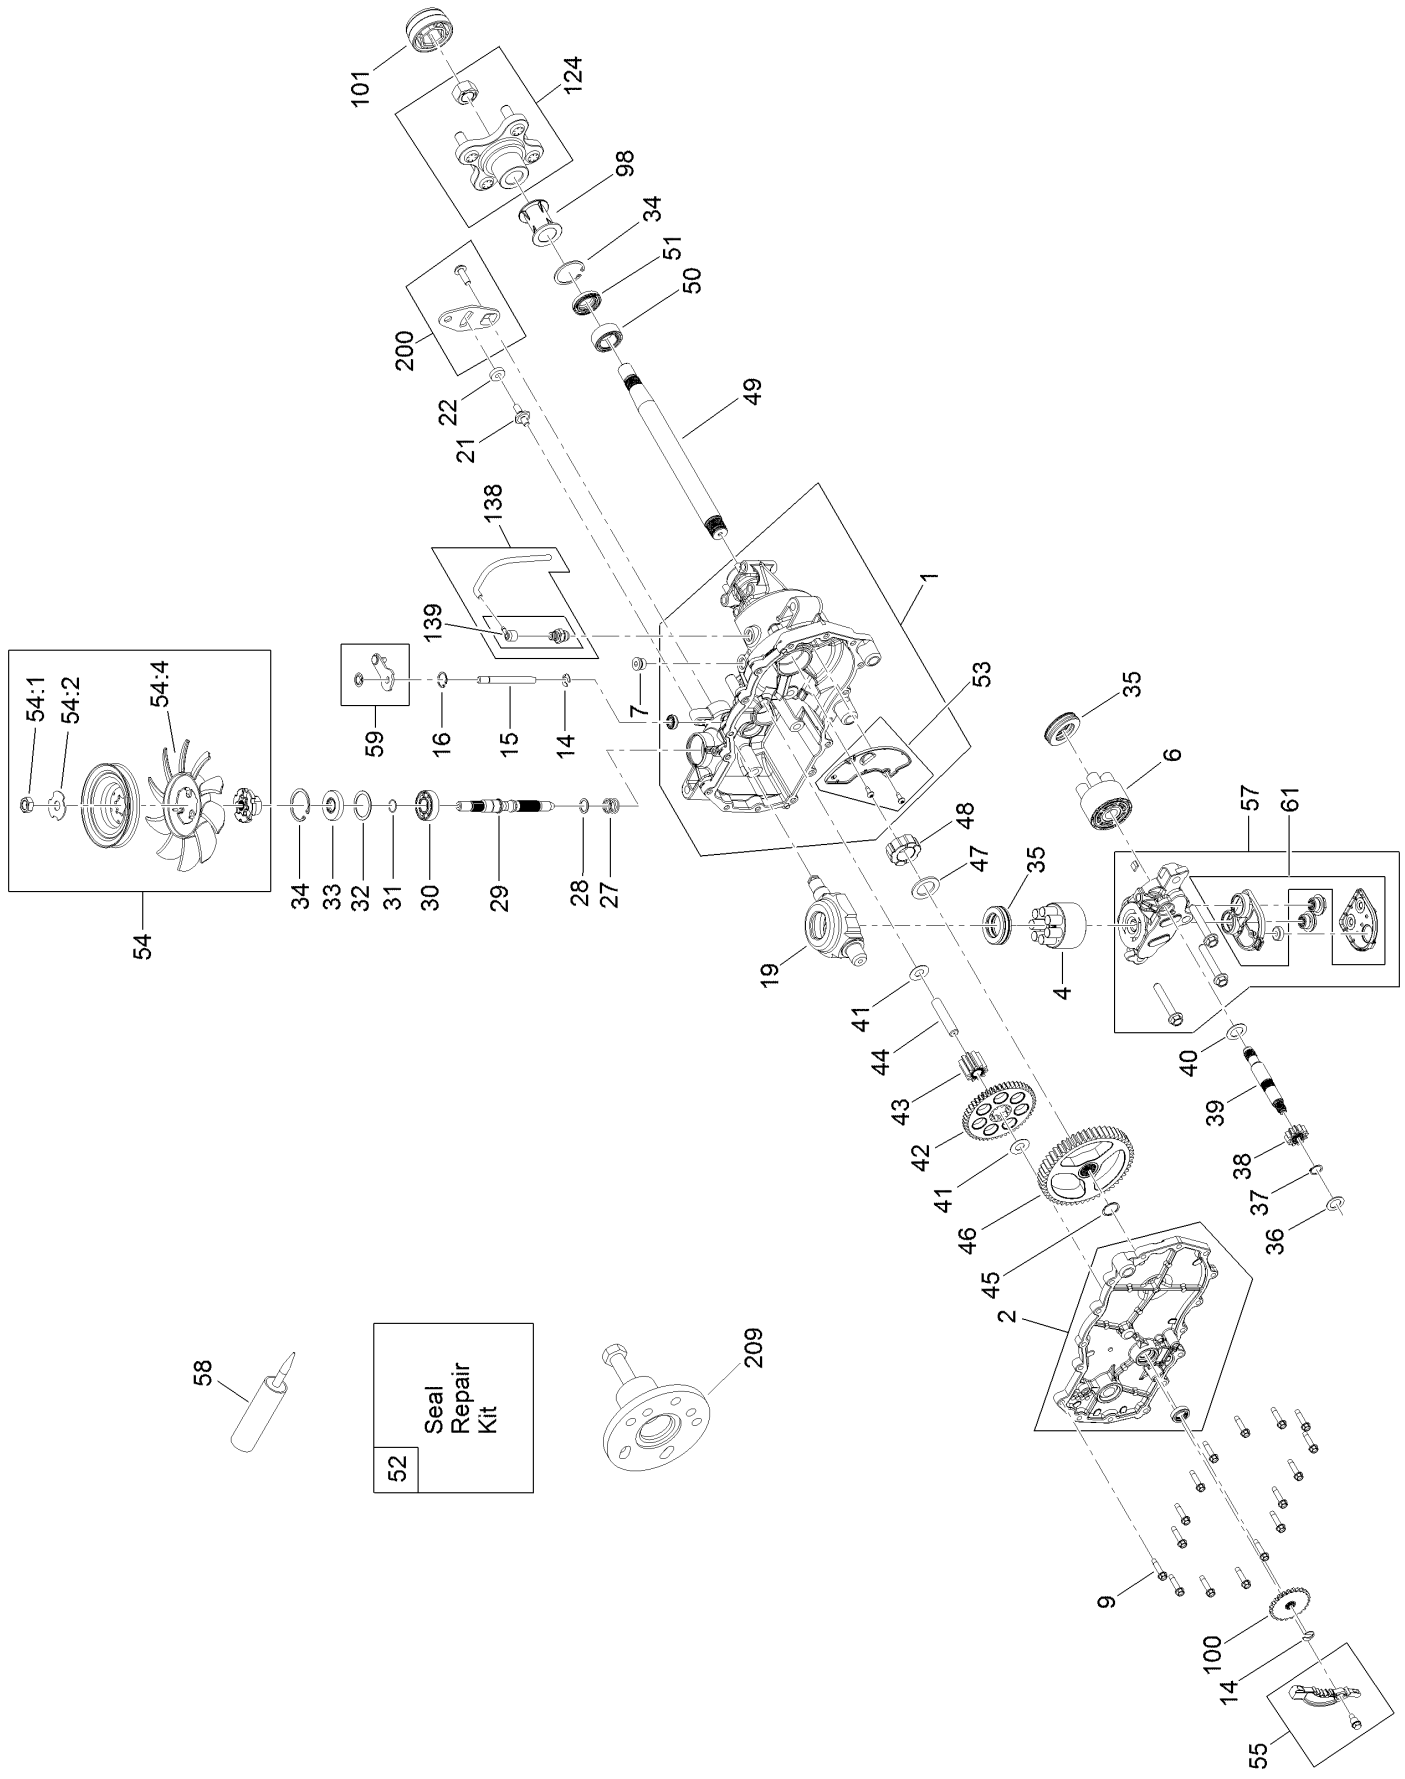

LH Transaxle Assembly No. 139-7470 (continued)

Ref.	Part Number	Qty.	Description
1	106-8695	1	Main Housing ASM
2	106-8696	1	Side ASM
4	110-8561	1	Pump Block ASM
6	103-2666	1	Cylinder Block Kit
7	104-2189	1	Plug-Thread, Straight
9	117-5359	16	Screw-HHF
14	106-8677	2	Ring-Retaining, External
15	106-8678	1	Rod-Bypass
16	106-8679	1	Ring-Retaining, Internal
19	104-5304	1	Swashplate-Trunnion
21	104-2116	1	Stud
22	112-9853	1	Puck-Friction
27	94-1936	1	Spring-Block
28	94-1937	1	Washer-Thrust
29	104-5306	1	Shaft-Input
30	104-5311	1	Bearing-Ball
31	104-5307	1	Ring-Retaining
32	104-5308	1	Spacer
33	104-5310	1	Seal-Lip
34	104-5309	2	Ring-Retaining
35	94-6922	2	Bearing-Thrust
36	104-5339	1	Washer-Flat
37	104-5340	1	Ring-Retaining
38	132-0912	1	Gear-12T
39	106-8683	1	Shaft-Motor
40	104-5360	1	Washer
41	94-1933	2	Washer
42	132-0911	1	Gear-49T
43	104-5318	1	Gear-Jackshaft, 10T
44	104-5329	1	Pin-Jackshaft
45	112-9854	1	Ring-Spiral, Retaining
46	112-9855	1	Gear-52T, Bull
47	112-9856	1	Washer
48	112-9857	1	Bearing-Sleeve
49	120-7104	1	Shaft-Axle
50	112-9859	1	Bushing-Axle
51	112-9860	1	Seal-Lip
52	106-8686	1	Seal Kit
53	106-8697	1	Expansion Plate Kit
54	135-7349	1	Fan And Pulley Kit
54:1	116-9714	1	Nut-HJ
54:2	116-9708	1	Washer-Slotted
54:4	135-7364	1	Fan 7.0 X 10 Blade
55	106-8688	1	Brake Arm Kit
57	112-9861	1	Center Section Filter Kit
59	120-5549	1	Bypass Kit
61	114-1634	1	Filter Kit
98	120-7109	1	Tube-Axle
100	106-8694	1	Disc-Brake, Cog
101	115-5057	1	Cover-Nut, Axle
124	109-5939	1	Hub Kit
138	112-9866	1	Breather Kit
139	114-1635	1	Breather ASM
200	117-5362	1	Control Arm Kit
209	114-8467	1	Puller-Hub, 4 Bolt

RH Transaxle Assembly No. 139-7471

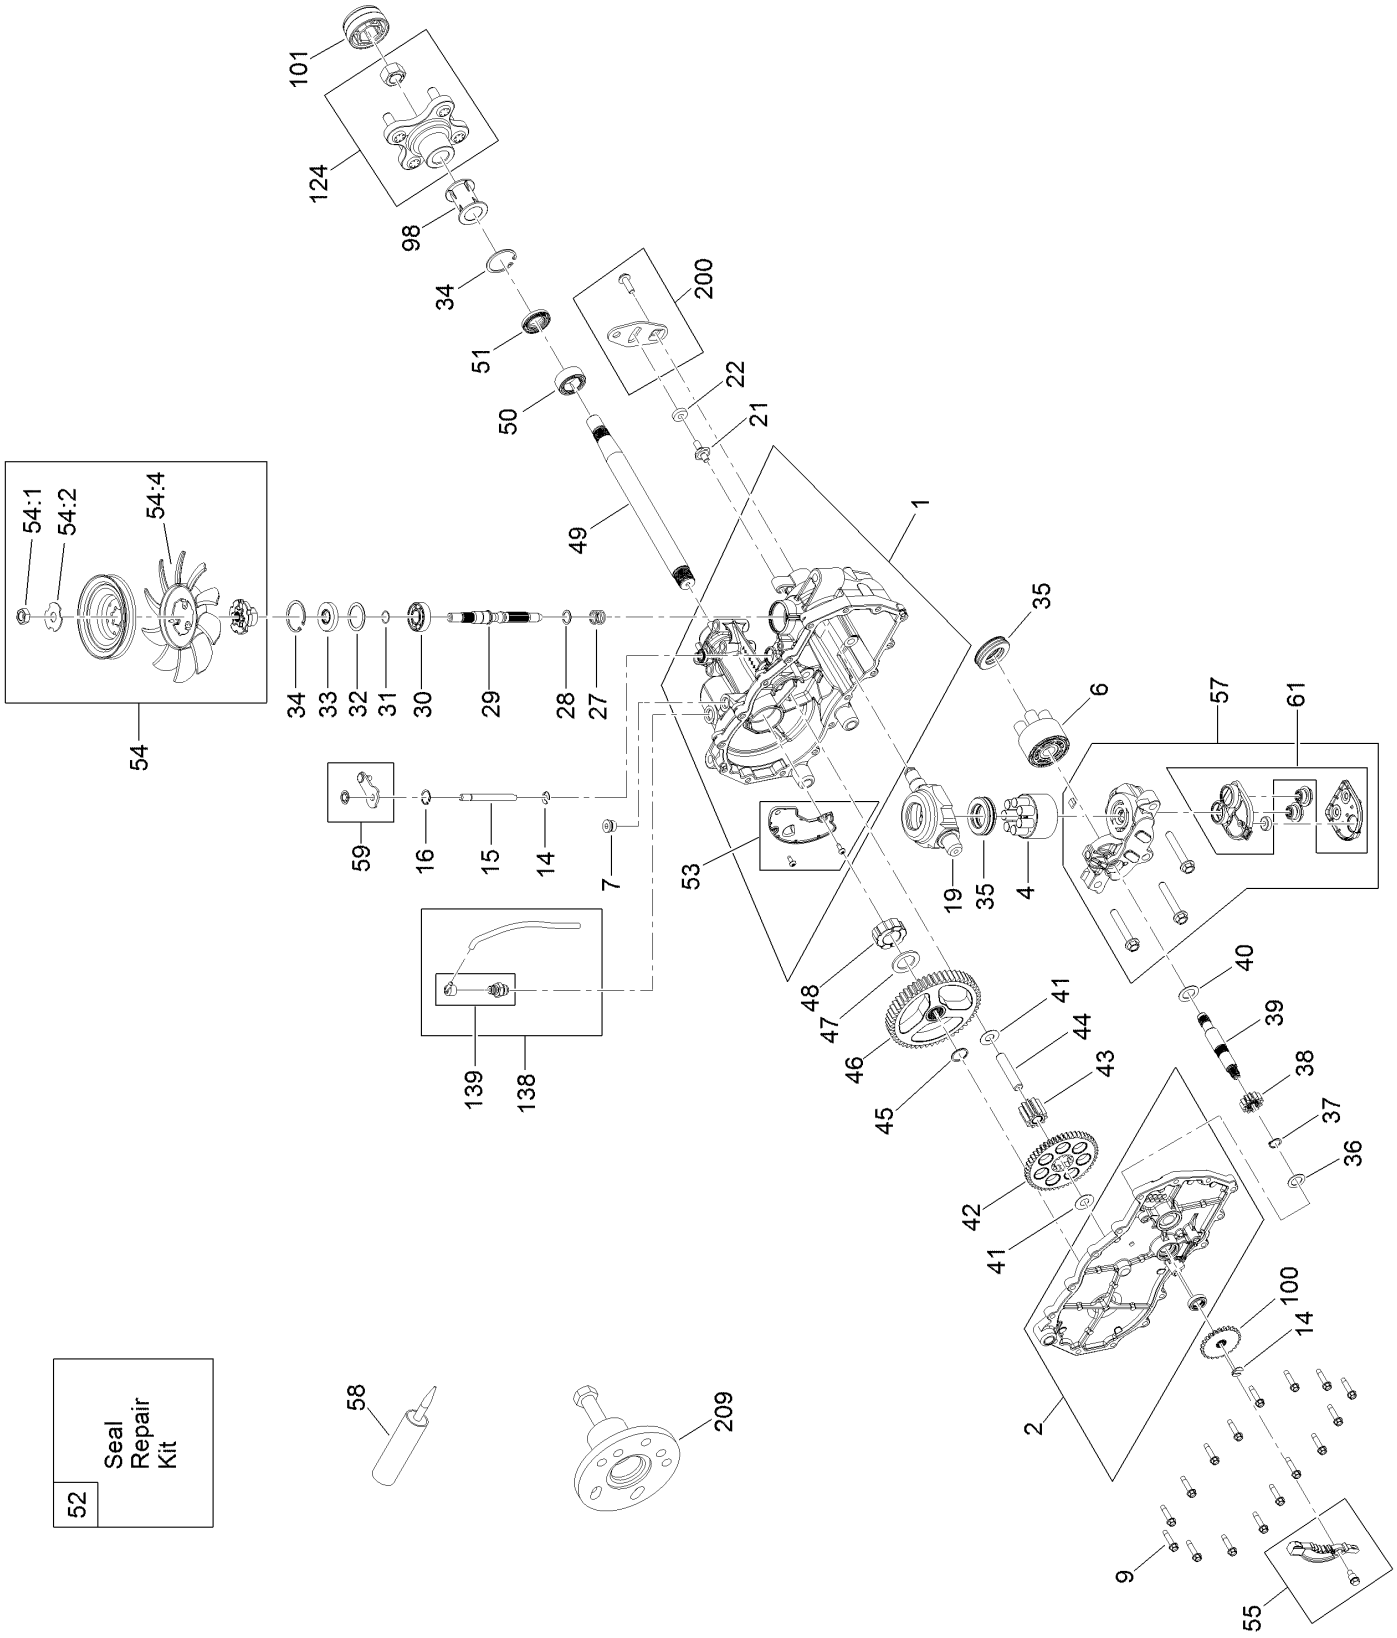

RH Transaxle Assembly No. 139-7471 (continued)

Ref.	Part Number	Qty.	Description
1	106-8674	1	Main Housing ASM
2	106-8675	1	Side ASM
4	110-8561	1	Pump Block ASM
6	103-2666	1	Cylinder Block Kit
7	104-2189	1	Plug-Thread, Straight
9	117-5359	16	Screw-HHF
14	106-8677	2	Ring-Retaining, External
15	106-8678	1	Rod-Bypass
16	106-8679	1	Ring-Retaining, Internal
19	104-5304	1	Swashplate-Trunnion
21	104-2116	1	Stud
22	112-9853	1	Puck-Friction
27	94-1936	1	Spring-Block
28	94-1937	1	Washer-Thrust
29	104-5306	1	Shaft-Input
30	104-5311	1	Bearing-Ball
31	104-5307	1	Ring-Retaining
32	104-5308	1	Spacer
33	104-5310	1	Seal-Lip
34	104-5309	2	Ring-Retaining
35	94-6922	2	Bearing-Thrust
36	104-5339	1	Washer-Flat
37	104-5340	1	Ring-Retaining
38	132-0912	1	Gear-12T
39	106-8683	1	Shaft-Motor
40	104-5360	1	Washer
41	94-1933	2	Washer
42	132-0911	1	Gear-49T
43	104-5318	1	Gear-Jackshaft, 10T
44	104-5329	1	Pin-Jackshaft
45	112-9854	1	Ring-Spiral, Retaining
46	112-9855	1	Gear-52T, Bull
47	112-9856	1	Washer
48	112-9857	1	Bearing-Sleeve
49	120-7104	1	Shaft-Axle
50	112-9859	1	Bushing-Axle
51	112-9860	1	Seal-Lip
52	106-8686	1	Seal Kit
53	106-8687	1	Expansion Plate Kit
54	135-7349	1	Fan And Pulley Kit
54:1	116-9714	1	Nut-HJ
54:2	116-9708	1	Washer-Slotted
54:4	135-7364	1	Fan 7.0 X 10 Blade
55	106-8688	1	Brake Arm Kit
57	112-9862	1	Center Section Filter Kit
59	107-2489	1	Bypass Arm Kit
61	114-1634	1	Filter Kit
98	120-7109	1	Tube-Axle
100	106-8694	1	Disc-Brake, Cog
101	115-5057	1	Cover-Nut, Axle
124	109-5939	1	Hub Kit
138	112-9866	1	Breather Kit
139	114-1635	1	Breather ASM
200	117-5362	1	Control Arm Kit
209	114-8467	1	Puller-Hub, 4 Bolt

Brake Assembly

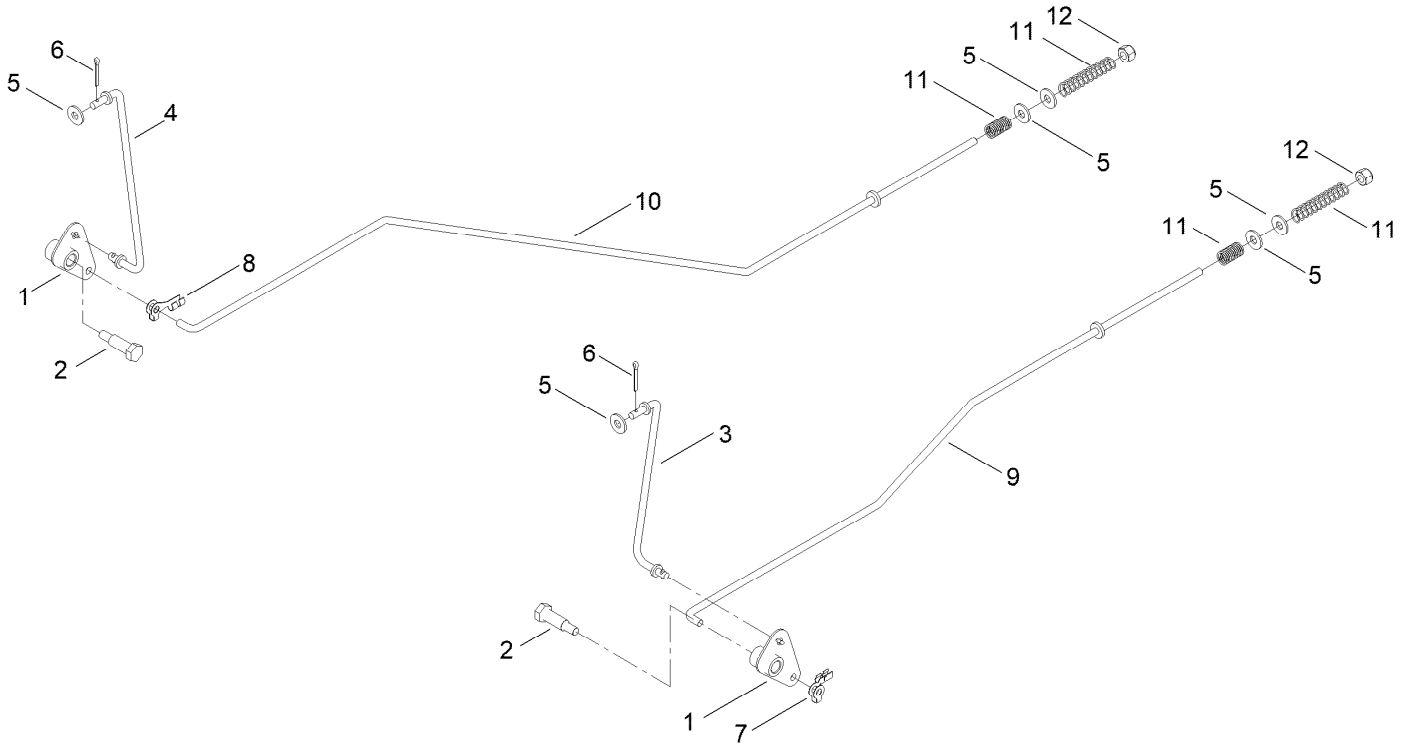

Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	144-1858	2	Bellcrank
2	145-6364	2	Bolt-Shoulder
3	145-4607	1	Link-Brake, LH
4	145-6238	1	Link-Brake, RH
5	119-8952	6	Washer-Spcl
6	120-9716	2	Pin-Cotter
7	144-1816	1	Clip-Rod, LH (7L, 1/4In)
8	144-1815	1	Clip-Rod, RH (7R, 1/4In)
9	144-1860	1	Rod-Brake, LH
10	144-1851	1	Rod-Brake, RH
11	117-1169	4	Spring-Compression
12	3296-42	2	Nut-Lock, NI

Tire Assembly

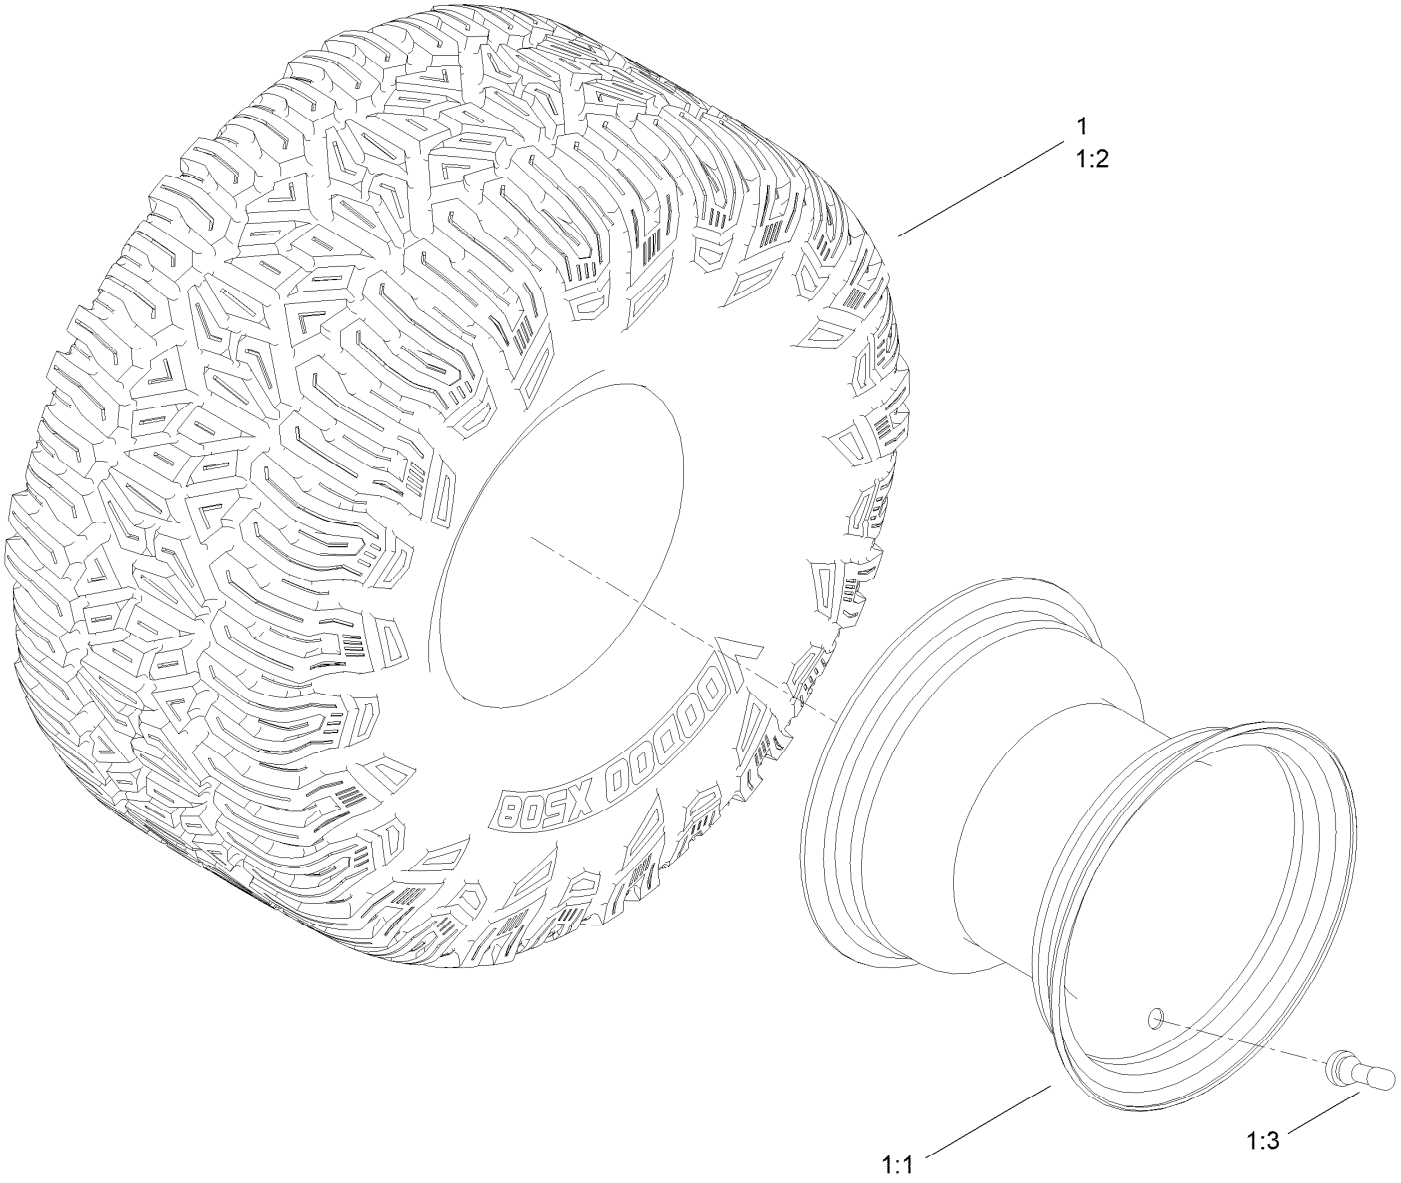

Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-6391	2	Tire ASM
1:1	147-5180	1	Rim
1:2	147-5179	1	Tire
1:3	232-27	1	Stem-Valve

Motion Control Assembly

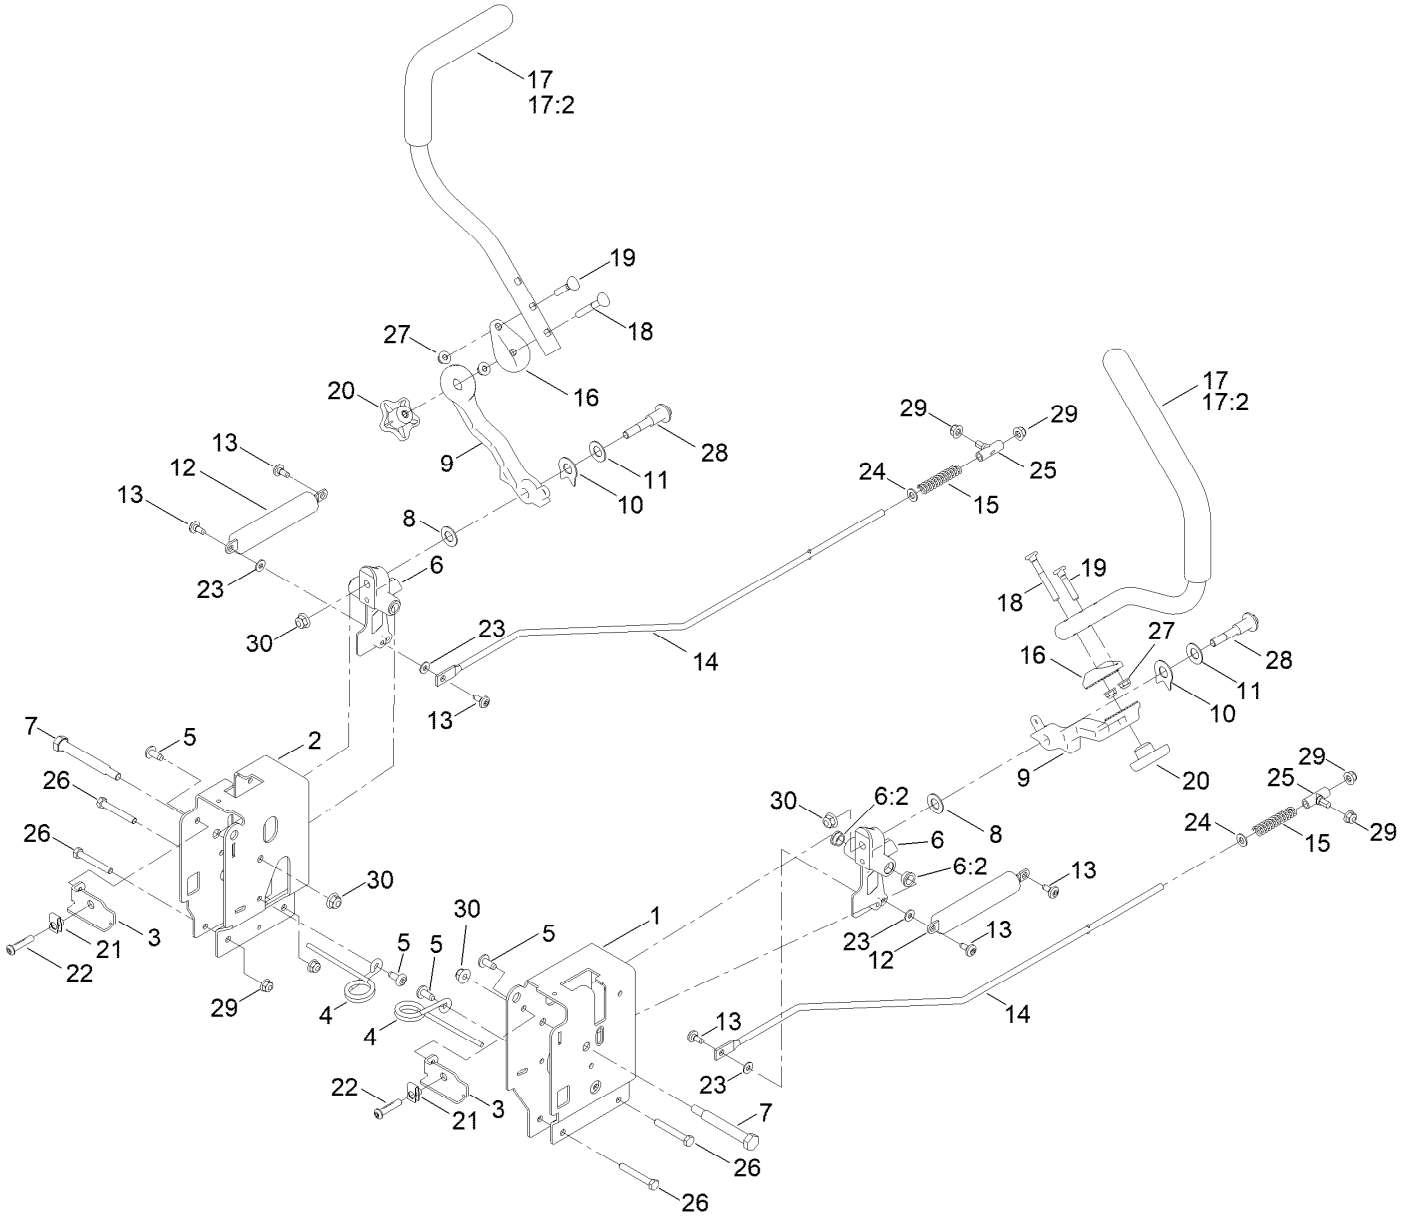

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-4615-03	1	Control Box - LH G7
2	145-4647-03	1	Control Box - RH G7
3	147-7580-03	2	Adjustment Plate-Control Box
4	145-6253	2	Spring-Torsion
5	138-9753	4	Screw
6	145-4648	2	Pivot Arm ASM
6:2	256-156	2	Bushing-Flange
7	115-5099	2	Bolt-Pivot
8	120-2273	2	Washer-Flat
9	147-5191-05	2	Arm-Control, 32 Teeth
10	142-8478	2	Spacer, Anti-Rotation
11	119-8925	2	Washer-Belleville
12	132-6853	2	Damper-Non Cavitating
13	120-7950	6	Screw-Torx
14	145-4699	2	Rod - Hydro, LH
15	138-7252	2	Spring-Compression
16	147-5192-05	2	Disc-Adjustment Handle, 32 Teeth
17	145-6327	2	Handle-Control,
17:2	147-3029	1	Grip
18	145-6366	2	Screw-Handle
19	137-3008	2	Screw-Handle
20	117-5976	2	Knob-Handle
21	112-3306	2	Nut
22	126-4299	2	Screw-HSBH
23	119-8952	4	Washer-Spcl
24	120-9683	2	Washer-Plain
25	138-7218	2	Mount-Rod, Hydro
26	120-9738	4	Screw-HH
27	138-8401	4	Nut-HF
28	117-1198	2	Bolt-Pivot
29	104-8300	8	Nut-HF, NI
30	104-8301	4	Nut-HF, NI

Engine and Muffler Assembly

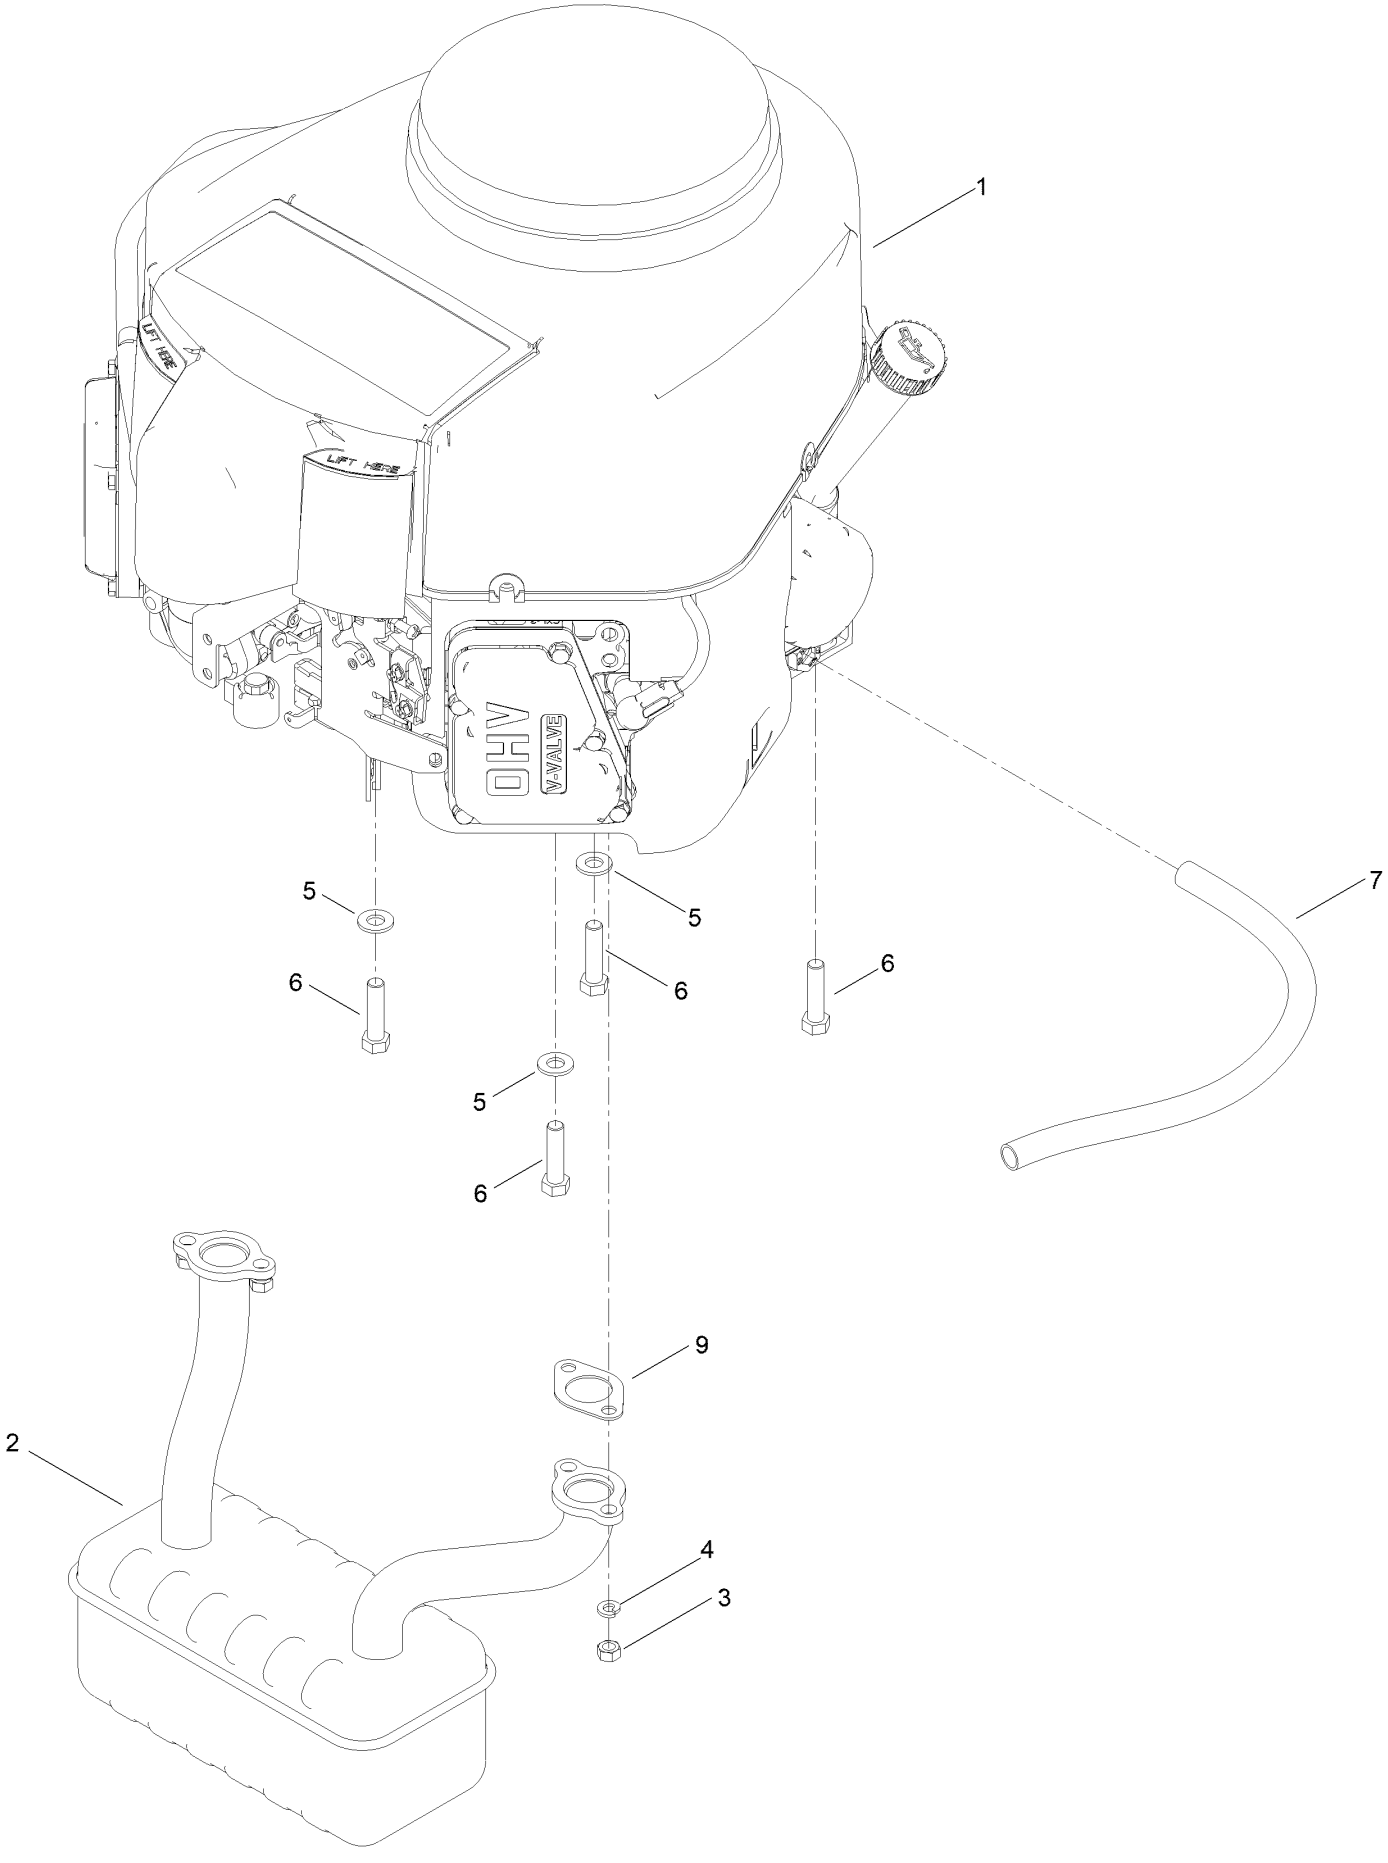

Engine and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fr691V-_s07-R ●■
2	139-5867	1	Muffler
3	114-3549	4	Nut
4	114-3550	4	Washer-Lock
5	3256-24	3	Washer-Plain
6	323-50	4	Bolt-HH
7	106-7022	1	Tube-Drain, Oil
9	1-653313	2	Gasket-Exhaust

● Not serviced separately

■ Obtain parts from www.kawpower.com

Fuel Pod Assembly

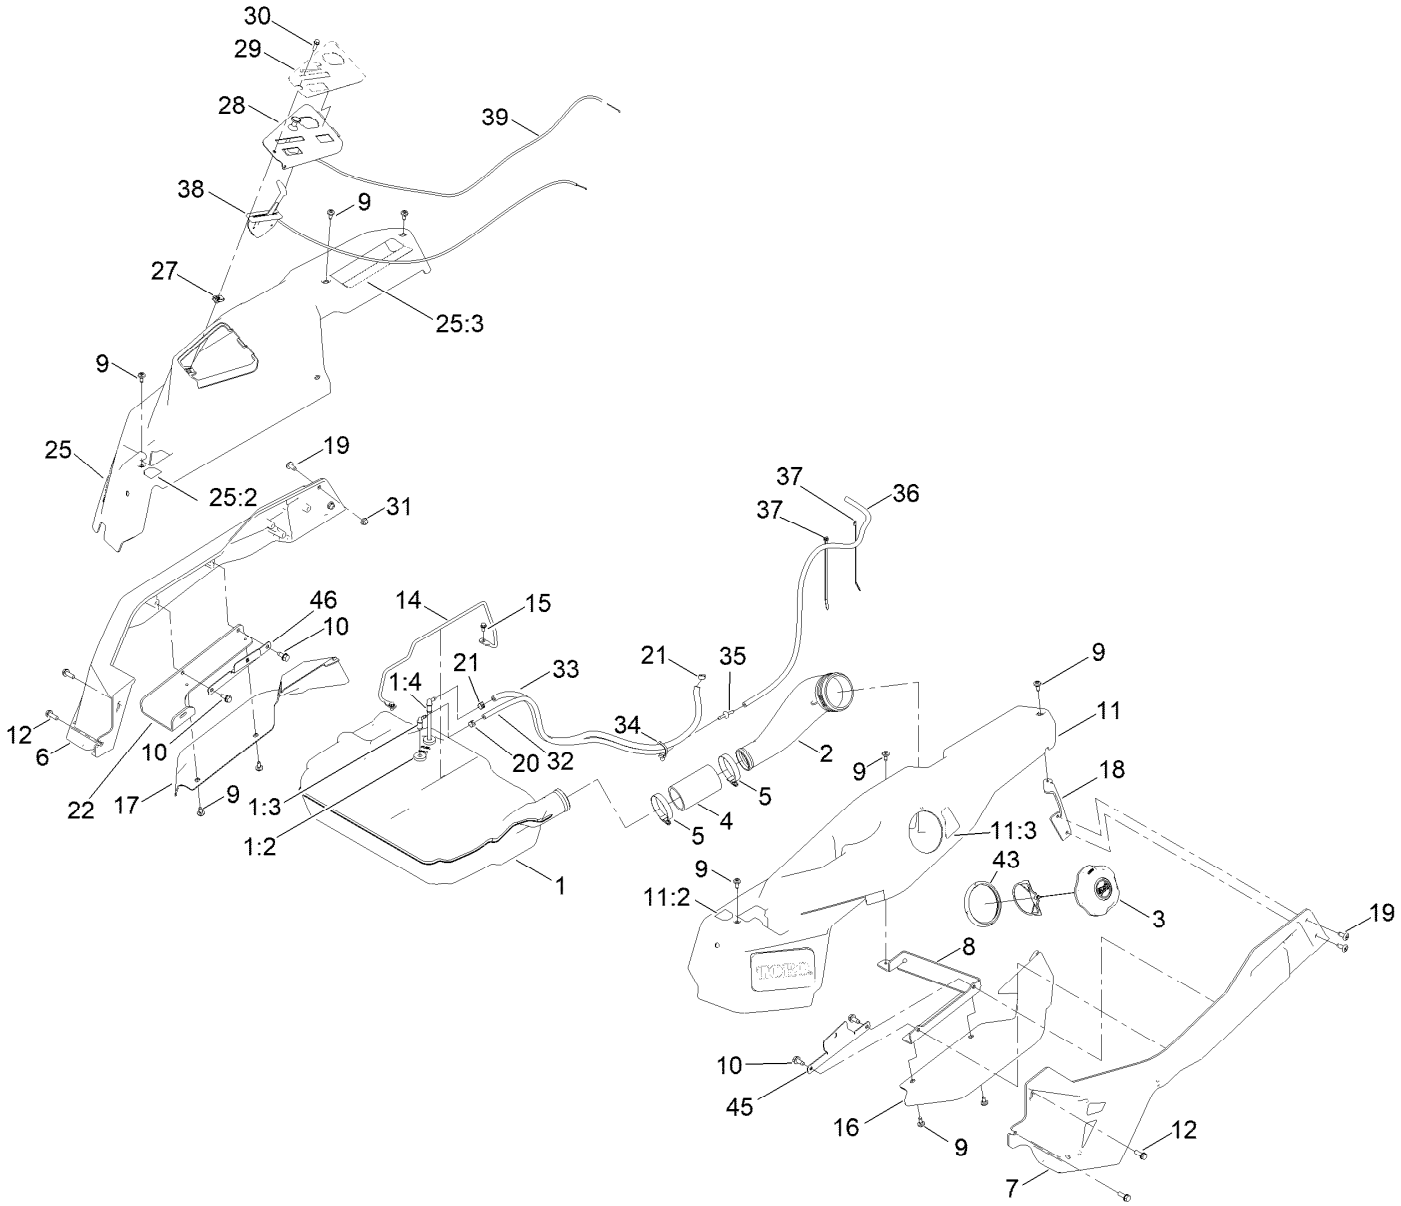

Fuel Pod Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-6304	1	Fuel Tank ASM
1:2	46-6560	2	Bushing
1:3	144-5302	1	Fitting-Elbow 90
1:4	147-2934	1	Fitting-Pickup, Fuel
2	147-7657	1	Neck-Filler, Fuel
3	137-4119	1	Cap-Fuel, Ratcheting
4	145-4698	1	Hose-Filler, Fuel
5	2412-130	2	Clamp-Hose
6	147-2973-01	1	Cast-Tube, RH
7	147-2972-01	1	Cast-Tube, LH
8	147-2974-03	1	Mount-Pod Bracket LH
9	120-7950	10	Screw-Torx
10	32144-70	4	Screw-HWHTF
11	147-8741	1	Pod ASM - LH W/Decals
11:2	139-2395	1	Decal-Control Lever, LH
11:3	147-2399	1	Decal-Fuel Fill
12	32144-41	4	Screw-Taptite
14	147-5176	1	Rod-Hold Down
15	32144-4	2	Screw-HWH
16	147-2978	1	Fender-Time Cutter, LH
17	147-2979	1	Fender-Time Cutter, RH
18	147-2976-03	1	Bracket-Rear Pod, LH
19	138-9753	4	Screw
20	2412-80	1	Clamp-Hose
21	2412-98	2	Clamp-Hose
22	147-5173-03	1	Bracket-Mr Spring
25	147-8744	1	Pod ASM - RH , Mr W/Decals
25:2	139-2394	1	Decal-Control Lever, RH
25:3	147-7574	1	Decal - Myride
27	107069	1	Clip
28	147-2990-03	1	Panel-Control
29	147-8753	1	Decal - Control Panel W/Out Hour Meter
30	32105-15	1	Screw-HWH
31	119-4041	2	Nut-HF
32	140-4956	1	Hose-Fuel
33	109-0275	1	Hose-Fuel
34	32180-030	1	Clip-Tie
35	144-1983	1	Adapter Orifice
36	108-6344	1	Hose-Fuel
37	614249	2	Tie-Cable
38	139-2403	1	Cable-Throttle
39	139-2402	1	Cable-Choke
43	147-7712	1	Ring-Retaining
45	161-4609-03	1	Bracket-Alignment, Pod LH
46	161-4611-03	1	Bracket- Alignment, Pod RH Mr

Electrical Assembly

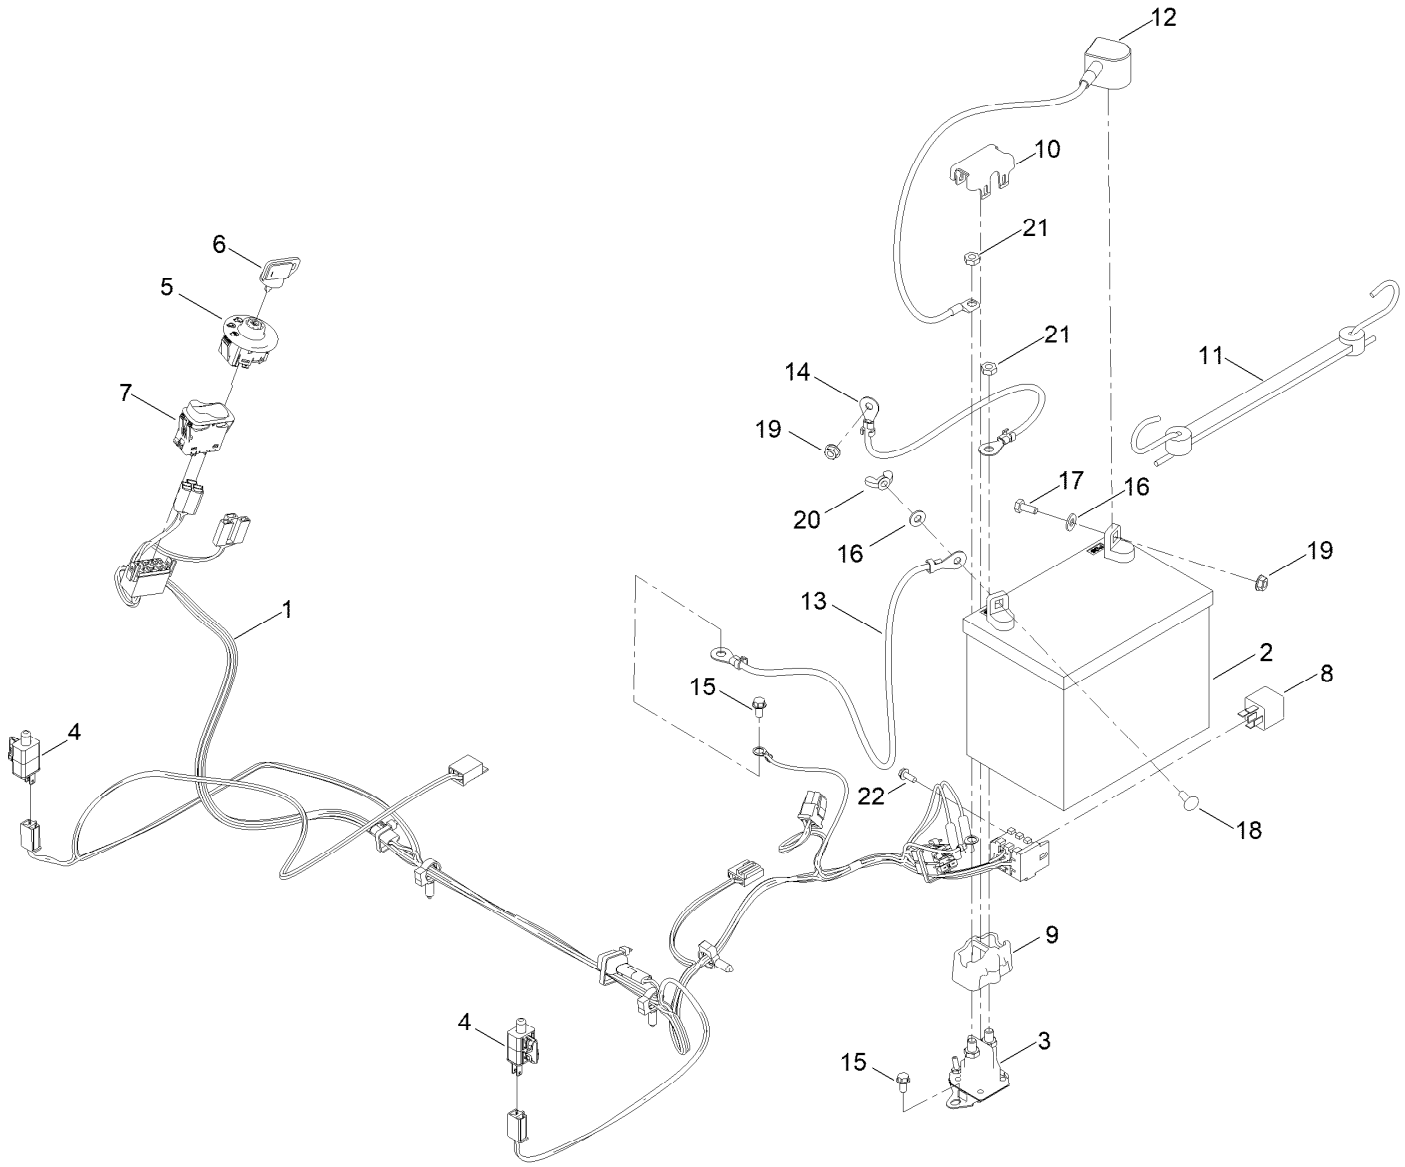

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-6382	1	Harness-Wire, Main
2	140-2076	1	Battery - Wet
3	117-1197	1	Solenoid
4	110-6765	2	Switch
5	137-4100	1	Switch-Ignition
6	63-8360	1	Key-Ignition
7	139-6368	1	Switch-Rocker, On-None-On
8	1-643275	1	Relay
9	140-2080	1	Cover-Solenoid
10	140-2081	1	Cap-Solenoid
11	104-2466	1	Holddown-Battery
12	147-2941	1	Cable-Battery,Red
13	119-8899	1	Cable-Battery, Black
14	121-0711	1	Cable-Battery, Positive
15	32144-4	2	Screw-HWH
16	3256-22	2	Washer-Flat
17	321-3	1	Screw-HH
18	3229-1	1	Screw-CARR
19	32128-33	2	Nut-HF
20	32103-22	1	Nut-Wing
21	3220-2	2	Nut-Hex Jam
22	139-1713	1	Screw-Thd Roll

50in Deck and Decal Assembly

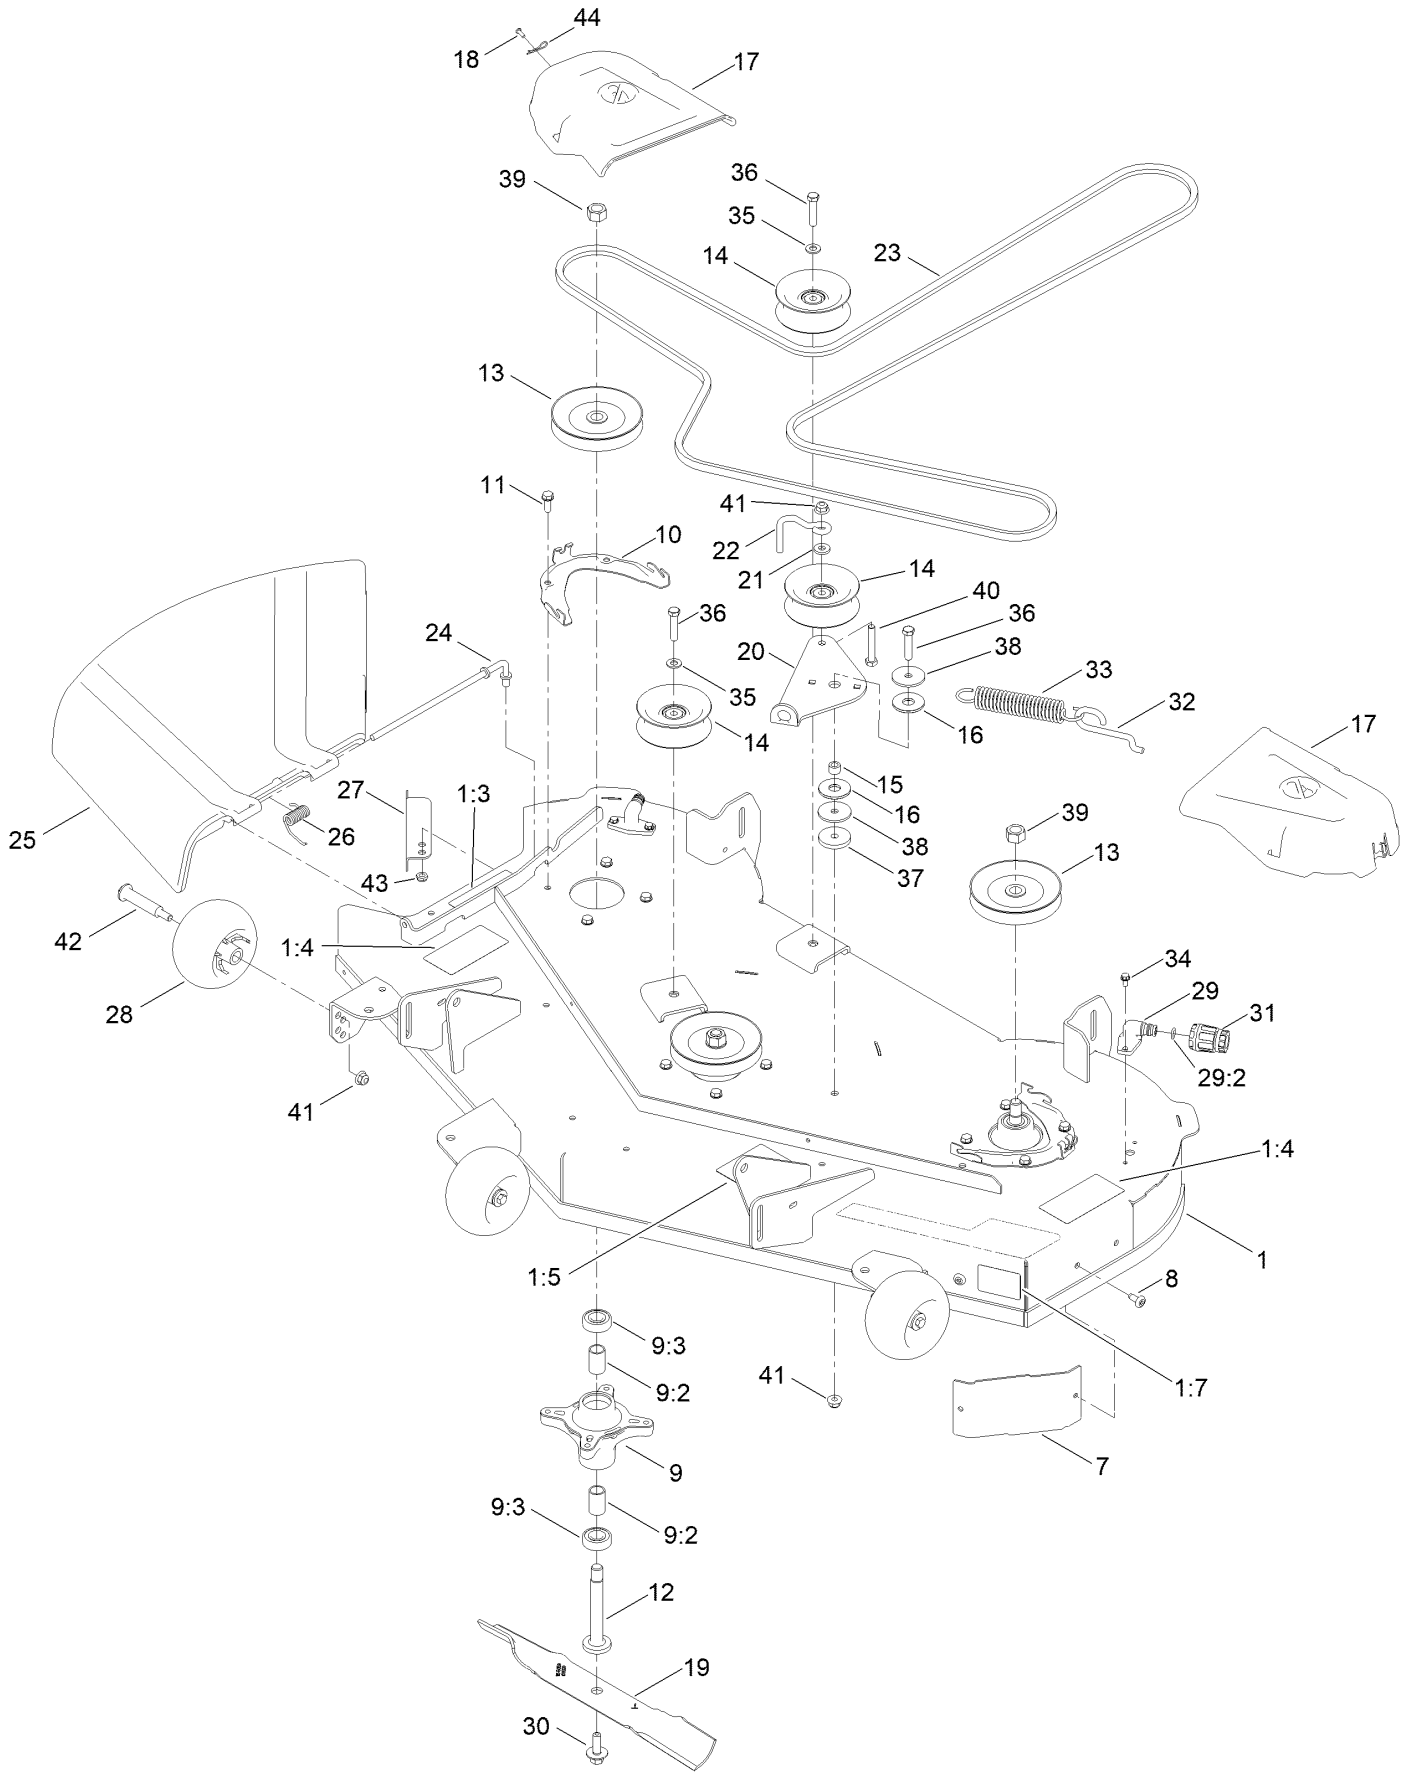

50in Deck and Decal Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-8745	1	50 In Deck & Decal ASM
1:3	130-0731	1	Decal-Danger
1:4	132-0872	2	Decal-Danger, Deck
1:5	99-3943	1	Decal-Routing, Belt
1:7	112-9840	1	Decal-Scalp, Anti
7	139-2448-03	1	Baffle-Corner
8	138-9753	2	Screw
9	139-3214	3	Spindle ASM
9:2	120-7935	2	Spacer
9:3	138-9770	2	Bearing-Ball
10	139-3272-03	2	Bracket-Cover, Belt
11	32144-41	12	Screw-Taptite
12	117-7268	3	Shaft-Spindle
13	139-7454	3	Pulley
14	132-9420	3	Pulley-Idler, Flat
15	115-4986	1	Spacer
16	114-0463	2	Washer-Friction, Composite
17	144-1906	2	Cover-Belt
18	94-6961	2	Screw
19	115-5059-03	3	Blade-Hi Lift
20	138-7262	1	Arm-Idler (Mty/Wdm)
21	138-7207	1	Spacer-Hub, Blower
22	138-7270	1	Guide-Belt, Idler
23	147-2909	1	V Belt (A Sec 142.06 El)
24	137-2019	1	Rod-Pivot
25	138-7502	1	Deflector-Discharge
26	138-7268	1	Spring-Torsion
27	138-9800-03	1	Baffle-Cutoff
28	1-603299	3	Roller-Scalp, Anti
29	133-9289	2	Fitting-Washout
29:2	133-9290	1	O-Ring
30	145-0411	3	Bolt-Blade, Sems
31	95-3270	1	Connector-Hose
32	138-7266	1	Spring-Return, Hook
33	138-7264	1	Spring-Extension
34	32144-4	4	Screw-HWH
35	3256-24	2	Washer-Plain
36	323-9	3	Screw-HH
37	110-9981	1	Washer-Plain
38	63-7400	2	Washer-Rebound
39	3219-6	3	Nut-Hex
40	323-11	1	Screw-HH
41	104-8301	5	Nut-HF, NI
42	112-3977	3	Bolt-Shoulder
43	3296-59	1	Nut-Lock, NI
44	144-1944	2	Pin-Hair

Frame Decal Assembly

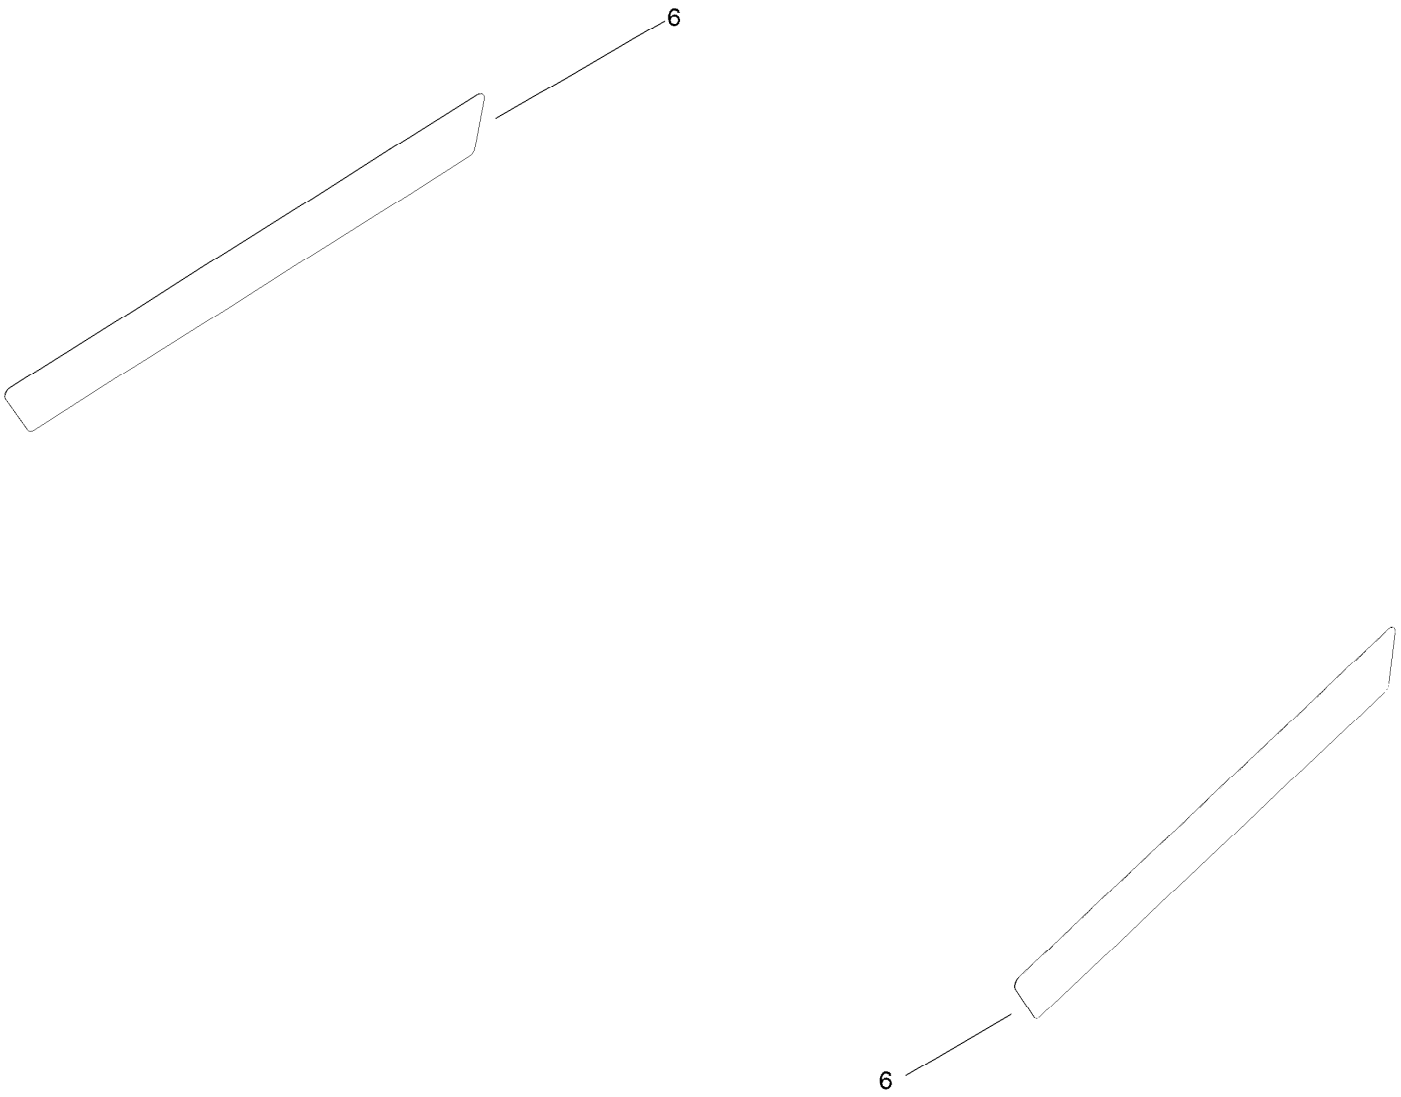

Frame Decal Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
6	147-7560	2	Decal-Timecutter

Seat Pan Assembly

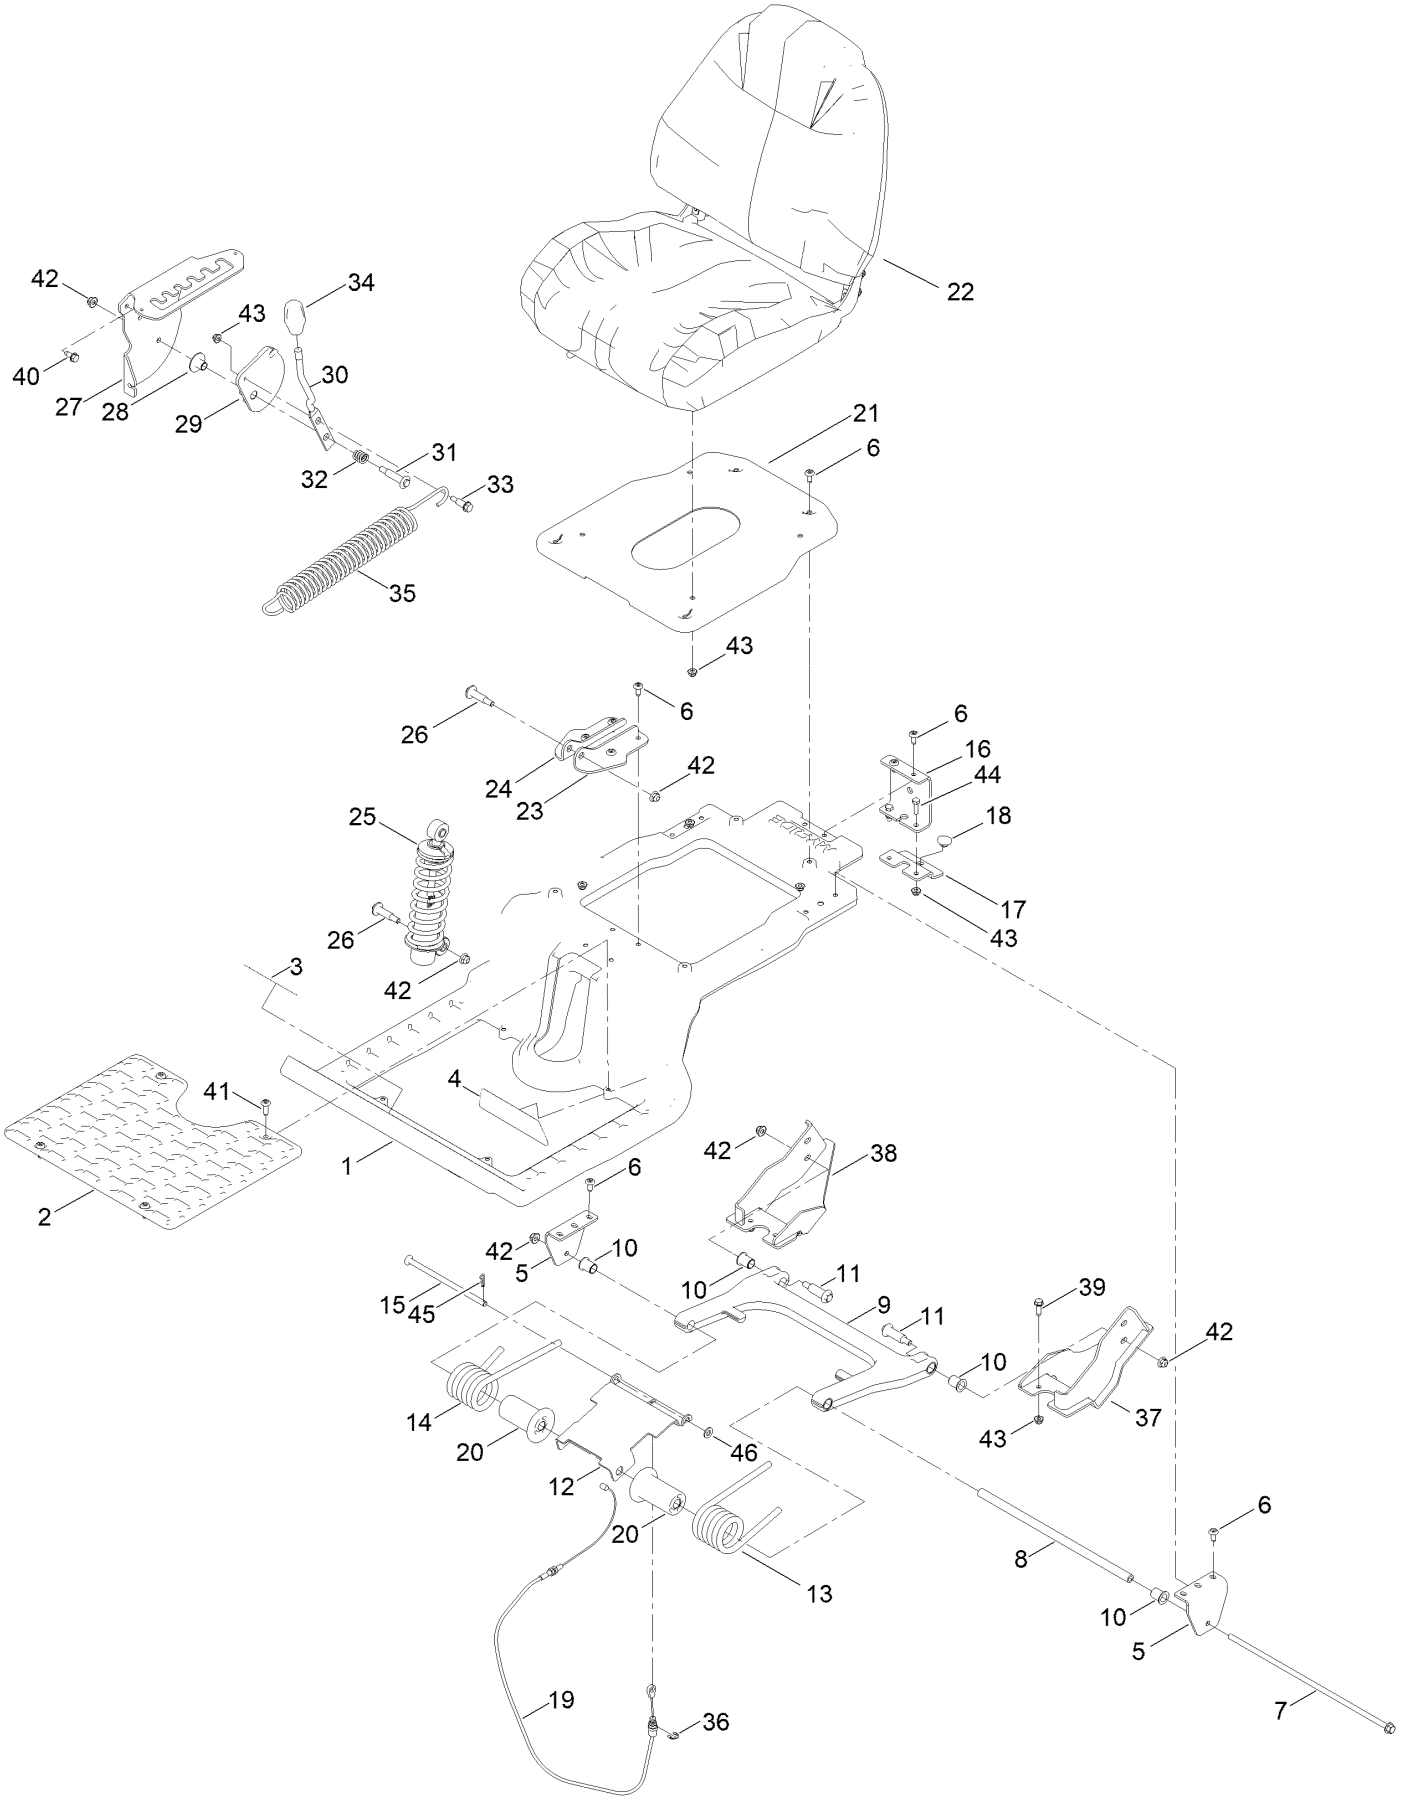

Seat Pan Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-6394-05	1	Platform, Myride
2	145-6395-05	1	Platform, Myride
3	147-7662	1	Decal - Myride
4	147-7575	1	Decal - Myride
5	138-7517	2	Bracket-Mount, Swing Arm
6	138-9753	14	Screw
7	138-7548	1	Screw-HHF
8	138-7549	1	Tube-Spacer
9	145-6312	1	Arm-Swing
10	138-2573	4	Bushing-Flange
11	138-2547	2	Bolt-Shoulder
12	138-7566-03	1	Plate-Adjuster
13	137-1983	1	Spring-Torsion, LH
14	137-7018	1	Spring-Torsion, RH
15	138-9813	1	Rod-Adjustment
16	138-9788	1	Bracket-Cable
17	139-2361-03	1	Bracket Lower
18	135-0505	1	Bumper-Seat
19	147-7713	1	Cable-Adjustment, Myride
20	138-9776	2	Retainer-Spring
21	145-6265-03	1	Pan-Seat
22	147-8731	1	Seat King Sk220 Seat
23	133-9318-03	1	Bracket-Shock Mount, Upper (LH)
24	133-9319-03	1	Bracket-Shock Mount, Upper (RH)
25	139-2427	1	Shock/Spring ASM
26	136-7198	2	Bolt-Shoulder
27	145-6309-01	1	Bracket-Mr Gate
28	139-5800	1	Bushing - Flange
29	147-5171	1	Pulley-Cam
30	147-5172	1	Lever-Adjustment, Threaded
31	92-1057	1	Bolt-Shoulder
32	139-5858	1	Spring-Compression
33	140-3759	1	Bolt-Shoulder,HHF
34	147-8715	1	Knob-Mr
35	138-9848	1	Spring-Extension
36	32120-47	1	Ring-Retaining, External
37	147-8721-03	1	Mount-Mr Swing Arm, LH
38	147-8722-03	1	Mount-Mr Swing Arm, RH
39	701243	4	Screw-Thd Roll, HWH
40	32144-70	3	Screw-HWHTF
41	138-9753	4	Screw
42	119-4042	6	Nut-HF, NI
43	119-4041	11	Nut-HF
44	139-1716	2	Screw-HH
45	137-3083	1	Pin-Hair
46	115-1166	1	Washer-Plain
47	119-4036	4	Screw-HHF ●

● Not illustrated

Seat Assembly No. 147-8731

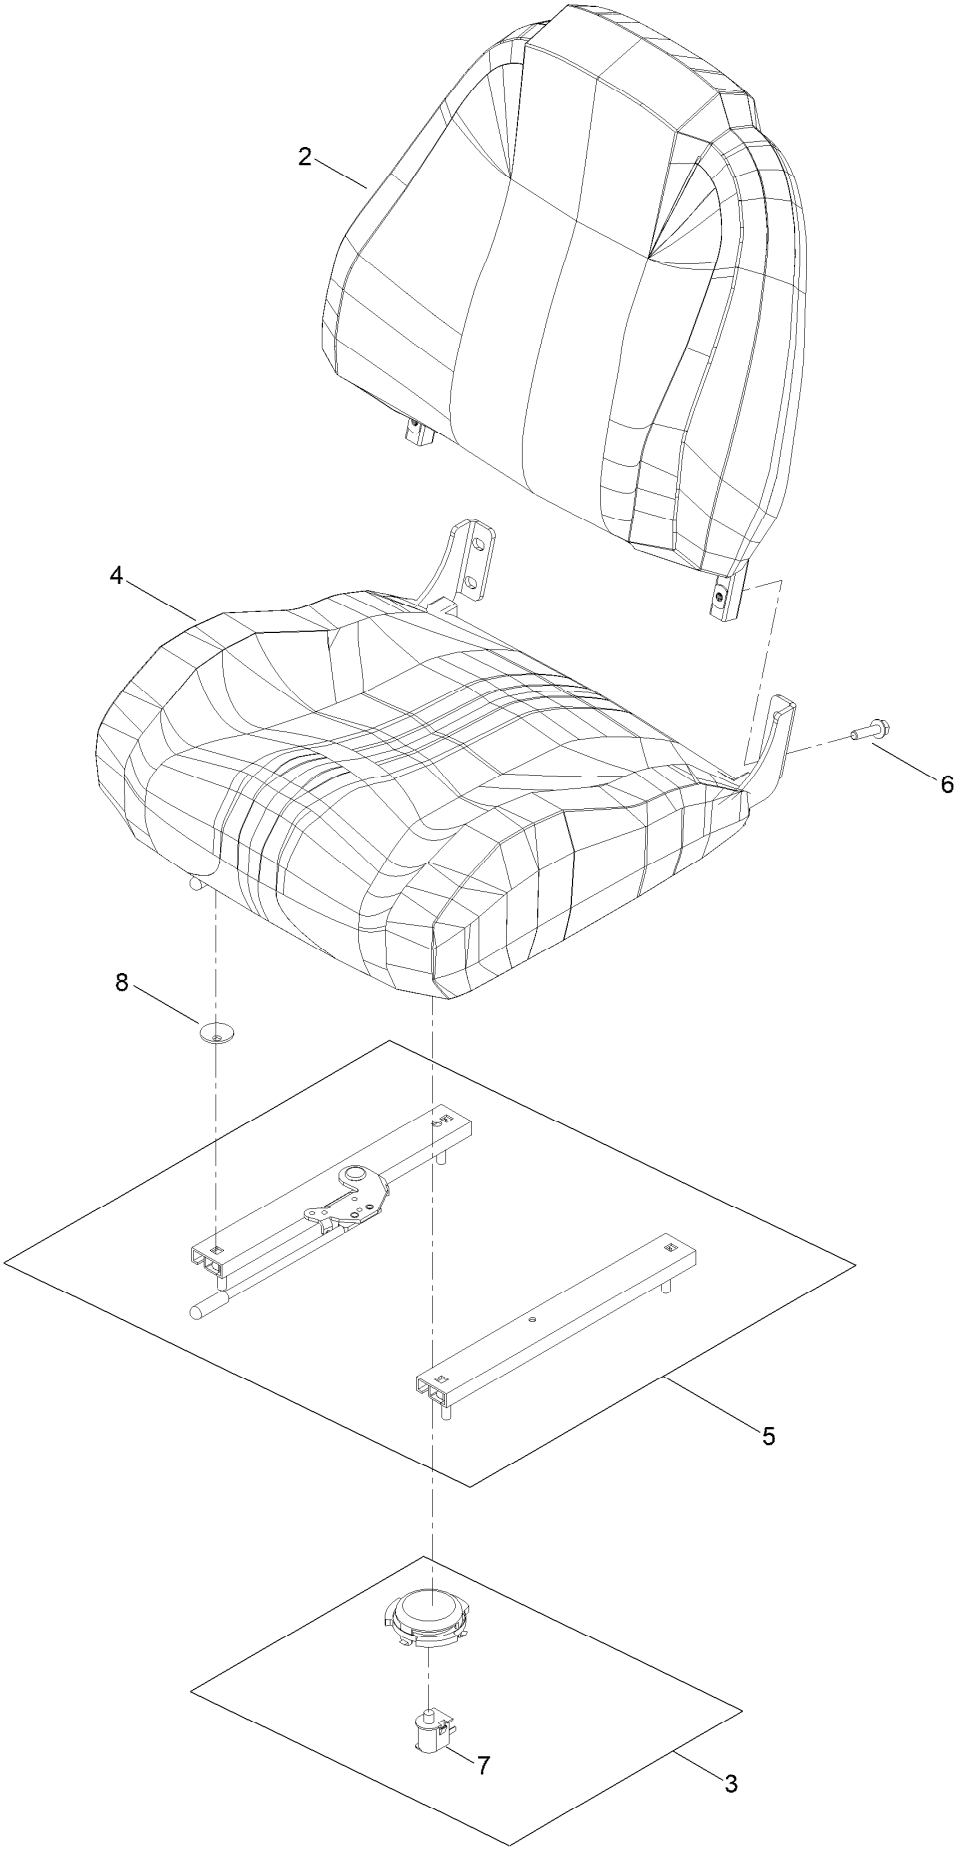

Seat Assembly No. 147-8731 (continued)

Ref.	Part Number	Qty.	Description
2	147-8735	1	Toro Back Cover
3	147-8736	1	Seat Switch Delta 6500-02 Open
4	147-8739	1	Toro Seat Cover
5	147-8740	1	Slide ASM-Seat
6	119-4036	4	Screw-HHF
7	82-2190	1	Switch-Bail
8	163-8027	4	Bellwasher-Seat

Clutch Assembly

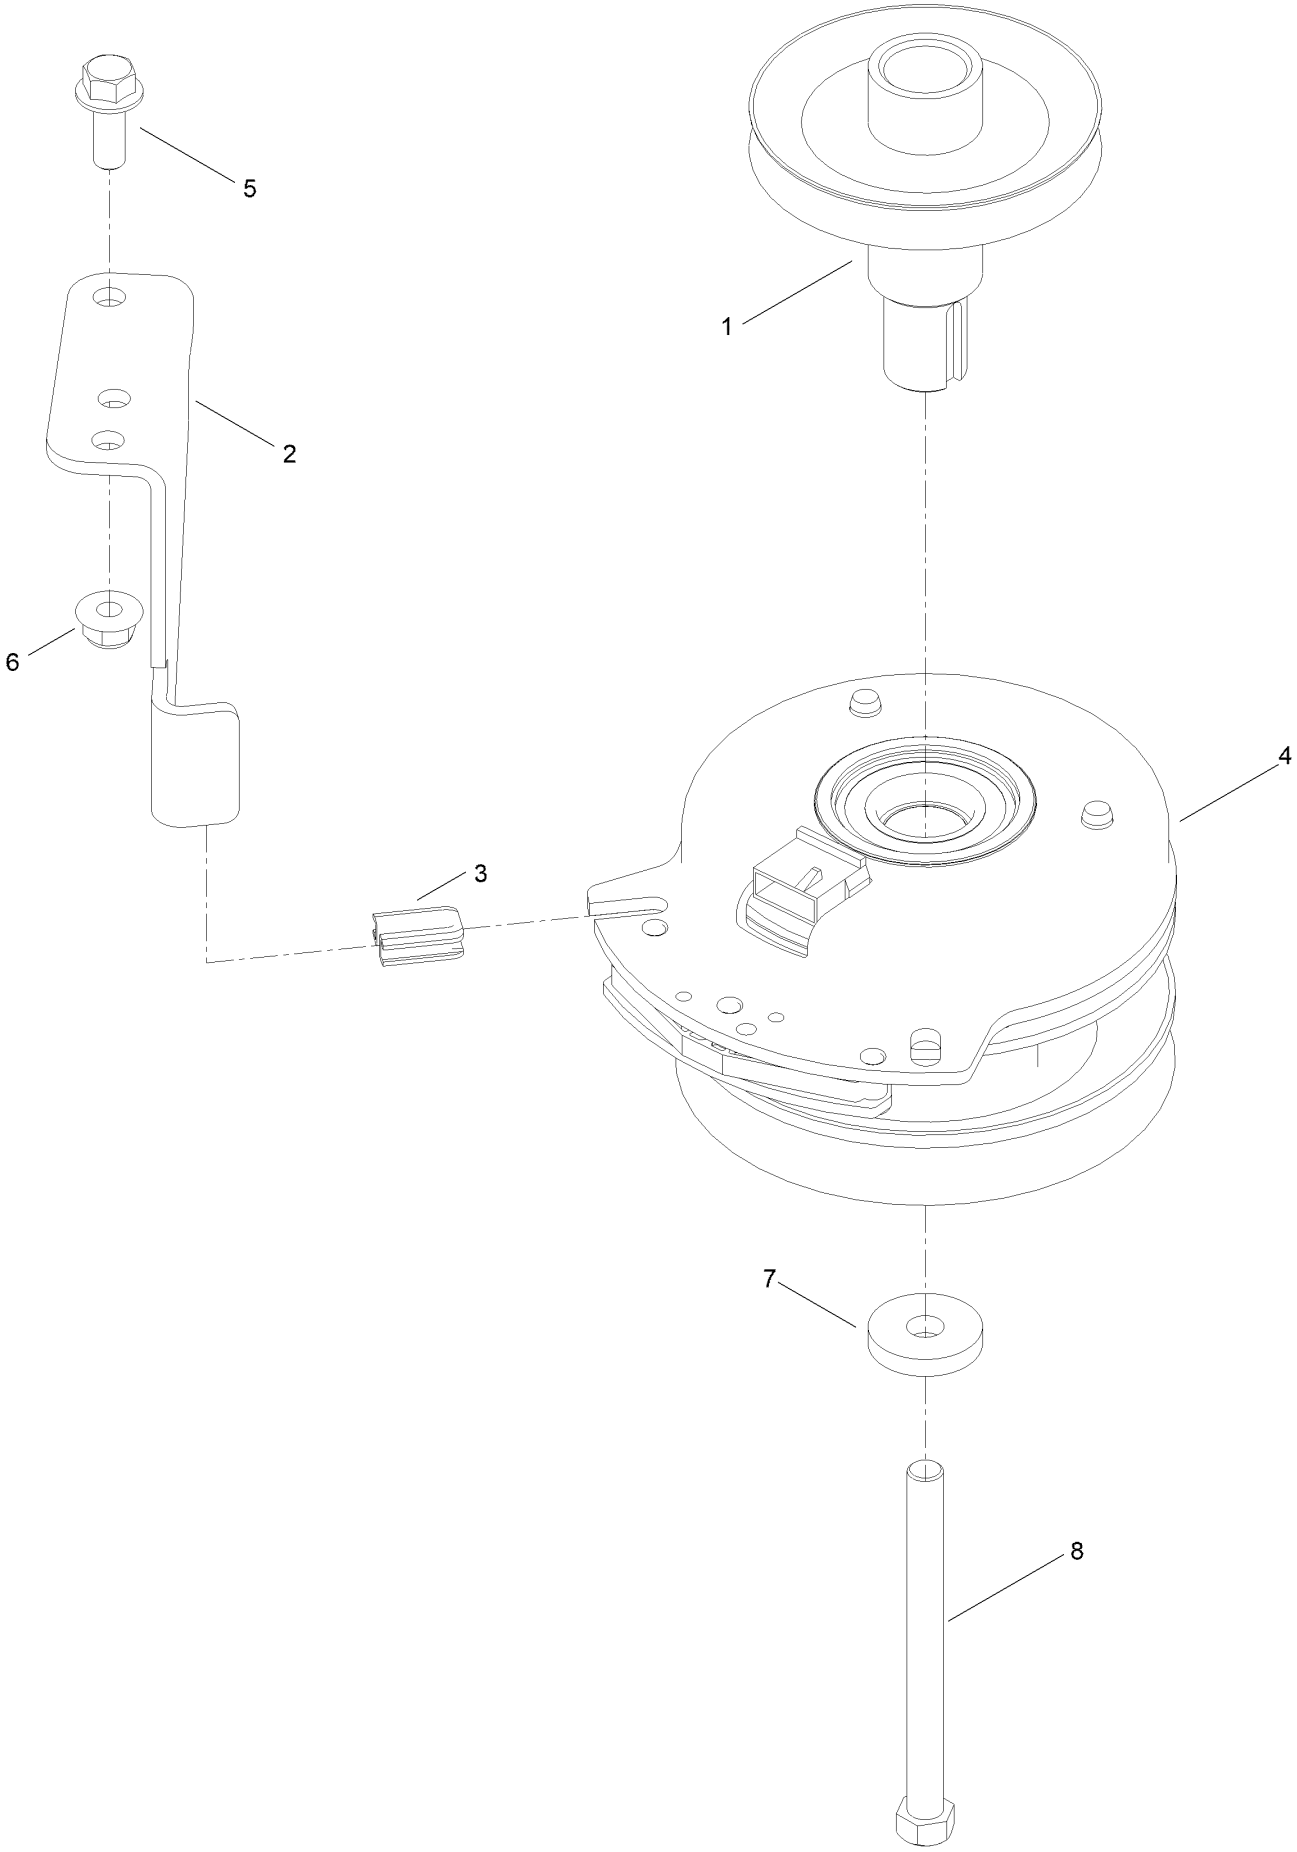

Clutch Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-9792	1	Pulley-Engine
2	137-7000	1	Stop-Clutch (Wide)
3	120-2217	1	Isolator-Clutch
4	127-3410	1	Clutch-PTO
5	3234-42	1	Screw-HHF
6	104-8301	1	Nut-HF, NI
7	112843	1	Washer
8	3212-19	1	Screw-HH

Attachments and Accessories

For 77502 — TimeCutter MyRIDE 50in Zero Turn Riding Mower

Product Name	Model/Part
4-Cycle Fuel, Snow And Lawn 32oz Can	131-3823
Toro Premium Fuel Treatment 12oz Bottle	131-6572
Oil-30/10W-30 Synthetic (Quart)	138-6053
50 Inch Recycler Kit	139-3240
50 Inch Bagging Enhancement Kit	139-7459
Heavy Duty Spring Kit	140-2051
Led Light Kit	147-8757
Floormat Kit	147-8764
Kit-Caster Wheel	147-8772
Arm Rest Kit	147-8773
Kit-Striping, 50"	147-8779
Hour Meter Kit	147-8791
Kit, Jack TC	147-8835
Assist Bar Kit	161-4450
Transport Lock Kit	161-4510
Weight-Kit	161-4516
10W30 4-Cycle Engine Oil (32oz Bottle)	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903
Toro Deluxe Rider Cover	490-7319
Belt-Deck, 50 TCSS	79006
ROPS Kit	79487
Slope Sensor Kit	79489
Residential Z Max 50in Bagger	79501

Notes:

Count on it.