Form No. 3483-751 Rev A

TORO®

Count on it.

Parts Catalog

GrandStand® HDX Mower

With 72in TURBO FORCE® Cutting Unit

Model No. 72517—Serial No. 422000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3483-751 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

72 Inch Deck Assembly 4
Deck and Decal Asssembly No. 145-1621 6
Spindle Assembly No. 137-9780 8
Deflector Assembly No. 144-2635 10
Ground Drive Assembly 12
LH Transmission Assembly No. 161-1323 14
RH Transmission Assembly No. 161-9807 16
Hydraulic Hose Assembly 18
Motion Control Assembly 20
Control Handle Assembly No. 132-5157 22
Control Handle Assembly No. 132-5158 24
Parking Brake Assembly 26
Deck Lift Assembly 28
HOC Lever Assembly No. 161-6735 30
Deck Strut Assembly No. 147-4557 32
Frame Assembly 34
Wheel and Bearing Assembly 36
Platform Assembly 38
Engine Assembly 40
Muffler Guard Assembly No. 146-8324 42
Oil Guard Assembly 44
Fuel Tank Assembly 46
Electrical Assembly 48
Attachments and Accessories 50

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


72 Inch Deck Assembly

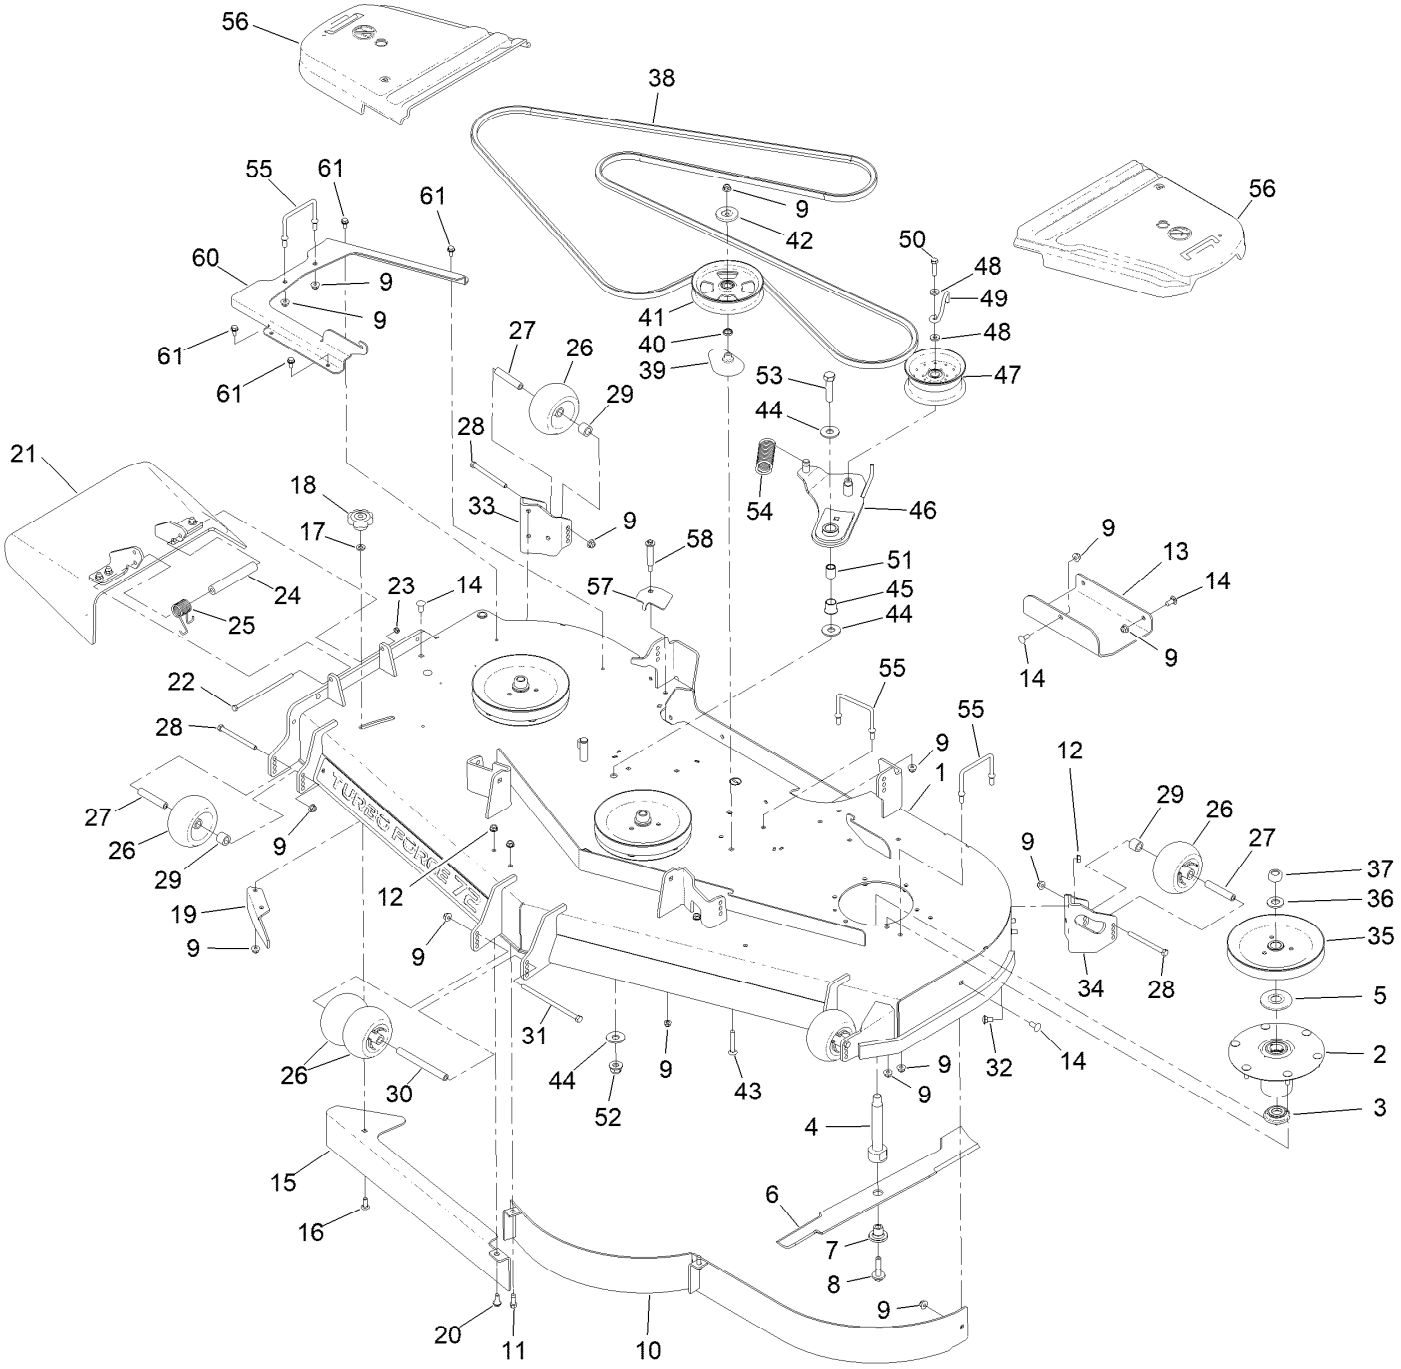

72 Inch Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-1621	1	72 Deck ASM W/Decals
2	137-9780	3	Spindle ASM
3	137-9784	3	Guard-Bottom
4	138-6045	3	Shaft-Spindle
5	103-1330	3	Guard-Bearing, Top
6	140-1238	3	Blade
7	137-9787	3	Bushing-Hex
8	109-9220	3	Screw-Sems
9	119-4042	37	Nut-HF, NI
10	114-5843-01	1	Baffle
11	92-1624	2	Screw-HWH Thd Form
12	3290-357	9	Nut-HSF
13	147-4777-01	1	Plate, Skid 72
14	3231-27	6	Screw-CARR
15	138-6051-01	1	Plate-Baffle
16	119-4162	1	Screw-CARR
17	100-4852	1	Washer-Hardened
18	109-1092	1	Knob
19	106-3216-01	1	Baffle-Discharge
20	94-7582	1	Bolt-Shoulder
21	144-2635	1	Rubber Deflector ASM
22	322-50	1	Screw-HH
23	3296-47	1	Nut-Lock,NI
24	105-4622	1	Spacer
25	108-4052	1	Spring-Torsion
26	1-603299	6	Roller-Scalp, Anti
27	98-7912	4	Tube-Spanner
28	323-23	4	Screw-HH
29	98-7913	4	Tube-Spacer
30	98-5967	1	Spacer-Wheel
31	108-5388	1	Screw-HH
32	3231-1	6	Screw-CARR
33	106-7355-01	1	Mount-Wheel, RH
34	106-7354-01	1	Mount-Wheel, LH
35	138-6060	3	Sheave-Drive, Blade
36	103-2802	3	Washer
37	116-7306	3	Nut-Hex
38	145-1607	1	Belt 5V-72" Deck
39	109-2872	1	Spacer-Pulley
40	107-4293	1	Spacer-Plate, BBC
41	136-5404	1	Pulley-Idler, Flat
42	132-5153	1	Shield-Dust
43	3231-44	1	Screw-CARR
44	104-9216	3	Washer-Hardened
45	135-1248	1	Bushing, Igus
46	147-7796-03	1	Idler Arm ASM [black]
47	116-4666	1	Idler-Pulley, Flat
48	138-7207	2	Spacer-Hub, Blower
49	147-4644	1	Wireform Belt Guide,Idler, Top
50	323-8	1	Screw-HH
51	163-3438	1	Bushing-Idler Pivot
52	133-9681	1	Nut-HF
53	327-9	1	Screw-HH
54	108-5412	1	Spring-Extension
55	109-6982	3	Wireform-Cover
56	109-6938	2	Cover-Belt, LH
57	147-4754-03	1	Plate, Belt-Guide
58	112-3977	1	Bolt-Shoulder
60	147-4751-01	1	Platform, Belt Cover 72
61	32144-70	4	Screw-HWHTF


Deck and Decal Asssembly No. 145-1621

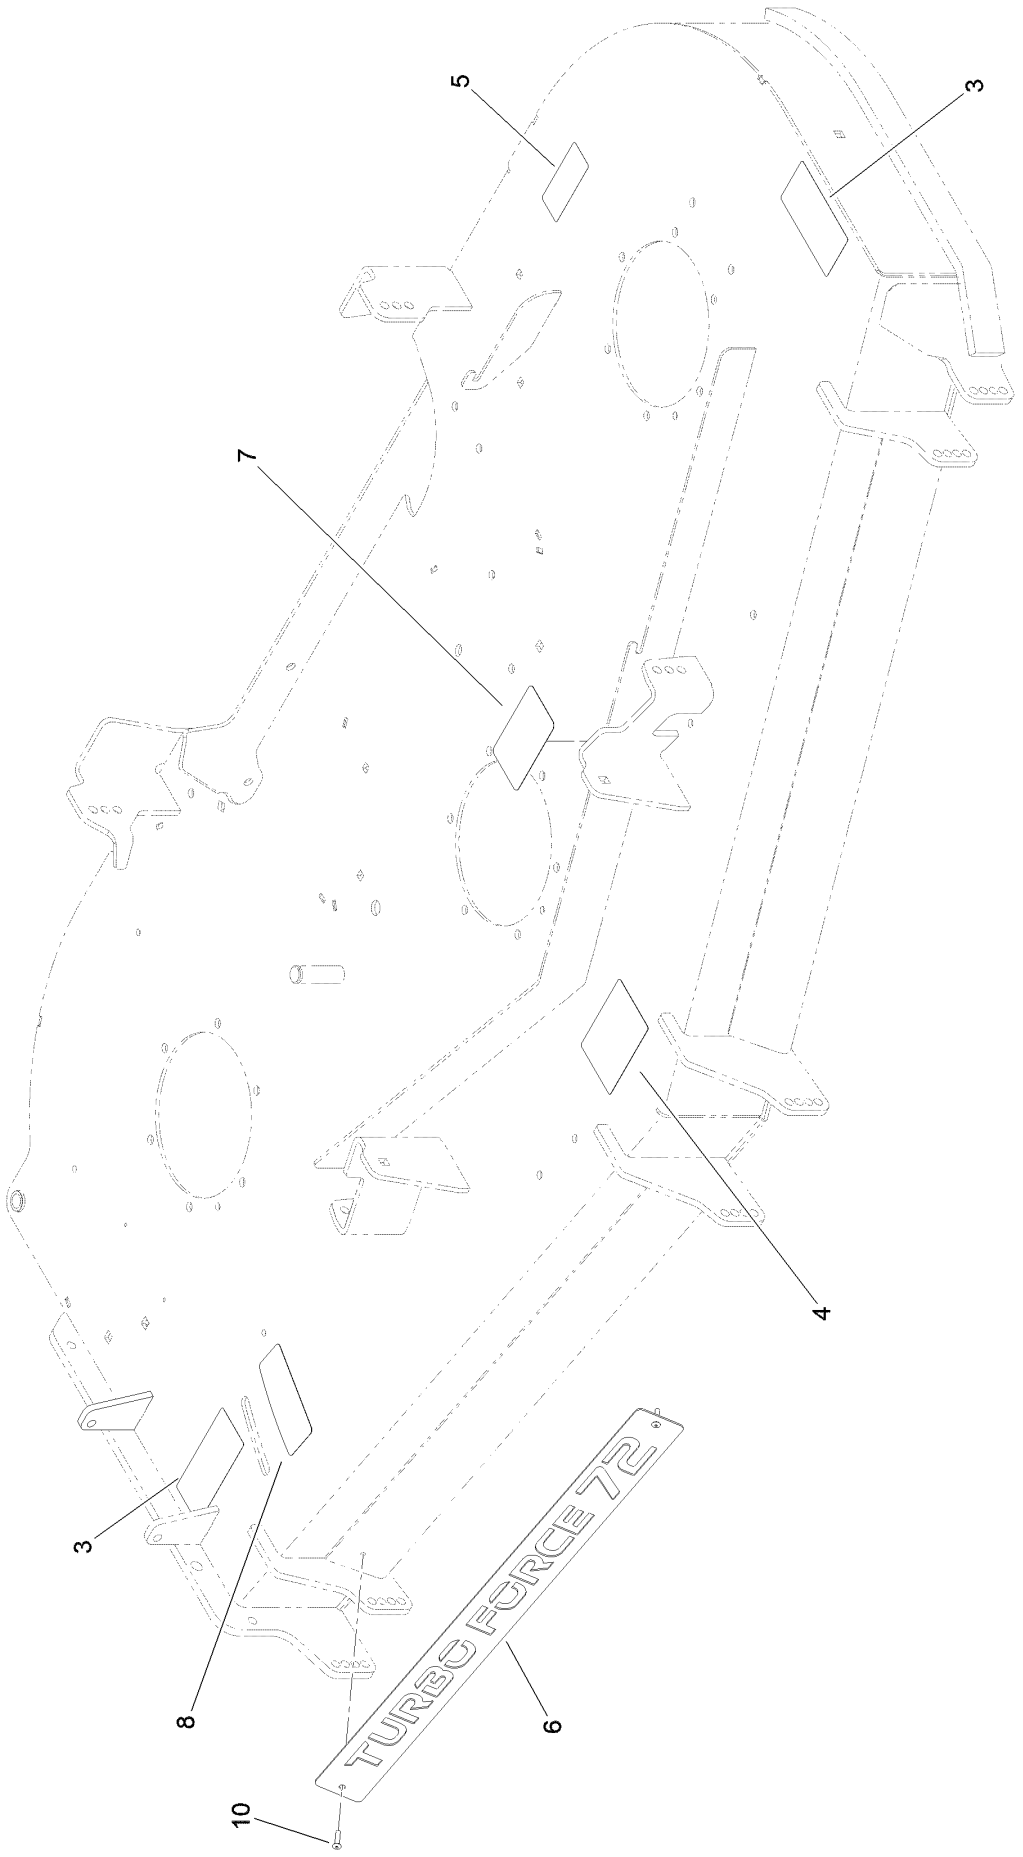

Deck and Decal Asssembly No. 145-1621 (continued)

Ref.	Part Number	Qty.	Description
3	161-6620	2	Decal-Danger, Deck
4	127-0326	1	Decal-Scalp, Anti
5	116-8283	1	Decal-Torque, Bolt
6	147-5026-03	1	Plate-Turbo Force [black]
7	147-4766	1	Decal-Belt Routing
8	138-1147	1	Decal - Baffle Adjustment
10	130-8451	2	Rivet-Trifold


Spindle Assembly No. 137-9780

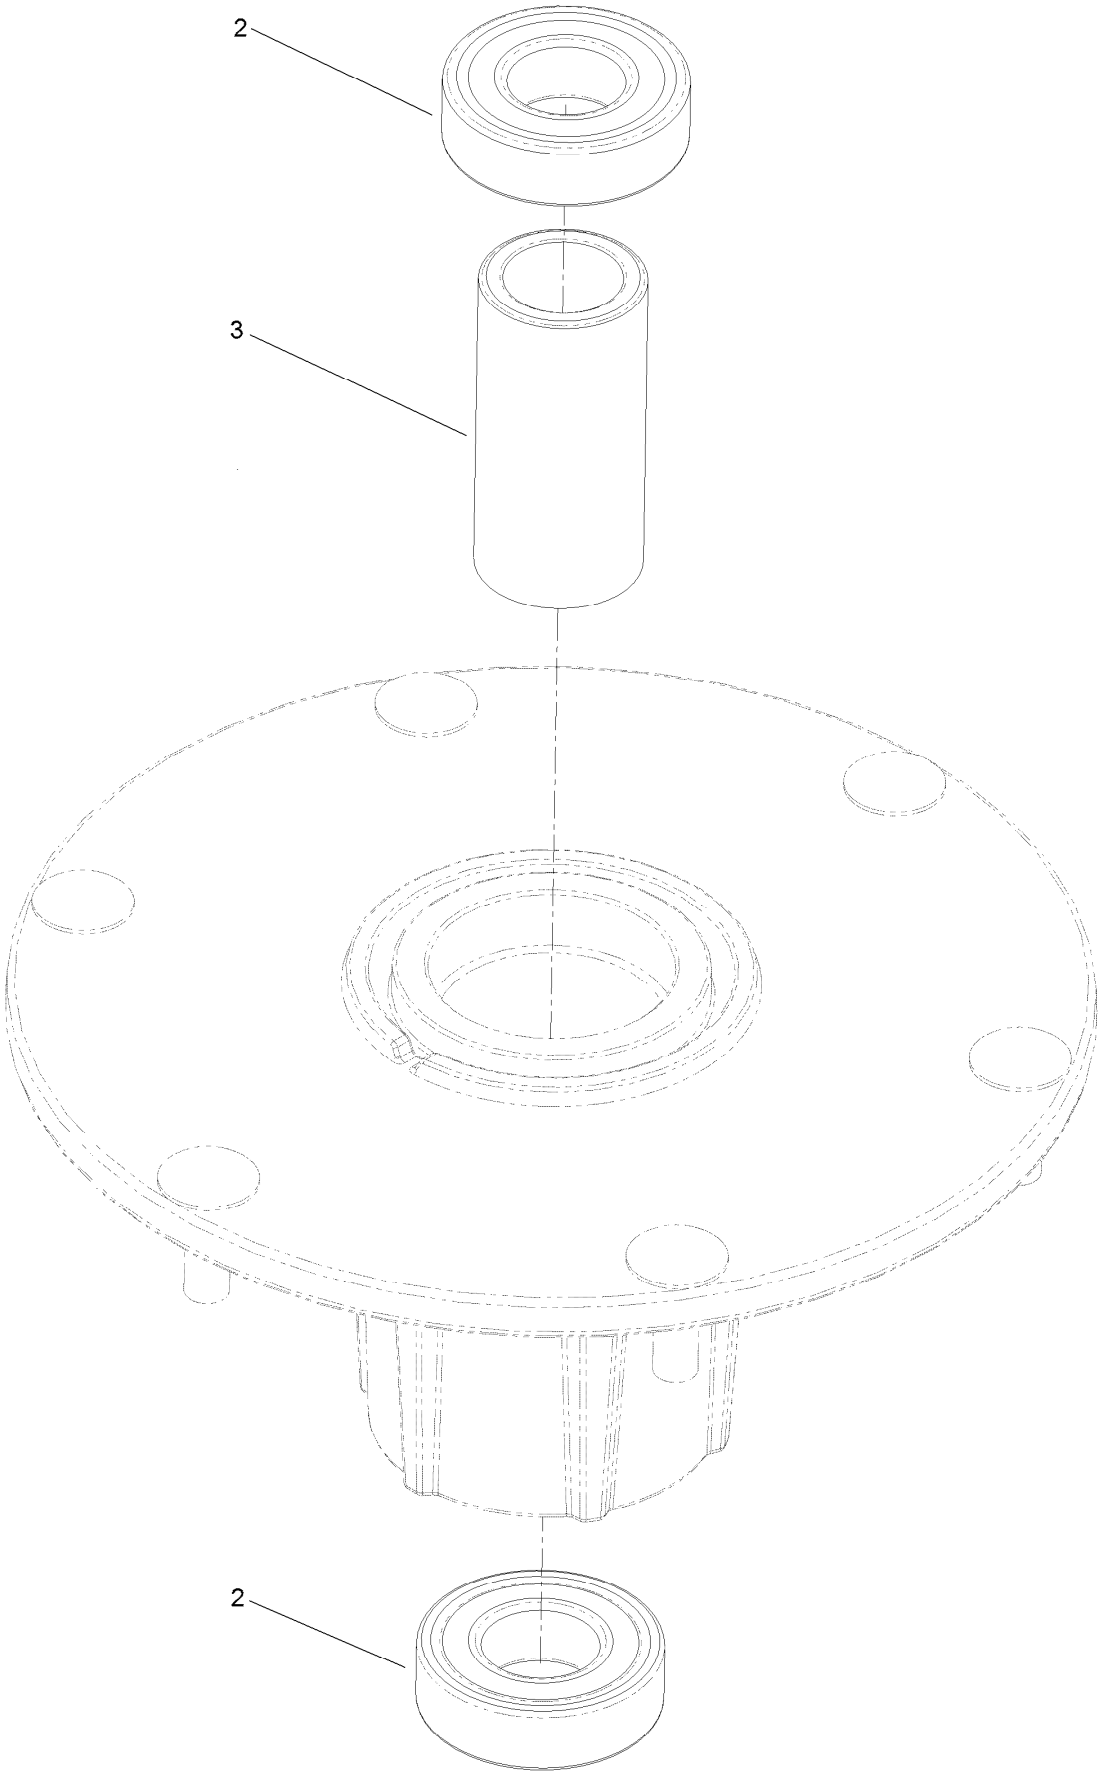

Spindle Assembly No. 137-9780 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
2	116-0720	2	Bearing-Ball
3	138-6042	1	Spacer-Bearing


Deflector Assembly No. 144-2635

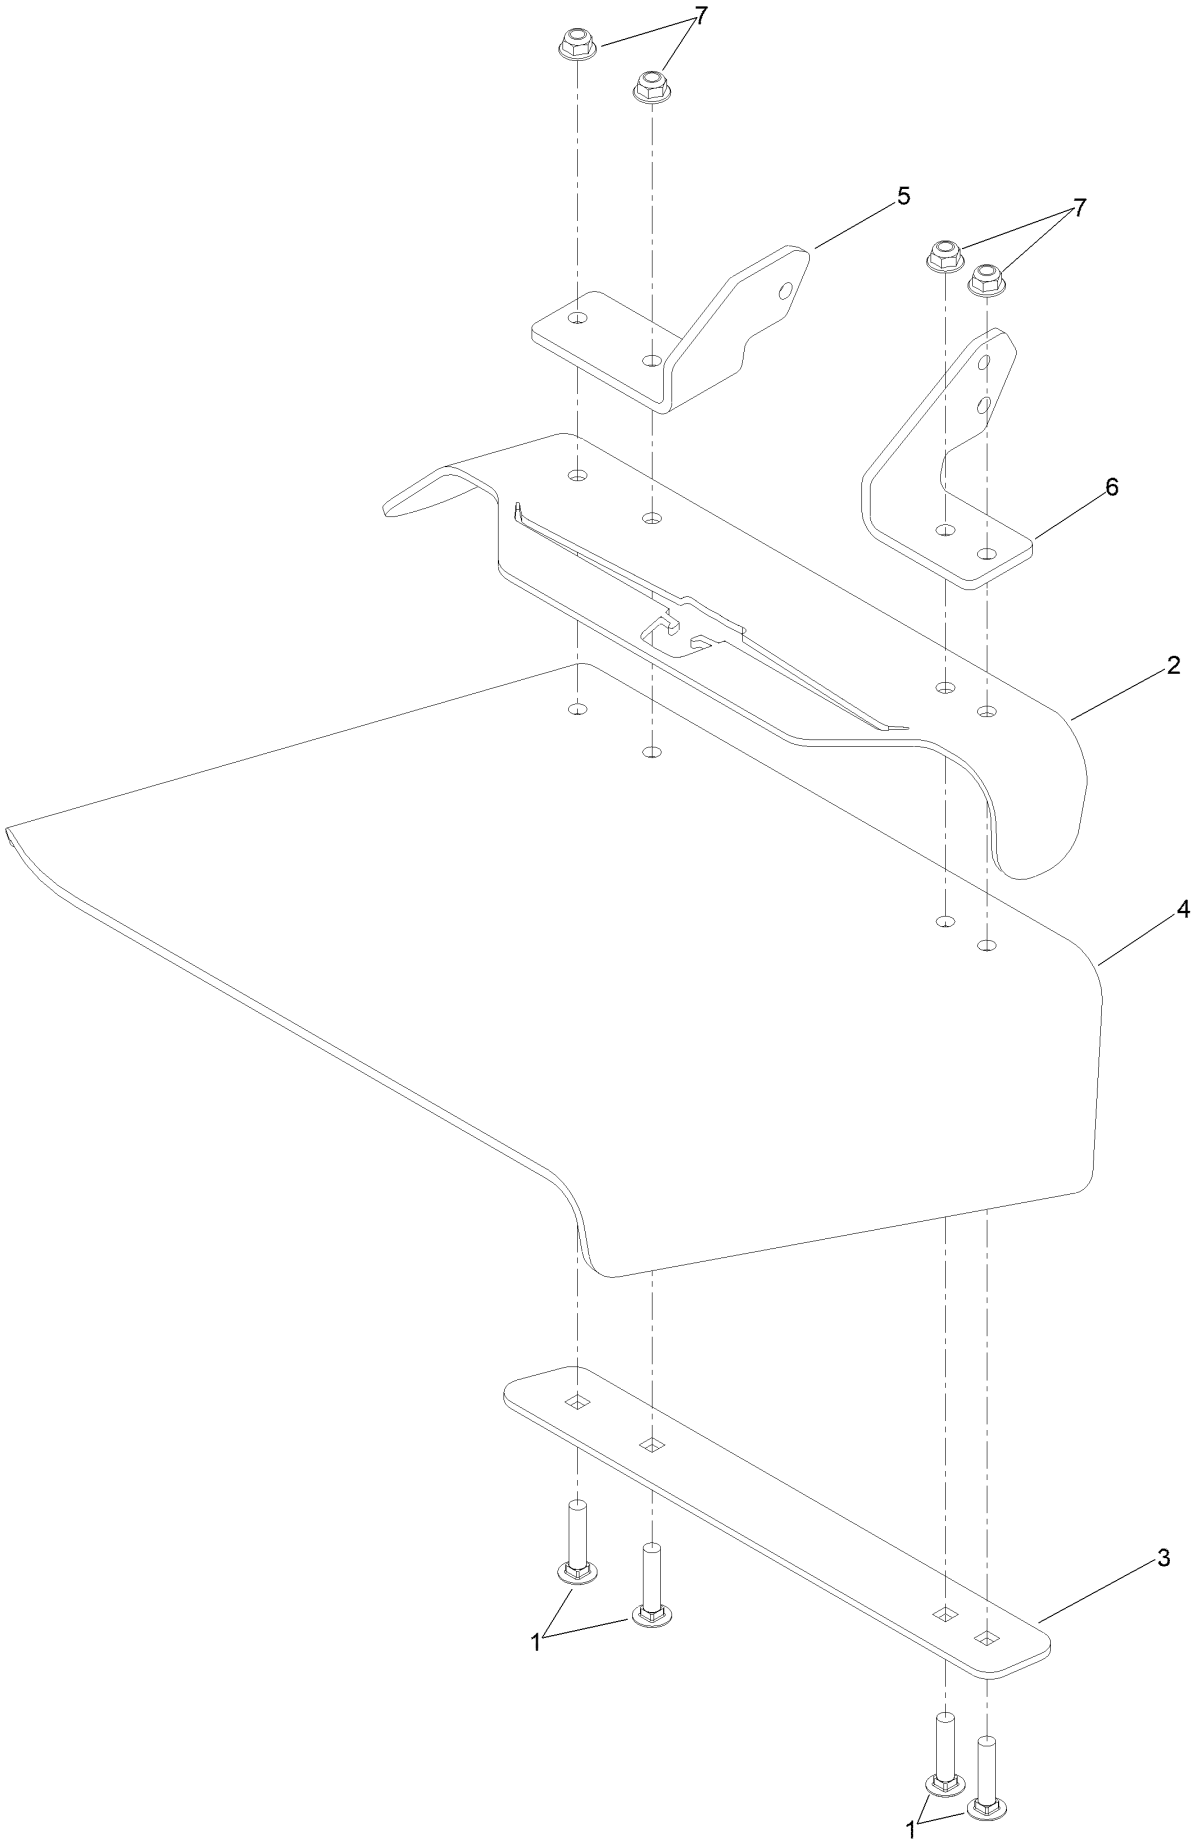

Deflector Assembly No. 144-2635 (continued)

Ref.	Part Number	Qty.	Description
1	3231-5	4	Screw-CARR
2	161-9815-01	1	Plate-Deflector Mount
3	106-3248-03	1	Strap-Discharge
4	161-3464	1	Deflector-Deck, Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	119-4042	4	Nut-HF, NI

Ground Drive Assembly

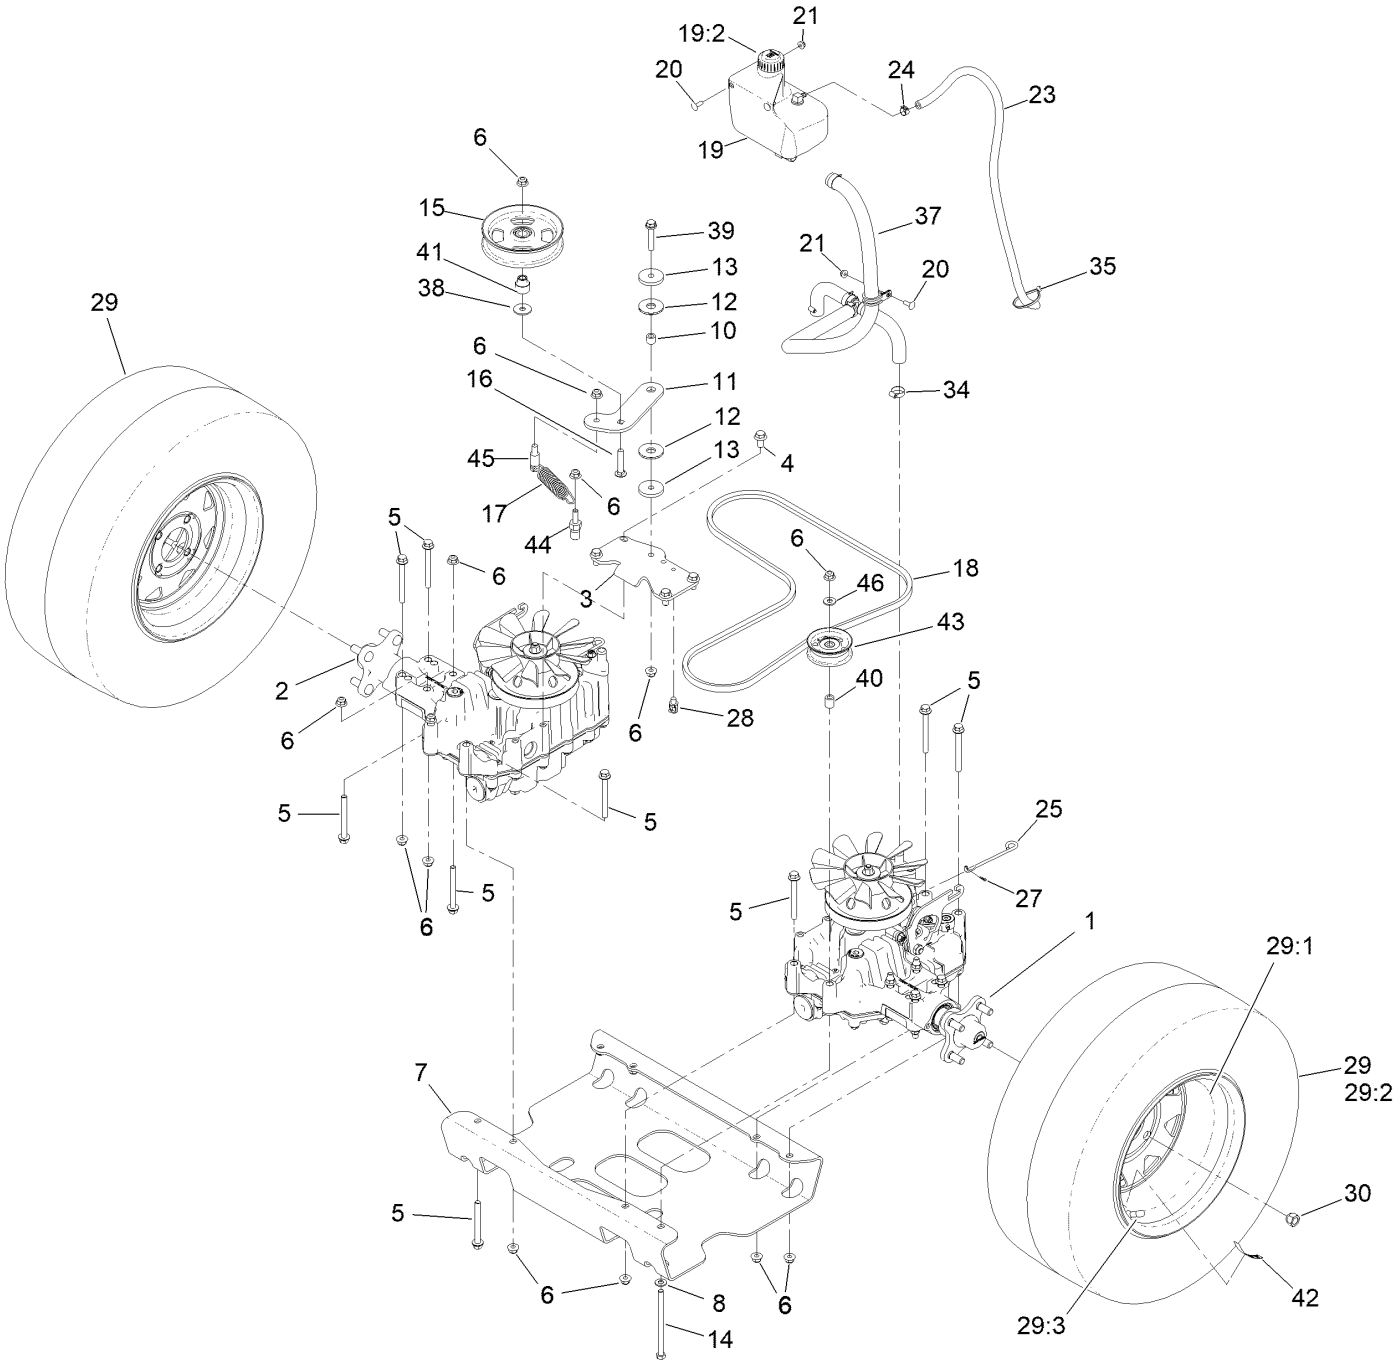


Ground Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-1323	1	LH Transmisson (Tzt13Sy)
2	161-9807	1	RH Transmisson (Tzt13Sx)
3	147-4756-05	1	Plate, Support, Transaxle
4	161-1312	4	Screw-Bshs
5	116-4701	15	Screw-HHF
6	119-4042	19	Nut-HF, NI
7	147-4636-05	1	Plate-Hydro
8	3256-24	1	Washer-Plain
10	1-413088	1	Bushing-Lever, Lift
11	147-4757	1	Plate-Arm, Idler
12	114-0463	2	Washer-Friction, Composite
13	110-9981	2	Washer-Plain
14	323-25	1	Screw-HH
15	136-5405	1	Pulley-Idler, Flat
16	3231-6	1	Screw-CARR
17	138-1104	1	Spring-Extension
18	145-5186	1	Belt-V
19	132-1135	1	Tank-HYD
19:2	133-8677	1	Cap-Vented
19:5	140-9463	1	Strainer-Neck, Removable ●
20	3229-25	3	Screw-CARR
21	104-7201	3	Nut-HF, NI
23	109-0309	1	Hose-Fuel
24	92-2379	1	Clamp-Hose
25	145-6176	2	Rod-Bypass
27	108-2992	2	Pin-Hair
28	161-1316	2	Clip, Fir Tree
29	144-6607	2	Wheel And Tire ASM
29:1	144-6606	1	Wheel
29:2	140-7975	1	Tire
29:3	232-27	1	Stem-Valve
30	139-2564	8	Nut-Lug
34	2412-129	2	Clamp-Hose
35	3290-378	1	Tie-Cable
37		1	HYD Hose ASM ■
38	93-8806	1	Washer-Hardened
39	108-3742	1	Screw-HHF
40	115-1451	1	Spacer-Wheel
41	138-7227	1	Bushing-Idler
42	126-2055	2	Decal-Torque, Wheel Hub Lug
43	130-8362	1	Pulley-Idler, Flat
44	132-4724	1	Pin-Anchor, Spring
45	110-3841	1	Anchor-Spring
46	109-6658	1	Nut-Flange, NI

● Not illustrated

■ Not serviced separately

LH Transmission Assembly No. 161-1323

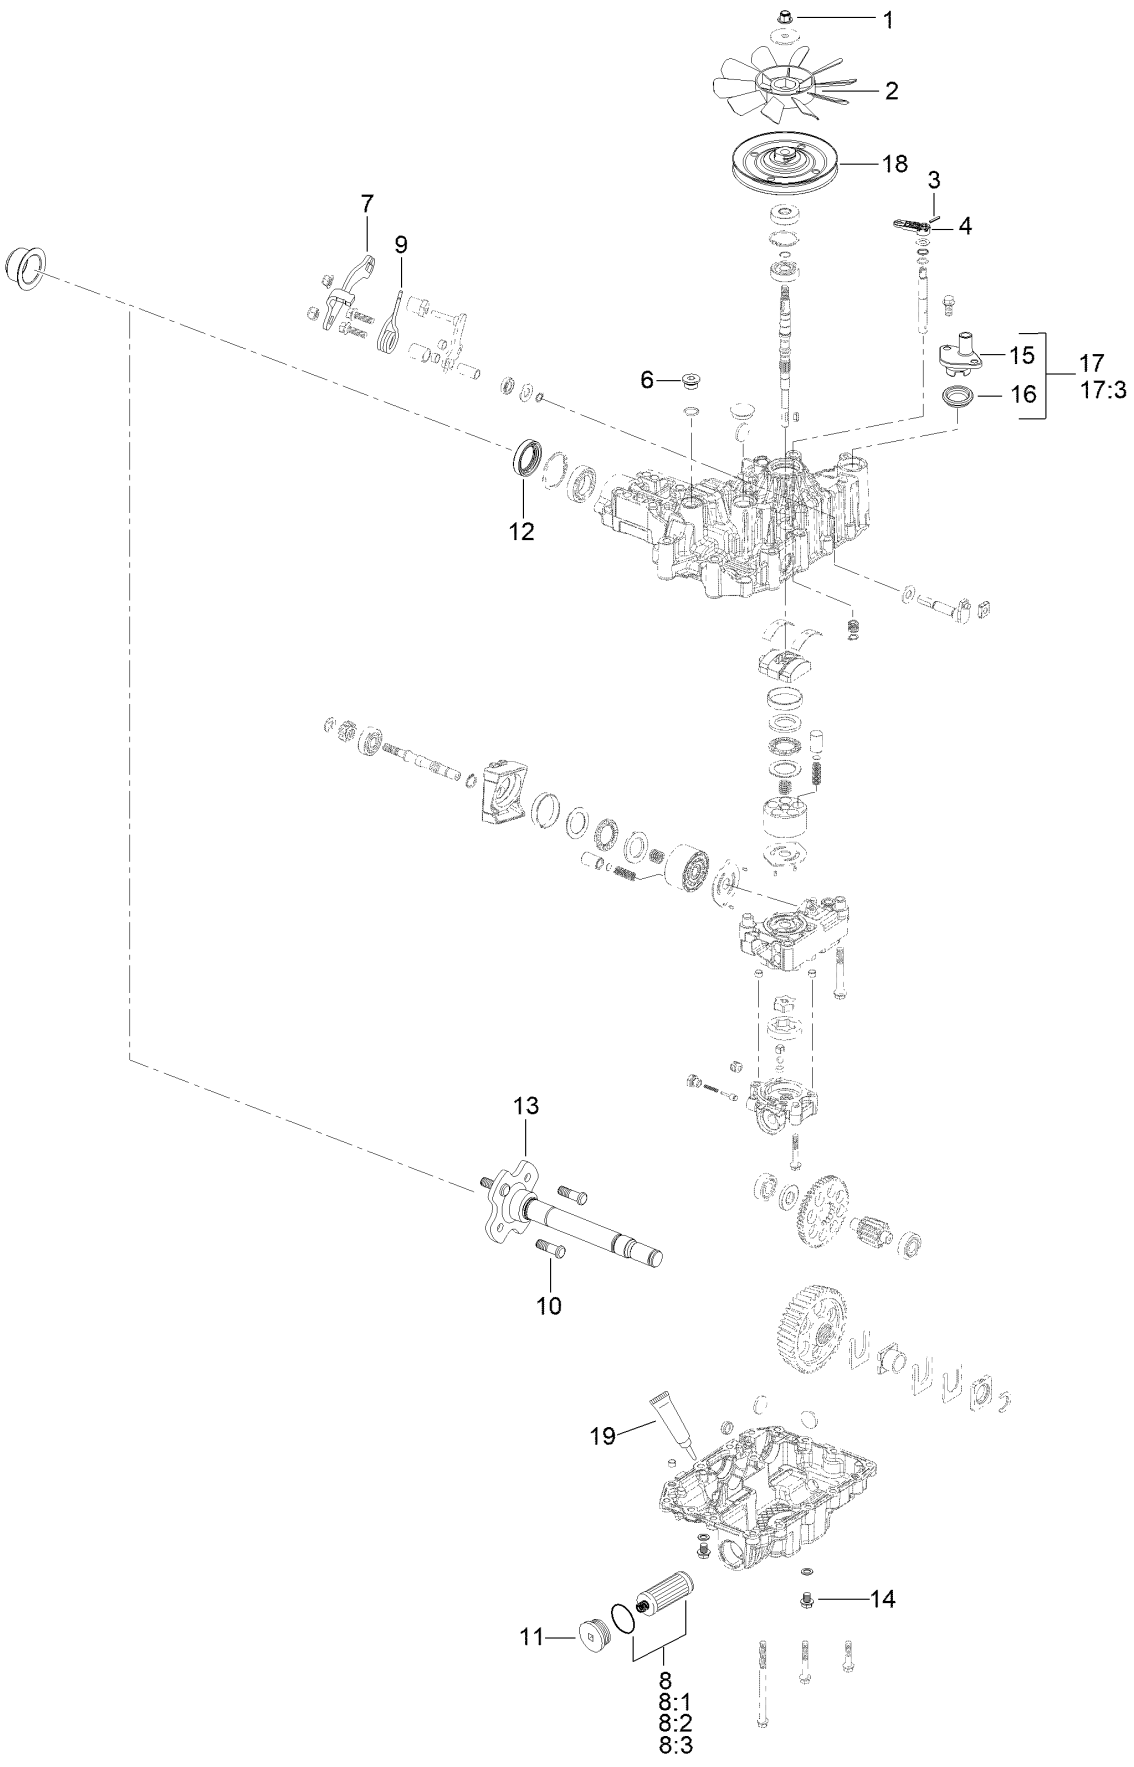


LH Transmission Assembly No. 161-1323 (continued)

Ref.	Part Number	Qty.	Description
1	132-4737	1	Nut-Lock
2	132-4738	1	Fan
3	104-3265	1	Pin
4	132-4700	1	Lever-Bypass
5	161-7919	1	Brake Kit, Y ●
6	132-4735	1	Cap-Oil
7	161-7914	1	Lever-Control, LH
8	144-3842	1	2 Transmission Filter Kit
8:1		2	Filter (1A6370-26450) ■
8:2	136-5410	2	O-Ring
8:3		4	Sealing Washer ●■
9	137-4109	1	Spring-Torsion
10	137-9509	4	Stud-Wheel
11	138-4613	1	Cap-Oil Filter
12	139-5587	1	Seal-Axle, Ua
13	163-7372	1	Axle ASM Kit
13:1		2	Thrust Washer ●■
13:2		1	Oil Seal Ua18Lip ●■
13:3		1	Collar 25.4 ●■
13:4		1	Flange ASM, Axle ●■
13:5		1	Bearing 6006 ●■
13:6		1	Ring 20 ●■
13:7		1	Bushing ●■
13:8		1	Ring 55 ●■
14	139-5589	2	Drain Bolt
15	139-5590	1	Expansion Fitting
16	139-5591	1	Grommet Seal, Expansion Fitting
17	139-7871	1	Expansion Fitting - W/ Seal
17:3		1	M8*20 Flange Bolt ■
18	161-7916	1	Pulley
19	163-4197	1	Seal Kit, Hydro ●

● Not illustrated

■ Not serviced separately

RH Transmission Assembly No. 161-9807

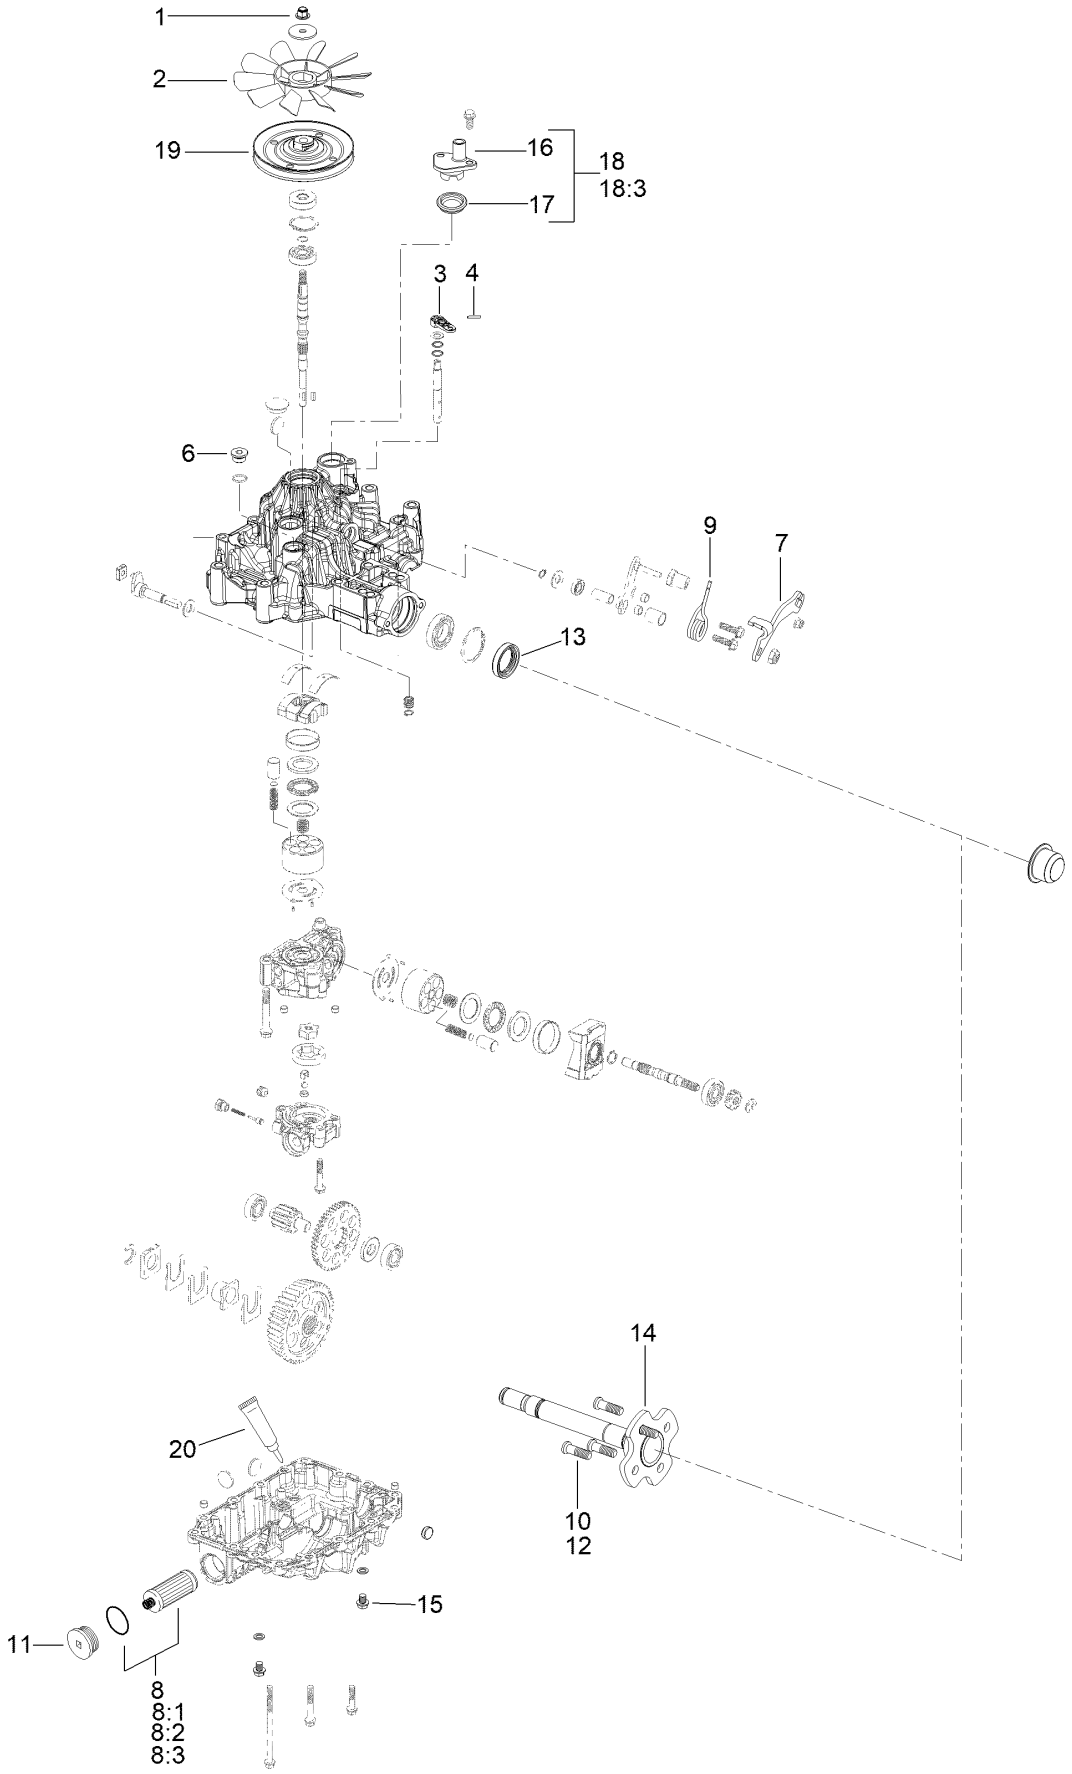


RH Transmission Assembly No. 161-9807 (continued)

Ref.	Part Number	Qty.	Description
1	132-4737	1	Nut-Lock
2	132-4738	1	Fan
3	104-3265	1	Pin
4	132-4700	1	Lever-Bypass
5	161-7917	1	Brake Kit, X ●
6	132-4735	1	Cap-Oil
7	161-7915	1	Lever-Control, RH
8	144-3842	1	2 Transmission Filter Kit
8:1		2	Filter (1A6370-26450) ■
8:2	136-5410	2	O-Ring
8:3		4	Sealing Washer ●■
9	137-4109	1	Spring-Torsion
10	137-9509	1	Stud-Wheel
11	138-4613	1	Cap-Oil Filter
12	137-9509	4	Stud-Wheel
13	139-5587	1	Seal-Axle, Ua
14	163-7372	1	Axle ASM Kit
14:1		2	Thrust Washer ●■
14:2		1	Oil Seal Ua18Lip ●■
14:3		1	Collar 25.4 ●■
14:4		1	Flange ASM, Axle ●■
14:5		1	Bearing 6006 ●■
14:6		1	Ring 20 ●■
14:7		1	Bushing ●■
14:8		1	Ring 55 ●■
15	139-5589	2	Drain Bolt
16	139-5590	1	Expansion Fitting
17	139-5591	1	Grommet Seal, Expansion Fitting
18	139-7871	1	Expansion Fitting - W/ Seal
18:3		1	M8*20 Flange Bolt ■
19	161-7916	1	Pulley
20	163-4197	1	Seal Kit, Hydro ●

● Not illustrated

■ Not serviced separately


Hydraulic Hose Assembly

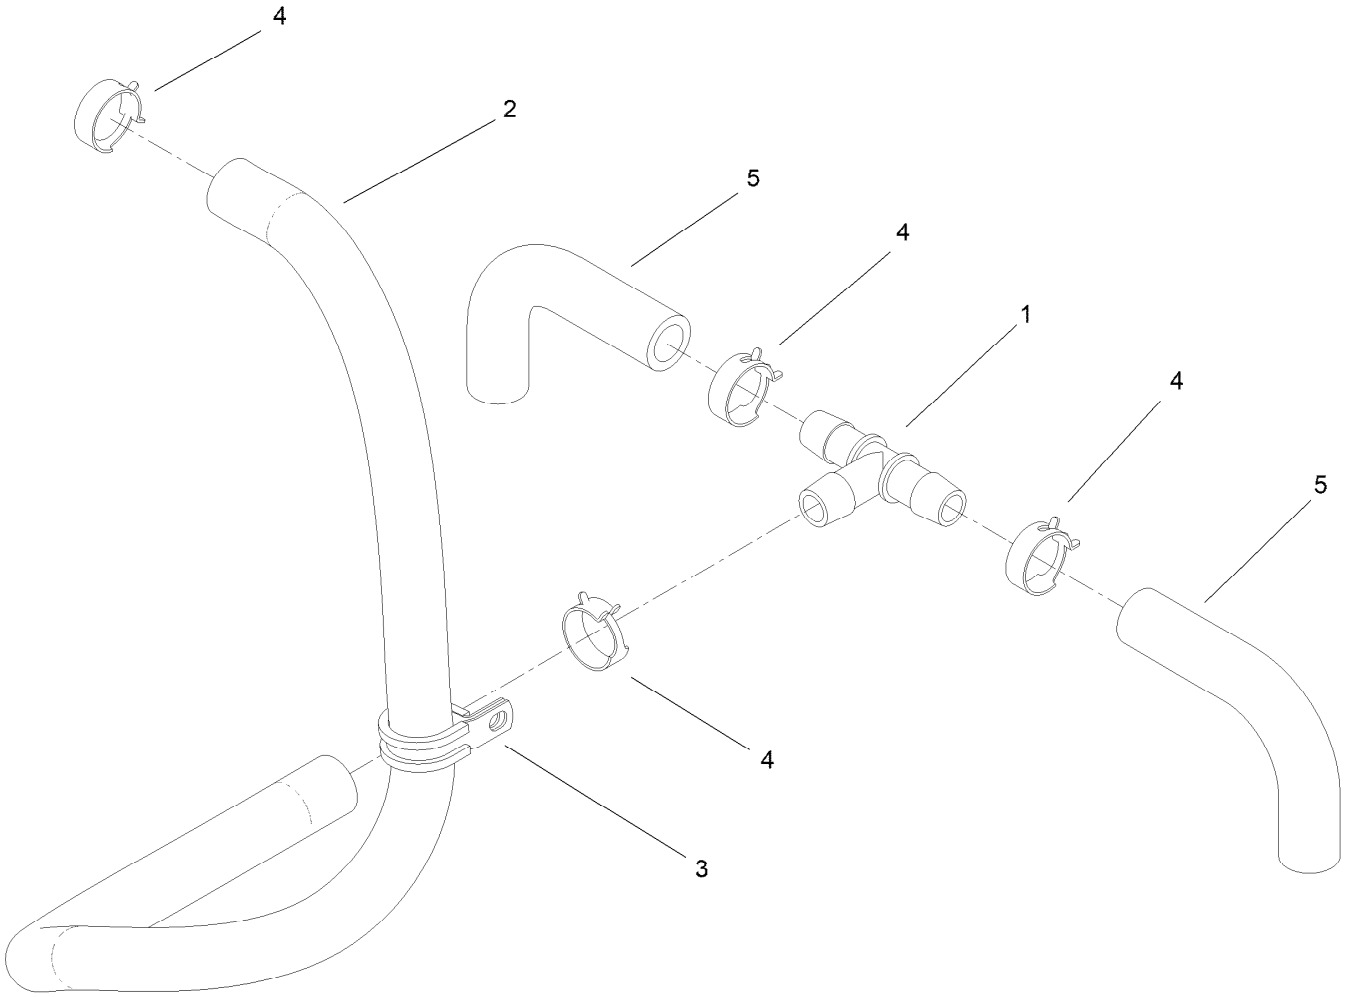

Hydraulic Hose Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-4055	1	Fitting Tee
2	145-1644	1	Hydraulic Hose
3	147-0201	1	R-Clamp
4	145-3599	4	Hose Clamp
5	145-6177	2	Hose-Hydraulic


Motion Control Assembly

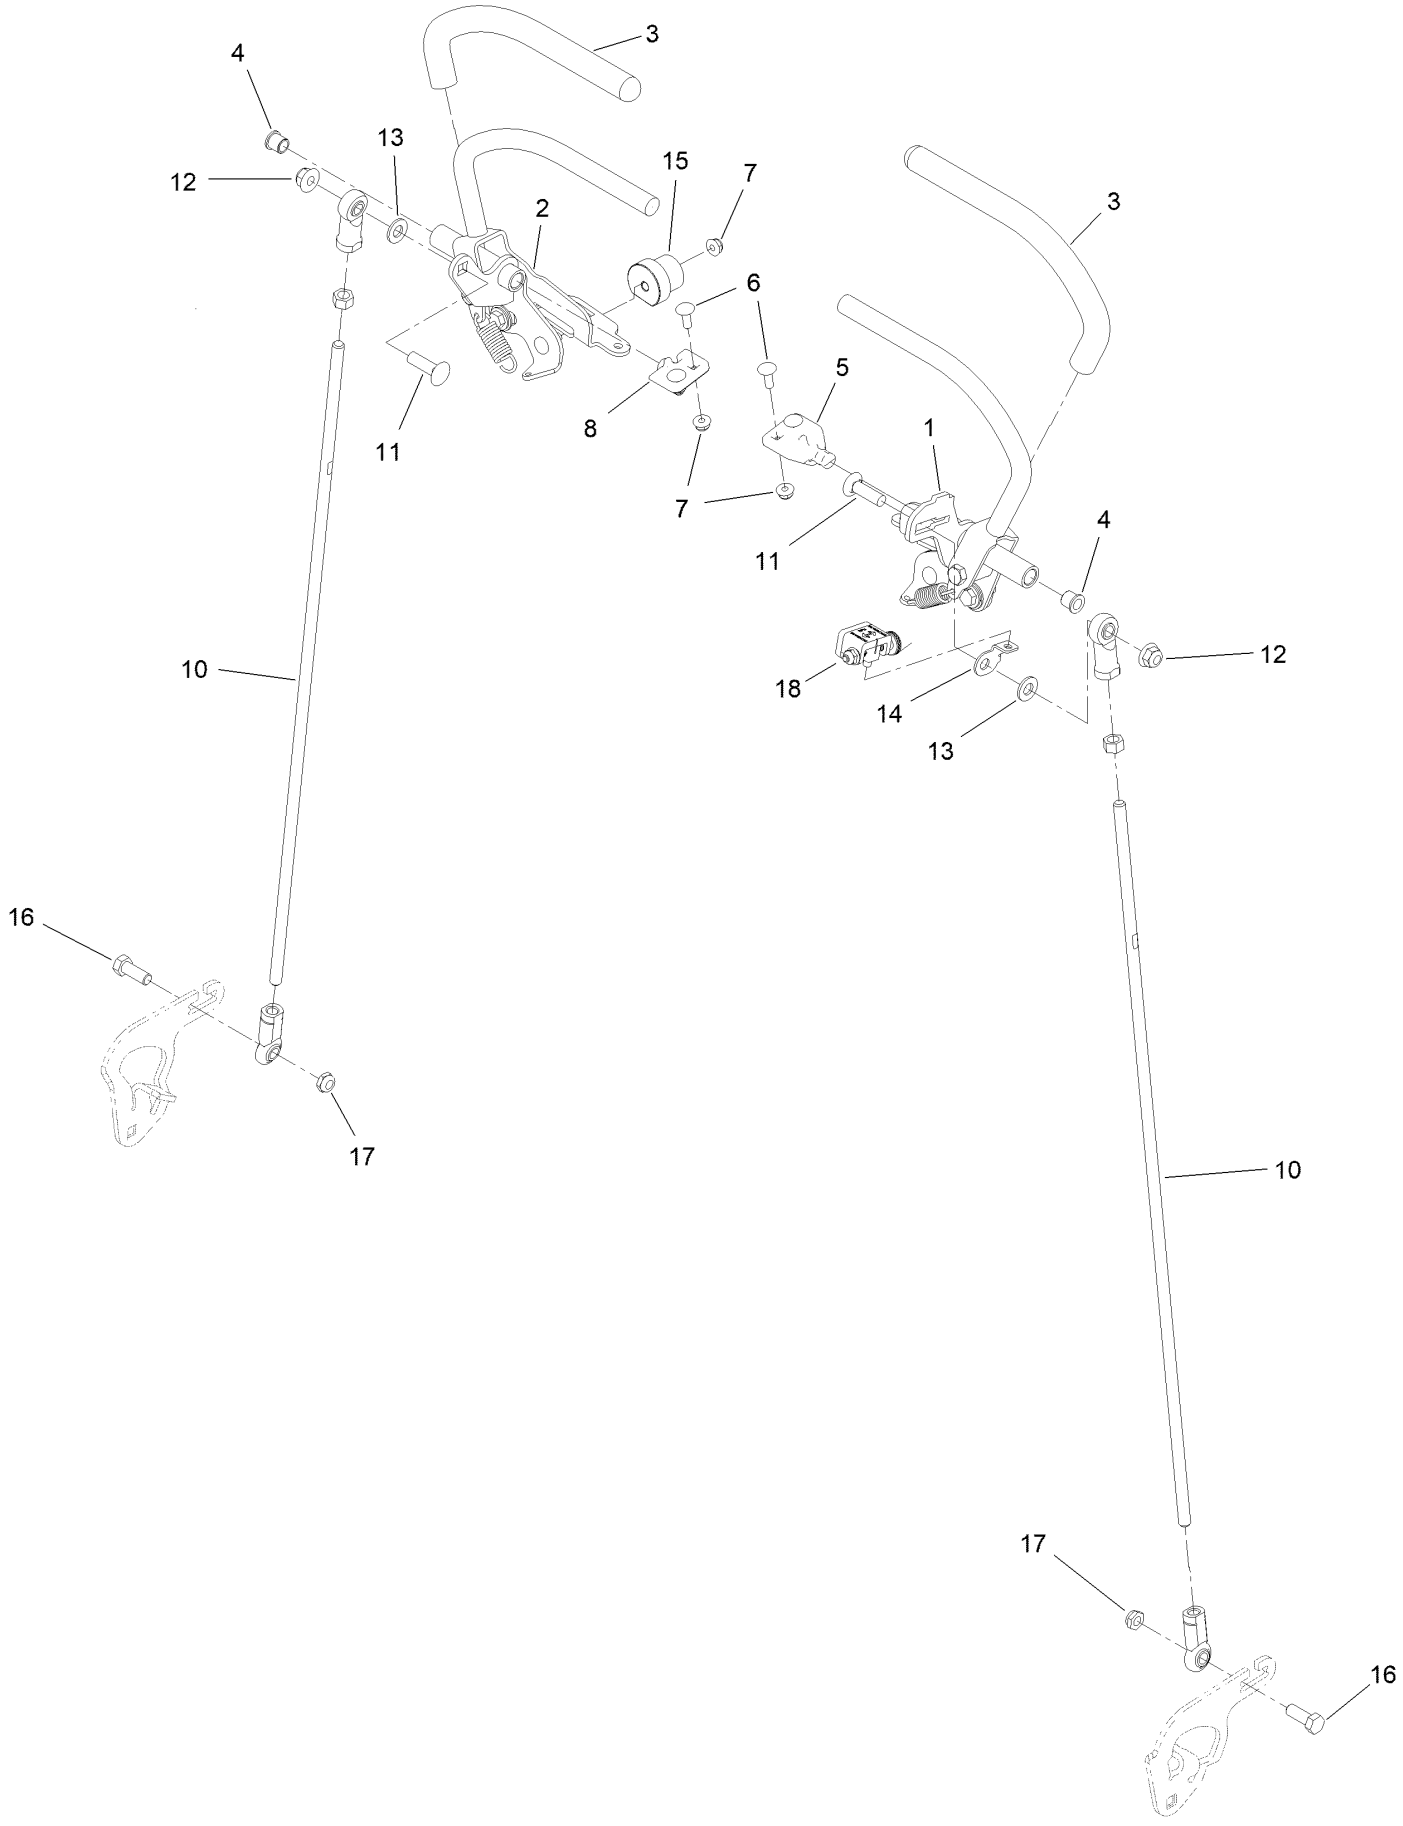

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-5157	1	LH Control Handle ASM
2	132-5158	1	RH Control Handle ASM
3	119-0222	2	Grip
4	103-9928	2	Bearing
5	120-3288	1	Tab-Pivot, LH
6	3229-1	4	Screw-CARR
7	104-7201	6	Nut-HF, NI
8	120-3287	1	Tab-Pivot, RH
10	161-2803	2	RH Control Rod ASM
11	3231-28	2	Screw-CARR
12	119-4042	2	Nut-HF, NI
13	3256-24	2	Washer-Plain
14	132-7538	1	Bracket-Adjustment, Speed
15	126-1499	2	Cam
16	323-6	2	Screw-HH
17	3296-59	2	Nut-Lock, NI
18	132-7595	1	Speed Setting Tool


Control Handle Assembly No. 132-5157

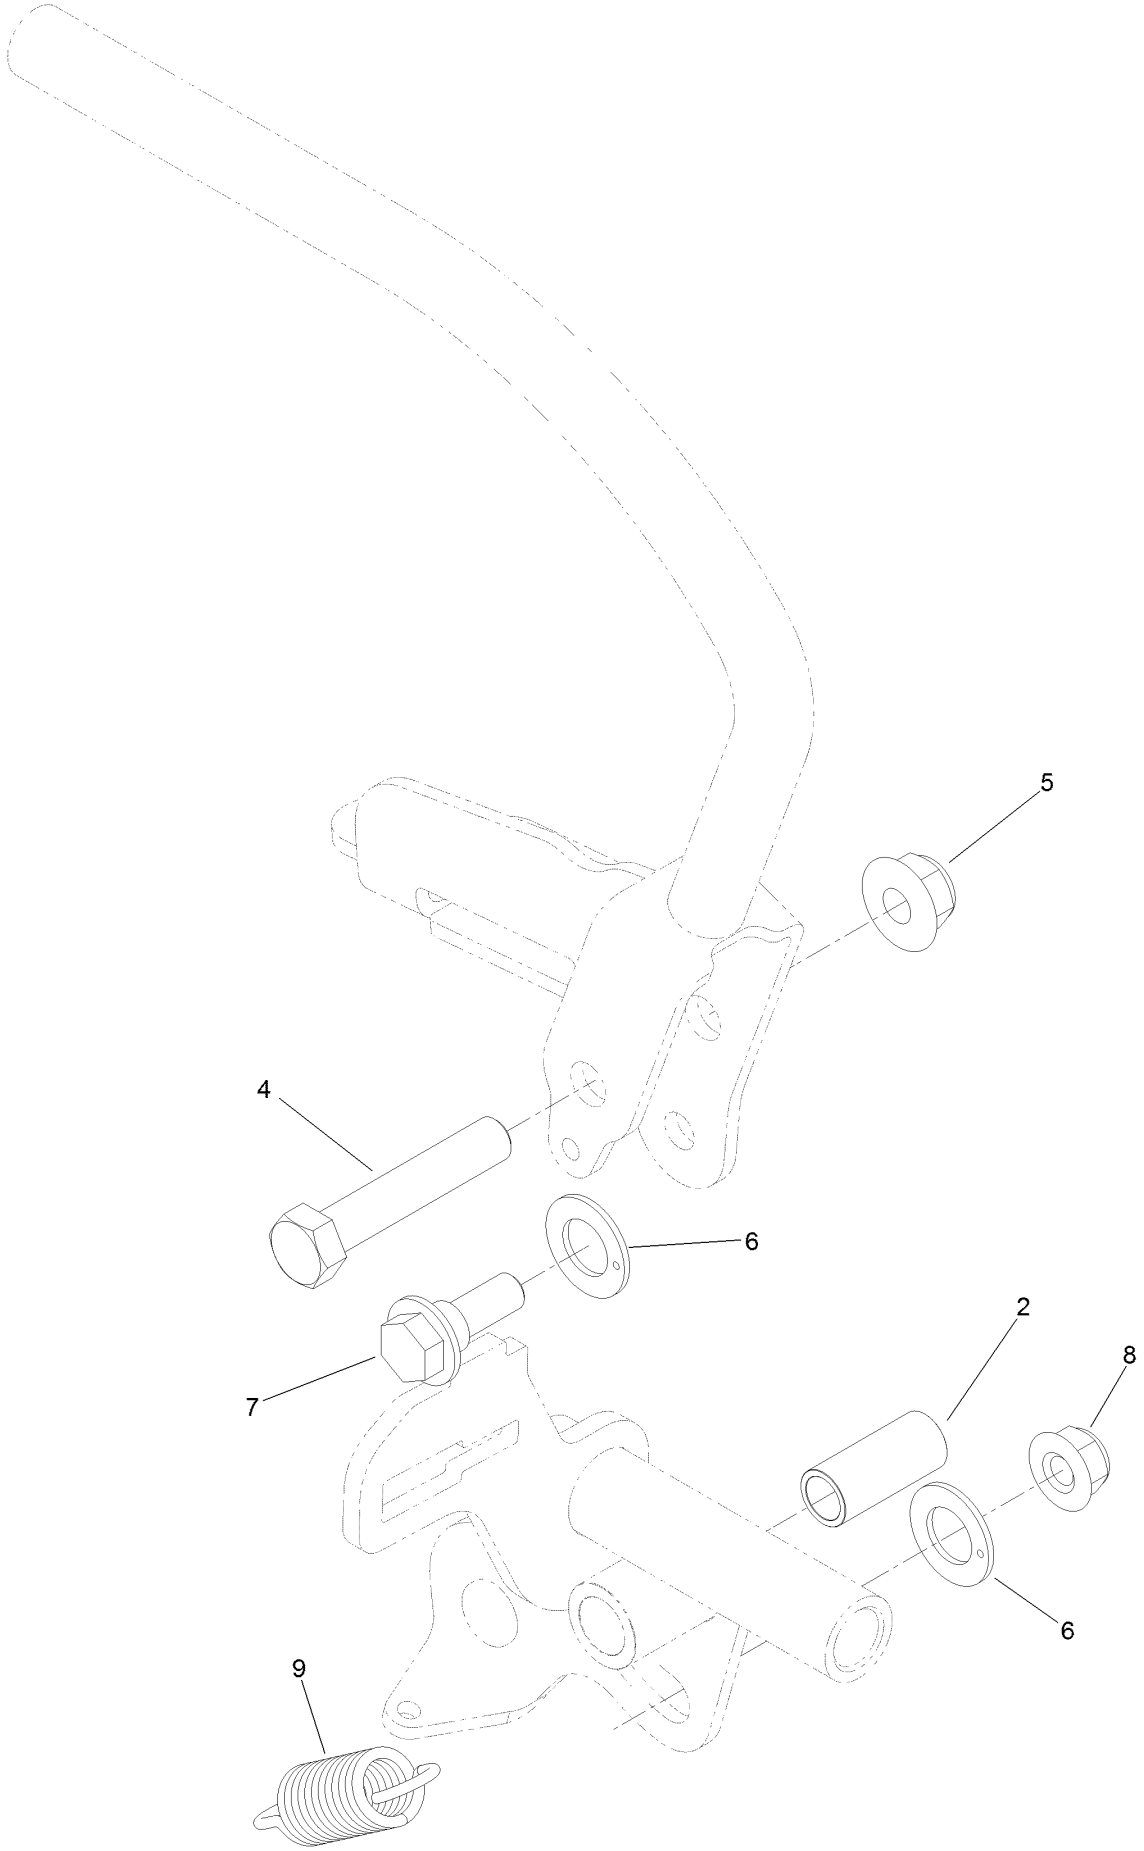


Control Handle Assembly No. 132-5157 (continued)

Ref.	Part Number	Qty.	Description
2	131-3562	1	Bearing-Sleeve
4	323-10	1	Screw-HH
5	119-4042	1	Nut-HF, NI
6	110-7191	2	Washer-Thrust
7	116-2670	1	Screw-Shoulder
8	119-4041	1	Nut-HF
9	132-5146	1	Spring-Extension

Control Handle Assembly No. 132-5158

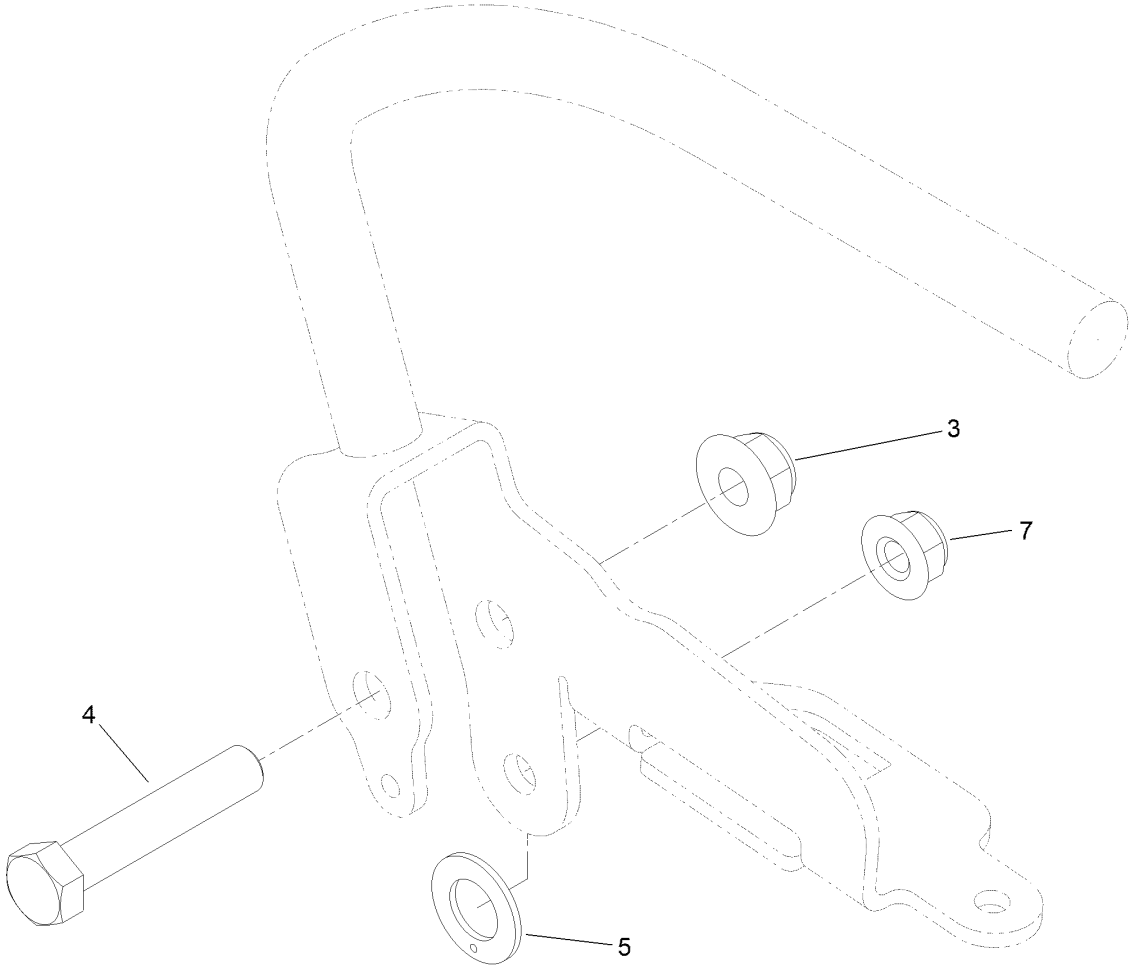


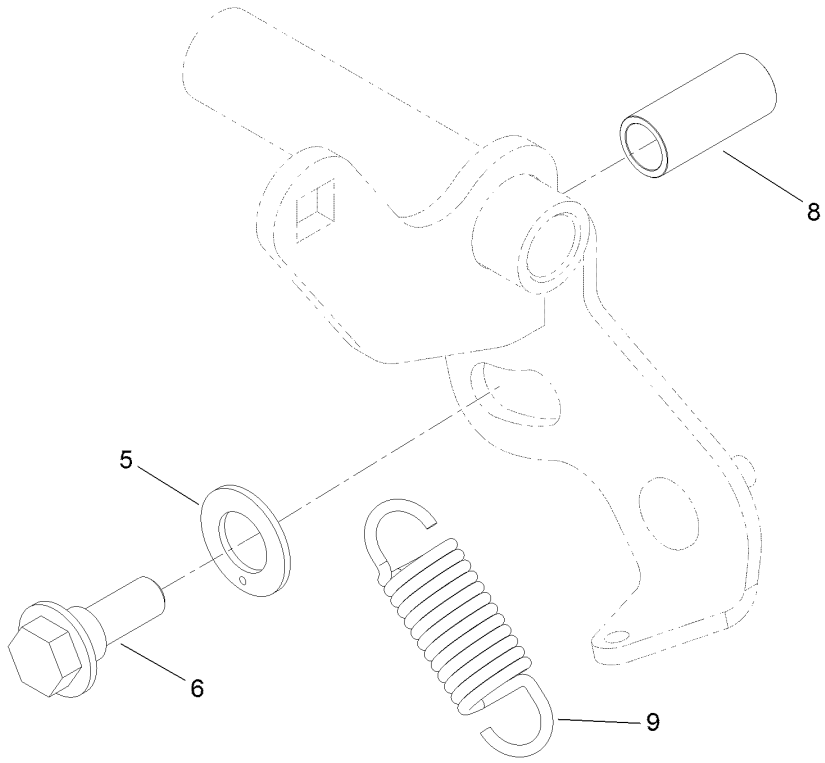

Control Handle Assembly No. 132-5158 (continued)

Ref.	Part Number	Qty.	Description
3	119-4042	1	Nut-HF, NI
4	323-10	1	Screw-HH
5	110-7191	2	Washer-Thrust
6	116-2670	1	Screw-Shoulder
7	119-4041	1	Nut-HF
8	131-3562	1	Bearing-Sleeve
9	132-5146	1	Spring-Extension


Parking Brake Assembly

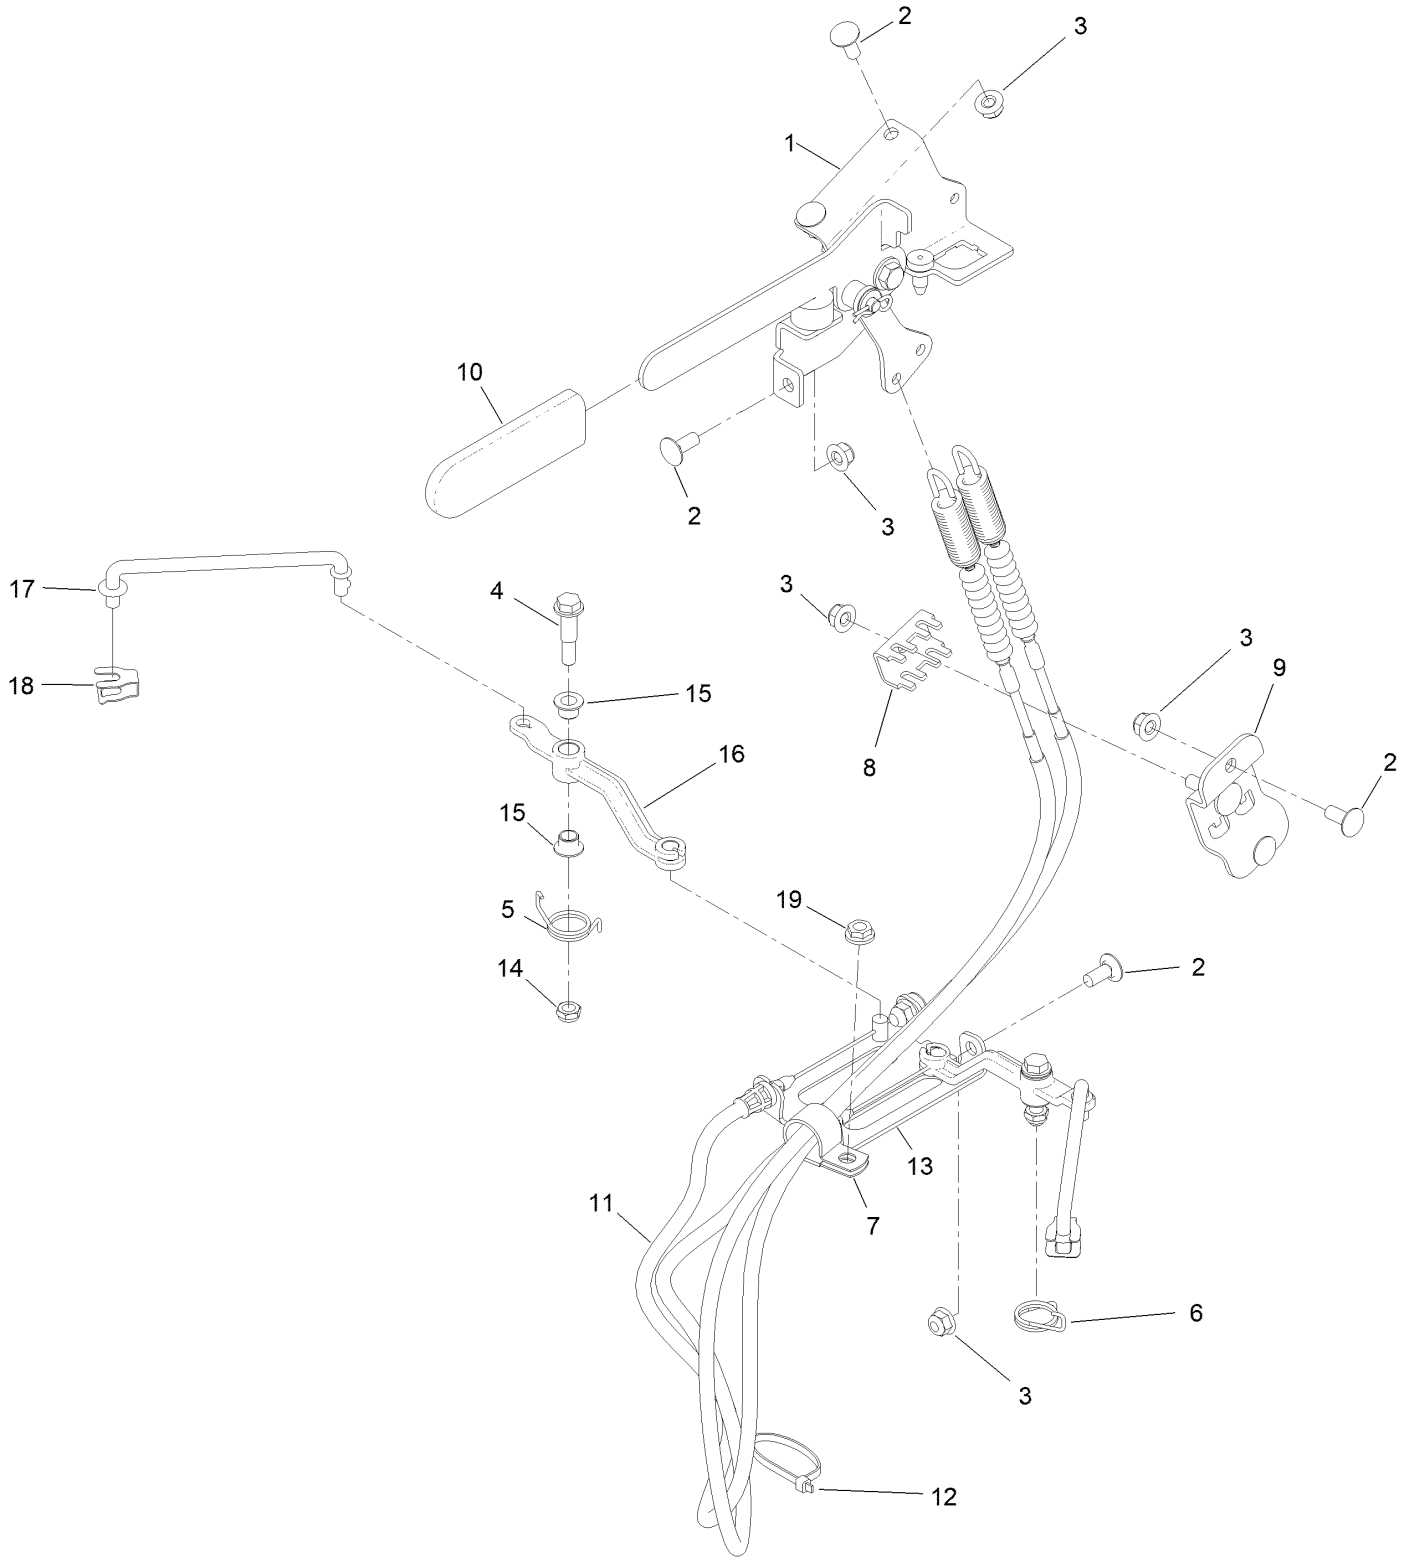

Parking Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-5170	1	Brake Handle ASM
2	137-3061	7	Bolt-CARR
3	119-4041	8	Nut-HF
4	116-8607	2	Screw-Shoulder
5	139-1508	1	Spring-Torsion
6	139-1538	1	Spring-Torsion
7	2412-39	1	Clamp-R
8	132-1187	1	Clamp-Cable
9	132-7582	1	Mount-Cable, Brake
10	1-633268	1	Grip-Lever
11	145-1643	2	Cable-Brake
12	3290-378	1	Tie-Cable
13	147-3494	1	Bracket-Cable, Mount
14	3296-47	2	Nut-Lock,NI
15	137-2374	4	Bushing-Flange
16	147-4801	2	Arm-Brake
17	147-3484	2	Rod-Brake
18	147-4783	2	Retainer-Rod
19	32128-20	1	Nut-HF


Deck Lift Assembly

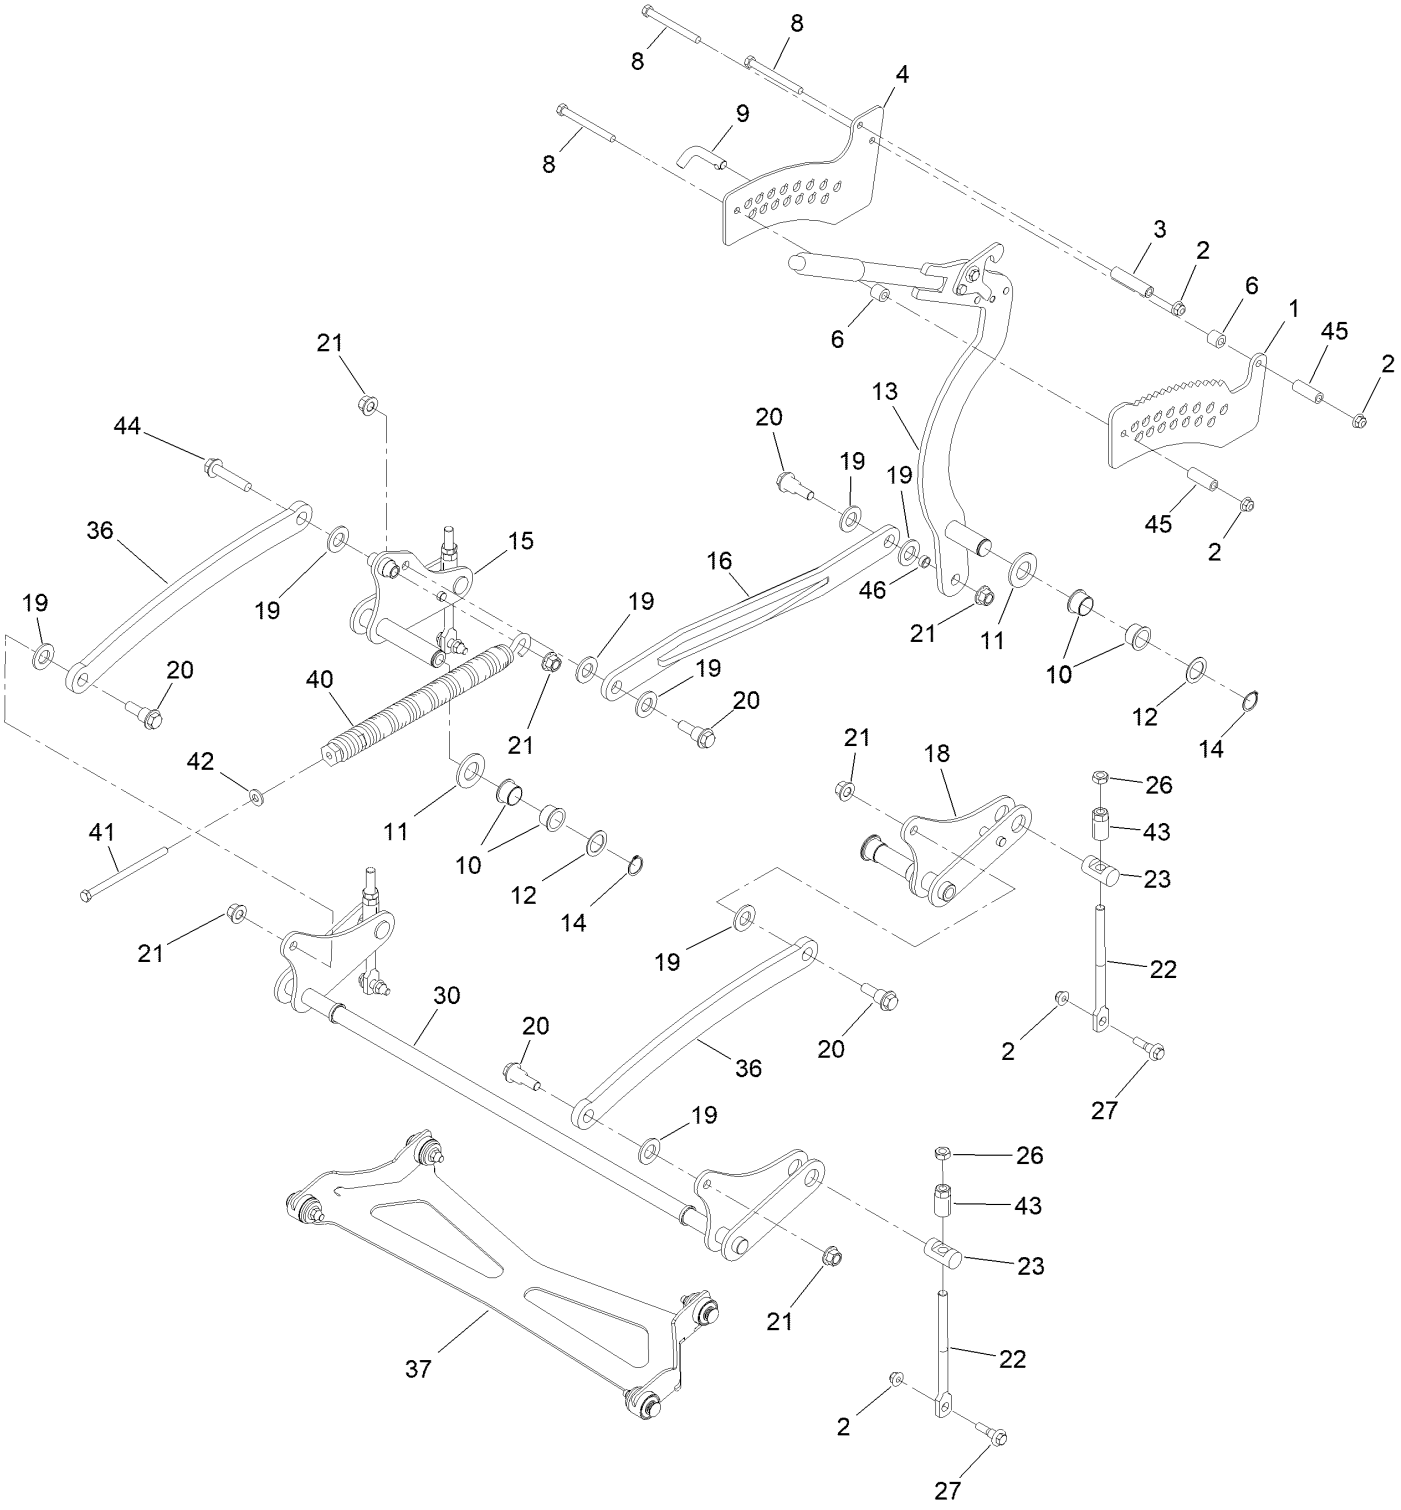

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-4887	1	Plate-HOC, Inner
2	119-4042	7	Nut-HF, NI
3	138-1111	1	Spacer
4	132-7581	1	HOC Plate And Decal ASM
6	121-1760	2	Spacer
8	116-4701	3	Screw-HHF
9	116-5584	1	Pin-HOC
10	127-0369	6	Bushing
11	3256-62	3	Washer-Plain
12	10-8110	3	Washer-Thrust
13	161-6735	1	HOC Lever ASM
14	32151-29	3	Ring-Retaining
15	147-2441-03	1	RH Rear Lift Arm ASM [black]
16	147-4810-03	1	HOC Link ASM [black]
18	147-2446-03	1	LH Rear Lift Arm ASM [black]
19	3256-28	8	Washer-Flat
20	116-0780	5	Screw-Shoulder, HHF
21	139-1689	6	Nut-HF
22	147-4822	4	Link-Adjuster, Deck Lift
23	109-8353	4	Trunnion
26	3218-5	4	Nut-Jam
27	130-0742	4	Bolt-Shoulder
30	163-0503-03	1	Front Cross Shaft ASM [black]
36	147-4768-03	2	Link Arm - Lift 72
37	147-4557	1	ASM-Deck Strut W/Bushings
40	116-0886	1	Spring-Extension
41	323-58	1	Bolt-TAP, HH
42	98-5975	1	Washer-Belleville
43	109-7840	4	Adjuster-Lift, Deck
44	127-7444	1	Screw-HHF
45	95-6448	2	Spacer
46	138-2235	1	Spacer


HOC Lever Assembly No. 161-6735

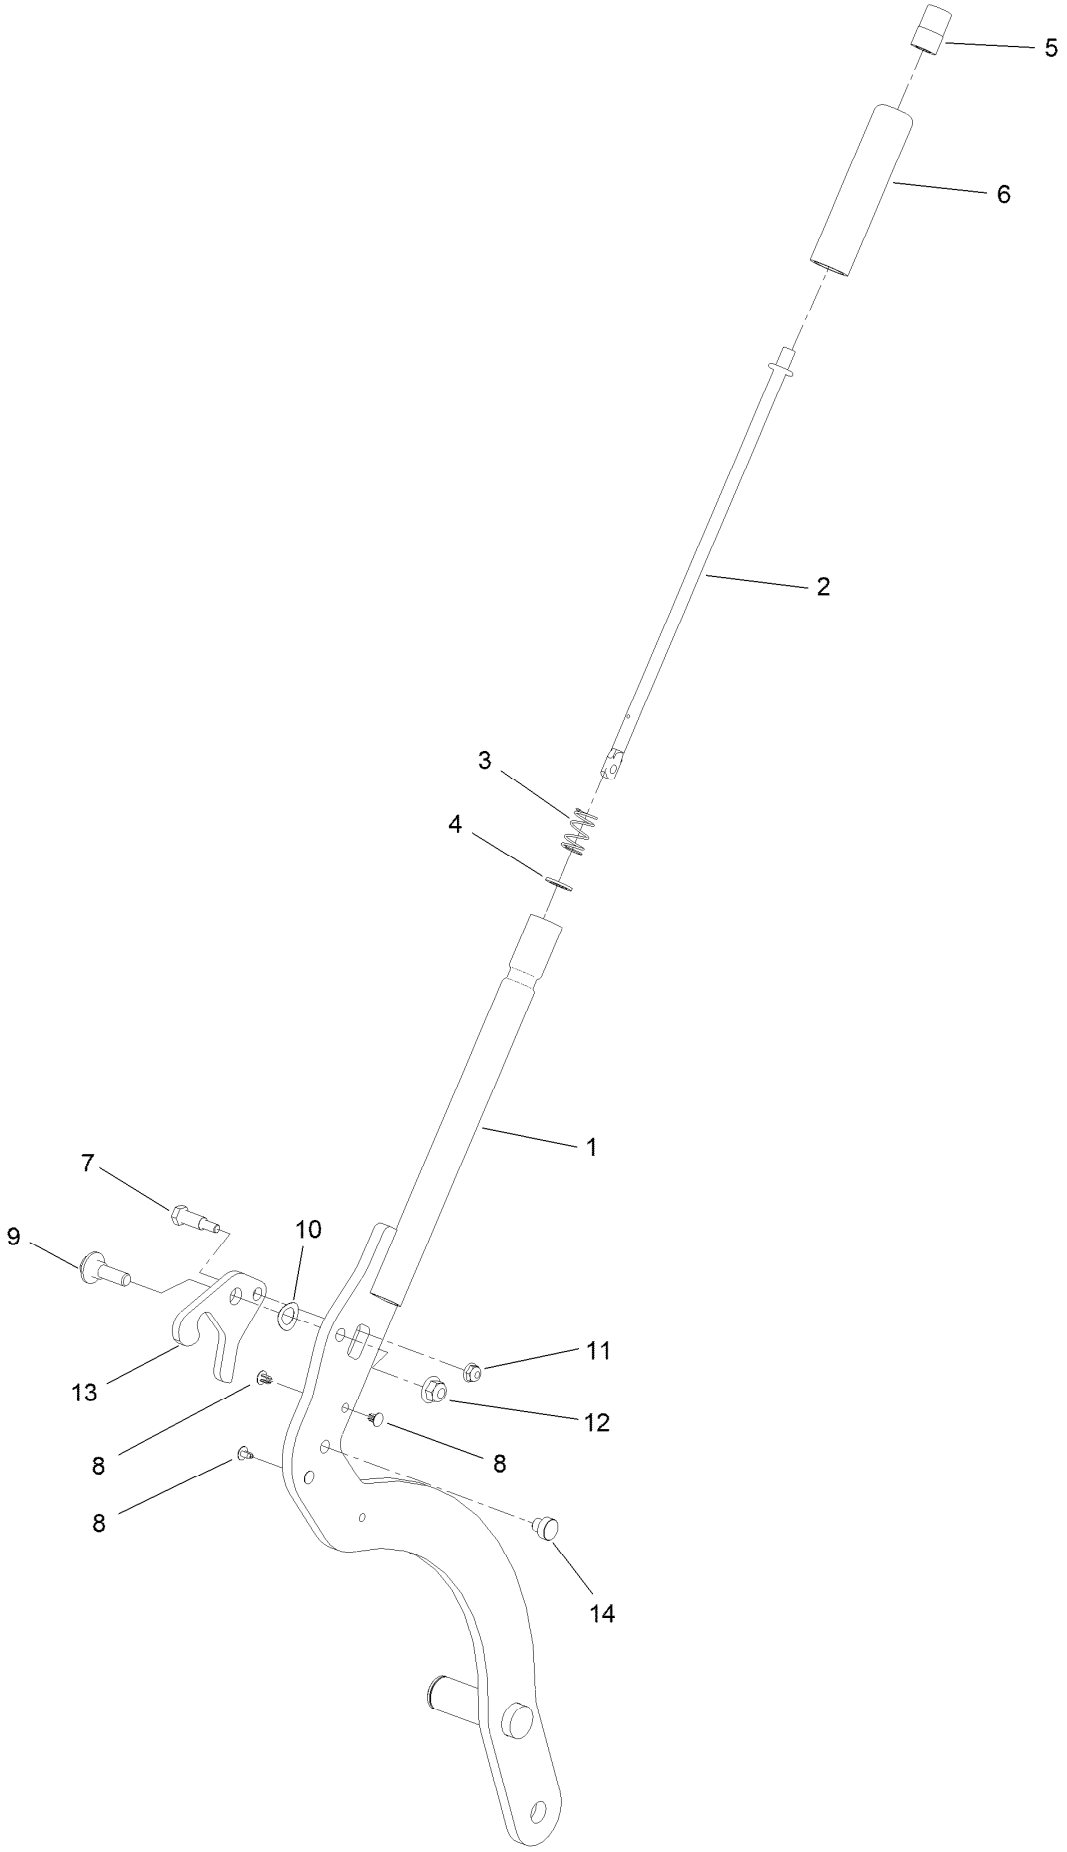

HOC Lever Assembly No. 161-6735 (continued)

Ref.	Part Number	Qty.	Description
1	161-6736-01	1	Lift Lever ASM [red]
2	136-0530	1	Rod-Latch, Release
3	114-8187	1	Spring-Compression
4	114-1207	1	Washer-Special
5	115-2750	1	Knob
6	115-3592	1	Grip
7	119-2309	1	Bolt-Shldr,HH
8	103-1363	4	Rivet
9	614672	1	Screw-Shoulder, HWH
10	110-8982	1	Washer-Spring
11	104-7201	1	Nut-HF, NI
12	119-4042	1	Nut-HF, NI
13	138-4888	1	Latch-HOC
14	138-4863	1	Plug-Wear


Deck Strut Assembly No. 147-4557

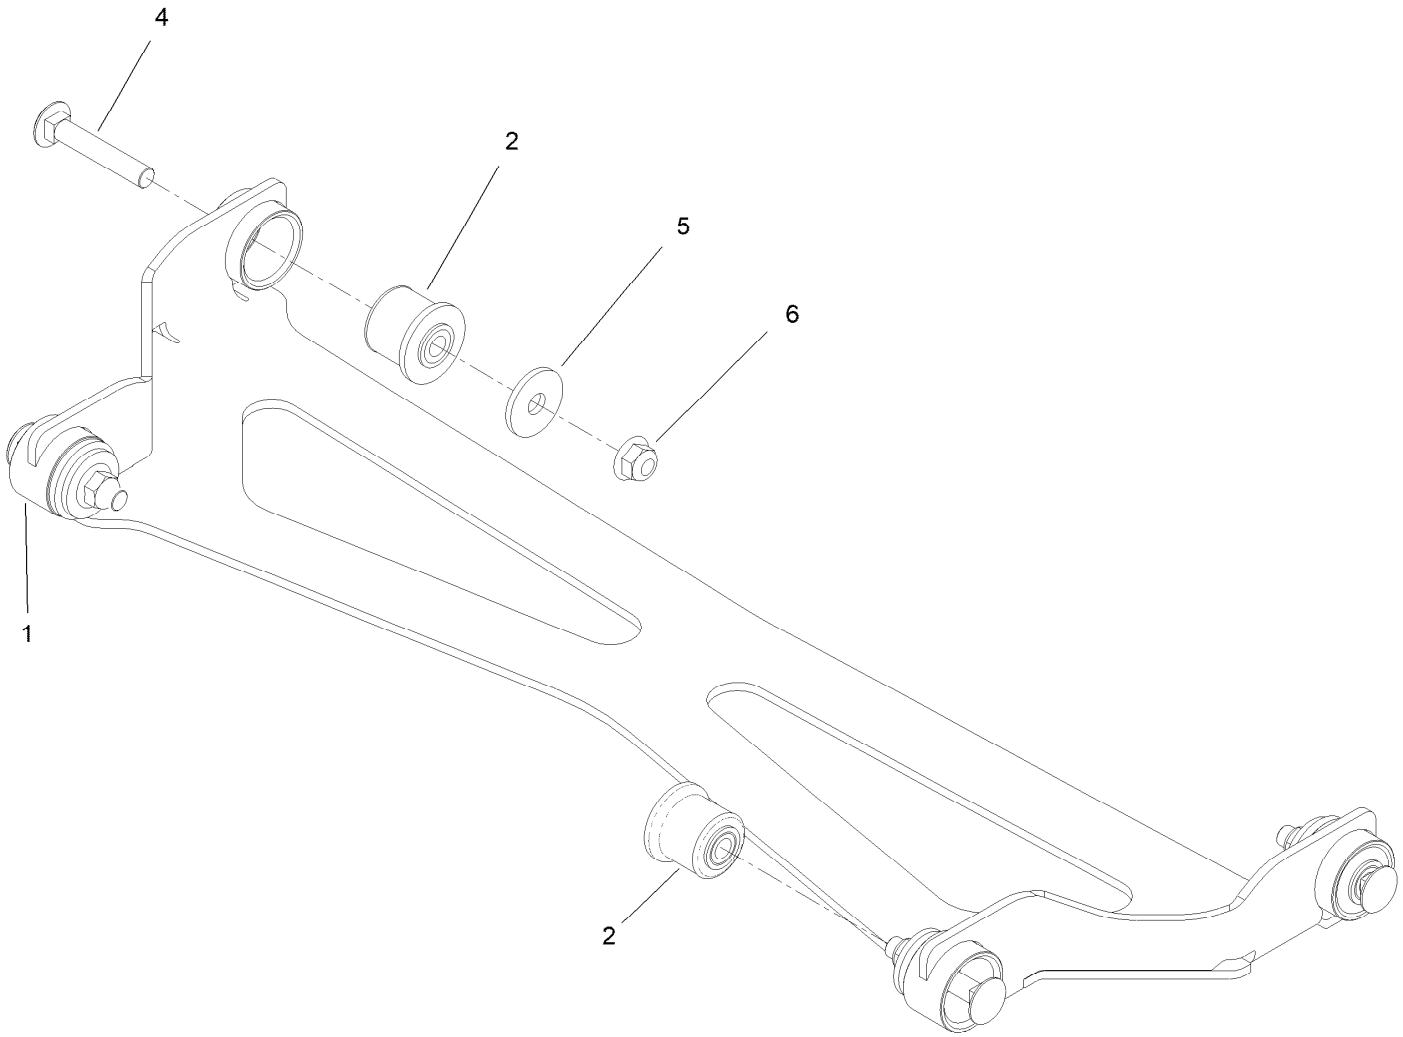

Deck Strut Assembly No. 147-4557 (continued)

Ref.	Part Number	Qty.	Description
1	147-4558-03	1	ASM-Deck Strut [black]
2	147-7351	4	Spacer, Bushing ASM
4	3231-7	4	Screw-CARR
5	2844	4	Washer
6	119-4042	4	Nut-HF, NI


Frame Assembly

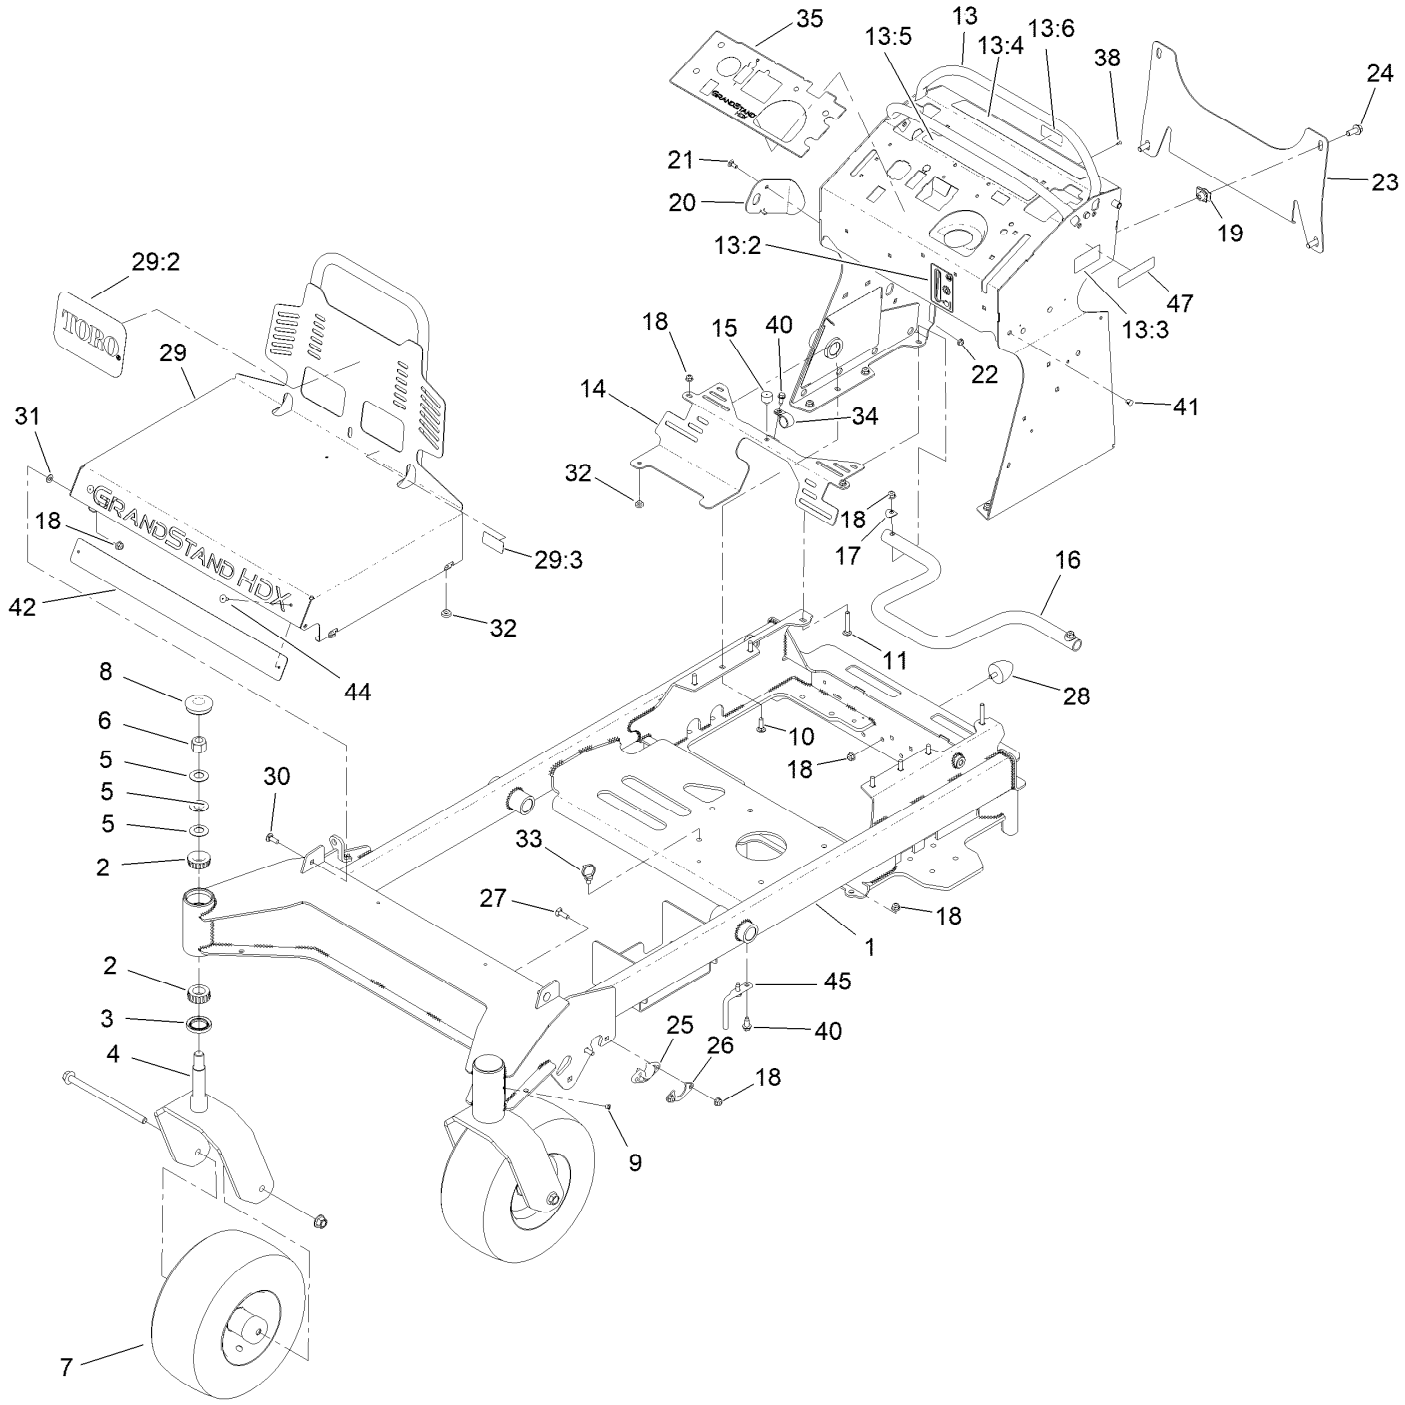

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-3490-01	1	Frame-72 [red]
2	1-543509	4	Bearing-Roller, Tapered
3	116-5647	2	Seal-Grease
4	142-9968-01	2	Caster-Fork
5	1-633508	6	Washer-Bellville
6	3296-51	2	Nut-Lock, NI
7	140-4896	2	Semi Pneumatic ASM 13X6.50-6
8	144-0375	2	Cap-Grease
9	1-811010	2	Plug
10	3230-2	6	Bolt-CARR
11	3230-6	2	Bolt-CARR
13	145-5163	1	Tower Decal ASM
13:2	147-7921	1	Decal-Oil Level
13:3	116-8775	1	Decal-Fill, Fuel
13:4	146-8696	1	Decal-Warning
13:5	131-3526	1	Decal-Controls
13:6	147-0212	1	Decal - Fuse
14	161-1339-01	1	Guard-Fan
15	120-7893	1	Bumper-Grommet
16	145-1586-01	1	Tube-Fuel Tank Mount
17	137-3009	2	Washer-Cup
18	119-4041	19	Nut-HF
19	105-4886	4	Nut-Tinnerman
20	147-4952	1	Plate-Striker
21	3229-11	1	Screw-CARR
22	104-7201	1	Nut-HF, NI
23	147-4771-05	1	Bracket-Cross
24	3234-42	4	Screw-HHF
25	139-5872	2	Bearing-Flange
26	116-2887	2	Gusset-Lift, Deck
27	3230-22	4	Screw-CARR
28	1-543963	3	Bumper-Rubber
29	163-4104	1	Engine Guard ASM W/Decals
29:2	104-7213	1	Decal
29:3	133-4641	1	Decal-Warning, No Riders
30	3230-10	2	Bolt-CARR
31	93-6079	2	Spacer-Nylon
32	1-513658	6	Bumper
33	32180-030	1	Clip-Tie
34	2412-39	1	Clamp-R
35	147-4765	1	Decal-Panel Control, Briggs
38	3290-271	2	Rivet-Pop
40	32144-70	3	Screw-HWHTF
41	104-9368	3	Plug-Dome
42	147-4805-01	1	Plate-Backing
44	130-8451	2	Rivet-Trifold
45	147-4825	1	Guide-Belt
47	133-8062	1	Decal-Spark Arrestor

Wheel and Bearing Assembly

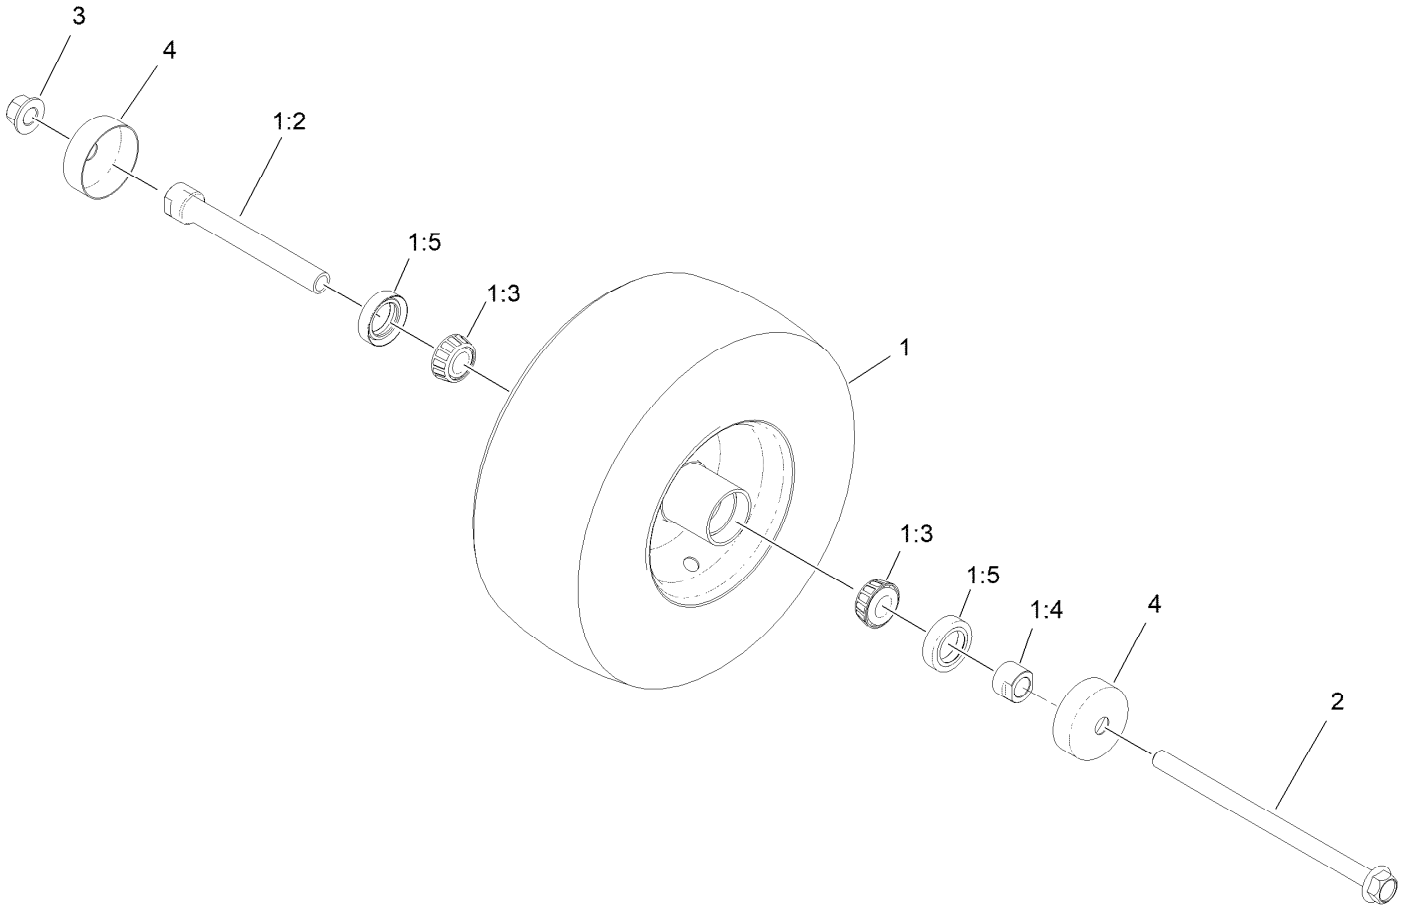


Wheel and Bearing Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Wheel And Bearings ASM ●
1:2	126-7796	1	Caster Axle ASM
1:3	1-633585	2	Bearing-Cone, Taper
1:4	103-3051	1	Spacer-Nut
1:5	103-0063	2	Seal-Caster
2	126-5389	1	Screw-HHF
3	139-1689	1	Nut-HF
4	103-2768	2	Guard-Seal

● Not serviced separately


Platform Assembly

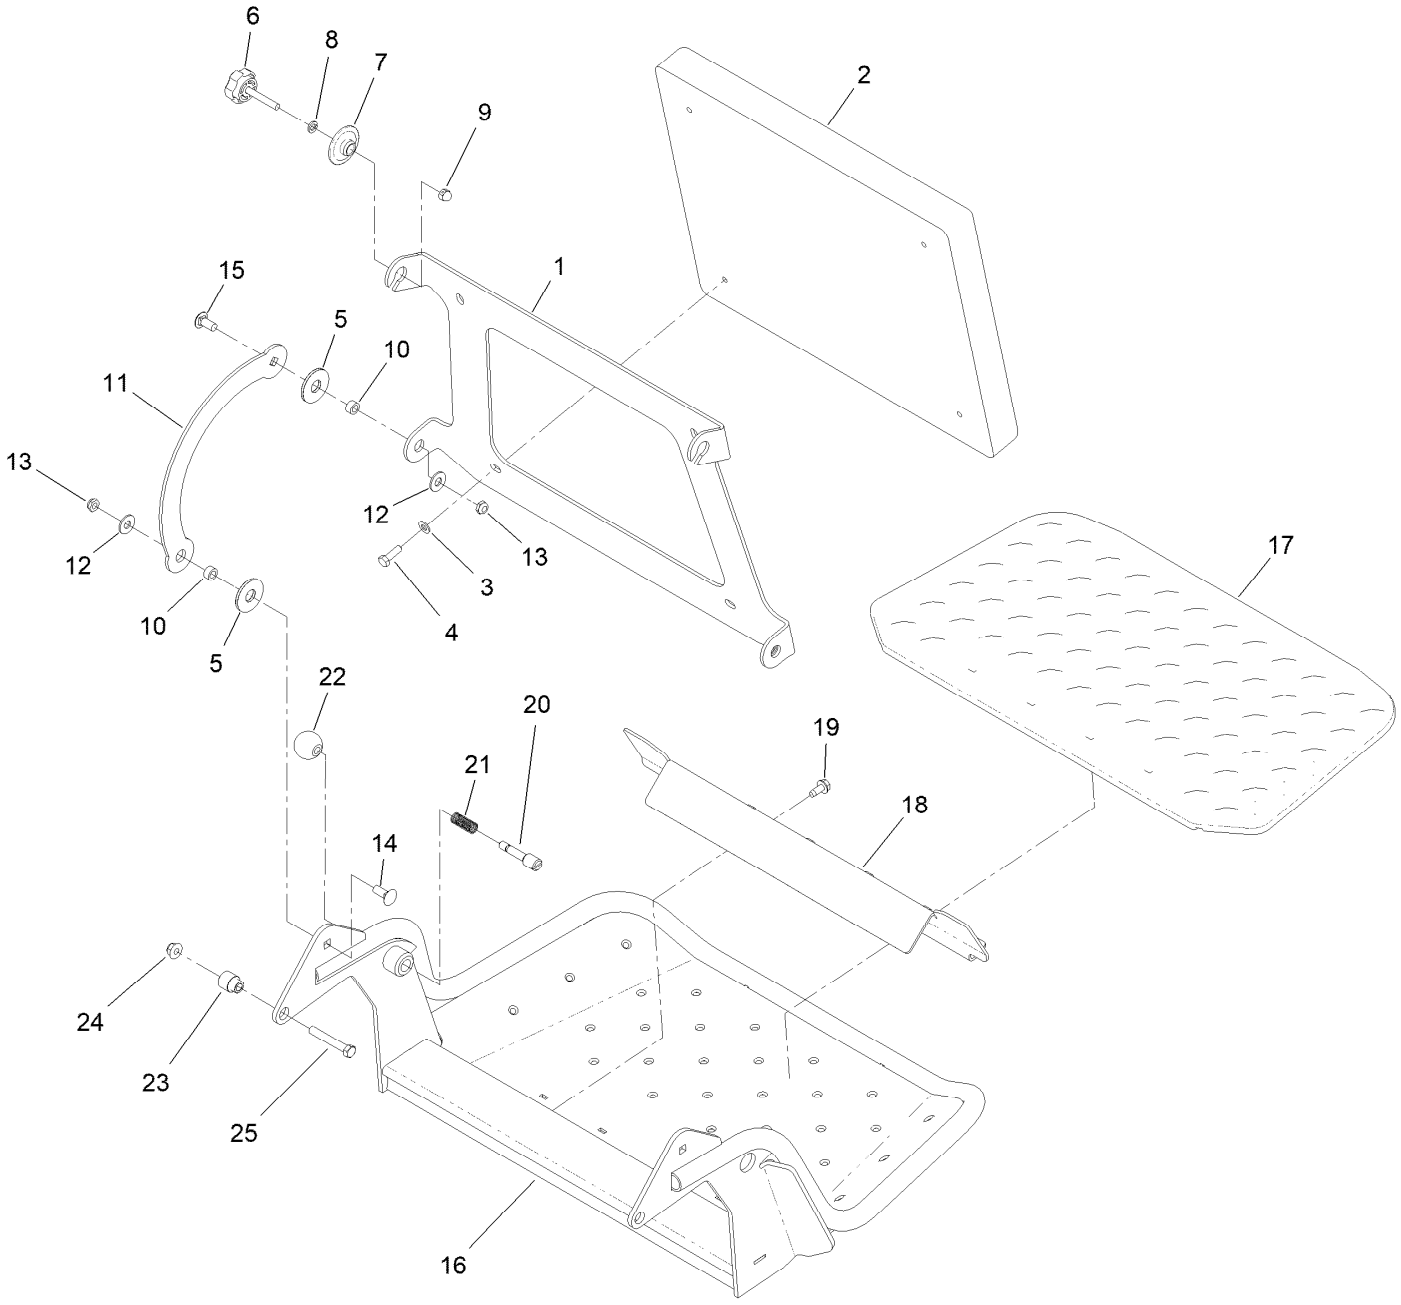

Platform Assembly (continued)

Ref.	Part Number	Qty.	Description
1	120-8499-05	1	Hinge-Pad
2	147-4839	1	Cushion-Pad
3	3256-23	4	Washer-Plain
4	121-7999	4	Screw-HH, Patch
5	114-0463	4	Washer-Friction, Composite
6	133-1426	2	Knob
7	116-2886	2	Slide-Bushing
8	3253-4	2	Washer-Lock
9	137-4808	2	Nut-Acorn
10	111044	4	Spacer
11	114-1915-01	2	Link-Pad
12	3256-4	4	Washer-Flat
13	3296-59	4	Nut-Lock, NI
14	3231-2	2	Bolt-CARR
15	3231-27	2	Screw-CARR
16	163-3498-01SP	1	Platform ASM
17	126-7157	1	Mat-Platform
18	161-6798	1	Shield Clamp Kit
19	32144-70	2	Screw-HWHTF
20	119-8650	1	Pin-Latch
21	114-5348	1	Spring
22	1-603175	1	Knob-Ball
23	132-7583	2	Bushing-Flanged
24	119-4042	2	Nut-HF, NI
25	323-47	2	Screw-HH

Engine Assembly

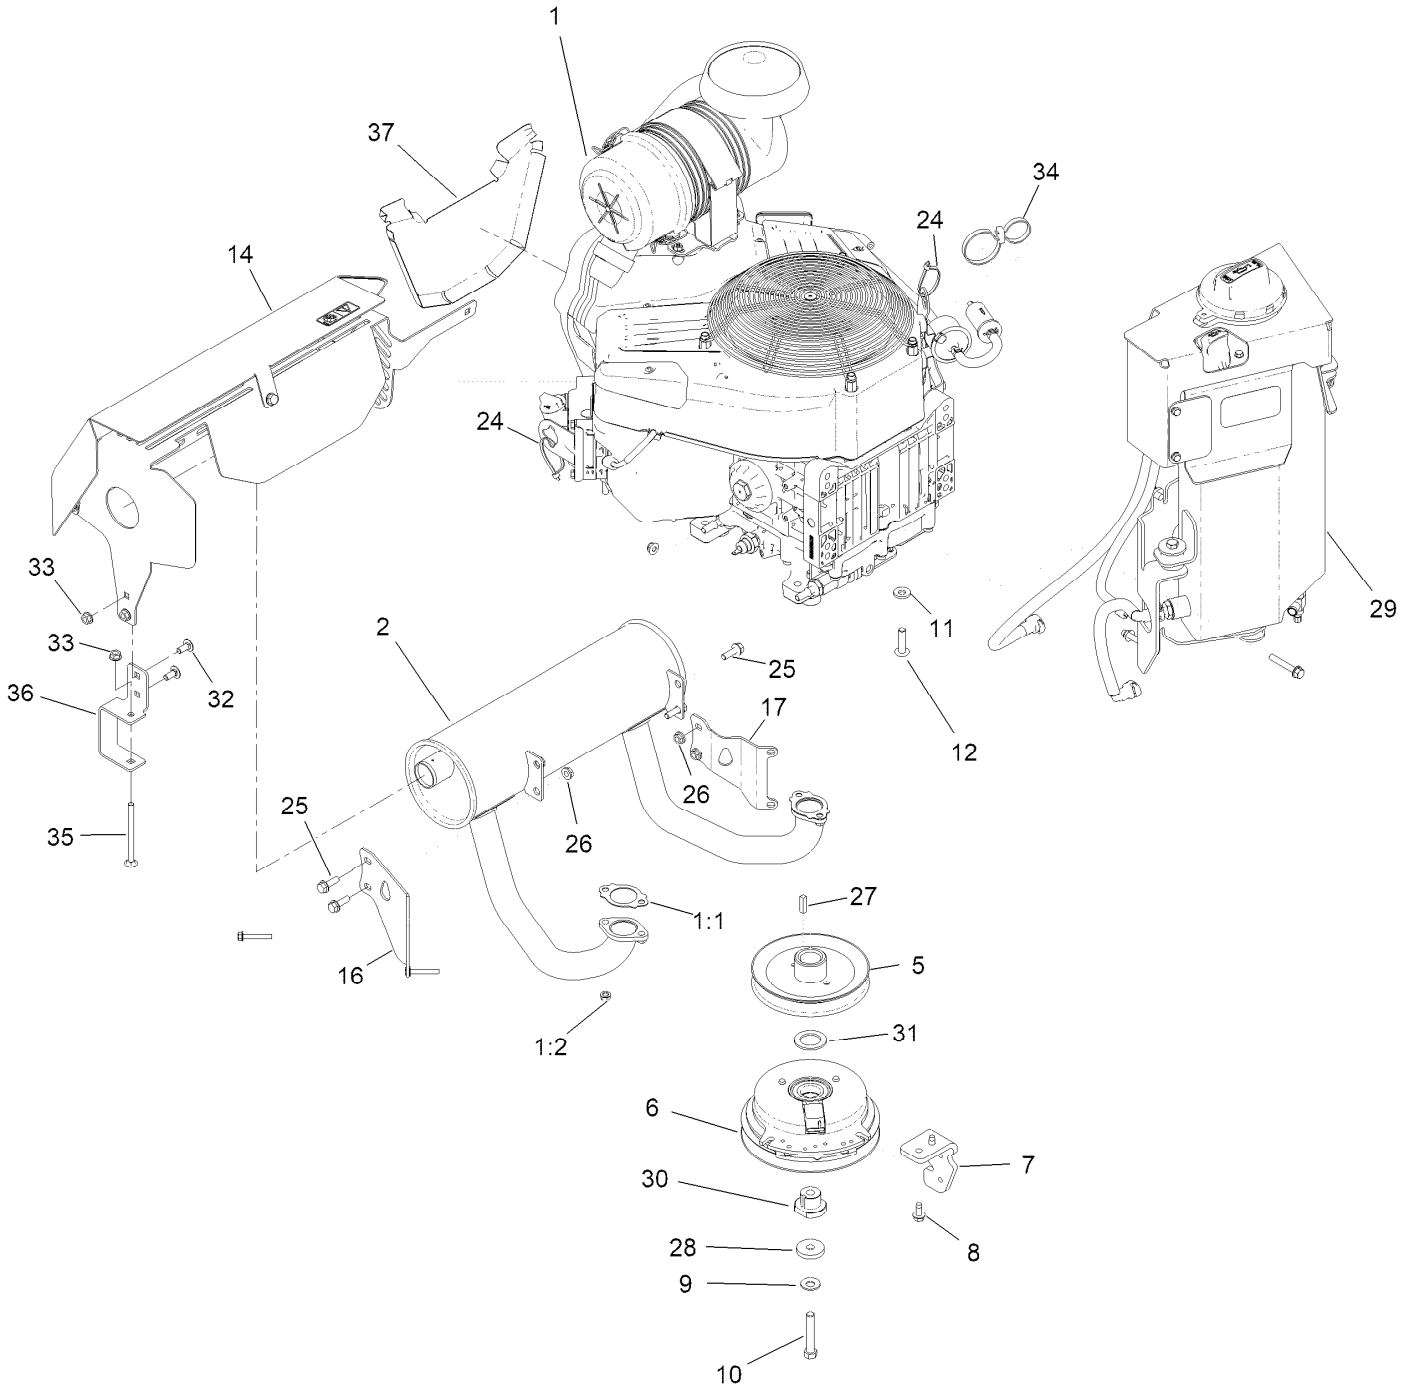


Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine Vanguard EFI ■▲
1:1	142-6842	2	Gasket-Exhaust
1:2	142-6843	4	Nut-Hex
2	145-6193	1	Muffler, Basco 37HP
5	145-6115	1	Pulley
6	139-7910	1	Clutch-200Cms
7	147-0345-05	1	Bracket, Clutch Stop
8	32144-70	2	Screw-HWHTF
9	1-603610	1	Washer-Spring
10	3212-10	1	Screw-HH
11	98-5975	4	Washer-Belleville
12	126-0983	4	Screw-BHTF
14	146-8324	1	ASM-Muffler Guard
16	147-3499	1	Bracket-Muffler
17	147-4750	1	Bracket-Muffler
24	3290-378	2	Tie-Cable
25	3234-17	4	Screw-HHF
26	32128-20	4	Nut-HF
27	1-807259	1	Key
28	1-543610	1	Washer-Flat
29		1	Oil Guard ASM ■
30	147-4838	1	Spacer, D-Drive
31	3-6781	1	Washer-Flat
32	137-3061	2	Bolt-CARR
33	32128-25	2	Nut-HF
34	32180-450	1	Tie-Cable, Double Loop
35	106-9758	1	Screw-CARR
36	146-8171-05	1	Bracket-Mounting, Guard
37	146-8433	1	Tape-Heat,Shield Muffler Guard HDX
99	142-6841	1	Filter-Oil ●
99	142-8433	1	Filter, Outer Air ●
99	142-8434	1	Filter, Inner Air ●
99	142-8435	2	Plug, Spark ●
99	163-4159	1	Fuel Filter Kit ●
99:1	142-7451	1	Filter-Fuel ●
99:2	32180-450	1	Tie-Cable, Double Loop ●
99:3	163-4170	1	Line, Fuel ●

● Not illustrated
▲ Obtain parts from www.briggsandstratton.com
■ Not serviced separately


Muffler Guard Assembly No. 146-8324

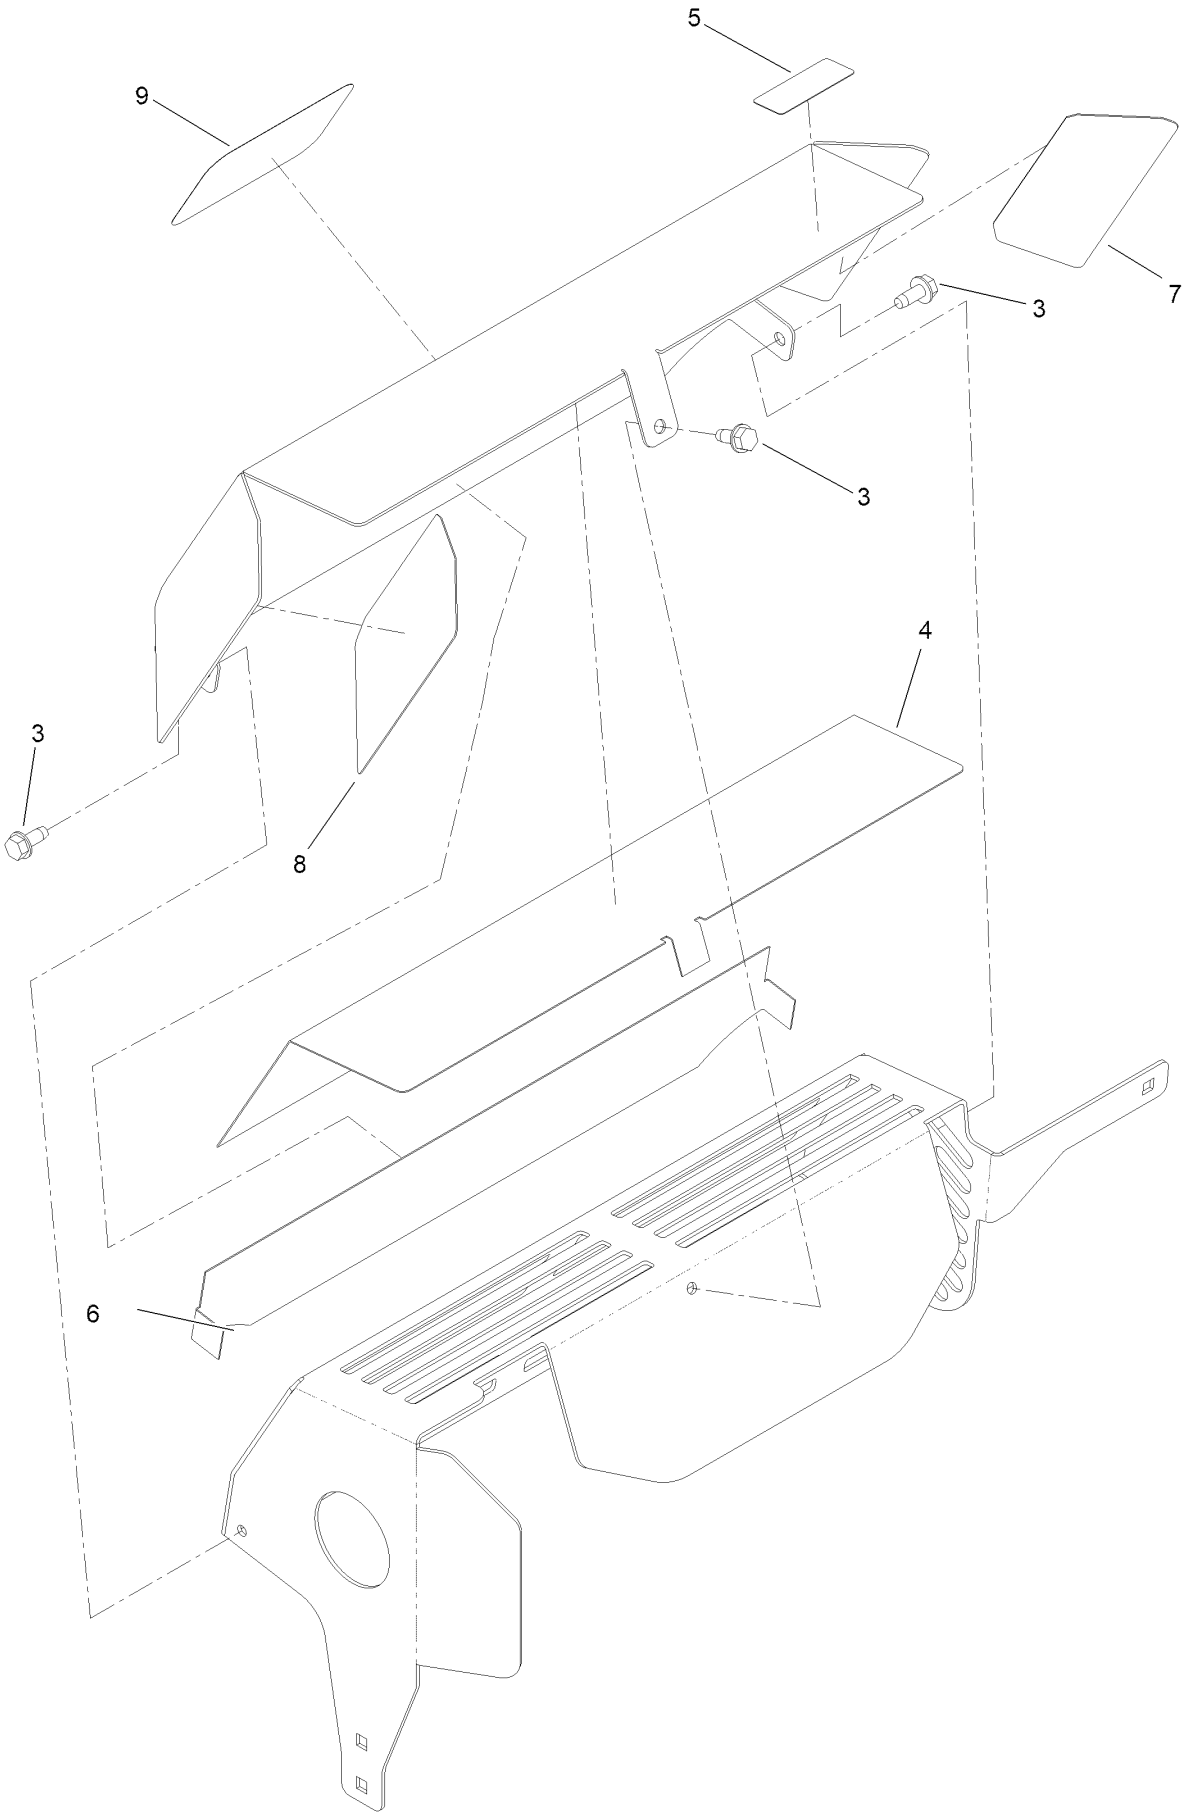

Muffler Guard Assembly No. 146-8324 (continued)

Ref.	Part Number	Qty.	Description
3	32144-70	3	Screw-HWHTF
4	146-8377	1	Shield-Insulation
5	127-0392	1	Decal-Hot Surface
6	146-8606	1	Shield-Insulation
7	146-8605	1	Shield-Insulation
8	146-8604	1	Shield-Insulation
9	94-2579	1	Decal

Oil Guard Assembly

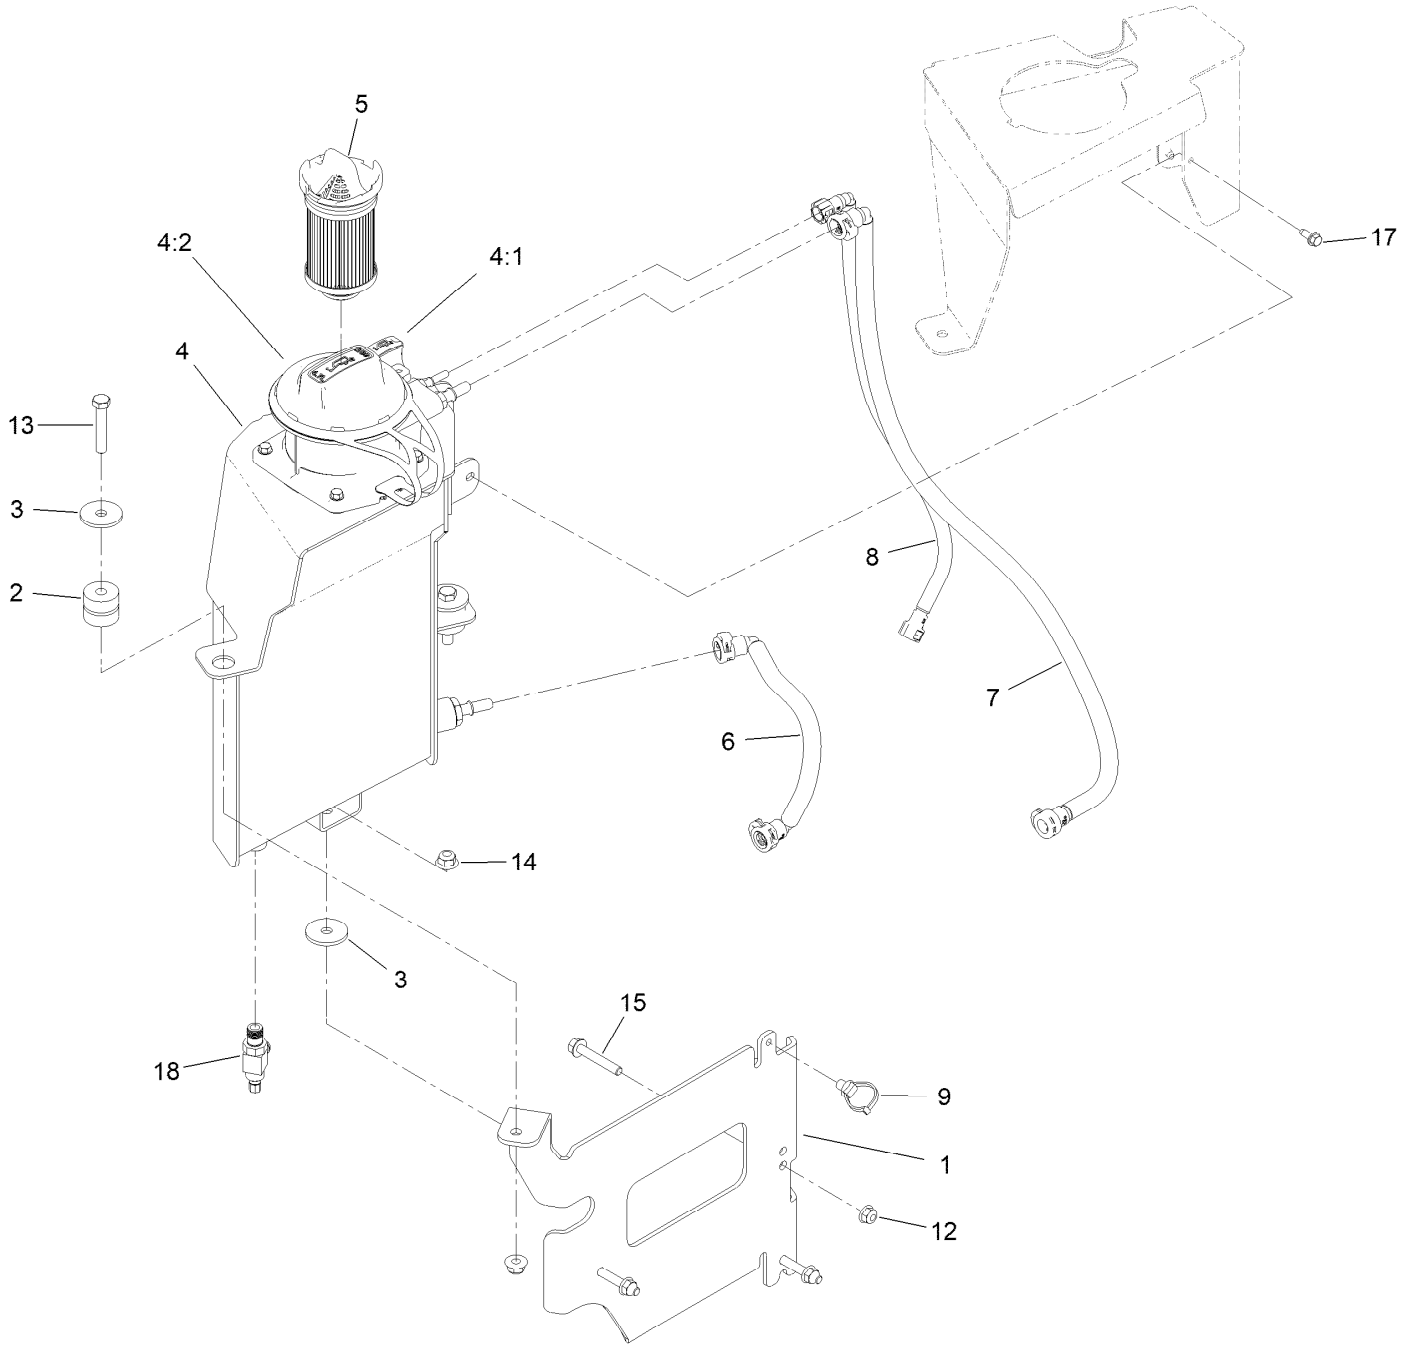


Oil Guard Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-0346-05	1	Mount-Tank, Oil
2	142-6009	3	Isolator-Tank
3	1-213069	4	Washer
4		1	Reservoir-Oil ●
4:1	142-7452	1	Oil Dipstick ASM
4:2	142-7453	1	Oil Tank Cap ASM
5	142-6841	1	Filter-Oil
6	142-7420	1	Hose-Supply
7	142-7421	1	Hose-Scavenge
8	147-4970	1	Hose-Vent
9	32180-030	1	Clip-Tie
12	119-4041	3	Nut-HF
13	323-10	3	Screw-HH
14	119-4042	3	Nut-HF, NI
15	142-6275	3	Screw-HHF
17	32144-10	3	Screw-HWH
18	103-6602	1	Valve-Oil Drain

● Not serviced separately


Fuel Tank Assembly

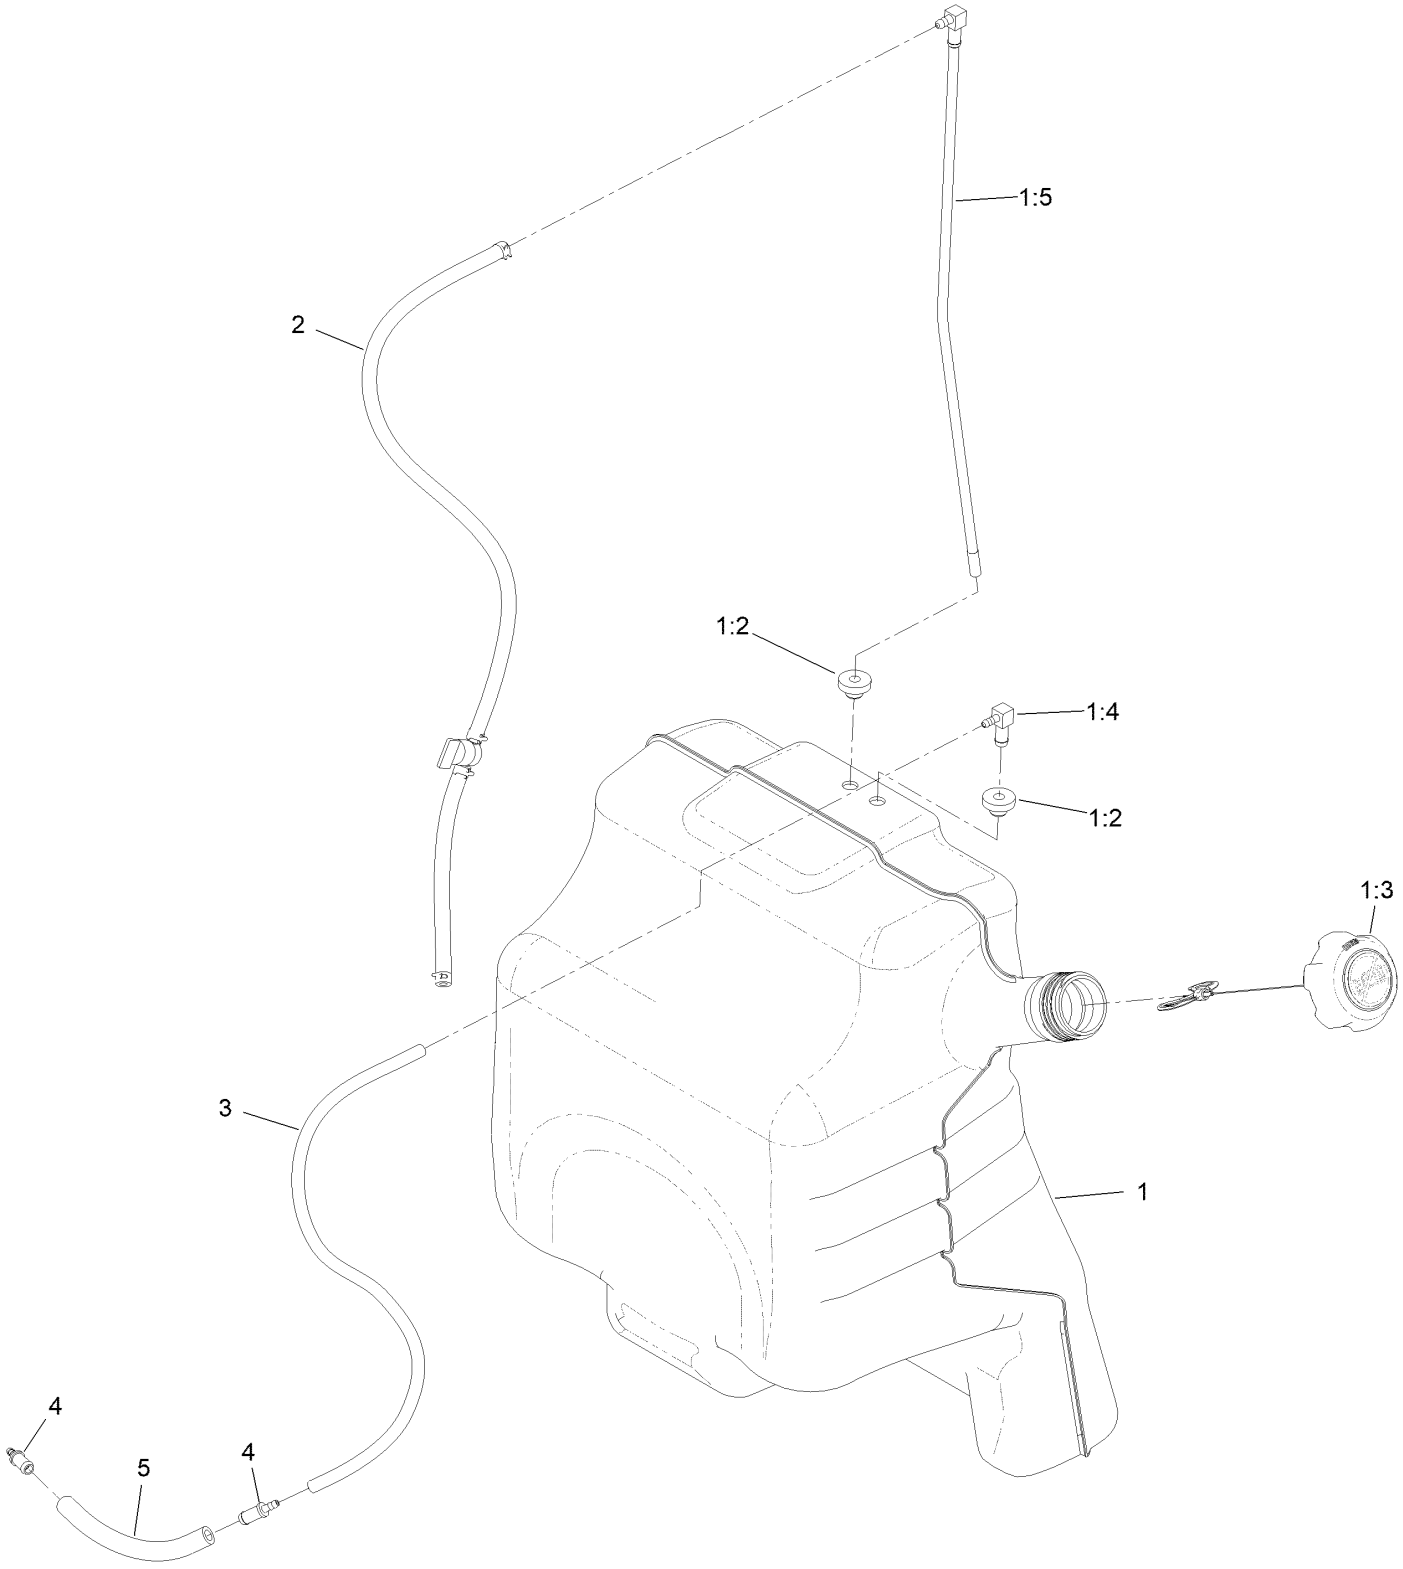

Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	132-7560	1	Fuel Tank ASM
1:2	46-6560	2	Bushing
1:3	137-4127	1	Cap-Fuel
1:4	104-5228	1	Fitting-Elbow, 90 DEG
1:5	145-6195	1	ASM, Tube-Fuel
2	145-6123	1	Fuel Line ASM
3	110-8255	1	Hose-Fuel
4	98-2952	2	Fitting-Straight
5	132-7576	1	Hose-Fuel

Electrical Assembly

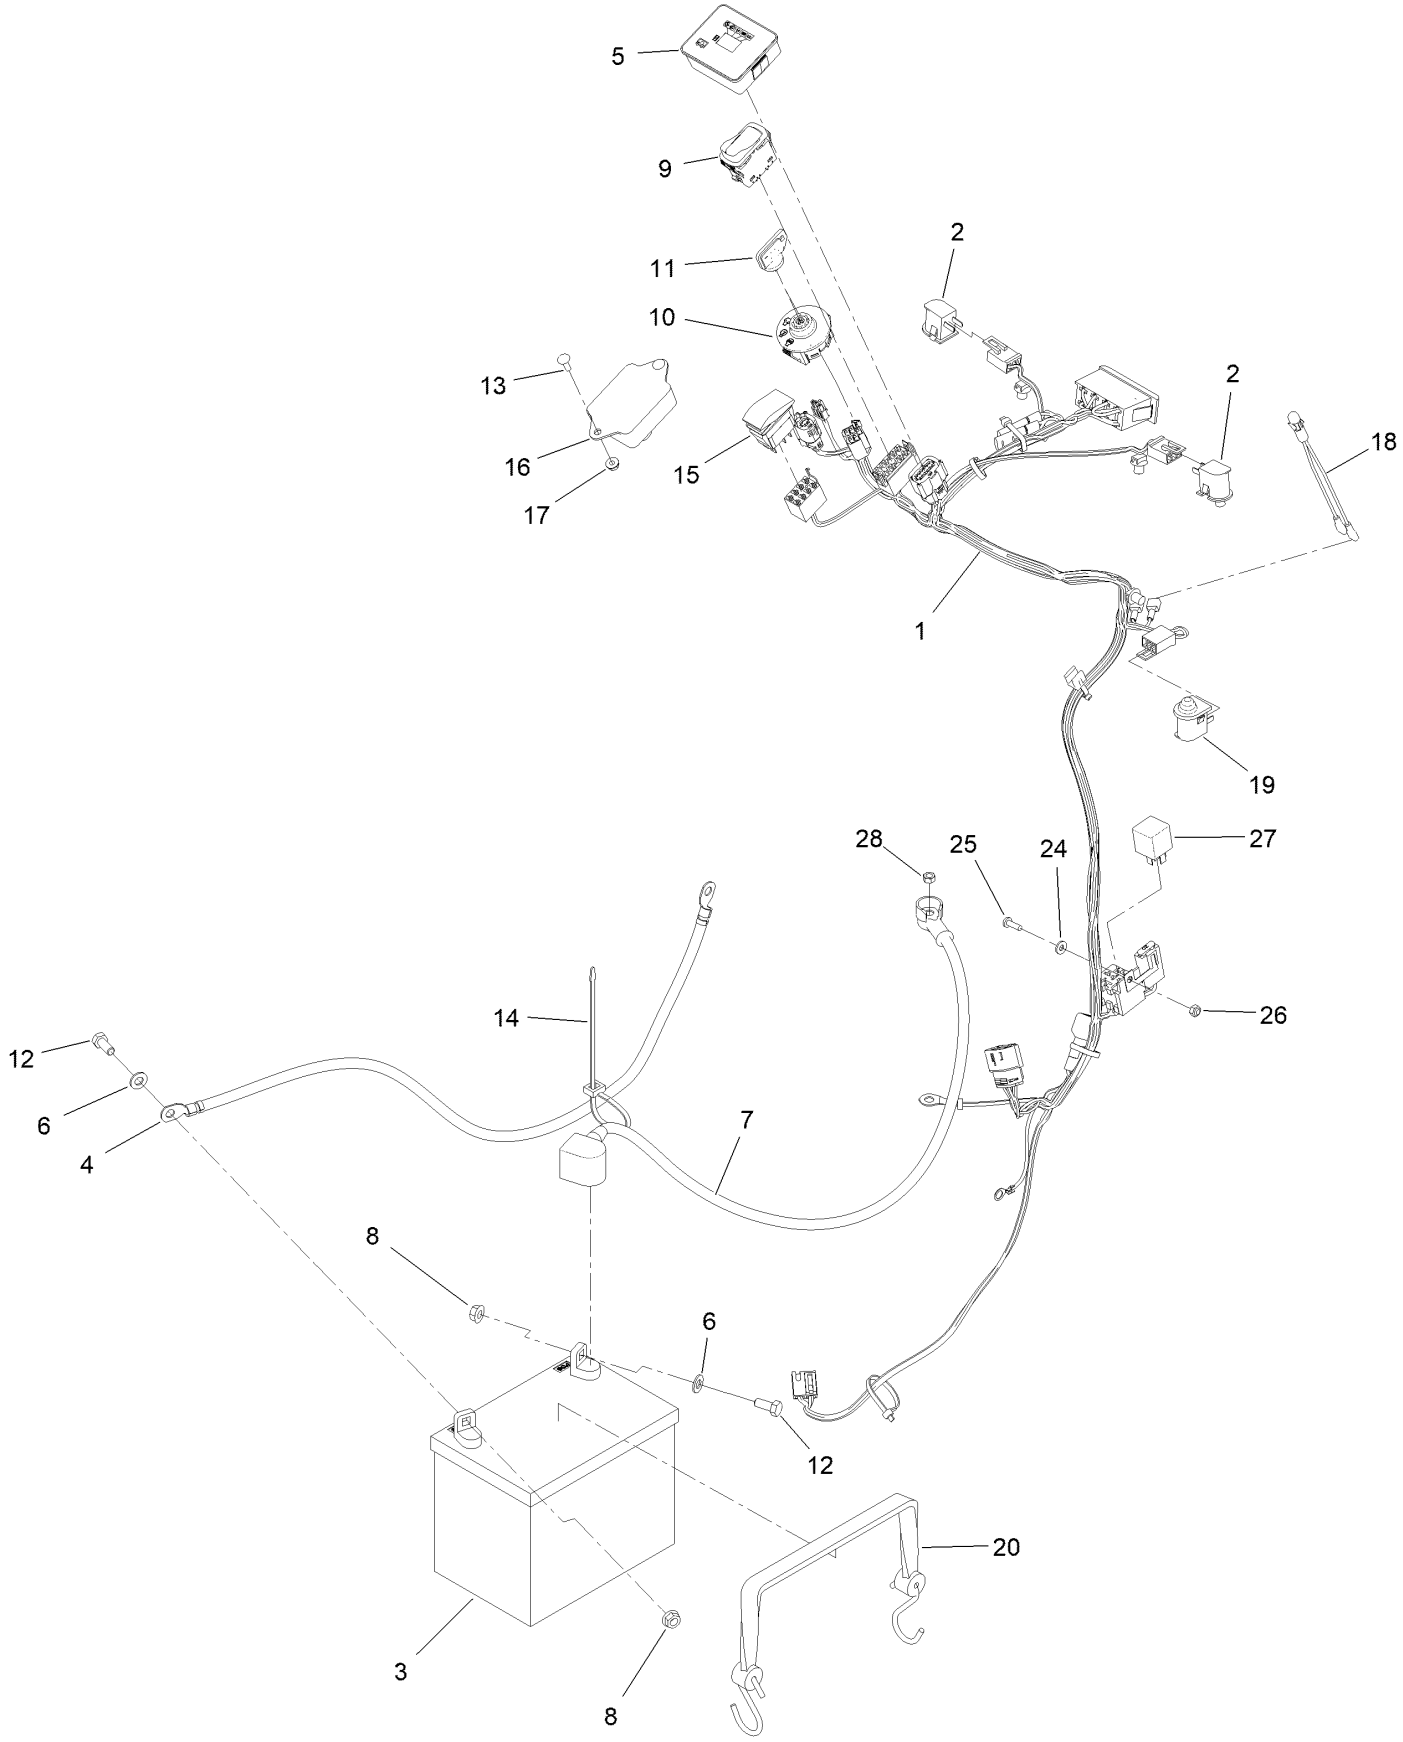

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-5226	1	Harness-Wire, Grandstand
2	82-2190	2	Switch-Bail
3	104-8162	1	Battery
4	147-4795	1	Battery-Cable, Bk ASM
5	140-1884	1	Module-Meter, Hour
6	3256-23	2	Washer-Plain
7	147-4794	1	Battery-Cable, Rd ASM
8	109-5715	2	Nut-HHF, Smooth
9	139-6367	1	Switch-Rocker, (On)-On-Off
10	137-4101	1	Switch-Ignition
11	63-8360	1	Key-Ignition
12	322-3	2	Screw-HH
13	1-807533	2	Bolt-CARR
14	3290-378	5	Tie-Cable
15	112-3530	1	Switch-Rocker, On-On-On
16	147-4767	1	Box-Resistor, ASM
17	32128-17	2	Nut-Lock, Flange
18	1-643267	1	Indicator-LED, Red
19	133-4654	1	Switch-Plunger
20	139-2381	1	Strap-Rubber
24	3256-14	1	Washer-Flat
25	3290-500	1	Screw-PPH
26	3296-2	1	Nut-Lock, NI
27	1-643275	1	Relay
28	33014-00	1	Nut-Hex

Attachments and Accessories

For 72517 — GrandStand HDX Mower With 72in TURBO FORCE Cutting Unit

Product Name	Model/Part
HYPR-OIL 500 (quart)	114-4713
HYPR-OIL 500 (gallon)	114-4714
HYPR-OIL 500-5 (5 gallon)	114-4715
Harness Wire Splitter	121-5988
Toro Premium Fuel Treatment 12oz Bottle	131-6572
Speed Setting Tool	132-7595
Trash Bag Assembly	133-1435
Light Kit	133-1437
Hydro Oil Change Kit	133-1457
Strobe Light Kit	133-1495
5 Gallon Bucket	133-2533
Hydraulic Cap Lock Kit	136-5420
Bucket Mount Kit	136-5681
Tweel-Turf Tire	139-3649
Recycler Kit-G3/GM 3300 72in	139-6659
Blade-24.50 High Flow	140-1238
Blade-24.50 Atomic	140-1239
Blade-24.50 Medium Flow	140-4850
Blade-24.50 Low Flow	140-4851
Blade-24.50 Recycler	140-4852
6 Pack-Blade, 24.5 High Flow	140-4872
6 Pack-Blade, 24.5 Med Flow	140-4873
6 Pack-Blade, 24.5 Low Flow	140-4874
6 Pack-Blade, 24.5 Atomic	140-4875
6 Pack-Blade, 24.5 Recycler	140-4876
2 Transmission Filter Kit	144-3842
Spark Arrestor, 1.5in	146-0561
13x6.5n6 Caster Tweel Asm	147-6294
10W30 4-Cycle Engine Oil (32oz Bottle)	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903

Notes:



Count on it.