Form No. 3483-799 Rev A

TORO®

Count on it.

Parts Catalog

Stand On Blower

Model No. 35210—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3483-799 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Mainframe Assembly 4
Front Axle and Caster Wheel Assembly 6
Front Caster with Fork Assembly 8
Hydro Assembly 10
RH Transmission Assembly No. 146-6729 12
LH Transmission Assembly No. 146-6728 14
Idler Assembly 16
Rear Tires Assembly 18
Park Brake Assembly 20
Fuel Assembly 22
Fuel Tank Assembly No. 146-6717 24
Controls Assembly 26
Motion Control Arm Assembly 28
Electrical Assembly 30
Engine Assembly 32
Engine Idler Assembly 34
Blower Assembly 36
Turbine Assembly No. 146-7327 38
Nozzle Assembly 40
Operator Platform Assembly 42
Model Specific Decal and Knee Pad Assembly 44

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Mainframe Assembly

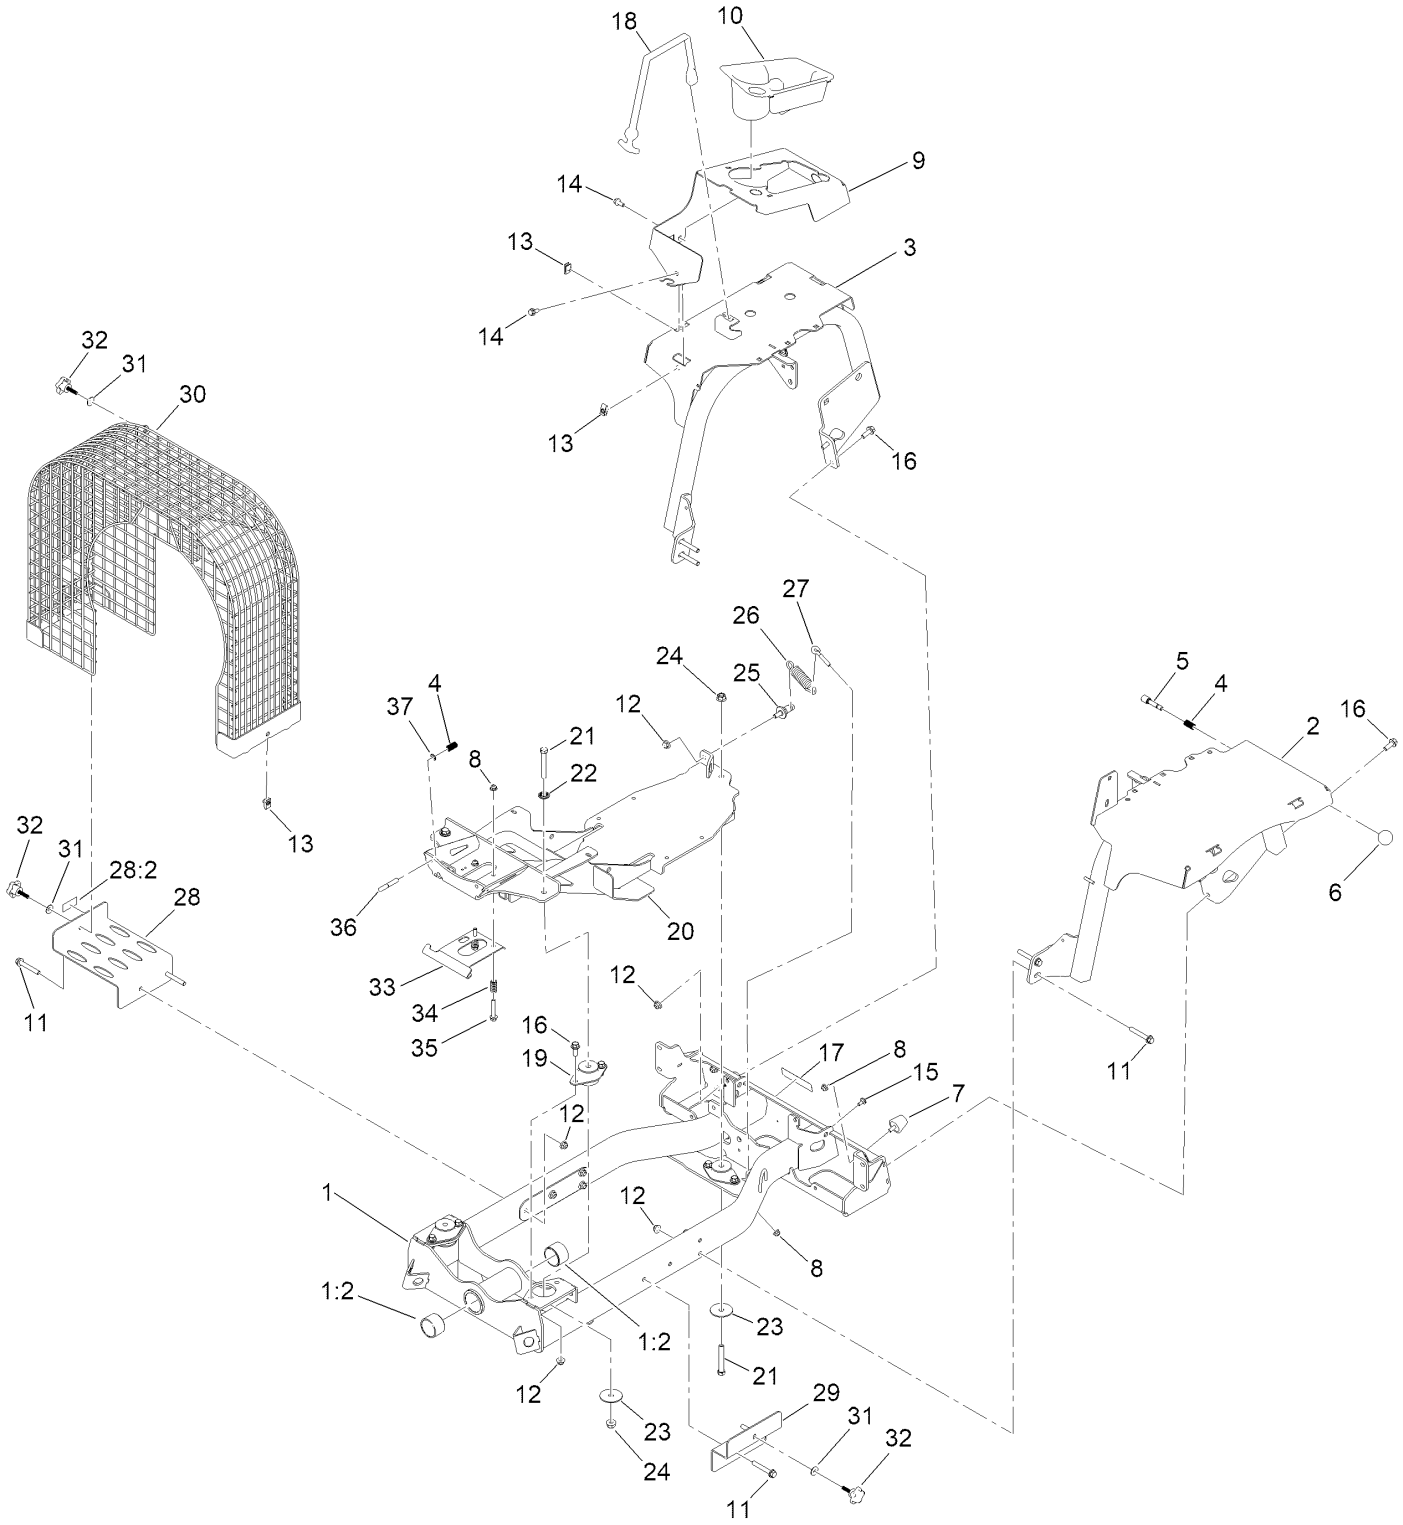

Mainframe Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-8072	1	Frame-Main
1:2	146-8073	2	Bushing-Sleeve
2	146-7496-03	1	Fender-Lt [black]
3	146-7498-03	1	Fender-Rt [black]
4	114-5348	2	Spring
5	119-8650	1	Pin-Latch
6	1-603175	1	Knob-Ball
7	1-543963	2	Bumper-Rubber
8	119-4041	5	Nut-HF
9	146-6504-03	1	Console-Rt
10	140-7968	1	Cup Holder
11	3234-39	8	Screw-HHF
12	119-4042	19	Nut-HF, NI
13	94-2413	6	Nut-U
14	139-2598	4	Screw-HHF
15	120-7950	2	Screw-Torx
16	139-2597	10	Screw-HHF
17	133-8062	1	Decal-Spark Arrestor
18	146-4467	1	Strap-Bungee
19	146-7831	3	Mount-Taper Isolator
20	146-7670-01	1	Frame-Eng/Turbine
21	324-12	3	Screw-HH
22	1-603610	2	Washer-Spring
23	87-5100	3	Washer-Snubbing
24	114-8417	3	Nut-HF, NI
25	146-3603	1	Pin-Spring, Anchor
26	133-5738	1	Spring-Extension
27	1-303238	1	Eyebolt-Thread, RH
28	146-8074	1	Mount-Guard, Lower RH
28:2	106-5517	1	Decal-Warning
29	146-8499-03	1	Mount-Cover, Lt
30	146-8590-03	1	Cover-Muffler [black]
31	3290-456	3	Washer-Belleville
32	139-2401	3	Knob
33	146-8727	1	Latch-Nozzle
34	1-323245	2	Spring-Compression
35	142-6275	2	Screw-HHF
36	146-8729	1	Pin-Switch
37	32120-18	1	E-Ring

Front Axle and Caster Wheel Assembly

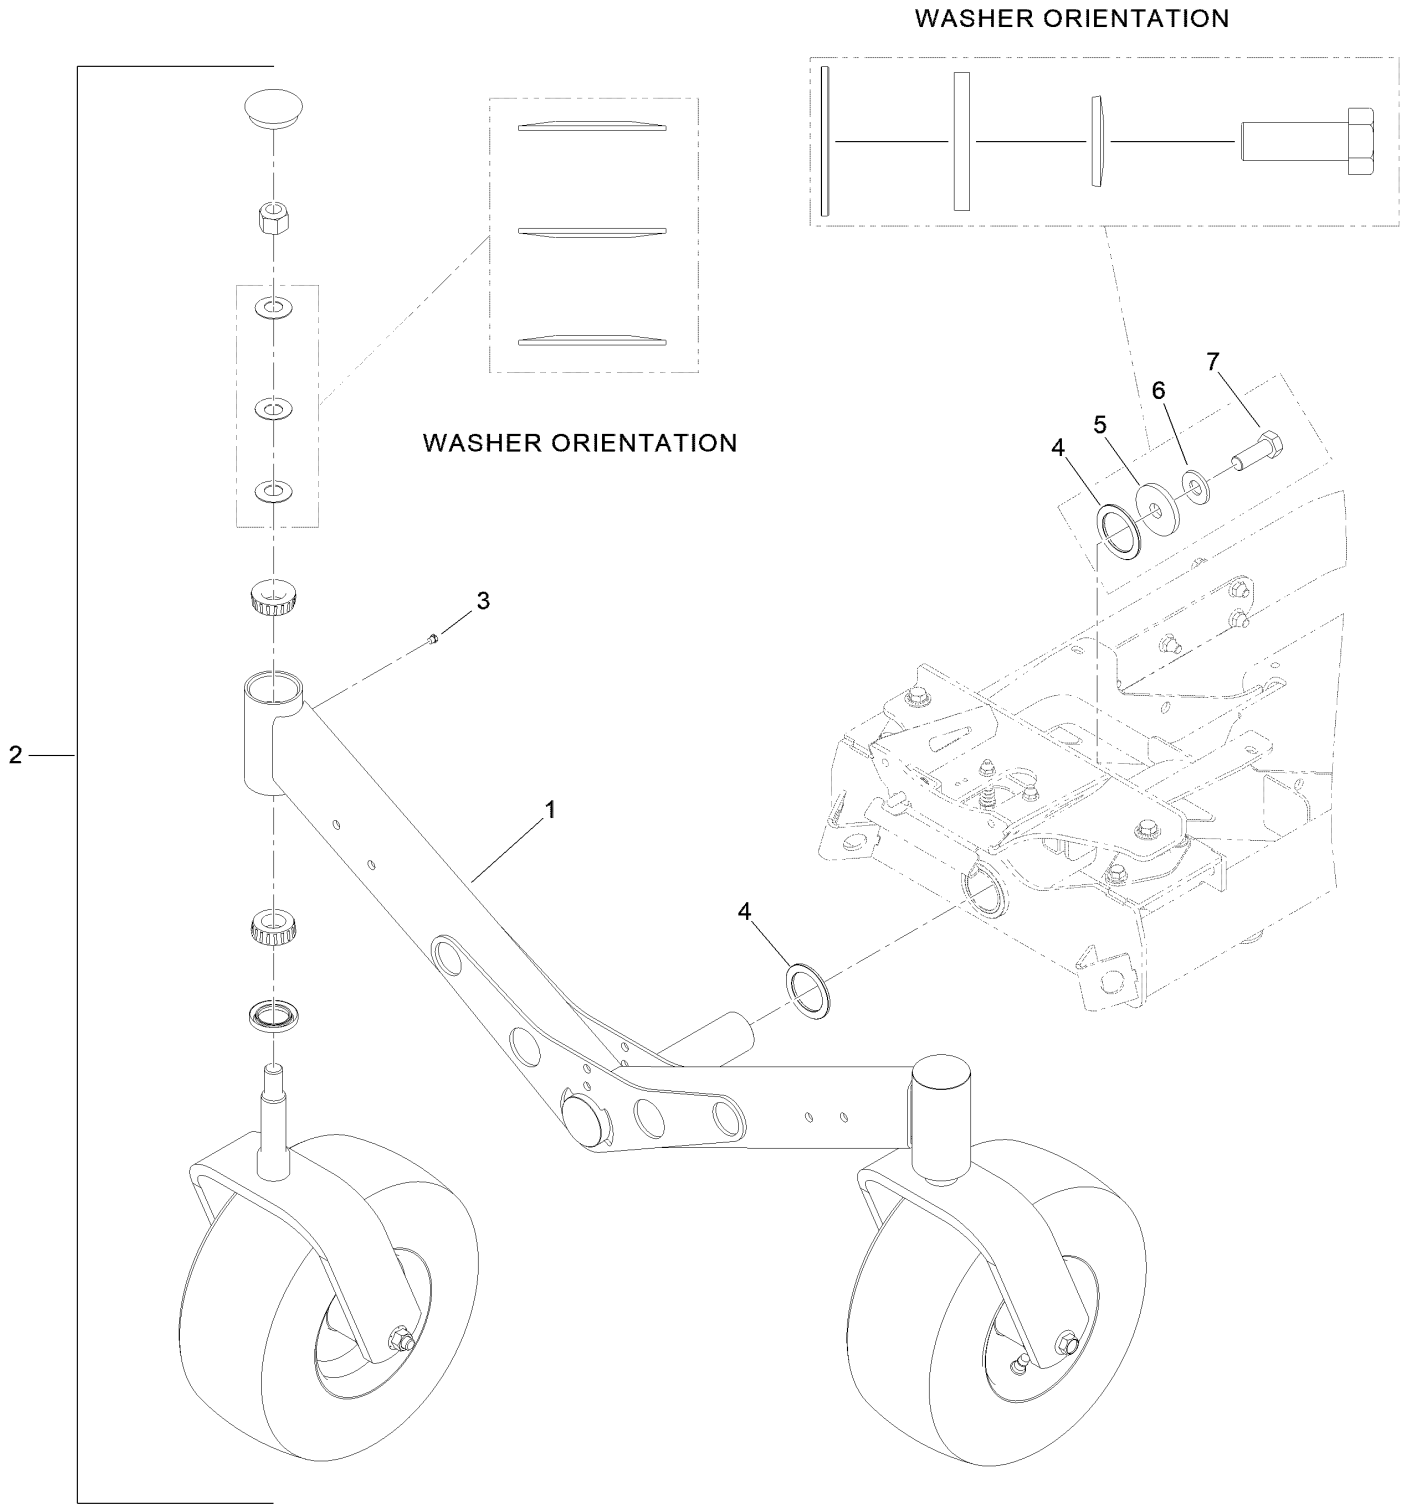


Front Axle and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-7229-03	1	Axle-Front [black]
2		2	ASM-Front Caster W/Fork ●
3	1-811010	2	Plug
4	103-9051	2	Bearing, Thrust
5	104-5901	1	Washer
6	125-1736	1	Washer-Belleville
7	327-5	1	Screw-HH

● Not serviced separately

Front Caster with Fork Assembly

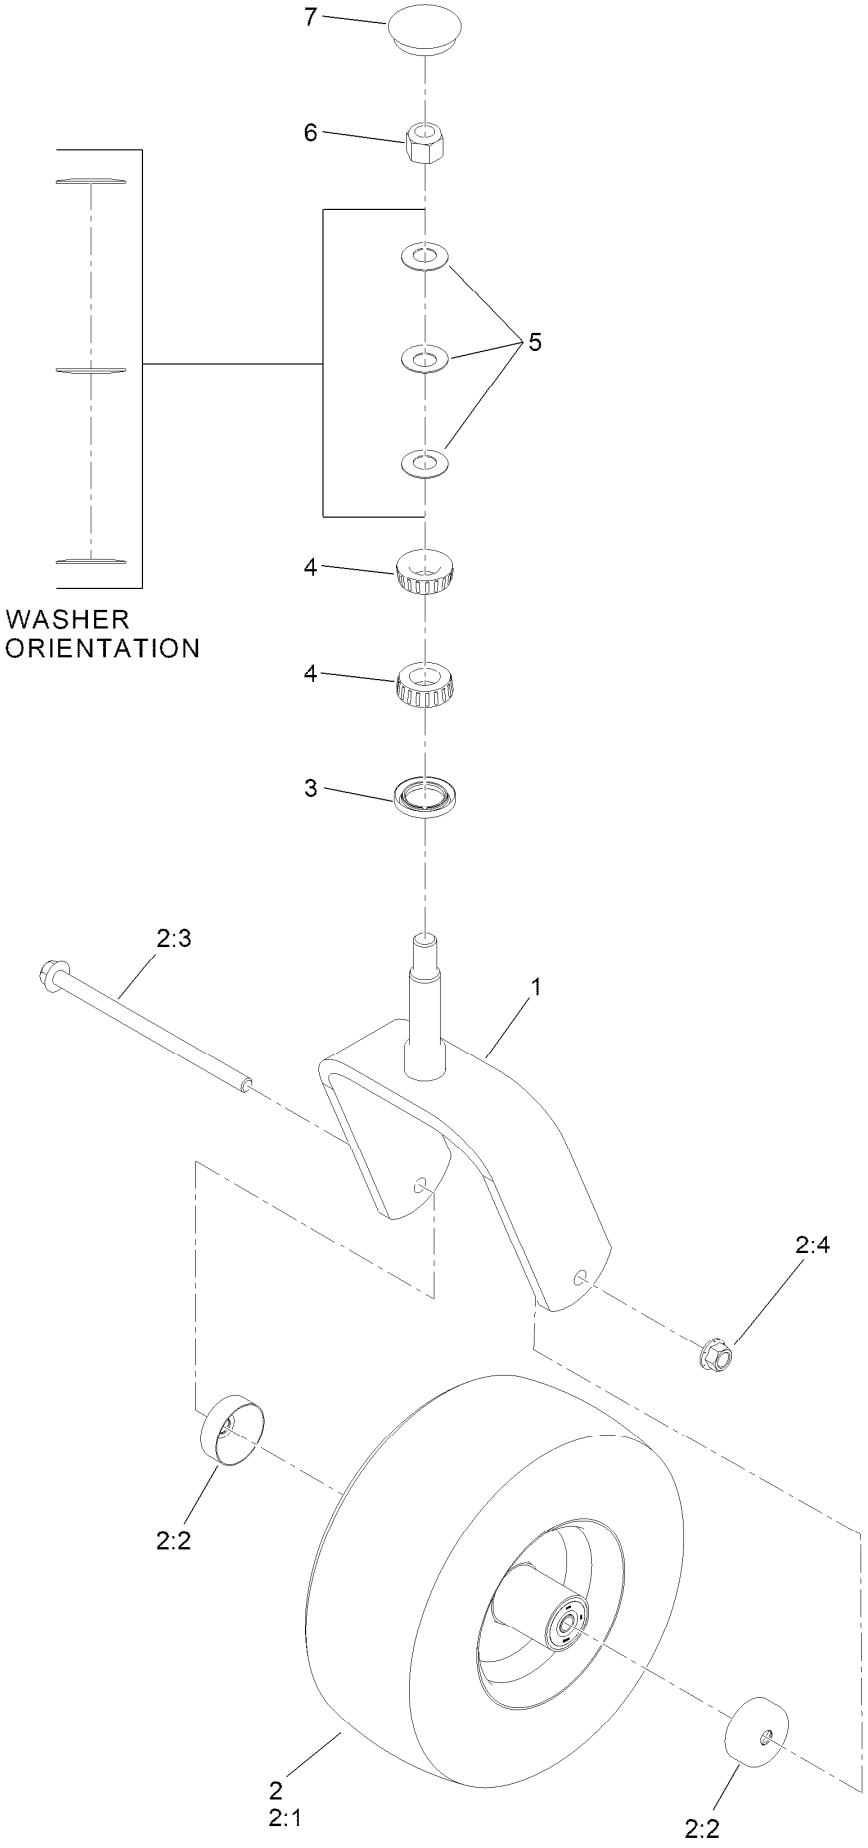


Front Caster with Fork Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-2794-01	1	Fork-Caster
2		1	ASM-Wheel Brgs Axle 13X6.50-6 ●
2:1	146-8059	1	ASM-Wheel And Brgs, 13X6.5-6
2:2	135-3218	2	Guard, Seal
2:3	147-2939	1	Screw-HHF
2:4	139-1689	1	Nut-HF
3	116-5647	1	Seal-Grease
4	1-543509	2	Bearing-Roller, Tapered
5	1-633508	3	Washer-Bellville
6	3296-51	1	Nut-Lock, NI
7	103-4882	1	Cap-Grease

● Not serviced separately

Hydro Assembly

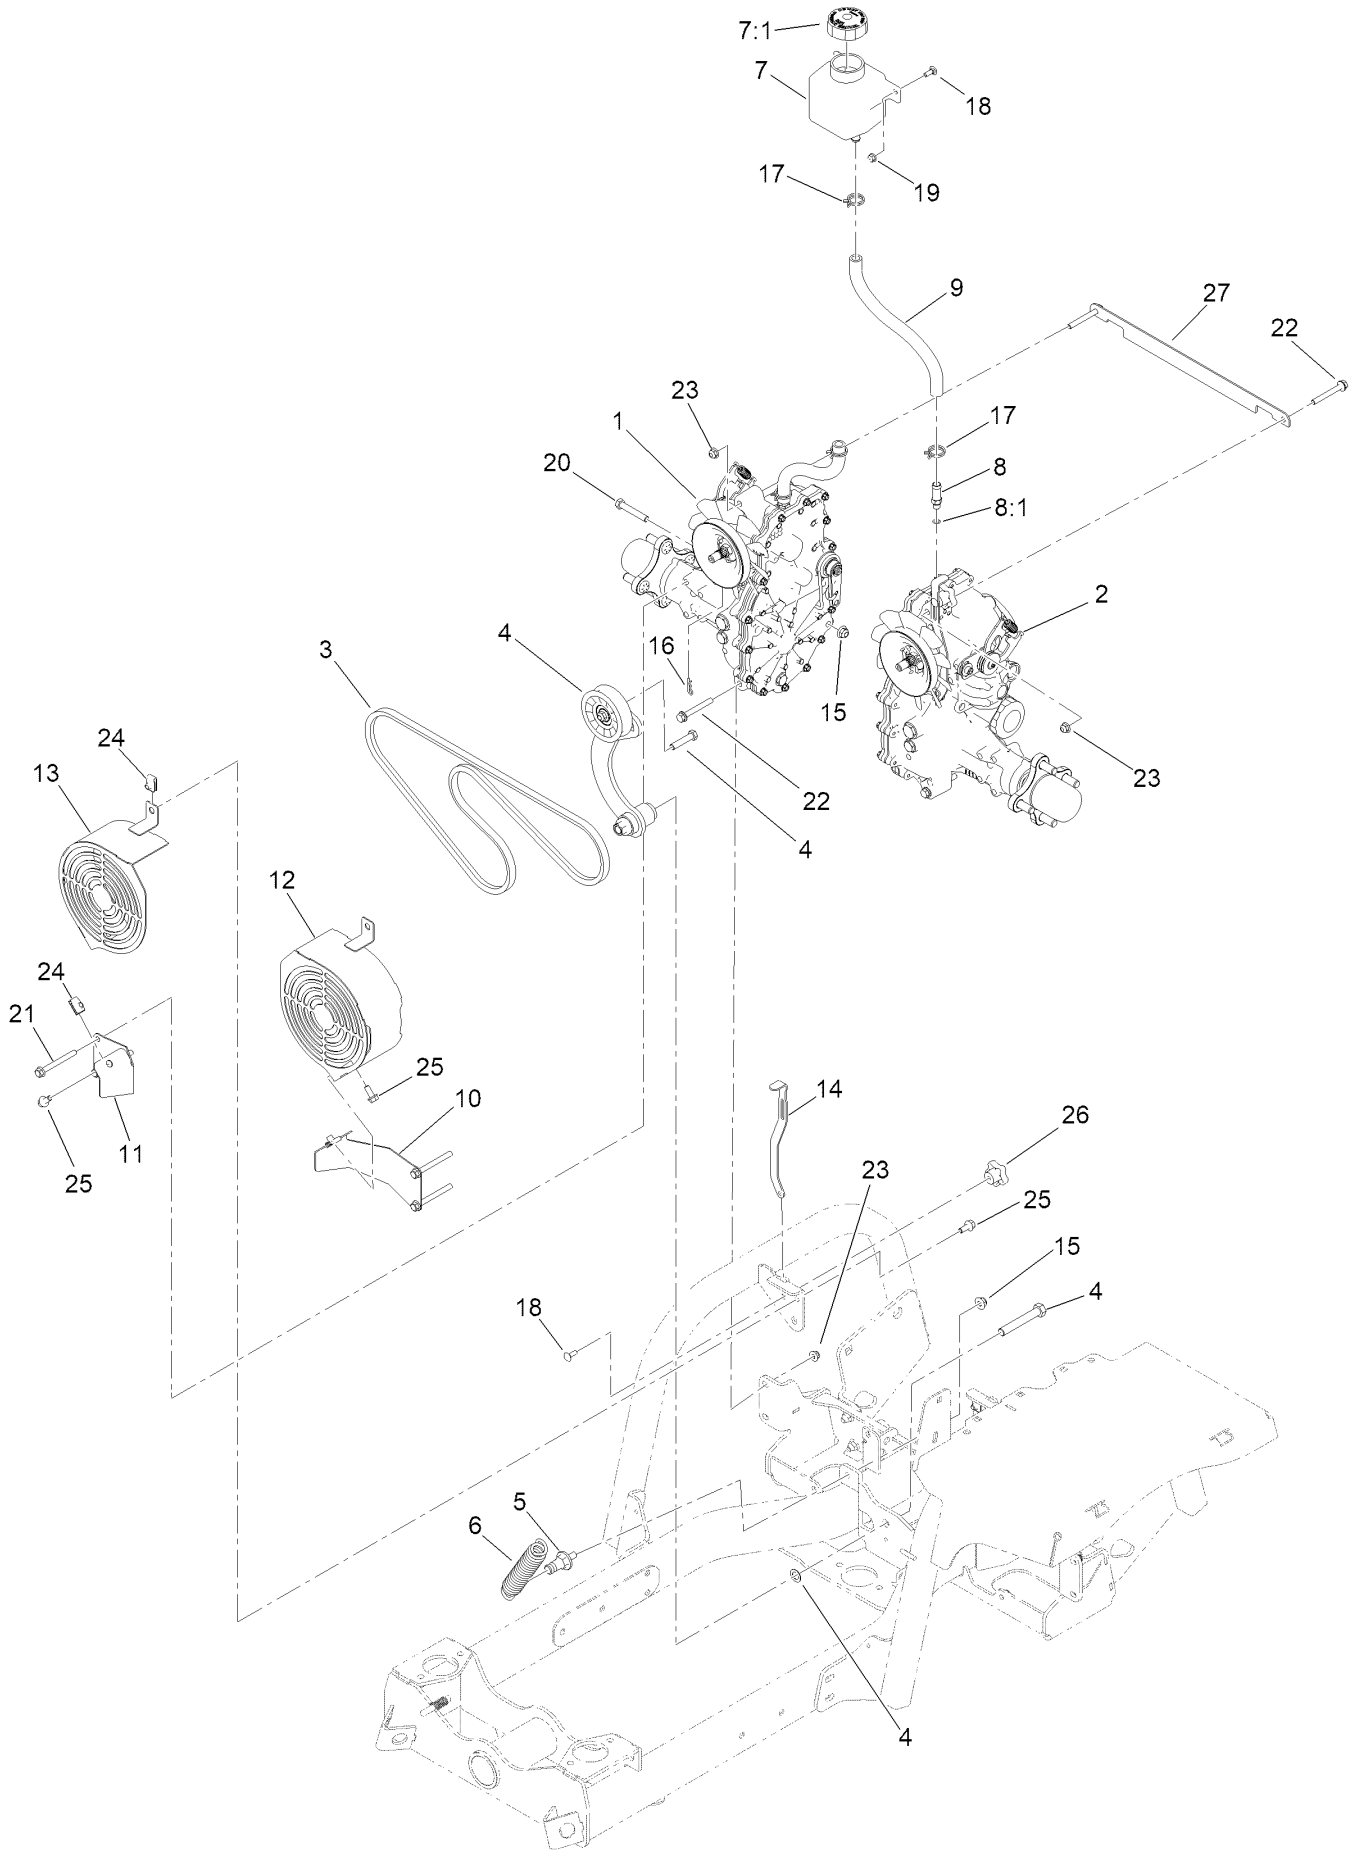


Hydro Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-6729	1	Zt3100 -Rt
2	146-6728	1	Zt3100 -Lt
3	146-6754	1	Belt-"ax", 64"
4		1	ASM-Idler ●
5	146-3603	1	Pin-Spring, Anchor
6	135-1272	1	Spring, Extension
7	109-2250	1	Tank-HYD
7:1	109-3320	1	Cap-Reservoir, HYD
8	135-2001	2	Fitting-Straight
8:1	1-603923	1	O-Ring
9	121-2952	2	Hose-Overflow
10	146-7073-03	1	Mount-Fan, Lt
11	146-7074-03	1	Mount-Fan, Rt
12	146-7068-03	1	Cover-Fan, Lt [black]
13	146-7069-03	1	Cover-Fan, Rt [black]
14	146-7135	2	Arm-Bypass
15	119-4042	3	Nut-HF, NI
16	3290-307	2	Pin-Cotter
17	109-3322	4	Clamp-Hose
18	137-3053	4	Screw-CARR
19	119-4040	2	Nut-HF, NI
20	323-11	2	Screw-HH
21	126-4687	4	Screw-HHF
22	138-9270	4	Screw-HHF
23	119-4041	8	Nut-HF
24	94-2413	4	Nut-U
25	139-2598	4	Screw-HHF
26	108-6402	2	Knob-Handle
27	146-8431-03	1	Strap-Hydro

● Not serviced separately

RH Transmission Assembly No. 146-6729

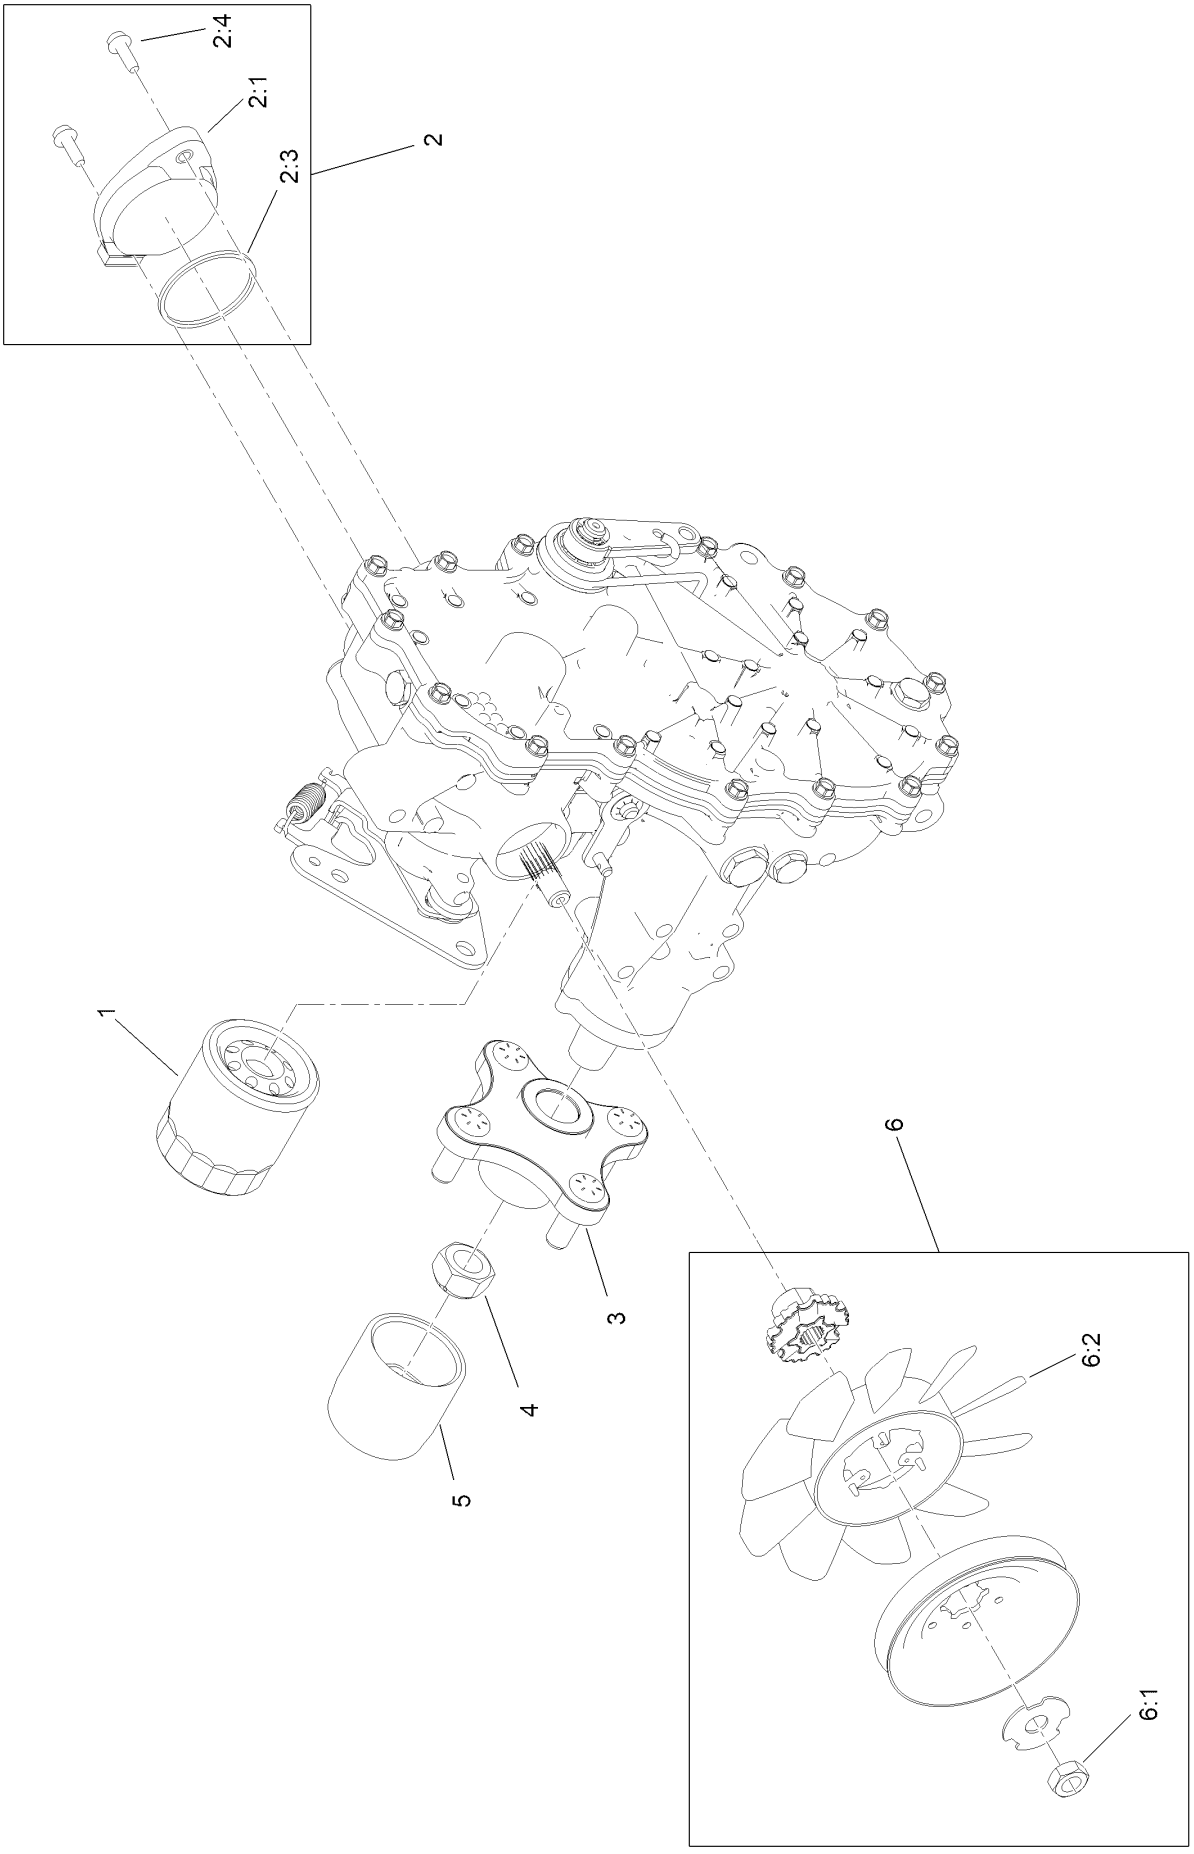


RH Transmission Assembly No. 146-6729 (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
2	114-8465	1	Charge Kit
2:1	114-8457	1	Cover-Charge Pump
2:2	104-2122	1	Gerotor ASM ●
2:3	109-3540	1	O Ring-Seal
2:4	104-2120	2	Screw
3	116-3872	1	Hub-Offset
4	109-3536	1	Nut-Hub
5	116-6214	1	Cap-Axle, Long
6	146-7063	1	Kit-Fan/Pulley
6:1	116-9714	1	Nut-HJ
6:2	146-7301	1	Fan-7", CCW

● Not illustrated

LH Transmission Assembly No. 146-6728

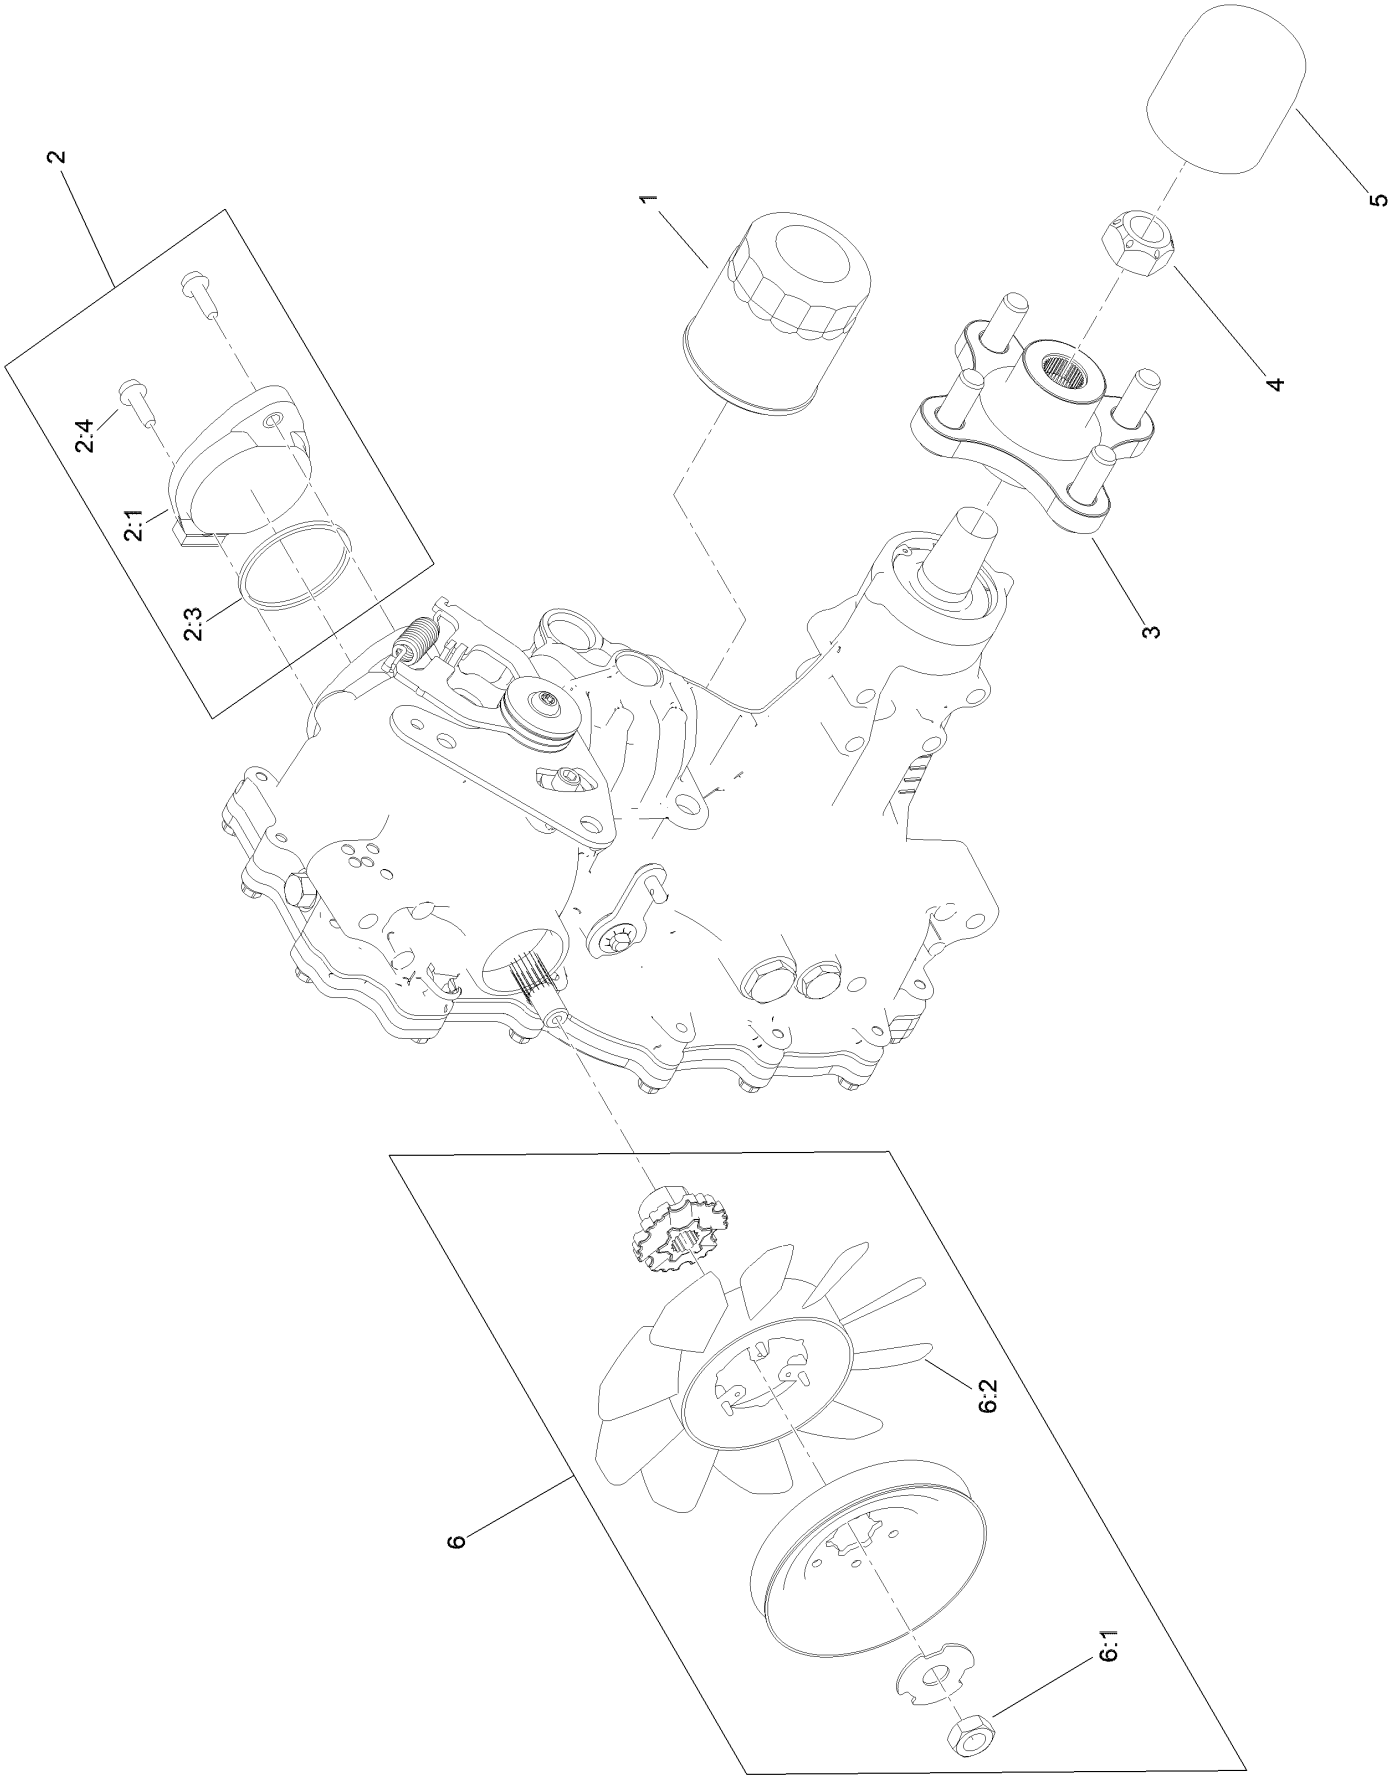


LH Transmission Assembly No. 146-6728 (continued)

Ref.	Part Number	Qty.	Description
1	109-3321	1	Element-Oil Filter, HYD
2	114-8465	1	Charge Kit
2:1	114-8457	1	Cover-Charge Pump
2:2	104-2122	1	Gerotor ASM ●
2:3	109-3540	1	O Ring-Seal
2:4	104-2120	2	Screw
3	116-3872	1	Hub-Offset
4	109-3536	1	Nut-Hub
5	116-6214	1	Cap-Axle, Long
6	146-7063	1	Kit-Fan/Pulley
6:1	116-9714	1	Nut-HJ
6:2	146-7301	1	Fan-7", CCW

● Not illustrated


Idler Assembly

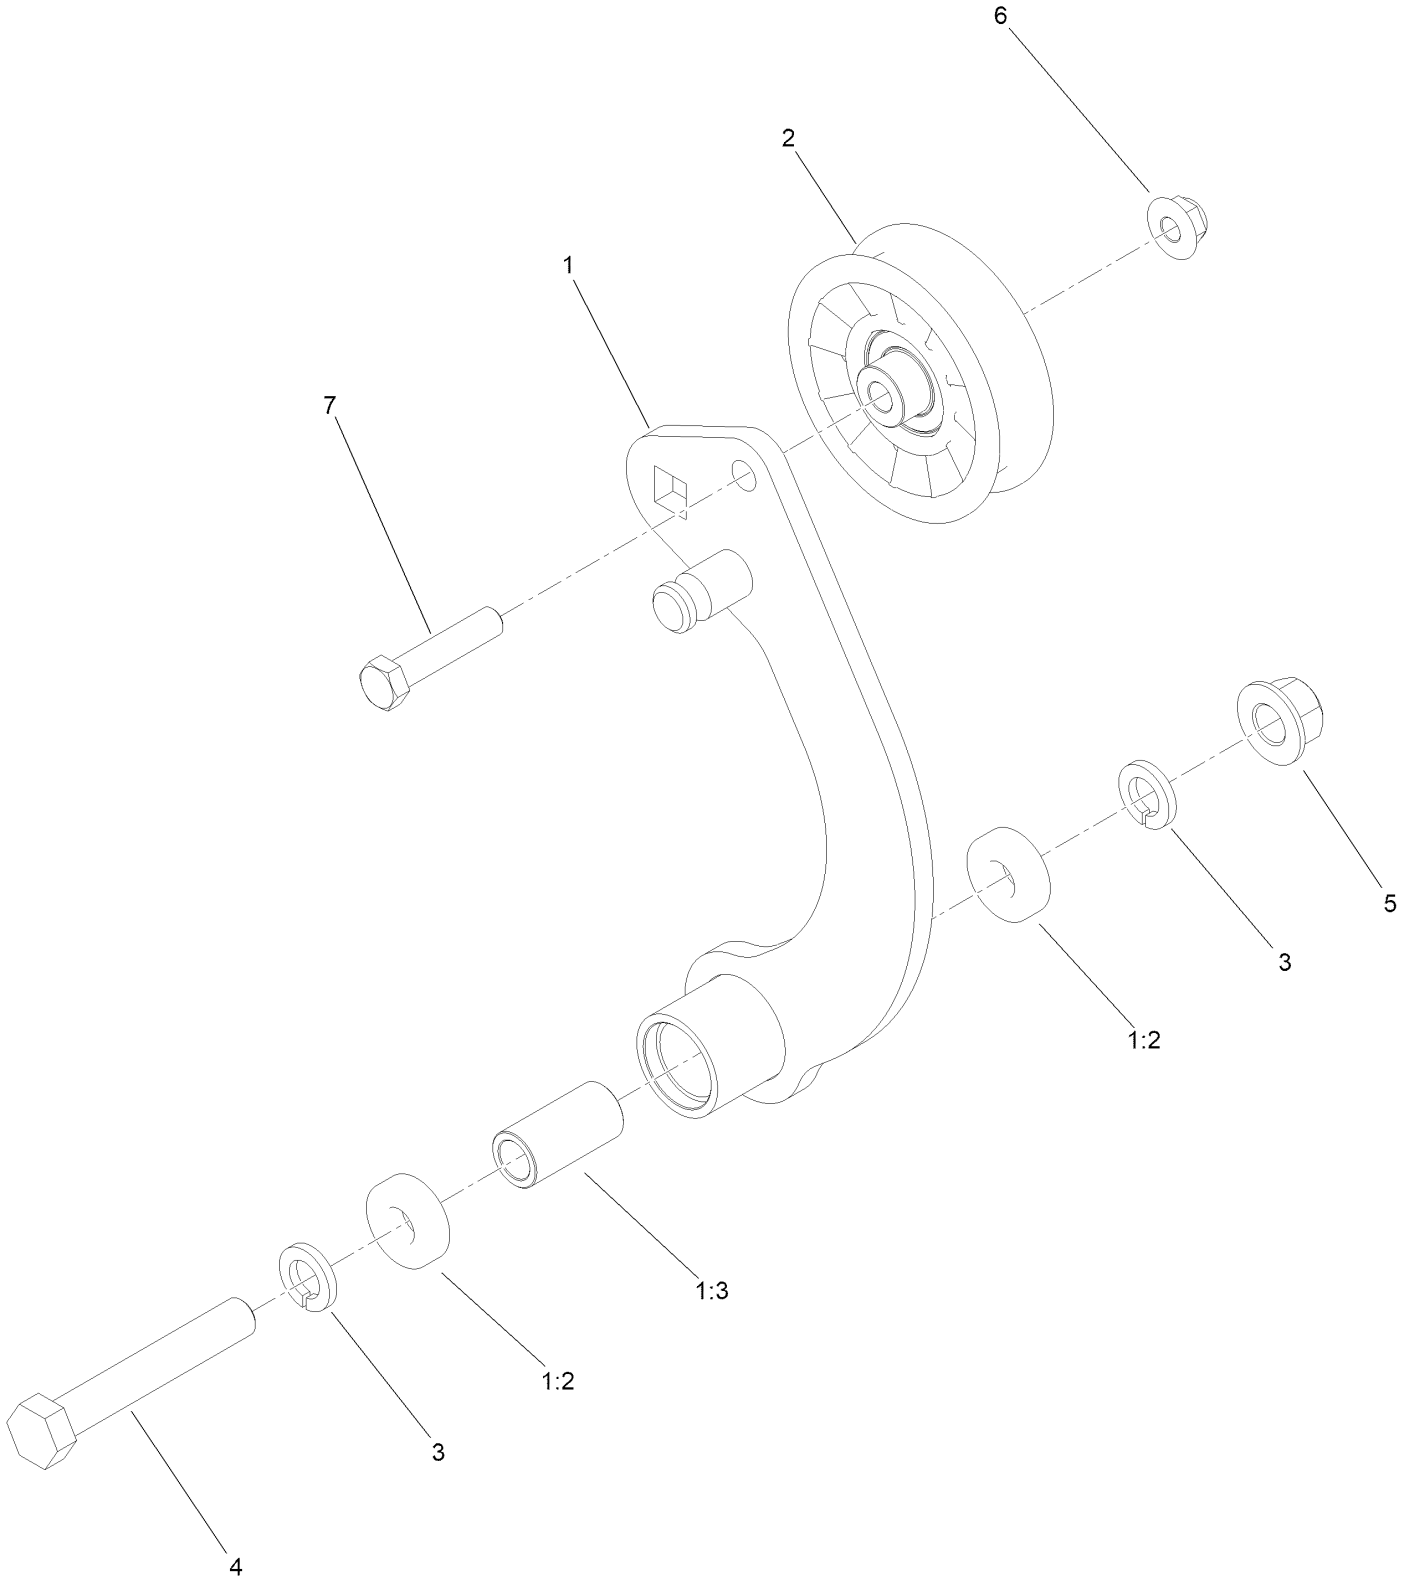

Idler Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-6765	1	Arm-Idler
1:2	133-2603	2	Bearing-Ball
1:3	142-6579	1	Spacer
2	146-7760	1	Pulley-Flat, Idler
3	3253-7	2	Washer-Lock
4	325-13	1	Screw-HH
5	139-1689	1	Nut-HF
6	119-4042	1	Nut-HF, NI
7	323-9	1	Screw-HH

Rear Tires Assembly

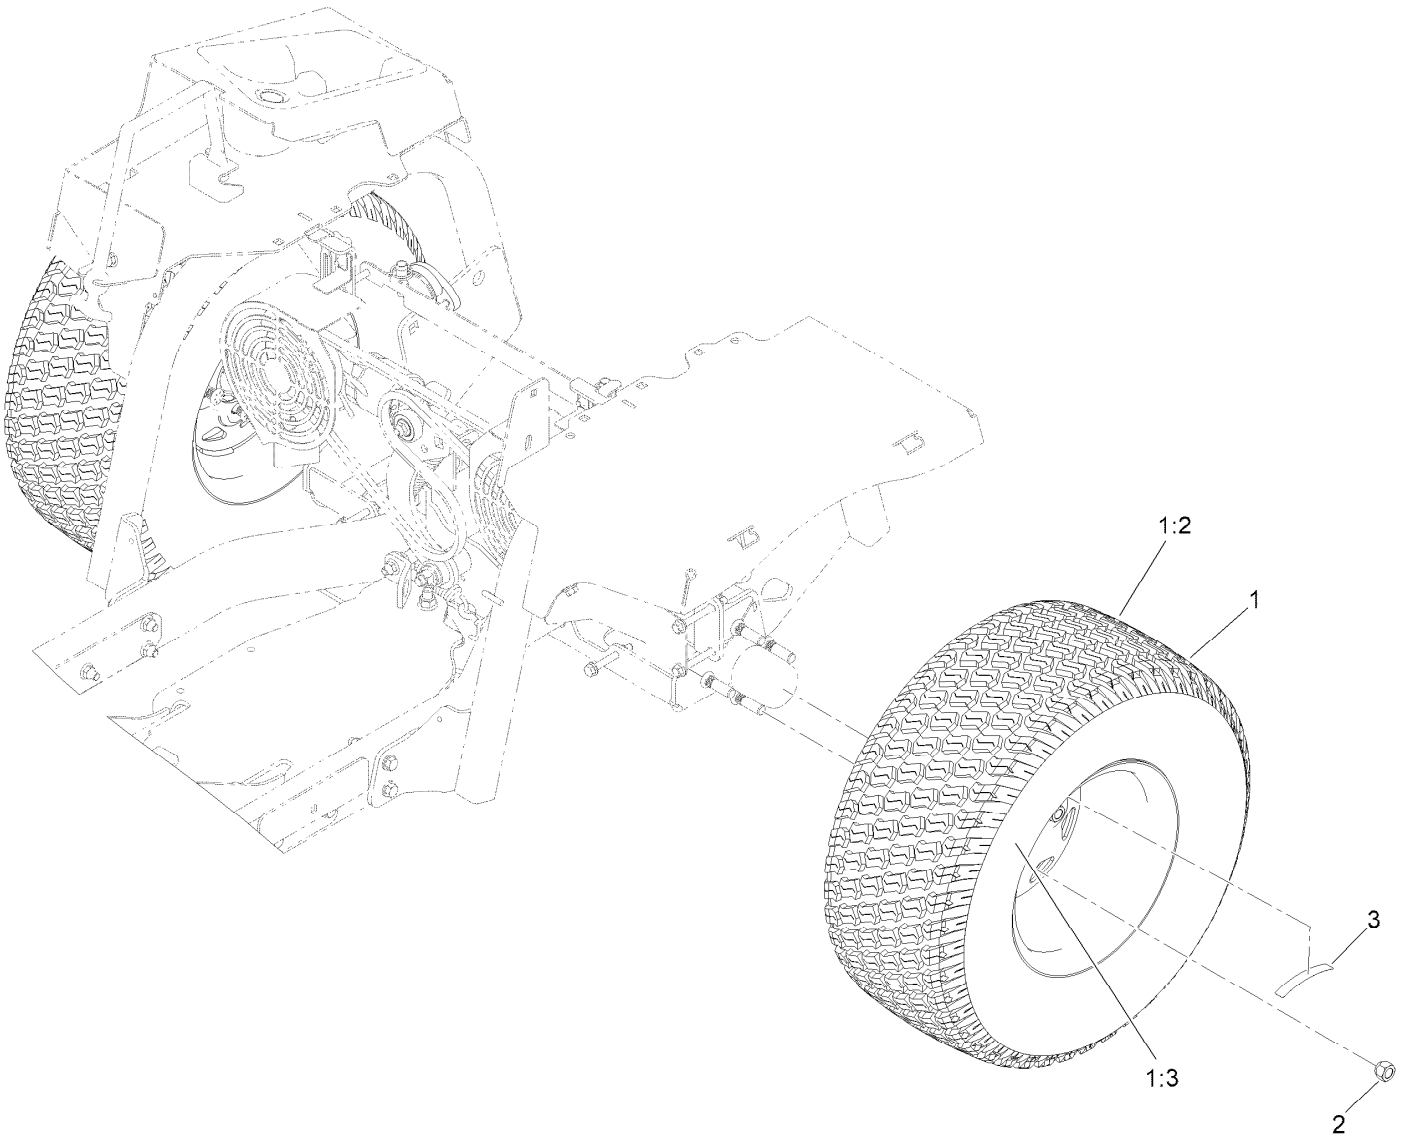


Rear Tires Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-7534	2	Tire And Wheel ASM
1:2	139-7536	1	Tire
1:3	232-27	1	Stem-Valve
1:99	105-4070	1	Tube-Inner ●■
2	139-2564	8	Nut-Lug
3	126-2055	2	Decal-Torque, Wheel Hub Lug

● Not illustrated

■ Optional Equipment


Park Brake Assembly

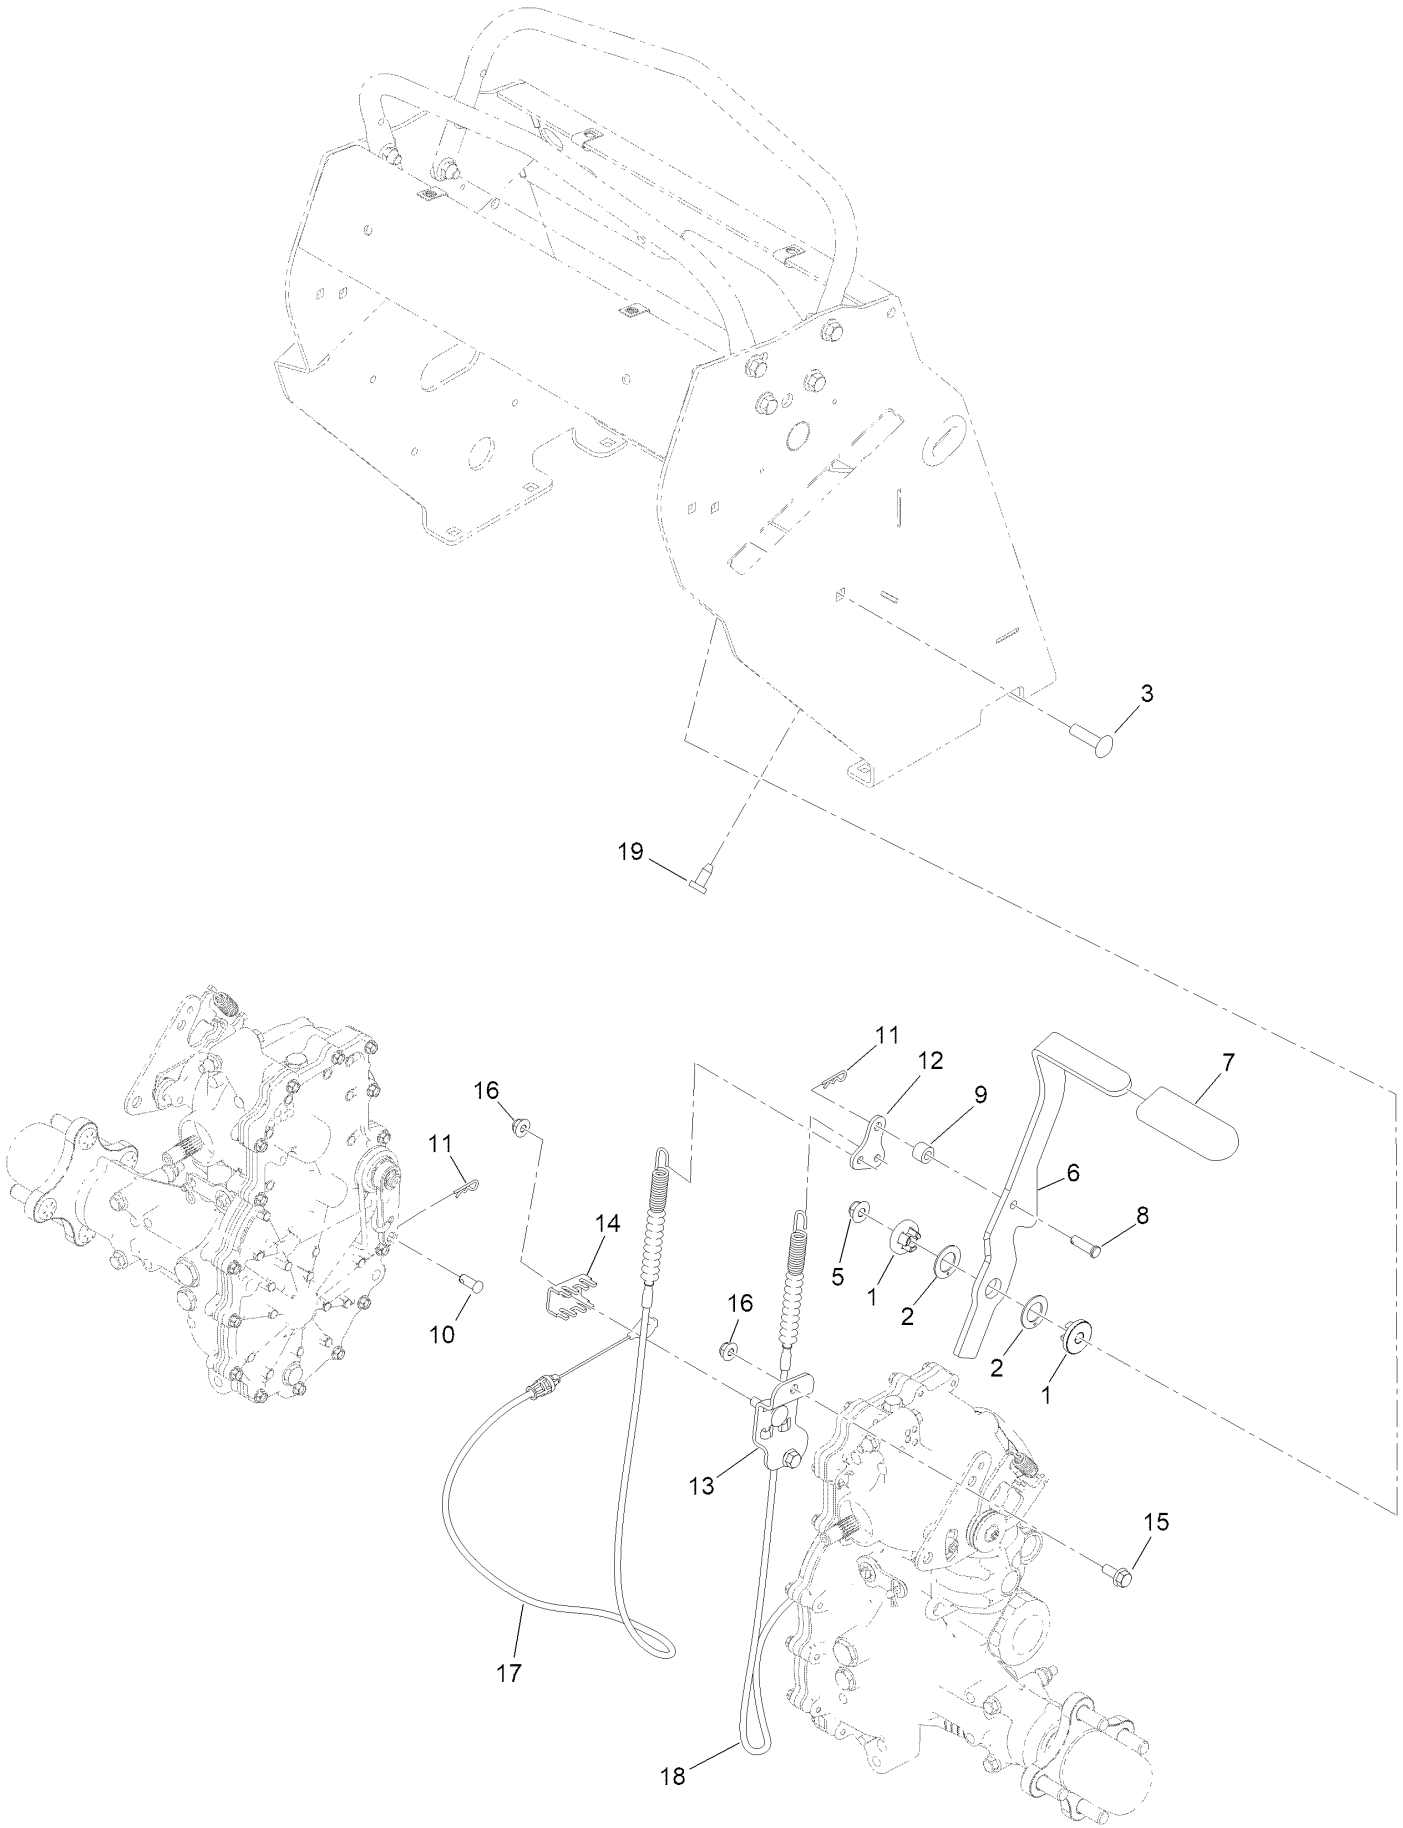

Park Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-8008	2	Bushing-Flange
2	146-8314	2	Washer-Thrust
3	3231-26	1	Screw-CARR
5	119-4042	1	Nut-HF, NI
6	146-6804	1	Lever-Park Brake
7	132-4749	1	Grip-Lever
8	283-61	1	Pin-Yoke
9	114-8549	1	Bushing
10	283-62	2	Pin-Clevis
11	3290-307	3	Pin-Cotter
12	138-6870	1	Yoke-Cable
13	132-7582	1	Mount-Cable, Brake
14	132-1187	1	Clamp-Cable
15	139-2598	2	Screw-HHF
16	119-4041	3	Nut-HF
17	138-5841	1	Cable-Brake
18	138-5842	1	Cable-Brake
19	87-8460	2	Bumper-Rubber


Fuel Assembly

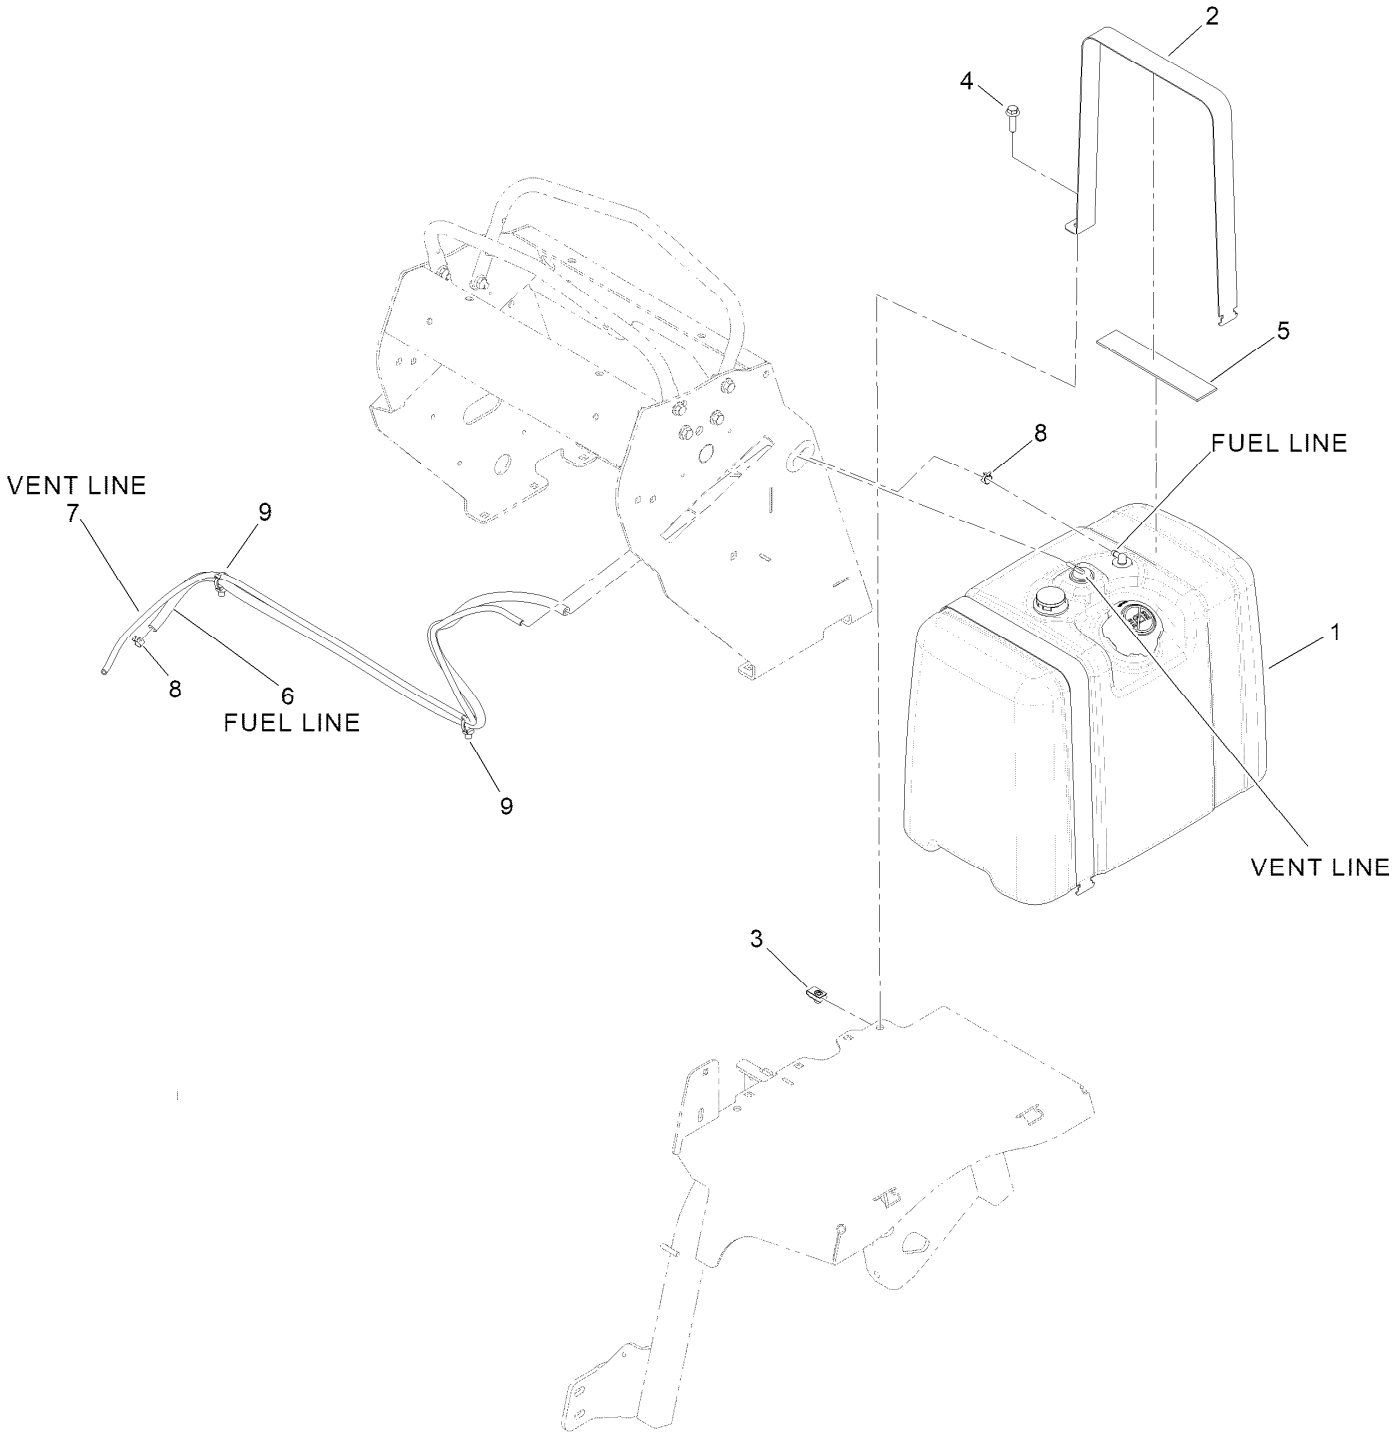

Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-6717	1	ASM-Fuel Tank
2	146-6902-03	2	Strap-Tank
3	94-2413	2	Nut-U
4	132-3837	2	Screw-HHF
5	104-7102	2	Pad-Battery
6	146-7174	1	Hose-Fuel
7	146-7173	1	Hose-Fuel
8	2412-98	2	Clamp-Hose
9	32180-030	2	Clip-Tie


Fuel Tank Assembly No. 146-6717

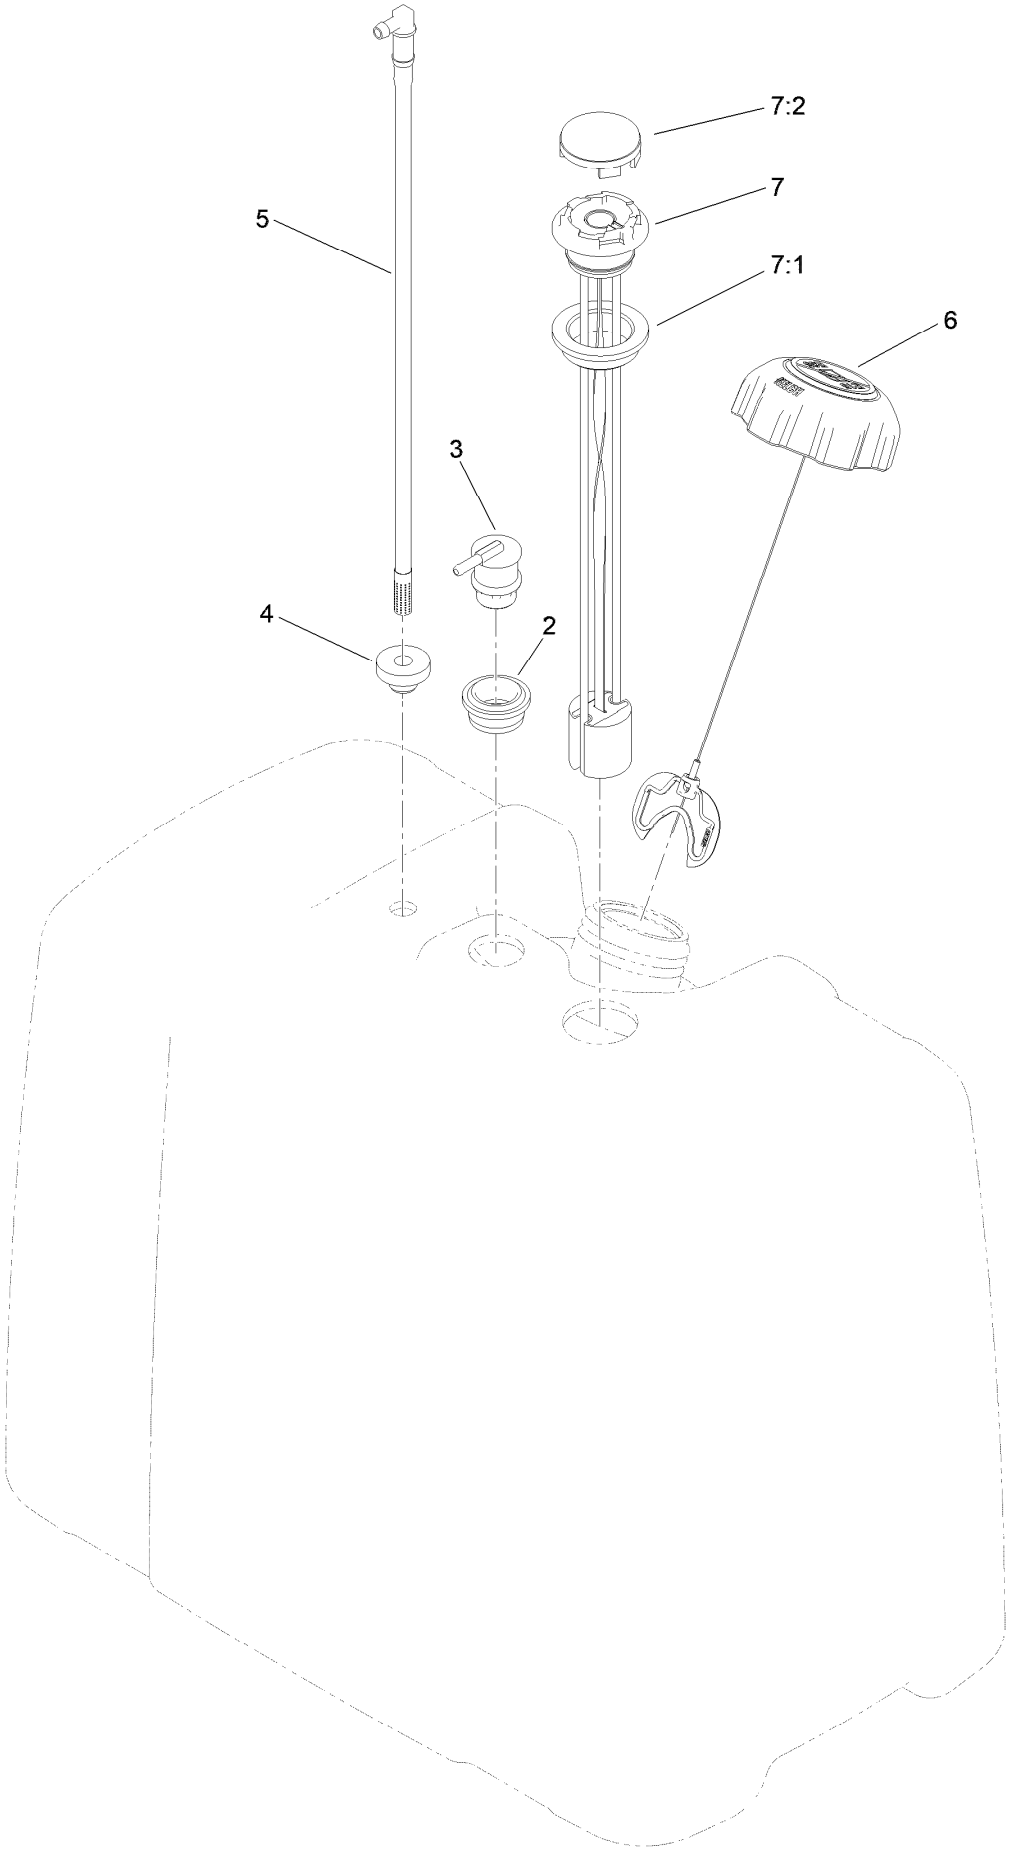

Fuel Tank Assembly No. 146-6717 (continued)

Ref.	Part Number	Qty.	Description
2	114-0284	1	Grommet
3	119-3547	1	Valve-Vent, Fuel
4	46-6560	1	Bushing
5	115-9046	1	Stand Pipe
6	137-4127	1	Cap-Fuel
7	119-0507	1	Gauge-Fuel
7:1	119-0508	1	Seal
7:2	117-8404	1	Dial-Gauge

Controls Assembly

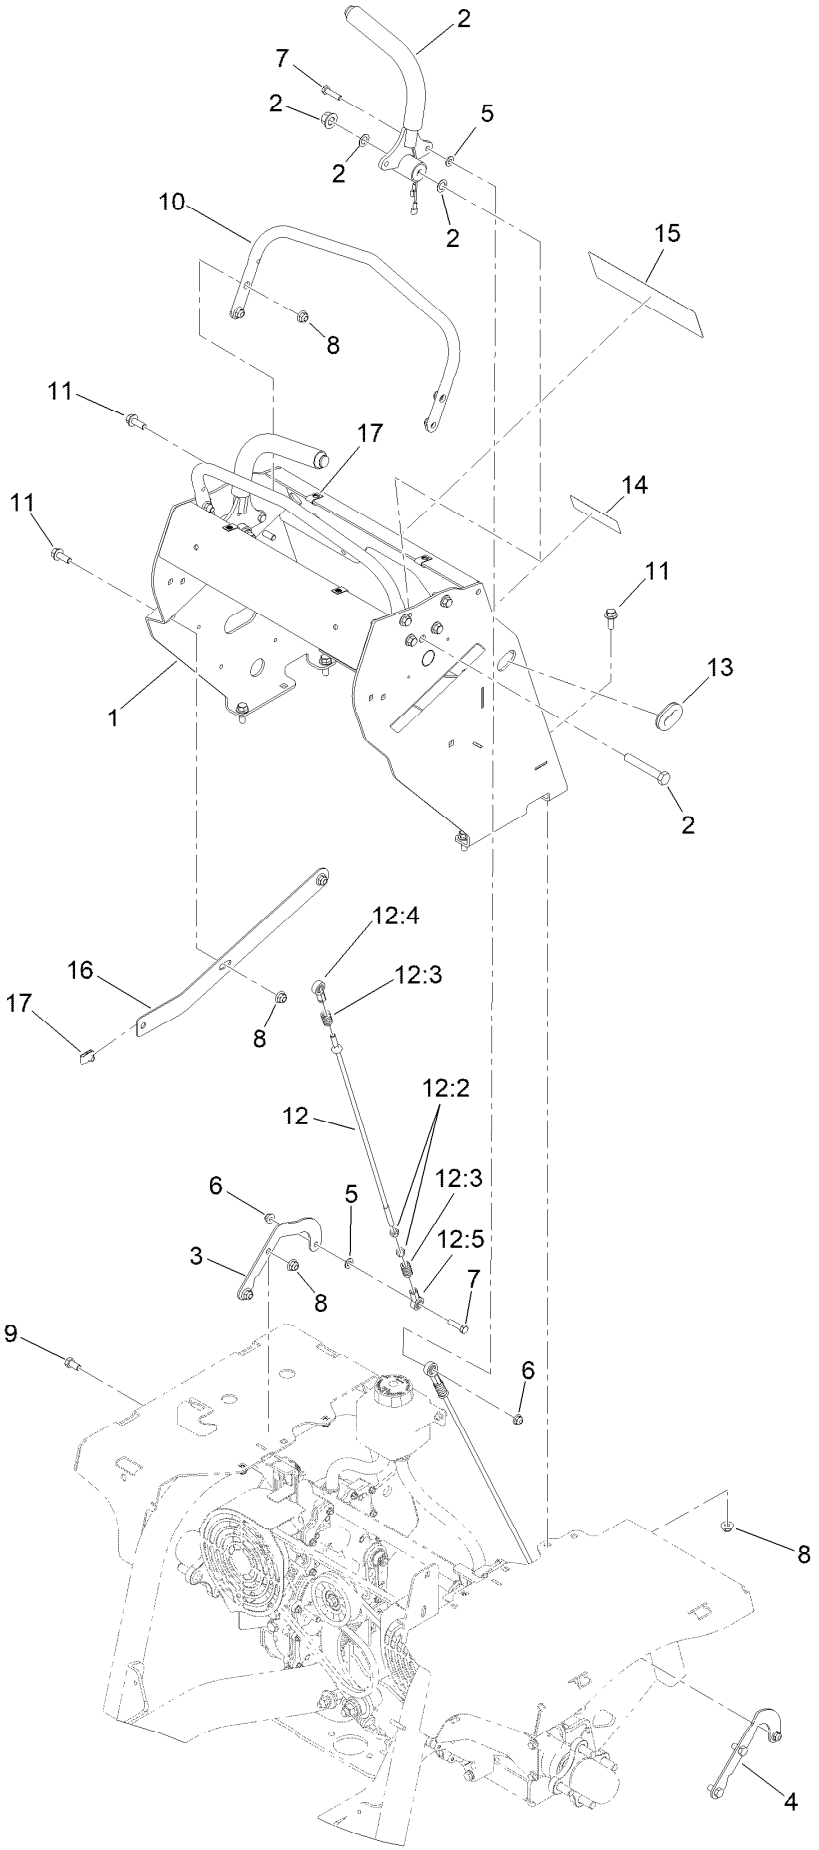


Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-6705-03	1	Weld-Tower
2		2	Control-Motion ●
3	146-6373	1	Arm-Control, Rt
4	146-6372	1	Arm-Control, Lt
5	3256-23	4	Washer-Plain
6	119-4041	4	Nut-HF
7	322-6	4	Screw-HH
8	119-4042	18	Nut-HF, NI
9	323-4	4	Screw-HH
10	142-7600-01	2	Bar-Reference
11	139-2597	14	Screw-HHF
12	146-6354	2	Linkage-Control
12:2	3219-2	2	Nut-Hex
12:3	1-323245	2	Spring-Compression
12:4	1-633152	1	Balljoint-LH
12:5	1-543017	1	Balljoint-RH
13	108-3723	1	Grommet
14	112-9028	1	Decal-Cover, Missing
15	146-6940	1	Decal-Fuse,Service Aid,Belt Routing
16	146-8500-03	1	Mount-Cover, Upper
17	94-2413	5	Nut-U

● Not serviced separately


Motion Control Arm Assembly

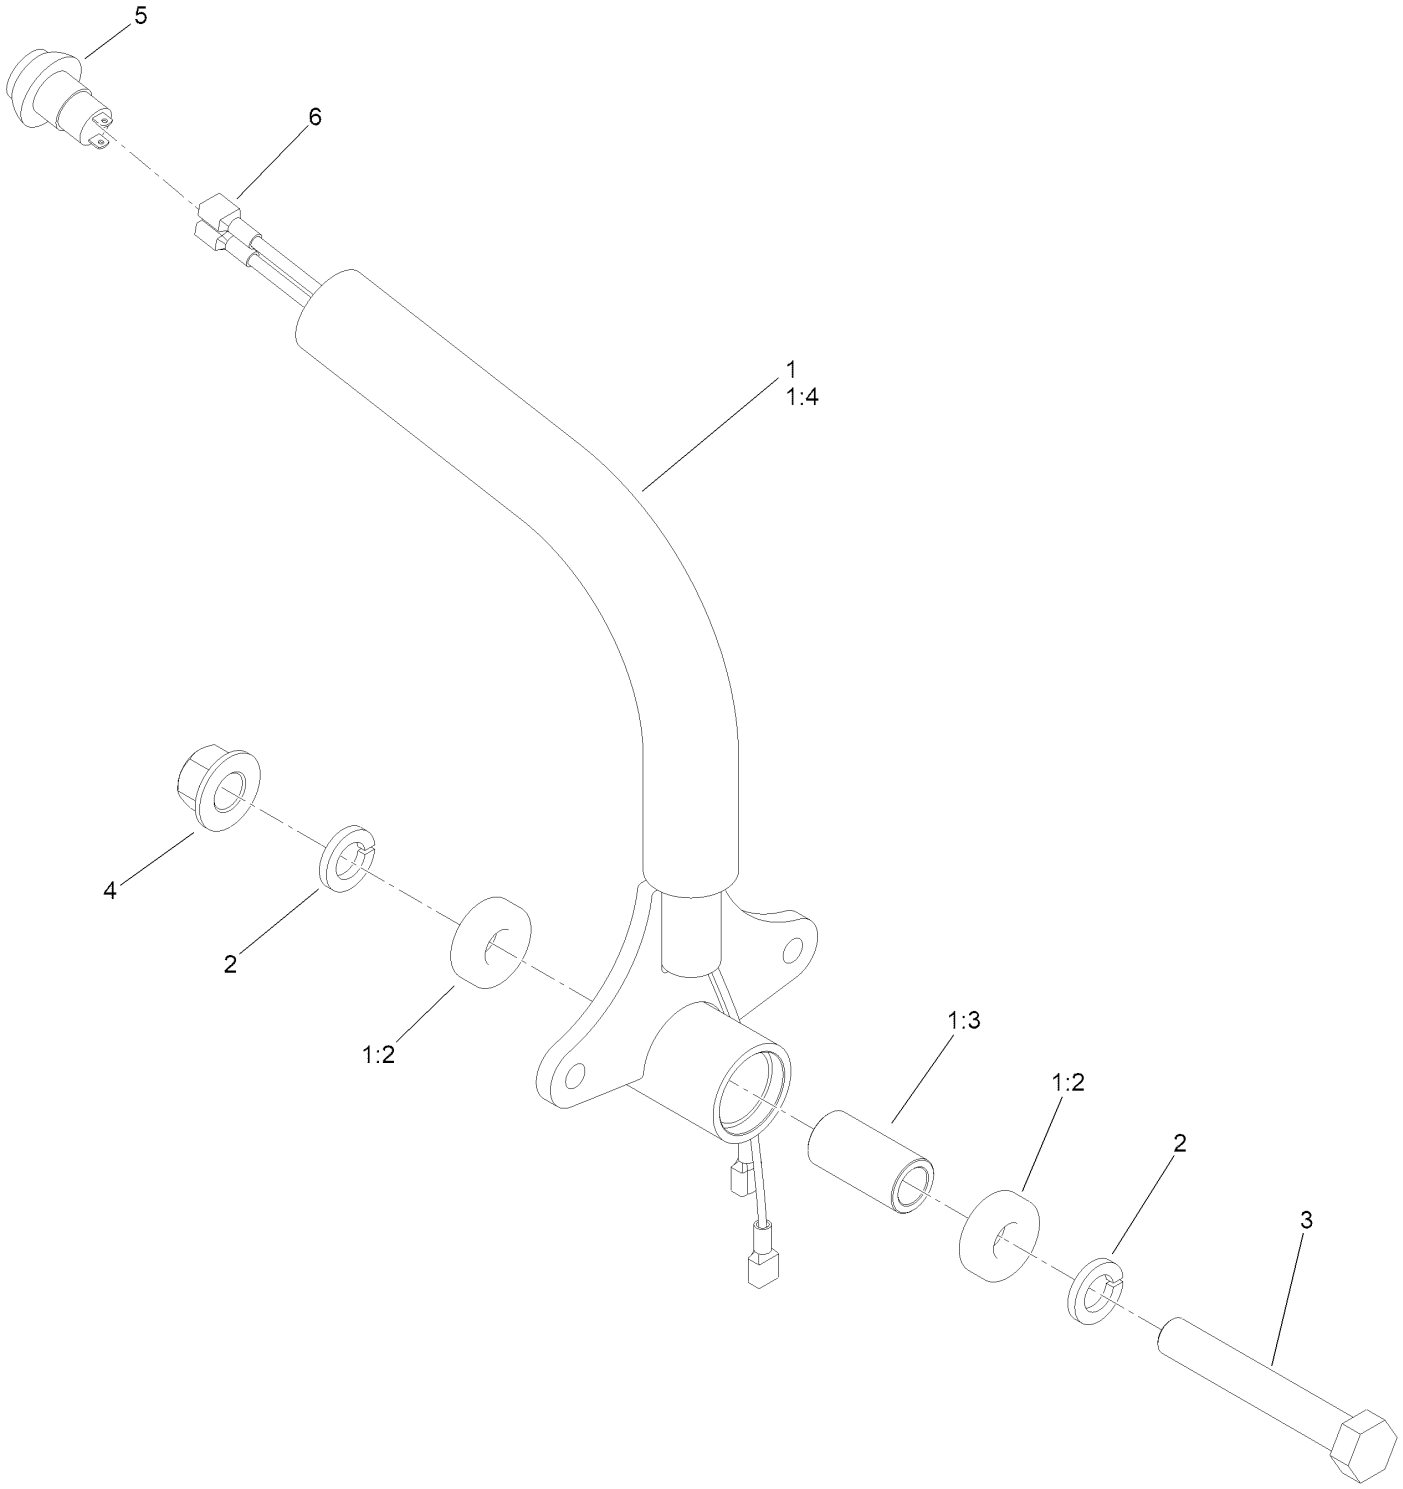

Motion Control Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-6353	1	Control-Motion
1:2	133-2603	2	Bearing-Ball
1:3	142-6579	1	Spacer
1:4	1-633257	1	Grip-Control, Motion
2	3253-7	2	Washer-Lock
3	325-13	1	Screw-HH
4	139-1689	1	Nut-HF
5	125-7996	1	Switch-Pb, Momentary
6	146-6451	1	Harness-Switch


Electrical Assembly

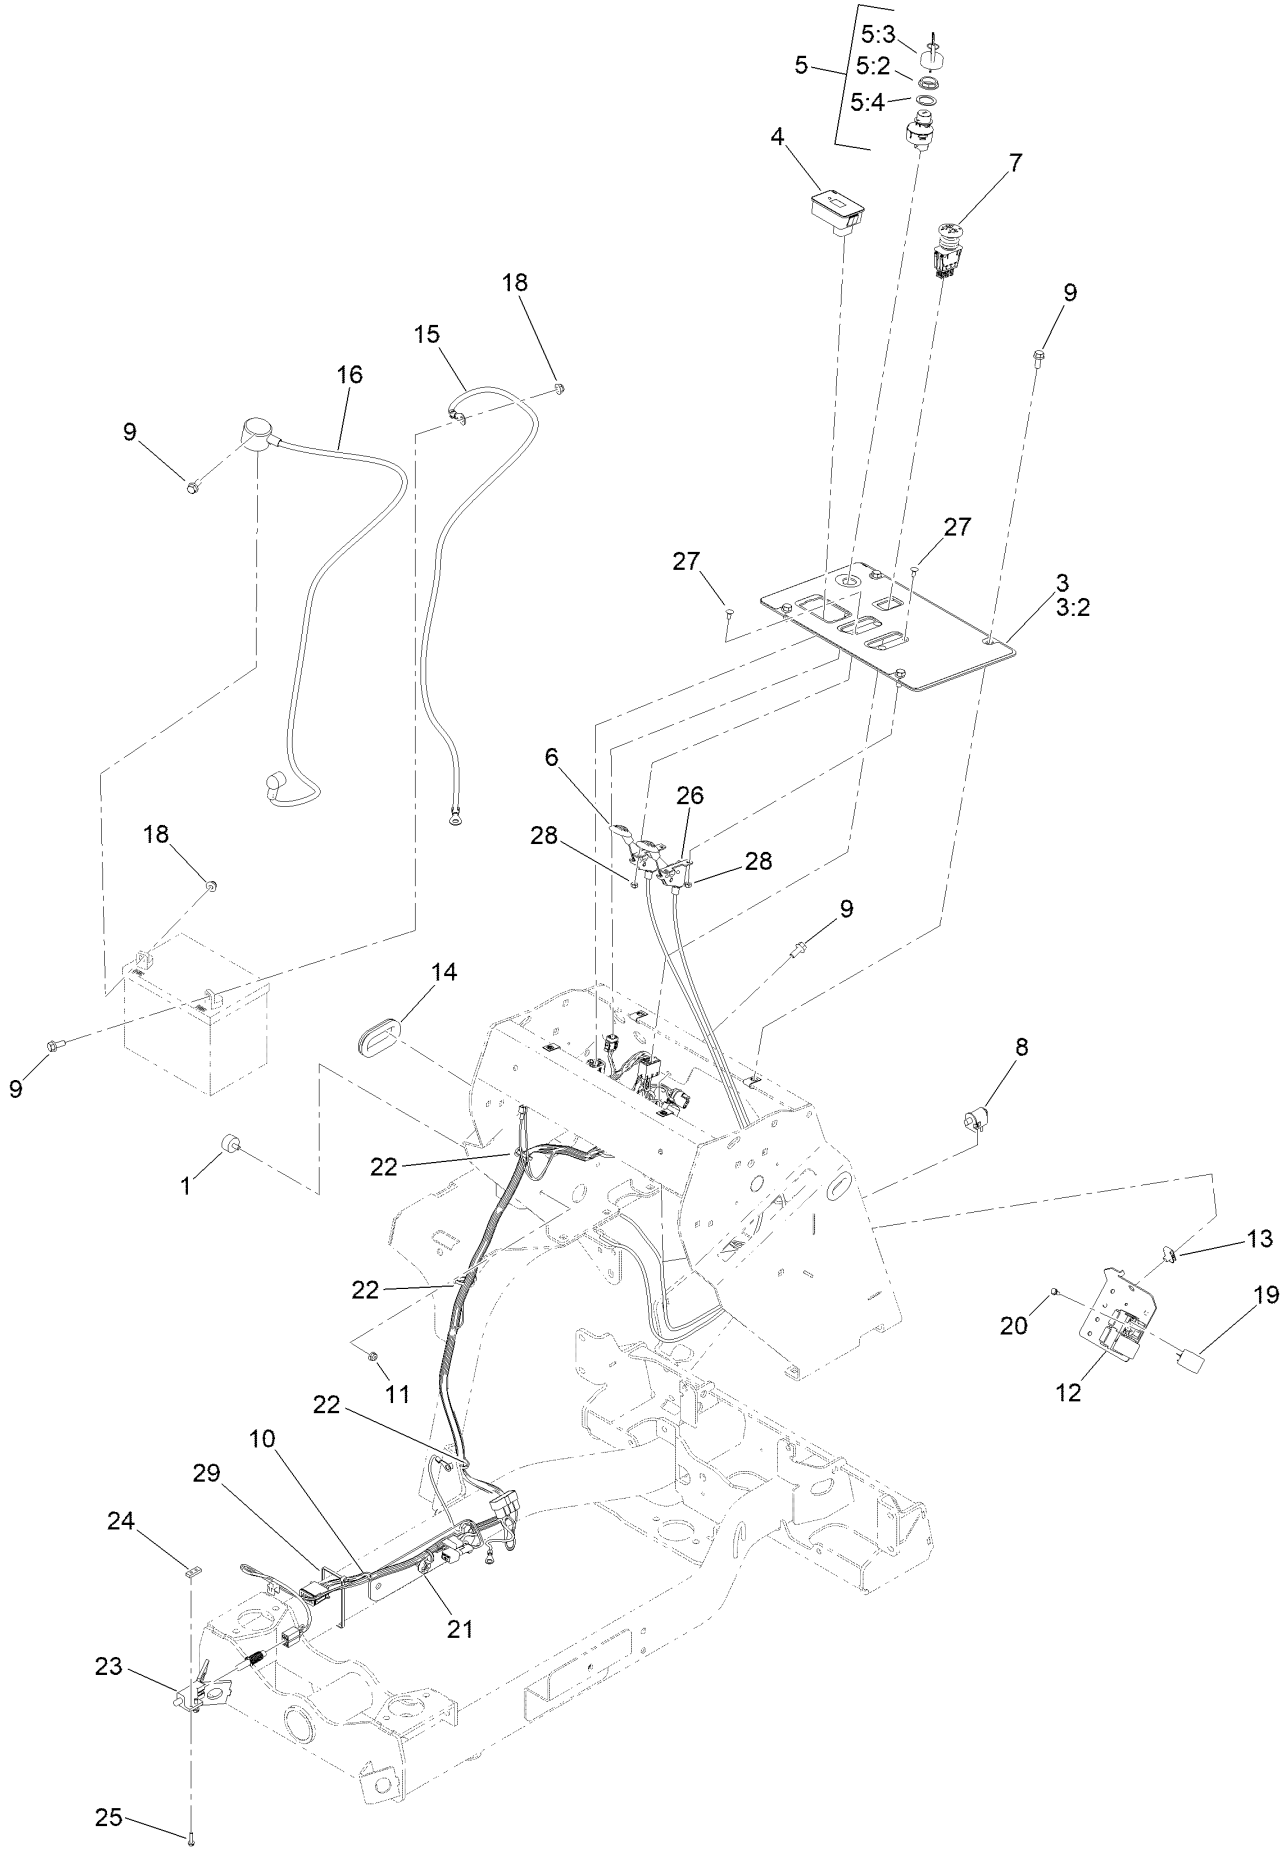

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	240-14	1	Bumper-Rubber
3	146-8058	1	ASM-Console Plate / Decal
3:2	146-6909	1	Decal-Control Panel
4	146-8300	1	Hour Meter-Zturbo
5	126-6285	1	Ignition Switch ASM
5:2	108-8660	1	Nut-Mounting
5:3	106-5270	1	Ignition Key Set
5:4	108-8659	1	Washer-Backup
6	142-6693	1	Control-Throttle
7	135-3653	1	Switch, PTO 10A
8	82-2190	1	Switch-Bail
9	139-2598	7	Screw-HHF
10	146-8035	1	Harness-Main
11	119-4040	1	Nut-HF, NI
12	146-6873-03	1	Mount-Fuse Block
13	94-2413	1	Nut-U
14	240-12	1	Grommet-Rubber
15	147-4797	1	Battery-Cable, Bk ASM
16	131-0738	1	Cable-Battery, Positive
18	119-4041	2	Nut-HF
19	1-643275	2	Relay
20	32144-112	3	Screw-HWH
21	32180-641	1	Clip-Harness, Bolt, M10
22	32180-030	3	Clip-Tie
23	1-633110	1	Switch-Brake
24	1-633181	1	Plate-Tapped
25	32105-13	2	Screw-HWH
26	109-8747	1	Control,Choke
27	135-1929	4	Bolt-CARR
28	3296-2	4	Nut-Lock, NI
29	3290-379	1	Tie-Cable

Engine Assembly

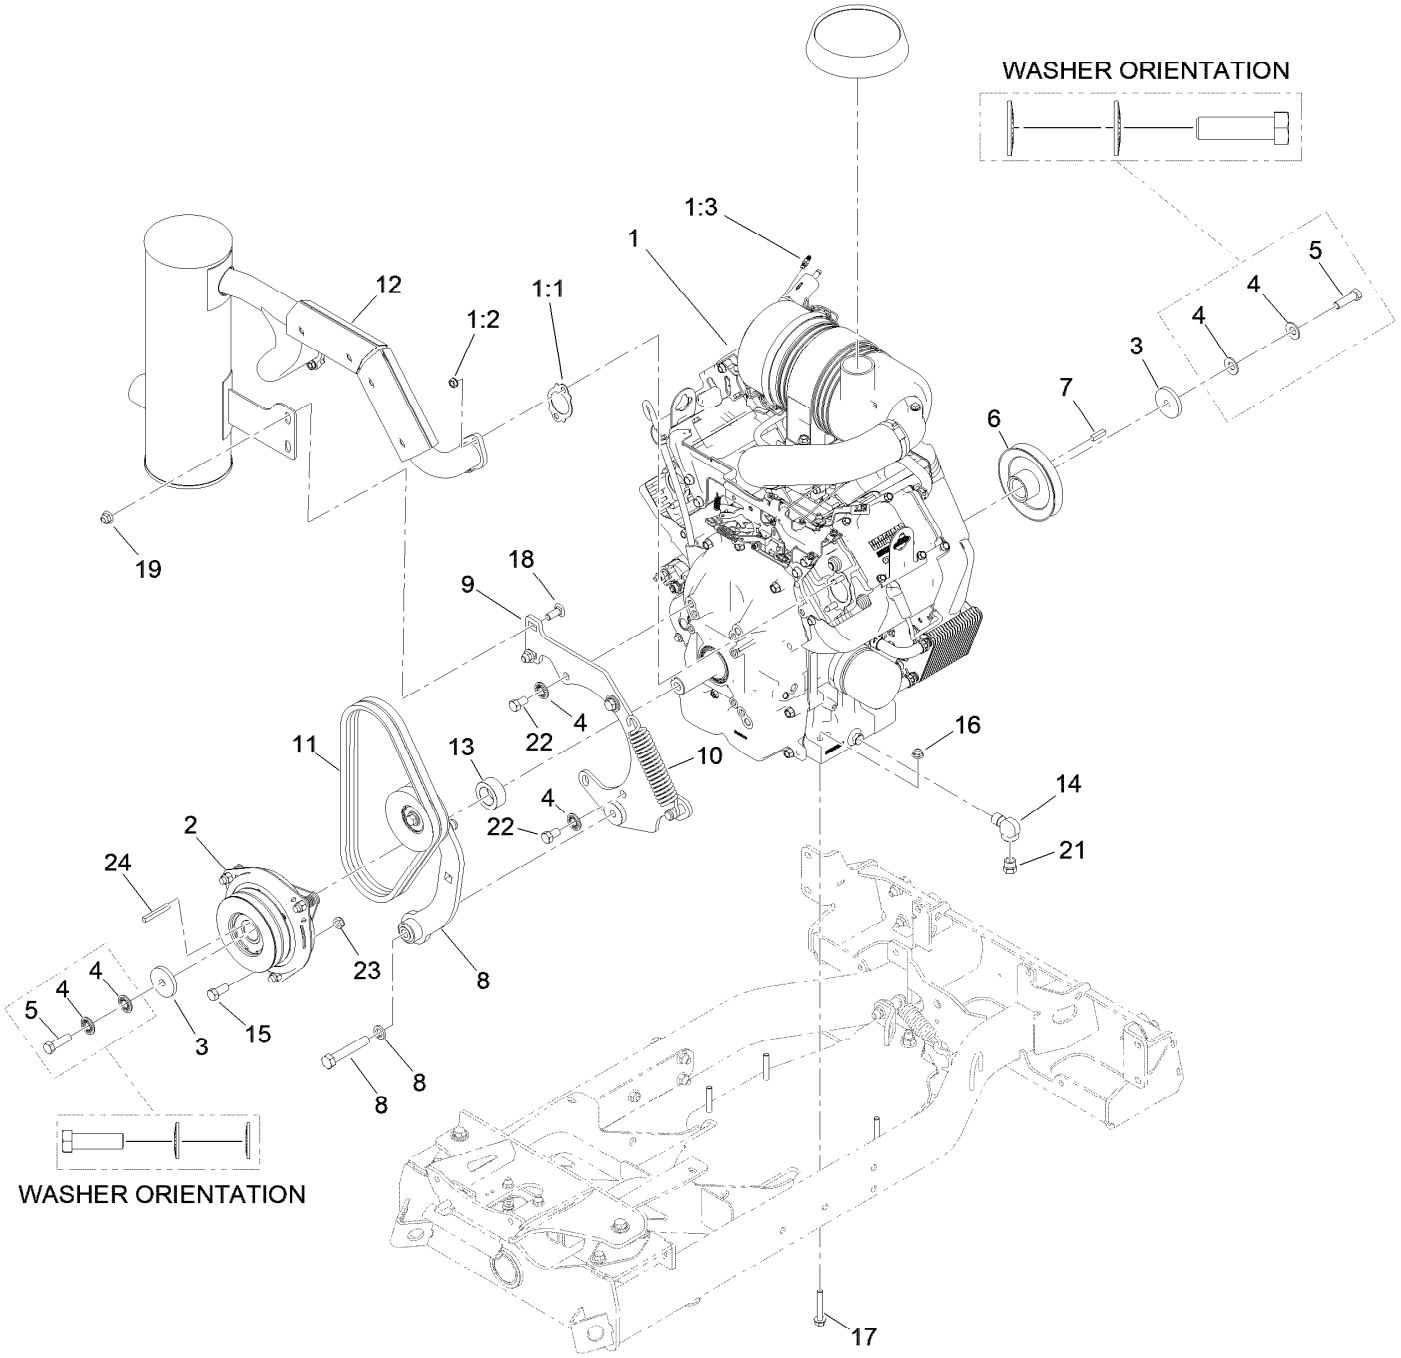


Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Vanguard Carb ●■
1:1	142-6842	2	Gasket-Exhaust
1:2	142-6843	4	Nut-Hex
1:3	120-1996	1	Fitting-STR
2	146-6979	1	Clutch-Gt2.5
3	109-6919	2	Washer-Plain
4	1-603610	7	Washer-Spring
5	109-9761	2	Screw-HH
6	146-6770	1	Pulley-Engine
7	1-807259	1	Key
8		1	ASM-Idler ●
9	146-8166-03	1	Mount-Idler, Engine [black]
10	135-1272	1	Spring, Extension
11	146-6819	1	Belts-"ax", 34"
12	146-8297	1	Muffler-Briggs 993
13	146-8183	1	Spacer-Clutch
14	1-303431	1	Fitting-Elbow-90
15	324-4	1	Screw-HH
16	119-4041	4	Nut-HF
17	142-6275	4	Screw-HHF
18	3231-22	2	Screw-CARR
19	119-4042	2	Nut-HF, NI
21	108-0544	1	Fitting-Plug
22	324-2	3	Screw-HH
23	126-9780	1	Nut-Lock
24	103-4177	1	Key

● Not serviced separately

■ Obtain parts from www.briggsandstratton.com


Engine Idler Assembly

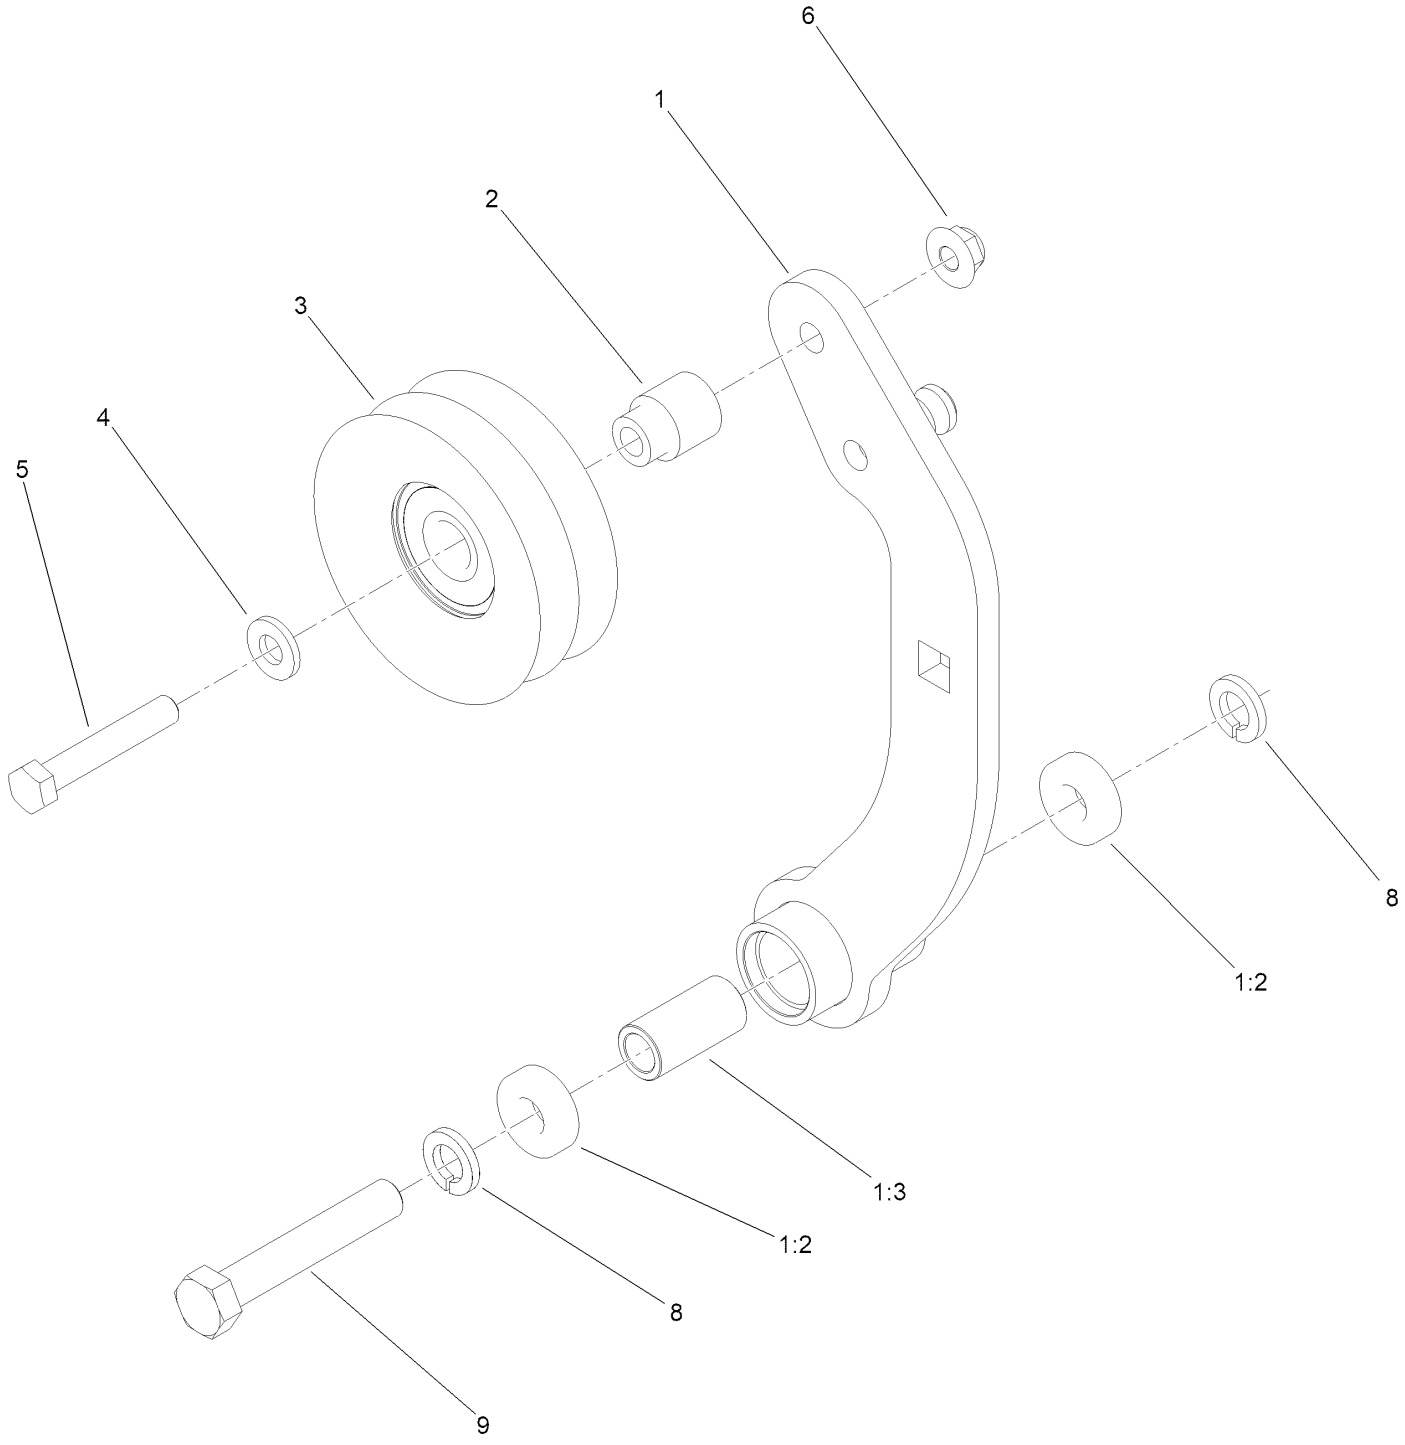

Engine Idler Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-8188	1	Arm-Idler
1:2	133-2603	2	Bearing-Ball
1:3	142-6579	1	Spacer
2	1-633456	1	Bushing, Idler
3	146-6812	1	Pulley-Idler, 2A
4	100-4852	1	Washer-Hardened
5	323-11	1	Screw-HH
6	119-4042	1	Nut-HF, NI
8	3253-7	2	Washer-Lock
9	139-2634	1	Screw-HH

Blower Assembly

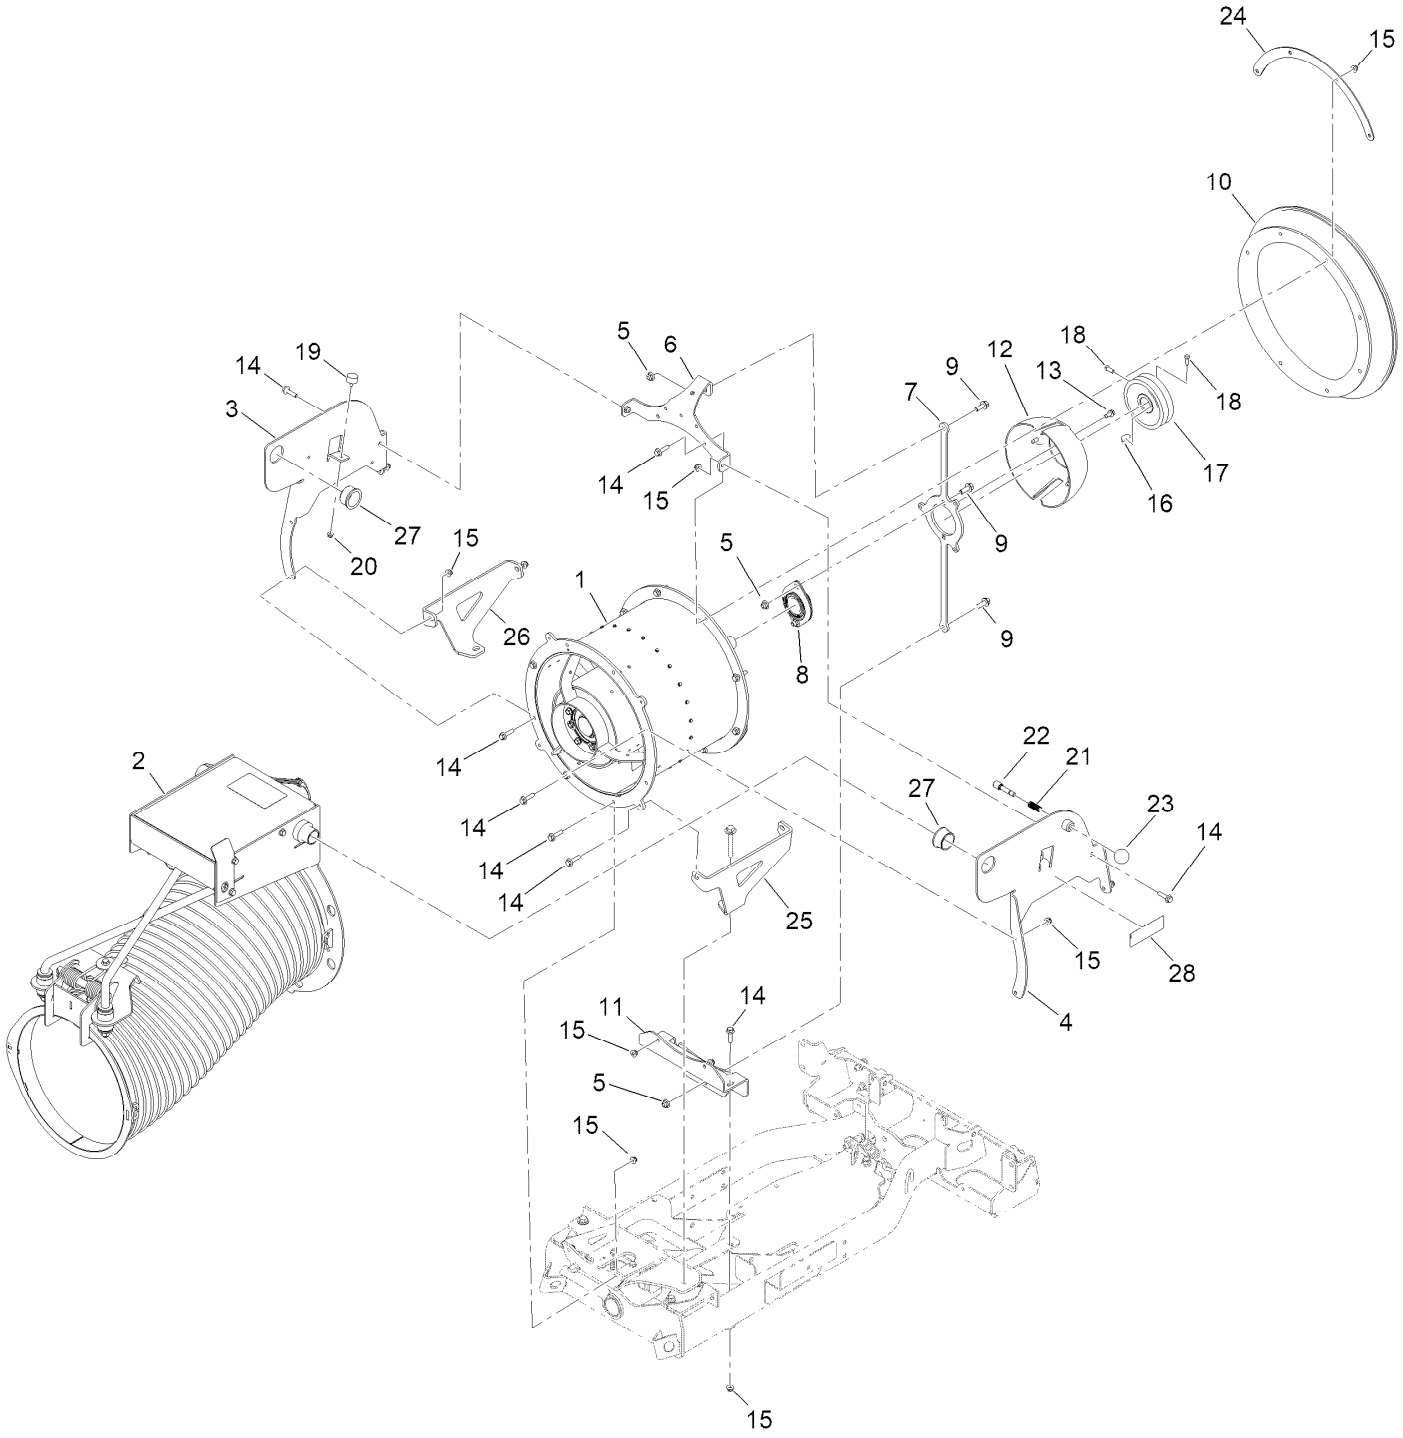


Blower Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-7327	1	ASM-Turbine
2		1	ASM-Nozzle, 4Bar, Motor ●
3	146-8044-03	1	Plate-Support, RH
4	146-8046-03	1	Weld-Plate, Support, LH
5	119-4042	4	Nut-HF, NI
6	146-8746-03	1	Bracket-Blower, Top
7	146-7369-03	1	Mount-Bearing, Turbine
8	135-1056	1	Bearing-Flanged
9	139-2597	4	Screw-HHF
10	117-8329	1	Bell-Inlet
11	146-7985-03	1	Bracket-Blower, Lower
12	146-7316	1	Cone-Turbine
13	32144-70	3	Screw-HWHTF
14	132-3837	18	Screw-HHF
15	119-4041	18	Nut-HF
16	3257-42	1	Key-Woodruff
17	146-6836	1	Pulley-Double, "a/B"
18	120-6474	2	Screw-Set, SQH
19	240-14	2	Bumper-Rubber
20	119-4040	2	Nut-HF, NI
21	114-5348	1	Spring
22	119-8650	1	Pin-Latch
23	1-603175	1	Knob-Ball
24	146-8289-03	2	Backer-Inlet, Bell
25	146-8332-03	1	Bracket-Turbine, Lt
26	146-8333-03	1	Bracket-Turbine, Rt
27	146-8311	2	Bushing-Flanged
28	146-8179	1	Decal-Pinch, Lock

● Not serviced separately


Turbine Assembly No. 146-7327

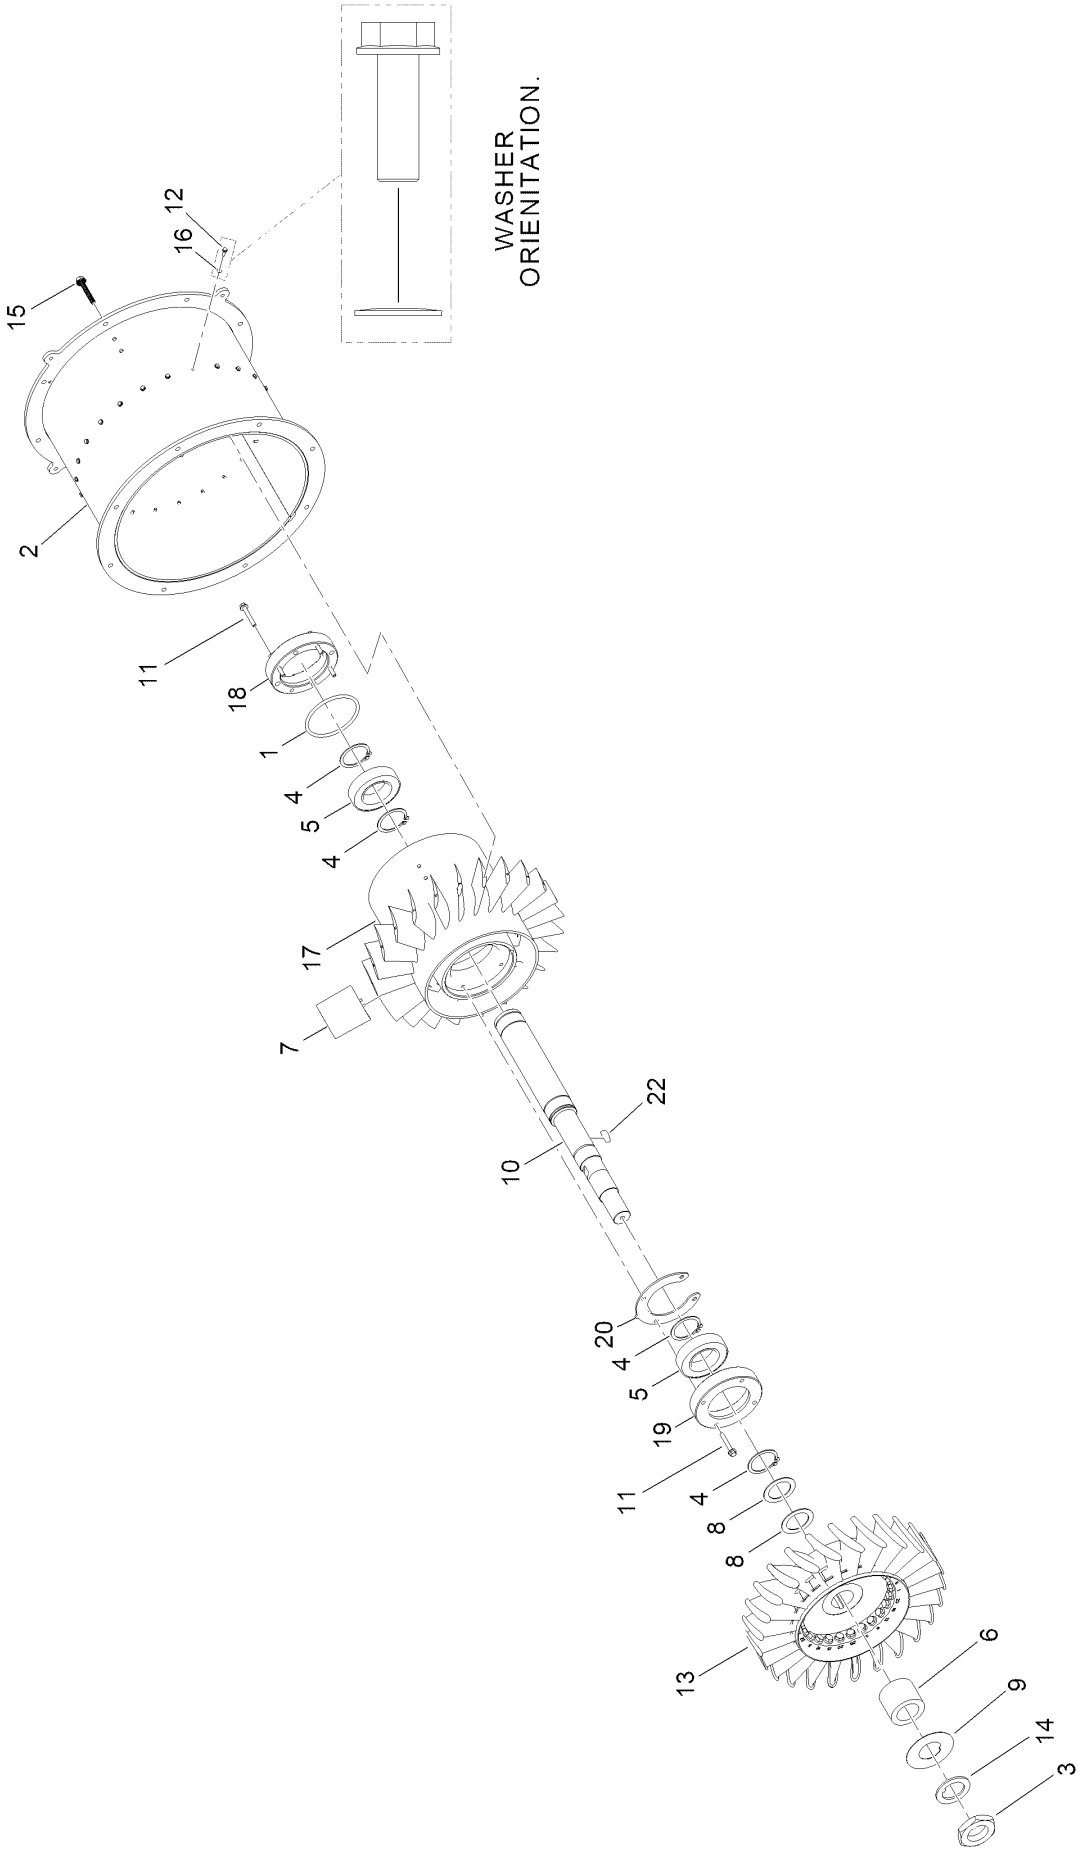

Turbine Assembly No. 146-7327 (continued)

Ref.	Part Number	Qty.	Description
1	92-9533	1	O-Ring
2	164-3431	24	Vane-Stator
3	112-1899	1	Nut
4	112-1951	4	Ring-Snap, EXT
5	112-6764	2	Bearing-Ball
6	114-2164	1	Spacer
7	140-6944-03	1	Housing-Horizontal [black]
8	115-5131	2	Washer
9	115-9005	1	Washer-Tab
10	146-7326	1	Shaft-Turbine
11	125-4287	8	Screw-HHF
12	146-8640	24	Screw-HWH
13	117-8356	1	Rotor
14	119-6202	1	Washer-Tab
15	161-7875	4	Screw-HHSF
16	146-8641	24	Washer-Belville
17	145-7583	1	Inner Housing
18	140-6933	1	End-Oring
19	120-6061	1	Bearing-Cap
20	120-6063	1	End-Cap
22	3257-42	1	Key-Woodruff


Nozzle Assembly

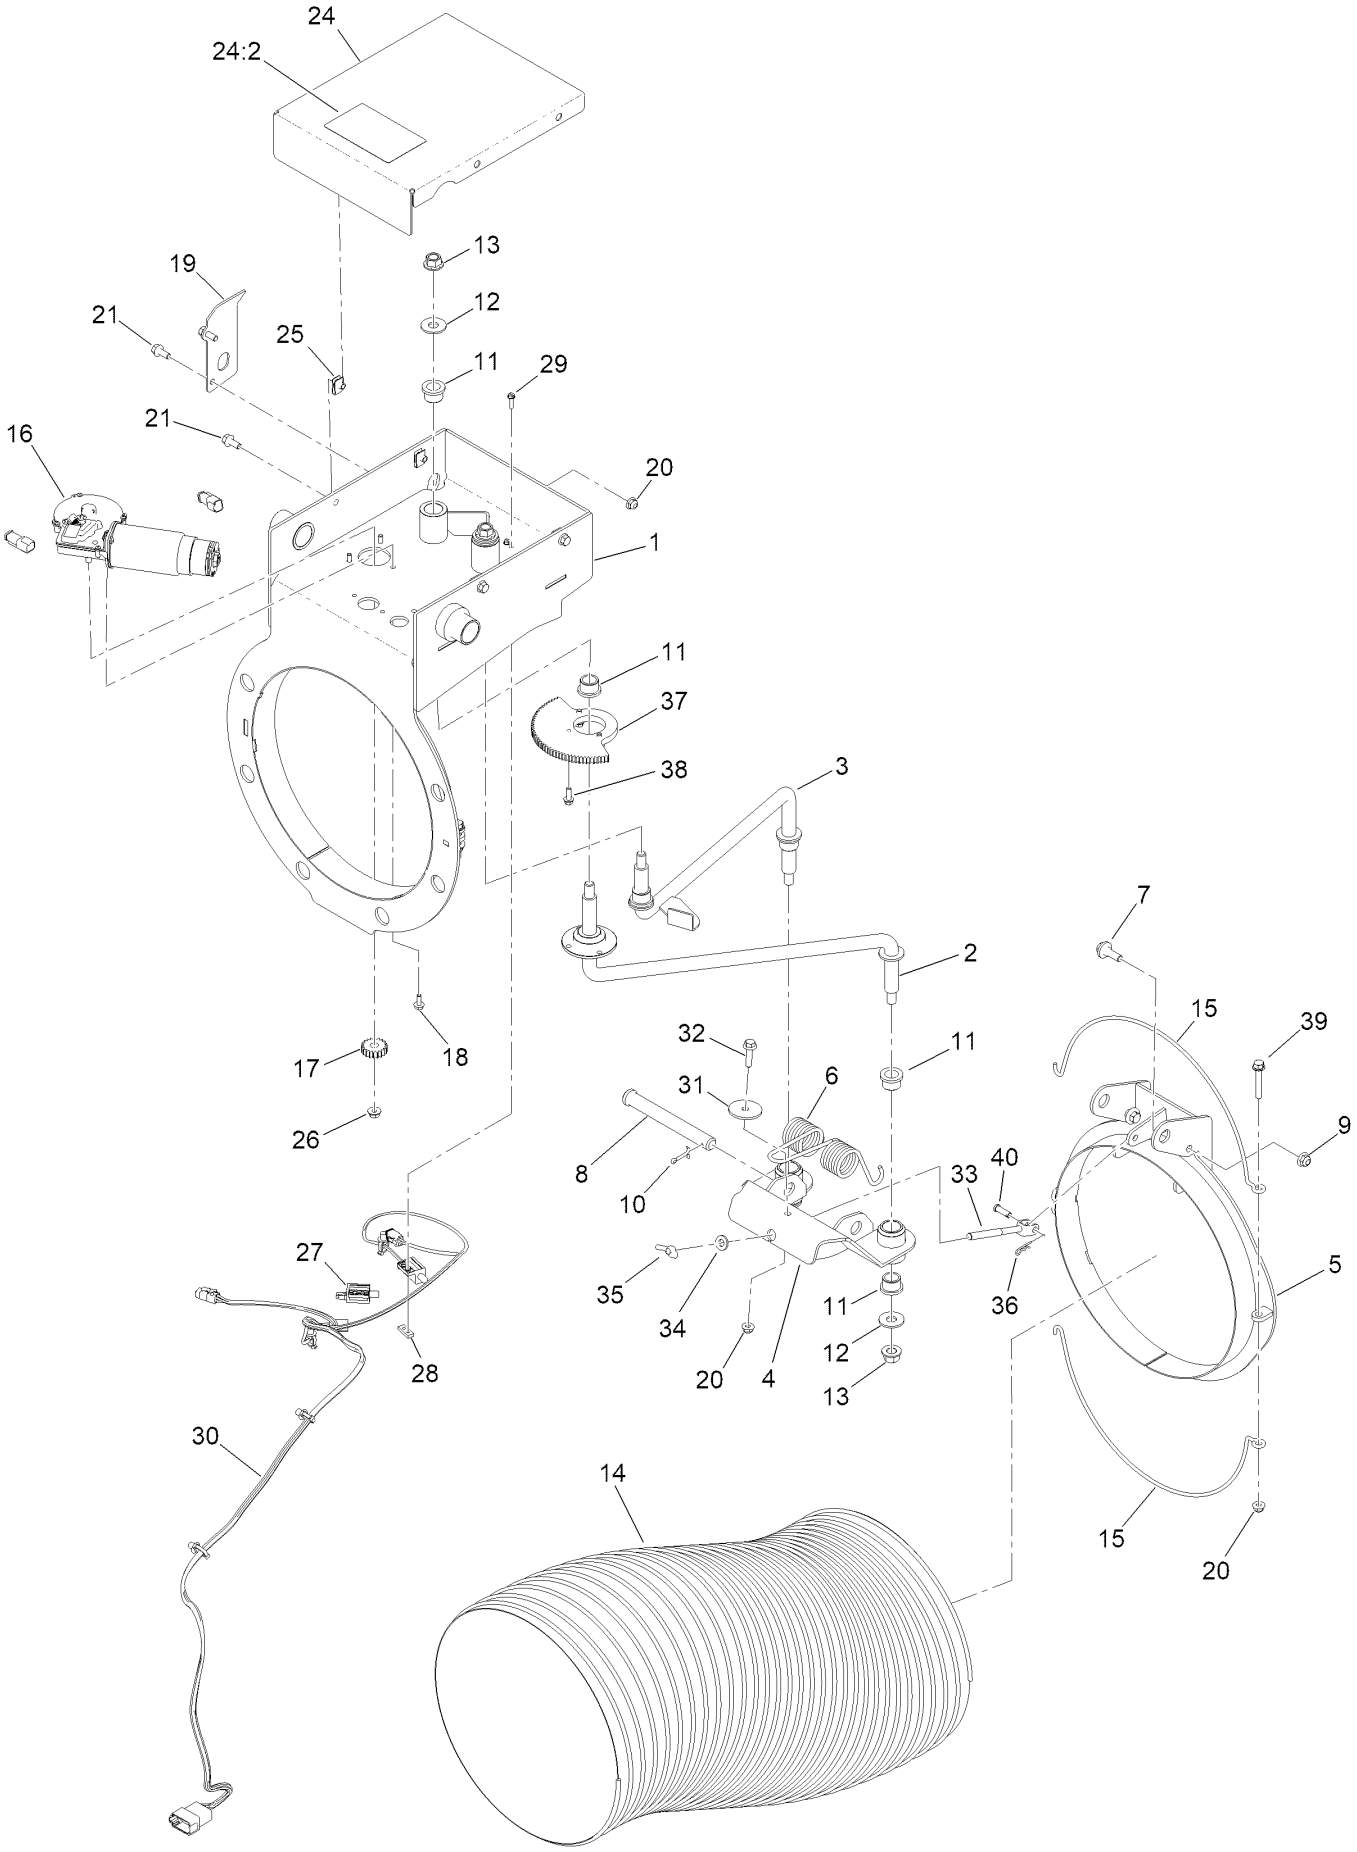

Nozzle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	146-8042-03	1	Weld-Nozzle Plate
2	146-7639	1	Weld-Bar/Plate
3	146-7695	1	Weld-Bar/Paddle
4	146-7638-03	1	Weld-Front Support, 4Bar
5	146-7634-03	1	Weld-Nozzle End
6	146-8022	1	Spring-Torsion
7	137-9847	2	Screw-Shoulder
8	120-5587	1	Pin-Clevis
9	119-4042	2	Nut-HF, NI
10	3272-17	1	Pin-Cotter
11	148-0897	8	Bushing-Flange
12	3256-6	4	Washer-Flat
13	139-1689	4	Nut-HF
14	146-7640	1	Hose-Nozzle
15	146-8383	4	Clamp-Hose, Nozzle
16	146-8287	1	Motor-Reversible, W/Brake
17	146-7665	1	Gear-20T
18	114-8414	3	Screw-HHF
19	146-8047	1	Plate-Transport Latch
20	119-4041	4	Nut-HF
21	139-2598	5	Screw-HHF
24	146-8061	1	ASM-Cover, Motor/Brake, Decal
24:2	115-5106	1	Decal-Danger
25	94-2413	4	Nut-U
26	127-2371	1	Nut-HF
27	1-513152	2	Switch-Closed, Normally
28	1-633181	2	Plate-Tapped
29	32105-13	4	Screw-HWH
30	146-8010	1	Harness-Nozzle
31	139-1726	1	Washer-Rebound
32	132-3837	1	Screw-HHF
33	146-8824	1	Yoke-Threaded
34	100-4852	1	Washer-Hardened
35	1-543678	1	Nut-Wing
36	3290-307	1	Pin-Cotter
37	146-8365	1	Gear-100T
38	119-1138	3	Screw-HHF,Patch
39	142-6275	2	Screw-HHF
40	1-808280	1	Pin-Clevis

Operator Platform Assembly

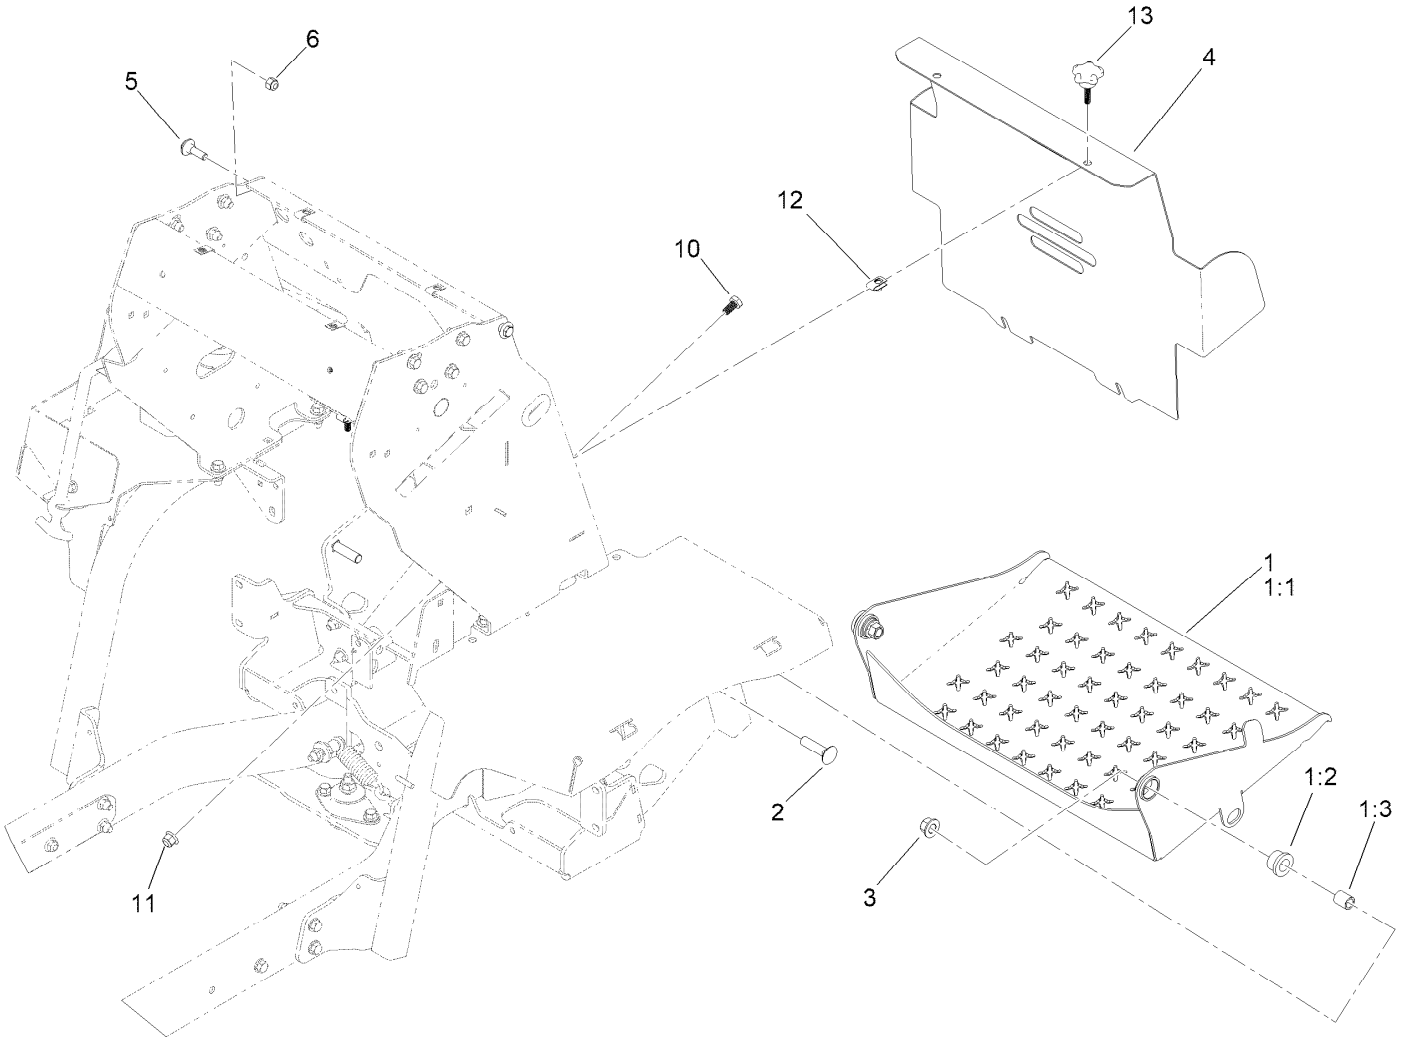


Operator Platform Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	ASM-Operators Platform ●
1:1	146-7336-01	1	Foot Plate ASM [red]
1:2	142-6033	2	Bushing-Rubber
1:3	142-6034	2	Spacer
2	3233-4	2	Screw-CARR
3	139-1689	2	Nut-HF
4	146-6776-03	1	Guard-Shin
5	614672	2	Screw-Shoulder, HWH
6	137-3087	2	Nut-Hex
10	142-7585	2	Magnet-Stud, Threaded
11	103-9511	2	Nut-Flg
12	94-2413	2	Nut-U
13	139-2401	2	Knob

● Not serviced separately

Model Specific Decal and Knee Pad Assembly

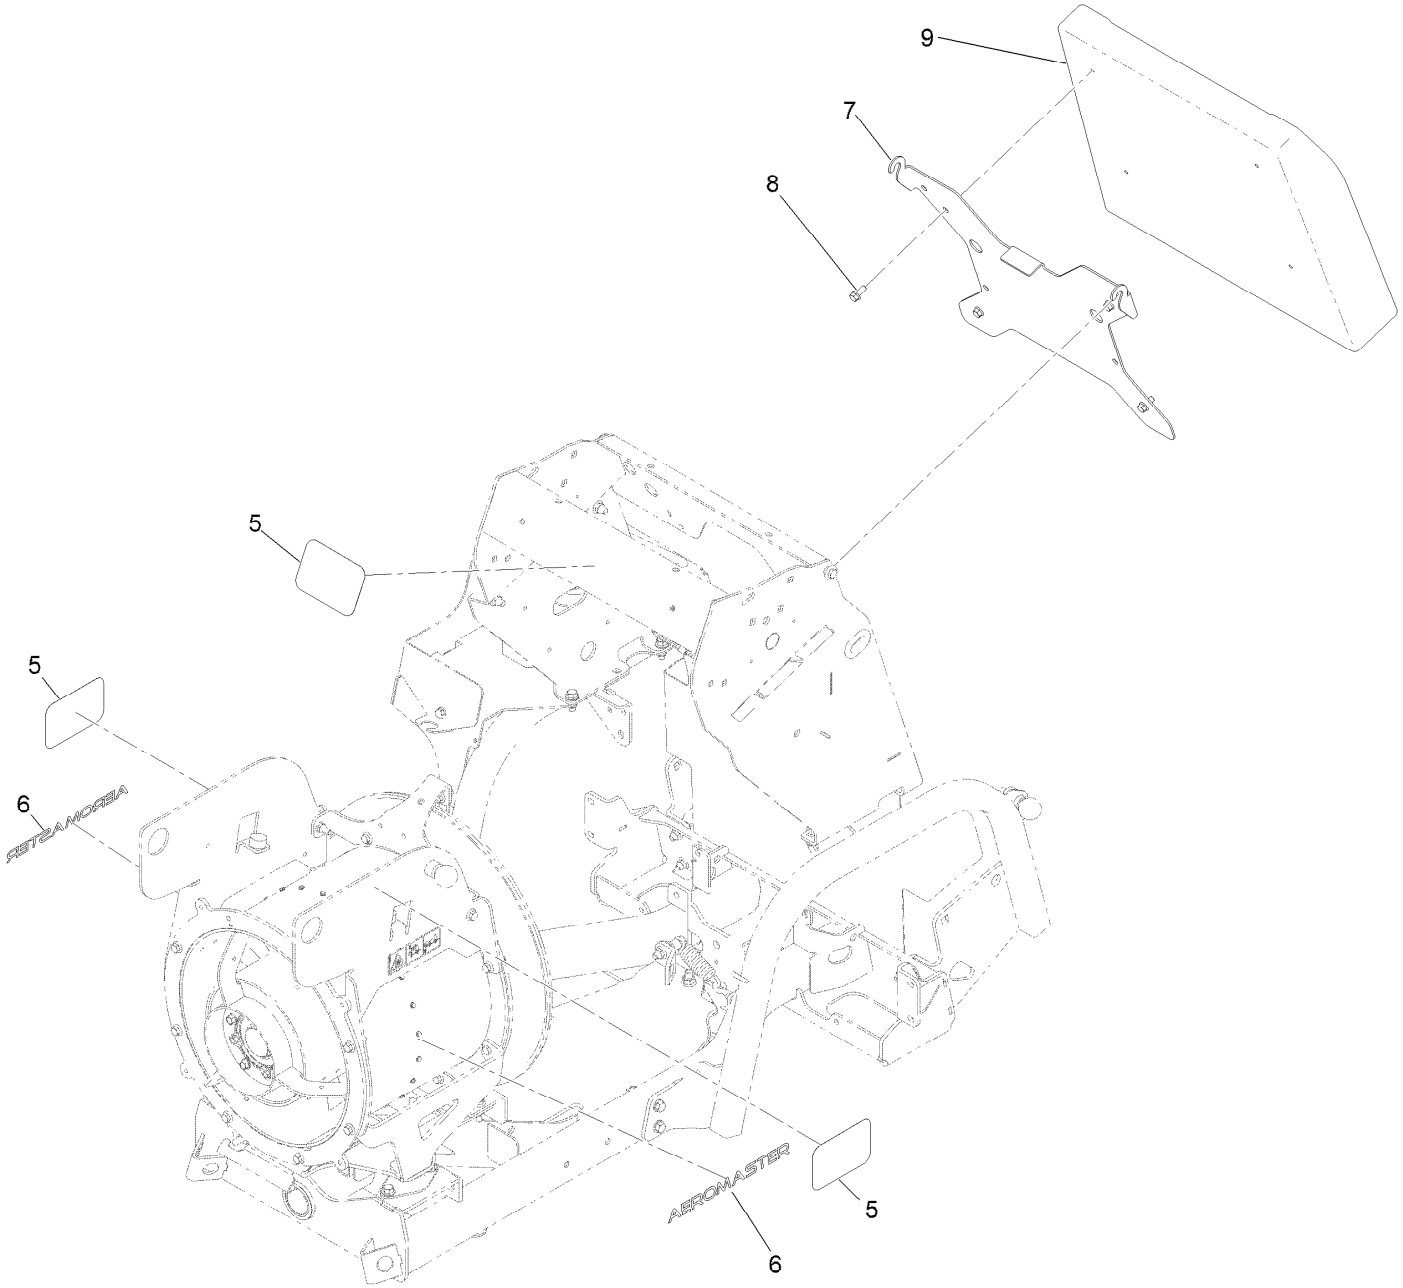

Model Specific Decal and Knee Pad Assembly (continued)

Ref.	Part Number	Qty.	Description
5	94-2579	3	Decal
6	146-8731	2	Decal-Aeromaster
7	146-6571-03	1	Plate-Thigh Pad
8	139-2598	4	Screw-HHF
9	142-7621	1	Pad-Knee

Notes:

Notes:



Count on it.