Form Number 3350-746 Rev A

Mid-Size ProLine Pistol Grip Hydro
15 HP with 44in Side Discharge Mower

Model No. 30439 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

PROTOTYPE

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Contents

Description	Page
Engine, Clutch and Brake Assembly	3
Fuel Tank, Hydraulic Tank, Pump and Filter Assembly	4
Hydraulic Pump Assembly No. 106-5489	5
Hydraulic Pump Assembly No. 106-5490	6
Wheel and Drive Assembly	7
Hydraulic Wheel Motor Assembly No. 104-1171	8
Lower Control Assembly	9
Hydraulic Plumbing Assembly	10
Upper Control Assembly	11
Control Panel Assembly	12
Parking Brake Assembly	13
Carrier Frame Assembly	14
Spindle, Pulley and Belt Assembly	15
Spindle Assembly No. 106-0786	16
Spindle Assembly No. 106-0784	17
Deck Assembly	18
Drive Belt and Tensioner Assembly	19
Cylinder and Crankcase Assembly Kawasaki FH430V-AS28	20
Piston and Crankshaft Assembly Kawasaki FH430V-AS28	21
Valve and Camshaft Assembly Kawasaki FH430V-AS28	22
Lubrication Equipment Assembly Kawasaki FH430V-AS28	23
Cooling Equipment Assembly Kawasaki FH430V-AS28	24
Electrical Equipment Assembly Kawasaki FH430V-AS28	25
Control Euipment Assembly Kawasaki FH430V-AS28	26
Carburetor Assembly Kawasaki FH430V-AS28	27
Air-Filter and Muffler Assembly Kawasaki FH430V-AS28	28
Fuel Tank/Fuel Valve Assembly Kawasaki FH430V-AS28	29
Starter Assembly Kawasaki FH430V-AS28	30
Decal Assembly Kawasaki FH430V-AS28	31

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head
WH. . . . . wing head

PROTOTYPE

Footnotes

❶ Not illustrated
❷ Not serviced separately
❸ Obtain parts from your local Kawasaki dealer

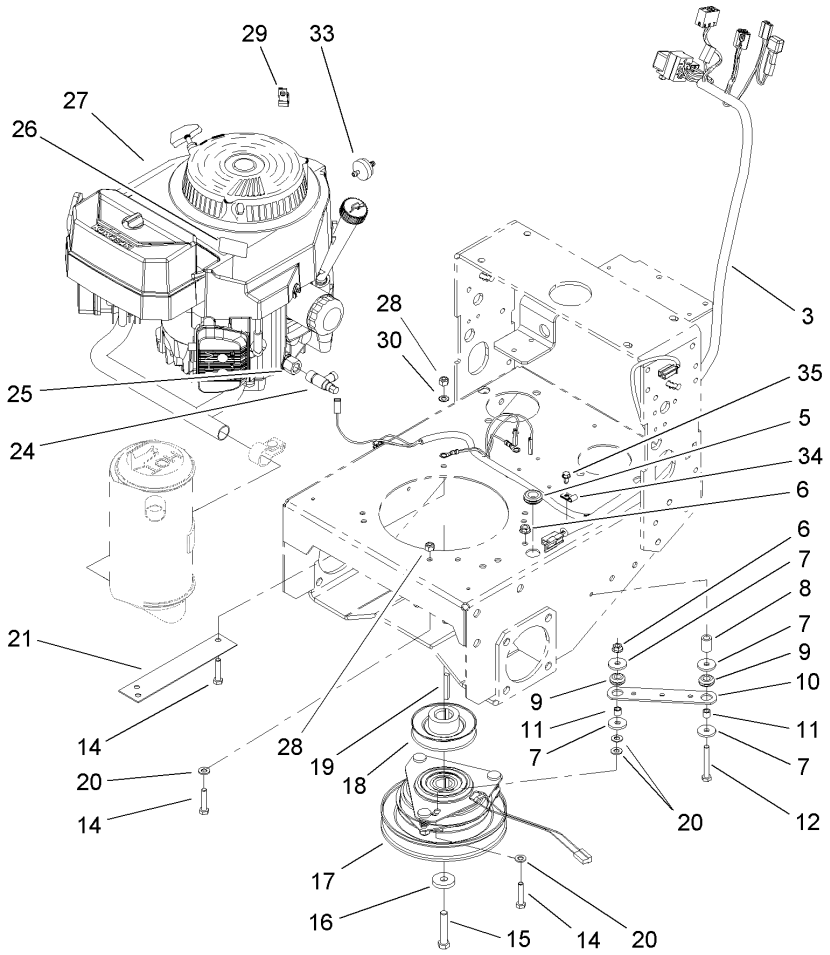


Engine, Clutch and Brake Assembly

Ref	Part No.	Qty.	Description
3	106-8781	1	Wire Harness
5	237-124	1	Grommet
6	32128-20	2	Nut-HF
7	1-613235	4	Washer
8	104-6373	1	Tube-Retainer
9	1-633630	2	Grommet-Brake
10	1-633543-03	1	Strap-Clutch, Brake
11	1-633545	2	Spacer
12	322-11	1	Screw-HH
14	322-7	5	Screw-HH
15	3212-9	1	Screw-HH
16	112843	1	Washer
17	105-2635	1	Clutch/brake
18	44-5940	1	Pulley
19	608006	1	Key-Square
20	3256-23	5	Washer-Flat
21	94-5847-01	1	Cover-Pulley
24	103-1965	1	Valve-Drain, Oil
25	103-1966	1	Adapter
26	106-0699	1	Decal-Warning, Hot Surfaces
❷27		1	Engine-Kawasaki, Fh430v-As28
28	3296-29	4	Nut-Lock, NI
29	2412-87	1	Clamp-Cable
30	3255-8	1	Washer-Lock

Ref	Part No.	Qty.	Description
33	56-6360	1	Filter-Fuel
34	2412-72	1	Clip-Closed, Insulated
35	12-3270	1	Screw
❶99	103-1964	1	Hose-Drain, Oil

PROTOTYPE

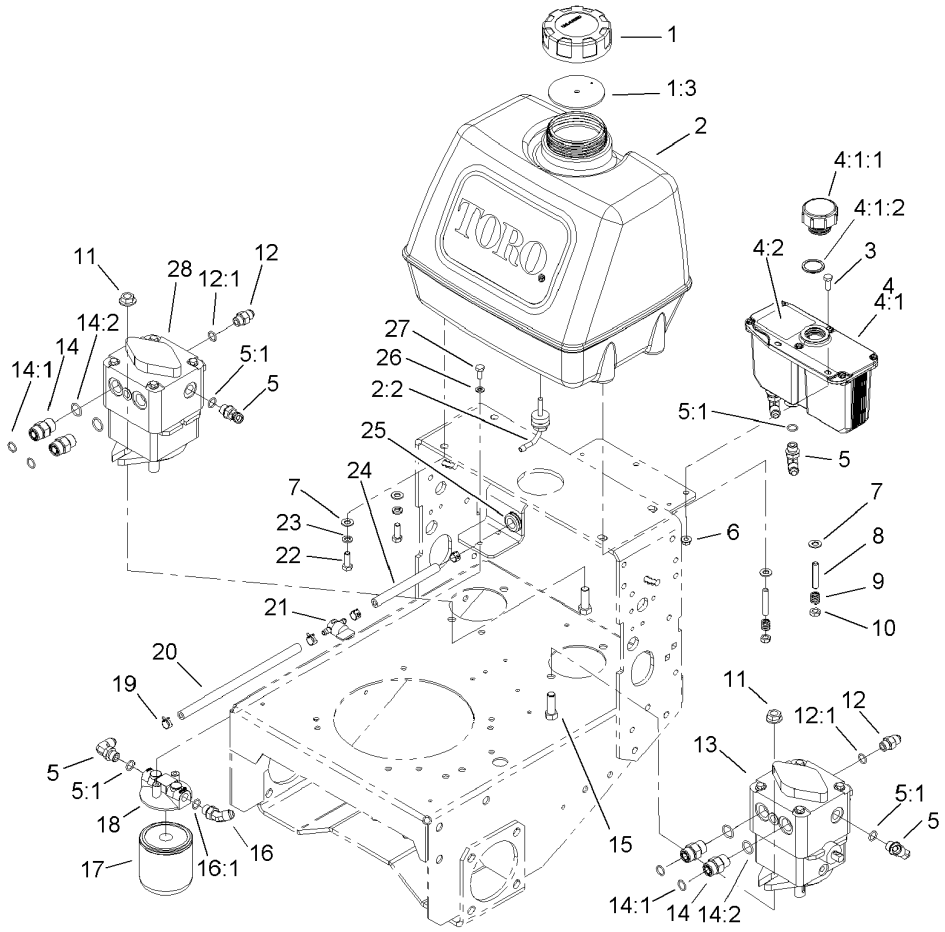


Fuel Tank, Hydraulic Tank, Pump and Filter Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	321-4	2	Screw-HH
4	103-1947	1	HYD Reservoir ASM
❷4:1		1	Reservoir-HYD
4:1:1	103-1948	1	Cap-Reservoir, HYD
4:1:2	103-1949	1	Gasket-Cap
4:2	1-523552	1	Decal-Tank, HYD
5	353-374	5	Elbow-90 DEG
5:1	237-42	1	O-Ring
6	32128-33	2	Nut-HF
7	3256-23	4	Washer-Flat
8	104-8121	2	Stud-Threaded
9	1-633349	2	Spring-Tank, Fuel
10	3296-47	2	Nut-Lock, NI
11	32128-42	4	Nut-HF
12	353-384	2	Fitting-Straight
12:1	237-42	1	O-Ring
13	106-5490	1	Pump-HYD
14	340-4	4	Fitting-Hyd, Straight
14:1	237-30	1	O-Ring
14:2	237-79	1	O-Ring

Ref	Part No.	Qty.	Description
15	324-5	4	Screw-HH
16	353-212	1	Elbow
16:1	237-42	1	O-Ring
17	1-633750	1	Filter-HYD
17	1-633752	1	Filter-Hyd, Winter
18	104-7836	1	Head-Filter
19	2412-98	4	Clamp
20	47-2982	1	Hose-Fuel
21	1-603770	1	Valve-Fuel
22	322-4	2	Screw-HH
23	3253-4	2	Washer-Lock
24	47-2980	1	Hose-Fuel
25	237-124	1	Grommet
26	3253-3	2	Washer-Lock
27	321-3	2	Screw-HH
28	106-5489	1	Pump-HYD

PROTOTYPE

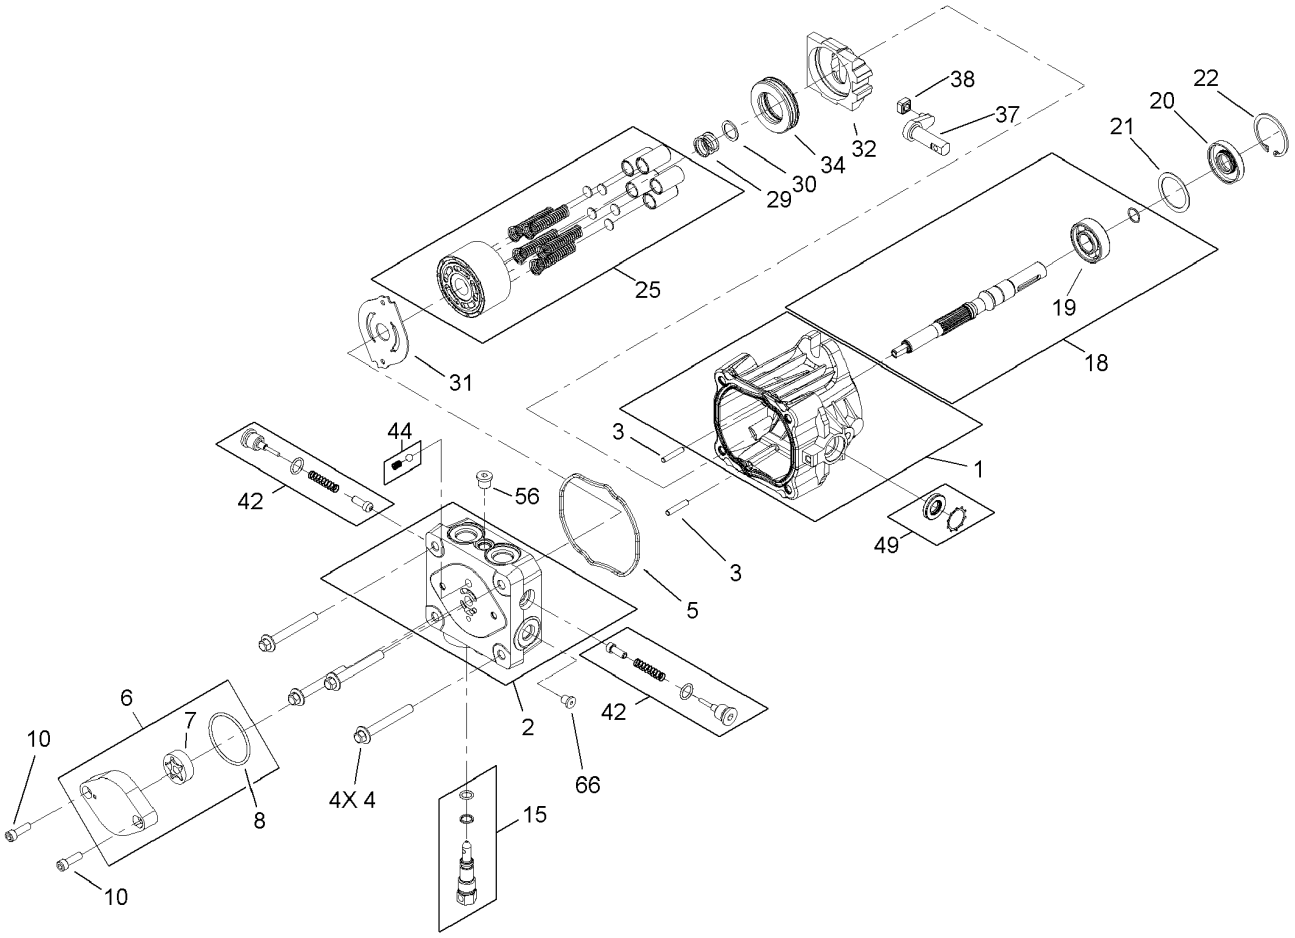


Hydraulic Pump Assembly No. 106-5489

Ref	Part No.	Qty.	Description
1	106-8751	1	Housing Kit
2	106-8752	1	End Cap Kit (W/poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	106-8758	2	Screw-HSH
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	104-2106	1	Cylinder Block ASM
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	94-1909	1	Arm-Trunion
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/poppet)

Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal/retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
❶99	105-6184	1	Seal Overhaul Kit

PROTOTYPE

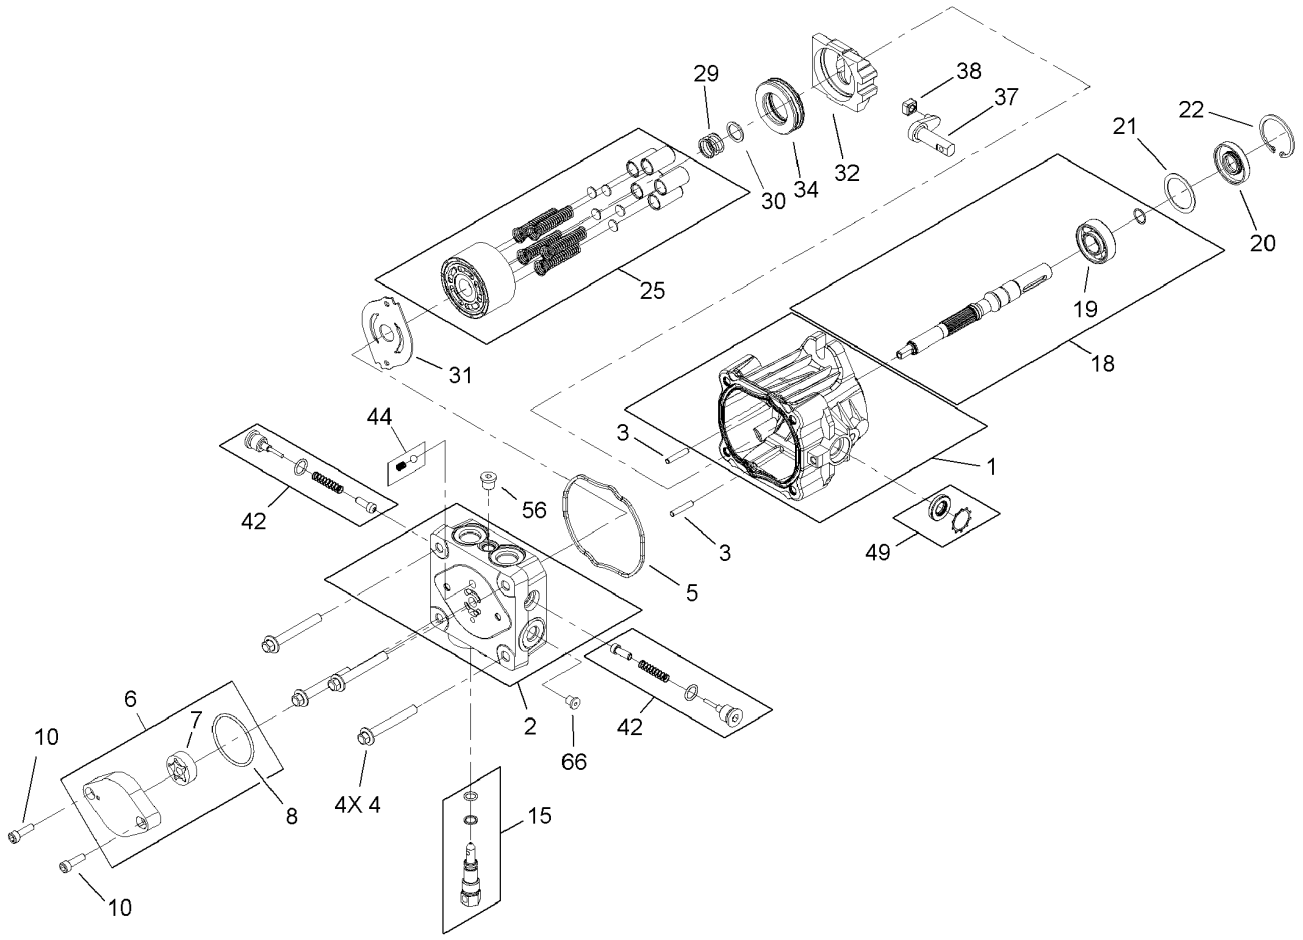


Hydraulic Pump Assembly No. 106-5490

Ref	Part No.	Qty.	Description
1	106-8751	1	Housing Kit
2	106-8752	1	End Cap Kit (W/poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	106-8758	2	Screw-HSH
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	104-2106	1	Cylinder Block ASM
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	94-1909	1	Arm-Trunion
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/poppet)

Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal/retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
❶99	105-6184	1	Seal Overhaul Kit

PROTOTYPE

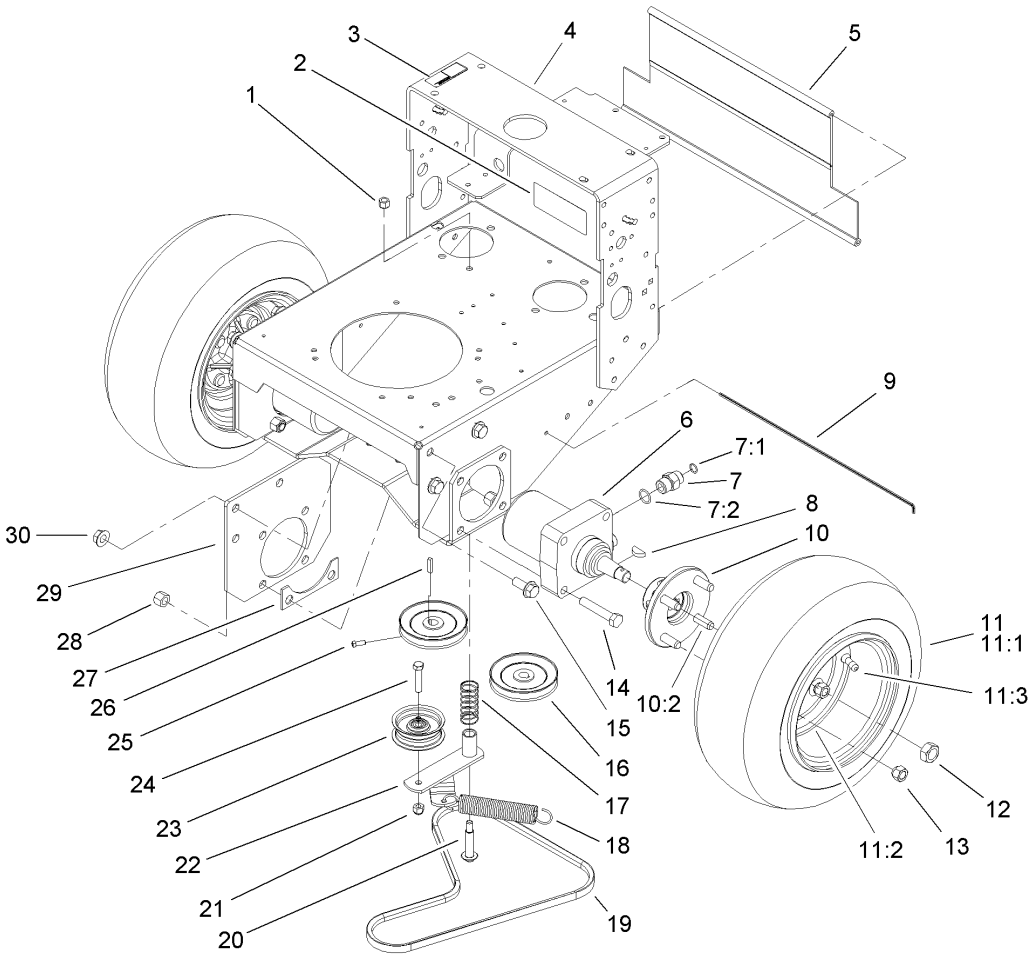


Wheel and Drive Assembly

Ref	Part No.	Qty.	Description
1	3296-6	1	Nut-Lock, NI
2	98-0776	1	Decal-Caution
3	95-2814	1	Decal-Shut Off, Fuel
4	106-0548-01	1	Hydro Frame ASM
5	95-1526	1	Shield-Trailing
6	104-1171	2	Motor-Wheel
7	340-6	4	Fitting-Hyd, Straight
7:1	237-30	1	O-Ring
7:2	237-80	1	O-Ring
8	3257-8	2	Key-Woodruff
9	95-1529	1	Rod-Shield
10	105-0800	2	Wheel Hub/stud ASM
10:2	10-6830	4	Stud-Type, Drive
11	106-0892	2	Wheel And Tire ASM
11:1	104-6322	1	Tire
11:2	106-0893	1	Wheel
11:3	232-27	1	Stem-Valve
12	85-7310	2	Nut-Motor, Wheel
13	242-50	8	Nut-Lug
14	325-11	8	Screw-HH
15	3234-32	6	Screw-HHF
16	105-5648	2	Pulley-Pump
17	88-1880	1	Spring-Compression
18	68-2190	1	Spring

Ref	Part No.	Qty.	Description
19	105-5649	1	V-Belt
20	27-6230	1	Bolt-Wheel
21	3296-39	1	Nut-Lock, NI
22	86-4770	1	Idler Lever ASM
23	62-4540	1	Pulley
24	323-9	1	Screw-HH
25	3241-5	4	Screw-Set
26	80-6090	2	Key-Pump
27	86-4740-01	2	Spacer-Frame
28	3296-23	8	Nut-Lock, NI
29	105-5643-01	2	Plate-Frame
30	32128-23	6	Nut-HF


PROTOTYPE

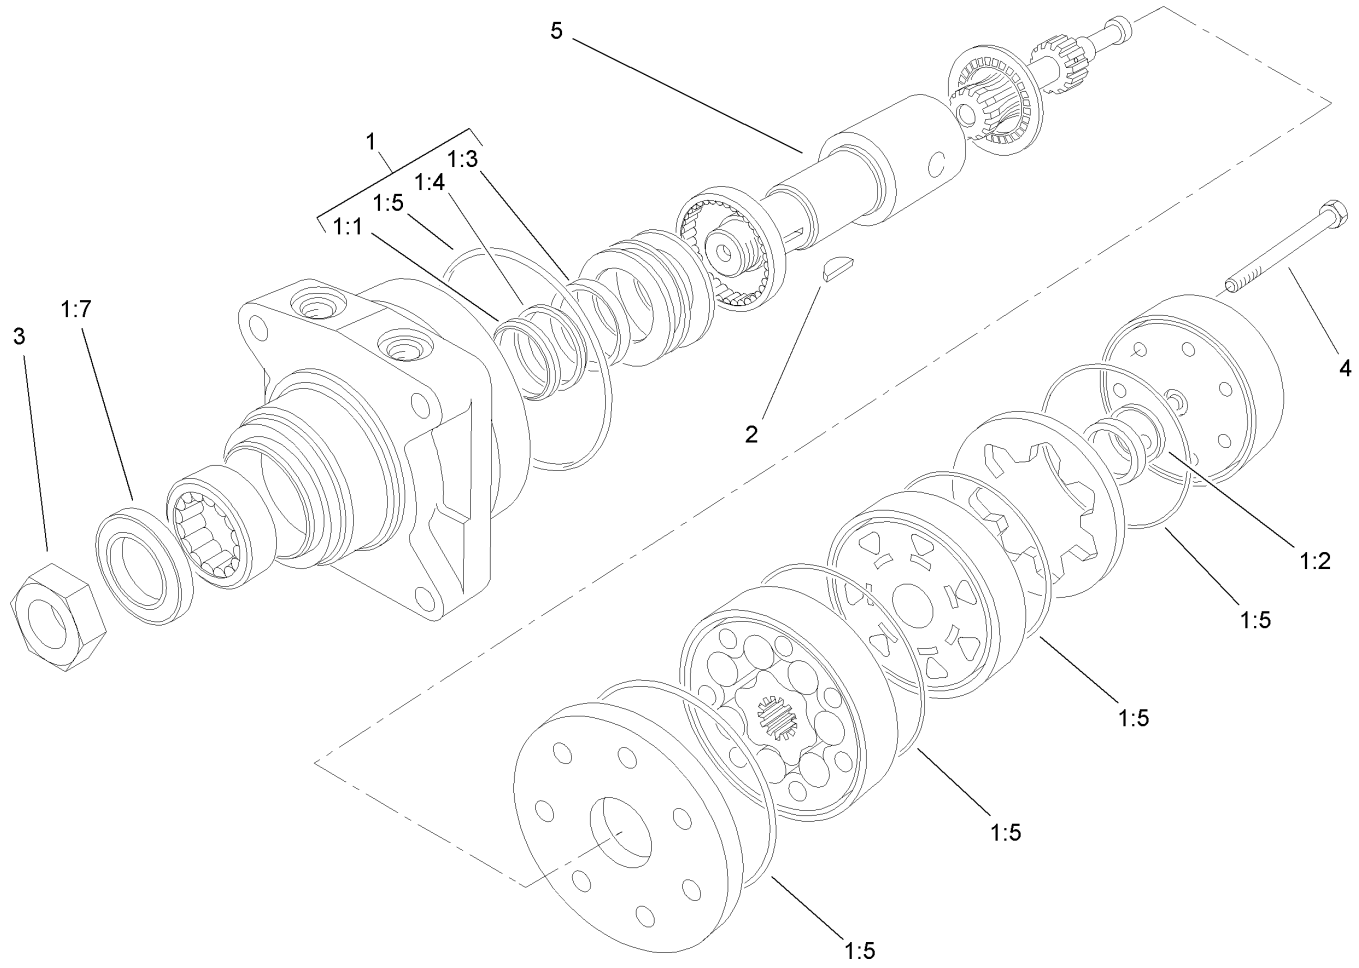

Hydraulic Wheel Motor Assembly No. 104-1171

Ref	Part No.	Qty.	Description
1	1-000119	1	Seal Kit
❷1:1		1	Ring-Back Up
❷1:2		1	Seal-Commutator
❷1:3		1	Seal-Shaft (Viton)
❷1:4		1	Washer-Back Up, Steel
❷1:5		5	Ring-Seal (Viton)
❷1:7		1	Seal-Dirt And Water
2	3257-8	1	Key-Woodruff
3	85-7310	1	Nut-Motor, Wheel
4	106-5549	6	Bolt-Special
5	106-8764	1	Shaft-Coupling

PROTOTYPE

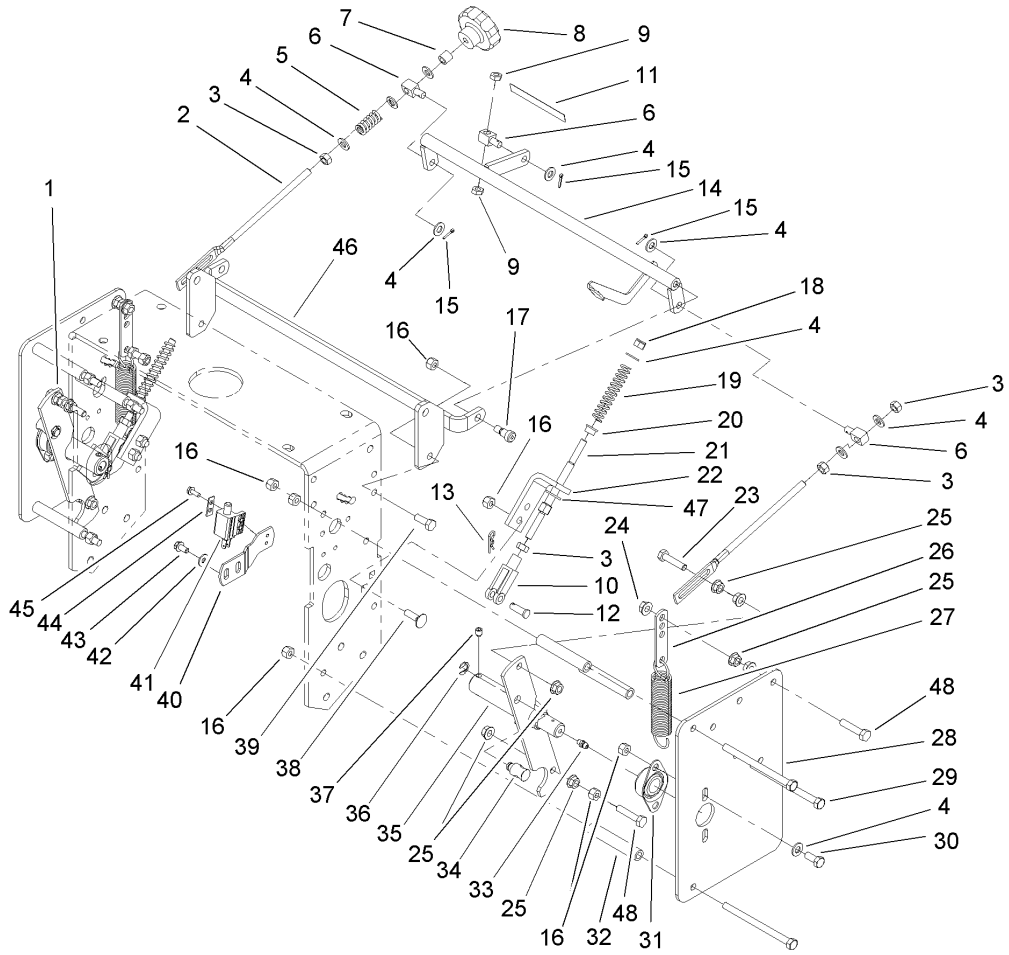


Lower Control Assembly

Ref	Part No.	Qty.	Description
1	106-5484	1	RH Control Arm ASM
2	1-413350	2	Link-Control, Speed
3	3219-2	5	Nut-Hex
4	3256-23	14	Washer-Flat
5	1-323245	1	Spring-Compression
6	1-603676	3	Swivel-Adjustable, Short
7	1-603903	1	Spacer
8	1-413151	1	Knob-Tracking
9	3220-2	2	Nut
10	1-303105	2	Yoke-Adjustable
11	105-4109	1	Decal-Tracking
12	1-808280	2	Pin-Clevis
13	3290-307	2	Pin-Hair
14	106-5538-01	1	Speed Control Crank ASM
15	3272-5	3	Pin-Cotter
16	3296-29	18	Nut-Lock, NI
17	1-809056	2	Screw
18	3296-4	2	Nut-Lock, NI
19	1-603807	2	Spring-Return, Neutral
20	1-603735	2	Bushing-Flanged
21	105-9372	2	Stud-Adjustment
22	104-9802-01	2	Bracket-Mount, Spring
23	1-403180	2	Screw-HH
24	32128-25	2	Nut-HF

Ref	Part No.	Qty.	Description
25	32128-20	14	Nut-HF
26	1-613089	2	Tab-Spring, Extension
27	1-603693	2	Spring-Extension
28	104-9817-01	2	Plate-Side, Hydro
29	322-38	6	Screw-HH
30	322-3	4	Screw-HH
31	1-633102	2	Bearing-Flange, Side
32	104-9820	6	Spacer-Shield
33	302-5	2	Fitting-Grease
34	103-1235	2	Swivel-Lever, Drive
35	106-5480	1	LH Control Arm ASM
36	32151-47	2	Ring-Retaining
37	3246-3	4	Screw-HS
38	3230-2	4	Bolt-CARR
39	322-4	2	Screw-HH
40	106-5539-01	1	Bracket-Neutral
41	95-1653	1	Switch-Pole, Single
42	3256-1	2	Washer-Flat
43	32144-4	2	Screw-HWH
44	82-4570	1	Plate-Switch
45	32144-1	2	Screw-Taptite
46	105-3163-01	1	Crank Support ASM
47	3256-24	2	Washer-Flat
48	322-7	4	Screw-HH


PROTOTYPE

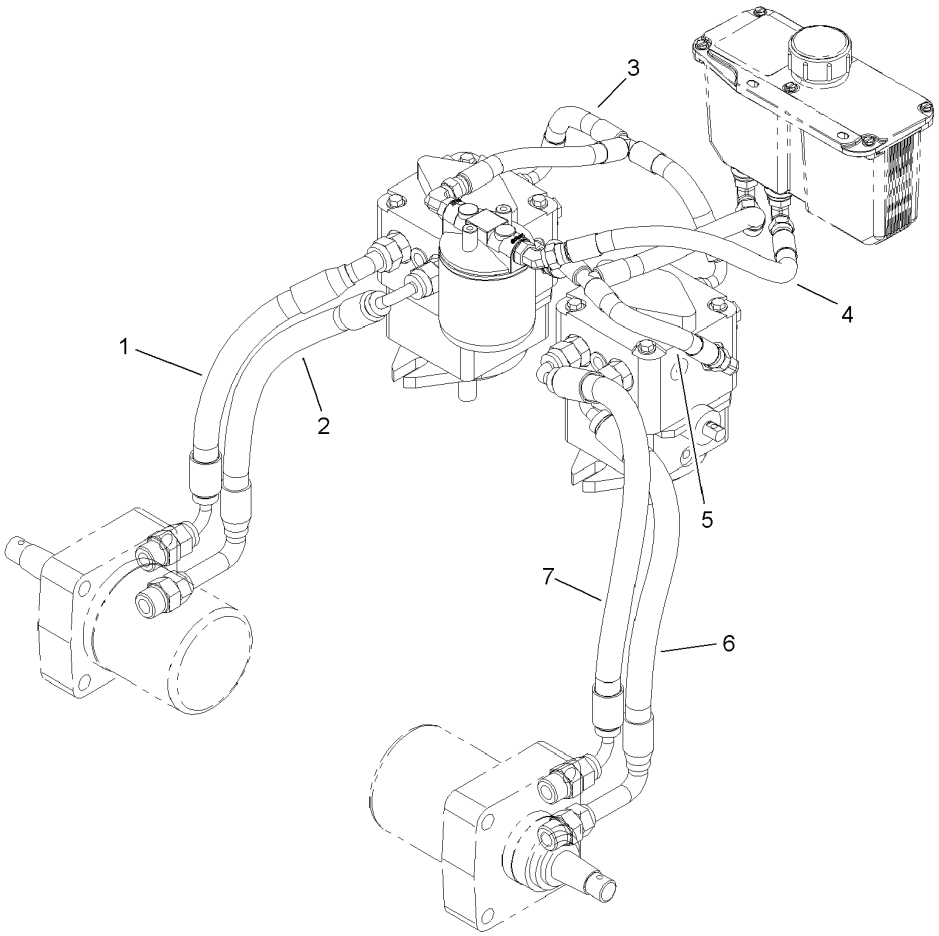

Hydraulic Plumbing Assembly

Ref	Part No.	Qty.	Description
1	106-0824	1	HYD Hose ASM
2	106-0825	1	HYD Hose ASM
3	105-5697	1	HYD Hose ASM
4	105-5699	1	HYD Hose ASM
5	105-5698	1	HYD Hose ASM
6	106-3368	1	HYD Hose ASM
7	106-0826	1	HYD Hose ASM

PROTOTYPE

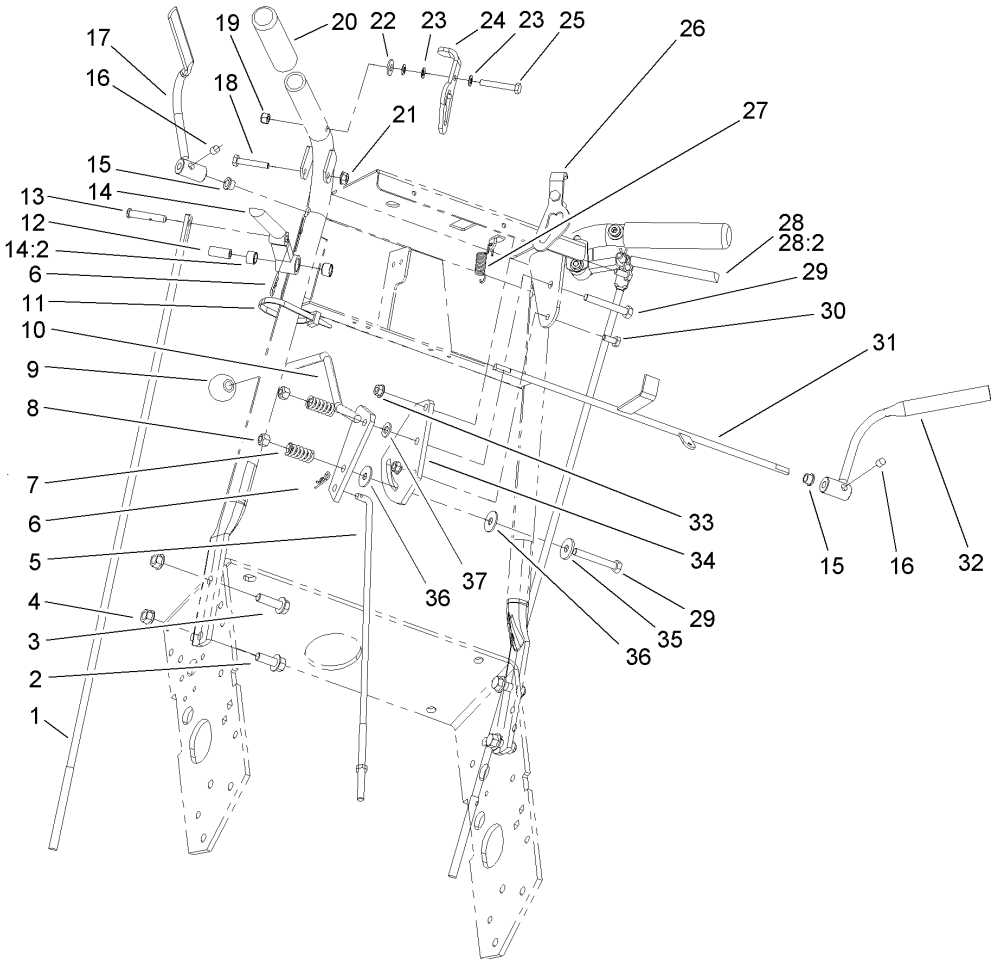


Upper Control Assembly

Ref	Part No.	Qty.	Description
1	1-413219	2	Rod-Lever, Drive
2	3234-11	2	Screw-HHF
3	3234-24	2	Screw-HHF
4	32128-21	4	Nut-HF
5	106-5534	1	Rod-Control, Speed
6	3290-307	3	Pin-Hair
7	1-323245	2	Spring-Compression
8	3296-29	2	Nut-Lock, NI
9	233-42	1	Knob
10	106-2748	1	Lever-Shift
11	3290-378	1	Tie-Cable
12	1-603749	2	Bushing-Lever, Drive
13	1-613055	2	Pin-Clevis
14	103-0218	1	LH Drive Lever ASM
14:2	1-413152	2	Sleeve-Bushing
15	1-303365	2	Bushing-Nylon
16	1-803322	2	Screw-Set
17	106-5485	1	LH Opc Lever ASM
18	321-9	2	Screw-HH
19	3296-42	2	Nut-Lock, NI
20	104-9838	2	Grip-Foam
21	32128-33	2	Nut-HF
22	3256-2	2	Washer-Flat
23	1-303435	6	Washer-Spring

Ref	Part No.	Qty.	Description
24	106-5483	1	Latch-Thumb, LH
25	321-10	2	Screw-HH
26	106-5481	1	Latch-Thumb, RH
27	1-303363	1	Spring-Extension
28	103-0219	1	RH Drive Lever ASM
28:2	1-413152	2	Sleeve-Bushing
29	322-11	2	Screw-HH
30	321-3	2	Screw-HH
31	104-9803	1	Rod ASM
32	106-5486	1	RH Opc Lever ASM
33	32128-33	2	Nut-HF
34	1-603730	1	Plate-Lever, Shifter
35	1-603716	1	Washer-Friction
36	1-323244	2	Washer-Friction
37	3256-23	1	Washer-Flat

PROTOTYPE

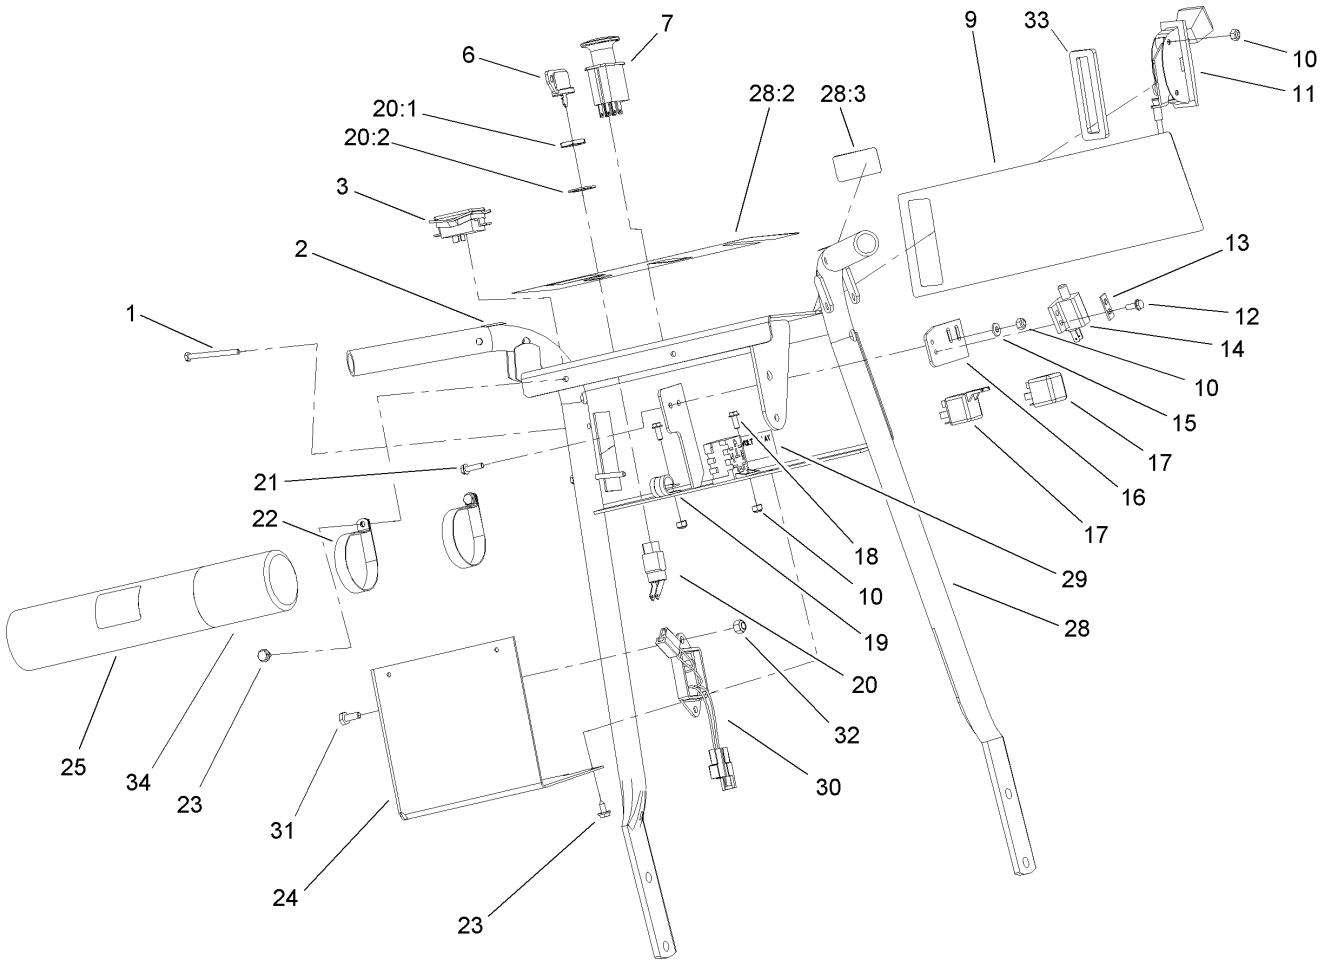


Control Panel Assembly

Ref	Part No.	Qty.	Description
1	32105-14	2	Screw-SHH
2	105-4110	2	Decal-Lock, Neutral
3	104-8143	1	Hourmeter
6	63-8360	1	Key-Ignition
7	95-7489	1	Switch-PTO
9	106-5501	1	Decal-Control, Throttle
10	3296-2	6	Nut-Lock
11	107-4072	1	Cable-Throttle
12	32144-1	2	Screw-Taptite
13	82-4570	1	Plate-Switch
14	95-1653	1	Switch-Pole, Single
15	3256-14	2	Washer-Flat
16	105-4137-03	1	Plate-Mounting, Switch
17	105-4145	1	Relay
18	3290-321	2	Screw-HWH
19	2412-134	1	R-Clamp
20	29-5560	1	Switch-On/off
20:1	218-461	1	Nut-HH
20:2	3254-5	1	Washer-Tooth
21	32105-13	2	Screw-SHH
22	2412-120	2	R-Clamp
23	32104-76	4	Screw
24	105-4112-03	1	Bracket-Cover
25	104-7050	1	Housing-Manual

Ref	Part No.	Qty.	Description
28	105-3175	1	Handle ASM
28:2	106-5515	1	Decal-Panel, Control
28:3	98-4387	1	Decal-Protection, Ear
29	105-4146	1	Decal-Relay, 24 Volt
30	105-4608	1	Module-Filter
31	321-3	2	Screw-HH
32	3296-42	2	Nut-Lock, NI
33	106-5487	1	Gasket-Throttle
34	104-7048	1	Cap-Housing


PROTOTYPE

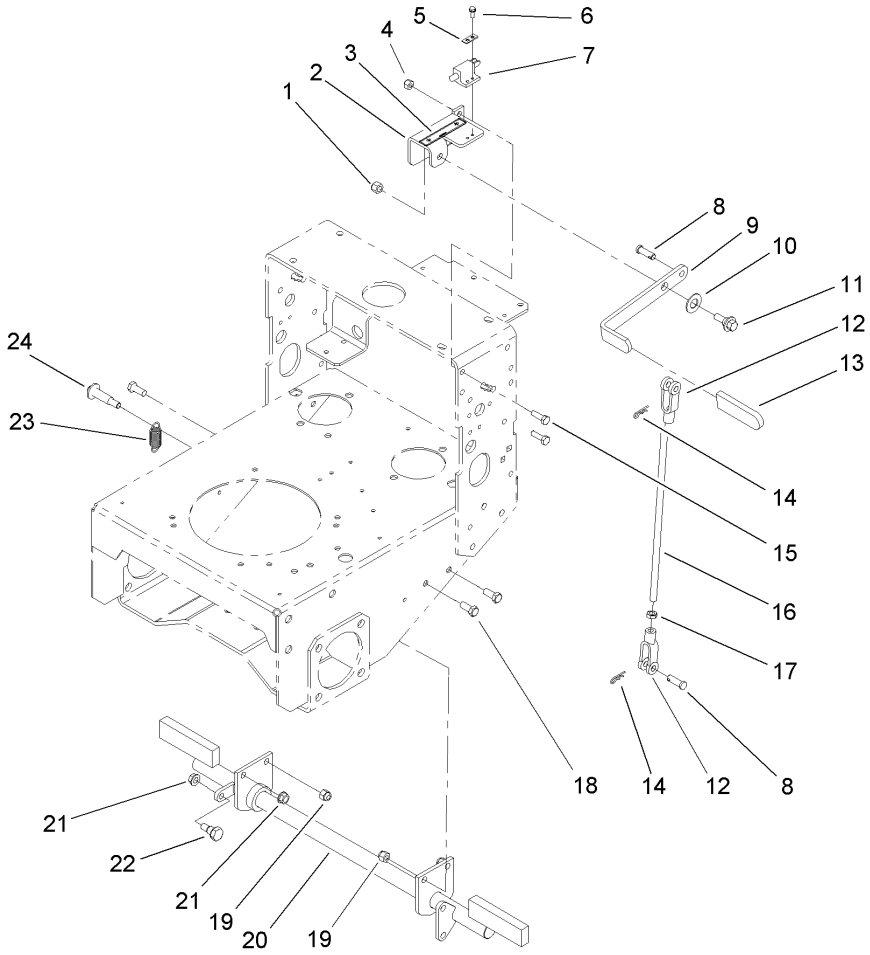

Parking Brake Assembly

Ref	Part No.	Qty.	Description
1	3296-6	1	Nut-Lock, NI
2	106-0666-01	1	Brake Handle Support ASM
3	104-2838	1	Decal-Brake
4	3296-29	2	Nut-Lock, NI
5	82-4570	1	Plate-Switch
6	32144-1	2	Screw-Taptite
7	65-7410	1	Switch-Pole, Single
8	1-808285	2	Pin-Clevis
9	106-0671-01	1	Handle-Brake
10	257-7	1	Bearing-Thrust
11	93-2364	1	Bolt-Shoulder
12	1-633131	2	Yoke-Linkage, Brake
13	1-303020	1	Grip-Lever
14	3290-307	2	Pin-Hair
15	322-5	2	Screw-HH
16	106-0670	1	Rod-Connecting, Brake
17	3220-3	1	Nut-Jam
18	323-5	3	Screw-HH
19	3296-39	3	Nut-Lock, NI
20	106-0660-01	1	Parking Brake ASM
21	3290-357	2	Nut-HHF
22	27-5240	1	Bolt-Shoulder
23	613386	1	Spring-Brake
24	56-6590	1	Bolt-Wheel

PROTOTYPE

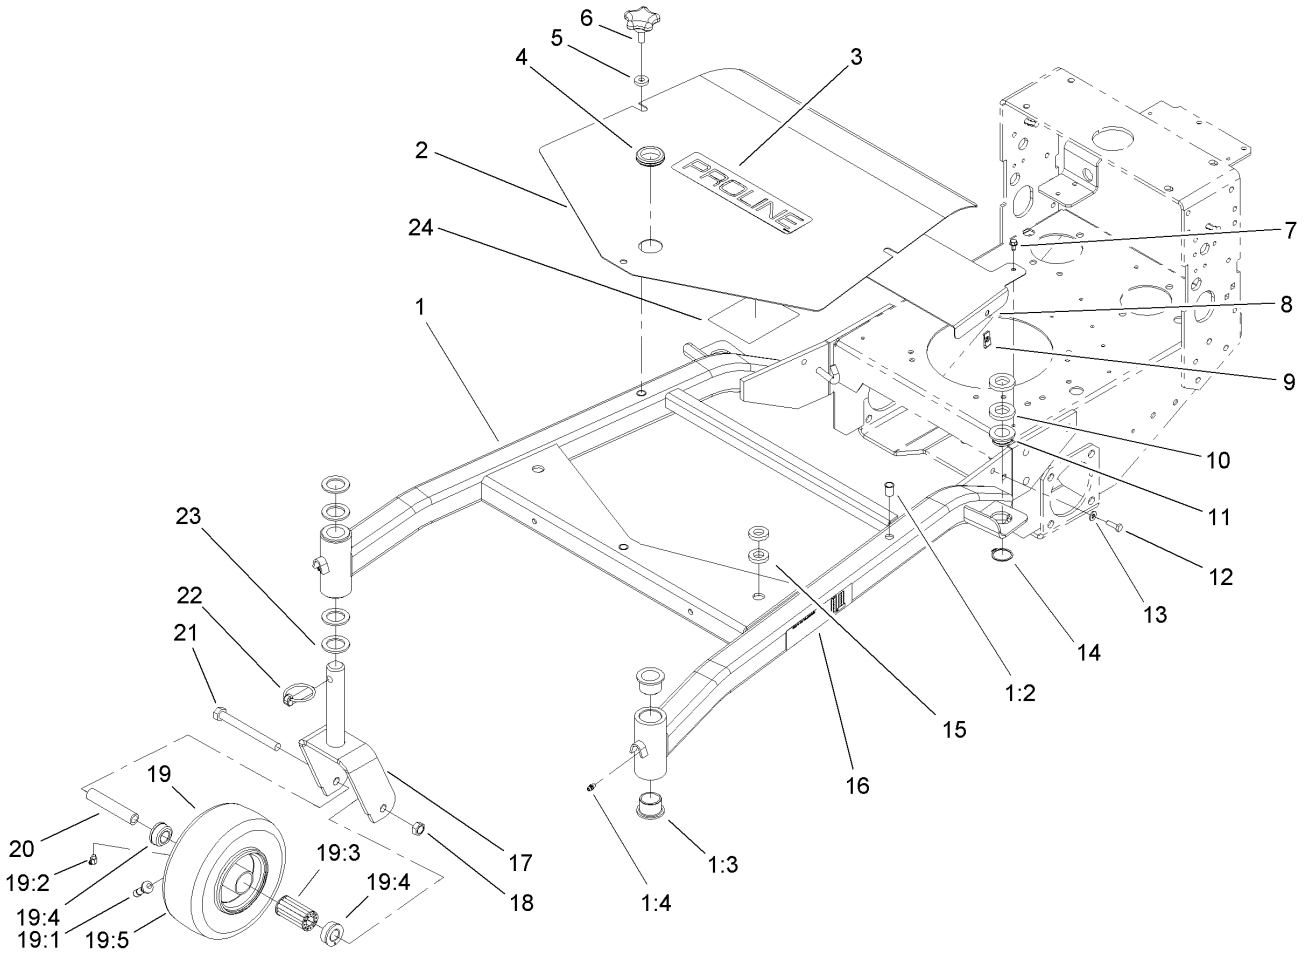


Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	106-0707	1	Carrier Frame ASM
1:2	32148-9	3	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	106-0537-01	1	Cover
3	106-0719	1	Decal
4	240-3	1	Grommet-Rubber
5	106-0565	3	Washer-Rubber
6	106-0887	3	Knob
7	12-3270	2	Screw
8	105-9389-01	1	Shield-Heat
9	3290-199	2	Nut-Speed
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	321-5	2	Screw-HH
13	3256-22	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	105-0842	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock
19	100-6451	2	Castor Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	302-11	1	Fitting-Lube, 45 DEG

Ref	Part No.	Qty.	Description
19:3	83-4740	1	Bearing
19:4	62-5580	2	Bearing-Outside
19:5	100-6452	1	Tire-Tubeless
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust
24	106-5503	1	Decal-Service, Hydro Tbar
24	106-5505	1	Decal-Service, Gear Tbar
24	106-5511	1	Decal-Service, Gear Pistol Grip
24	106-5513	1	Decal-Service, Hydro Pistol Grip

PROTOTYPE

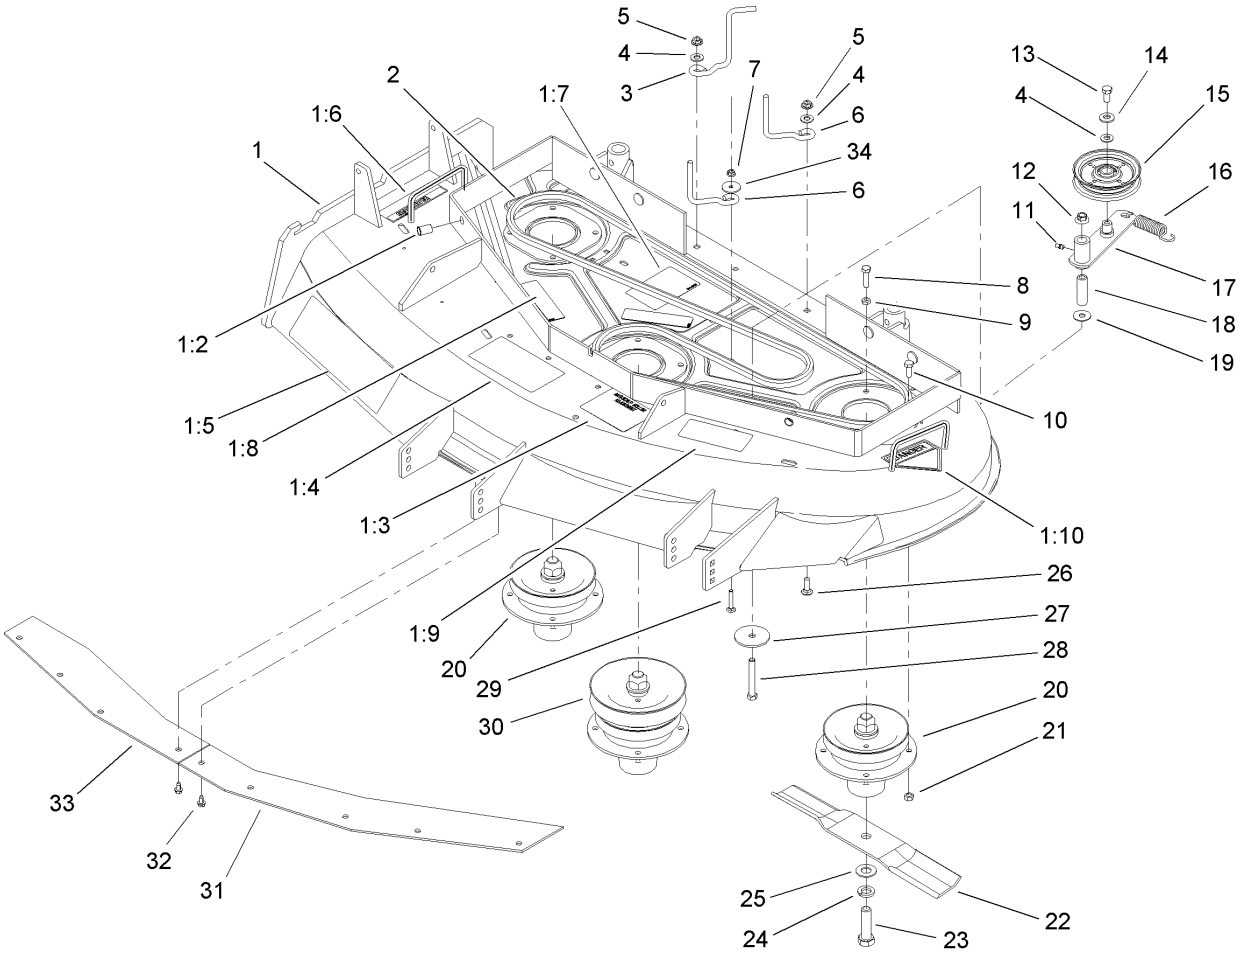


Spindle, Pulley and Belt Assembly

Ref	Part No.	Qty.	Description
1	106-0617	1	Deck ASM
1:2	32148-10	2	Insert-Threaded
1:3	106-5532	1	Decal-Scalp, Anti
1:4	66-1340	1	Decal-Danger
1:5	106-0704	1	Decal
1:6	104-8569	1	Decal-Warning
1:7	104-8186	1	Decal-Routing, Belt
1:8	67-5360	3	Decal-Danger
1:9	68-8340	1	Decal-Torque
1:10	43-8480	1	Decal-Danger
2	27-1160	1	V-Belt
3	106-5488	1	Guide-Belt
4	3256-24	3	Washer-Flat
5	32128-13	2	Nut-HF
6	52-4780	2	Rod-Belt
7	32128-10	1	Nut-Lock, HHF
8	322-6	1	Screw-HH
9	3218-2	1	Nut-Jam
10	322-4	11	Screw-HH
11	302-19	1	Fitting-Grease
12	32128-19	1	Nut-HF
13	323-4	1	Screw-HH
14	98-5975	1	Washer-Belleville
15	65-5940	1	Pulley-Idler

Ref	Part No.	Qty.	Description
16	54-2730	1	Spring-Extension
17	104-8110	1	Idler Arm ASM
18	104-8113	1	Tube-Idler
19	52-2860	1	Washer
20	106-0786	2	Spindle Housing ASM
21	32152-1	12	Nut-Lock, NI
22	54-0010	3	Blade
23	51-4060	3	Screw-Blade
24	3253-8	3	Washer-Lock
25	3256-27	3	Washer-Flat
26	3230-2	2	Bolt-CARR
27	20-9530	1	Washer-End
28	323-13	1	Screw-HH
29	3229-4	1	Screw-CARR
30	106-0784	1	Spindle Housing ASM
31	100-3258-03	1	Plate-Blowout, LH
32	12-3270	9	Screw
33	100-3257-03	1	Plate-Blowout, RH
34	1-503033	1	Washer-Retainer, Pulley


PROTOTYPE

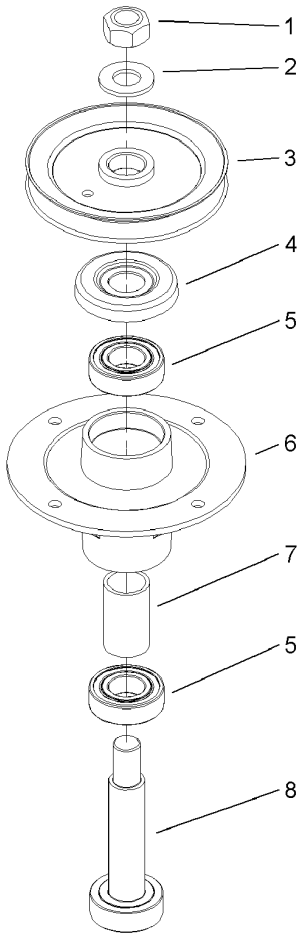

Spindle Assembly No. 106-0786

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1181	1	Pulley ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0818	1	Housing-Spindle
7	106-0794	1	Spacer-Bearing
8	106-0780	1	Shaft-Spindle


PROTOTYPE

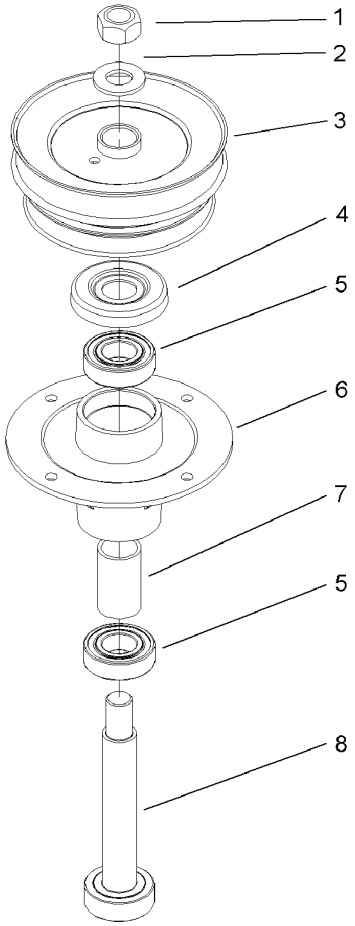

Spindle Assembly No. 106-0784

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1116	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0818	1	Housing-Spindle
7	106-0794	1	Spacer-Bearing
8	106-0779	1	Shaft-Spindle

PROTOTYPE

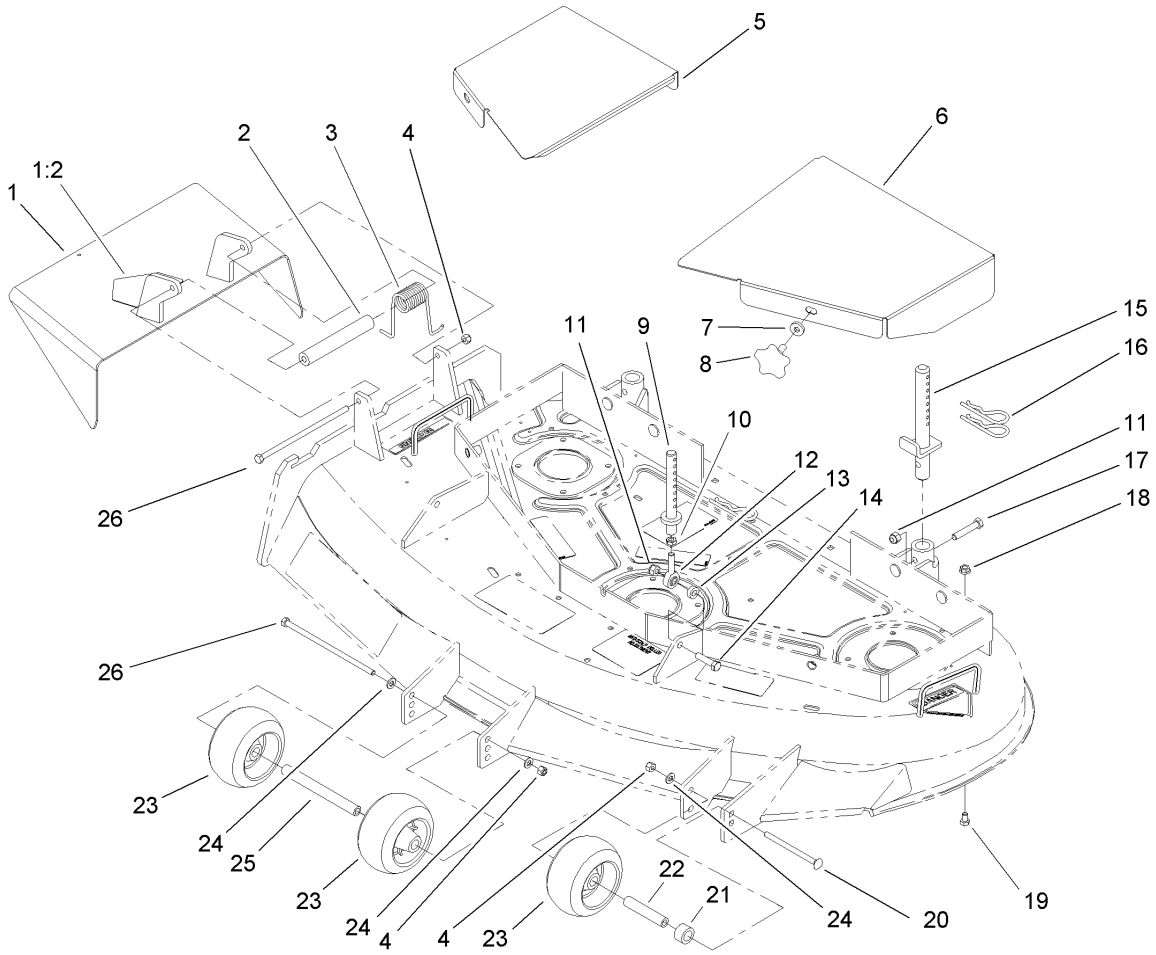


Deck Assembly

Ref	Part No.	Qty.	Description
1	105-4625	1	Deflector ASM
1:2	93-1122	1	Decal-Danger
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	3	Nut-Lock, NI
5	106-3363-01	1	Cover-Belt, RH
6	106-3362-01	1	Cover-Belt, LH
7	106-0565	2	Washer-Rubber
8	106-0887	2	Knob
9	106-0684	2	Front Pin ASM
10	3220-3	2	Nut-Jam
11	3296-39	4	Nut-Lock, NI
12	1-613204	2	Balljoint
13	104-1156	2	Spacer
14	323-8	2	Screw-HH
15	106-3365	2	Rear Pin ASM
16	3290-256	6	Pin-Hair
17	323-10	2	Screw-HH
18	32128-20	4	Nut-HF
19	322-1	4	Screw-HH
20	3230-30	1	Screw-CARR
21	106-0563	1	Spacer-Wheel
22	106-0545	1	Bushing-Roller
23	68-2730	3	Wheel-Gage

Ref	Part No.	Qty.	Description
24	3256-23	3	Washer-Flat
25	98-5967	1	Spacer-Wheel
26	322-50	2	Screw-HH


PROTOTYPE

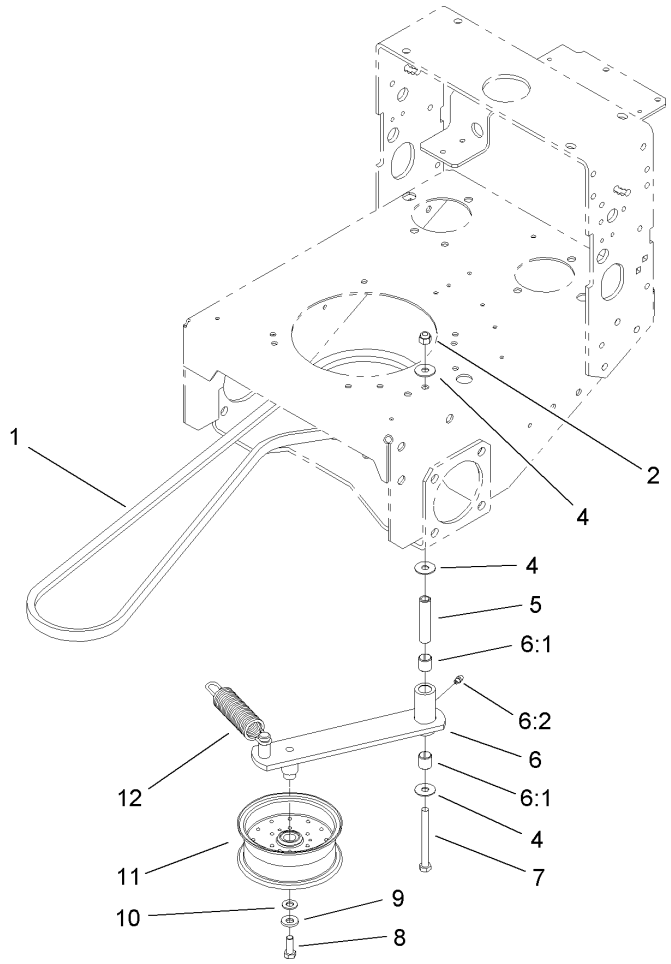

Drive Belt and Tensioner Assembly

Ref	Part No.	Qty.	Description
1	104-8120	1	V-Belt, PTO
2	3296-39	1	Nut-Lock, NI
4	52-2860	3	Washer
5	104-6377	1	Tube-Idler
6	106-0734	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension


PROTOTYPE

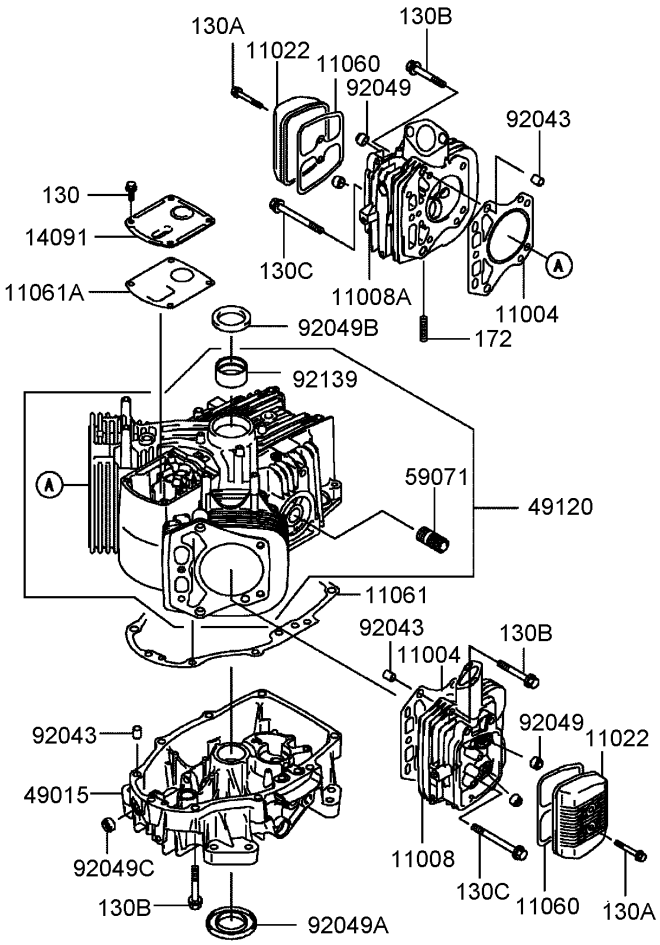

Cylinder and Crankcase Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸11004	11004-7008	2	Gasket-Head
❸11008	11008-7021	1	Head-Comp-Cylinder, #2
❸11008A	11008-7022	1	Head-Comp-Cylinder, #1
❸11022	11022-7003	2	Case-Rocker
❸11060	11060-7001	2	Gasket-Rocker Case
❸11061	11061-7007	1	Gasket-Cover, Crankcase
❸11061A	11061-7008	1	Gasket-Breather
❸14091	14091-7007	1	Cover
❸49015	49015-7032	1	Cover-Crankcase
❸49120	49120-7015	1	Crankcase-Comp
❸59071	59071-2079	1	Joint
❸92043	92043-7001	6	Pin
❸92049	92049-7001	4	Seal-Oil, Rvc 26x11x10.2
❸92049A	92049-7015	1	Seal-Oil, Sd
❸92049B	92049-7016	1	Seal-Oil, Sd
❸92049C	92049-7019	1	Seal-Oil, So
❸92139	92139-7002	1	Bushing
❸130	130B0612	4	Bolt-Flanged
❸130A	130B0640	4	Bolt-Flanged
❸130B	130T0850	17	Bolt-Flanged
❸130C	130T0875	2	Bolt-Flanged
❸172	172G0818	4	Bolt-Stud


PROTOTYPE

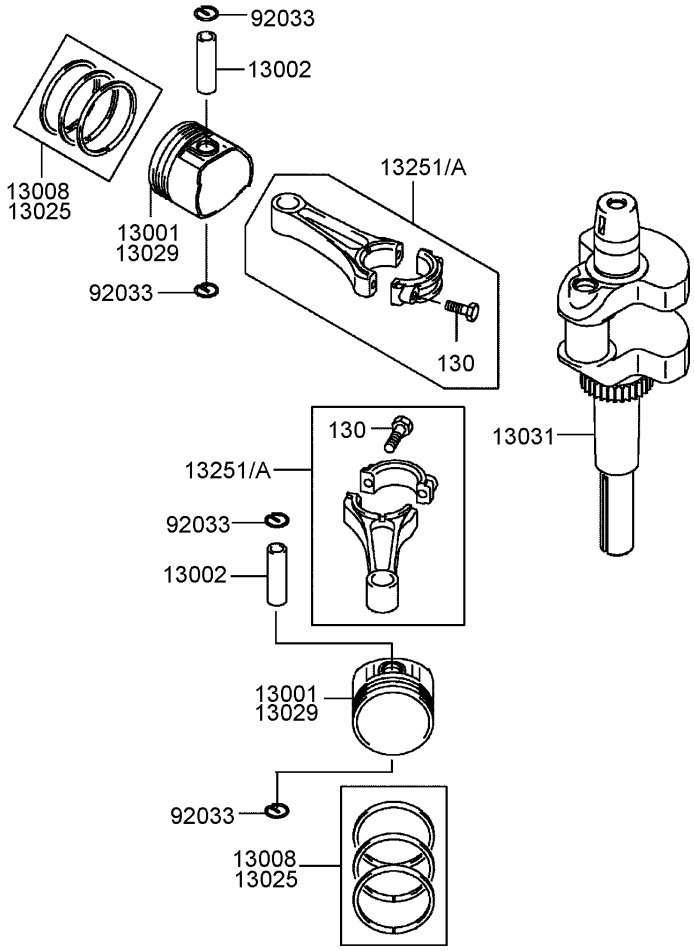

Piston and Crankshaft Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸13001	13001-7009	2	Piston-Engine
❸13002	13002-7001	2	Pin-Piston
❸13008	13008-7001	2	Ring-Set-Piston
❸13025	13025-7003	1	Ring-Set-Piston
❸13029	13029-7005	1	Piston-Engine
❸13031	13031-7033	1	Crankshaft-Comp
❸13251	13251-7007	2	Connecting Rod ASM
❸13251A	13251-7008	2	Connecting Rod Asm, U/s=0.50
❸92033	92033-7005	4	Ring-Snap
❸130	130G0630	4	Bolt-Flanged


PROTOTYPE

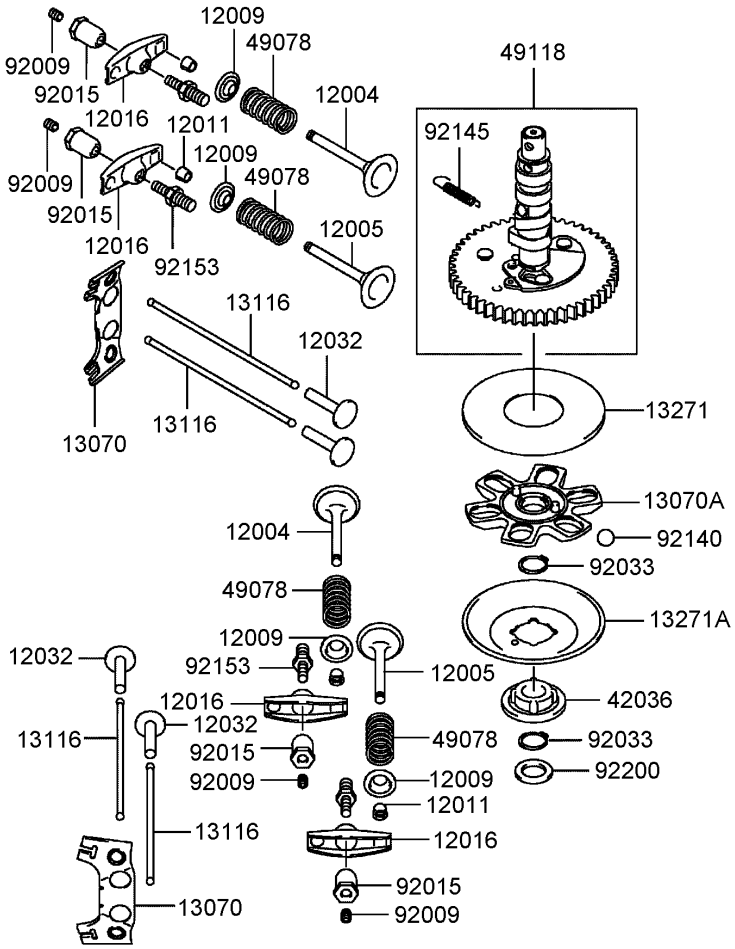

Valve and Camshaft Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸12004	12004-7003	2	Valve-Intake
❸12005	12005-7003	2	Valve-Exhaust
❸12009	12009-7001	4	Retainer-Valve Spring
❸12011	12011-2056	8	Collet
❸12016	12016-7001	4	Arm-Rocker
❸12032	12032-7001	4	Tappet
❸13070	13070-7001	2	Guide
❸13070A	13070-7004	1	Guide
❸13116	13116-2057	4	Rod-Push
❸13271	13271-7007	1	Plate
❸13271A	13271-7021	1	Plate-Governor
❸42036	42036-7009	1	Sleeve
❸49078	49078-7001	4	Spring-Engine Valve
❸49118	49118-7009	1	Camshaft-Comp
❸92009	92009-2341	4	Screw
❸92015	92015-2253	4	Nut
❸92033	92033-7001	2	Ring-Snap
❸92140	92140-7002	6	Ball
❸92145	92145-7001	1	Spring
❸92153	92153-7019	4	Bolt
❸92200	92200-7001	1	Washer


PROTOTYPE

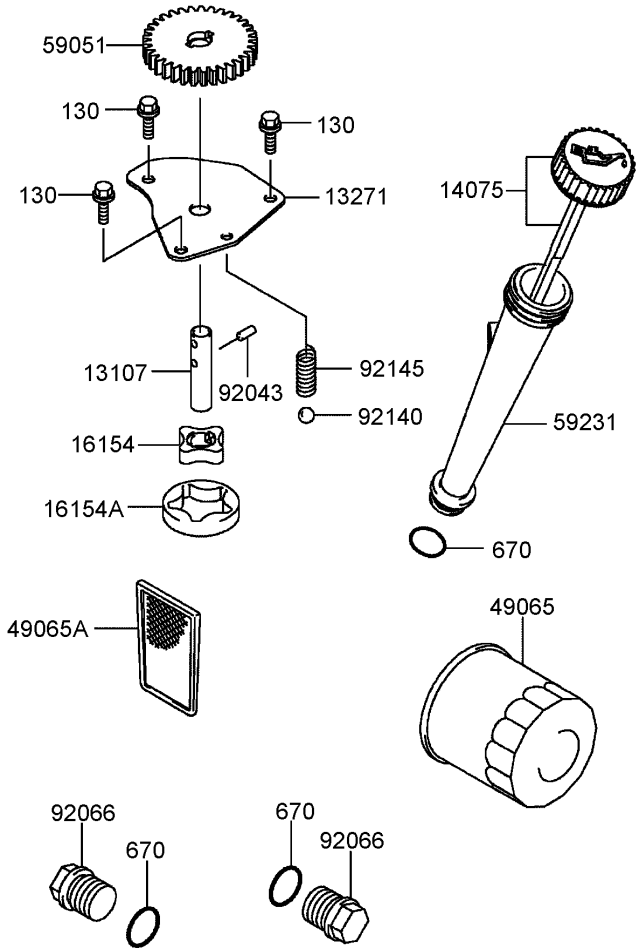

Lubrication Equipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸13107	13107-7009	1	Shaft
❸13271	13271-7017	1	Plate
❸14075	14075-7009	1	Cap ASM
❸16154	16154-2053	1	Rotor-Pump,in
❸16154A	16154-2054	1	Rotor-Pump,out
❸49065	49065-2078	1	Filter-Oil
❸49065A	49065-7004	1	Filter-Oil
❸59051	59051-7011	1	Gear-Spur
❸59231	59231-7003	1	Filler
❸92043	92043-7003	2	Pin
❸92066	92066-7003	2	Plug
❸92140	92140-7003	1	Ball
❸92145	92145-7002	1	Spring
❸130	130B0612	3	Bolt-Flanged
❸670	670D2016	3	O Ring,16mm


PROTOTYPE

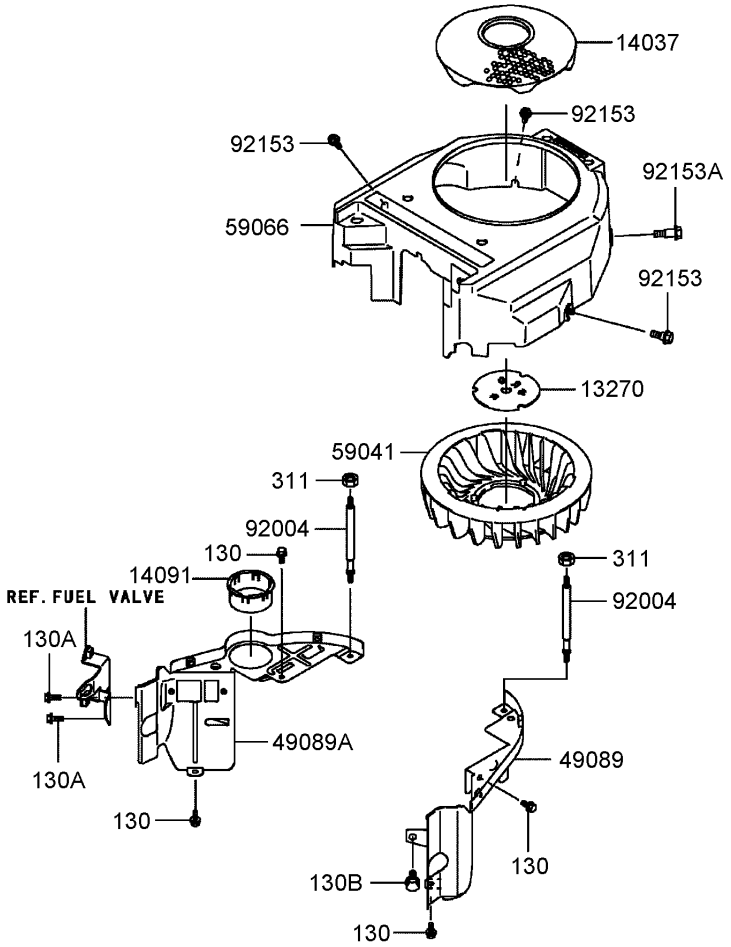

Cooling Equipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸13270	13270-7007	1	Plate
❸14037	14037-7021-9H	1	Screen
❸14091	14091-7009	1	Cover
❸49089	49089-7044	1	Shroud-Engine
❸49089A	49089-7045	1	Shroud-Engine
❸59041	59041-7010	1	Fan
❸59066	59066-7023	1	Housing-Fan
❸92004	92004-7007	2	Stud
❸92153	92153-7007	3	Bolt
❸92153A	92153-7008	1	Bolt
❸130	130B0612	4	Bolt-Flanged
❸130A	130B0616	2	Bolt-Flanged
❸130B	130B0816	1	Bolt-Flanged
❸311	311F0600	2	Nut-Hex


PROTOTYPE

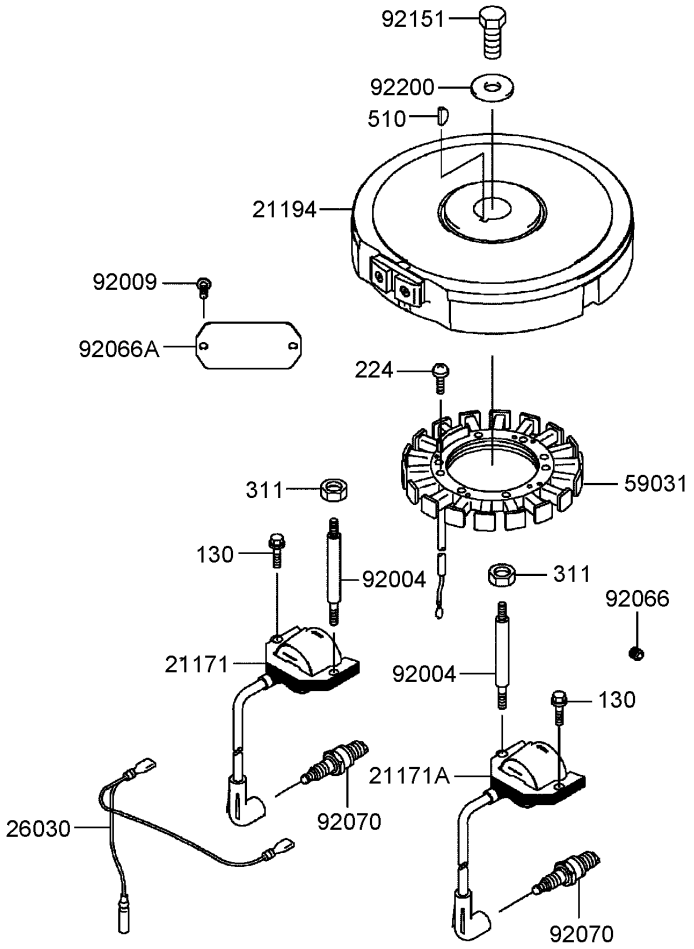

Electrical Equipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸21171	21171-7013	1	Coil-Assy-Ignition
❸21171A	21171-7014	1	Ignition Coil ASM
❸21194	21194-7012	1	Flywheel-Comp
❸26030	26030-7001	1	Harness
❸59031	59031-7002	1	Coil-Charging
❸92004	92004-7008	2	Stud
❸92009	92009-2308	2	Screw
❸92066	92066-7002	1	Plug
❸92066A	92066-7005	1	Plug
❸92070	92070-7003	2	Plug-Spark, Rcj8y, Solid
❸92151	92151-2097	1	Bolt, 12x30
❸92200	92200-7002	1	Washer
❸130	130B0620	2	Bolt-Flanged
❸224	224B0520	4	Screw-Pan-Wp-Cross
❸311	311F0600	2	Nut-Hex
❸510	510A5100	1	Key-Woodruff


PROTOTYPE

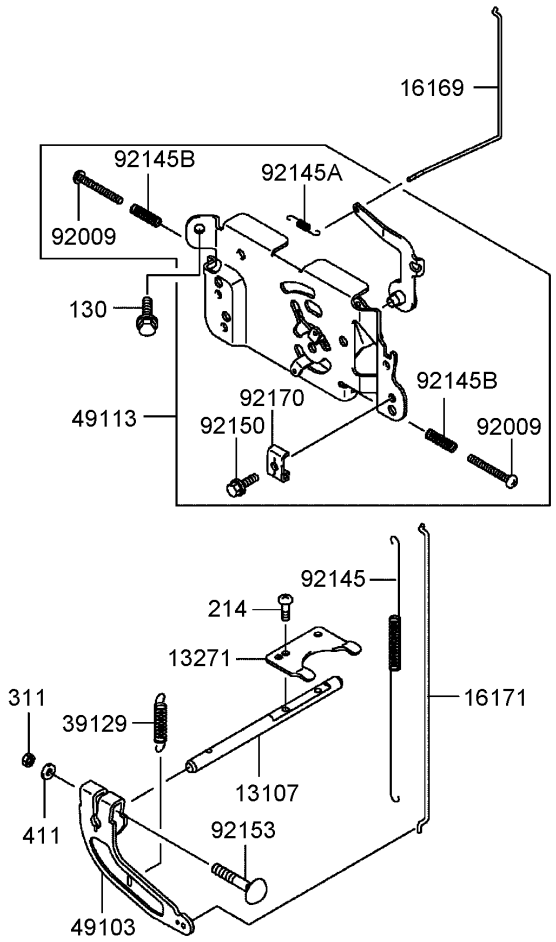

Control Euipment Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸13107	13107-7010	1	Shaft
❸13271	13271-7018	1	Plate
❸16169	16169-7012	1	Link-Choke
❸16171	16171-7007	1	Link
❸39129	39129-7003	1	Spring-Governor
❸49103	49103-7004	1	Arm-Governor
❸49113	49113-7027	1	Panel-Control, Comp
❸92009	92009-7007	2	Screw, 4x35
❸92145	92145-7003	1	Spring
❸92145A	92145-7004	1	Spring
❸92145B	92145-7005	2	Spring
❸92150	92150-2182	1	Bolt, 5x18
❸92153	92153-7005	1	Bolt, 6x35
❸92170	92170-7001	1	Clamp
❸130	130B0612	2	Bolt-Flanged
❸214	214B0408	2	Screw-Pan
❸311	311B0600	1	Nut-Hex
❸411	411b0600	1	Washer-Plain

PROTOTYPE

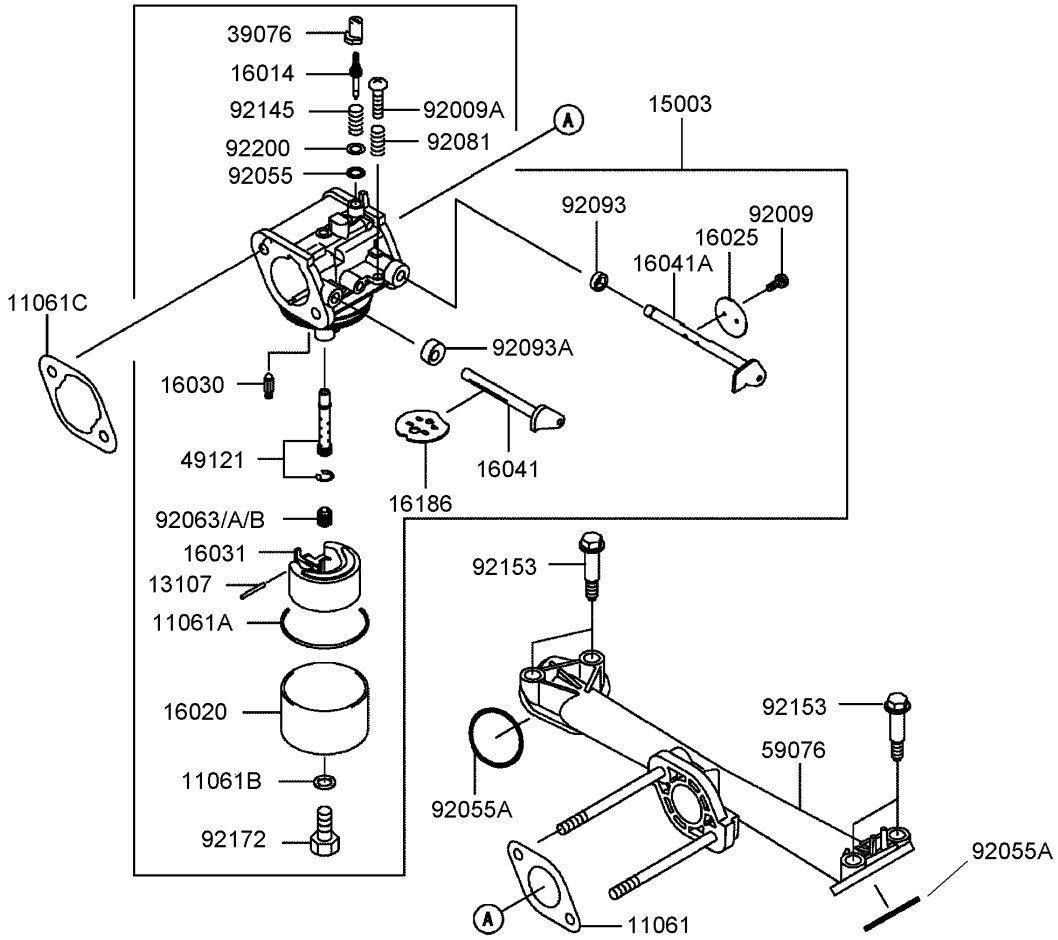


Carburetor Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸11061	11061-7004	1	Gasket-Insulator
❸11061A	11061-7009	1	Gasket-Chamber
❸11061B	11061-7010	1	Gasket-Screw
❸11061C	11061-7018	1	Gasket-Air Cleaner
❸13107	13107-7018	1	Shaft
❸15003	15003-7061	1	Carburetor-ASM
❸16014	16014-7002	1	Screw-Pilot
❸16020	16020-7003	1	Chamber-Float
❸16025	16025-7006	1	Valve-Throttle
❸16030	16030-7003	1	Valve-Float
❸16031	16031-7002	1	Float
❸16041	16041-7016	1	Shaft-Carburetor, Choke
❸16041A	16041-7018	1	Shaft-Carburetor, Throttle
❸16186	16186-7002	1	Choke Valve ASM
❸39076	39076-7001	1	Limiter
❸49121	49121-7001	1	Nozzle-Main
❸59076	59076-7005	1	Manifold-Intake
❸92009	92009-2083	2	Screw
❸92009A	92009-2349	1	Screw
❸92055	92055-2174	1	Ring-O
❸92055A	92055-7007	2	Ring-O, Id=31
❸92063	92063-7026	1	Jet-Main, #88
❸92063A	92063-7028	1	Jet-Main, #85
❸92063B	92063-7029	1	Jet-Main, #82

Ref	Part No.	Qty.	Description
❸92081	92081-2234	1	Spring
❸92093	92093-2100	1	Seal
❸92093A	92093-7003	1	Seal
❸92145	92145-7015	1	Spring
❸92153	92153-7009	4	Bolt
❸92172	92172-7002	1	Screw
❸92200	92200-7014	1	Washer

PROTOTYPE

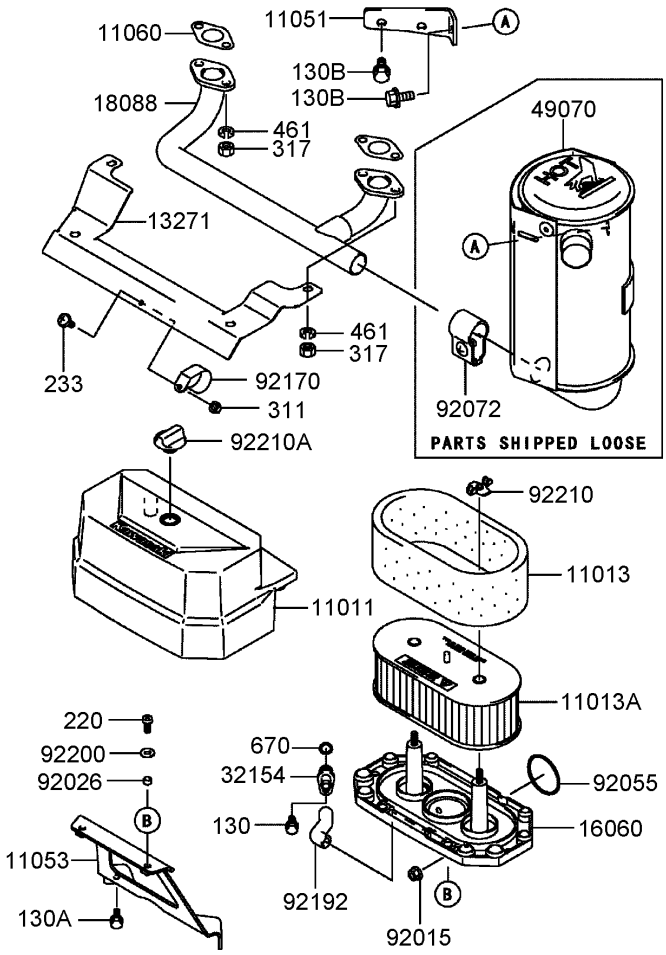


Air-Filter and Muffler Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸11011	11011-7035	1	Case-Air Filter
❸11013	11013-7025	1	Element-Filter, Air
❸11013A	11013-7031	1	Element-Filter, Air
❸11051	11051-7005-9H	1	Bracket
❸11053	11053-7022	1	Bracket
❸11060	11060-7021	2	Gasket-Muffler
❸13271	13271-7022	1	Plate
❸16060	16060-7016	1	Pipe-Intake
❸18088	18088-7001	1	Pipe-Exhaust
❸32154	32154-7006	1	Pipe
❸49070	49070-7015	1	Muffler-Comp
❸92015	92015-1193	2	Nut
❸92026	92026-7001	2	Spacer, 6.2x7.9x5
❸92055	92055-7015	1	O-Ring
❸92072	92072-7008	1	Band
❸92170	92170-7002	1	Clamp
❸92192	92192-7010	1	Tube
❸92200	92200-2070	2	Washer
❸92210	92210-7004	2	Nut
❸92210A	92210-7019	1	Nut
❸130	130B0610	1	Bolt-Flanged
❸130A	130B0612	2	Bolt-Flanged
❸130B	130B0816	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
❸220	220B0614	2	Screw-Pan (Cross)
❸233	233B0416	1	Screw-Pan-Wp+-
❸311	311B0400	1	Nut-Hex
❸317	317R0800	4	Nut-Hex-Small
❸461	461F0800	4	Washer-Spring
❸670	670B2010	1	O-Ring


PROTOTYPE

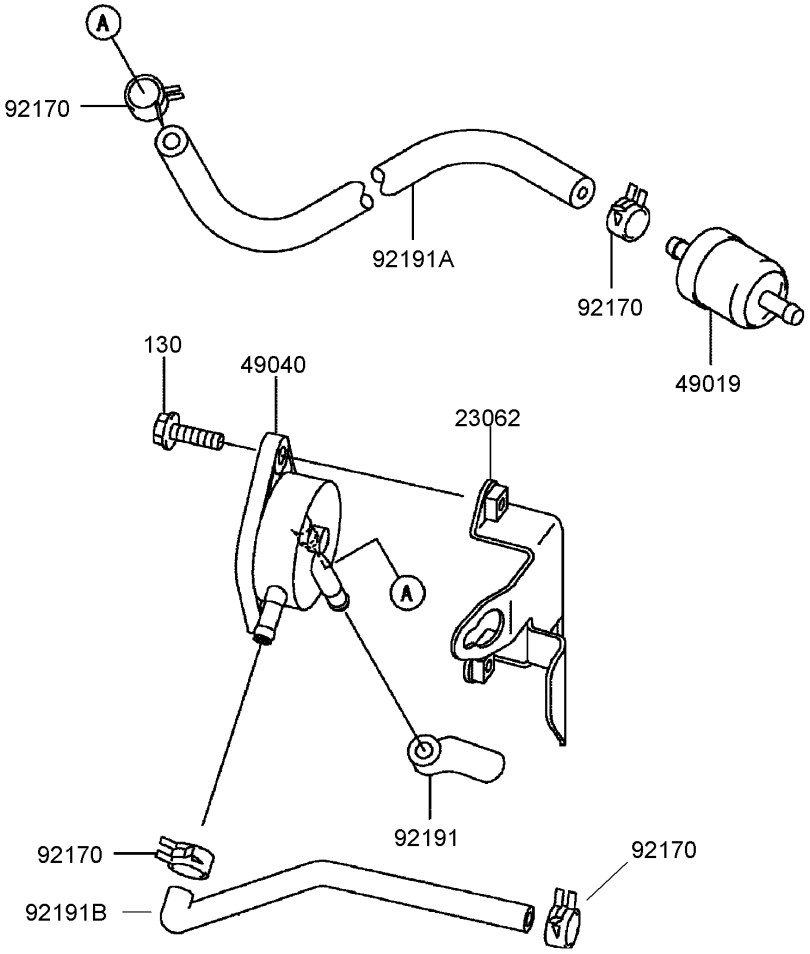

Fuel Tank/Fuel Valve Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸23062	23062-7004-9H	1	Bracket-Comp
❸49019	49019-7001	1	Filter-Fuel
❸49040	49040-7001	1	Pump-Fuel
❸92170	92170-2088	4	Clamp
❸92191	92191-7002	1	Tube
❸92191A	92191-7003	1	Tube-6.35x12.7x160
❸92191B	92191-7004	1	Tube
❸130	130B0620	2	Bolt-Flanged


PROTOTYPE

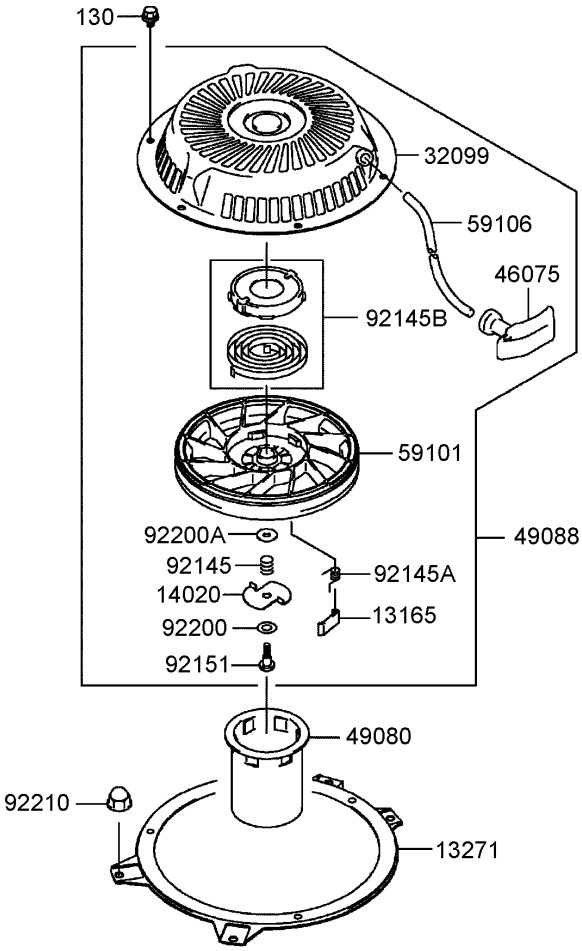

Starter Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸13165	13165-7001	2	Pawl-Starter, Recoil
❸13271	13271-7003-9H	1	Plate
❸14020	14020-7001	1	Retainer
❸32099	32099-7002	1	Case-Starter, Recoil
❸46075	46075-7001	1	Grip-Recoil, Starter
❸49080	49080-7001	1	Pulley-Starting
❸49088	49088-7013	1	Starter-Recoil
❸59101	59101-7001	1	Reel-Recoil
❸59106	59106-7001	1	Rope
❸92145	92145-7006	1	Spring
❸92145A	92145-7007	2	Spring
❸92145B	92145-7008	1	Spring
❸92151	92151-7008	1	Bolt
❸92200	92200-7004	1	Washer
❸92200A	92200-7005	1	Washer
❸92210	92210-0003	4	Nut
❸130	130B0608	3	Bolt-Flanged

PROTOTYPE

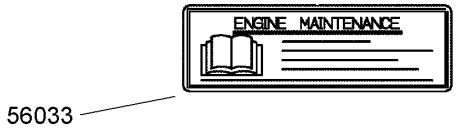

56033

56070



56080



56080A



Decal Assembly
Kawasaki FH430V-AS28

Ref	Part No.	Qty.	Description
❸56033	56033-7001	1	Label-Manual
❸56070	56070-7001	1	Label-Warning
❸56080	56080-2077	1	Label-Brand
❸56080A	56080-7024	1	Label-Brand

PROTOTYPE



PROTOTYPE