Form No. 3484-138 Rev A

TORO®

Count on it.

Parts Catalog

Workman® LTX

EFI Utility Vehicle

Model No. 07424—Serial No. 421244832 and Up

Register at www.Toro.com.
Original Instructions (EN)

3484-138 A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Front Frame and Suspension Assembly 4
Left Hand Spindle Assembly No. 163-9475 5
Right Hand Spindle Assembly No. 163-9476 6
Floor Plate and Rear Suspension Mount Assembly 7
Rear Frame and Suspension Assembly 8
Frame Mount and Rear Shock/Spring Assembly 9
Brake Assembly 10
Master Cylinder Assembly No. 104-6782 11
Brake Caliper Assembly No. 161-1890 12
Steering Assembly 13
Pedal and Control Assembly 14
Hood and Fender Assembly 16
Dash Assembly 17
Seatbase Assembly 18
Engine Assembly 19
Starter Generator Assembly No. 131-8444 20
Secondary Clutch Assembly No. 119-6011 21
Primary Clutch Assembly No. 138-0095 22
Transaxle Assembly 23
Transaxle Assembly No. 131-3486 24
Battery Assembly 26
Electrical Assembly 28
Fuel System Assembly 30
Attachments and Accessories 32

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420


Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

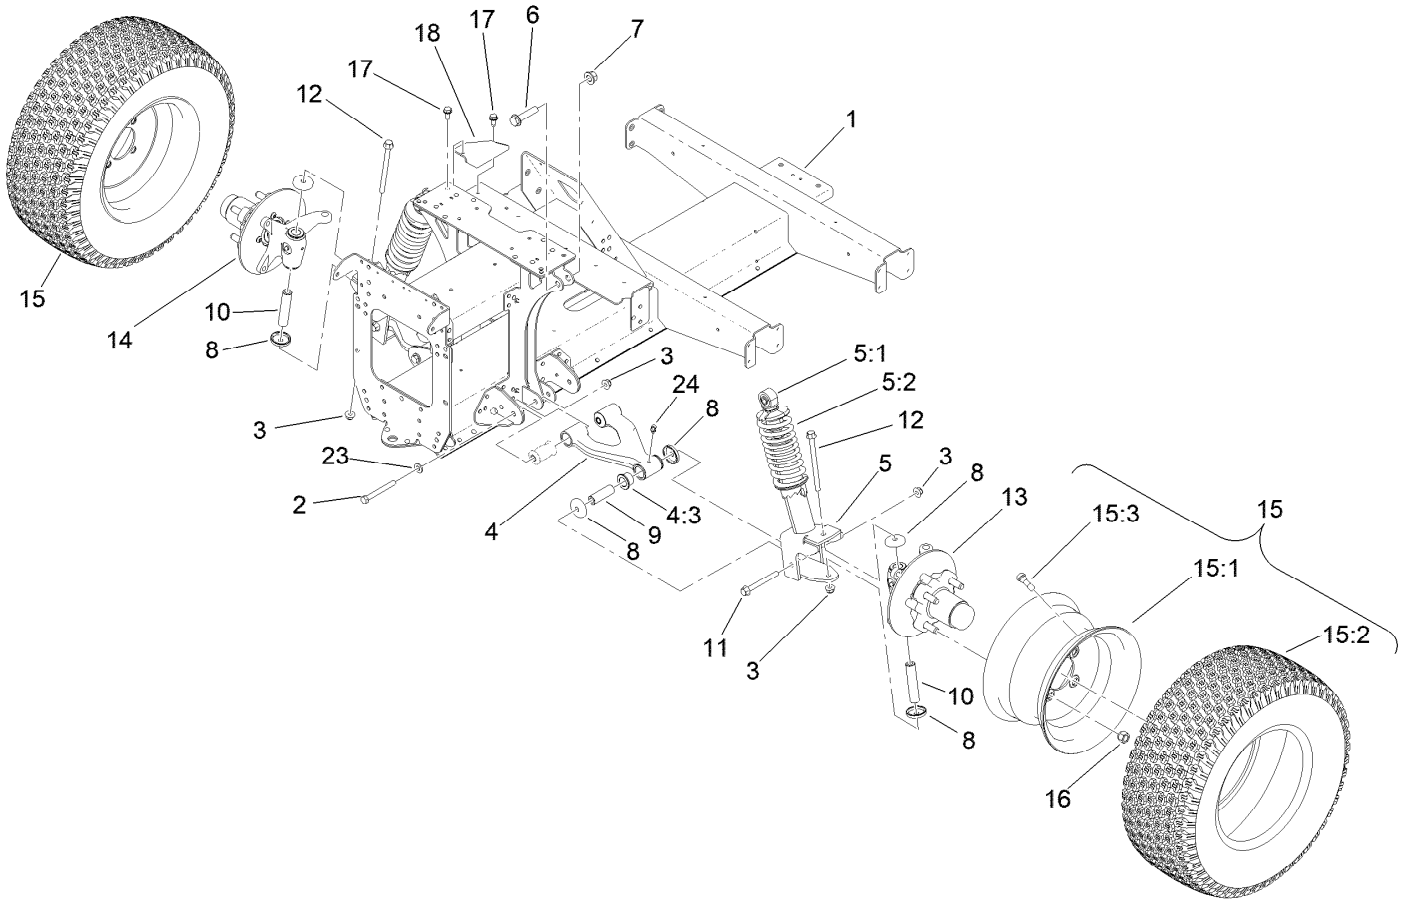

Front Frame and Suspension Assembly


Ref.	Part Number	Qty.	Description
1	161-5490-03	1	Front Frame ASM [black]
2	112-7161	4	Screw-HH
3	139-3380	8	Nut-HF
4	163-9444	2	Control Arm ASM
4:3	147-3983	2	Bushing-Flange
5	139-4484	2	Strut ASM, 250 Lb (16.33" EXT Length)
5:1	131-8574	1	Isolator-Shock
5:2	137-6719	1	Spring-Compression, 250Lb
6	3234-46	2	Screw-HHF
7	139-1689	2	Nut-HF
8	140-9793	8	Pin Seal
9	144-5634	2	Sleeve-Outer
10	164-4544	2	Sleeve-Kingpin

Ref.	Part Number	Qty.	Description
11	139-3370	2	Screw-HF
12	139-3350	2	Screw-HF
13	163-9475	1	LH Spindle ASM
14	163-9476	1	RH Spindle ASM
15	147-2761	2	Wheel And Tire ASM
15:1	147-2762	1	Wheel
15:2	139-4475	1	Tire-20 X 8.00-10
15:3	232-27	1	Stem-Valve
16	139-2564	8	Nut-Lug
17	32144-70	2	Screw-HWHTF
18	131-8339-03	1	Reinforcement-Tower
23	100-4852	4	Washer-Hardened
24	302-60	2	Fitting-Grease

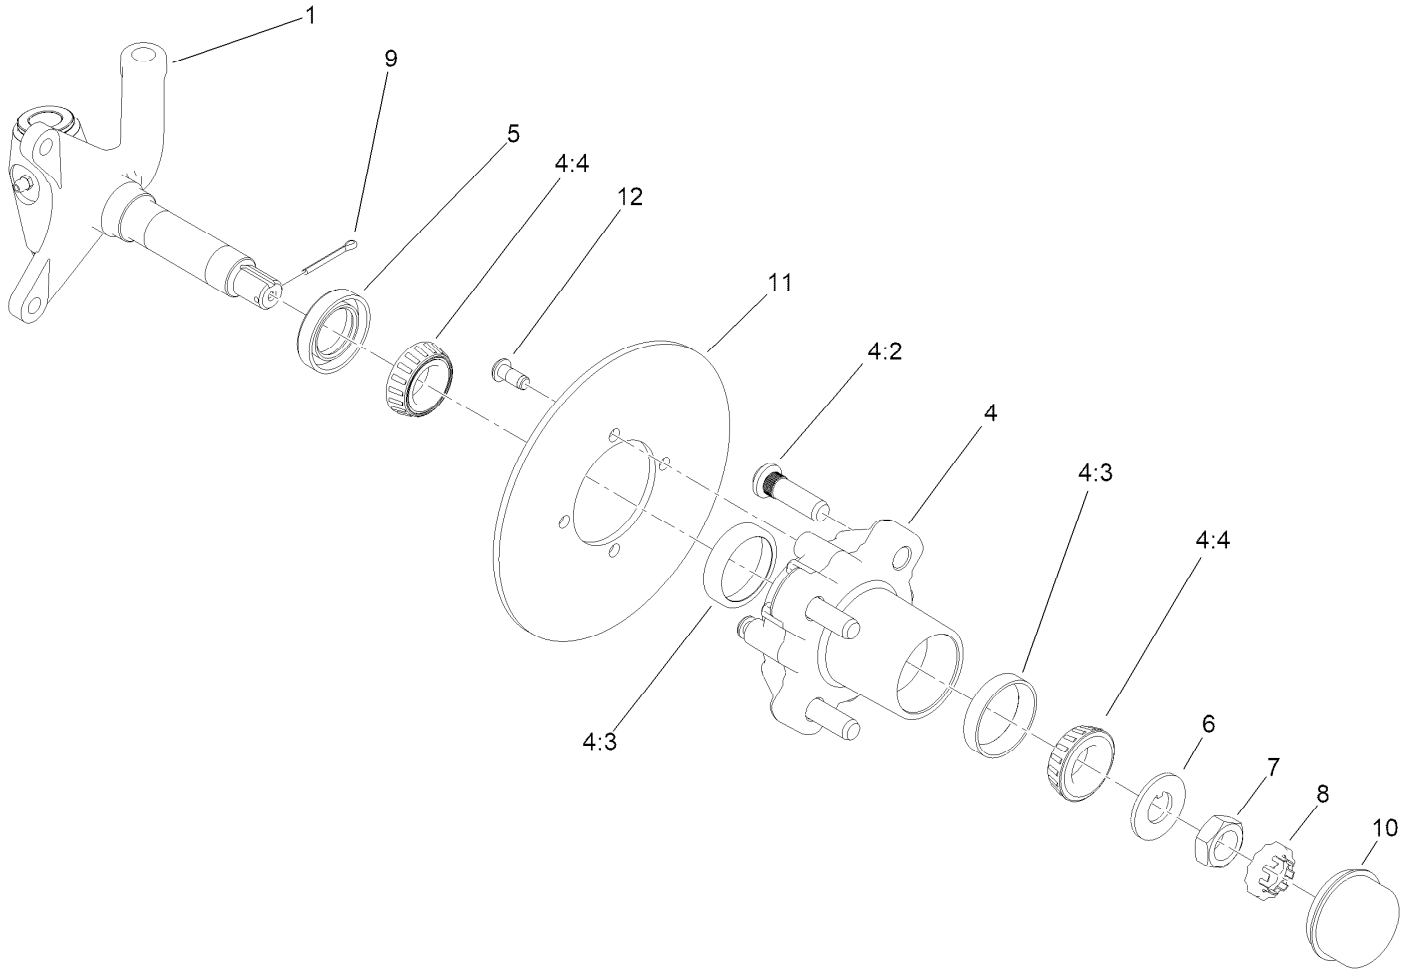


Left Hand Spindle Assembly No. 163-9475

Ref.	*Part Number*	*Qty.*	*Description*
1	163-9471	1	Spindle ASM LH
4	144-5470	1	Front Hub ASM
4:2	10-6830	4	Stud-Type, Drive
4:3	254-72	2	Bearing-Cup, Tapered
4:4	254-94	2	Bearing-Cone, Tapered
5	112-1690	1	Seal-Oil
6	93-0309	1	Washer-Tab
7	3220-7	1	Nut-Jam
8	93-0307	1	Nut-Lock, Retainer
9	3272-12	1	Pin-Cotter
10	241-119	1	Cap-Dust
11	139-4474	1	Rotor-Brake
12	121-9671	4	Screw-HSBH,Patch

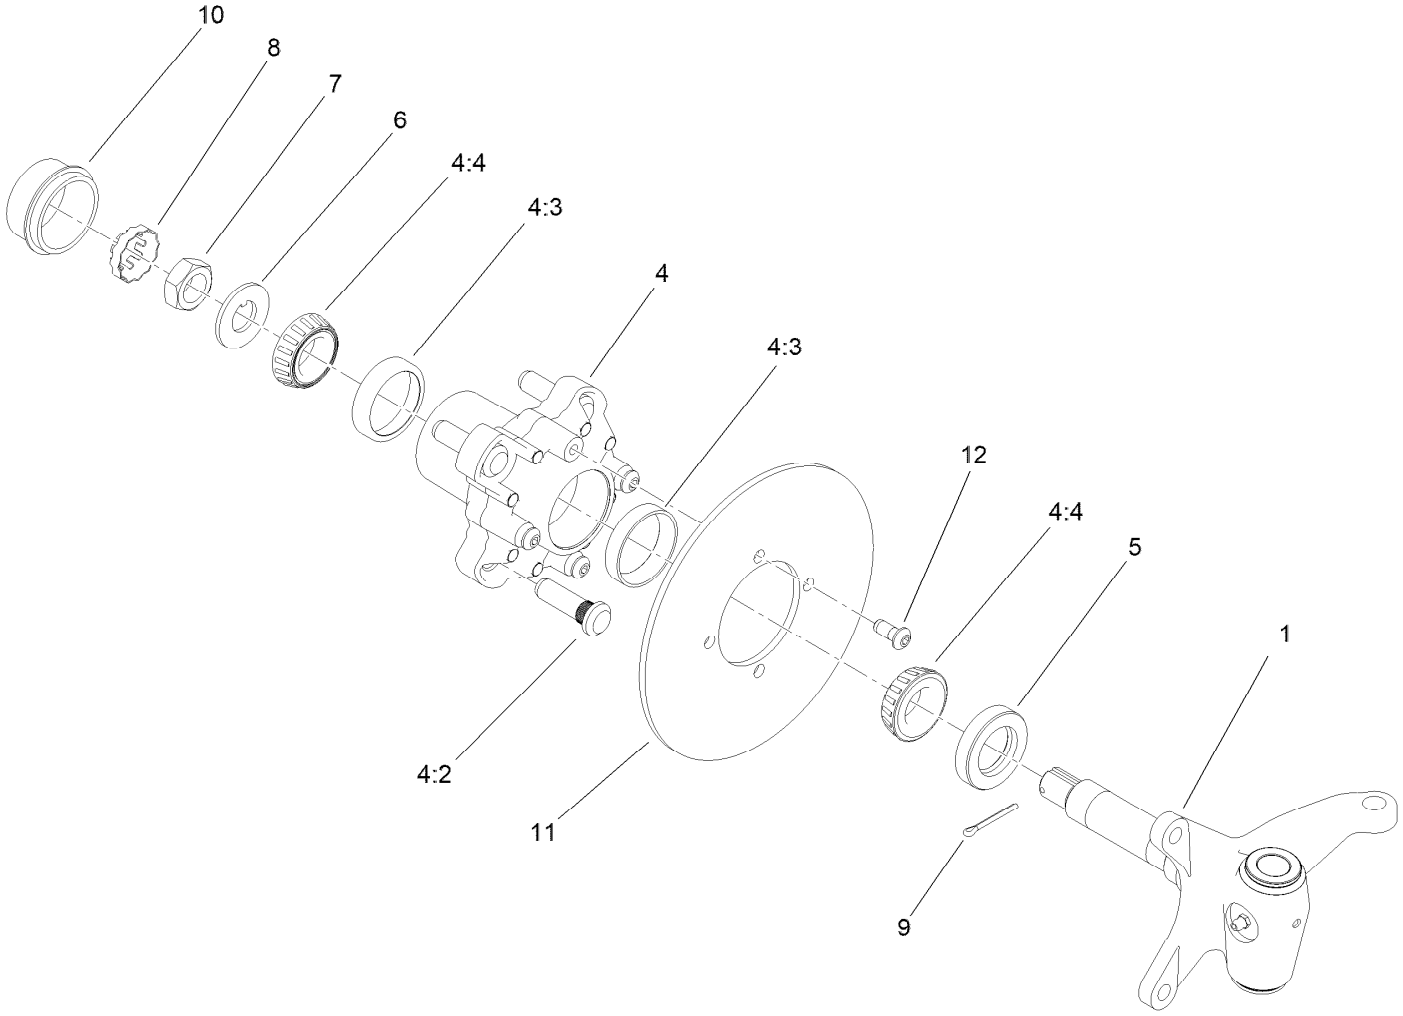

Right Hand Spindle Assembly No. 163-9476


Ref.	*Part Number*	*Qty.*	*Description*
1	163-9472	1	Spindle ASM RH
4	144-5470	1	Front Hub ASM
4:2	10-6830	4	Stud-Type, Drive
4:3	254-72	2	Bearing-Cup, Tapered
4:4	254-94	2	Bearing-Cone, Tapered
5	112-1690	1	Seal-Oil
6	93-0309	1	Washer-Tab
7	3220-7	1	Nut-Jam
8	93-0307	1	Nut-Lock, Retainer
9	3272-12	1	Pin-Cotter
10	241-119	1	Cap-Dust
11	139-4474	1	Rotor-Brake
12	121-9671	4	Screw-HSBH,Patch

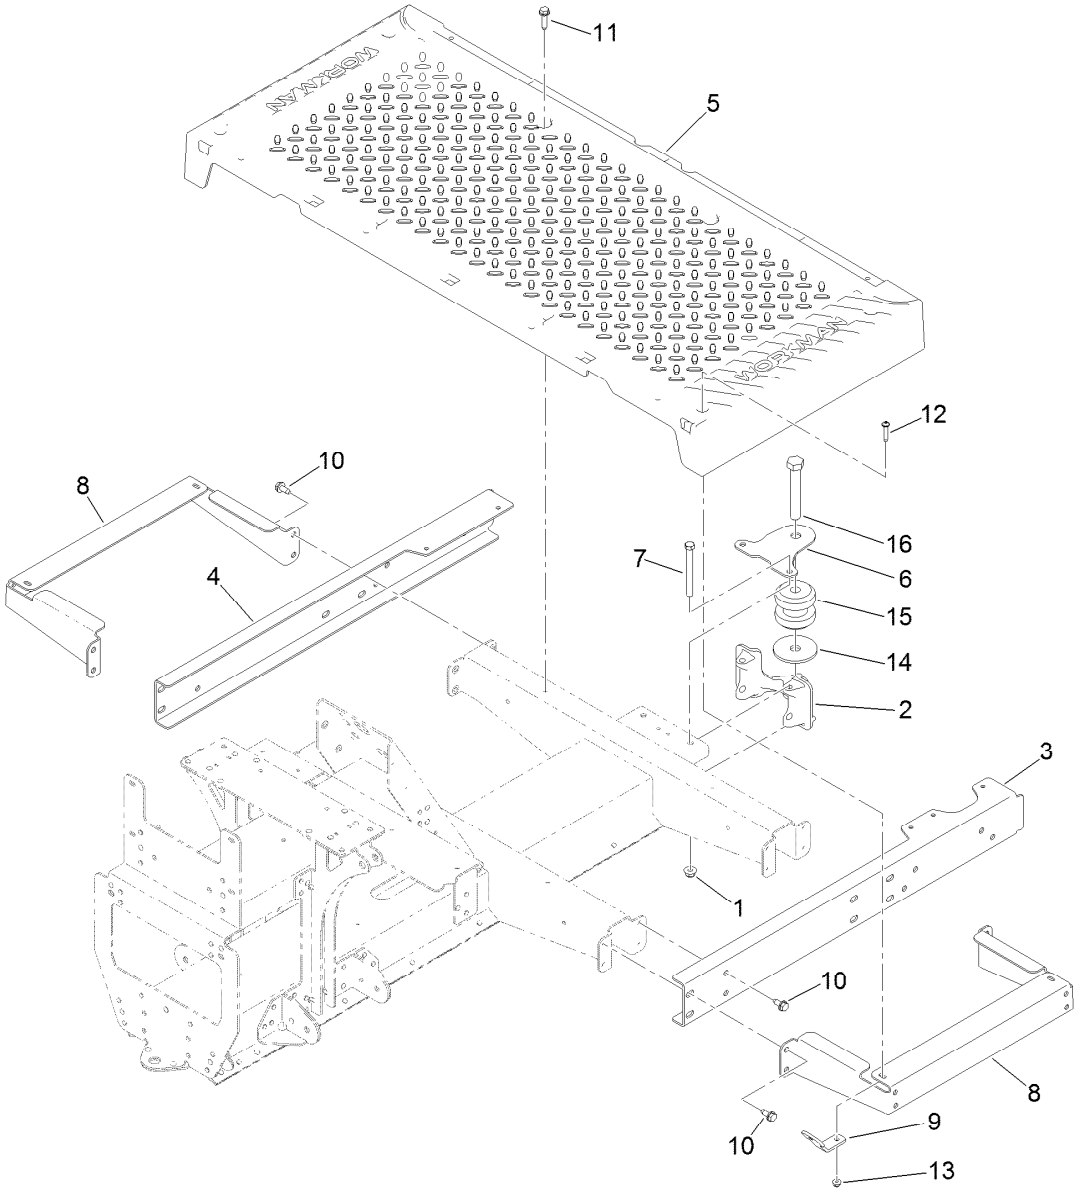

Floor Plate and Rear Suspension Mount Assembly

Ref.	Part Number	Qty.	Description
1	119-4042	2	Nut-HF, NI
2	131-8466	1	Mount-Suspension, Rear
3	127-7820-03	1	Channel-Frame, Front (LH)
4	127-7821-03	1	Channel-Frame, Front (RH)
5	127-7829	1	Plate-Floor
6	131-8597	1	Plate-Gimbal, Upper
7	323-42	2	Screw-HH
8	127-7837-03	2	Bracket-Support, Floor Plate


Ref.	Part Number	Qty.	Description
9	127-7832	2	Bracket-Angle
10	32144-70	16	Screw-HWHTF
11	32144-49	4	Screw-HWHTF
12	132-6777	4	Screw-Twh Thd Roll
13	104-7201	4	Nut-HF, NI
14	110-4549	1	Washer-Snubbing
15	131-8480	1	Isolator
16	104-5877	1	Screw-HH

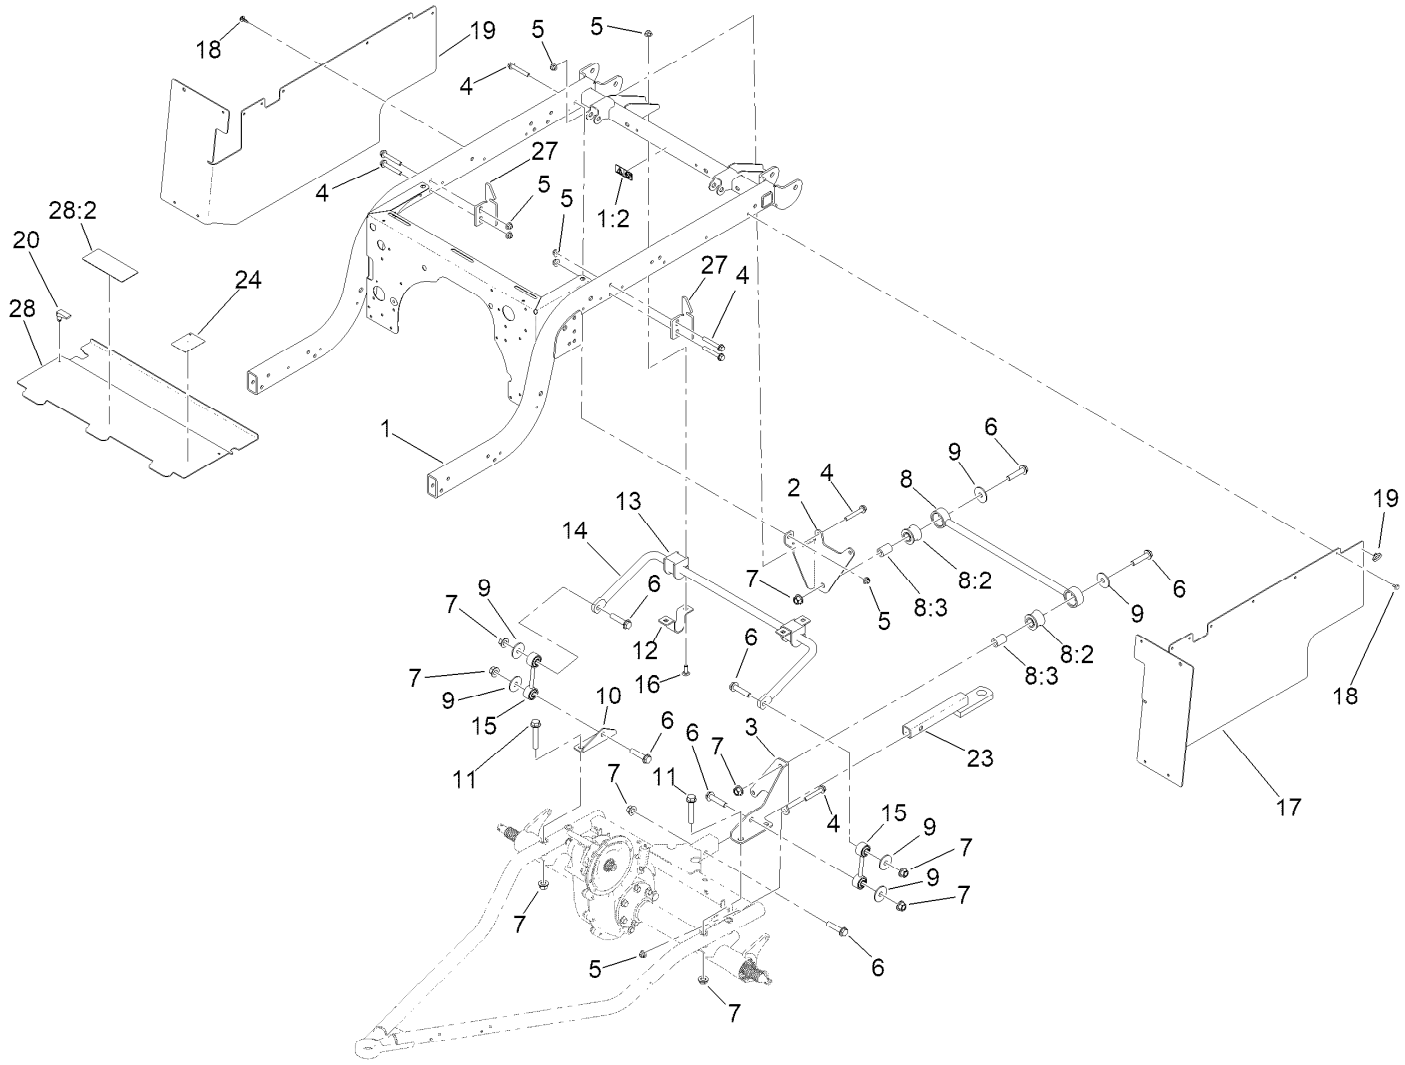

Rear Frame and Suspension Assembly


Ref.	Part Number	Qty.	Description
1	163-3902	1	Rear Frame ASM
1:2	115-2047	1	Decal-Surface, Hot
2	139-4647-03	1	Bracket-Stabilizer Bar
3	127-7411-03	1	Bracket-Bar, Stabilizer
4	3234-39	9	Screw-HHF
5	119-4042	13	Nut-HF, NI
6	3234-46	7	Screw-HHF
7	139-1689	11	Nut-HF
8	109-5013	1	Panhard Rod ASM
8:2	109-5009	2	Bushing-Suspension, Rubber
8:3	109-5010	2	Spacer
9	86-1990	6	Washer
10	131-8315	1	Bracket-Link, Sway Bar
11	3234-40	4	Screw-HF

Ref.	Part Number	Qty.	Description
12	139-4644	2	Clamp, Anti-Sway Bar
13	87-3910	2	Bushing-Rubber
14	131-8310-03	1	Bar-Sway, Anti
15	131-8394	2	Link-Bar, Sway
16	3231-22	4	Screw-CARR
17	163-3740	2	Panel-Side
18	125-9622	20	Rivet-Blind
19	3290-378	2	Tie-Cable
20	74-5950	2	Latch-Swell
23	137-6741	1	Ball Mount ASM
24	163-9453	1	Decal-Ltx EFI
27	127-7428-03	2	Striker-Latch, Bed
28	140-4573	1	Extended Panel-Cover
28:2	99-7345	1	Decal-Warning

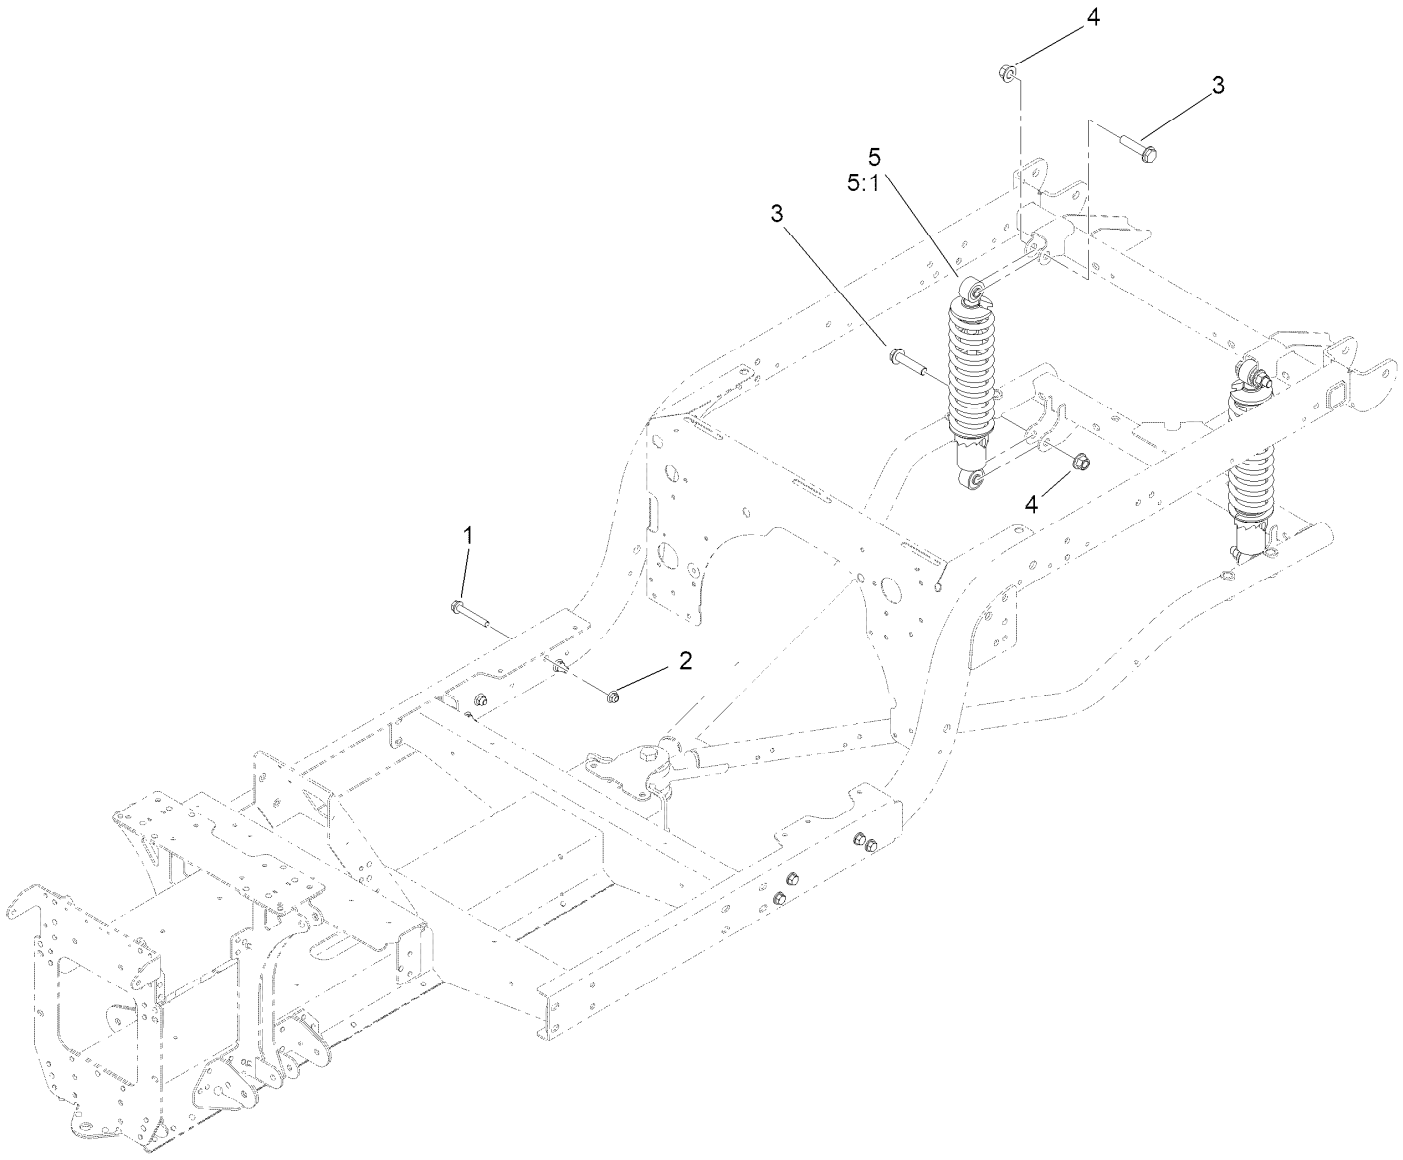

Frame Mount and Rear Shock/Spring Assembly


Ref.	*Part Number*	*Qty.*	*Description*
1	3234-39	8	Screw-HHF
2	119-4042	8	Nut-HF, NI
3	3234-46	4	Screw-HHF
4	139-1689	4	Nut-HF
5	139-4607	2	Shock/Spring ASM
5:1	131-8574	2	Isolator-Shock

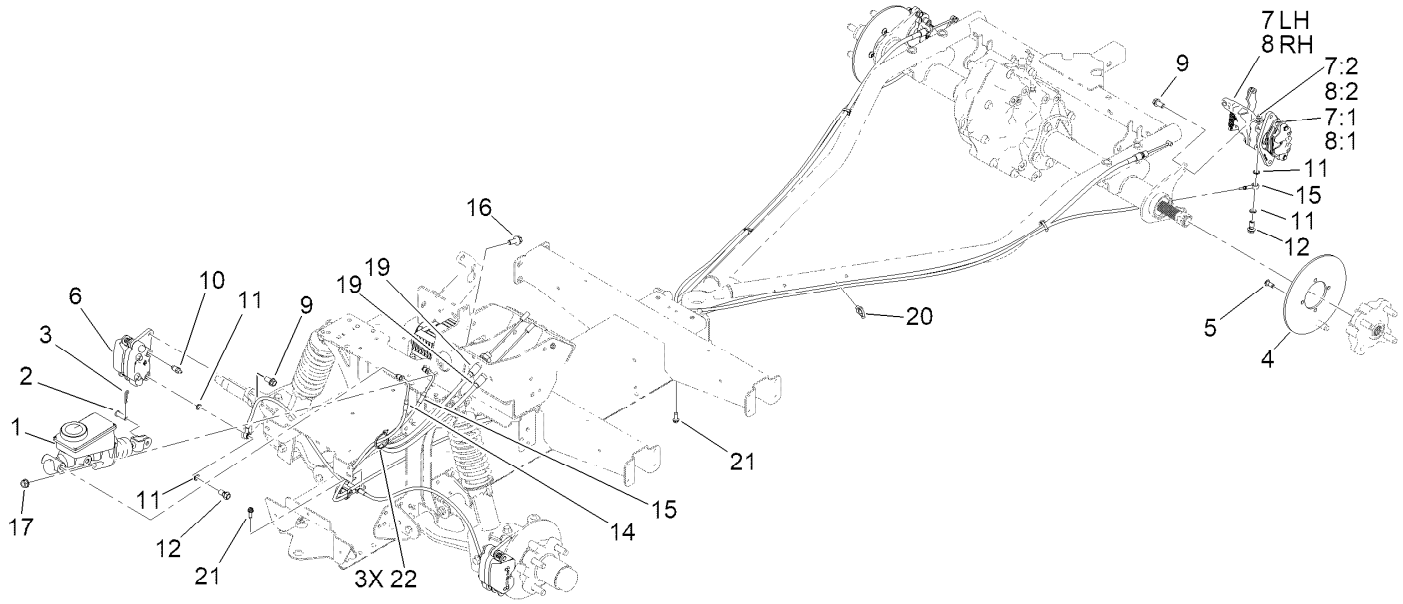

Brake Assembly


Ref.	Part Number	Qty.	Description
1	104-6782	1	Master Cylinder ASM
2	283-2	1	Pin-Clevis
3	1-806003	1	Pin-Cotter
4	139-4474	2	Rotor-Brake
5	121-9671	8	Screw-HSBH,Patch
6	161-1890	2	Brake Caliper ASM
7	140-2585	1	Brake Caliper ASM, LH
7:1	140-2595	1	Brake Pad Service Kit (Rear, Qty 4)
7:2	119-9509	1	Screw-Bleed
7:3	136-6328	2	Spring-Rattle, Anti ●
8	140-2590	1	Brake Caliper ASM, RH
8:1	140-2595	1	Brake Pad Service Kit (Rear, Qty 4)
8:2	119-9509	1	Screw-Bleed
8:3	136-6328	2	Spring-Rattle, Anti ●
9	144-5550	8	Screw-Spl
10	119-9509	2	Screw-Bleed
11	115-2341	8	Washer-Banjo
12	120-4875	4	Bolt-Flange, Banjo
14	161-5416	1	Brake Line ASM, Front
15	163-5056	1	Rear Brake Line ASM
16	3234-11	2	Screw-HHF
17	3290-357	2	Nut-HSF
19	161-5299	2	Cable-Brake, Parking
20	32180-030	4	Clip-Tie
21	49-2040	2	Screw-HWHTF
22	3290-378	3	Tie-Cable

● Not illustrated

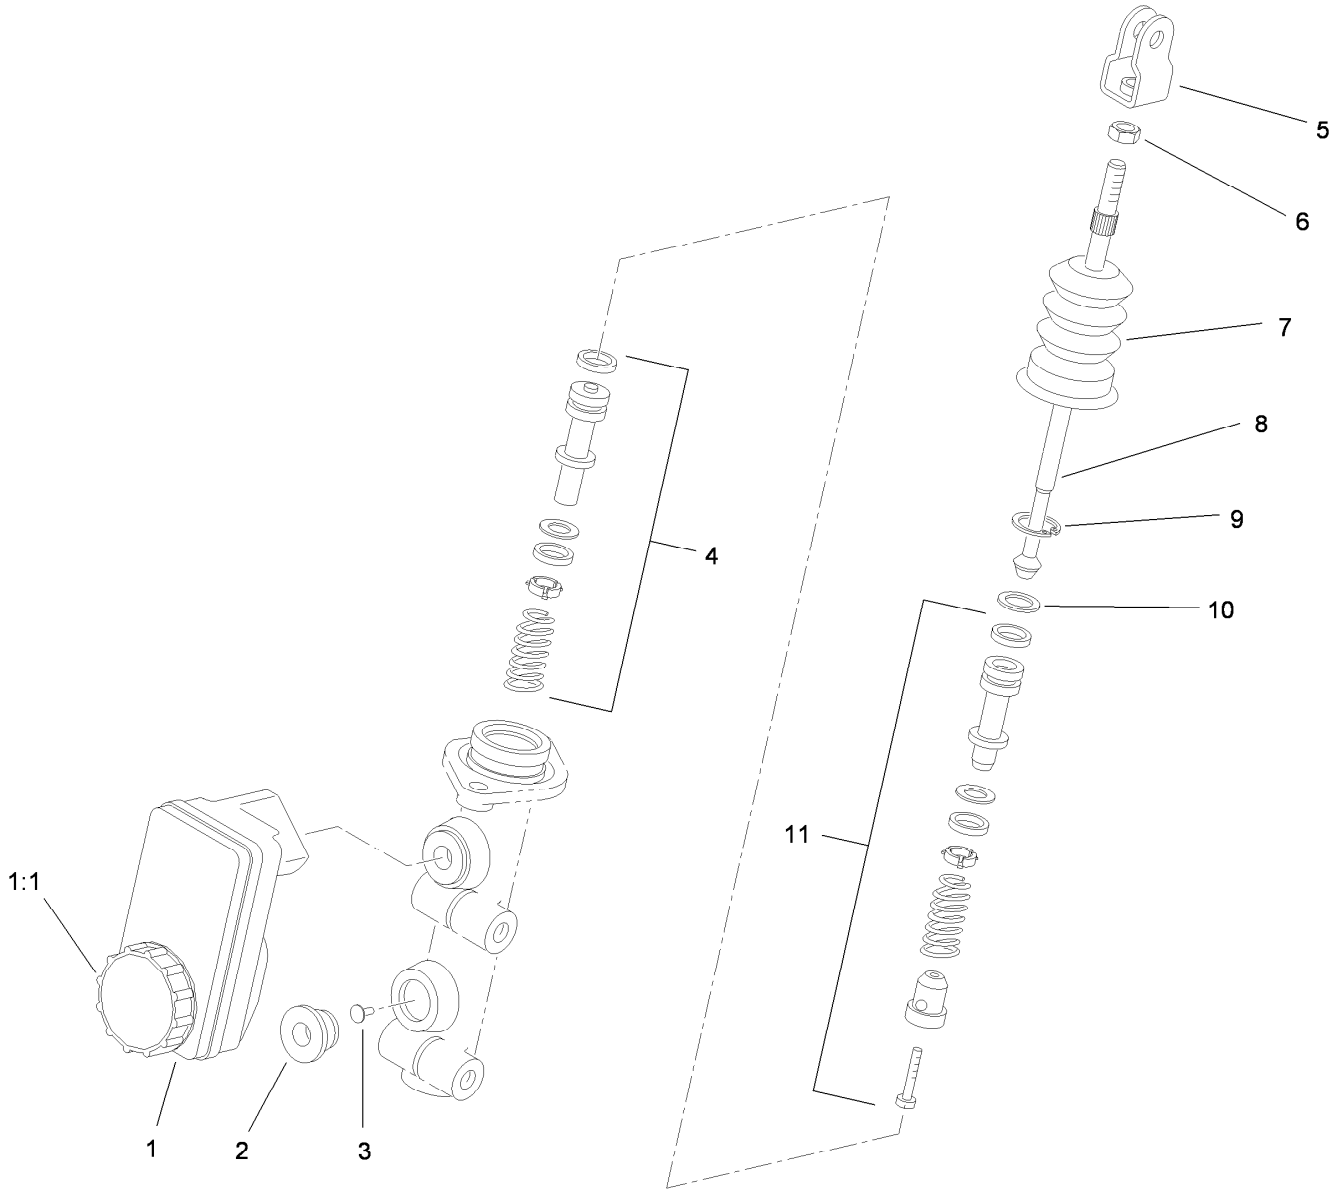


Master Cylinder Assembly No. 104-6782

Ref.	*Part Number*	*Qty.*	*Description*
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

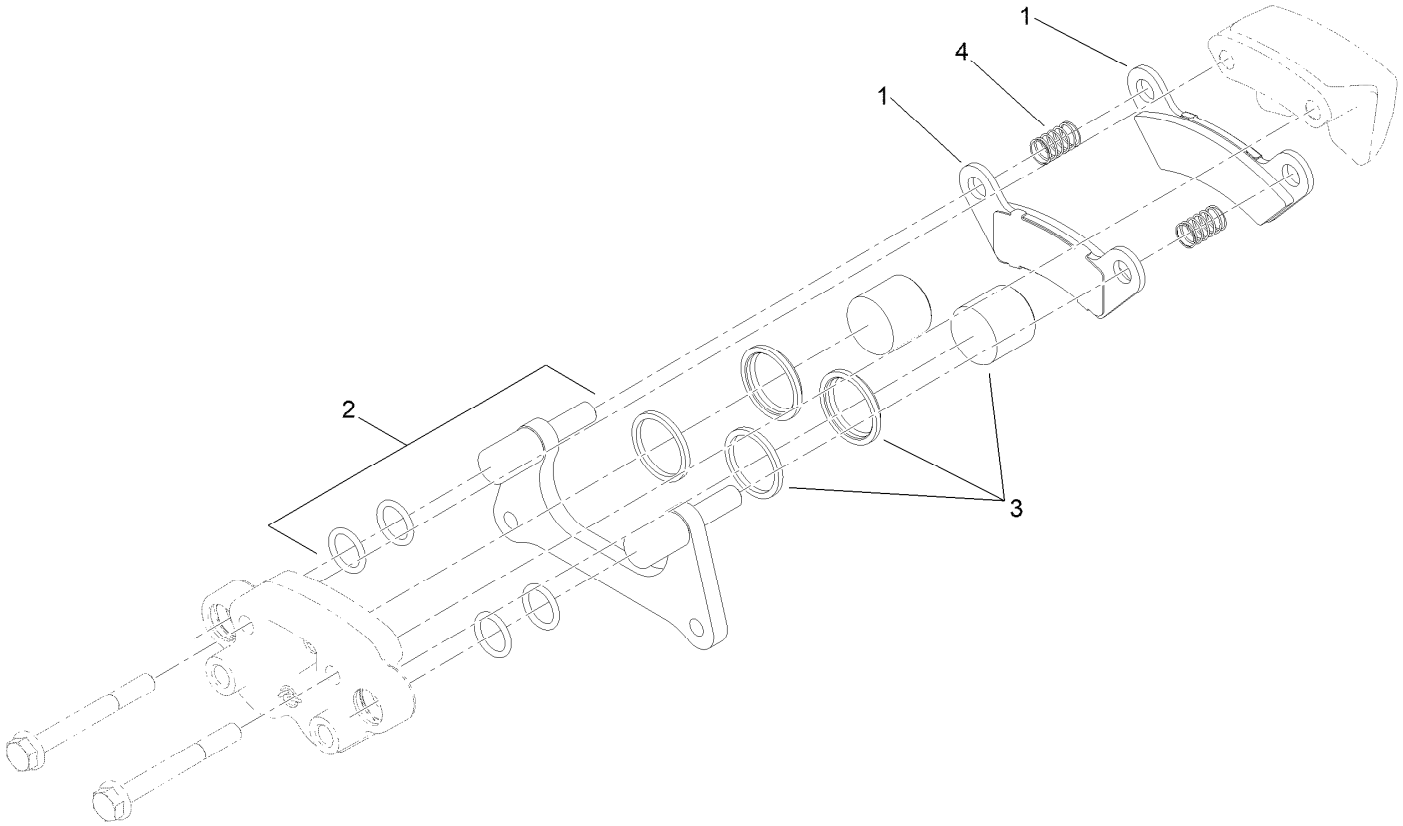

Brake Caliper Assembly No. 161-1890


Ref.	*Part Number*	*Qty.*	*Description*
1	140-2580	1	Brake Pad Service Kit (Front, Qty 4)
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit
4	161-1889	2	Spring-Compression, Service

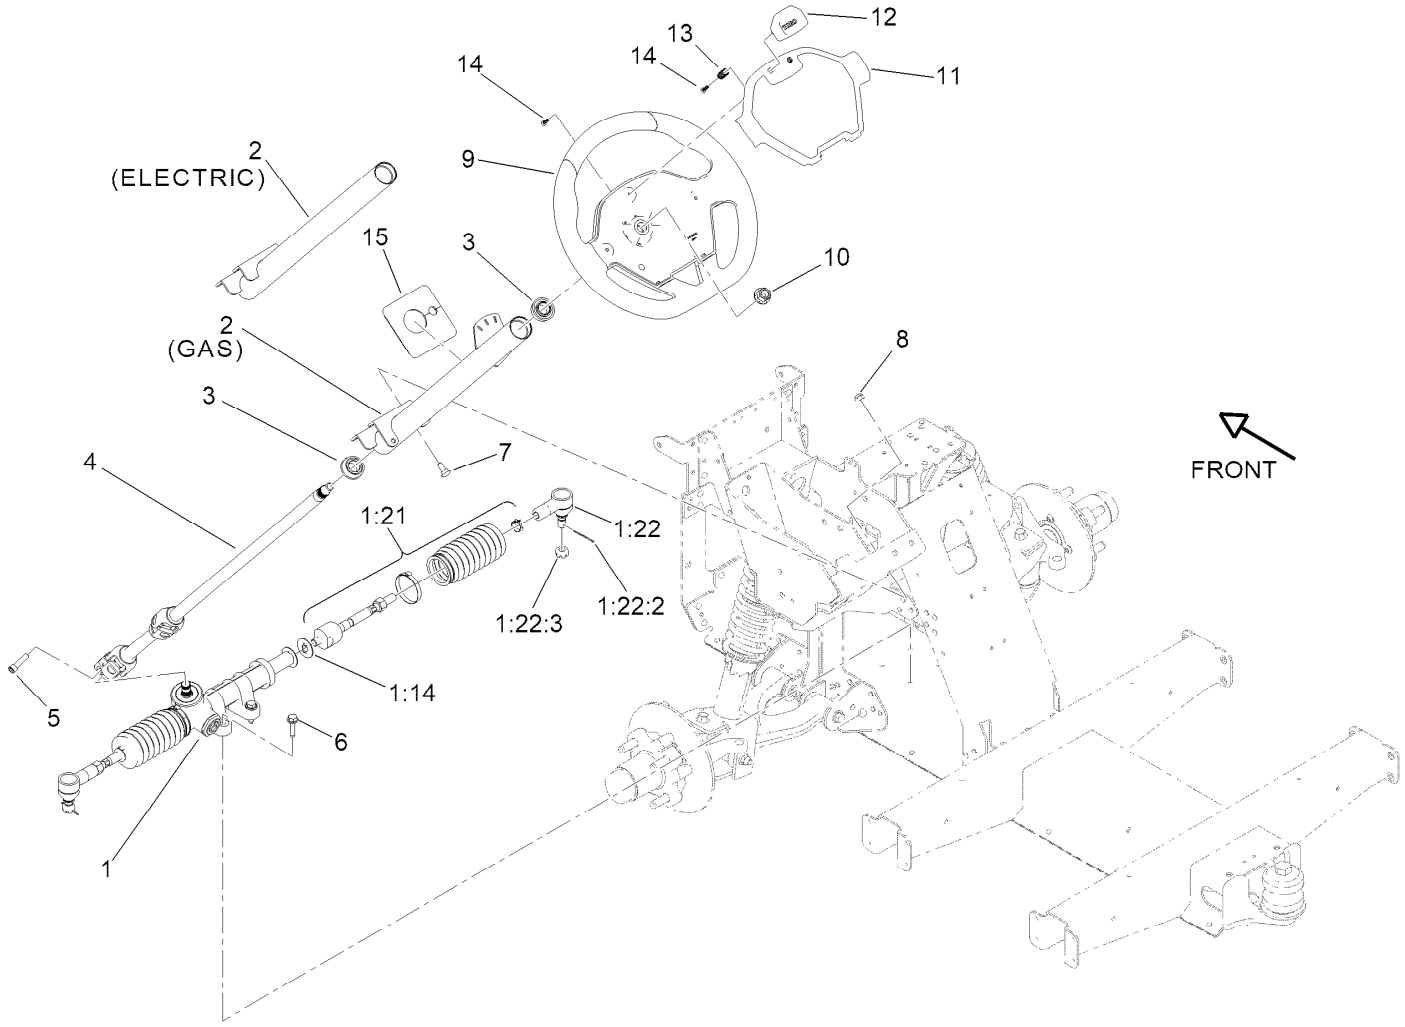

Steering Assembly

Ref.	Part Number	Qty.	Description
1	138-0114	1	Steering Rack ASM
1:14	138-0134	2	Lock-Rod, Tie
1:21	140-4591	1	Kit-Tie Rod ASM, Gtx
1:22	140-4592	1	Kit-Rod End ASM
1:22:2	3272-42	1	Pin-Cotter
1:22:3	140-2493	1	Nut-Hex, Slotted
2	147-8007	1	Steering Column ASM, Gtx
3	112-3262	2	Bearing
4	145-2050	1	Steering Shaft ASM
5	145-7145	1	Screw-HSH,Lock


Ref.	Part Number	Qty.	Description
6	32144-49	4	Screw-HWHTF
7	3230-1	4	Bolt-CARR
8	119-4041	4	Nut-HF
9	144-5570	1	Steering Wheel ASM
10	139-1689	1	Nut-HF
11	144-5567	1	Cover-Wheel, Steering
12	144-5566	1	Clip-Wheel, Steering
13	144-5537	2	Spring-Compression
14	94-4496	5	Screw-PPH
15	140-9903	1	Grommet-Column, Steering

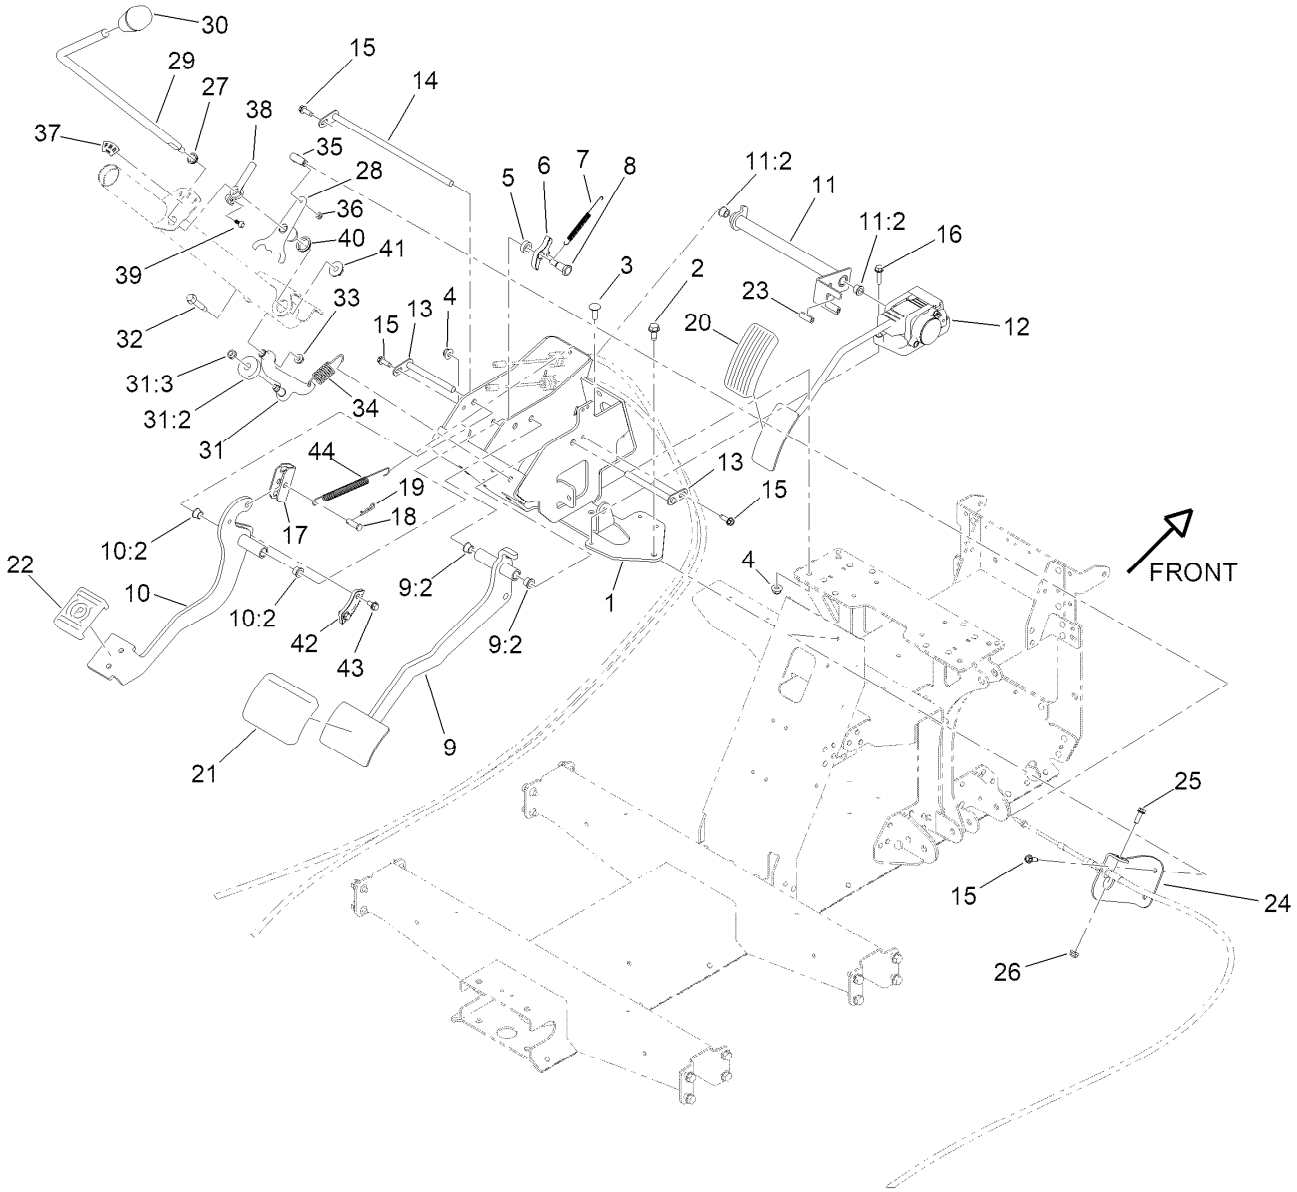

Pedal and Control Assembly


Ref.	Part Number	Qty.	Description
1	161-5480-03	1	Pedal Box Mount ASM [black]
2	32144-70	4	Screw-HWHTF
3	3230-10	1	Bolt-CARR
4	119-4041	2	Nut-HF
5	256-276	1	Spacer-Nylon
6	140-9703	1	Pawl-Parking
7	140-9858	1	Spring-Extension
8	144-5458	1	Screw-Shoulder
9	161-5486	1	Brake Pedal ASM
9:2	256-116	2	Bushing-Flange
10	147-8016	1	Parking Pedal ASM
10:2	256-116	2	Bushing-Flange
11	161-5495	1	Trip Pivot ASM
11:2	256-116	2	Bushing-Flange
12	161-5485	1	Throttle-Electronic
13	131-8459	2	Shaft-Pivot
14	161-5492	1	Flag Pin ASM
15	49-2040	5	Screw-HWHTF
16	32144-86	3	Screw-HWHTF
17	87-3480	1	Bracket-Equalizer, Cable

Ref.	Part Number	Qty.	Description
18	1-808280	1	Pin-Clevis
19	1-806003	1	Pin-Cotter
20	140-4572	1	Pedal Pad-Throttle
21	161-5253	1	Footpad-Pedal
22	144-5551	1	Pad-Parking Brake
23	161-5494	2	Trim-Edge
24	161-5279-03	1	Bracket-Mount, Shift Cable
25	115-5103	1	Screw-HHF
26	104-7201	1	Nut-HF, NI
27	110-3318	1	Bushing-Snap
28	144-5438	1	Shift Arm
29	144-5439	1	Shaft-Shift
30	131-8473	1	Knob-Tapered
31	138-6432	1	Detent Arm Assembly
31:2	145-2095	1	Bushing-Detent, Shift
31:3	3296-47	1	Nut-Lock,NI
32	116-6876	1	Screw-Shoulder
33	32128-33	1	Nut-HF
34	131-8419	1	Spring-Extension
35	2411-38	1	Joint-Ball
36	3296-27	1	Nut-Lock, NI

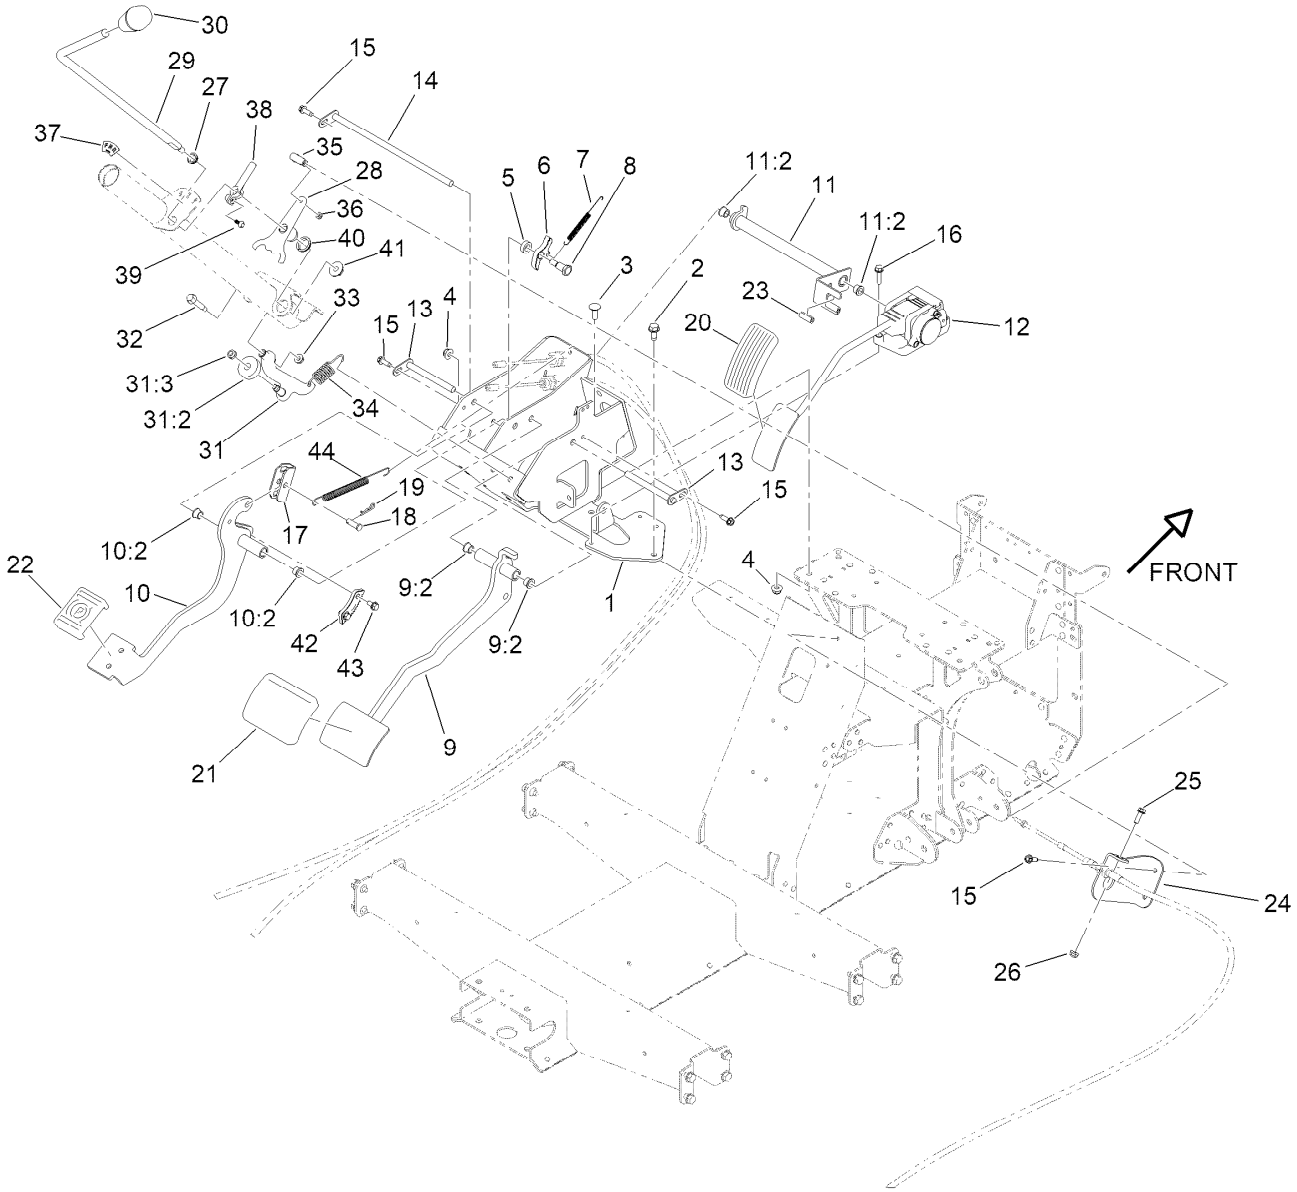

Pedal and Control Assembly (continued)


Ref.	Part Number	Qty.	Description
37	131-8463	1	Decal-Shift
38	163-3905	1	Indicator-Gear
39	121-9605	1	Screw-HWH
40	114-8893	1	Bushing-Clip
41	32128-30	1	Nut-HF
42	163-4966	1	Plate-Ratcheting
43	119-1065	2	Screw-Lock,HF
44	163-4978	1	Spring-Extension

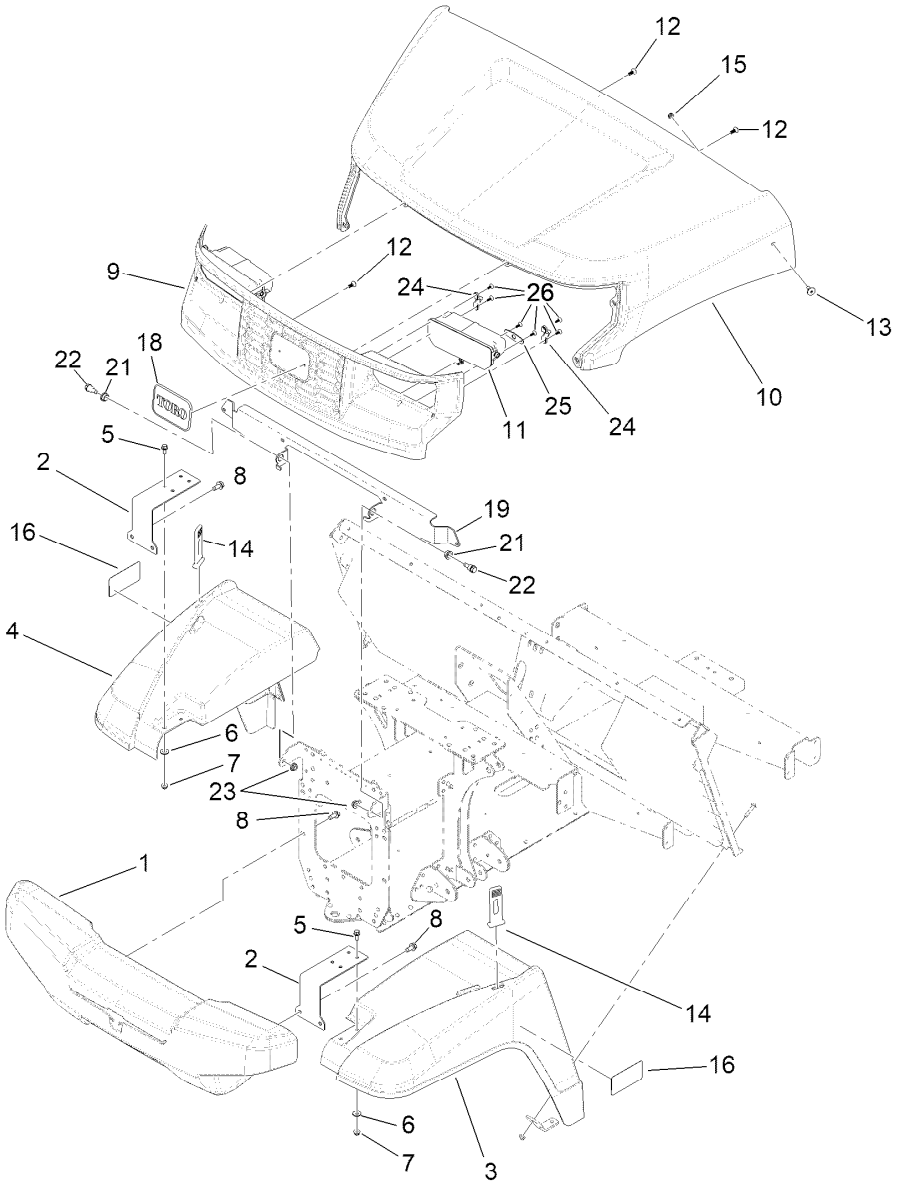

Hood and Fender Assembly

Ref.	Part Number	Qty.	Description
1	163-5190	1	Bumper-Front, Armor
2	163-5101-03	2	Bracket-Fender
3	127-7771	1	Fender-Front, LH
4	127-7772	1	Fender-Front, RH
5	3234-33	4	Screw-HHF
6	3256-2	4	Washer-Flat
7	104-7201	4	Nut-HF, NI
8	32144-70	8	Screw-HWHTF
9	163-5185	1	Grille-Front, Ltx
10	163-5195	1	Hood-Ltx
11	163-5102	2	Headlight ASM
12	138-5775	8	Screw-Delta Point


Ref.	Part Number	Qty.	Description
13	136-7182	2	Screw-Countersunk, Oval
14	131-8402	2	Strap-Down, Hold
15	3296-56	2	Nut-Lock, NI
16	163-9450	2	Emblem-Ltx, EFI
18	144-2294	1	Emblem-Toro
19	164-4653-03	1	Brace-Hood
21	256-156	2	Bushing-Flange
22	115-1958	2	Bolt-Shoulder
23	32128-20	2	Nut-HF
24	163-5172	4	Retainer-Headlight, Ltx
25	163-5182	2	Plate-Headlight Adjuster
26	139-3430	12	Screw-Bhf

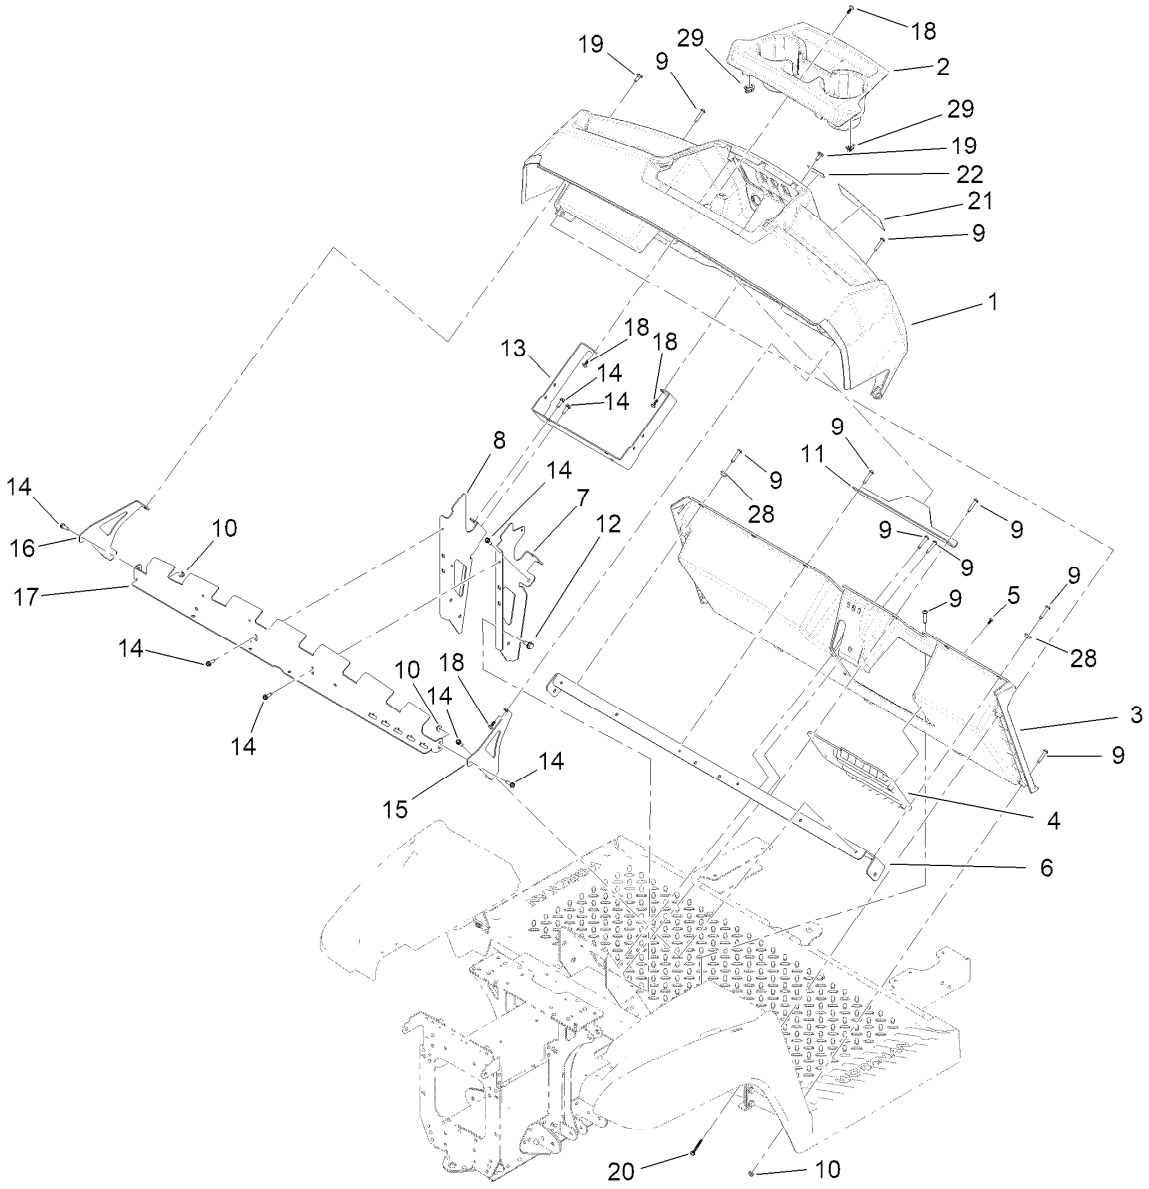

Dash Assembly

Ref.	Part Number	Qty.	Description
1	163-5088	1	Dash
2	163-5091	1	Cupholder
3	161-5491	1	Footboard-Trim
4	163-5106	1	Cover-Footboard
5	107-7461	2	Screw-Plastite
6	163-9455-03	1	Bracket-Dash, Support
7	163-5089-03	1	Bracket-Dash, LH
8	163-5090-03	1	Bracket-Dash, RH
9	132-6777	14	Screw-Twh Thd Roll
10	104-7201	4	Nut-HF, NI
11	163-5093-03	1	Bracket-Dash, Lower
12	32144-70	4	Screw-HWHTF


Ref.	Part Number	Qty.	Description
13	163-5092-03	1	Bracket-Dash, Upper
14	49-2040	12	Screw-HWHTF
15	164-4556-03	1	Bracket-Dash, LH
16	164-4557-03	1	Bracket-Dash, RH
17	163-5096-03	1	Support-Dash
18	138-5775	4	Screw-Delta Point
19	120-7950	2	Screw-Torx
20	137-3012	2	Screw-Plastite, HWH
21	163-9306	1	Decal-Operation, Gas
22	163-9302	1	Decal-Ignition, Gas
28	163-5097	2	Spacer-Plastic
29	140-9908	2	Clip-Trim

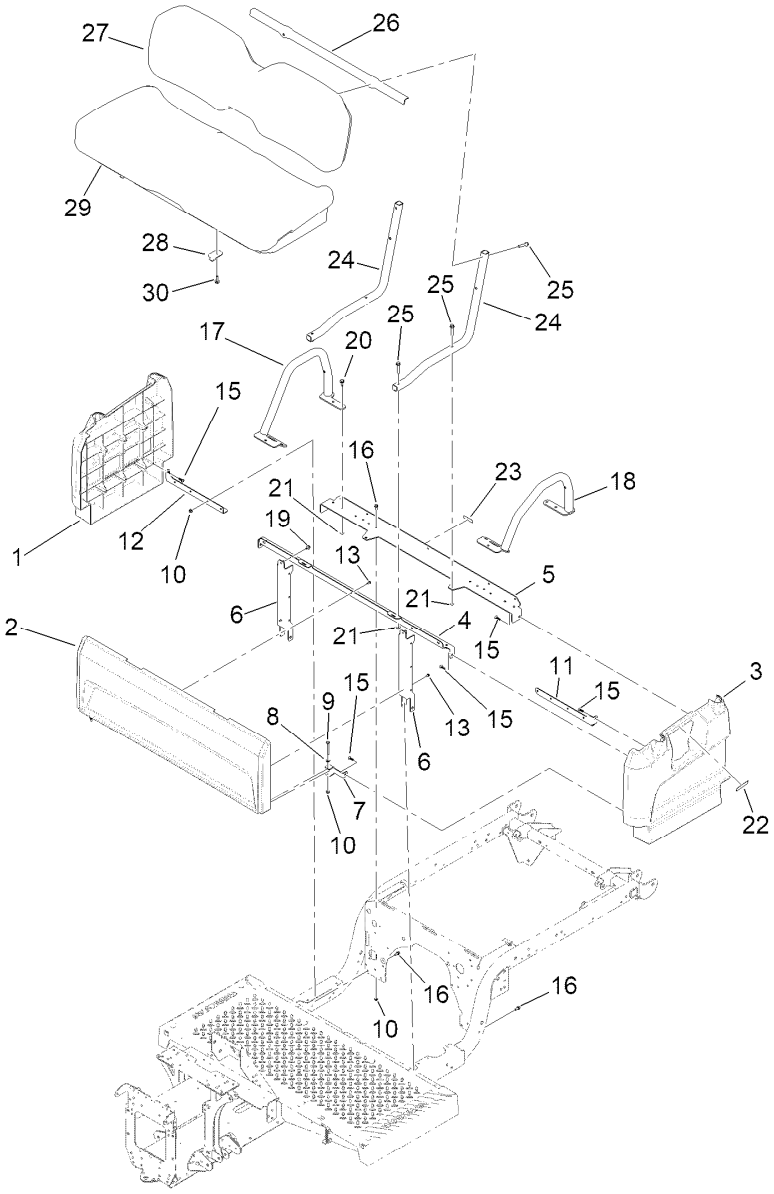

Seatbase Assembly

Ref.	Part Number	Qty.	Description
1	163-9459	1	Panel-Seatbase, RH
2	133-7188	1	Panel-Base, Seat
3	163-9460	1	Panel-Seatbase, LH
4	163-3765-03	1	Support-Front, Seat
5	163-5086-03	1	Support-Rear, Seat
6	127-7841-03	2	Channel-Support, Seat
7	127-7844-03	2	Clamp-Plate, Floor
8	3256-22	2	Washer-Flat
9	321-18	2	Screw-HH
10	104-7201	8	Nut-HF, NI
11	163-9430-03	1	Bracket-Support, LH
12	127-7843-03	1	Bracket-Support, Side (RH)
13	112-6349	5	Screw-HWH
15	120-2349	8	Screw
16	3234-33	6	Screw-HHF


Ref.	Part Number	Qty.	Description
17	145-2075-05	1	Hip Restraint ASM, RH
18	145-2070-05	1	Hip Restraint ASM, LH
19	46-6810	2	Screw And Washer ASM
20	32144-70	6	Screw-HWHTF
21	119-4041	10	Nut-HF
22	131-8410	1	Decal-Danger, Fuel
23	120-9570	1	Decal-Warning
24	163-5087-05	2	Tube-Seat
25	145-7105	8	Screw-HHF
26	163-5058-05	1	Stiffener-Seat, Back
27	163-3763	1	Seat Backrest ASM
28	140-0812	2	Bracket-Hinge, Seat
29	163-3762	1	Seat Bottom ASM
30	115-5142	2	Screw-HHF, Patch

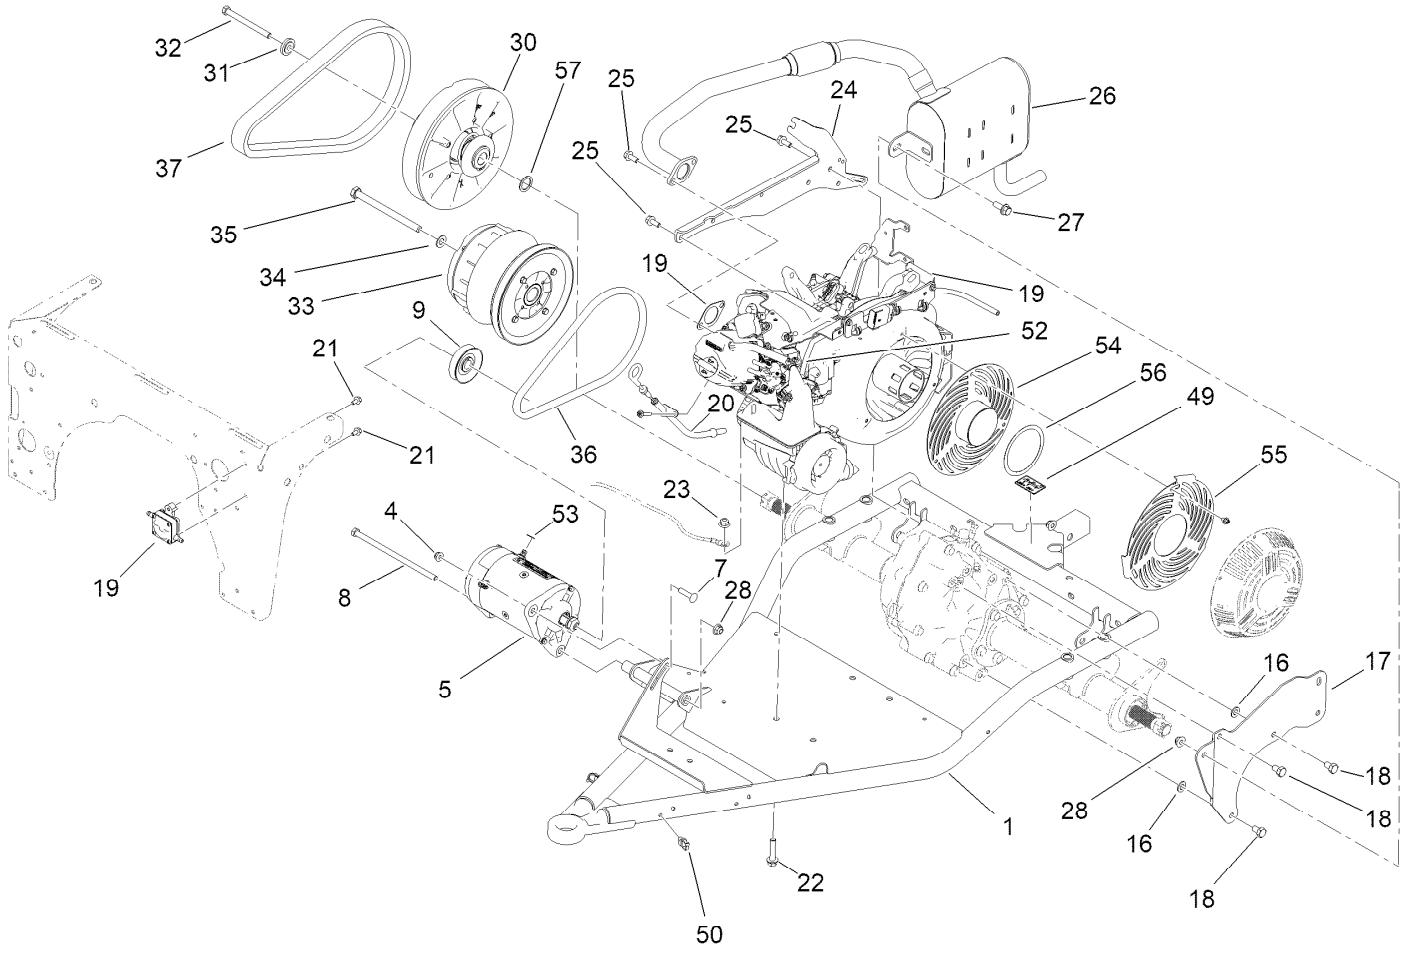

Engine Assembly

Ref.	Part Number	Qty.	Description
1	163-3715-03	1	Swingarm ASM [black]
4	119-4041	1	Nut-HF
5	131-8444	1	Starter/Generator ASM
7	112-6950	1	Screw-CARR
8	323-30	1	Screw-HH
9	140-9821	1	Pulley-Drive
16	33095-00	2	Washer-Flat
17	164-4536	1	Bracket-Muffler
18	70-8470	3	Screw-HH
19	163-3707	1	Engine-Briggs
20	163-3728	1	Dipstick Tube ASM
21	33103-012	2	Screw-HHF
22	140-4808	4	Screw-HHF
23	139-3380	4	Nut-HF
24	147-3900	1	Plate-Spanner
25	139-3392	7	Screw-Lock
26	164-4540	1	Exhaust ASM
27	3234-42	3	Screw-HHF


Ref.	Part Number	Qty.	Description
28	119-4042	4	Nut-HF, NI
30	119-6011	1	Secondary Clutch ASM
31	104-6563	1	Washer-Stepped
32	119-0723	1	Screw-HH, Lock
33	138-0095	1	Primary Clutch ASM
34	3256-25	1	Washer-Flat
35	131-8521	1	Screw-HH
36	113105	1	Belt-V
37	131-8567	1	Belt-Variable
49	137-9984	1	Decal-Load, Towing
50	32180-030	2	Clip-Tie
52	3290-378	3	Tie-Cable
53	32180-535	1	Terminal-Tab
54	163-9498	1	Inner Shroud ASM
55	163-9493	1	Shroud-Outer
56	164-4535	1	Decal-Wear
57	1-303352	1	Washer-Spindle

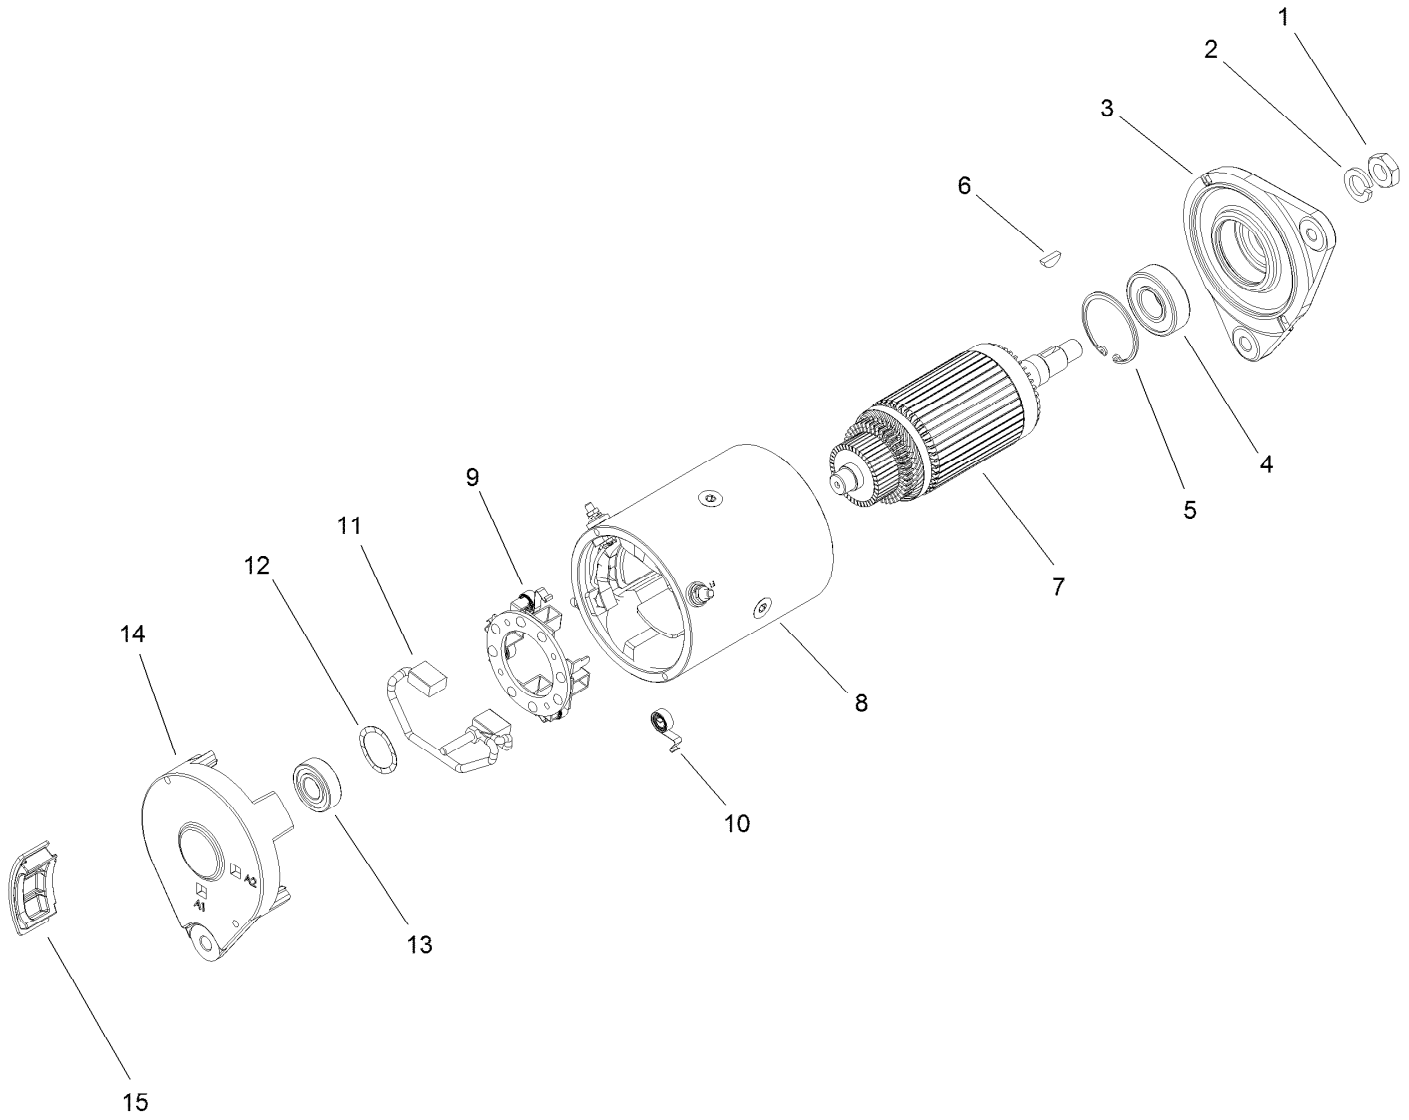

Starter Generator Assembly No. 131-8444


Ref.	*Part Number*	*Qty.*	*Description*
1	119-9651	1	Nut
2	119-9652	1	Washer-Lock
3	133-0599	1	Head-Drive End
4	119-9655	1	Bearing
5	119-9656	1	Ring-Retaining
6	119-9657	1	Key-Woodruff
7	119-9658	1	Armature ASM
8		1	Frame And Field Assembly ●
9	119-9661	1	Brush Box ASM
10	119-9660	4	Spring-Brush
11	119-9659	1	Brush Lead And Terminal Service Kit
12	119-9662	1	Washer-Wave
13	119-9663	1	Bearing
14		1	Head-End, Cummutator ●
15	133-0600	4	Plug-Rubber

● Not serviced separately

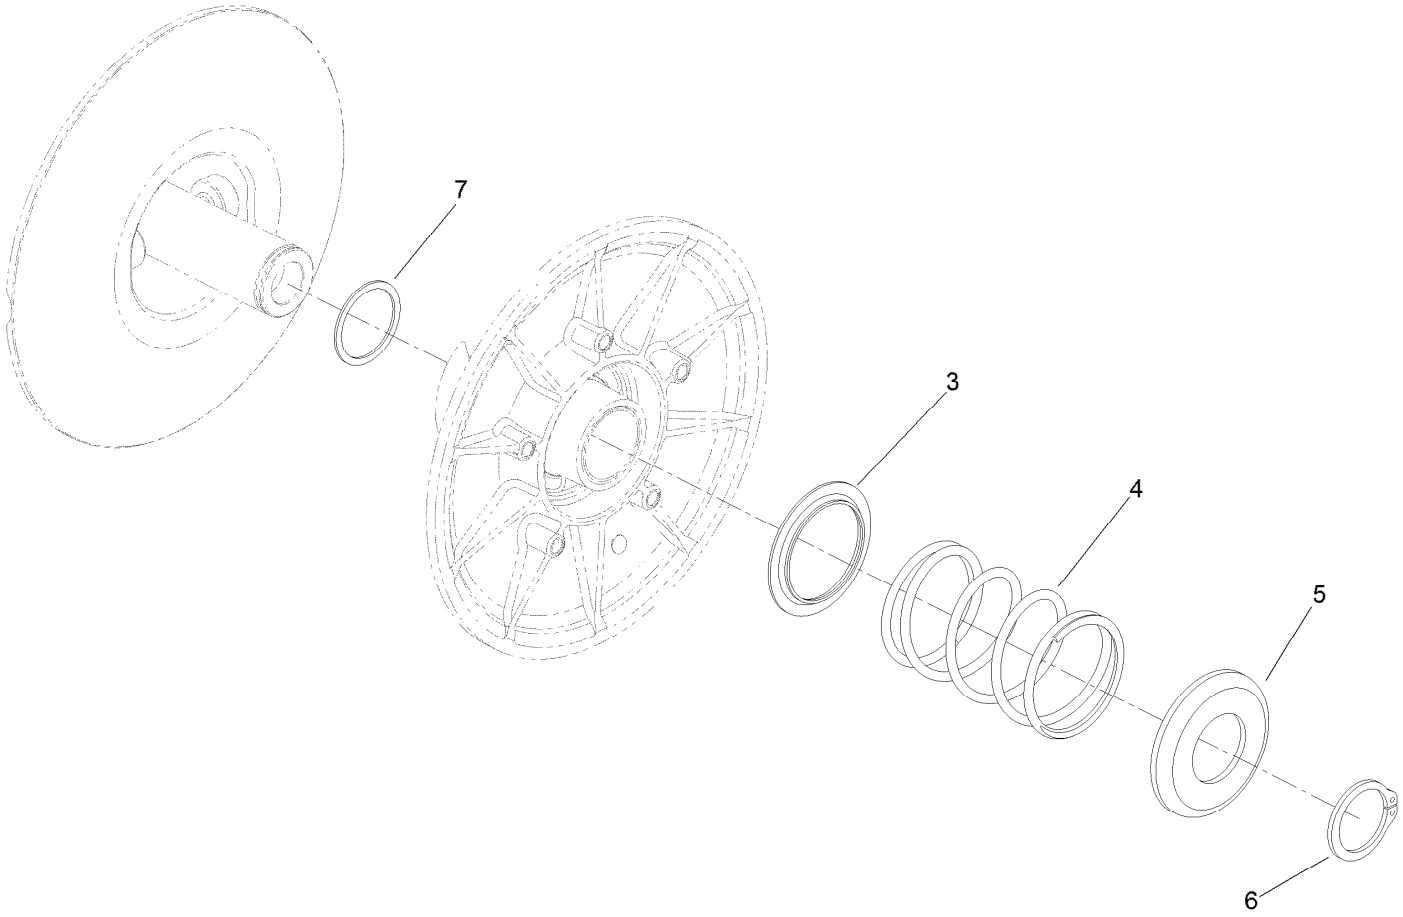


Secondary Clutch Assembly No. 119-6011

Ref.	*Part Number*	*Qty.*	*Description*
3	119-0809	1	Cup-Spring Retainer, Inner
4	119-9360	1	Spring-Compression, Black/Almond
5	119-0810	1	Cup-Spring Retainer, Outer
6	119-0811	1	Ring-Retaining
7	119-6018	1	Shim-Thrust

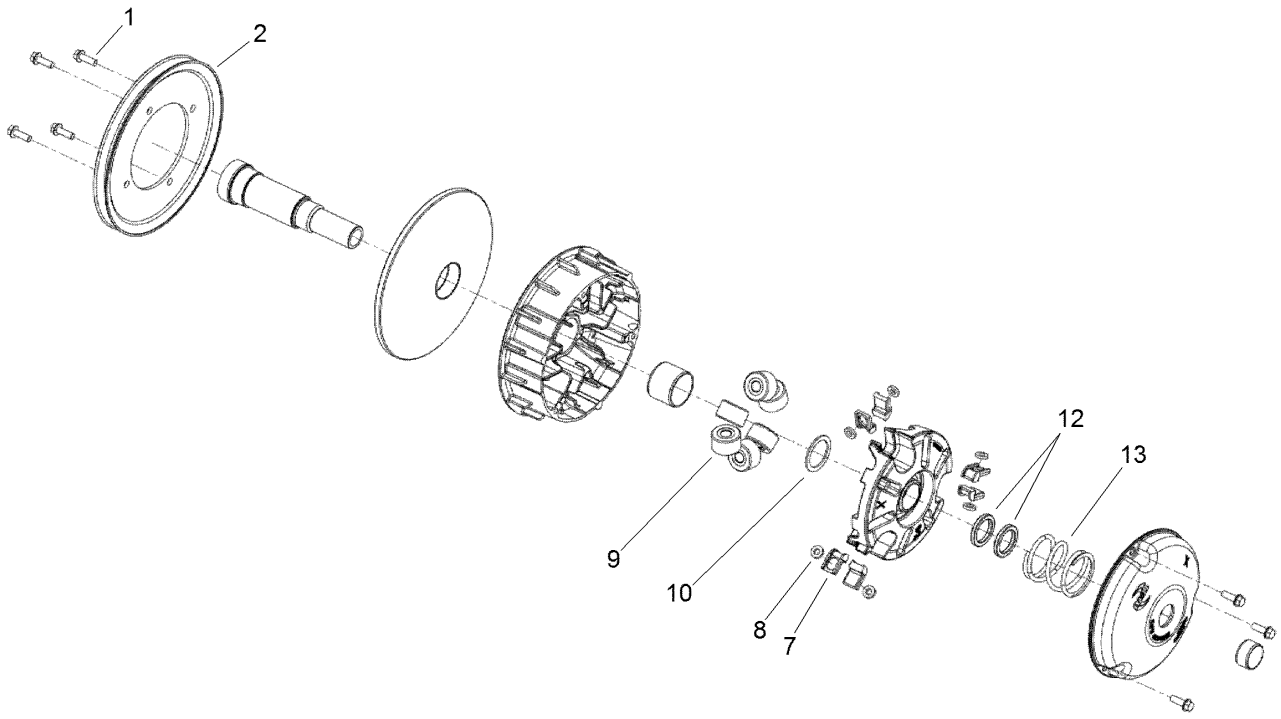

Primary Clutch Assembly No. 138-0095

Ref.	*Part Number*	*Qty.*	*Description*
1	49-2040	7	Screw-HWHTF
2	119-0813	1	Pulley-Primary
7	127-8689	6	Button-Primary, Torque
8	127-8690	6	Plug-Button, Torque
9	119-0804	6	Weight-Roller
10	119-0812	1	Shim-Spider
12	119-0807	2	Shim-Limiter
13	119-9532	1	Spring-Red/White

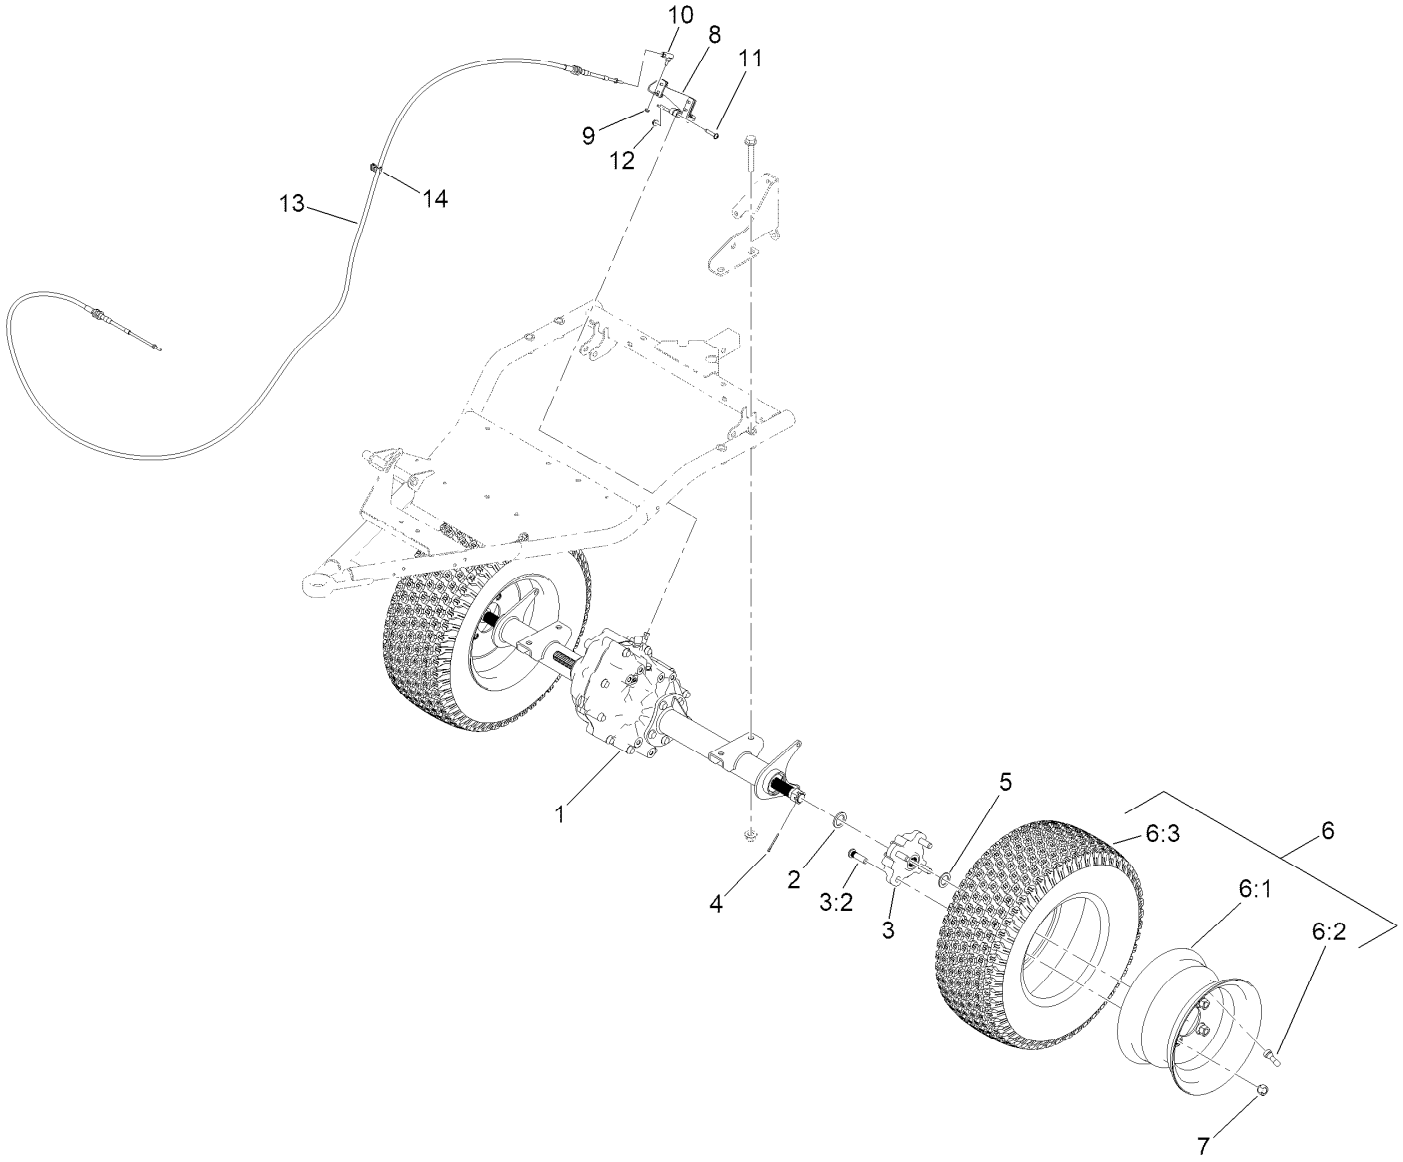


Transaxle Assembly

Ref.	Part Number	Qty.	Description
1	131-3486	1	Transaxle
2	131-8570	2	Spacer-Hardened
3	140-9951	2	Rear Hub ASM
3:2	10-6830	4	Stud-Type, Drive
4	1-806800	2	Pin-Cotter
5	3-7898	2	Washer-Thrust
6	147-2761	2	Wheel And Tire ASM
6:1	147-2762	1	Wheel
6:2	139-4475	1	Tire-20 X 8.00-10
6:3	232-27	1	Stem-Valve

Ref.	Part Number	Qty.	Description
7	139-2564	8	Nut-Lug
8	133-7260-03	1	Arm-Shift
9	3296-27	1	Nut-Lock, NI
10	2411-38	1	Joint-Ball
11	132-6777	1	Screw-Twh Thd Roll
12	104-7201	1	Nut-HF, NI
13	127-8897	1	Cable-Shift
14	32180-225	1	Clip-Edge, Top-Perpendicular


Transaxle Assembly No. 131-3486

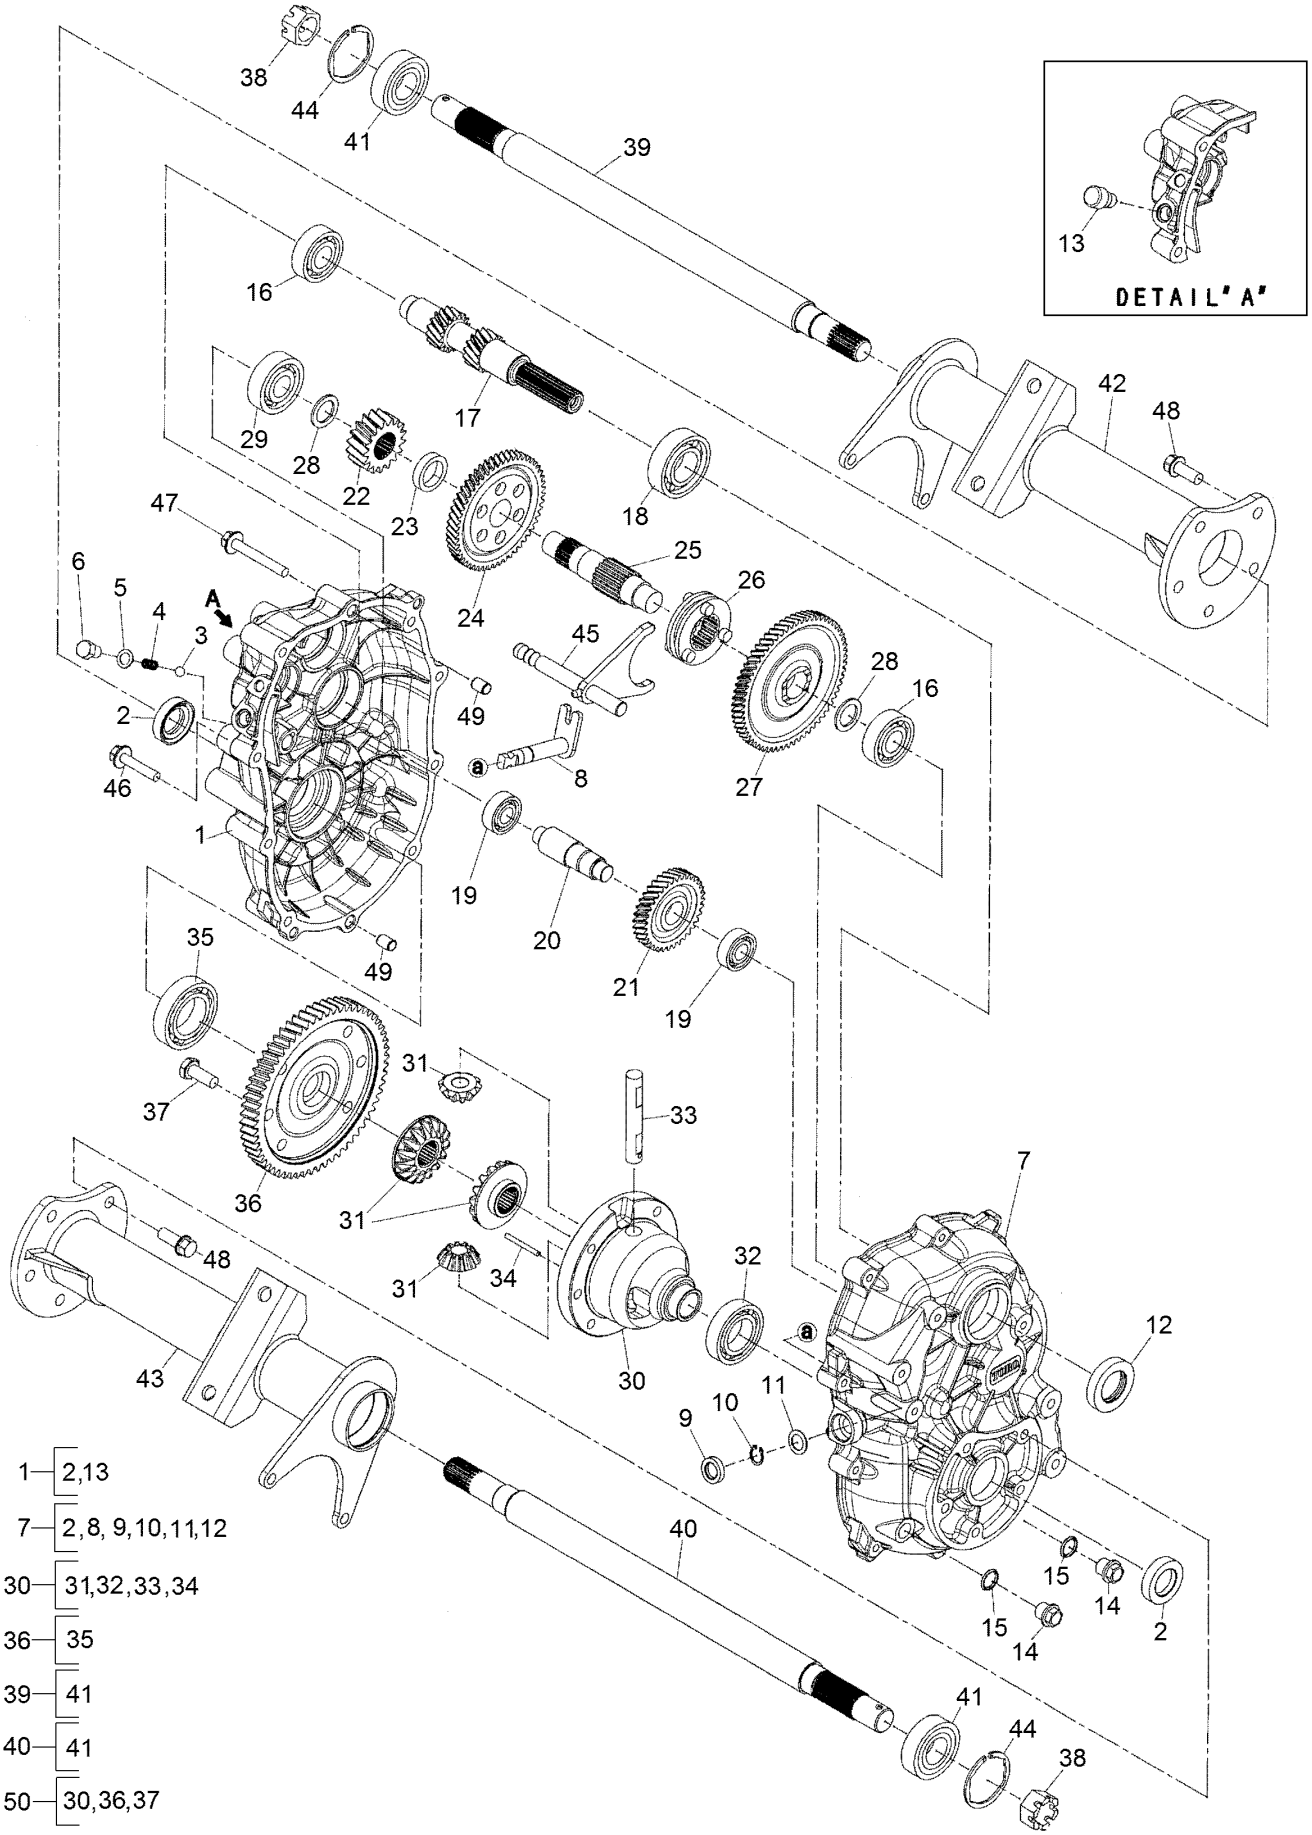

Transaxle Assembly No. 131-3486 (continued)

Ref.	Part Number	Qty.	Description
1	133-2400	1	Case-LH
2	133-2401	2	Seal-Oil
3	104-1660	1	Ball-Steel
4	104-1661	1	Spring
5	104-1662	1	Gasket
6	163-9434	1	Bolt M10
7	133-2402	1	Case-RH
8	133-2403	1	Shaft-Select
9	133-2446	1	Seal-Oil
10	133-2404	1	Ring-Snap
11	133-2405	1	Spacer
12	104-1607	1	Seal-Oil
13	133-2406	1	Breather-Air
14	133-2407	2	Plug-Drain, Oil
15	133-2408	2	Gasket
16	133-2409	2	Bearing-Ball
17	133-2410	1	Shaft-Input
18	133-2411	1	Bearing-Ball
19	133-2412	2	Bearing-Ball
20	133-2413	1	Shaft-Counter
21	133-2414	1	Gear
22	133-2415	1	Gear
23	133-2416	1	Collar
24	133-2417	1	Gear
25	133-2418	1	Shaft-Center
26	133-2419	1	Clutch-Pin
27	133-2420	1	Gear
28	133-2421	2	Spacer
29	133-2422	1	Bearing-Ball
30	133-2423	1	Case-Differentail
31	133-2424	1	Set-Gear, Differential
32	133-2425	1	Bearing-Ball
33	104-1644	1	Shaft-Differential
34	104-1645	1	Pin
35	133-2426	1	Bearing-Ball
36	133-2427	1	Gear
37	104-1649	6	Bolt
38	133-2428	2	Nut-Castle
39	133-2429	1	Shaft-Axle, LH
40	133-2430	1	Shaft-Axle, RH
41	133-2431	2	Bearing-Ball
42	133-2432	1	Case-Axle, LH
43	133-2433	1	Case-Axle, RH
44	133-2434	2	Ring-Snap
45	133-2435	1	Shaft-Shift
46	133-2436	1	Bolt-Flange
47	133-2437	9	Bolt-Flange
48	133-2438	10	Bolt-Flange
49	133-2439	2	Pipe-Knock
50	133-2440	1	Differential ASM


Battery Assembly

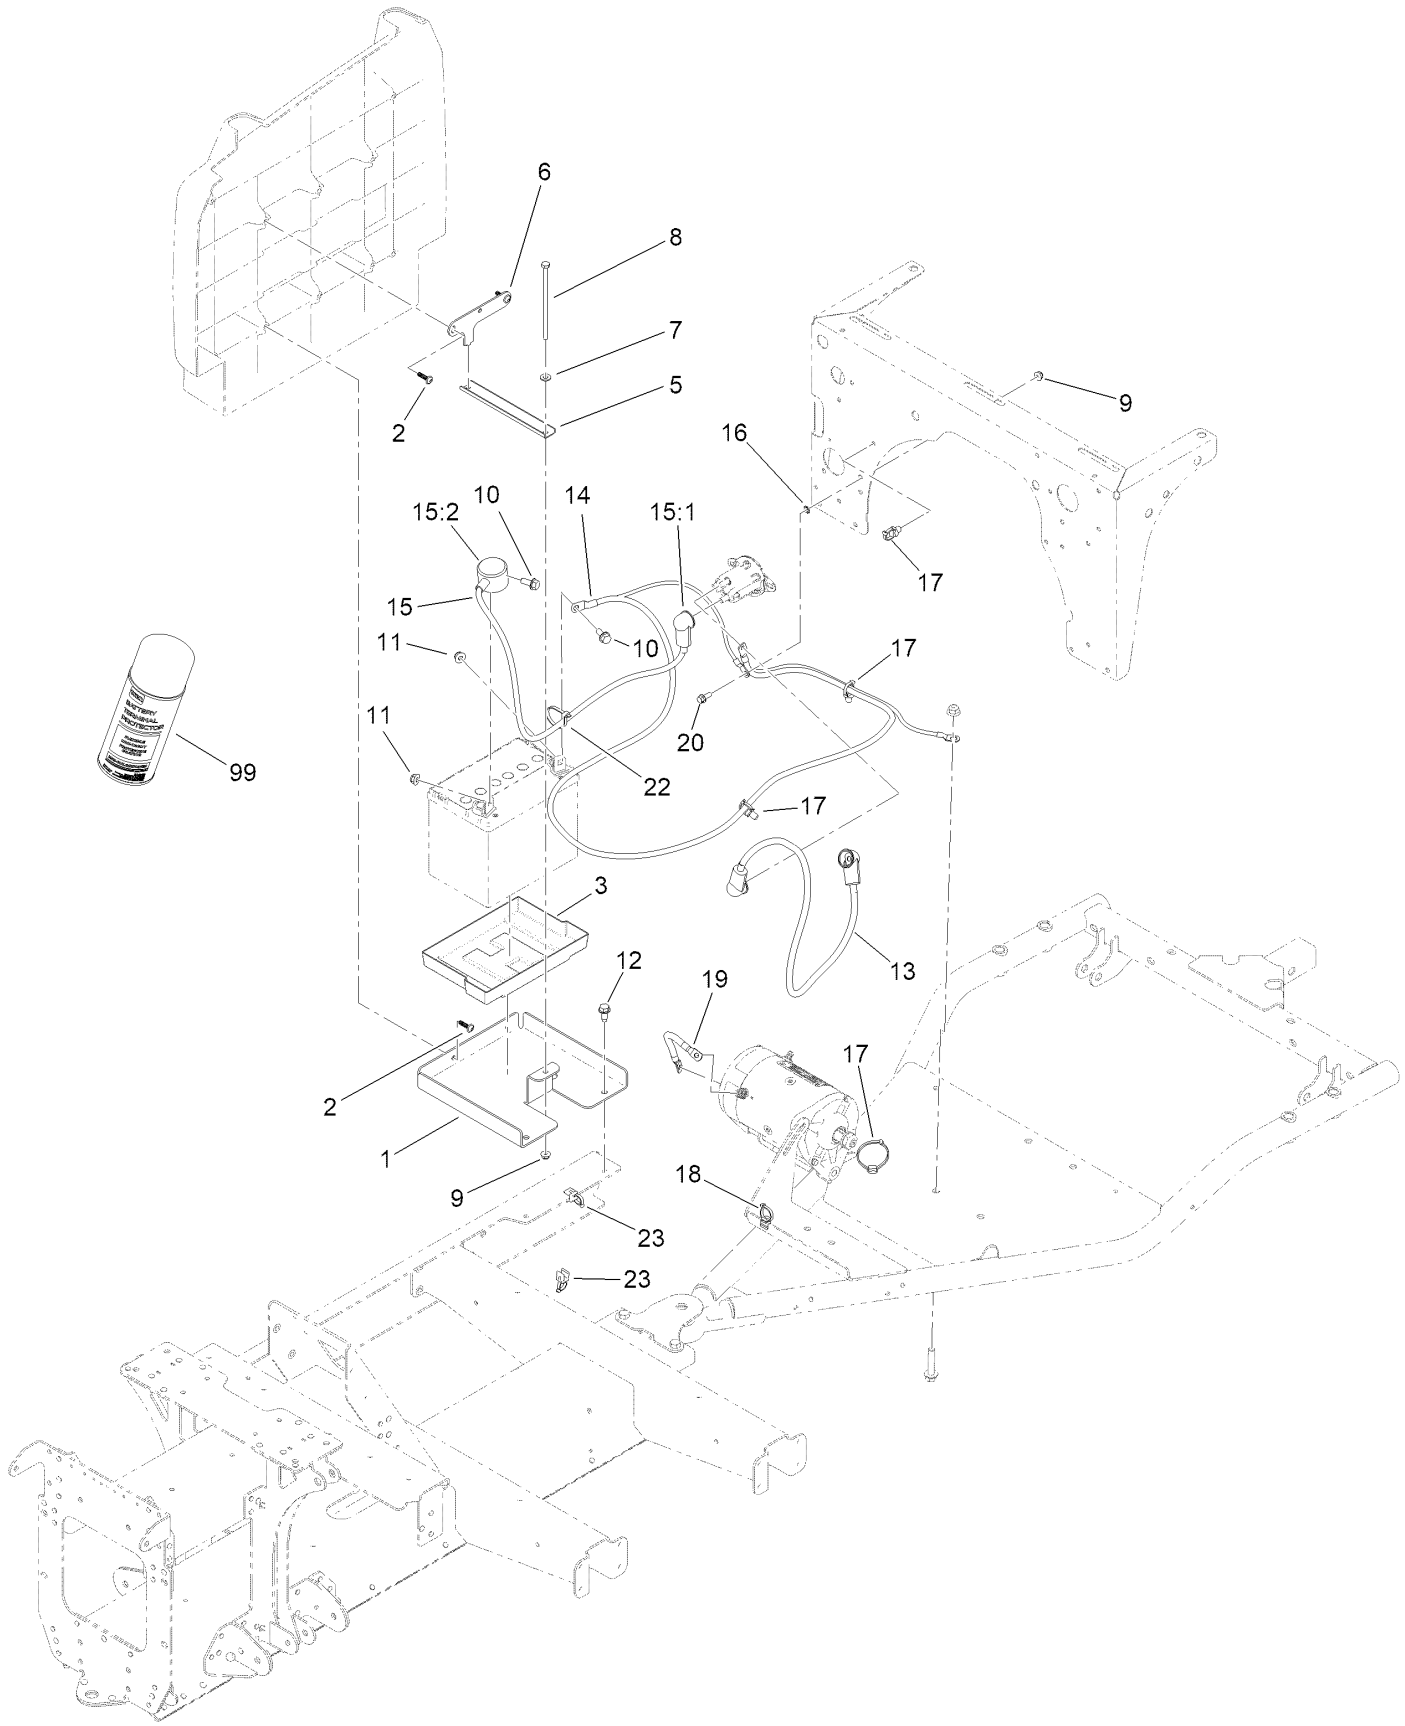

Battery Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-7810-03	1	Base-Battery
2	120-2349	4	Screw
3	106948	1	Tray-Battery
5	127-7816-03	1	Channel-Clamp, Battery
6	127-7814-03	1	Plate-Clamp, Battery
7	3256-22	1	Washer-Flat
8	321-47	1	Screw-HH
9	104-7201	2	Nut-HF, NI
10	3234-5	2	Screw-HHF
11	119-4041	2	Nut-HF
12	32144-70	2	Screw-HWHTF
13	163-3903	1	Battery-Cable, Positive ASM
14	163-3904	1	Battery-Cable, Negative ASM
15	109-7621	1	Positive Battery Cable ASM
15:1	1-543393	1	Insulator-Solenoid
15:2	109-2407	1	Insulator-Battery
16	3255-7	1	Washer-Lock/EXT
17	32180-030	4	Clip-Tie
18	32180-225	1	Clip-Edge, Top-Perpendicular
19	163-3721	1	Cable-Battery, Bk
20	3234-33	1	Screw-HHF
22	3290-378	1	Tie-Cable
23	32180-082	2	Clip-Edge W/Tie, Perpendicular
99	107-0392	1	Protection-Terminal, Aerosol


Electrical Assembly

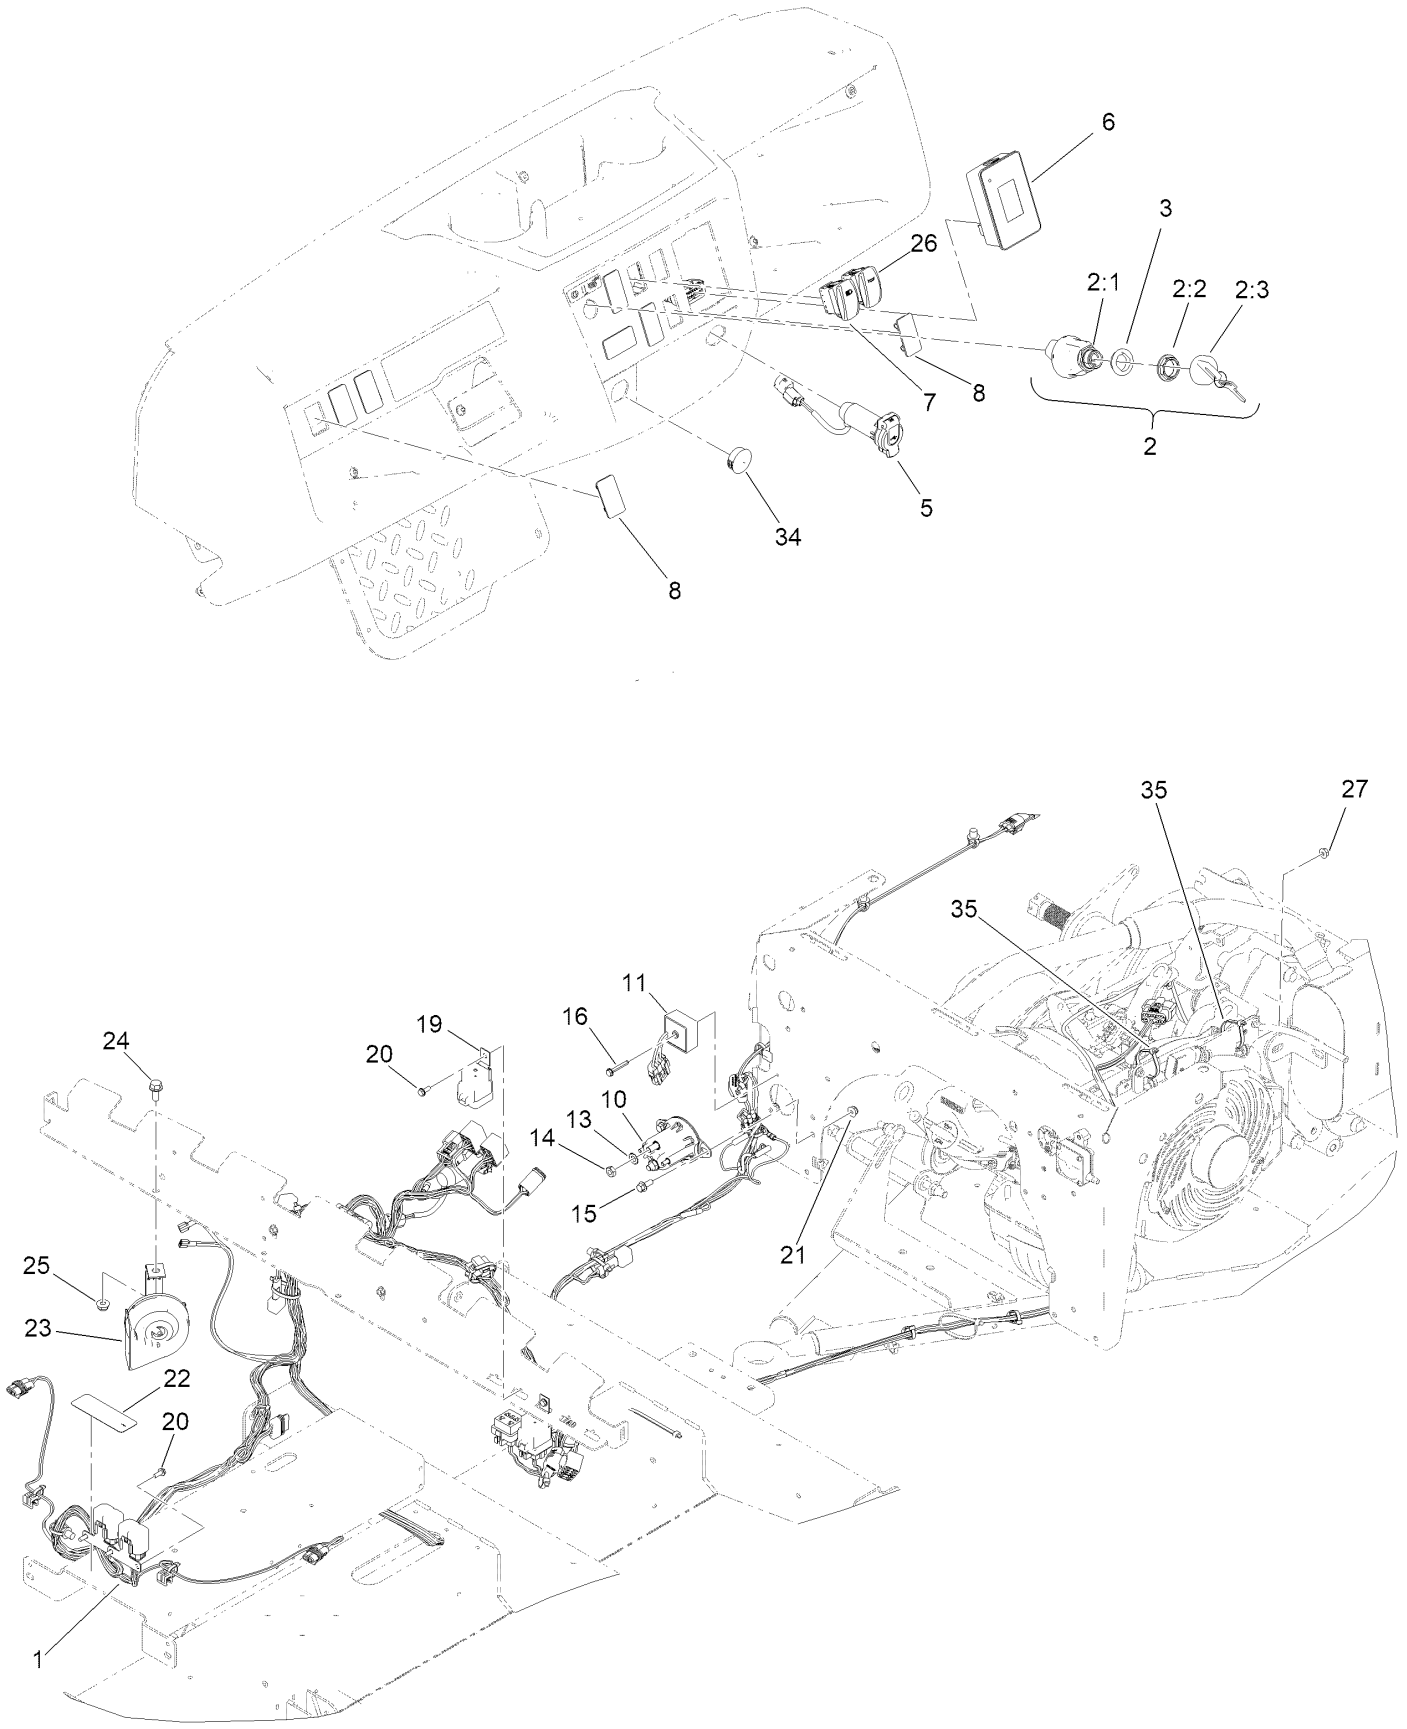

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	122-4157	1	Harness-Wire, Ltx, EFI
2	122-2513	1	Switch-Ignition, Suns
2:1	121-5160	1	Nut-Hex
2:2	122-2704	1	Nut-Face, M22 (Plastic)
2:3	121-5162	1	Set-Key, Ignition
3	145-7110	1	Adapter-Switch, Key
5	163-9341	1	Socket-USB
6	122-2152	1	Controller, Tdm-1601
7	144-2405	1	Switch-Rocker, On-None-On
8	99-7420	7	Plug-Hole
10	114-3315	1	Solenoid
11	119-9492	1	Regulator-Voltage
13	3255-8	2	Washer-Lock
14	3220-2	2	Nut-Hex Jam
15	3234-33	2	Screw-HHF
16	100-4352	1	Screw-HWH
19	99-7430	2	Relay-Mini
20	32144-1	5	Screw-Taptite
21	104-7201	2	Nut-HF, NI
22	163-9490	1	Decal-Fuse Block, EFI
23	110-2594	1	Horn
24	3234-5	1	Screw-HHF
25	119-4041	1	Nut-HF
26	144-2415	1	Switch-Rocker, (On)-None-Off
27	33003-00	1	Nut-HF
34	145-2160	1	Plug-Panel
35	3290-378	2	Tie-Cable

Fuel System Assembly

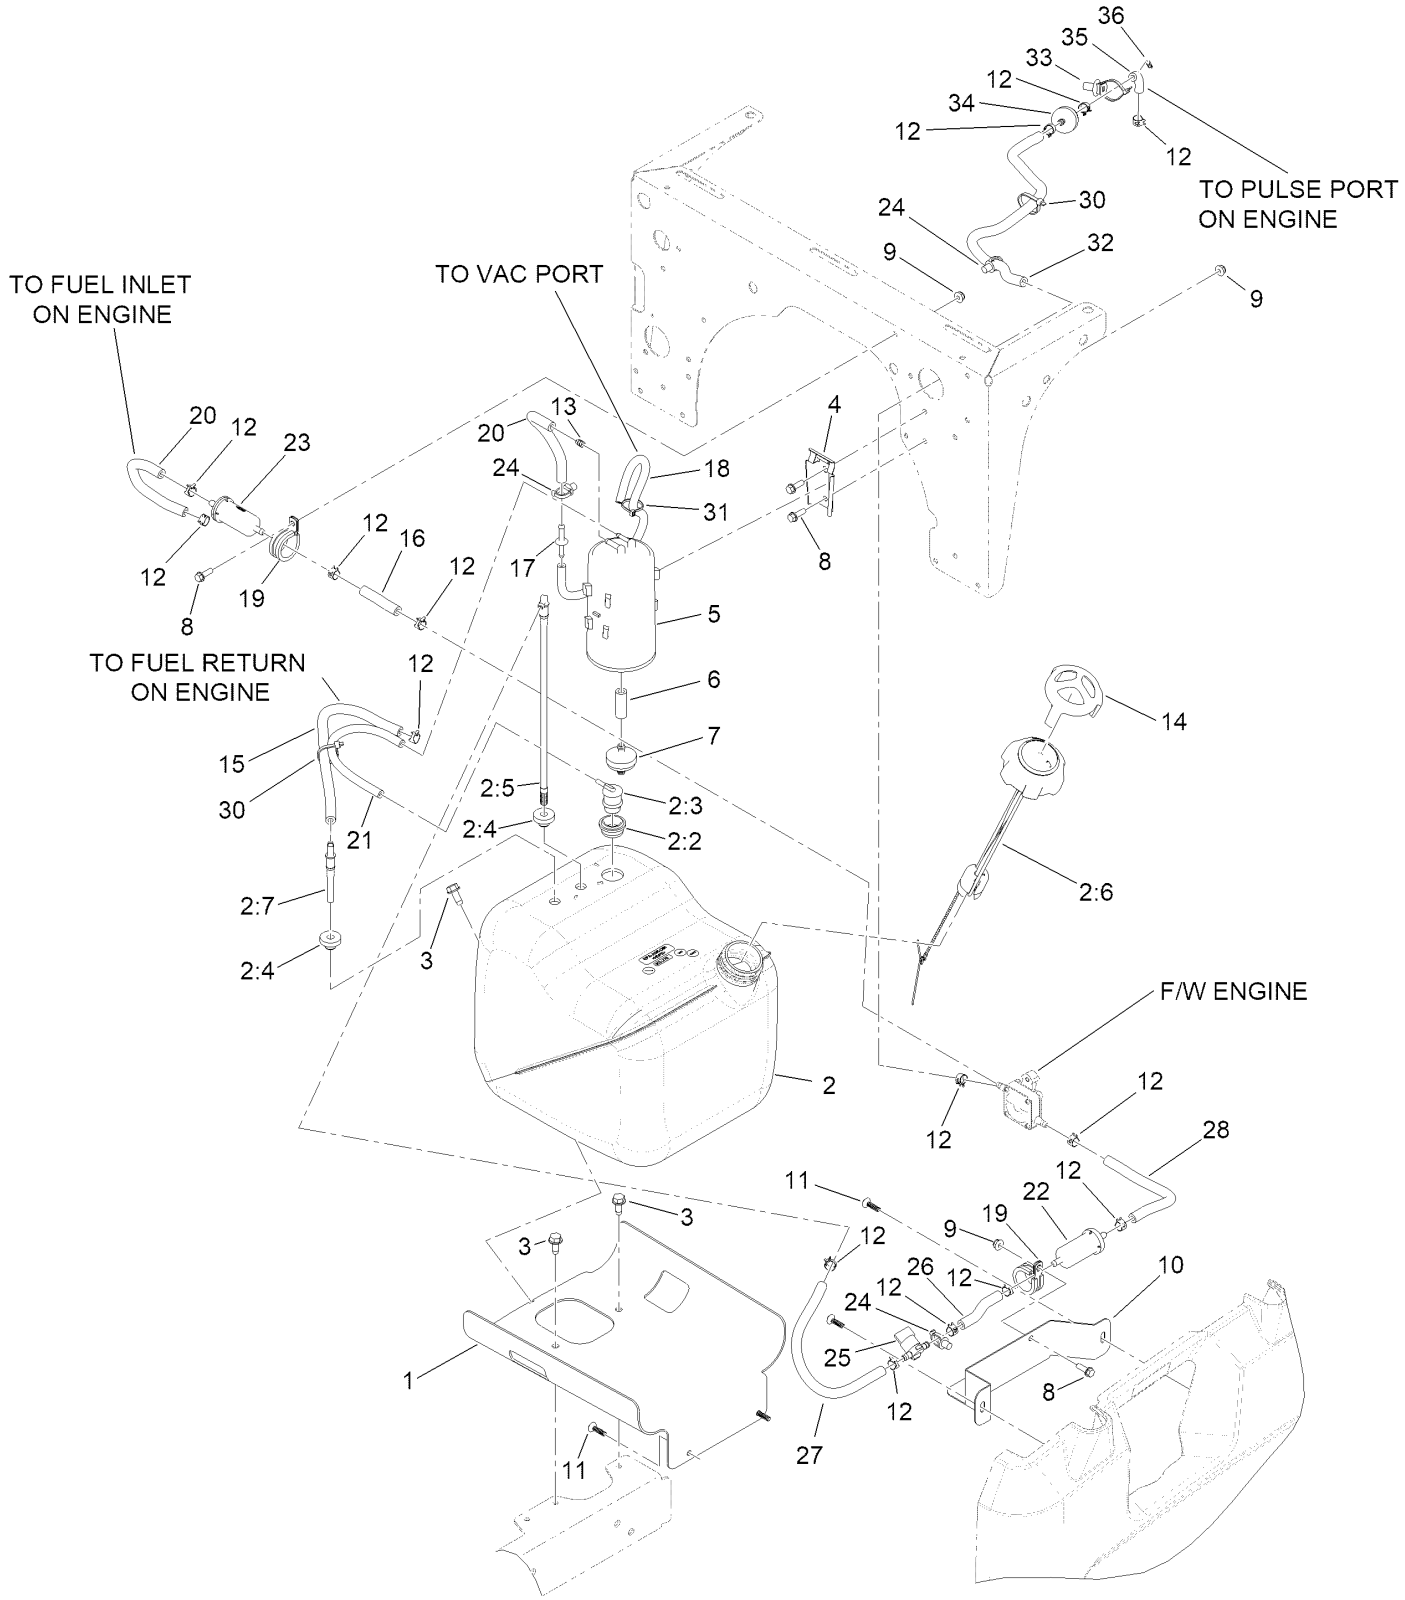

Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
1	127-7739-03	1	Mount-Tank, Fuel
2	163-3701	1	Fuel Tank ASM
2:2	114-0284	1	Grommet
2:3	114-0285	1	Valve-Rollover
2:4	46-6560	2	Bushing
2:5	115-9044	1	Pipe-Stand
2:6	131-8357	1	Cap-Gauge
2:7	145-7285	1	Fitting-Return, Fuel
3	32144-70	3	Screw-HWHTF
4	114-0292	1	Bracket-Canister, Carbon
5	127-8685	1	Canister-Carbon
6	106-5317	1	Hose-Fuel
7	115-7854	1	Filter-Fuel, Inline
8	32105-15	4	Screw-HWH
9	104-7201	4	Nut-HF, NI
10	163-3704-05	1	Bracket-Tank,Fuel
11	120-2349	4	Screw
12	2412-98	16	Clamp-Hose
13	120-2038	1	Valve-Check, Cartridge
14	147-2833	1	Cover-Fuel Cap
15	110-3255	1	Hose-Fuel
16	109-0304	1	Hose-Fuel
17	117-5399	1	Adaptor-Orifice
18	135-3950	1	Hose-Fuel
19	120-2037	2	R-Clamp
20	109-0303	2	Hose-Fuel
21	163-3713	1	Hose-Fuel
22	145-7283	1	Filter-Fuel, 30 Micron
23	145-7282	1	Filter-Fuel, 10 Micron
24	32180-030	3	Clip-Tie
25	1-603770	1	Valve-Fuel
26	144-5368	1	Hose-Fuel
27	120-4370	1	Hose-Fuel
28	109-0293	1	Hose-Fuel
30	3290-378	3	Tie-Cable
31	1-303287	1	Tie-Cable
32	110-5701	1	Hose-Fuel
33	32180-031	1	Clip-Tree (W/Tie)
34	56-6360	1	Filter-Fuel
35	140-4825	1	Hose-Pulse (.212 X 5.00, J200, LP)
36	164-4545	1	Baffle-Pulse

Attachments and Accessories

For 07424 — Workman LTX EFI Utility Vehicle

Product Name	Model/Part
Trash Can Mounting Kit	07028
Bed Rack Kit	07031
Cargo Bed Kit	07046
Extension Kit	07049
Cab Kit	07142
12V Electric Lift Kit	07144
Door Kit	07150
12V Electric Bed Lift Kit	07167
Canopy W/ ROPS	07169
Rear Attachment Receiver, Workman GTX Series Utility Vehicle with Steel Cargo Bed	07186
Canopy Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed	07199
Secondary Rear Receiver, Workman GTX	07285
Windshield and Wiper Kit, Workman GTX Utility Vehicle	07407
Lift Kit	07414
Seat Kit - Workman LTX	07426
Brush Guard - Workman LTX	07427
Armature Assembly-L Pin	07428
LTX Ball Cage ROPS Certified	07429
Workman LTX - Front Hitch W/Brush Guard	07431
Steel Cargo Bed Base	07450
Steel Cargo Bed Solid Sides Kit	07451
Workman GTX 2-Person Canopy	07921
Folding Windshield Kit, Workman GTX Utility Vehicle with Canopy	07923
Center Bed Racking - GTX	08147
Side Bed Racking, Workman UTX/MDX/GTX	08148
Tire-20 8.00-10	116-7333
Shim-Limiter	119-0807
Exterior Mirror Kit	130-5448
Interior Mirror Kit	130-5449
Beacon Kit	130-5484
Work Light Kit	130-5485
Windshield Washer Fluid Kit, 2015 and after Workman MD/HD Series Utility Vehicle	130-5615
Tire/Wheel Asm	131-8319
Wide Angle Mirror Kit, Utility Vehicle with Canopy	133-1009
Wide Angle Mirror Kit	133-1038
Class 1 Draw Bar Kit	133-3095
Door Mount Mirror Kit	136-1997
Small Bedrack Mount Grip Kit	136-6311
Large Bedrack Mount Grip Kit	136-6312
Universal Wireless Hourmeter Kit	144-2436
Lithium Homologation Kit	163-9390
12v Power Point Kit, Workman LTX or LTX Lithium Utility Vehicle	163-9395
Reverse Alarm Kit, Workman GTX Utility Vehicle	163-9396
Ram Ball Mount Kit	163-9494
Brake and Signal Light Kit, Workman LTX Utility Vehicle	163-9495

Attachments and Accessories (continued)

Cab Mount Kit, Workman LTX Utility Vehicle	164-4541
Seat Conversion Kit	164-4550
Tire	94-5236

Notes:

Notes:



Count on it.