Form No. 3482-745 Rev B

TORO®

Count on it.

Parts Catalog

# Ultra Buggy® e2500-THL

**Model No. 68142—Serial No. 420600000 and Up**

Register at www.Toro.com.
Original Instructions (EN)

CE

*3482-745* B

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents


Frame Assembly . . . . . 4
Hydraulic Assembly . . . . . 6
Battery Assembly . . . . . 8
Tower and Hood Assembly . . . . . 10
Track Assembly . . . . . 12
Tub Assembly . . . . . 14
Electrical Assembly . . . . . 16
Control Assembly No. 163-2672 . . . . . 18
Lift Assembly . . . . . 20
Platform Assembly . . . . . 22
Attachments and Accessories . . . . . 24

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420



Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


# Frame Assembly

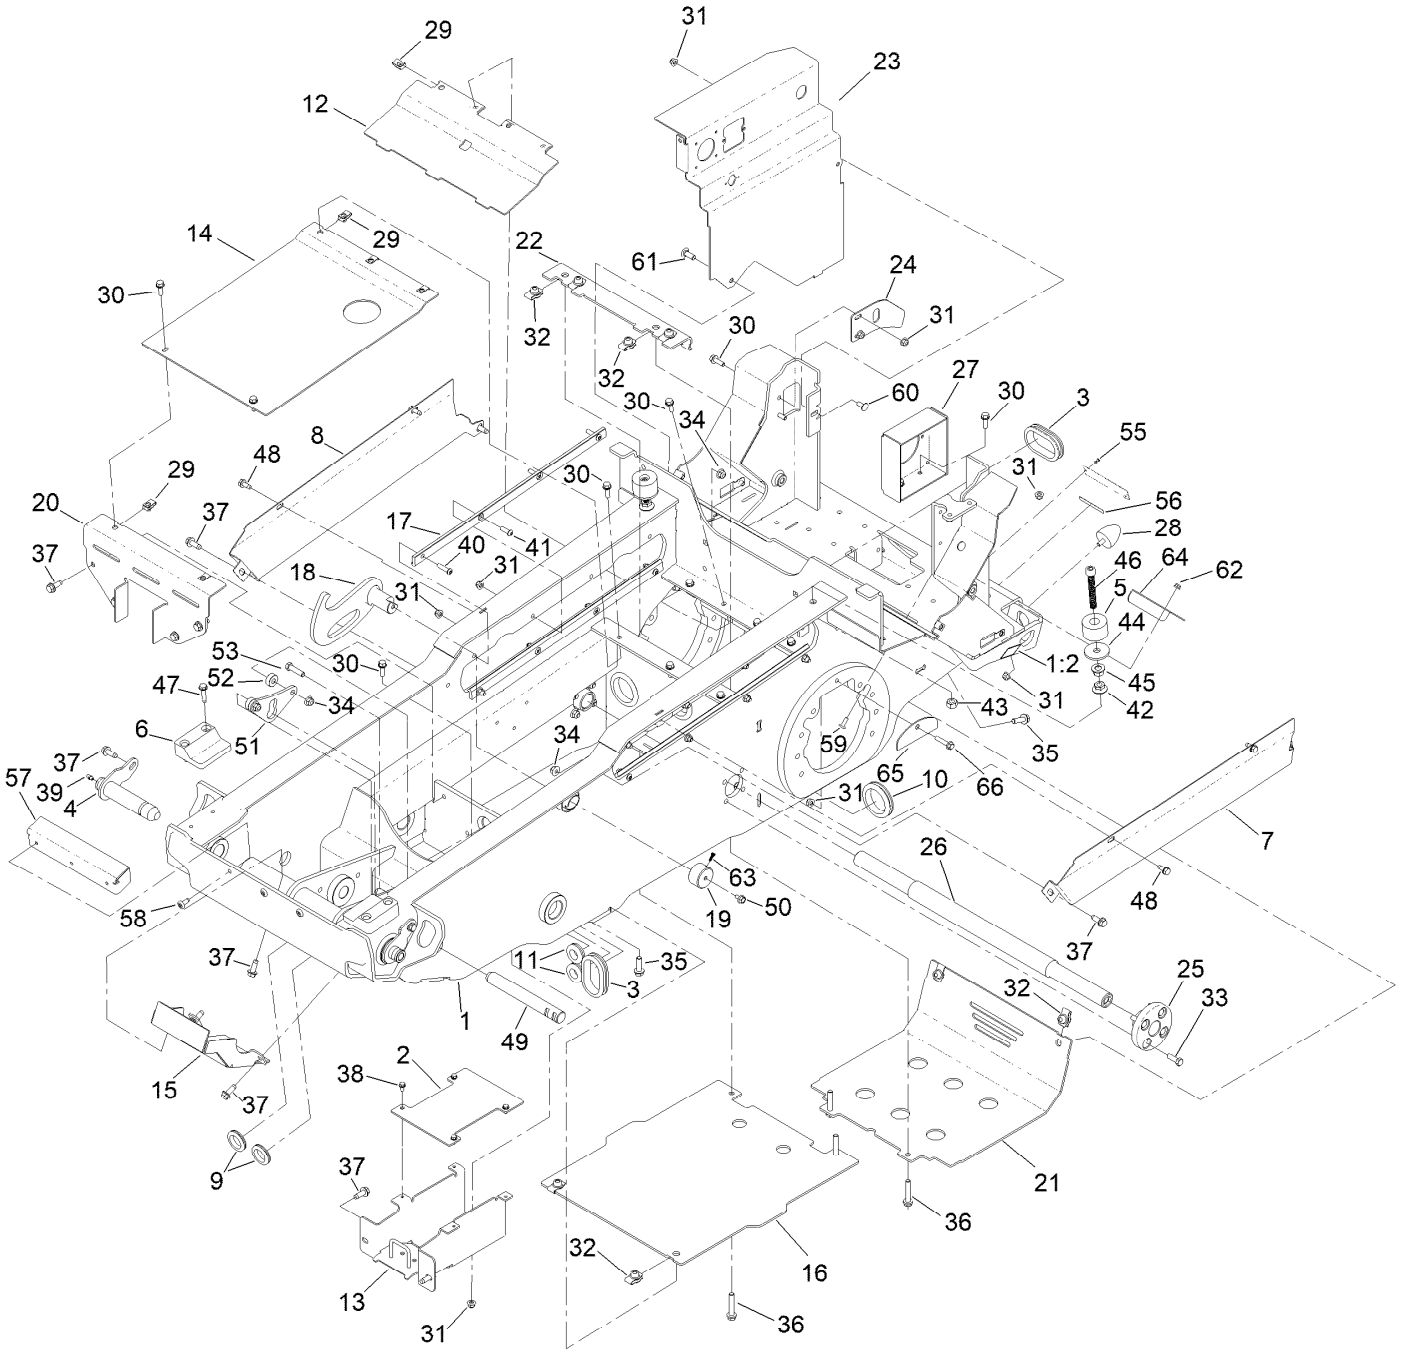

# Frame Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 163-4465 | 1 | Frame-High Lift |
| 1:2 | 147-6707 | 4 | Decal-Lift, Tie Down |
| 2 | 163-2673-05 | 1 | Cover-Hose Tray |
| 3 | 145-4923 | 2 | Grommet |
| 4 | 161-9595 | 2 | Pin-Link |
| 5 | 163-2697 | 2 | Stop-Pu |
| 6 | 163-2658 | 2 | Stop-Lift |
| 7 | 163-2698-05 | 1 | Cover-Roller, LH |
| 8 | 163-2699-05 | 1 | Cover-Roller, RH |
| 9 | 240-3 | 2 | Grommet-Rubber |
| 10 | 126-0015 | 3 | Grommet |
| 11 | 240-4 | 2 | Grommet-Rubber |
| 12 | 161-5575-05 | 1 | Shield-Motor, Front |
| 13 | 161-9568-05 | 1 | Bracket-Skid, Center [blk-Txt] |
| 14 | 161-5521-05 | 1 | Cover-High Lift, HYD |
| 15 | 161-5511-05 | 1 | Channel-High Lift, Skid Plate |
| 16 | 161-7598-05 | 1 | Panel-Skid Plate, High Lift |
| 17 | 163-4420 | 4 | Guide-Track, Roller |
| 18 | 163-4445-01 | 1 | Scissor Lock, LH [red] |
| 19 | 163-4432-01 | 1 | Retainer-Lift Lockout |
| 20 | 161-7592-05 | 1 | Cover-High Lift, HYD |
| 21 | 163-4476-05 | 1 | Panel-Rear Skid, High Lift |
| 22 | 163-2669-05 | 1 | Mount-Skid Plate |
| 23 | 163-7931-05 | 1 | Bracket-Cord Storage |
| 24 | 161-7587 | 1 | Bracket-Platform Latch |
| 25 | 132-9075 | 2 | Hub-Mount, Track |
| 26 | 161-3385 | 1 | Shaft-Track Mount |
| 27 | 161-5580-05 | 1 | Bracket-Mount, Disconnect |
| 28 | 114-1926 | 4 | Bumper-Rubber |
| 29 | 112-3306 | 13 | Nut |
| 30 | 3234-29 | 15 | Screw-HHF |
| 31 | 119-4041 | 29 | Nut-HF |
| 32 | 105-4886 | 8 | Nut-Tinnerman |
| 33 | 323-18 | 8 | Screw-HH |
| 34 | 119-4042 | 11 | Nut-HF, NI |
| 35 | 119-4061 | 4 | Screw-HHF |
| 36 | 108-3742 | 4 | Screw-HHF |
| 37 | 139-2428 | 16 | Screw-HWH |
| 38 | 9266714 | 4 | Screw-HWH |
| 39 | 302-5 | 2 | Fitting-Grease |
| 40 | 3290-511 | 8 | Screw-HSBH |
| 41 | 109-4872 | 8 | Screw-HSH |
| 42 | 32128-56 | 2 | Nut-HF |
| 43 | 3217-9 | 2 | Nut-HH |
| 44 | 75-7730 | 2 | Washer-Thrust |
| 45 | 139-1689 | 2 | Nut-HF |
| 46 | 163-2696 | 2 | Screw-HSH,Spl |
| 47 | 32144-57 | 4 | Screw-Thd Roll |
| 48 | 32144-11 | 4 | Screw-HWH |
| 49 | 161-5500 | 1 | Shaft-1.0 DIA X 8.18 Long,Zn |
| 50 | 3234-28 | 1 | Screw-HHF |
| 51 | 161-8054-05 | 1 | Retainer-Pin |
| 52 | 135-0456 | 2 | Spacer |
| 53 | 323-8 | 2 | Screw-HH |
| 55 | 3269-29 | 2 | Rivet-Pop |
| 56 | 133-8061 | 1 | Decal-Warning |
| 57 | 163-4405-05 | 1 | Bracket-Cover, Pivot Link |
| 58 | 138-9753 | 3 | Screw |
| 59 | 1-807512 | 1 | Bolt-CARR |
| 60 | 137-3061 | 1 | Bolt-CARR |
| 61 | 3231-22 | 1 | Screw-CARR |
| 62 | 104-7201 | 1 | Nut-HF, NI |
| 63 | 163-4447 | 1 | Screw-Hs |
| 64 | 163-4490-05 | 1 | Bracket-Wire Guard |
| 65 | 163-4495-05 | 2 | Cover-Motor |
| 66 | 115-1794 | 2 | Screw-HHF |


# Hydraulic Assembly

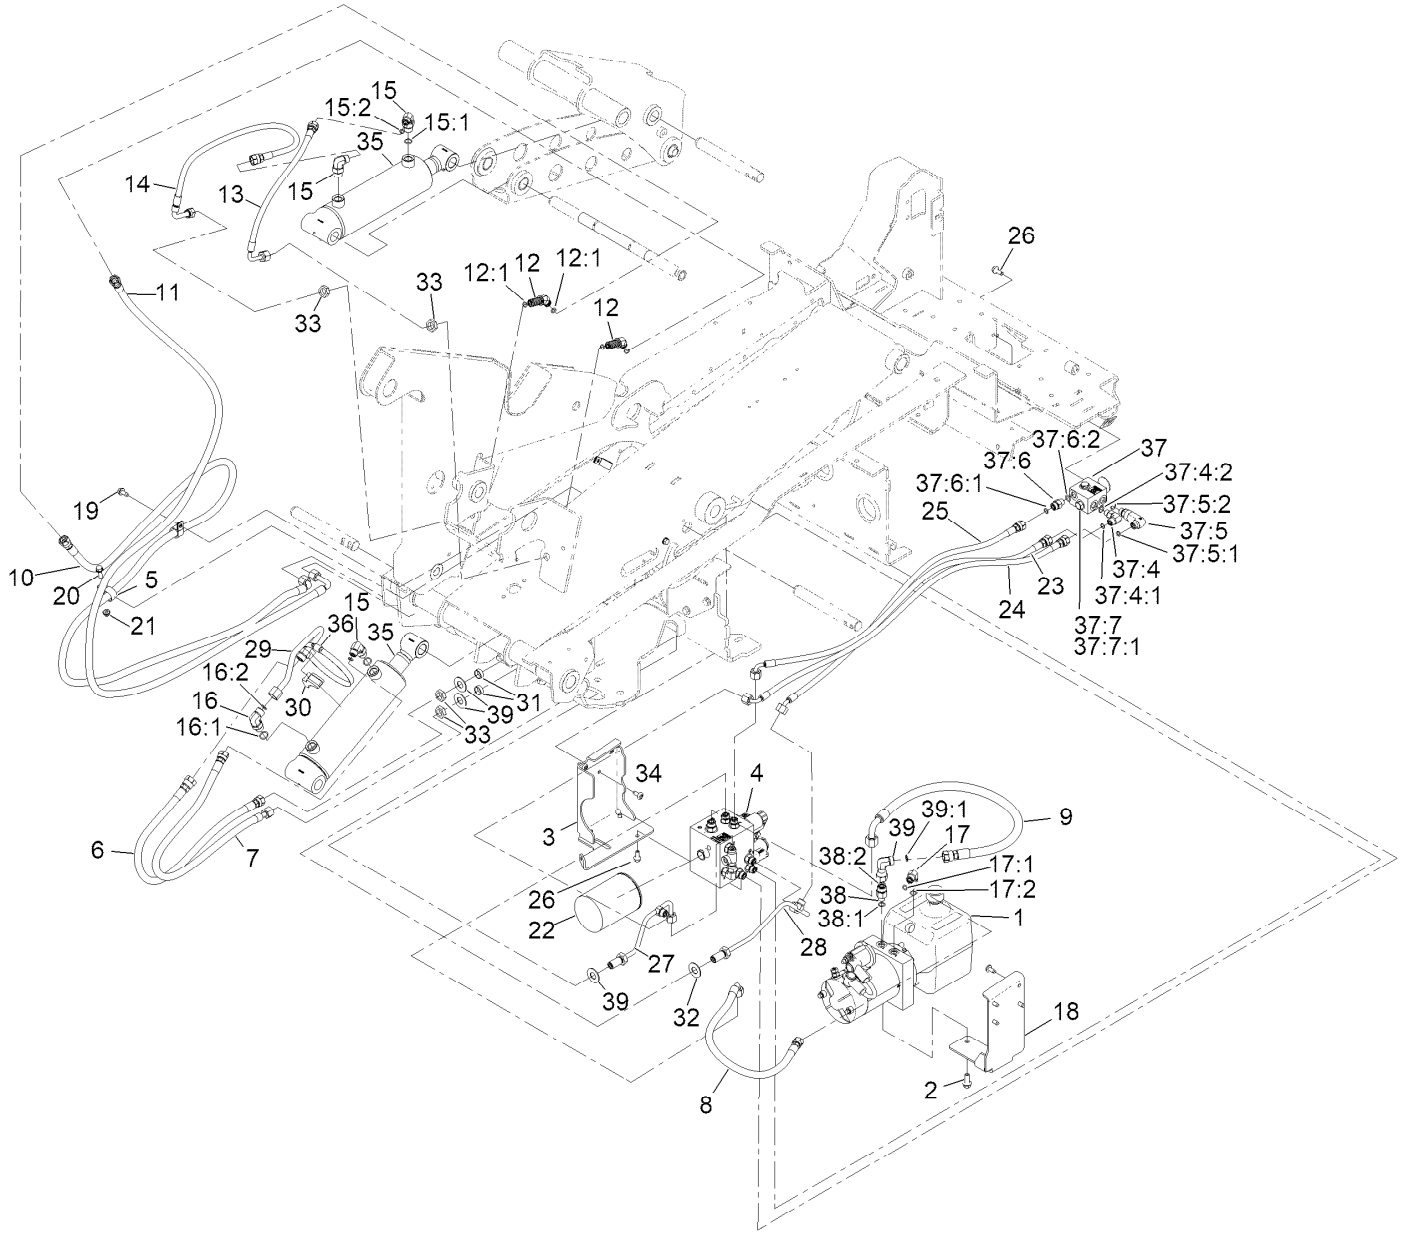

# Hydraulic Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 147-3542 | 1 | Pump Unit-48Vdc |
| 2 | 3234-42 | 2 | Screw-HHF |
| 3 | 161-7582-05 | 1 | Bracket-Mount, Manifold |
| 4 | 161-9506 | 1 | Manifold-Hydraulic ASM, Lift |
| 5 | 110-0824 | 6 | R-Clamp |
| 6 | 161-5508 | 1 | Hose-HYD |
| 7 | 161-5510 | 1 | Hose-HYD |
| 8 | 161-8070 | 1 | Hose-HYD |
| 9 | 161-8071 | 1 | Hose-HYD |
| 10 | 161-9565 | 1 | Hose-HYD |
| 11 | 161-8075 | 1 | Hose-HYD |
| 12 | 340-69 | 2 | Elbow-Bulkhead, 45 DEG |
| 12:1 | 237-22 | 2 | O-Ring |
| 13 | 161-8076 | 1 | Hose-HYD |
| 14 | 161-8077 | 1 | Hose-HYD |
| 15 | 340-18 | 3 | Fitting-HYD, 90 DEG |
| 15:1 | 237-79 | 1 | O-Ring |
| 15:2 | 237-22 | 1 | O-Ring |
| 16 | 340-98 | 1 | Fitting-Elbow, 90 DEG |
| 16:1 | 237-79 | 1 | O-Ring |
| 16:2 | 237-30 | 1 | O-Ring |
| 17 | 340-77 | 1 | Fitting-Elbow, 90 DEG |
| 17:1 | 237-22 | 1 | O-Ring |
| 17:2 | 237-42 | 1 | O-Ring |
| 18 | 161-7581-05 | 1 | Bracket-Mount, Power Unit |
| 19 | 32144-11 | 2 | Screw-HWH |
| 20 | 3234-29 | 2 | Screw-HHF |
| 21 | 119-4041 | 2 | Nut-HF |
| 22 | 86-3010 | 1 | Filter-Oil |
| 23 | 161-8078 | 1 | Hose-HYD |
| 24 | 161-8072 | 1 | Hose-HYD |
| 25 | 161-8073 | 1 | Hose-HYD |
| 26 | 3234-47 | 5 | Screw-HHF |
| 27 | 161-9540 | 1 | Hydraulic Tube ASM |
| 28 | 161-9541 | 1 | Hydraulic Tube ASM |
| 29 | 161-9551 | 1 | Hydraulic Tube ASM |
| 30 | 161-9570 | 1 | Clamp-Saddle, CYL |
| 31 | 69-8970 | 2 | Spacer |
| 32 | 69-8940 | 4 | Washer |
| 33 | 340-70 | 4 | Nut-Lock |
| 34 | 138-9753 | 7 | Screw |
| 35 | 161-3381 | 2 | Cylinder-Hydraulic |
| 36 | 138-9005 | 1 | Clamp-Hose |
| 37 | 163-4411 | 1 | Manifold ASM, Manual Override |
| 37:4 | 340-77 | 1 | Fitting-Elbow, 90 DEG |
| 37:4:1 | 237-22 | 1 | O-Ring |
| 37:4:2 | 237-42 | 1 | O-Ring |
| 37:5 | 145-2645 | 1 | Fitting-Elbow 90 Long |
| 37:5:1 | 237-22 | 1 | O-Ring |
| 37:5:2 | 237-42 | 1 | O-Ring |
| 37:6 | 340-2 | 1 | Fitting-Straight |
| 37:6:1 | 237-22 | 1 | O-Ring |
| 37:6:2 | 237-42 | 1 | O-Ring |
| 37:7 | 353-508 | 1 | Plug-HH |
| 37:7:1 | 237-42 | 1 | O-Ring |
| 38 | 340-5 | 1 | Fitting-Straight |
| 38:1 | 237-42 | 1 | O-Ring |
| 38:2 | 237-30 | 1 | O-Ring |
| 39 | 94-6031 | 1 | Elbow-90 |
| 39:1 | 237-30 | 1 | O-Ring |

# Battery Assembly

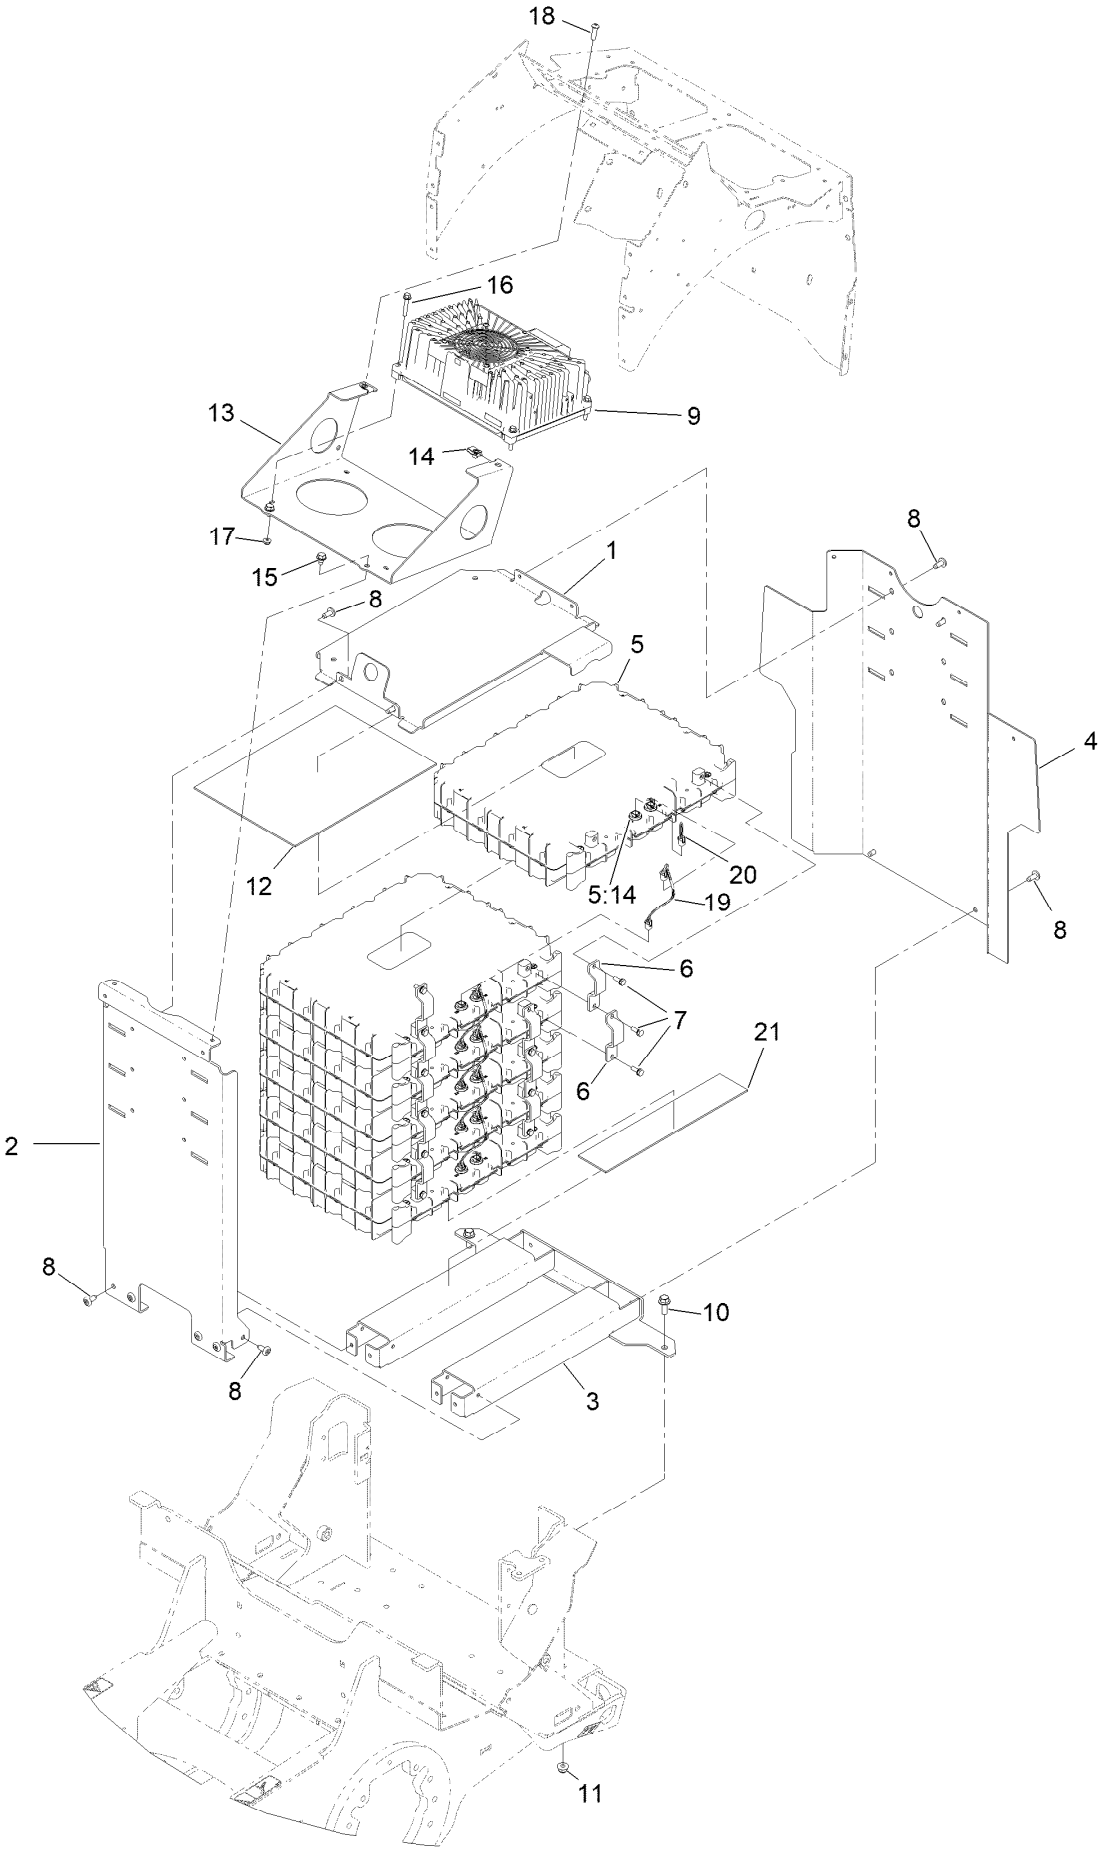


# Battery Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 161-5565-05 | 1 | Bracket-Clamp, Battery |
| 2 | 161-5563-05 | 1 | Bracket-Battery Front |
| 3 | 161-5568-05 | 1 | Frame-Battery Base [blk-Txt] |
| 4 | 161-5564-05 | 1 | Bracket-Battery,Rear |
| 5 | 145-5385 | 6 | Battery ASM |
| 5:2 | 145-5338 | 1 | Decal-Warning, Battery ● |
| 5:14 | 32180-466 | 2 | Nut-Mounting, Jwpf Panel Lock |
| 6 | 147-3877 | 10 | Bar-Bus, 400A |
| 7 | 145-5783 | 12 | Screw-Sems |
| 8 | 138-9753 | 11 | Screw |
| 9 | 145-5393 | 1 | Charger-Onboard |
| 10 | 3234-42 | 2 | Screw-HHF |
| 11 | 119-4042 | 2 | Nut-HF, NI |
| 12 | 145-2366 | 1 | Foam-Battery Box |
| 13 | 161-9549-05 | 1 | Bracket-Mount, Charger |
| 14 | 112-3306 | 2 | Nut |
| 15 | 9266934 | 2 | Screw |
| 16 | 94-5781 | 4 | Screw-HHF |
| 17 | 104-7201 | 4 | Nut-HF, NI |
| 18 | 109-4872 | 2 | Screw-HSH |
| 19 | 140-9565 | 5 | Harness-Wire, Data Interface |
| 20 | 122-2323 | 1 | Harness-Wire, Can Terminator |
| 21 | 163-4489 | 2 | Foam-Battery Box |

● Not illustrated


# Tower and Hood Assembly

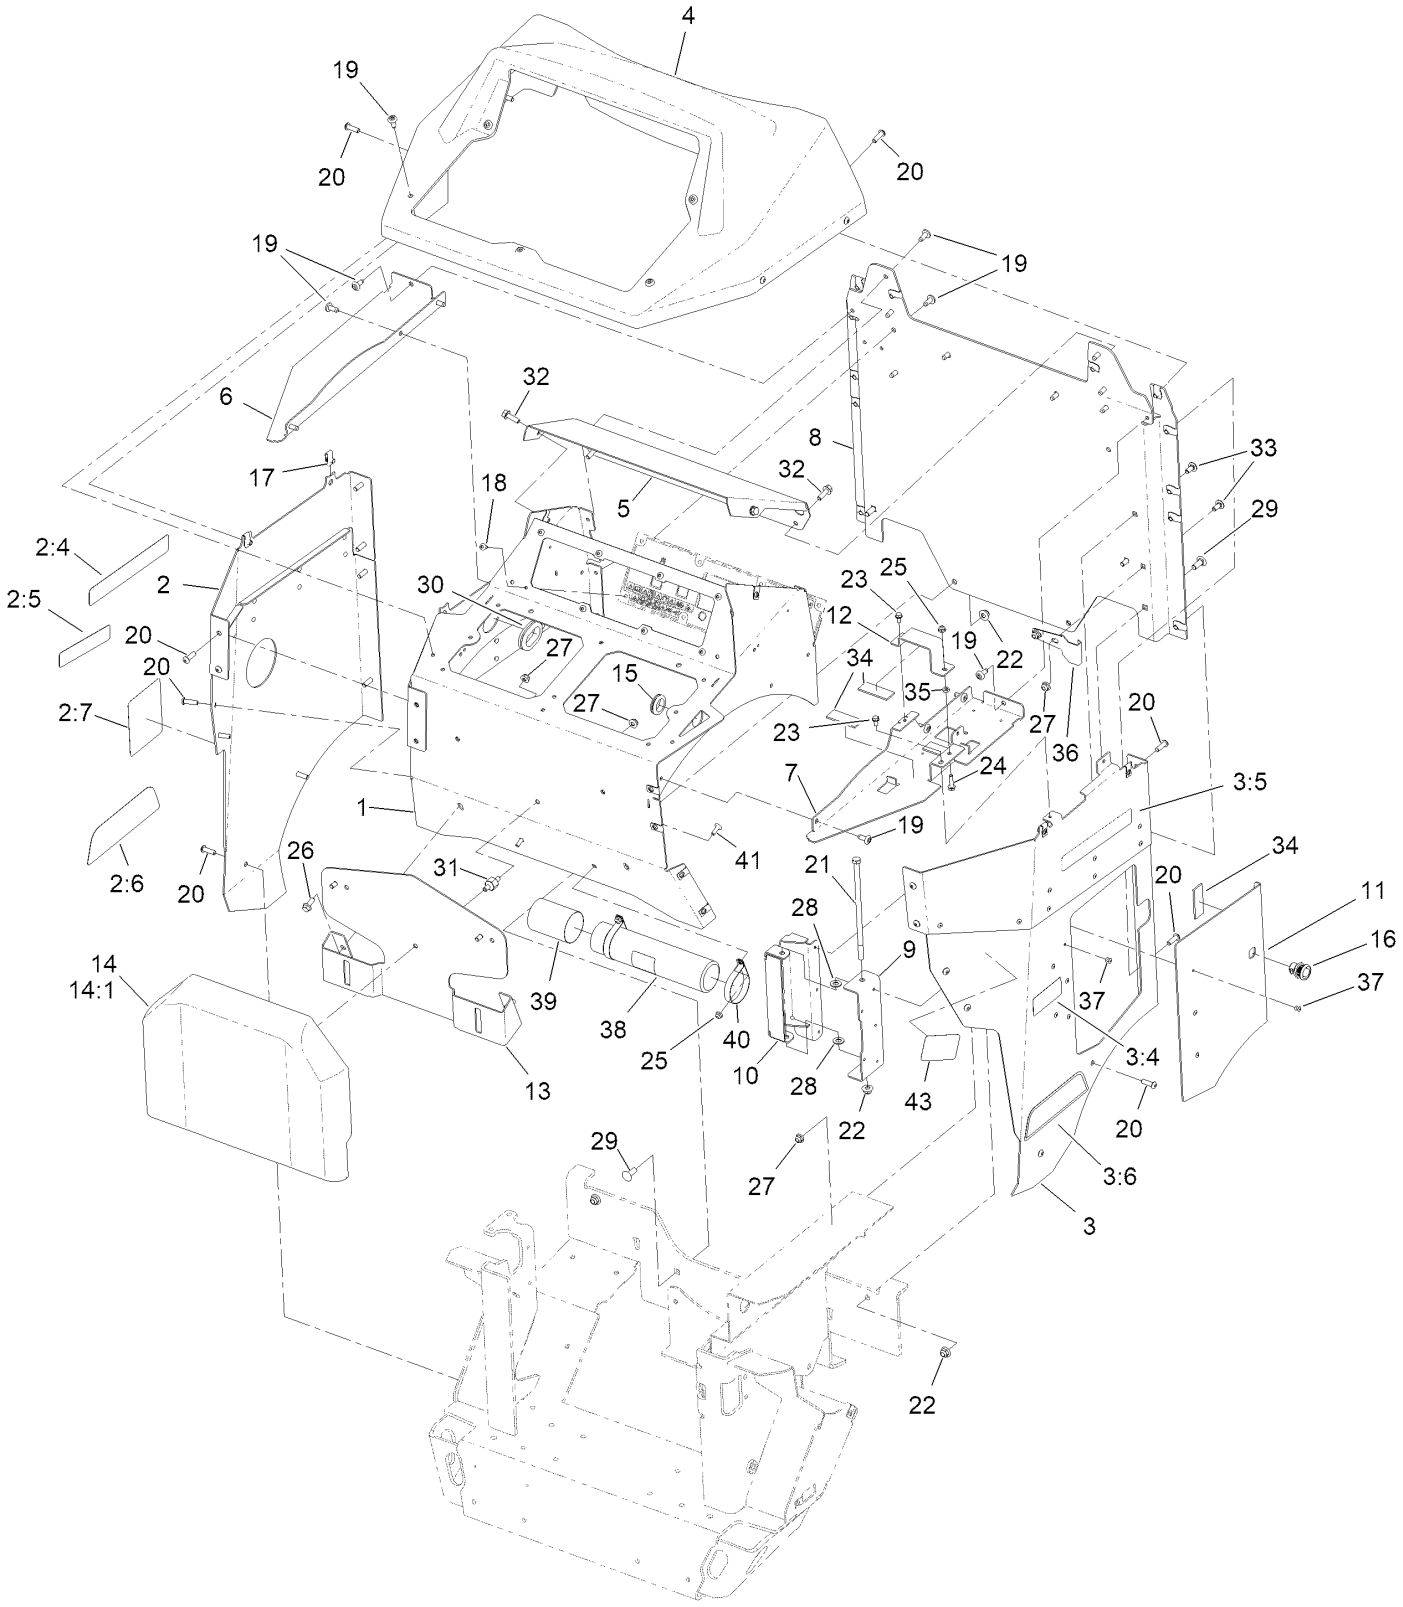

# Tower and Hood Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 161-5537-05 | 1 | Tower, ASM [blk-Txt] |
| 2 | 163-2670 | 1 | Panel-LH ASM, High Lift |
| 2:4 | 161-5515 | 1 | Decal-E2500Thl |
| 2:5 | 145-1175 | 1 | Decal-Service, Shut-Off |
| 2:6 | 145-1172 | 1 | Decal-Hypercell |
| 2:7 | 163-4474 | 1 | Decal-Service |
| 3 | 163-2671 | 1 | Panel-RH ASM, High Lift |
| 3:4 | 161-2443 | 1 | Decal-Charging |
| 3:5 | 161-5515 | 1 | Decal-E2500Thl |
| 3:6 | 145-1172 | 1 | Decal-Hypercell |
| 4 | 161-9520 | 1 | Panel-Dash |
| 5 | 161-5547-05 | 1 | Cover-Tower, Charger |
| 6 | 161-5566-05 | 1 | Panel-Tower, LH Closeoff |
| 7 | 161-5567-05 | 1 | Panel-Tower, RH Closeoff |
| 8 | 161-9522-05 | 1 | Panel-Tower, Front |
| 9 | 161-7573-05 | 1 | Bracket-Mount, Door |
| 10 | 161-9546 | 1 | Hinge ASM, Charge Door |
| 11 | 161-7571-01 | 1 | Door-Cord Storage |
| 12 | 161-9556-05 | 1 | Bracket-Battery Strap |
| 13 | 161-9542-05 | 1 | Bracket-Pad |
| 14 | 161-3555 | 1 | Pad-Thigh |
| 14:1 | 161-3554 | 1 | Cover Pad |
| 15 | 240-5 | 1 | Grommet |
| 16 | 163-4429 | 1 | Latch-Push Button |
| 17 | 112-3306 | 26 | Nut |
| 18 | 142-7097 | 8 | Screw |
| 19 | 138-9753 | 23 | Screw |
| 20 | 109-4872 | 26 | Screw-HSH |
| 21 | 99-7203 | 1 | Screw-HH |
| 22 | 119-4042 | 5 | Nut-HF, NI |
| 23 | 93-6083 | 2 | Screw-HWH |
| 24 | 120-4654 | 1 | Screw-HHF |
| 25 | 104-7201 | 3 | Nut-HF, NI |
| 26 | 3234-47 | 2 | Screw-HHF |
| 27 | 119-4041 | 8 | Nut-HF |
| 28 | 48-9220 | 2 | Washer-Flat |
| 29 | 3231-22 | 4 | Screw-CARR |
| 30 | 110-5090 | 1 | Grommet |
| 31 | 137-9294 | 3 | Stud-Special |
| 32 | 3234-29 | 4 | Screw-HHF |
| 33 | 137-3061 | 3 | Bolt-CARR |
| 34 | 133-0081 | 5 | Strip-Foam |
| 35 | 3218-1 | 1 | Nut-Jam |
| 36 | 163-4430 | 1 | Bracket-Latch Catch |
| 37 | 130-8451 | 8 | Rivet-Trifold |
| 38 | 104-7050 | 1 | Tube-Manual |
| 39 | 104-7048 | 1 | Cap-Housing |
| 40 | 107-1865 | 2 | R-Clamp |
| 41 | 1-807512 | 2 | Bolt-CARR |
| 43 | 100-4627 | 2 | Reflector |


# Track Assembly

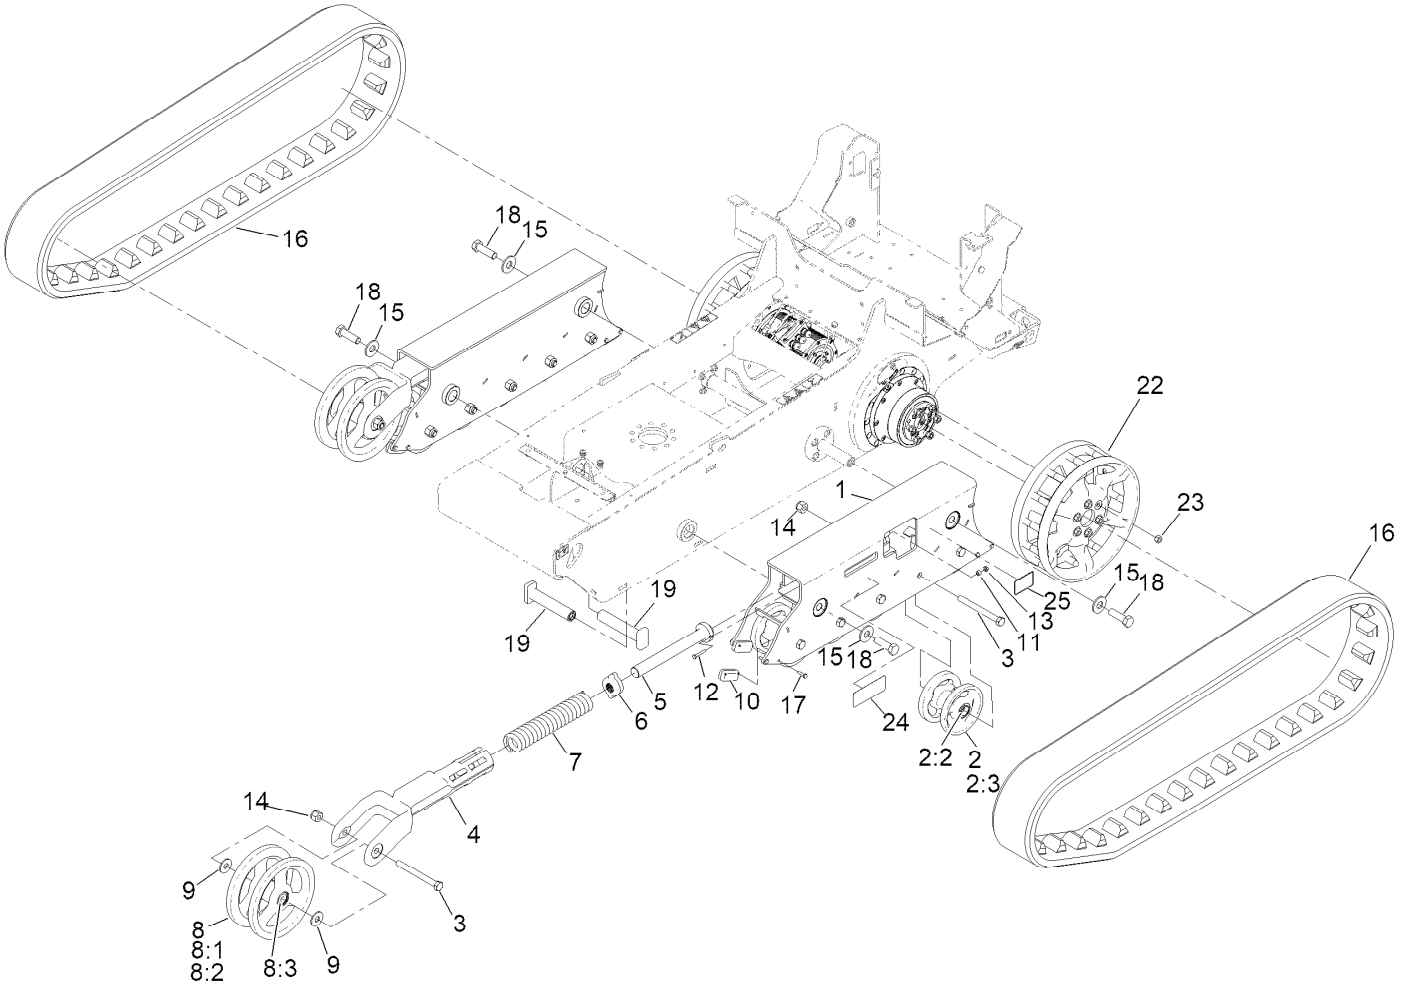

# Track Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 163-7941 | 1 | Frame-Track, LH |
| 2 | 138-5231 | 10 | Wheel ASM |
| 2:2 | 138-0547 | 2 | Bearing-Ball |
| 2:3 | 130-7564 | 1 | Spacer-Wheel |
| 3 | 327-17 | 12 | Screw-HH |
| 4 | 108-4691-05 | 2 | Arm-Tensioner, [blk-Txt] |
| 5 | 127-9563 | 2 | Bolt-Tensioner |
| 6 | 108-4664 | 2 | Block-Tensioner |
| 7 | 95-3624 | 2 | Spring-Compression |
| 8 | 104-5745 | 2 | Tensioner Wheel ASM |
| 8:1 | 104-5747-03 | 1 | Wheel-Tensioner |
| 8:2 | 98-9835 | 1 | Spacer-Wheel, Tensioner |
| 8:3 | 120-5378 | 2 | Bearing-Ball |
| 9 | 3256-7 | 4 | Washer-Flat |
| 10 | 132-6053 | 8 | Block-Track |
| 11 | 98-4799 | 2 | Spacer |
| 12 | 321-37 | 2 | Screw-HH |
| 13 | 32128-32 | 2 | Nut-HHF |
| 14 | 3296-24 | 12 | Nut-Hex |
| 15 | 99-2659 | 4 | Washer |
| 16 | 136-5846 | 2 | Electric Ultra Buggy Track |
| 17 | 321-6 | 16 | Screw-HH |
| 18 | 328-2 | 4 | Screw-HH |
| 19 | 163-7909 | 2 | Pin-Track |
| 22 | 163-7930-05 | 2 | Wheel-Drive, Buggy [blk-Txt] |
| 23 | 104-9914 | 12 | Nut-Hex |
| 24 | 139-7201 | 2 | Decal-Warning, Bystanders |
| 25 | 139-7709 | 2 | Decal-Water Level |


# Tub Assembly

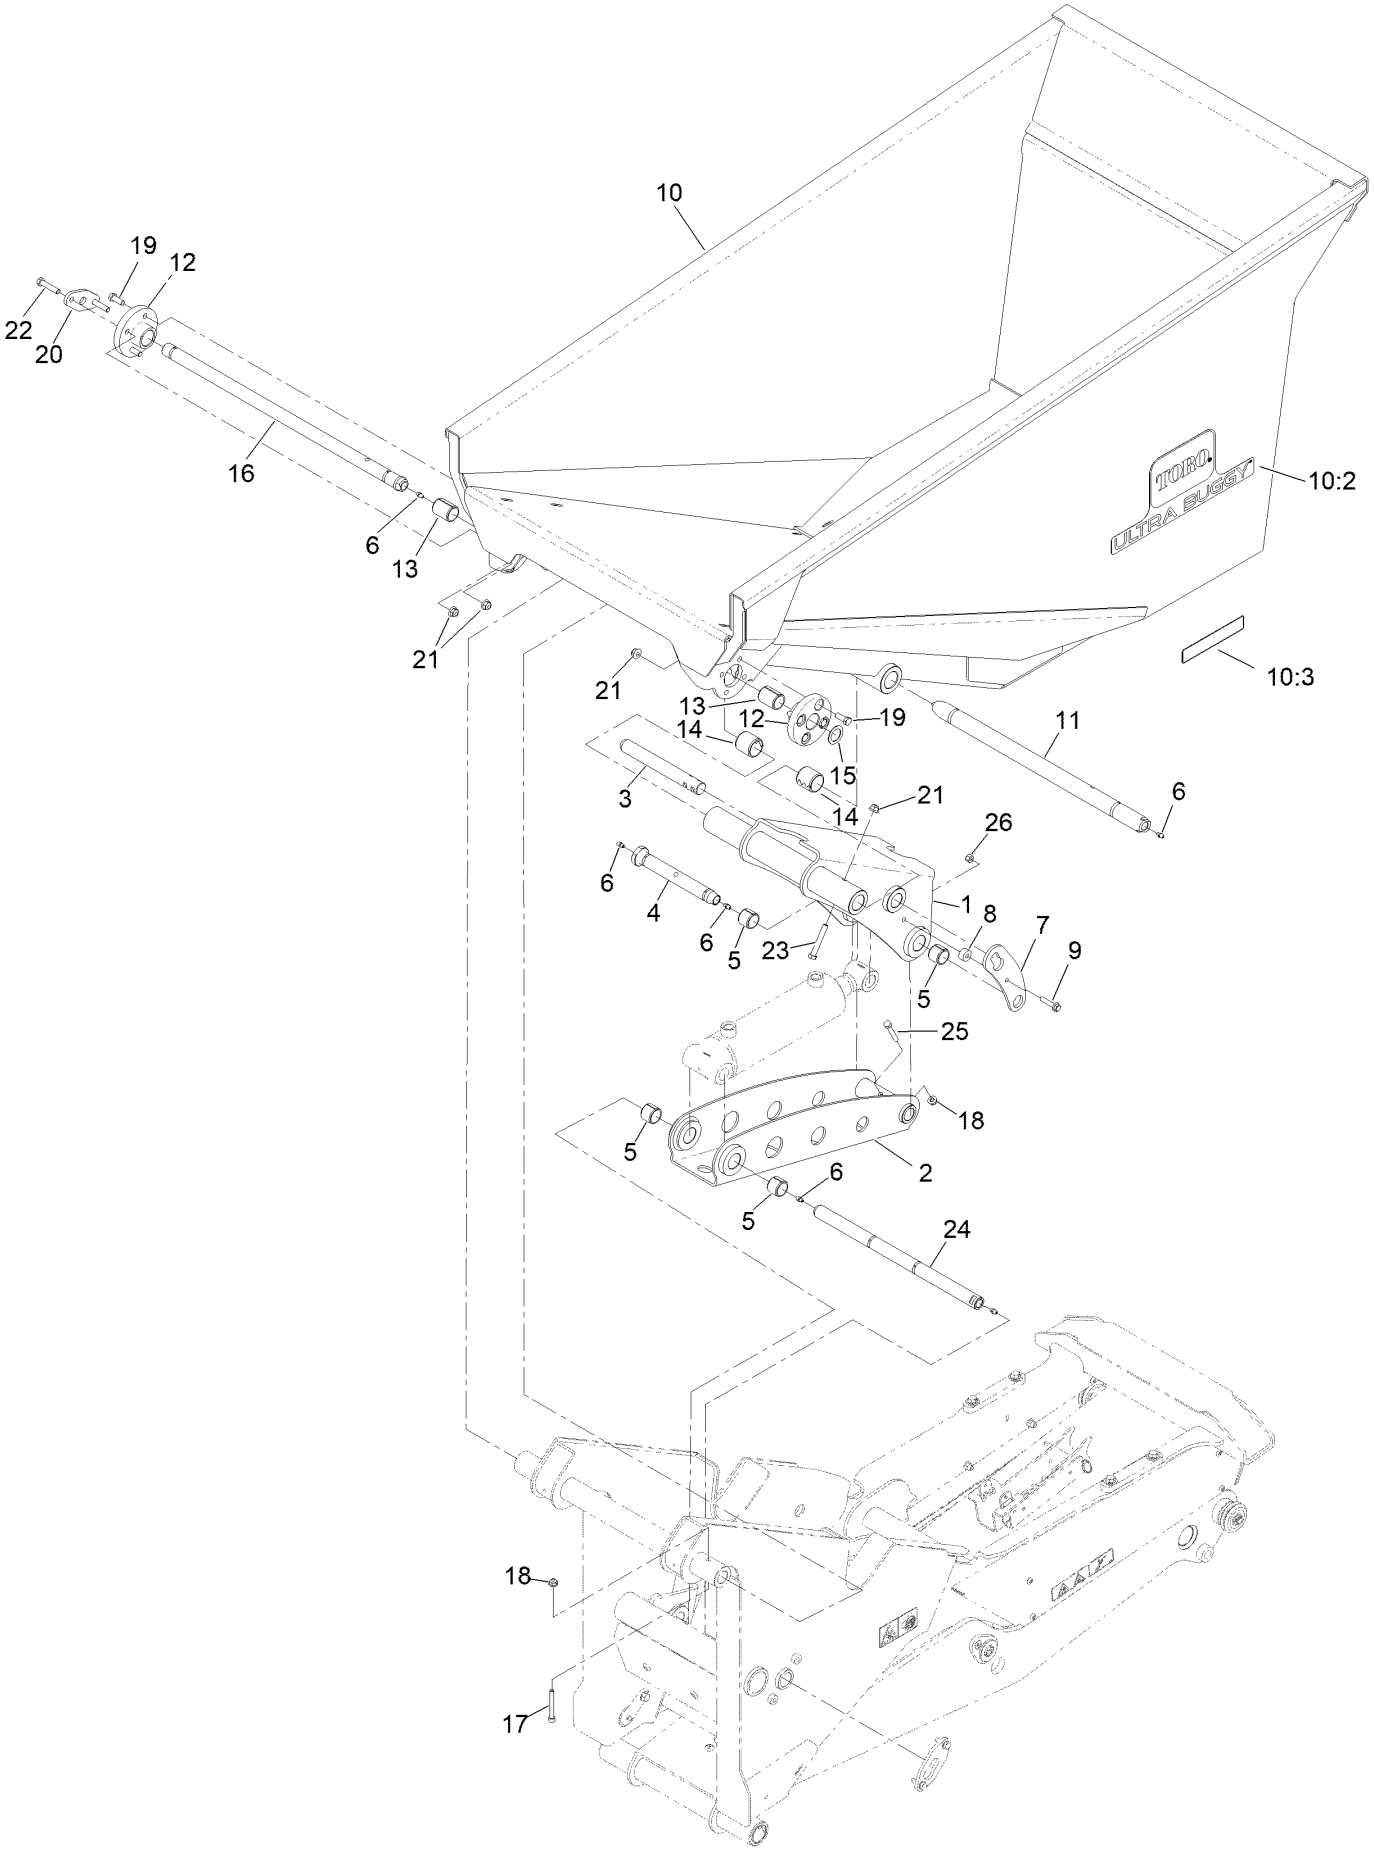

# Tub Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 161-9511-05 | 1 | Link-Dump, Hopper [blk-Txt] |
| 2 | 161-3343-05 | 1 | Link-Dump, Frame [blk-Txt] |
| 3 | 161-5500 | 1 | Shaft-1.0 DIA X 8.18 Long,Zn |
| 4 | 161-3391 | 1 | Shaft-1.0 DIA X 7.34 Long |
| 5 | 98-4871 | 4 | Bushing-Tension |
| 6 | 302-5 | 8 | Fitting-Grease |
| 7 | 163-4498-05 | 1 | Retainer-Pin |
| 8 | 132-9064 | 1 | Bushing-Brake |
| 9 | 115-1794 | 1 | Screw-HHF |
| 10 | 137-9290 | 1 | Hopper ASM |
| 10:2 | 161-2909 | 2 | Decal-Tub, Ultra Buggy |
| 10:3 | 115-4858 | 2 | Decal-Danger |
| 11 | 161-9586 | 1 | Pin- |
| 12 | 132-9075 | 2 | Hub-Mount, Track |
| 13 | 130-5200 | 2 | Bushing-Spring |
| 14 | 139-5737 | 2 | Bushing-Spring |
| 15 | 10-8110 | 1 | Washer-Thrust |
| 16 | 161-3389 | 1 | Shaft-1.25 DIA X 25.14 Long, Zn |
| 17 | 3274-40 | 1 | Screw-HSH |
| 18 | 119-4041 | 2 | Nut-HF |
| 19 | 135-7915 | 6 | Screw-HH, |
| 20 | 161-9598-05 | 1 | Plate-Bushing Retainer |
| 21 | 119-4042 | 9 | Nut-HF, NI |
| 22 | 323-52 | 2 | Screw-HH |
| 23 | 323-47 | 1 | Screw-HH |
| 24 | 163-2660 | 1 | Shaft-ASM, Dump |
| 25 | 322-10 | 1 | Screw-HH |
| 26 | 3296-29 | 1 | Nut-Lock, NI |

# Electrical Assembly

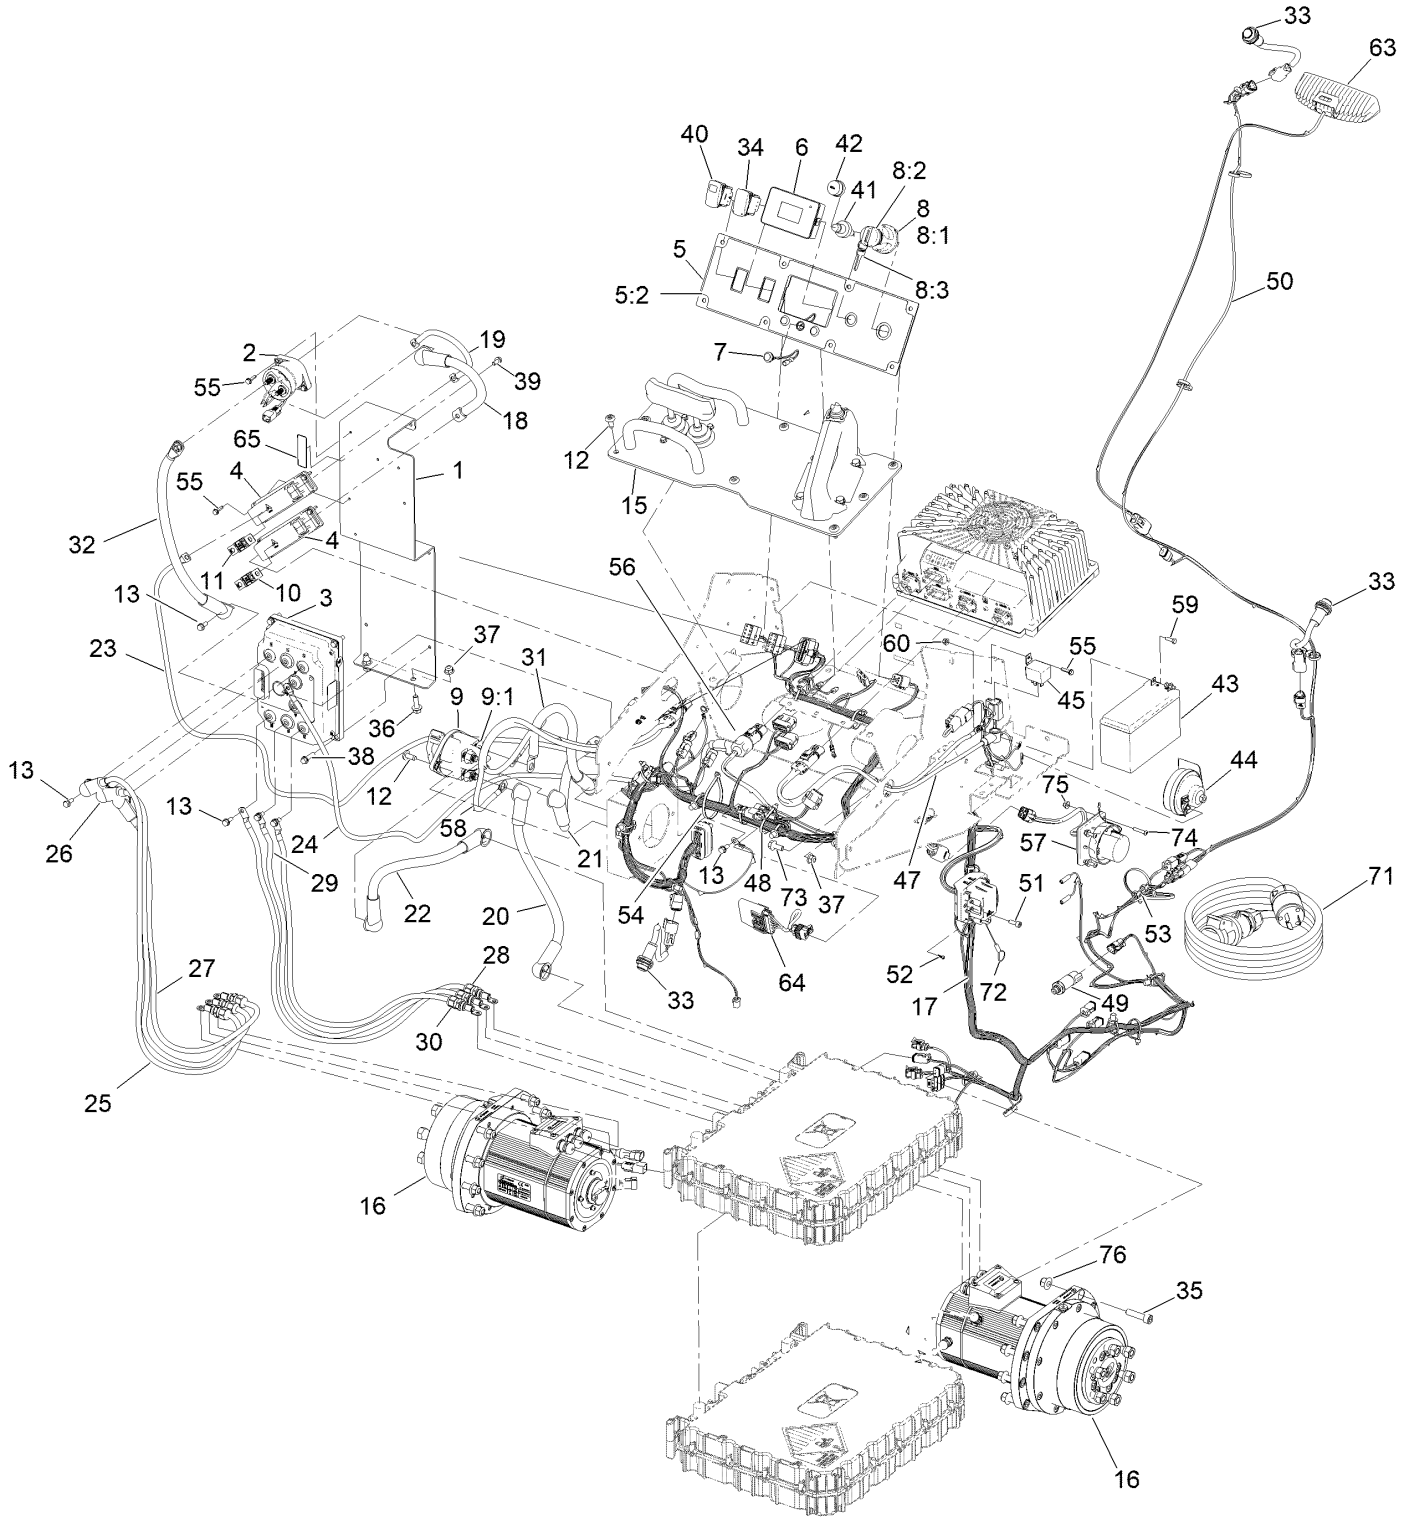


# Electrical Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 161-5579-05 | 1 | Bracket-Mount, Electrical |
| 2 | 122-2594 | 1 | Contactor-48V |
| 3 | 138-8984 | 1 | Inv/Ctrlr-48V, Dual 94Arms |
| 4 | 145-4958 | 2 | Holder-Fuse |
| 4:1 | 3253-4 | 2 | Washer-Lock ● |
| 4:2 | 3256-74 | 4 | Washer-Flat ● |
| 4:3 | 33014-00 | 4 | Nut-Hex ● |
| 5 | 137-9288 | 1 | Panel-Instrument |
| 5:2 | 147-9721 | 1 | Decal-Display Panel |
| 6 | 122-1201 | 1 | Module-Display |
| 7 | 136-9678 | 3 | Cable Assy-Pushbutton |
| 8 | 122-2513 | 1 | Switch-Ignition, Suns |
| 8:1 | 121-5160 | 1 | Nut-Hex |
| 8:2 | 122-2704 | 1 | Nut-Face, M22 (Plastic) |
| 8:3 | 121-5162 | 1 | Set-Key, Ignition |
| 9 | 122-0603 | 1 | Switch-Disconnect |
| 9:1 | 33006-00 | 1 | Nut-HF |
| 10 | 122-2959 | 1 | Fuse-350A |
| 11 | 122-2559 | 1 | Fuse-100 Amp |
| 12 | 138-9753 | 10 | Screw |
| 13 | 145-5782 | 8 | Screw-Sems |
| 15 | 163-2672 | 1 | Controls ASM, E2500Thl |
| 16 | 163-4401 | 2 | Motor/Gearbox ASM-48V 3Kw 41:1 Rdctn |
| 16:1 | 147-9107 | 1 | Cassette Seal Ring ● |
| 17 | 122-3106 | 1 | Harness-Wire, Main |
| 18 | 122-3109 | 1 | Cable-Battery, Rd ASM |
| 19 | 122-3111 | 1 | Cable-Battery, Rd ASM |
| 20 | 122-3107 | 1 | Cable-Battery, Rd ASM |
| 21 | 122-3108 | 1 | Cable-Battery, Rd ASM |
| 22 | 122-3120 | 1 | Cable-Battery, Bk ASM |
| 23 | 122-3121 | 1 | Cable-Battery, Rd ASM |
| 24 | 122-3118 | 1 | Cable-Battery, Bk ASM |
| 25 | 122-4194 | 1 | Cable-Battery, Rd ASM |
| 26 | 122-4195 | 1 | Cable-Battery, Rd ASM |
| 27 | 122-4196 | 1 | Cable-Battery, Rd ASM |
| 28 | 122-4197 | 1 | Cable-Battery, Rd ASM |
| 29 | 122-4198 | 1 | Cable-Battery, Rd ASM |
| 30 | 122-4199 | 1 | Cable-Battery, Rd ASM |
| 31 | 122-3119 | 1 | Cable-Battery, Bk ASM |
| 32 | 122-3110 | 1 | Cable-Battery, Rd ASM |
| 33 | 139-7238 | 3 | Sensor-Proximity, N.O. |
| 33:1 | 117-3207 | 2 | Nut-Hex ● |
| 33:2 | 117-3208 | 2 | Washer-Lock, Internal Tooth ● |
| 34 | 112-9421 | 1 | Switch |
| 35 | 09718 | 16 | Screw-Sh |
| 36 | 3234-29 | 2 | Screw-HHF |
| 37 | 119-4041 | 3 | Nut-HF |
| 38 | 32144-86 | 4 | Screw-HWHTF |
| 39 | 93-6083 | 2 | Screw-HWH |
| 40 | 122-2719 | 1 | Switch-Rocker, On-None-(On) |
| 41 | 112-3324 | 1 | Switch-Horn |
| 42 | 112-3313 | 1 | Nut-Weatherproof |
| 43 | 112-9621 | 1 | Battery-Wet, 12V 9Ah, Sealed W/Hrdwr |
| 44 | 116749 | 1 | Horn |
| 45 | 122-3200 | 1 | Relay |
| 47 | 122-3658 | 1 | Harness-Wire,DC Aux |
| 48 | 3290-378 | 3 | Tie-Cable |
| 49 | 119-0011 | 1 | Pressure Transducer ASM |
| 49:1 | 237-78 | 1 | O-Ring ● |
| 50 | 122-3691 | 1 | Harness-Wire, Extension |
| 51 | 105-2409 | 2 | Screw-HSH |
| 52 | 363-8289 | 2 | Scr,TAP,6-19X7/16,Phph,Stl,Rohs |
| 53 | 3290-378 | 1 | Tie-Cable |
| 54 | 3290-379 | 1 | Tie-Cable |
| 55 | 100-4351 | 7 | Screw-HWH |
| 56 | 122-3656 | 1 | Harness-Wire, AC In |
| 57 | 122-4099 | 1 | Harness-Wire, Inlet, 60309 |
| 58 | 122-3659 | 1 | Harness-Wire,DC Out |
| 59 | 60-6910 | 2 | Screw-HH |
| 60 | 120-4580 | 2 | Nut-HF |
| 63 | 126-7839 | 1 | Light-LED |
| 64 | 119-4330 | 1 | Isolated Can Module ASM |
| 65 | 161-5516 | 1 | Decal-Electrical |
| 71 | 122-3491 | 1 | Cable-Assembly, Charger |
| 72 | 163-4491 | 1 | Strap-Cable, Cap |
| 73 | 3234-47 | 1 | Screw-HHF |
| 74 | 108-3153 | 4 | Screw-HSBH |
| 75 | 120-4578 | 4 | Nut-HF |
| 76 | 103-9511 | 16 | Nut-Flg |

● Not illustrated


# Control Assembly No. 163-2672

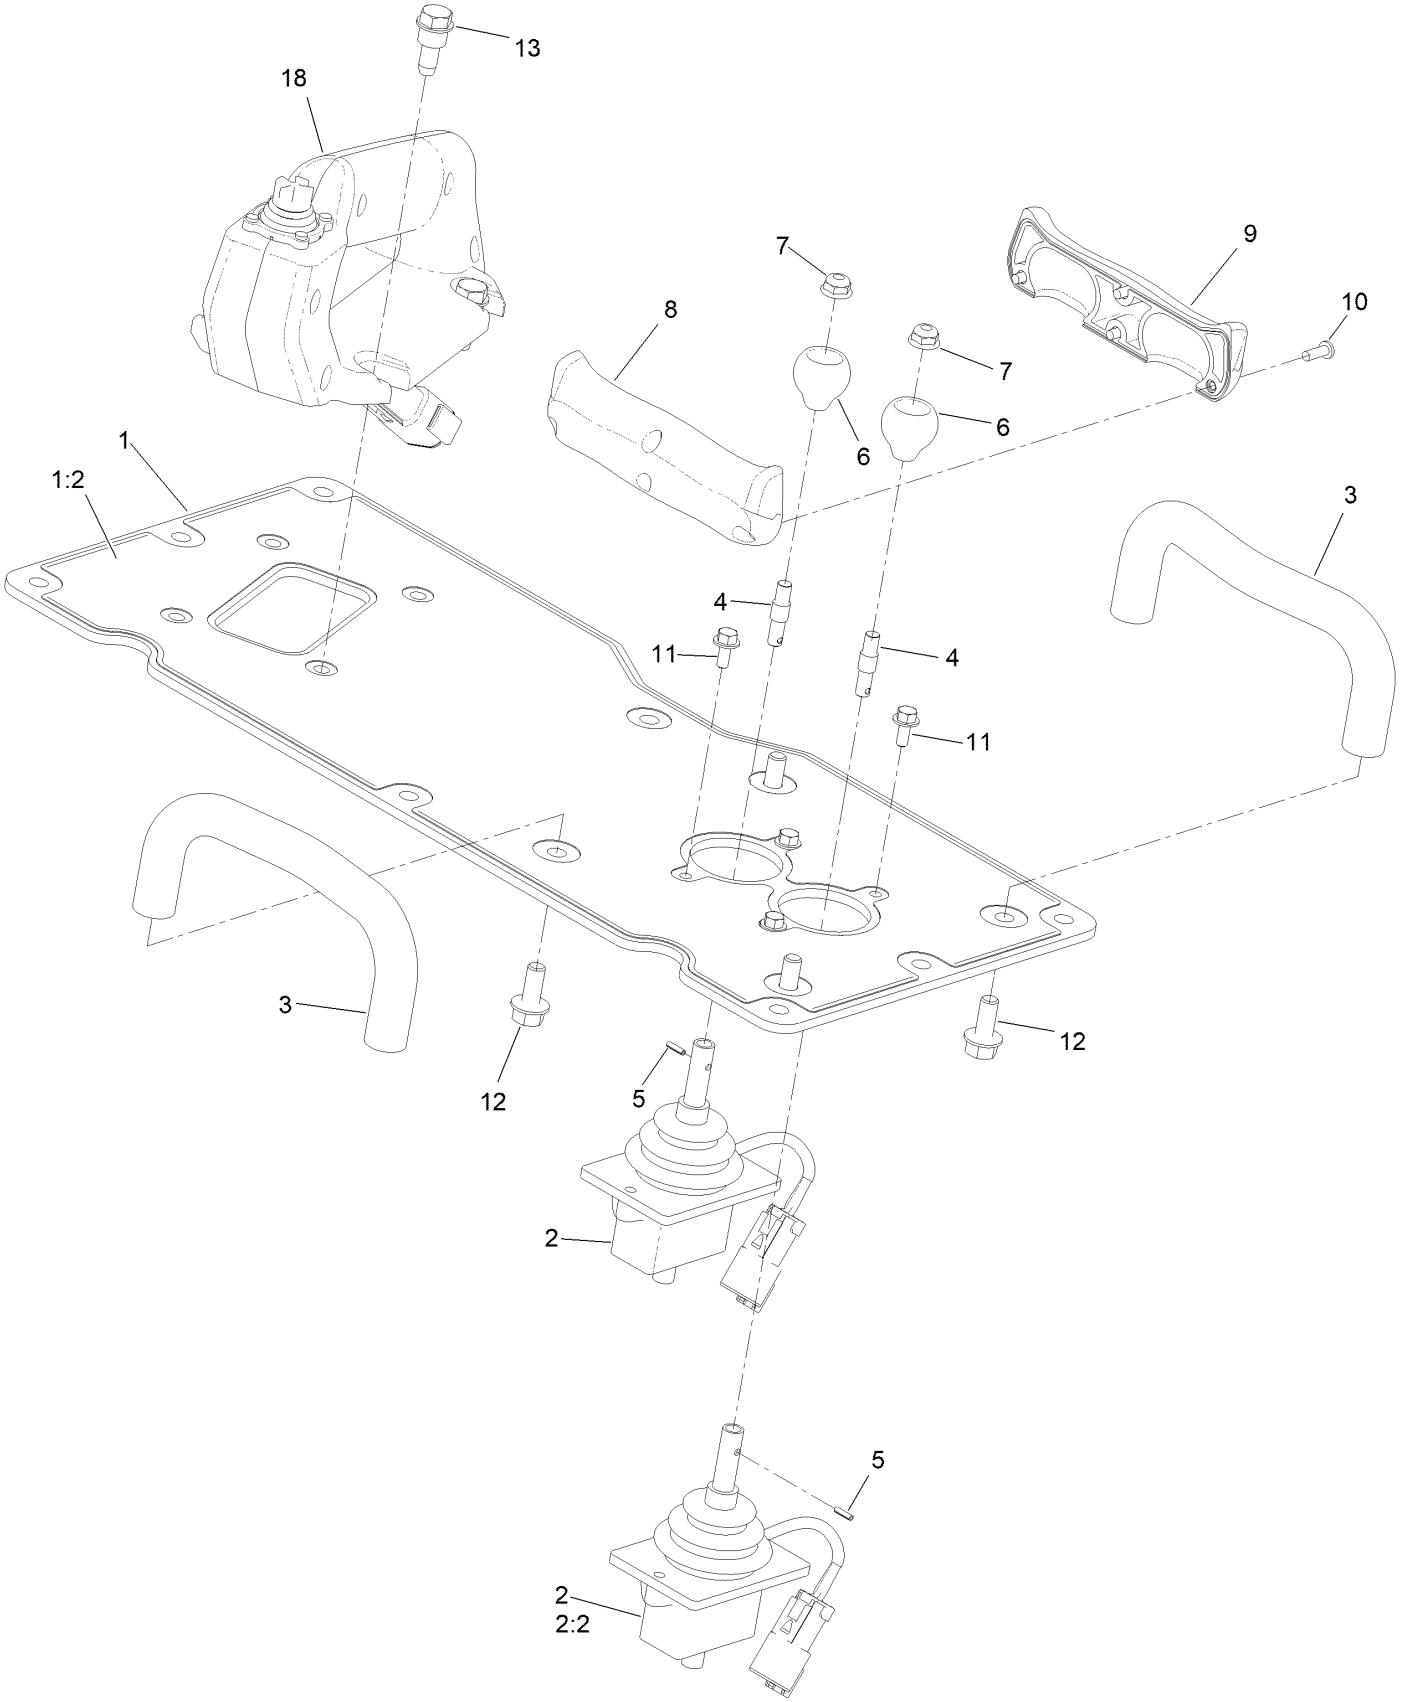

# Control Assembly No. 163-2672 (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 163-2653 | 1 | Plate-Controls, E2500Thl |
| 1:2 | 147-9720 | 1 | Decal-Controls, E2500Thl |
| 2 | 136-4784 | 2 | Lever-Control |
| 2:2 | 136-4894 | 1 | Kit-Rtn, |
| 3 | 138-4693 | 2 | Bar-Reference |
| 4 | 137-0431 | 2 | Shaft-Handle |
| 5 | 137-0432 | 2 | Pin-Roll |
| 6 | 130-7723 | 2 | Ball-Traction |
| 7 | 104-7201 | 2 | Nut-HF, NI |
| 8 | 139-1167 | 1 | Handle-Rear |
| 9 | 139-1166 | 1 | Handle-Front |
| 10 | 94-6961 | 4 | Screw |
| 11 | 120-4579 | 4 | Screw-HHF |
| 12 | 3234-5 | 4 | Screw-HHF |
| 13 | 115-1958 | 4 | Bolt-Shoulder |
| 18 | 163-4409 | 1 | Grip-Assembly |


# Lift Assembly

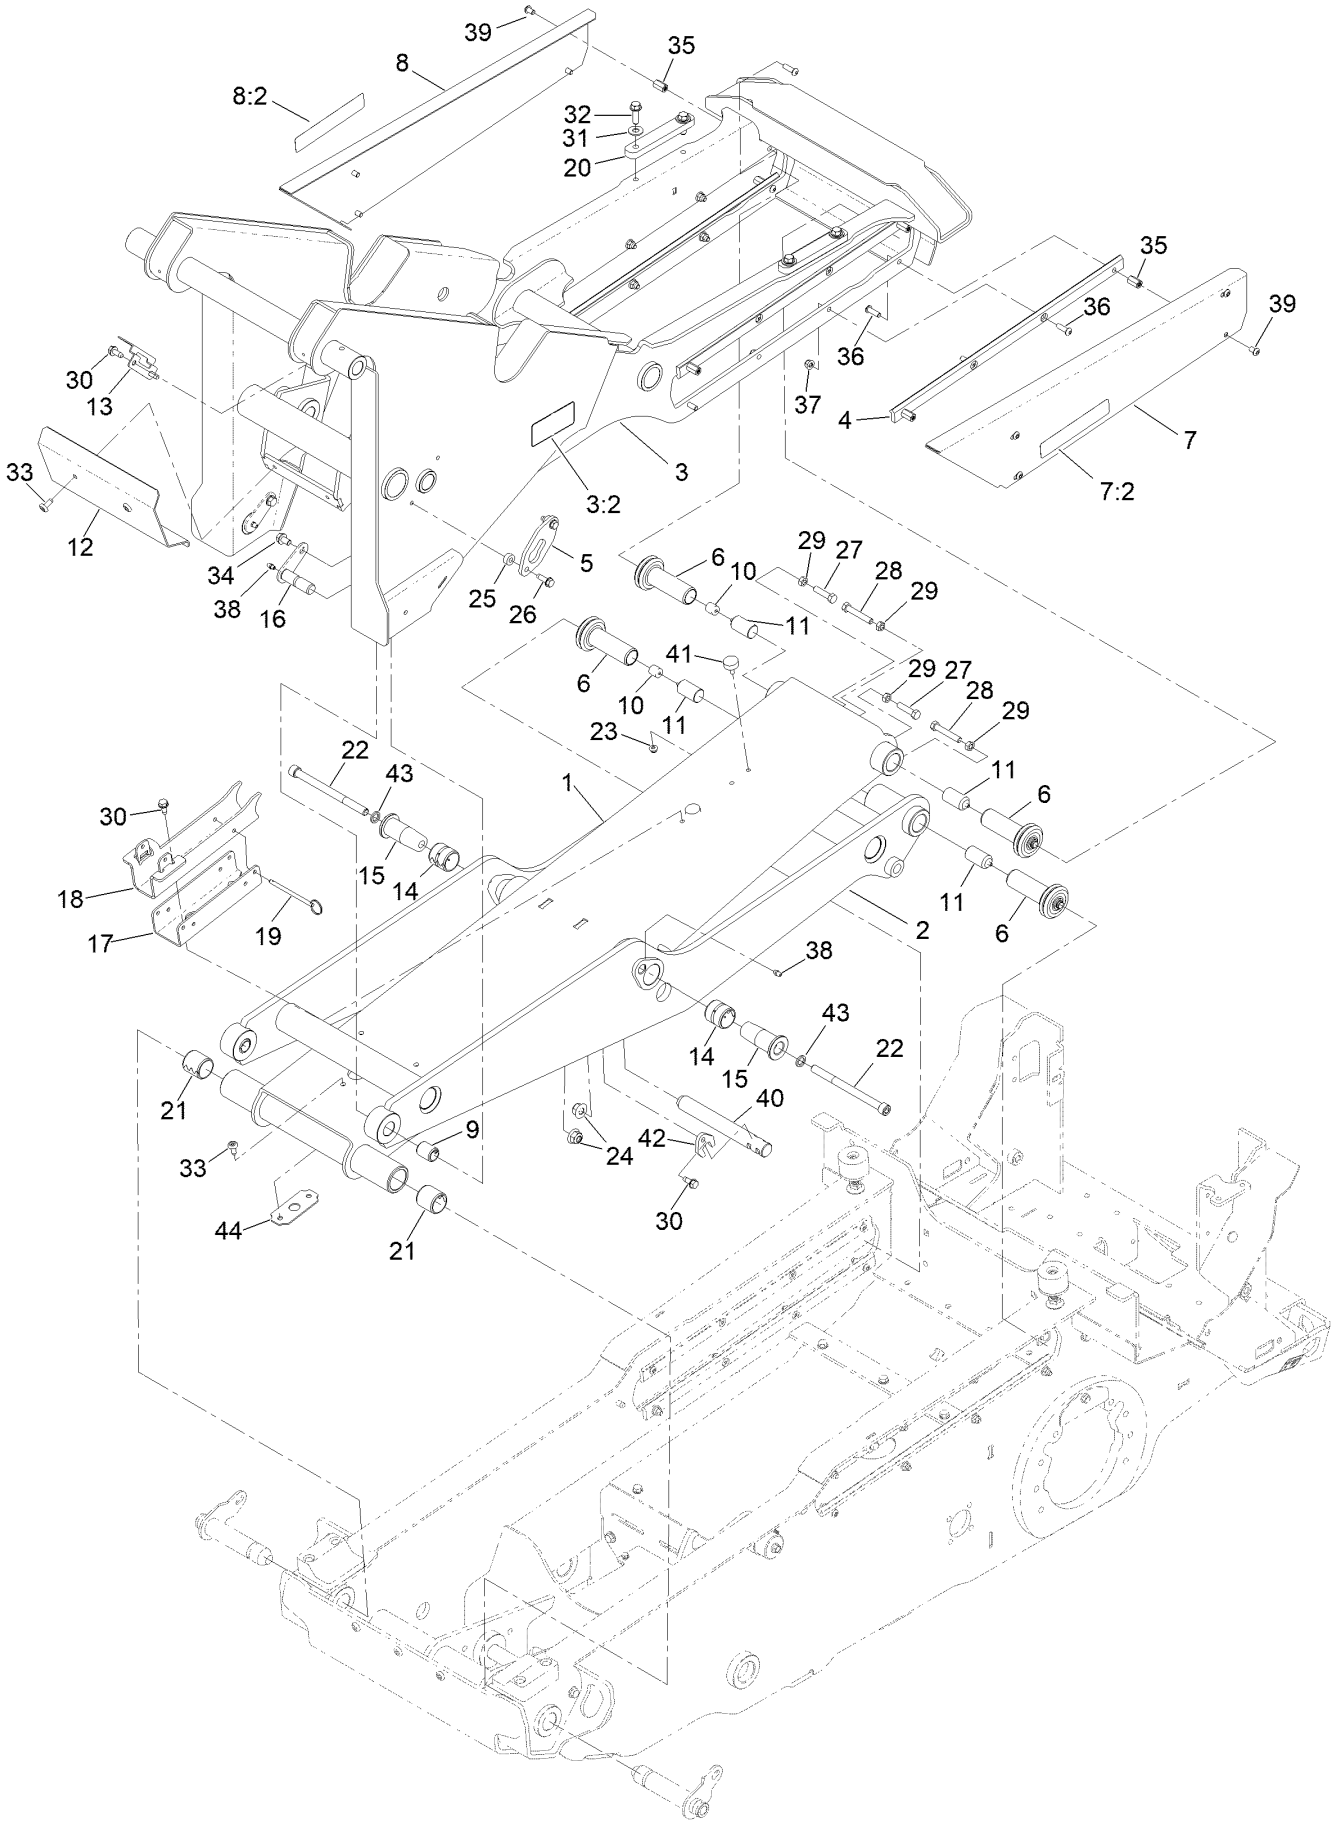

# Lift Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 147-9741-05 | 1 | Link-Pivot, Scissor [blk-Txt] |
| 2 | 161-3322-05 | 1 | Frame-High Lift, Scissor [blk-T |
| 3 | 137-9291 | 1 | Lift Frame ASM |
| 3:2 | 125-4959 | 2 | Decal-Warning, Crushing |
| 4 | 163-4420 | 4 | Guide-Track, Roller |
| 5 | 161-7594-05 | 1 | Retainer-Pin |
| 6 | 163-4404 | 4 | Guide Wheel Assy |
| 7 | 137-9292 | 1 | Roller Cover ASM, LH |
| 7:2 | 115-4858 | 1 | Decal-Danger |
| 8 | 137-9293 | 1 | Roller Cover ASM, RH |
| 8:2 | 115-4858 | 1 | Decal-Danger |
| 9 | 161-3312 | 2 | Bushing-Spring |
| 10 | 161-3378 | 2 | Bumper |
| 11 | 161-3379 | 4 | Shaft-Guide Roller, Plunger |
| 12 | 161-9510-05 | 1 | Bracket-Light |
| 13 | 161-7572-05 | 1 | Bracket-Sensor, Prox |
| 14 | 147-6875 | 2 | Bushing-Spring |
| 15 | 161-9585 | 2 | Pin-Taper |
| 16 | 120-5575 | 2 | Pin |
| 17 | 161-7570-05 | 1 | Bracket-Mount, Locking Arm |
| 18 | 163-7916 | 1 | Arm-Locking |
| 19 | 161-7595 | 1 | Pin-Cotterless |
| 20 | 163-2685 | 2 | Stop-Hopper |
| 21 | 139-5737 | 2 | Bushing-Spring |
| 22 | 161-9597 | 2 | Screw-HSH,Spl |
| 23 | 104-7201 | 2 | Nut-HF, NI |
| 24 | 142-7784 | 2 | Nut-HF, NI |
| 25 | 140-3461 | 2 | Spacer |
| 26 | 701243 | 2 | Screw-Thd Roll, HWH |
| 27 | 323-50 | 2 | Bolt-HH |
| 28 | 104-3396 | 2 | Screw-HH |
| 29 | 3217-7 | 4 | Nut-Hex |
| 30 | 32144-11 | 5 | Screw-HWH |
| 31 | 3256-4 | 4 | Washer-Flat |
| 32 | 32144-109 | 4 | Screw-Thd |
| 33 | 138-9753 | 2 | Screw |
| 34 | 32144-15 | 2 | Screw-HHFTF |
| 35 | 161-8080 | 8 | Standoff-Hex |
| 36 | 109-4872 | 16 | Screw-HSH |
| 37 | 119-4041 | 10 | Nut-HF |
| 38 | 302-5 | 4 | Fitting-Grease |
| 39 | 131-1884 | 8 | Screw-HSBH,Patch |
| 40 | 161-5500 | 1 | Shaft-1.0 DIA X 8.18 Long,Zn |
| 41 | 138-2662 | 2 | Bumper-Rubber |
| 42 | 137-9285-05 | 1 | Retainer-Pin |
| 43 | 62-7120 | 2 | Washer |
| 44 | 161-7588-05 | 1 | Bracket-Prox Sensor |

# Platform Assembly

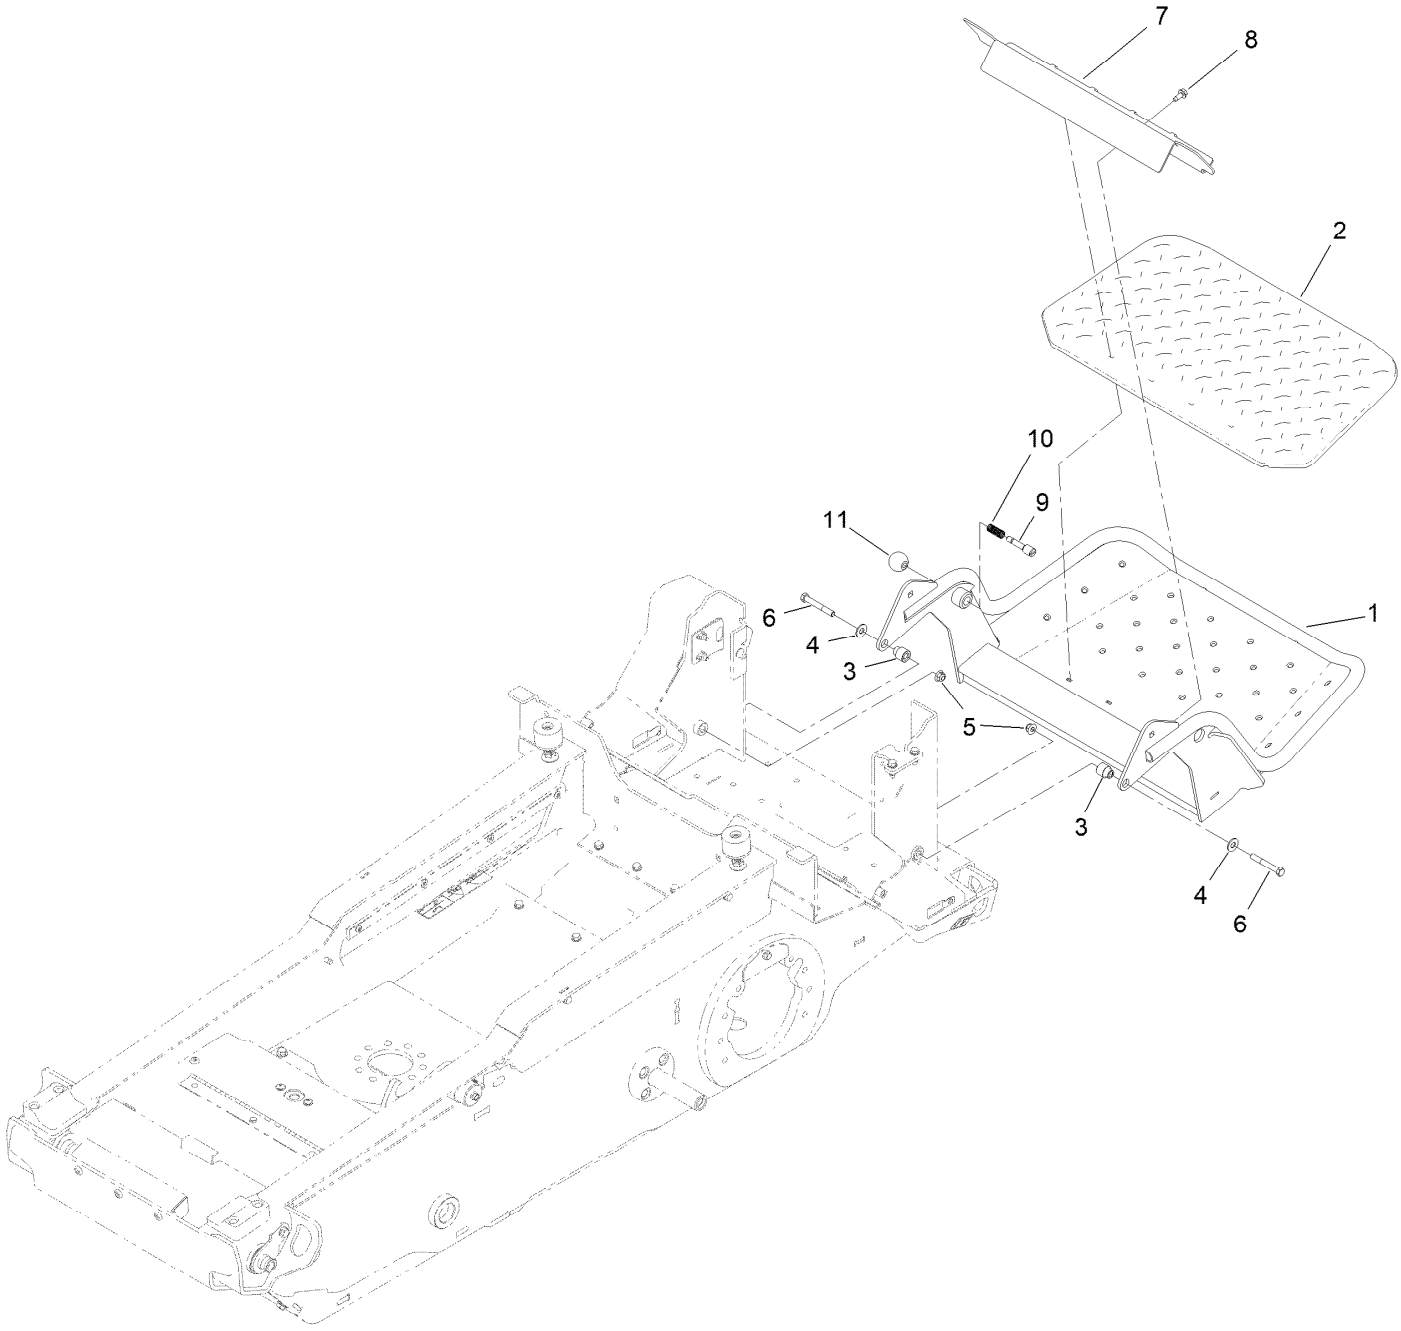

# Platform Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 161-6796-05 | 1 | Platform ASM [blk-Txt] |
| 2 | 126-7157 | 1 | Mat-Platform |
| 3 | 132-7583 | 2 | Bushing-Flanged |
| 4 | 3256-4 | 2 | Washer-Flat |
| 5 | 119-4042 | 2 | Nut-HF, NI |
| 6 | 323-13 | 2 | Screw-HH |
| 7 | 136-5669-05 | 1 | Clamp-Shield |
| 8 | 32144-70 | 2 | Screw-HWHTF |
| 9 | 119-8650 | 1 | Pin-Latch |
| 10 | 114-5348 | 1 | Spring |
| 11 | 1-603175 | 1 | Knob-Ball |

# Attachments and Accessories

## For 68142 — Ultra Buggy e2500-THL

| Product Name | Model/Part |
|---|---|
| Charger Cable Assembly | 122-3489 |
| Charger Cable Assembly | 122-3490 |
| Charger Cable Assembly | 122-4204 |
| Brush Kit | 163-4400 |
| SAE J1772 Charging Kit | 163-7922 |
| IEC 62196 Charging Kit | 163-7924 |
| CE Kit | 163-7932 |
| Toro Red 12oz Aerosol Can | 361-10 |
| New Red Paint - Gallon | 361-11 |
| Semi-Gloss Black Spray Paint | 361-9 |

## Notes:

## Notes:

## Notes:




**Count on it.**