Form Number 3351-890

Workman® e2050
Utility Vehicle

Model No. 07280TC - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Contents

Description	Page
Hood and Fender Assembly	3
Solenoid Assembly No. 104-7135	4
Pedal Assembly	5
Frame Assembly	6
Seat Base Assembly	7
Offboard 48 Volt Charger Assembly No. 107-0364	8
Front Tire and Steering Assembly	9
Tire, Wheel and Hub Assembly	10
Controller Assembly	11
Battery and Transaxle Assembly	12
Electric Motor Assembly No. 104-7335	13
Electric Transaxle Assembly No. 104-7378	14
Steering Assembly	15
Steering Gearbox Assembly No. 99-7660	16
Box and Tailgate Installation Assembly	17
Box and Tailgate Assembly	18

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HS	hex
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	phillips pan head
PTH	phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head
WH	wing head

Footnotes

❶ Not illustrated


❷ Not serviced separately

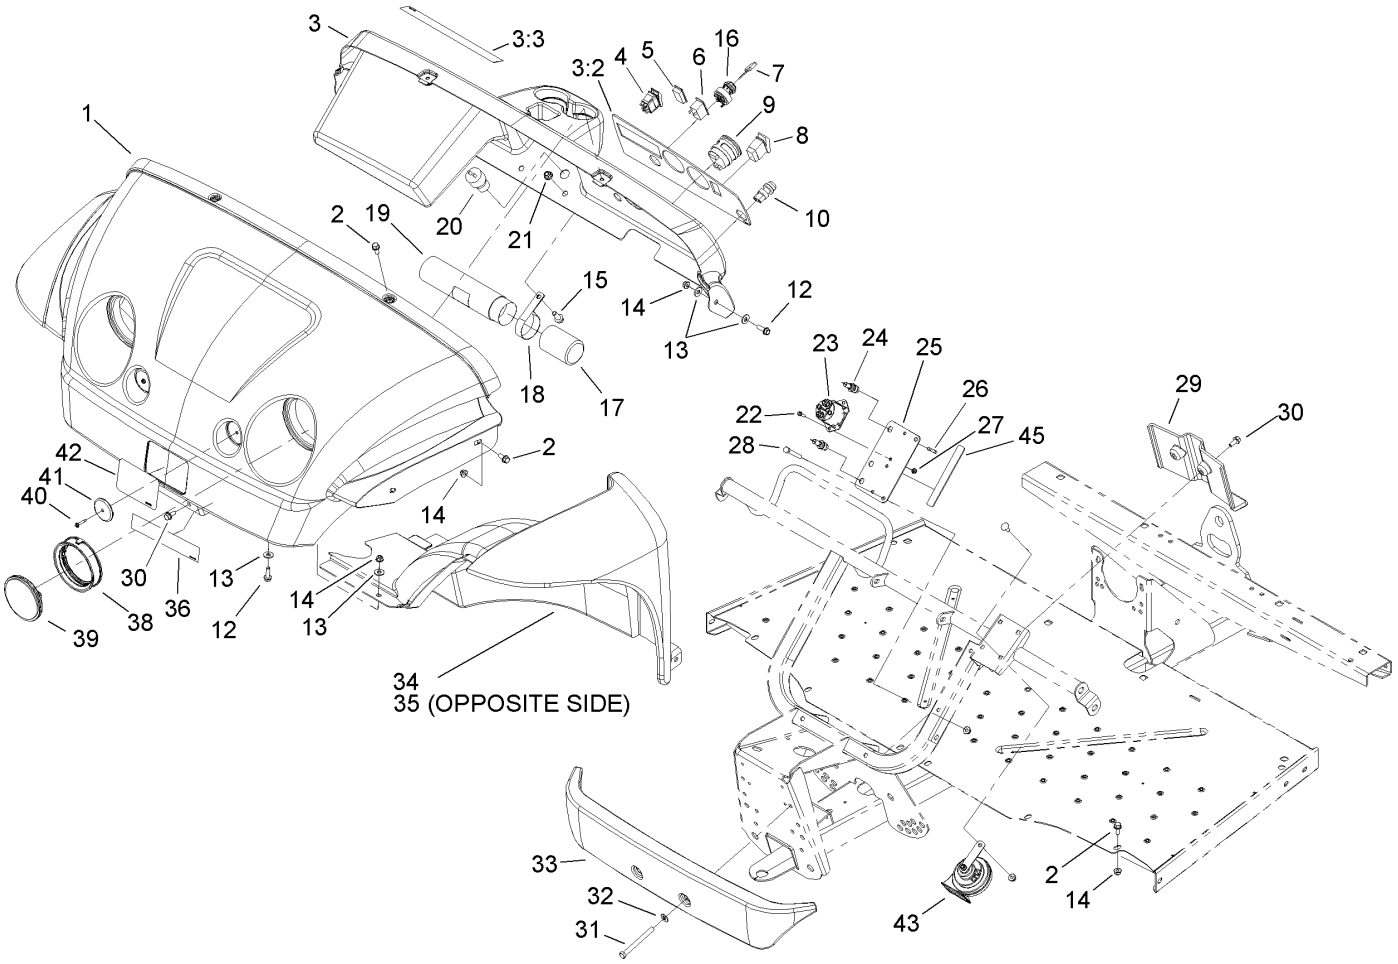

Hood and Fender Assembly


Ref	Part No.	Qty.	Description
1	104-7003	1	Hood
2	3234-5	14	Screw
3	104-7216	1	Electric Dash ASM
3:2	104-7214	1	Decal-Dash, Electric
3:3	104-7215	1	Decal-Danger, Electric Vehicle
4	107-0255	1	Switch
5	99-7420	2	Plug-Hole
6	104-7129	1	Light-Indicator
7	99-7418	1	Key-Ignition
8	107-0747	1	Switch-Rocker, On-None-On
9	107-0260	1	Guage-Hour/battery Level, 48 Volt
10	18-2830	1	Button-Horn
12	3234-17	4	Screw-HHF
13	3256-3	8	Washer-Flat
14	104-8300	14	Nut-Flange, NI
15	3234-11	2	Screw-HHF
16	107-0348	1	Switch-Key, 48v
17	104-7048	1	Cap-Housing
18	2412-133	2	R-Clamp
19	104-7050	1	Housing-Manual
20	94-5245	1	Switch-Key
21	104-8301	2	Nut-Flange, NI
22	32105-13	2	Screw-SHH
23	104-7135	1	Solenoid

Ref	Part No.	Qty.	Description
24	218-489	2	Holder-Fuse
25	104-7252	1	Mount-Solenoid
26	98-8876	2	Fuse-10 Amp
27	32149-7	2	Nut-Keps
28	322-11	2	Screw-HH
29	104-7075	1	Cover-Channel
30	104-7206	4	Screw HHF
31	323-42	2	Screw-HH
32	3256-24	2	Washer-Flat
33	99-7733	1	Bumper-Plastic
34	104-7076	1	LH Fender ASM
35	104-7077	1	RH Fender ASM
36	104-7120	1	Decal-Electric
38	99-7311	2	Mount-Headlight
39	104-7312	2	Headlight
40	32144-89	2	Screw-Forming, Thread
41	99-7312	2	Reflector
42	99-7339	1	Decal
43	107-0358	1	Horn
45	107-0287	1	Decal-Fuse

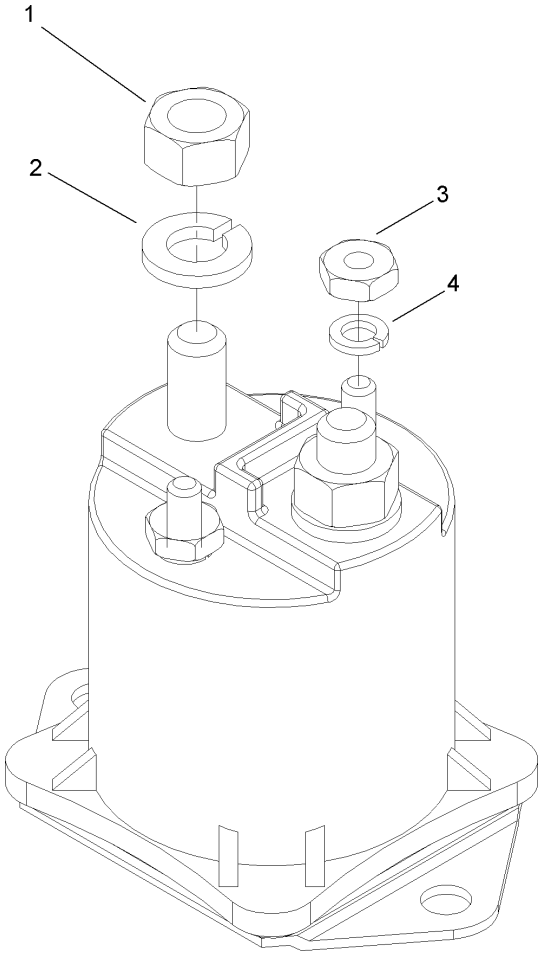

Solenoid Assembly No. 104-7135


Ref	Part No.	Qty.	Description
1	3217-6	2	Nut-Hex
2	3253-4	2	Washer-Lock
3	3219-14	2	Nut-Hex
4	3253-17	2	Washer-Lock/sp

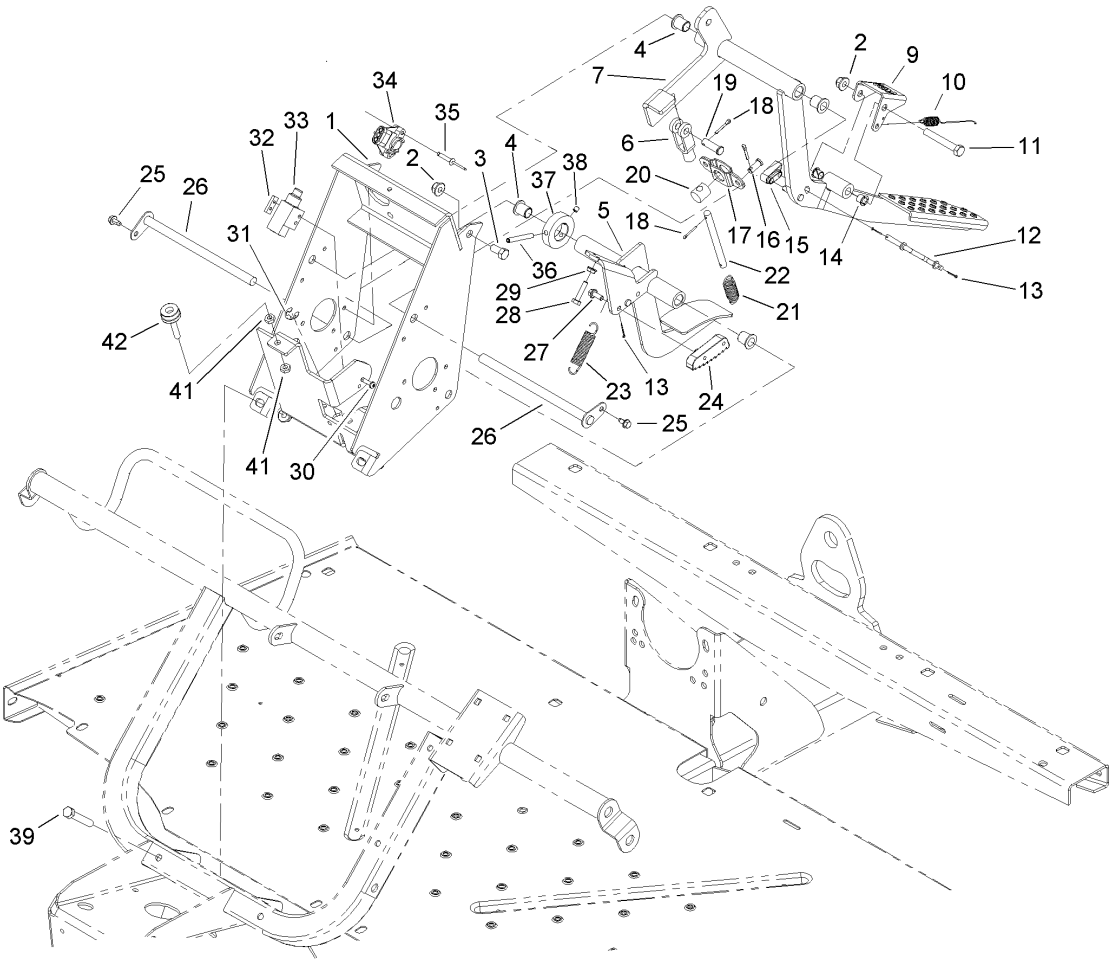

Pedal Assembly

Ref	Part No.	Qty.	Description
1	104-7160-03	1	Frame-Pedals
2	104-8301	5	Nut-Flange, NI
3	323-4	2	Screw-HH
4	256-155	4	Bushing-Flange
5	104-7165-03	1	Pedal-Throttle
6	1-633131	1	Yoke-Linkage, Brake
7	104-7170-03	1	Pedal-Brake
9	104-6613	1	Pedal-Park
10	92-6945	1	Spring-Extension
11	323-12	1	Screw-HH
12	104-6616	1	Rod-Park
13	3272-4	4	Pin-Cotter
14	52-2891	2	Bushing-Link, Steering
15	104-6624	1	Detent-Brake
16	283-62	2	Pin-Clevis
17	104-6599	1	Pivot-Brake
18	3272-10	4	Pin-Cotter
19	283-2	1	Pin-Clevis
20	104-6598	1	Pin-Pivot
21	613386	1	Spring-Brake
22	104-6597	1	Rod-Threaded
23	104-6415	1	Spring-Return, Pedal
24	104-6614	1	Pawl-Brake
25	12-3270	2	Screw


Ref	Part No.	Qty.	Description
26	104-7164	2	Pivot-Pedals
27	3234-33	2	Screw-HHF
28	321-7	2	Screw-HH
29	32149-2	2	Nut
30	104-7221	2	Screw-PPH
31	32120-47	2	Ring-Retaining, External
32	1-633181	1	Plate-Tapped
33	99-7407	1	Switch
34	104-7365	1	Sensor-Position, Rotary
35	107-0386	2	Rivet-Blind
36	32121-78	1	Pin-Roll
37	104-7301	1	Collar
38	3245-32	2	Screw-HS
39	323-11	2	Screw-HH
41	3218-2	2	Nut-Jam
42	32141-36	1	Screw-Adjustment, Level

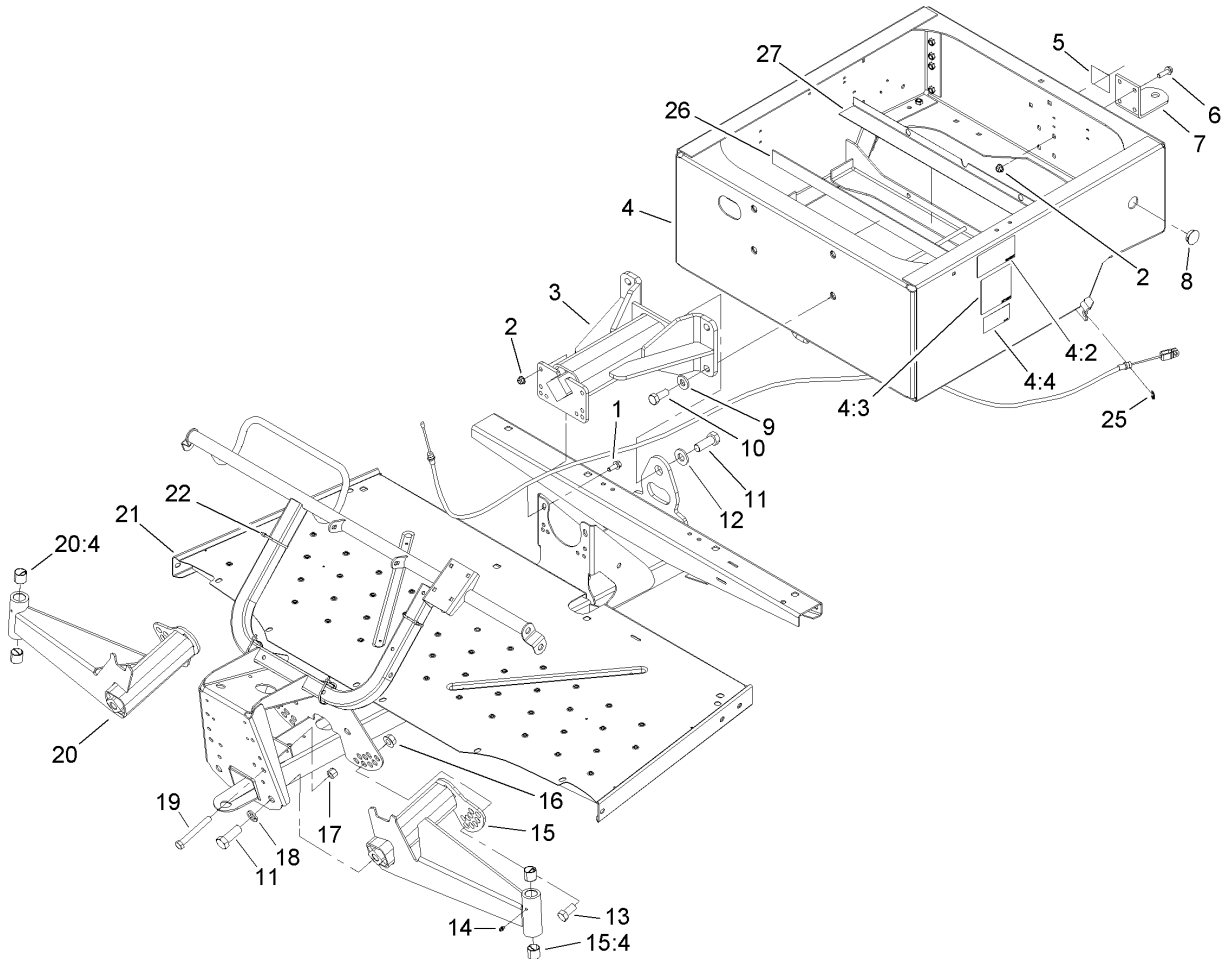

Frame Assembly


Ref	Part No.	Qty.	Description
1	3234-11	4	Screw-HHF
2	104-8301	8	Nut-Flange, NI
3	99-7700	1	Pivot Yoke ASM
4	104-7130	1	Rear Frame ASM
4:2	104-7207	2	Decal-Electric
4:3	107-0257	1	Decal-Polarity
4:4	104-7131	1	Decal-Capacity, Electric
5	99-7350	1	Decal-Information
6	3234-24	4	Screw-HHF
7	99-7654-03	1	Hitch-Duty, Light
8	94-1402	1	Plug-Hole
9	99-7667	4	Washer-Flat
10	327-4	4	Screw-HH
11	328-24	5	Screw-HH
12	87-3060	1	Washer-Hardened
13	3214-2	2	Screw-HH
14	302-5	2	Fitting-Grease
15	99-7685	1	LH A-Arm ASM
15:4	3-0348	2	Bushing
16	32128-54	2	Nut-Flange
17	3296-23	2	Nut-Lock, NI
18	3254-7	4	Washer-Lock, Int
19	325-17	2	Screw-HH
20	99-7684	1	RH A-Arm ASM

Ref	Part No.	Qty.	Description
20:4	3-0348	2	Bushing
21	104-7197-03	1	Front Frame ASM
22	3290-379	11	Tie-Cable
25	32120-47	2	Ring-Retaining, External
26	107-0252	1	Pad-Battery
27	107-0267	4	Isolator-Battery

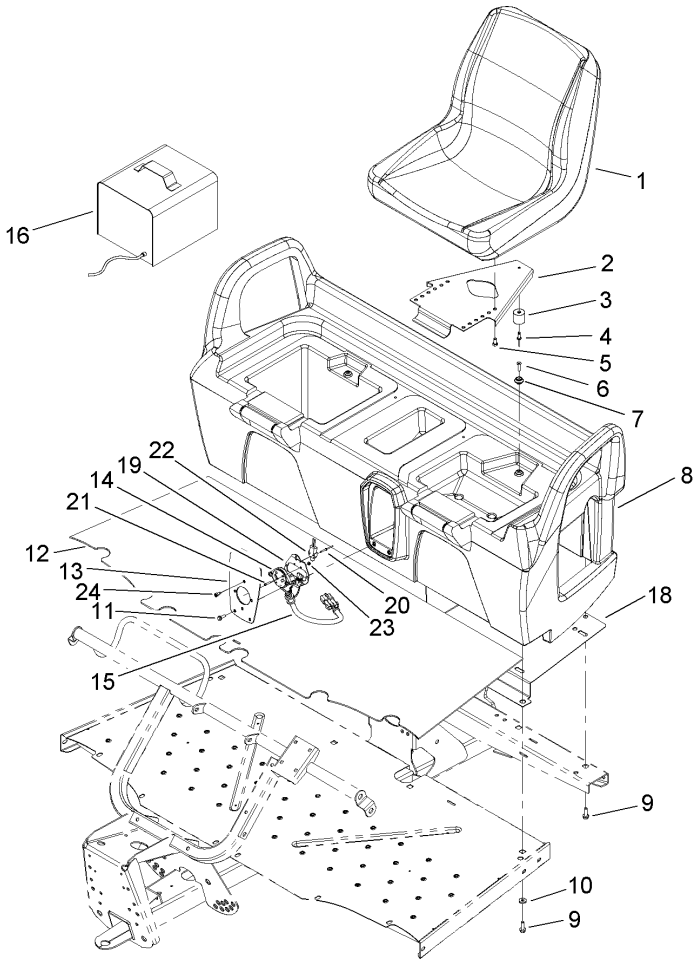


Seat Base Assembly

Ref	Part No.	Qty.	Description
1	106-6672	2	Seat
2	99-7829	2	Bracket-Seat
3	99-7830	2	Rubber Receptical ASM
4	3290-412	2	Rivet
5	33114-016	8	Screw-HH
6	32108-5	2	Screw-FH
7	99-7833	2	Post-Holding
8	104-6401	1	Seat Base ASM
9	3234-17	8	Screw-HHF
10	88-7200	4	Washer-Flat
11	32105-15	4	Screw
12	104-6590	1	Mat-Floor
13	107-0370	1	Plate-Receptacle
14	107-0288	1	Receptacle-Charger
15	107-0746	1	Harness-Wire, Charger
16	107-0364	1	Charger-48v, Offboard
18	107-0359-03	1	Tray-Seatbase
19	107-0716	1	Bracket-Mount, Socket
20	107-0333	2	Rivet-Pop
21	107-0334	2	Screw-HSH
22	99-3410	1	Switch
23	3296-9	2	Nut-Lock, NI
24	32104-17	4	Screw-HWH

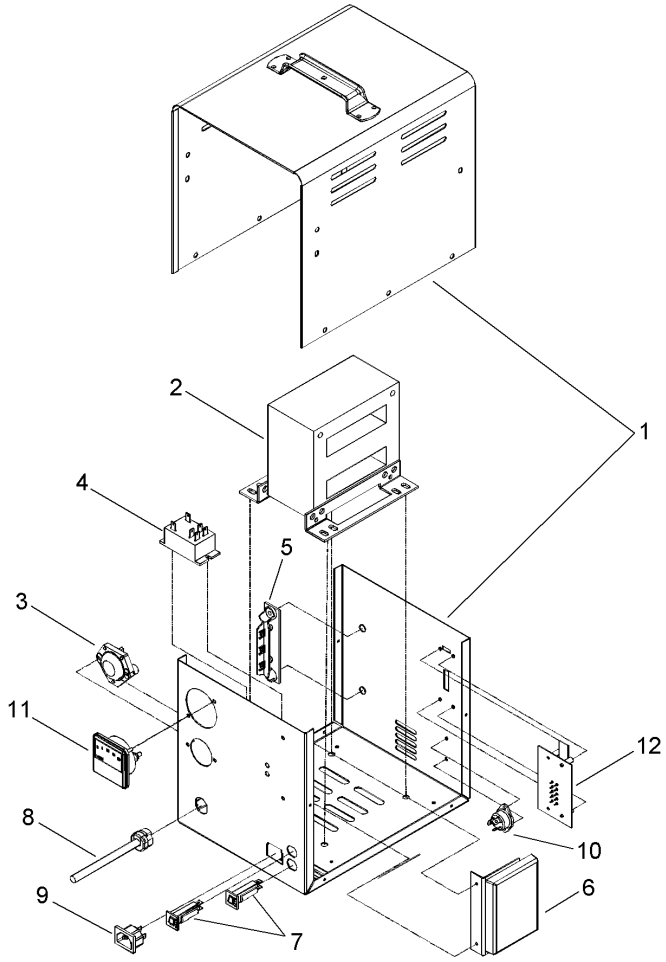


Offboard 48 Volt Charger Assembly No. 107-0364

Ref	Part No.	Qty.	Description
❷1		1	Case ASM
❷2		1	Transformer ASM
3	108-1161	1	Fuse ASM
4	108-1170	1	Relay, 48v Dc
5	108-1163	1	Diode ASM
6	108-1171	1	Control Board ASM
7	108-1172	1	Breaker-Circuit
8	108-1173	1	Kit-Cordset
9	108-1174	1	Connnector-Inlet
10	108-1168	1	Scr W/terminals
11	108-1175	1	Ammeter
12	108-1176	1	Switch ASM

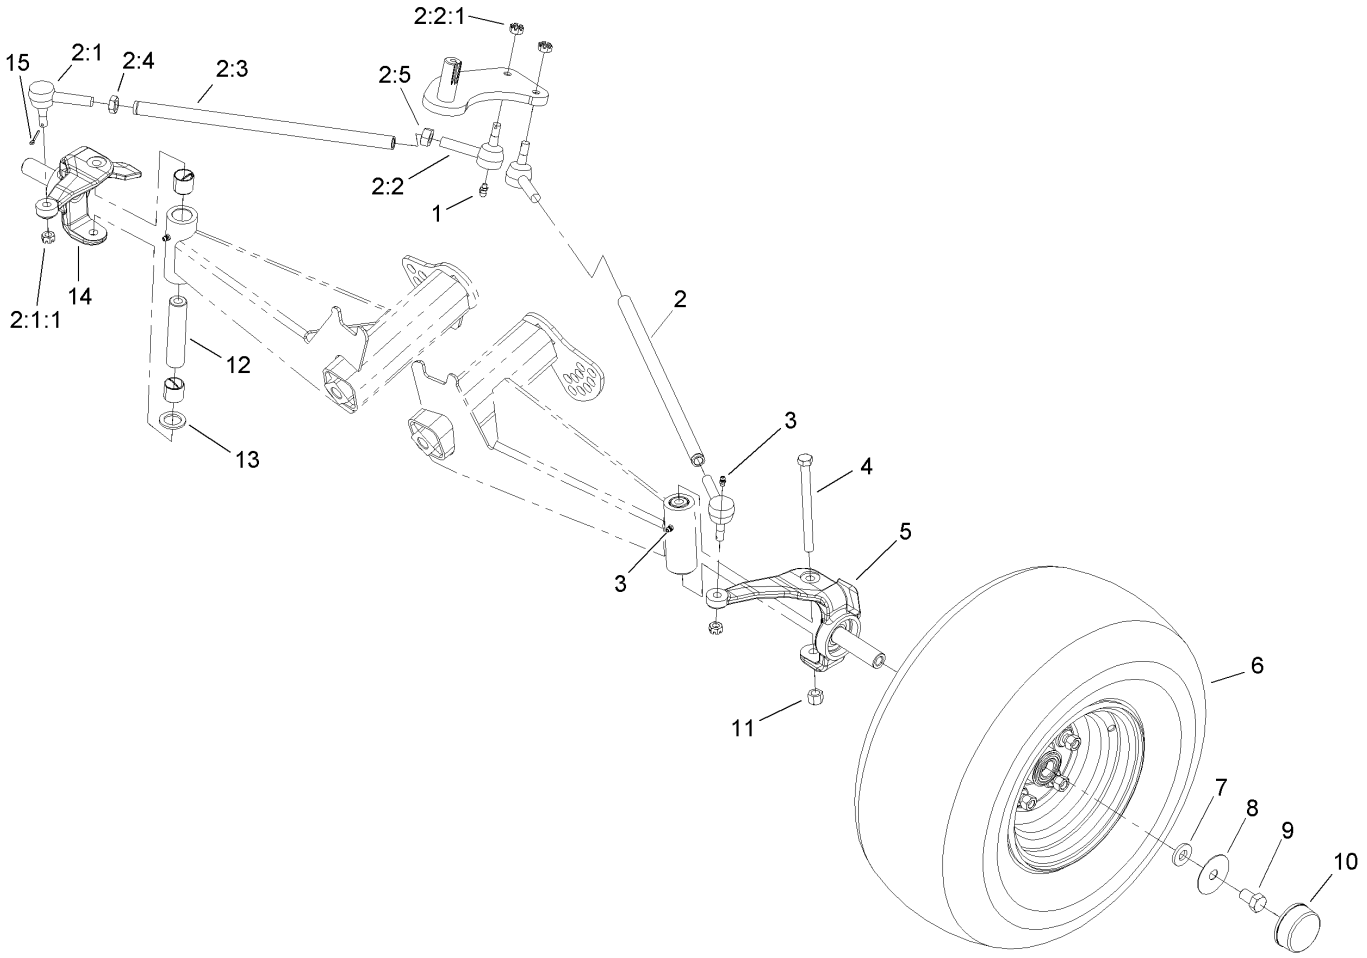


Front Tire and Steering Assembly

Ref	Part No.	Qty.	Description
1	302-60	2	Fitting-Grease
❷2		2	Tie Rod ASM
2:1	112772	1	Joint-Ball, RH
2:1:1	915031	1	Nut
2:2	112771	1	Joint-Ball, LH
2:2:1	915031	1	Nut
2:3	99-7600-03	1	Rod-Tie
2:4	3220-11	1	Nut-Jam
2:5	3218-21	1	Nut-Jam
3	302-5	2	Fitting-Grease
4	325-20	2	Screw-HH
5	99-7486-03	1	Spindle-LH
❷6		2	Tire, Wheel And Hub ASM
7	99-7667	2	Washer-Flat
8	99-7719	2	Washer
9	327-2	2	Screw-HH
10	94-7871	2	Cap-Dust
11	3296-23	2	Nut-Lock, NI
12	99-7499	2	Sleeve-Kingpin
13	256-115	2	Washer-Thrust
14	99-7487-03	1	Spindle-RH
15	3272-7	4	Pin-Cotter

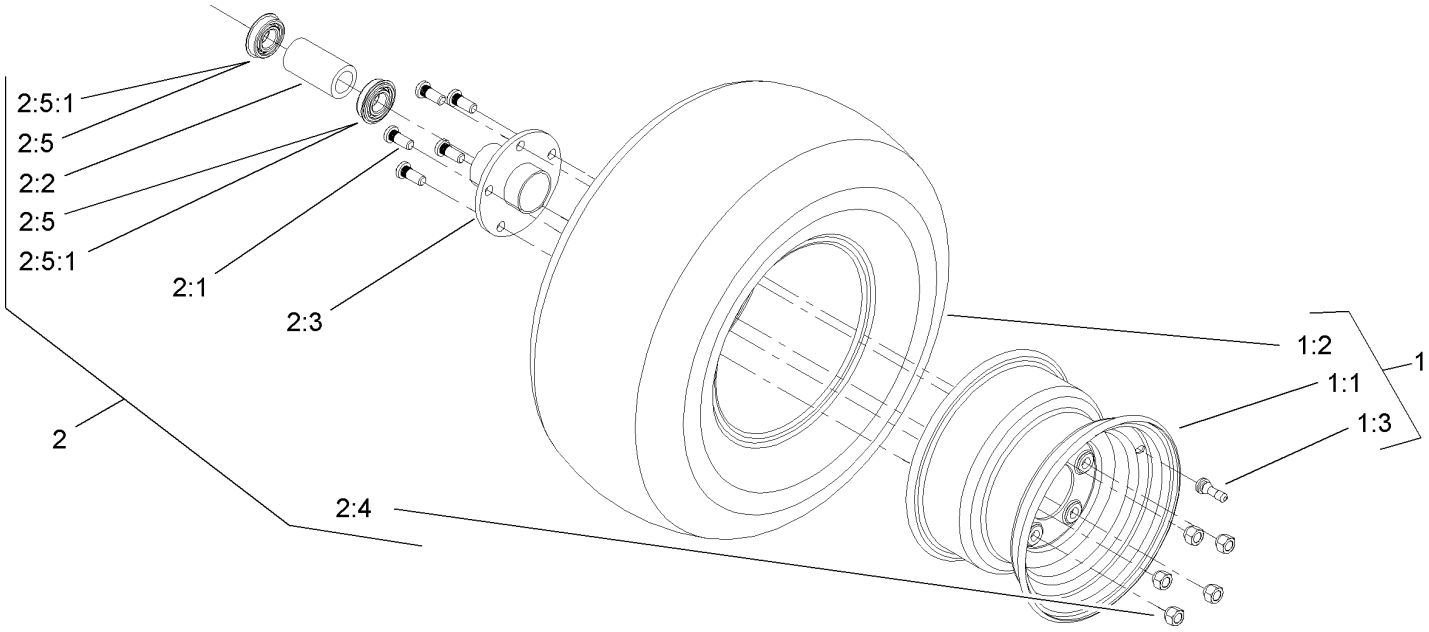

Tire, Wheel and Hub Assembly


Ref	Part No.	Qty.	Description
1	104-7290	1	Tire/wheel ASM
1:1	104-7288	1	Wheel
1:2	104-7289	1	Tire
1:3	232-27	1	Stem-Valve
2	104-7287	1	Hub And Flange ASM
2:1	104-7283	5	Stud
2:2	104-7284	1	Spacer
2:3	104-7286	1	Hub And Flange
2:4	242-50	5	Nut-Lug
2:5	94-7538	2	Bearing
2:5:1	94-2053	1	Ring-Snap

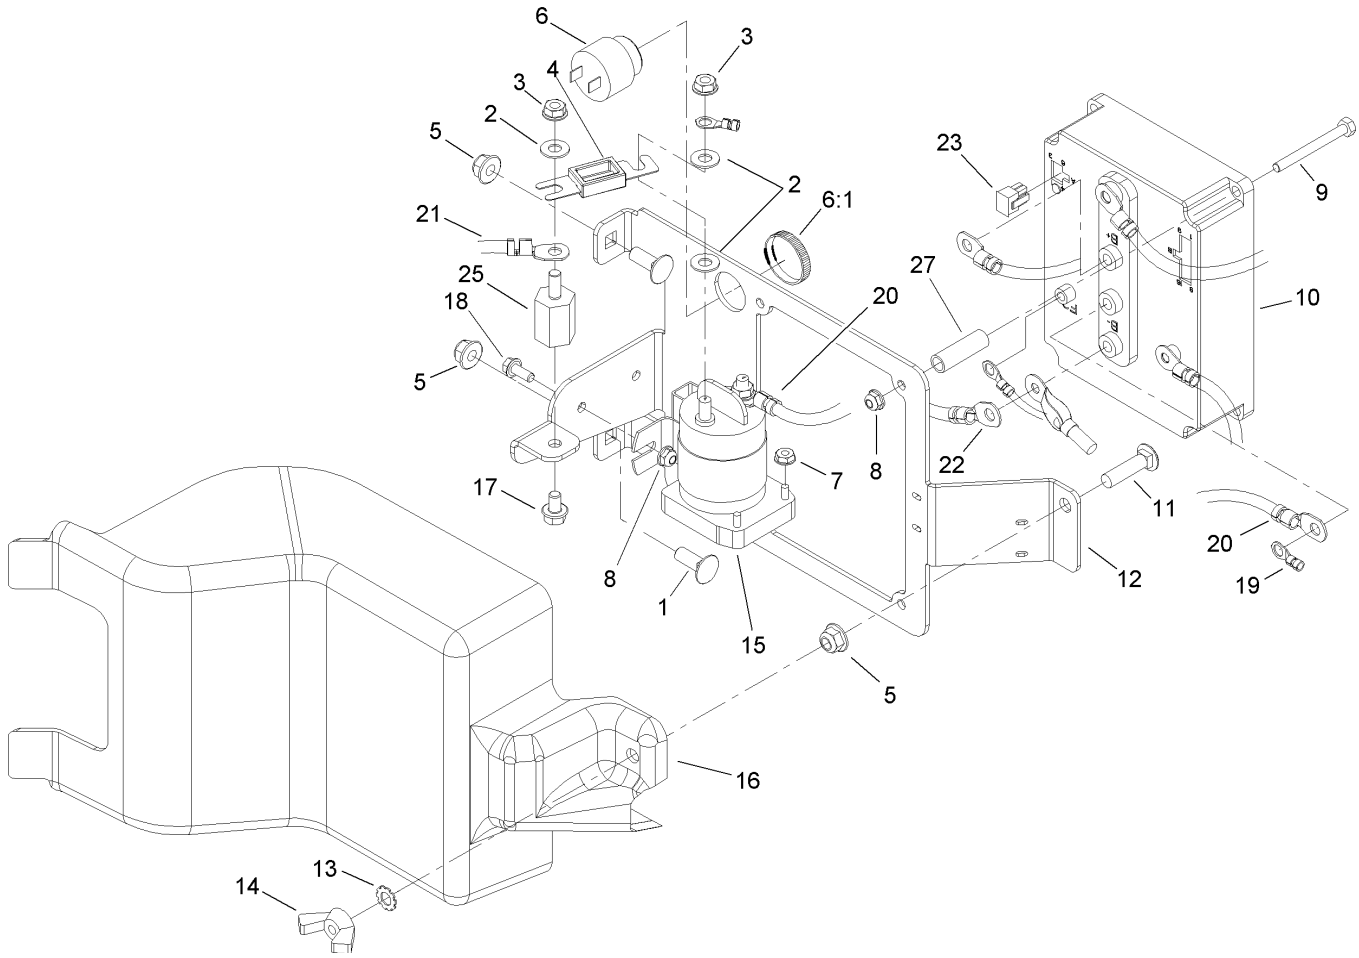

Controller Assembly

Ref	Part No.	Qty.	Description
1	3231-22	2	Screw-CARR
2	107-0394	3	Washer-Flat
3	107-0380	3	Nut-HHF
4	104-7320	1	Fuse
5	104-8301	3	Nut-Flange, NI
6	94-5582	1	Alarm-Audio
6:1	104-5107	1	Nut-Plastic, Knurled
7	32149-8	2	Nut-Keps
8	104-7201	6	Nut-HF
9	321-15	4	Screw-HH
10	104-7337	1	Controller
11	3231-4	1	Screw-CARR
12	104-7137-03	1	Mount-Controler
13	3255-9	1	Washer-Lock, Ext
14	32103-3	1	Nut-Wing
15	104-7136	1	Contactor-48v
16	104-7138	1	Cover-Controller
17	100-1719	1	Screw-Flange
18	3234-33	2	Screw-HHF
19	107-0730	1	Harness-Wire, Electric Mid Duty
20	107-0740	1	Cable-Battery, Positive
21	107-0741	1	Cable-Battery, Positive
22	107-0742	1	Cable-Battery, Negative
23	32160-130	1	Connector


Ref	Part No.	Qty.	Description
❶24	107-0737	1	Harness-Wire, Battery Cable
25	107-0286	1	Isolator
27	107-0285	4	Spacer
❶28	3290-379	2	Tie-Cable

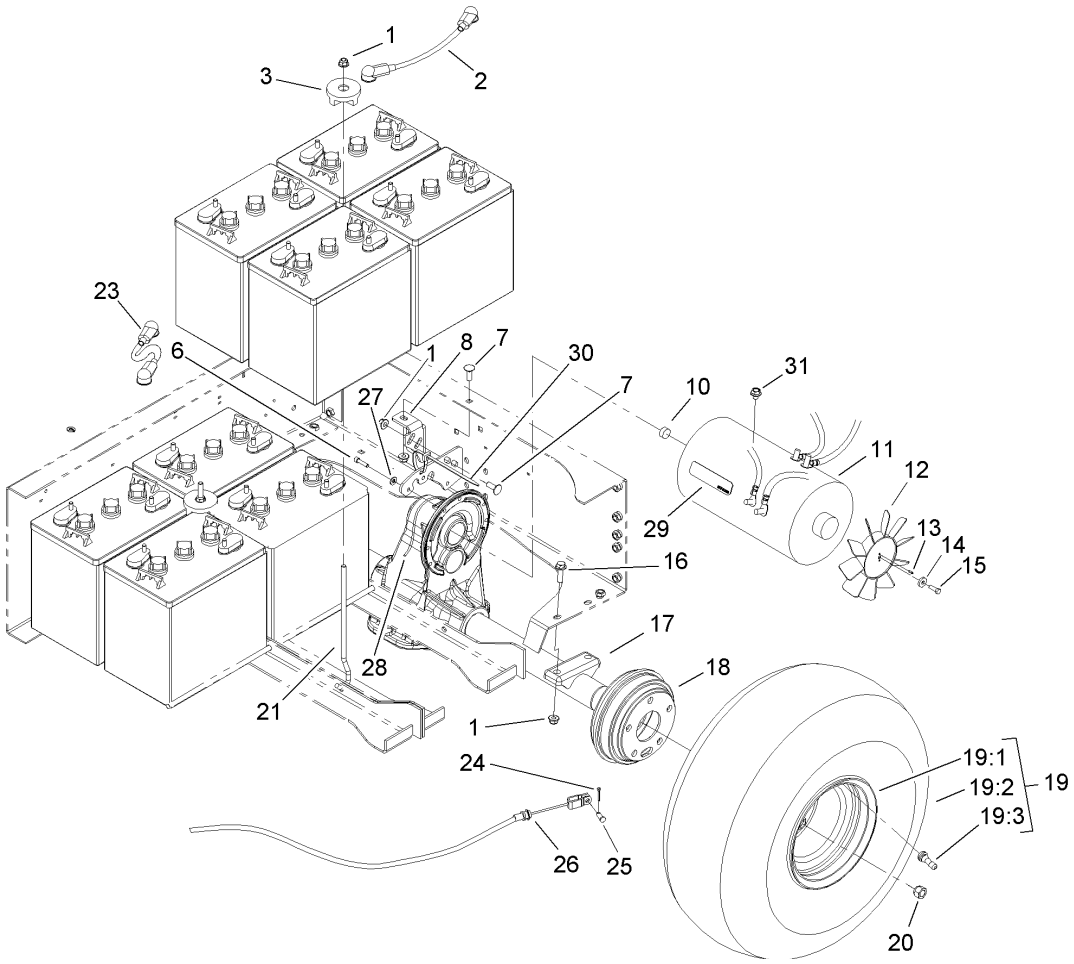

Battery and Transaxle Assembly


Ref	Part No.	Qty.	Description
1	104-8301	14	Nut-Flange, NI
2	107-0739	1	Cable-Battery, Positive
3	104-7149	2	Hold Down Assembly
6	3274-26	6	Screw-HSH
7	3231-22	5	Screw-CARR
8	104-7249-03	1	Bracket-Support
10	104-7243	1	Damper-Rubber
11	104-7335	1	Motor-Electric
12	107-0259	1	Fan-10 Blade, Clockwise
13	32121-68	2	Pin-Roll
14	73-3580	1	Washer
15	3274-8	1	Screw-HSH
16	3234-24	4	Screw-HHF
17	104-7378	1	Transaxle-Electric
18	104-6500	2	Drum-Brake
19	104-7290	2	Tire/wheel ASM
19:1	104-7288	1	Wheel
19:2	104-7289	1	Tire
19:3	232-27	1	Stem-Valve
20	242-50	10	Nut-Lug
21	104-7339	2	Rod-Battery
23	107-0738	6	Cable-Battery, Positive
24	3272-10	2	Pin-Cotter
25	283-62	2	Pin-Clevis

Ref	Part No.	Qty.	Description
26	104-7324	2	Cable-Brake
27	3256-22	6	Washer-Flat
28	5-4542	1	Line-Gas
29	107-0356	1	Decal-Motor
30	3290-379	12	Tie-Cable
31	107-0376	1	Screw-HSFH

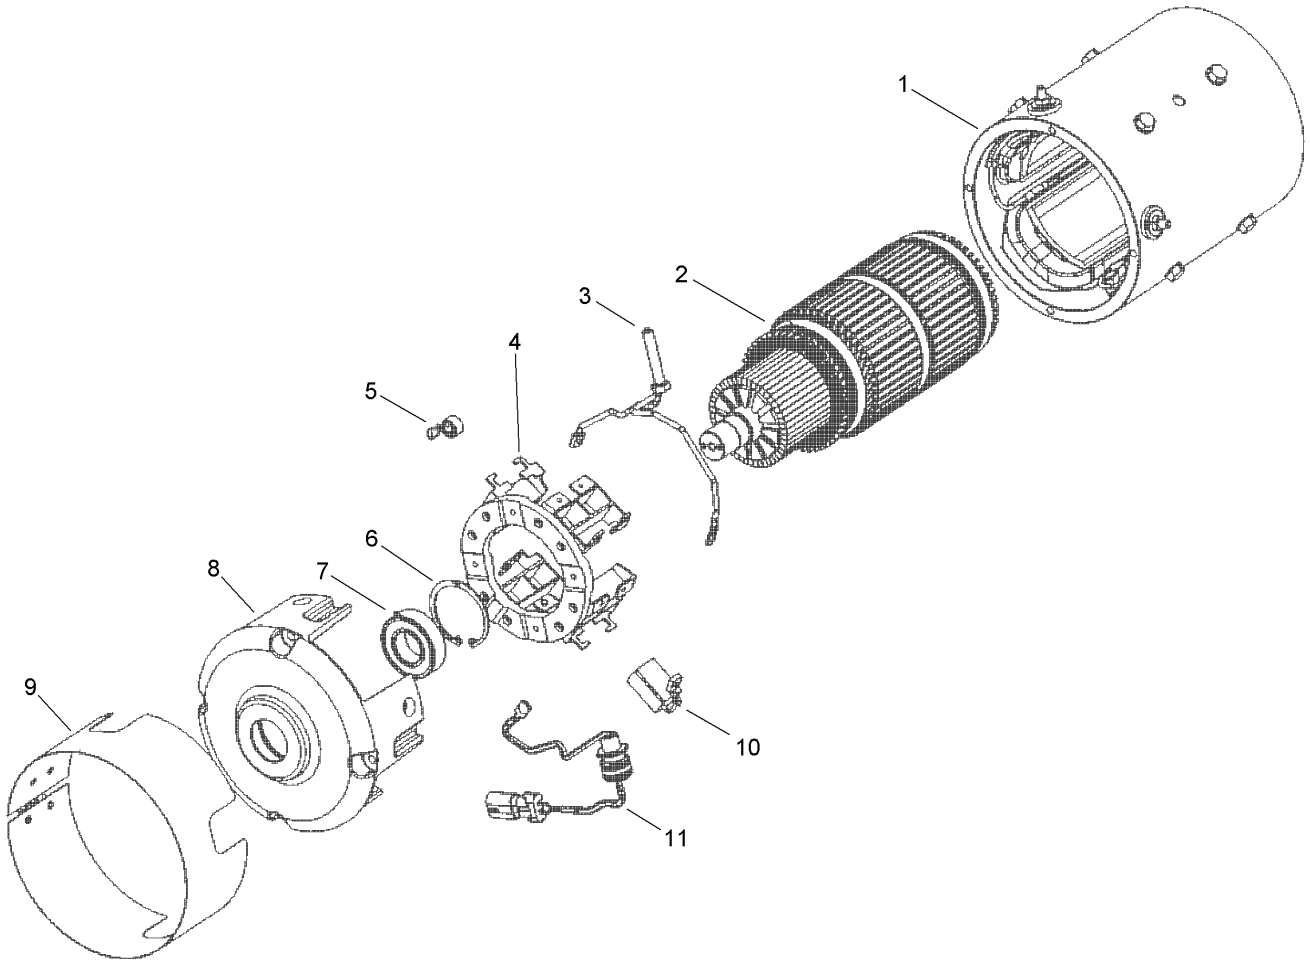

Electric Motor Assembly No. 104-7335


Ref	Part No.	Qty.	Description
❷1		1	Frame And Field ASM
❷2		1	Armature ASM
3	108-1151	2	Brush Lead ASM
4	108-1152	1	Brush Box ASM
5	108-1153	8	Spring-Brush
6	108-1154	1	Ring-Retaining
7	108-1155	1	Bearing
8	108-1156	1	Head-Commutator
9	108-1157	1	Headband ASM
10	108-1158	8	Brush
11	108-1159	1	Thermal Sensor ASM

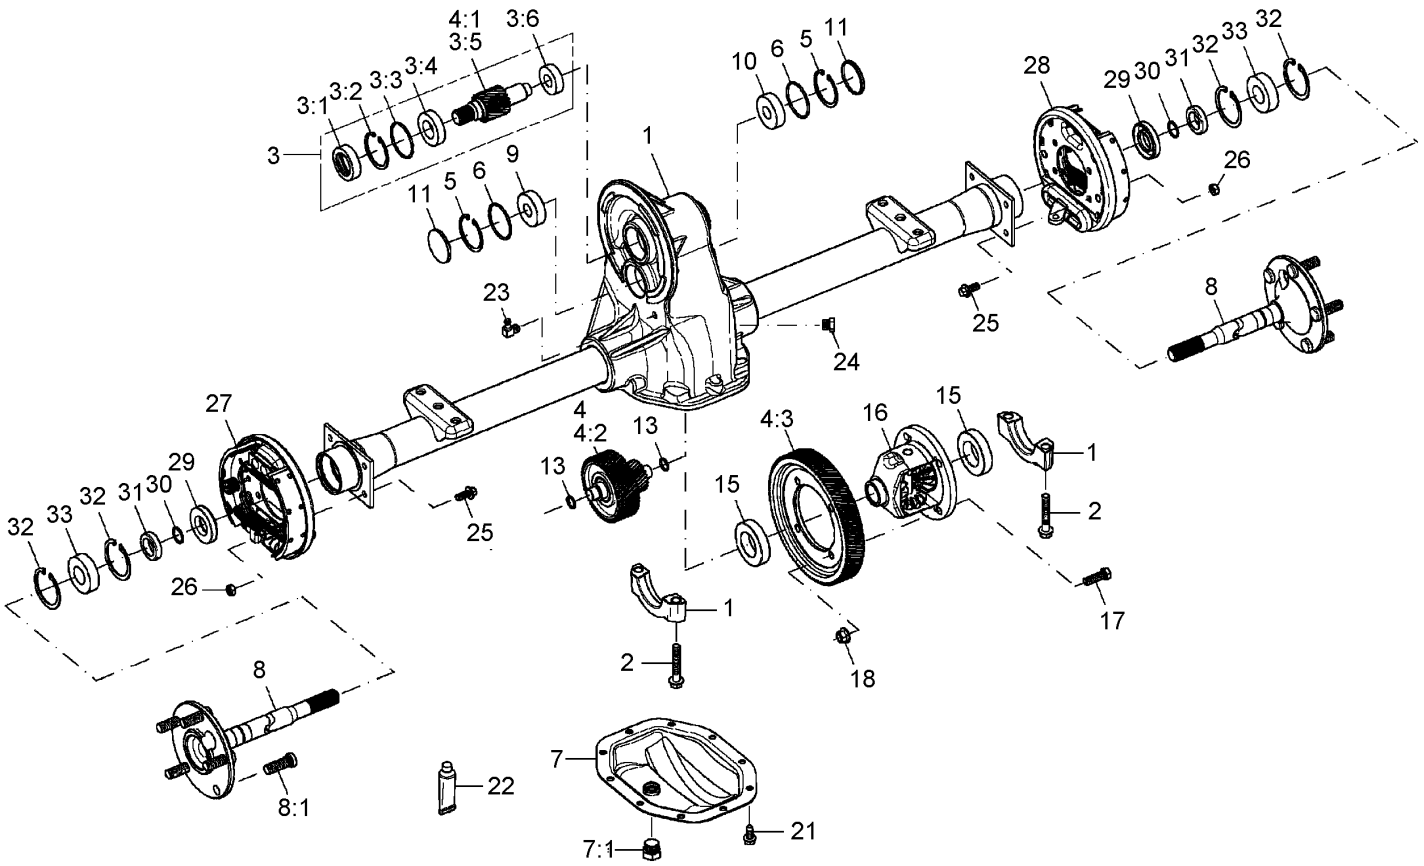

Electric Transaxle Assembly No. 104-7378


Ref	Part No.	Qty.	Description
❷1		1	Housing ASM
2	108-2401	4	Bolt-Cap, Bearing
3	108-2402	1	Input Shaft Kit
3:1	108-2403	1	Seal-Oil
3:2	108-2404	1	Ring-Retaining
3:3	108-2405	1	O-Ring
❷3:4		1	Bearing-Ball
❷3:5		1	Shaft-Input
❷3:6		1	Bearing-Ball
4	108-2409	1	Internal Gear Kit
❷4:1		1	Shaft-Input
❷4:2		1	Gear-Intermediate
❷4:3		1	Gear-Drive, Final
5	108-2404	2	Ring-Retaining
6	108-2405	2	O-Ring
7	108-2416	1	Cover Kit
7:1	108-2415	1	Plug-HH
8	108-2426	1	Axle Shaft Kit
8:1	106-9205	5	Stud-Wheel
9	108-2406	1	Bearing-Ball
10	108-2407	1	Bearing-Ball
11	108-2408	2	Plug-Cap, End
13	108-2410	2	O-Ring
15	108-2411	2	Bearing-Ball

Ref	Part No.	Qty.	Description
16	108-2412	1	Differential ASM
17	108-2413	4	Screw-Hex
18	108-2414	4	Nut-Lock
21	108-2427	10	Screw-Tapping
❷22		1	Sealant
23	108-2428	1	Elbow-90 Degree
24	108-2429	1	Plug-HH
25	108-2417	8	Screw-Head, Flange
26	108-2418	8	Nut-Lock
27	108-2419	1	LH Brake ASM
28	108-2420	1	RH Brake ASM
29	108-2421	2	Seal-Oil
30	108-2422	2	Ring-Retaining
31	108-2423	2	Ring-Retaining, Wheel Bearing
32	108-2424	4	Ring-Retaining
33	108-2425	2	Bearing-Ball

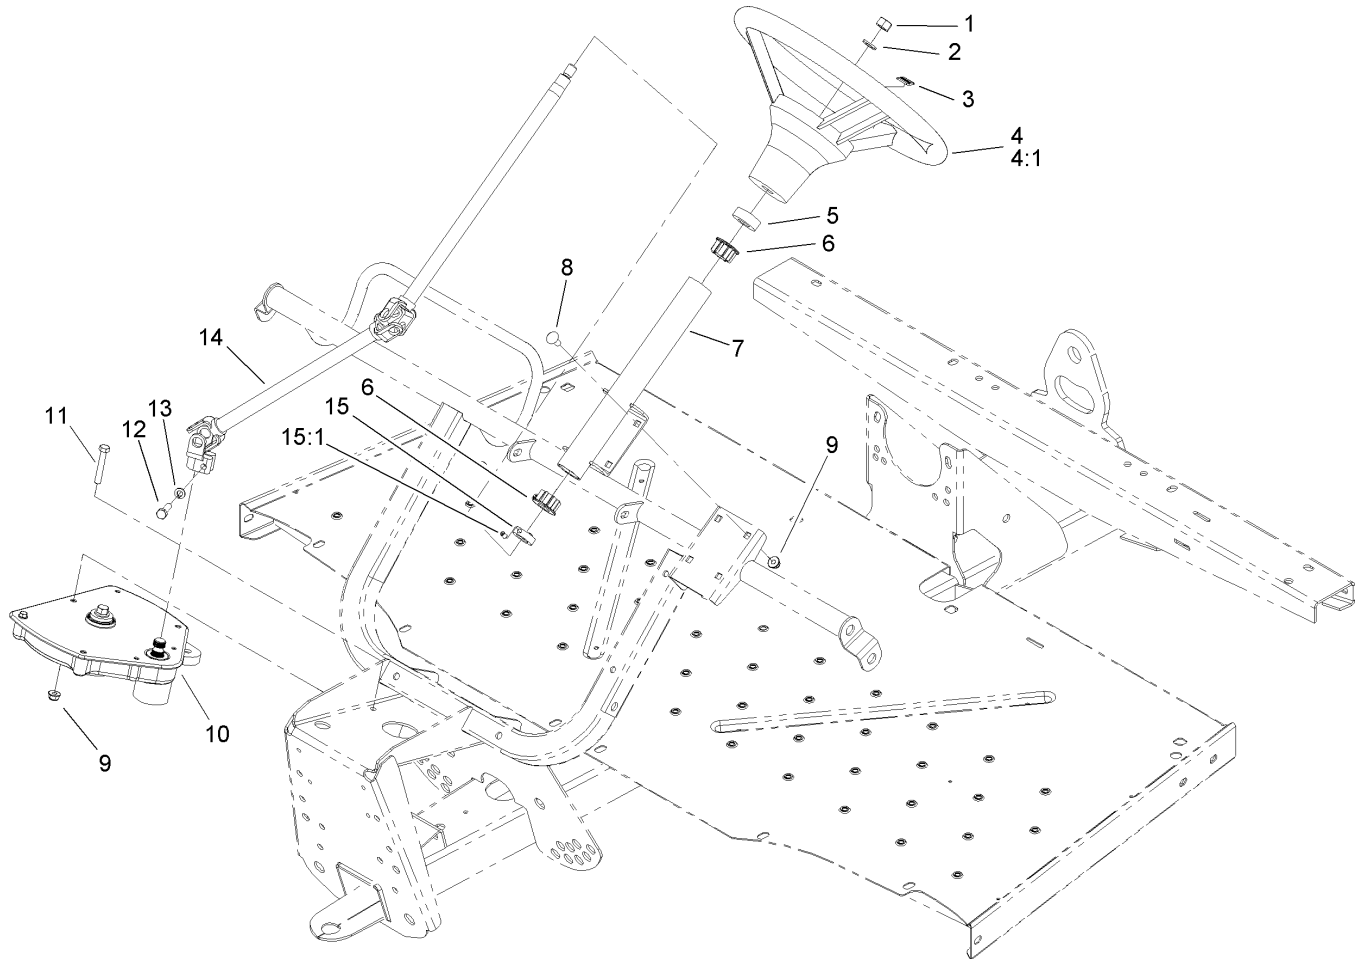


Steering Assembly

Ref	Part No.	Qty.	Description
1	3277-1	1	Nut-Hex
2	48-8070	1	Washer-Lock
3	98-1459	1	Decal
4	98-1471	1	Wheel-Steering
4:1	98-1468	1	Cover-Wheel, Steering
5	21-9260	1	Cover-Dust
6	93-1146	2	Bushing-Upper, Steering
7	99-7651-03	1	Column-Steering
8	3230-1	4	Bolt-CARR
9	104-8300	7	Nut-Flange, NI
10	99-7660	1	Steering Gearbox ASM
11	322-10	3	Screw-HH
12	48-7730	1	Screw-HH
13	3253-4	1	Washer-Lock
14	99-7653	1	Shaft-Steering
15	111383	1	Collar
15:1	3245-32	1	Screw-HS

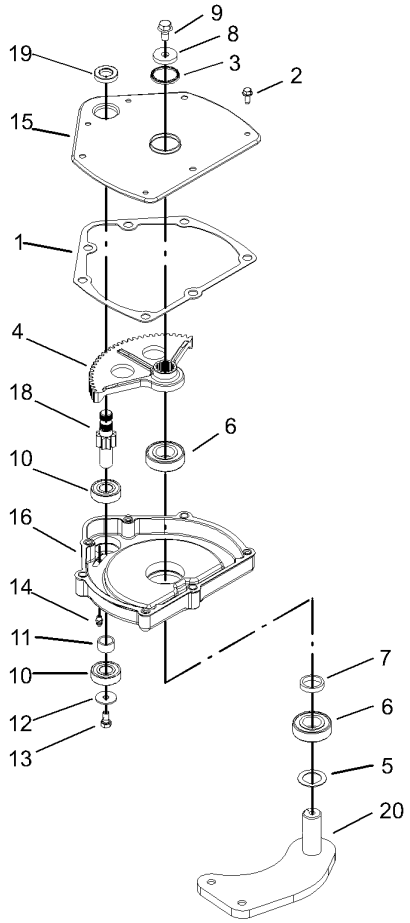


Steering Gearbox Assembly No. 99-7660

Ref	Part No.	Qty.	Description
1	94-2135	1	Gasket
2	32144-10	4	Screw-HWH
3	103118	1	Seal
4	99-7843	1	Sector-Gear
5	3256-42	1	Washer-Flat
6	251-82	2	Bearing-Ball
7	94-2218	1	Spacer-Shaft, Output
8	104-6563	1	Washer-Stepped
9	104-7156	1	Screw-HHF
10	38-7820	2	Bearing-Ball
11	94-2217	1	Spacer-Shaft, Input
12	3256-82	1	Washer-Flat
13	98-3498	1	Screw-HH
14	302-5	1	Fitting-Grease
15	99-7656-03	1	Cover-Housing, Steering
16	99-7658	1	Housing-Steering
18	99-7650	1	Gear-Pinion
19	99-7657	1	Seal-Oil
20	99-7601-03	1	Arm-Pitman

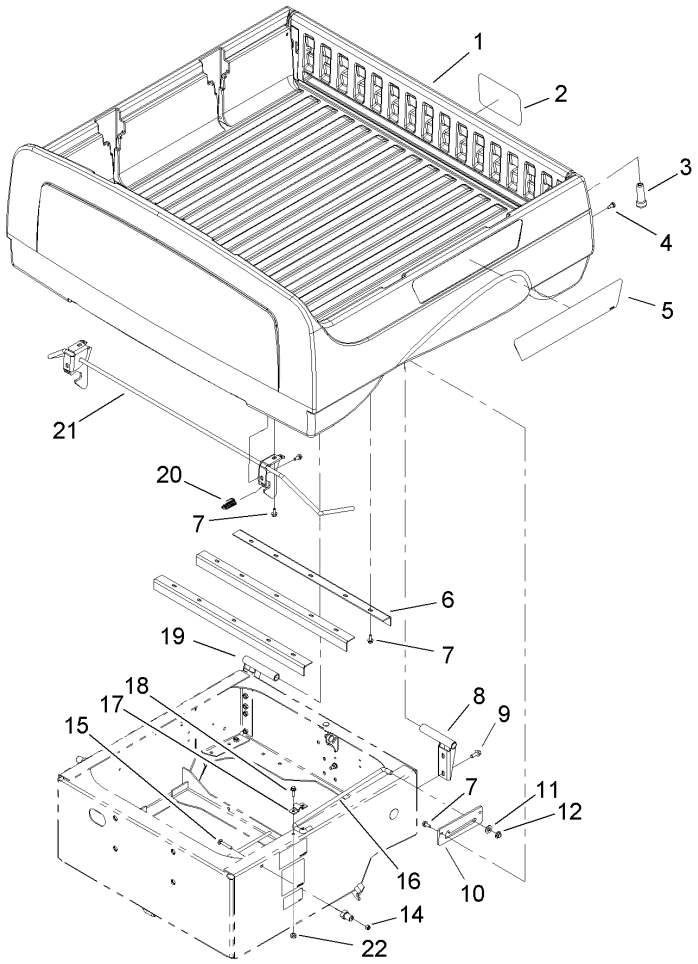

Box and Tailgate Installation Assembly

Ref	Part No.	Qty.	Description
1		1	Box And Tailgate ASM
2	104-7213	1	Decal
3	99-7984	2	Knob-Soft Grip, Push-On
4	87-8460	2	Bumper-Rubber
5	104-7265	2	Decal
6	99-7864-03	3	Brace-Box
7	3234-5	21	Screw
8	99-7308-03	1	LH Pivot Bracket ASM
9	3234-11	4	Screw-HHF
10	99-7894	1	Bracket-Rod, Prop
11	3256-26	1	Washer-Flat
12	32112-14	1	Nut-Push
14	3296-29	2	Nut-Lock, NI
15	3230-7	2	Screw-CARR
16	99-7895	1	Rod-Prop
17	99-7896	1	Bracket-U, Prop Rod
18	3234-17	2	Screw-HHF
19	99-7309-03	1	RH Pivot Bracket ASM
20	5-7290	2	Spring-Tension
21	104-7244	1	Rod-Latch, Welded
22	104-8300	2	Nut-Flange, NI

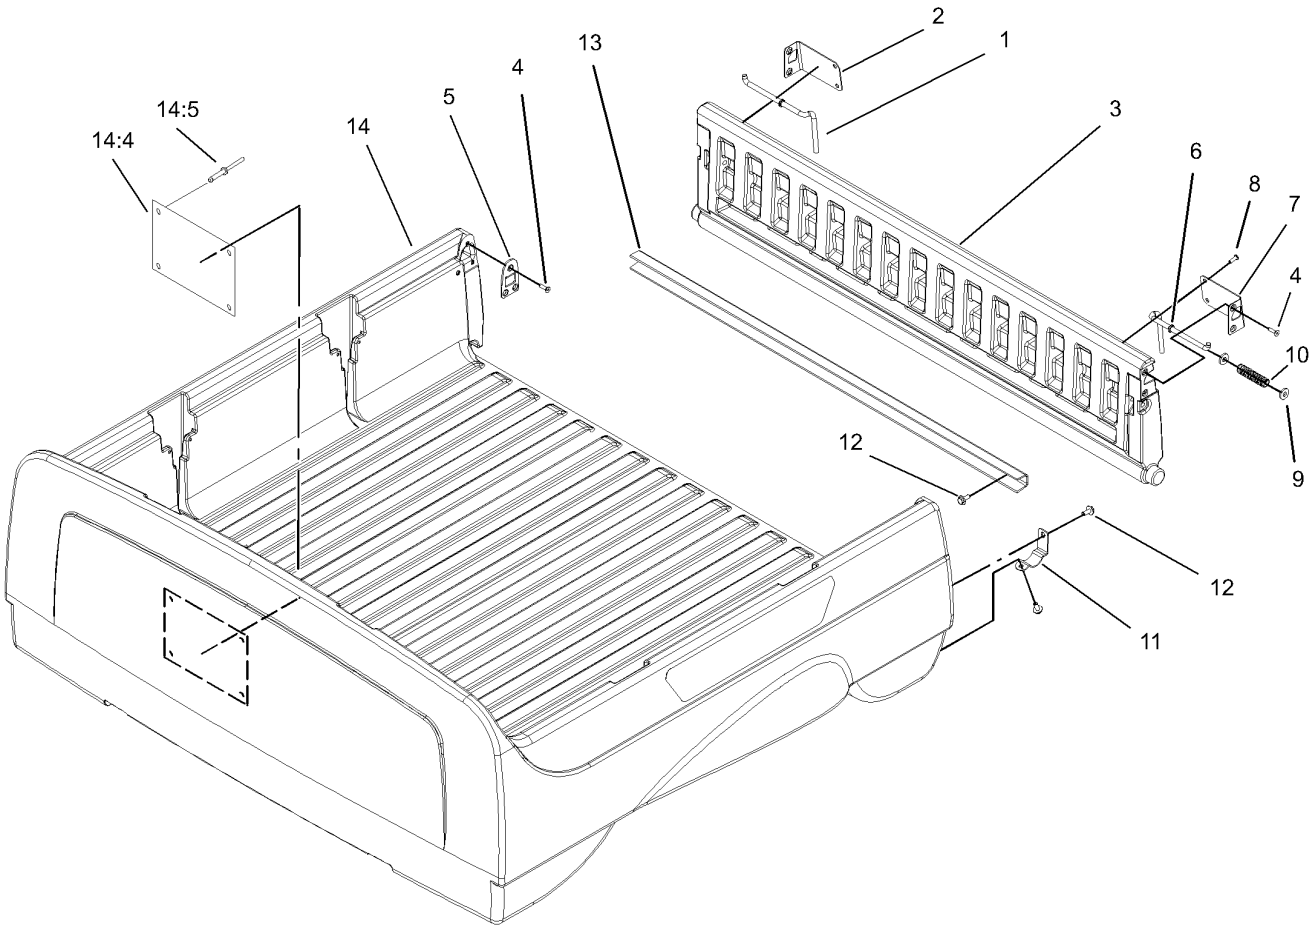

Box and Tailgate Assembly

Ref	Part No.	Qty.	Description
1	99-7860	1	Rod-Latch, Right
2	99-7858	1	Bracket-Tailgate Latch, Right
3	99-7893	1	Tailgate ASM
4	99-7334	10	Screw
5	99-7852	2	Plate-Striker
6	99-7859	1	Rod-Latch, Left
7	99-7857	1	Bracket-Tailgate Latch, Left
8	99-7335	4	Screw
9	99-7861	4	Washer-Latch
10	61-8880	2	Spring
11	99-7286	2	Bracket-Pivot, Tailgate
12	3234-5	10	Screw
13	99-7867	1	Channel-Tailgate
14	104-7203	1	Box ASM
14:4	99-7954	1	Decal-Plate, No Riders
14:5	3290-415	4	Rivet

NOTES


TORO®