Form Number 3351-891

Mid-Size ProLine T-Bar Hydro Traction Unit

Model No. 30187 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Contents

Description	Page
Enigne and Oil Cooler Assembly	3
Pivot and Linkage Assembly	4
Handle Assembly	5
Control Panel Assembly	6
Parking Brake Assembly	7
Fuel Tank, Hydro Pump and Power Take Off Assembly	8
Hydraulic Pump Assembly No. 95-1538	9
Hydraulic and Drive System Assembly	10
Wheel Motor Assembly No. 82-8230	12
Battery Assembly	13
Crankshaft Assembly Kohler CV15S 41630	14
Crankcase Assembly Kohler CV15S 41630	15
Oil Pan / Lubrication Assembly Kohler CV15S 41630	16
Head / Valve / Breather Assembly Kohler CV15S 41630	17
Ignition / Electrical Assembly Kohler CV15S 41630	18
Blower Housing and Baffle Assembly Kohler CV15S 41630	19
Starting System Assembly Kohler CV15S 41630	20
Fuel System Assembly Kohler CV15S 41630	21
Engine Control Assembly Kohler CV15S 41630	22
Air Intake / Filtration Assembly Kohler CV15S 41630	23
Exhaust Assembly Kohler CV15S 41630	24

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HS	hex
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	phillips pan head
PTH	phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head
WH	wing head

Footnotes

❶ Not illustrated

❷ Not serviced separately


❸ Obtain Parts From Your Local Kohler Dealer

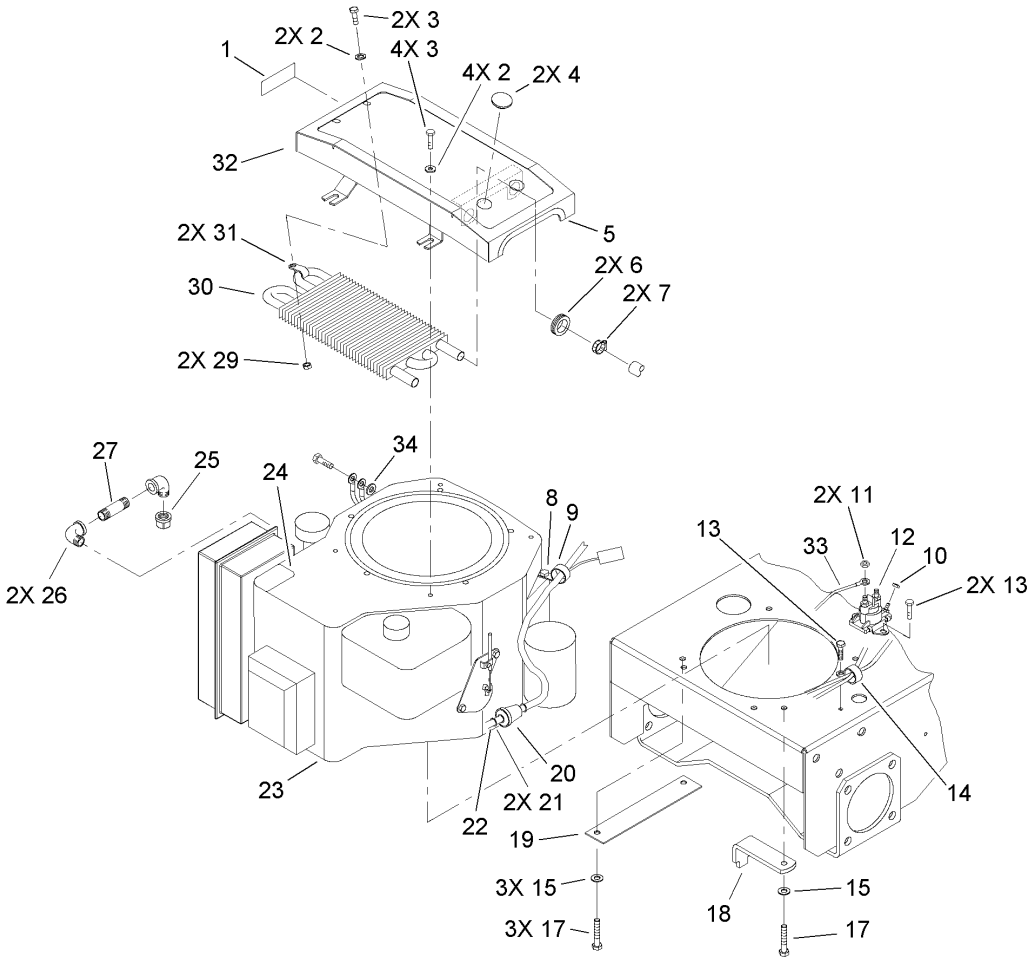

Enigne and Oil Cooler Assembly

Ref	Part No.	Qty.	Description
1	95-2814	1	Decal-Shut Off, Fuel
2	3256-1	6	Washer-Flat
3	321-39	6	Screw-HH
4	2410-71	2	Plug-Plastic
5	29-0642	1	Trim-Mount, Cooler
6	240-9	2	Grommet
7	2412-136	2	Clamp-Hose
8	32144-19	1	Screw-SHWH
9	2412-106	1	Clamp-R
10	32149-8	2	Nut-Keps
11	32149-1	2	Nut
12	28-4210	1	Solenoid
13	32144-4	3	Screw-HWH
14	2412-106	1	Clamp-R
15	3256-23	4	Washer-Flat
17	57-6380	4	Screw-HH
18	51-4540-03	1	Retainer-Clutch
19	94-5847-01	1	Cover-Pulley
20	56-6360	1	Filter-Fuel
21	2412-98	4	Clamp
22	47-2964	1	Hose-Fuel
❷23		1	Engine-Kohler, Cv15s 41630
24	106-0699	1	Decal-Warning, Hot Surfaces
25	288-4	1	Cap-Pipe


Ref	Part No.	Qty.	Description
26	74-0950	2	Elbow-Street, 90 DEG
27	289-46	1	Nipple-Pipe
29	3296-42	2	Nut-Lock, NI
30	100-6480	1	Cooler-Oil
31	2412-134	2	R-Clamp
32	82-4500-03	1	Mount-Cooler
33	54-3092	1	Wire ASM
34	3255-8	1	Washer-Lock

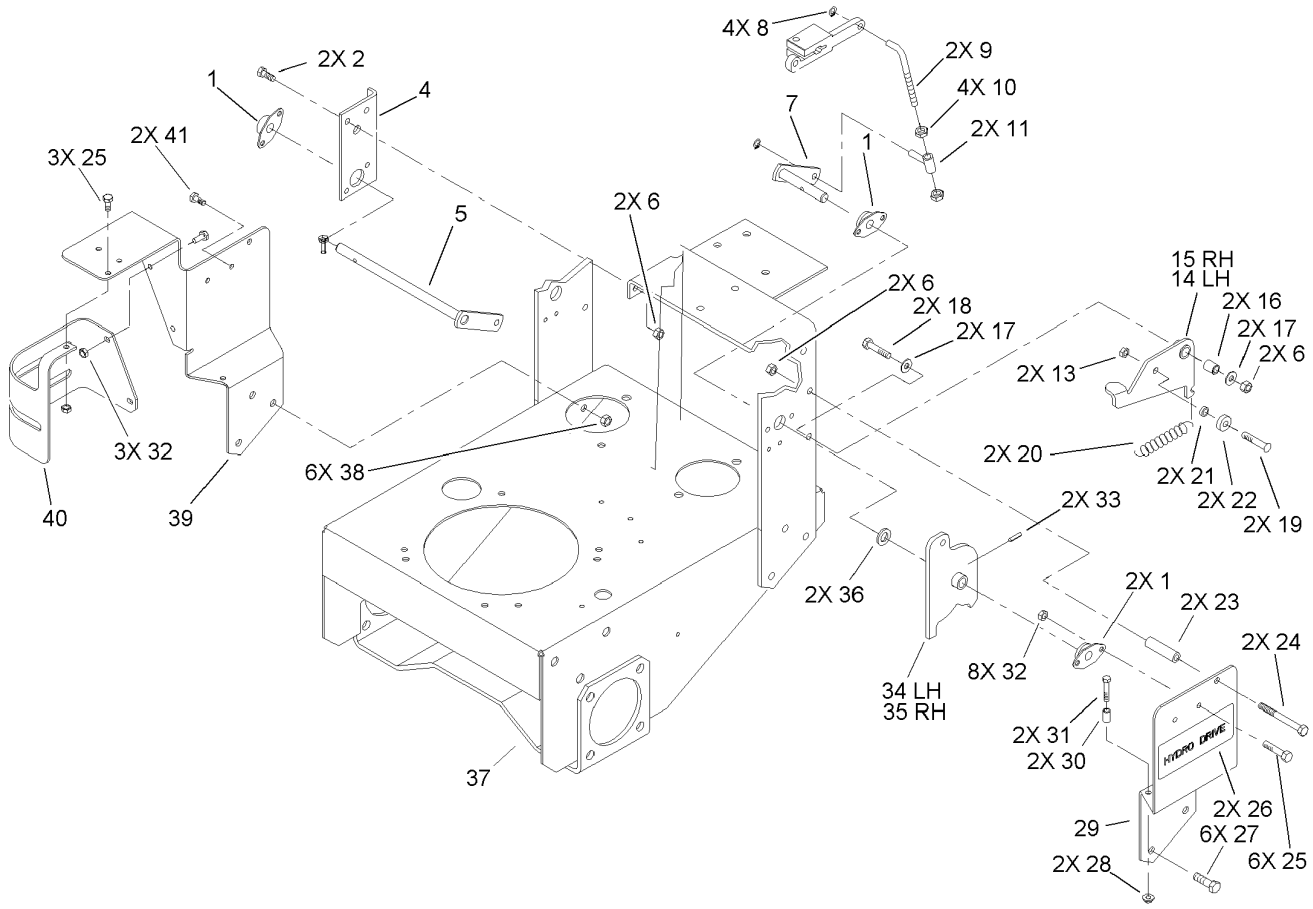

Pivot and Linkage Assembly

Ref	Part No.	Qty.	Description
1	82-4130	4	Side Flange Bearing ASM
2	322-5	4	Screw-HH
4	82-4210-01	1	Bracket-Bushing
5	94-9059	1	Lever-Pivot, RH
6	3296-29	6	Nut-Lock, NI
7	94-9057	1	Lever-Pivot, LH
8	32151-3	4	Ring-Grip, Ext
9	94-9093	2	Rod-Link
10	3218-2	4	Nut-Jam
11	94-9062	2	Sleeve
13	3296-47	2	Nut-Lock, NI
14	82-4330-01	1	Arm-Detent, LH
15	82-4340-01	1	Arm-Detent, RH
16	82-4370	2	Bushing-Arm, Detent
17	3256-23	4	Washer-Flat
18	322-7	2	Screw-HH
19	3274-32	2	Screw-HSBH
20	82-4160	2	Spring-Detent
21	82-4240	2	Spacer-Bearing
22	251-259	2	Bearing-Ball
23	82-3920	2	Stop-Reverse
24	322-14	2	Screw-HH
25	321-3	9	Screw-HH
26	106-0700	2	Decal-Hydro


Ref	Part No.	Qty.	Description
27	323-6	6	Screw-HH
28	32128-10	2	Nut-Lock, HHF
29	95-1530-01	1	Bracket-Pivot, LH
30	95-1516	2	Spacer-Tubular
31	321-5	2	Screw-HH
32	3296-42	11	Nut-Lock, NI
33	32121-4	2	Pin-Roll
34	94-9054-01	1	Arm-Pivot, LH
35	94-9061-01	1	Arm-Pivot, RH
36	257-5	2	Washer-Thrust
37	106-0726-01	1	Frame ASM
38	3296-39	6	Nut-Lock, NI
39	95-1522-01	1	Bracket-Pivot, RH
40	95-5868-01	1	Guard-Filter
41	321-3	2	Screw-HH

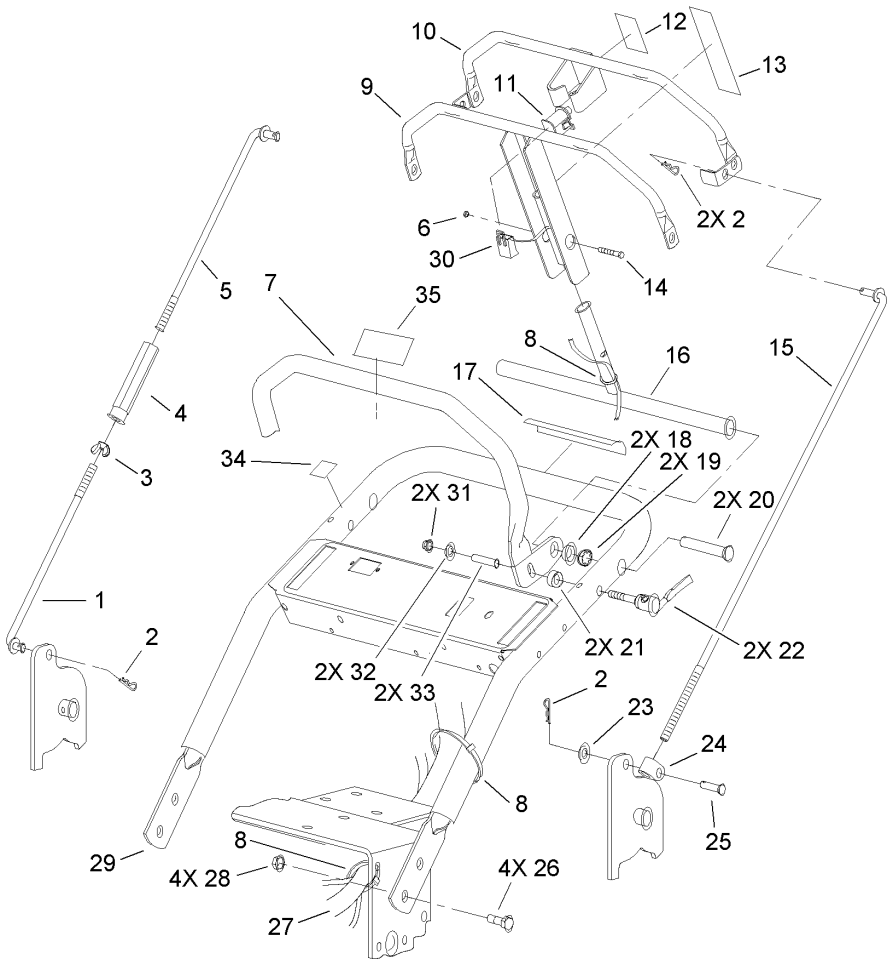

Handle Assembly


Ref	Part No.	Qty.	Description
1	95-1506	1	Rod-Control, Lower
2	3290-307	4	Pin-Hair
3	32103-3	1	Nut-Wing
4	95-1504	1	Turnbuckle
5	95-1505	1	Rod-Control, Upper
6	32153-1	1	Nut-Lock
7	95-1536-03	1	Handle ASM
8	3290-378	3	Tie-Cable
9	104-6380-03	1	Control Bar ASM
10	104-6386-03	1	Bail ASM ASM
11	82-2190	1	Switch-Bail
12	95-1523	1	Decal-Drive, Traction
13	106-0701	1	Decal
14	32105-12	1	Screw
15	94-9095	1	Rod-Control
16	104-6383-03	1	Pivot ASM ASM
17	82-4590	1	Decal-Warning
18	95-5855	2	Spacer
19	32151-80	2	Nut-Push-On, Circular
20	283-55	2	Pin-Clevis
21	82-3840	2	Spacer
22	95-5853	2	Quick Release Lock ASM
23	3256-23	1	Washer-Flat
24	74-0521	1	Fitting-Rod

Ref	Part No.	Qty.	Description
25	283-6	1	Pin-Clevis
26	3234-11	4	Screw-HHF
27	106-0679	1	Harness-Wire
28	32128-21	4	Nut-HF
29	95-5856-03	1	Handle-Upper
30	218-595	1	Connector-Body
31	33023-00	2	Nut-Lock
32	3290-436	2	Washer-Belleville
33	95-5854	2	Sleeve
34	95-5862	1	Decal-Lock, Speed
35	98-4387	1	Decal-Protection, Ear

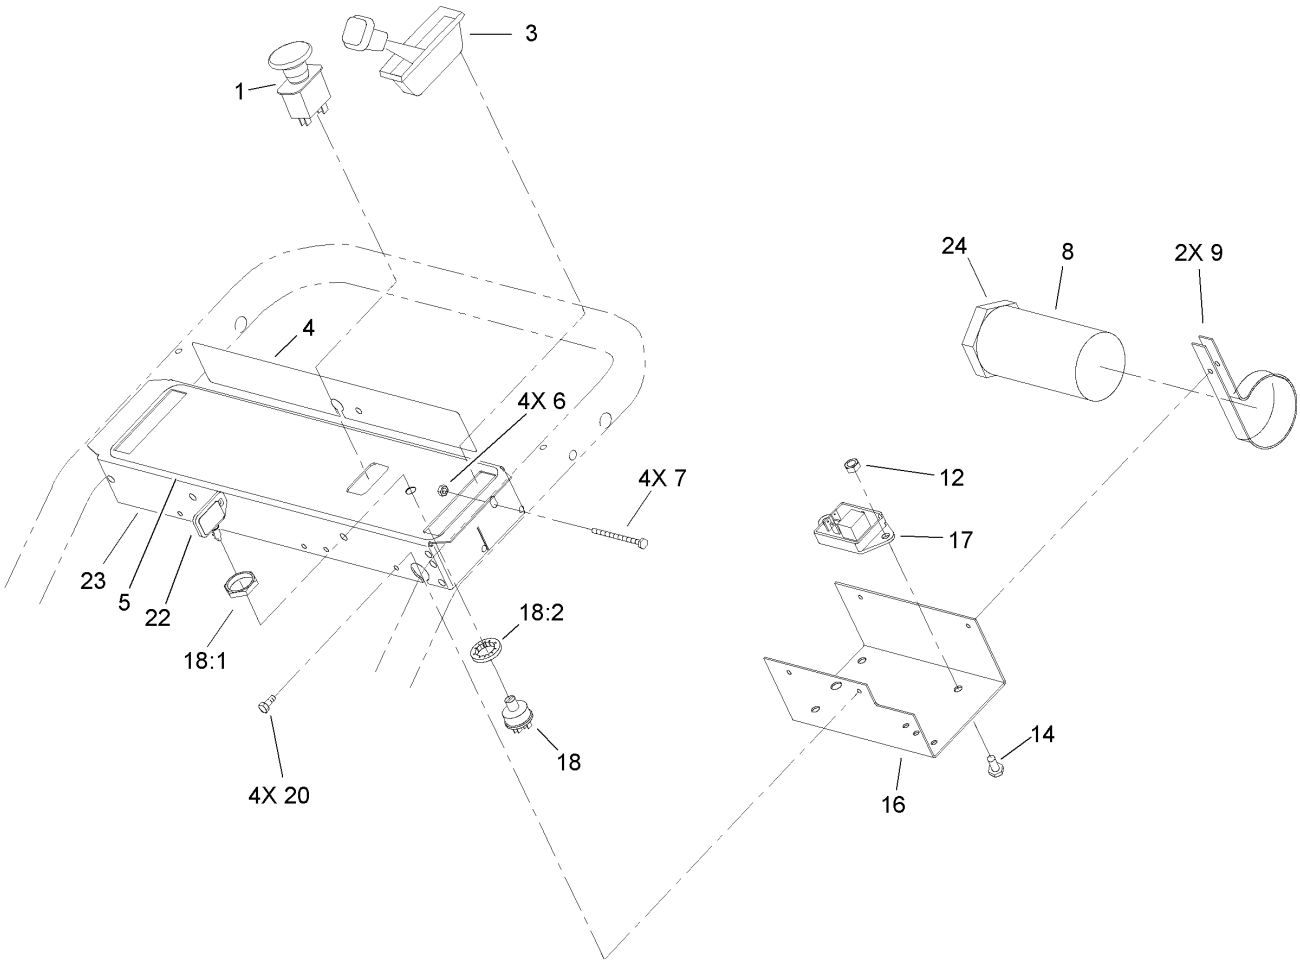


Control Panel Assembly

Ref	Part No.	Qty.	Description
1	104-8140	1	Switch-PTO
3	74-0630	1	Control-Throttle
4	95-1544	1	Decal-Warning
5	106-0687	1	Decal-Panel, Control
6	3296-2	4	Nut-Lock
7	32105-14	4	Screw-SHH
8	104-7050	1	Housing-Manual
9	2412-120	2	R-Clamp
12	3296-42	1	Nut-Lock, NI
14	321-3	1	Screw-HH
16	93-1187-03	1	Panel-Bottom
17	104-8141	1	Module-Delay
18	23-0660	1	Switch-Starter
18:1	218-461	1	Nut-HH
18:2	3254-5	1	Washer-Tooth
20	32104-76	4	Screw
22	63-8360	2	Key-Ignition
23	104-8177-03	1	Panel-Control
24	104-7048	1	Cap-Housing

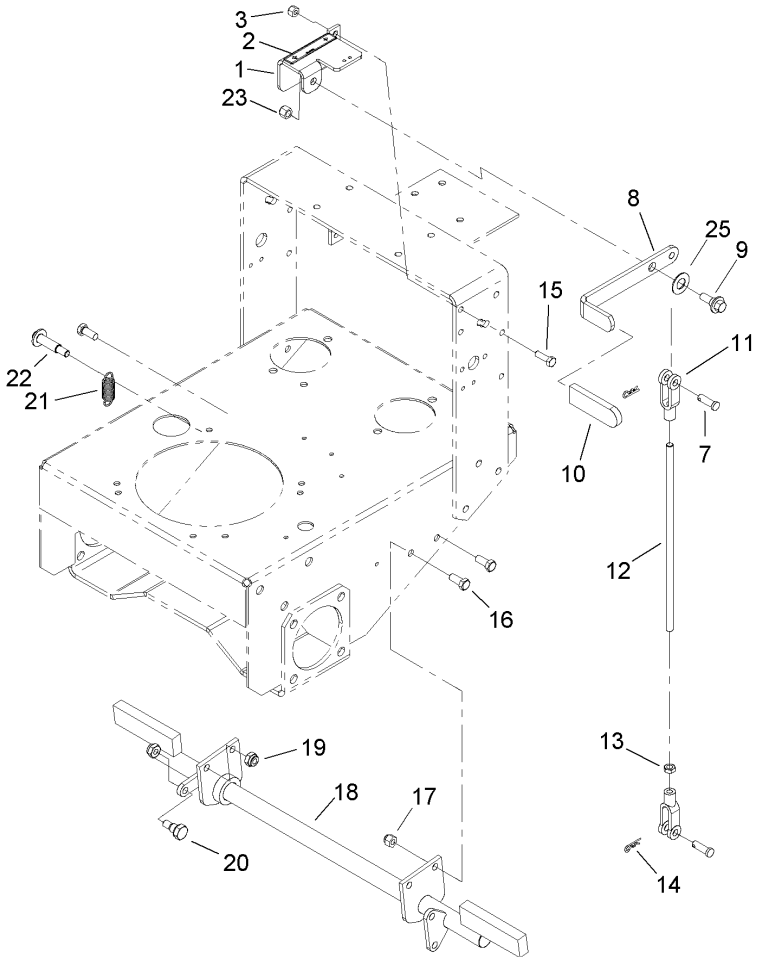

Parking Brake Assembly


Ref	Part No.	Qty.	Description
1	106-0666-01	1	Brake Handle Support ASM
2	104-2838	1	Decal-Brake
3	3296-29	2	Nut-Lock, NI
7	1-808285	2	Pin-Clevis
8	106-0671-01	1	Handle-Brake
9	93-2364	1	Bolt-Shoulder
10	1-303020	1	Grip-Lever
11	1-633131	2	Yoke-Linkage, Brake
12	106-0670	1	Rod-Connecting, Brake
13	3220-3	1	Nut-Jam
14	3290-307	2	Pin-Hair
15	322-5	2	Screw-HH
16	323-5	3	Screw-HH
17	3296-39	3	Nut-Lock, NI
18	106-0660-01	1	Parking Brake ASM
19	3296-44	2	Nut-Lock, NI
20	27-5240	1	Bolt-Shoulder
21	613386	1	Spring-Brake
22	56-6590	1	Bolt-Wheel
23	3296-6	1	Nut-Lock, NI
25	257-7	1	Bearing-Thrust

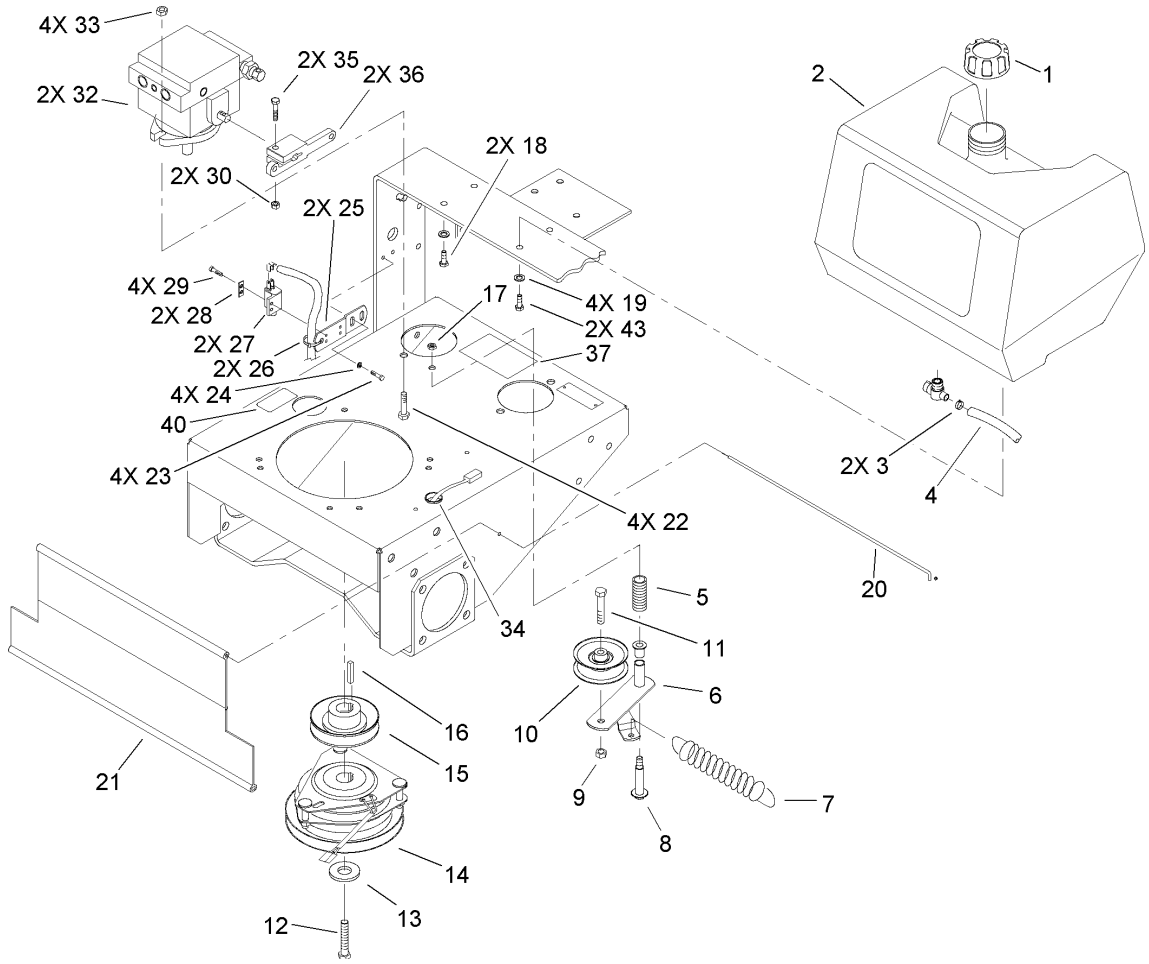

Fuel Tank, Hydro Pump and Power Take Off Assembly

Ref	Part No.	Qty.	Description
1	55-3570	1	Gas Cap ASM
2	95-2802	1	Tank-Fuel
3	2412-98	2	Clamp
4	47-2982	1	Hose-Fuel
5	88-1880	1	Spring-Compression
6	86-4770	1	Idler Lever ASM
7	68-2190	1	Spring
8	27-6230	1	Bolt-Wheel
9	3296-39	1	Nut-Lock, NI
10	62-4540	1	Pulley
11	323-9	1	Screw-HH
12	3212-9	1	Screw-HH
13	112843	1	Washer
14	105-2635	1	Clutch/brake
15	44-5940	1	Pulley
16	608006	1	Key-Square
17	3296-6	1	Nut-Lock, NI
18	322-3	2	Screw-HH
19	3253-4	4	Washer-Lock
20	95-1529	1	Rod-Shield
21	95-1526	1	Shield-Trailing
22	324-5	4	Screw-HH
23	32144-4	4	Screw-HWH
24	3256-1	4	Washer-Flat


Ref	Part No.	Qty.	Description
25	82-4580-03	2	Bracket-Neutral
26	3290-378	2	Tie-Cable
27	65-7410	2	Switch-Pole, Single
28	82-4570	2	Plate-Switch
29	32144-1	4	Screw-Taptite
30	3296-29	2	Nut-Lock, NI
32	95-1538	2	HYD Pump ASM
33	32128-42	4	Nut-HF
34	237-124	1	Grommet
35	322-7	2	Screw-HH
36	82-3790	2	Arm-Pump
37	106-0702	1	Decal-Adjustment, Valve
40	105-2625	1	Decal-Std, Safety
43	322-4	2	Screw-HH

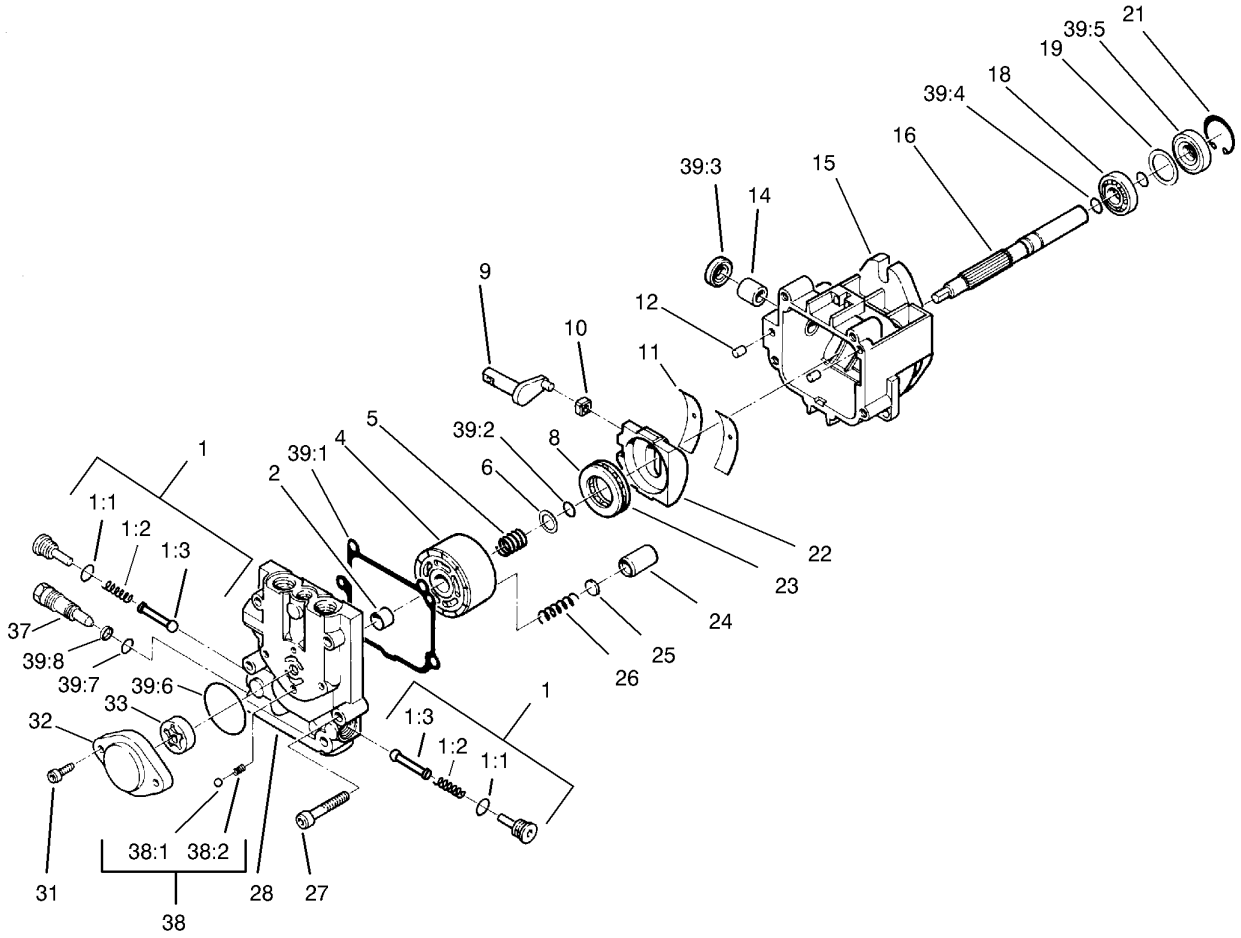

Hydraulic Pump Assembly No. 95-1538

Ref	Part No.	Qty.	Description
1	80-6120	2	Check Valve Kit
❷1:1		1	O-Ring
❷1:2		1	Spring
❷1:3		1	Poppet
❷2		1	Journal-Bearing
❷4		1	Block-Cylinder
❷5		1	Spring
❷6		1	Washer
❷8		1	Plate-Thrust
❷9		1	Arm-Trunion
❷10		1	Guide-Slot
❷11		2	Cradle-Bearing
❷12		2	Pin
❷14		1	Journal-Bearing
❷15		1	Housing
❷16		1	Shaft
❷18		1	Bearing-Ball
❷19		1	Spacer
❷21		1	Ring-Retaining
❷22		1	Swashplate ASM
❷23		1	Roller-Thrust
❷24		5	Piston
❷25		5	Washer-Thrust
❷26		5	Spring-Piston
❷27		4	Screw


Ref	Part No.	Qty.	Description
❷28		1	Cap-End
❷31		2	Screw
❷32		1	Housing-Pump, Charge
❷33		1	Gerotor ASM
❷37		1	Valve-Bypass
38	80-6110	1	Relief Valve Charge Kit
❷38:1		1	Ball
❷38:2		1	Spring
❶39	80-6130	1	Seal Kit
❷39:1		1	Gasket-Cap, End
❷39:2		1	Ring-Retaining
❷39:3		1	Seal-Lip
❷39:4		2	Ring-Retaining
❷39:5		1	Seal-Lip
❷39:6		1	O-Ring
❷39:7		1	O-Ring
❷39:8		1	Ring-Back Up

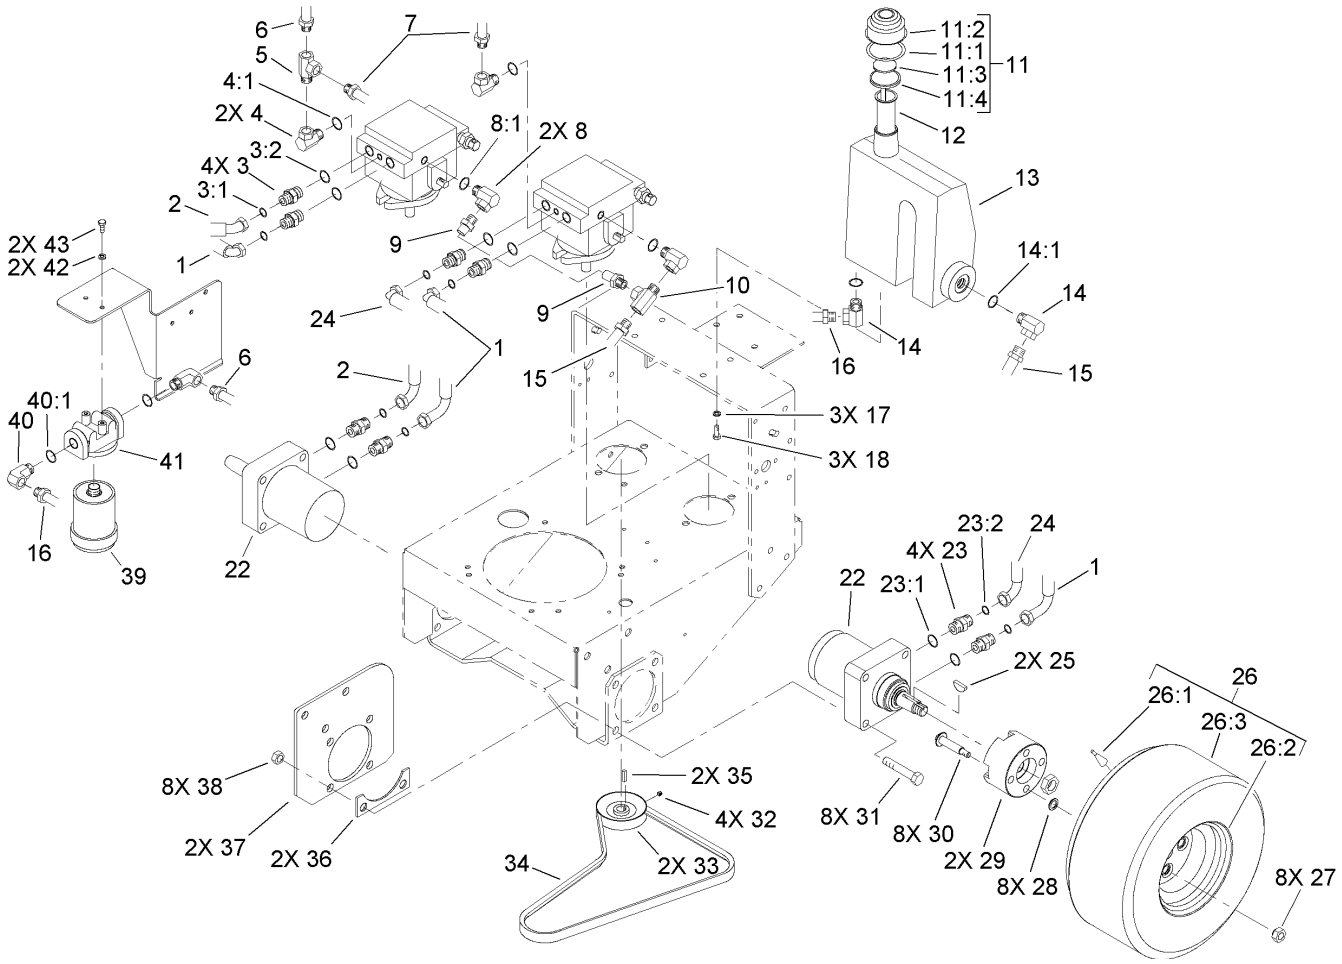

Hydraulic and Drive System Assembly


Ref	Part No.	Qty.	Description
1	106-0825	2	HYD Hose ASM
2	106-0824	1	HYD Hose ASM
3	340-4	4	Fitting-Hyd, Straight
3:1	237-30	1	O-Ring
3:2	237-79	1	O-Ring
4	354-116	2	Swivel-Pipe, Female
4:1	237-78	1	O-Ring
5	2815-16	1	Fitting-Hyd, Tee
6	95-5880	1	HYD Hose ASM
7	82-4170	1	HYD Hose ASM
8	354-115	2	Fitting-Hyd, 90 DEG
8:1	237-42	1	O-Ring
9	82-4201	1	HYD Hose ASM
10	2815-15	1	Fitting-Hyd, Tee
11	76-0200	1	Oil Cap ASM
11:1	237-71	1	O-Ring
11:2	76-0190	1	Cap-Oil
11:3	76-0220	1	Foam-Filter, Oil Cap
11:4	76-0240	1	Dipstick
12	29-0590	1	Screen-Filler
13	95-1532	1	Reservoir-Oil
14	354-118	2	Fitting-Hyd, 90 DEG
14:1	237-79	1	O-Ring
15	82-4194	2	HYD Hose ASM

Ref	Part No.	Qty.	Description
16	82-4200	1	HYD Hose ASM
17	3253-4	3	Washer-Lock
18	322-3	3	Screw-HH
22	82-8230	2	Wheel Motor ASM
23	340-6	4	Fitting-Hyd, Straight
23:1	237-30	1	O-Ring
23:2	237-80	1	O-Ring
24	106-0826	1	HYD Hose ASM
25	3257-8	2	Key-Woodruff
❷26		2	Wheel/tire ASM
26:1	232-27	1	Stem-Valve
26:2	242-87	1	Rim-Wheel
26:3	231-117	1	Tire
27	242-50	8	Nut-Lug
28	32112-17	8	Pushnut
29	82-3830	2	Hub-Wheel
30	3213-8	8	Screw-HH
31	325-11	8	Screw-HH
32	3241-5	4	Screw-Set
33	95-1528	2	Pulley-Pump
34	82-4110	1	V-Belt
35	80-6090	2	Key-Pump
36	86-4740-01	2	Spacer-Frame
37	86-4730-01	2	Plate-Frame

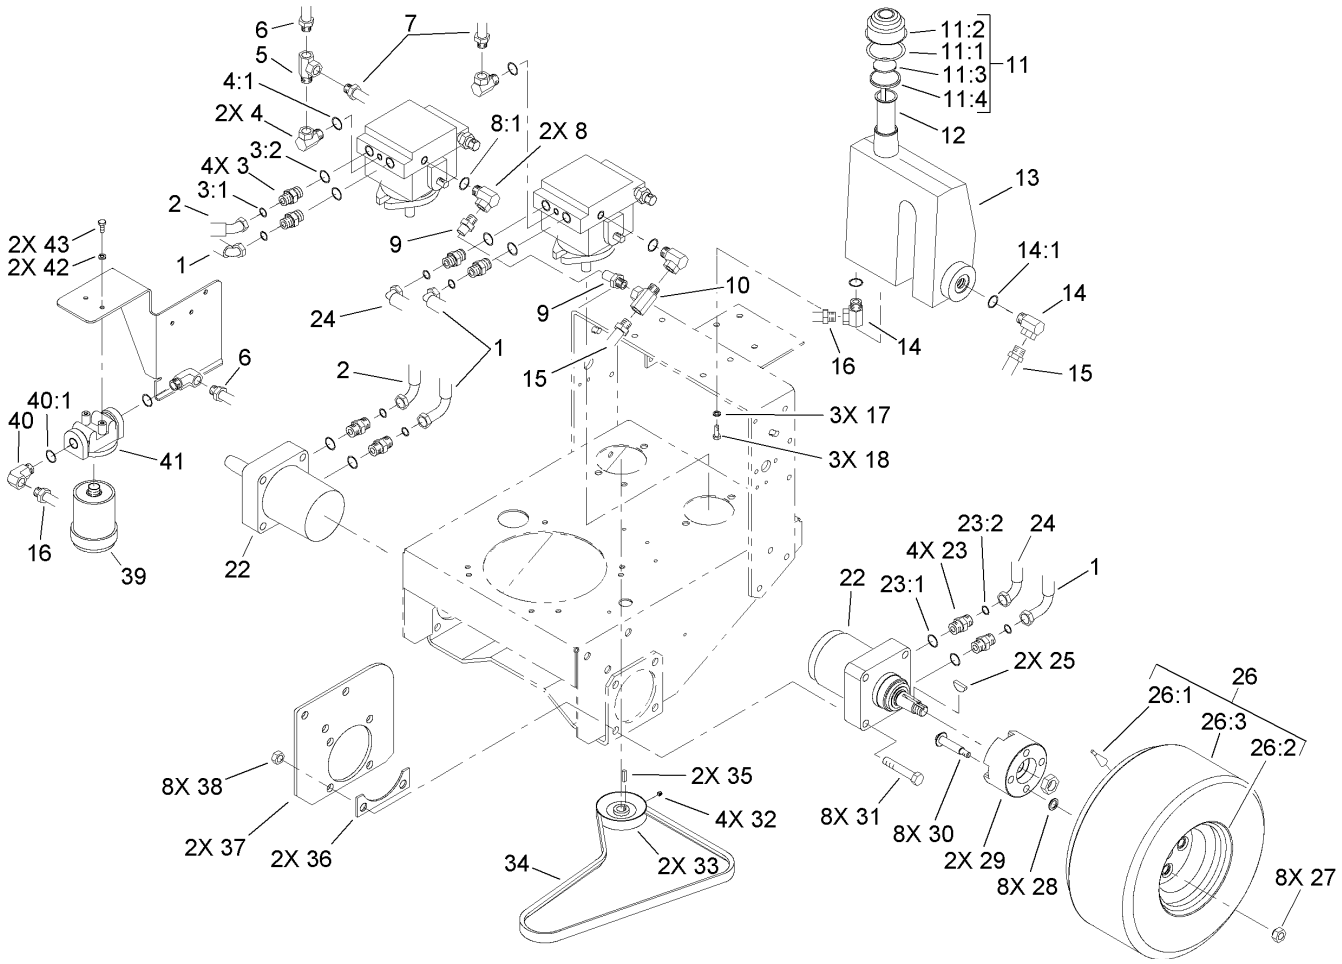

Hydraulic and Drive System Assembly (continued)


Ref	Part No.	Qty.	Description
38	3296-23	8	Nut-Lock, NI
39	67-8110	2	Cartridge-Filter, Oil
40	354-117	2	Fitting-Hyd, 90 DEG
40:1	237-79	1	O-Ring
41	86-9080	1	Head-Filter
42	3253-3	2	Washer-Lock
43	321-3	2	Screw-HH

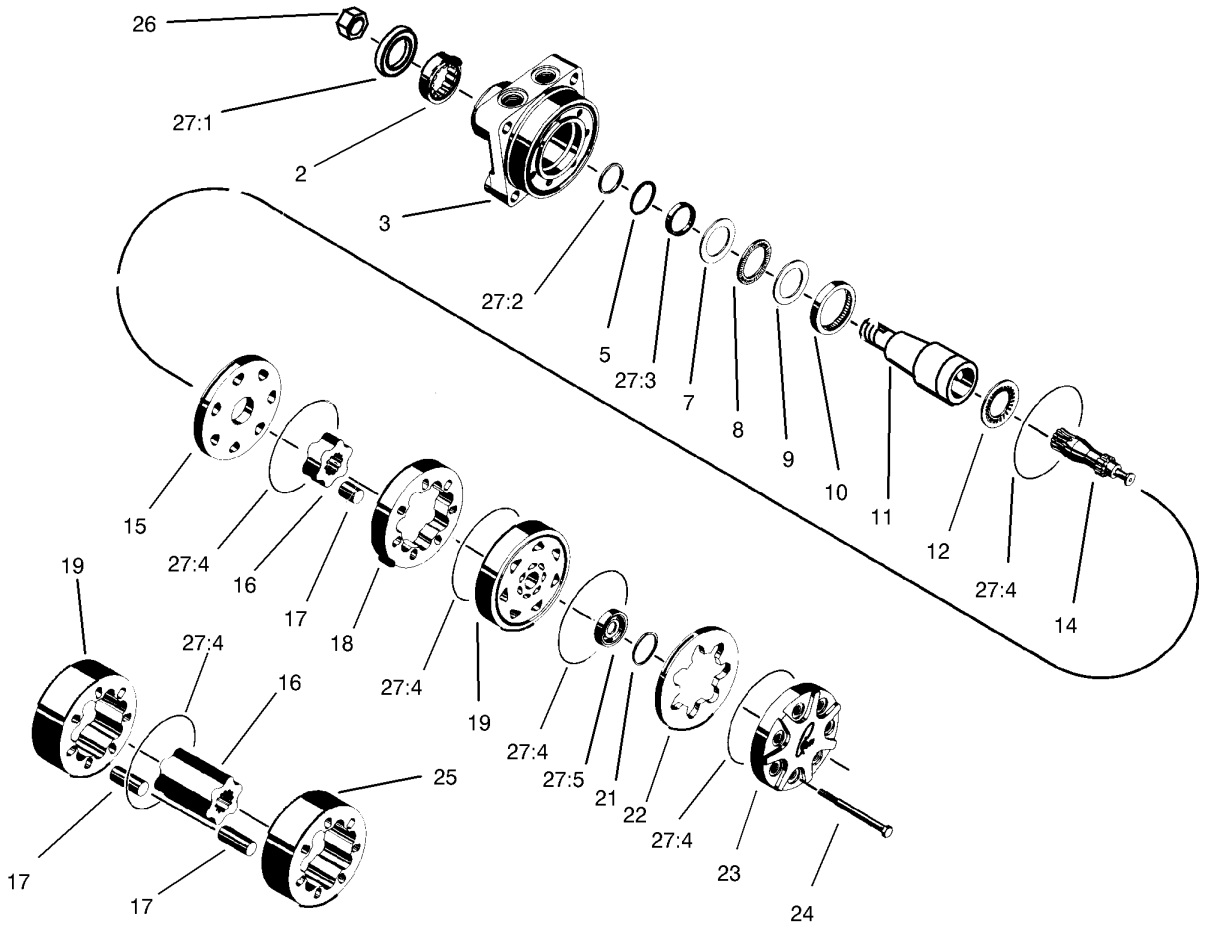

Wheel Motor Assembly No. 82-8230


Ref	Part No.	Qty.	Description
❷2		1	Bearing
❷3		1	Housing
❷5		1	Washer-Back Up
❷7		1	Washer-Thrust
❷8		1	Bearing-Thrust
❷9		1	Washer-Thrust
❷10		1	Bearing-Inner
❷11		1	Coupling-Shaft
❷12		1	Bearing-Thrust
❷14		1	Link-Drive
❷15		1	Plate-Wear
❷16		1	Rotor
❷17		7	Vane
❷18		1	Stator
❷19		1	Manifold
❷21		1	Seal-Commutator
❷22		1	Commutator-Ring
❷23		1	Cover-End
❷24		1	Bolt-Special
❷25		1	Stator-Half
26	85-7310	1	Nut-Motor, Wheel
❶27	85-7320	1	Seal Kit
❷27:1		1	Seal
❷27:2		1	Washer-Back Up
❷27:3		1	Seal

Ref	Part No.	Qty.	Description
❷27:4		5	O-Ring
❷27:5		1	Commutator

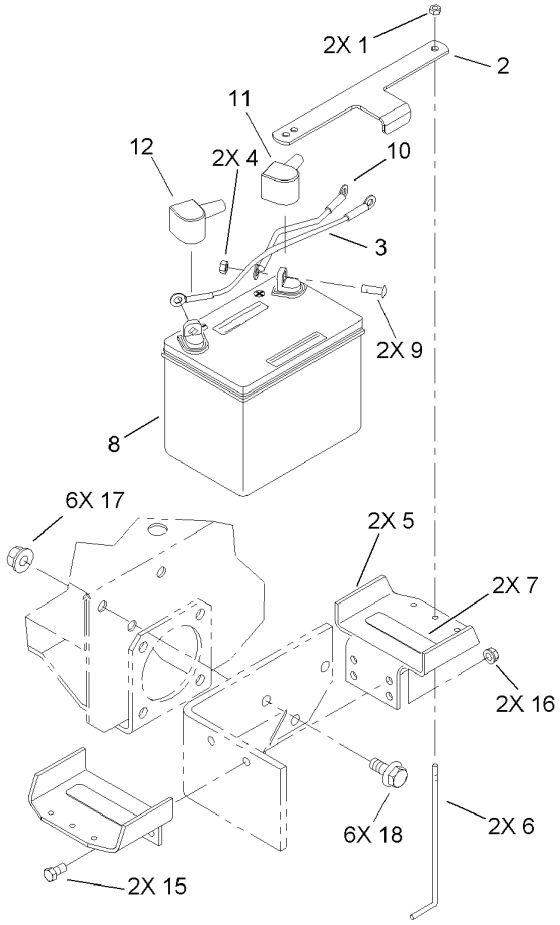


Battery Assembly

Ref	Part No.	Qty.	Description
1	3296-42	2	Nut-Lock, NI
2	104-8568-03	1	Plate-Hold Down, Battery
3	54-3094	1	Wire ASM
4	32149-1	2	Nut
5	92-2350-01	2	Holder-Battery
6	12-5950	2	Rod-Support, Battery
7	51-4210	2	Pad-Tank, Fuel
8	104-8162	1	Battery (Dry)
9	322-3	2	Screw-HH
10	100-6457	1	Cable-Battery, Red
11	77-0981	1	Boot-Terminal, Red
12	77-0980	1	Boot-Terminal, Black
15	323-9	2	Screw-HH
16	3296-39	2	Nut-Lock, NI
17	32128-23	6	Nut-HF
18	3234-32	6	Screw-HHF

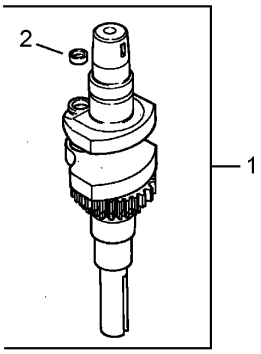

Crankshaft Assembly
Kohler CV15S 41630


Ref	Part No.	Qty.	Description
❸1	12 014 30-S	1	Crankshaft (Includes 2)
❸2	12 139 01-S	1	Plug-Cup

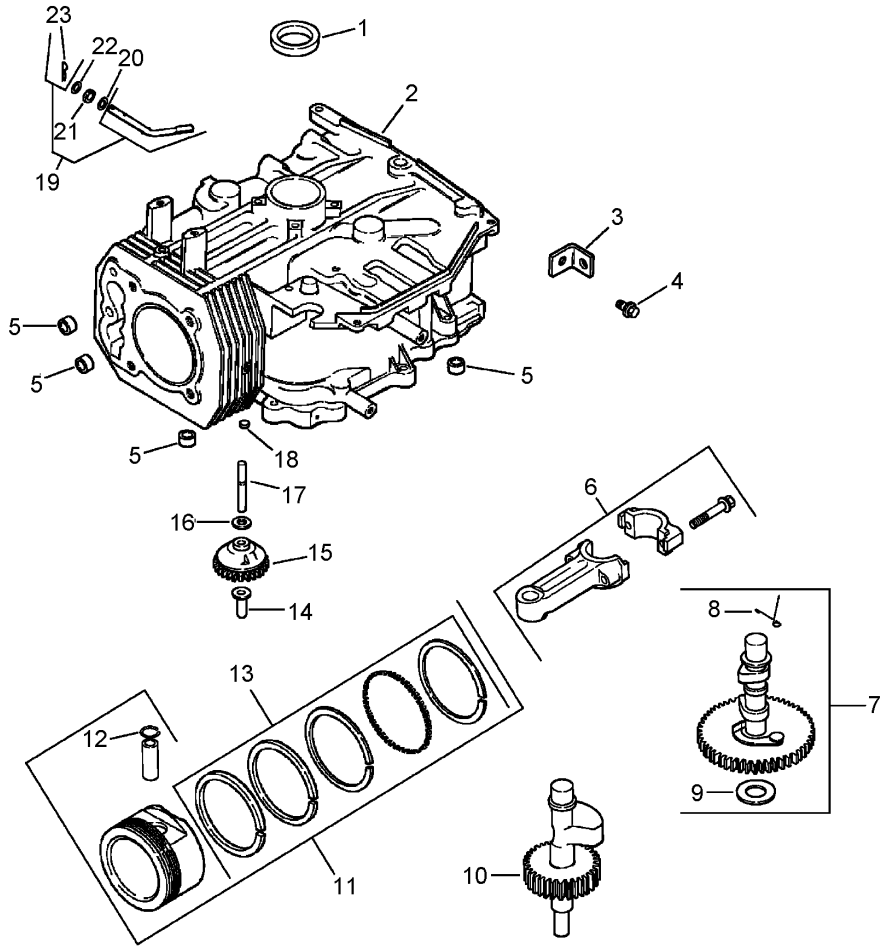

Crankcase Assembly
Kohler CV15S 41630


Ref	Part No.	Qty.	Description
❸1	12 032 03-S	1	Seal-Oil (Pto End)
❷❸2		1	Crankcase (Use: Short Block 12 522 18)
❸3	12 445 02-S	1	Strap-Lifting
❸4	M-839025-S	1	Screw-Hf, M8x1.25x25
❸5	24 380 13-S	4	Pin-Locating
❸6	12 067 05-S	1	Rod-Connecting (Std.)
❸6	12 067 06-S	1	Rod-Connecting (.25)
❸7	12 755 49-S	1	Camshaft Kit (Includes 8,9)
❸8	12 089 31-S	1	Spring-Actuating
❸9	12 422 08-S	1	Shim-Camshaft, Blue
❸9	12 422 09-S	1	Shim-Camshaft, Red
❸9	12 422 10-S	1	Shim-Camshaft, Yellow
❸9	12 422 11-S	1	Shim-Camshaft, Green
❸9	12 422 12-S	1	Shim-Camshaft, Gray
❸9	12 422 13-S	1	Shim-Camshaft, Black
❸9	12 422 07-S	1	Shim-Camshaft, White
❸10	12 144 27-S	1	Shaft-Balance
❸11	12 874 07-S	1	Piston W/ring Set (Std.) (Includes 12,13)
❸11	12 874 11-S	1	Piston W/ring Set (.08)
❸11	12 874 08-S	1	Piston W/ring Set (.25)
❸11	12 874 09-S	1	Piston W/ring Set (.50)
❸12	12 018 02-S	2	Retainer-Pin, Piston (2)

Ref	Part No.	Qty.	Description
❸13	12 108 07-S	1	Ring Set (Std. & .08)
❸13	12 108 08-S	1	Ring Set (.25)
❸13	12 108 09-S	1	Ring Set (.50)
❸14	12 380 01-S	1	Pin-Regulating, Governor
❸15	12 043 05-S	1	Gear-Governor
❸16	M-631005-S	1	Washer-Plain, 6mm
❸17	12 144 02-S	1	Shaft-Gear, Governor
❸18	52 139 09-S	1	Plug-Cup
❸19	12 755 64-S	1	Governor Cross Chaft W/clip Kit (Includes 23)
❸20	X-25-102-S	1	Washer-Plain, 1/4in
❸21	12 032 01-S	1	Seal-Cross Shaft, Governor
❸22	M-631015-S	1	Washer-Plain, 6mm
❸23	12 154 05-S	1	Clip-Pin, Hitch

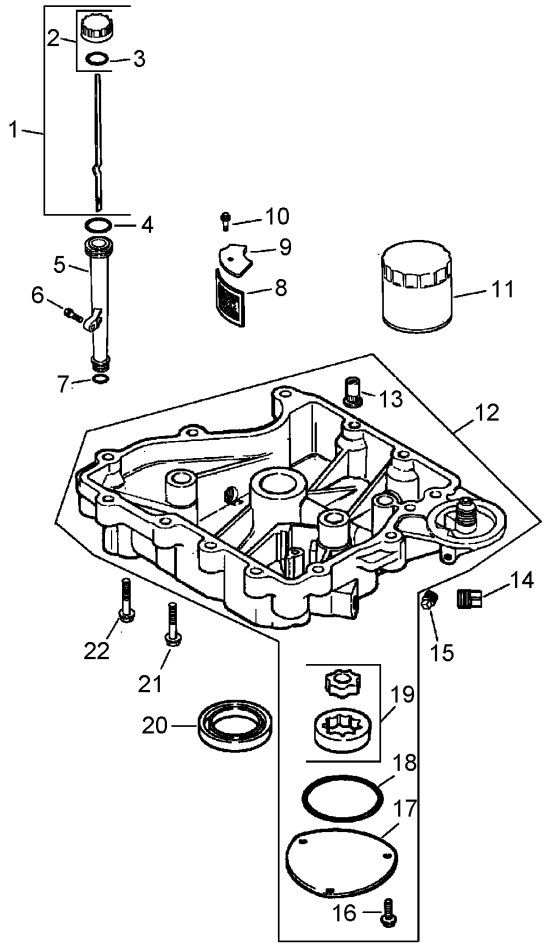

Oil Pan / Lubrication Assembly
Kohler CV15S 41630


Ref	Part No.	Qty.	Description
❸1	12 038 01-S	1	Dipstick ASM (Includes 2,3)
❸2	25 755 13-S	1	Oil Fill Cap Kit (Includes 3)
❸3	25 153 02-S	1	O Ring-Dipstick
❸4	12 153 02-S	1	O Ring-Oil Fill Tube, Upper
❸5	12 123 04-S	1	Tube-Fill, Oil
❸6	M-545020-S	1	Screw-Hf, M5x0.8x20
❸7	12 153 01-S	1	O Ring-Oil Fill Tube, Lower
❸8	25 162 07-S	1	Screen-Pickup, Oil
❸9	12 096 03-S	1	Cover-Screen, Oil Pickup
❸10	M-545016-S	1	Screw-Hf, M5x0.8x16
❸11	52 050 02-S	1	Filter-Oil
❸12	12 199 50-S	1	Oil Pan ASM (Includes 13, 16-19)
❸13	25 462 09-S	1	Valve-Relief, Oil Pressure
❸14	25 139 57-S	2	Plug-Pipe, 3/8in Square Head
❸15	25 139 52-S	1	Plug-Pipe, 1/8in Square Head
❸16	M-545016-S	1	Screw-Hf, M5x0.8x16
❸17	12 096 34-S	1	Cover-Pump, Oil
❸18	12 153 06-S	1	O Ring-Pump Cover, Oil
❸19	12 393 01-S	1	Oil Pump ASM
❸20	12 032 03-S	1	Seal-Oil (Pto End)
❸21	24 086 16-S	1	Screw-Hf, M8x1.25x45
❸22	24 086 17-S	1	Screw-Hf, M8x1.25x45

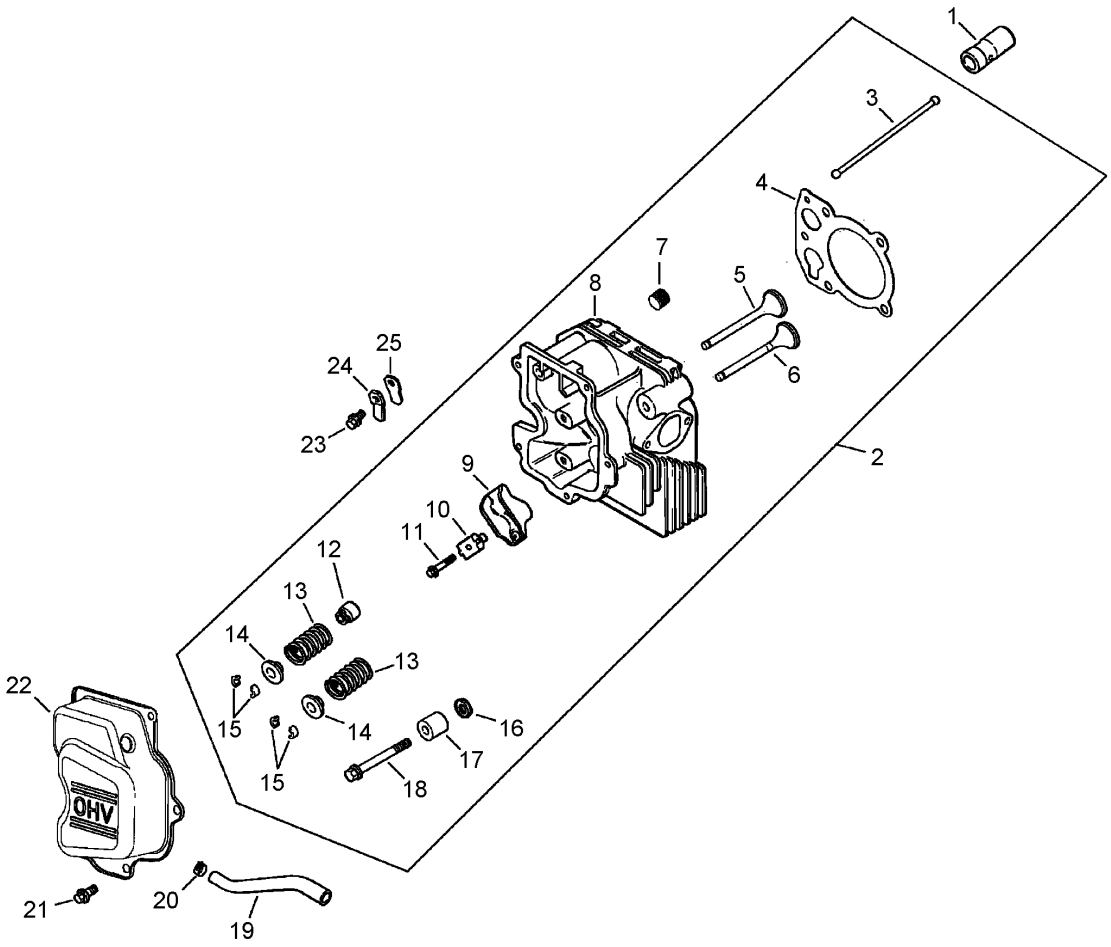

Head / Valve / Breather Assembly
Kohler CV15S 41630

Ref	Part No.	Qty.	Description
❸1	25 351 01-S	2	Lifter-Valve
❸2	12 755 81-S	1	Cylinder Head Kit (Includes 3-18, Carburetor Gasket 12 041 01-S (2), Air Cleaner Base Gasket 12 041 02-S, & Exhaust Manifold Gasket 12 041 03-S)
❸3	12 411 04-S	2	Rod-Push
❸4	12 041 10-S	1	Gasket-Head, Cylinder
❸5	12 017 01-S	1	Valve-Intake (Std.)
❸6	12 016 01-S	1	Valve-Exhaust (Std.)
❸7	25 139 60-S	1	Plug-Pipe, Hex. Ctsk. 1/8in N.p.t.f.
❸8	12 318 19-S	1	Head-Cylinder
❸9	25 186 01-S	2	Arm-Rocker
❸10	12 599 03-S	2	Pivot-Arm, Rocker
❸11	M-640034-S	2	Screw-Hf, M6x1.0x34
❸12	66 032 05-S	2	Seal-Stem, Valve
❸13	12 089 34-S	2	Spring-Valve
❸14	12 173 01-S	2	Cap-Spring, Valve
❸15	12 755 03-S	2	Retainer Kit
❸16	12 468 05-S	1	Washer-Plain, 13/32in
❸17	12 112 13-S	1	Spacer-Exhaust Port, Head Bolt
❸18	20 086 02-S	5	Screw-Hf, M10x1.5x81
❸19	12 326 18-S	1	Hose-Breather
❸20	25 237 14-S	2	Clamp-Hose, 11/16in
❸21	M-645016-S	3	Screw-HF


Ref	Part No.	Qty.	Description
❸22	12 096 47-S	1	Cover-Valve
❸23	M-545010-S	1	Screw-Hf, M5x0.8x10
❸24	66 018 04-S	1	Retainer-Reed, Breather
❸25	12 402 02-S	1	Reed-Breather
❶❸	12 017 02-S	1	Valve-Intake (.25)
❶❸	12 016 02-S	1	Valve-Exhaust (.25)
❶❸	12 041 01-S	1	Gasket-Carburetor
❶❸	12 041 02-S	1	Gasket-Cleaner, Air
❶❸	12 041 03-S	1	Gasket-Manifold, Exhaust

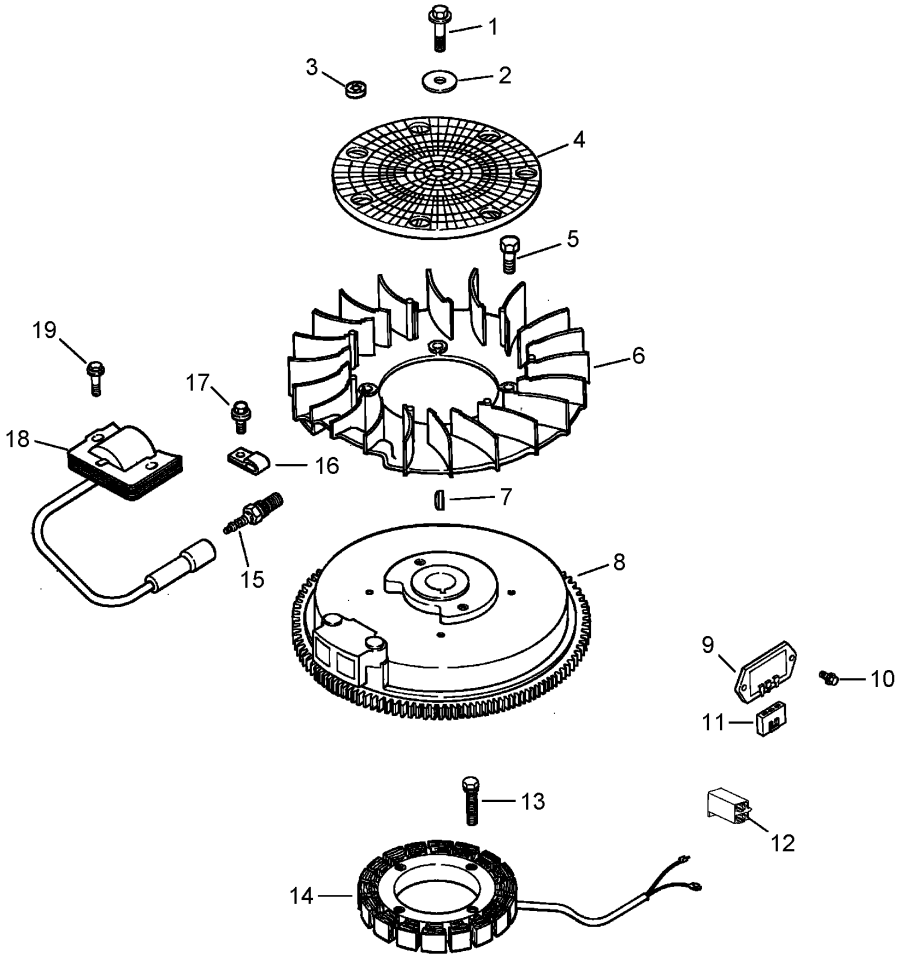

Ignition / Electrical Assembly
Kohler CV15S 41630


Ref	Part No.	Qty.	Description
❸1	12 086 14-S	1	Screw-Hf, M10x1.5x46
❸2	12 468 03-S	1	Washer-Plain, 3/8in
❸3	24 018 03-S	3	Retainer-Screen, Grass
❸4	24 162 03-S	1	Screen-Grass
❸5	25 086 47-S	4	Bolt, Shoulder M6x1.0x25
❸6	12 157 06-S	1	Fan
❸7	X-42-15-S	1	Key
❸8	12 025 33-S	1	Flywheel
❸9	41 403 09-S	1	Rectifier-Regulator
❸10	M-639016-S	2	Screw-Hf, M6x1.0x16
❸11	236602-S	1	Connector
❸12	41 155 03-S	1	Connector
❸13	M-548025-S	2	Screw-Hex. Cap, M5x0.8x25
❸14	237878-S	1	Stator Kit (Includes 25 452 01-S)
❸15	25 132 12-S	1	Spark Plug
❸16	X-728-1-S	2	Clip-Cable
❸17	M-545010-S	2	Screw-Hf, M5x0.8x10
❸18	12 584 04-S	1	Module-Ignition
❸19	M-545020-S	2	Screw-Hf, M5x0.8x20
❶❸	X-22-11-S	1	Washer-Lock, 1/4in
❶❸	12 518 01-S	1	Lead-White (19in 18 Gauge - Fully Insulated Female Terminal And Uninsulated Female Terminal)
❶❸	25 518 05-S	1	Lead-Red (20in 18 Gauge - Uninsulated Female Terminals)

Ref	Part No.	Qty.	Description
❶❸	24 518 12-S	1	Lead-Black (6in 12 Gauge – Insulated Grip Barrel Eyelet Terminal)
❶❸	25 452 01-S	1	Terminal

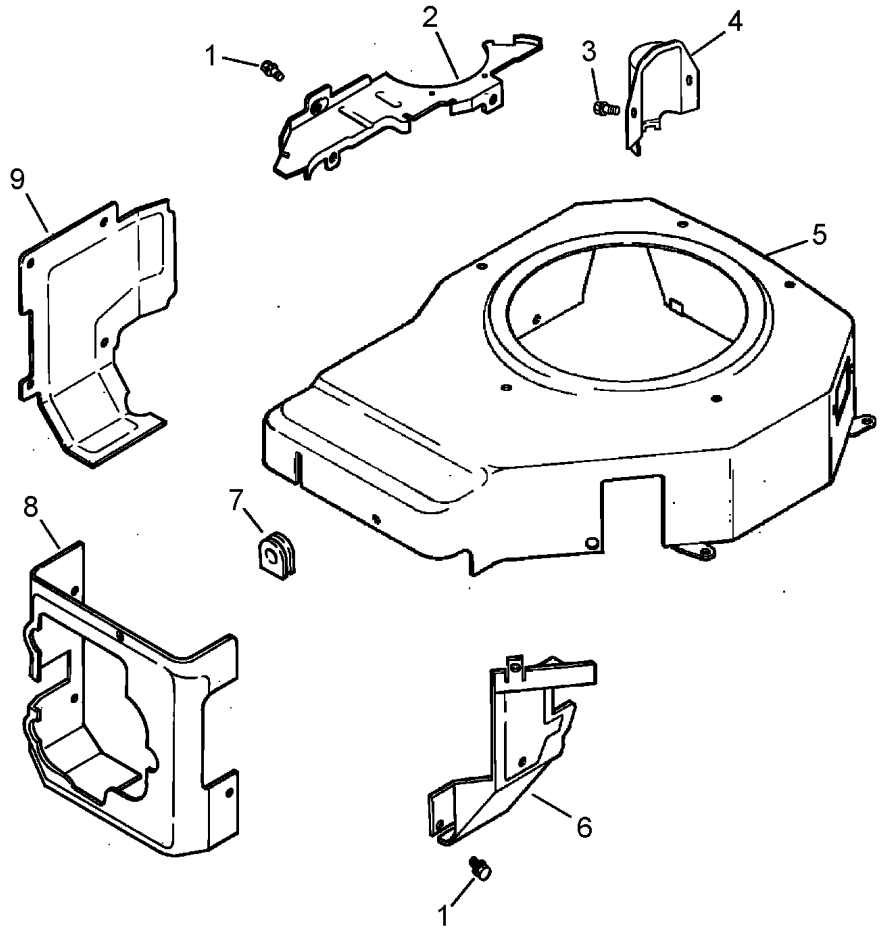


Blower Housing and Baffle Assembly
Kohler CV15S 41630

Ref	Part No.	Qty.	Description
❸1	M-545010-S	5	Screw-Hf, M5x0.8x10
❸2	12 146 07-S	1	Plate-Housing, Blower
❸3	M-550010-S	2	Screw-Hf, M5x0.8x10
❸4	24 096 39-S	1	Cover-Pinion
❸5	12 027 58-S	1	Housing-Blower
❸6	12 063 10-S	1	Baffle-Side, Intake
❸7	12 313 03-S	1	Grommet-Spark Plug
❸8	12 063 08-S	1	Baffle-Head, Cylinder
❸9	12 063 19-S	1	Baffle-Cylinder
❶❸	12 113 112-S	1	Decal-15hp
❶❸	25 113 39-S	1	Decal-Lamination, Clear

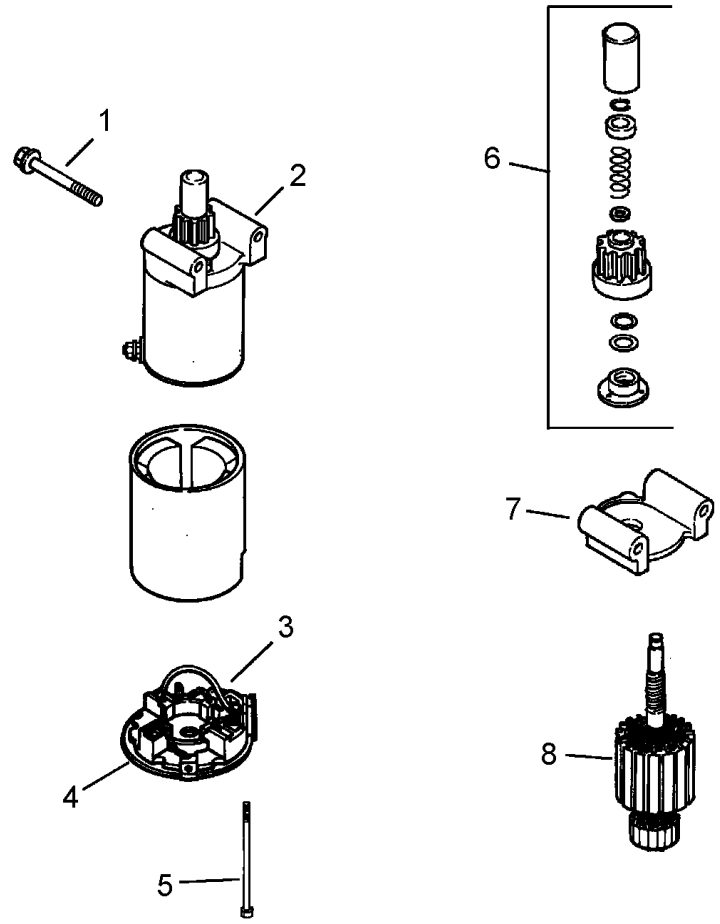


Starting System Assembly
Kohler CV15S 41630

Ref	Part No.	Qty.	Description
❸1	M-839070-S	2	Screw-Hf, M8x1.25x70
❸2	12 098 21-S	1	Starter ASM (Includes 3-8)
❸3	12 221 02-S	1	Brush Kit
❸4	12 227 14-S	1	Cap ASM
❸5	12 211 01-S	1	Bolt
❸6	12 755 53-S	1	Drive Kit
❸7	12 227 19-S	1	Cap-End, Drive
❸8	12 170 05-S	1	Armature

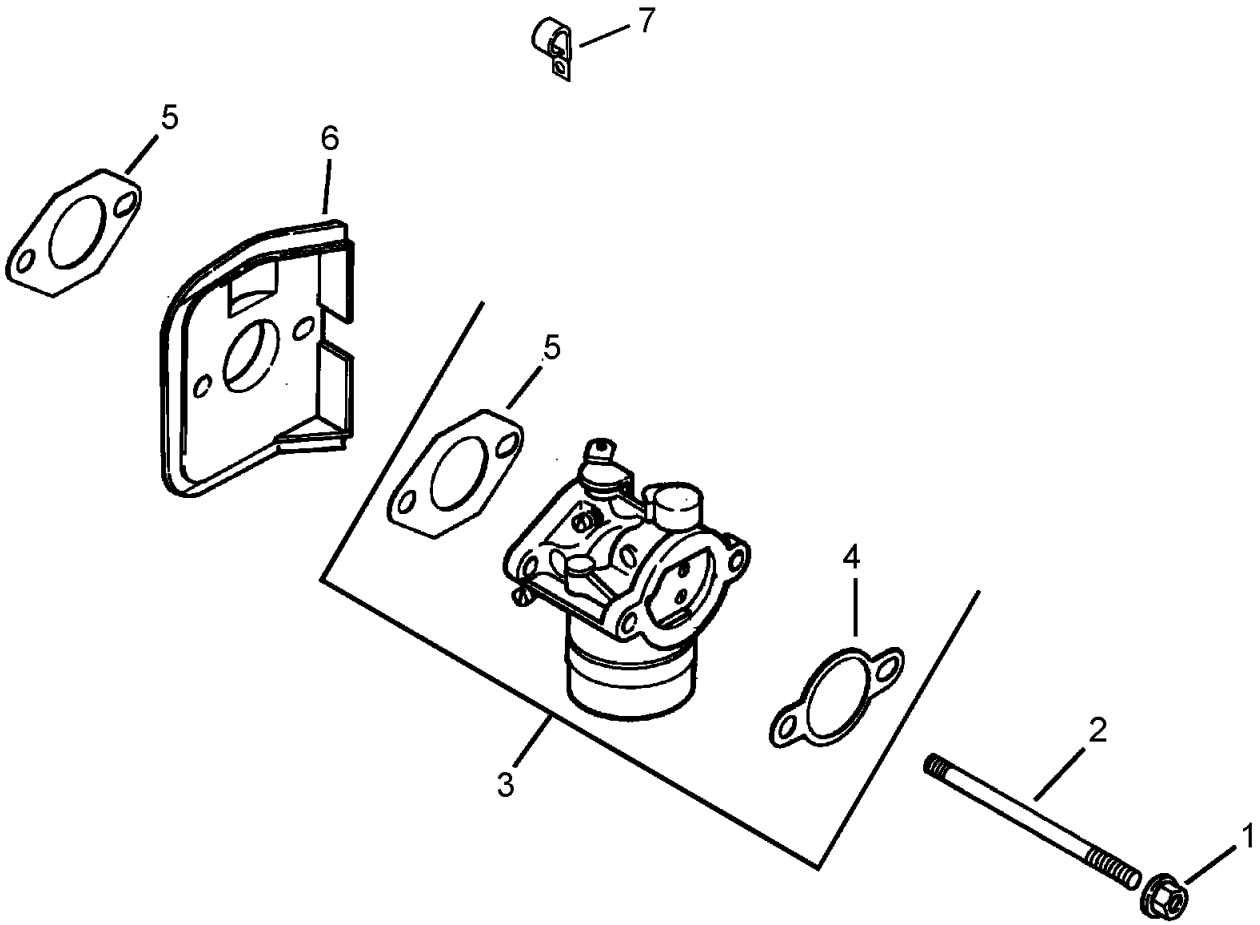


Fuel System Assembly
Kohler CV15S 41630

Ref	Part No.	Qty.	Description
❸1	M-641060-S	2	Nut-Hf, M6x1.0
❸2	M-629116-S	2	Stud-M6x1.0x116
❸3	12 853 140-S	1	Carburetor W/gasket Kit (Includes 4,5 [qty. 1])
❸4	12 041 02-S	1	Gasket-Cleaner, Air
❸5	12 041 01-S	2	Gasket-Carburetor
❸6	12 265 04-S	1	Deflector-Heat
❸7	47 154 01-S	1	Clip-Cable
❶❸	12 757 02-S	1	Float Kit
❶❸	12 757 03-S	1	Carburetor Repair Kit
❶❸	12 757 08-S	1	Choke Repair Kit
❶❸	12 757 36-S	1	Throttle Shaft Bearing And Seal Kit
❶❸	12 757 37-S	1	Bowl Replacement Kit
❶❸	12 755 92-S	1	High Altitude (W/gaskets) Kit

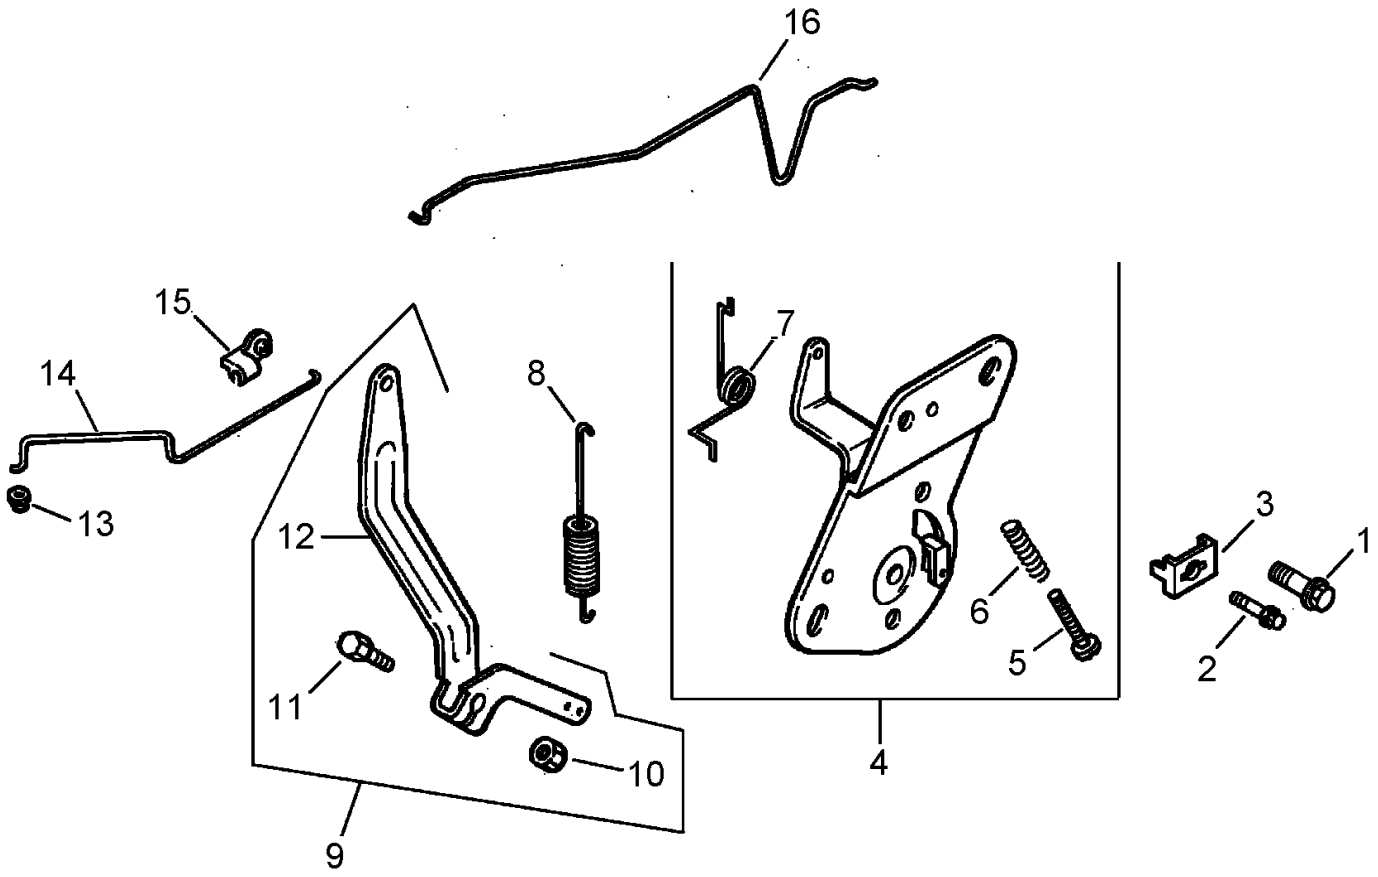


Engine Control Assembly
Kohler CV15S 41630

Ref	Part No.	Qty.	Description
❸1	M-664020-S	2	Screw-Lobed Socket, M6x1.0x20
❸2	M-545016-S	1	Screw-Hf, M5x0.8x16
❸3	12 237 01-S	1	Clamp-Cable
❸4	12 536 01-S	1	Speed Control ASM (Includes 5-7)
❸5	12 086 39-S	1	Screw-Head, Pan (W/loctite)
❸6	12 089 11-S	1	Spring-Control , Speed
❸7	12 089 23-S	1	Spring-Return, Choke
❸8	12 089 19-S	1	Spring-Governor
❸9	12 755 83-S	1	Governor Lever Kit (Includes 10-12)
❸10	12 100 07-S	1	Nut-Hf, 1/4-20
❸11	52 211 04-S	1	Bolt-Head, Round
❸12	12 090 28-S	1	Lever-Governor
❸13	25 158 08-S	1	Bushing-Retaining, Linkage
❸14	12 079 01-S	1	Linkage-Throttle
❸15	25 158 11-S	1	Bushing-Linkage, Throttle
❸16	12 079 07-S	1	Linkage-Choke

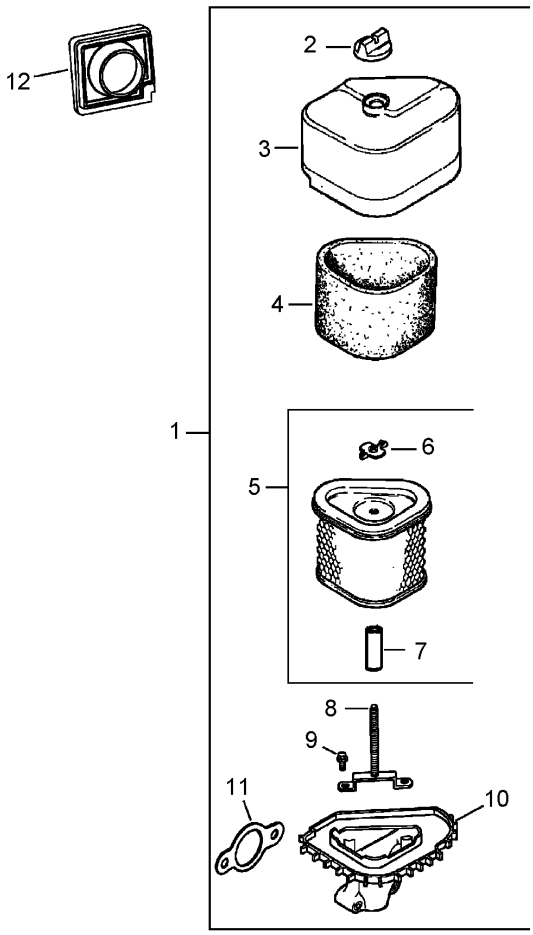

Air Intake / Filtration Assembly
Kohler CV15S 41630

Ref	Part No.	Qty.	Description
❸1	12 743 04-S	1	Air Cleaner Kit (Includes 2-11)
❸2	20 341 01-S	1	Knob-Cover, Air Cleaner
❸3	12 096 44-S	1	Cover-Cleaner, Air
❸4	12 083 12-S	1	Element-Precleaner
❸5	12 083 10-S	1	Element-Cleaner, Air (Includes 6,7)
❸6	12 100 01-S	1	Nut-Wing
❸7	12 032 11-S	1	Seal
❸8	12 072 04-S	1	Stud-M6x1.0x66
❸9	12 086 01-S	1	Screw-Hi-Lo Thread Forming, No.10
❸10	12 094 14-S	1	Base-Cleaner, Air
❸11	12 041 02-S	1	Gasket-Cleaner, Air
❸12	12 281 02-S	1	Duct-Air
❶❸	12 113 04-S	1	Decal-Cleaner, Air

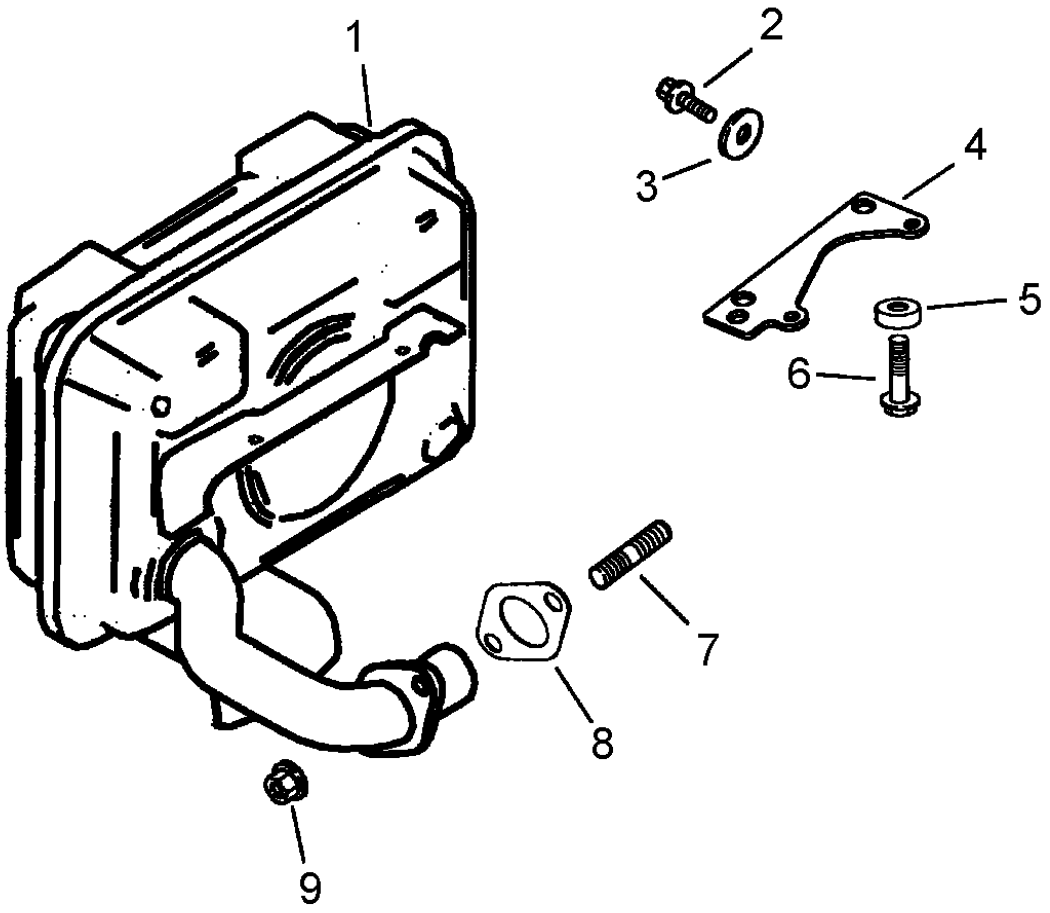

Exhaust Assembly
Kohler CV15S 41630

Ref	Part No.	Qty.	Description
❸1	12 068 40-S	1	Muffler
❸2	M-645016-S	2	Screw-HF
❸3	X-25-78-S	1	Washer-Plain
❸4	12 126 71-S	1	Bracket-Muffler
❸5	12 112 20-S	1	Spacer
❸6	M-645025-S	2	Screw-Hf, M6x1.0x20
❸7	25 072 04-S	2	Stud-M8x1.25x33
❸8	12 041 03-S	1	Gasket-Manifold, Exhaust
❸9	M-841080-S	2	Nut-Hf, M8x1.25
❶❸	M-545016-S	1	Screw-Hf, M5x0.8x16
❶❸	12 522 18	1	Short Block
❶❸	12 755 93-S	1	Gasket Set

NOTES

NOTES

NOTES


TORO®