Form No. 3465-567 Rev D

TORO®

Count on it.

Parts Catalog

e-Dingo® 500

Compact Tool Carrier

Model No. 22219—Serial No. 415200000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3465-567 D

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly 4
Hood and Service Panel Assembly 6
Counterweights, Skid Plates and Foot Pad Assembly 8
Drivetrain Assembly 10
Drivetrain Assembly Motor/Generator Assembly 12
Drivetrain Assembly Planetary Gearbox Assembly 14
Drivetrain Assembly Brake Assembly 16
Motor/Generator and Hydraulic Pump Assembly 18
Hydraulic Pump Assembly No. 139-7665 20
Hydraulic Tank Filter and Hydraulic Bulkhead Assembly 22
Hydraulic Loader Valve Assembly 24
Hydraulic Loader Valve Assembly No. 144-2909 26
Hydraulic Loader Cylinder Assembly 28
Hydraulic Cylinder Assembly No. 140-7290 30
Hydraulic Cylinder Assembly No. 140-7292 32
Loader Arm Assembly 34
Quick Attach Assembly No. 132-8418 36
Battery Assembly 38
Onboard Charger Assembly 40
Inverter Assembly 42
Main Wire Harness Assembly 44
Drivetrain Electrical Connection Assembly 46
Control Panel Assembly 48
Attachments and Accessories 50

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Main Frame Assembly

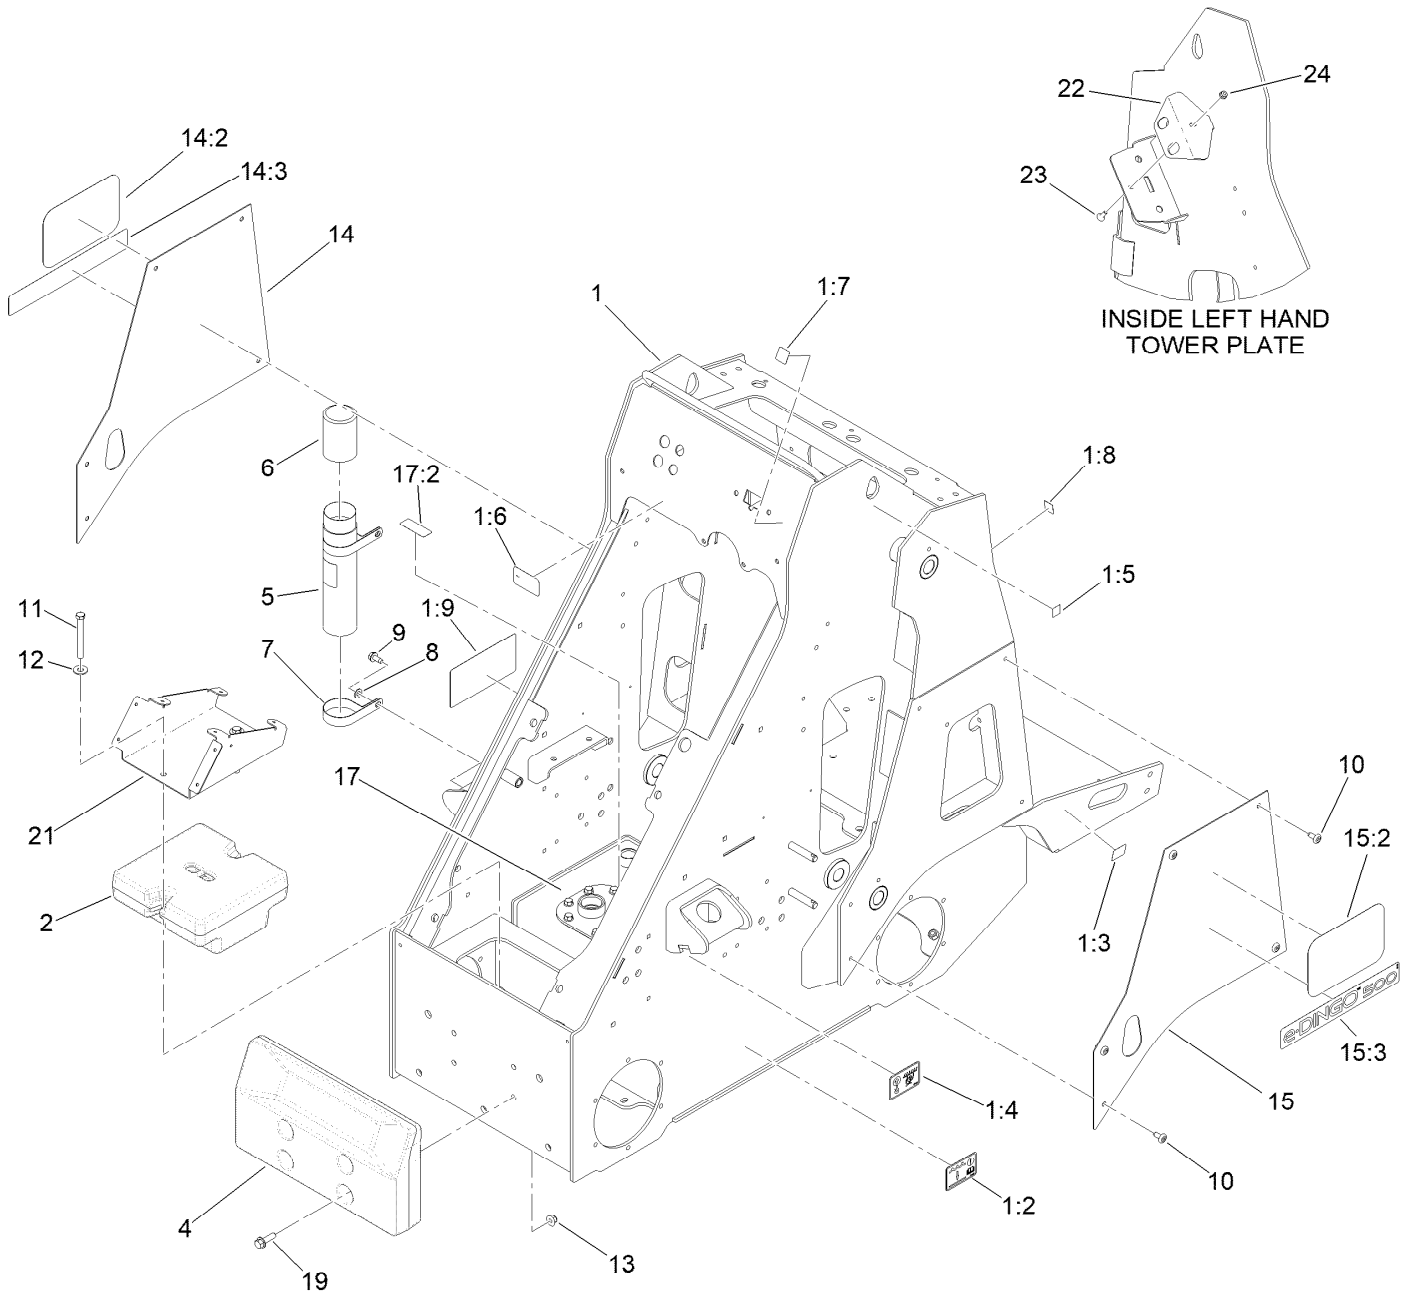

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-4721	1	Main Frame ASM
1:2	139-7709	2	Decal-Water Level
1:3	132-9051	2	Decal-Tiedown
1:4	125-6139	2	Decal-Lift/Tie Down
1:5	93-9084	2	Decal-Point, Lift
1:6	145-4779	1	Decal - Fuses
1:7	147-0290	1	Decal-Light, Warning
1:8	125-1414	1	Decal-Ground, Earth
1:9	145-4789	1	Decal - Quick Reference Aid
2	145-4706-0P	1	Counterweight-Front
4	145-2399-03	1	Counterweight-Front
5	104-7050	1	Tube-Manual
6	104-7048	1	Cap-Housing
7	2412-133	2	Clamp-R
8	3256-23	2	Washer-Plain
9	32144-70	2	Screw-HWHTF
10	138-9753	10	Screw
11	323-15	2	Screw-HH
12	3256-4	2	Washer-Flat
13	104-8301	4	Nut-HF, NI
14	145-4723	1	Panel-Access, RH
14:2	145-1978	1	Decal-Logo, Silver
14:3	139-7658	1	Decal- E-Dingo
15	145-4728	1	Panel-Access, LH
15:2	145-1978	1	Decal-Logo, Silver
15:3	139-7658	1	Decal- E-Dingo
17	145-4790	1	Plate - Cover
17:2	93-6686	1	Decal-Oil, HYD
19	3234-24	4	Screw-HHF
21	145-4751-03	1	Bracket-Mount, Fan
22	145-4772-01	1	Bracket-Fitting, Adjustable
23	1-807512	1	Bolt-CARR
24	119-4040	1	Nut-HF, NI

Hood and Service Panel Assembly

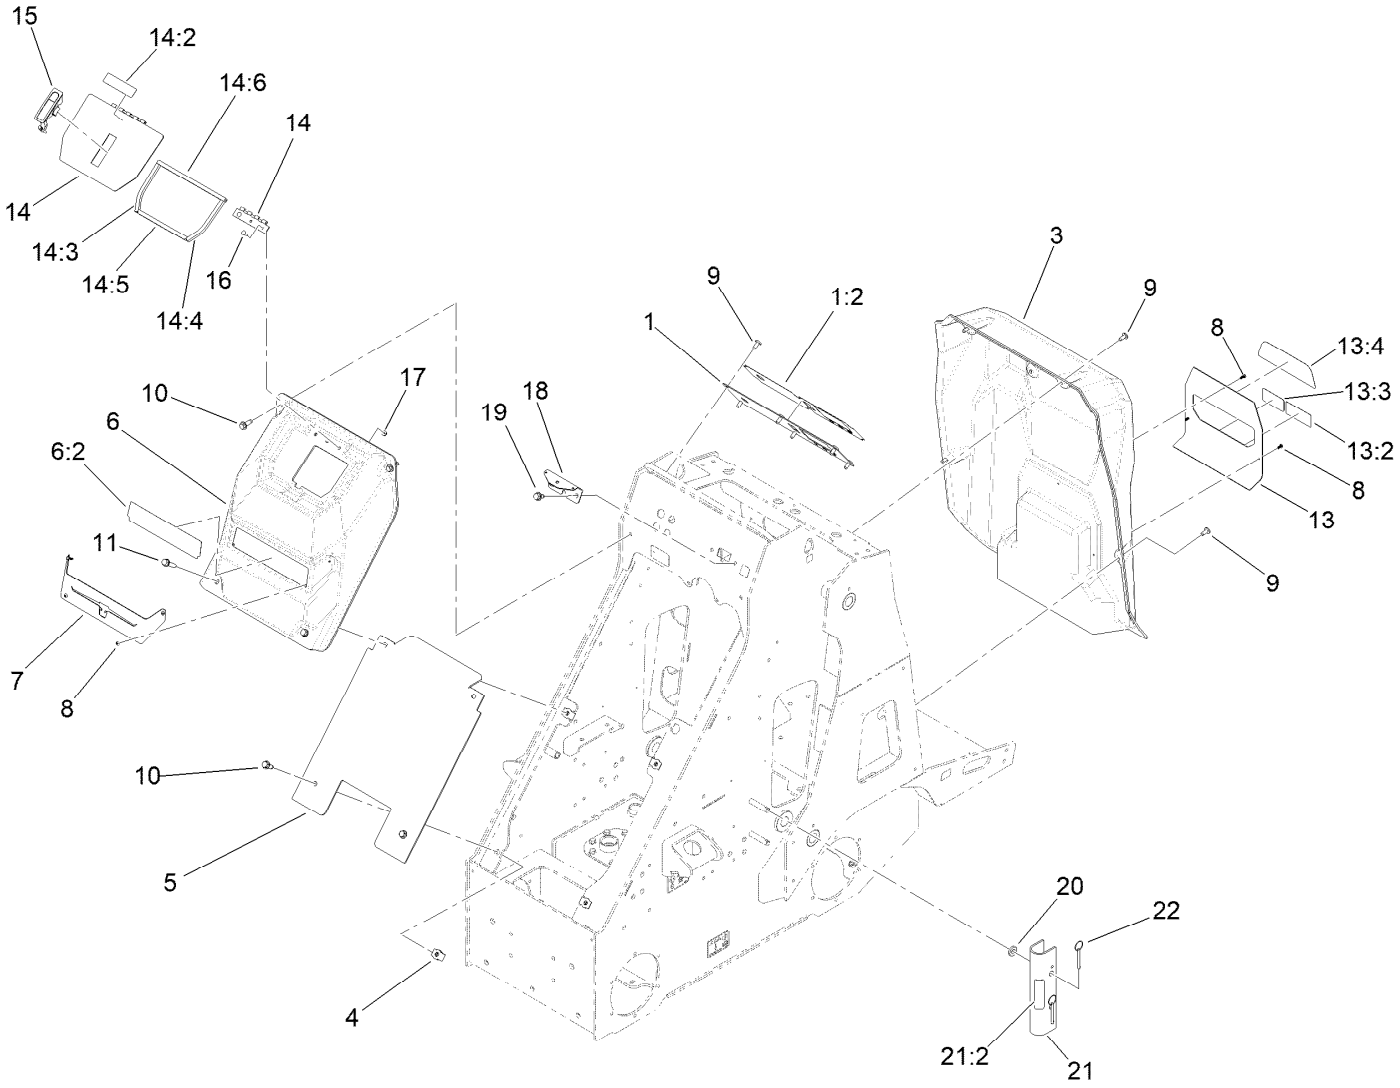

Hood and Service Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-4725	1	Panel-Instrument
1:2	145-2442	1	Decal - Controls
3	161-1090	1	Hood ASM, Rear
4	105-4886	4	Nut-Tinnerman
5	145-2393-03	1	Cover-Front,Lower
6	145-4722	1	Hood ASM, Front
6:2	145-4757	1	Decal - Backer, Red
7	145-4761-03	1	Plate-Hood
8	127-6843	7	Screw-Plastite, Torx Pan
9	138-9753	12	Screw
10	139-2428	4	Screw-HWH
11	32144-102	2	Screw-HWH
13	145-4791	1	Plate - Cord
13:2	145-2445	1	Decal - Charging Port
13:3	145-1174	1	Decal-Battery Charger
13:4	145-1172	1	Decal-Hypercell
14	145-4787	1	Door - Access
14:2	145-1175	1	Decal-Service, Shut-Off
14:3	145-4799	1	Foam - Door, RH
14:4	147-6019	1	Foam - Door, LH
14:5	147-6020	1	Foam - Door, Bottom
14:6	147-6021	1	Foam - Door, Top
15	145-4788	1	Latch - Compression
16	1-807533	2	Bolt-CARR
17	138-0719	2	Nut-HF
18	145-4777-01	1	Bracket - Light
19	110-9380	2	Screw-HWH
20	47-4440	4	Washer-Plastic
21	145-4724	2	Lock Cylinder ASM
21:2	145-4729	1	Decal - Cylinder Lock
22	108-0094	4	Pin-Cotterless

Counterweights, Skid Plates and Foot Pad Assembly

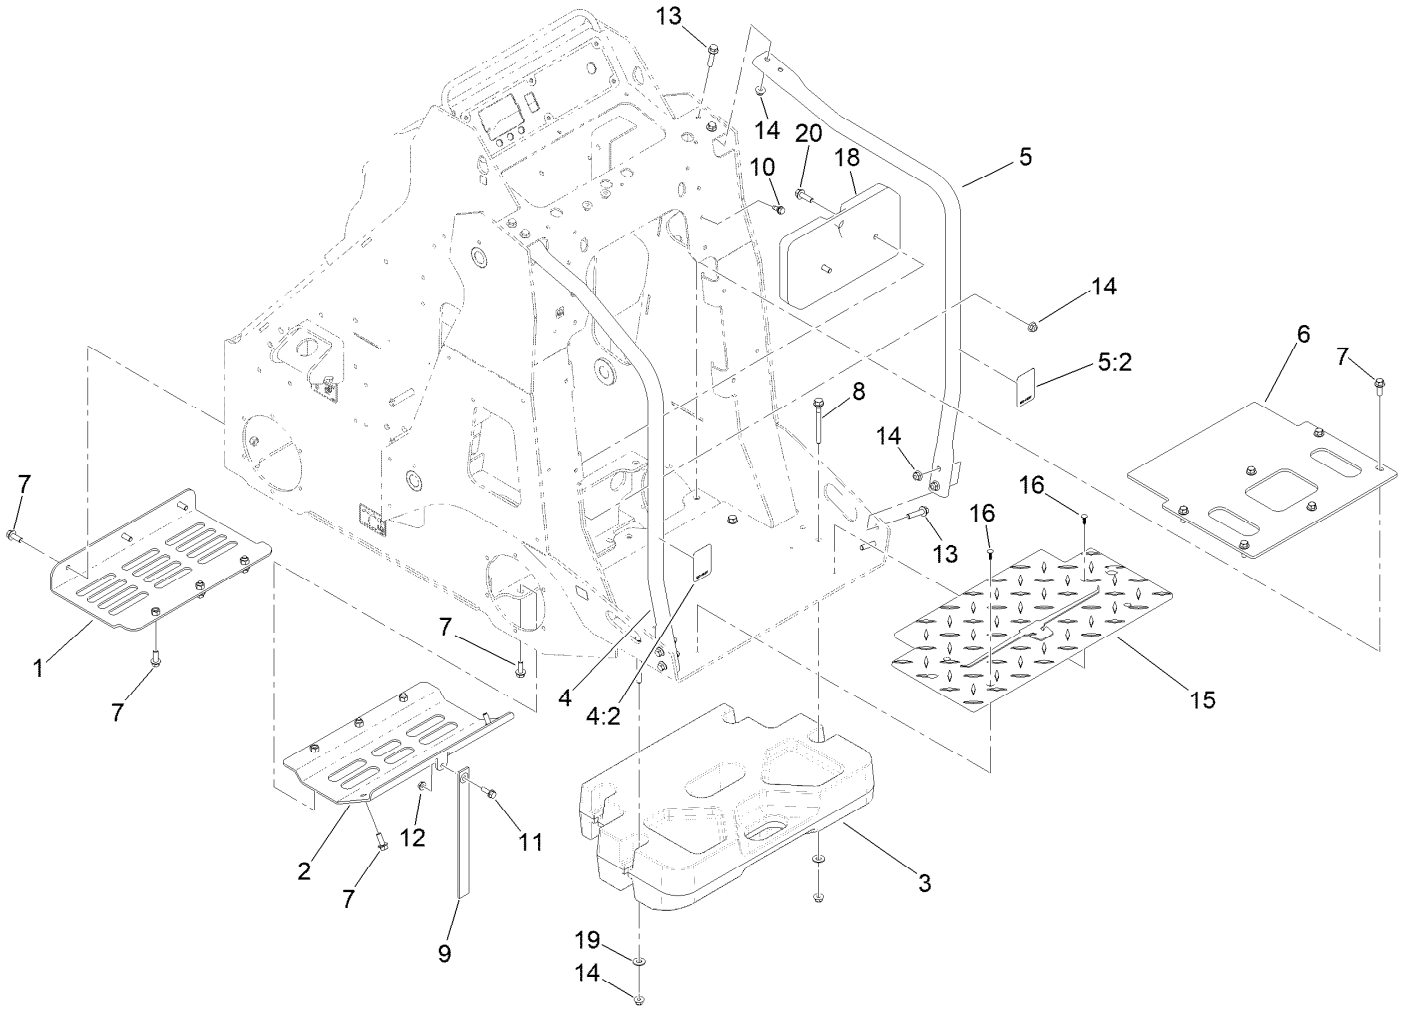

Counterweights, Skid Plates and Foot Pad Assembly (continued)

Ref.	Part Number	Qty.	Description
1	140-7260-01	1	Skid Plate ASM, Front
2	140-7261-01	1	Skid Plate ASM, Rear
3	145-2398-03	1	Counterweight
4	145-4797	1	Tube-Handle,LH
4:2	100-4627	1	Reflector
5	145-4798	1	Tube-Handle,RH
5:2	100-4627	1	Reflector
6	145-2350-01	1	Plate-Cover,Motor
7	3234-42	17	Screw-HHF
8	140-5522	4	Screw-HHF 5/8, Patch
9	139-7731	1	Strap, Static
10	126-4424	2	Screw-Shoulder
11	3234-17	1	Screw-HHF
12	32128-26	1	Nut-HF
13	3234-19	8	Screw-HHF
14	104-8301	14	Nut-HF, NI
15	145-4784	1	Pad - Foot
16	125-8067	4	Plug-Plastic
18	145-4719-0P	1	Counterweight
19	3256-4	4	Washer-Flat
20	3234-18	2	Screw-HHF

Drivetrain Assembly

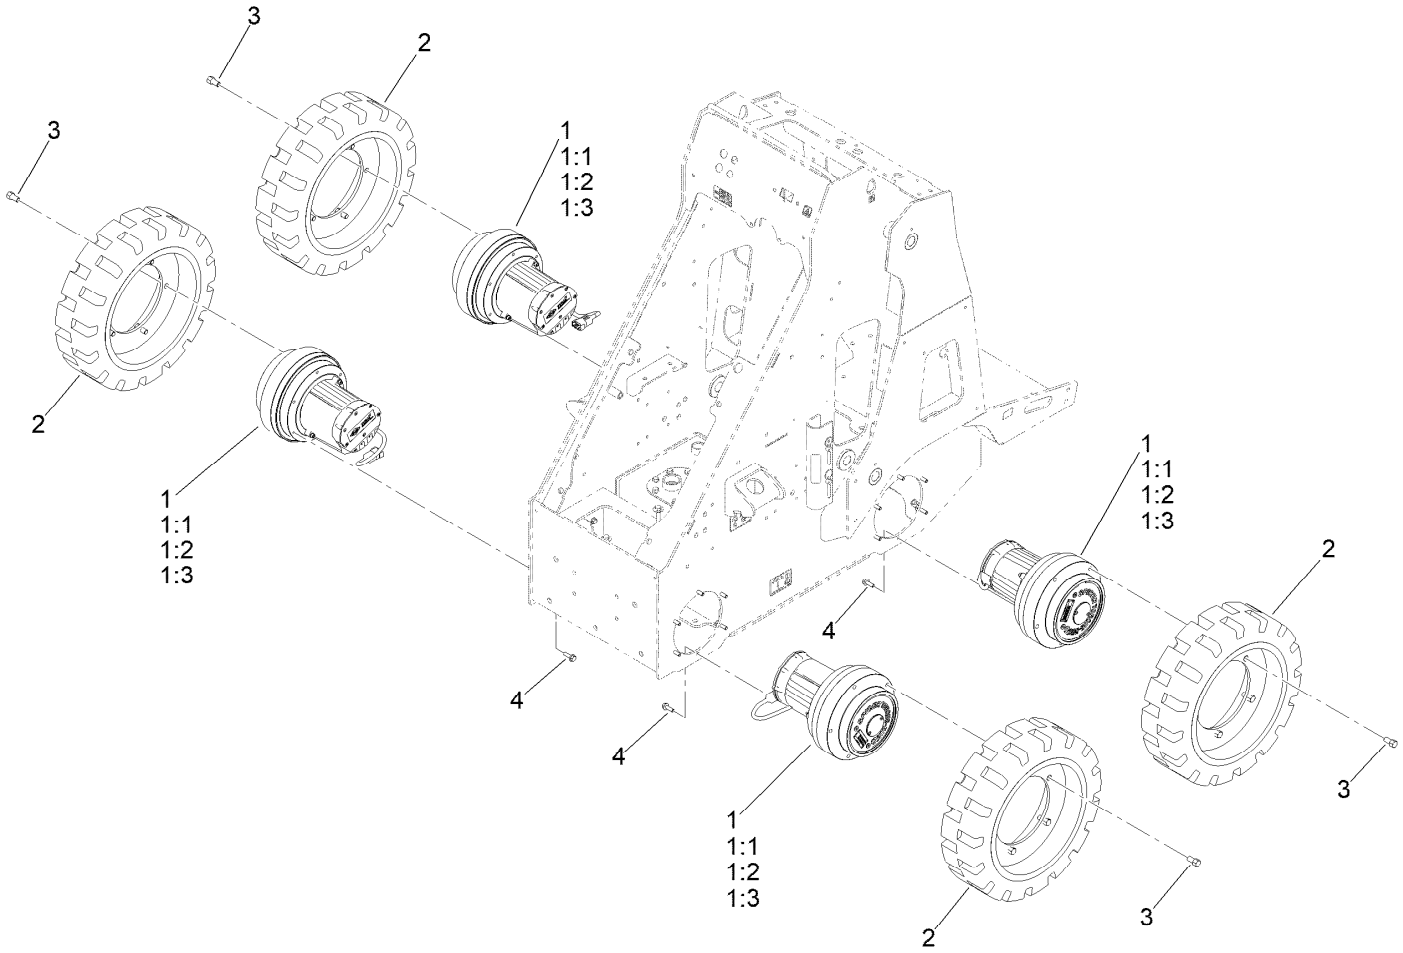

Drivetrain Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-8973	4	Motor/Gen Torquehub ASM-3Kw 45:1 Rdctn
1:1		1	Motor/Gen-48V,3Kw ●
1:2		1	Gearbox,Plntry-45:1 Rdctn ●
1:3		1	Brake,Parking-Torquehub ●
2	145-2376	4	Tire-Solid
3	144-1739	20	Screw-HH, Lug M12 X 1.50
4	33104-025	24	Screw-HHF

● Not serviced separately

Drivetrain Assembly
Motor/Generator Assembly

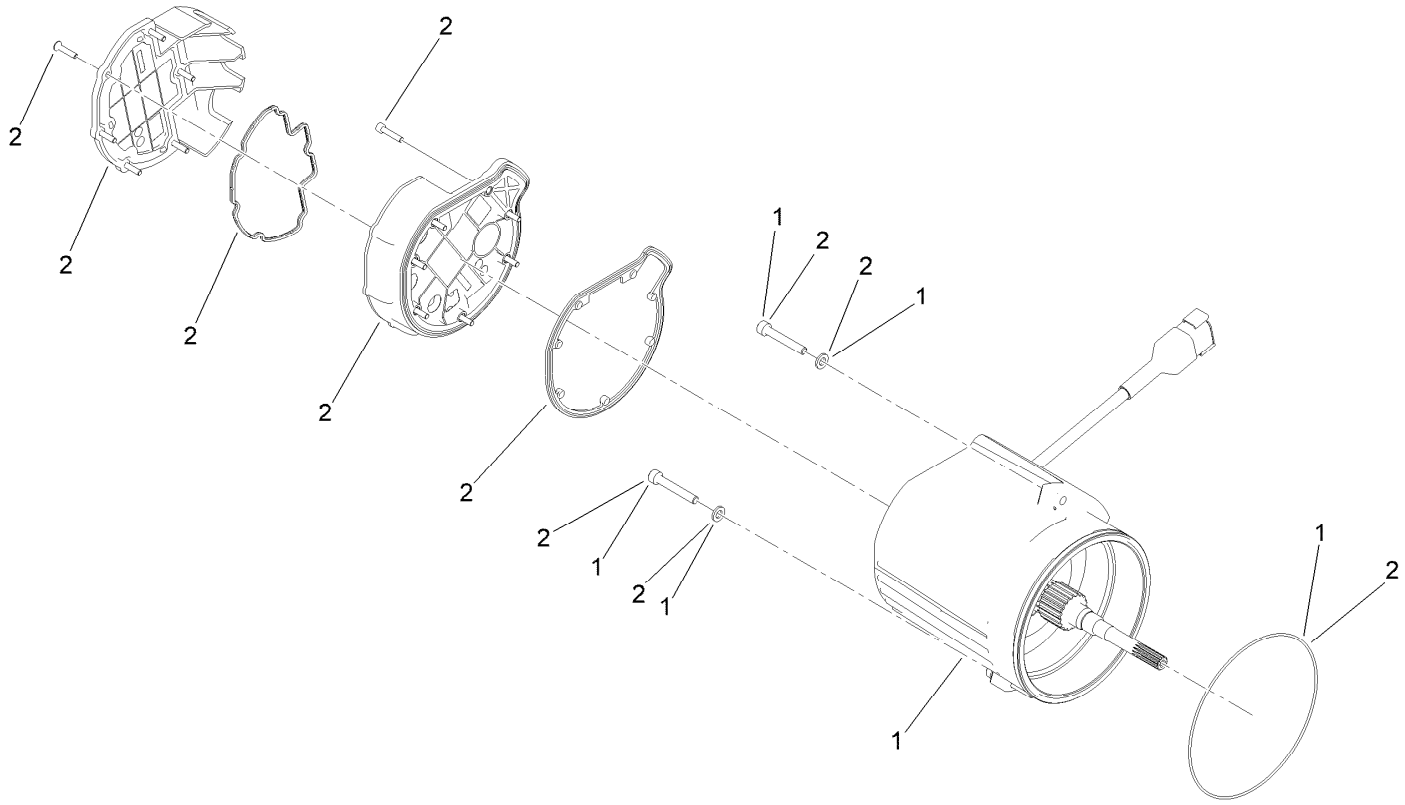

Drivetrain Assembly
Motor/Generator Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	145-5055	1	Kit-Motor, Service
2	145-5057	1	Kit-Cover/Seal, Motor

Drivetrain Assembly
Planetary Gearbox Assembly

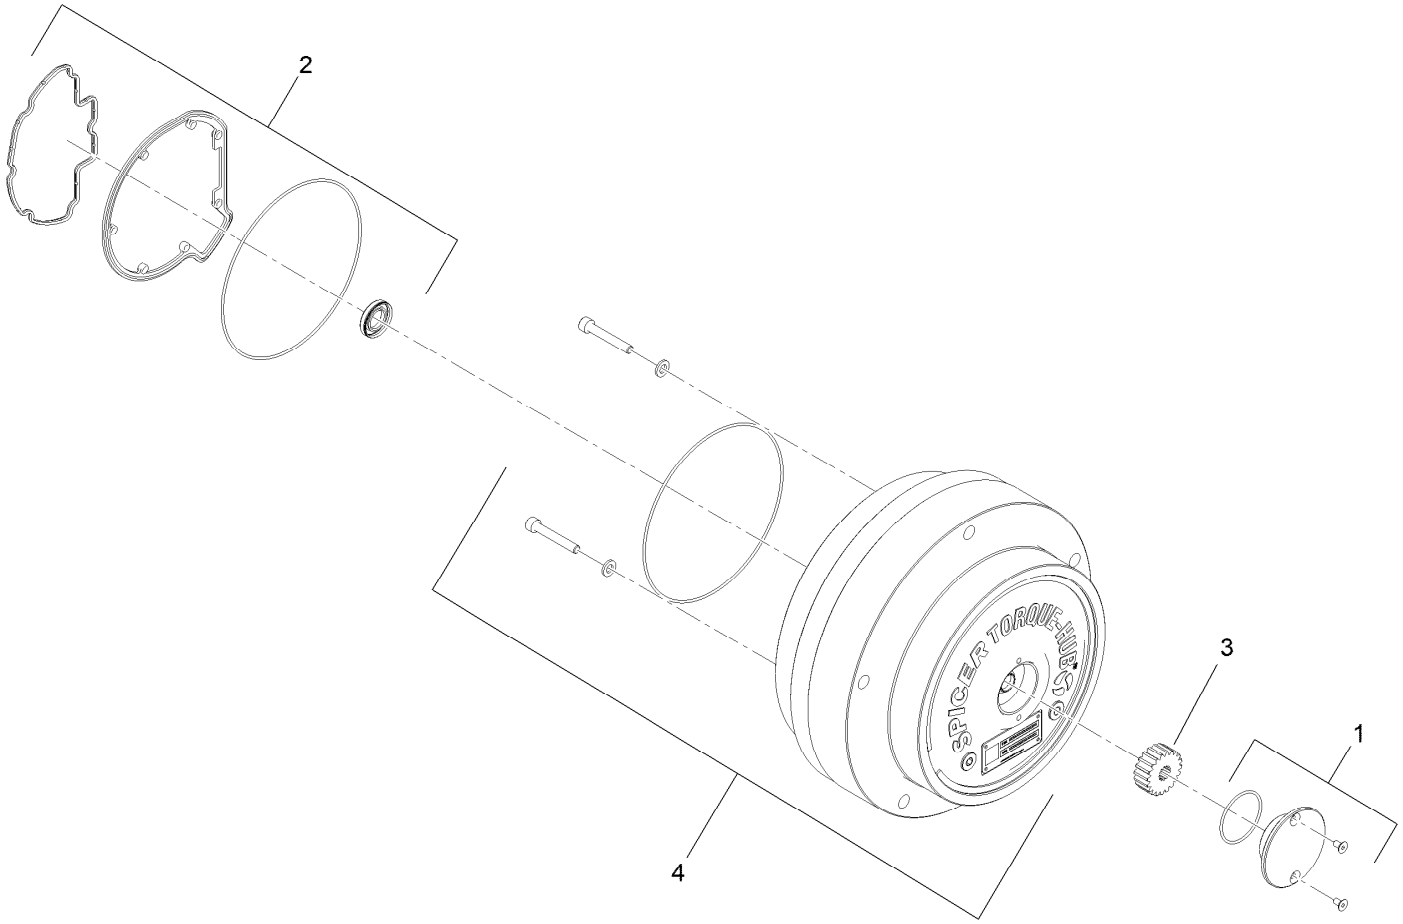

Drivetrain Assembly
Planetary Gearbox Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-5060	1	Kit-Cover, Sun Gear
2	145-5061	1	Kit-Seal, Main
3	145-5063	1	Gear-Sun
4	145-5064	1	Kit-Gearbox

Drivetrain Assembly
Brake Assembly

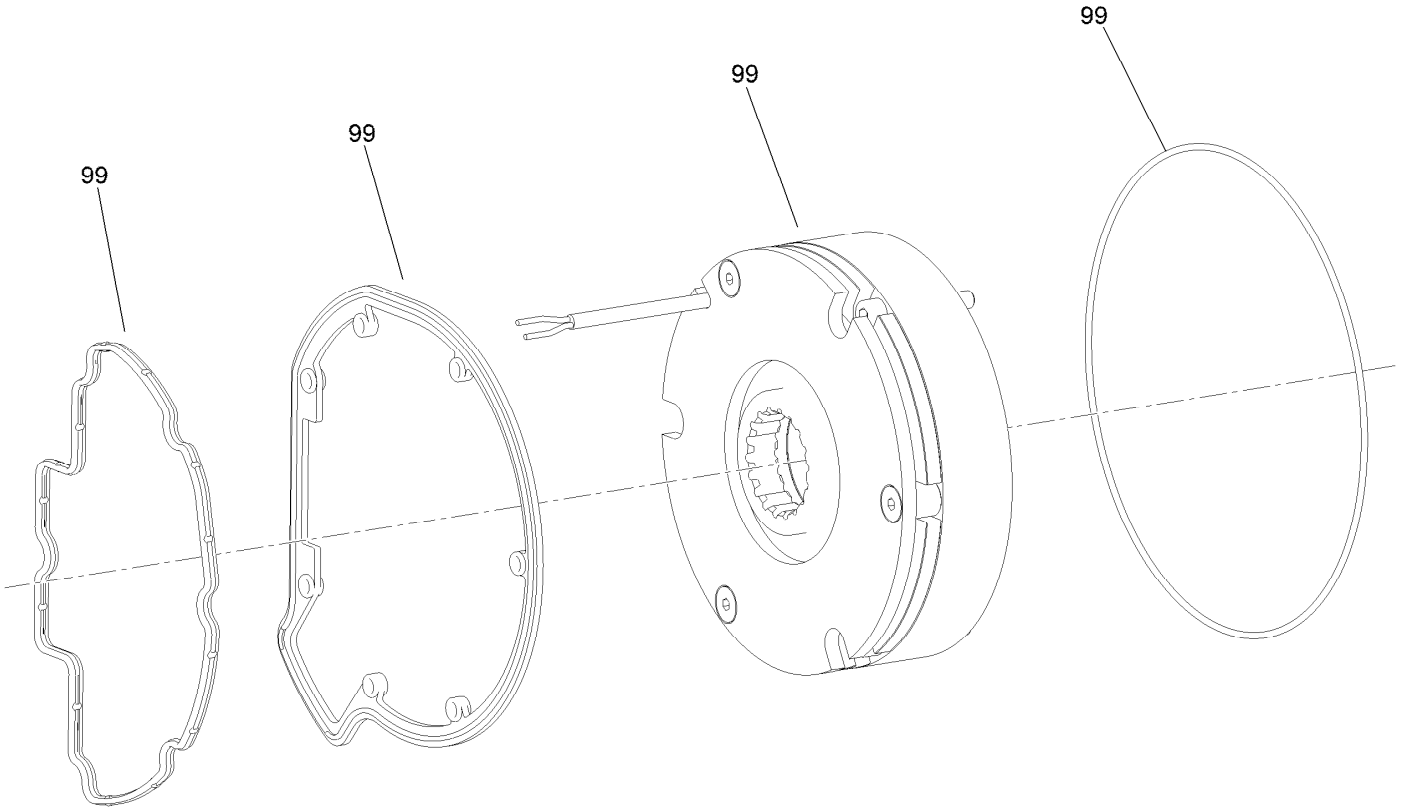

Drivetrain Assembly
Brake Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
99	145-5058	1	Kit-Brake

Motor/Generator and Hydraulic Pump Assembly

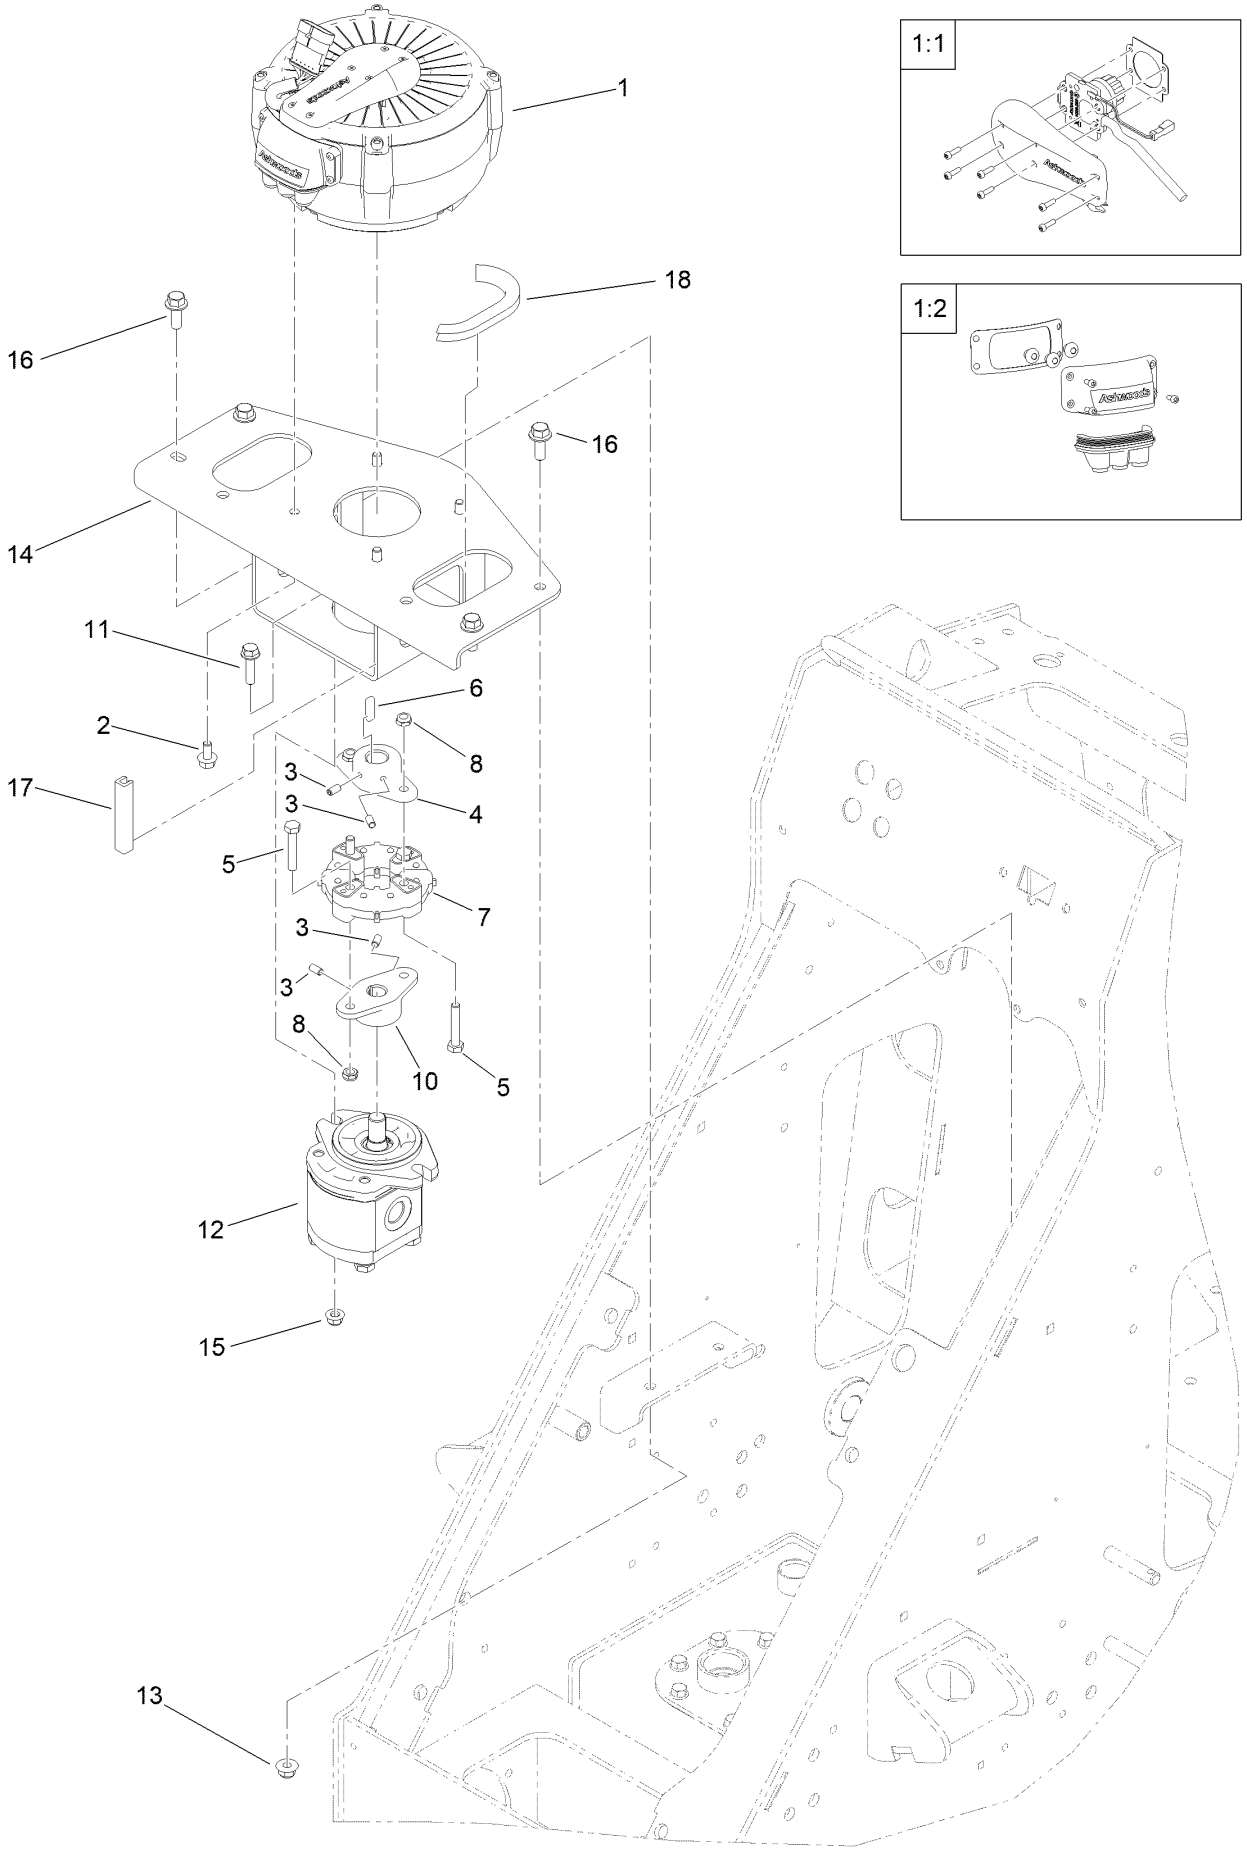

Motor/Generator and Hydraulic Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-8926	1	Motor/Gen
1:1	138-8941	1	Kit-Encoder, Mtr/Gen
1:2	138-8942	1	Kit-Terminal Cover
2	33104-016	4	Screw-HHF
3	3245-9	4	Screw-Set, HSH
4	139-7664	1	Hub-Pump
5	322-9	4	Screw-HH
6	104-3097	1	Key-Square
7	119-0652	1	Coupler-Rubber
8	3296-47	4	Nut-Lock,NI
10	98-4701	1	Hub-Pump
11	3234-36	2	Screw-HHF
12	139-7665	1	Pump-Hydraulic
13	104-8301	4	Nut-HF, NI
14	144-2948-01	1	Plate-Motor ASM [red]
15	104-8300	2	Nut-HF, NI
16	3234-42	4	Screw-HHF
17	70-2041	1	Trim - Edge
18	133-8571	1	Trim-Seal

Hydraulic Pump Assembly No. 139-7665

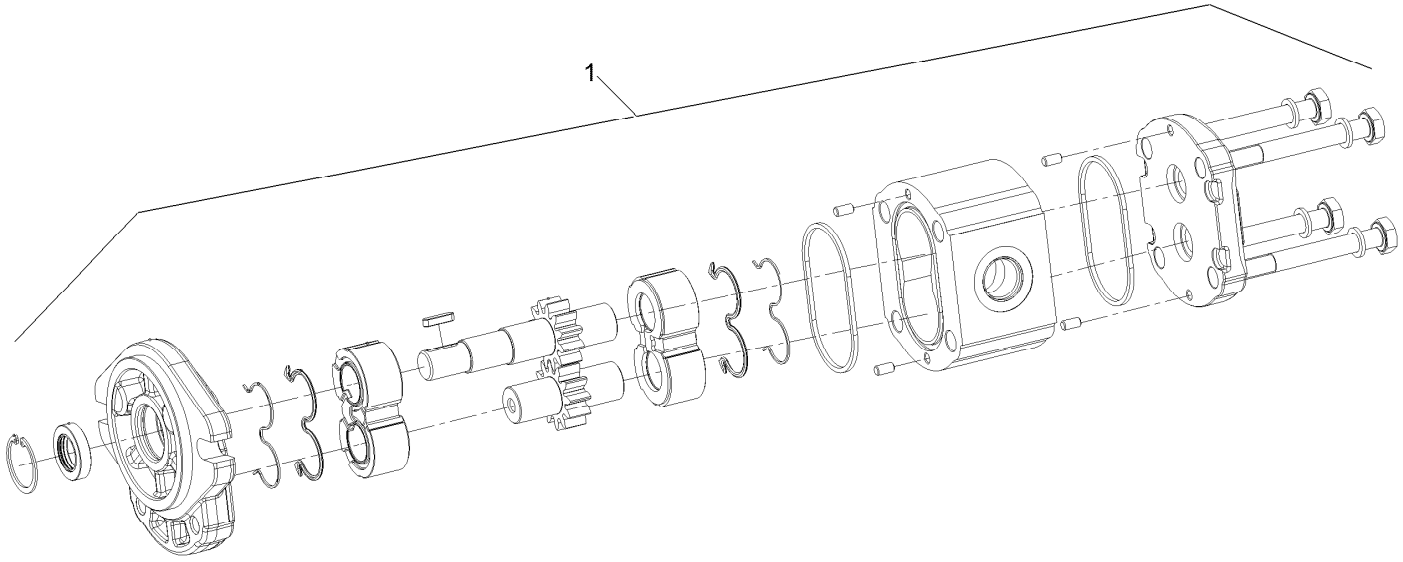

Hydraulic Pump Assembly No. 139-7665 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	139-7705	1	Kit-Seal ●

● Not illustrated

Hydraulic Tank Filter and Hydraulic Bulkhead Assembly

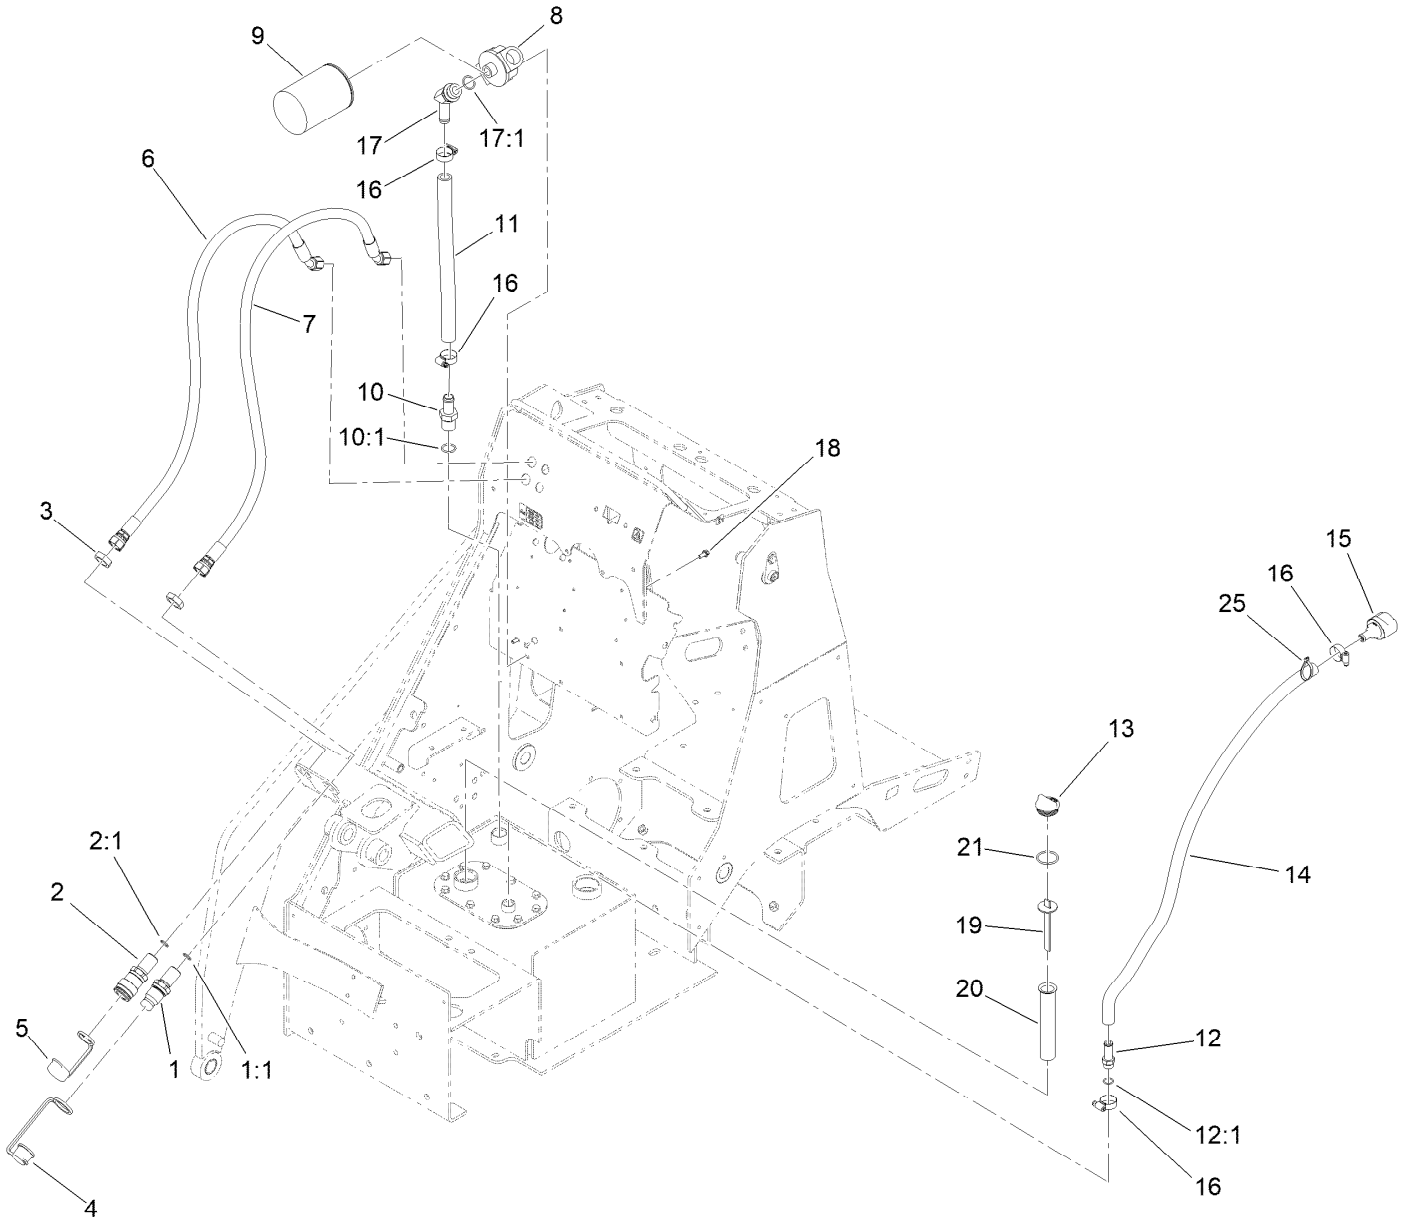

Hydraulic Tank Filter and Hydraulic Bulkhead Assembly (continued)

Ref.	Part Number	Qty.	Description
1	105-8395	1	Bulkhead Nipple ASM
1:1	237-65	1	O-Ring
1:2	100-6120	1	Seal Kit ●
2	105-8394	1	Bulkhead Coupler ASM
2:1	237-65	1	O-Ring
3	340-74	2	Nut-Lock, Bulkhead
4	100-8815	1	Cap-Dust, Nipple
5	100-8816	1	Cap-Dust, Coupler
6	144-2973	1	Hose ASM-HYD
7	144-2974	1	Hose ASM-HYD
8	92-5821	1	Head-Filter
9	86-3010	1	Filter-Oil
10	354-73	1	Fitting
10:1	237-81	1	O-Ring
11	145-4701	1	Hose-HYD, Return
12	107-7569	1	Fitting-STR
12:1	237-79	1	O-Ring
13	93-7498	1	Plug-Plastic
14	147-6018	1	Hose - Vent
15	147-6017	1	Breather (Air)
16	2412-129	4	Clamp-Hose
17	354-127	1	Fitting-Elbow45
17:1	237-81	1	O-Ring
18	3234-33	2	Screw-HHF
19	147-6024	1	Dipstick - Oil,
20	61-2790	1	Filter-Screen
21	237-101	1	O-Ring
25	3290-378	1	Tie-Cable

● Not illustrated

Hydraulic Loader Valve Assembly

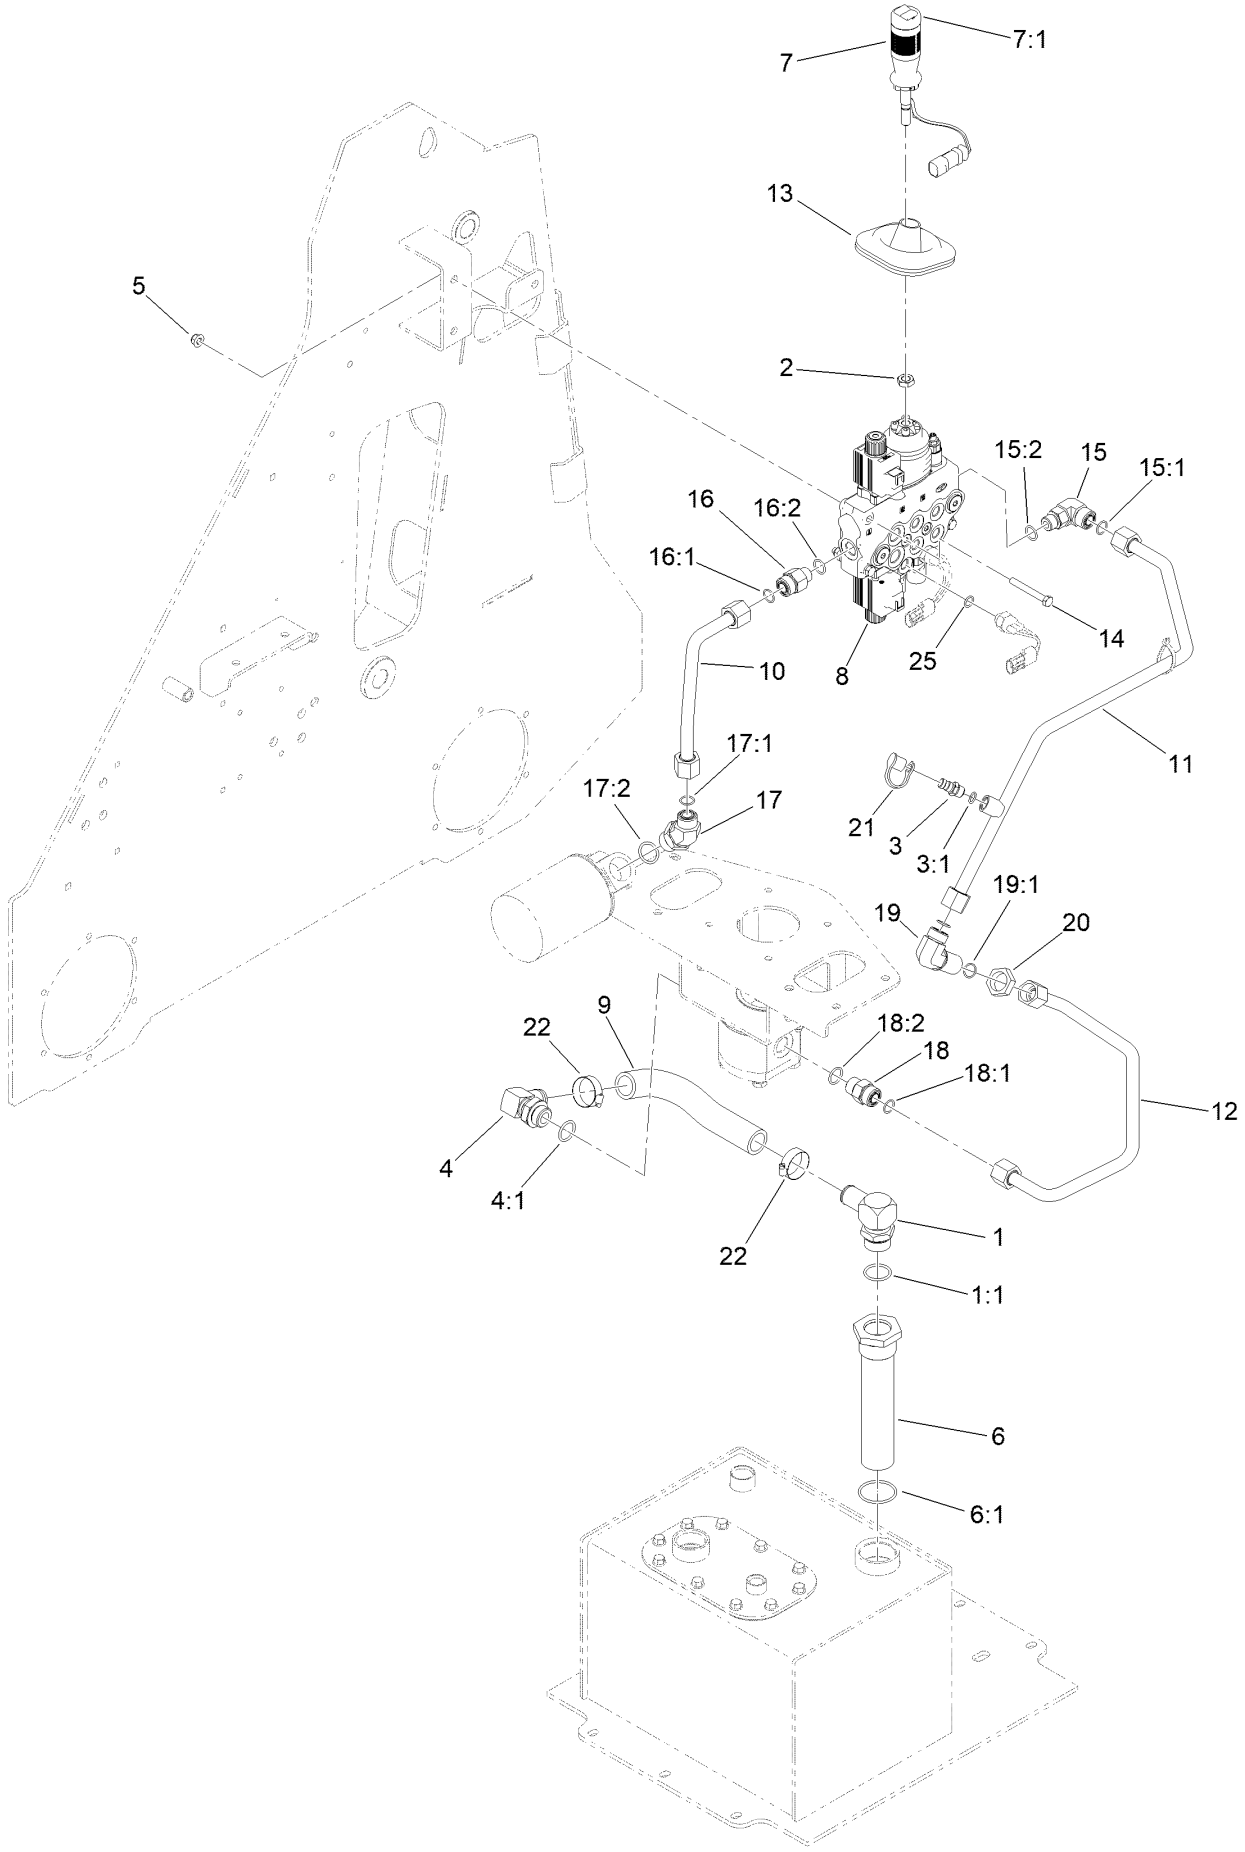

Hydraulic Loader Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
1	23-8910	1	Stem-Barb-90
1:1	237-146	1	O-Ring
2	51-2070	1	Nut
3	59-7410	1	Fitting-Diagnostic
3:1	237-42	1	O-Ring
4	100-4202	1	Fitting-90
4:1	237-81	1	O-Ring
5	104-8300	3	Nut-HF, NI
6	115-2230	1	Strainer-In Tank
6:1	340-136	1	O-Ring
7	140-5742	1	Handle-Auxiliary ASM
7:1	147-6873	1	Boot-Switch, Joystick
8	144-2909	1	Valve-HYD-Loader
9	144-3009	1	Hose
10	145-2373	1	Hydraulic Tube ASM
11	145-2401	1	Hydraulic Tube ASM
12	145-2402	1	Hydraulic Tube ASM
13	145-4746	1	Boot-Joystick
14	322-12	3	Screw-HH
15	340-153	1	Fitting-Elbow, 90 DEG
15:1	237-79	1	O-Ring
15:2	237-151	1	O-Ring
16	340-155	1	Fitting-Straight
16:1	237-79	1	O-Ring
16:2	237-151	1	O-Ring
17	340-156	1	Fitting-Elbow 45
17:1	237-65	1	O-Ring
17:2	237-81	1	O-Ring
18	340-7	1	Fitting-Straight
18:1	237-65	1	O-Ring
18:2	237-80	1	O-Ring
19	340-72	1	Fitting-Bulkhead, 90 DEG
19:1	237-65	2	O-Ring
20	340-74	1	Nut-Lock, Bulkhead
21	353-947	1	Cap-Dust, Black
22	2412-34	2	Clamp-Hose
25	237-42	2	O-Ring

Hydraulic Loader Valve Assembly No. 144-2909

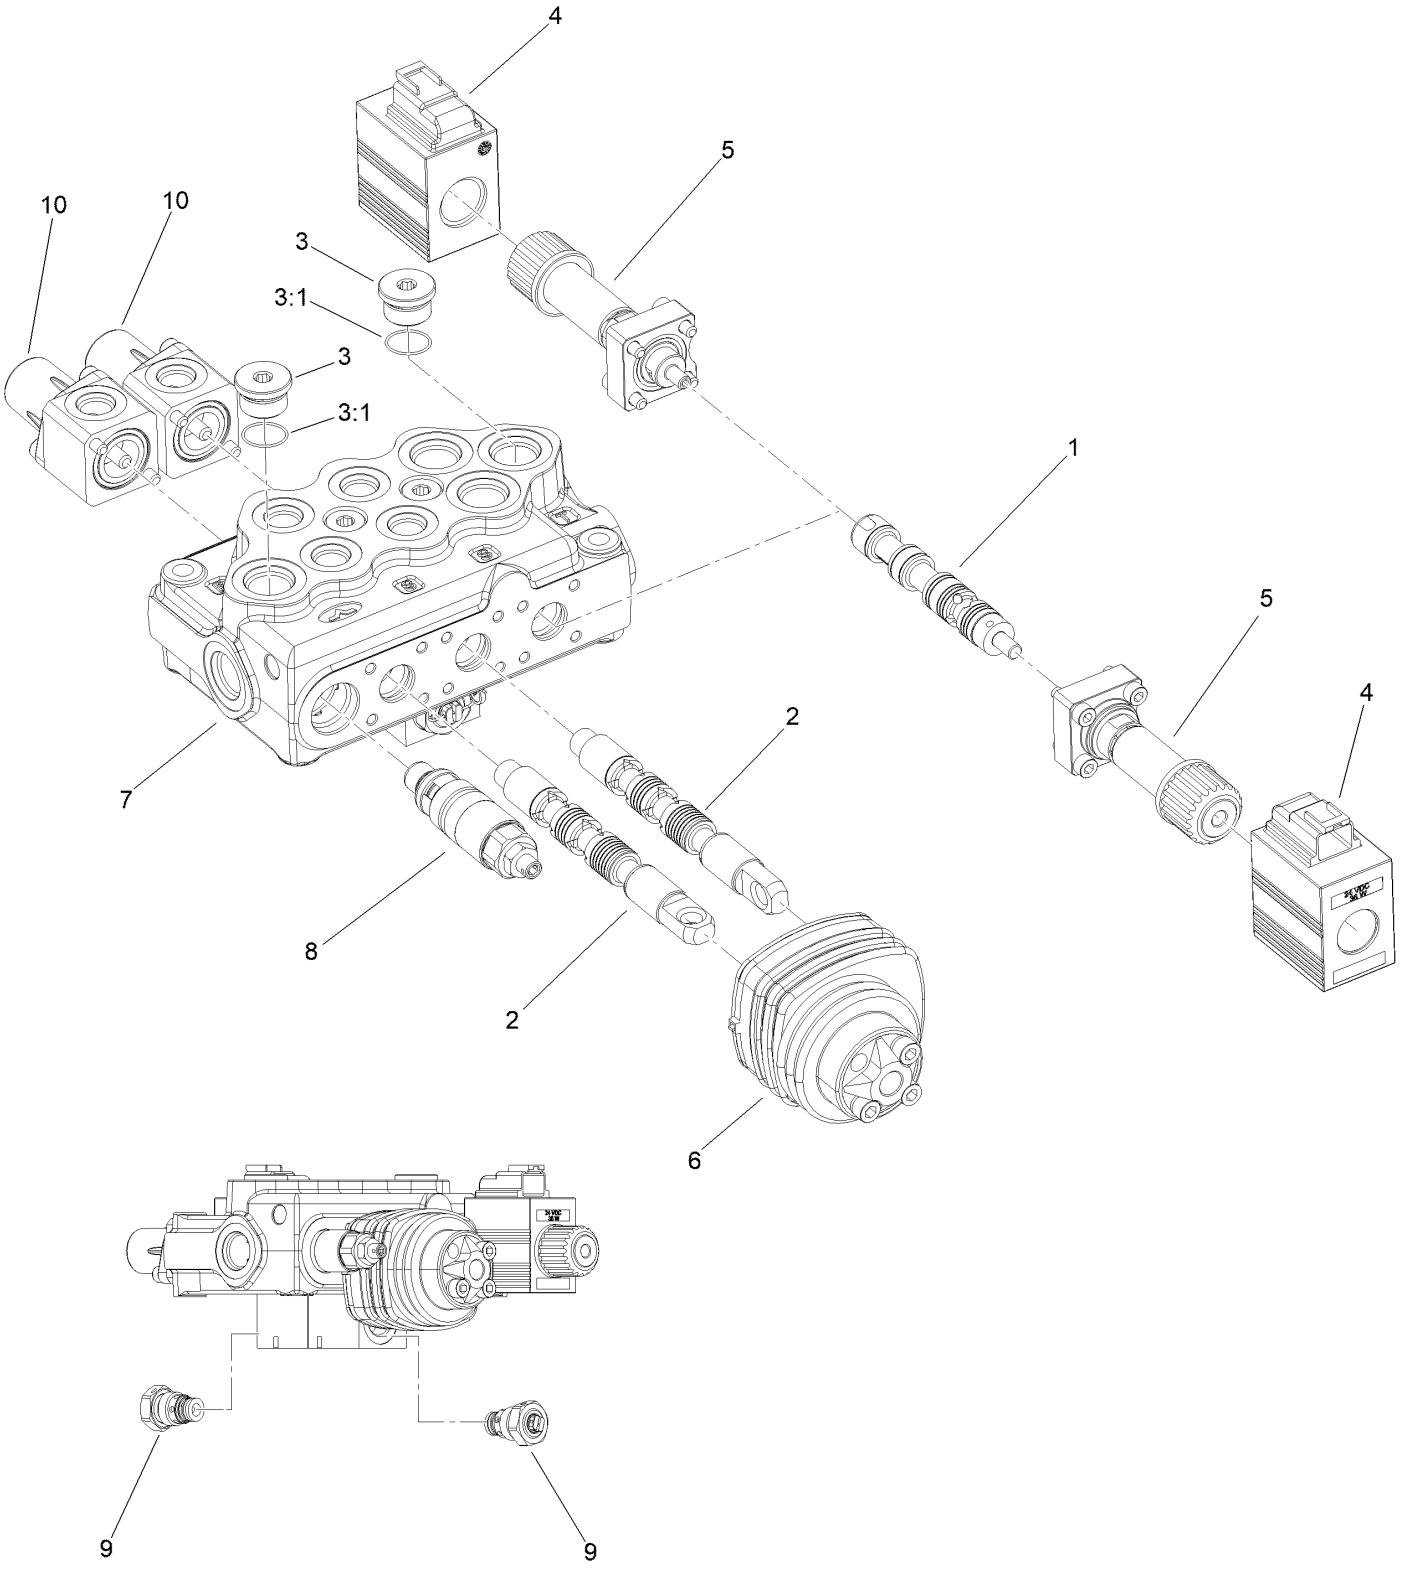

Hydraulic Loader Valve Assembly No. 144-2909 (continued)

Ref.	Part Number	Qty.	Description
1	147-6043	1	Valve-Spool
2	114-8624	2	Valve-Spool
3	353-988	2	Plug-Hex
3:1	237-79	1	O-Ring
4	147-6044	2	Coil
5	147-6045	1	Kit - Controller
6	147-6046	1	Kit - Joystick
7	147-6047	1	Kit - Body
8	147-6048	1	Kit - Valve
9	147-6049	2	Kit - Valve [100 - 155 Bar]
10	115-4093	2	Switch Spring Return Kit

Hydraulic Loader Cylinder Assembly

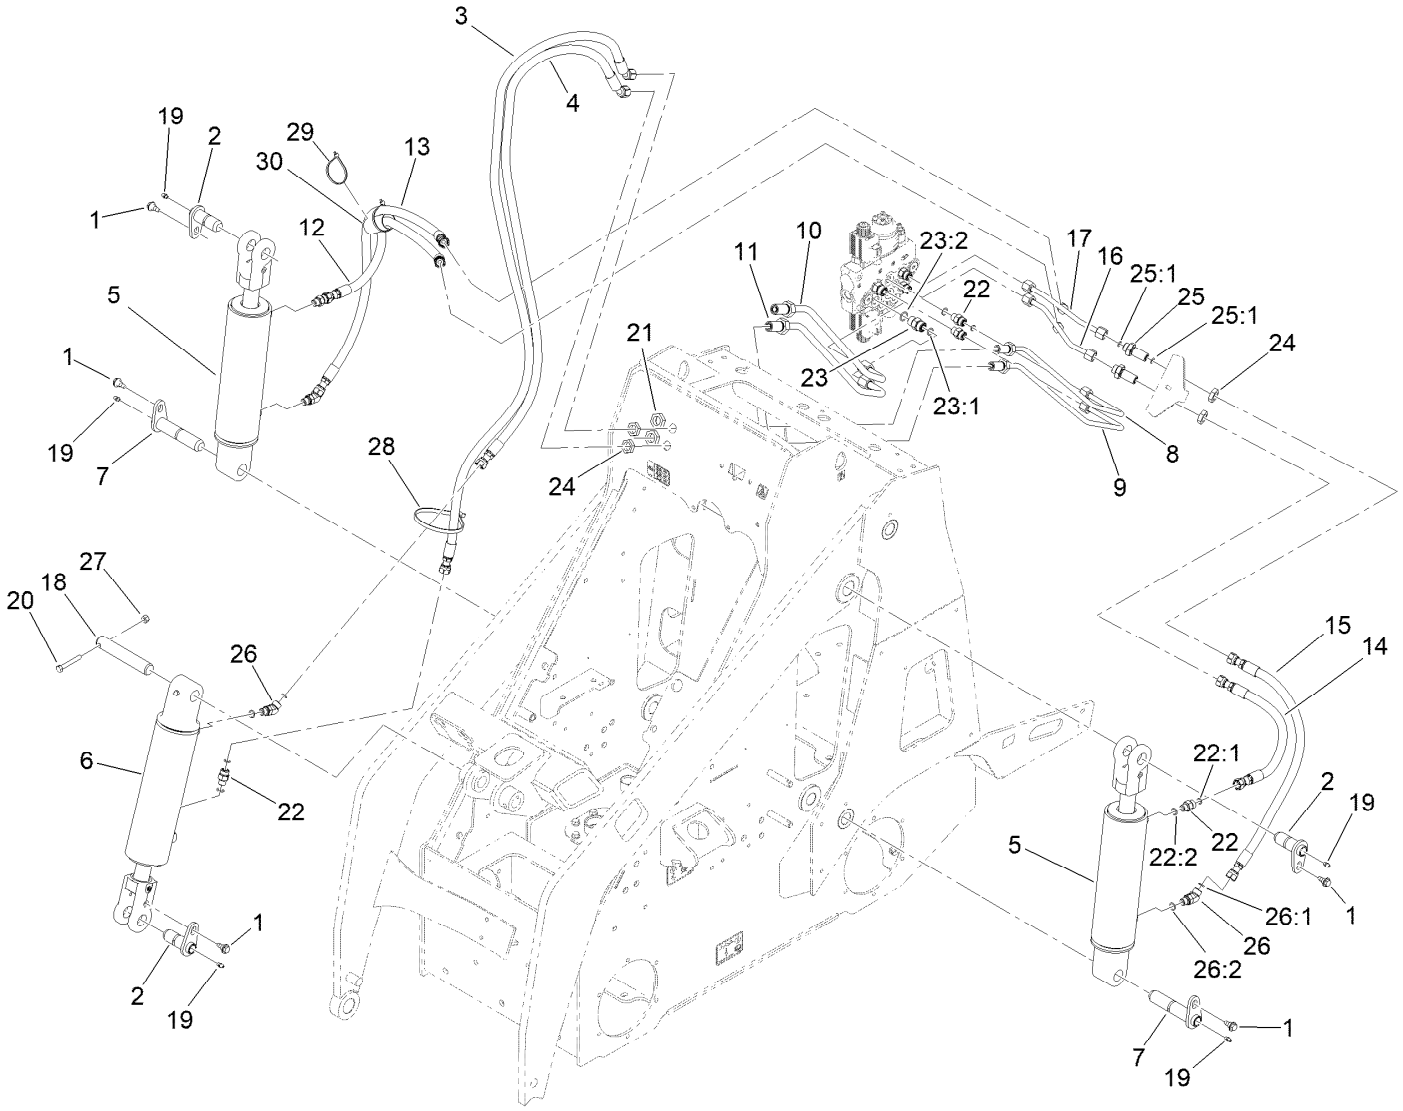

Hydraulic Loader Cylinder Assembly (continued)

Ref.	Part Number	Qty.	Description
1	99-5105	5	Screw-Shoulder
2	112-2609	3	Pin-Pivot
3	140-7253	1	Hose ASM-HYD
4	140-7254	1	Hose ASM-HYD
5	140-7290	2	Cylinder-HYD
6	140-7292	1	Cylinder-HYD
7	144-2910	2	Pin-Pivot
8	144-2959	1	Hydraulic Tube ASM
9	144-2960	1	Hydraulic Tube ASM
10	144-2961	1	Hydraulic Tube ASM
11	144-2962	1	Hydraulic Tube ASM
12	144-2971	1	Hose ASM-HYD
13	144-2972	1	Hose ASM-HYD
14	144-2976	1	Hose ASM-HYD
15	144-2977	1	Hose ASM-HYD
16	145-2374	1	Hydraulic Tube ASM
17	145-2375	1	Hydraulic Tube ASM
18	145-2394	1	Pin-Locking
19	302-5	5	Fitting-Grease
20	322-11	1	Screw-HH
21	340-127	2	Nut-Bulkhead
22	340-2	7	Fitting-Straight
22:1	237-22	1	O-Ring
22:2	237-42	1	O-Ring
23	340-4	2	Fitting-Straight
23:1	237-30	1	O-Ring
23:2	237-79	1	O-Ring
24	340-70	4	Nut-Lock
25	340-71	2	Fitting-Straight, Bulkhead
25:1	237-22	2	O-Ring
26	340-87	3	Fitting-Elbow, 45 DEG
26:1	237-22	1	O-Ring
26:2	237-42	1	O-Ring
27	3296-29	1	Nut-Lock, NI
28	3334-945	1	Tie-Cable
29	3290-378	2	Tie-Cable
30	AU112950	1	Protector-Hose

Hydraulic Cylinder Assembly No. 140-7290

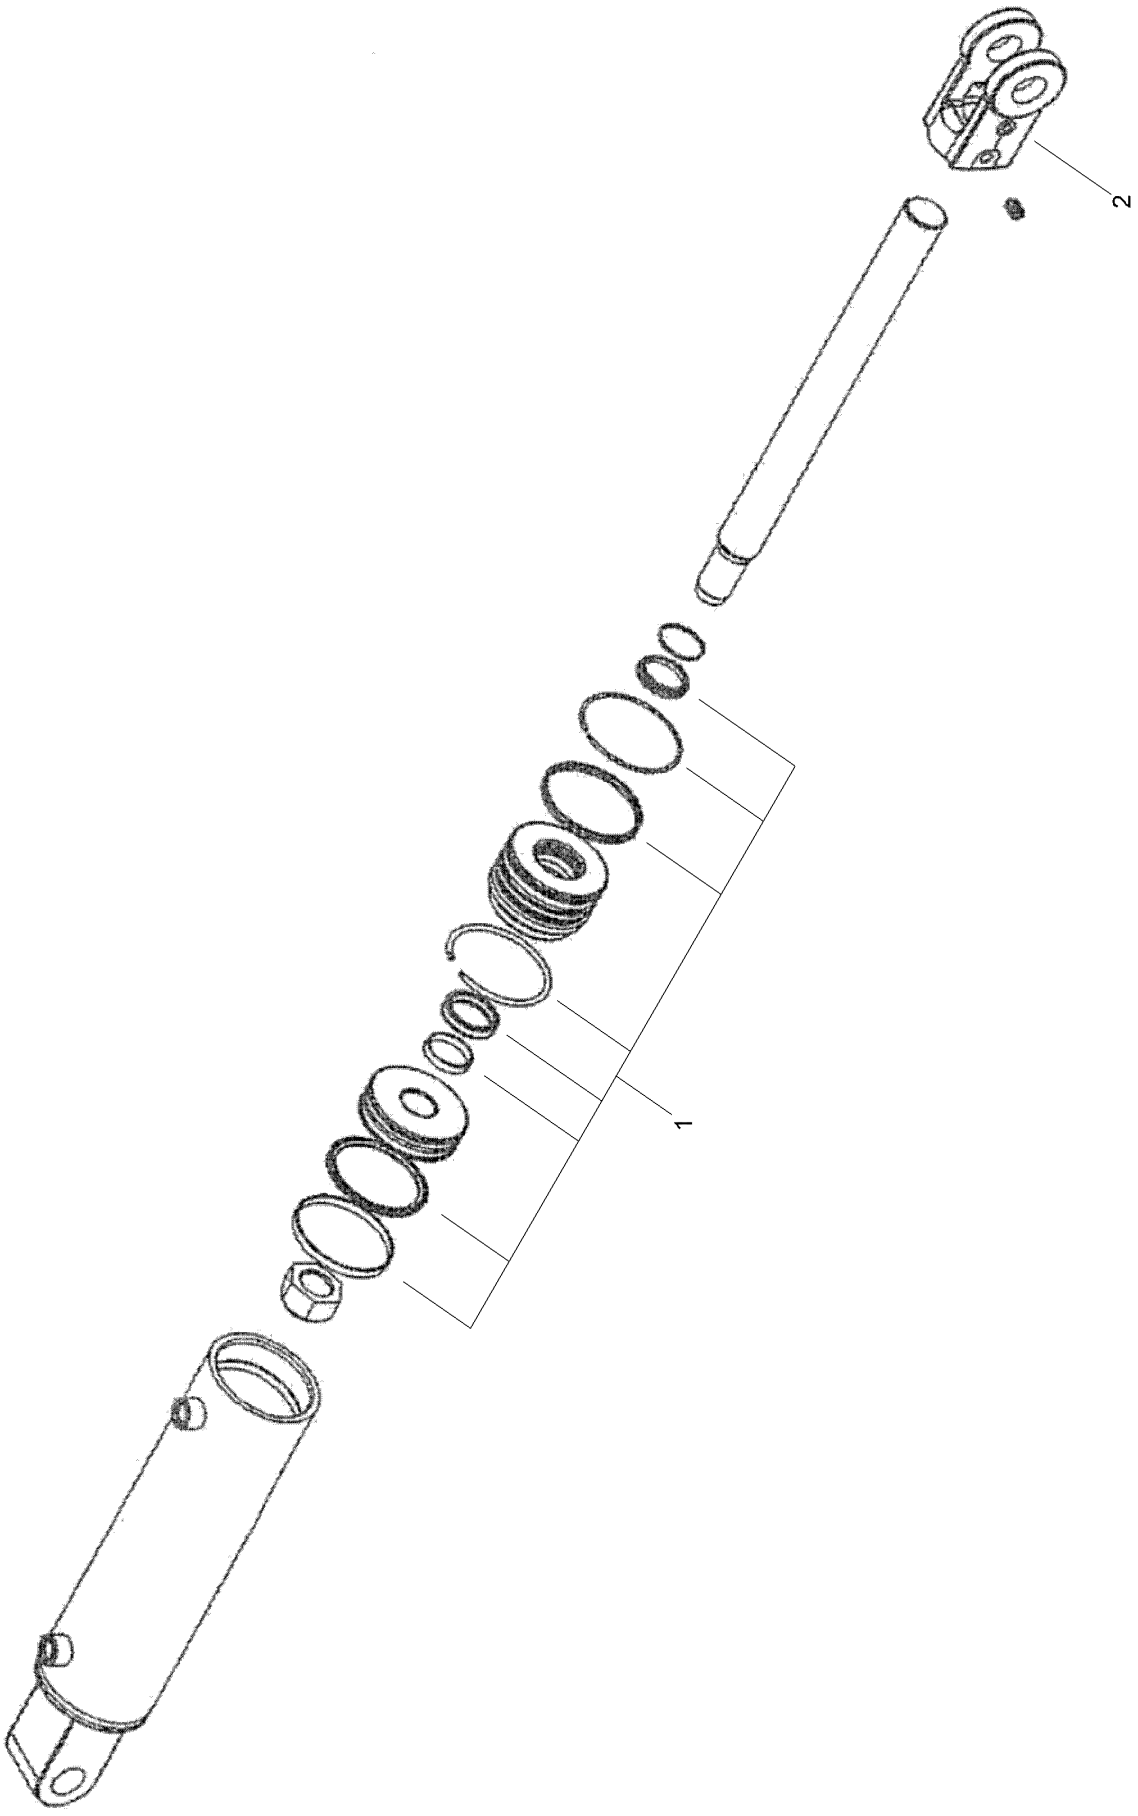

Hydraulic Cylinder Assembly No. 140-7290 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	139-7713	1	Seal Kit
2	163-8918	1	Rod-Clevis

Hydraulic Cylinder Assembly No. 140-7292

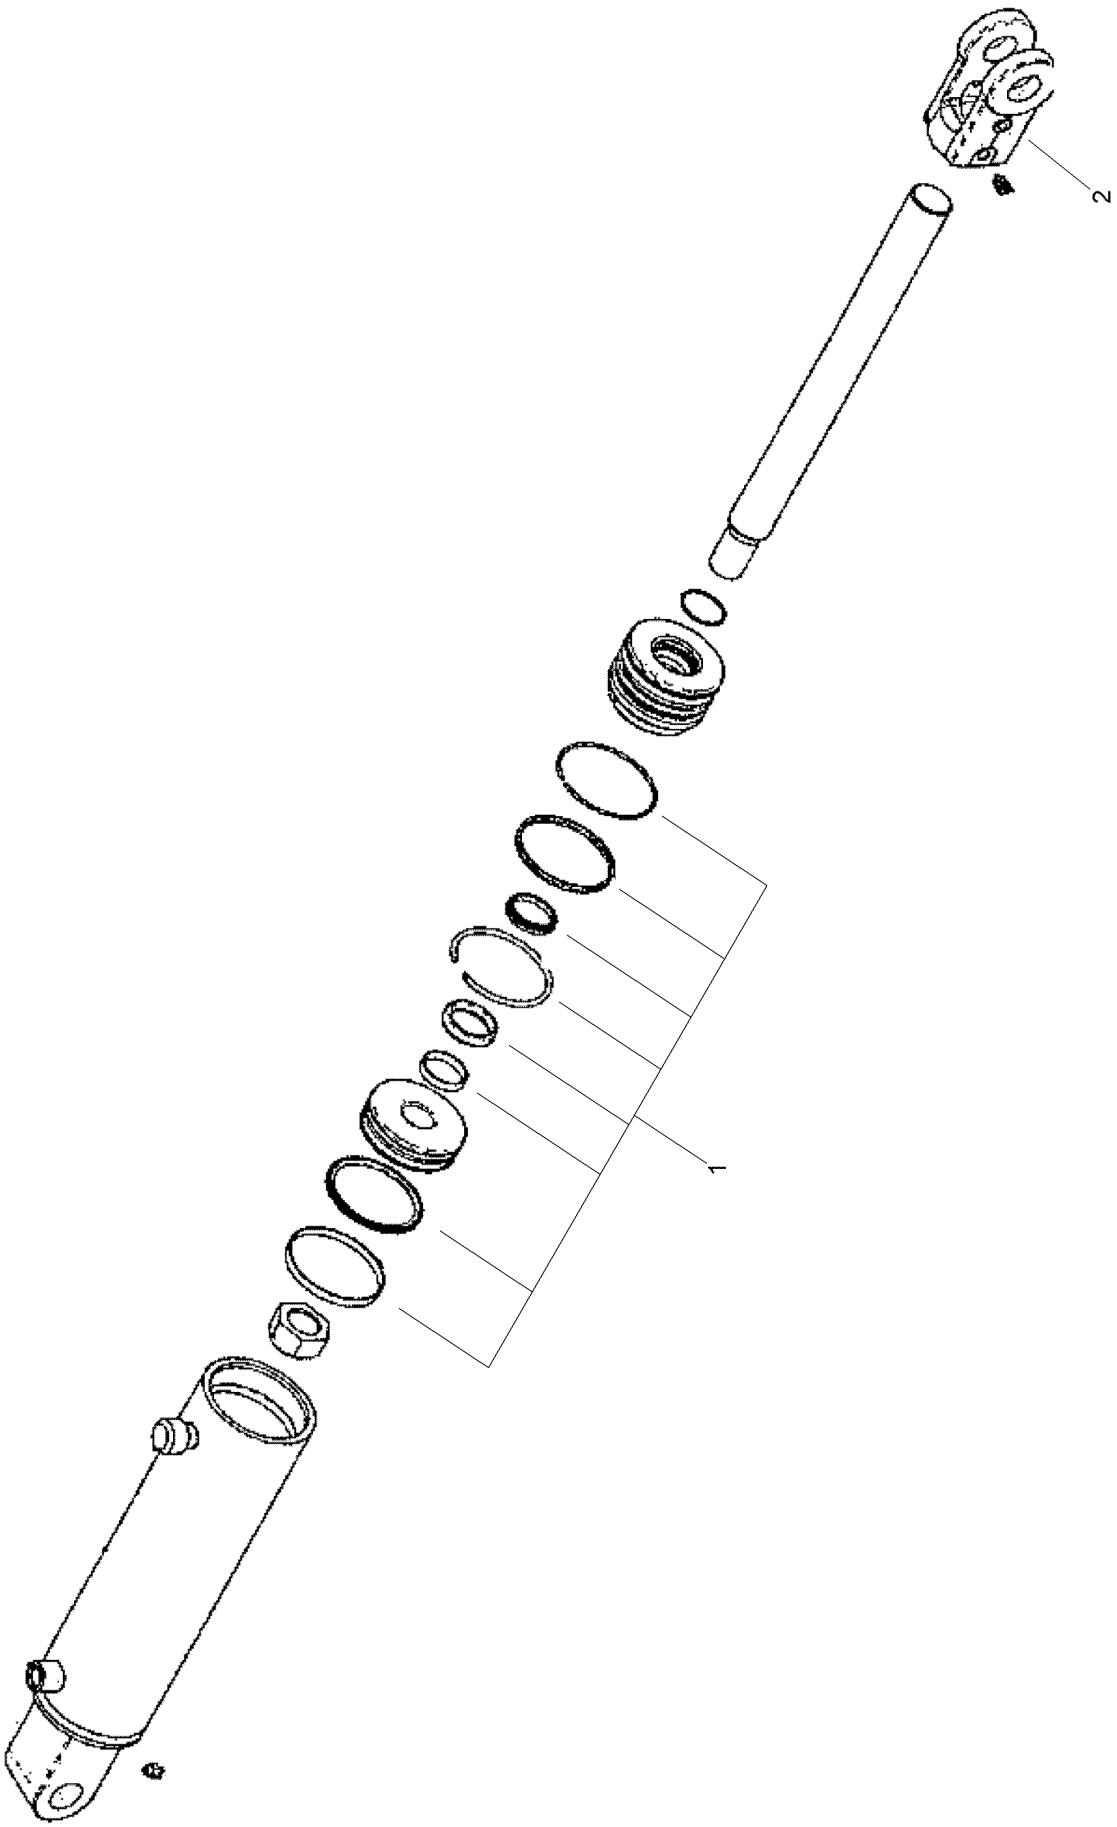

Hydraulic Cylinder Assembly No. 140-7292 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	139-7713	1	Seal Kit
2	163-8918	1	Rod-Clevis

Loader Arm Assembly

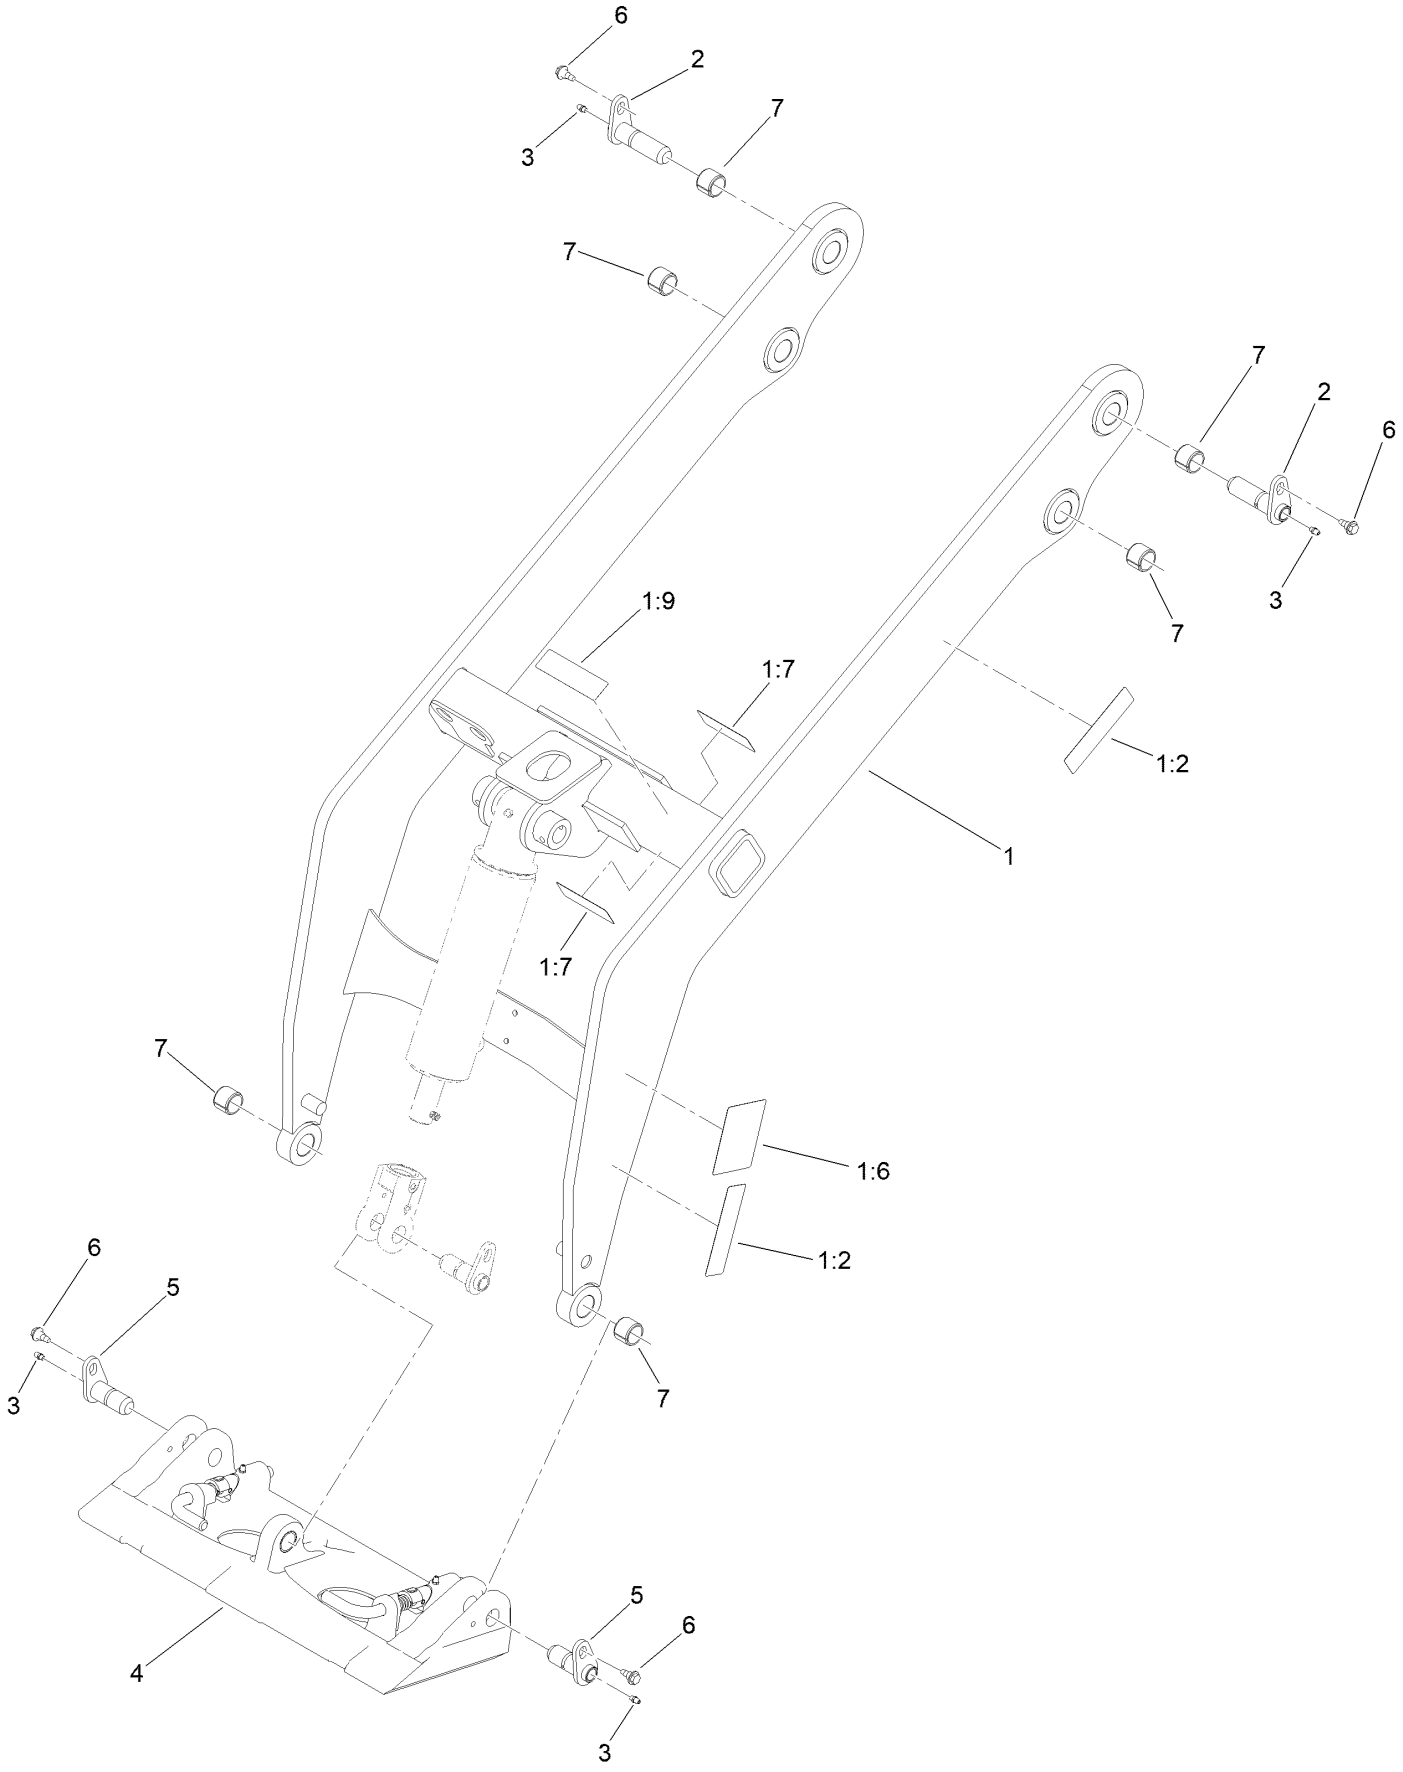

Loader Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	144-2908	1	Loader And Decal ASM
1:2	130-2836	4	Decal-Warning, Crushing
1:6	139-7708	2	Decal-Warning, Bucket
1:7	130-2837	2	Decal-Warning, No Rider
1:9	115-4855	1	Decal-Caution
2	120-5363	2	Pin-Pivot
3	302-5	4	Fitting-Grease
4	132-8418	1	Quick Attach ASM
5	112-2609	2	Pin-Pivot
6	99-5105	4	Screw-Shoulder
7	98-4871	6	Bushing-Tension

Quick Attach Assembly No. 132-8418

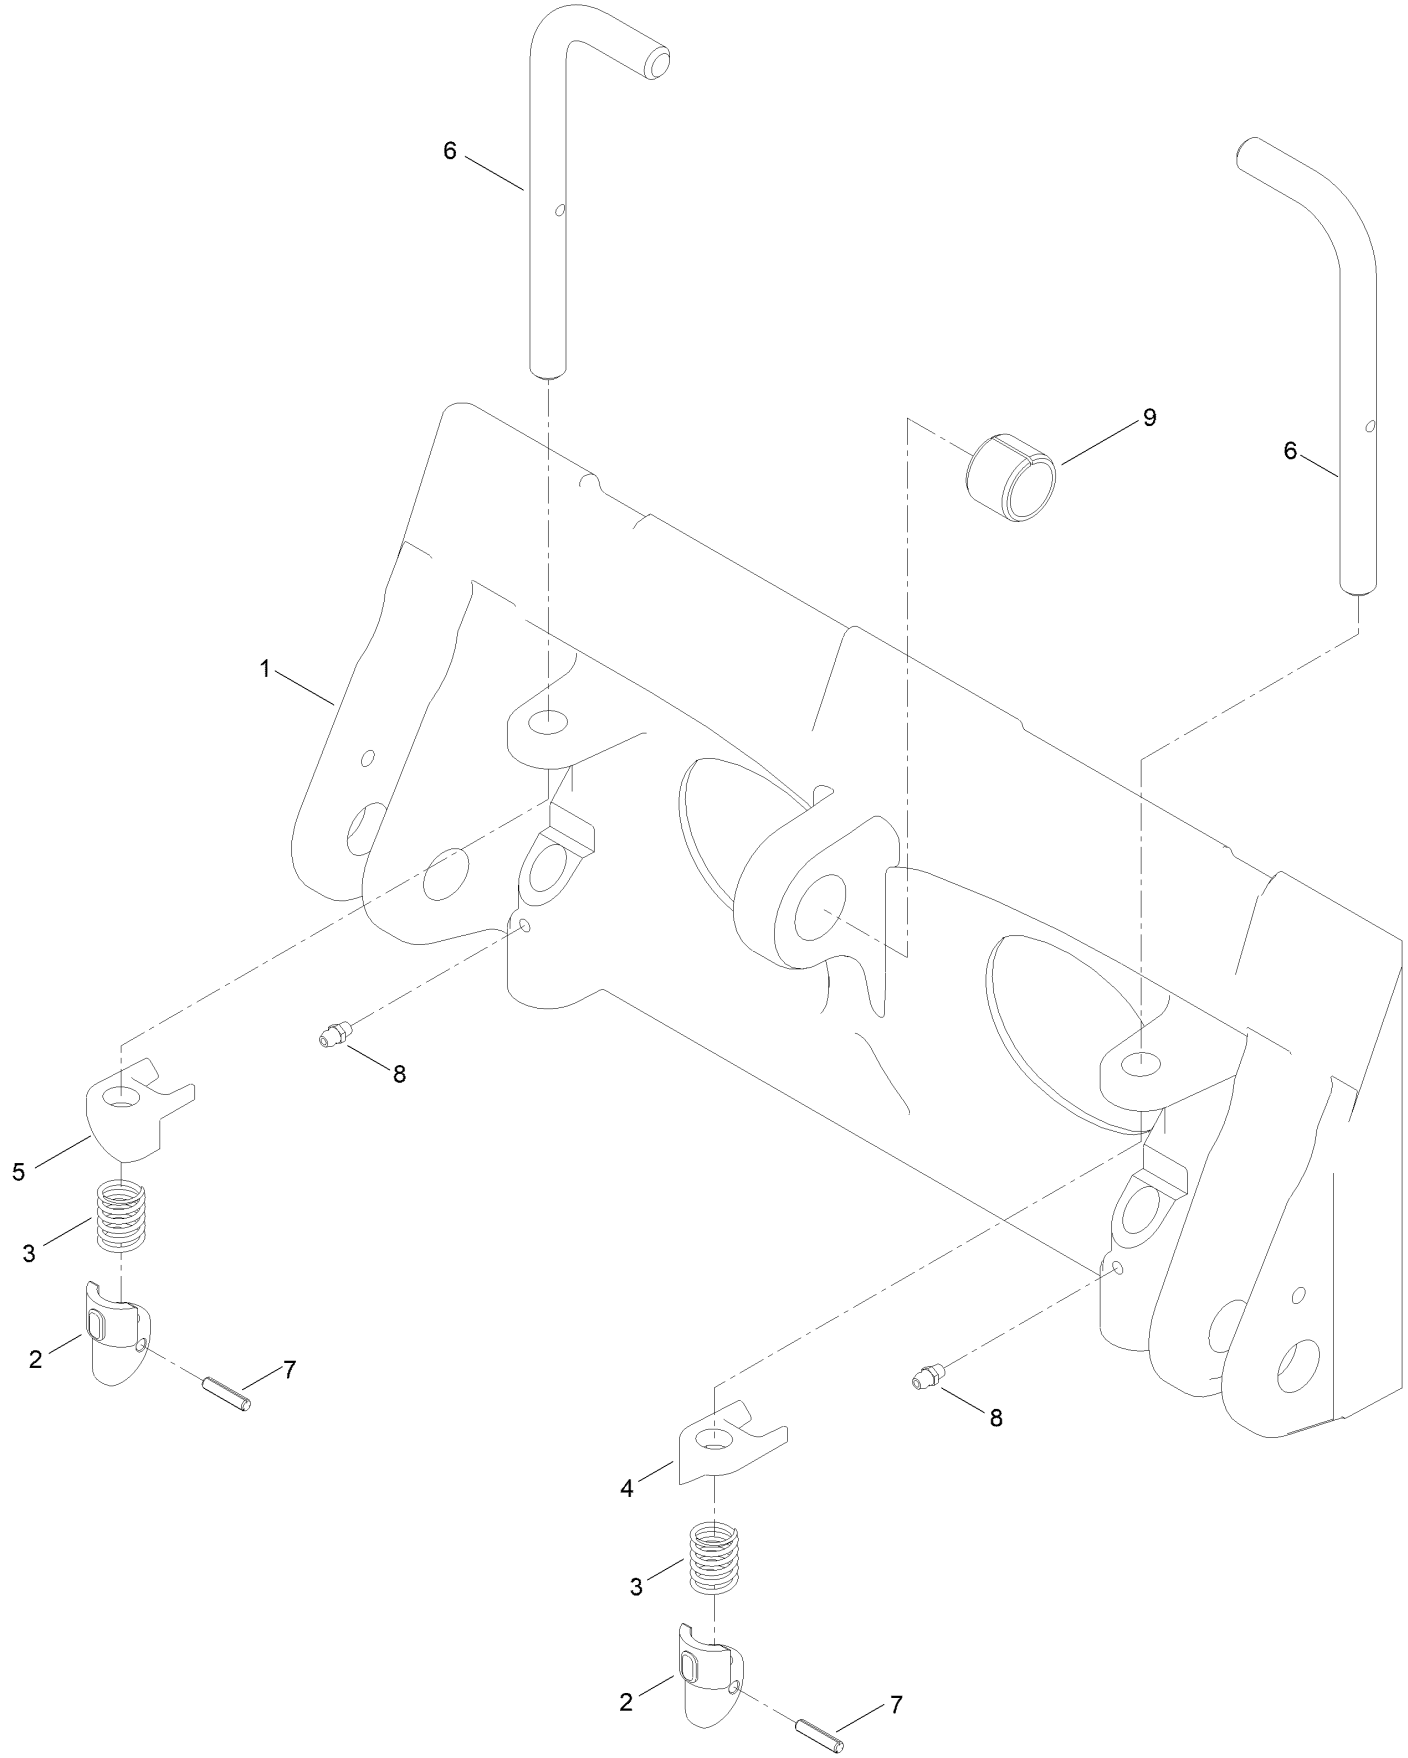

Quick Attach Assembly No. 132-8418 (continued)

Ref.	Part Number	Qty.	Description
1	130-7708-03	1	Mount-Qtach
2	105-0246	2	Cam
3	98-4694	2	Spring-Compression
4	104-5909	1	Stop-RH
5	104-5903	1	Stop-LH
6	132-8419	2	Pin-Locking
7	3285-1	2	Pin-Grooved
8	302-5	2	Fitting-Grease
9	98-4871	1	Bushing-Tension

Battery Assembly

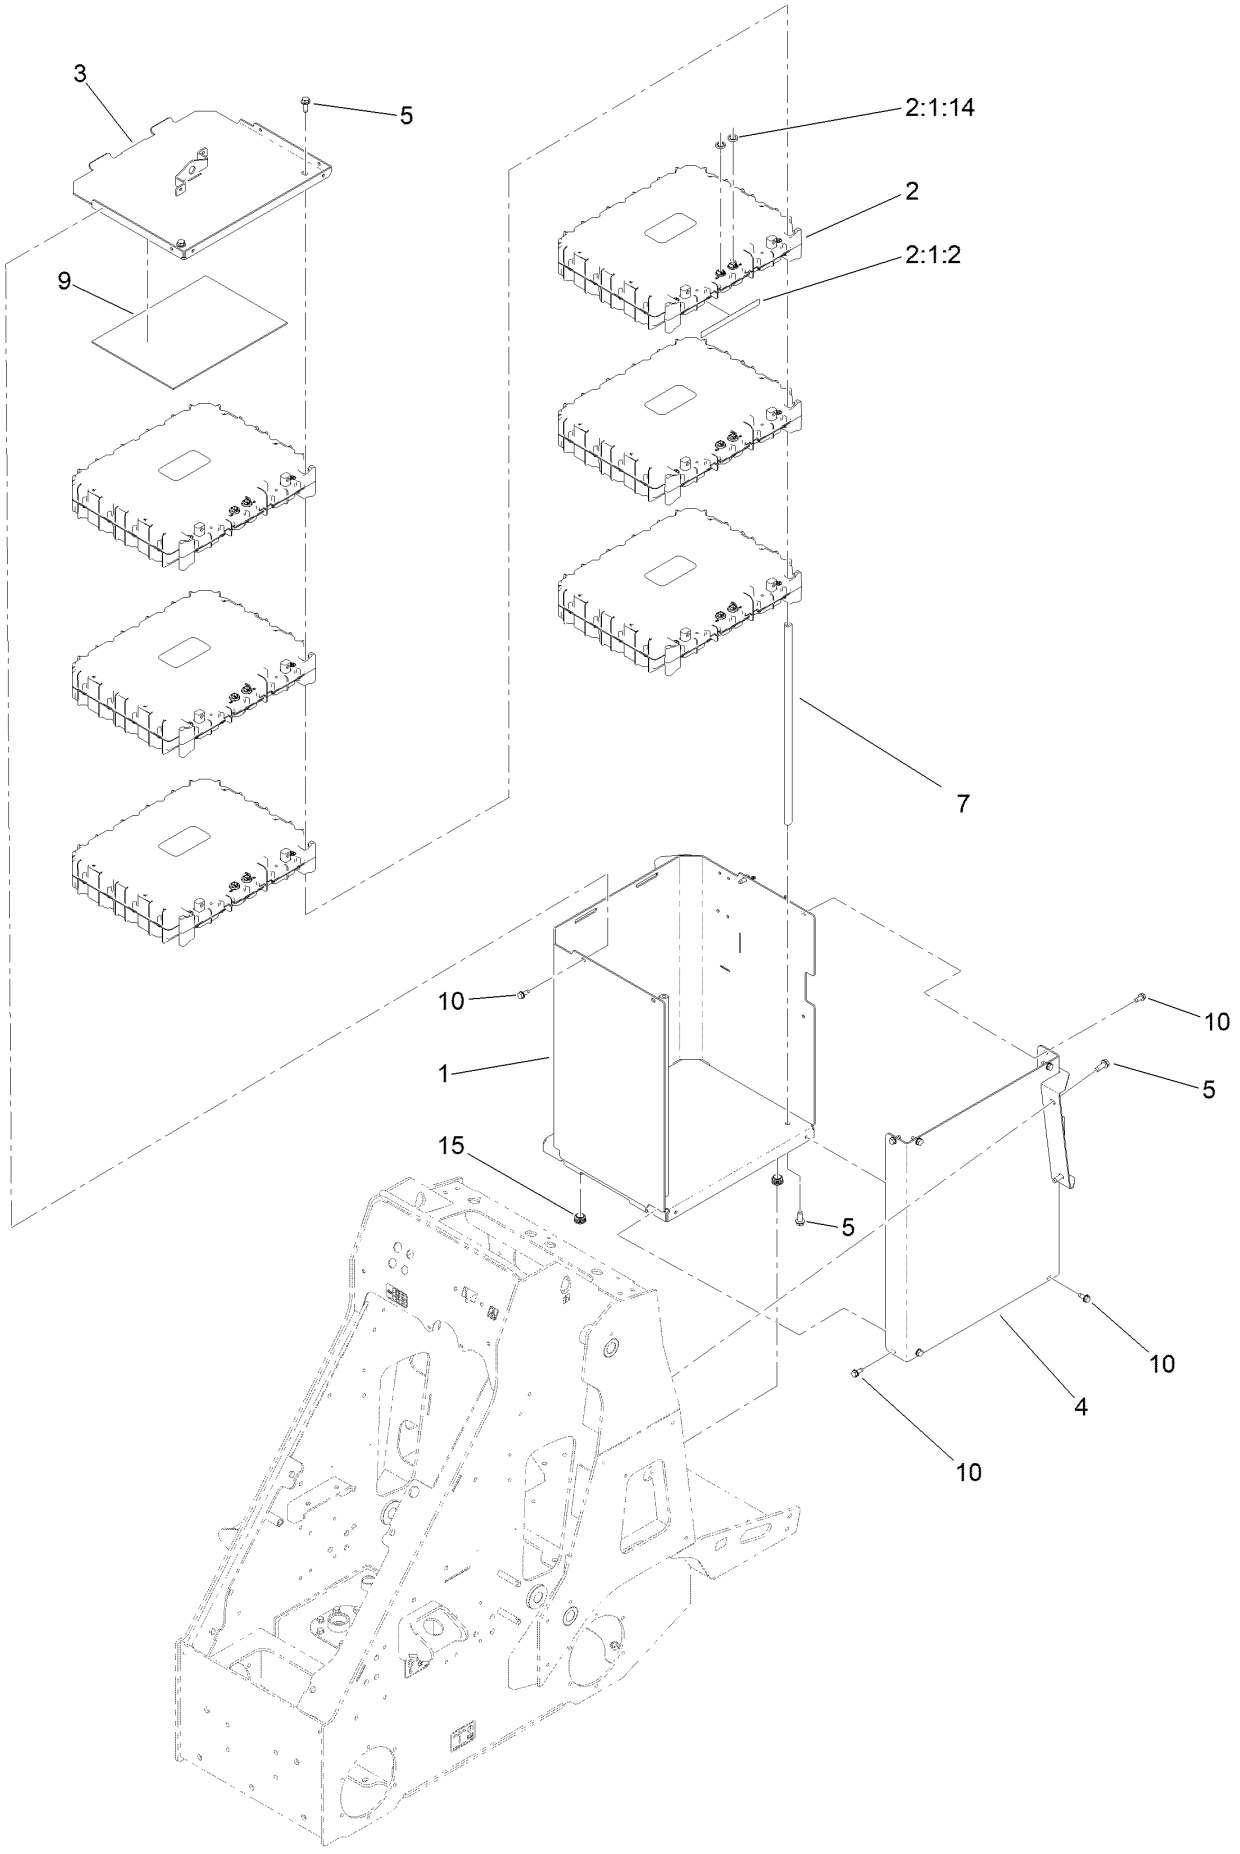

Battery Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-4765-0P	1	Base-Battery, Box [primed]
2	145-5385	6	Battery ASM
2:1:2	145-5338	1	Decal-Warning, Battery
2:1:14	32180-466	2	Nut-Mounting, Jwpf Panel Lock
3	145-4770-0P	1	Cover-Battery [primed]
4	145-4740-0P	1	Mount-Battery [primed]
5	139-2428	8	Screw-HWH
7	140-7293	2	Lock-Battery
9	145-2366	1	Foam-Battery Box
10	32144-11	11	Screw-HWH
15	145-2365	4	Glide-Battery Box

Onboard Charger Assembly

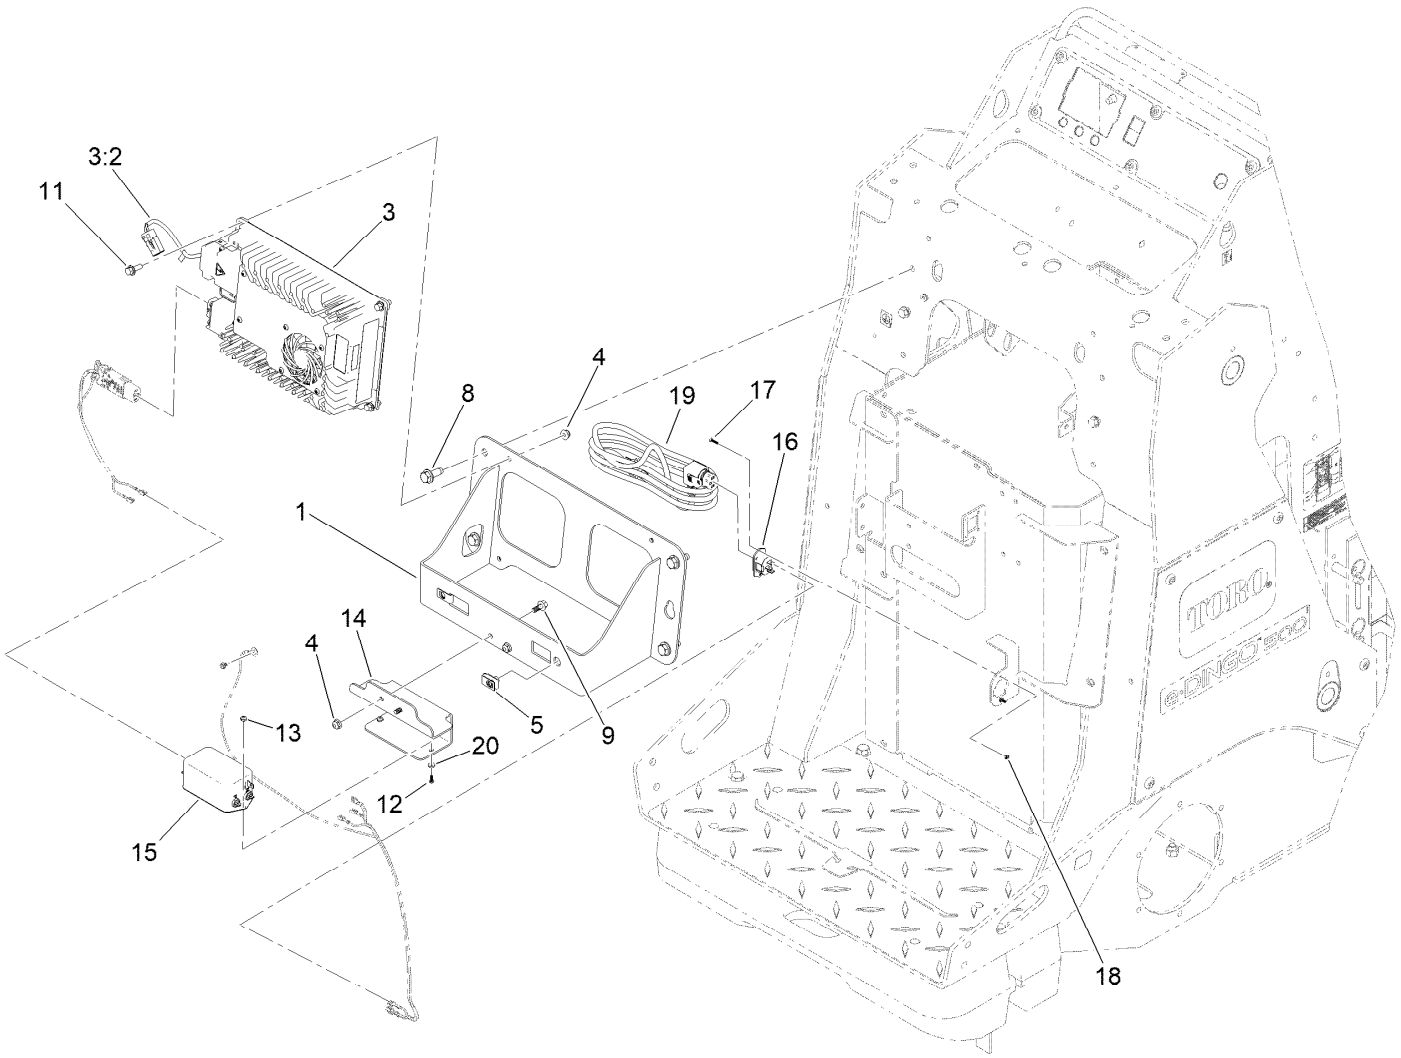

Onboard Charger Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-2369-03	1	Mount-Charger [black]
3	145-1177	1	Charger-Onboard
3:2	147-3234	1	DC Harness Service Kit
4	104-7201	6	Nut-HF, NI
5	115-7721	2	Nut-Clip, U
8	139-2428	4	Screw-HWH
9	99-6810	2	Screw-HHF
11	120-9678	4	Screw-HHF
12	363-6518	2	Scr,Mch,6-32X3/8,Phph,Sst,Rohs
13	120-9684	2	Nut-Lock
14	147-6007-0P	1	Bracket - Filter
15	147-3225	1	Filter
16	147-3230	1	Connector-Iec
17	510-0015	2	Ball, Governor
18	3296-52	2	Nut-Lock, NI
19	107-0382	1	Powercord-AC, Europe ●
19	107-0383	1	Powercord-AC, U.K. ●
19	137-7983	1	Cord-AC, 120V
20	3256-12	2	Washer-Flat

● Not illustrated

Inverter Assembly

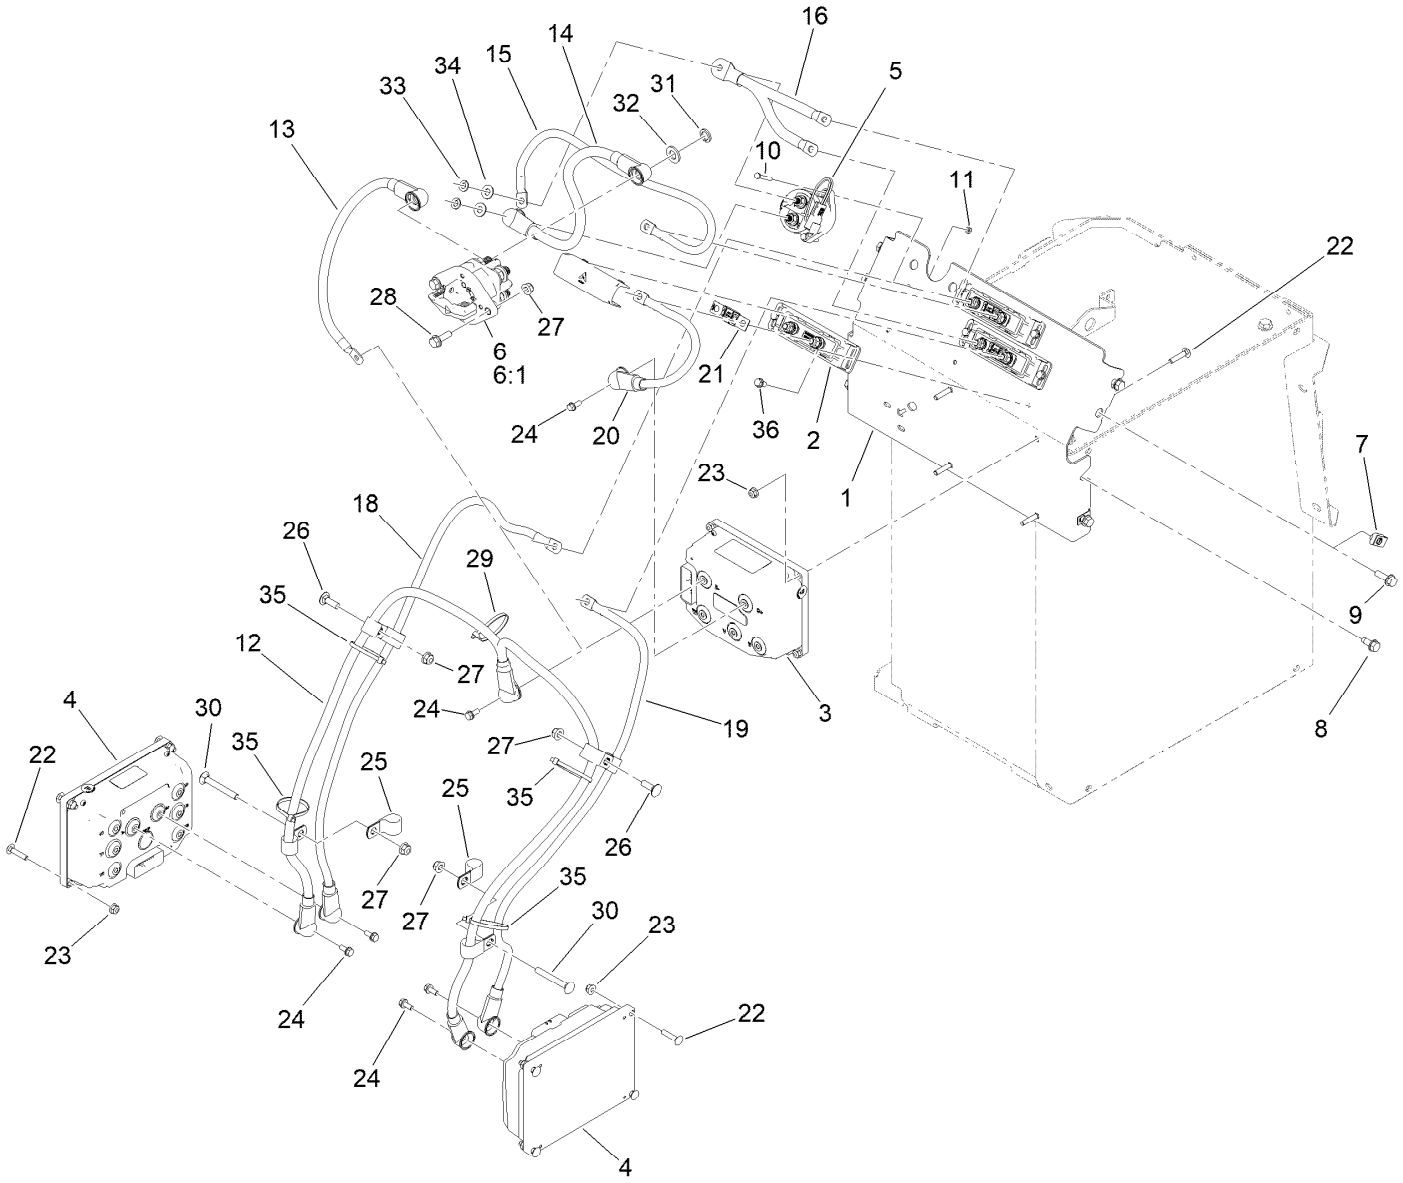

Inverter Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-2351-03	1	Bracket-Mount,Inverter
2	145-4958	3	Holder-Fuse
3	145-5050	1	Inv/Ctrlr-48V,185Arms
4	138-8984	2	Inv/Ctrlr-48V, Dual 94Arms
5	122-2594	1	Contactor-48V
6	122-0603	1	Switch-Disconnect
6:1	33006-00	1	Nut-HF
7	94-2413	4	Nut-U
8	32144-11	4	Screw-HWH
9	115-5142	4	Screw-HHF, Patch
10	87-5150	2	Screw-HH
11	87-5140	2	Nut-Lock
12	122-2751	1	Cable-Battery, Bk ASM
13	122-2765	1	Cable-Battery, Bk ASM
14	122-2646	1	Cable-Battery, Rd ASM
15	122-2648	1	Cable-Battery, Rd ASM
16	122-2753	1	Cable-Battery, Rd ASM
18	122-2651	1	Cable-Battery, Rd ASM
19	122-2652	1	Cable-Battery, Rd ASM
20	122-2653	1	Cable-Battery, Rd ASM
21	122-2561	3	Fuse-200A
22	3229-3	12	Screw-CARR
23	119-4040	12	Nut-HF, NI
24	145-5782	6	Screw-Sems
25	2412-4	8	Clamp-R
26	3230-2	2	Bolt-CARR
27	104-8300	6	Nut-HF, NI
28	3234-17	2	Screw-HHF
29	3290-378	1	Tie-Cable
30	3230-8	2	Screw-CARR
31	HDW14457	4	Split Lock Washer,1/2,ST/ST,18-8
32	147-3238	4	Washer-Flat
33	107-0280	2	Washer-Lock
34	107-0279	2	Washer
35	3290-379	4	Tie-Cable
36	32144-4	6	Screw-HWH

Main Wire Harness Assembly

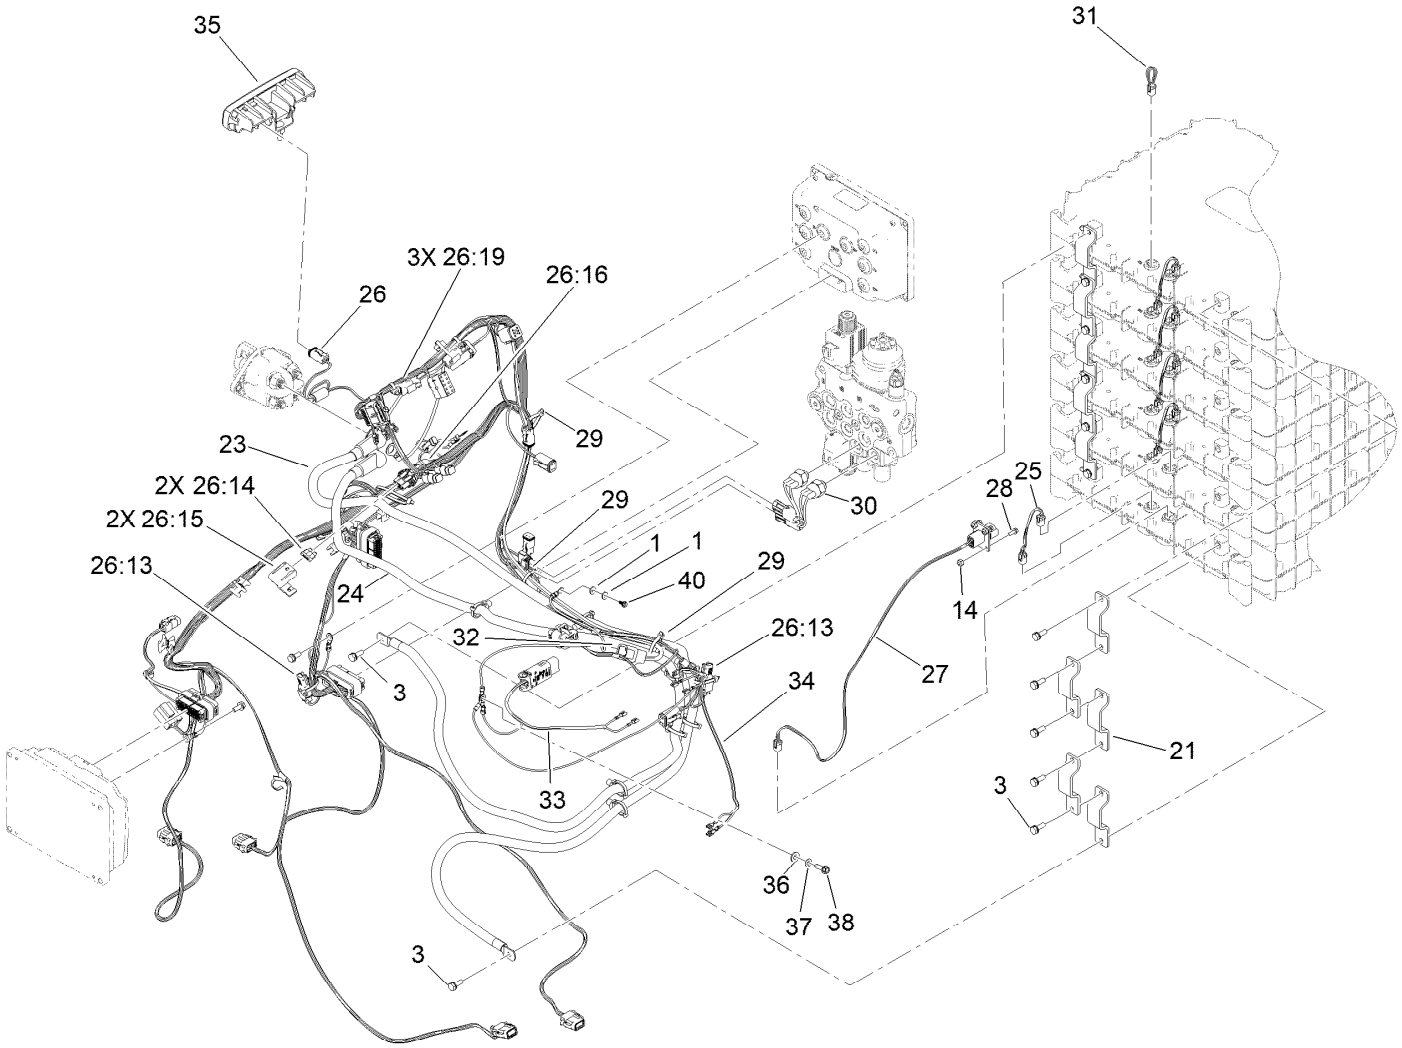

Main Wire Harness Assembly (continued)

Ref.	Part Number	Qty.	Description
1	3256-21	2	Washer-Flat
3	145-5783	12	Screw-Sems
14	3296-1	4	Nut-Lock
21	147-3877	10	Bar-Bus, 400A
23	122-2645	1	Cable-Battery, Rd ASM
24	122-2752	1	Cable-Battery, Bk ASM
25	140-9565	5	Harness-Wire, Data Interface
26	122-2921	1	Harness-Wire, Main
26:13	32180-282	2	Conn, Res, 120 Ohm
26:14	117-4724	2	Fuse-Blade, 10A
26:15	32180-567	2	Cover-Aptiv, Modified
26:16	32180-089	1	Cap-Plug, 3 Way
26:19	32180-091	3	Cap-Dust, 2 Way
27	122-2402	1	Harness-Wire, Pack Comm
28	112-3169	4	Screw-HHF, Serrated
29	3290-378	3	Tie-Cable
30	72-4320	2	Switch-Ball
31	122-2323	1	Harness-Wire, Can Terminator
32	122-2728	1	Harness-Wire, Jumper
33	122-2744	1	Harness-Wire, AC Charger
34	122-2824	1	Harness-Wire, AC Charger
35	145-4774	1	Light-Work, LED Bar
36	120-9679	1	Washer-Flat
37	1-303435	1	Washer-Spring
38	49-2040	1	Screw-HWHTF
40	147-3228	1	Screw-Ground

Drivetrain Electrical Connection Assembly

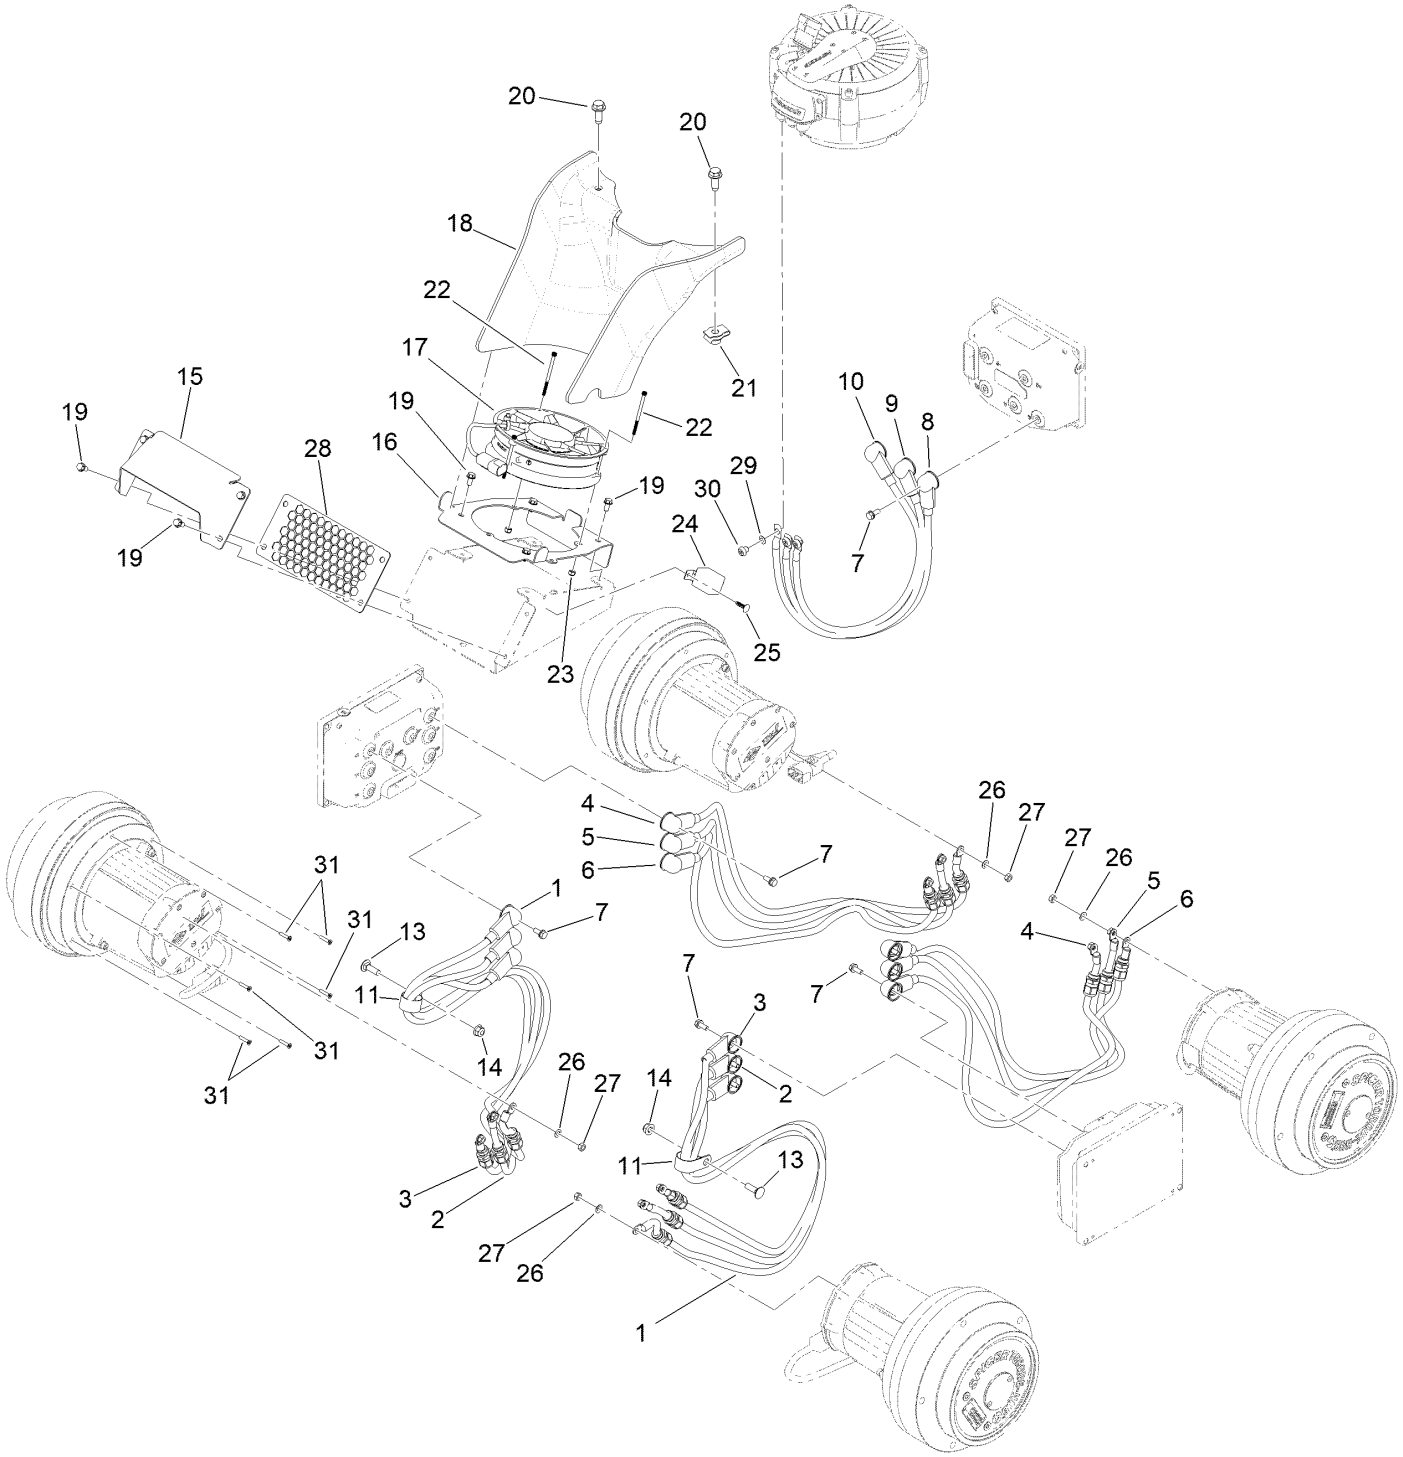

Drivetrain Electrical Connection Assembly (continued)

Ref.	Part Number	Qty.	Description
1	122-2345	2	Cable-Battery, Rd ASM
2	122-2346	2	Cable-Battery, Rd ASM
3	122-2347	2	Cable-Battery, Rd ASM
4	122-2390	2	Cable-Battery, Rd ASM
5	122-2391	2	Cable-Battery, Rd ASM
6	122-2392	2	Cable-Battery, Rd ASM
7	145-5782	15	Screw-Sems
8	122-2343	1	Cable-Battery, Rd ASM
9	122-2348	1	Cable-Battery, Rd ASM
10	122-2389	1	Cable-Battery, Rd ASM
11	2412-126	2	R-Clamp
13	3230-2	2	Bolt-CARR
14	104-8300	2	Nut-HF, NI
15	145-4752-03	1	Deflector-Fan
16	145-4753-03	1	Plate-Adapter,Fan
17	145-4747	1	Fan-48V, 6.8"
18	145-4754	1	Shroud-Fan
19	32144-4	8	Screw-HWH
20	139-2428	2	Screw-HWH
21	105-4886	2	Nut-Tinnerman
22	145-4759	3	Screw-HSH
23	3296-1	3	Nut-Lock
24	122-2401	1	Relay, 48V Coil, 50A At 48V
25	125-8067	1	Plug-Plastic
26	1-303435	12	Washer-Spring
27	HDW21408	12	Nut-Hex
28	145-4786-03	1	Screen - Fan Guard
29	147-5054	3	Washer-Belleville
30	147-5055	3	Screw-HSBH
31	147-6042	24	Screw-Tfh

Control Panel Assembly

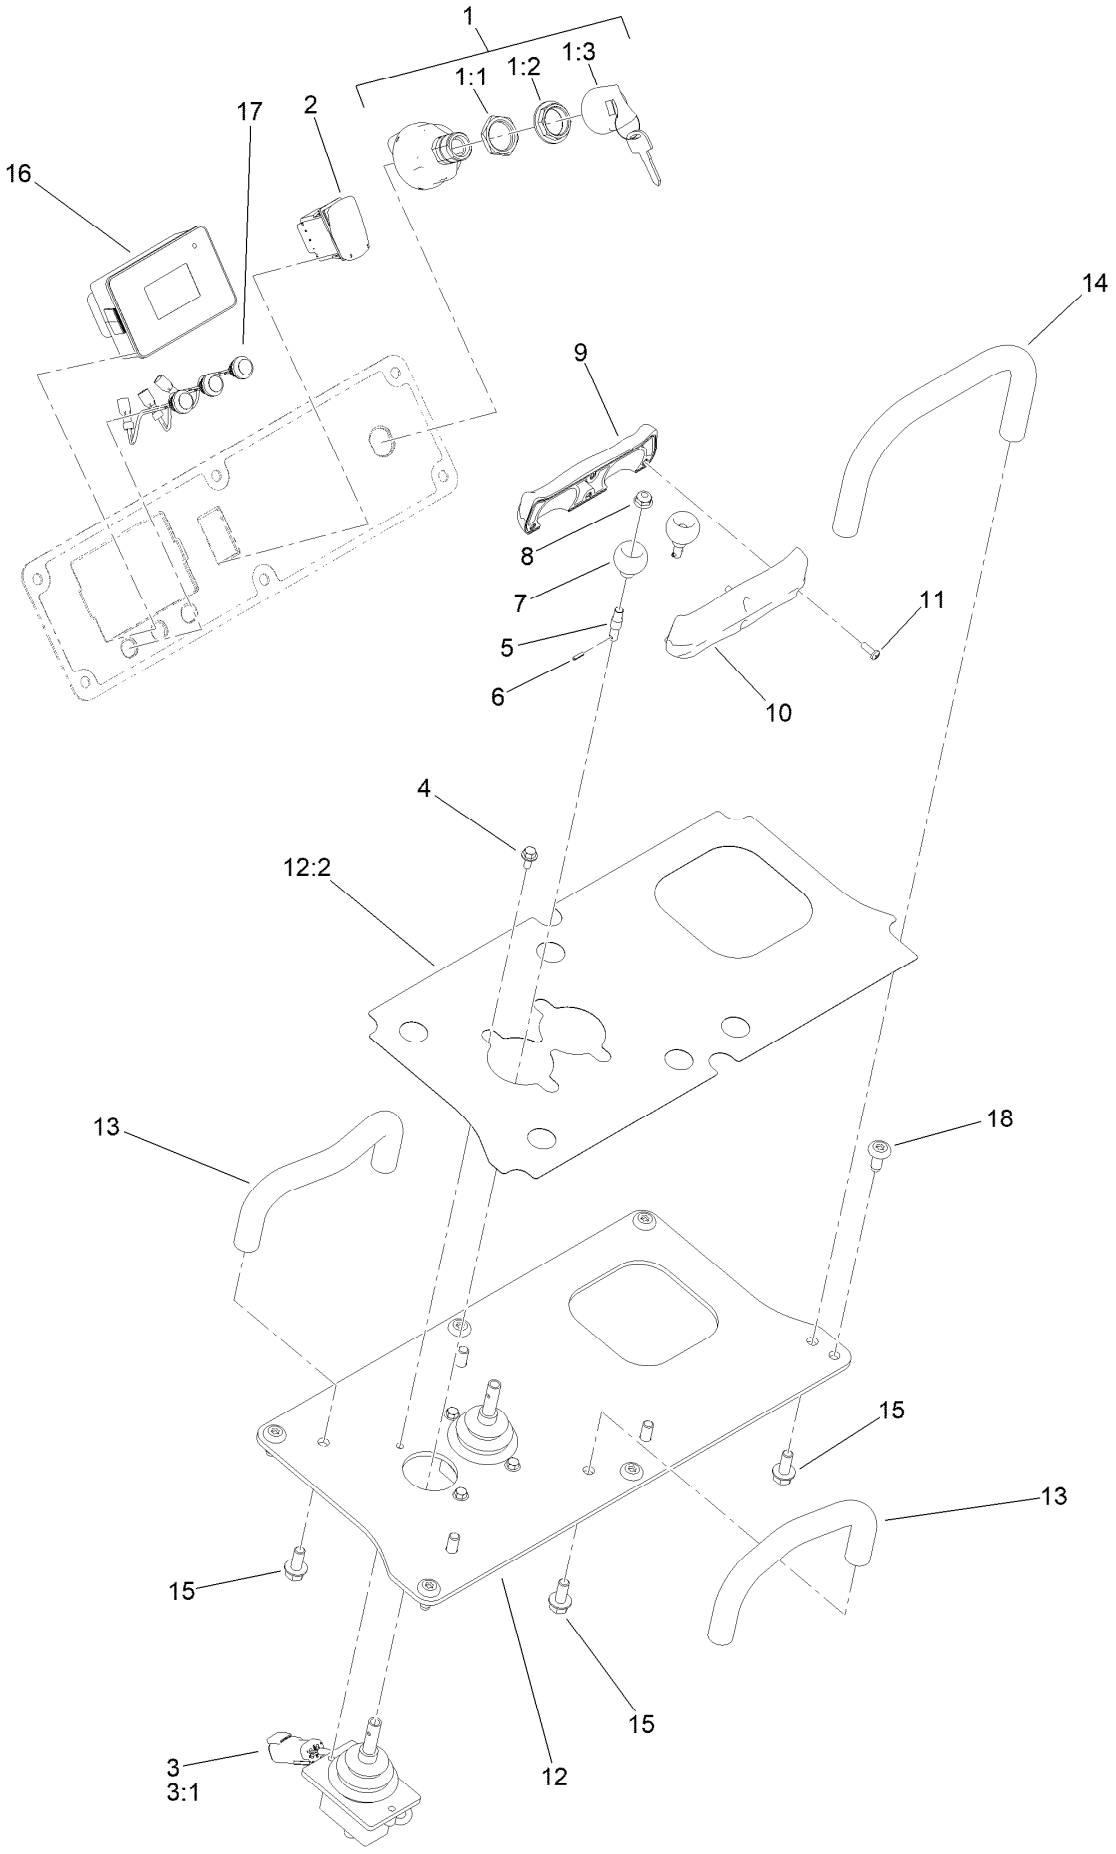

Control Panel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	122-2513	1	Switch-Ignition, Suns
1:1	121-5160	1	Nut-Hex ●
1:2	122-2704	1	Nut-Face, M22 (Plastic)
1:3	121-5162	1	Set-Key, Ignition
2	112-9421	1	Switch
3	136-4784	2	Lever-Control
3:1	133-0289	1	Lever-Control, Joystick
4	120-4579	4	Screw-HHF
5	137-0431	2	Shaft-Handle
6	137-0432	2	Pin-Roll
7	130-7723	2	Ball-Traction
8	104-7201	2	Nut-HF, NI
9	139-1166	1	Handle-Front
10	139-1167	1	Handle-Rear
11	94-6961	4	Screw
12	145-4726	1	Panel-Controls
12:2	145-2443	1	Decal - Control Panel
13	138-4693	2	Bar-Reference
14	145-4760	1	Bar-Reference
15	3234-5	6	Screw-HHF
16	122-2152	1	Controller, Tdm-1601
17	136-9678	3	Cable Assy-Pushbutton
18	138-9753	6	Screw

● Not illustrated

Attachments and Accessories

For 22219 — e-Dingo 500 Compact Tool Carrier

Product Name	Model/Part
Oil-Gear, Synthetic, Quart	144-6880
Tire-Solid 18in X 7in	161-1050
Decal Kit - e-Dingo 2, United Rentals	161-2359
4 Cubic Foot Standard Bucket	22409
Loose Materials Bucket	22410
48in Hydraulic Blade	22414
Tree Forks	22438
Cement Bowl	22442
4-in-1 Bucket	22478
Narrow Bucket	22520
Grapple Rake	22577
Adjustable Forks	22586
Grapple Bucket	22590
Floor Scraper	22670
Universal Swivel Auger Head	22806
6in Full-Flight Auger Bit	22820
9in Full-Flight Auger Bit	22821
12in Full-Flight Auger Bit	22822
Hydraulic Breaker	23136
Leveler	23165
30in Standard Bucket	23174
30in Pallet Fork	23175
30in Grapple	23176
Toro Red 12oz Aerosol Can	361-10
New Red Paint - Gallon	361-11
Semi-Gloss Black Spray Paint	361-9

For 22219 — e-Dingo 500 Compact Tool Carrier

Product Name	Model/Part
Oil-Gear, Synthetic, Quart	144-6880
Tire-Solid 18in X 7in	161-1050
Decal Kit - e-Dingo 2, United Rentals	161-2359
4 Cubic Foot Standard Bucket	22409
Loose Materials Bucket	22410
48in Hydraulic Blade	22414
Tree Forks	22438
Cement Bowl	22442
4-in-1 Bucket	22478
Narrow Bucket	22520
Grapple Rake	22577
Adjustable Forks	22586
Grapple Bucket	22590
Floor Scraper	22670
Universal Swivel Auger Head	22806

Attachments and Accessories (continued)

6in Full-Flight Auger Bit 22820
9in Full-Flight Auger Bit 22821
12in Full-Flight Auger Bit..... 22822
Hydraulic Breaker 23136
Leveler..... 23165
30in Standard Bucket 23174
30in Pallet Fork..... 23175
30in Grapple 23176
Toro Red 12oz Aerosol Can 361-10
New Red Paint - Gallon 361-11
Semi-Gloss Black Spray Paint 361-9

Count on it.