Form No. 3479-234 Rev C

TORO®

Count on it.

Parts Catalog

eDingo® TX 750

Wide Track Compact Tool Carrier

Model No. 22231—Serial No. 420000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3479-234 C

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Main Frame Assembly 4
Track Assembly 6
Left Hand Track Assembly No. 147-2526 8
Right Hand Track Assembly No. 147-2527 10
Electric Auxiliary Controls Assembly 12
Motor and Drive Assembly 14
Cooling and Charging Assembly 16
Control Valve Assembly 18
Control Valve Assembly No. 161-8001 20
Hydraulic Tank, Motor and Gear Pump Assembly 22
Controls Assembly 24
Loader Arm Assembly 26
Hydraulic Cylinder Assembly No. 140-2974 28
Hydraulic Cylinder Assembly No. 161-7969 30
Platform Assembly 32
Hoods and Covers Assembly 34
Electrical Routing Assembly 36
Main Wire Harness Assembly No. 122-3702 38
Battery Assembly 40
Attachments and Accessories 42

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Main Frame Assembly

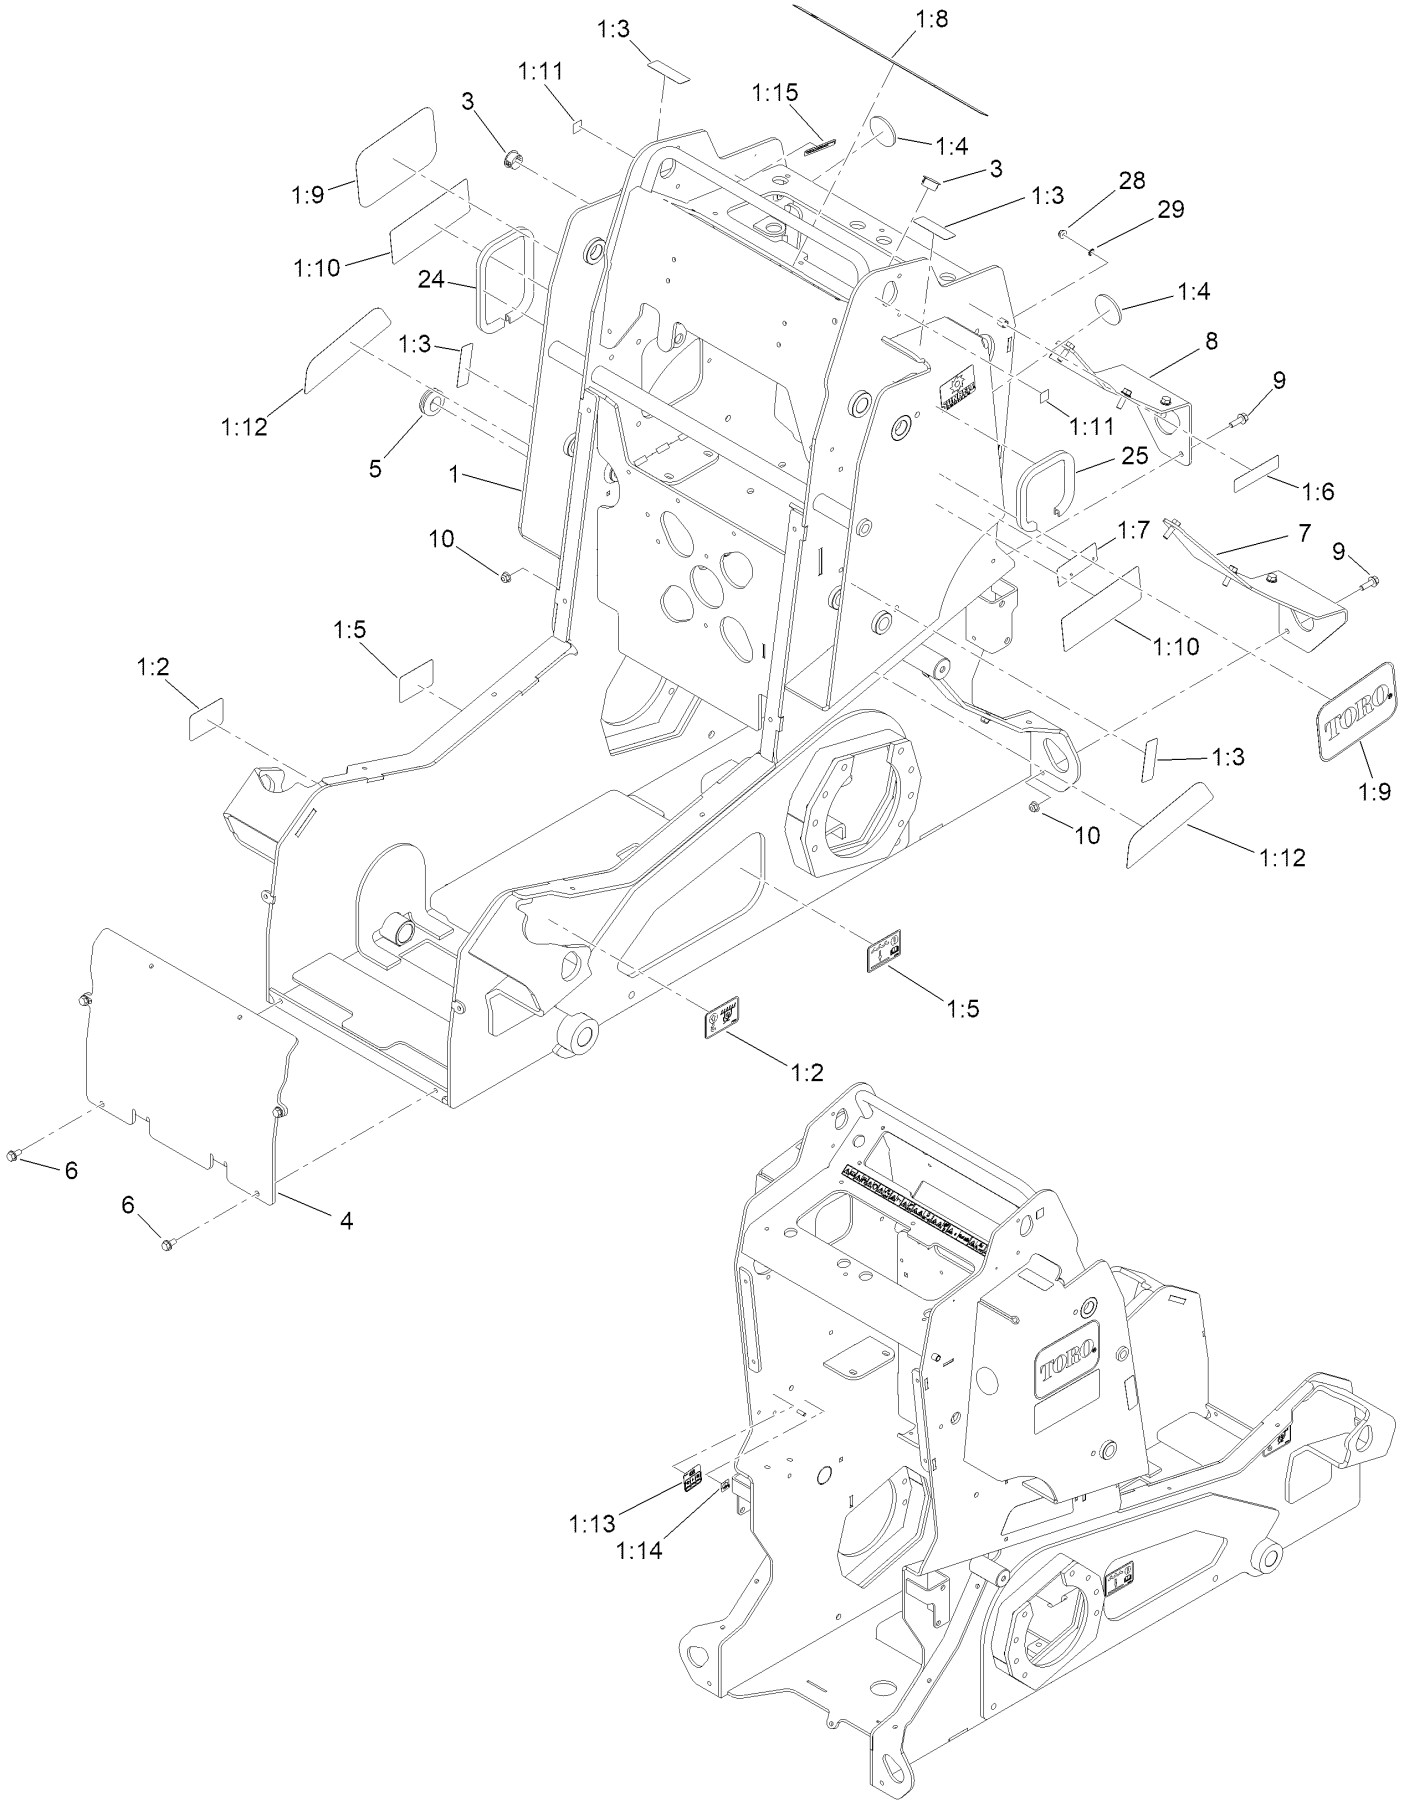

Main Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-2521	1	Main Frame ASM,
1:2	125-6139	2	Decal-Lift/Tie Down
1:3	120-0625	4	Decal-Warning
1:4	139-1937	2	Reflector-Red
1:5	139-7709	2	Decal-Water Level
1:6	145-1175	1	Decal-Service, Shut-Off
1:7	161-2443	1	Decal-Charging
1:8	161-8010	1	Decal-Safety
1:9	145-0609	2	Decal-Toro Logo
1:10	161-8013	2	Decal-Edingo Tx750
1:11	93-9084	2	Decal-Point, Lift
1:12	145-1172	2	Decal-Hypercell
1:13	161-8028	1	Decal-Fuses
1:14	125-1414	1	Decal-Ground, Earth
1:15	133-8061	1	Decal-Warning
3	127-1842	2	Plug-Dome, Thick
4	147-2490-05	1	Plate-Cover,Front
5	237-165	1	Grommet
6	32144-14	4	Screw-HWHTF
7	161-7995-01	1	Fender-LH
8	161-7996-01	1	Fender-RH
9	3234-29	8	Screw-HHF
10	104-8300	8	Nut-HF, NI
24	161-8037	1	Trim-Seal,
25	161-8043	1	Trim-Seal,
28	104-7201	1	Nut-HF, NI
29	3255-7	1	Washer-Lock/EXT


Track Assembly

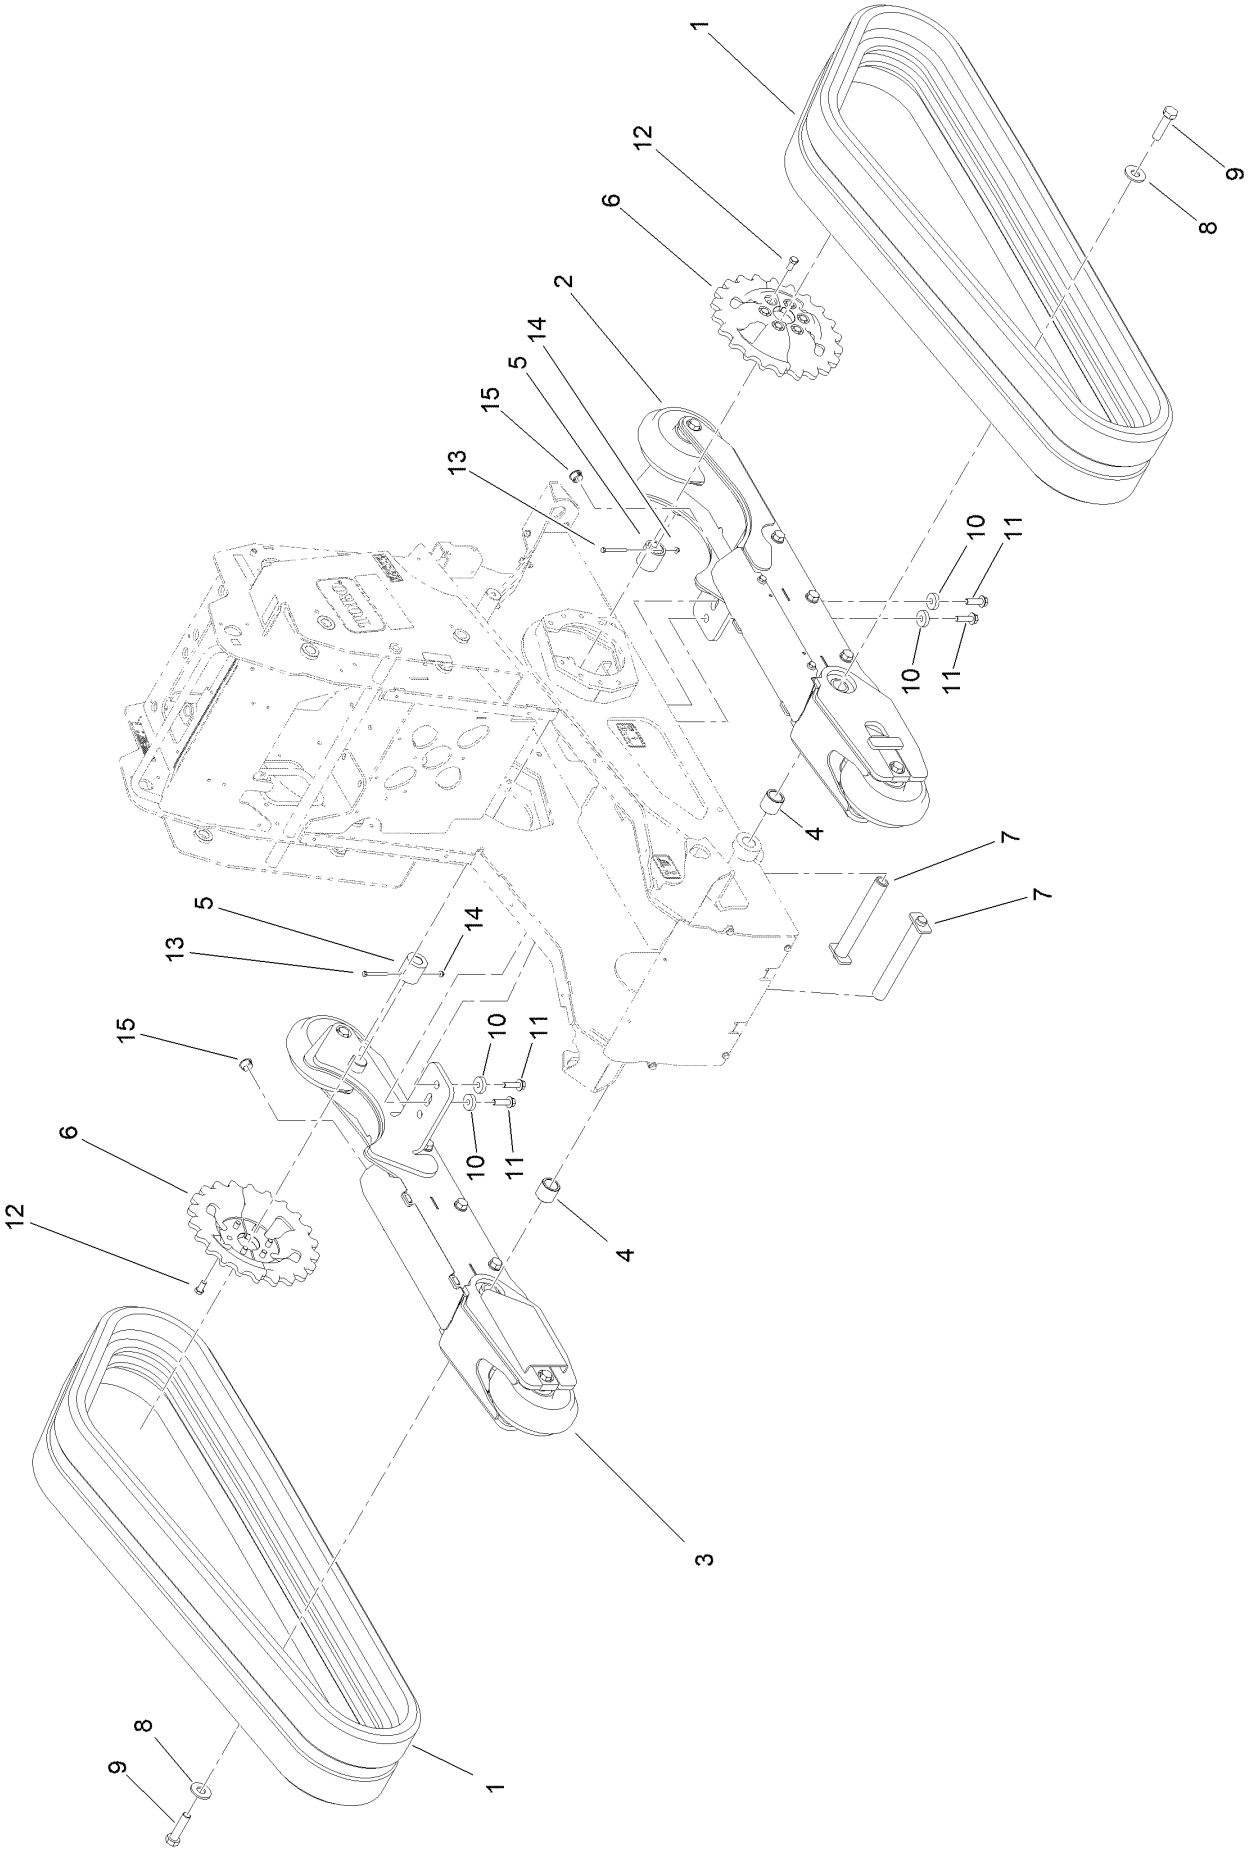

Track Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-0777	2	Track-Wide,
2	147-2526	1	LH Track ASM
3	147-2527	1	RH Track ASM
4	161-7963	2	Spacer
5	161-7964	2	Tube-Wt
6	163-1255	4	Sprocket-Drive, Wt
7	140-1687	2	Shaft-Front,Track
8	99-2659	2	Washer
9	328-25	2	Screw-HH
10	99-1291	4	Spacer
11	3234-22	4	Screw-HHF
12	161-8025	12	Screw-HH
13	321-15	2	Screw-HH
14	104-7201	2	Nut-HF, NI
15	127-1842	2	Plug-Dome, Thick


Left Hand Track Assembly No. 147-2526

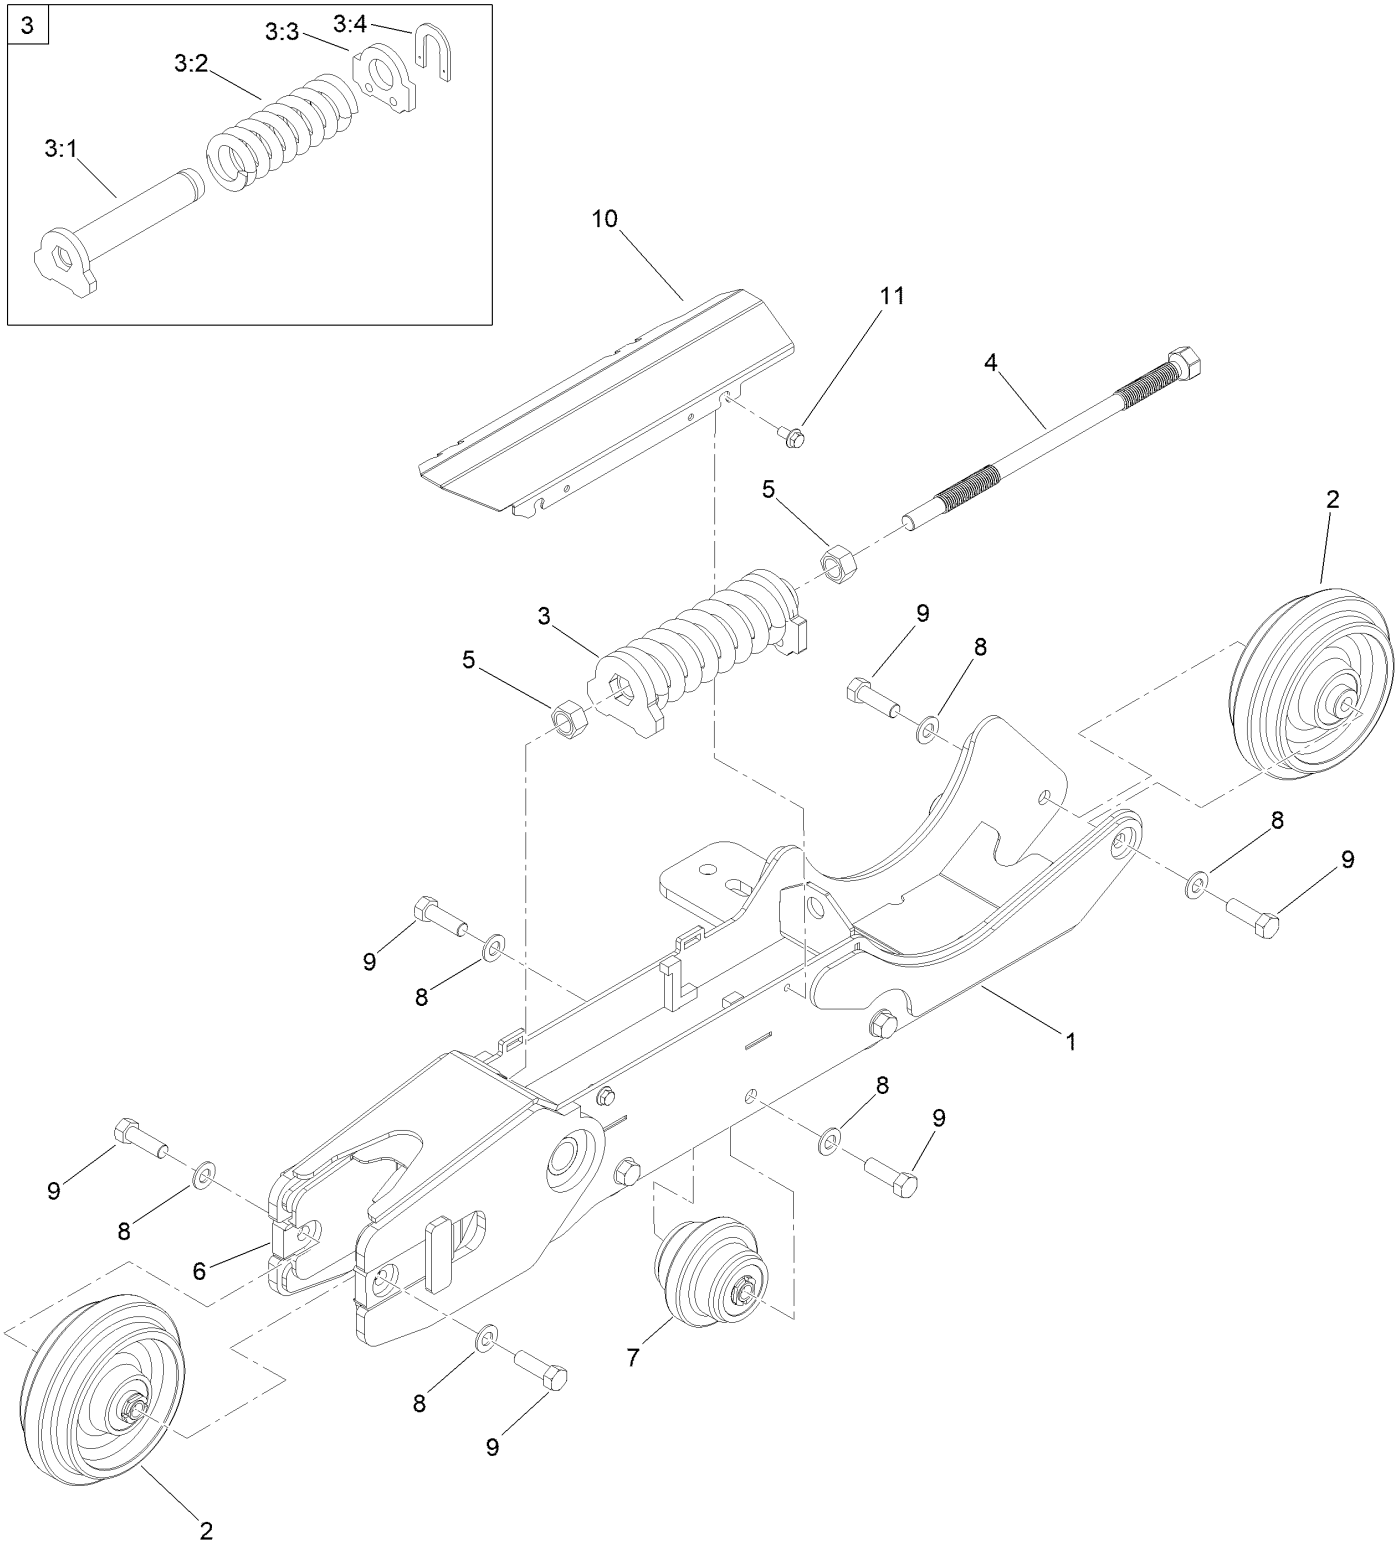

Left Hand Track Assembly No. 147-2526 (continued)

Ref.	Part Number	Qty.	Description
1	147-2506-05	1	LH Track Frame ASM, [blk-Txt]
2	137-8807	2	Tensioner Wheel ASM
3	140-5872	1	Kit-Spring Tension
3:1	139-7296	1	Shaft-Spring
3:2	139-7297	1	Spring-Compression
3:3	139-7299	1	Plate-Cap
3:4	139-7300	1	Plate-Clip
4	139-7298	1	Screw-Tensioner
5	3217-15	2	Nut-Hex
6	139-7301	1	Yoke-Tensioner
7	137-8808	3	Wheel ASM,
8	119-1868	10	Washer
9	111-3484	10	Screw-HH
10	147-8417-05	1	Plate-Cover,RH
11	93-2569	2	Screw-HHF


Right Hand Track Assembly No. 147-2527

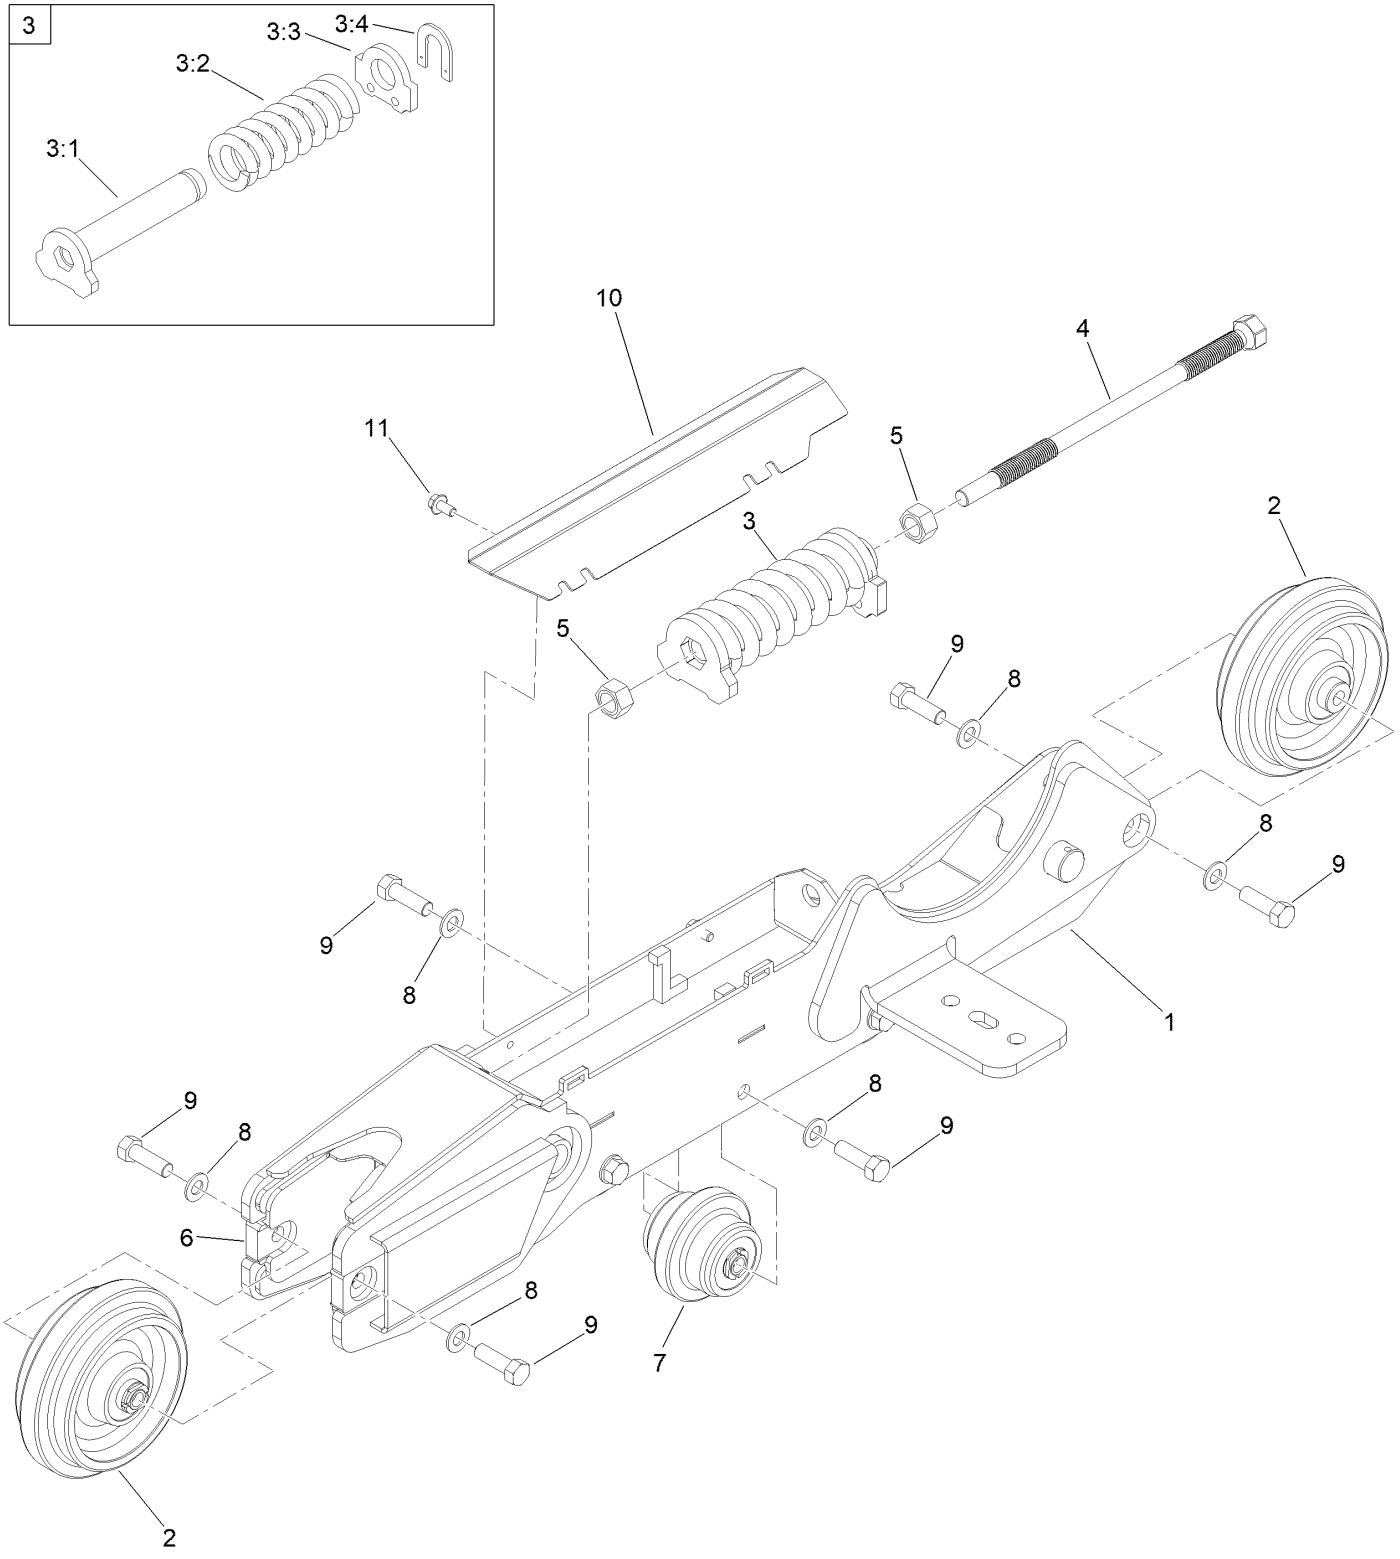

Right Hand Track Assembly No. 147-2527 (continued)

Ref.	Part Number	Qty.	Description
1	147-2507-05	1	RH Track Frame ASM, [blk-Txt]
2	137-8807	2	Tensioner Wheel ASM
3	140-5872	1	Kit-Spring Tension
3:1	139-7296	1	Shaft-Spring
3:2	139-7297	1	Spring-Compression
3:3	139-7299	1	Plate-Cap
3:4	139-7300	1	Plate-Clip
4	139-7298	1	Screw-Tensioner
5	3217-15	2	Nut-Hex
6	139-7301	1	Yoke-Tensioner
7	137-8808	3	Wheel ASM,
8	119-1868	10	Washer
9	111-3484	10	Screw-HH
10	147-8433-05	1	Plate-Cover,LH
11	93-2569	2	Screw-HHF


Electric Auxiliary Controls Assembly

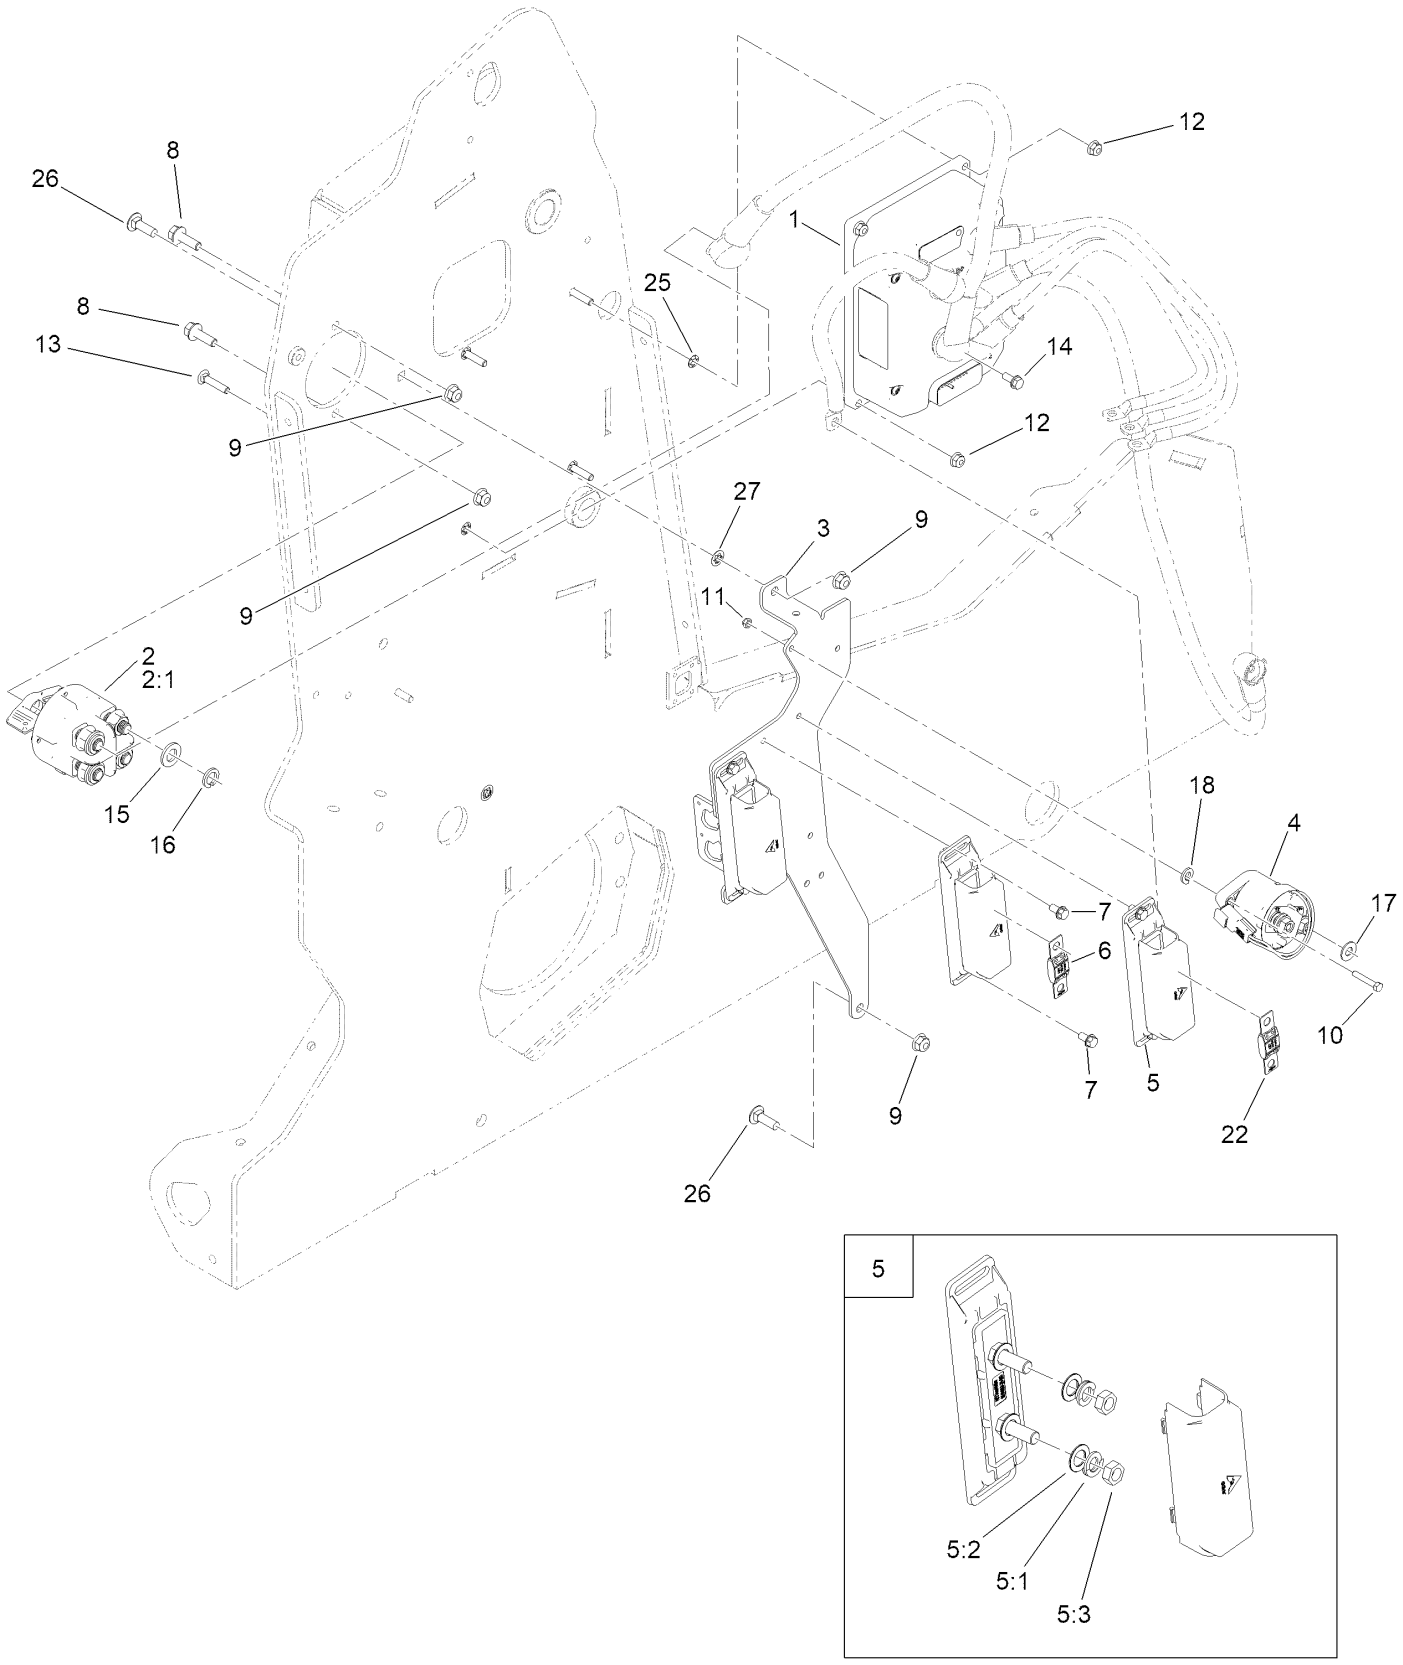

Electric Auxiliary Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-5068	1	Inv/Ctrlr-48V
2	122-0603	1	Switch-Disconnect
2:1	33006-00	1	Nut-HF
3	161-8019-05	1	Fuse Mount Bracket ASM, [blk-Txt]
4	122-2594	1	Contactor-48V
5	145-4958	3	Holder-Fuse
5:1	3253-4	2	Washer-Lock
5:2	3256-74	4	Washer-Flat
5:3	33014-00	4	Nut-Hex
6	122-2959	1	Fuse-350A
7	32144-4	6	Screw-HWH
8	3234-17	2	Screw-HHF
9	104-8300	4	Nut-HF, NI
10	87-5150	2	Screw-HH
11	87-5140	2	Nut-Lock
12	119-4040	4	Nut-HF, NI
13	3229-3	4	Screw-CARR
14	145-5782	5	Screw-Sems
15	147-3238	4	Washer-Flat
16	HDW14457	4	Split Lock Washer,1/2,ST/ST,18-8
17	107-0279	2	Washer
18	107-0280	2	Washer-Lock
22	122-2630	2	Fuse-250A
25	1-803037	4	Nut-Retaining
26	110-3144	2	Bolt-CARR
27	109-5667	2	Nut-Push

Motor and Drive Assembly

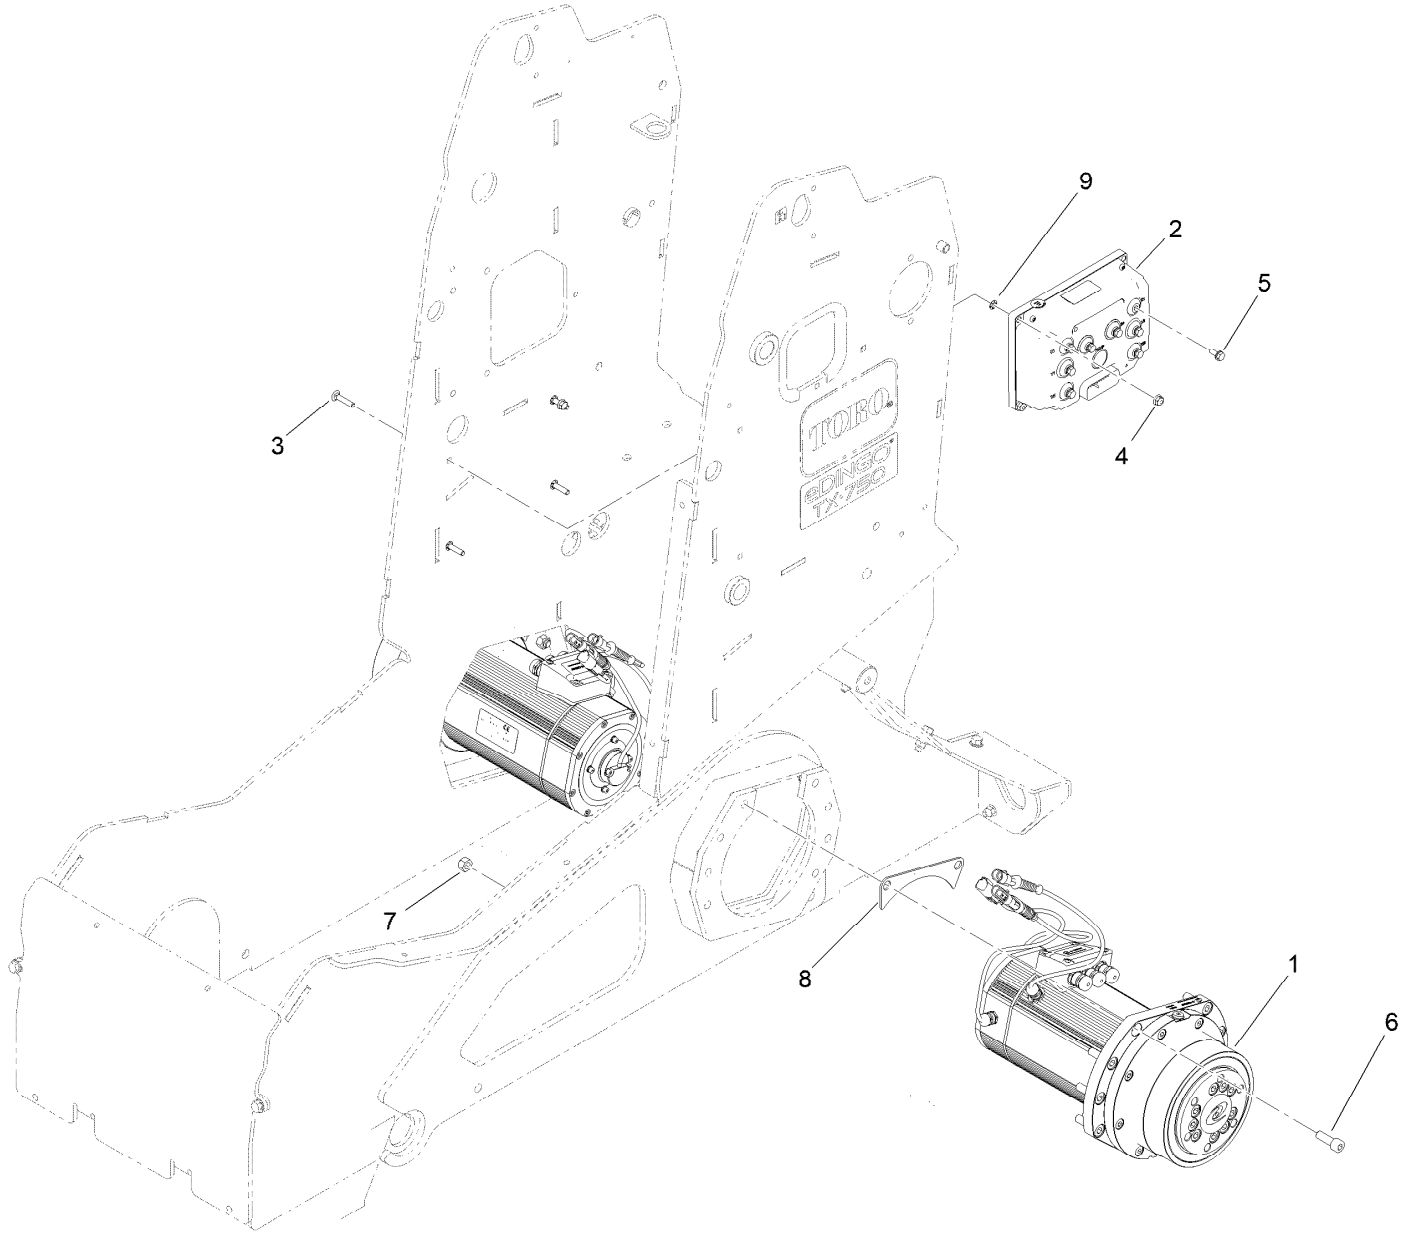


Motor and Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-8000	2	Traction Motor ASM
1:1	147-9107	1	Cassette Seal Ring ●
2	138-8984	1	Inv/Ctrlr-48V, Dual 94Arms
3	3229-3	4	Screw-CARR
4	119-4040	4	Nut-HF, NI
5	145-5782	8	Screw-Sems
6	AU862-10030	16	Screw-HSH
7	33025-00	16	Nut-Lock, NI
8	161-8039	2	Plate-Span,
9	1-803037	4	Nut-Retaining

● Not illustrated


Cooling and Charging Assembly

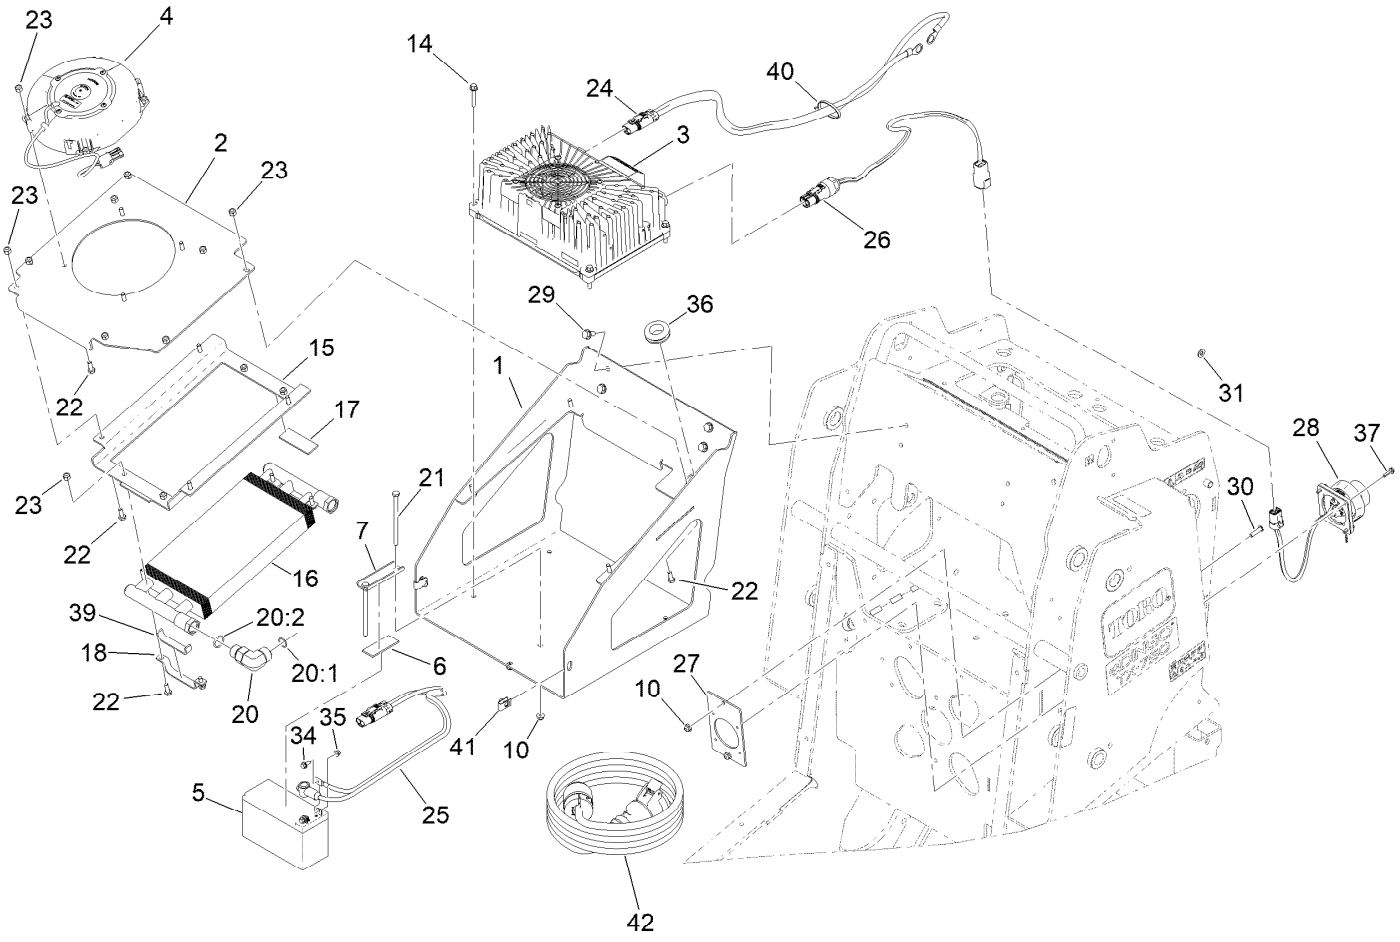

Cooling and Charging Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-5858-05	1	Charger Mount ASM, [blk-Txt]
2	161-5860-05	1	Bracket-Mount,Cooler
3	145-5393	1	Charger-Onboard
4	120-5755	1	Fan-Electric
5	112-9621	1	Battery-Wet, 12V 9Ah, Sealed W/Hrdwr
6	133-0081	1	Strip-Foam
7	147-2489	1	Channel-Clamp,Battery
10	104-7201	8	Nut-HF, NI
14	94-5781	4	Screw-HHF
15	161-5862-05	1	Bracket-Cooler
16	105-0352	1	Exchanger-Heat
17	163-1227	2	Pad-Foam
18	104-2803	2	Support-Cooler
20	340-17	1	Fitting-Elbow, 90 DEG
20:1	237-65	1	O-Ring
20:2	237-80	1	O-Ring
21	321-34	2	Screw-HH
22	321-4	16	Screw-HH
23	3296-42	16	Nut-Lock, NI
24	122-3214	1	Harness-Wire,DC,
25	122-3215	1	Harness-Wire,DC,Aux,
26	122-3656	1	Harness-Wire, AC In
27	161-8017-05	1	Plate-Adapter, [blk-Txt]
28	122-4099	1	Harness-Wire, Inlet, 60309
29	32144-14	4	Screw-HWHTF
30	3274-65	2	Screw-HSBH
31	120-9679	1	Washer-Flat
34	120-4579	2	Screw-HHF
35	120-4580	2	Nut-HF
36	237-165	1	Grommet
37	100-4351	4	Screw-HWH
39	163-1226	2	Pad-Foam
40	3290-378	1	Tie-Cable
41	94-2413	2	Nut-U
42	122-3491	1	Cable-Assembly, Charger


Control Valve Assembly

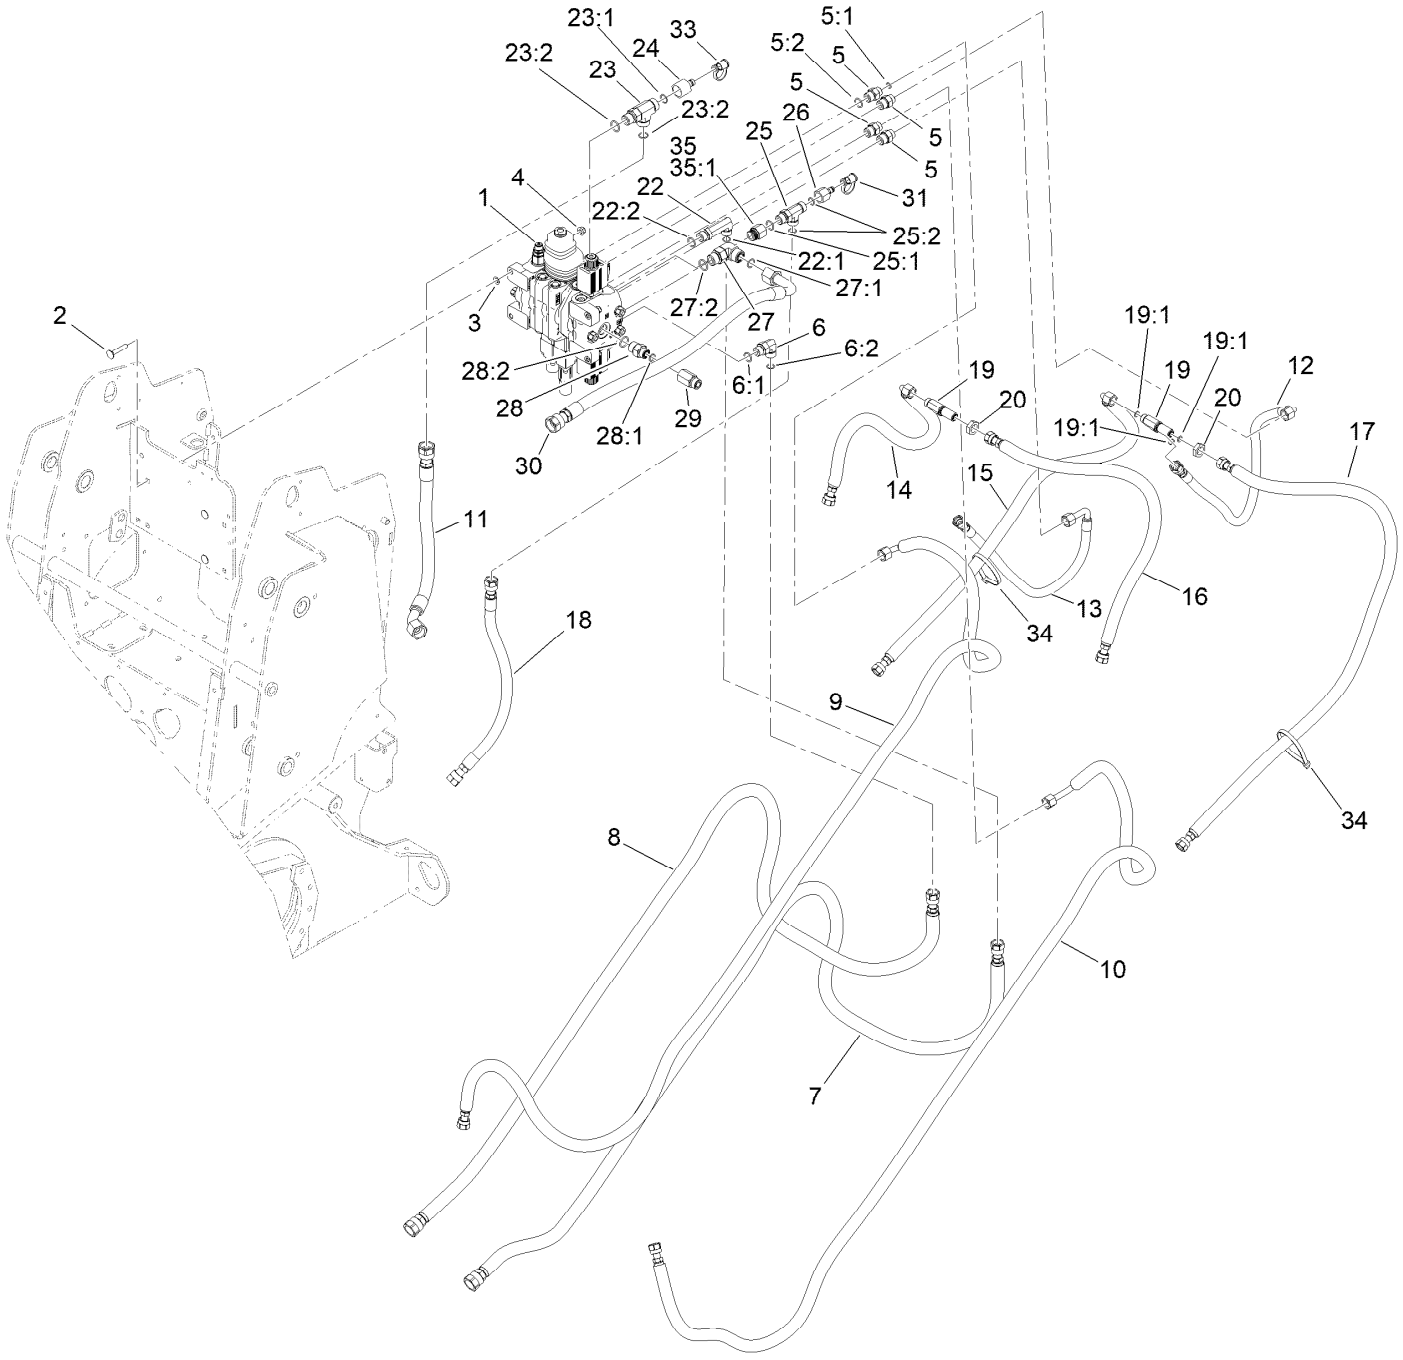

Control Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-8001	1	Control Valve ASM
2	3230-5	3	Bolt-CARR
3	109-5667	3	Nut-Push
4	104-8300	3	Nut-HF, NI
5	340-3	4	Fitting-Straight
5:1	237-22	1	O-Ring
5:2	237-79	1	O-Ring
6	340-98	1	Fitting-Elbow, 90 DEG
6:1	237-79	1	O-Ring
6:2	237-30	1	O-Ring
7	147-6744	1	HYD Hose ASM
8	147-6745	1	HYD Hose ASM
9	147-6746	1	HYD Hose ASM
10	147-6747	1	HYD Hose ASM
11	147-6748	1	HYD Hose ASM
12	147-6752	1	HYD Hose ASM
13	147-6753	1	HYD Hose ASM
14	147-6754	1	HYD Hose ASM
15	147-6755	1	HYD Hose ASM
16	147-6756	1	HYD Hose ASM
17	147-6757	1	HYD Hose ASM
18	147-6758	1	HYD Hose ASM
19	340-68	2	Fitting-Tee, Bulkhead
19:1	237-22	3	O-Ring
20	340-70	2	Nut-Lock
22	99-6160	1	Fitting-Elbow, 90 Long
22:1	237-30	1	O-Ring
22:2	237-79	1	O-Ring
23	340-22	1	Fitting-Tee
23:1	237-65	2	O-Ring
23:2	237-80	1	O-Ring
24	86-5860	1	Nipple
25	340-109	1	Fitting-Tee
25:1	237-79	1	O-Ring
25:2	237-30	2	O-Ring
26	100-5616	1	Fitting
27	340-17	1	Fitting-Elbow, 90 DEG
27:1	237-65	1	O-Ring
27:2	237-80	1	O-Ring
28	340-6	1	Fitting-Straight
28:1	237-30	1	O-Ring
28:2	237-80	1	O-Ring
29	125-0148	1	Valve, Check
30	161-5875	1	HYD Hose ASM
31	354-79	1	Cap-Dust
33	353-947	1	Cap-Dust, Black
34	3334-945	2	Tie-Cable
35	100-4617	1	Adapter-HYD
35:1	237-80	1	O-Ring


Control Valve Assembly No. 161-8001

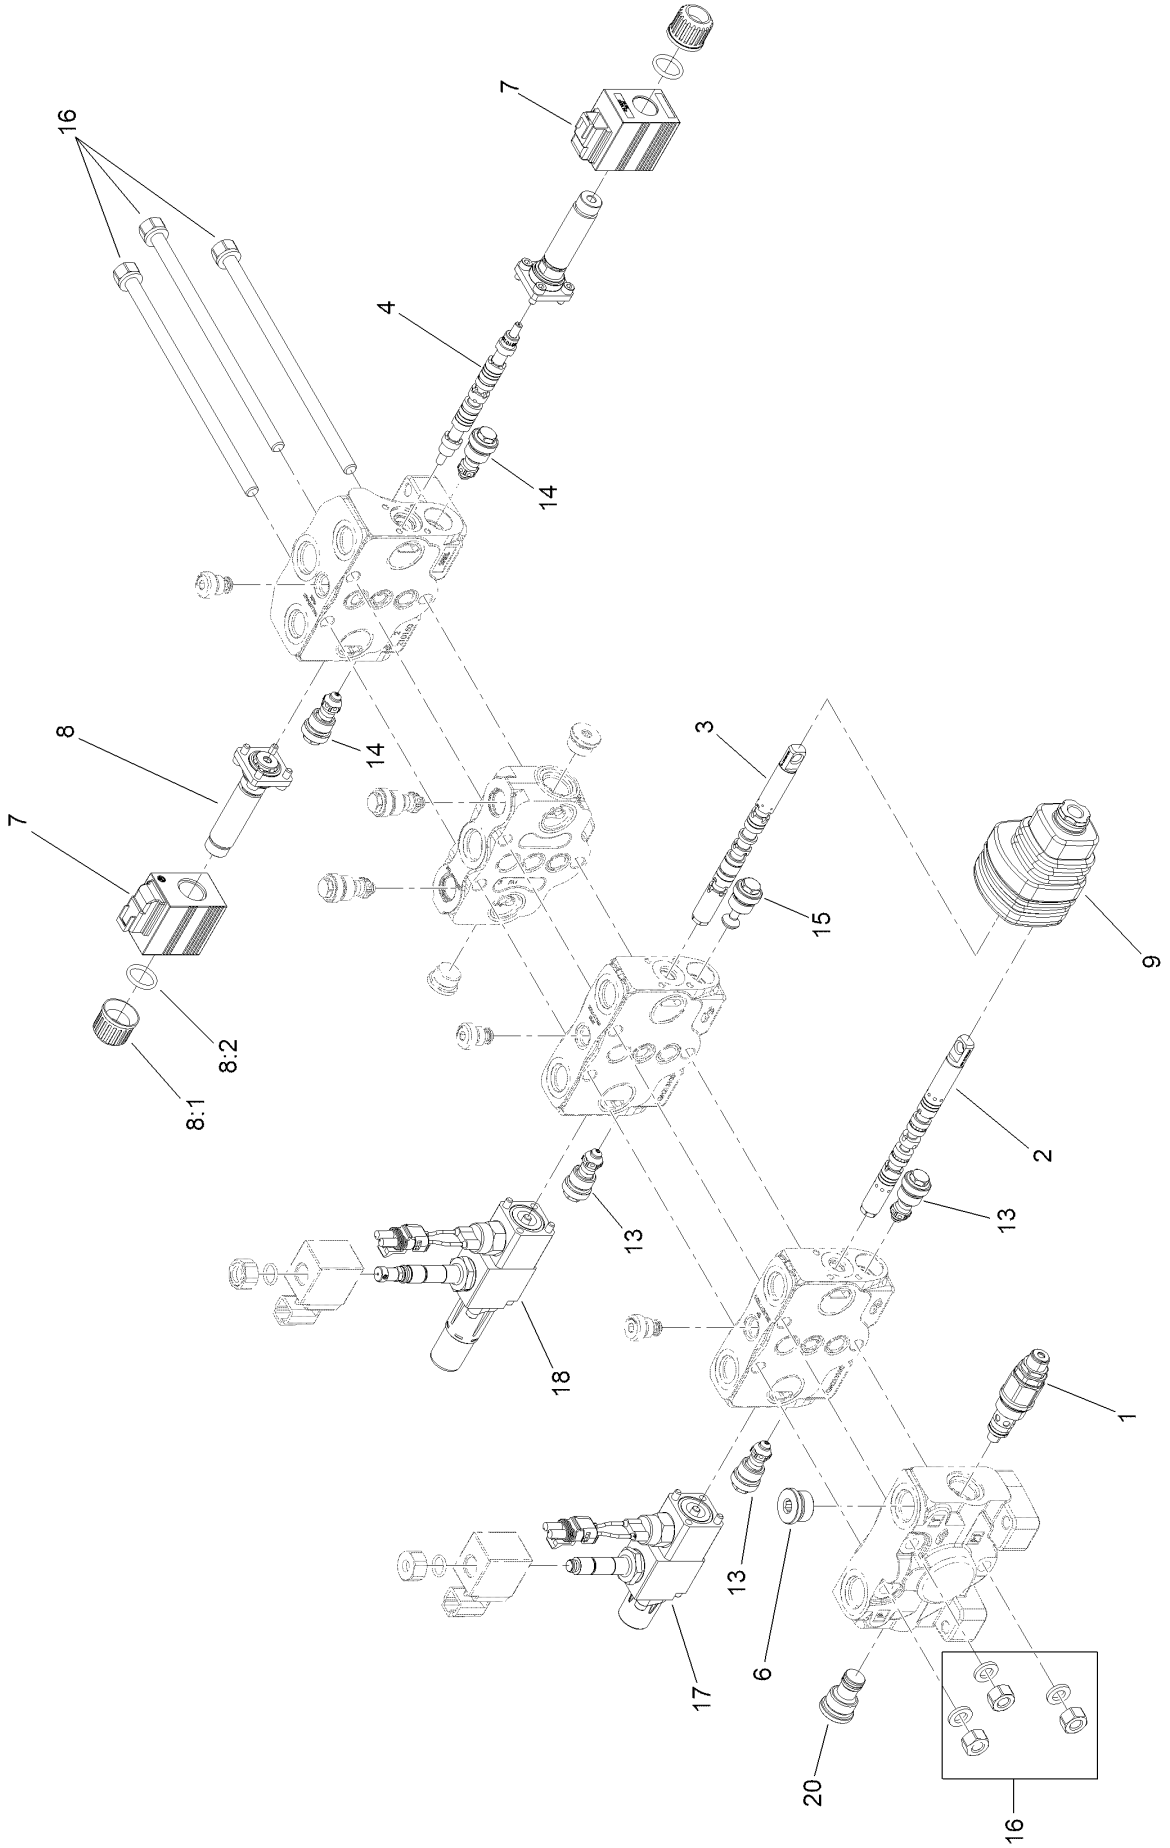

Control Valve Assembly No. 161-8001 (continued)

Ref.	Part Number	Qty.	Description
1	164-1505	1	Valve-Relief
2	164-1506	1	Spool-Lift
3	164-1507	1	Spool-Curl
4	164-1508	1	Spool-Aux
6	164-1509	1	Plug
7	164-1510	2	Coil-Solenoid
8	145-3319	1	Coil-Tube
8:1	163-4298	2	Nut-Retainer
8:2	163-4299	2	O-Ring
9	163-7706	1	Kit - Joystick
13	164-1511	3	Valve-Relief
14	164-1512	2	Valve-Relief
15	164-1513	1	Valve-Check
16	164-1514	1	Kit-Tierod
17	164-1515	1	Kit-Control
18	164-1516	1	Kit-Control
20	164-1517	1	Plug


Hydraulic Tank, Motor and Gear Pump Assembly

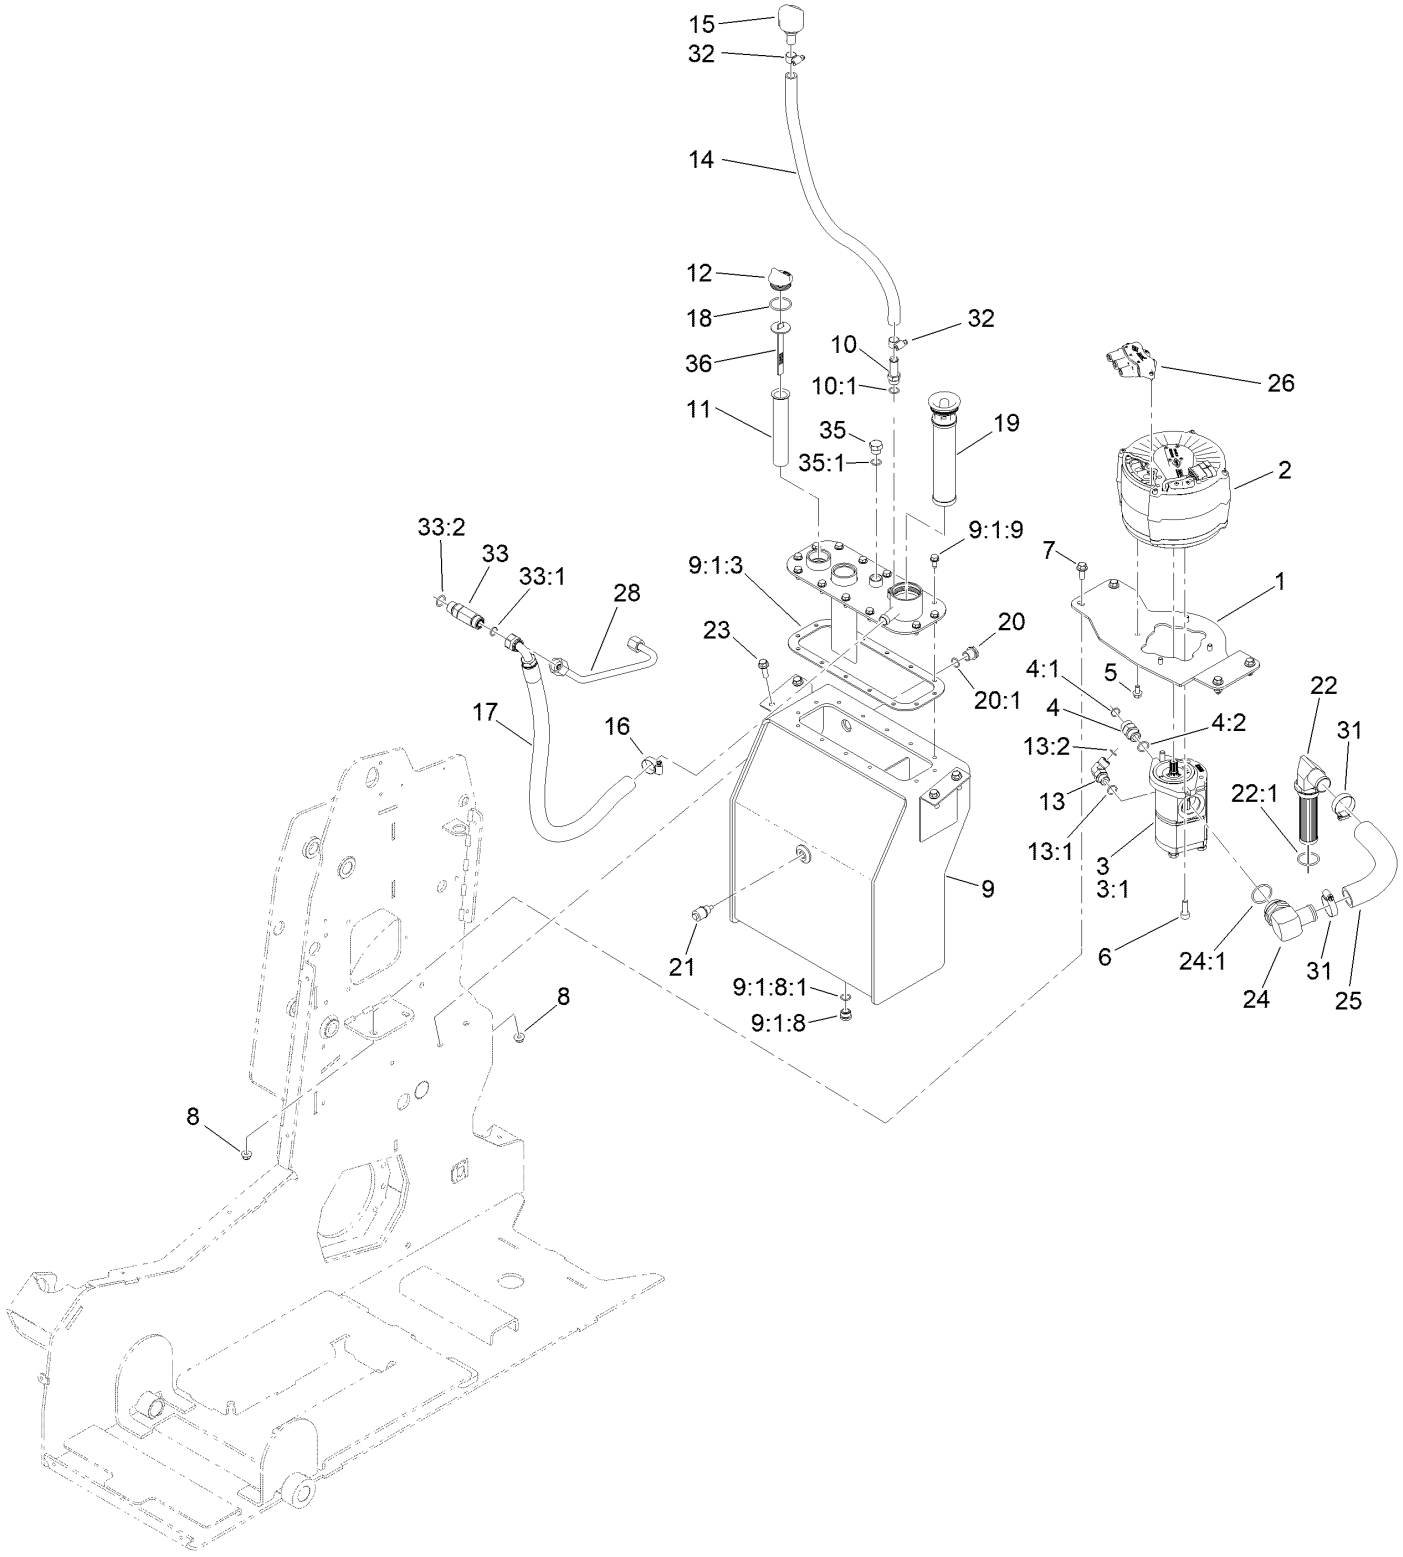

Hydraulic Tank, Motor and Gear Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-7976-05	1	Bracket-Motor
2	161-3019	1	Motor/Gen - 48V, 10Kw
3	161-7970	1	Gear Pump ASM
3:1	163-1246	1	Kit-Seal
4	340-7	1	Fitting-Straight
4:1	237-65	1	O-Ring
4:2	237-80	1	O-Ring
5	33104-016	4	Screw-HHF
6	AU862-10030	2	Screw-HSH
7	3234-42	4	Screw-HHF
8	104-8301	8	Nut-HF, NI
9	161-5850-03	1	HYD Tank ASM, [black]
9:1:3	161-5869	1	Gasket-Cover,Access
9:1:8	133-7659	1	Plug ASM W/Magnet
9:1:8:1	237-79	1	O-Ring
9:1:9	32144-70	14	Screw-HWHTF
10	107-7569	1	Fitting-STR
10:1	237-79	1	O-Ring
11	61-2790	1	Filter-Screen
12	93-7498	1	Plug-Plastic
13	340-98	1	Fitting-Elbow, 90 DEG
13:1	237-79	1	O-Ring
13:2	237-30	1	O-Ring
14	163-1220	1	HYD Hose
15	147-6017	1	Breather (Air)
16	2412-129	1	Clamp-Hose
17	163-1218	1	HYD Hose ASM
18	237-101	1	O-Ring
19	147-2497	1	Filter-Oil
20	114-3075	1	Sight Glass ASM
20:1	237-79	1	O-Ring
21	161-5866	1	Sender-Temperature
22	145-0622	1	Strainer Fitting ASM
22:1	237-101	1	O-Ring
23	119-4061	4	Screw-HHF
24	92-7526	1	Fitting-HYD 90 Spcl
24:1	237-101	1	O-Ring
25	163-1236	1	HYD Hose
26	147-5069	1	Terminal Accessory Pack
28	163-1217	1	HYD Tube ASM
31	2412-111	2	Clamp-Hose, W/Liner
32	2412-119	2	Clamp-Hose
33	340-22	1	Fitting-Tee
33:1	237-65	2	O-Ring
33:2	237-80	1	O-Ring
35	353-550	1	Plug-HYD, HH
35:1	237-79	1	O-Ring
36	163-1232	1	Dipstick-Oil


Controls Assembly

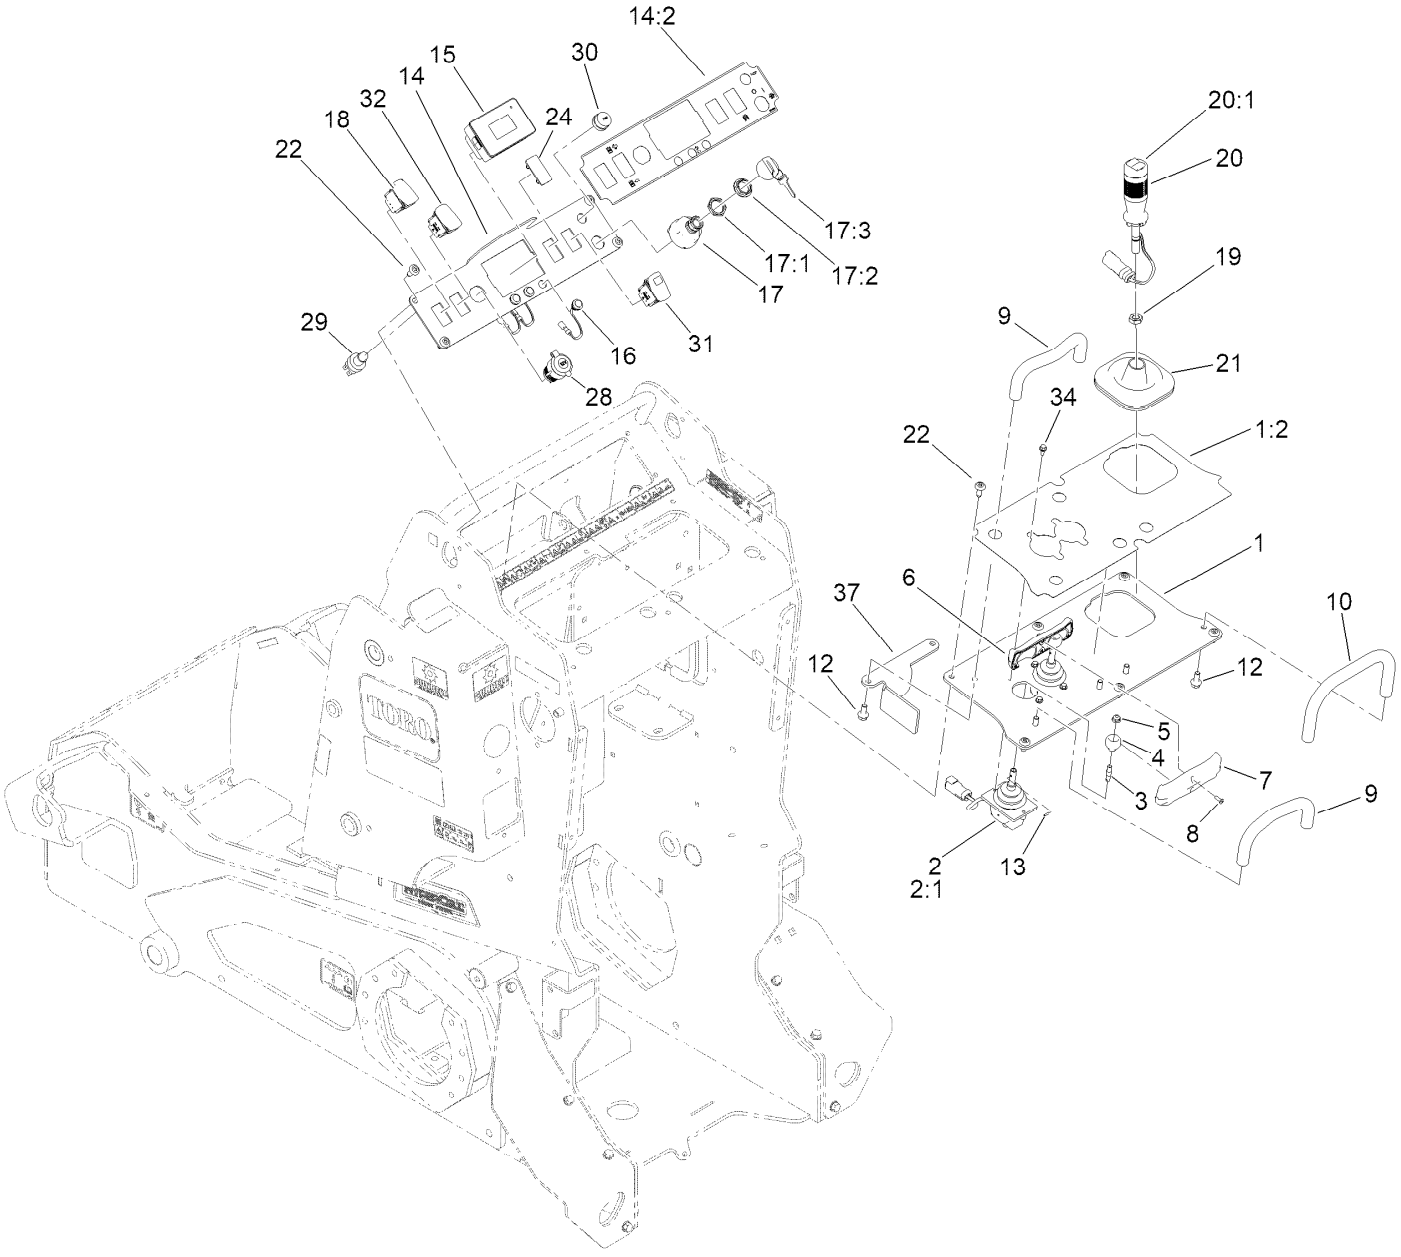

Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-8008	1	Plate ASM,
1:2	147-9115	1	Decal-Controls
2	136-4784	2	Lever-Control
2:1	133-0289	1	Lever-Control, Joystick
3	137-0431	2	Shaft-Handle
4	130-7723	2	Ball-Traction
5	104-7201	2	Nut-HF, NI
6	139-1166	1	Handle-Front
7	139-1167	1	Handle-Rear
8	94-6961	4	Screw
9	138-4693	2	Bar-Reference
10	145-4760	1	Bar-Reference
12	3234-47	6	Screw-HHF
13	137-0432	2	Pin-Roll
14	161-8006	1	Plate ASM,
14:2	161-8011	1	Decal-Console
15	122-1201	1	Module-Display
16	136-9678	3	Cable Assy-Pushbutton
17	122-2513	1	Switch-Ignition, Suns
17:1	121-5160	1	Nut-Hex
17:2	122-2704	1	Nut-Face, M22 (Plastic)
17:3	121-5162	1	Set-Key, Ignition
18	112-9421	1	Switch
19	51-2070	1	Nut
20	140-5742	1	Handle-Auxiliary ASM
20:1	147-6873	1	Boot-Switch, Joystick
21	145-4746	1	Boot-Joystick
22	138-9753	10	Screw
24	99-7420	1	Plug-Hole
28	109-9376	1	Receptacle-12V
29	112-3324	1	Switch-Horn
30	112-3313	1	Nut-Weatherproof
31	122-2719	1	Switch-Rocker, On-None-(On)
32	122-3145	1	Switch-Rocker, On - None - On
34	120-4579	4	Screw-HHF
37	147-9106-03	1	Bracket


Loader Arm Assembly

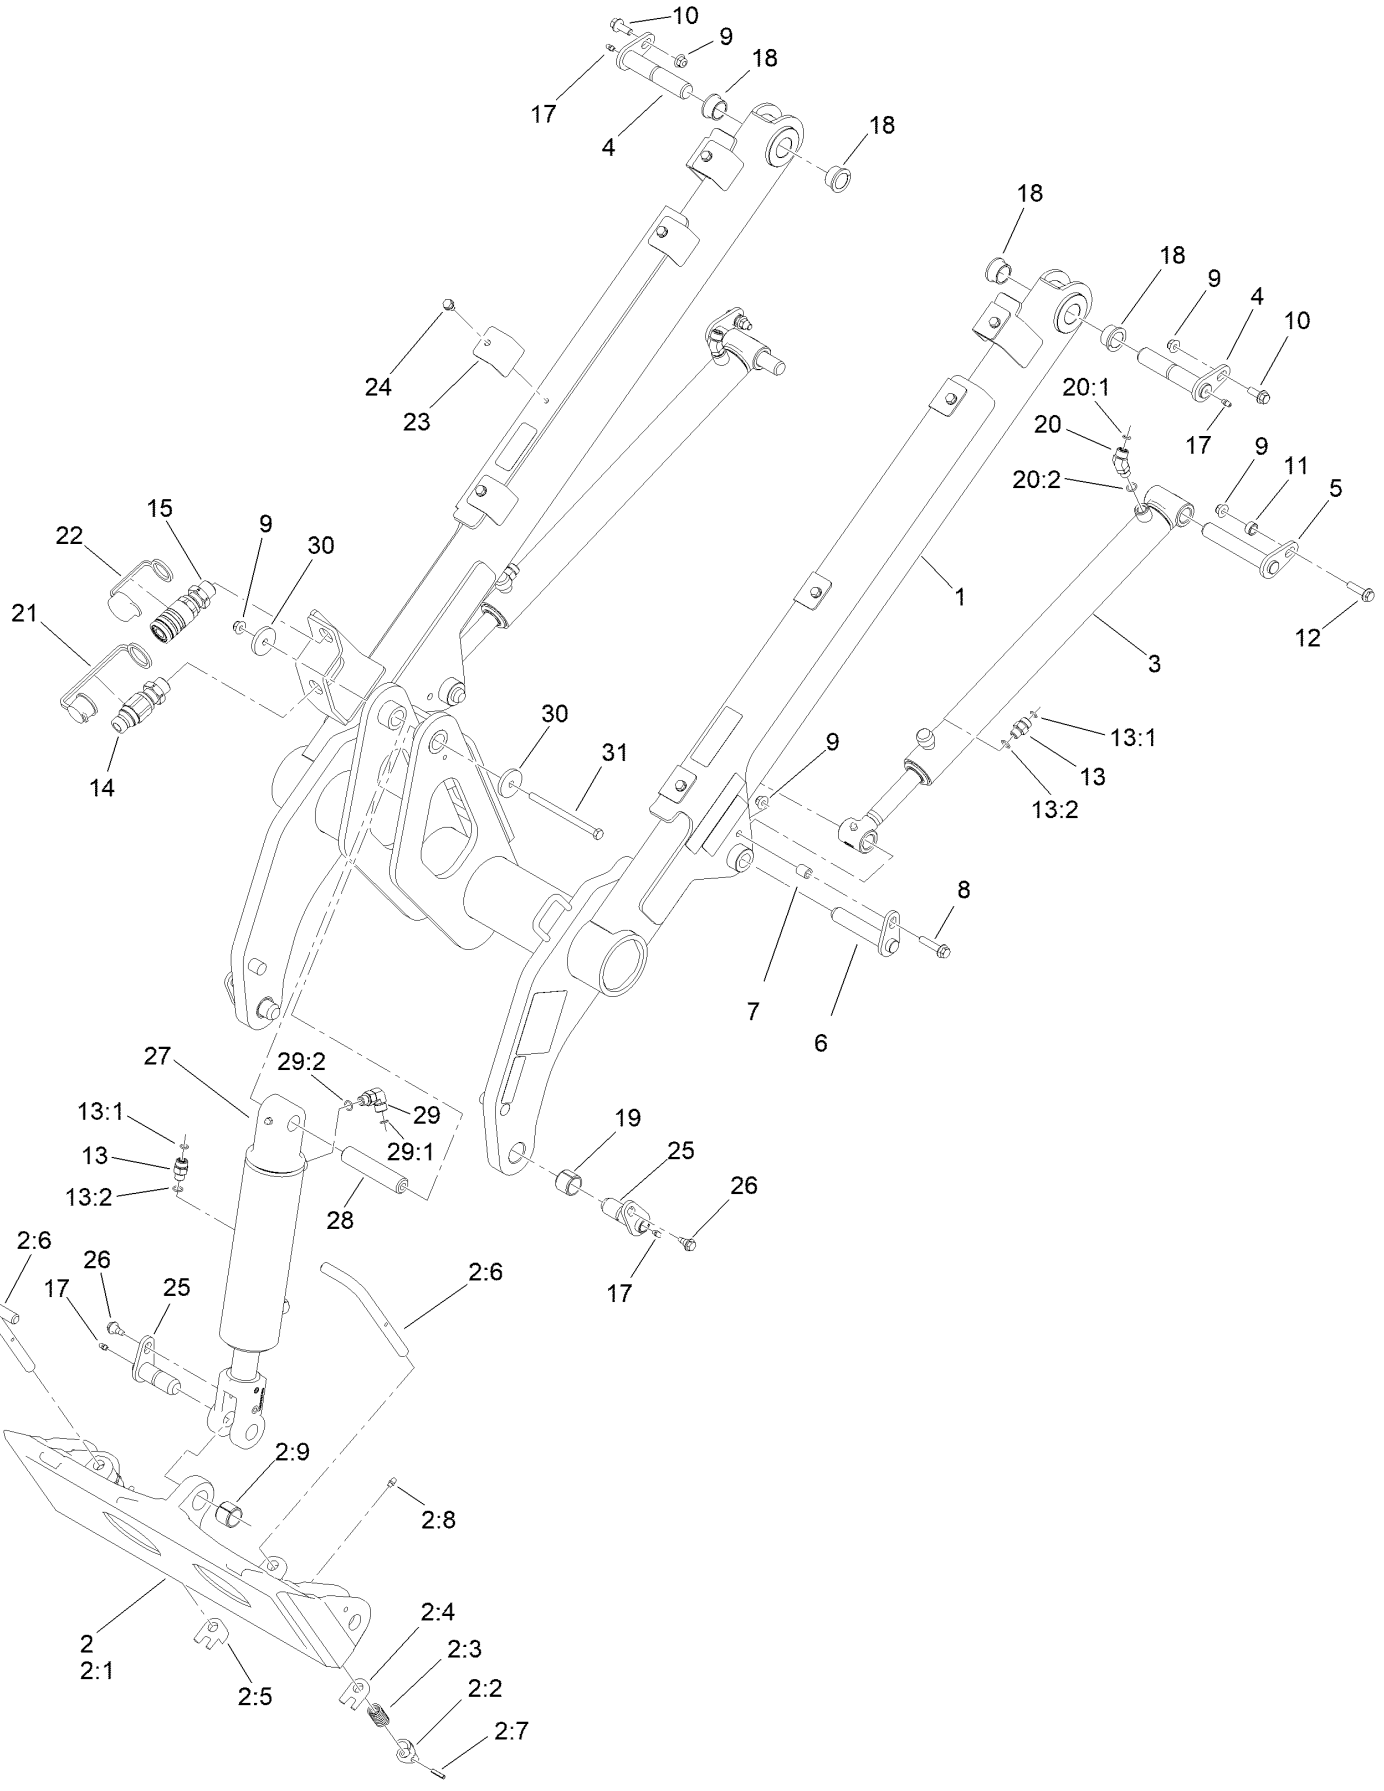

Loader Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-2495	1	Loader Arm ASM,
2	132-8418	1	Quick Attach ASM
2:1	130-7708-05	1	Mount-Qtach, [blk-Txt]
2:2	105-0246	2	Cam
2:3	98-4694	2	Spring-Compression
2:4	104-5909	1	Stop-RH
2:5	104-5903	1	Stop-LH
2:6	132-8419	2	Pin-Locking
2:7	3285-1	2	Pin-Grooved
2:8	302-5	2	Fitting-Grease
2:9	98-4871	1	Bushing-Tension
3	140-2974	2	Cly-HYD
4	139-7270	2	Pin-Flag
5	140-2927	2	Pivot Pin ASM (Welded)
6	140-2925	2	Pivot Pin ASM (Welded)
7	136-1462	2	Spacer
8	3234-19	2	Screw-HHF
9	104-8301	7	Nut-HF, NI
10	3234-42	2	Screw-HHF
11	99-4201	2	Tube-Spacer
12	3234-18	2	Screw-HHF
13	340-2	3	Fitting-Straight
13:1	237-22	1	O-Ring
13:2	237-42	1	O-Ring
14	139-4799	1	Coupler ASM,Bulkhead,
15	139-4798	1	Coupler ASM,Bulkhead,
17	302-5	5	Fitting-Grease
18	112-1626	4	Bushing-Flange
19	98-4871	2	Bushing-Tension
20	340-87	2	Fitting-Elbow, 45 DEG
20:1	237-22	1	O-Ring
20:2	237-42	1	O-Ring
21	100-8815	1	Cap-Dust, Nipple
22	100-8816	1	Cap-Dust, Coupler
23	145-3304	8	Plate-Retainer, Hose
24	700057	8	Screw-HWH
25	130-5222	3	Pin-Pivot
26	99-5105	3	Screw-Shoulder
27	161-7969	1	HYD CYL ASM
28	161-8018	1	Spacer-Pivot
29	340-77	1	Fitting-Elbow, 90 DEG
29:1	237-22	1	O-Ring
29:2	237-42	1	O-Ring
30	110-9981	2	Washer-Plain
31	323-22	1	Screw-HH


Hydraulic Cylinder Assembly No. 140-2974

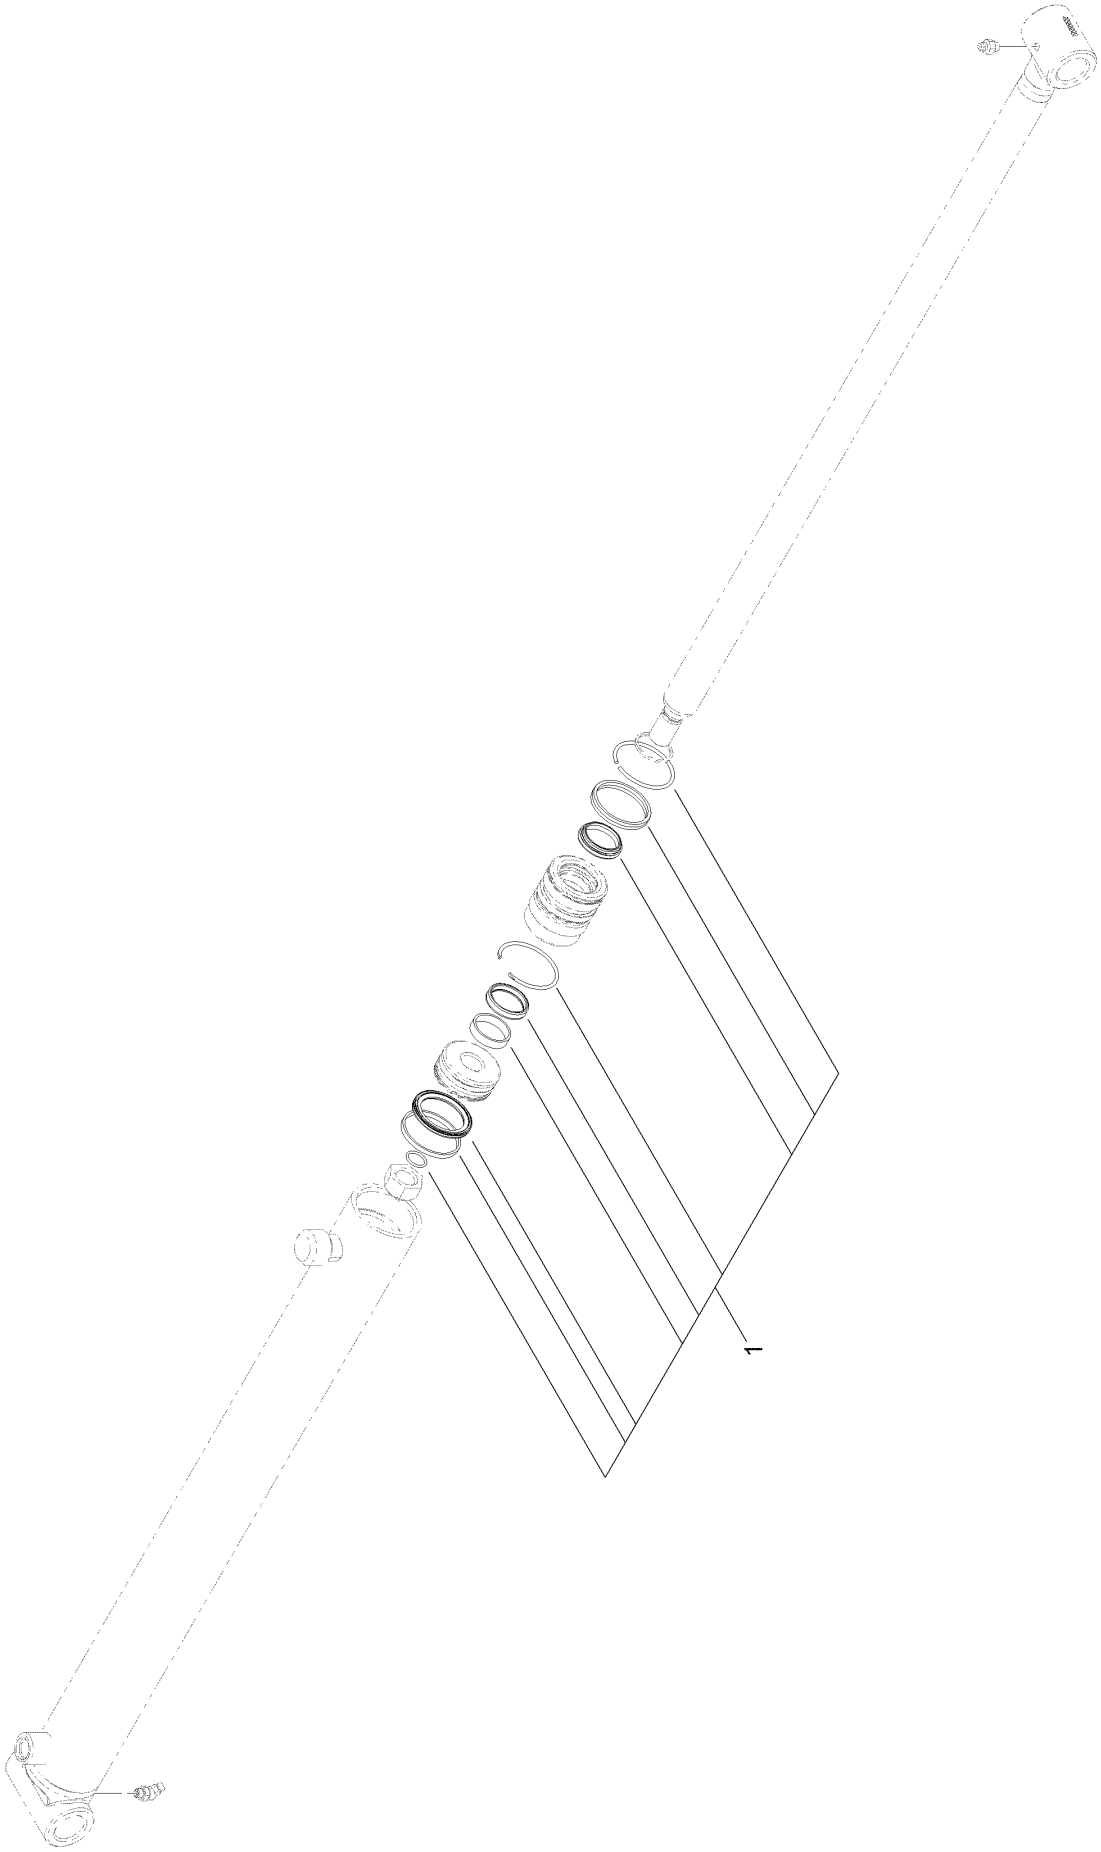

Hydraulic Cylinder Assembly No. 140-2974 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	144-7487	1	Kit-Seal, Hydraulic CYL

Hydraulic Cylinder Assembly No. 161-7969

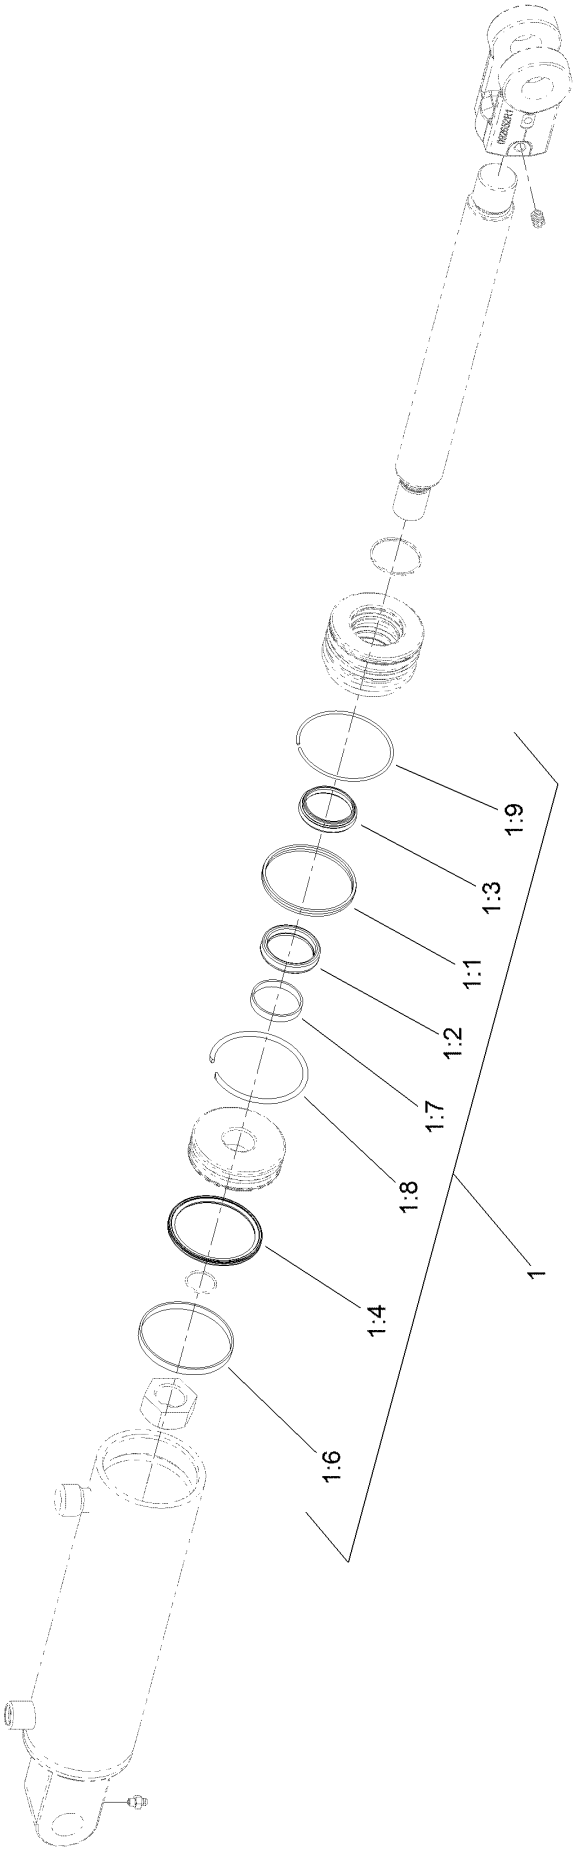


Hydraulic Cylinder Assembly No. 161-7969 (continued)

Ref.	Part Number	Qty.	Description
1	137-5209	1	Seal Repair Kit
1:1		1	Seal-Dual ●
1:2		1	Seal-Rod ●
1:3		1	Wiper-Rod ●
1:4		1	Seal-Piston ●
1:6		1	Ring-Wear, Piston ●
1:7		1	Ring-Wear, Rod ●
1:8		1	Ring-Retaining, Internal ●
1:9		1	Ring-Retaining, External ●

● Not serviced separately


Platform Assembly

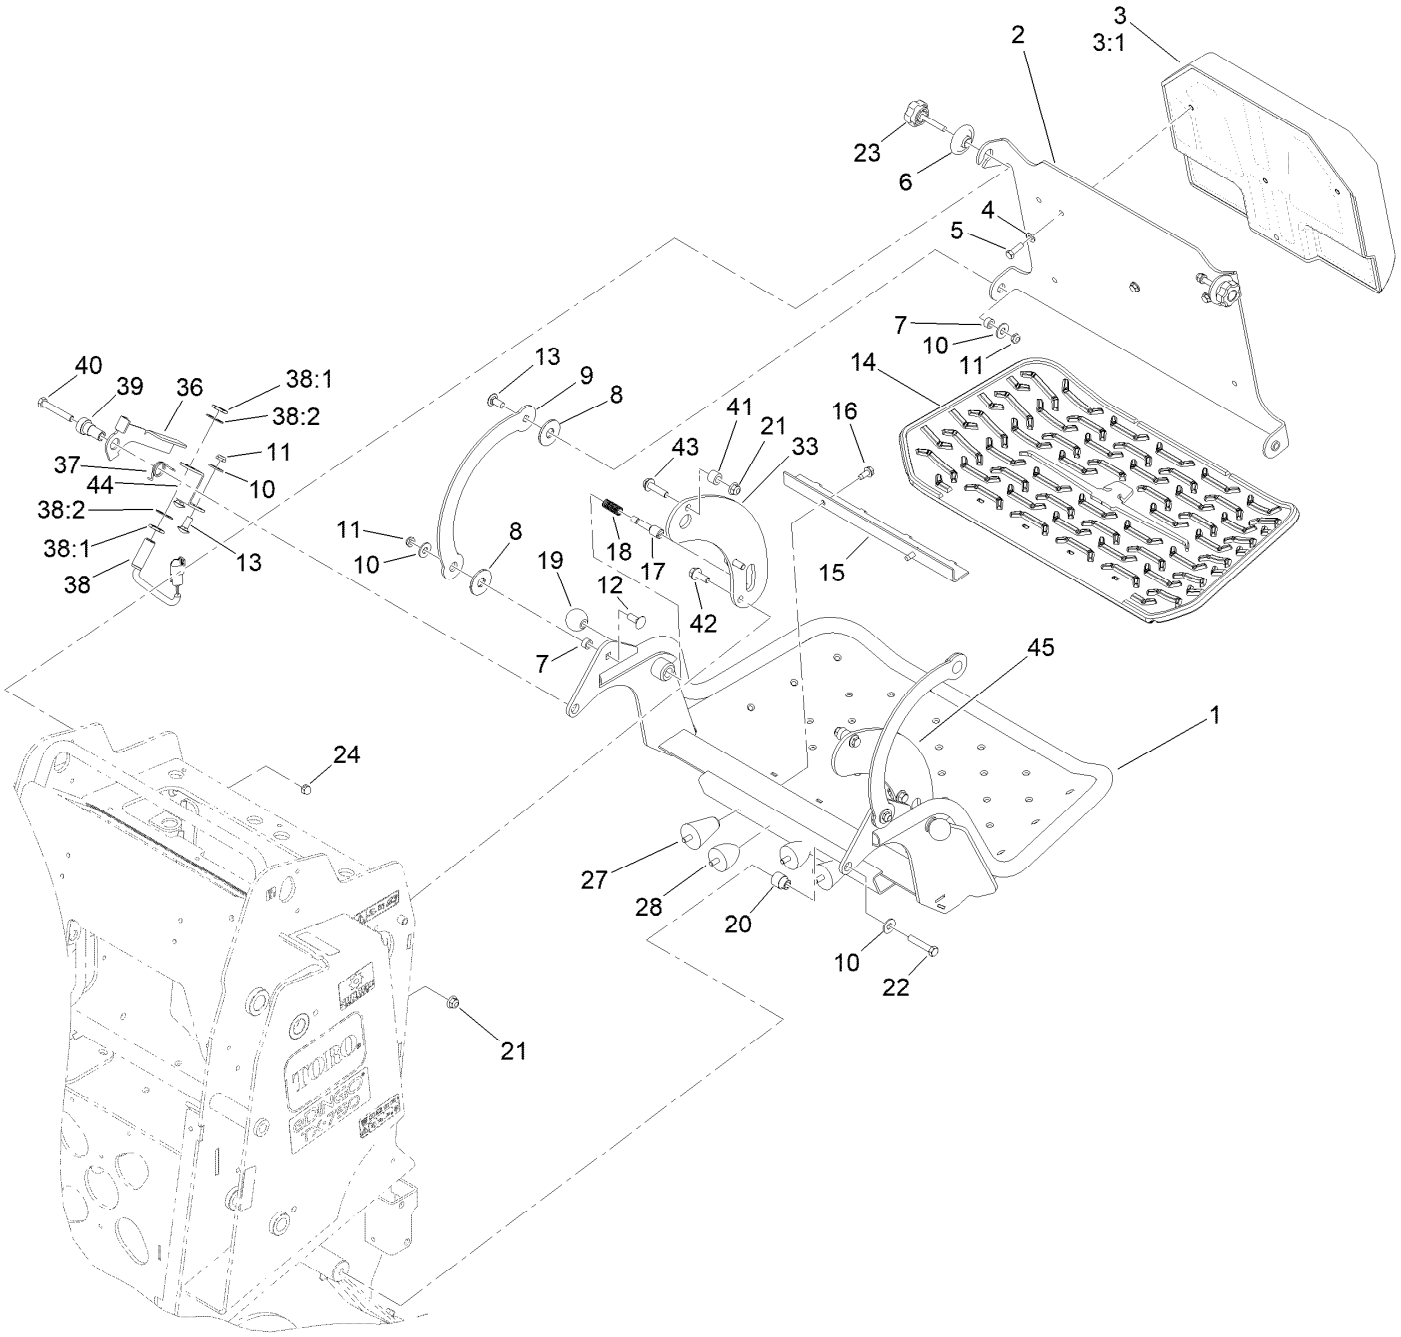

Platform Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-2535-05	1	Platform ASM, [blk-Txt]
2	161-7994-05	1	Hinge-Pad
3	161-3555	1	Pad-Thigh
3:1	161-3554	1	Cover Pad
4	3256-23	3	Washer-Plain
5	121-7999	3	Screw-HH, Patch
6	116-2886	2	Slide-Bushing
7	111044	4	Spacer
8	114-0463	4	Washer-Friction, Composite
9	114-1915-05	2	Link-Pad
10	3256-4	7	Washer-Flat
11	3296-59	6	Nut-Lock, NI
12	3231-2	2	Bolt-CARR
13	3231-27	4	Screw-CARR
14	144-6958	1	Mat, Platform
15	114-1920-05	1	Clamp-Shield
16	32144-70	2	Screw-HWHTF
17	119-8650	2	Pin-Latch
18	114-5348	2	Spring
19	1-603175	2	Knob-Ball
20	132-7583	1	Bushing-Flanged
21	104-8301	6	Nut-HF, NI
22	323-10	1	Screw-HH
23	133-1426	2	Knob
24	137-4808	2	Nut-Acorn
27	114-1925	2	Bumper-Rubber
28	114-1926	2	Bumper-Rubber
33	147-8482	1	Bracket-Catch
36	147-2457-03	1	Bracket-Activator
37	139-1508	1	Spring-Torsion
38	139-7238	1	Sensor-Proximity, N.O.
38:1	117-3207	2	Nut-Hex
38:2	117-3208	2	Washer-Lock, Internal Tooth
39	147-2458	1	Bushing-Flanged
40	323-12	1	Screw-HH
41	117-5673	2	Spacer
42	3234-42	4	Screw-HHF
43	3234-18	2	Screw-HHF
44	147-2459	1	Bracket-Sensor
45	161-7973	1	Plate-Striker


Hoods and Covers Assembly

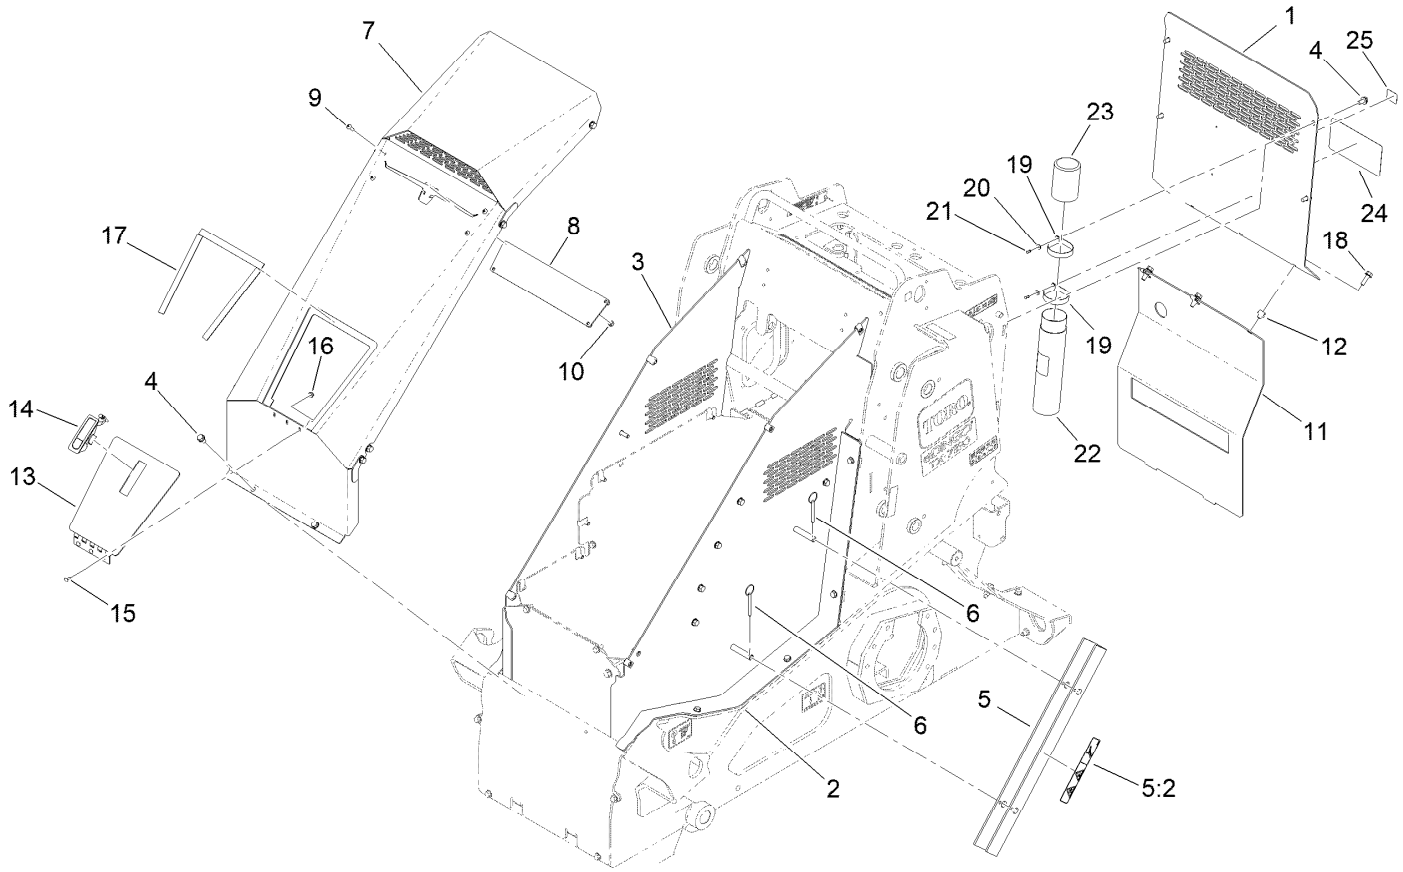


Hoods and Covers Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-8041-05	1	Plate-Cover,Upper
2	147-8490-05	1	Battery Cover ASM, [blk-Txt]
3	161-5855-05	1	RH Battery Cover ASM, [blk-Txt]
4	32144-14	14	Screw-HWHTF
5	130-5315	2	Arm-Locking
5:2	115-4858	1	Decal-Danger
6	108-0094	4	Pin-Cotterless
7	161-7982-05	1	Top Cover ASM, [blk-Txt]
8	161-7987-01	1	Plate-Backing
9	3258-166	4	Screw-PRH
10	3296-42	4	Nut-Lock, NI
11	161-8040-05	1	Plate-Cover,Lower
12	94-2413	9	Nut-U
13	163-1214-05	1	Door-Access [blk-Txt]
14	145-4788	1	Latch - Compression
15	1-807513	3	Bolt-CARR
16	138-0719	3	Nut-HF
17	163-1223	3	Seal-Foam
18	3234-29	21	Screw-HHF
19	2412-120	2	Clamp-R
20	3269-10	2	Washer-Back
21	3269-17	2	Rivet-Pop
22	104-7050	1	Tube-Manual
23	104-7048	1	Cap-Housing
24	161-8014	1	Decal-Service
25	147-6827	1	Decal-Operator Manual

Electrical Routing Assembly

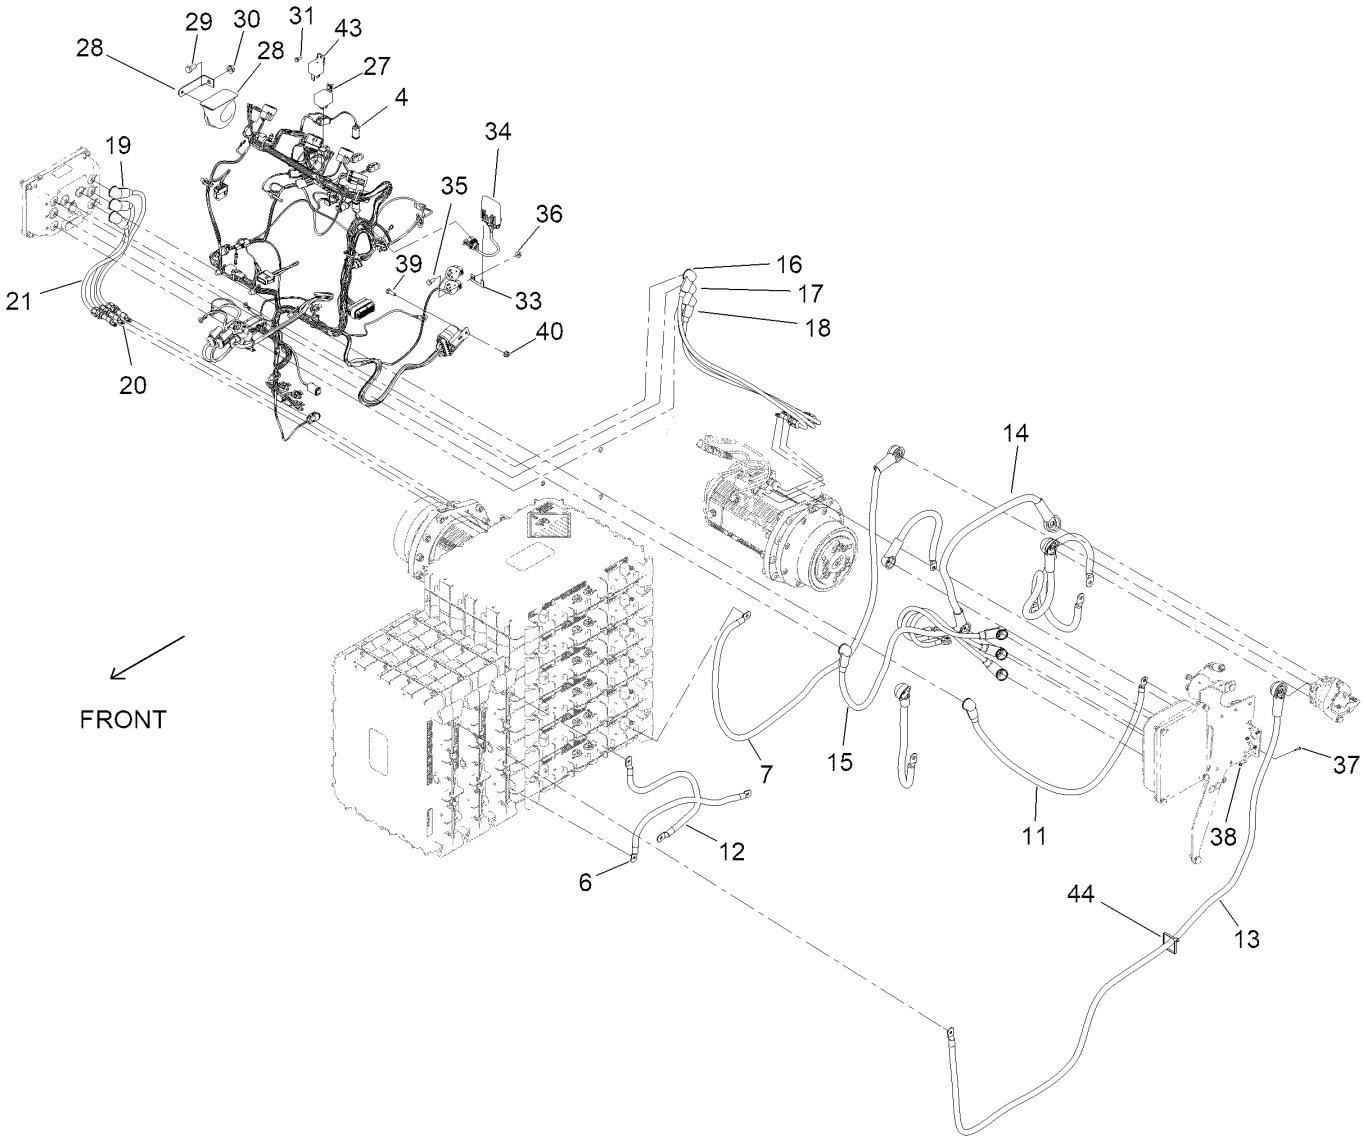


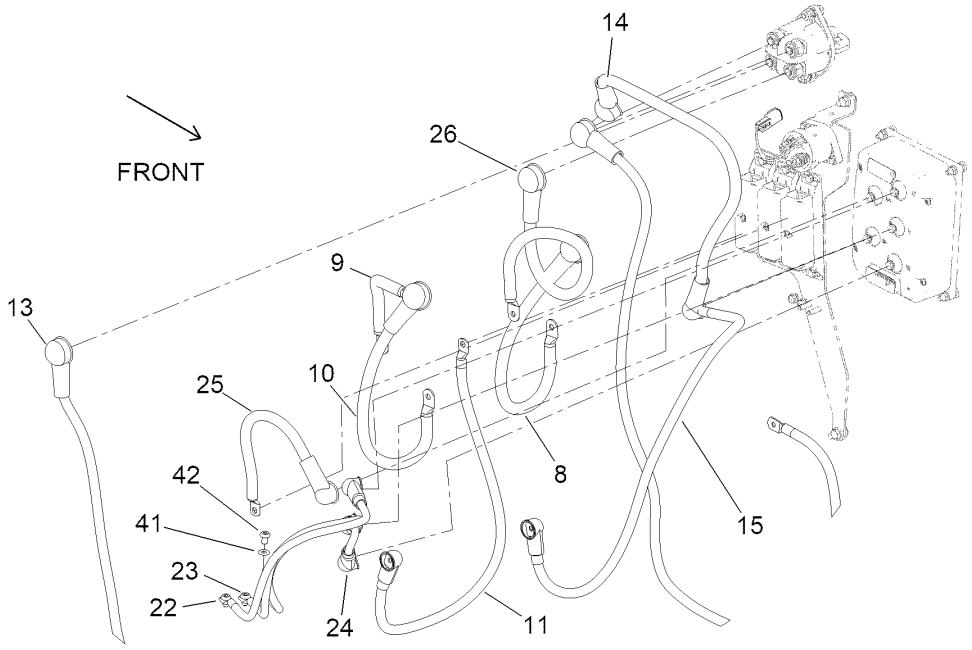

Electrical Routing Assembly (continued)

Ref.	Part Number	Qty.	Description
4	122-3702	1	Harness-Wire, Main
6	122-3338	1	Cable-Battery, Rd ASM
7	122-3339	1	Cable-Battery, Rd ASM
8	122-4298	1	Cable-Battery, Rd ASM
9	122-3341	1	Cable-Battery, Rd ASM
10	122-3342	1	Cable-Battery, Rd ASM
11	122-3343	1	Cable-Battery, Rd ASM
12	122-3344	1	Cable-Battery, Bk ASM
13	122-3345	1	Cable-Battery, Bk ASM
14	122-3346	1	Cable-Battery, Bk ASM
15	122-3347	1	Cable-Battery, Bk ASM
16	122-3348	1	Cable-Battery, Rd ASM
17	122-3349	1	Cable-Battery, Rd ASM
18	122-3350	1	Cable-Battery, Rd ASM
19	122-3351	1	Cable-Battery, Rd ASM
20	122-3352	1	Cable-Battery, Rd ASM
21	122-3353	1	Cable-Battery, Rd ASM
22	122-3354	1	Cable-Battery, Rd ASM
23	122-3355	1	Cable-Battery, Rd ASM
24	122-3356	1	Cable-Battery, Rd ASM
25	122-3372	1	Cable-Battery, Rd ASM
26	122-4271	1	Cable-Battery, Rd ASM
27	122-3200	1	Relay
28	116749	1	Horn
29	323-4	1	Screw-HH
30	3290-357	1	Nut-HSF
31	32144-112	2	Screw-HWH
33	32180-020	1	Clip-Connector
34	119-4330	1	Isolated Can Module ASM
35	321-3	1	Screw-HH
36	32128-33	1	Nut-HF
37	1-3084	4	Screw-PPH
38	9157324	4	Nut-Hex, NYL INS
39	321-4	1	Screw-HH
40	119-4040	1	Nut-HF, NI
41	147-5054	3	Washer-Belleville
42	147-5055	3	Screw-HSBH
43	99-7435	1	Relay
44	3290-379	2	Tie-Cable


Main Wire Harness Assembly No. 122-3702

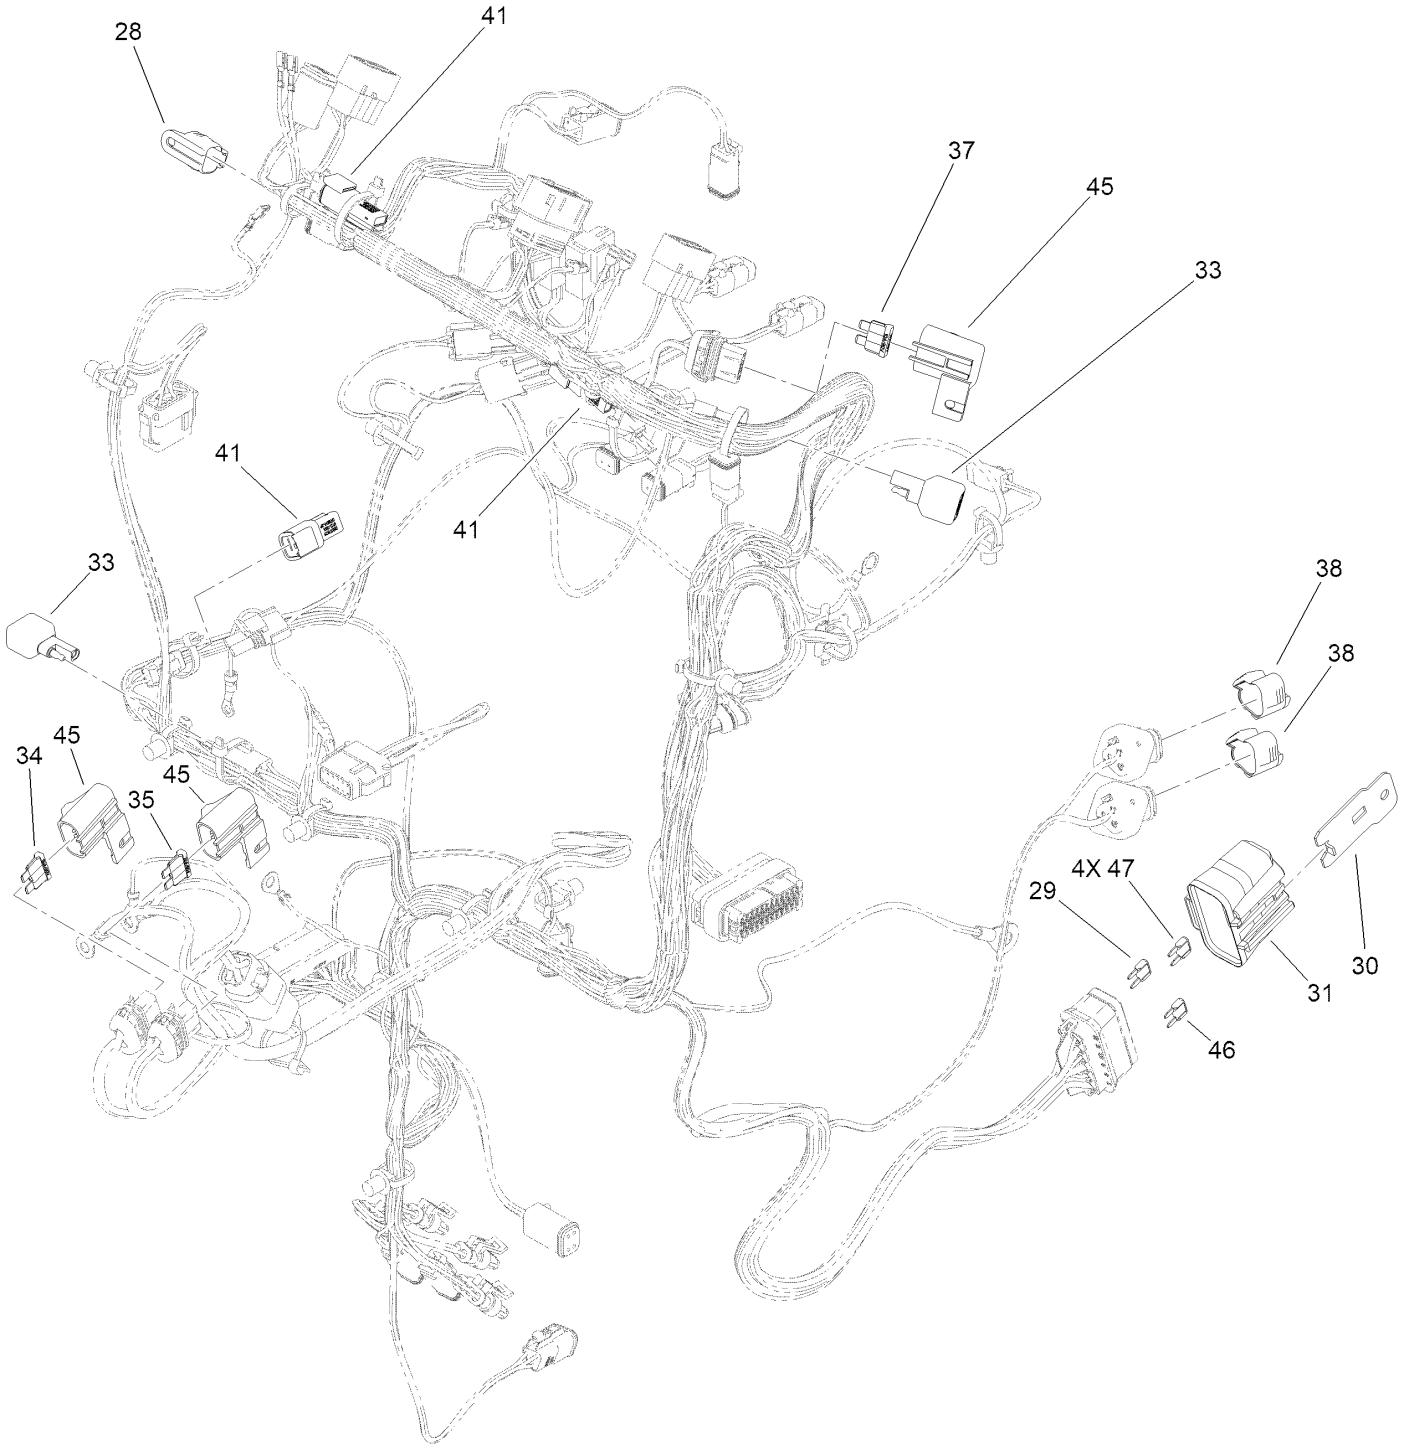

Main Wire Harness Assembly No. 122-3702 (continued)

Ref.	Part Number	Qty.	Description
28	32180-091	1	Cap-Dust, 2 Way
29	121-8861	1	Fuse-Mini Blade, 2 Amp
30	32180-177	1	Clip-Mounting
31	32180-176	1	Cover-Block, Fuse
33	100-4918	2	Diode
34	117-4728	1	Fuse-Blade, 30A
35	117-4726	1	Fuse-Blade, 20A
37	117-4724	1	Fuse-Blade, 10A
38	32180-089	2	Cap-Plug, 3 Way
41	32180-282	3	Conn, Res, 120 Ohm
45	32180-567	3	Cover-Aptiv, Modified
46	121-8867	1	Fuse-Mini Blade, 15 Amp
47	121-8865	4	Fuse-Mini Blade, 7.5 Amp

Battery Assembly

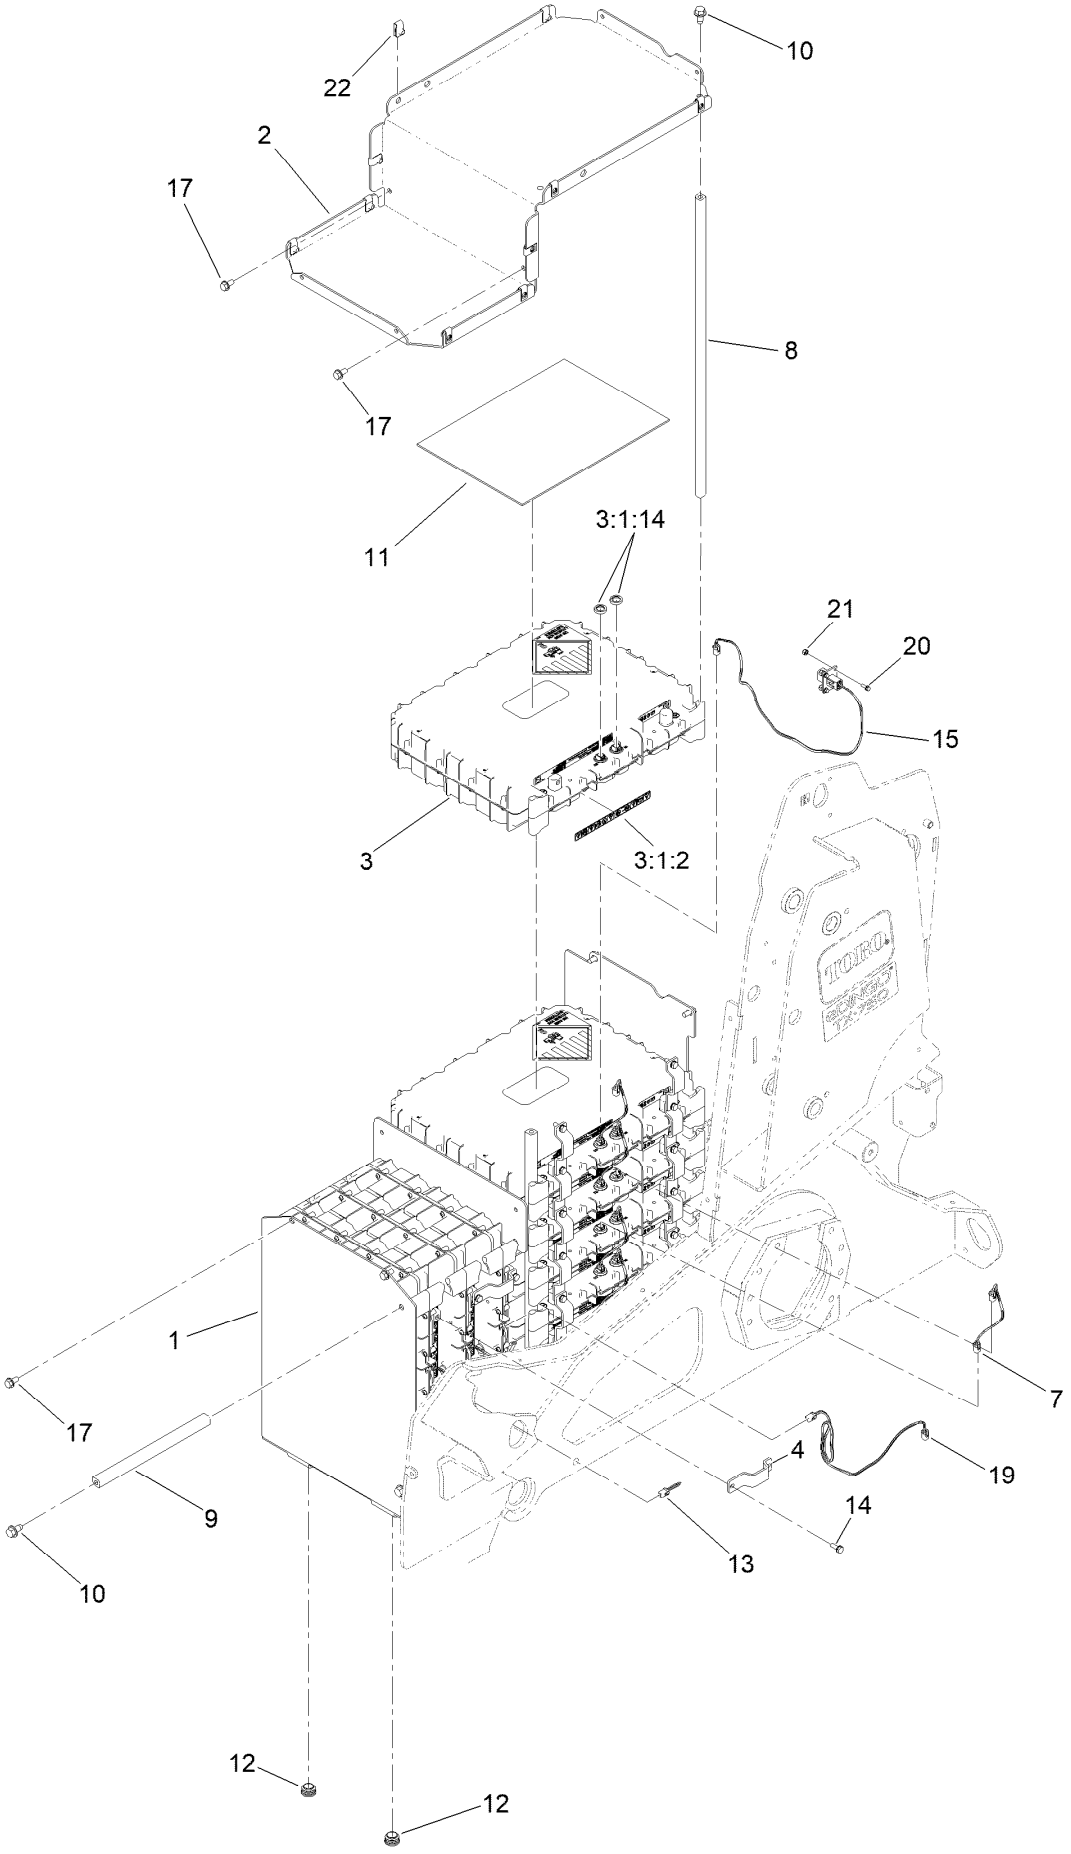

Battery Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-8447-03	1	Battery Base ASM, [black]
2	144-0871-03	1	Plate-Top,Housing,Battery
3	145-5385	10	Battery ASM
3:1:2	145-5338	1	Decal-Warning, Battery
3:1:14	32180-466	2	Nut-Mounting, Jwpf Panel Lock
4	147-3877	16	Bar-Bus, 400A
7	140-9565	8	Harness-Wire, Data Interface
8	147-2517	2	Lock-Battery,
9	147-2518	2	Lock-Battery,
10	110-9380	8	Screw-HWH
11	145-2366	2	Foam-Battery Box
12	145-2365	4	Glide-Battery Box
13	122-2323	1	Harness-Wire, Can Terminator
14	145-5783	20	Screw-Sems
15	122-2402	1	Harness-Wire, Pack Comm
17	32144-14	6	Screw-HWHTF
19	122-2494	1	Harness-Wire, Data (Long)
20	112-3169	4	Screw-HHF, Serrated
21	3296-1	4	Nut-Lock
22	94-2413	10	Nut-U

Attachments and Accessories

For 22231 — eDingo TX 750 Wide Track Compact Tool Carrier

Product Name	Model/Part
Charger Cable Assembly	122-3489
Charger Cable Assembly	122-3490
Charger Cable Assembly	122-4204
PX Hydraulic Fluid (5 Gal)	133-8086
PX Hydraulic Fluid (55 Gal)	133-8087
PX Hydraulic Fluid-4 Pack (Gallon)	138-9460
Kit-Light	163-1225
Kit-Charger, North American	163-1244
Kit-Charger, European	163-1245
Standard Bucket	22340
High Volume Bucket	22342
4 Cubic Foot Standard Bucket	22409
Loose Materials Bucket	22410
48in Hydraulic Blade	22414
Bore Drive Head	22420
Rod and Reamer	22421
Stump Grinder	22429
Tree Forks	22438
40in Tiller	22445
Crumber Kit	22464
Trench Filler	22472
High-Torque Trencher Head	22473
High-Speed Trencher Head	22474
Crumber Kit	22477
4-in-1 Bucket	22478
24in X 4in Soil Chain	22480
24in X 4in Combination Chain	22481
24in X 4in Rock Tooth Chain	22482
24in X 6in Soil Chain	22483
24in X 6in Combination Chain	22484
24in X 6in Rock Tooth Chain	22485
36in X 4in Soil Chain	22486
36in X 4in Combination Chain	22487
36in X 4in Rock Tooth Chain	22488
36in X 6in Rock Tooth Chain	22489
36in X 6in Soil Chain	22490
36in X 6in Combination Chain	22491
48in x 4in Soil Chain	22492
48in x 4in Combination Chain	22493
48in x 6in Soil Chain	22494
48in x 6in Combination Chain	22495
Narrow Bucket	22520
Grapple Rake	22577
Snow Thrower	22585
Adjustable Forks	22586
Grapple Bucket	22590

Attachments and Accessories (continued)

Multi-Purpose Tool 22672
Floor Scraper 22673
Auger Head 22805
Universal Swivel Auger Head 22806
18in Auger Bit 22814
24in Auger Bit 22815
30in Auger Bit 22816
12in Auger Bit Extension 22818
24in Auger Bit Extension 22819
6in Full-Flight Auger Bit 22820
9in Full-Flight Auger Bit 22821
12in Full-Flight Auger Bit 22822
15in Full-Flight Auger Bit 22823
Soil Cultivator 23102
Hydraulic Breaker 23136
Leveler 23165
30in Standard Bucket 23174
30in Pallet Fork 23175
30in Grapple 23176
Power Box Rake 23702
New Red Paint - Gallon 361-11
Dark Metallic Gray Aerosol Paint 361-12
Paint-Spray, Toro Textured Black 361-13
Semi-Gloss Black Spray Paint 361-9
Air Dry Red Paint - Qt 5340



Count on it.