Form No. 3475-395 Rev C

TORO®

Count on it.

Parts Catalog

GreensPro® 1700

Greens Roller

Model No. 44914—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

CE

3475-395 C

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Chassis Assembly 4
Steering Mechanism Assembly 6
Roller Assembly 8
Seat Assembly 10
Operator Platform Assembly 12
Drawbar Assembly 14
Lifting Mechanism Assembly 16
Hub and Bearing Assembly No. 117-5115 18
Tire and Wheel Assembly No 142-5511 20
Electrical and Battery Assembly 22
Battery Assembly 24
Battery Assembly No. 145-5385 26
Main Wire Harness Assembly No. 122-4193 28
Controller Assembly 30
Attachments and Accessories 32

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Chassis Assembly

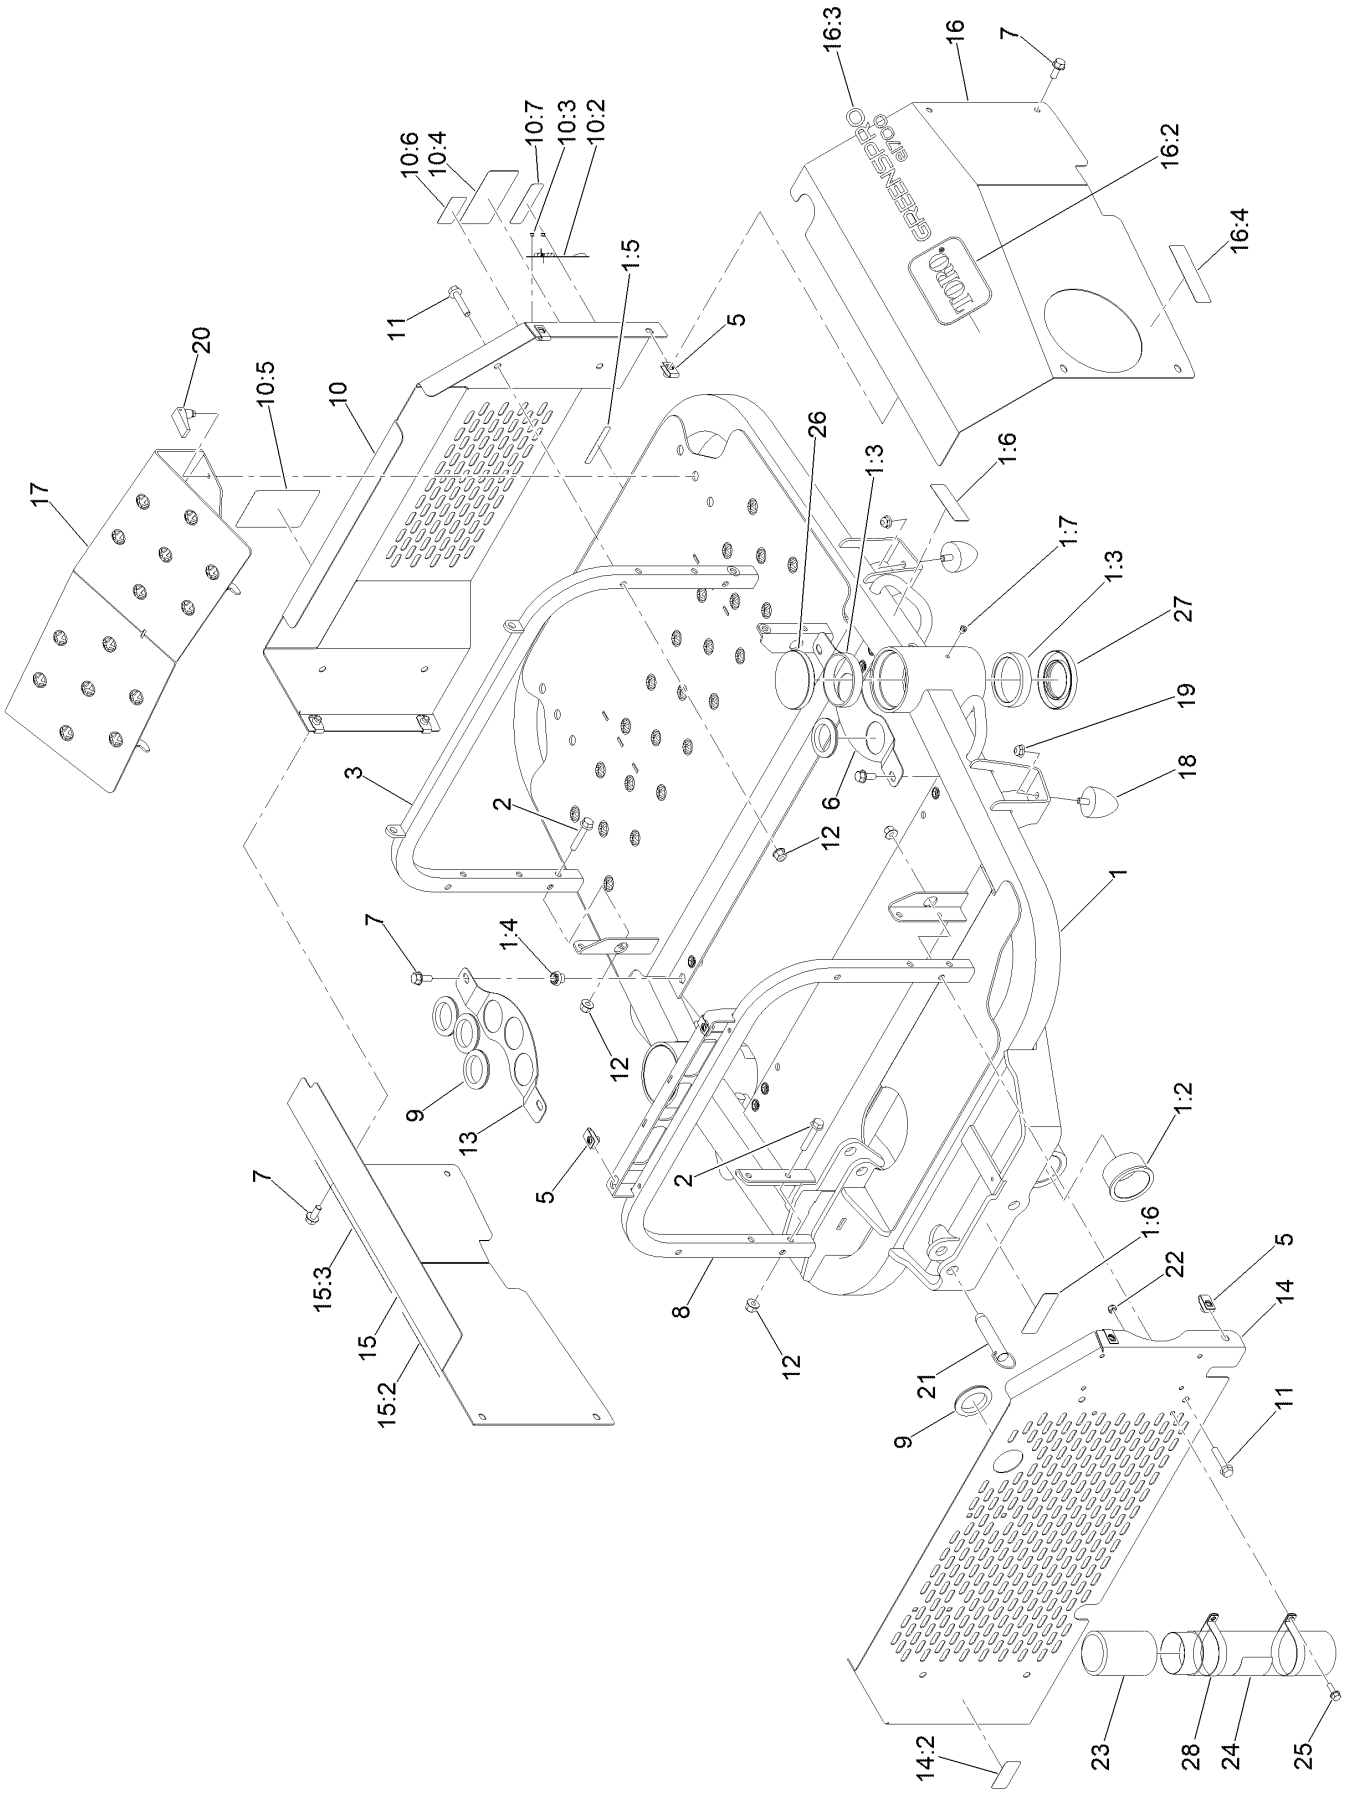

Chassis Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-8129	1	Main Frame ASM
1:2	93-4665	4	Bushing-Flange
1:3	254-66	4	Cup-Bearing, Roller
1:4	161-7799	8	Nut-Clinch
1:5	133-8061	1	Decal-Warning
1:6	120-0625	3	Decal-Warning
1:7	1-811010	2	Plug
2	33104-045	6	Screw-HHF
3	161-9177-01	1	Tube-Support, Front
5	142-9904	10	Nut-U
6	161-2278-01	1	Panel-Cleanout
7	134-3746	12	Screw-HHF
8	161-9178-01	1	Tube-Support, Rear
9	130-8743	6	Grommet
10	163-8133	1	Front Cover ASM
10:2	144-6628	1	Plate-Cover, Spring
10:3	3269-32	2	Rivet-Pop
10:4	147-0289	1	Decal-Charging Port
10:5	161-9152	1	Decal-Warning
10:6	137-8127	1	Decal-No Spray
10:7	140-4590	1	Decal-Charger Input Lithium
11	33104-040	8	Screw-HHF
12	134-3762	14	Nut-Flange, NI
13	163-8078-01	1	Panel-Cleanout, LH
14	163-8136	1	Rear Cover ASM
14:2	137-8127	1	Decal-No Spray
15	163-8134	1	LH Cover ASM
15:2	67-1300	1	Decal
15:3	161-9149	1	Decal-Greenspro 1700
16	163-8135	1	RH Cover ASM
16:2	67-1300	1	Decal
16:3	161-9149	1	Decal-Greenspro 1700
16:4	144-7008	1	Decal-Service, Shut-Off
17	163-8087-01	1	Footrest
18	114-1926	2	Bumper-Rubber
19	119-4041	2	Nut-HF
20	74-5950	2	Latch-Swell
21	144-6766	1	Pin, Lock
22	09438	2	Nut-Nyloc
23	104-7048	1	Cap-Housing
24	104-7050	1	Tube-Manual
25	134-3740	2	Screw-HHF
26	163-8066	2	Cap-End, Ec Profile
27	163-8065	2	Seal-Shaft
28	107-1865	2	R-Clamp


Steering Mechanism Assembly

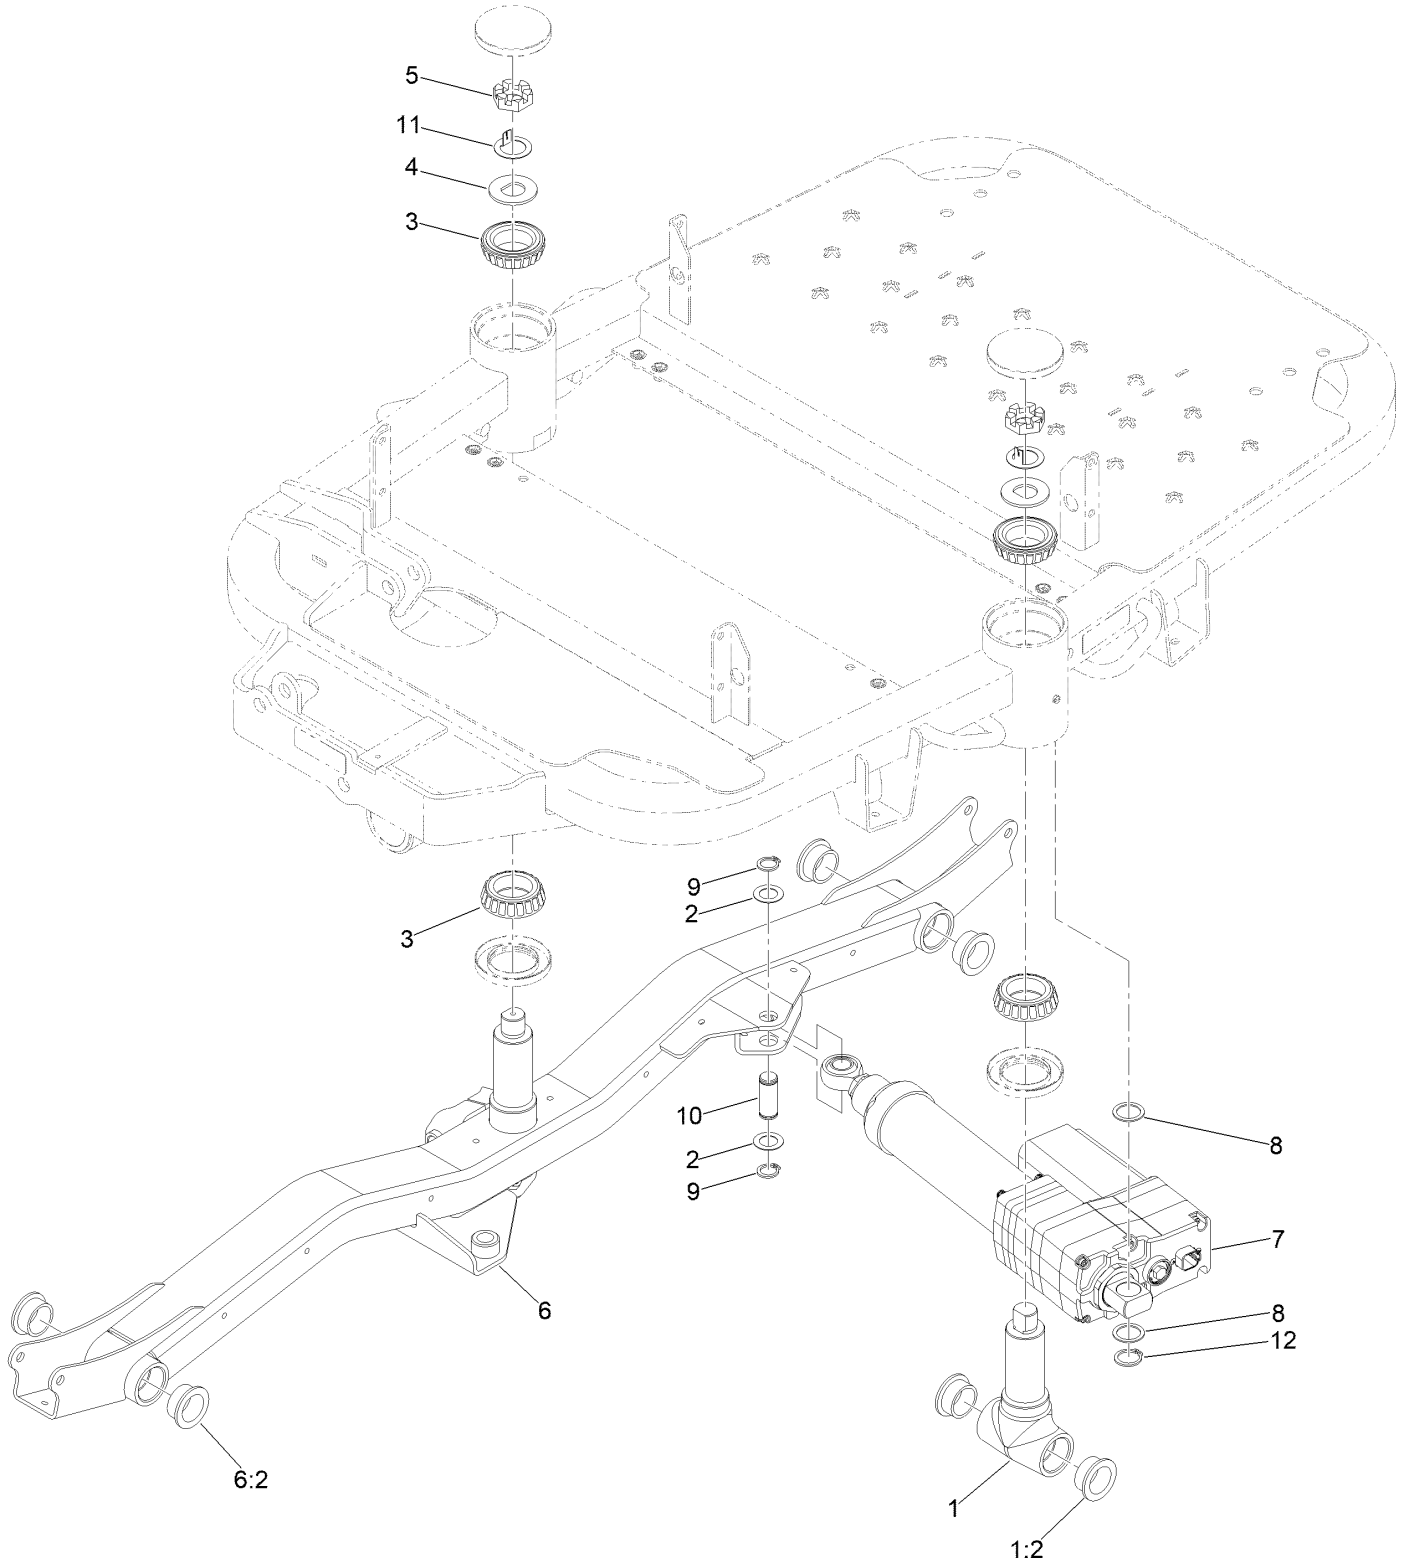

Steering Mechanism Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-8138	1	Roller Hanger ASM
1:2	60-0080	2	Bushing
2	3-6498	2	Washer-Thrust
3	254-65	4	Bearing-Roller, Cone
4	137-8171	2	Washer
5	137-7942	2	Nut-Castle
6	163-8130	1	Outer Roller Lift Arm ASM
6:2	60-0080	4	Bushing
7	147-3391	1	Actuator-Steering
8	110-4888	2	Washer-Spacer
9	32120-93	2	Ring-Retaining
10	161-2207	1	Pin-Clevis
11	137-7943	2	Washer-Tang
12	32151-36	1	Ring-Retaining

Roller Assembly

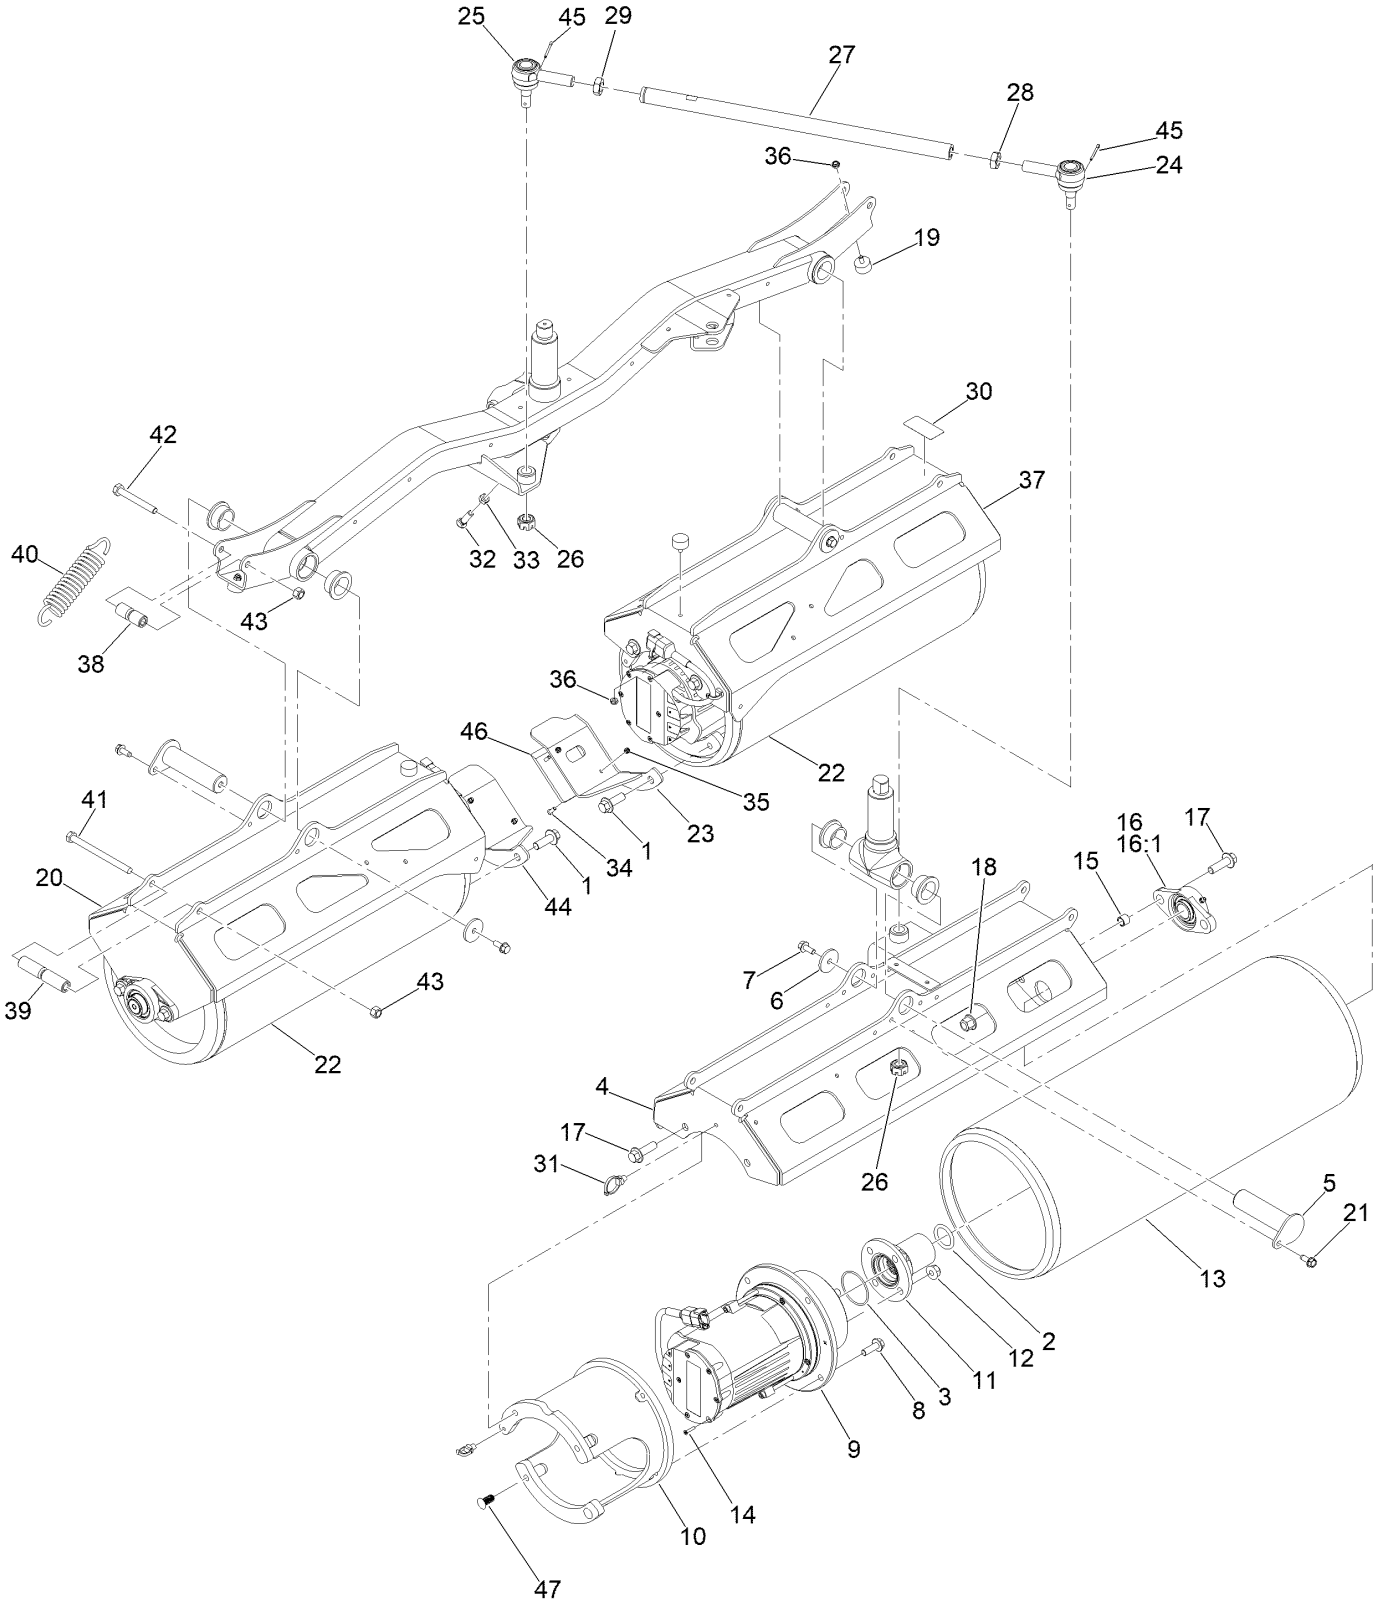


Roller Assembly (continued)

Ref.	Part Number	Qty.	Description
1	134-3756	4	Screw-HHF
2	163-8097	3	O-Ring
3	163-8098	3	O-Ring
4	161-2228-01	1	Shell-Roller, Center
5	161-3266	3	Pin-Flag
6	164-2650	3	Washer-Flat
7	134-3746	3	Screw-HHF
8	134-3752	12	Screw-HHF
9	147-8361	3	Motor-Roller
9:1		1	Motor/Gen-120V, 3Kw ■●
9:1:1	163-8121	1	Kit-Motor, Service ●
9:1:2	145-5057	1	Kit-Cover/Seal, Motor ●
9:2		1	Gearbox, Plntry-12:1 Rdctn ●■
9:2:1	161-9864	1	Kit-Seal ●
9:2:2	164-2671	1	Kit-Gearbox ●
9:3		1	Brake,Parking-Torquehub ● ■
9:3:99	145-5058	1	Kit-Brake ●
10	161-2232-03	3	Mount-Motor, Roller
11	163-8099	3	Coupler-Roller
12	144-2269	12	Nut-Nylk,HF
13	161-2286-03	1	Roller-Center
14	147-6042	18	Screw-Tfh
15	131-6367	6	Spacer
16	111-5744	3	Bearing ASM
16:1	111-5758	1	Bearing
17	134-3757	12	Screw-HHF
18	134-3764	6	Nut-Flange, NI
19	240-14	4	Bumper-Rubber
20	161-2227-01	1	Shell-Roller, Outer
21	134-2299	3	Screw-HWH
22	161-2285-03	2	Roller-Outer
23	161-9102-03	1	Stop-Tilt
24	144-3901	1	End-Rod, Tie
25	144-3902	1	End-Rod, Tie
26	140-6135	2	Nut-Hex, Slotted
27	161-7759-03	1	Rod-Steering
28	84-5300	1	Nut-Jam
29	110-5337	1	Nut-Jam
30	119-6807	1	Decal-Warning
31	32180-030	6	Clip-Tie
32	AU419-2624	1	Screw-Plow
33	3217-7	1	Nut-Hex
34	119-7568	4	Screw-HSBH
35	09430	4	Nut-Nyloc
36	3296-56	4	Nut-Lock, NI
37	161-2218-01	1	Roller Shell-Outer, RH
38	163-8067	2	Sleeve-Spring, Short
39	163-8068	2	Sleeve-Spring, Long
40	108-5412	2	Spring-Extension
41	33115-130	2	Screw-HH
42	33115-080	2	Screw-HH
43	33025-00	4	Nut-Lock, NI
44	163-8093-03	1	Stop-Tilt, LH
45	3272-12	2	Pin-Cotter
46	163-8149	2	Pad-Wear
47	140-2149	2	Rivet-Push

● Not illustrated

■ Not serviced separately

Seat Assembly

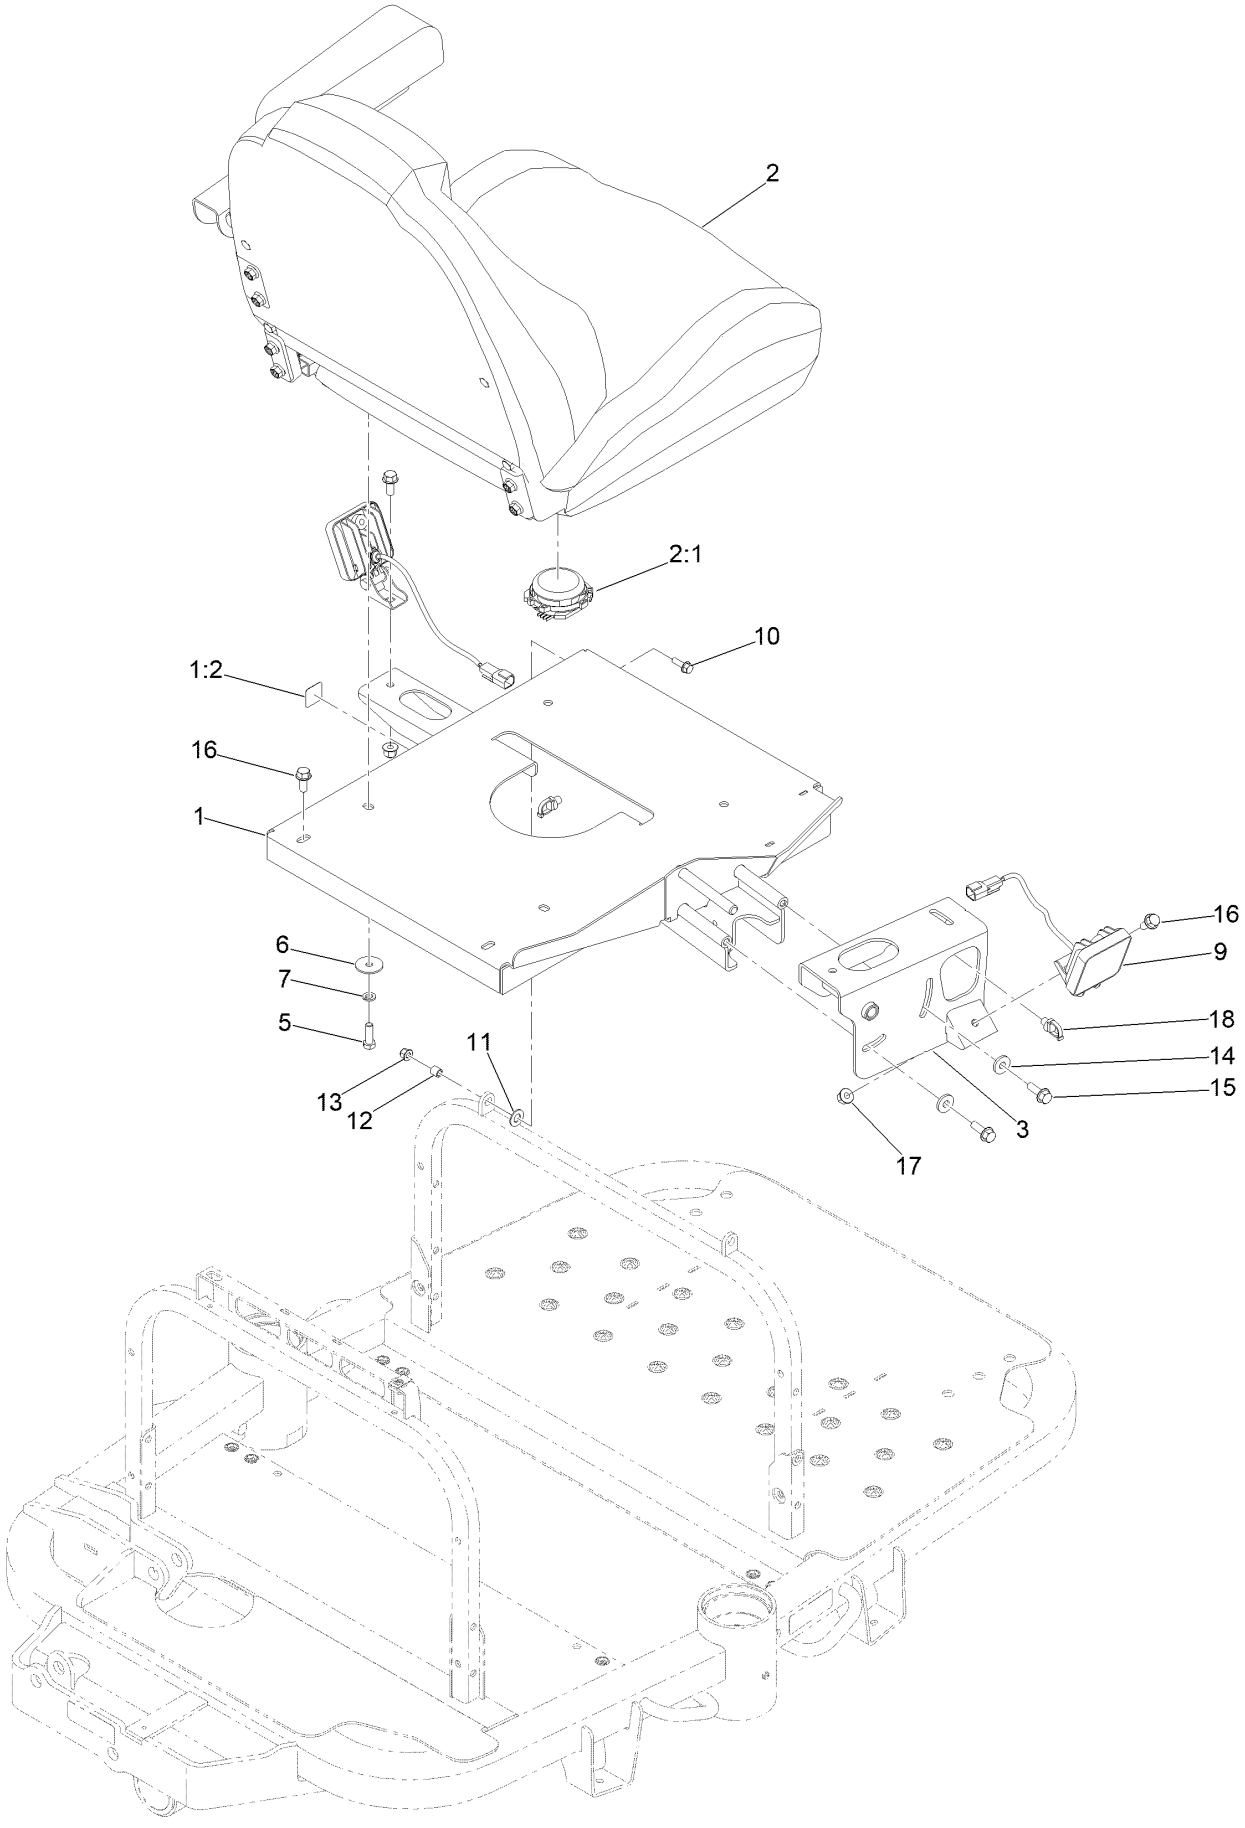


Seat Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-9195	1	Seat Base ASM
1:2	147-0290	1	Decal-Light, Warning
2	161-9144	1	Seat
2:1	163-8079	1	Switch-Seat
2:2	132-3837	4	Screw-HHF ●
3	161-9124-01	1	Pivot-Console
5	322-5	4	Screw-HH
6	3256-57	4	Washer-Flat
7	3253-4	4	Washer-Lock
9	145-2598	2	Light-Work, LED
10	134-3740	2	Screw-HHF
11	09479	2	Washer-Plain
12	161-7700	2	Spacer
13	134-3761	2	Nut-Flange, NI
14	4-2390	2	Washer-Flat
15	134-3747	2	Screw-HHF
16	134-3746	4	Screw-HHF
17	134-3762	2	Nut-Flange, NI
18	32180-030	2	Clip-Tie

● Not illustrated


Operator Platform Assembly

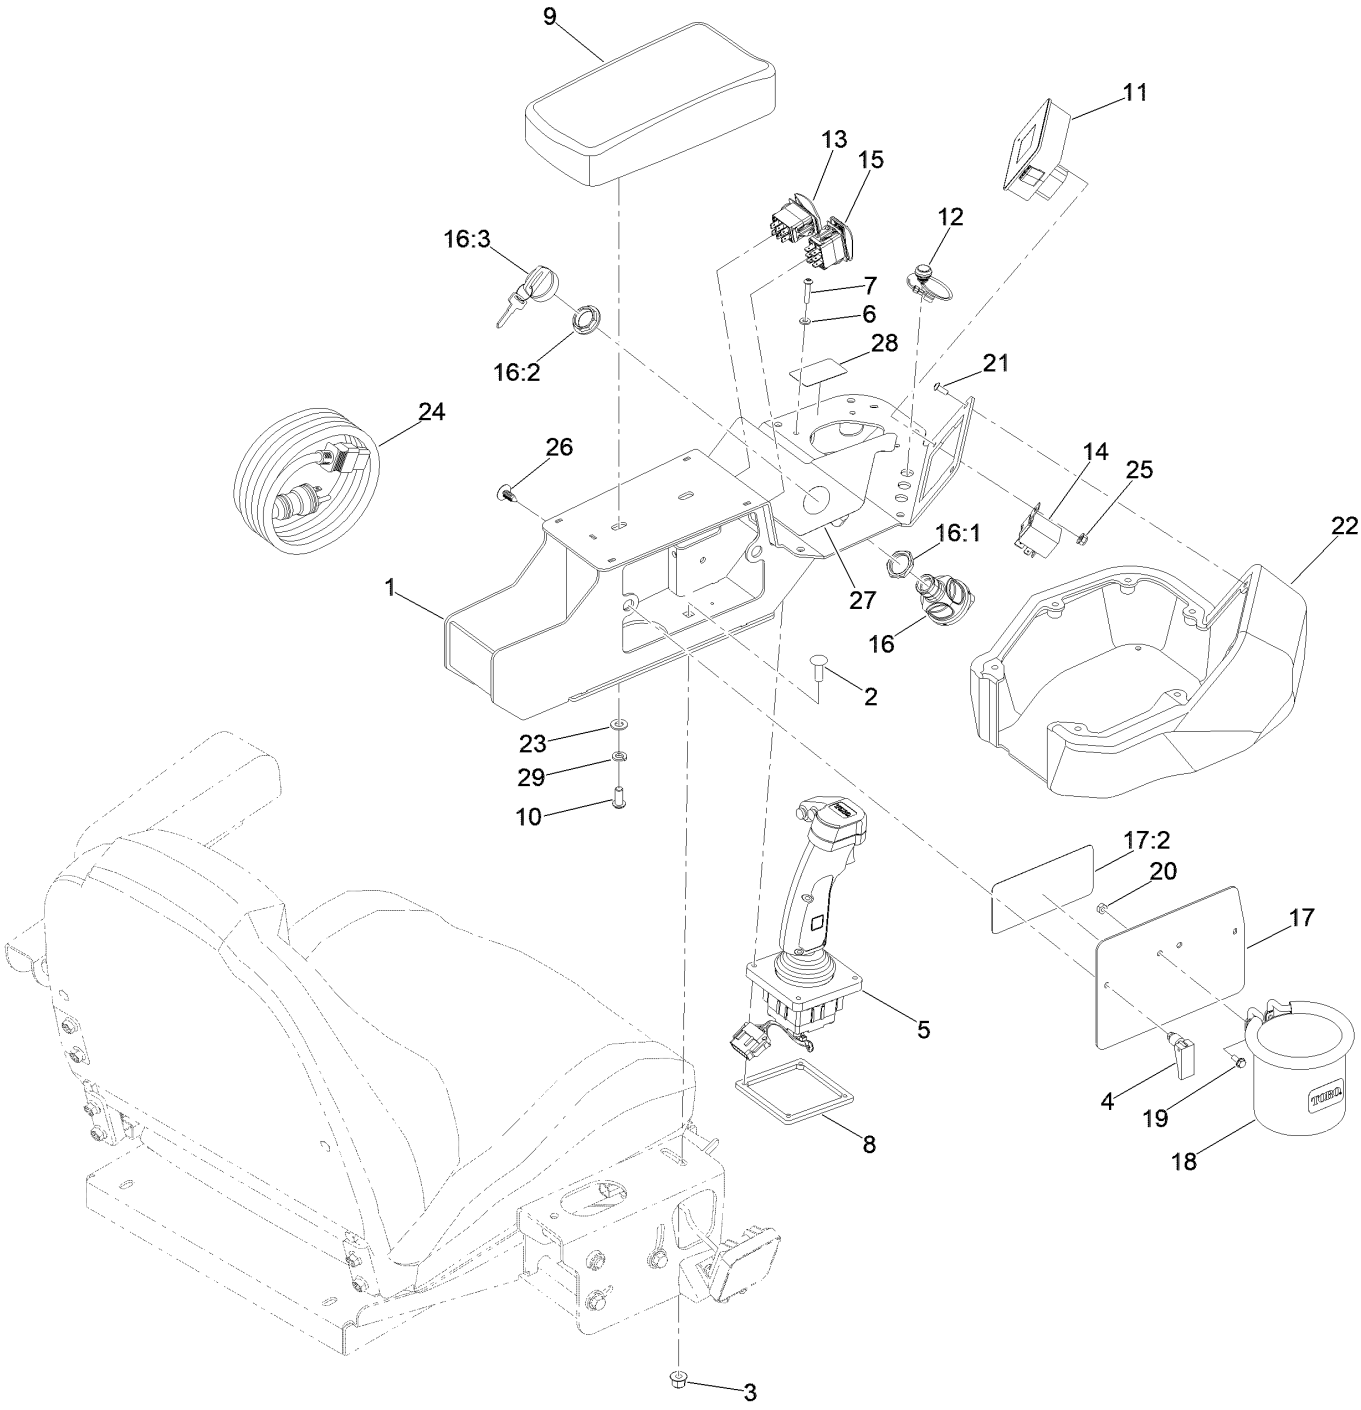

Operator Platform Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-8057-01	1	Console-Control
2	94-2738	2	Screw-CARR
3	134-3762	2	Nut-Flange, NI
4	74-5950	2	Latch-Swell
5	161-7798	1	Pq Pistol Grip Joystick
6	3256-51	4	Washer-Flat
7	108-3153	4	Screw-HSBH
8	161-0497	1	Plate-Retaining
9	161-9163	1	Pad-Arm
10	3274-55	2	Screw-HSBH
11	122-2152	1	Controller, Tdm-1601
12	136-9678	3	Cable Assy-Pushbutton
13	122-3610	1	Switch-Rocker, On-Off-On
14	122-3200	1	Relay
15	122-3611	1	Switch-Rocker, (On)-Off-(On)
16	122-2513	1	Switch-Ignition, Suns
16:1	121-5160	1	Nut-Hex
16:2	122-2704	1	Nut-Face, M22 (Plastic)
16:3	121-5162	1	Set-Key, Ignition
17	163-8137	1	Side Cover ASM
17:2	163-8125	1	Decal-Service
18	161-8355	1	Cup Holder ASM
19	3290-321	2	Screw-HWH
20	3296-2	2	Nut-Lock, NI
21	135-6374	9	Screw-HSBH
22	163-8050	1	Cover-Console
23	120-9683	2	Washer-Plain
24	107-0382	1	Powercord-AC, Europe
24	107-0383	1	Powercord-AC, U.K.
24	107-0384	1	Powercord-AC
25	138-0719	1	Nut-HF
26	117-2382	3	Plug-Plastic
27	161-9142	1	Decal-Console
28	164-2661	1	Decal-Joystick
29	3253-4	2	Washer-Lock


Drawbar Assembly

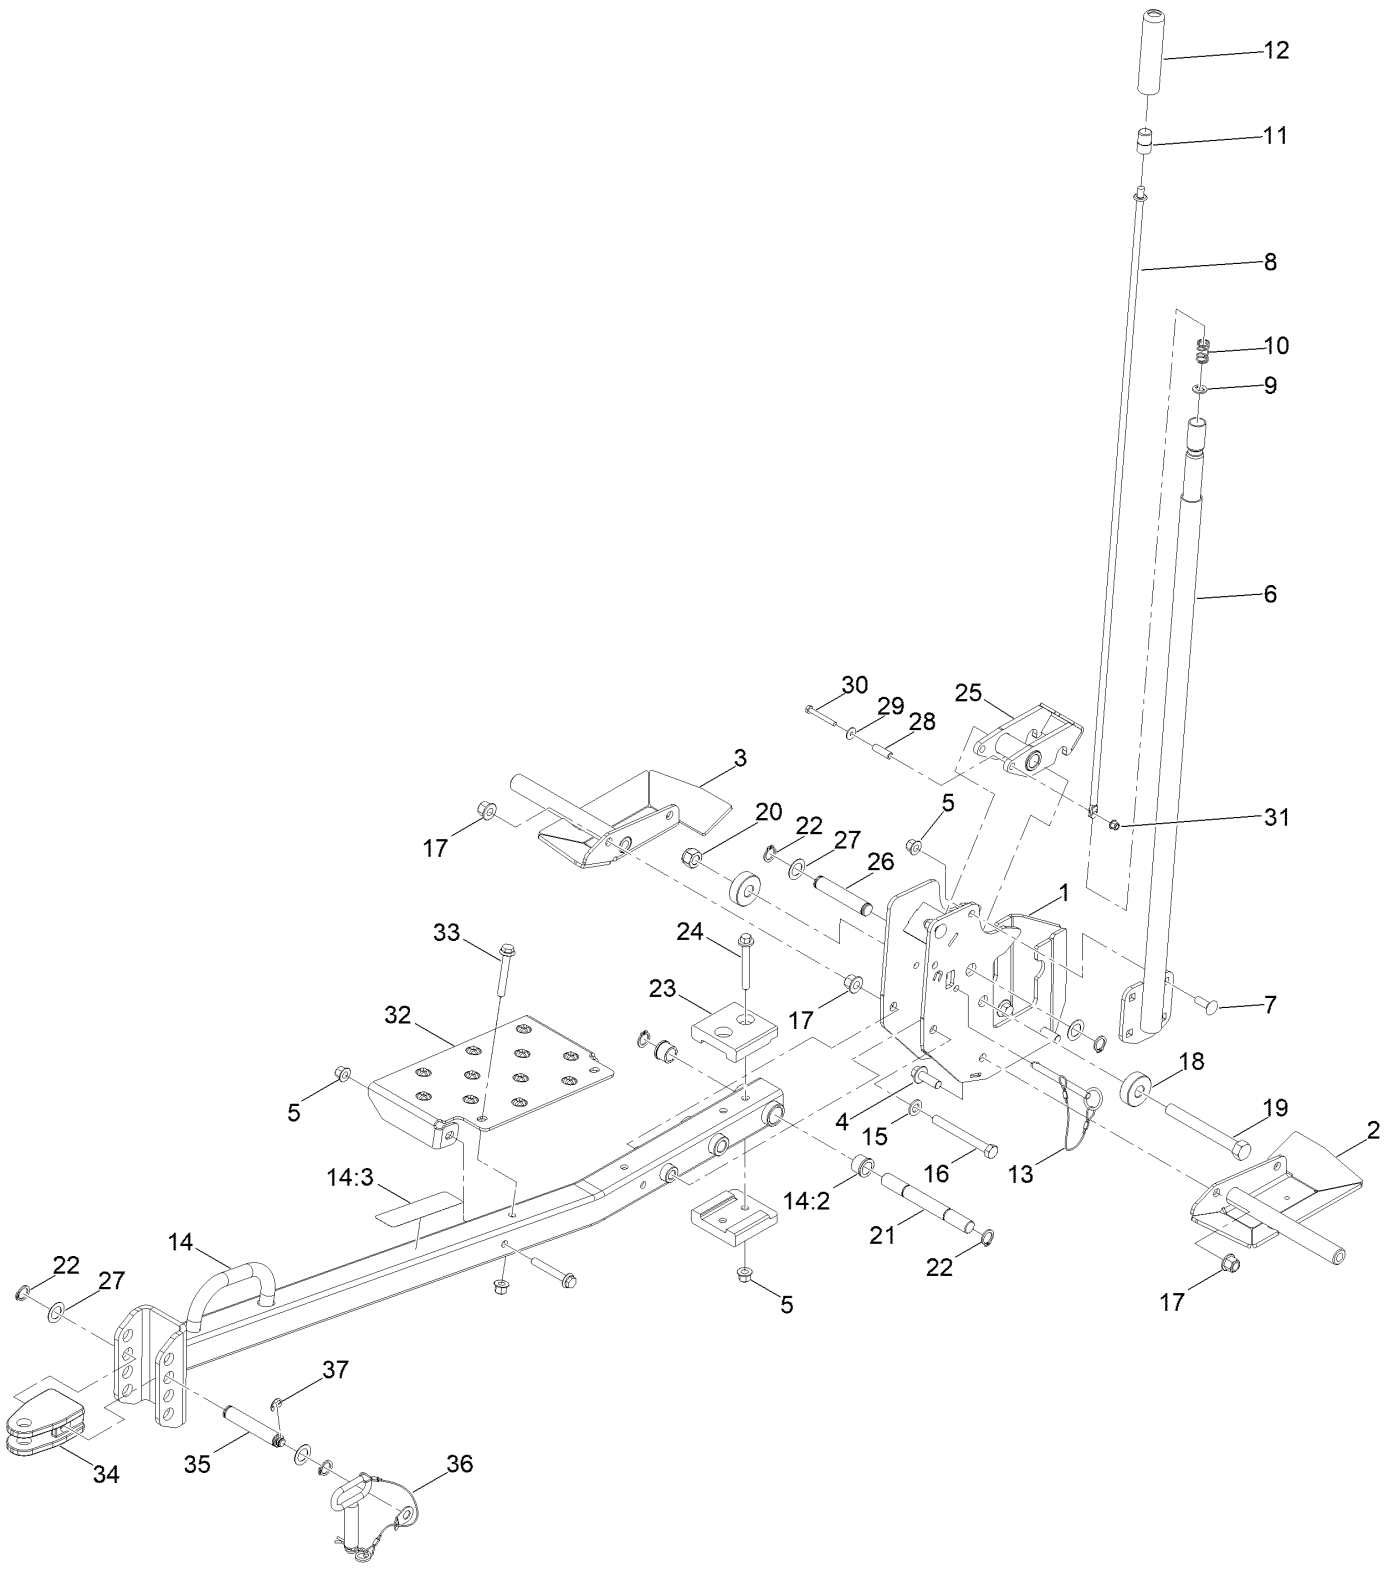

Drawbar Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-7738-01	1	Skid-Qtach
2	161-9105-01	1	Skid-Qtach, LH
3	161-9106-01	1	Skid-Qtach, RH
4	134-3756	4	Screw-HHF
5	134-3763	9	Nut-Flange, NI
6	161-7741-01	1	Handle-Latch
7	33125-030	3	Screw-CARR
8	161-7742	1	Rod-Latch Release
9	161-7797	1	Washer-Special
10	114-8187	1	Spring-Compression
11	115-2750	1	Knob
12	115-3592	1	Grip
13	163-8083	1	Pin-Quick W/Lnyd
14	161-7793	1	Drawbar ASM
14:2	256-113	2	Bushing-Flange
14:3	161-9148	1	Decal-Hitch Release
15	134-2623	1	Washer-Thrust
16	33116-110	1	Screw-HH
17	134-3764	5	Nut-Flange, NI
18	161-7783	2	Spacer
19	09690	1	Bolt
20	09456	1	Nut
21	161-7789	1	Pin-Clevis
22	32120-93	6	Ring-Retaining
23	161-7794	2	Block-Wear
24	33105-080	2	Screw-HHF
25	161-7719	1	Latch ASM
26	161-7747	1	Pin-Clevis
27	3-6498	4	Washer-Thrust
28	161-7744	1	Spacer Tube
29	111-7679	1	Washer-Plain
30	33113-050	1	Screw-HH
31	134-3761	1	Nut-Flange, NI
32	161-7787-01	1	Step-Drawbar
33	33105-070	4	Screw-HHF
34	161-3264	1	Clevis-Hitch
35	161-7796	1	Pin-Clevis
36	161-4477	1	ROPS Pin ASM
37	32120-47	1	Ring-Retaining, External


Lifting Mechanism Assembly

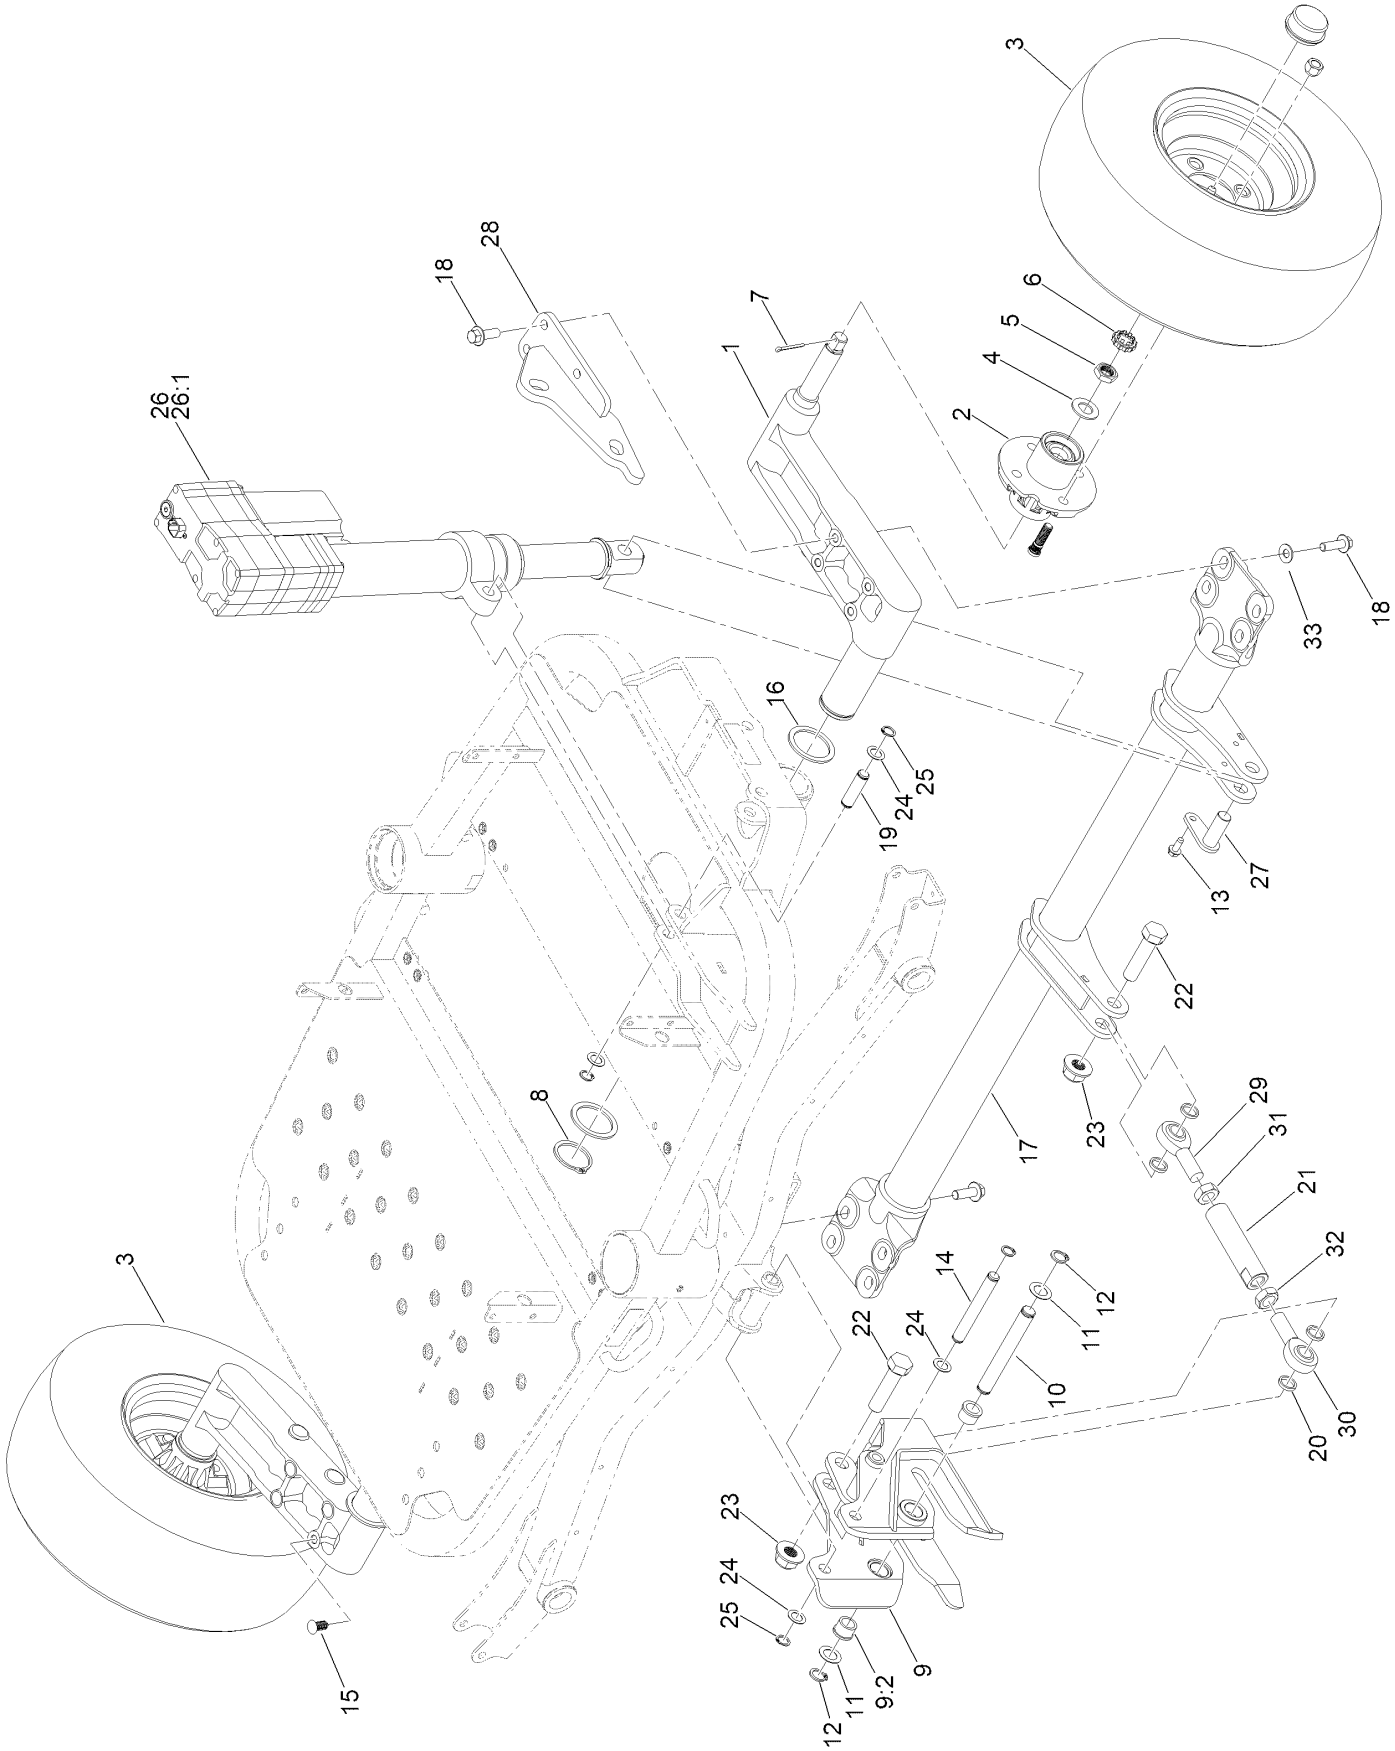

Lifting Mechanism Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-0546	2	Support-Wheel
2	117-5115	2	Hub And Bearing ASM
3	142-5511	2	Tire/Rim ASM
4	117-8259	2	Washer-Spindle
5	117-8260	2	Nut
6	93-0307	2	Nut-Lock, Retainer
7	3272-18	2	Pin-Cotter
8	AU103-16200	2	Ring-Retaining, External
9	161-7795	1	Qtach Hanger ASM
9:2	256-113	2	Bushing-Flange
10	161-7760	1	Pin-Clevis
11	3-6498	2	Washer-Thrust
12	32120-93	2	Ring-Retaining
13	134-2299	1	Screw-HWH
14	163-8077	1	Pin-Pivot
15	140-2149	4	Rivet-Push
16	163-8082	4	Washer-Flat
17	163-8107-03	1	Tube-Lift
18	134-3757	12	Screw-HHF
19	161-7764	1	Pin-Pivot
20	164-2651	4	Washer-Flat
21	164-2652	1	Rod-Lift
22	328-25	2	Screw-HH
23	138-4082	2	Nut-HF
24	108-0015	4	Washer-Flat
25	32151-62	4	Ring-Retaining
26	147-3392	1	Actuator-Lift
26:1	302-5	1	Fitting-Grease
27	163-8142	1	Pin ASM
28	161-7758-03	1	Bracket-Lockout
29	164-2654	1	Bearing-Rod End, RH
30	164-2655	1	Bearing-Rod End, LH
31	3220-17	1	Nut-Jam, LH
32	3220-7	1	Nut-Jam
33	134-3301	8	Washer, Lock M12


Hub and Bearing Assembly No. 117-5115

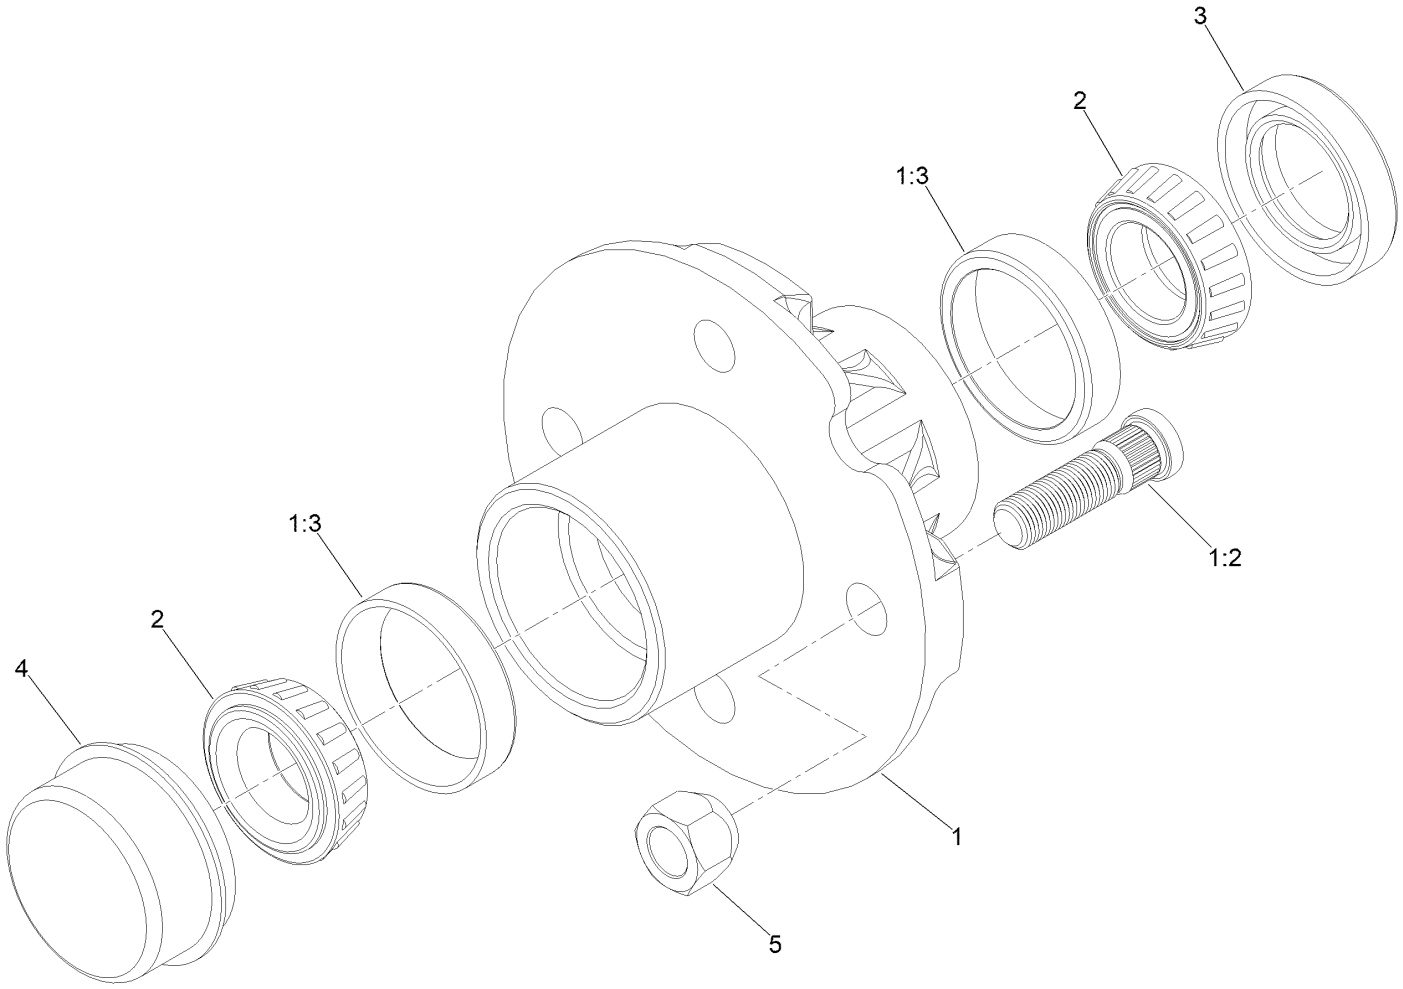

Hub and Bearing Assembly No. 117-5115 (continued)

Ref.	Part Number	Qty.	Description
1	117-8251	1	Hub ASM
1:2	114-3918	4	Stud-Wheel
1:3	254-72	2	Bearing-Cup, Tapered
2	254-94	2	Bearing-Cone, Tapered
3	112-1690	1	Seal-Oil
4	241-119	1	Cap-Dust
5	139-2564	4	Nut-Lug


Tire and Wheel Assembly No 142-5511

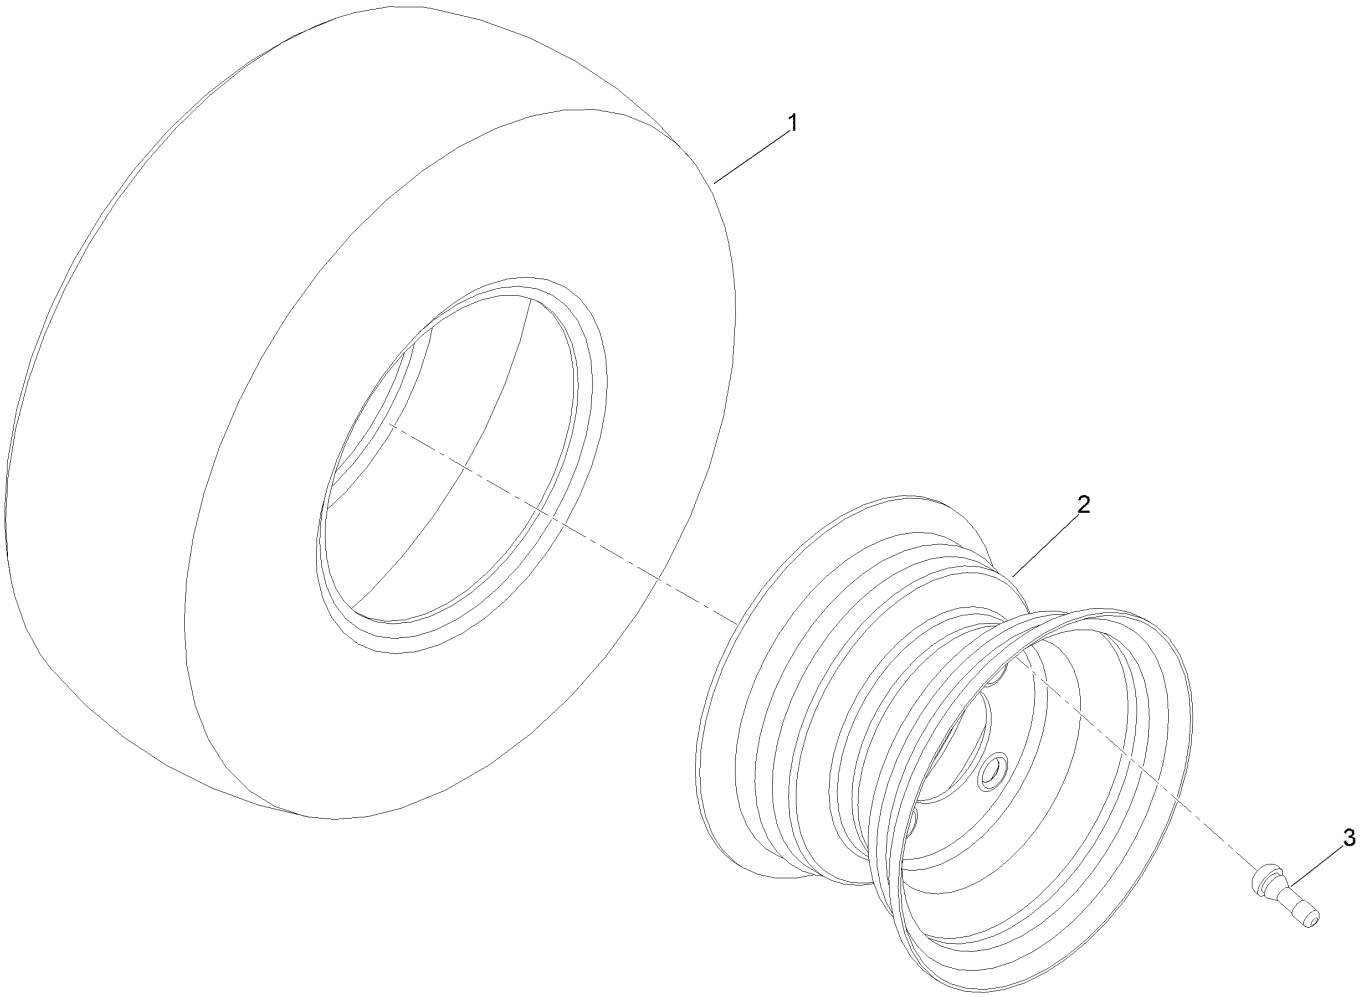

Tire and Wheel Assembly No 142-5511 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	142-6214	1	Tire
2	142-6215	1	Rim-8X5.375, Centered
3	232-27	1	Stem-Valve


Electrical and Battery Assembly

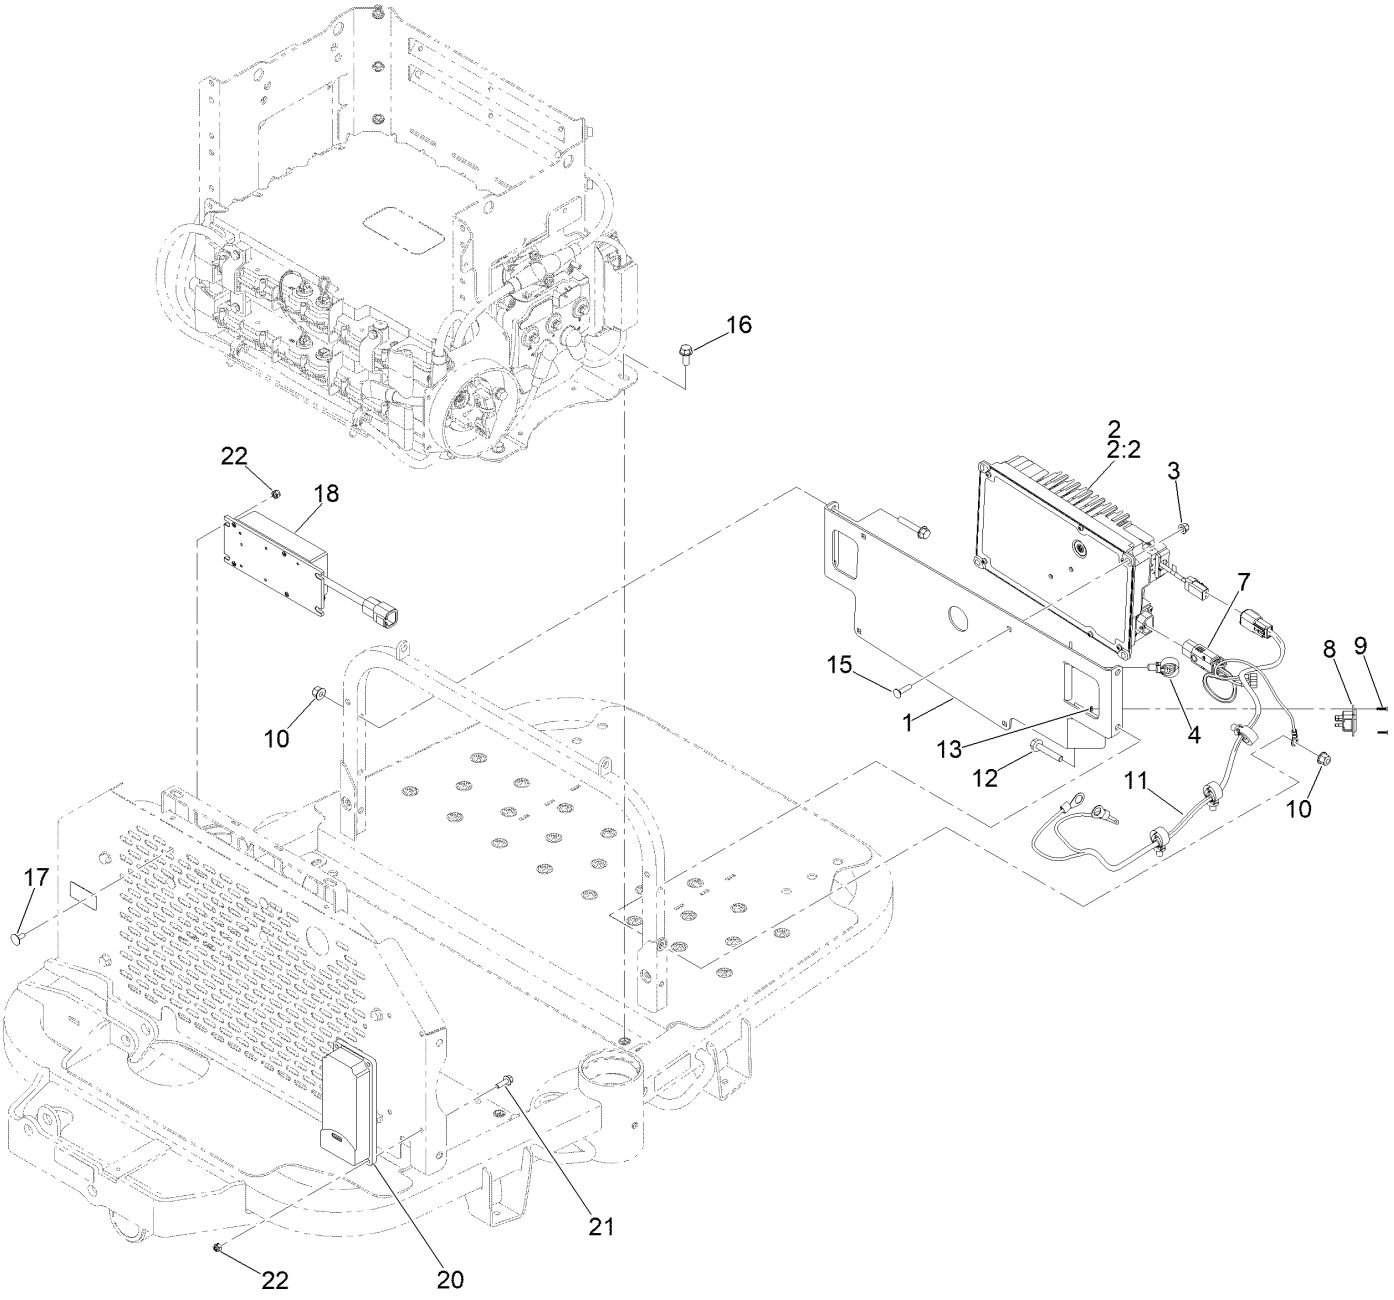

Electrical and Battery Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-7777-03	1	Bracket-Mount, Charger
2	145-1177	1	Charger-Onboard
2:2	147-3234	1	DC Harness Service Kit
3	134-3761	4	Nut-Flange, NI
4	32180-030	1	Clip-Tie
7	122-4391	1	Harness-Wire, AC Charger
8	147-3230	1	Connector-Iec
9	510-0015	2	Scr-Mch
10	134-3762	4	Nut-Flange, NI
11	122-3785	1	Harness-Wire, Jumper
12	33104-045	4	Screw-HHF
13	3296-52	2	Nut-Lock, NI
15	09735	4	Bolt Coach
16	134-3746	4	Screw-HHF
17	33123-016	4	Screw-CARR
18	122-4326	1	Converter DC-DC
20	161-9001	1	Gateway-Telematics
21	134-3740	4	Screw-HHF
22	09438	8	Nut-Nyloc


Battery Assembly

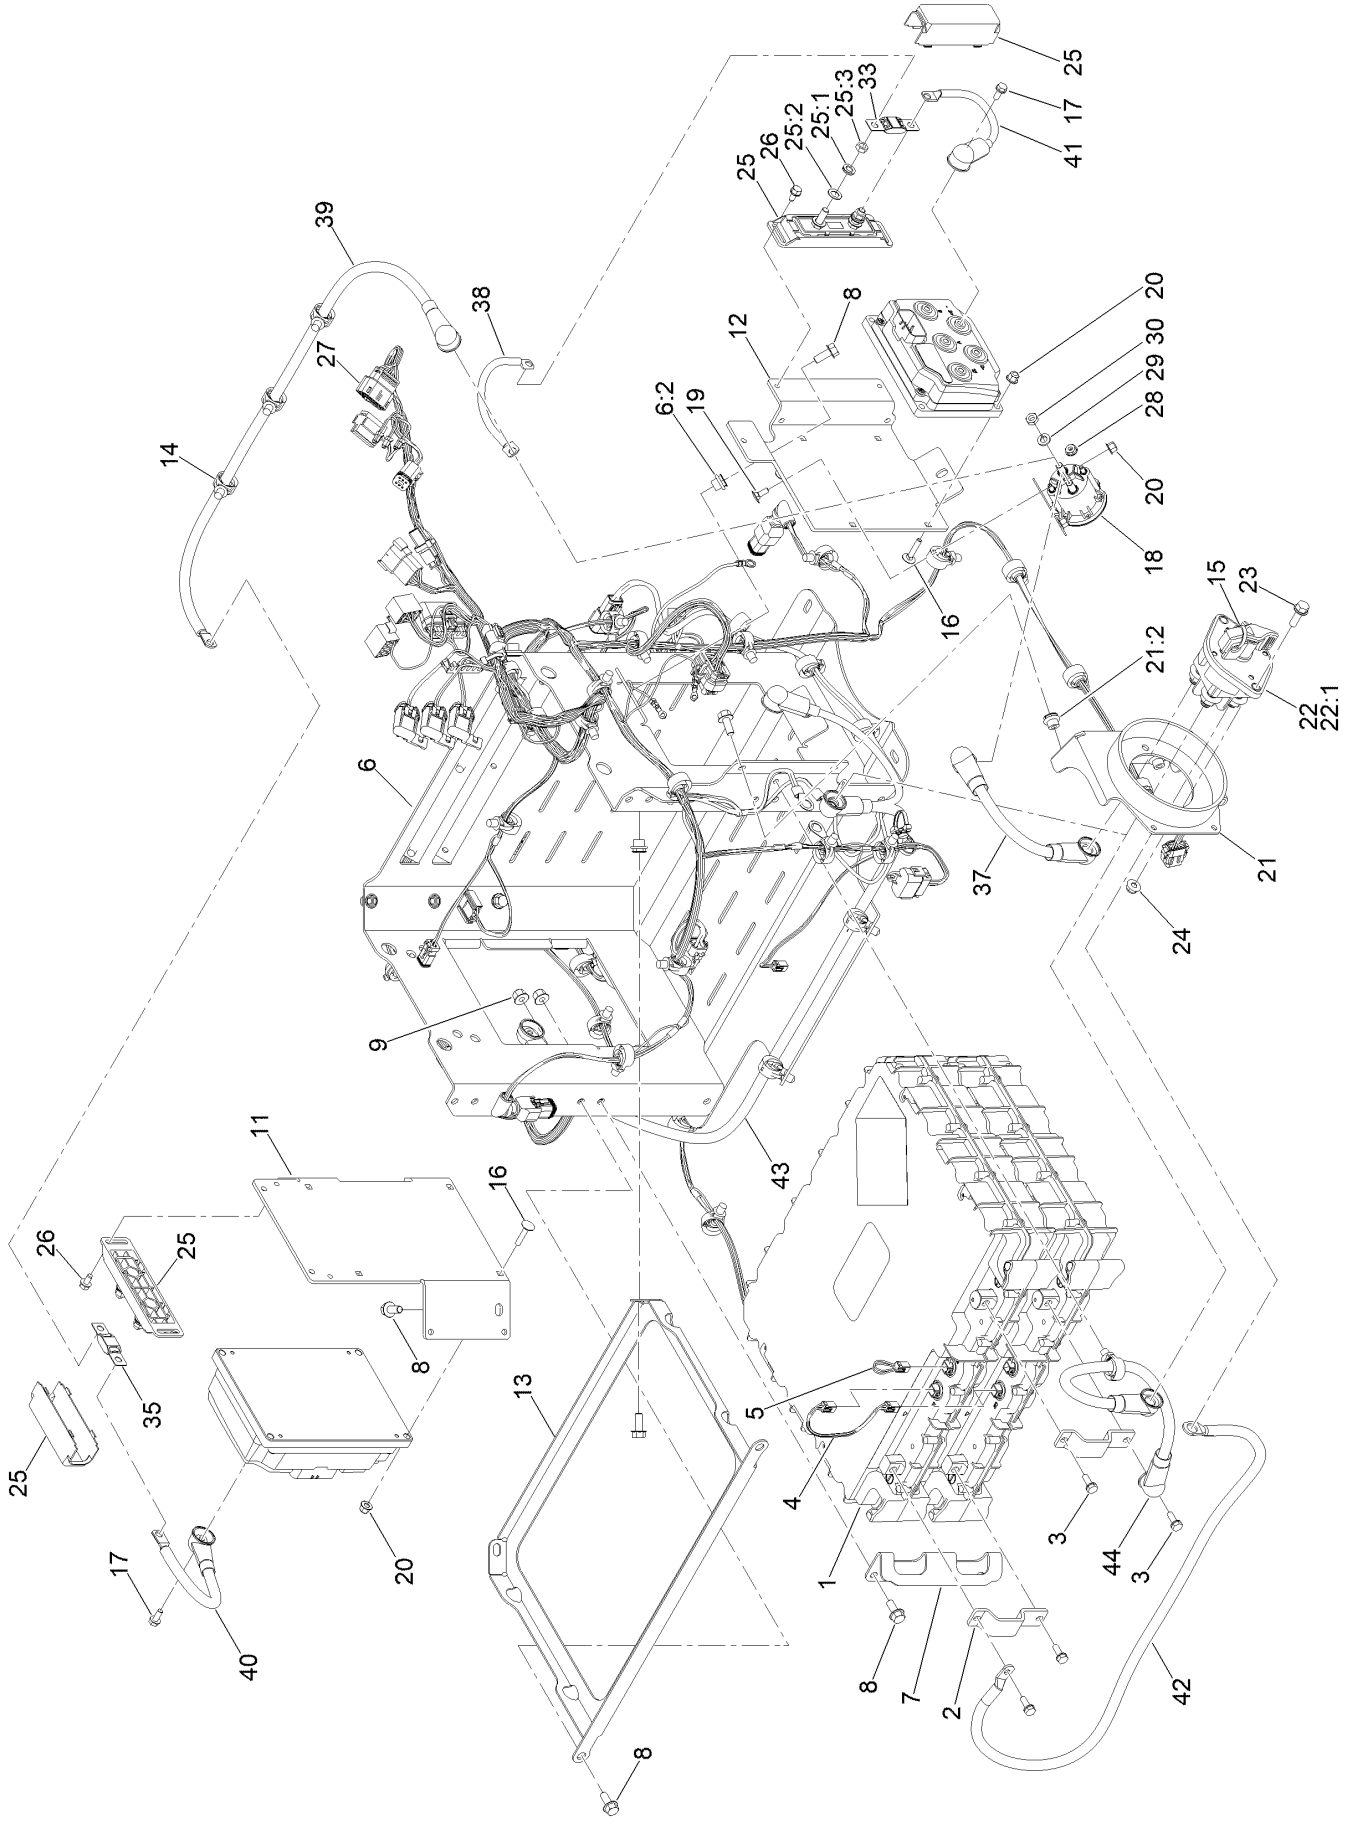

Battery Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-5385	2	Battery ASM
2	147-3877	2	Bar-Bus, 400A
3	145-5783	4	Screw-Sems
4	140-9565	1	Harness-Wire, Data Interface
5	122-2323	1	Harness-Wire, Can Terminator
6	163-8131	1	Battery Tray ASM
6:2	161-7799	11	Nut-Clinch
7	161-7773-03	2	Bracket-Hold, Battery
8	134-3746	15	Screw-HHF
9	134-3762	6	Nut-Flange, NI
11	161-7770-03	1	Bracket-Mount, Controller
12	161-7771-03	1	Bracket-Mount, Controller
13	161-7775-03	1	Hold-Battery
14	32180-030	5	Clip-Tie
15	3290-378	1	Tie-Cable
16	33123-030	8	Screw-CARR
17	145-5782	4	Screw-Sems
18	122-1274	1	Contactor-DC, 48V
19	33123-016	2	Screw-CARR
20	134-3761	10	Nut-Flange, NI
21	163-8132	1	Service Switch Bracket ASM
21:2	161-7799	2	Nut-Clinch
22	122-0603	1	Switch-Disconnect
22:1	33006-00	1	Nut-HF
23	3234-29	2	Screw-HHF
24	119-4041	2	Nut-HF
25	161-6249	2	Holder-Fuse
25:1	136-8682	8	Washer-Lock
25:2	3256-74	16	Washer-Flat
25:3	117-4059	8	Nut-Hex
26	104-2628	4	Screw
27	122-4193	1	Harness-Wire, Main
28	32149-8	2	Nut-Keps
29	3253-4	2	Washer-Lock
30	3220-2	2	Nut-Hex Jam
33	122-2627	1	Fuse-70A
35	122-2559	1	Fuse-100 Amp
37	122-3402	1	Cable-Battery, Rd ASM
38	122-3403	1	Cable-Battery, Rd ASM
39	122-3404	1	Cable-Battery, Rd ASM
40	122-3405	1	Cable-Battery, Rd ASM
41	122-3406	1	Cable-Battery, Rd ASM
42	122-3407	1	Cable-Battery, Bk ASM
43	122-3408	1	Cable-Battery, Bk ASM
44	122-3427	1	Cable-Battery, Rd ASM


Battery Assembly No. 145-5385

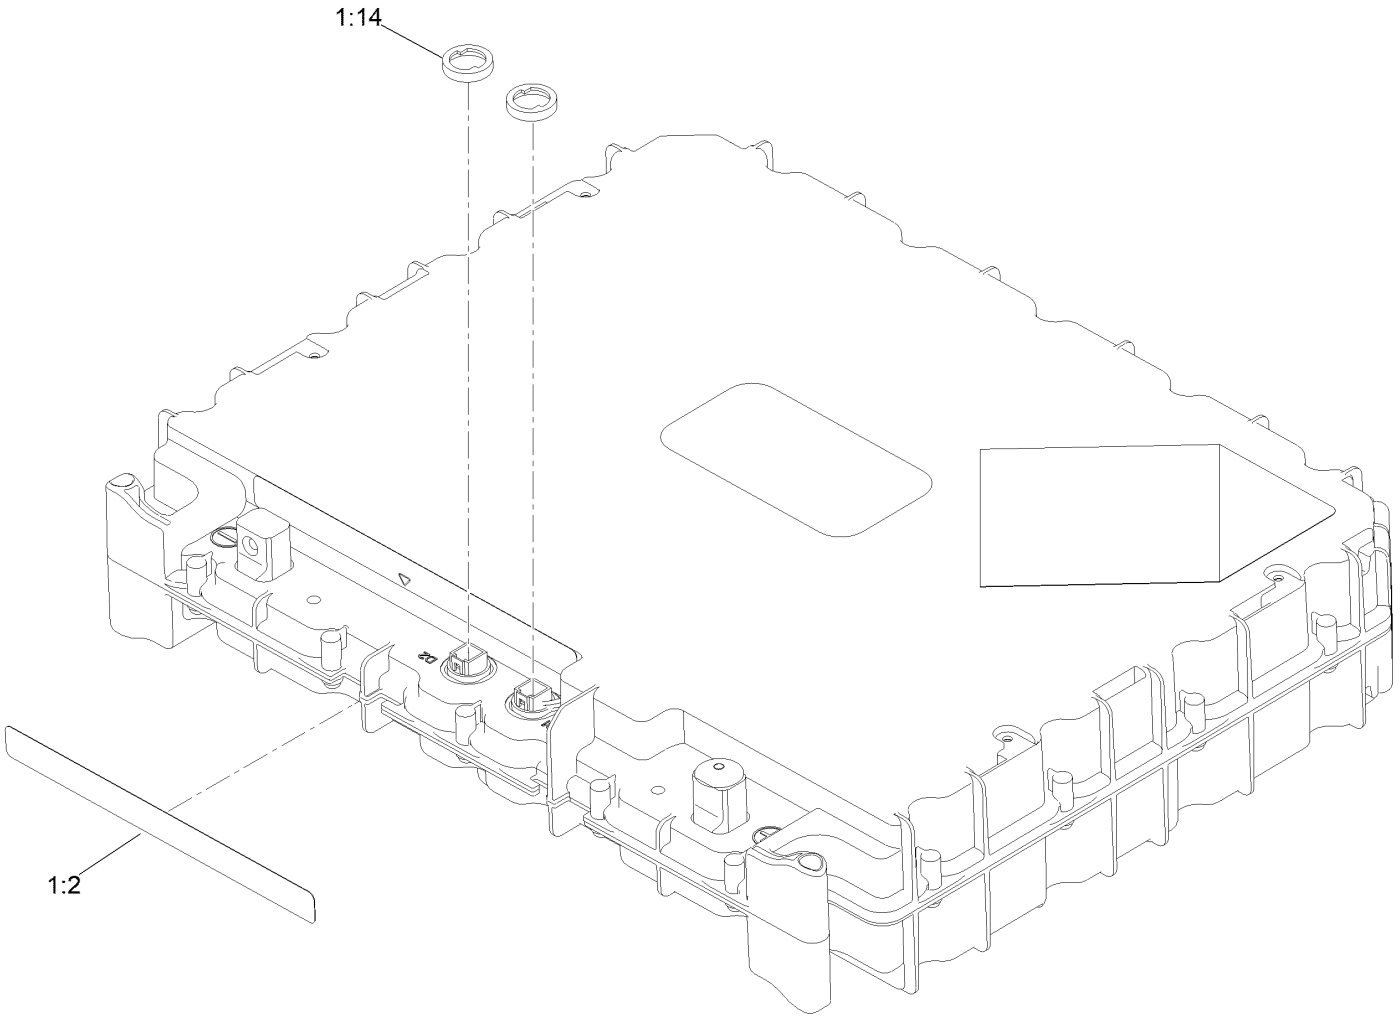

Battery Assembly No. 145-5385 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1:2	145-5338	1	Decal-Warning, Battery
1:14	32180-466	2	Nut-Mounting, Jwpf Panel Lock


Main Wire Harness Assembly No. 122-4193

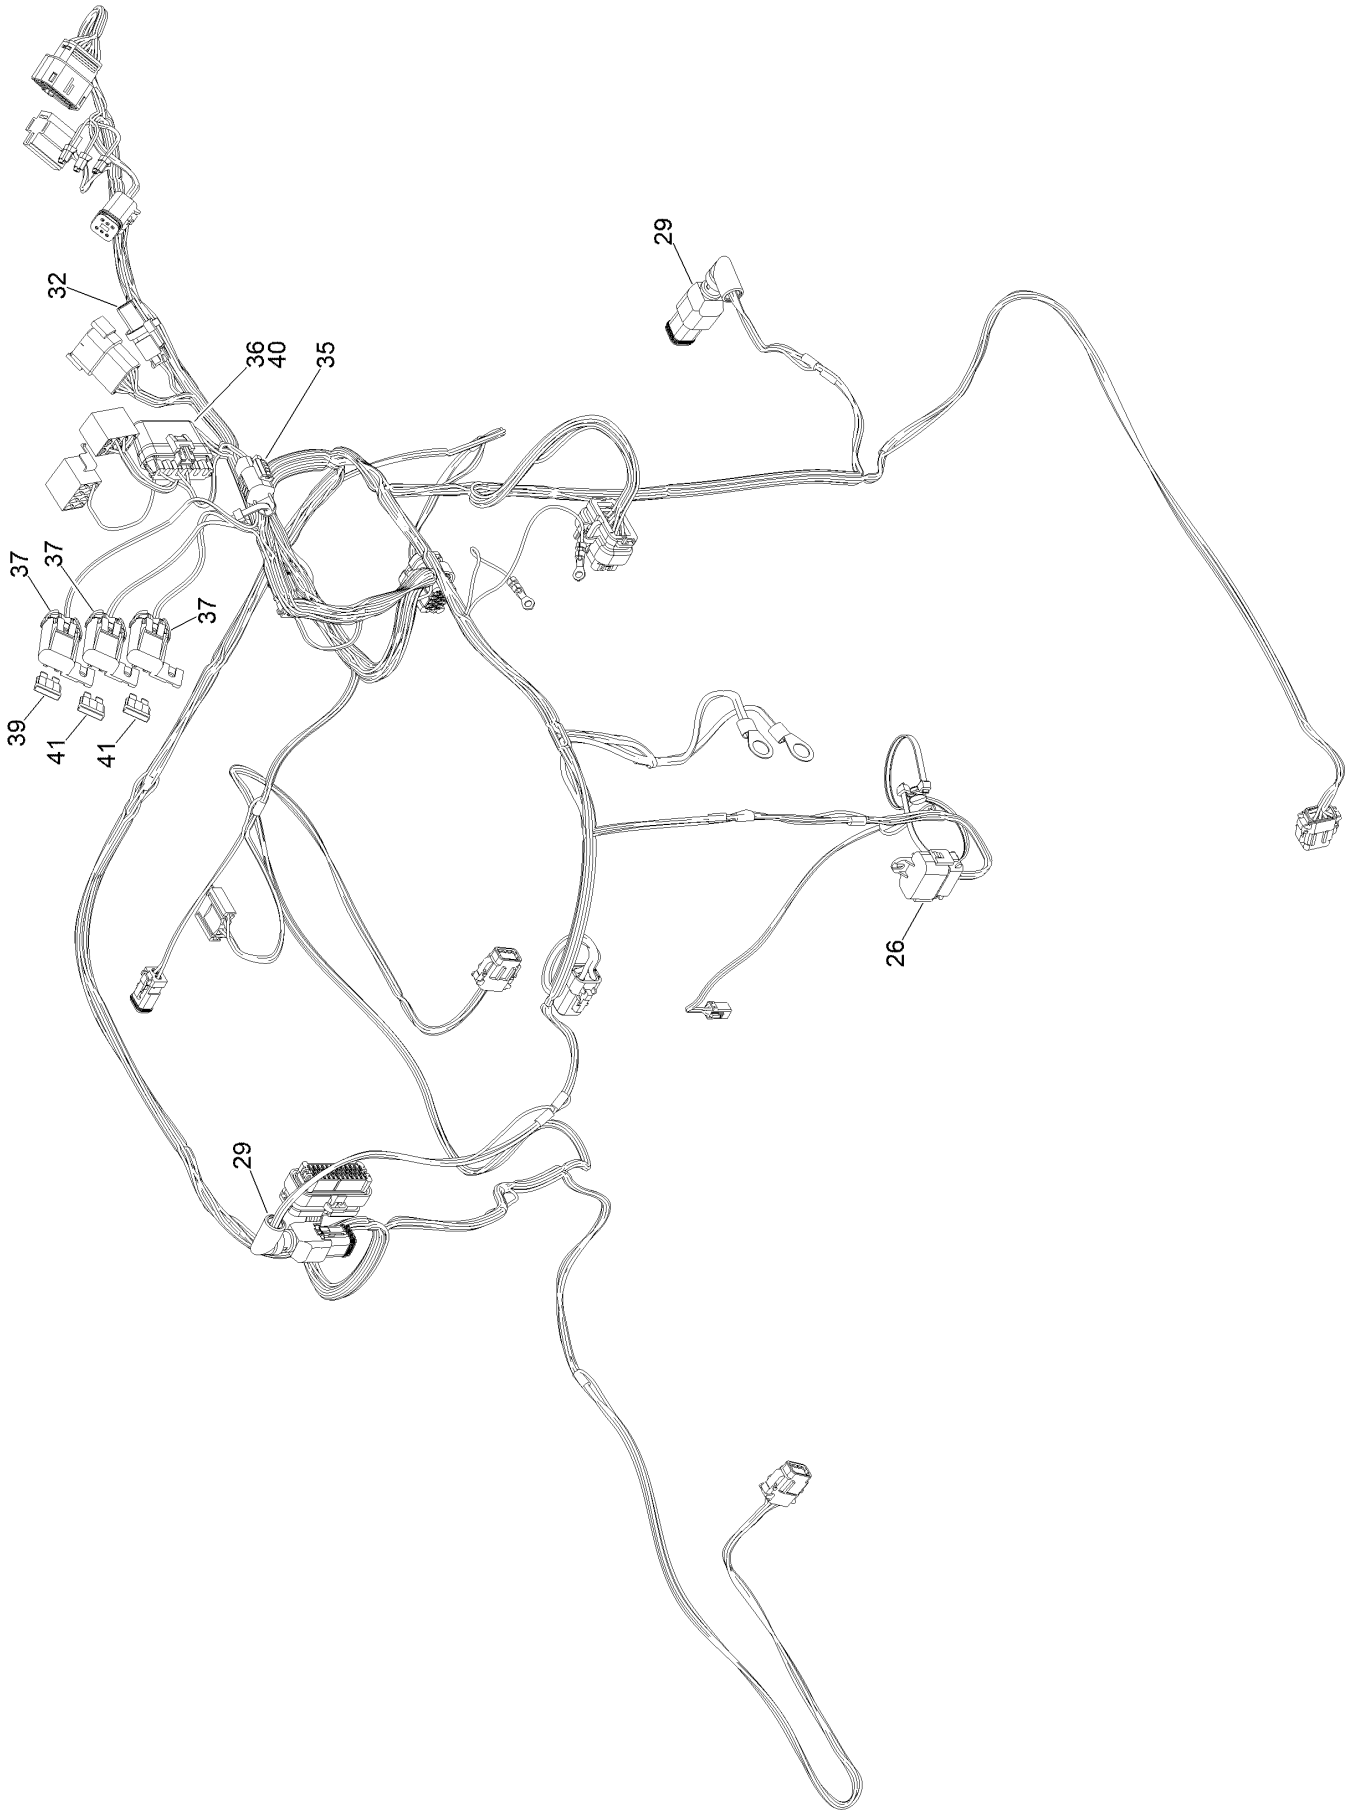

Main Wire Harness Assembly No. 122-4193 (continued)

Ref.	Part Number	Qty.	Description
26	32180-662	1	Cap-Dust, For Dtm 12 Way
29	32180-459	2	Backshell-Harnessflex, Dt6
32	32180-282	1	Conn, Res, 120 Ohm
35	32180-089	1	Cap-Plug, 3 Way
36	121-8866	1	Fuse-Mini Blade, 10 Amp
37	32180-567	3	Cover-Aptiv, Modified
39	117-4724	1	Fuse-Blade, 10A
40	121-8861	1	Fuse-Mini Blade, 2 Amp
41	117-4725	2	Fuse-Blade, 15A

Controller Assembly

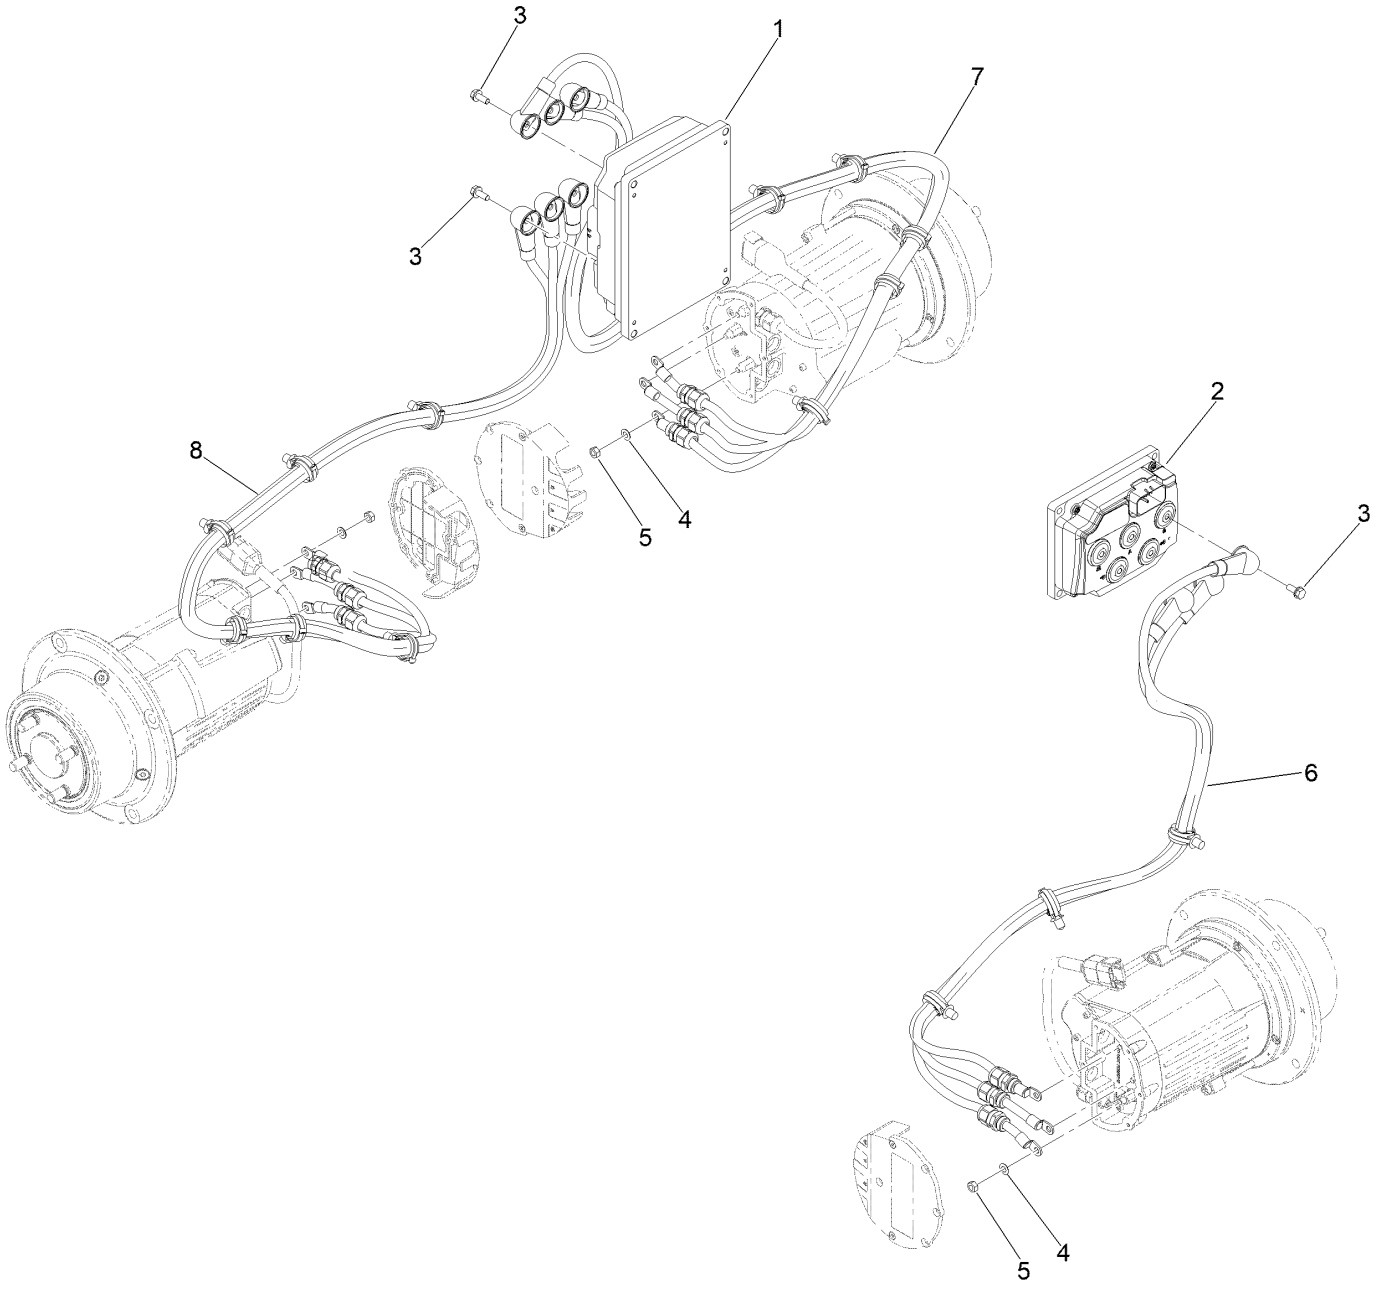

Controller Assembly (continued)

Ref.	Part Number	Qty.	Description
1	138-8984	1	Inv/Ctrlr-48V, Dual 94Arms
2	145-7270	1	Inv/Ctrlr-48V
3	145-5782	9	Screw-Sems
4	1-303435	9	Washer-Spring
5	HDW21408	9	Nut-Hex
6	122-4247	1	Cable-Battery Rd ASM ASM
7	122-4248	1	Cable-Battery Rd ASM ASM
8	122-4249	1	Cable-Battery Rd ASM ASM

Attachments and Accessories

For 44914 — GreensPro 1700 Greens Roller

Product Name	Model/Part
Powercord-AC, Europe	107-0382
Powercord-AC, U.K.	107-0383
Powercord-AC	107-0384
HV Synthetic Electric Motor Drive Oil	147-6275
Roller Motor Oil Change Kit	164-2660
Battery Expansion Kit	44976

Notes:

Notes:

Notes:



Count on it.